

TONE CONTROL PCB.

IC 550
M5213L

M5213L
IC 650

POWER SW PCB.

SP. CHANGE PCB.

STK-0050

STK-0050

+B1 G -B1
+18.0V -18.0V

+B3 G R L
+12.6V

AC 120V
60Hz



SPEAKER
A B

L-CH
R-CH

PHONES


MM PHNO AMP PCB.

Q504 2SA1016G

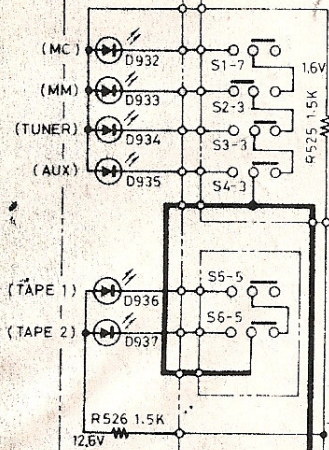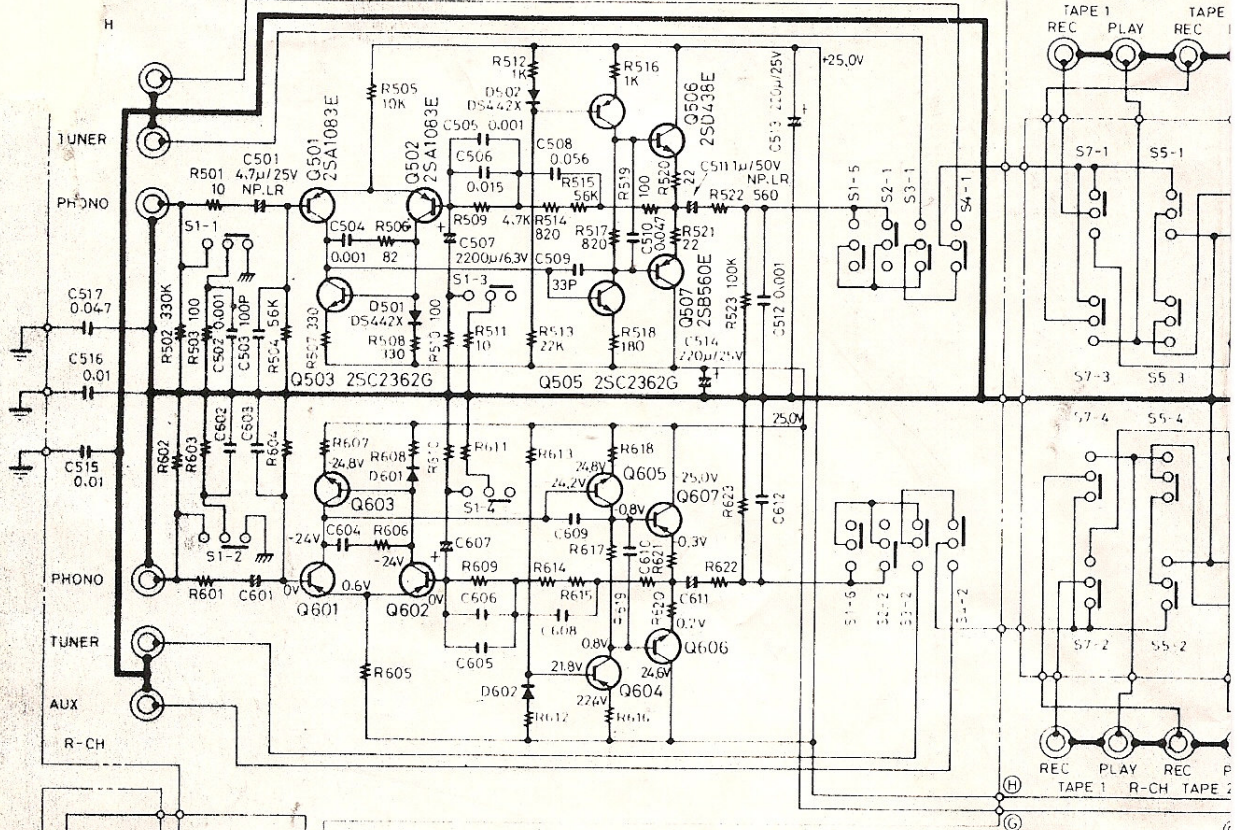

FUNCTION INDICATOR PCB

- S-1 FUNCTION MC SWITCH
- S-2 FUNCTION MM SWITCH
- S-3 FUNCTION TUNER SWITCH
- S-4 FUNCTION AUX SWITCH
- S-5 MONITOR TAPE 1
- S-6 MONITOR TAPE 2
- S-7 DUBBING SWITCH
- S-8 MODE SWITCH
- S-9 LOUDNESS SWITCH
- S-10 HIGH FILTER SWITCH
- S-11 SUBSONIC FILTER SWITCH
- S-12 SPEAKER(SPA) SWITCH
- S-13 SPEAKER(SPB) SWITCH
- S-14 POWER SWITCH
- S-15 MUTE SWITCH
- S-16 METER RANGE SWITCH
- S-17 VOLTE SELECTOR SWITCH

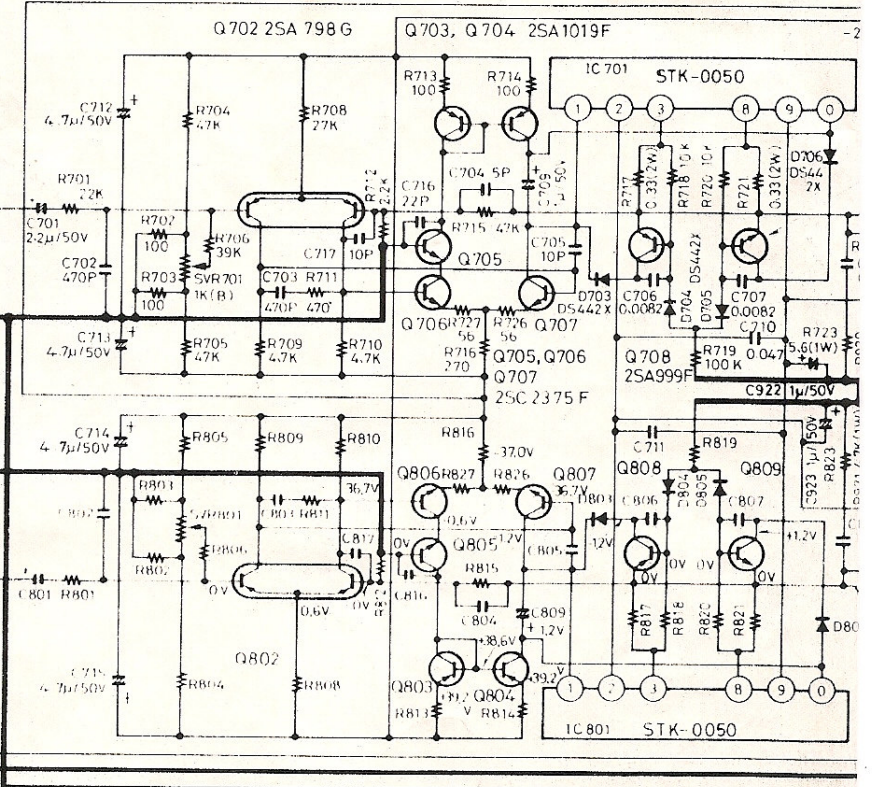

MAIN AMP & POWER SUPPLY PCB.