



- |             |                   |                |                    |
|-------------|-------------------|----------------|--------------------|
| 1 MIC       | INPUT SELECTOR    | BAND SELECTOR  | MODE SELECTOR      |
| 2 TAPE HEAD | S <sub>1</sub>    | S <sub>2</sub> | S <sub>3</sub>     |
| 3 PHONO-1   | 1 MIC → SET       | 1 SHARP → SET  | 1 STEREO REV       |
| 4 PHONO-2   | 2 TAPE HEAD       | 2 BROAD → AM   | 2 STEREO NOR → SET |
| 5 AUX -1    | 3 PHONO-1 (LOW Z) | 3 FM →         | 3 MONO A           |
| 6 AUX -2    | 4 PHONO-2         | 4 FM → MPX     | 4 MONO B           |
| 7 REC       | 5 TUNER           |                | 5 MONO A+B         |
| 8 MONI      | 6 AUX             |                |                    |

SANSUI MODEL 1000A FM STEREO RECEIVER