


WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

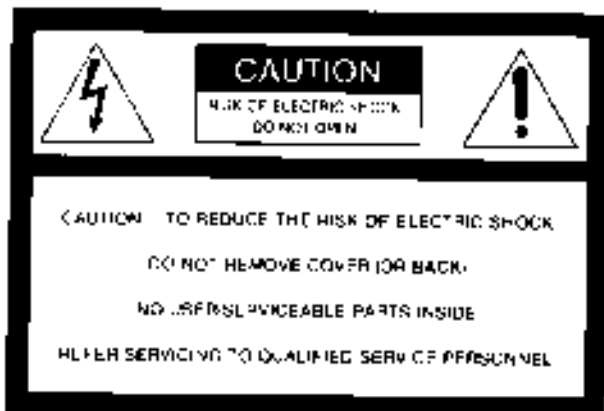

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

The use of optical instruments with this product will increase eye hazard.

INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna.

Relocate the equipment with respect to the receiver.

Move the equipment away from the receiver.

Plug the equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Differences by Model

This instruction manual covers CDP-770 and CDP-208ESD.

Their performance and operation are identical except for the following:

LINE OUT VOLUME buttons on the Remote Commander can be performed only for CDP-208ESD.

The illustrations used in this manual are of the CDP-208ESD.

Introducing This CD Player

Enjoy Listening in various playing modes

You can select the playing modes among the following:

- Continuous play (page 6) — The entire disc is played once.
- Single play (page 10) — One selection is played.
- Program play (page 13) — Selections are played in your desired order.
- Shuffle play (page 11) — Selections are played in a random order.
- Repeat play (page 12) — Selections or a portion are played repeatedly.

Editing your own tapes

You can fade in or out the play when making your own tape recording.

- Fade in/Fade out (page 17)

CUSTOM EDIT function

- You can confirm the total playing time while choosing the selections to be programmed.
 - Program edit (page 15)
- The player can program selections automatically to fit in a desired duration.
 - Time edit (page 16)
- You can stop the play, fading out at the time desired.
 - Time fade (page 17)

Safety Precautions

Stop operation immediately if any liquid or solid object should fall into the cabinet. Unplug the unit and have it checked by qualified personnel.

Unplug the unit from the wall outlet if you will not use it for a long time. Disconnect the cord by grasping the plug. Never pull the cord itself.

The unit is not disconnected from the mains as long as it is plugged into the wall outlet, even if the unit itself has been turned off.

Do not disassemble the cabinet. The laser beam used in this unit is harmful to the eyes when uncovered. Refer servicing to qualified personnel only.

For detailed safety precautions, see the leaflet "IMPORTANT SAFEGUARDS".

If you have any questions or problems concerning your unit, please contact your nearest Sony dealer.

Table of Contents

Introducing this CD player	3
Safety precautions	3
Installing the CD player	
Notes on installation	4
Preparing the remote commander	
Installing batteries	4
Connecting the CD player	
Notes on connection	5
Location of controls	6
Playing a disc	
Inserting a disc	7
Playing the entire disc	8
Locating a particular selection	9
Locating a particular point in a selection	9
Playing a single selection - Single play	10
Playing in a random order - Shuffle play	11
Playing repeatedly - Repeat play	
Repeating selections	12
Repeating a particular portion - A ++ B repeat	12
Playing in a designated order - Program play	13
Designating the playing order - Program edit	15
Designating the total playing time - Time edit	16
Tips on making your own tape recording	
Fading out at the desired time - Time fade	17
Fading in / Fading out	17
Inserting a blank space between selections - Auto space	17
Maintenance	
Cleaning your unit	18
Cleaning discs	18
Specifications	18
Troubleshooting guide	19