

# ***System Integration 2CH Amplifier***

---

## Installation Manual

### Owner's Record

The model and serial numbers are located on the rear panel. Record the model and serial numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.


Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

***TA-MR2ES***

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

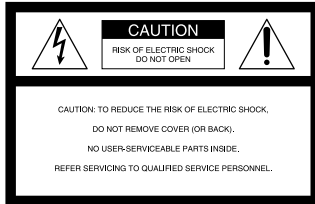

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

If you have any questions about this product, you may call; Sony Customer Information Service Center 1-800-222-7669 or <http://www.sony.com/>

## Important Safety Instruction

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Welcome!

Thank you for purchasing the System Integration 2CH Amplifier. Before operating the unit, please read this manual thoroughly and retain it for future reference.

# TABLE OF CONTENTS

---

## **Chapter 1 Getting Started**

- Features 4
  - Unpacking 5
  - Parts and Controls 6
- 

## **Chapter 2 Setting up the amplifier**

- Installing the amplifier 8
  - Hooking up the Amplifier 10
  - Selecting the method to activate the amplifier 11
  - Setting up the IR ID 12
- 

## **Chapter 3 Operating the amplifier**

- Adjusting the maximum volume level 14
  - Controlling the amplifier 15
  - Clearing the amplifier's memory 15
- 

## **Chapter 4 Other Information**

- Precautions 16
- Troubleshooting 17
- Specifications 18
- Index 19

# Chapter 1

# Getting Started

This chapter provides you with information on the features and the parts and controls of the amplifier.

---

## Features

The TA-MR2ES amplifier can be integrated into any multi-room entertainment system.

The amplifier allows you to

- Create high performance multi-room audio systems with intelligence control features.
- Program universal remotes using the unique IR programming function on the rear panel.
- Trigger the amplifier using one of three methods.
- Cascade amplifiers to power multiple zones using the 12-volt trigger outputs.

---


# Unpacking

The TA-MR2ES amplifier includes the following:

- TA-MR2ES amplifier
- AC power cord
- Installation Manual (this manual)
- Rack-mount brackets (2)
- Screw (6)

# Parts and Controls

## Front panel of the amplifier

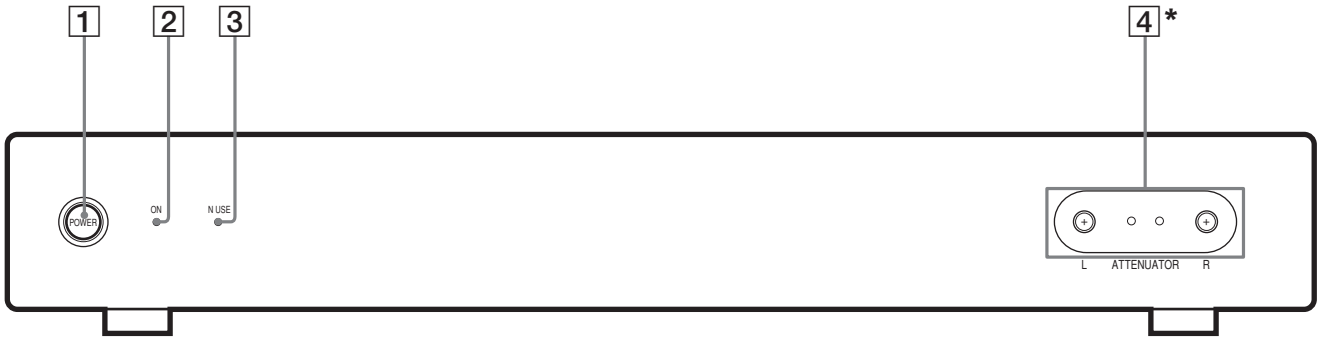

### \*To remove the cover



Press either ends of the cover lid to remove the cover. After you have finished adjusting the ATTENUATOR L/R, place the cover lid back to its original position.

### 1 POWER switch

Press to turn the power on or off.

### 2 ON indicator

The ON indicator lights up as follows:

- green: the power is on.
- green (flashing three times): the amplifier's memory is cleared.
- off: the power is off.

### 3 IN USE indicator


The IN USE indicator lights up as follows:

- green: the amplifier is in use.
- green (flashing): the IR ID TEST switch is set to "ON".
- green (fast flashing): the IR TEST function is in progress.
- red (flashing): "PROTECTION" mode is turned on.
- off: the amplifier is not in use.

### 4 ATTENUATOR L/R

Adjusts the maximum volume level of this amplifier to match the room and the speakers used.

## Rear panel of the amplifier

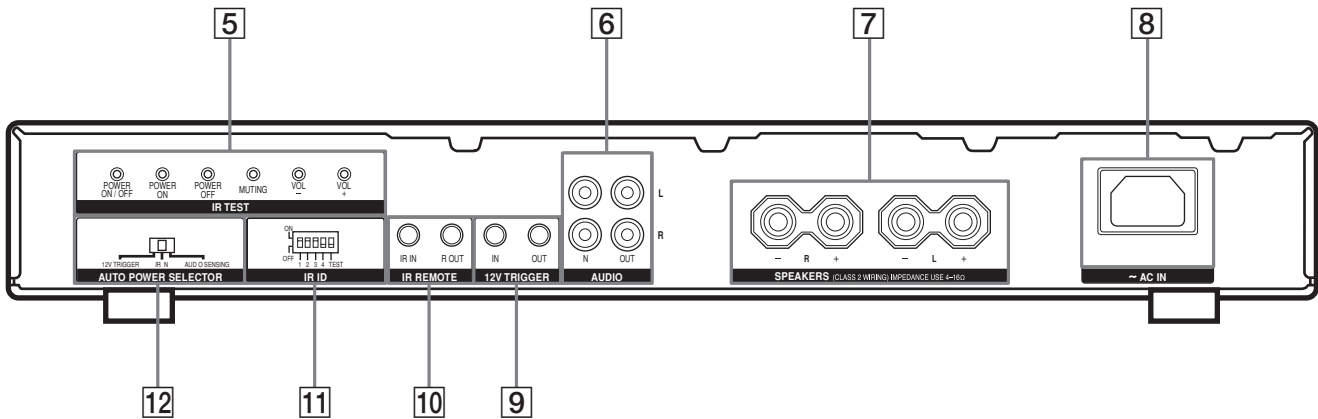**5** IR TEST buttons (page 12)

Press the appropriate button to output the IR codes you want to teach through the IR OUT terminal.

**6** AUDIO jacks (page 10)**a) AUDIO IN**

RCA jacks for stereo line level audio input from a multi-room system.

**b) AUDIO OUT**

RCA jacks for looping out to another amplifier or component.

**Note**

This is a buffered audio connection, and this loop-through is active even when the IN USE indicator is off, as long as the AC power cord is plugged in and the POWER switch is on.

**7** SPEAKERS (page 10)

Terminal which accepts speaker wire sizes up to 12AWG.

Leave the AC power cord unplugged when you hook up speaker cables.

**8** AC IN (page 10)

Removable power cord for easy serviceability of the amplifier.

**9** 12V TRIGGER jacks (page 10)**a) IN**

A 3.5 mm monaural mini jack to turn on the amplifier via a 12-volt trigger input.

**b) OUT**

Enables the looping of amplifier control from one to the next to trigger multiple amplifiers from a 12-volt trigger output.

**10** IR REMOTE jacks (page 10)**a) IR IN**

Connects to an outboard IR repeater system so you can operate the amplifier from a distant room.

**b) IR OUT**

A 3.5 mm monaural mini jack for the connection of an IR emitter to control other components individually. IR signals received will be routed to the IR sensor of the other components.

Outputs IR from the IR TEST system built into the rear of the amplifier.

**11** IR ID switches (page 12)

Select from 12 discrete IR code tables to communicate with up to 12 TA-MR2ES amplifiers (with individual IR ID) on one IR repeater network.

**12** AUTO POWER SELECTOR switch (page 11)

Selects the method for activating the amplifier.

# Chapter 2


## Setting up the amplifier

This chapter provides you with information on the amplifier regarding installation, hookups and settings.

### Installing the amplifier

When you mount the amplifier, note the following:


- Place the amplifier on a flat and level surface.
- When installing it in a cabinet, make sure the back of the cabinet is open to allow adequate ventilation, prevent heat buildup, and prolong the life of the unit.
- Place a board under the amplifier if it is located on a carpet to allow adequate ventilation on the bottom.
- Make sure the weight is equally distributed on each of its four feet.
- Do not place anything on the top of the amplifier that might block the ventilation holes and cause malfunction.
- Do not place anything on the front or rear panel that might damage the amplifier's control buttons and connectors.
- Use caution when placing the unit on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

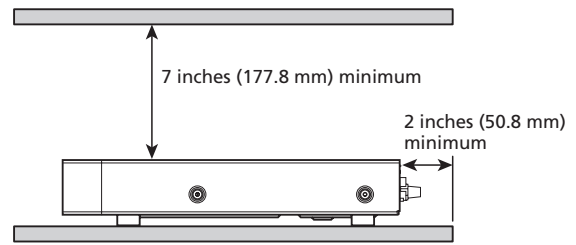

Leave at least 3 inches (76.2 mm) on each side for ventilation.



If you install the amplifier in a closed cabinet, install two small box fans in the cabinet to provide continuous ventilation.

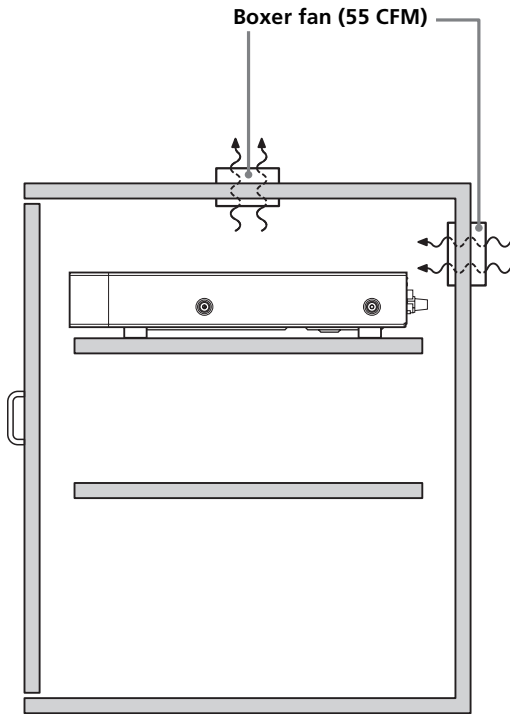



#### Note

Attach box fans also if you connect low-impedance speakers (less than 8 ohms nominal).


## Using rack-mount brackets

You can also mount the amplifier into a rack. Make sure that you measure the space needed before mounting.

- 1 **Install the rack-mount brackets onto the amplifier with the supplied screws as shown below.** Make sure that the rack-mount brackets are installed securely.

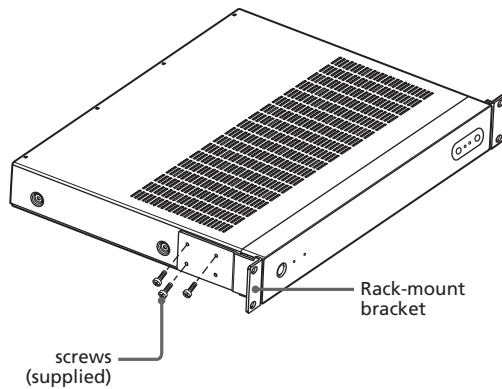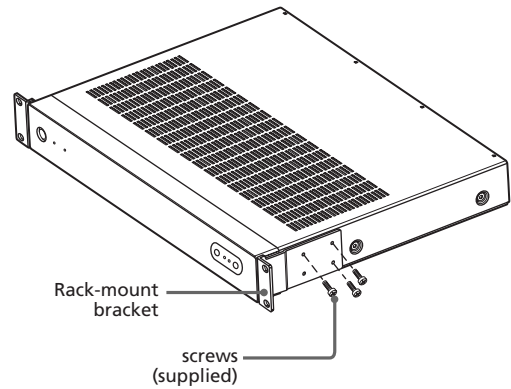

- 2 **Mount the amplifier into the rack as shown below.** Make sure that the amplifier is installed securely.

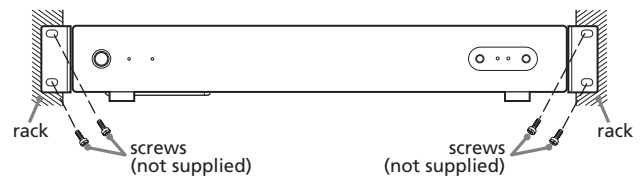

#### Notes

- Use screws with a minimum diameter of 3/16 inch when you mount the amplifier into the rack.
- Make sure you check the rack manufacturer's specifications before you mount the amplifier into the rack. This is to ensure mechanical stability.
- This amplifier requires 2U height space when you mount the amplifier on a standard rack.

# Hooking up the Amplifier

Before hooking up the amplifier, be sure the power cord is unplugged. Refer to the illustration below for the connector locations.

## IR REMOTE IR IN jack (A)

Plug the output from an IR receiver into the IR REMOTE IR IN jack of the amplifier. You can then operate the amplifier by using any IR-based control system.

**Tip**

Make sure that you match the IR ID switches with the correct code table (page 12).


## IR REMOTE IR OUT jack (A)

Connect this output to any IR input to pass codes to another device. Use only a 3.5 mm monaural mini plug as shown below.

**Tip**

Plug a 3.5 mm monaural mini plug from the IR REMOTE IR OUT jack to the IR REMOTE IR IN jack of the another TA-MR2ES amplifier.

Make sure that you match the IR ID switches on the amplifier with the codes set programmed into the controller.

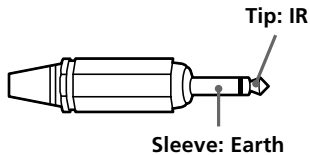

## 12V TRIGGER IN jack (B)

Hook up the 12V TRIGGER IN jack of the amplifier with an integrated AV system to allow the AV system to activate the amplifier.

Use a 3.5 mm monaural mini plug cable.

## 12V TRIGGER OUT jack (B)

Hook up the 12V TRIGGER OUT jack of the amplifier to any 12-volt triggered device.

Use a 3.5 mm monaural mini plug cable.

## AUDIO IN jack (C)

Hook up the audio output of the multi-room system to the AUDIO IN jack of the amplifier.

Use RCA audio cables.

## AUDIO OUT jack (C)

Hook up the AUDIO OUT jack of the amplifier audio input to any component or to another TA-MR2ES amplifier.

Use RCA audio cables.

## SPEAKERS terminals (D)


Hook up the speaker cables to the SPEAKERS terminals. Leave the AC power cord unplugged when you hook up speaker cables.

## AC IN jack (E)

Connect the supplied AC power cord to the AC IN jack.

**Caution**

Make sure you connect the 3.5 mm monaural mini plug cable to the correct jack on the amplifier. Otherwise, it may cause a malfunction. For example, if you want to connect the mini plug cable to the IR REMOTE IR IN jack, make sure you do not connect it to the 12V TRIGGER IN jack.

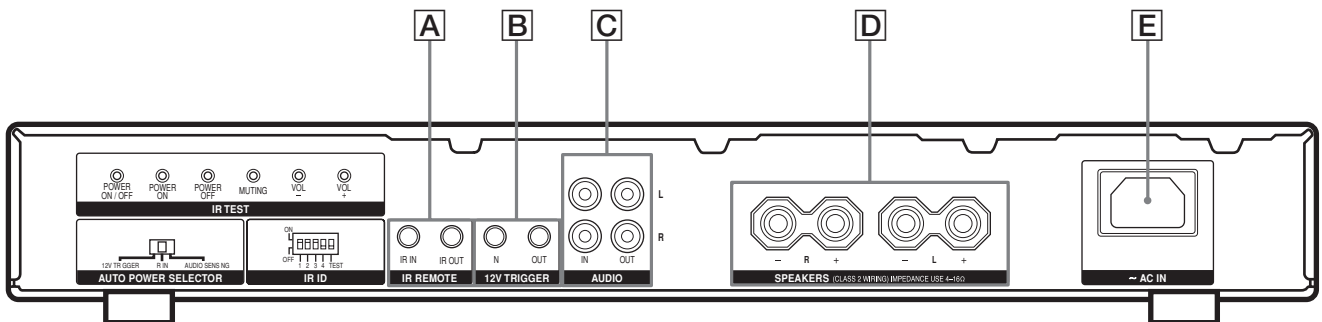

## Selecting the method to activate the amplifier

There are three methods to activate the amplifier. Select the turn-on method by setting AUTO POWER SELECTOR as follows:

- **12V TRIGGER**  
When there is no voltage detected at the trigger input, the amplifier remains off. When the sensing circuitry detects voltage, the amplifier will turn on. When the sensing circuitry detects no voltage, the amplifier turns off instantly.
- **IR IN**  
When the amplifier detects the appropriate “POWER ON” IR code through the IR REMOTE IR IN, the amplifier will power on. When the amplifier detects the “POWER OFF” IR code, the amplifier turns off instantly.
- **AUDIO SENSING**  
When there is only a small amount or no audio signal detected at either the left or right input, the amplifier remains off. However, the sensing circuitry is always on. When the sensing circuitry detects sufficient audio signal present at any of the audio inputs, the amplifier will be turned on automatically. The sensing circuitry will wait for around three minutes after the audio signal stops to turn the amplifier off.

### Tip

Be sure to press POWER to turn on the power after completing all the settings for the amplifier. Otherwise, the amplifier cannot be activated.

# Setting up the IR ID


You can set up the IR ID when the IR ID TEST switch is in the "ON" or "OFF" position.

## When the IR ID TEST is "ON"

Select this setting to teach the six IR codes below to any IR-based controller.

IR TEST buttons	Function
POWER ON/OFF	To turn on or off the power.
POWER ON	To turn on the power.
POWER OFF	To turn off the power.
MUTING	To mute the sound.
VOL -	To turn down the volume.
VOL +	To turn up the volume.

- 1 Make sure that the ATTENUATOR L/R is adjusted to minimum. For details, refer page 14.
- 2 Turn on the amplifier.
- 3 Set the IR ID TEST switch to the "ON" position. The IN USE indicator flashes.

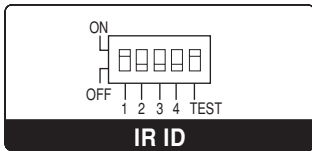


- 4 To output the IR code, for example ID1, set the IR ID 1 switch to the "ON" position and set the rest of the IR ID switches (IR ID 2, 3 and 4) to the "OFF" position. To select other IR ID, refer to the table below.

	1	2	3	4
ID1	ON	OFF	OFF	OFF
ID2	OFF	ON	OFF	OFF
ID3	ON	ON	OFF	OFF
ID4	OFF	OFF	ON	OFF
ID5	ON	OFF	ON	OFF
ID6	OFF	ON	ON	OFF
ID7	ON	ON	ON	OFF
ID8	OFF	OFF	OFF	ON
ID9	ON	OFF	OFF	ON
ID10	OFF	ON	OFF	ON
ID11	ON	ON	OFF	ON
ID12	OFF	OFF	ON	ON

If you set the IR ID other than those listed in the table above, the IR ID will automatically be set to ID1.

- 5 Plug the IR emitter to the IR REMOTE IR OUT jack of the amplifier.
- 6 Make sure the learning remote has been set to learning mode and the IR emitter is touching the learning remote.

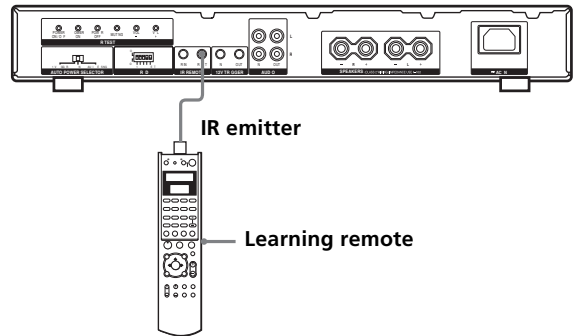

- 7 Press the IR TEST button for the code you want to learn. For example, if you want to learn power on/off, press POWER ON/OFF. The IN USE indicator flashes faster. It takes about 2.5 seconds to complete the learning. During this time, if you press other buttons, they will not function. If learning is not completed, repeat steps 6 and 7.
- 6 Repeat steps 6 to 7 to learn other buttons. You can then use the remote to operate the amplifier.

### Tips


- Make sure that the IR ID TEST switch is set to the "OFF" position and the IR ID switches is set correctly before using the remote to operate the amplifier. When the IR ID TEST switch is set to "OFF", the amplifier will turn on at the previous operating condition.
- For details on setting the learning remote to learning mode, refer to the operating instructions supplied with the remote.

### When the IR ID TEST is "OFF"

Select this setting before you operate the amplifier. When the IR ID TEST switch is set to the "OFF" position, you can also make the setting below.


You can connect up to 12 TA-MR2ES amplifiers (with individual IR ID) in any order. Use an optional IR cable (5 ft.) to make the following connections.

#### Example

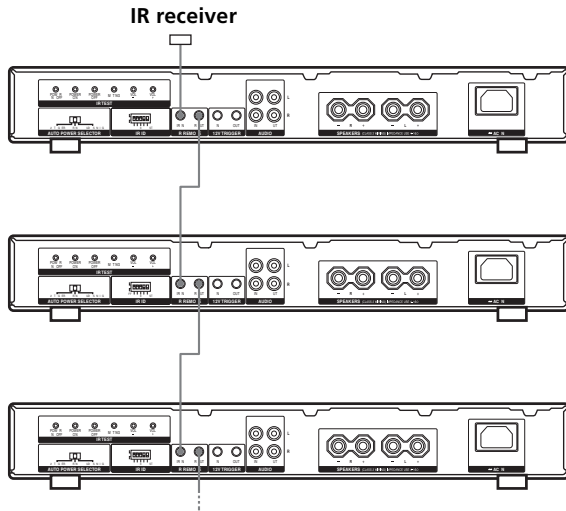

You can then use the same IR network to operate all amplifiers independently.

- 1 Set the IR ID TEST switch to the "OFF" position.

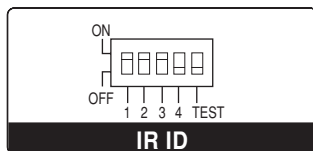

- 2 To operate the amplifier you want, set the IR ID. To select an IR ID code set, refer to the table below.

	1	2	3	4
ID1	ON	OFF	OFF	OFF
ID2	OFF	ON	OFF	OFF
ID3	ON	ON	OFF	OFF
ID4	OFF	OFF	ON	OFF
ID5	ON	OFF	ON	OFF
ID6	OFF	ON	ON	OFF
ID7	ON	ON	ON	OFF
ID8	OFF	OFF	OFF	ON
ID9	ON	OFF	OFF	ON
ID10	OFF	ON	OFF	ON
ID11	ON	ON	OFF	ON
ID12	OFF	OFF	ON	ON

- 3 Plug the IR repeater system to the IR REMOTE IR IN jack on the amplifier.

- 4 Point the remote at the IR receiver to operate the amplifier.

#### Note

Make sure that the IR ID of the remote matches the IR ID of the amplifier. Otherwise, the remote cannot be used to operate the amplifier.

# Chapter 3

## Operating the amplifier

This chapter provides you with information on amplifier operation.

---

### Adjusting the maximum volume level

You can control the maximum volume level to avoid damaging your speakers by adjusting the variable attenuator screws behind the cover lid on the front panel.

- 1 Remove the cover lid. For details, refer page 6.**
- 2 Insert a screw driver into the ATTENUATOR L or ATTENUATOR R screws to adjust the maximum output level of the amplifier to match your system.**  
To increase the volume, turn the screw driver clockwise and to reduce the volume, turn counter-clockwise. To adjust to maximum or minimum, turn the screw driver fully.
- 3 Place the cover lid back to its original position.**

#### Tips

- You may adjust the left and right output level independently.
- The default setting for the variable attenuator is set to minimum.

## Controlling the amplifier

You can use the buttons on the remote or control system to control the amplifier. Before using the control system, make sure it has the proper code set (page 12).

### Adjusting the volume level

Press the VOLUME button on the remote to adjust the volume level.

There are 70 steps to adjust the volume level from zero to full power.

#### Tip

The default setting for the internal IR volume is set to maximum. Make sure you do the steps correctly to avoid damaging the speakers.

### Activating the amplifier

Press the POWER button on the remote to activate the amplifier.

#### Tip

If you set the AUTO POWER SELECTOR to 12V TRIGGER or AUDIO SENSING, you cannot use the remote to activate the amplifier.

### Muting the sound

Press the MUTING button on the remote to set muting on or off.

## Clearing the amplifier's memory

This procedure is used to return the settings you have made to their factory defaults. Before clearing the amplifier's memory, be sure to set the variable attenuator to minimum.

- 1 Press **POWER** to turn off the amplifier.
- 2 Hold down **POWER OFF** on the rear panel and press **POWER** on the front panel to turn on the amplifier.

The ON indicator flashes 3 times.

The following are reset to their factory settings.

- Volume level adjusted with learned remote.
- The power status is initialized to "POWER ON" when IR IN is selected in AUTO POWER SELECTOR.

# Chapter 4

# Other

# Information

This chapter provides you with additional information that will help you understand and maintain your system.

---

## Precautions

### On safety

- Should any solid object or liquid fall into the cabinet, unplug the amplifier and have it checked by a qualified service technician before operating it any further.
- The unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the unit itself has been turned off.

### On power sources

- Before operating the unit, check that the operating voltage of the unit is identical to that of your local power supply. The operating voltage is indicated on the nameplate on the back of the unit.
- If you are not going to use the unit for a long time, be sure to disconnect it from the AC power source. To disconnect the lead, grasp the plug itself; never pull the cord.

### On placement

- Place the unit in a location with adequate ventilation to prevent heat build-up in the amplifier.
- Do not place the unit on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.

### On adjusting the volume

- Do not turn up the maximum volume level by adjusting the ATTENUATOR L/R on the front panel too high while listening to very low input levels. If you do, the speakers may be damaged when high volume source is played.

### On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

If you have any questions or problems concerning the amplifier, please consult your nearest Sony dealer.



# Troubleshooting

If you experience any of the following difficulties while using the amplifier, use this troubleshooting guide to help you to remedy the problem. Should any problem persist, consult your nearest Sony dealer.

## **There is no sound, or only a very low-level sound is heard.**

- ➔ Check that the amplifier is turned on.
- ➔ Check that the speakers are connected correctly and securely.
- ➔ Press MUTING to check the muting status.
- ➔ Check to see if the protection circuit on the amplifier has been activated because of a short circuit (the IN USE indicator flashes red). Turn off the amplifier, eliminate the short-circuit problem and turn the power on again.
- ➔ Adjust the ATTENUATOR on the amplifier and the volume on the learned remote.
- ➔ If all steps above cannot remedy the problem, clear the amplifier's memory (page 15).


## **The left and right sounds are unbalanced or reversed.**

- ➔ Check that the speakers and components are connected correctly and securely.
- ➔ Adjust the ATTENUATOR L and R on the front panel behind the cover lid.

## **There is severe hum or noise.**

- ➔ Check that the speakers are connected securely.
- ➔ Check that the connecting cords are away from a transformer or motor, and at least 10 feet (3 meters) away from a TV set or fluorescent light.
- ➔ Move your TV away from the audio components.
- ➔ The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.

## **The IR Remote Control does not function.**

- ➔ Point the Remote Control at the remote sensor  on the IR receiver.
- ➔ Remove any obstacles in the path between the Remote Control and the IR receiver.
- ➔ Replace both batteries in the Remote Control with new ones, if they are weak.
- ➔ Check that you have selected the correct function on the Remote Control.
- ➔ Make sure the IR code setting is correct.
- ➔ Make sure the IR ID TEST switch is set to "OFF".

## **The POWER switch is on but the IN USE indicator does not light up when AUTO POWER SELECTOR is set to IR IN.**

- ➔ Clear the amplifier's memory (page 15).

# Specifications

Continuous average power output (FTC):

35 W per channel min. RMS at 8 ohms,  
both channels driven from 20 Hz to  
20 kHz with no more than 0.09 %  
THD.

40 W per channel min. RMS at 4 ohms,  
both channels driven from 20 Hz to  
20 kHz with no more than 0.09 %  
THD.

Frequency response: 5 Hz – 100 kHz + 0.5/-2 dB

Residual noise (A-weighted):

150  $\mu$ V or less

Channel separation (1 kHz/10 kHz):

(input 4.7 k ohms terminated)  
60 dB/45 dB

Signal-to-noise ratio: 94 dB (A-weighted filter, 150 mV input)

## Audio input

Sensitivity: 150 mV

Impedance: 50 k ohms

## Audio output

Voltage: minimum 2 V without clipped

Impedance: 1 k ohms

S/N: 102 dB (A-weighted filter, 2 V output)

## General

12V trigger IN: accept 10 ~ 12 V of trigger

12V trigger OUT: 300 mA max

IR input: accept up to 40 kHz IR modulation  
frequency

IR output: buffered, 5 V

Power requirements: 120 V AC, 60 Hz

Power consumption: 100 W

Dimensions: 430 × 67 × 350 mm (w/h/d)

Mass: 6.5 kg

Design and specifications are subject to change without notice.

---

# Index

## A

- AC IN 7, 10
- AC power cord 7, 10
- Adjusting volume 14, 15
- ATTENUATOR L/R 6, 14
- AUDIO IN jack 7, 10
- AUDIO OUT jack 7, 10
- AUTO POWER SELECTOR switch 7, 11

## H, I

- Hookup
  - AC power cord 10
  - AUDIO IN 10
  - AUDIO OUT 10
  - IR REMOTE IR IN 10
  - IR REMOTE IR OUT 10
  - SPEAKERS 10
  - 12V TRIGGER IN 10
  - 12V TRIGGER OUT 10
- IN USE indicator 6
- Initializing all the settings 15
- Installing the amplifier 8–13
- IR ID switches 12–13
- IR receiver 13
- IR Remote Control 12
- IR REMOTE IR IN jack 7, 10
- IR REMOTE IR OUT jack 7, 10
- IR TEST buttons 7, 12

## L

- Learning the remote code 12

## O, P

- ON indicator 6
- POWER switch 6, 15
- Precautions 16

## S

- Selecting the method for activating the amplifier 11
- Setting the IR ID 12–13
- SPEAKERS terminal 7, 10
- Specifications 18

## T

- Troubleshooting 17

## Numeral

- 12V TRIGGER jacks 7, 10

