


# TAPE DECK MODEL RS-269US SCHEMATIC DIAGRAM

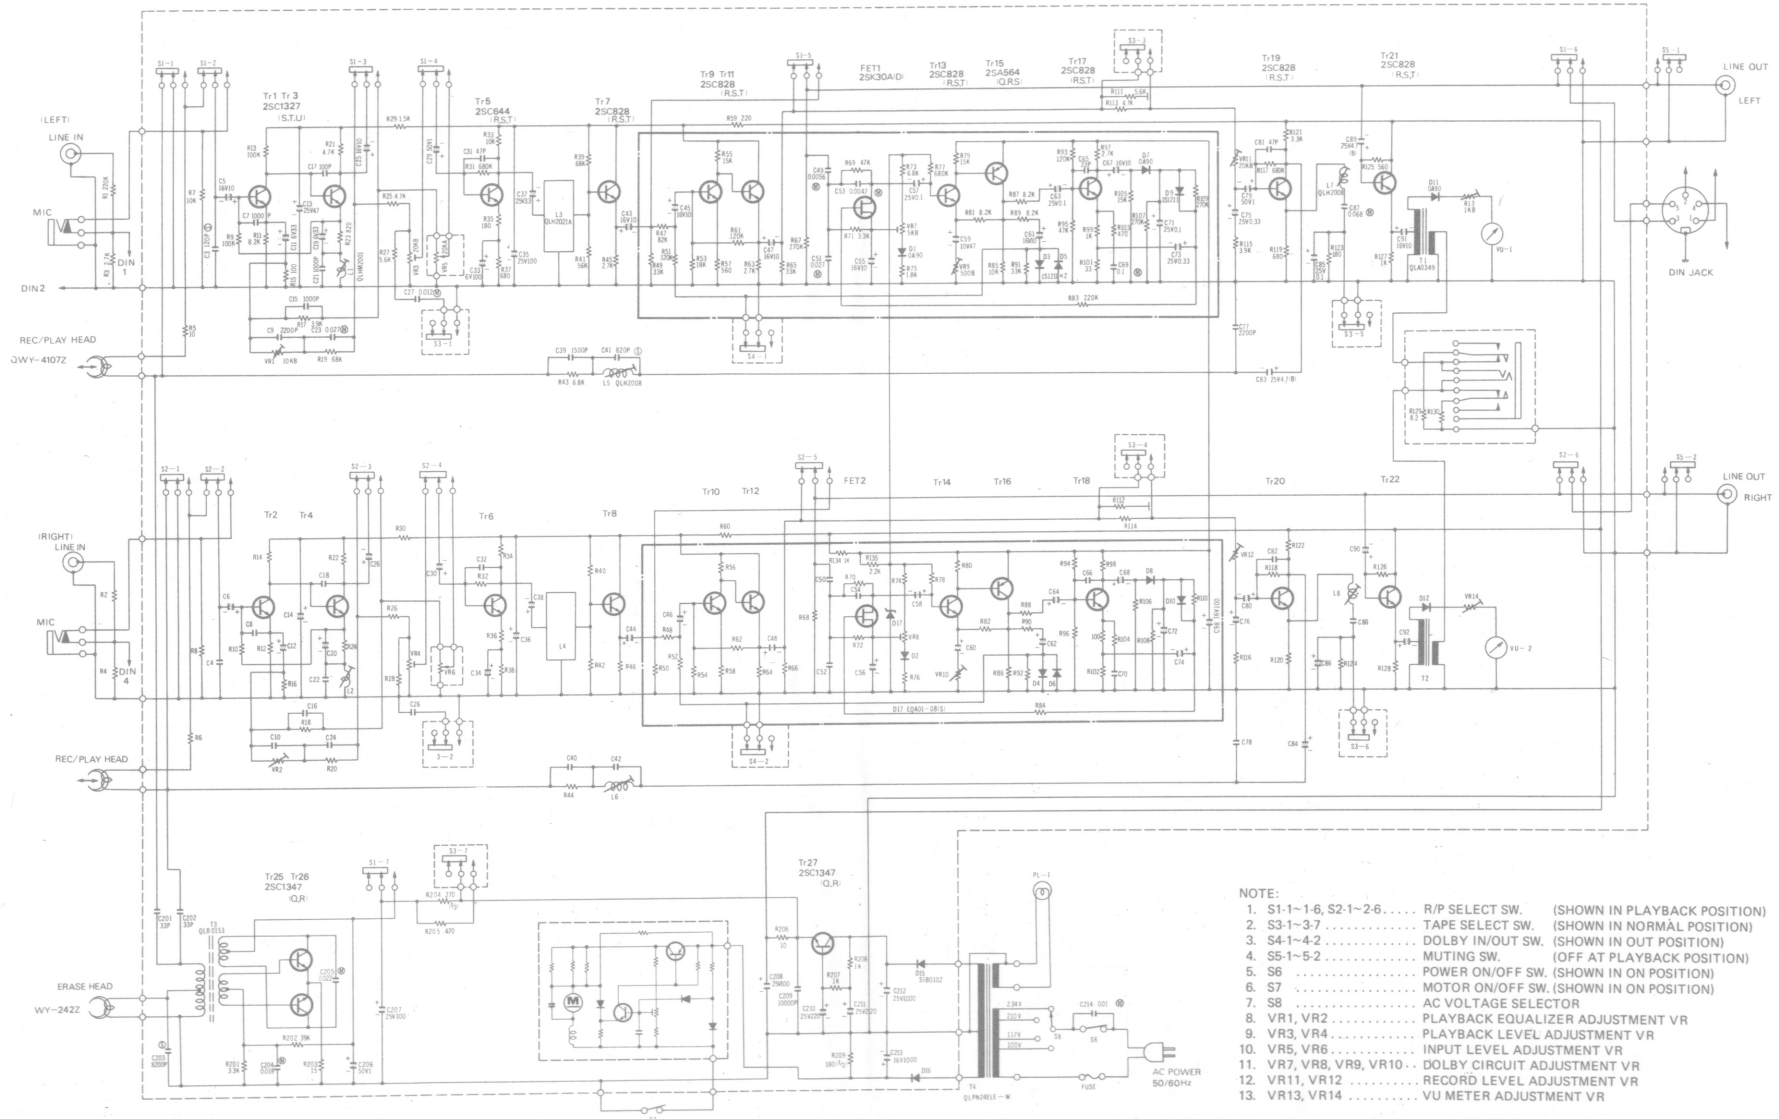

- NOTE:
- 1. S1-1~1-6, S2-1~2-6 ..... R/P SELECT SW. (SHOWN IN PLAYBACK POSITION)
  - 2. S3-1~3-7 ..... TAPE SELECT SW. (SHOWN IN NORMAL POSITION)
  - 3. S4-1~4-2 ..... DOLBY IN/OUT SW. (SHOWN IN OUT POSITION)
  - 4. S5-1~5-2 ..... MUTING SW.
  - 5. S6 ..... POWER ON/OFF SW. (SHOWN IN ON POSITION)
  - 6. S7 ..... MOTOR ON/OFF SW. (SHOWN IN ON POSITION)
  - 7. S8 ..... AC VOLTAGE SELECTOR
  - 8. VR1, VR2 ..... PLAYBACK EQUALIZER ADJUSTMENT VR
  - 9. VR3, VR4 ..... PLAYBACK LEVEL ADJUSTMENT VR
  - 10. VR5, VR6 ..... INPUT LEVEL ADJUSTMENT VR
  - 11. VR7, VR8, VR9, VR10 ..... DOLBY CIRCUIT ADJUSTMENT VR
  - 12. VR11, VR12 ..... RECORD LEVEL ADJUSTMENT VR
  - 13. VR13, VR14 ..... VU METER ADJUSTMENT VR

\* This schematic diagram is subject to change, to accomodate improvements in design.