


Technics TAPE DECK MODEL RS-M12 SCHEMATIC DIAGRAM

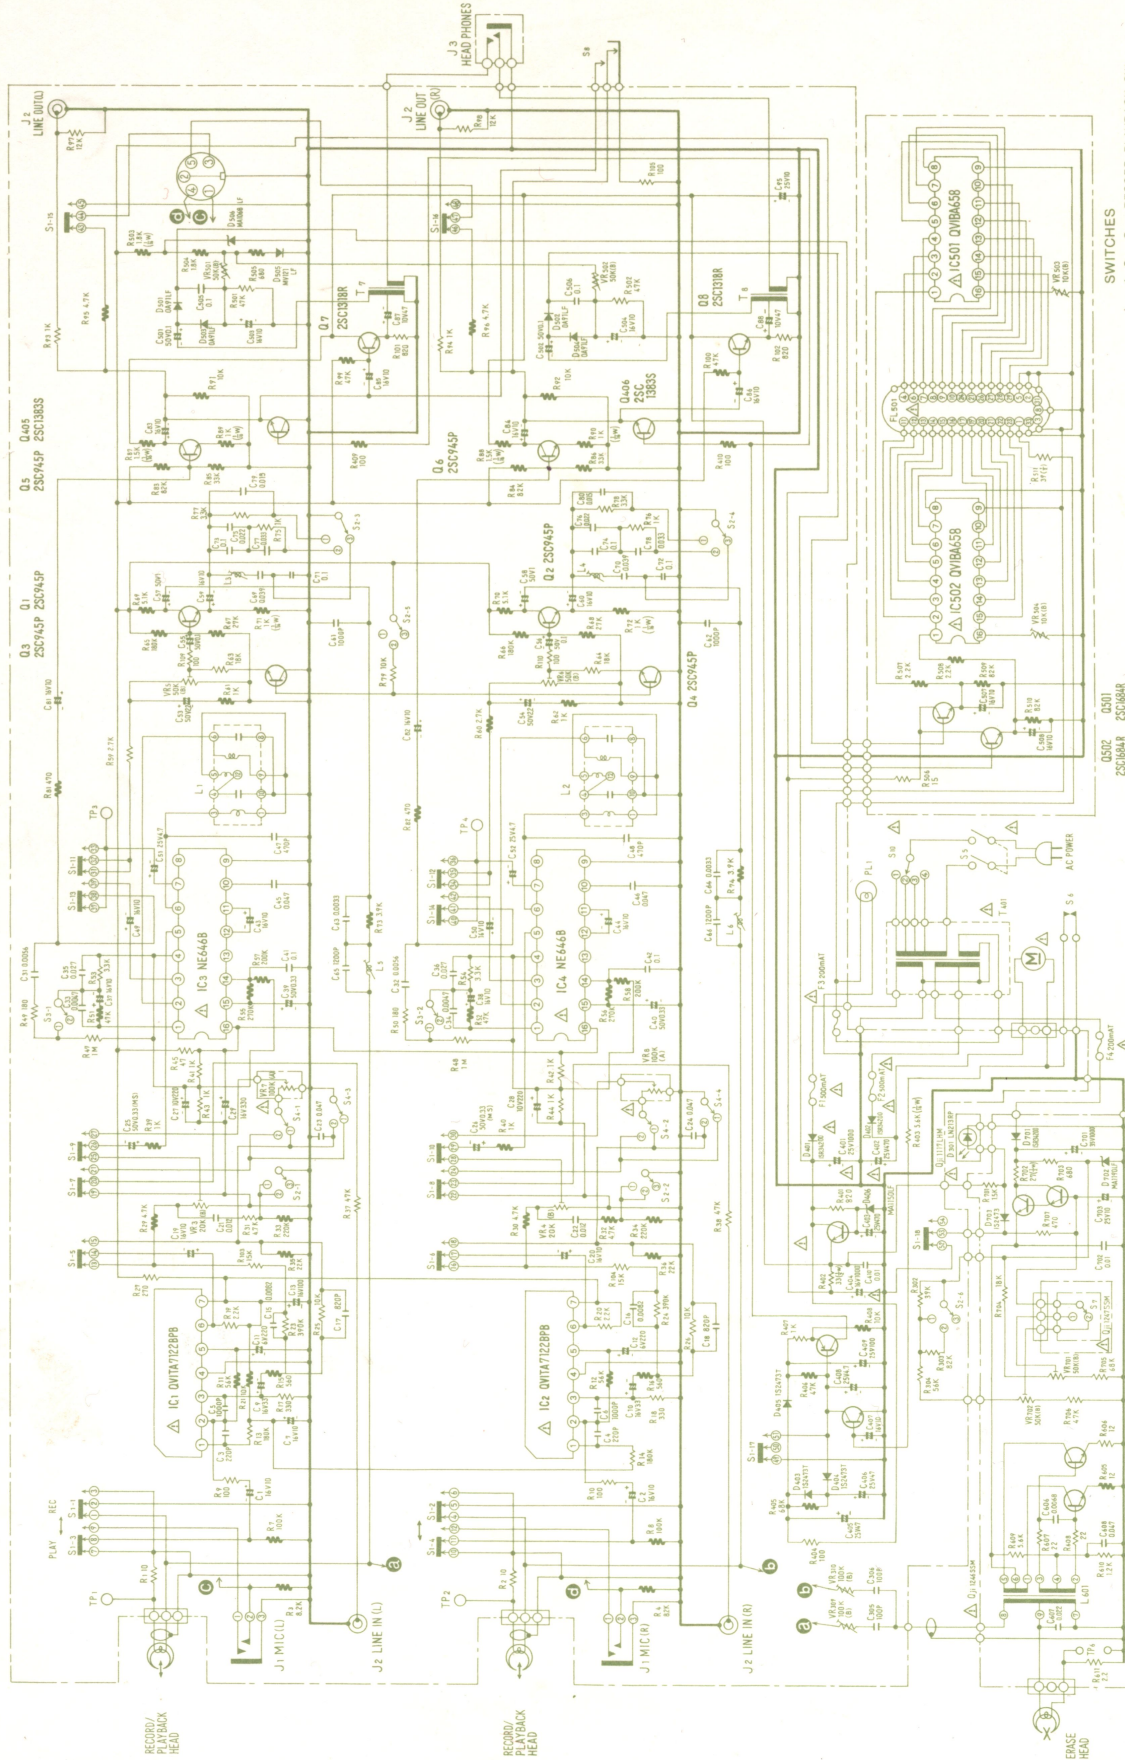

- SWITCHES**
1. S₁₁-S₁₆ RECORD PLAYBACK SW
 2. S₁₇-S₁₈ EQUALIZER BIAS SELECT SW
 3. S₁₉-S₂₂ DOLBY SW
 4. S₂₃-S₂₄ IN PUT SELECT
 5. S₂₅ POWER SW
 6. S₂₆ MOTOR MUTING SW
 7. S₂₇ CUE REVIEW MUTING SW
 8. S₂₈ RECORD MUTING SW
 9. S₂₉-S₃₂ VOLTAGE SELECT SW
 10. S₃₃
- * Δ indicates that only parts specified manufacturer be used for replacement in critical circuit.
- * This schematic diagram is subject to change.

