


DIGITAL

- JK1301 TV (OPTICAL)
- JK1303 DVD (OPTICAL)
- JK1302 CD (OPTICAL)

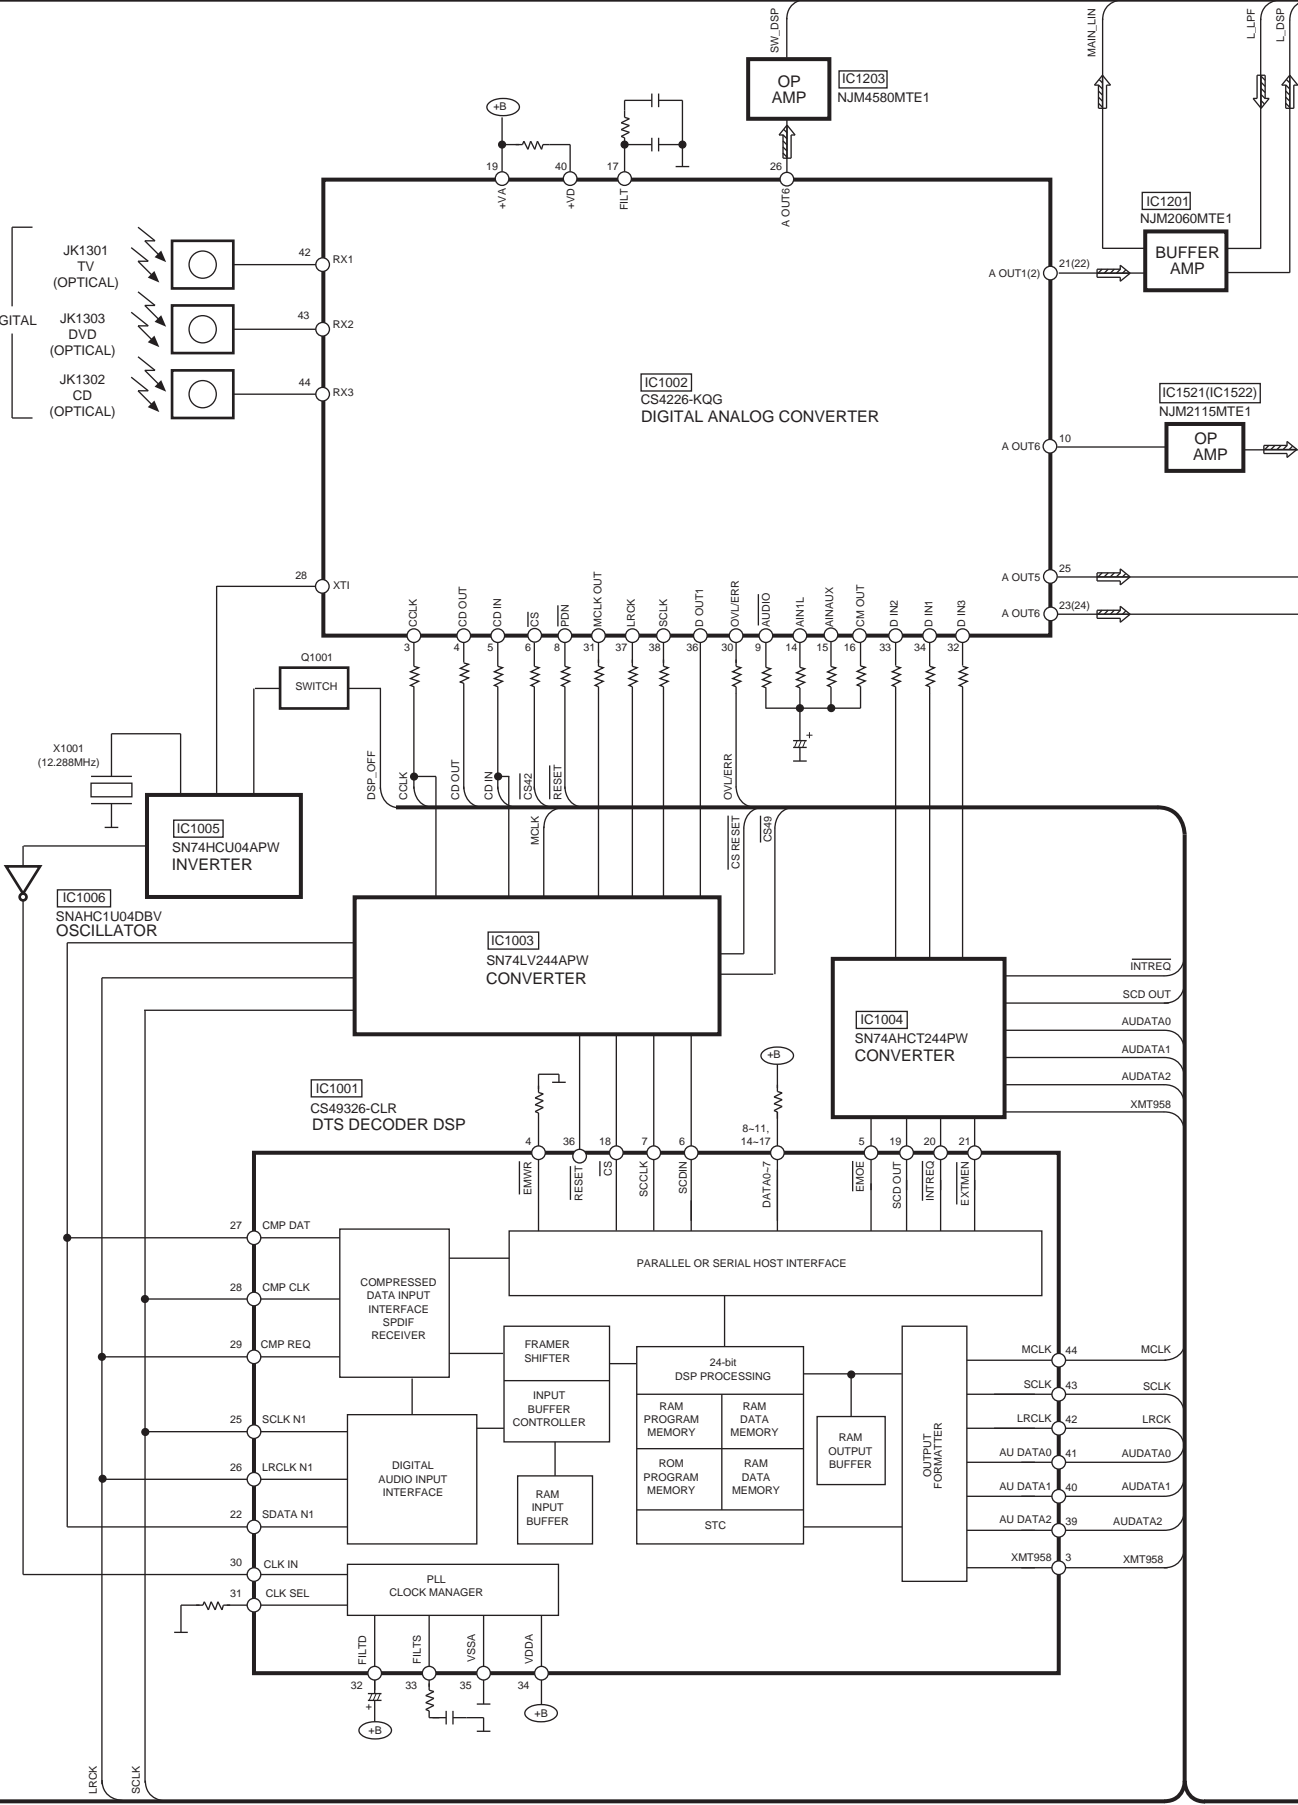

IC1005
SN74HCU04PW
INVERTER

IC1006
SNAHC1U04DBV
OSCILLATOR

IC1003
SN74LV244APW
CONVERTER

IC1004
SN74AHCT244PW
CONVERTER

IC1001
CS49326-CLR
DTS DECODER DSP

IC1002
CS4226-KQG
DIGITAL ANALOG CONVERTER



OP AMP
IC1203
NJM4580MTE1



IC1201
NJM2060MTE1
BUFFER AMP

OP AMP
IC1521(IC1522)
NJM2115MTE1


LRCLK
SCLK

MAIN LIN
L.LPF
L.DSP

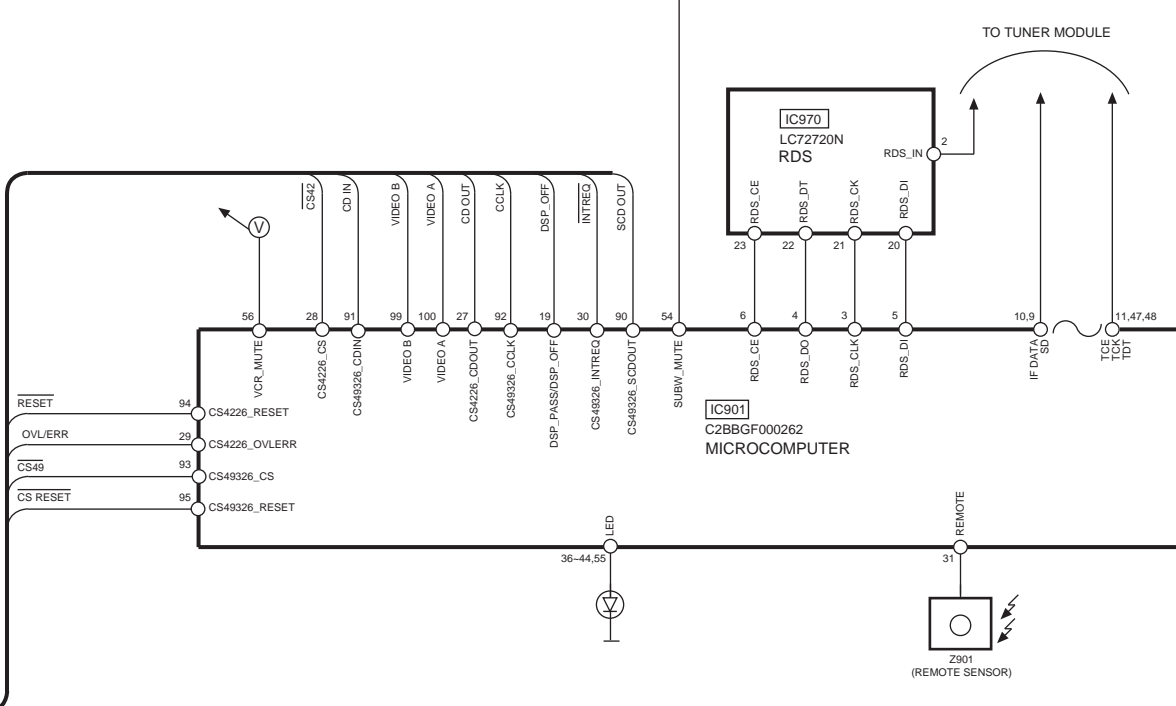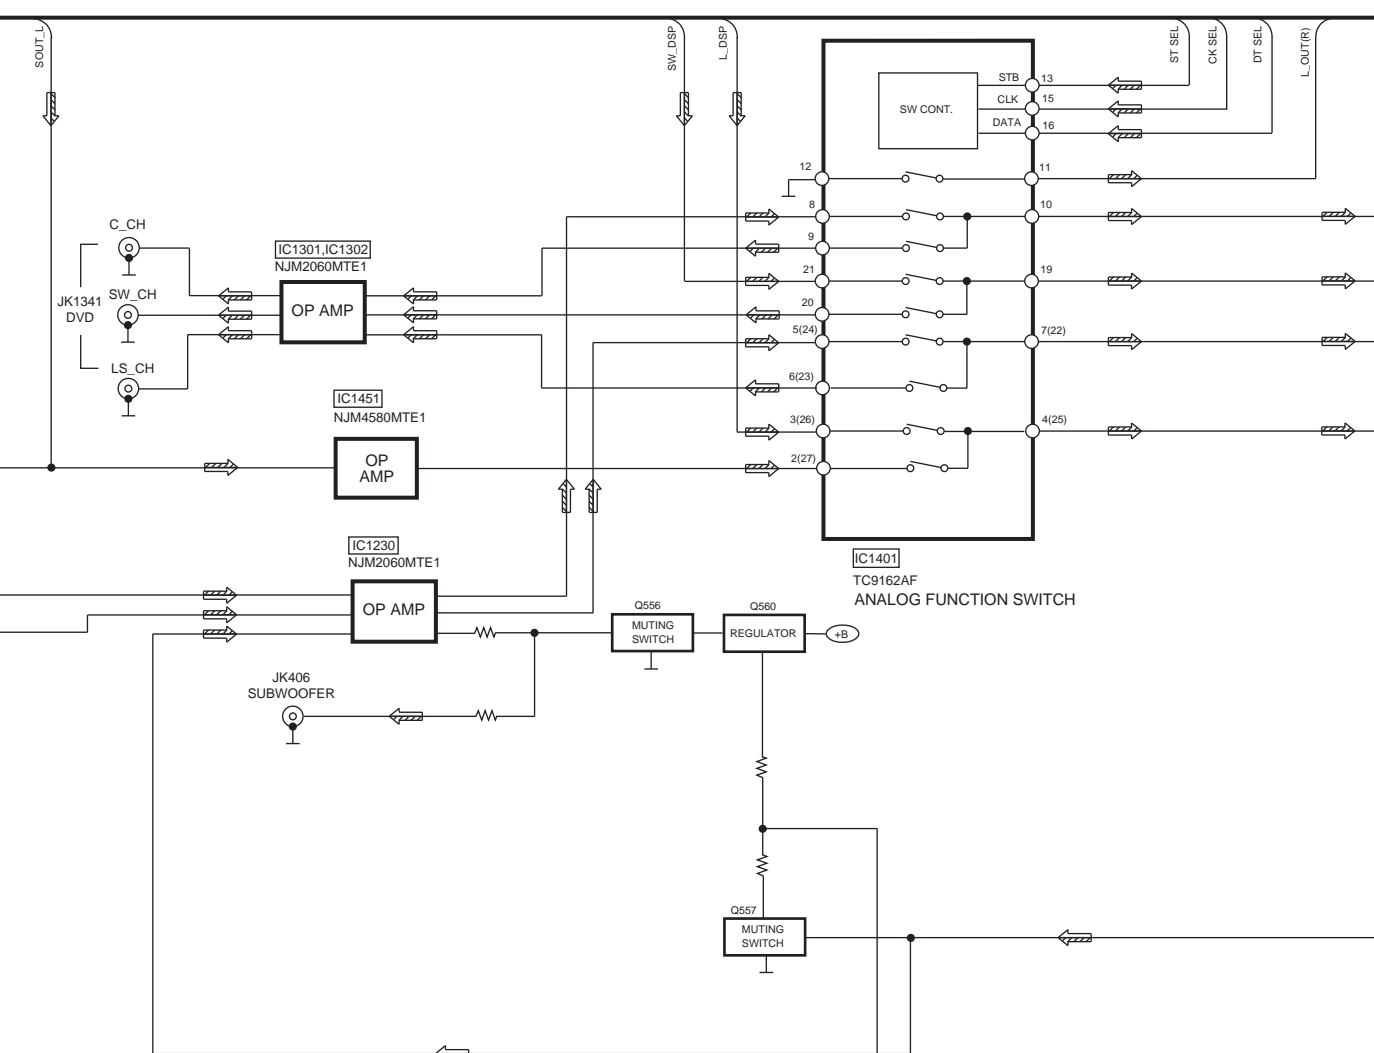

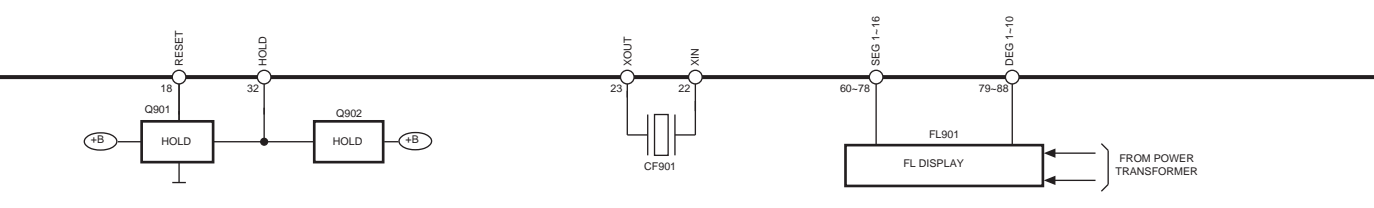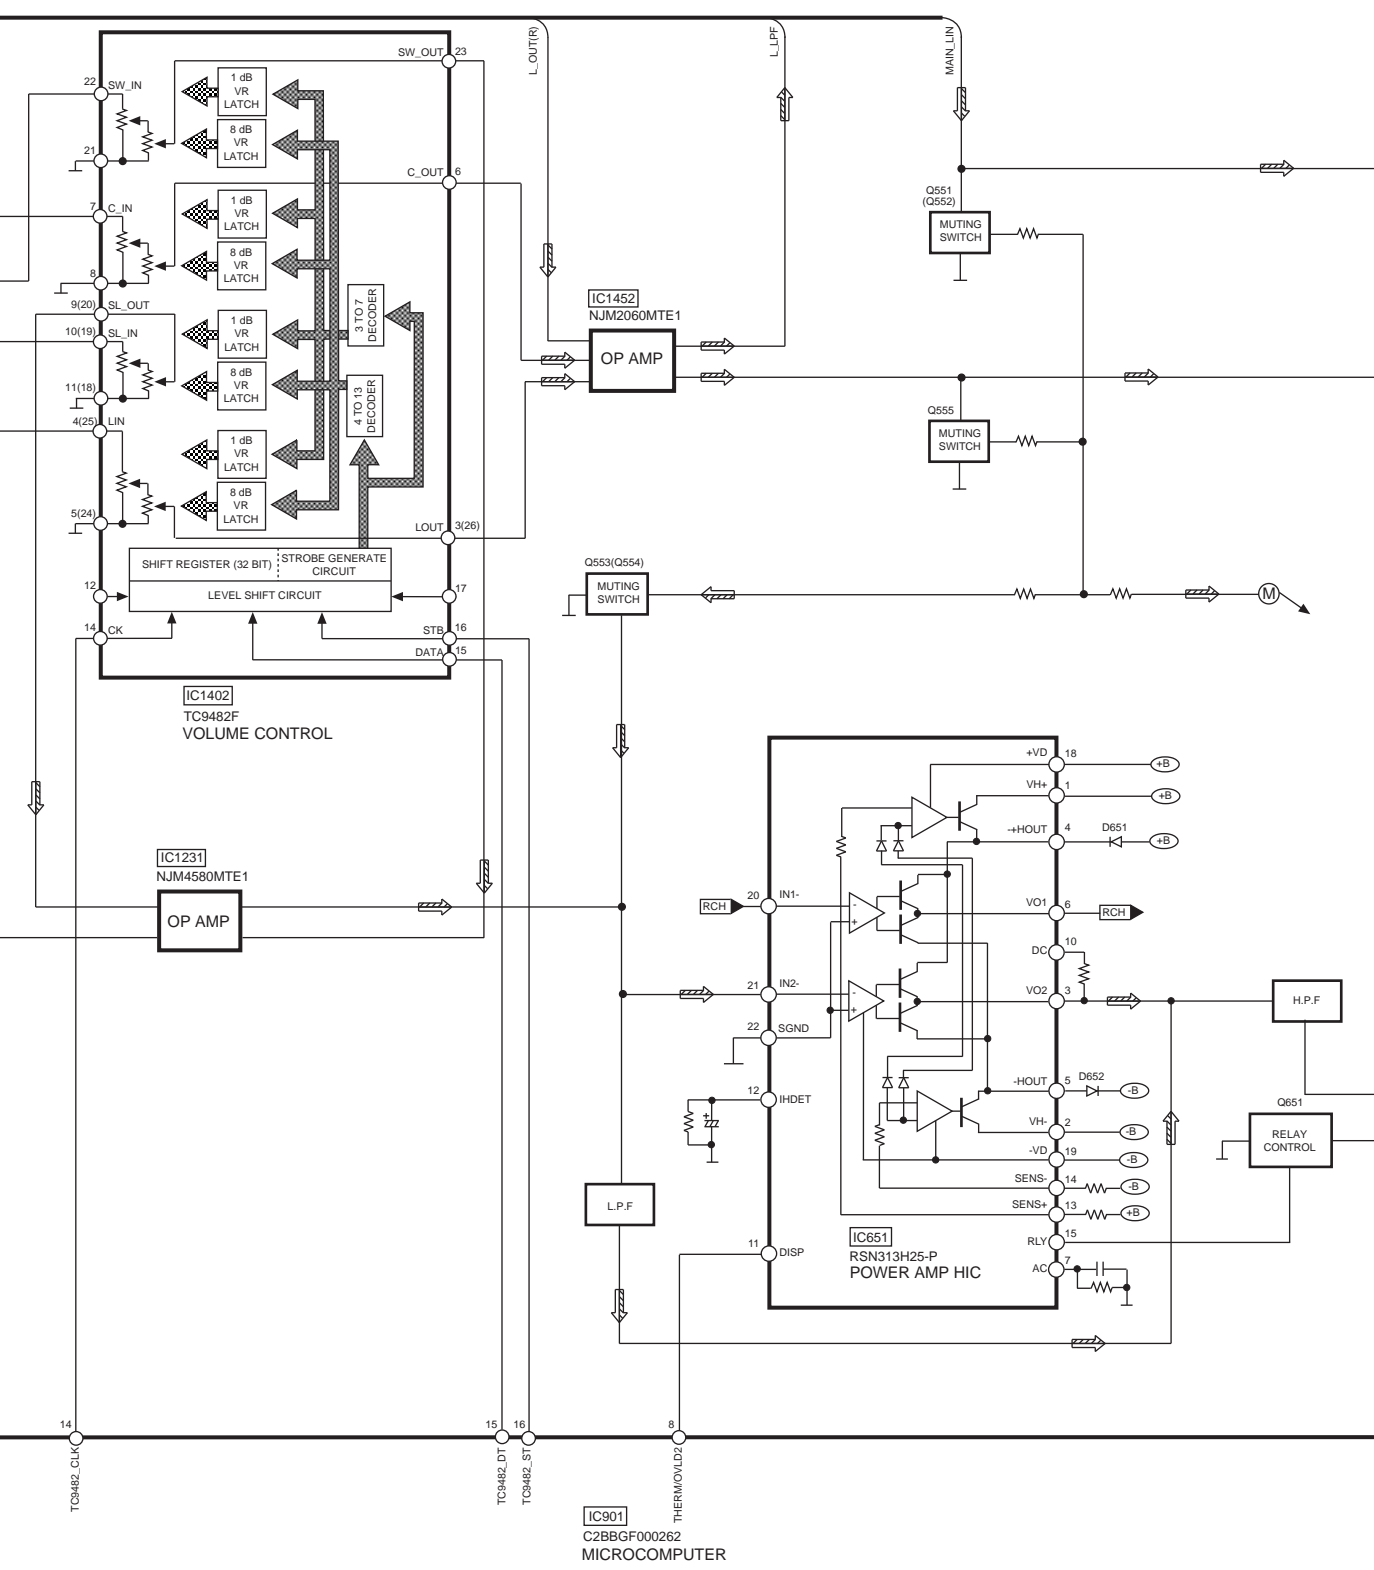

IC601
RSN310R36A-P
POWER AMP HIC

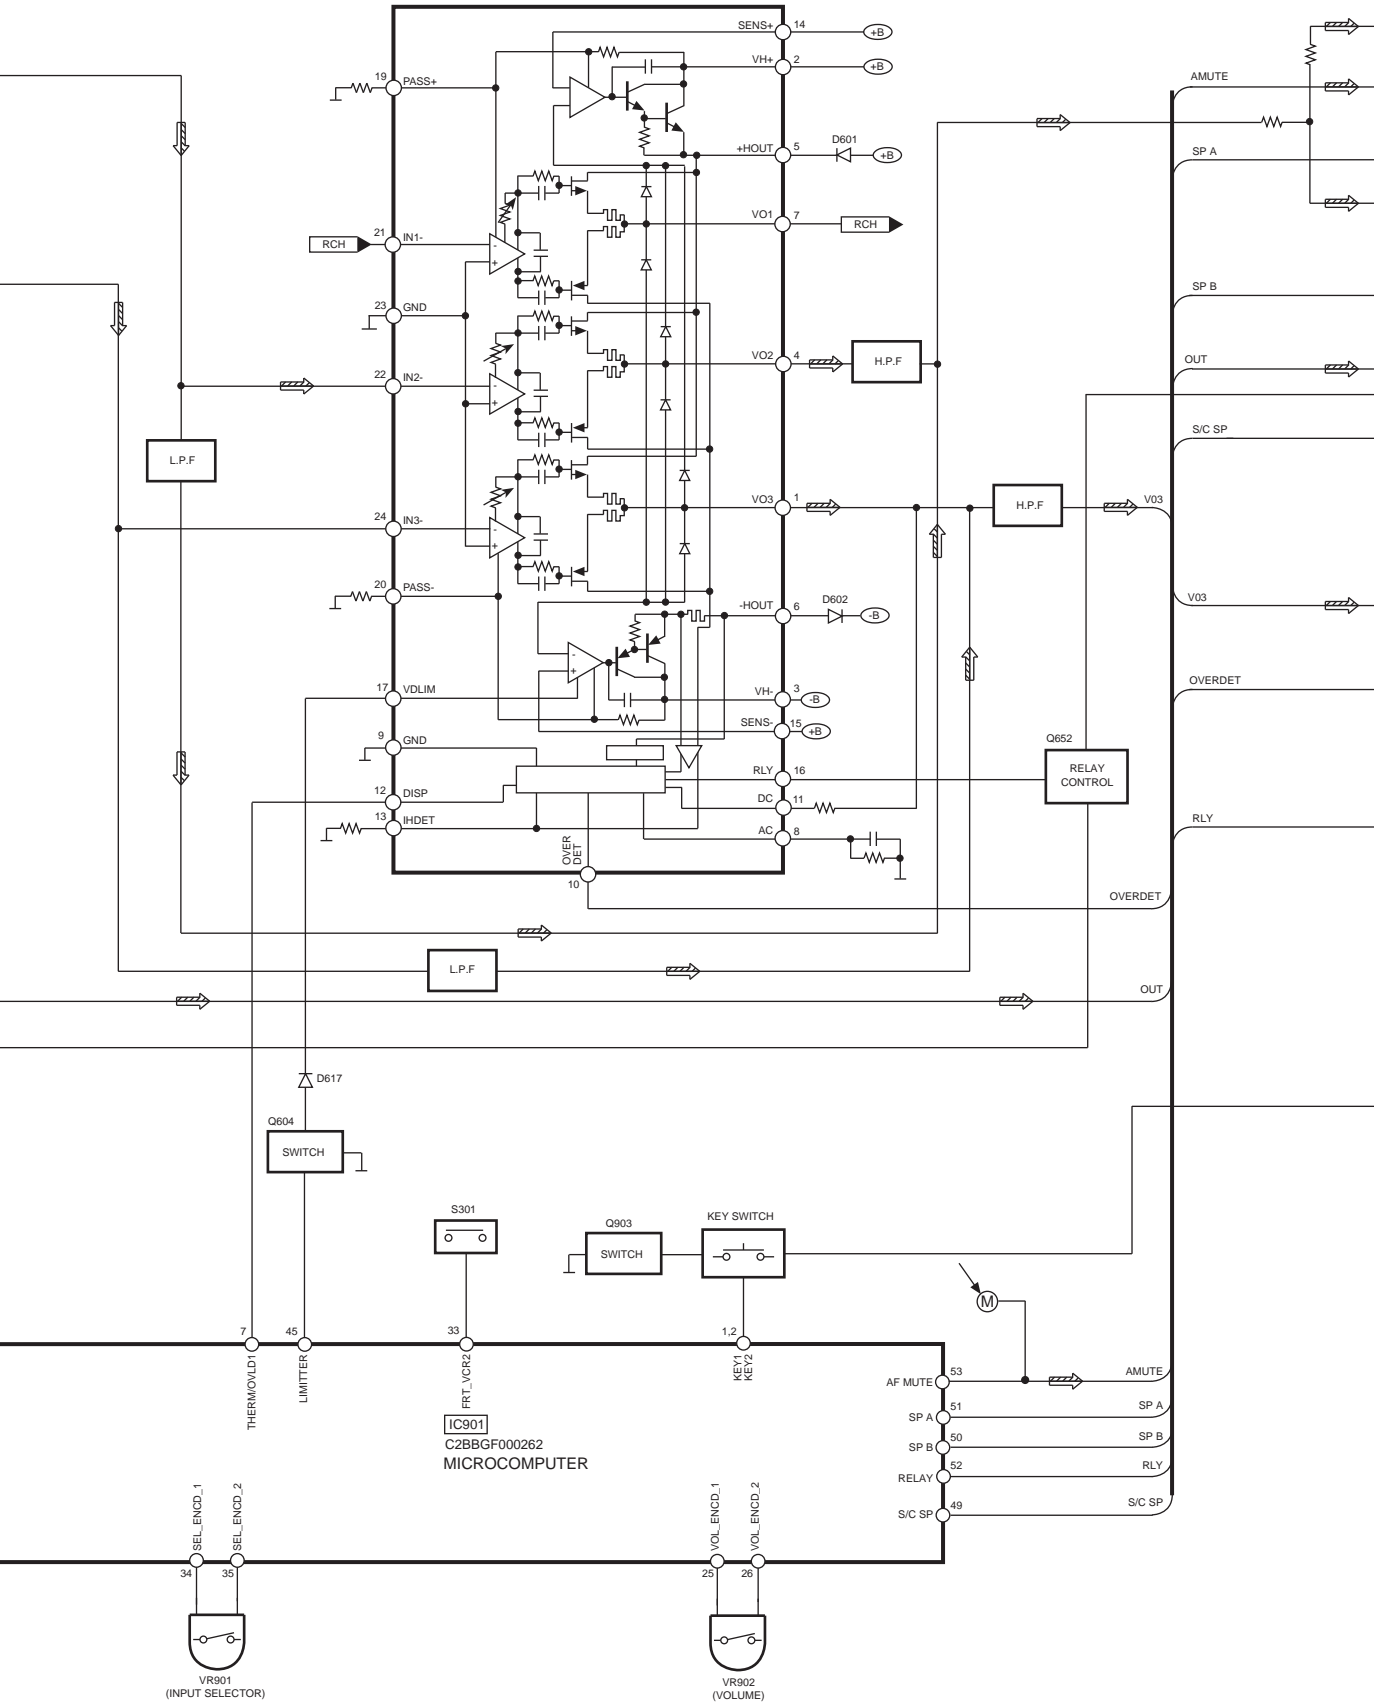

L.P.F

H.P.F

L.P.F

Q652
RELAY CONTROL

Q604
SWITCH

S301

Q903
SWITCH



KEY SWITCH

IC901
C2BBGF000262
MICROCOMPUTER


VR901
(INPUT SELECTOR)

VR902
(VOLUME)


- 53 AF MUTE
- 51 SP A
- 50 SP B
- 52 RELAY
- 49 S/C SP
- AMUTE
- SP A
- SP B
- RLY
- S/C SP

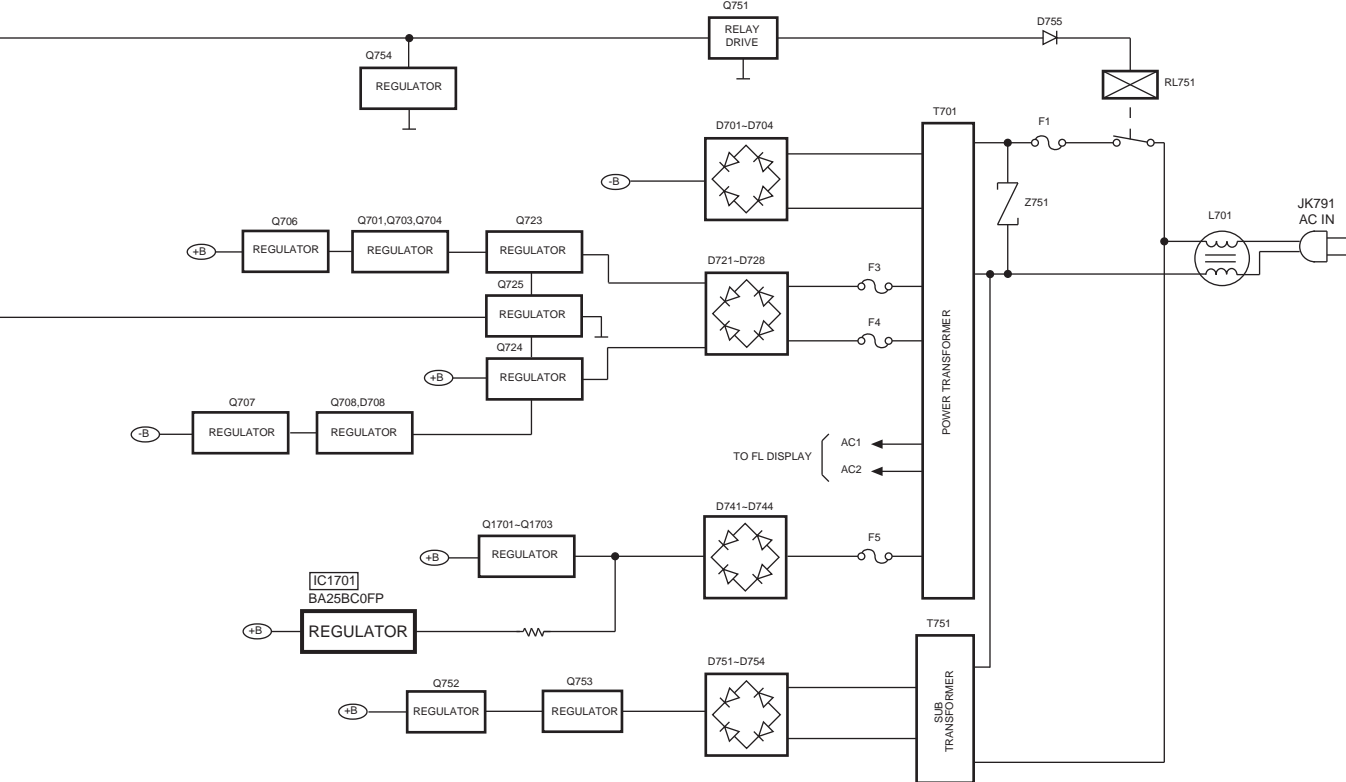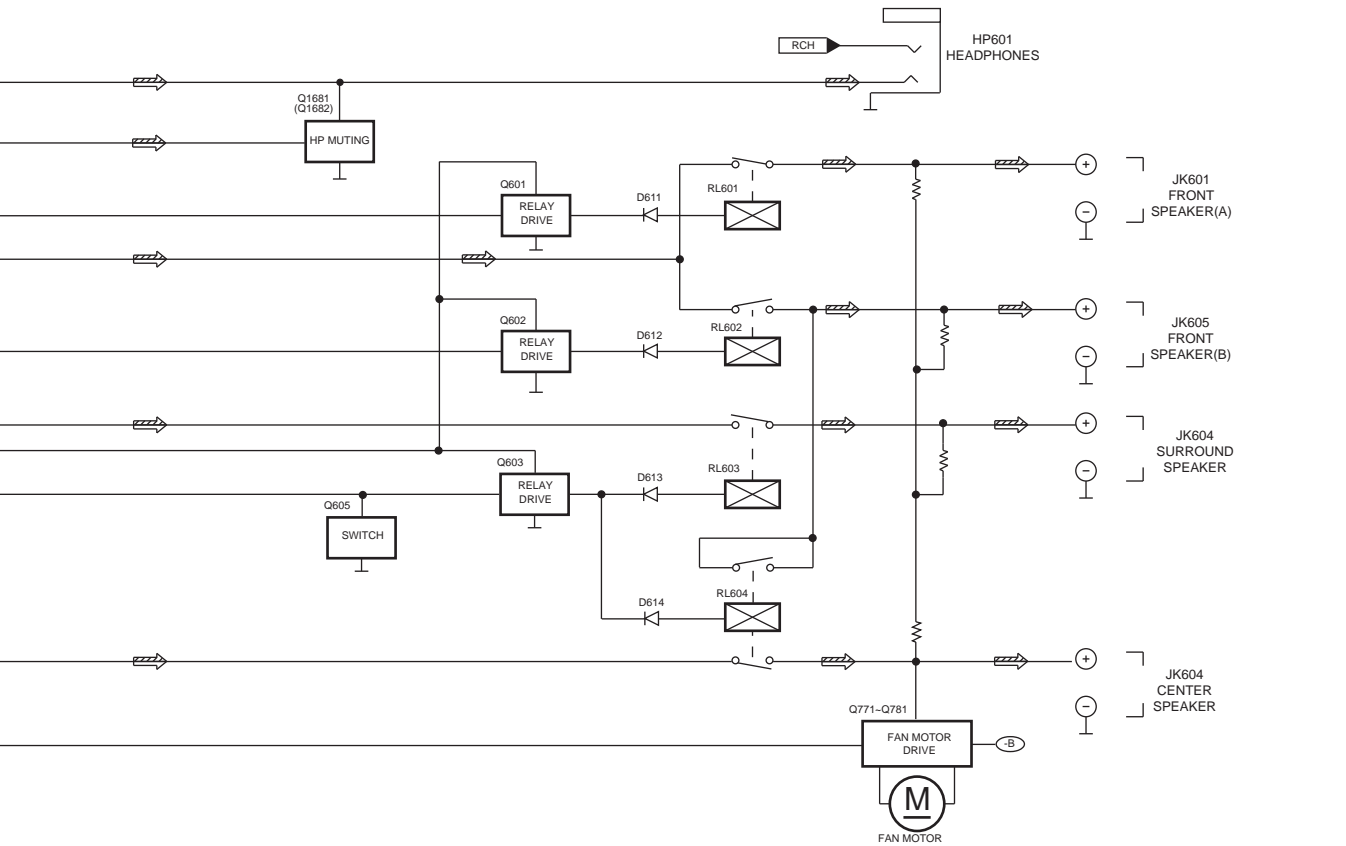


SIGNAL LINES

 


C2BBGF000262 (80p)
CS49326-CLR (40p)
CS4226-KQG (44p)

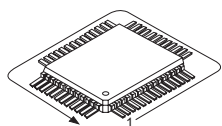


RSN313H25-P

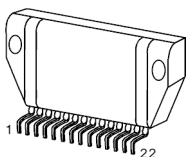


NJM2279MTE1 (14p)

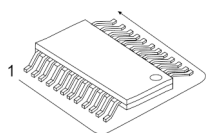


BA25BC0FP

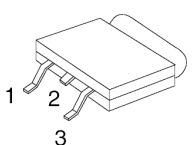


AN6558F
NJM2115MTE1
NJM4580DD
NJM4580MTE1

 


SNAHC1U04DBV

 


NJM2060MTE1

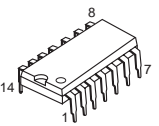


TC9163AN

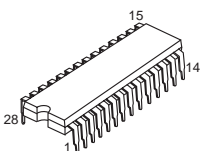


RSN310R36A -P

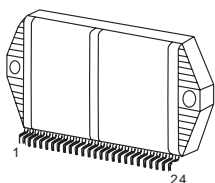


TC9162AF (28p)
TC9482F (28p)

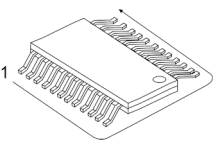


SN74LV244APW (20p)
SN74HCT244PW (20p)
SN74HCU04APW (14p)

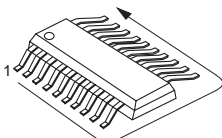


LC72720N (24p)

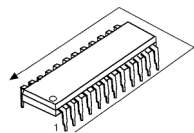


2SA1534AQRTA
2SC3940AQSTA

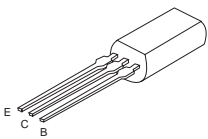


2SD1915FTA

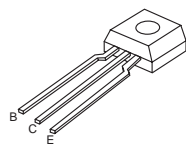


2SK2880CTA

 


2SB1548PQAU
2SD2374PQAU

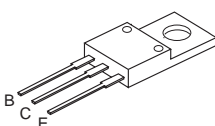


2SB621AQSTA
2SD592AQSTA

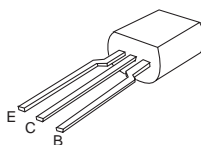


DTA114YETL

 


2SD2137PQTA

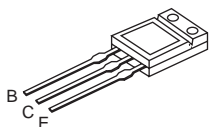


2SA933SQRSTA
2SC1740SSTA
2SC1740SQSTA
RVTDTA114EST
RVTDTA114YST
RVTDTA143XST
RVTDTA143ZST
RVTDTA114EST
RVTDTA113ZST

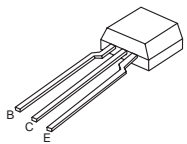


1SS355TE17
UDZSTE176R2B
UDZSTE175R6B

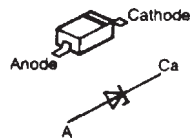

1N5402BM21
RK306LFU1

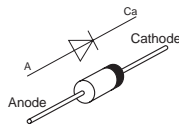


SLR325MCT31
SLR325YCT31
SLR325VCT31

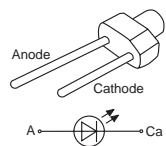


MTZJ16CTA
MTZJ33DTA
MTZJ3R9ATA
MTZJ5R6BTA
MTZJ6R2BTA
MTZJ6R8BTA
MTZJ7R5CTA
MTZJ3R3ATA

MTZJ8R2CTA
1SS291TA
RVD1SS133TA
1SR35400V
RB721Q40T77

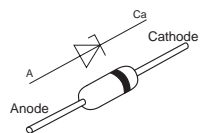


MA167ATA

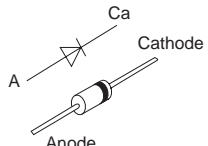


A B C D E F G

A DIGITAL P.C.B. (REP3107D-T) (SIDE A)

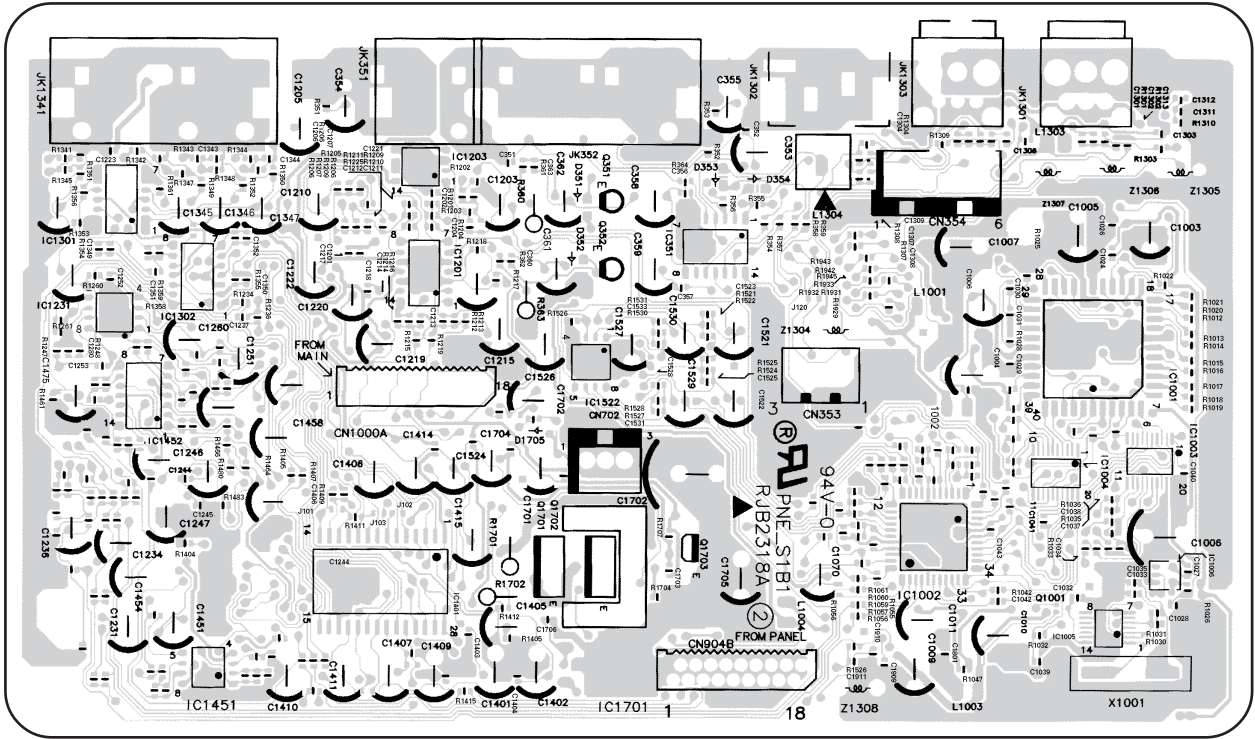


A DIGITAL P.C.B. (REP3107D-T) (SIDE B)

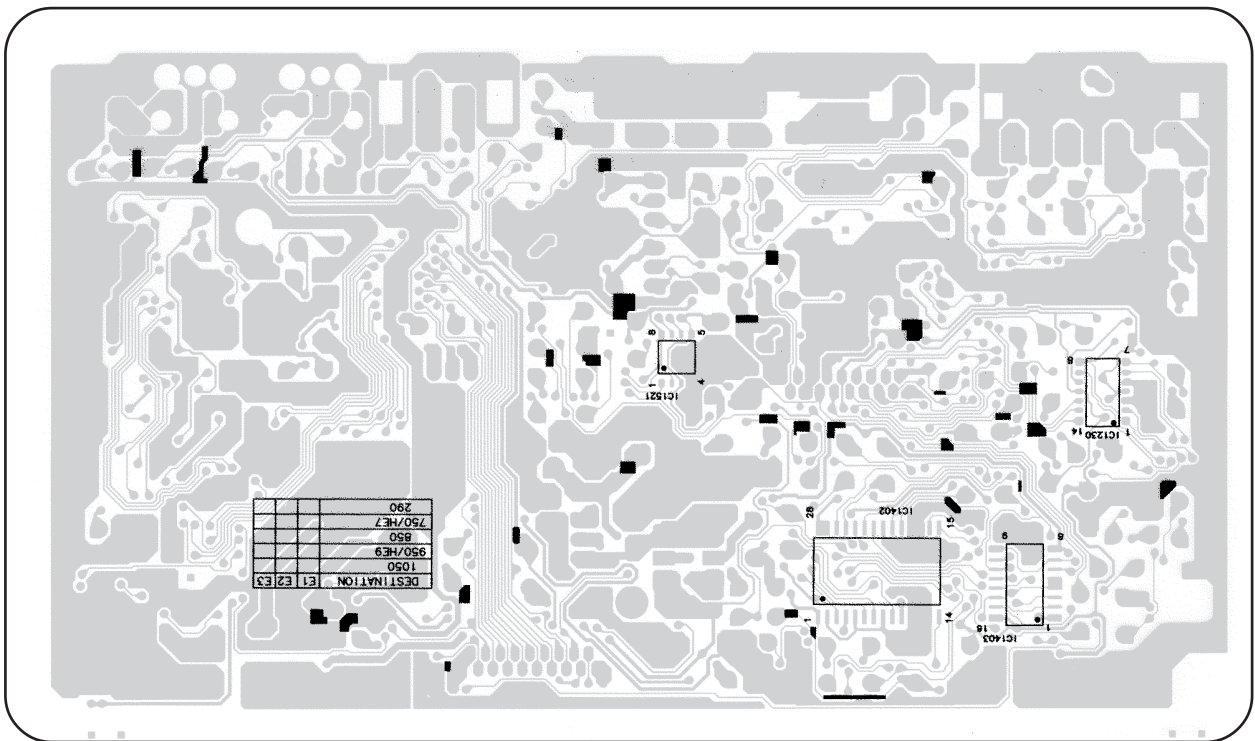

290			
750/HE7			
850			
950/HE9			
1050			
DESTINATION	E1	E2	E3

A B C D E F G

C MAIN P.C.B. (REP3109C-M...E/EG) (REP3109D-M...EB)

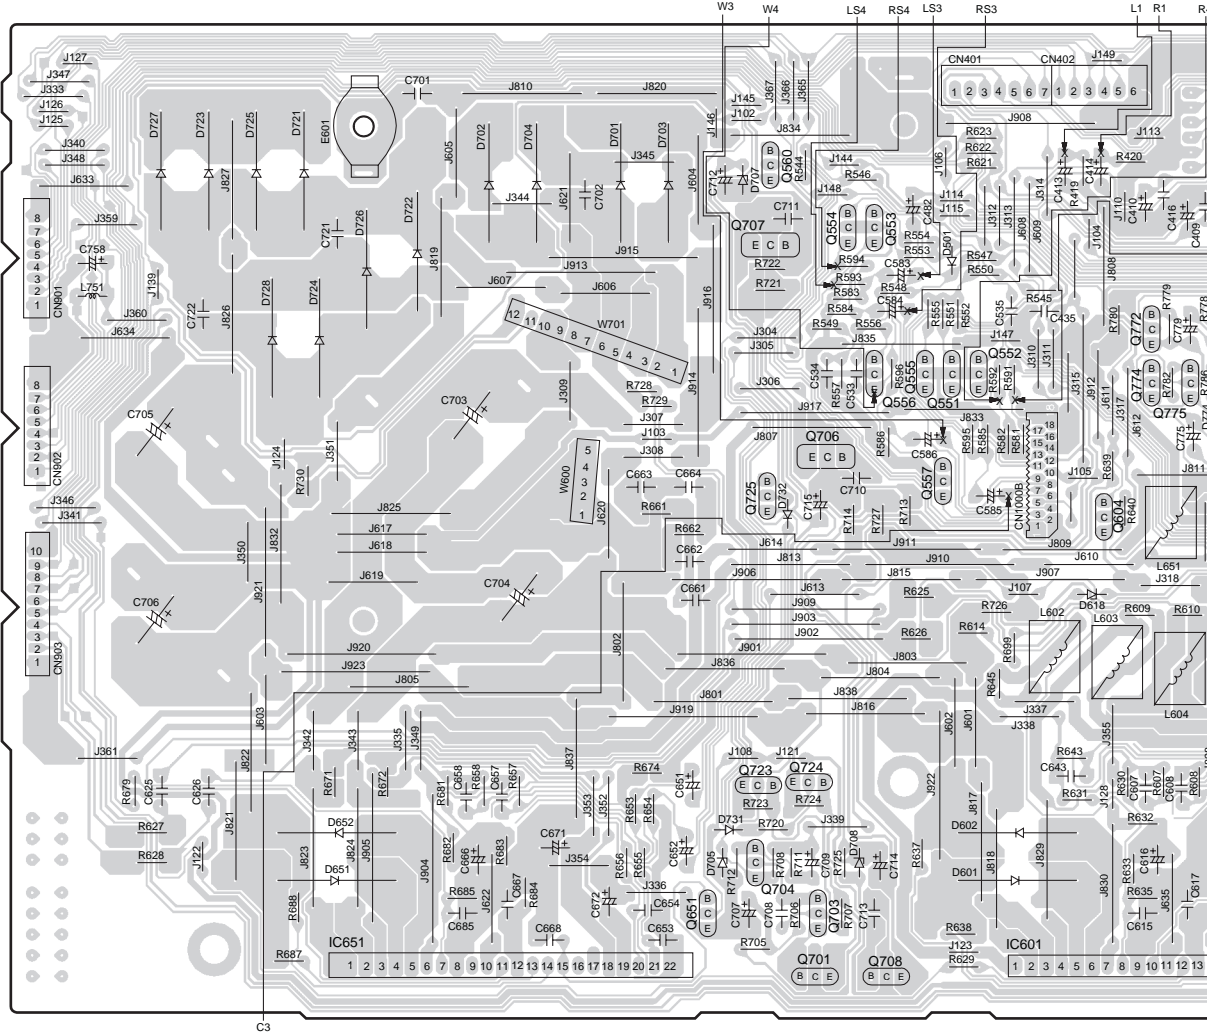

1
2
3
4
5
6
7
8
9

G

H


I

J

K

L

M

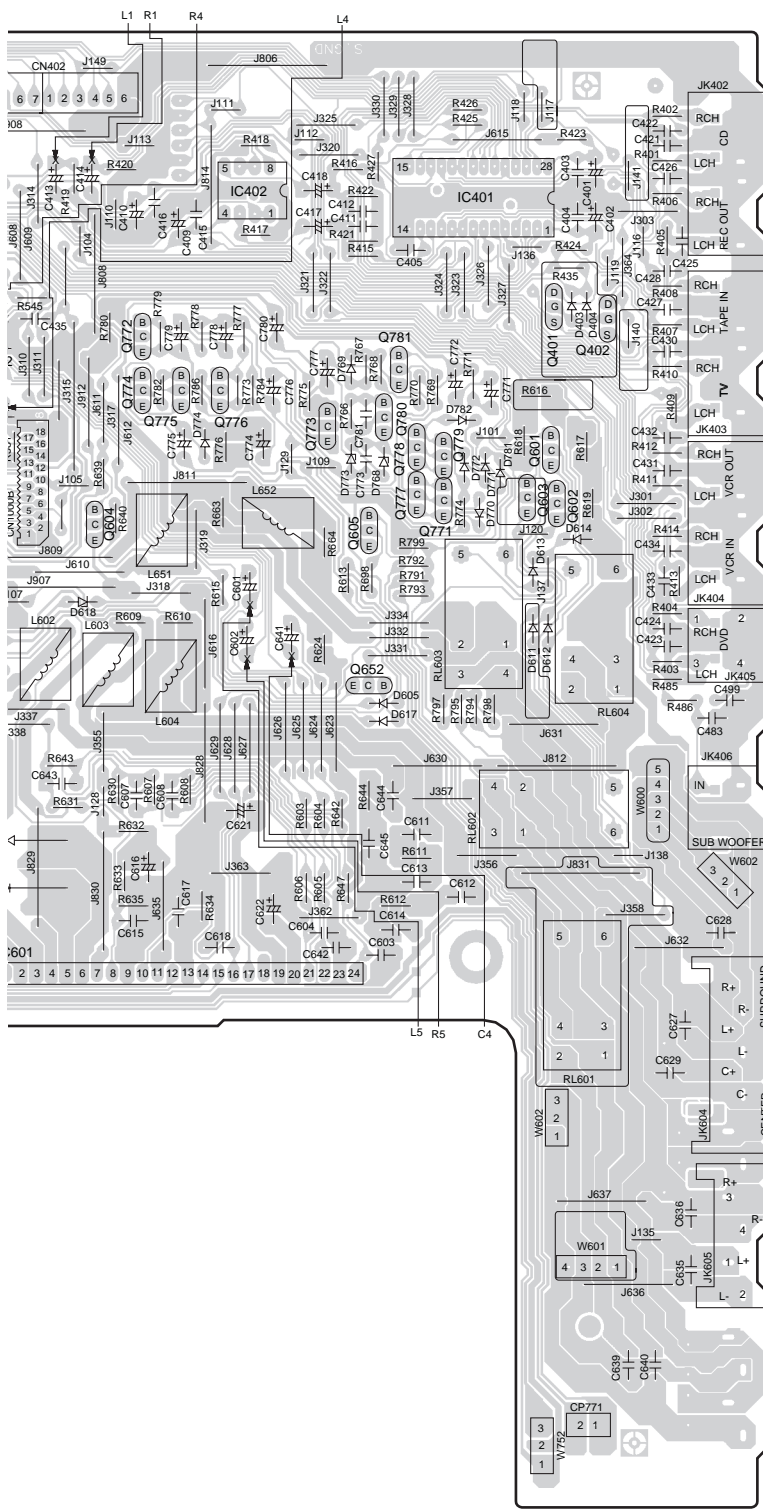

CD

TAPE

TV

VCR

DVD

SUB WOOFER


SURROUND
SPEAKERS

CENTER
SPEAKERS

FRONT
SPEAKERS


A B C D E F G

B PANEL P.C.B. (REP3104E-S)

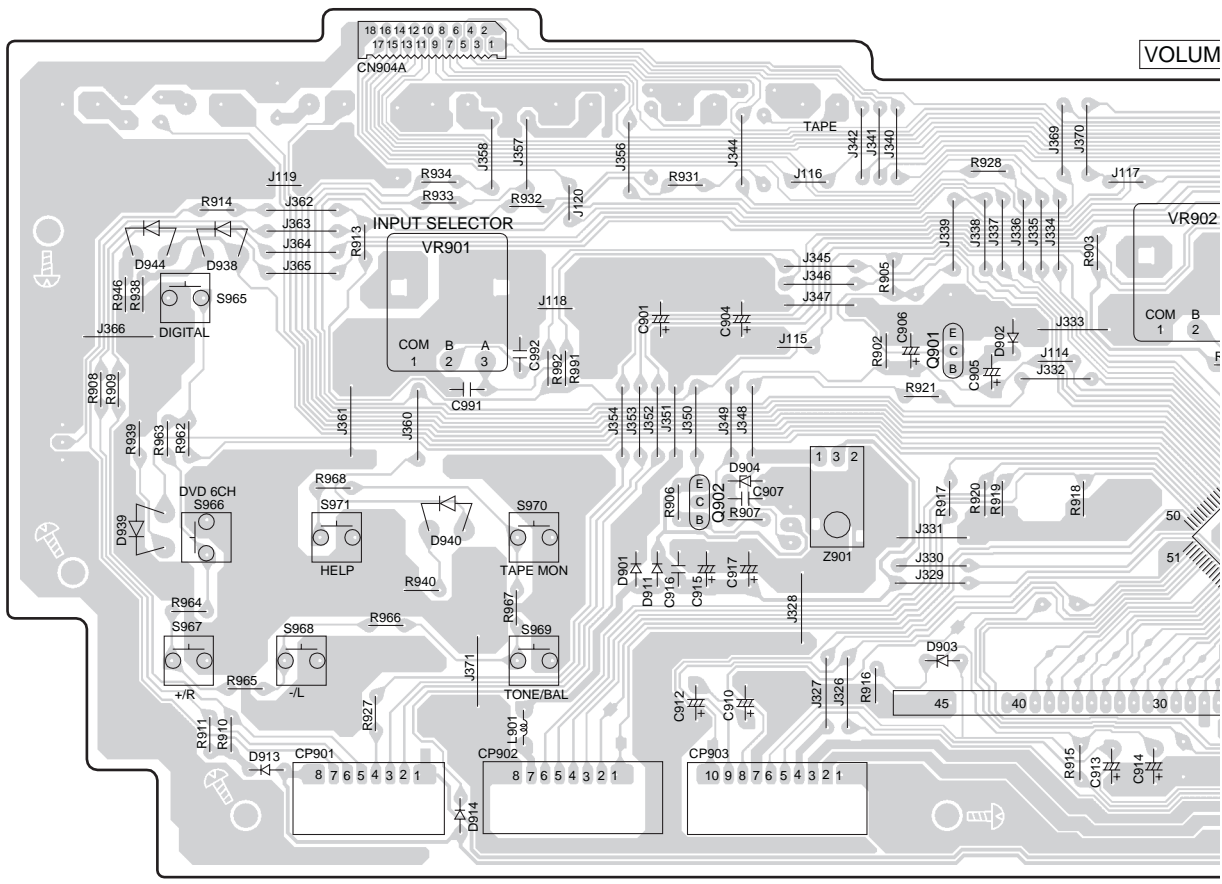


1
2
3
4
5
6
7
8
9

G H I J K L M

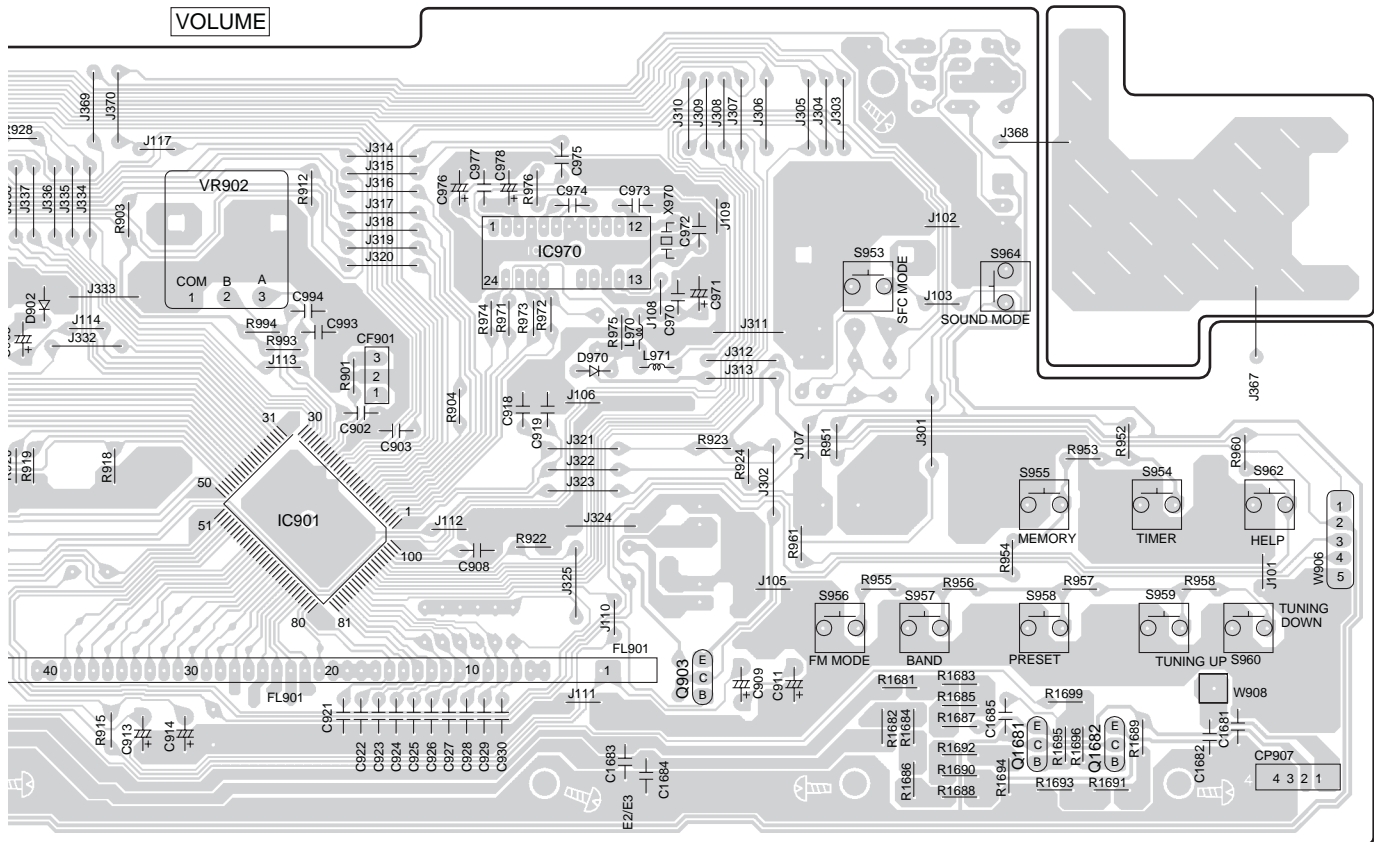

E PHONO EQ P.C.B.
(REP3109C-M...E/EG)
(REP3109D-M...EB)

L TUNER PACK P.C.B.
(RAN0002EM)

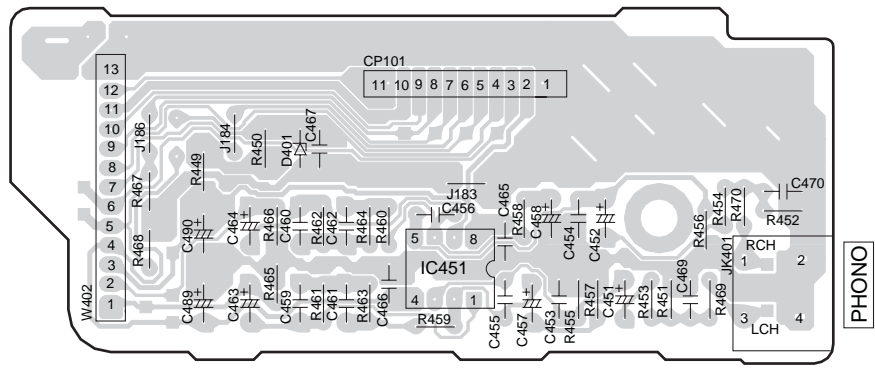

A

B

C

D


E

F

G

1

H SWITCH P.C.B. (REP3104E-S)

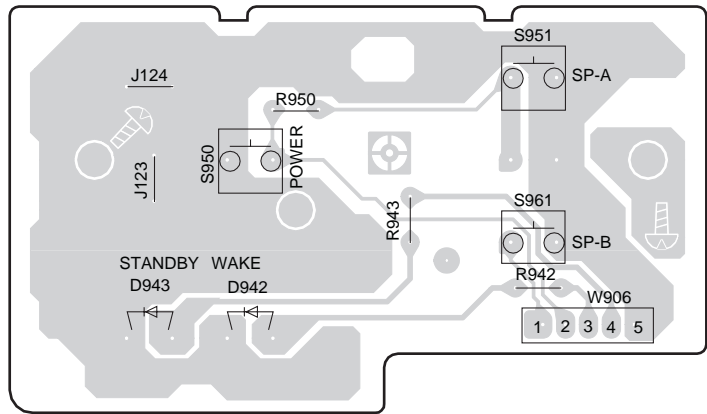

2



3

4

5

J HEADPHONE P.C.B. (REP3104E-S)

K FRONT SPEAKER A P.C.B. (REP3104E-S)

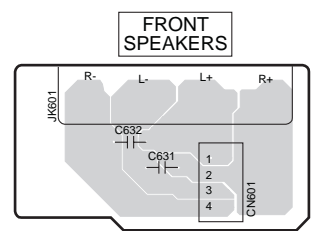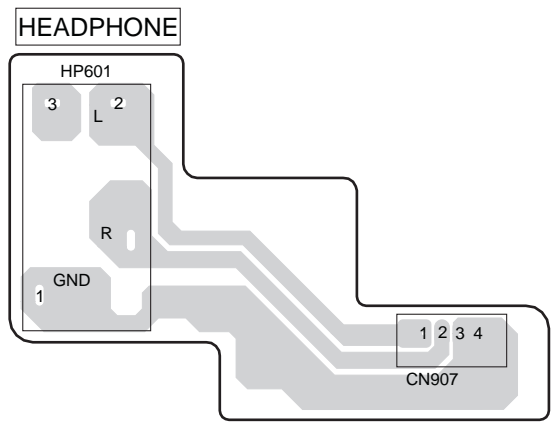

6

7


8

9

A B C D E F G

1
2
3
4
5
6
7
8
9

M SUB-TRANSFORMER P.C.B. (REP3109C-M...E/EG)
(REP3109D-M...EB)

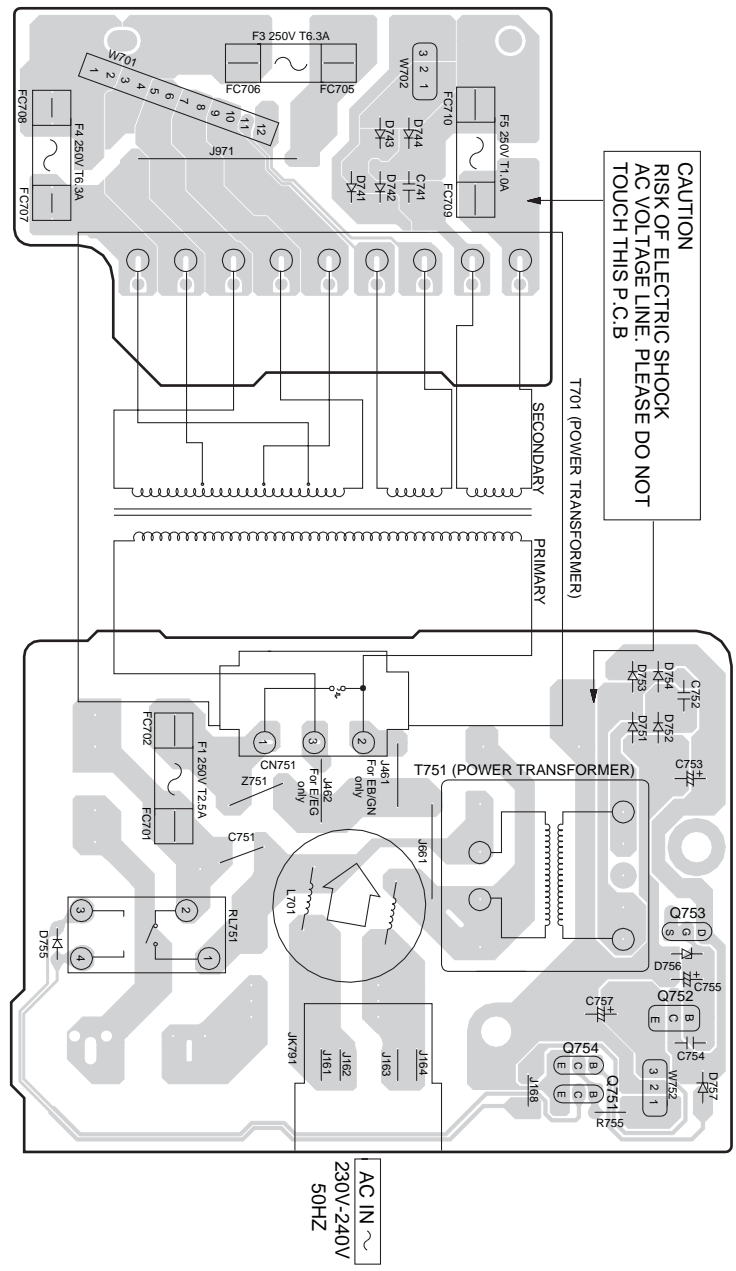

CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE. PLEASE DO NOT
TOUCH THIS P.C.B.

AC IN ~
230V-240V
50HZ

F TRANSFORMER P.C.B. (REP3109C-M...E/EG)
(REP3109D-M...EB)