

# TELEFUNKEN SERVICE MANUAL

---

---



**TKP2147STX**


---

|                                     |           |
|-------------------------------------|-----------|
| <b>1. Caution.....</b>              | <b>2</b>  |
| <b>2. Specification.....</b>        | <b>6</b>  |
| <b>3. BOM List .....</b>            | <b>9</b>  |
| <b>4. Alignment Procedure.....</b>  | <b>32</b> |
| <b>5. Block Diagram.....</b>        | <b>41</b> |
| <b>6. Schematic Diagram.....</b>    | <b>42</b> |
| <b>7. PCB Layout.....</b>           | <b>43</b> |
| <b>8. Explode View Diagram.....</b> | <b>45</b> |

---

---

This manual is the latest at the time of printing, and does not include the modification which may be made after the printing, by the constant improvement of product.

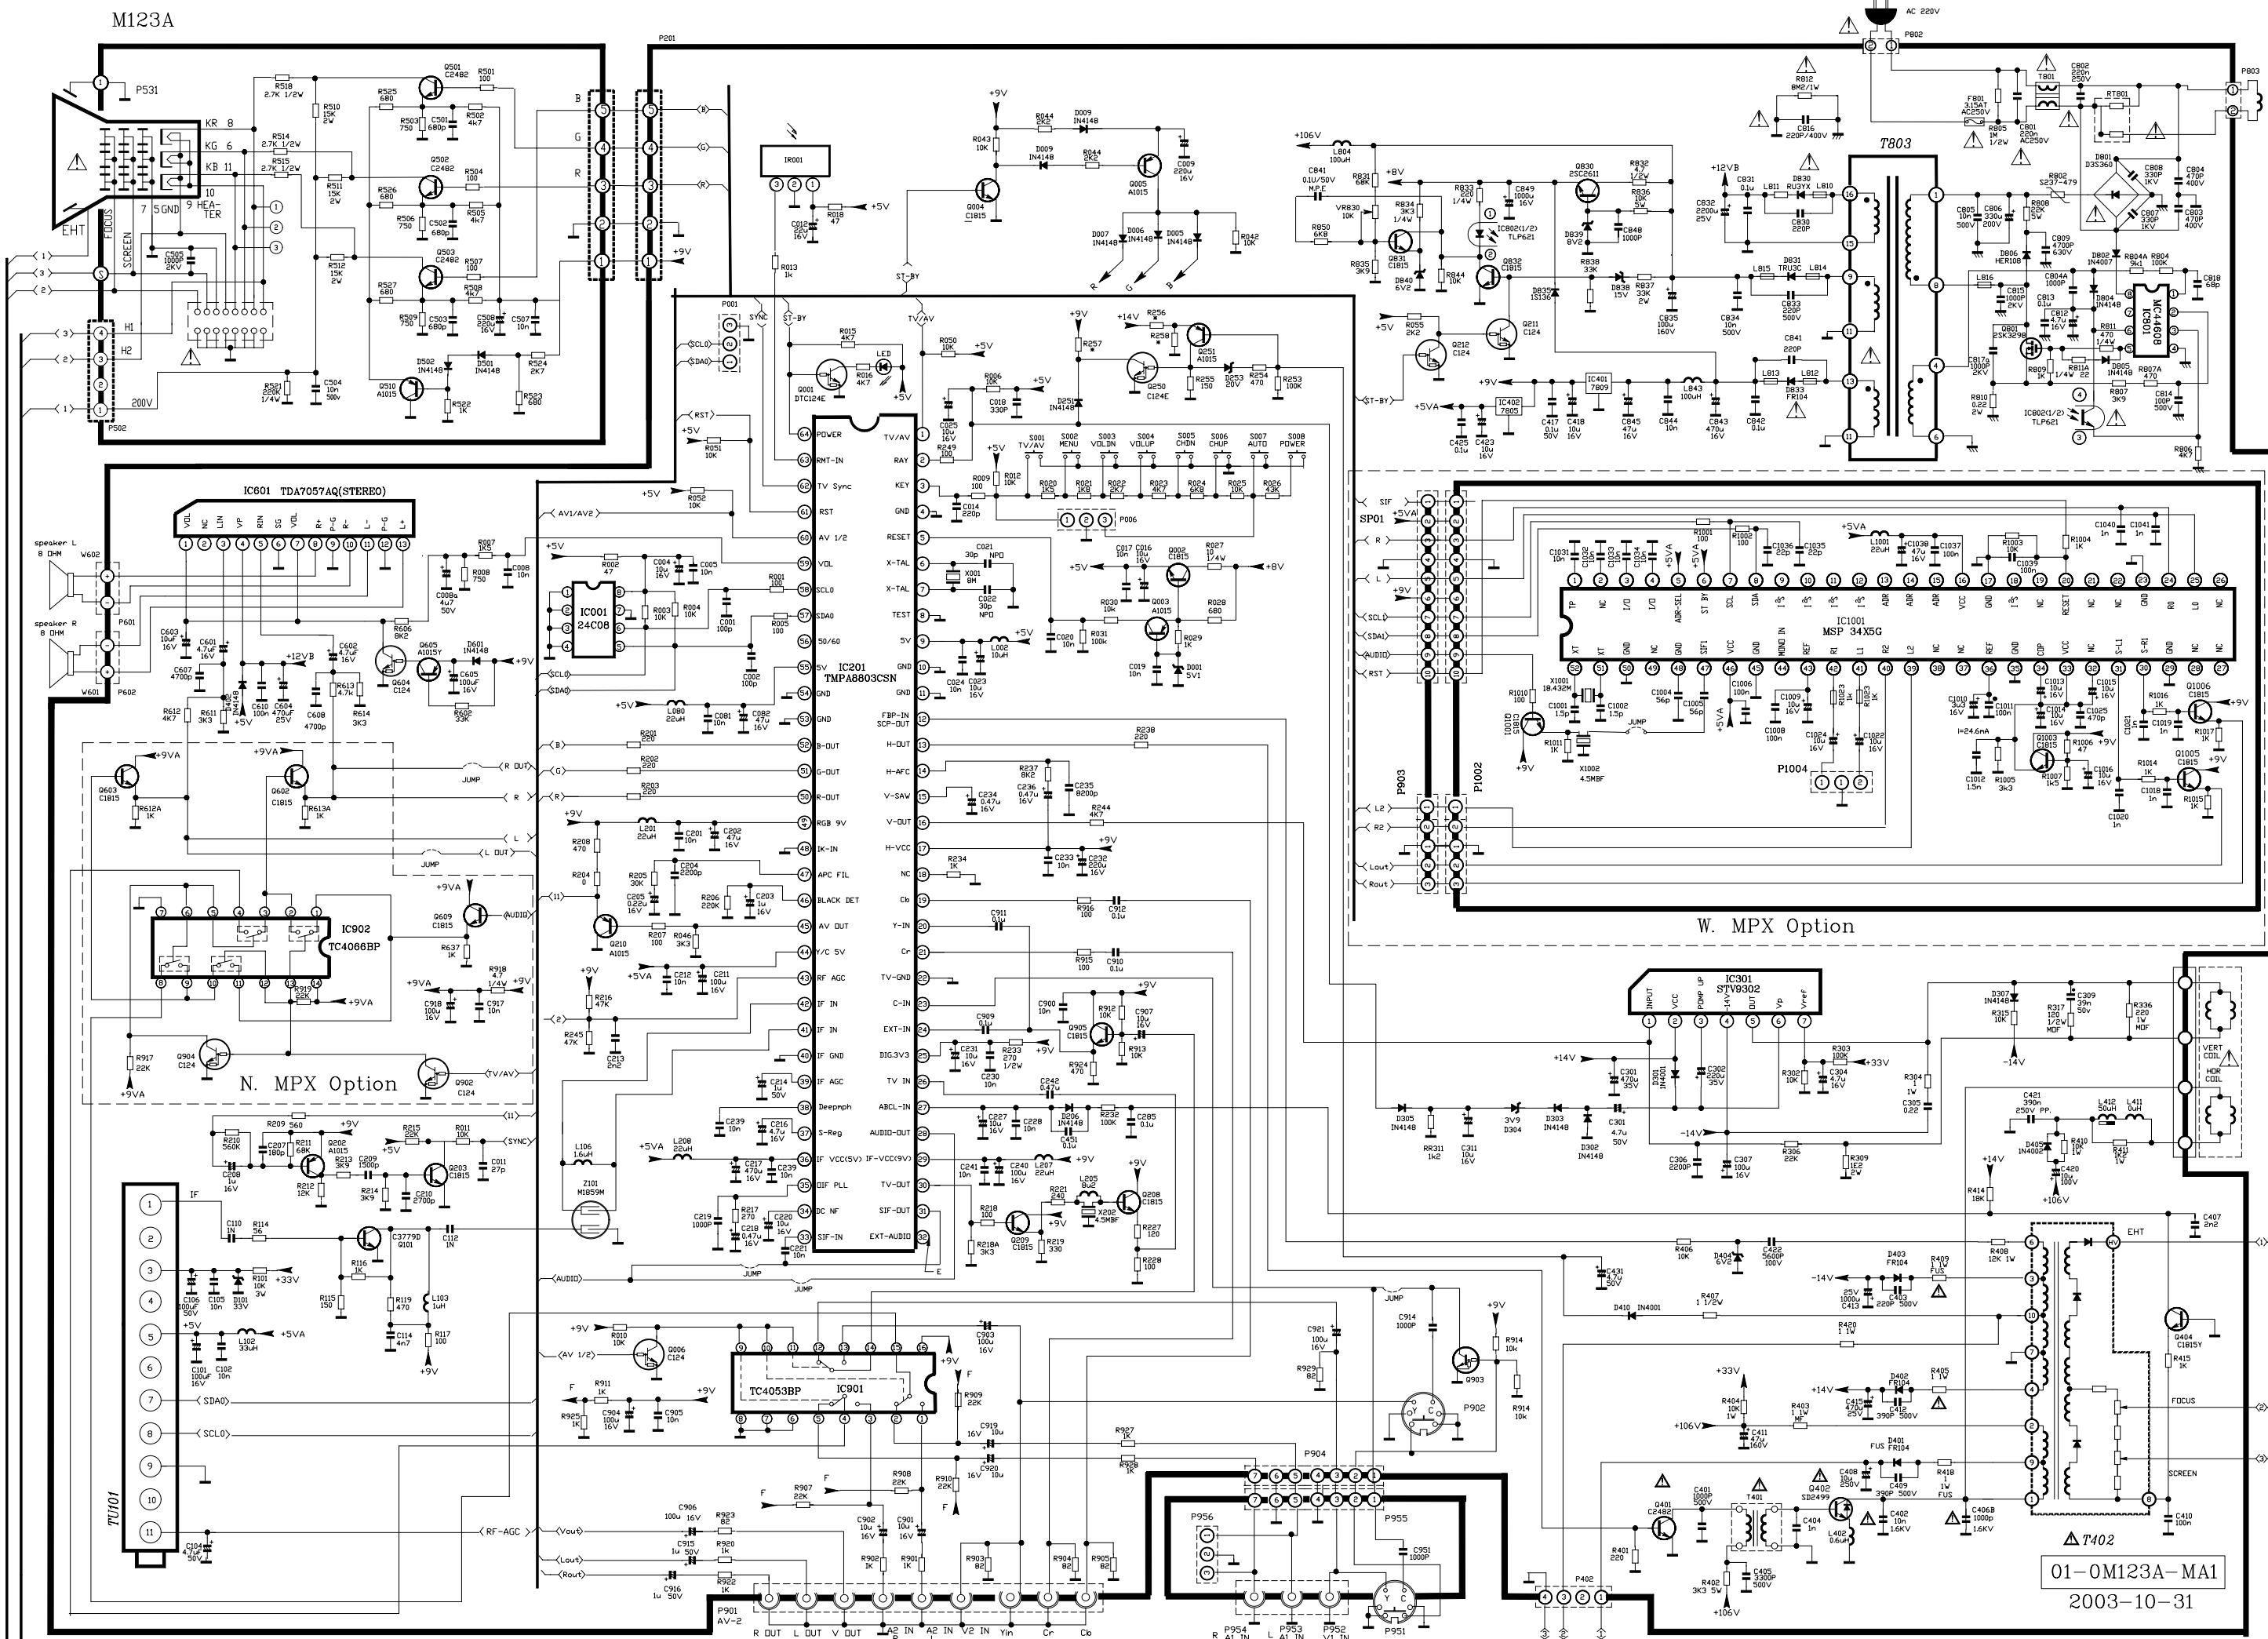

01-0M123A-MA1  
2003-10-31