

# DVD PLAYER

# DVD-S557

 
## SERVICE MANUAL

This Service Manual describes only the items that differ from DVD-S550/DV-S5750's.

For the items not described in this Service Manual, refer to DVD-S550/DV-S5750 Service Manual of which ID is 100894.


### FRONT PANEL

▼ B, G models

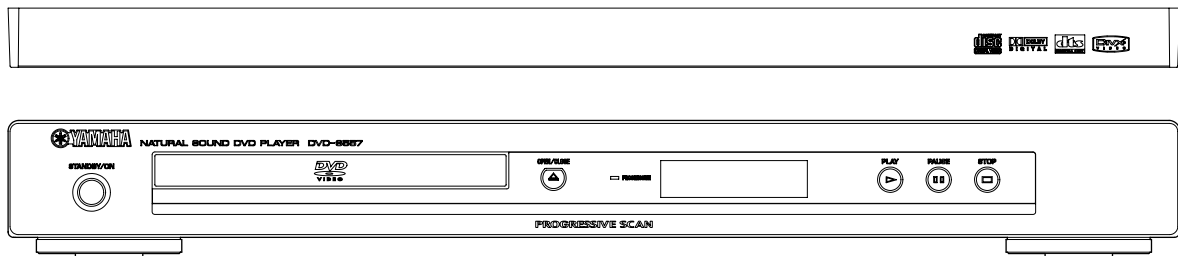

### REAR PANEL

 ▼ B, G models

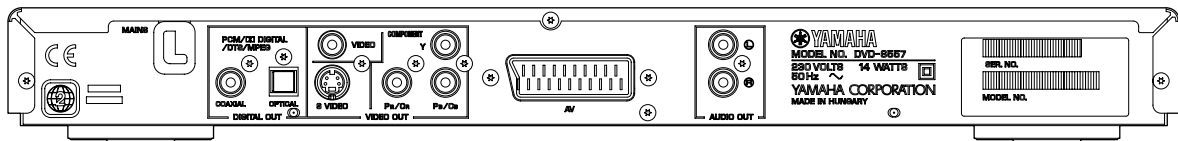


### SPECIFICATIONS

#### Finish

- Black Color ..... B, G models
- Titanium Color ..... G model
- Silver Color ..... B, G models

All the other items are common with DVD-S550/DV-S5750.
 
### DIMENSIONS

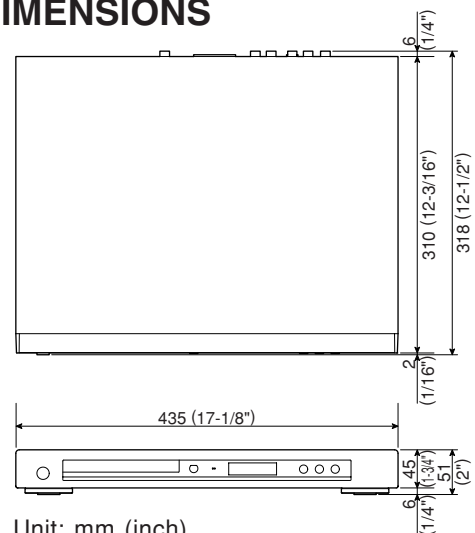

Unit: mm (inch)



このサービスマニュアルは、エコマーク認定の再生紙を使用しています。  
This Service Manual uses recycled paper.

© 2005 YAMAHA CORPORATION All rights reserved.

100949



YAMAHA CORPORATION  
P.O.Box 1, Hamamatsu, Japan

'05.04

DVD-S557


## ■ REPLACEMENT PARTS

 Ref. No.	Part No.	Description	Remarks	Markets	
*	101	AAX69510 FRONT PANEL ASS'Y	BL	3143 027 62111	
*	101	AAX69520 FRONT PANEL ASS'Y	TI	3143 027 62121	
*	101	AAX69530 FRONT PANEL ASS'Y	SI	3143 027 62131	
*	110	AAX69500 TRAY COVER ASS'Y		3143 027 60961	
	161	AAX67060 FRAME ASS'Y		3143 027 60891	
	190	AAX53540 BUSH	450H259010	3139 114 26671	
*	230	AAX69540 REAR PANEL		3139 241 22741	
	240	AAX58270 TOP COVER	BL	3139 247 59051	
	240	AAX58290 TOP COVER	TI, SI	3139 241 22191	
	250	AAX55450 PW HEAD TORX S-TIGHT SCREW	BL 3x6 MFZN2BL	3139 110 40611	
	250	AAX53440 PW HEAD TORX S-TIGHT SCREW	TI, SI 3x6 MFN133	3104 120 40081	
	255	AAX55930 PAN HEAD TORX S-TIGHT SCREW	3x4 MFZN2BL	3141 010 40591	
	256	AAX23640 PAN HEAD TORX S-TIGHT SCREW	3x6 MFZN2BL	2511 077 00039	
	260	AAX53520 PAN HEAD TORX P-TIGHT SCREW	3x8 MFZN2BL	2511 076 50012	
⚠	336	AAX58470 POWER CABLE	1.8m	3103 140 25882	B
⚠	336	AAX53630 POWER CABLE	1.8m	2422 070 98231	G
	1100	AAX58190 P. C. B. ASS'Y	FRONT	3139 248 83061	
	1200	AAX58170 P. C. B. ASS'Y	A/V	3139 248 83161	
*	1300	AAX70190 DVD MODULE	MODULE SD6.1 PL 2CH	3139 247 11431	
⚠	1600	AAX58480 POWER SUPPLY UNIT	HE 2004 MIT	3139 248 72062	
	1902	AAX58250 FLEXIBLE FLAT CABLE	30P 120mm P=1mm	3139 241 00541	
	1903	AAX58220 FLEXIBLE FLAT CABLE	16P 220mm P=1mm	3139 111 02421	
	1904	AAX58230 FLEXIBLE FLAT CABLE	9P 140mm P=1mm	3139 241 00521	
	1905	AAX58240 FLEXIBLE FLAT CABLE	4P 400mm P=1mm	3139 241 00531	
		ACCESSORIES			
	2000	AAX58450 REMOTE CONTROL		3139 248 71873	
	2003	AAX21980 AUDIO PIN CABLE	RD/WH 1.5m 1pc	3103 308 92611	
	2004	AAX22970 VIDEO PIN CABLE	YE 1.5m 1pc	3104 108 45432	
		BATTERY	UM-3 (2pcs)		

\* New Parts

1 ■ EXPLODED VIEW


When disassembling, use the special screw driver with such tip shape as shown in figure.

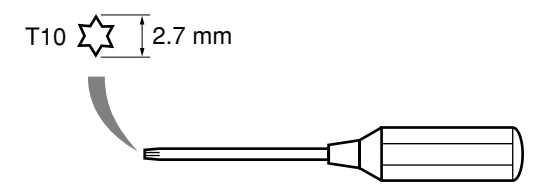


- 250 3 x 6 S-Tight with the brim
- 255 3 x 4 S-Tight Black
- 256 3 x 6 S-Tight Black
- 260 3 x 8 P-Tight Black

■ DVD Module

 - The DVD Mechanism and Mono Board together as a set are called the DVD Module.
- If a failure has occurred with any part of the DVD Module, be sure to replace the DVD Module as a whole.
- Neither the DVD Mechanism nor Mono Board can be replaced independently.

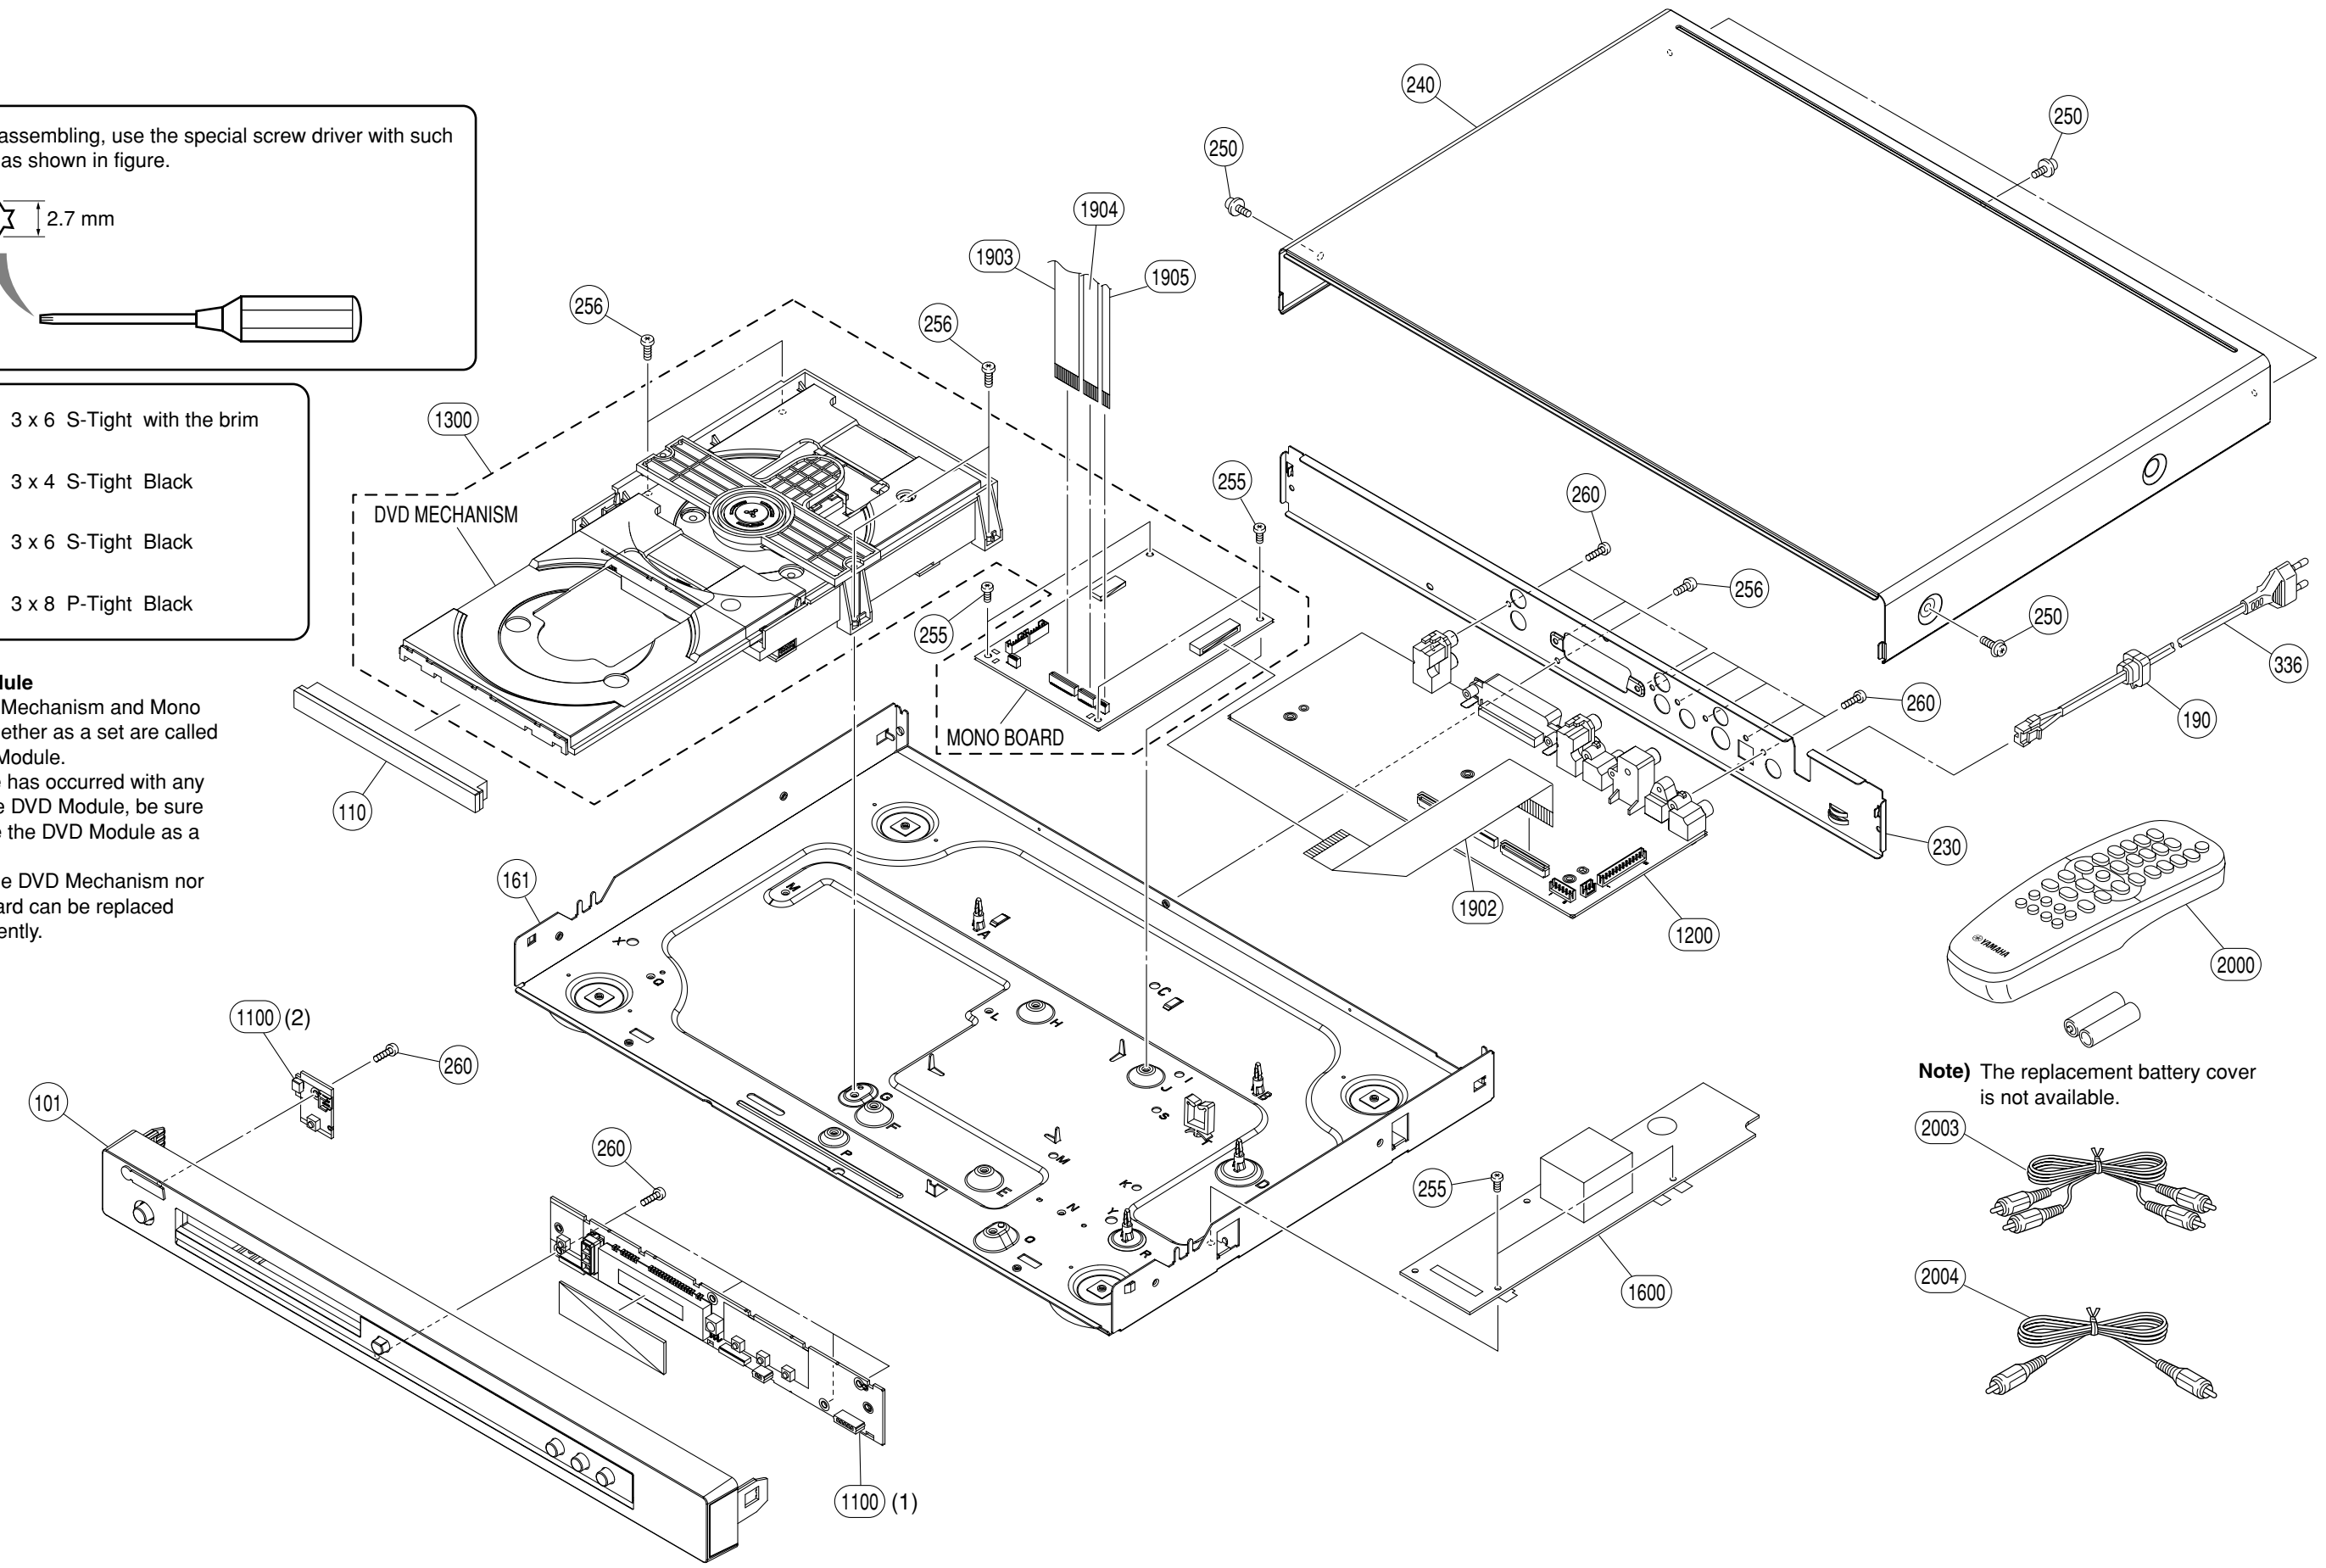

 **Note)** The replacement battery cover is not available.

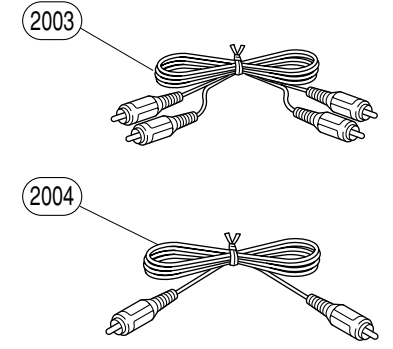

# DVD-S557

---

