

SERVICE MANUAL

PARTS LIST 
PRIDE IN QUALITY

AKAI SURROUND STEREO TAPE DECK
MODEL **202D-SS**



**SURROUND STEREO TAPE DECK
MODEL 202D-SS**

SECTION 1	SERVICE MANUAL	2
SECTION 2	PARTS LIST	33
SECTION 3	SCHEMATIC DIAGRAM	60

SECTION 1

SERVICE MANUAL

TABLE OF CONTENTS

I.	SPECIFICATIONS	3
II.	MEASURING METHOD	4
1.	TAPE SPEED DEVIATION	4
2.	WOW AND FLUTTER	4
3.	FREQUENCY RESPONSE	4
4.	SIGNAL TO NOISE RATIO	4
5.	TOTAL HARMONIC DISTORTION FACTOR	5
6.	CROSS TALK	5
7.	ERASE RATIO	5
III.	DISMANTLING OF UNIT	6
IV.	SYSTEM CONTROL CIRCUIT OPERATION	8
1.	STOP MODE	15
2.	FORWARD PLAYBACK MODE	15
3.	FROM FWD TO REV PLAYBACK, AND REV PLAYBACK MODE	15
4.	FROM REVERSE TO FORWARD PLAYBACK	15
5.	RECORDING MODE	15
6.	FAST FORWARD AND REWIND MODE	17
7.	MUTING CIRCUIT OPERATION	17
V.	MECHANISM ADJUSTMENTS	18
1.	REEL TABLE HEIGHT ADJUSTMENT	19
2.	PINCH WHEEL PRESSURE MEASURING METHOD	19
3.	BRAKE TENSION ADJUSTMENT	19
4.	LEFT AND RIGHT REEL MOTOR TENSION AT VARIOUS OPERATING MODES	20
5.	FLYWHEEL LOOSE PLAY ADJUSTMENT	20
6.	FLYWHEEL BELT POSITION ADJUSTMENT	20
VI.	HEAD ADJUSTMENTS	21
1.	HEAD HEIGHT ADJUSTMENT	21
2.	RECORDING/PLAYBACK HEAD SLANT ADJUSTMENT	21
3.	RECORDING/PLAYBACK HEAD AZIMUTH ALIGNMENT ADJUSTMENT	21
VII.	AMPLIFIER ADJUSTMENTS	23
1.	PLAYBACK LEVEL ADJUSTMENT	23
2.	RECORDING LEVEL ADJUSTMENT	24
3.	BIAS LEAK ADJUSTMENT	24
4.	FREQUENCY RESPONSE ADJUSTMENT	24
5.	RECORDING BIAS FREQUENCY MEASURING METHOD	24
6.	4-CHANNEL PHASE CHECK	24
VIII.	D.C. RESISTANCE OF VARIOUS COILS	25
IX.	COMPOSITE VIEWS OF COMPONENTS	26

I. SPECIFICATIONS

An asterisk next to a figure indicates the minimum guaranteed performance.

TRACK SYSTEM	4-track 4-channel stereo system 4-track 2-channel stereo system		
TAPE SPEED	7-1/2 ips (19 cm/sec.) \pm 0.8% 3-3/4 ips (9.5 cm/sec.) \pm 1%		
WOW AND FLUTTER	Less than 0.08%(*0.12%) RMS at 7-1/2 ips Less than 0.12%(*0.25%) RMS at 3-3/4 ips		
TOTAL WOW AND FLUTTER	Less than 0.18% RMS at 7-1/2 ips (SCOTCH #175 TAPE, 3,000 Hz recording and playback)		
FREQUENCY RESPONSE	S.R.T. TAPE	40 to 25,000 Hz \pm 3 dB at 7-1/2 ips 40 to 15,000 Hz \pm 3 dB at 3-3/4 ips 40 to 22,000 Hz \pm 3 dB at 7-1/2 ips 40 to 13,000 Hz \pm 3 dB at 3-3/4 ips	
REGULAR TAPE			
TOTAL DISTORTION FACTOR		Less than 1.5% *Less than 3% at 1,000 Hz O VU recording	
OUTPUTS	LINE OUTPUT	1.228V(4 \pm 1 dB) at FWD mode, 4 \pm 1.5 dB at REV mode, using a 250 Hz O VU pre-recorded tape/7-1/2 ips 610 mV(-2 dB), using a 250 Hz pre-recorded tape	
INPUTS	MIC INPUT	More than 0.5 mV(*0.6 mV)	
	LINE INPUT	More than 100 mV	
	DIN INPUT	More than 5 mV(low) More than 100 mV(high)	
RECORDING PLAYBACK LEVEL		1.228V(4 \pm 2 dB) at 7-1/2 ips, 1,000 Hz O VU recording	
S/N RATIO		Better than 50 dB *Better than 47 dB at 7-1/2 ips *Better than 46 dB at 3-3/4 ips	
TOTAL S/N RATIO		Better than 45 dB at 7-1/2 ips	
CROSS TALK		Better than 43 dB(*40 dB) at 1,000 Hz 3 VU recording	
ERASE RATIO		Better than 70 dB	
RECORDING BIAS FREQUENCY		82 \pm 5 kHz	
BIAS LEAK		Less than -30 VU (4 channel) Less than -20 VU (2 channel)	
REVERSING TIME		2 to 3 seconds	
RECORDING CAPACITY		45 min. 4 channel stereo recording, using a 1,800 ft. tape at 7-1/2 ips	
F. FWD AND RWD TIME		110/90 sec., using a 1,800 ft. tape at 50/60 Hz	
MOTORS	CAPSTAN MOTOR	2 speed Hysteresis Synchronous Motor Type: HM2-16MC (winterized) 4-8 pole Revolutions: 1,500/1,800 r.p.m. at 50/60 Hz 750/900 r.p.m. at 50/60 Hz	
	REEL MOTORS	Two 6-pole eddy current outer rotor motors Type: 24XO-MR Revolutions: 930/1,120 r.p.m. at 50/60 Hz	
HEADS	FULL TRACK ERASE HEAD	Type: EF-210 Gap: 0.2 mm W Gap Impedance: 360 Ω \pm 10% at 100 kHz D.C. Resistance: 2.8 Ω	
	4 TRACK ERASE HEAD	Type: E4-260 Gap: 0.2 mm W Gap Impedance: 195 Ω \pm 10% at 100 kHz D.C. Resistance: 1.6 Ω	
	4 TRACK RECORDING/PLAYBACK HEAD	Type: P4-50 Gap: 2 microns Impedance: 1,200 Ω \pm 15% at 1 kHz D.C. Resistance: 160 Ω	
TRANSISTORS		2SC711(E)(F) . . . 19	2SC1098(L) . . . 1
DIODES		1N34A . . . 5	1S2473VE . . . 10
		10D2 . . . 1	10D4 . . . 1
ZENER DIODES		WZ240 . . . 1	YZ088A . . . 4
POWER SUPPLY		100 to 240V A.C. 50/60 Hz	
POWER CONSUMPTION		100W	
DIMENSIONS		391(W) x 442 (H) x 231 (D) mm (15.4" x 17.4" x 9.1")	
WEIGHT		18 kg (39.6 lbs.)	

NOTE: Specifications subject to change without notice.

II. MEASURING METHOD

1. TAPE SPEED DEVIATION

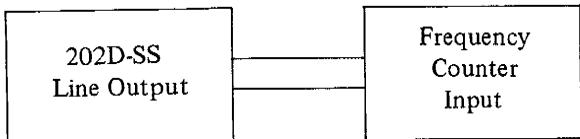


Fig. 1

As shown in Fig. 1, connect a Frequency Counter to the Line Output. Playback a 1,000 Hz pre-recorded test tape. Take a frequency counter reading at the beginning, middle, and end of tape winding during playback. The maximum value of these respective readings will represent tape speed deviation.

2. WOW AND FLUTTER

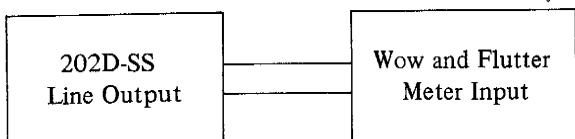


Fig. 2

Method A

As shown in Fig. 2, connect the Line output to the Input of a Wow and Flutter Meter. Playback a 3,000 Hz pre-recorded test tape and take a wow and flutter meter reading at the beginning, middle, and end of tape winding. The maximum value of these respective readings will represent the wow and flutter.

Method B

Supply a 3,000 Hz sine wave signal from an Audio Frequency Oscillator and make a recording on a blank tape at the beginning, middle, and end of tape winding. Rewind and playback the resultant signals. Measure wow and flutter with a Wow and Flutter Meter. (The wow and flutter value of Method B will be close to twice that of Method A.)

3. FREQUENCY RESPONSE

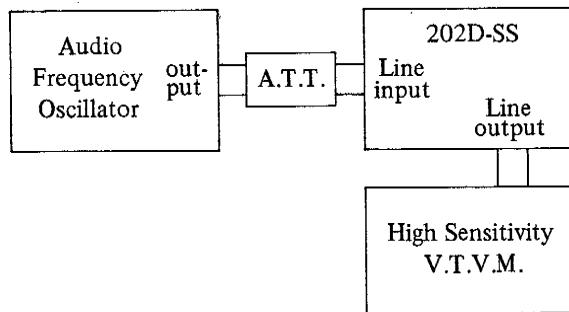


Fig. 3

For measuring frequency response, connect instruments as shown in Fig. 3 and proceed as follows:

- 1) Supply a 2,000 Hz sine wave signal to the Line input from an Audio Frequency Oscillator through an Attenuator.
- 2) Set tape deck to recording mode and turn recording level control volume to maximum. Adjust attenuator to obtain a +4 dB V.T.V.M. reading.
- 3) Under conditions described in 2) above, re-adjust attenuator so that the Line output is -16 dB, and record 30 to 23,000 Hz at 7-1/2 ips spot frequencies.
- 4) Rewind the tape and playback from the beginning. Take V.T.V.M. spot frequency readings and plot values on a graph.

NOTE: When measuring frequency response, new tape should be used.

4. SIGNAL TO NOISE RATIO

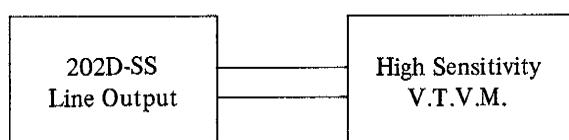


Fig. 4

As shown in Fig. 4, connect a High Sensitivity V.T.V.M. to the Line output. Playback a 250 Hz "O" VU pre-recorded test tape and measure the output. Then remove the tape and measure the noise level under the same condition. Convert each of the measured values into decibels.

5. TOTAL HARMONIC DISTORTION FACTOR

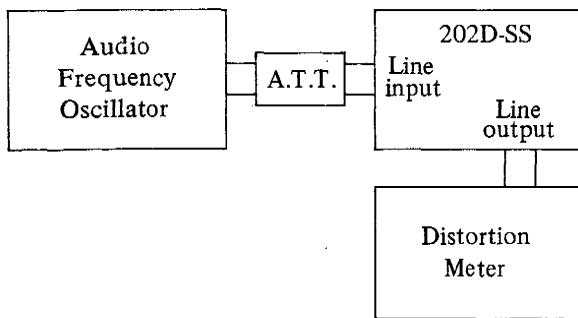


Fig. 5

Connect the measuring instruments as shown in Fig. 5 and record a 1,000 Hz sine wave signal at "O" VU. Playback the resultant signal and measure the overall distortion factor. Measure the noise level of the tape recorder without the tape. Connect the audio frequency oscillator directly to the distortion meter for measurement of the distortion factor of the oscillator. The required distortion factor can be obtained from the results of the above measurement by the following formula:

$$d_0 = d - d_1 - d_2$$

where, d_0 = Required distortion factor
 d = Overall distortion factor
 d_1 = Noise Level
 d_2 = Distortion factor of the oscillator

NOTE: When measuring the distortion factor, new tape should be used.

6. CROSS TALK (Cross talk between the channels)

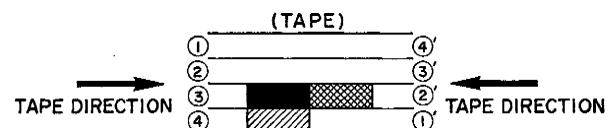


Fig. 6

As shown in Fig. 6, first record a 1,000 Hz sine wave signal on Track No. 3 at +3 VU level. Next, record under a non-input condition. Then, playback the tape on Tracks No. 3 and 4 (reversed condition of tape) through the B.P.F. (band pass filter, Sensitivity ... 1:1) and obtain a ratio between the two from the following formula:

$$C = 20 \log \frac{E_0}{E_2 - E_1} \text{ (dB)}$$

where, C = Desired cross talk ratio (dB)

E_0 = 1,000 Hz signal output level

E_2 = 1,000 Hz cross talk level

E_1 = Non-input signal recorded level



7. ERASE RATIO

As shown in Fig. 4, connect a High Sensitivity V.T.V.M. to the Line output. Playback a virgin tape and take a V.T.V.M. reading of the output level. Next, record a 1,000 Hz sine wave signal at +3 VU, then playback this recorded signal and take a V.T.V.M. reading of the output level. Next, using this pre-recorded tape, record under a non-input condition and take a reading of the noise level output of the erased signal and obtain a ratio between the two from the following formula:

$$E_r = 20 \log \frac{E_0}{E_2 - E_1} \text{ (dB)}$$

where, E_r = Desired erase ratio (dB)



E_0 = 1,000 Hz signal output level

E_2 = Non-input signal recorded level


E_1 = Virgin tape noise output level

III. DISMANTLING OF UNIT

In case of trouble, etc. necessitating disassembly, please disassemble in the order shown in photographs. Reassemble in reverse order.

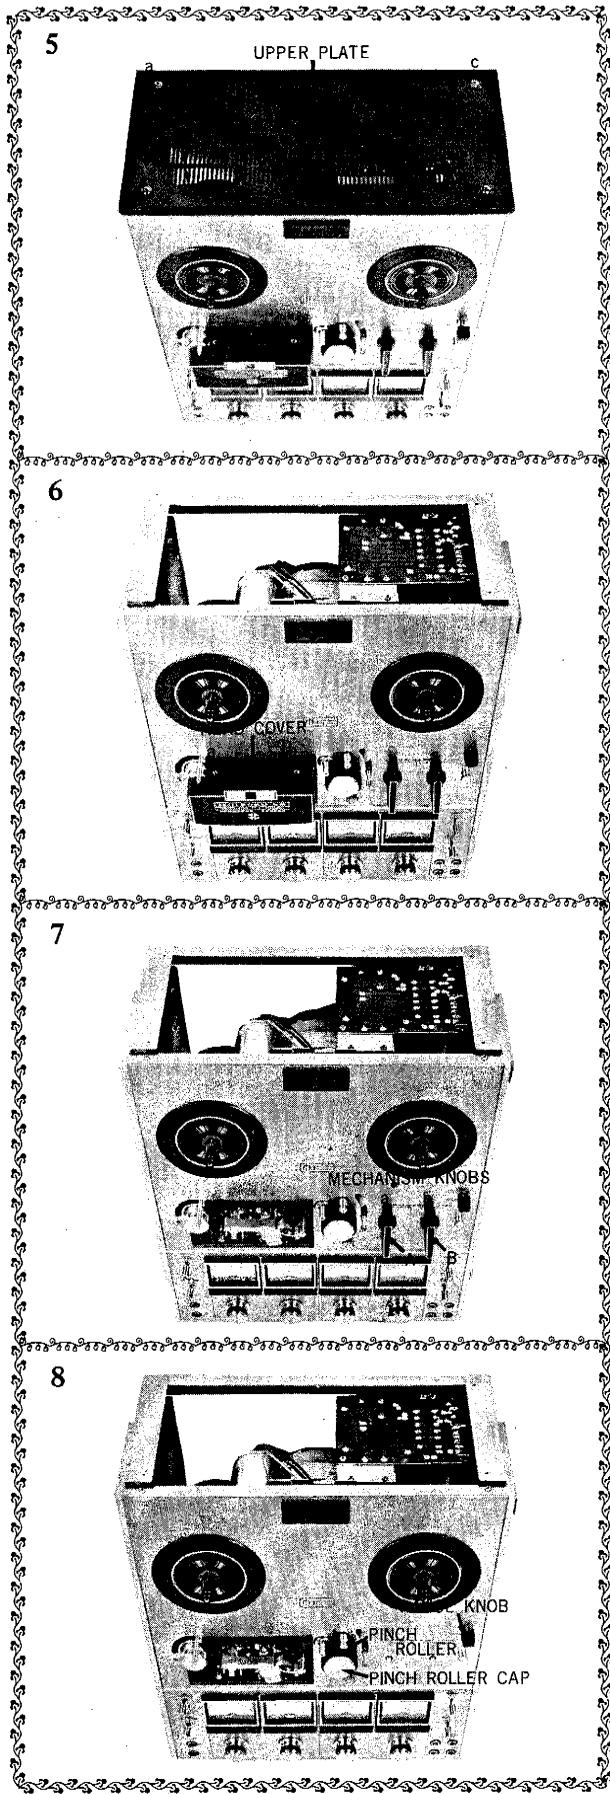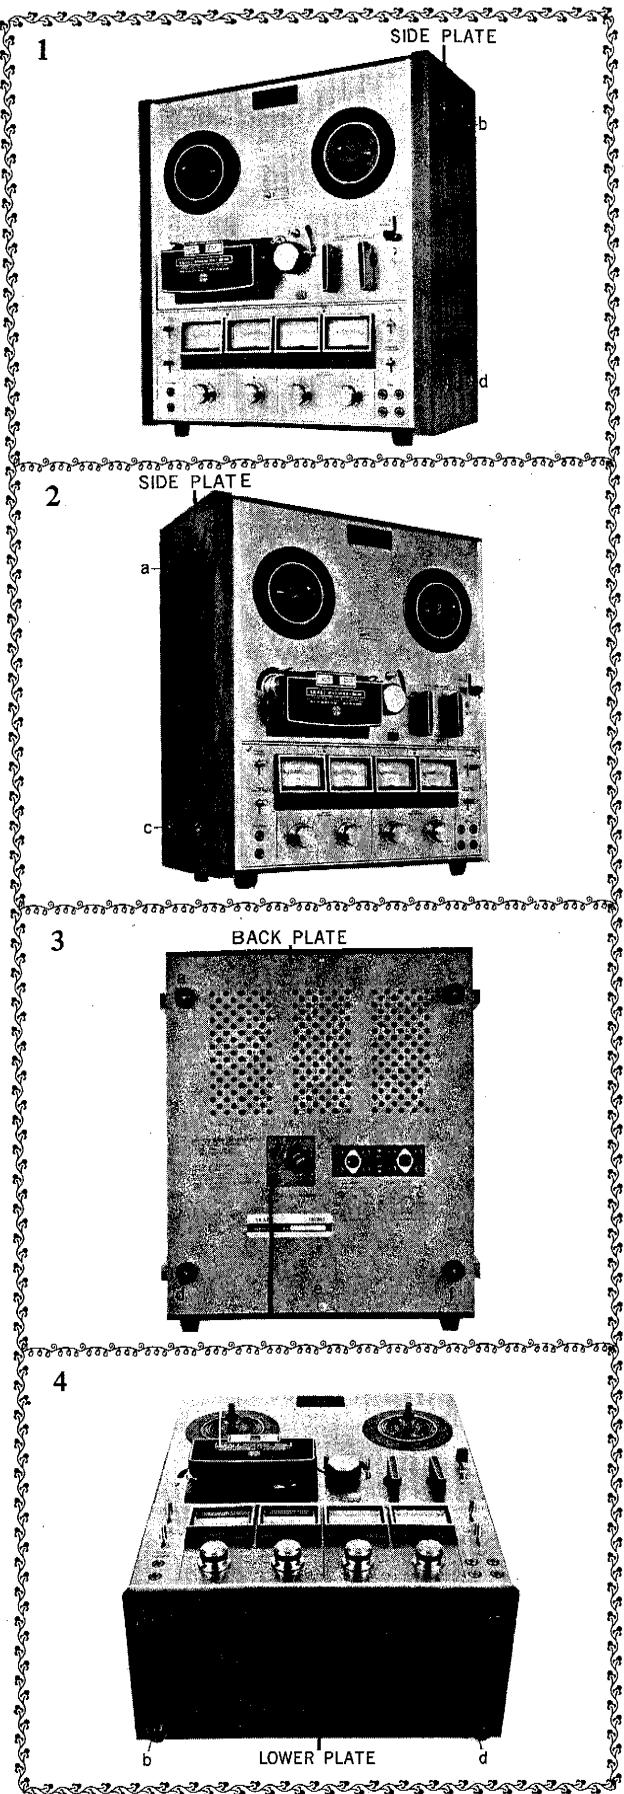


9

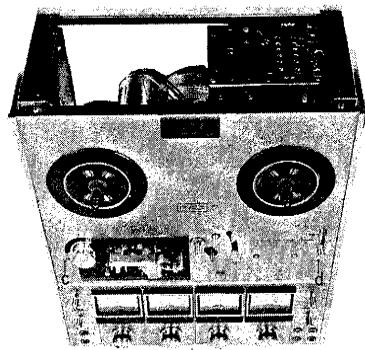


10




11

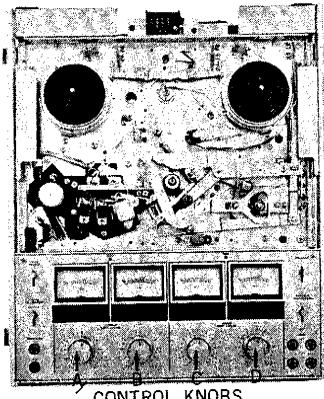


12

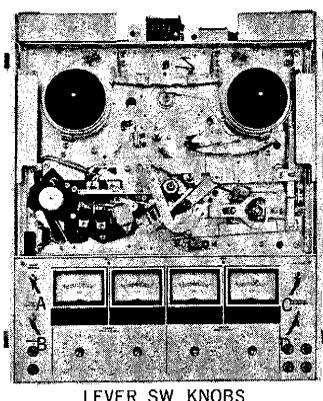

13

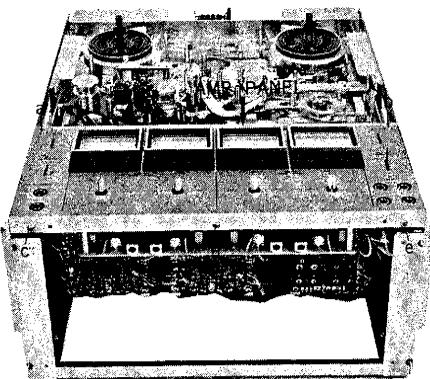


14

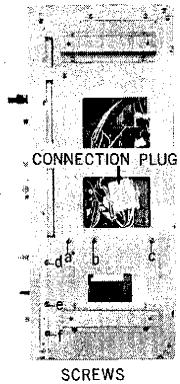


15




16

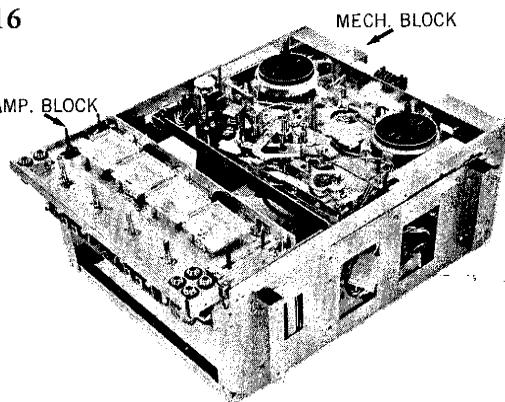



IV. SYSTEM CONTROL CIRCUIT OPERATION

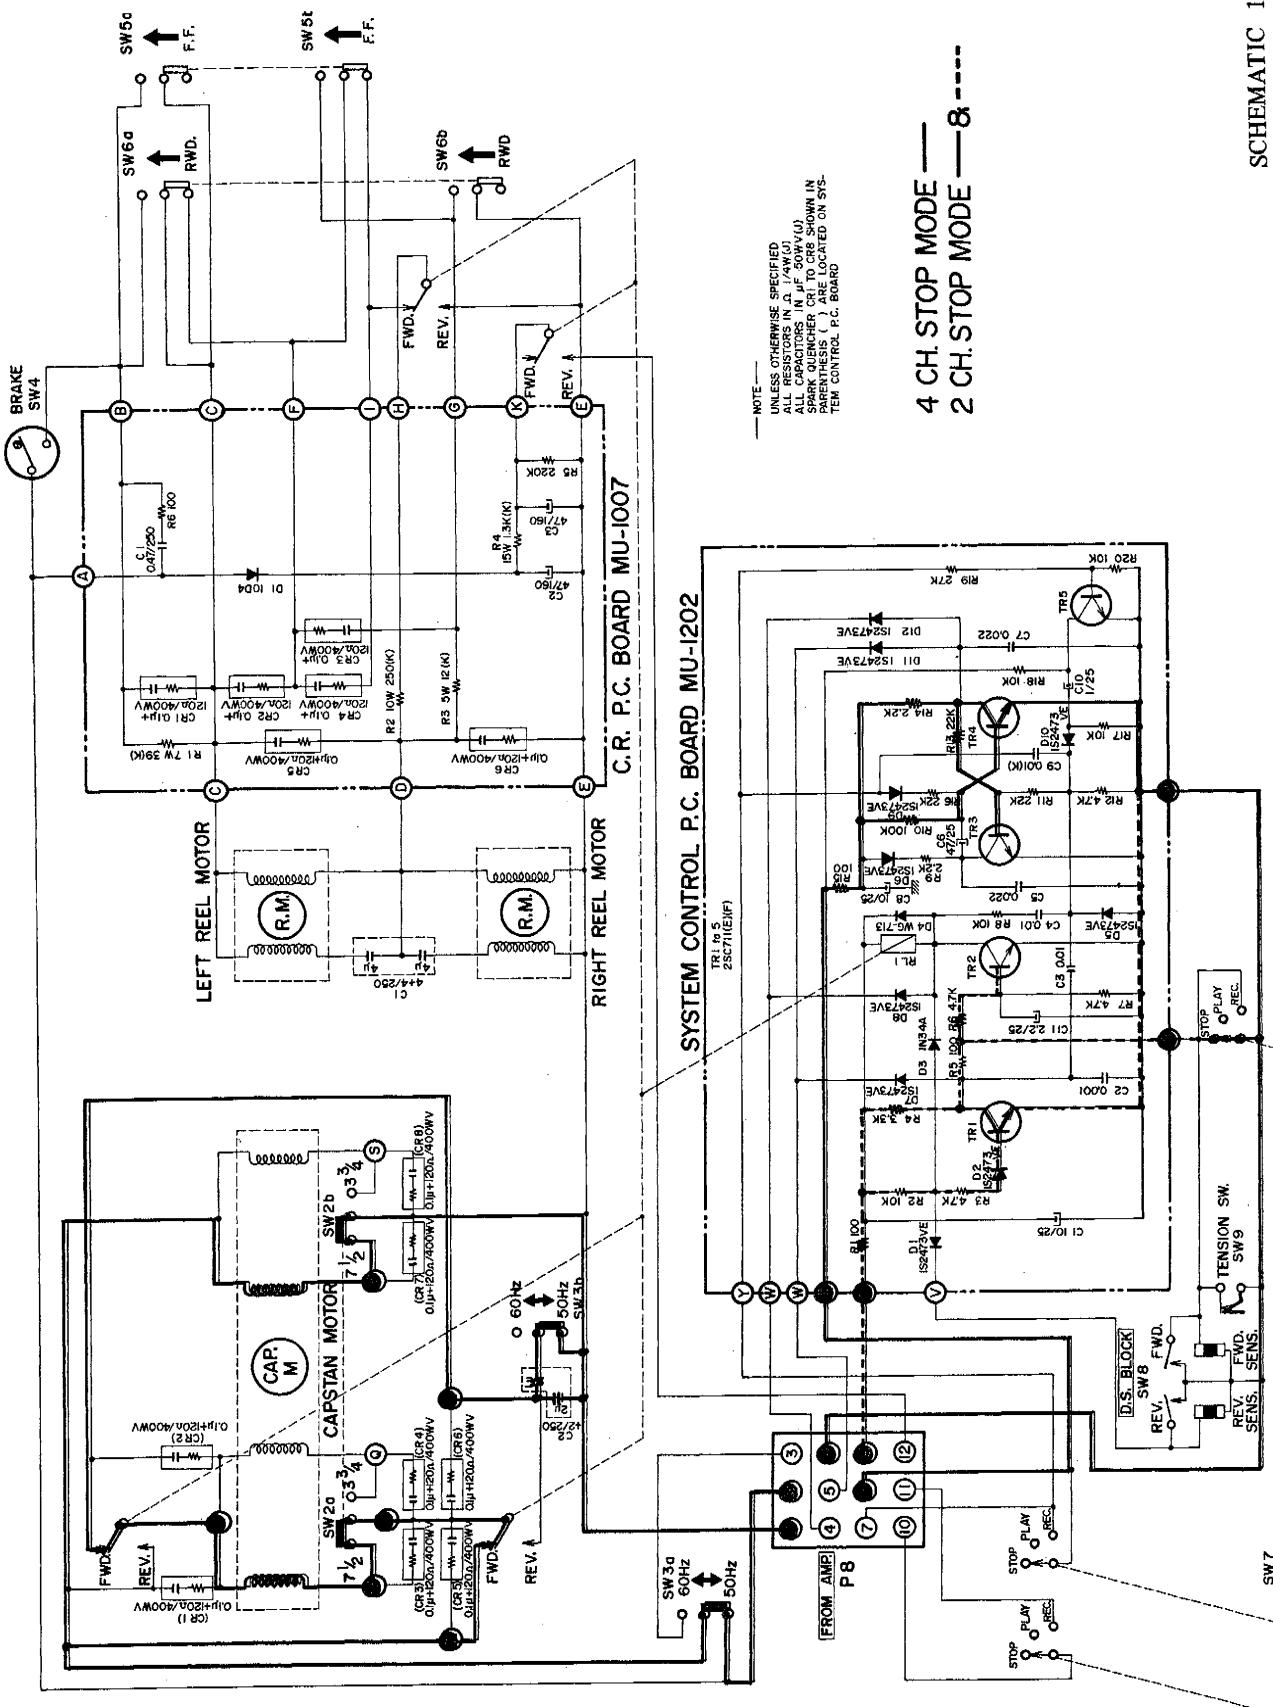



SCHEMATIC 1

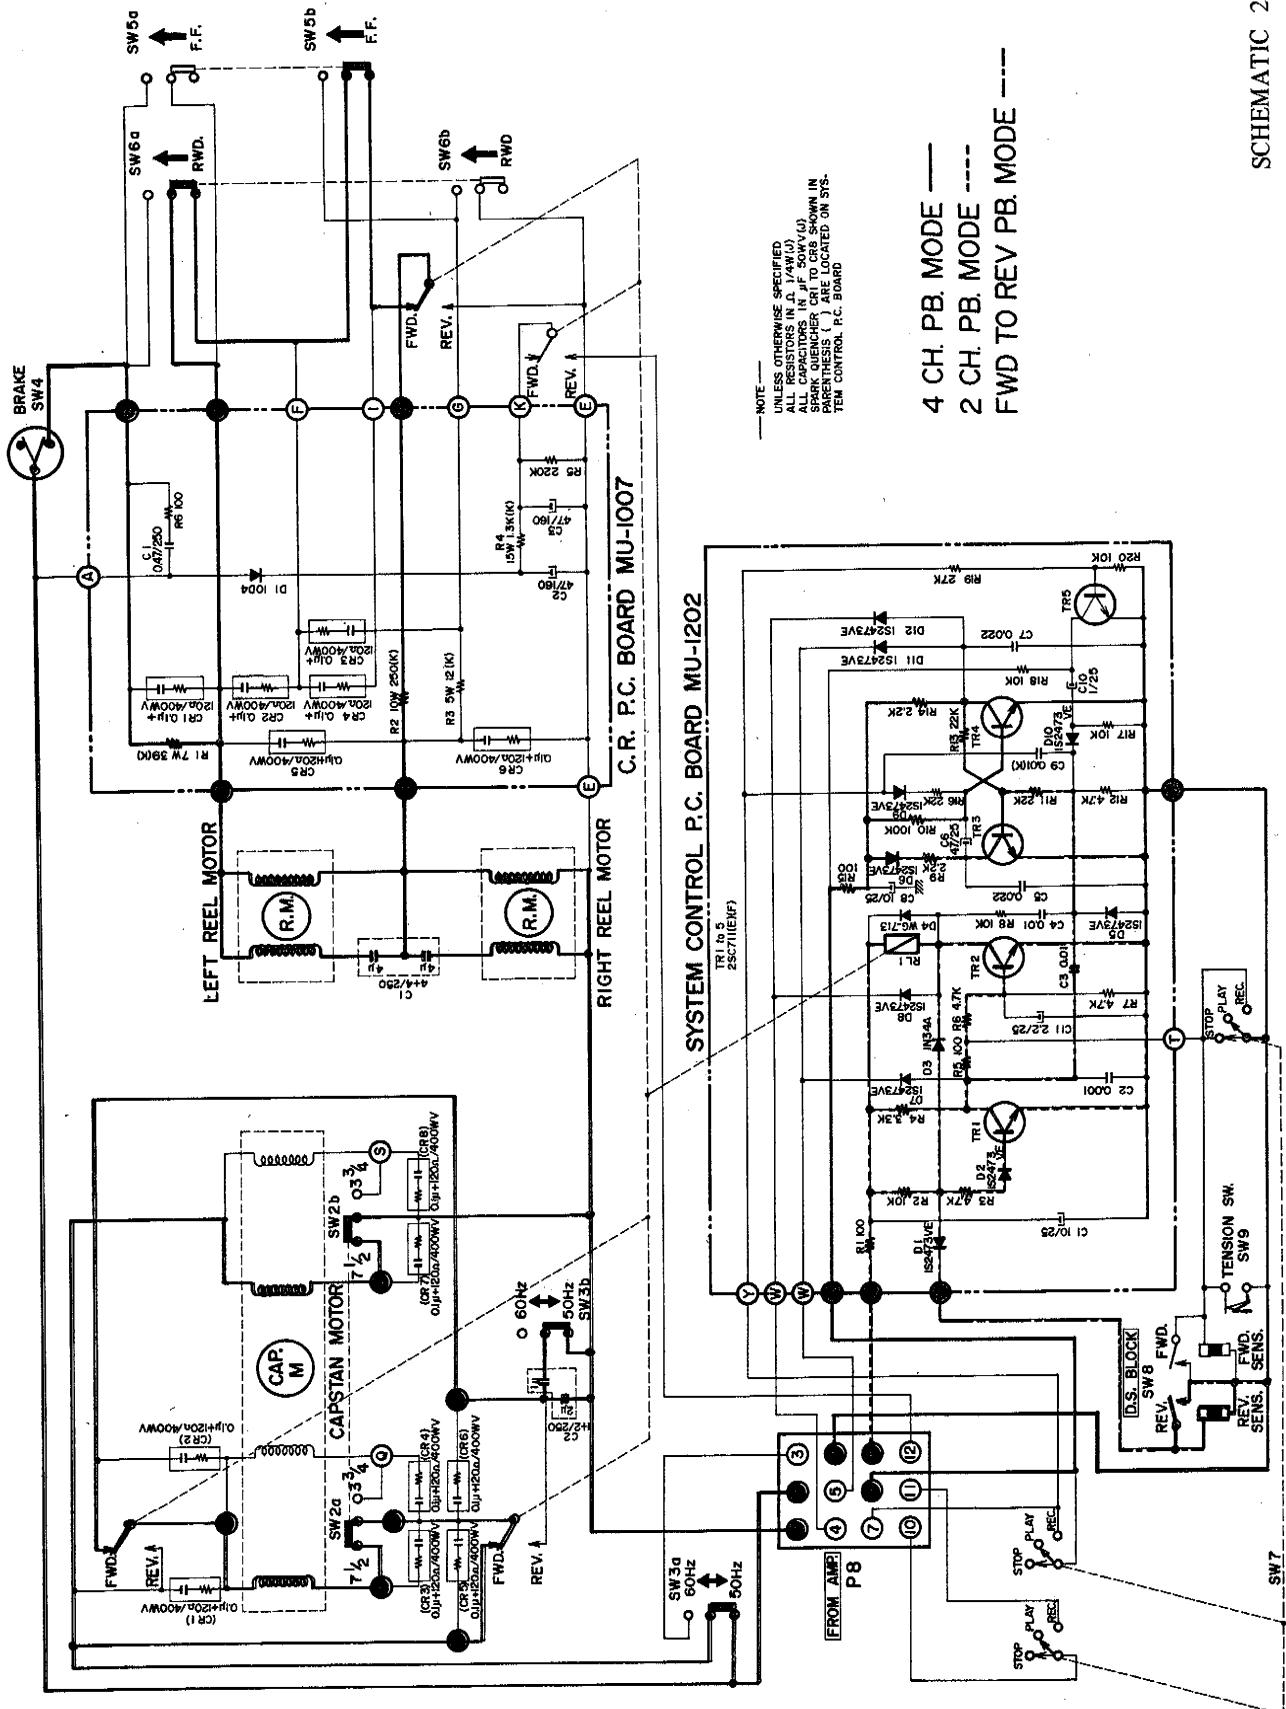

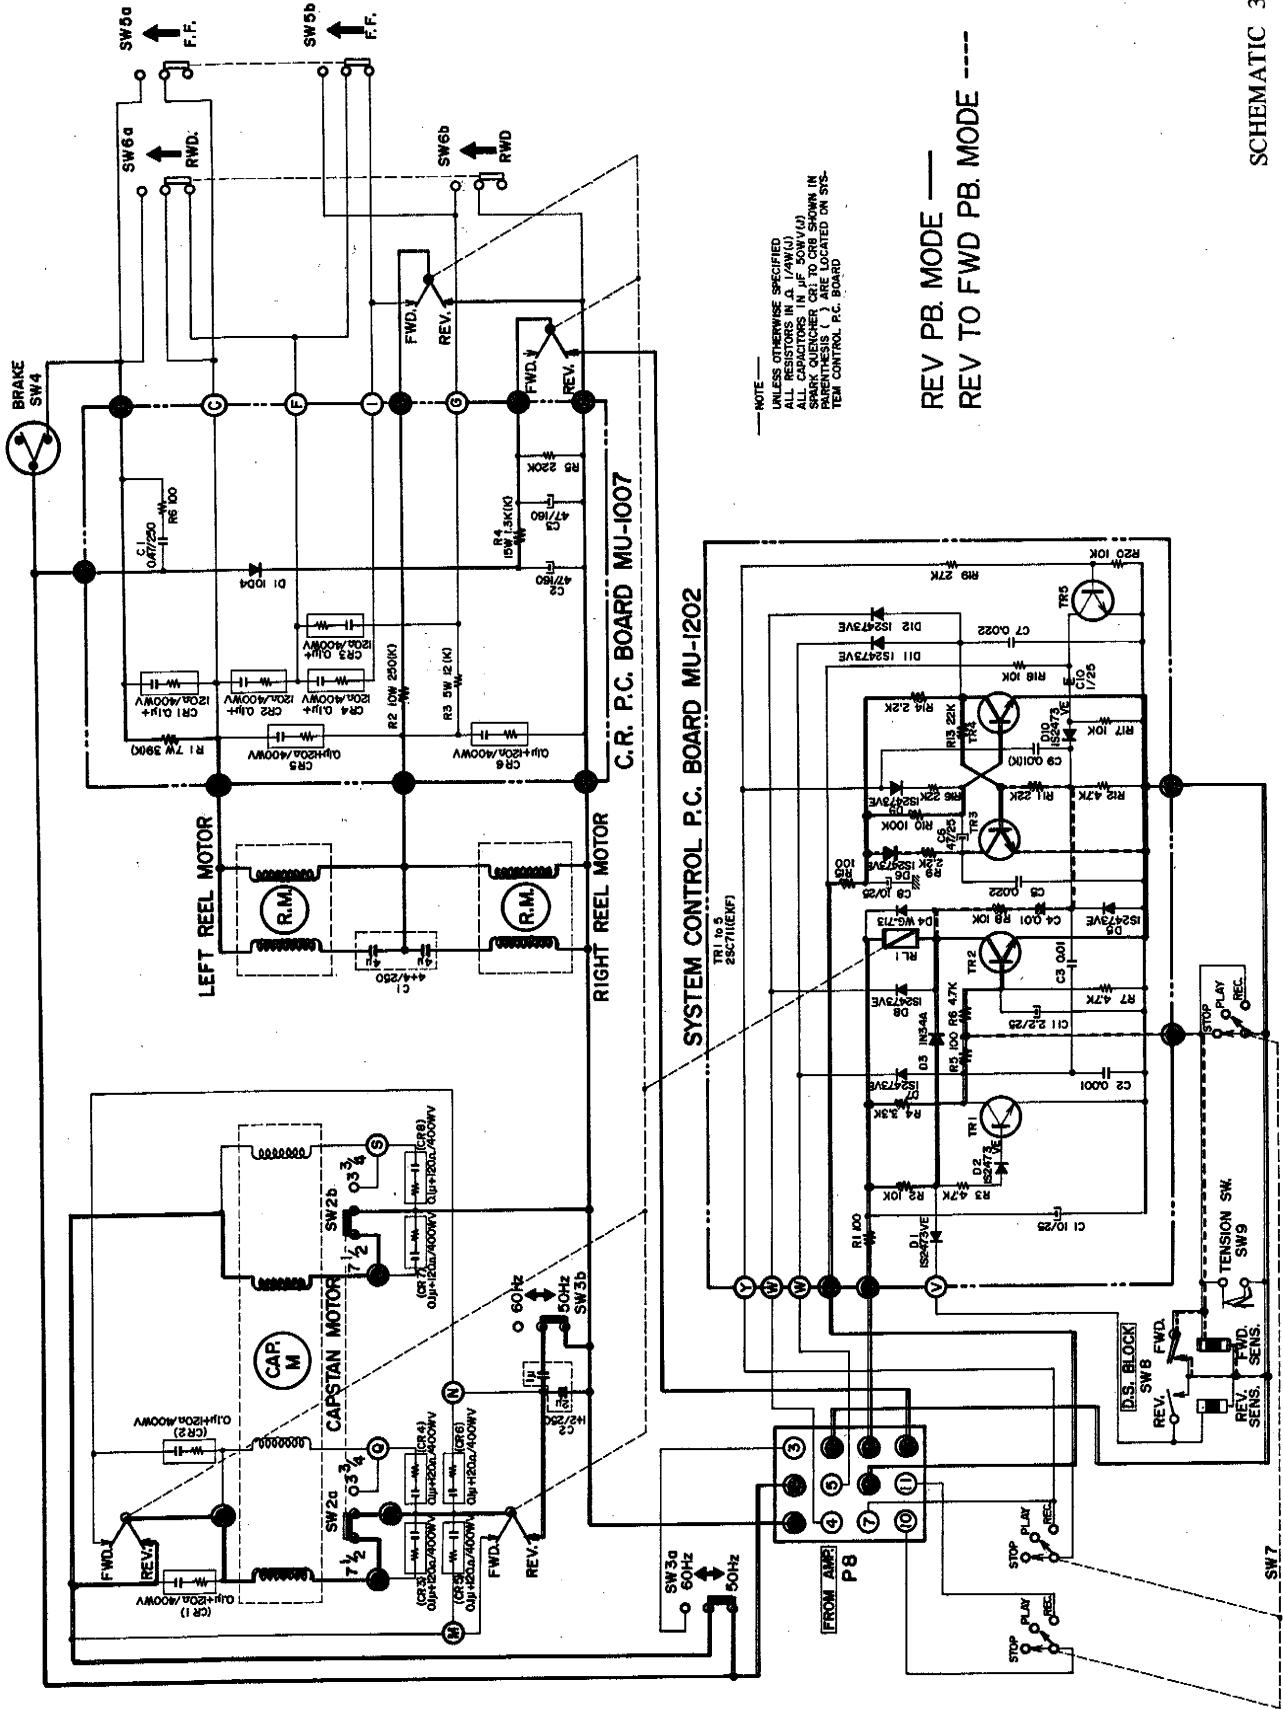

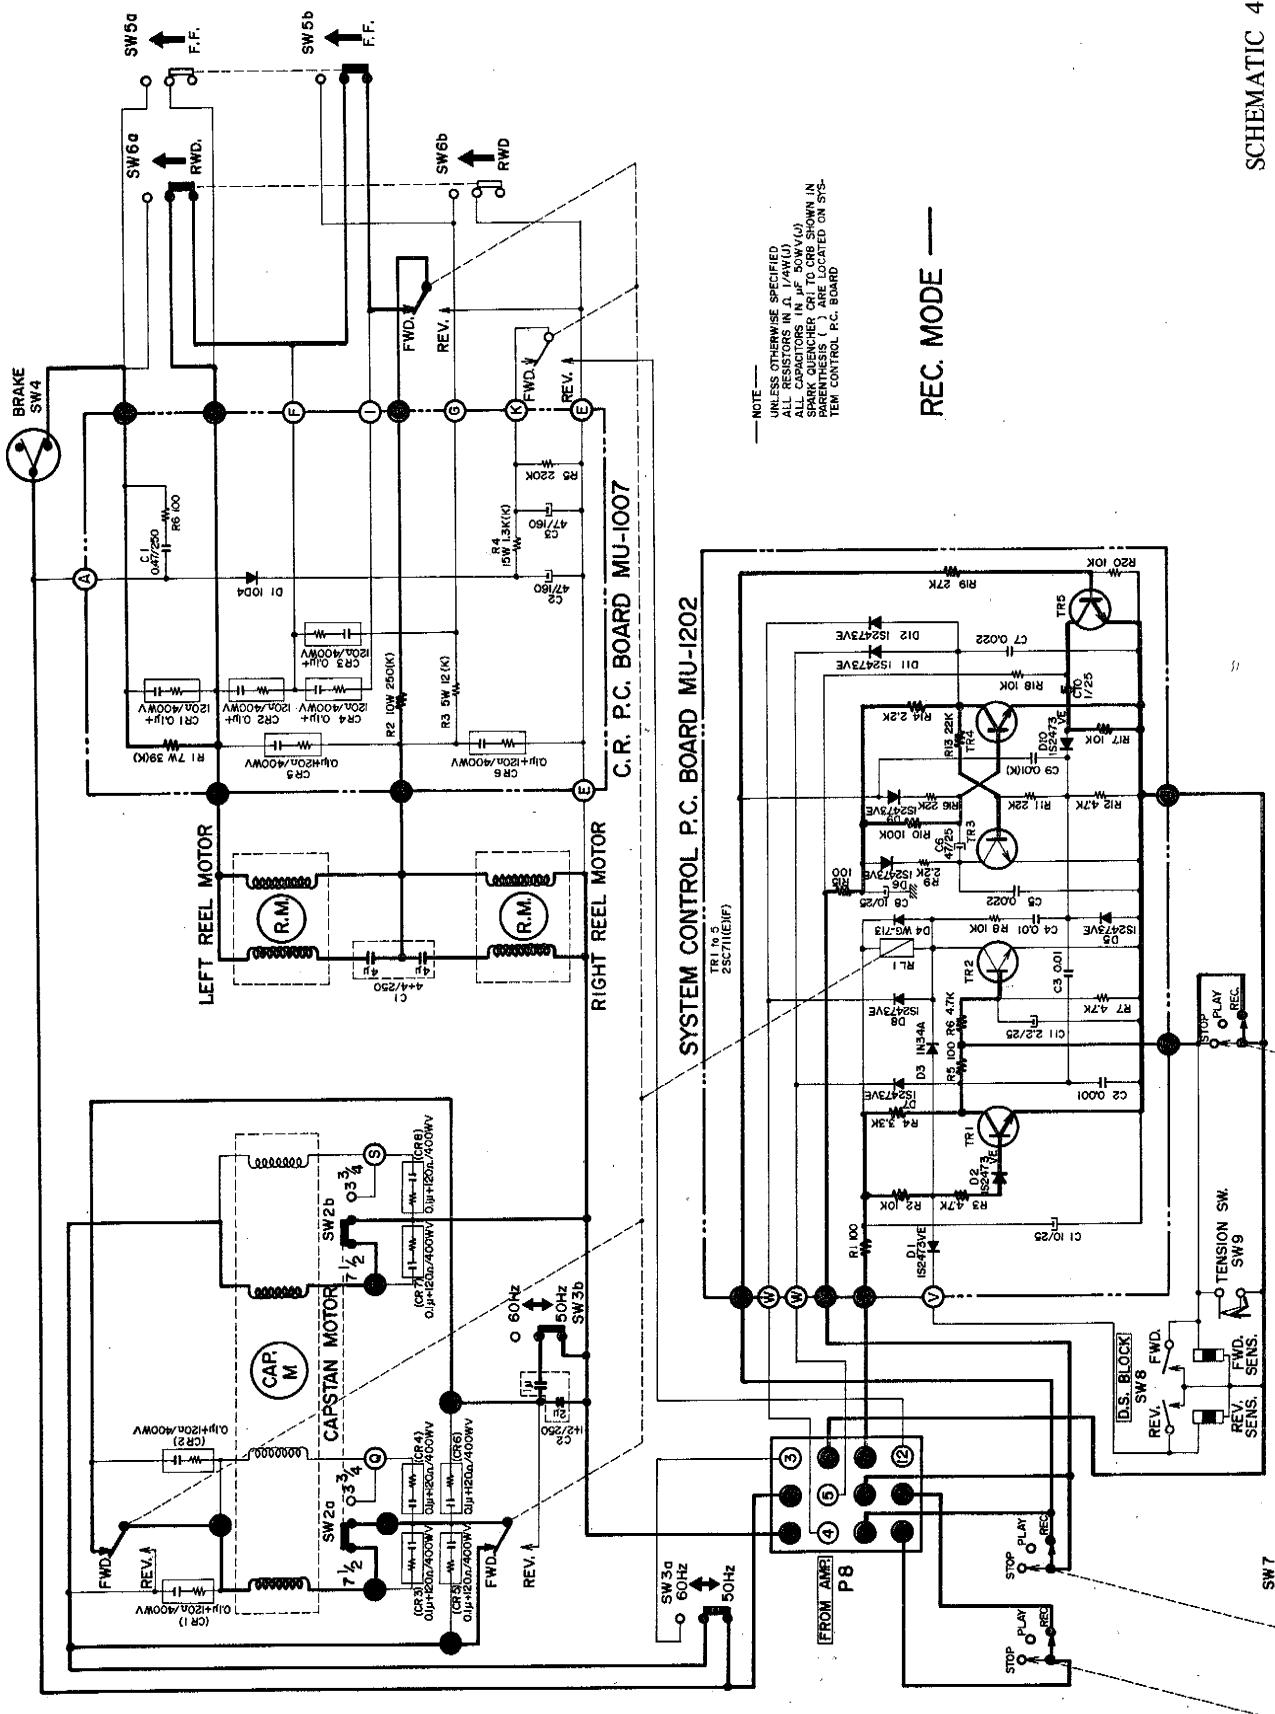

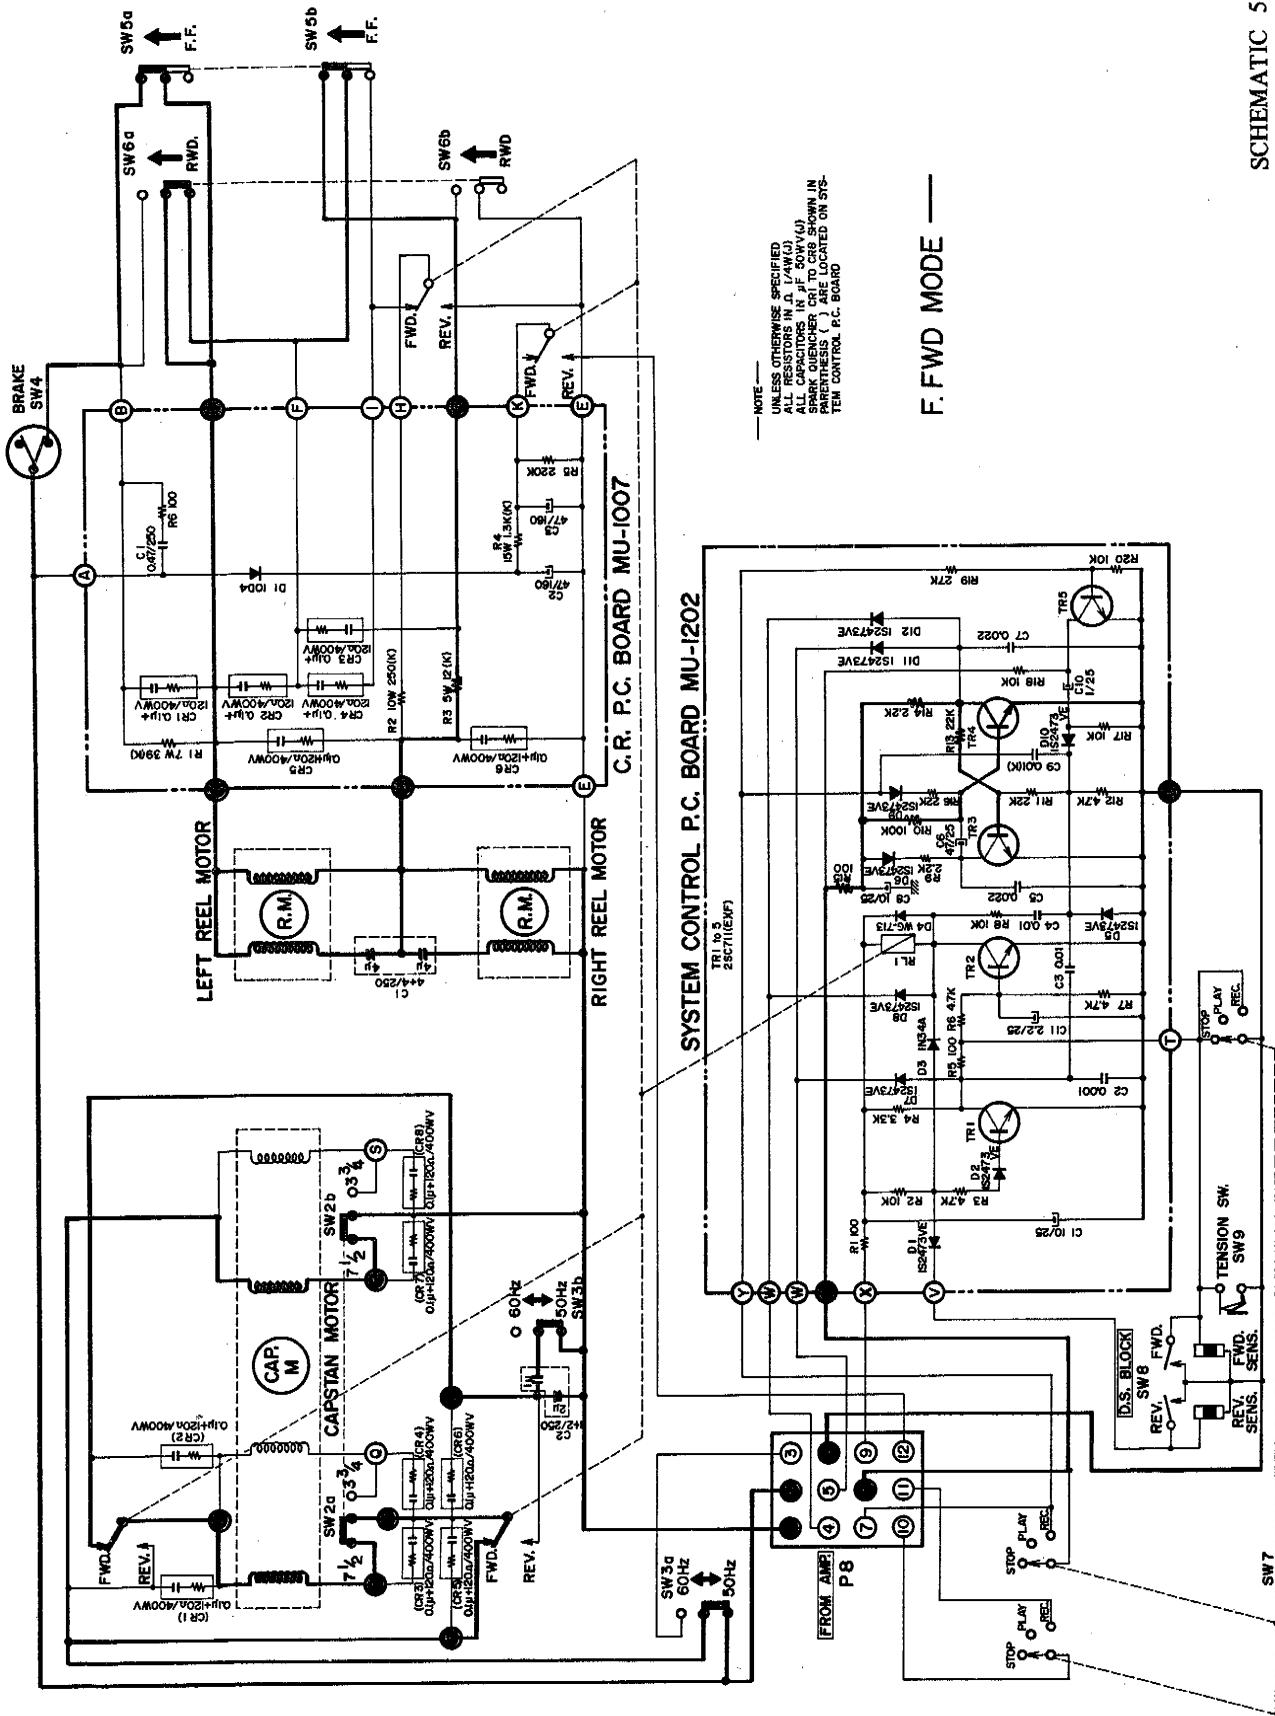

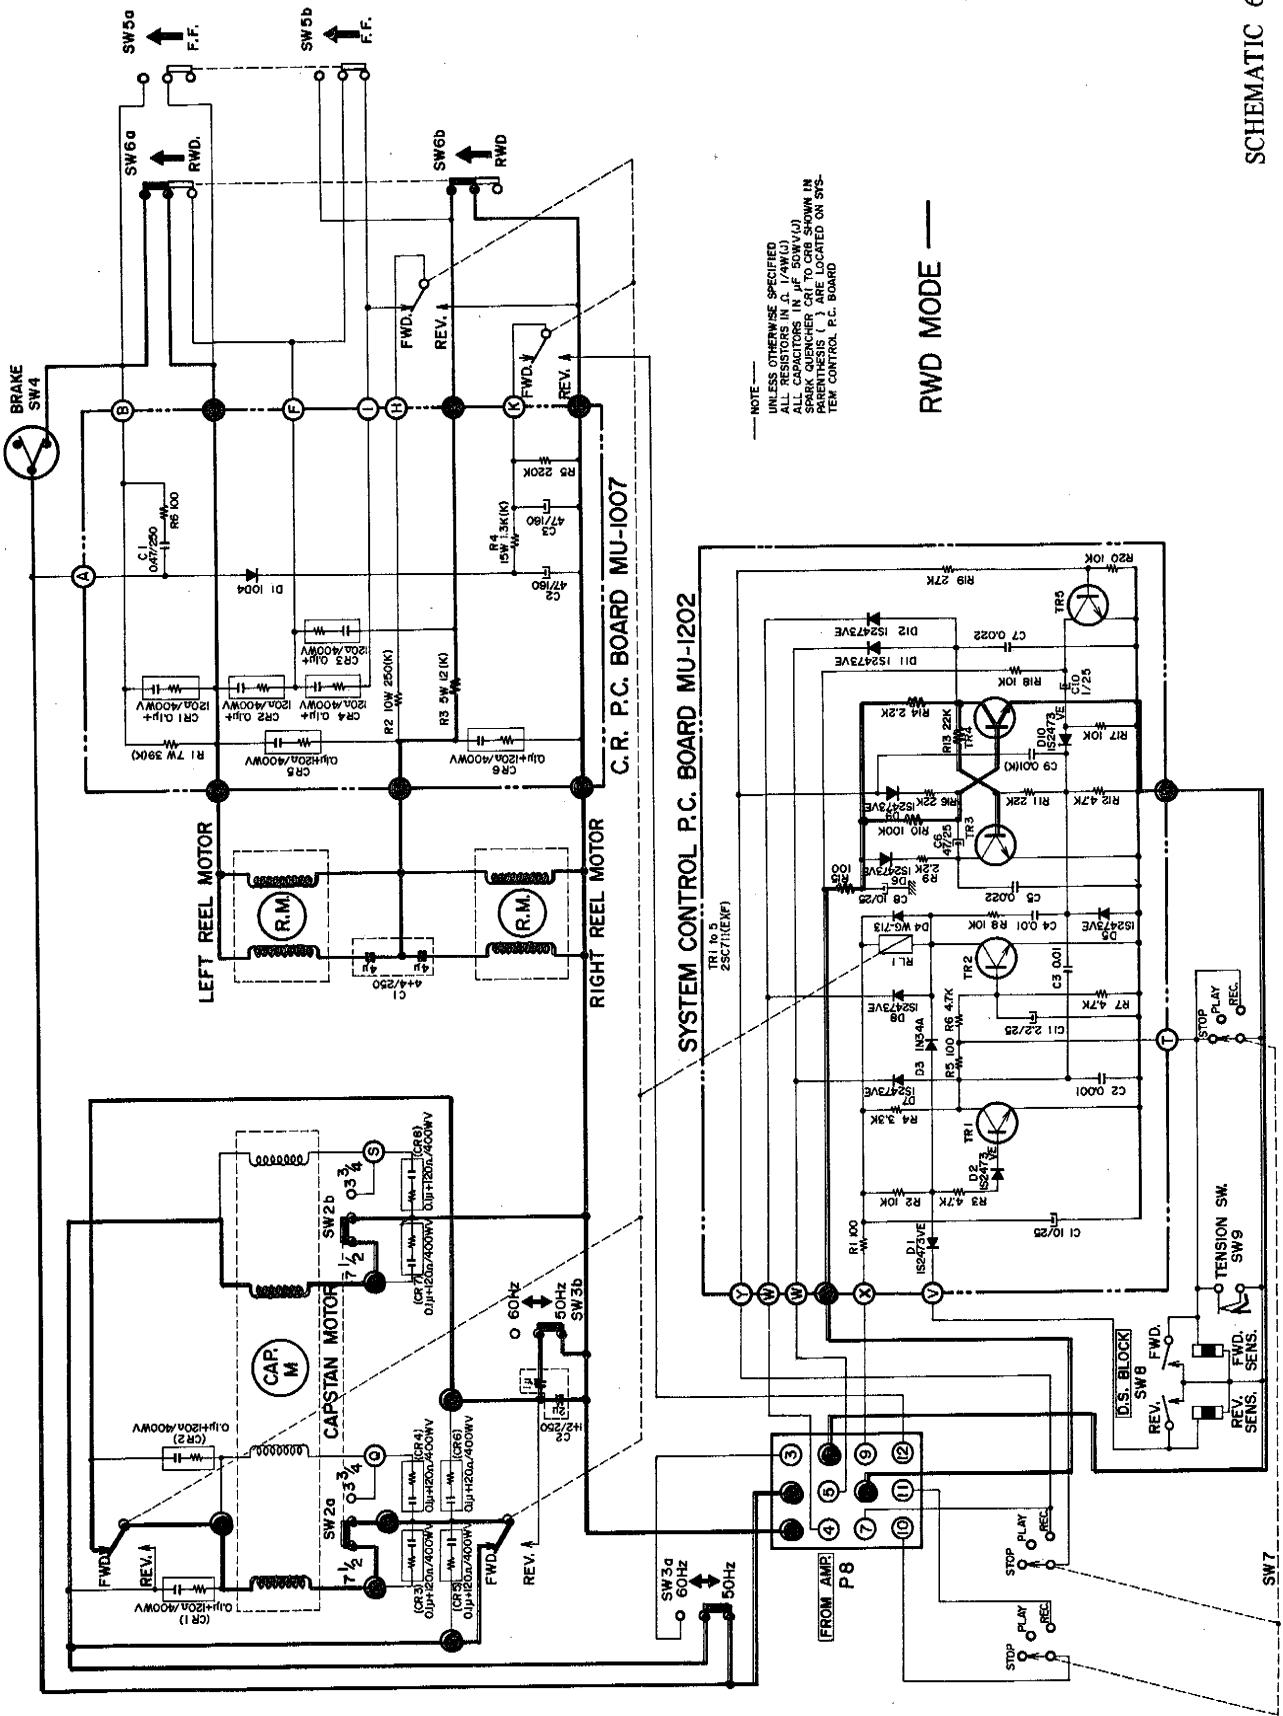

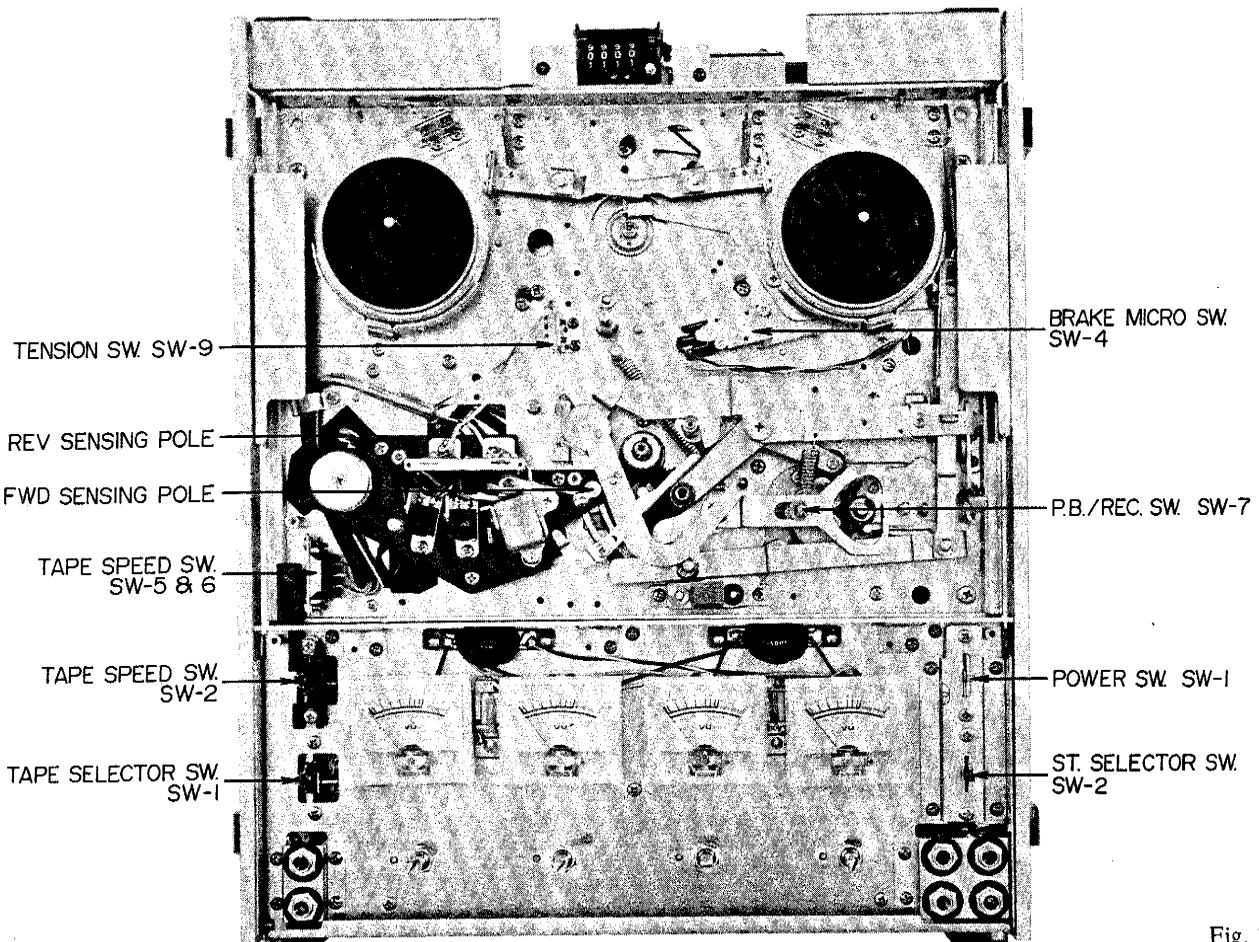


Fig. 7

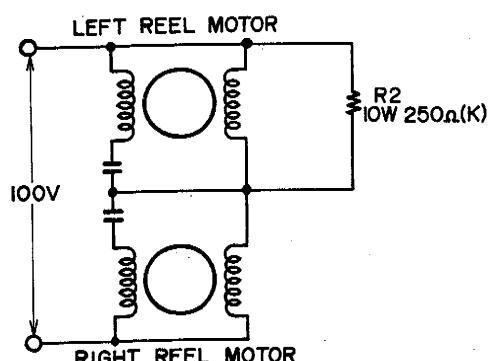


Fig. 8

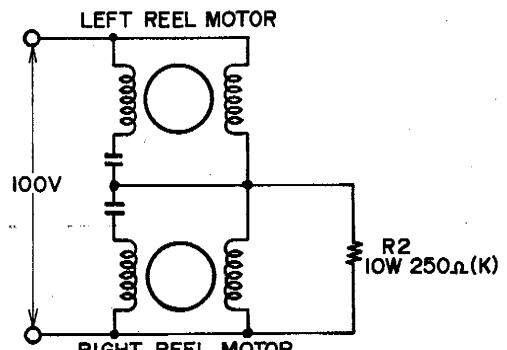


Fig. 9

1. STOP MODE (Refer to Schematic 1)

At stop mode, the various system control (hereinafter referred to as SYS.CON. transistors are maintained as follows: TR1(ON), TR2(OFF), TR3(OFF), and TR4(ON). Accordingly, the reverse relay connected to the collector of TR2 is OFF, and capstan motor revolutions are in forward direction. Also as TR4 is ON and TR4 collector voltage is roughly zero, and thus Diode D1 connected to the collector of TR4 (Playback Amp. P.C. Board) is turned OFF, the Playback Amp. Mute Circuit is also turned OFF. Both the supply and take-up reel motors are equipped with a Micro Switch SW4 which is activated to OFF and ON by the operation of the brake lever, and which at Stop Mode are turned OFF. Consequently, no voltage is supplied to either reel motor (both reel motors are connected in series).

When at stop mode, switching by means of P.B./REC Switch SW-7 does not take place because the base of SYS.CON.TR2 is grounded and maintained at OFF condition. That is to say, capstan motor revolutions will not reverse even when a REV Button is depressed. When the tension lever is raised, Tension Switch SW-9 is turned OFF. Thus, when no tape is loaded, this switch is ON. Also, because Tension Switch SW-9 is installed in parallel with P.B./REC Switch SW-7, when SW-7 is at stop mode, if a tape is loaded, but not threaded through the Tension Lever and playback is effected, reverse mode cannot be effected when a REV Button is depressed. And, of course, reverse mode will not be effected when the sensing foil passes the sensing poles.

2. FORWARD PLAYBACK MODE (Refer to Schematic 2)

When the P.B./REC Switch is at PLAY position, the various SYS.CON.transistors are maintained as follows: TR1(ON), TR2(OFF), TR3(OFF), and TR4(ON), i.e., functionally the same as at stop mode. The difference is that the base of TR2 which was grounded by P.B./REC Switch SW-7 is now open. That is to say, when TR1 is turned OFF and TR1 collector voltage increases, bias is supplied to TR2, and TR2 is turned ON.

Accordingly, while TR1 is (ON) and TR2 (OFF) (FWD Playback mode), capstan motor revolutions are in forward direction. Also Micro Switch SW-4 is ON, and voltage is supplied to both reel motors.

At FWD playback mode, an R2(10W, 250Ω) resistor is in parallel with left reel motor winding. That is to say, the left reel motor resistance differs from the right reel motor resistance due to the R2(10W, 250Ω) resistor which is parallel with the left reel motor as shown in Fig. 8. In short, the voltage supplied to the left reel motor is low and FWD playback mode is maintained.

3. FROM FWD TO REV PLAYBACK, AND REV PLAYBACK MODE (Refer to Schematic 2, 3)

When the sensing tape passes the reverse sensing poles or when the REV Button is depressed, the base of TR1 is biased at zero electrical potential and TR1 is instantly turned OFF, TR1 collector voltage increases and bias is applied to the base of TR2, TR2 is turned ON, and Reverse Relay RL1 is turned ON. In this TR1 and TR2 circuit, TR1 is maintained at OFF and TR2 at ON by means of Diode D3(IN34A). (Refer to Schematic Diagram-3) By means of the reverse relay function, current flows from the reverse direction to the capstan motor sub coil, and reverse revolutions begin. Also, at FWD playback time, Resistor R2(10W, 250Ω) connected in parallel with the left reel motor becomes parallel with the right reel motor. (Refer to Fig. 9)

At this condition, reverse playback begins and is maintained, and the capstan motor revolutions begin reversing from forward direction. For normalized and stable revolutions, flywheel inertia at time of forward revolutions and flywheel mass when reverse revolutions begin is applied so that stabilized tape speed is not immediate, for this reason the signal output circuit must be muted until capstan motor speed is stabilized. (Refer to MUTING CIRCUIT OPERATION explanation)

Solenoid Plunger SL-1 also operates to switch Reverse Switch SW-1. In other words, the P.B. Amp. P.C. Board output is switched by means of Reverse Switch SW-1. (Refer to Fig. 10)

4. FROM REVERSE TO FORWARD PLAYBACK (Refer to Schematic 3)

When the sensing tape passes the FWD sensing pole or when the FWD Button is depressed and the base of TR2 becomes biased at zero electrical potential, TR2 is instantly turned OFF, and reverse relay RL-1 is also turned OFF.

Diode D3(IN34A) is also inverse biased, TR1 base current passes R2(10 kΩ), R3(4.7 kΩ), and D2 (1S2473VE) and is biased, and TR1 is turned ON and maintained. Consequently, reverse relay RL-1 returns to it's original condition (FWD P.B.) and FWD playback mode is effected. Refer to MUTING CIRCUIT OPERATION for mute function during change from REV to FWD playback.

5. RECORDING MODE (Refer to Schematic 4)

SYS.CON. operation at recording time is exactly the same as Stop mode.


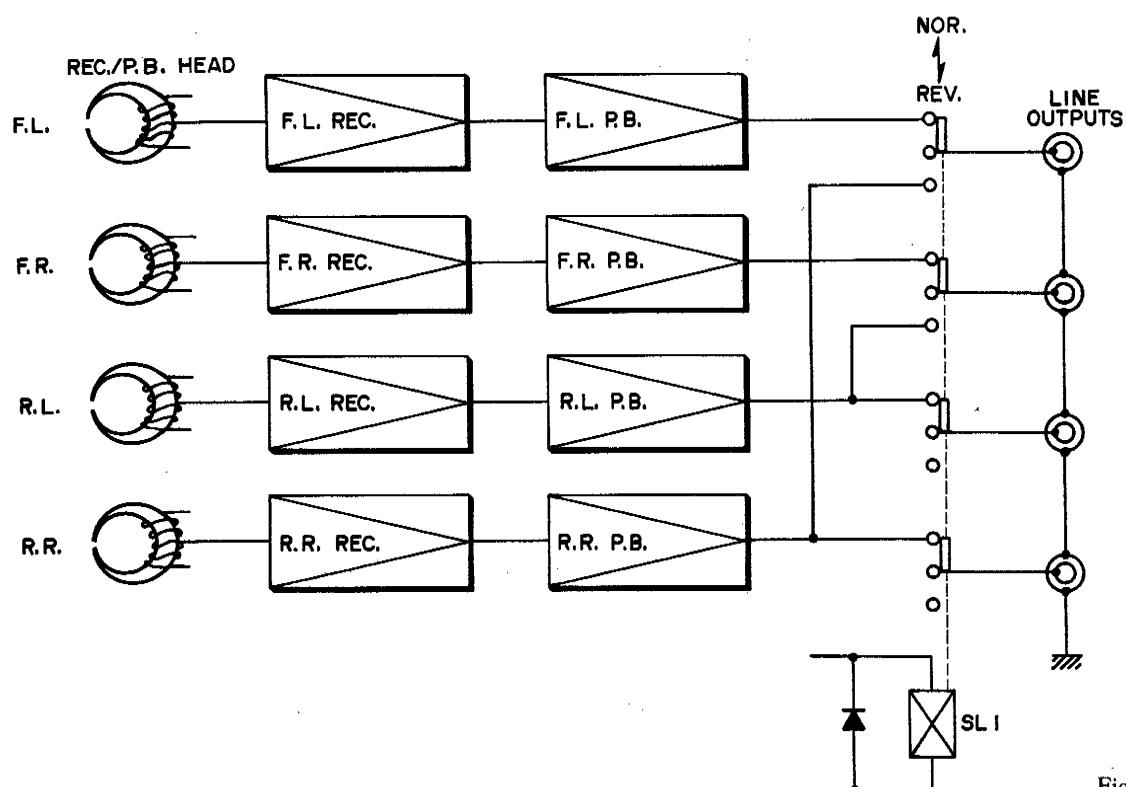


Fig. 10

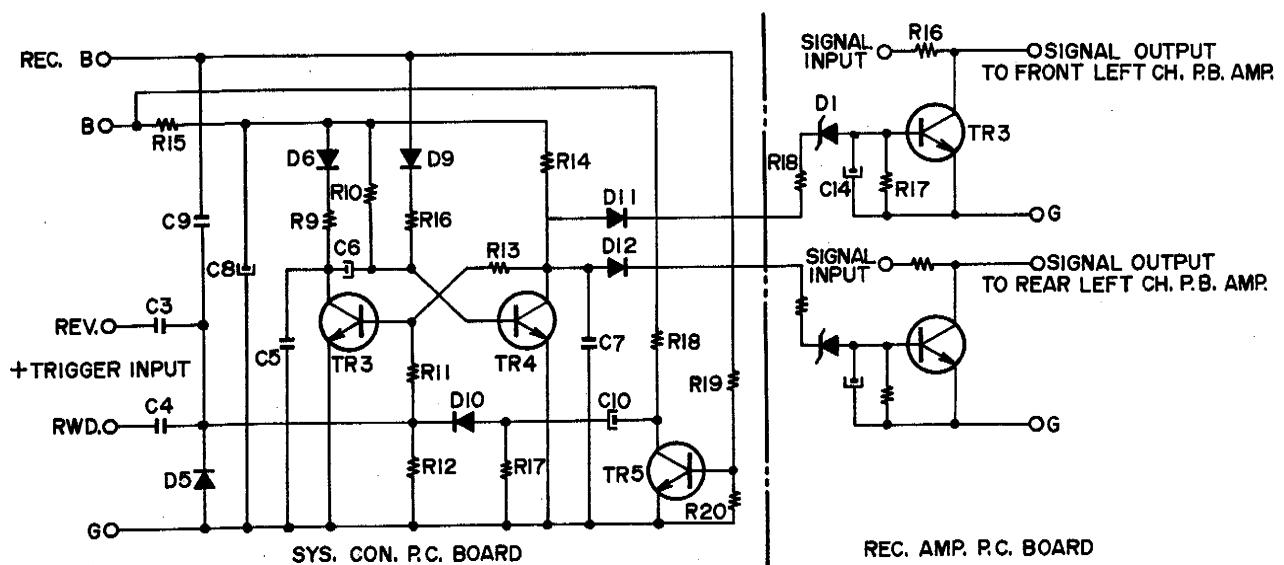

SCHEMATIC 7

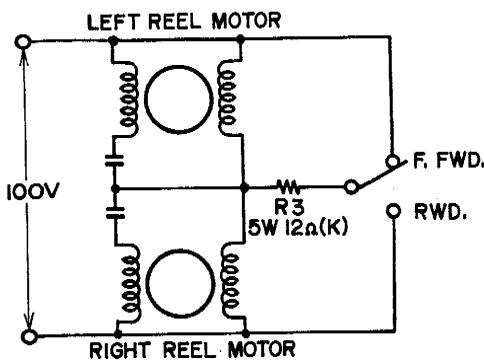


Fig. 11

6. FAST FORWARD AND REWIND MODE (Refer to Schematic 5, 6)

In this case, SYS.CON. operation is also exactly the same as Stop mode. However, the voltage supply to both reel motors are as shown in Fig. 11.

7. MUTING CIRCUIT OPERATION (Refer to Schematic 2, 3, and 7)

As shown in Schematic Diagram-7, the muting circuit consists of an electronic switch from Recording Amp. P.C. Board Transistor TR3 and a one-shot multi-vibrator comprised of SYS.CON. P.C. Board TR3 and TR4.

When stabilization is attained, TR3 of the one-shot multi-vibrator is turned OFF, and TR4 turned ON. Accordingly, the collector voltage of TR4 is lowered, Zener Diode D1 is biased in reverse direction, and TR3 of Recording Amp. P.C. Board is turned OFF. If Button SW-8 is now depressed for FWD to REV Playback, or REV to FWD Playback, a charge current flows to condenser C3 or C4. That is to say, the positive direction trigger signal is introduced at the base of TR3 of SYS.CON.P.C. Board and therefore, the one-shot multi-vibrator which is comprised of TR3 and TR4 is inverted and, after a certain period of time (2 to 3 seconds), again returns to its stabilized condition. While this one-shot multi-vibrator is inverted (while TR4 is OFF), because TR4 collector voltage is high, the voltage exceeding the Zener Point of Zener Diode D1 is applied to the cathode of D1 and D1 assumes a lead-through condition. Thus, electronic switch Transistor TR3 is turned ON, and the signal is muted. (The internal resistance of electronic switch TR3 at lead-through time is extremely low.)

At recording time, a charge current flows to condenser C9 in the same way as described above. That is to say, the one-shot multi-vibrator is inverted and the mute circuit functions. Also when stop is effected from recording mode, TR5 is turned OFF, and because a charge current flows to C10 through R18, the mute circuit functions. Thus, at recording time or when returned to stop mode, these functions prevent a click noise from being recorded on the tape.

V. MECHANISM ADJUSTMENTS

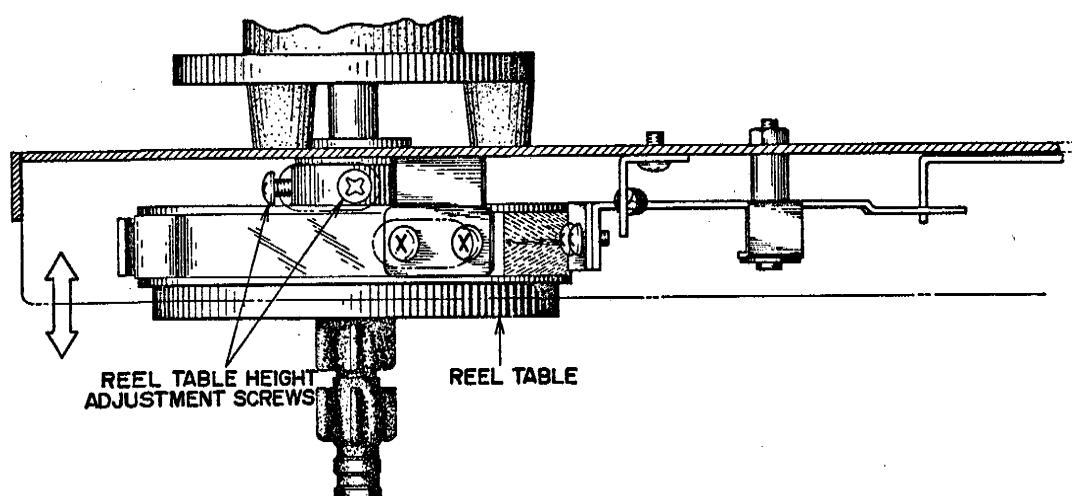


Fig. 12

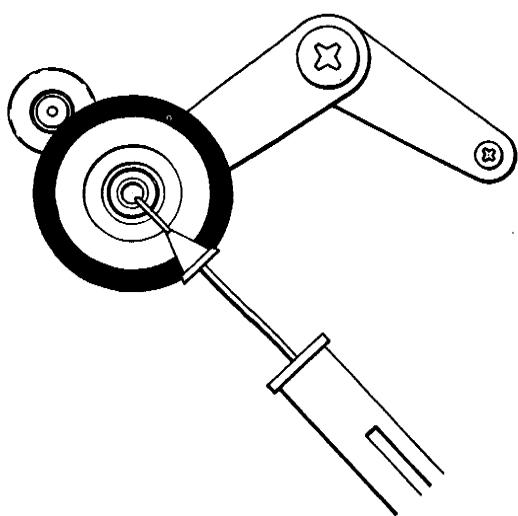


Fig. 13

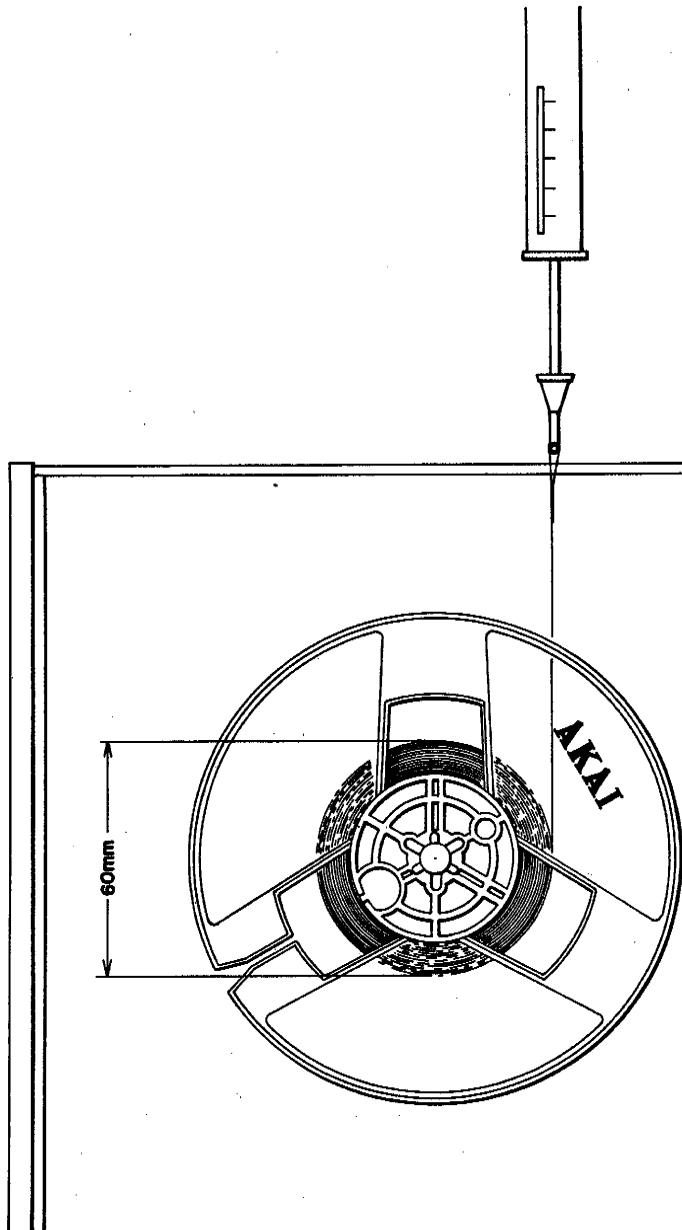


Fig. 14

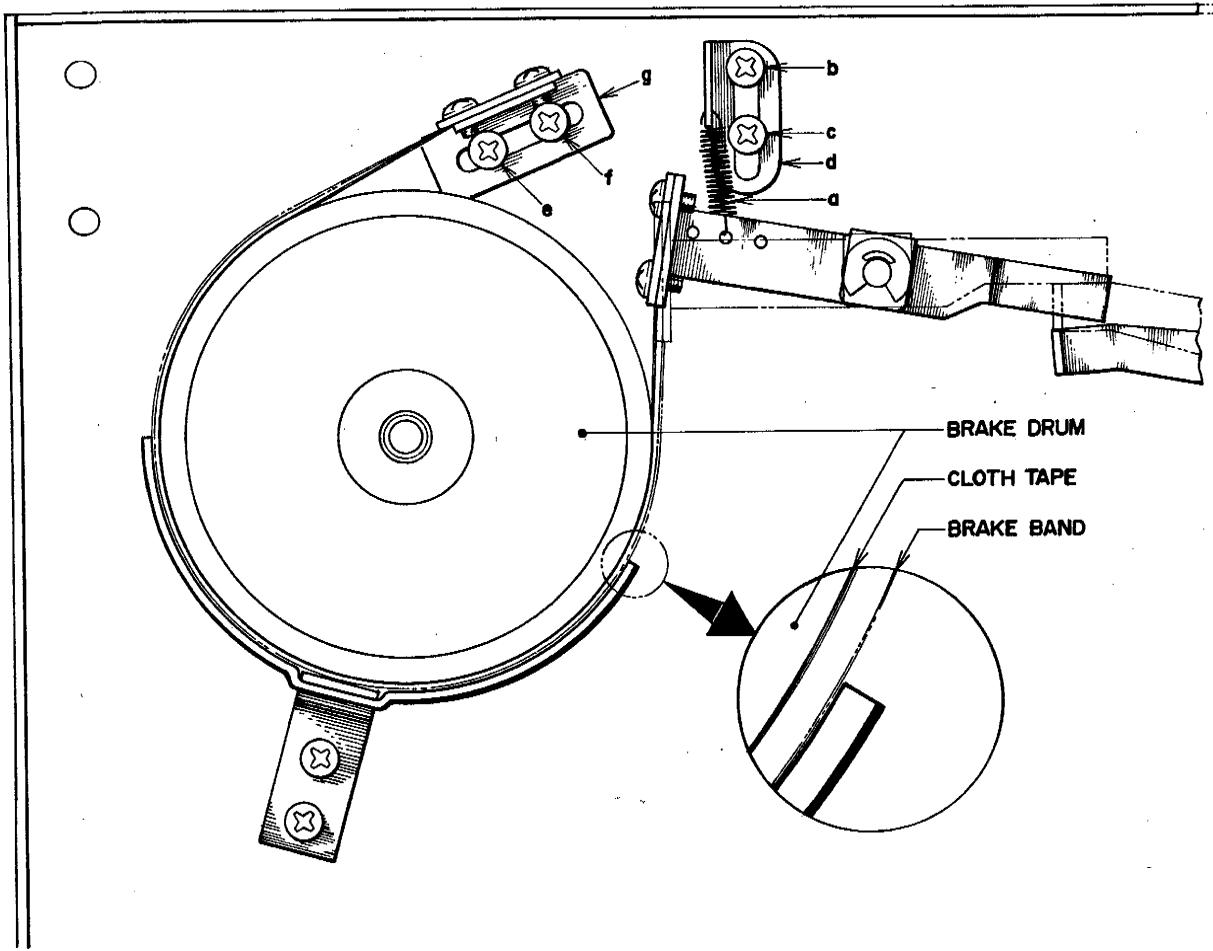


Fig. 15

1. REEL TABLE HEIGHT ADJUSTMENT

As shown in Fig. 12, loosen reel table height adjustment screws, and adjust reel table height by moving table in direction of arrow and positioning so that the tape winds in the center of the reel.

2. PINCH WHEEL PRESSURE MEASURING METHOD

Measure pinch wheel pressure with a tension gauge as shown in Fig. 13. Read the value on the tension gauge as soon as the pinch wheel separates from the tape and tape travel stops. Ideal pinch wheel pressure is 1.8 kg.

3. BRAKE TENSION ADJUSTMENT

- 1) As shown in Fig. 14, use a 60 mm diameter tape wound on a 5" reel and measure the brake tension with a tension gauge. Ideal brake tension is from 300 to 370 grams.
- 2) Brake tension adjustment can be made as follows: (Refer to Fig. 15)
 - a) Change position of suspended spring (a).
 - b) Loosen screws (b) and (c) and adjust the vertical position of spring suspension metal (d).
 - c) Loosen screws (e) and (f) and adjust the horizontal position of brake band suspension metal (g).
 - d) Only the left side is shown in Fig. 15, but the right side must be adjusted in the same way.

NOTE: In making brake tension adjustment, at all modes except stop mode, confirm that the brake band completely separates from the cloth tape on the brake drum. (Refer to Fig. 15)

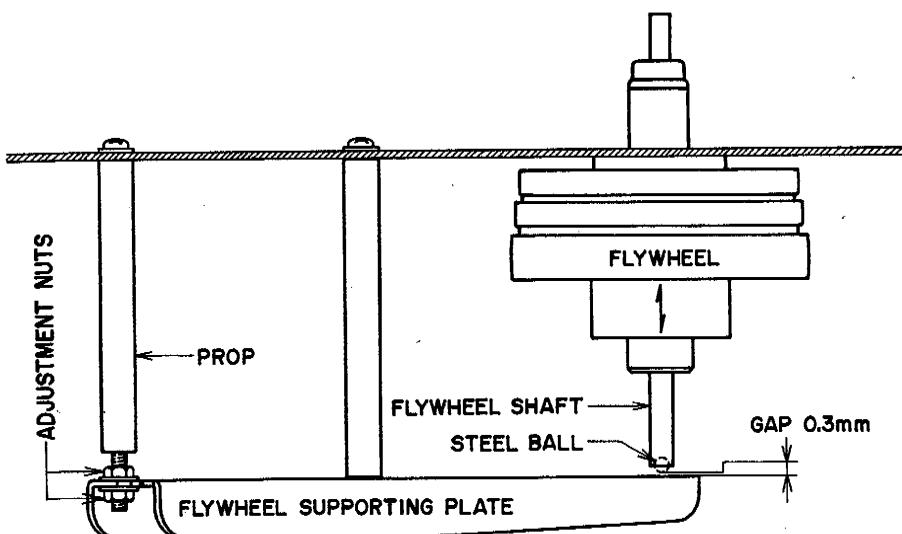


Fig. 16

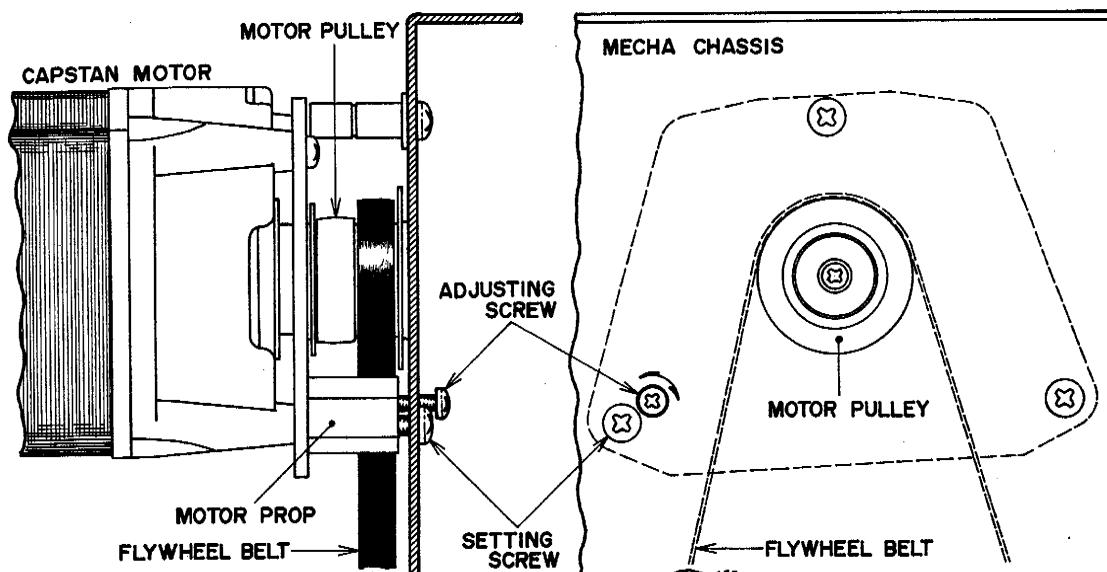


Fig. 17

4. LEFT AND RIGHT REEL MOTOR TENSION AT VARIOUS OPERATING MODES

Reel Motor Mode	Left Reel Motor	Right Reel Motor
FWD P.B.	60g	180g
REV P.B.	180g	60g
F.FWD	10g	450g
RWD	450g	10g

Chart 1

5. FLYWHEEL LOOSE PLAY ADJUSTMENT

Turn the adjustment nuts to obtain a 0.3 mm gap between the steel ball and flywheel supporting plate when the flywheel is moved in the direction of the arrow as shown in Fig. 16.

6. FLYWHEEL BELT POSITION ADJUSTMENT

- With capstan motor revolutions operating at Rev. mode, loosen setting screw and turn flywheel belt position adjustment screw until the flywheel belt comes to the center of the motor pulley. (Refer to Fig. 17)
- Tighten setting screw to maintain center positioning of flywheel belt at Rev. mode.
- Confirm that the flywheel belt runs on the center of the motor pulley at Fwd. mode also.

VI. HEAD ADJUSTMENTS

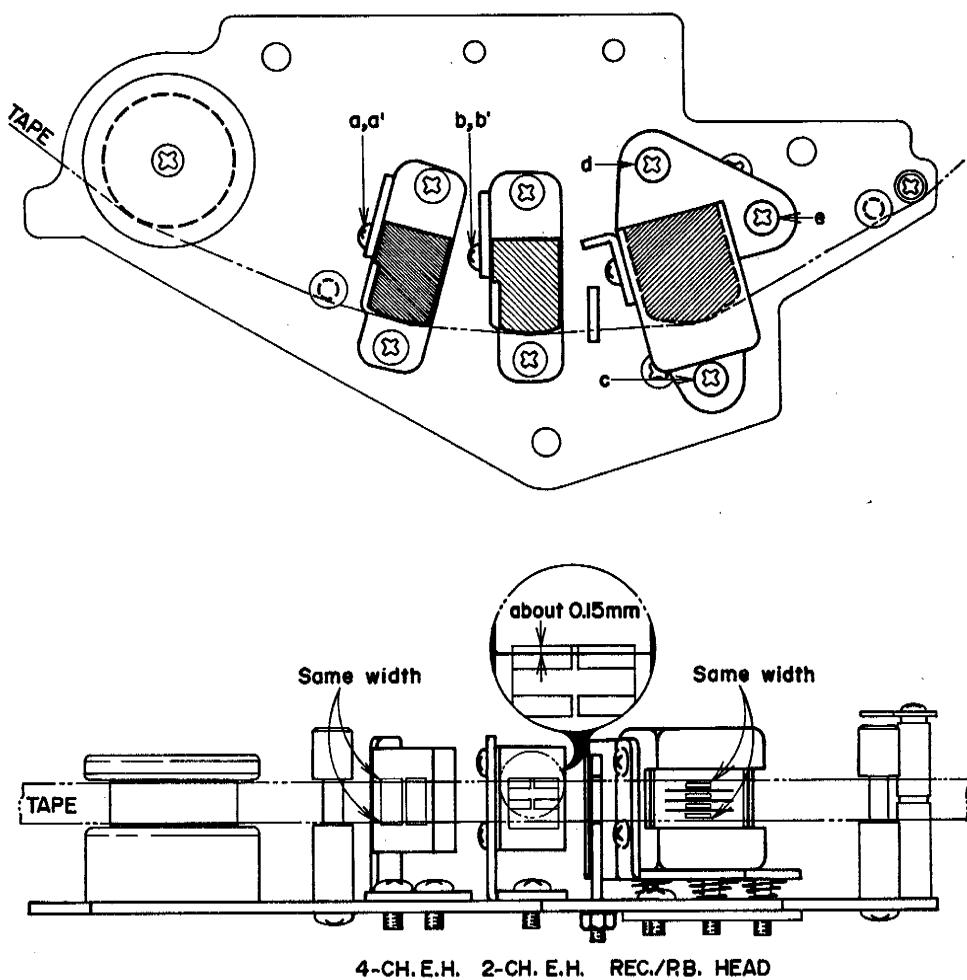


Fig. 18

1. HEAD HEIGHT ADJUSTMENT

(See Fig. 18)

1) Erase Head (2-CH)

Loosen Erase Head Screws (b) (b') and adjust Erase Head height so that the upper edge of the tape is about 0.15 mm lower than the upper Erase Head core.

2) Erase Head (4-CH)

Loosen Erase Head Screw (a) (a') and adjust Erase Head height so that the tape is equidistant in relation to the top and bottom edges of the Erase Head core (width between top edge of tape and top edge of head core is the same as the distance between the bottom edge of the tape and the bottom edge of the head core).

3) Recording/Playback Head

Adjust Recording/Playback Head Height by turning Recording/Playback Head Height Adjustment Screws (c) (d), to left and right until the width between the upper edge of Channel 1 Head Core and the upper edge of the tape is equal to the width between the lower edge of Channel 4 Head Core and the lower edge of the tape.


2. RECORDING/PLAYBACK HEAD SLANT ADJUSTMENT (See Fig. 18)

By turning Head Height Adjustment Screws (c) (d) to left and right, adjust so that the Recording/Playback Head contacts the tape surface at a right angle (head is at right angle in relation to tape surface).

3. RECORDING/PLAYBACK HEAD AZIMUTH ALIGNMENT ADJUSTMENT (See Fig. 18)

Connect a High Sensitivity V.T.V.M. to the Line Output and playback a Head Alignment Test Tape (8,000 Hz, 3-3/4 ips.). Adjust by turning Head Alignment Adjustment Screw (e) to left and right until the various line outputs reach maximum.

4. Repeat adjustments outlined in 1-3) as well as 2. and 3. above two or three times to obtain optimum adjusted condition.

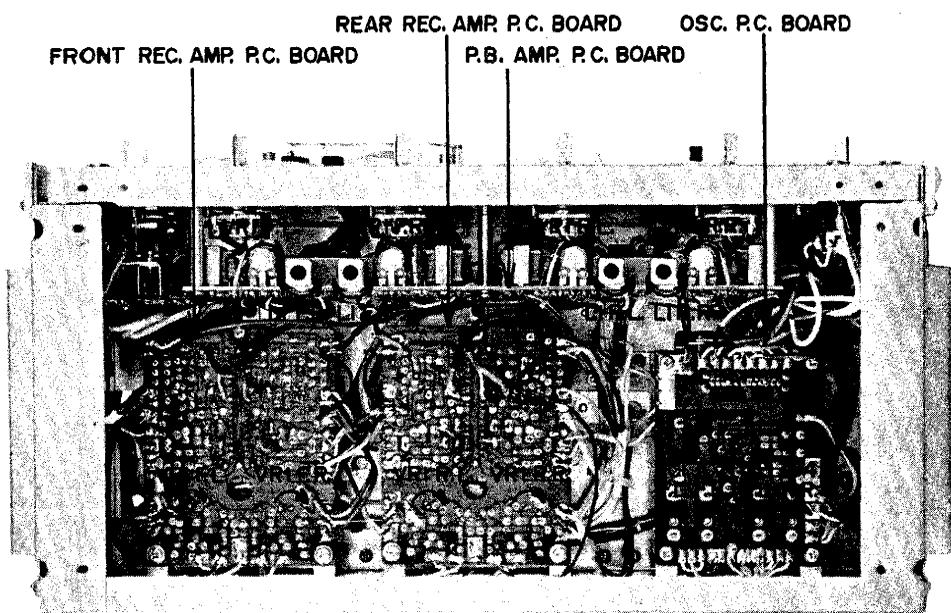

REF :

ARROW INDICATES MAX

F.L. FRONT LEFT CHANNEL
 F.R. FRONT RIGHT CHANNEL
 R.L. REAR LEFT CHANNEL
 R.R. REAR RIGHT CHANNEL

Fig. 19

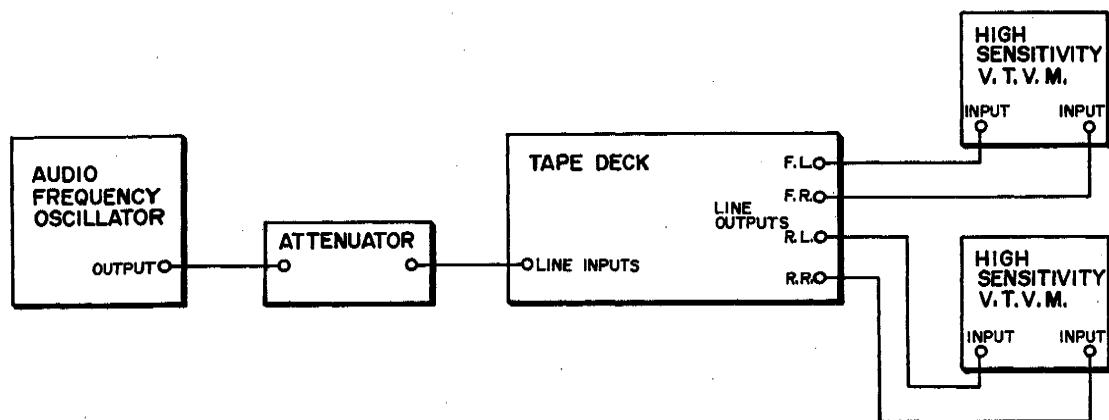


Fig. 20

VII. AMPLIFIER ADJUSTMENTS

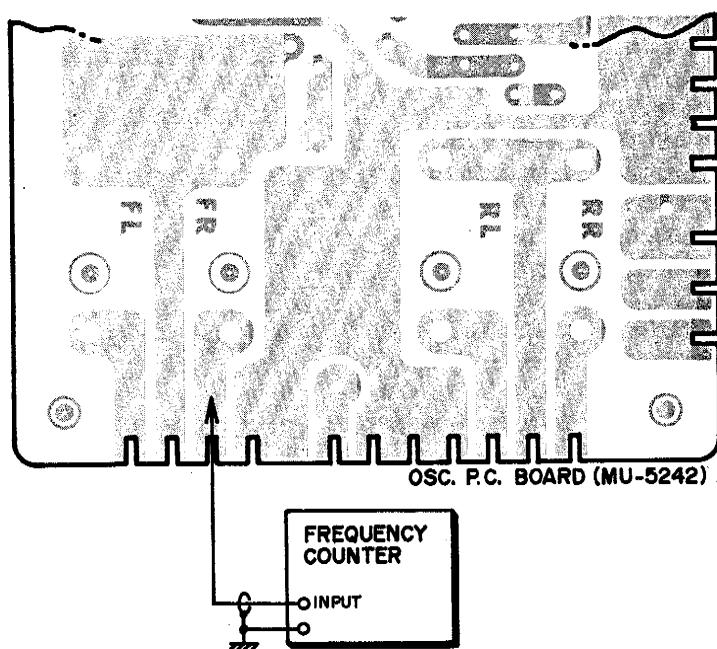


Fig. 21

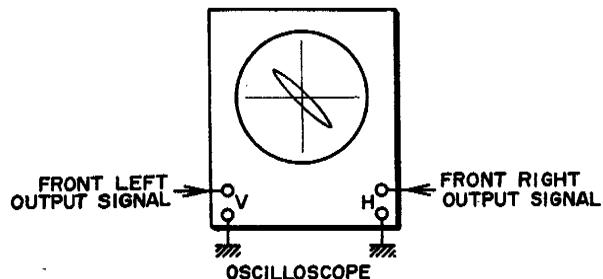


Fig. 22

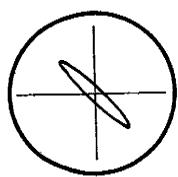


Fig. 23

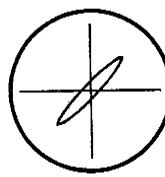


Fig. 24

Connect the various measuring instruments as shown in Fig. 20.

1. PLAYBACK LEVEL ADJUSTMENT

- 1) Set Tape Speed Selector to 7-1/2 ips.
- 2) Set Stereo Selector to 4-CH.
- 3) Playback a 250 Hz 7-1/2 ips. recorded test tape.
- 4) Adjust Playback Amp. P.C. Board semi-fixed resistor VR1 50 kB shown in Fig. 19 to obtain a 4 dB(1.228V) high sensitivity V.T.V.M. output level indication on each channel.

VR1 F.L.: FRONT LEFT CHANNEL
 VR1 F.R.: FRONT RIGHT CHANNEL
 VR1 R.L.: REAR LEFT CHANNEL
 VR1 R.R.: REAR RIGHT CHANNEL

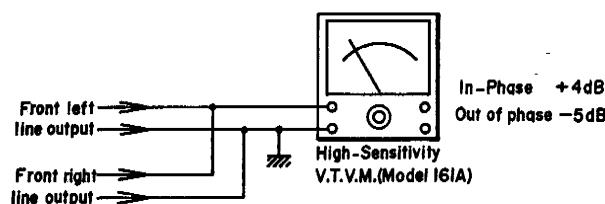


Fig. 25

2. RECORDING LEVEL ADJUSTMENT

- 1) Set Tape Speed Selector to 7-1/2 ips.
- 2) Set Stereo Selector to 4-CH.
- 3) Set all 4 Recording Level Controls VR1 through VR4 50 kA (F.L., F.R., R.L., and R.R.) to maximum (fully clockwise) and load a blank tape.
- 4) Set tape deck to recording mode and supply a 1,000 Hz sine wave signal to the line input from the audio frequency oscillator.
- 5) Adjust the attenuator to obtain a 4 dB(1.228V) high sensitivity V.T.V.M. output level indication on all 4 channels.
- 6) Under the condition described above, record a 1,000 Hz 4 dB signal for a few seconds on the blank tape, and playback this recording.
- 7) Adjust Recording Amp. P.C. Board semi-fixed resistor VR1 5 kB shown in Fig. 19 so that at playback time, the high sensitivity V.T.V.M. line output level indication is 4 dB(1.228V) on each channel.

VR1 F.L.: FRONT LEFT CHANNEL
VR1 F.R.: FRONT RIGHT CHANNEL
VR1 R.L.: REAR LEFT CHANNEL
VR1 R.R.: REAR RIGHT CHANNEL

3. BIAS LEAK ADJUSTMENT

- 1) Following recording level adjustment, remove the line input and set tape deck to recording mode.
- 2) Switch the high sensitivity V.T.V.M. range to -30 dB range.
- 3) Adjust the core of Playback Amp. P.C. Board Coil L1 22 mH to obtain minimum high sensitivity V.T.V.M. indication on each channel.
- 4) Bias leak must be less than -26 dB at 4-CH, and less than -16 dB at 2-CH.

4. FREQUENCY RESPONSE ADJUSTMENT

- 1) Set Tape Speed Selector to 7-1/2 ips.
- 2) Set Stereo Selector to 4-CH.
- 3) Set Tape Selector to NORMAL.
- 4) Turn all Recording Level Controls (VR1 through VR4, 50 kA) to maximum (fully clockwise) and load a blank tape.
- 5) Set tape deck to recording mode and supply a 1,000 Hz sine wave to the line input from Audio Frequency Oscillator and adjust the attenuator to obtain a -16 dB(120 mV) high sensitivity V.T.V.M. line output level indication on all 4 channels.
- 6) Switch the oscillation frequency of the Audio Frequency Oscillator from the condition described in Items 4-5) above to 10,000 Hz.

- 7) Adjust OSC. P.C. Board Trimmer Condensers TC1 through TC4 shown in Fig. 19 to obtain the same V.T.V.M. level indication on all channels at both the 1,000 Hz and 10,000 Hz frequencies.

TC1: FRONT LEFT CHANNEL
TC2: FRONT RIGHT CHANNEL
TC3: REAR LEFT CHANNEL
TC4: REAR RIGHT CHANNEL

5. RECORDING BIAS FREQUENCY MEASURING METHOD

As shown in Fig. 21, connect a Frequency Counter to the output side of the trimmer condenser. Set tape deck to recording mode and take a frequency counter reading. Specified recording bias frequency is 82 ± 5 kHz.

6. 4-CHANNEL PHASE CHECK

CHECK A

- 1) Connect front left signal and front right signal line outputs to the vertical and horizontal input of an Oscilloscope. (See Fig. 22)
- 2) Playback a 250 Hz 7-1/2 ips. pre-recorded test tape.
- 3) If front left signal and front right signal is in phase, the waveform on oscilloscope screen will appear as shown in Fig. 23.
- 4) If front left signal and front right signal is out of phase (180° phase inverted), the waveform on oscilloscope screen will appear as shown in Fig. 24.
- 5) Make the same phase check on front left/rear left and rear left/rear right signals.
- 6) In case out of phase signals exist, head connection is reversed or playback head adjustment is necessary.

CHECK B

- 1) Playback a 250 Hz 7-1/2 ips. pre-recorded test tape.
- 2) Connect front left signal and front right signal line outputs in parallel and connect to the inputs of a high sensitivity V.T.V.M. (See fig. 25)
- 3) If front left signal and front right signal is in phase, the high sensitivity V.T.V.M. indication will be about 4 dB.
- 4) If front left signal and front right signal is out of phase (180° phase inverted), the high sensitivity V.T.V.M. indication will be about -5 dB.
- 5) Make the same phase check on front left/rear left and rear left/rear right signals.

VIII. D. C. RESISTANCE OF VARIOUS COILS


D.C. Resistance shown in chart are average values.

Parts	Designation	D.C. Resistance
CAPSTAN MOTOR	HM-12-16MC	Between PNK-RED 130Ω Between PNK-BRN 180Ω Between GRN-GRY 360Ω Between GRN-YLW 370Ω
REEL MOTOR	24XO-MR	Between RED-BLU 74Ω Between GRN-YLW 166Ω
REVERSE SOLENOID	0730 THTI3	290Ω
REVERSE RELAY	MY4-O-US-AD4 DC24V	650Ω
HEADPHONE OUTPUT TRANSFORMER	N19-5921S	Primary 230Ω Secondary 0.9Ω
OSCILLATOR COIL	OT-204	Between 1-3 0.3Ω Between 4-6 0.7Ω Between 7-9 8.2Ω
FULL TRACK ERASE HEAD	EF-210	2.8Ω
4 TRACK ERASE HEAD	E4-260	1.6Ω
4 TRACK RECORDING/PLAYBACK HEAD	P4-50	160Ω


Chart 2

IX. COMPOSITE VIEWS OF COMPONENTS


1. SYSTEM CONTROL P.C. BOARD MU-1202

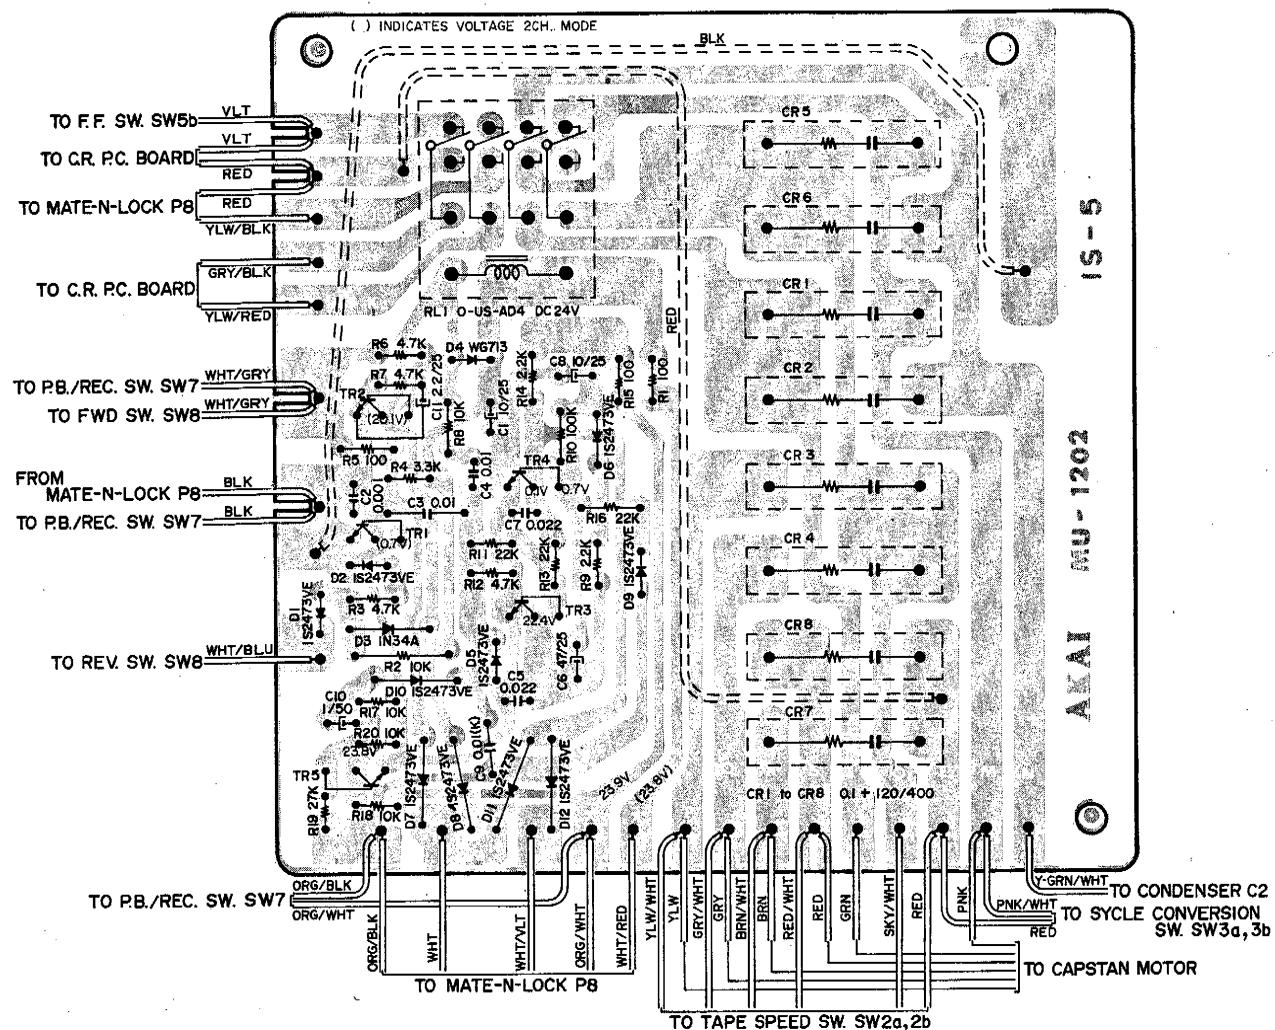


2. CR P.C. BOARD MU-1007

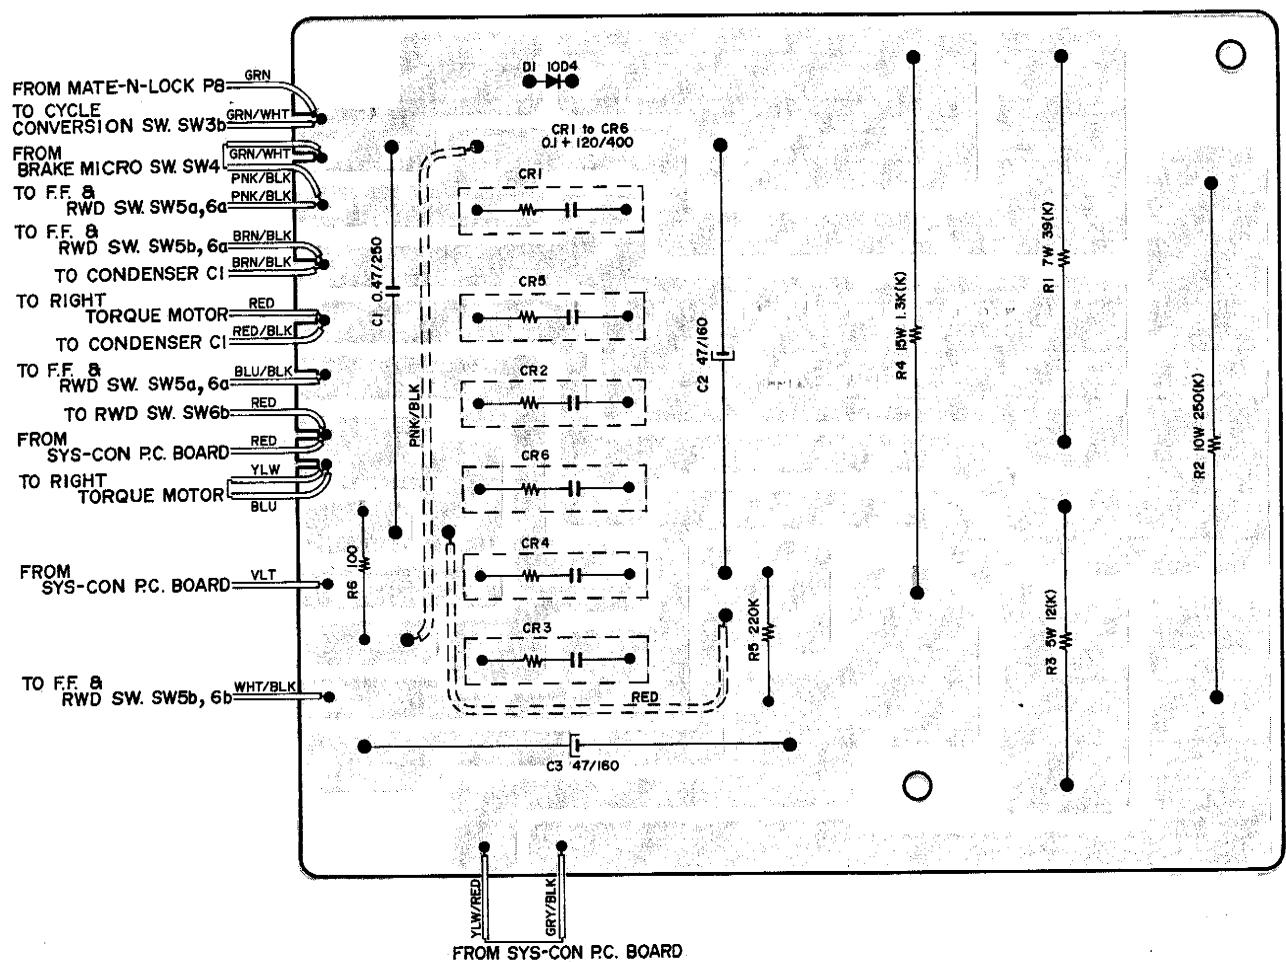


3. PB. AMP. P.C. BOARD MU-5239

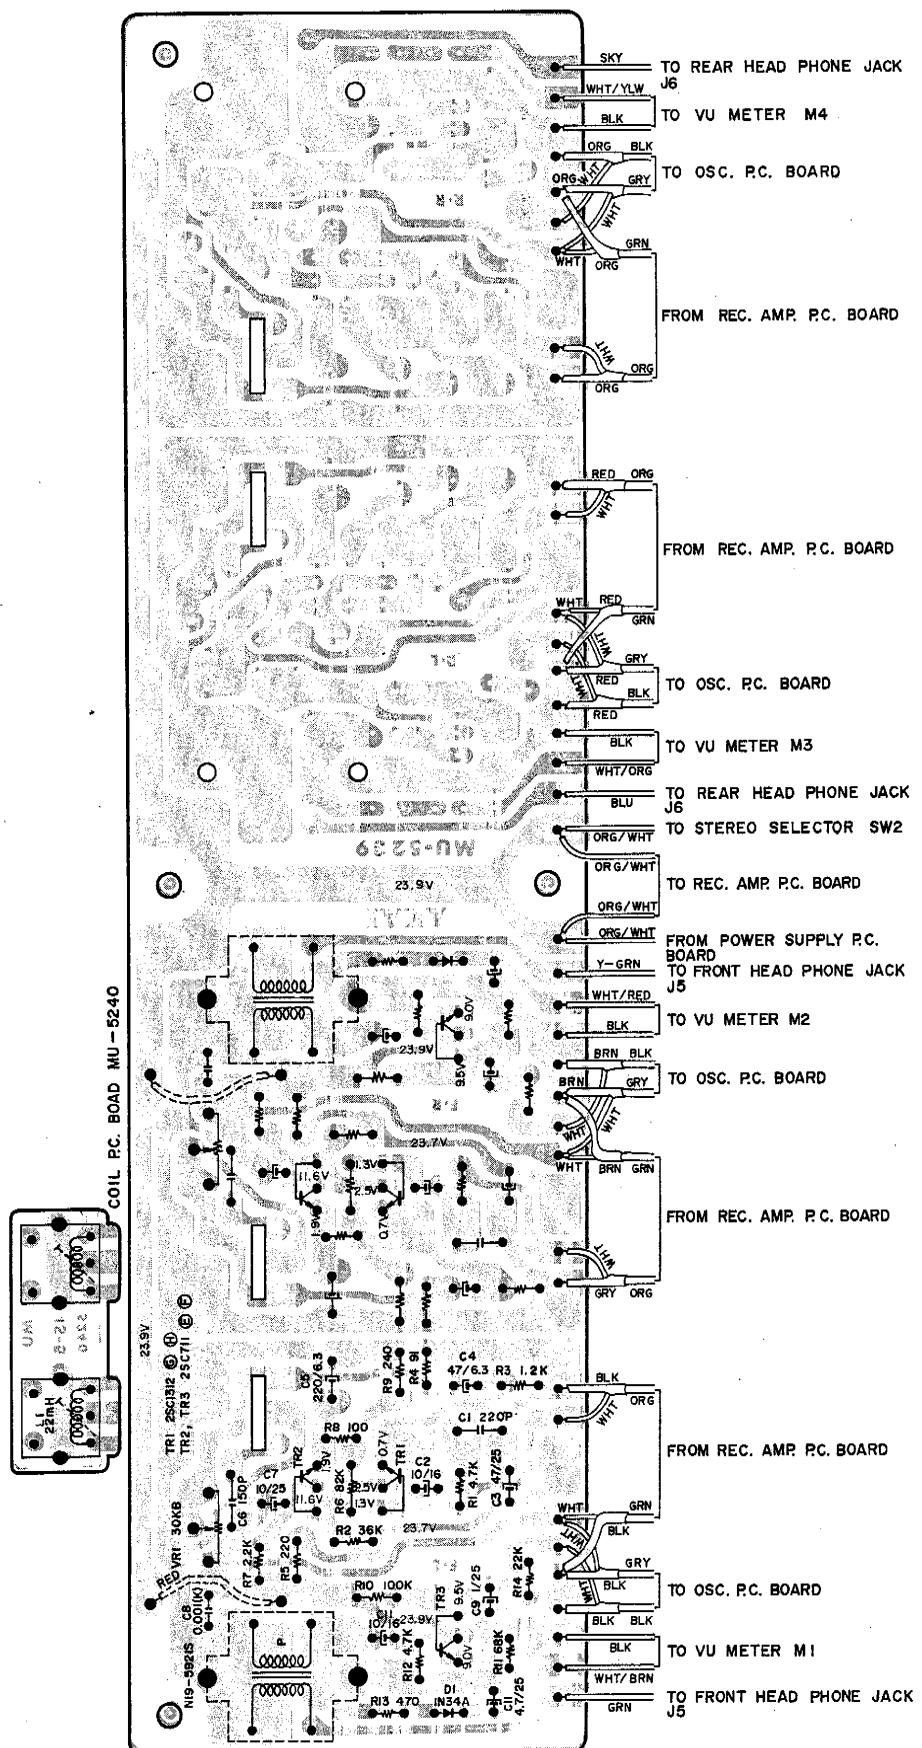


4. REC. AMP. P.C. BOARD MU-5238 (FRONT)

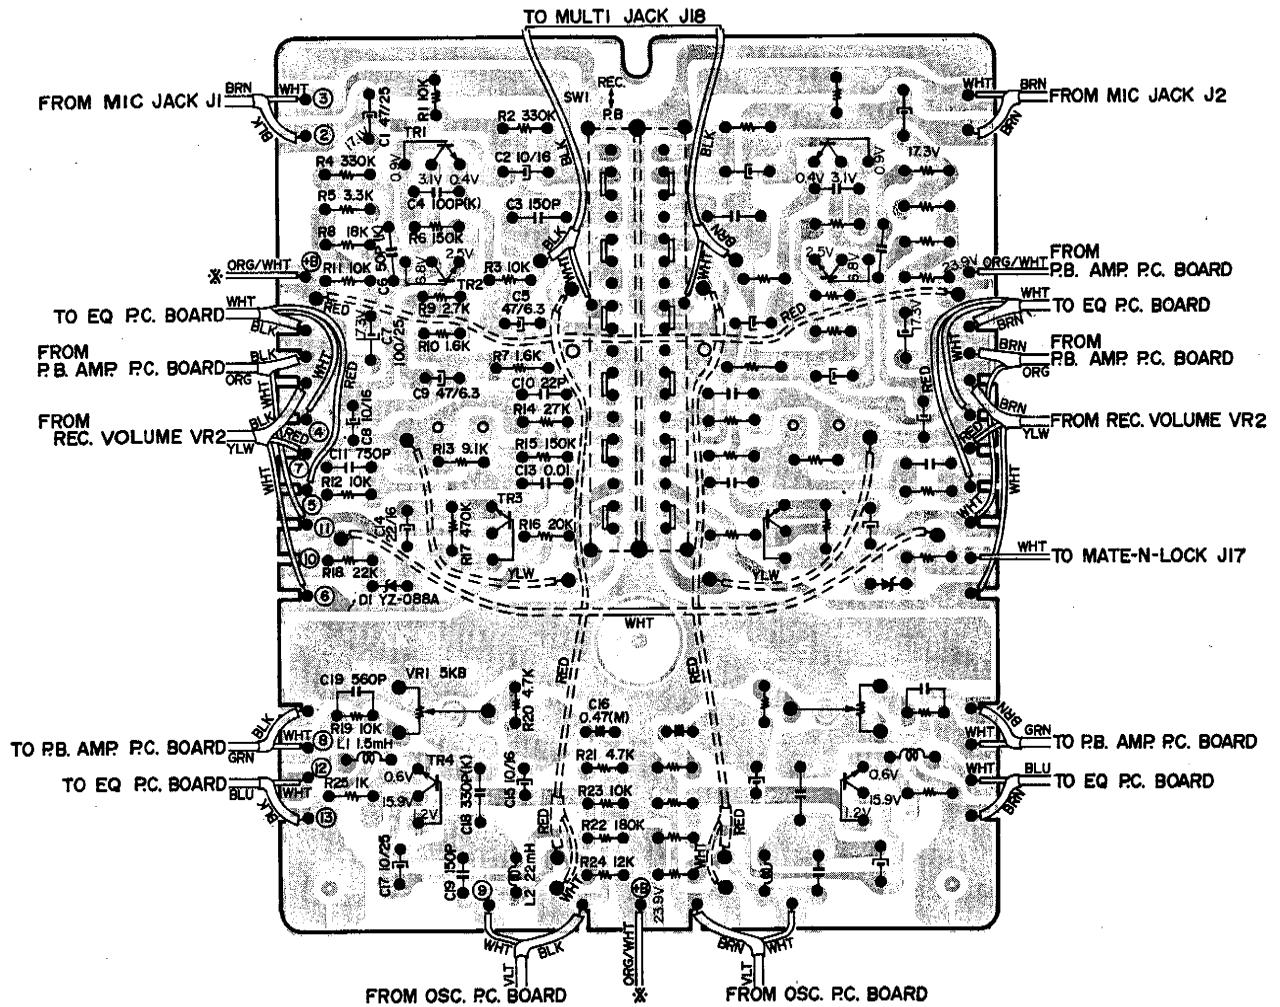


5. REC. AMP. P.C. BOARD MU-5238 (REAR)

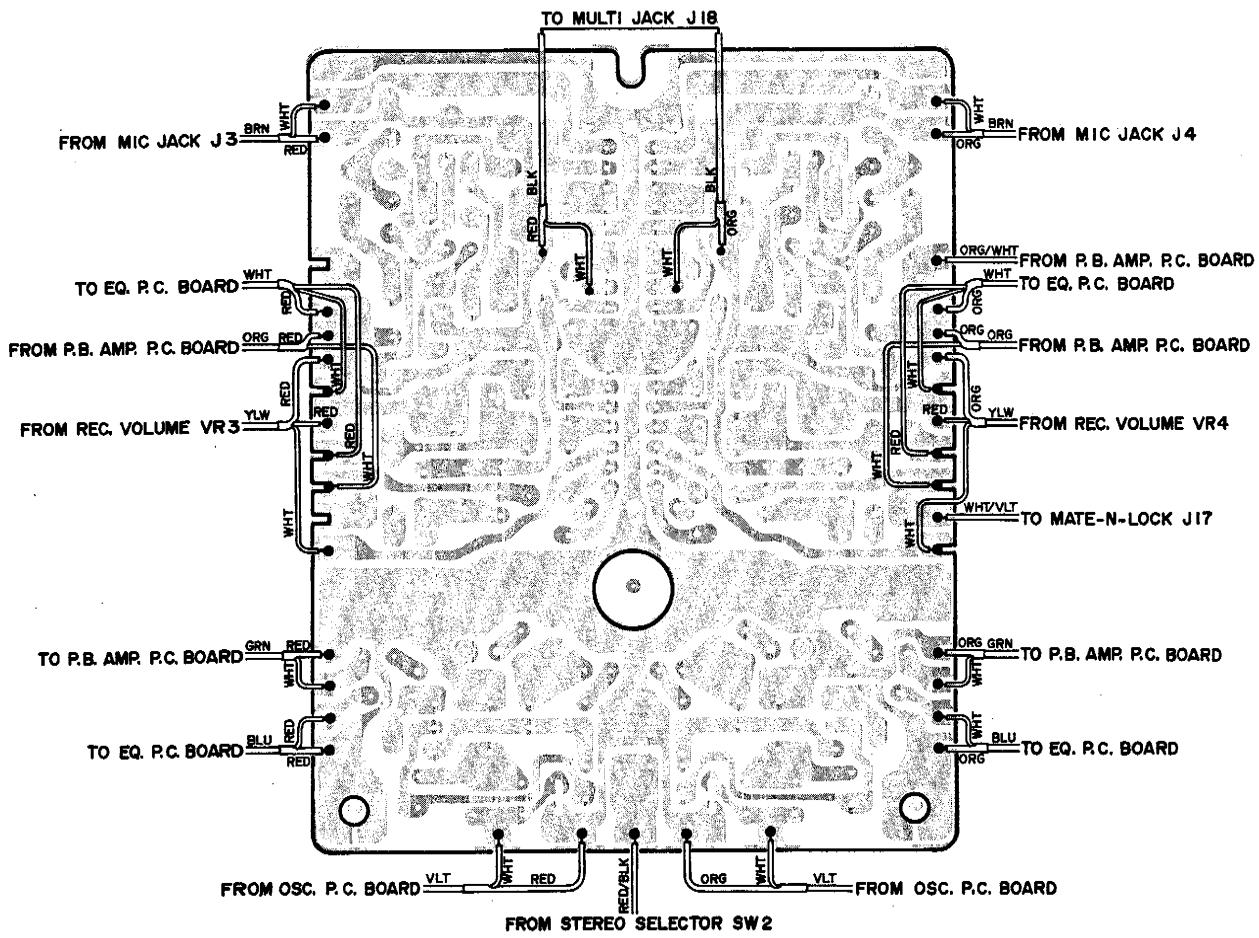


6. EQ. P.C. BOARD MU-5241

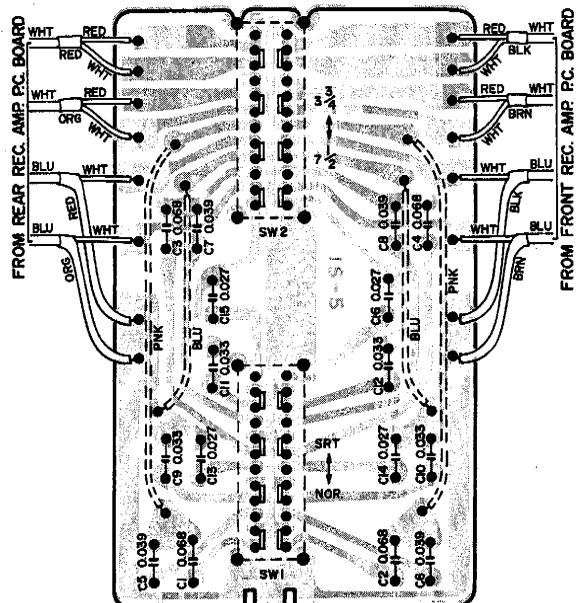


7. OSC. P.C. BOARD MU-5242

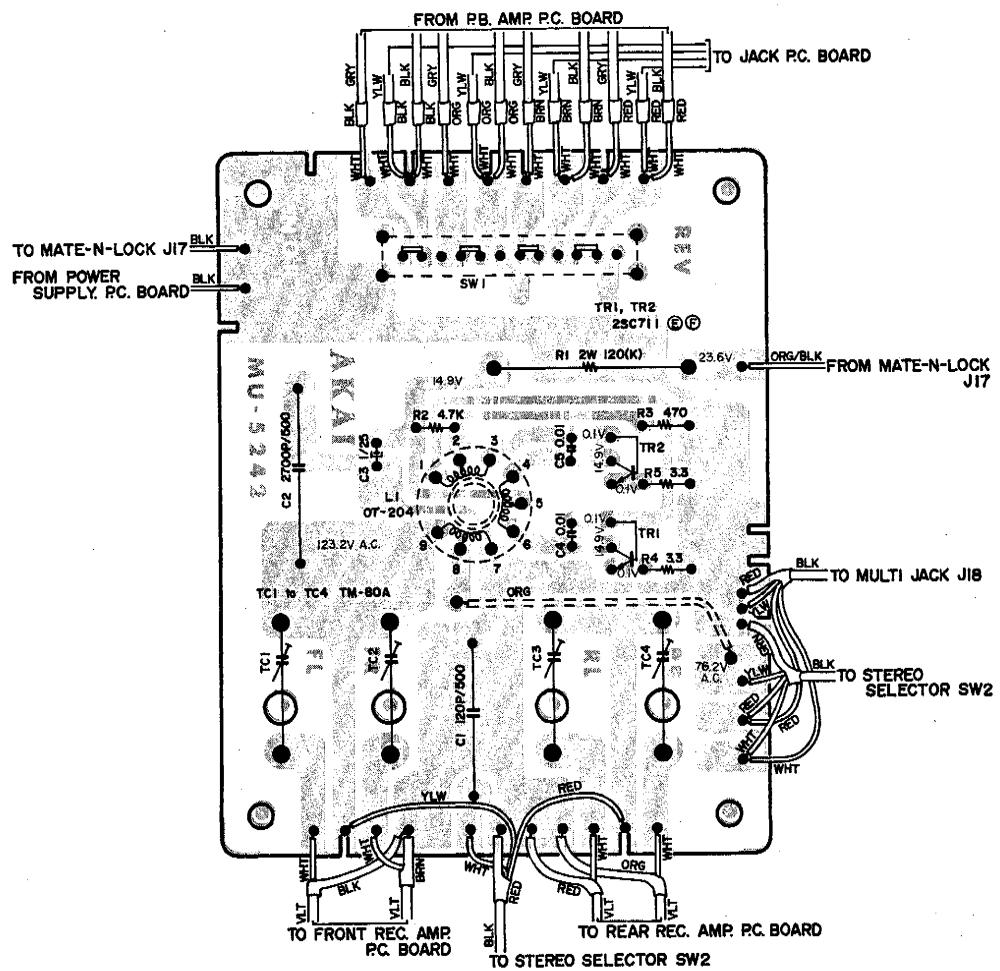

8. POWER SUPPLY P.C. BOARD MU-5017

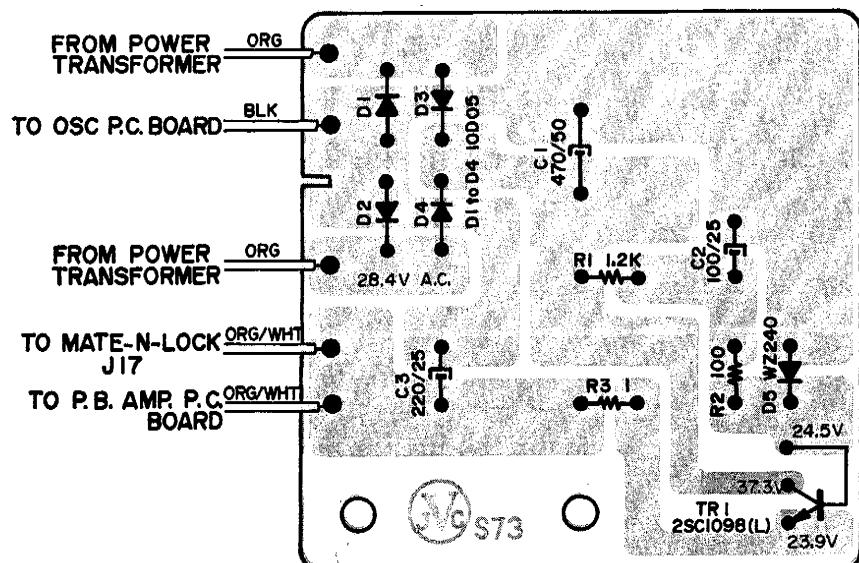

9. JACK P.C. BOARD MU-5237

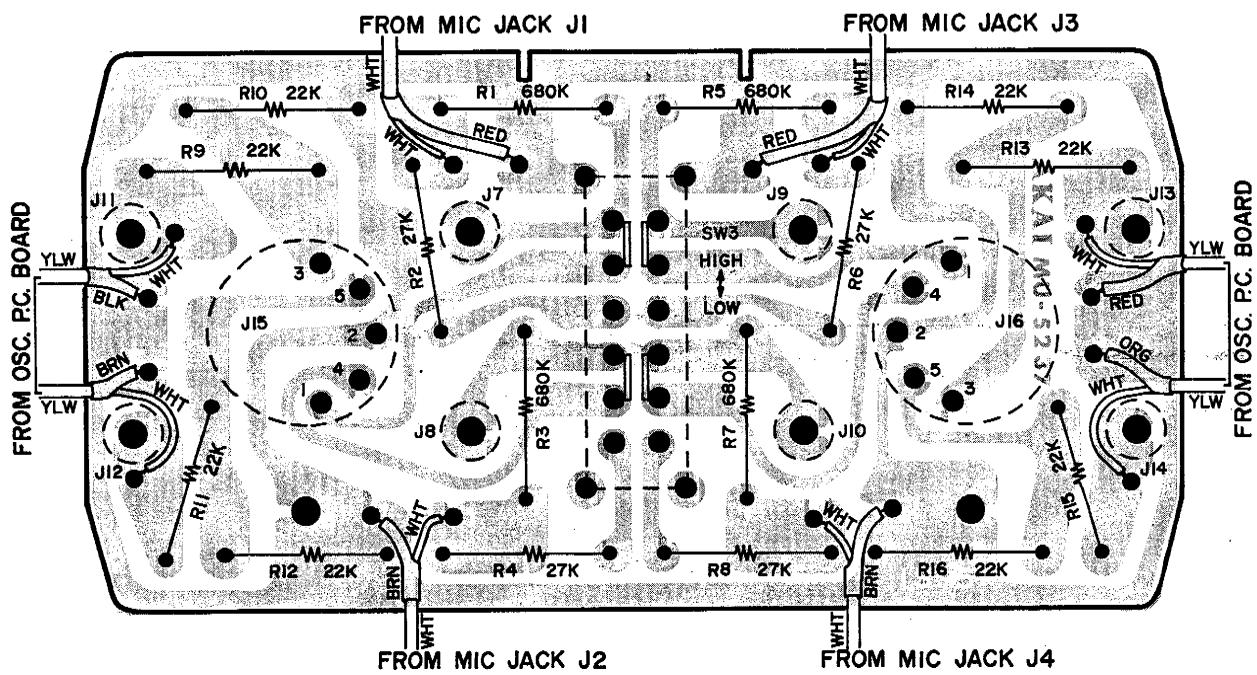

SECTION 2

PARTS LIST


TABLE OF CONTENTS

FIG. 1	HEAD BLOCK	36
FIG. 2	REEL MOTOR & REEL TABLE BLOCK	38
FIG. 3	MAIN MOTOR BLOCK	40
FIG. 4	FLYWHEEL BLOCK	42
FIG. 5	SWITCH BLOCK	44
FIG. 6	MECHANISM ASSEMBLY BLOCK	45
FIG. 7	SYSTEM CONTROL P.C. BOARD (MU-1202) BLOCK	48
FIG. 8	CR P.C. BOARD (MU-1007) BLOCK	49
FIG. 9	REC. AMP. P.C. BOARD (MU-5238) BLOCK	50
FIG. 10	P.B. AMP. P.C. BOARD (MU-5239) BLOCK	51
FIG. 11	EQ. P.C. BOARD (MU-5241) BLOCK	52
FIG. 12	OSC. P.C. BOARD (MU-5242) BLOCK	52
FIG. 13	POWER SUPPLY P.C. BOARD (MU-5017) BLOCK	53
FIG. 14	AMPLIFIER ASSEMBLY BLOCK	54
FIG. 15	FINAL ASSEMBLY BLOCK.....	57
INDEX	58

HOW TO USE THIS PARTS LIST

1. This parts list is compiled by various individual blocks based on assembly process.
2. When ordering parts, please describe parts number, serial number, and model number in detail.
3. How to read list.

The reference number corresponds with illustration or photo number of that particular parts list.

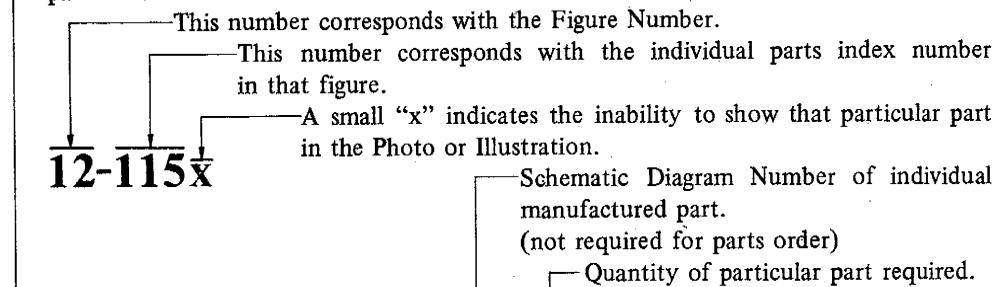

Ref. No.	Parts No.	Description	Schematic No.	Q'ty
----------	-----------	-------------	---------------	------

FLYWHEEL BLOCK #13

12-115x	800425	Flywheel Block Assy. Comp.	RDG#13	1
12-116	244506	Flywheel Only	RD-233	1
12-117x	244754	Felt, Flywheel	RD-275	1
12-118	251324	Main Metal Case	RD-236	1
12-119	253080	Main Metal	RD-237	1

4. The symbol numbers shown on the P.C. Board list can be matched with the Composite Views of components of the Schematic Diagram or Service Manual.
5. The indications of Resistors and Capacitors in the photos of P.C. Board are being eliminated.
6. The shape of the parts and parts name, etc. can be confirmed by comparing them with the parts shown on the Electrical Parts Table of P.C. Board.
7. Both the kind of part and installation position can be determined by the Parts Number. To determine where a parts number is listed, utilize Parts Index at end of Parts List.
It is necessary first of all to find the Parts Number. This can be accomplished by using the Reference Number listed at right of parts number in the Parts Index. (meaning of ref. no. outlined in Item 3 above).
8. Utilize separate "Price List for Parts" to determine unit price. The most simple method of finding parts Price is to utilize the reference number.

FIG. 1 ILLUSTRATION OF HEAD BLOCK


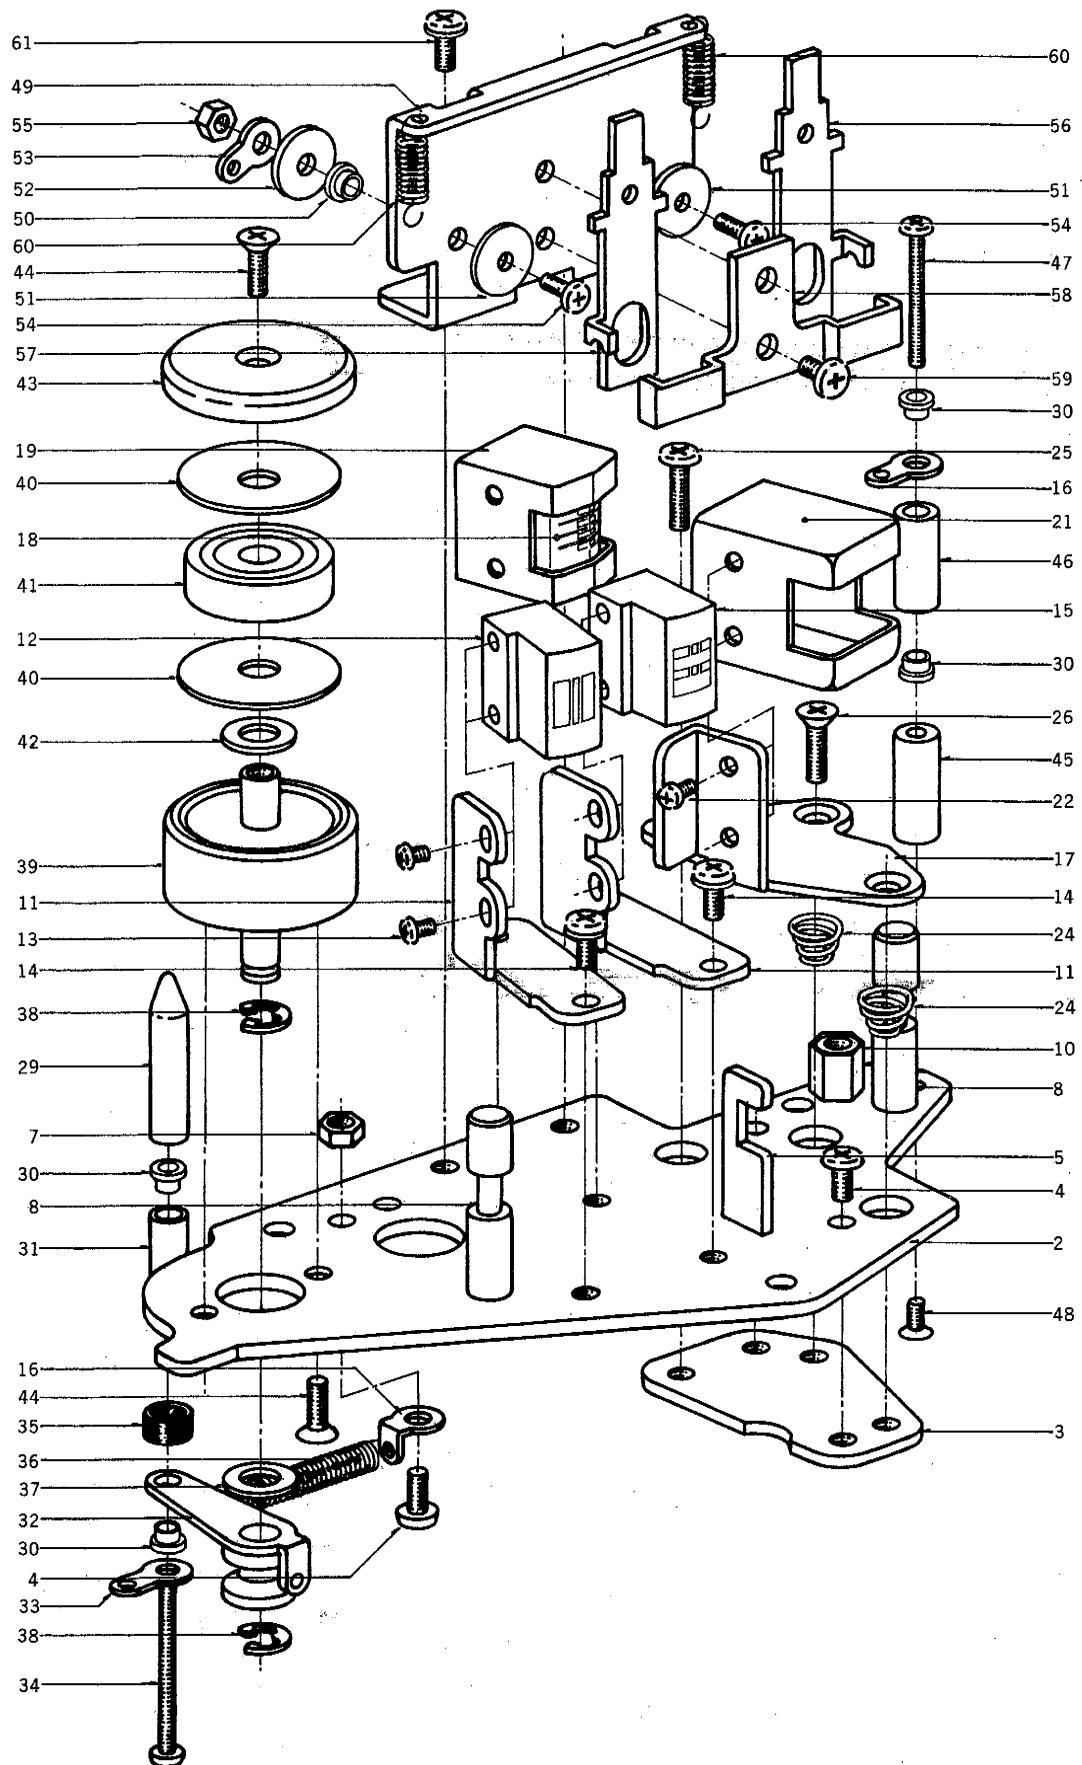


FIG. 2 ILLUSTRATION OF REEL MOTOR & REEL TABLE BLOCK

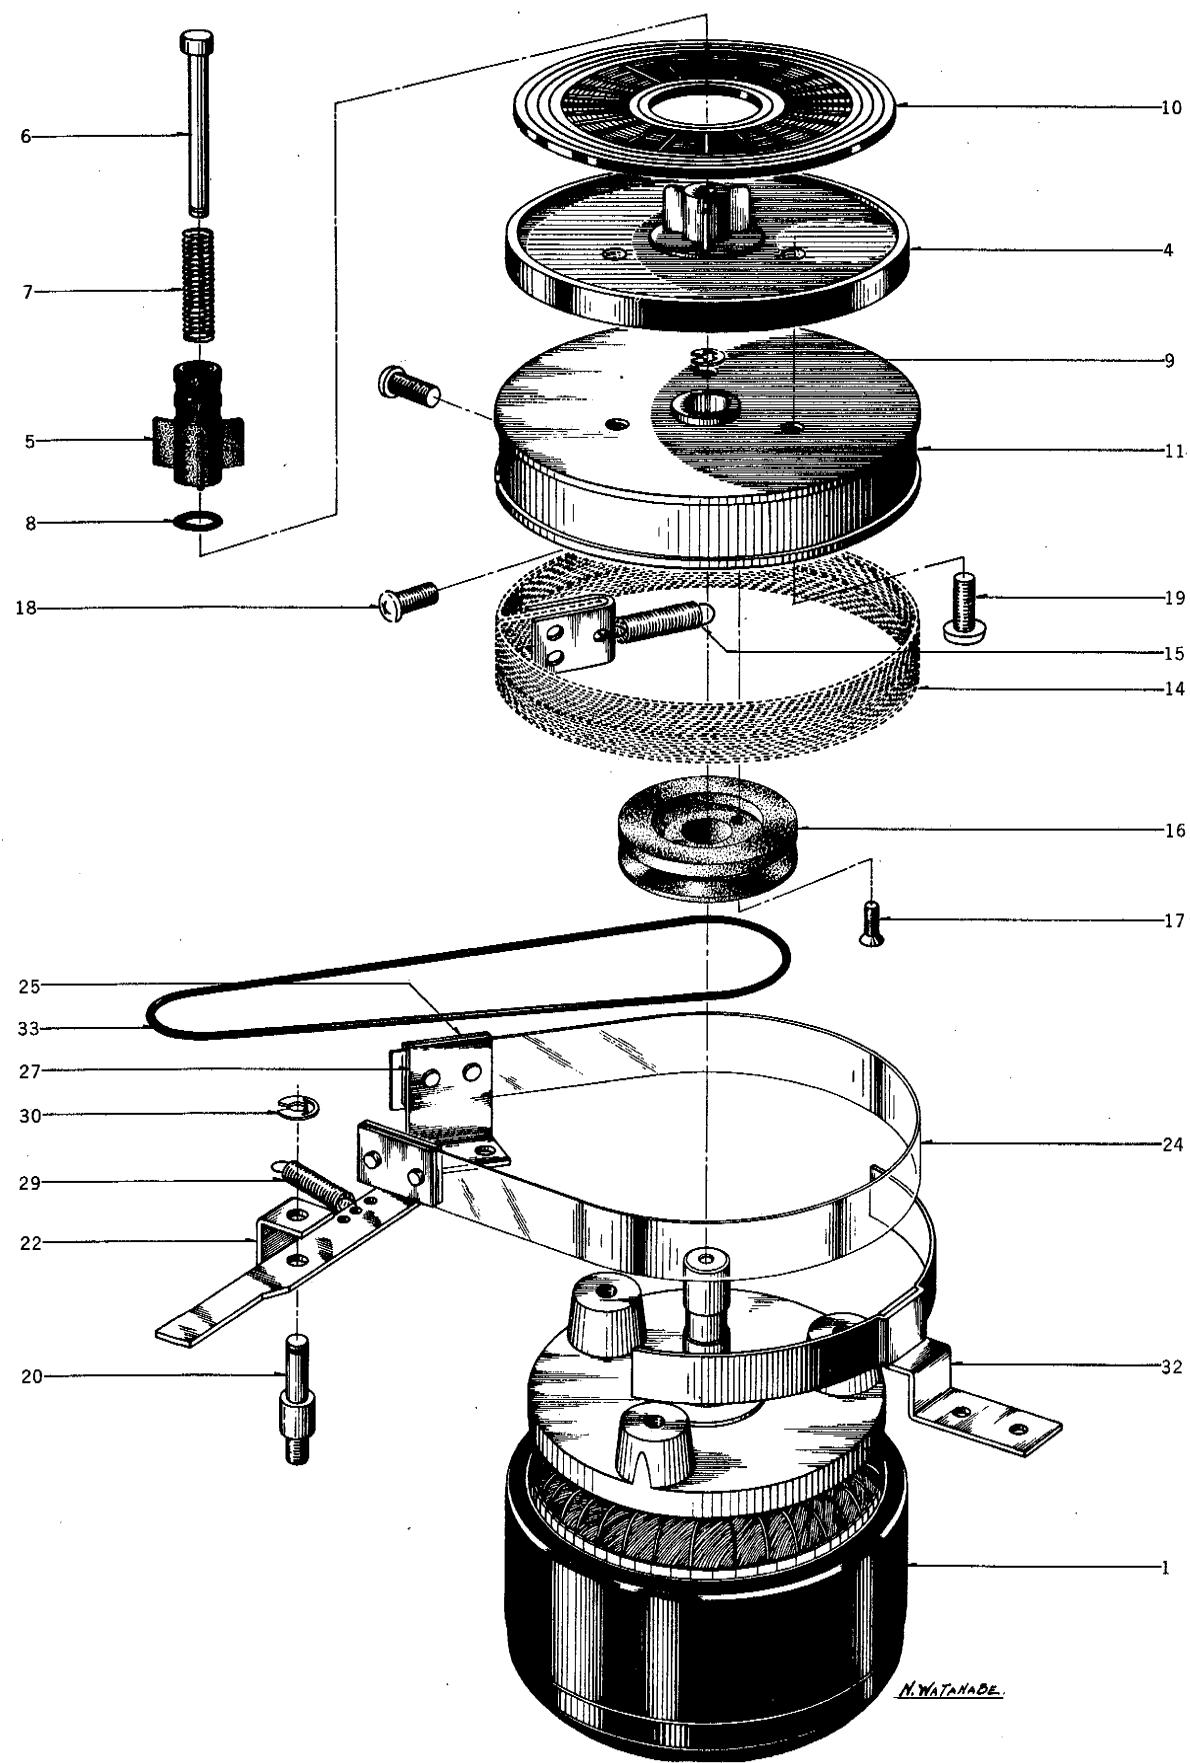

N. WATANABE

REEL MOTOR & REEL TABLE BLOCK


Ref. No.	Parts No.	Description	Schematic No.	Q'ty
2-1	BM314741	Reel Motor Block (24X0-2)	Comp.	MC, MS, MR, KD 1
2-2x	BR317395	Supply Reel Table Comp.	MU, MC, MR	1
2-3x	BR317384	Take-up Reel Table Comp.	MU, MR	1
2-4	MT317441	Reel Table, MR	MR-215	1
2-5	MT255420	Reel Retainer	3R-102	1
2-6	MS342000	Reel Shaft	3R-108	1
2-7	ZG255633	Reel Spring	3R-109	1
2-8	MT297663	3R 'O' Ring 2.9x1.65M	3R-139	1
2-9	ZW270088	'E' Ring 1.9M	6-1-9	1
2-10	MT317463	Reel Table Rubber, MR	MR-250	1
2-11	MT317452	Brake Drum (R) (Take-up)	MR-216	1
2-12x	MT325473	Brake Drum (L) (Supply)	MR-216	1
2-13x	ZW273778	Earth Lug M3		1
2-14	MT436860	Brake Cloth Comp.	MR-269	1
2-15	ZG317496	Felt Tension Spring	MR-260	1
2-16	MR317507	Counter Pulley (Take-up)	MR-217	1
2-17	ZS365973	Screw, countersunk head		
		2.3x12		2
2-18	ZS424056	Screw, pan head 4x10		2
2-19	ZS413785	Screw, binding head 3x12		3

MECH. ASSEMBLY BLOCK

2-20	MH317373	Brake Lever Prop	MR-102	2
2-21x	ZW416698	Nut M4		2
2-22	ML314976	Brake Lever A (Take-up)	MR-210	1
2-23x	ML396810	Brake Lever B (Supply)	KD-1038	1
2-24	MT314987	Brake Band	MR-213	2
2-25	MZ314998	Brake Band Retaining Plate	MR-212	4
2-26x	ZS417137	Screw, binding head 3x4		6
2-27	MZ315000	Brake Band Support	MR-214	2
2-28x	ZS425981	Screw, binding head 3x3		2
2-29	ZG315011	Brake Lever Spring	MR-116	2
2-30	ZW290283	'U' Ring 2.85M	6-1-1	2
2-31x	ZS323728	Screw, binding head 3x5		8
2-32	MZ317406	Brake Band Guide, w/base	MR-120	2
2-33	MB527556	Counter Belt D93x1.5	ND-1022	1

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 3 ILLUSTRATION OF MAIN MOTOR BLOCK

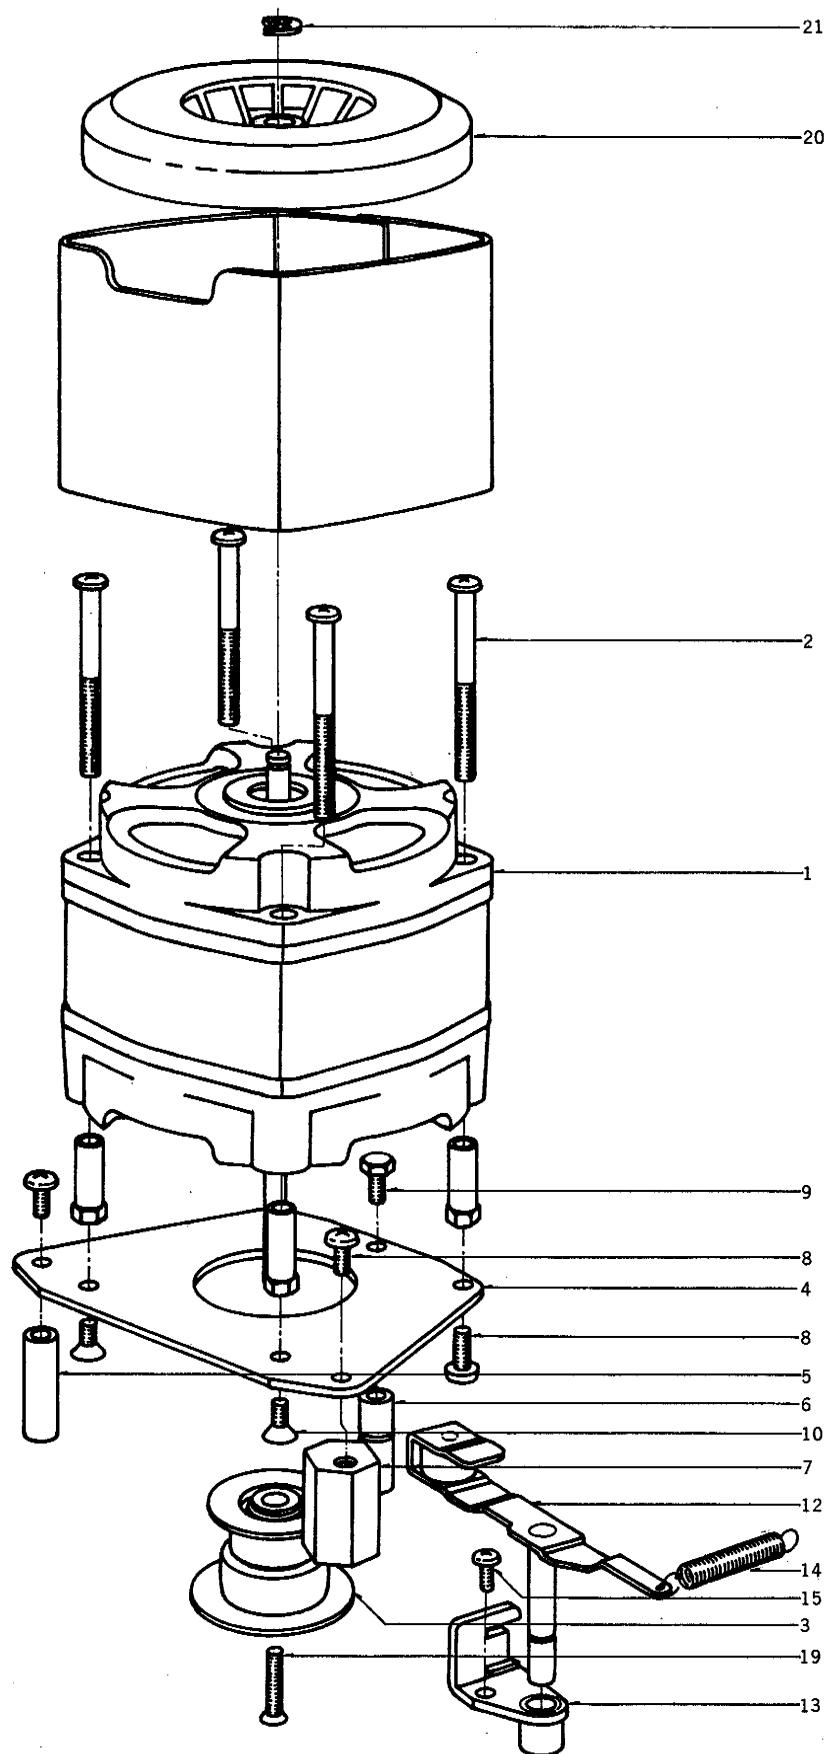


MAIN MOTOR BLOCK

Ref. No.	Parts No.	Description	Schematic No.	Q'ty
MAIN MOTOR BLOCK				
3-1	BM563196	Main Motor Block (HM2-16MU)	Comp. MU	1
3-2	ZS427037	Screw, pan head 4x50, w/washer		4
3-3	MR540876	Motor Pulley Comp.	MC-7201	1
3-4	MZ316293	Motor Mt. Plate, MR	MR-717	1
3-5	MH254160	Motor Prop A	24X-730	1
3-6	MZ254182	Motor Prop B	24X-731	1
3-7	MH316304	Motor Prop, MR	MR-706	1
3-8	ZS424056	Screw, pan head 4x10		4
3-9	ZS272395	Motor Prop Retaining Screw,	M-7	1
3-10	ZS427026	Screw, countersunk head 4x10		2

BELT CHANGE LEVER BLOCK

3-11x	BL555344	Belt Change Lever Block Comp.	MU, MC-2	1
3-12	ML540990	Belt Change Lever, w/roller	MC-1207	1
3-13	ML541001	Belt Change Lever Stopper, w/metal	MC-1208	1
3-14	ZG217337	Belt Return Spring	4TR-224	1
3-15	ZS417150	Screw, pan head 4x6		1
3-16x	ZG217394	Belt Change Spring B	MH-125	1
3-17x	ZW260054	Washer (SUP)D6.1x10x0.25t		1
3-18x	ZW290283	'U' Ring 2.85M	6-1-1	1
3-19	ZS203016	Screw, oval countersunk head 3x15		1
3-20	SZ529108	Main Motor Fan	ND-7010	1
3-21	ZW270134	'E' Ring 5M	6-1-9	1

FIG. 4 ILLUSTRATION OF FLYWHEEL BLOCK

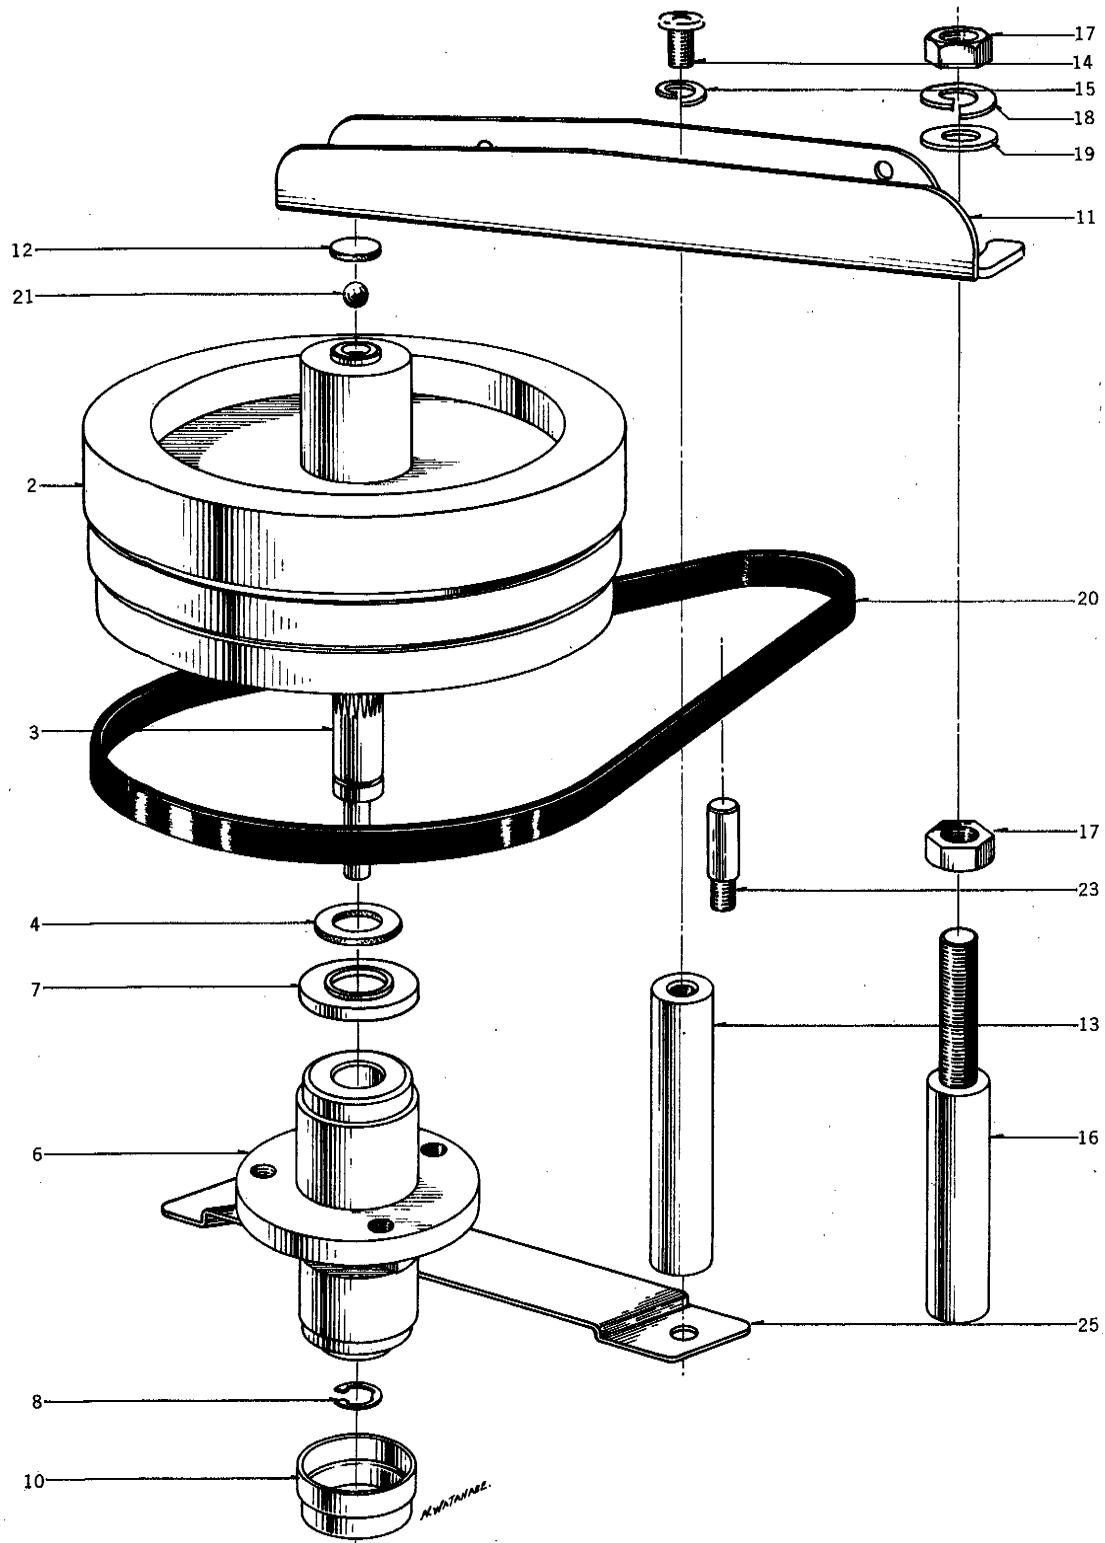

FLYWHEEL BLOCK


Ref. No.	Parts No.	Description	Schematic No.	Q'ty
4-1x	BF476550	Flywheel Block Comp.	MS-2,3, MR-2	1
4-2	MI296245	Flywheel 24	MH-202	1
4-3	MS476572	Main Shaft, D6	MR-2005	1
4-4	ZW447208	Flywheel Thrust B	D7.9x13x0.5t	1
4-5x	ZS373577	Set Screw, hexagon socket 5x6(flat)	101025	2
4-6	MZ296256	Main Case A 24, w/metal	MH-206	1
4-7	MZ446635	Thrust Cap, Main Metal B2	LF-2006	1
4-8	MH244710	Flywheel Fixing Pin	900-250	1
4-9x	MZ244113	Felt D12.5x16x2t		1
4-10	MZ253113	Main Metal Cap B	MH-208	1

MECH. ASSEMBLY BLOCK

4-11	MZ314897	Flywheel Support Plate, MR	MR-121	1
4-12	ZW392681	Washer (Nylon)D8x1t (without hole)		1
4-13	MH273036	Flywheel Prop A, M-9	M9-310	1
4-14	ZS413201	Screw, pan head 4x8		1
4-15	ZW273914	Spring Washer M4		3
4-16	MH273047	Flywheel Prop B, M-9	M9-311	1
4-17	ZW413280	Inch Nut 1/4" mountain 20		2
4-18	ZW393232	Spring Washer 1/4"		1
4-19	ZW413998	Washer (SUP)D6.8x12.7x1t		1
4-20	MB541012	Drive Belt (flat).D116.9x1.6x7	MC-1209	1
4-21	MV269965	Steel Ball D4		1
4-22x	ZS424056	Screw, pan head 4x10		2
4-23	MH248343	Belt Guide Pin	4TR-109	1
4-24x	ZW416698	Nut M4		1
4-25	MZ439525	Flywheel Belt Holding Plate B	MS-1014	1
4-26x	ZS439514	Screw, binding head 3x18		1
4-27x	ZW273756	Nut M3		1

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 5 ILLUSTRATION OF SWITCH BLOCK

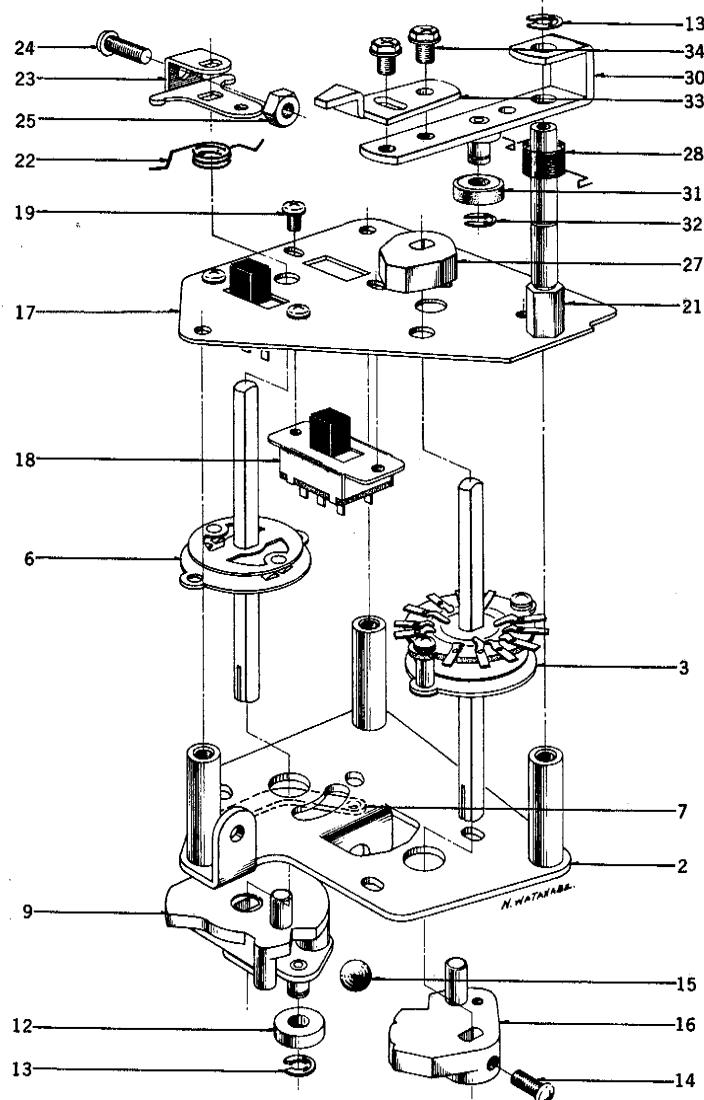


SWITCH BLOCK

Ref. No.	Parts No.	Description	Schematic No.	Q'ty	Ref. No.	Parts No.	Description	Schematic No.	Q'ty					
SWITCH BLOCK														
5-1x	BS558336	Switch Block Comp.	MU-1, 2	1	5-21	MH317046	Rec. Lever Prop	MR-206	1					
5-2	HZ402390	SW. Table A-2, MR (w/prop)	MR-201	1	5-22	ZG225516	SW. Spring	MR-255	1					
5-3	ES316923	Play Shaft (Y type) Y-133	25-8-6	1	5-23	MZ317024	SW. Cam	MR-204	1					
5-4x	ZW273802	Toothed Lock Washer M3		2	5-24	ZS424056	Screw, pan bead 4x10		1					
5-5x	ZW273756	Nut M3		2	5-25	ZW416698	Nut M4		1					
5-6	ES316934	Rewind Shaft (Y type)	25-8-5	1	5-26x	ZS323728	Screw, binding head 3x5		3					
5-7	MZ316945	Nut Plate	MR-245	1	5-27	MZ317068	Amp. SW. Cam B	MR-243	1					
5-8x	ZS413728	Screw, binding head 3x6, w/washer	MR-242	2	5-28	ZG227564	Spring H	900-120	1					
5-9	MZ316956	Cam A-3		1	SWITCH LEVER BLOCK									
5-10x	ZW259942	Washer (Fiber)D5.1x10.3x0.5t		1	5-29x	BL204480	Switch Lever Block Comp.	#2-MR	1					
5-11x	ZW376402	Washer (Fiber)D5.1x10.3x1t		2	5-30	ML226080	SW. Lever A, w/shaft B	900-255	1					
5-12	MR269730	Cam Roller D12	900-213	1	5-31	MR217203	Cam Roller A (Nylon)D12	900-153	1					
5-13	ZW290283	'U' Ring 2.85M	6-1-1	2	5-32	ZW290283	'U' Ring 2.85M	6-1-1	1					
5-14	ZS413201	Screw, pan head 4x8		3	5-33	ML226124	SW. Lever B	900-256	1					
5-15	MV270066	Steel Ball D8		1	5-34	ZS437545	Hexagon Bolt 4x7, w/washer		2					
5-16	MZ405483	Cam B-1, w/tap	900-206	1										
5-17	MZ544364	Control Chassis	MU-2001	1	5-35x	MZ256814	Rewind Shaft Spacer	M9-124	2					
5-18	ES479485	Slide SW. S-1	25-3-66	2										
5-19	ZS371856	ISO Screw, binding head 3x5		4										
5-20x	ZS559045	Screw, binding head 4x8, w/washer		2										

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.


FIG. 6a ILLUSTRATION OF MECHANISM ASSEMBLY BLOCK

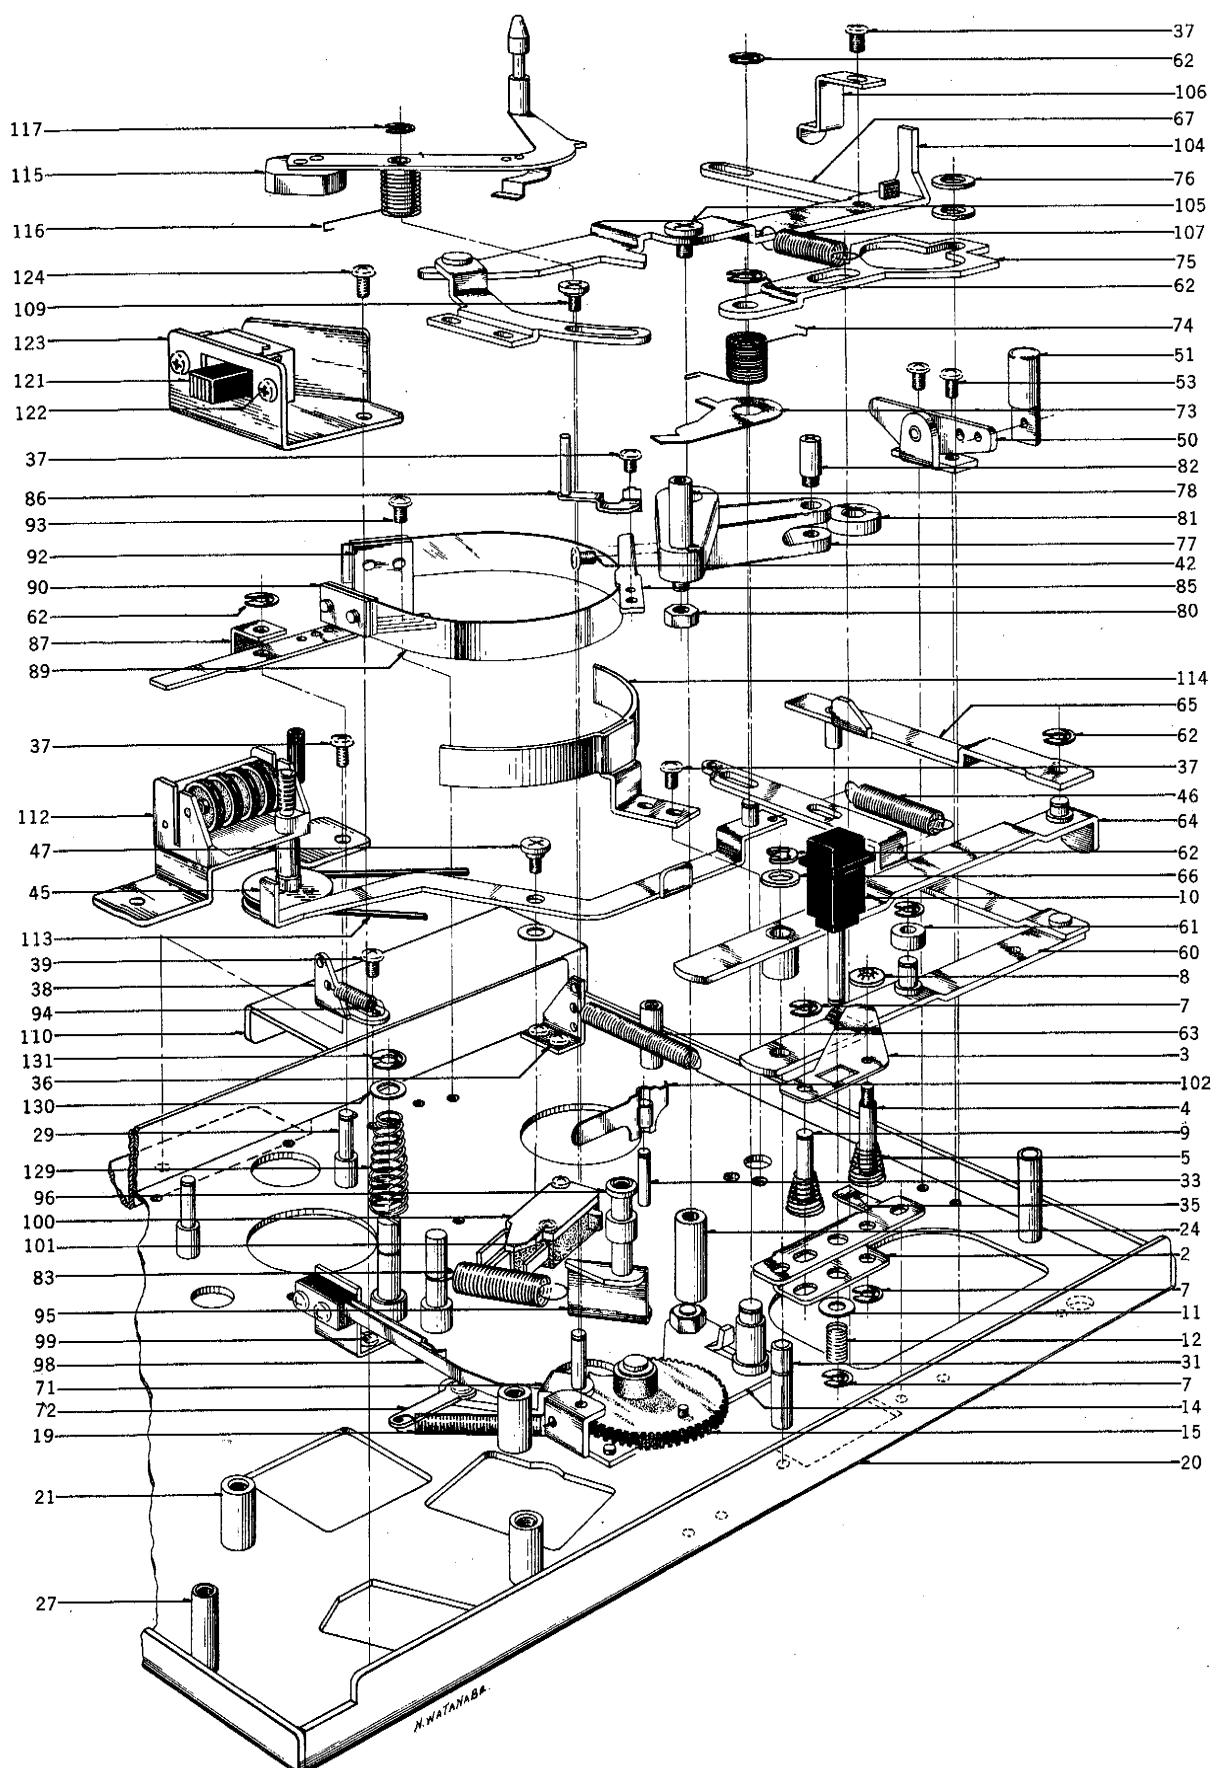

Ref. No.	Parts No.	Description	Schematic No.	Q'ty
6-76	ZW260087	Washer (Fiber)D6.1x10x0.5t		1
6-77	ML314932	Pinch Roller Lever, MR	MR-119	1
6-78	MS243404	Pinch Roller Shaft C	4TR-102	1
6-79x	ZW259975	Washer (SUP)D5.1x10.3x0.8t		1
6-80	ZW416698	Nut M4		1
6-81	MR269763	Cam Roller D13	900-154	1
6-82	MS582906	Cam Roller Shaft A-1	7-3-6	1
6-83	ZG455692	Pinch Roller Spring, MS	MS-1015	1
6-84x	ZW314943	Washer (Nylon)D8	MR-113	1
6-85	ML314954	Shifter Lever A	MR-117	1
6-86	MLS49213	Shifter Lever B, w/pin	MC-1215	1
6-87	ML314976	Brake Lever A (Take-up)	MR-210	1
6-88x	ML396810	Brake Lever B (Supply)	KD-1038	1
6-89	MT314987	Brake Band	MR-213	2
6-90	MZ314998	Brake Band Retaining Plate	MR-212	4
6-91x	ZS417137	Screw, binding head 3x4		6
6-92	MZ315000	Brake Band Support	MR-214	2
6-93	ZS425981	Screw, binding head 3x3		2
6-94	ZG315011	Brake Lever Spring	MR-116	2
6-95	HZ315077	Reverse Guide Base, w/prop	MR-229	1
6-96	HZ315090	Reverse Guide	RD-225	1
6-97x	ZS344463	Set Screw, hexagon socket 4x6(cup)		1
6-98	ES546794	Tension SW. Comp. MU	MU-1012	1
6-99	ZS427048	Screw, round head 3x3		2
6-100	ES562465	Micro SW. K-1	25-1-26	1
6-101	ZS417148	Screw, binding head 3x15		2
6-102	ML316394	Operation SW. Lever	MR-112	1
6-103x	ZW270088	'E' Ring 1.9M	6-1-9	1
6-104	ML316427	Pause Lever, MR (w/lever B)	MR-233	1
6-105	ZS217877	Pause Lever Set Screw	900-136	1
6-106	MZ316451	Pause Stopper, M-7	MH-126	1
6-107	ZG301061	Pause Spring 990A	4TR-128	1
6-108x	ZW260010	Washer (PBP)D6.1x10x0.1t		1
6-109	ZS207314	Amp. Lever Set Screw	3A-737	1
6-110	MZ548728	Frame Reinforcement Plate	MU-1201	1
6-111x	ZS563332	Tapping Screw #2 4x6(binding)		2
6-112	MC554826	Counter MP-490-19	9-1-28	1
6-113	MB527556	Counter Belt D93x1.5	ND-1022	1
6-114	MZ317406	Brake Band Guide, w/base	MR-120	2
6-115	BL316484	AS Lever Block Comp.	MU, MC, MS, MR	1
6-116	ZG260706	AS Lever Spring	4TR-118	1
6-117	ZW290294	'U' Ring 2.85M	6-1-1B	1
6-118x	MP271170	Pinch Roller, LC D=38	LC-321	1
6-119	EJ450573	Mate-N-Lock Cap Housing 9P 1-480277-0	52-1-7	1
6-120x	EJ373623	Pin Contact 61116-1	52-1-1	12
6-121	ES375478	Slide SW. ESD-279DU, w/knob(black)	25-3-23	1
6-122	ZS444273	ISO Screw, binding head 3x4		4
6-123	ML544307	SW. Retaining Plate S	MU-1001	1
6-124	ZS413728	Screw, binding head 3x6, w/washer		1
6-125	EJ510333	Wire Clip 220-JD481610-0104 (Nylon)	2-7-17	1
6-126x	MZ219576	Cord Retainer D	M9-123	1
6-127	EJ205975	Cramp Terminal 1-SD	32-1-7	7
6-128x	EJ205986	Cramp Terminal 2-SD	32-1-8	1
6-129	ZG217394	Belt Change Spring B	MH-125	1
6-130	ZW260054	Washer (SUP)D6.1x10x0.25t		1
6-131	ZW290283	'U' Ring 2.85M	6-1-1	1

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 7 PHOTO OF SYSTEM CONTROL P.C. BOARD (MU-1202)

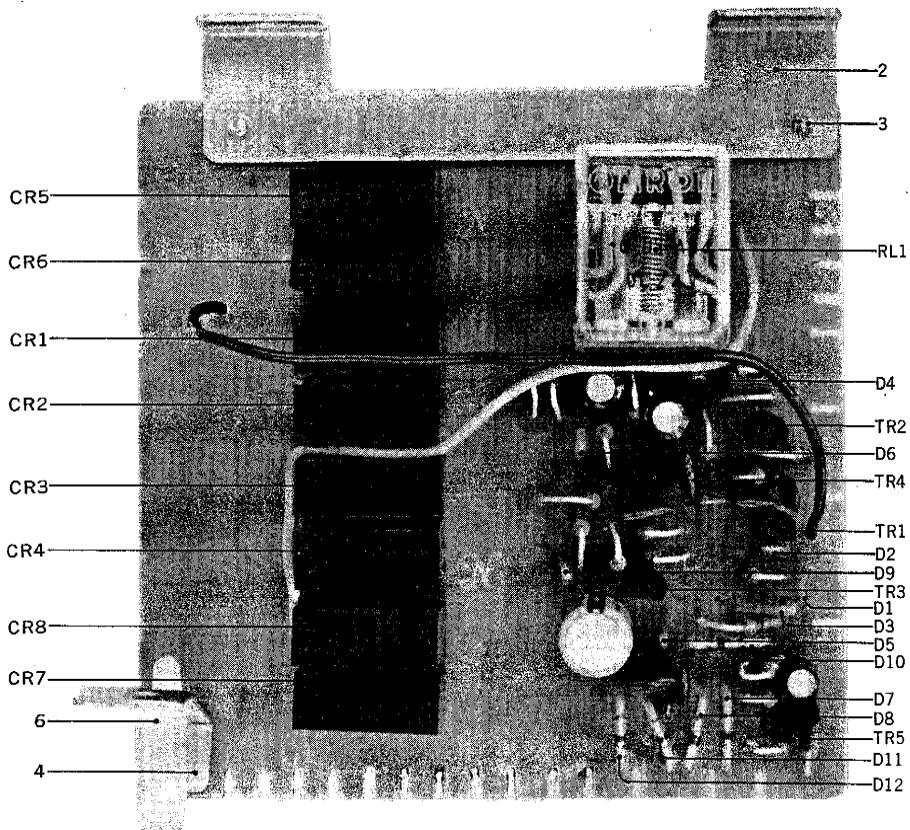


**SYSTEM CONTROL P.C. BOARD (MU-1202)
BLOCK**

Symbol No.	Parts No.	Description	Q'ty	Symbol No.	Parts No.	Description	Q'ty
7-1x	BA563567	System Control P.C. Board Comp. (MU-1202)	1	7-R1	ER211667	Resistor, Stopper Type Carbon RD1/4 100(J)	1
7-TR1to4	ET398711	Transistor 2SC945(Q)(R)	4	7-R2	ER336442	Carbon RD1/4 10k(J)	1
7-TR5	ET453486	Transistor 2SC711(E)(F)	1	7-R3	ER212883	Carbon RD1/4 4.7k(J)	1
7-D1, 2	ED560913	Silicon Diode 1S2473 VE	2	7-R4	ER212477	Carbon RD1/4 3.3k(J)	1
7-D3	ED219464	Germanium Diode 1N34A	1	7-R5	ER211667	Carbon RD1/4 100(J)	1
7-D4	ED536062	Silicon Diode WG-713	1	7-R6, 7	ER212883	Carbon RD1/4 4.7k(J)	2
7-D5, 6	ED514721	Silicon Diode WG-599	2	7-R8	ER336442	Carbon RD1/4 10k(J)	1
7-D7to12	ED560913	Silicon Diode 1S2473 VE	6	7-R9	ER357456	Carbon RD1/4 2.2k(J)	1
7-RL1	EP344136	Relay MY4-O-US-AD4 24V	1	7-R10	ER211757	Carbon RD1/4 100k(J)	1
7-CR1to8	ER450786	Spark Quencher U/L 0.1μ+120Ω 400WV	8	7-R11	ER212264	Carbon RD1/4 22k(J)	1
7-2	EZ544320	P.C. Board Holder A	1	7-R12	ER212883	Carbon RD1/4 4.7k(J)	1
7-3	ZS447772	Tapping Screw #2 3x6(BR)	2	7-R13	ER212264	Carbon RD1/4 22k(J)	1
7-4	MZ544331	P.C. Board Holder B	1	7-R14	ER357456	Carbon RD1/4 2.2k(J)	1
7-5x	ZS413155	Screw, binding head 3x6	2	7-R15	ER211667	Carbon RD1/4 100(J)	1
7-6	EJ510333	Wire Clip 220-JD481610-0104 (Nylon)	1	7-R16	ER212264	Carbon RD1/4 22k(J)	1
		Capacitor, Vertical Type		7-R17, 18	ER336442	Carbon RD1/4 10k(J)	2
7-C1	EC220994	Elect. 10μF 25WV	1	7-R19	ER342933	Carbon RD1/4 27k(J)	1
7-C2	EC383501	Mylar 0.001μF(M) 50WV	1	7-R20	ER336442	Carbon RD1/4 10k(J)	1
7-C3, 4	EC250918	Mylar 0.01μF(M) 50WV	2				
7-C5	EC391498	Mylar 0.022μF(M) 50WV	2				
7-C6	EC220678	Elect. 47μF 25WV	1				
7-C7	EC391498	Mylar 0.022μF(M) 50WV	2				
7-C8	EC220994	Elect. 10μF 25WV	1				
7-C9	EC250885	Mylar 0.01μF(K) 50WV	1				
7-C10	EC450055	Elect. 1μF 25WV	1				
7-C11	EC220432	Elect. 2.2μF 25WV	1				

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 8 PHOTO OF CR P.C. BOARD (MU-1007)

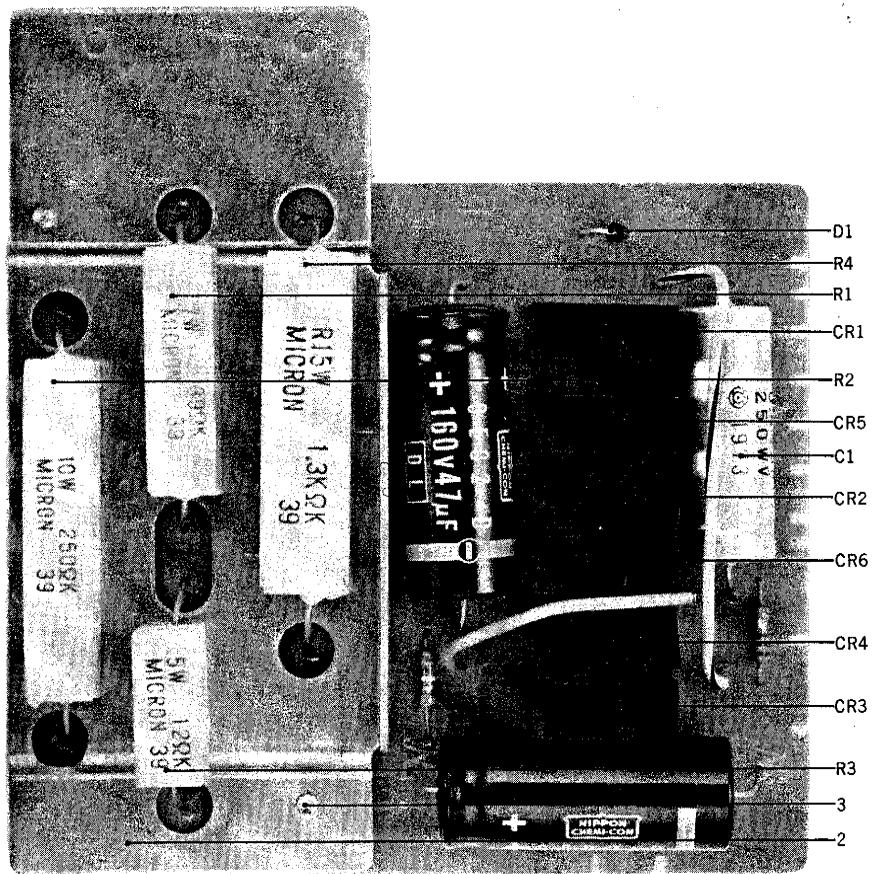


CR P.C. BOARD (MU-1007) BLOCK

Symbol No.	Parts No.	Description	Q'ty
8-1x	BA563556	CR P.C. Board Comp. (MU-1007)	1
8-D1	ED224550	Silicon Diode 10D4	1
8-CR1to6	ER450786	Spark Quencher U/L $0.1\mu+120\Omega$ 400WV	6
8-2	MZ544342	P.C. Board Holder C	1
8-3	ZS447772	Tapping Screw #2 3x6(BR)	2
8-C1	EC350987	Capacitor, Tubular Type MP $0.47\mu F(M)$ 250VAC	1
8-C2, 3	EC316113	Elect. $47\mu F$ 160WV	2
8-R1	ER554883	Resistor, Wire-wound Type Cement 7W 39(K)	1
8-R2	ER554861	Cement 10W 250(K)	1
8-R3	ER554905	Cement 5W 12(K)	1
8-R4	ER565121	Cement 15W 1.3k(K) (Metal Ox. Film type)	1
8-R5	ER365016	Carbon RD1/4 220k(J) (Insu. type)	1
8-R6	ER324808	Carbon RD1/4 100(J) (Insu. type)	1

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 13 PHOTO OF POWER SUPPLY P.C. BOARD (MU-5017)

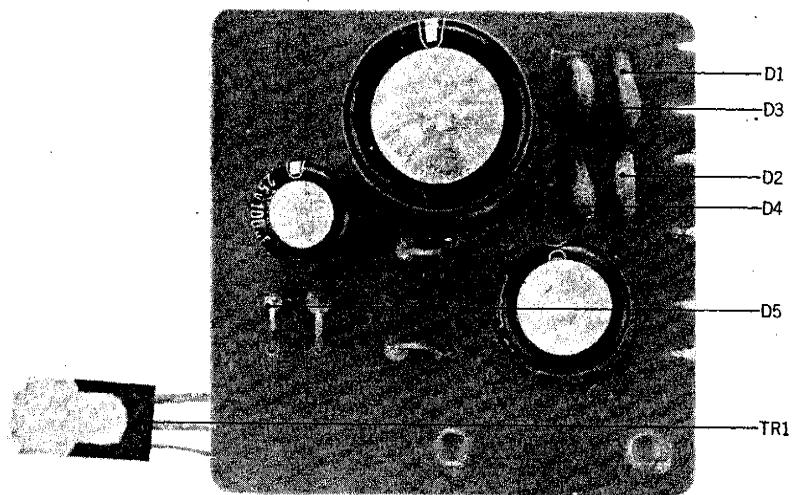

**POWER SUPPLY P.C. BOARD
(MU-5017) BLOCK**

Symbol No.	Parts No.	Description	Q'ty
13-1x	BA558450	Power Supply P.C. Board Comp. (MU-5017)	1
13-TR1	ET495371	Transistor 2SC1098(L)	1
13-D1to4	ED494583	Silicon Diode 10D05	2
13-D5	ED511918	Zener Diode WZ-240	1
13-2x	ZS323728	Screw, binding head 3x5	1
Capacitor, Vertical Type			
13-C1	EC557651	Elect. 470μF 50WV	1
13-C2	EC220151	Elect. 100μF 25WV	1
13-C3	EC336115	Elect. 220μF 25WV	1
Resistor, Stopper Type			
13-R1	ER306843	Carbon RD1/4 1.2k(J)	1
13-R2	ER211667	Carbon RD1/4 100(J)	1
13-R3	ER430018	Carbon RD1/4 1(J)	1

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 14a PHOTO OF AMPLIFIER ASSEMBLY BLOCK



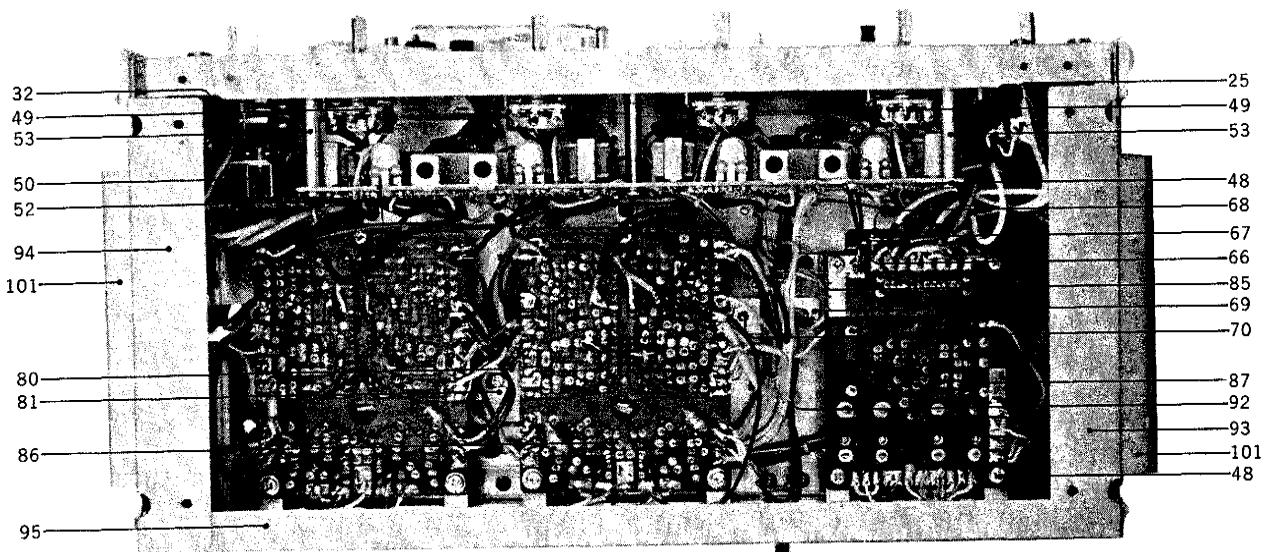


FIG. 14b PHOTO OF AMPLIFIER ASSEMBLY BLOCK

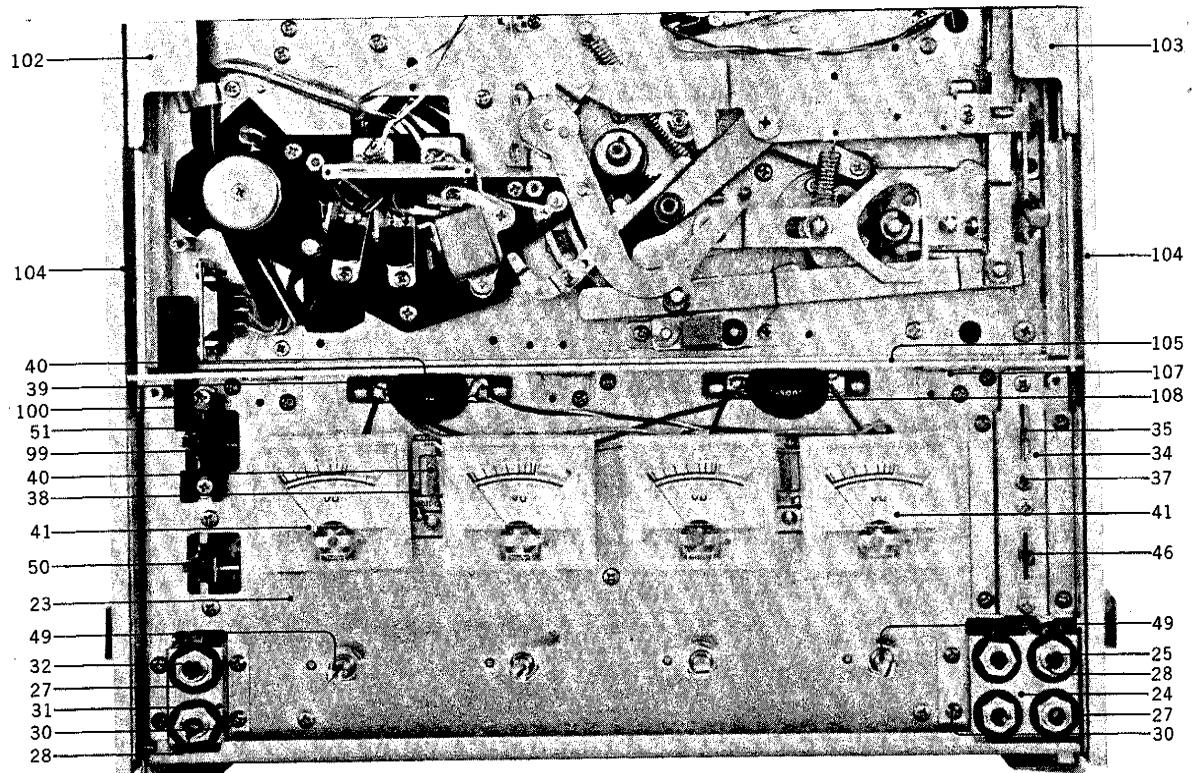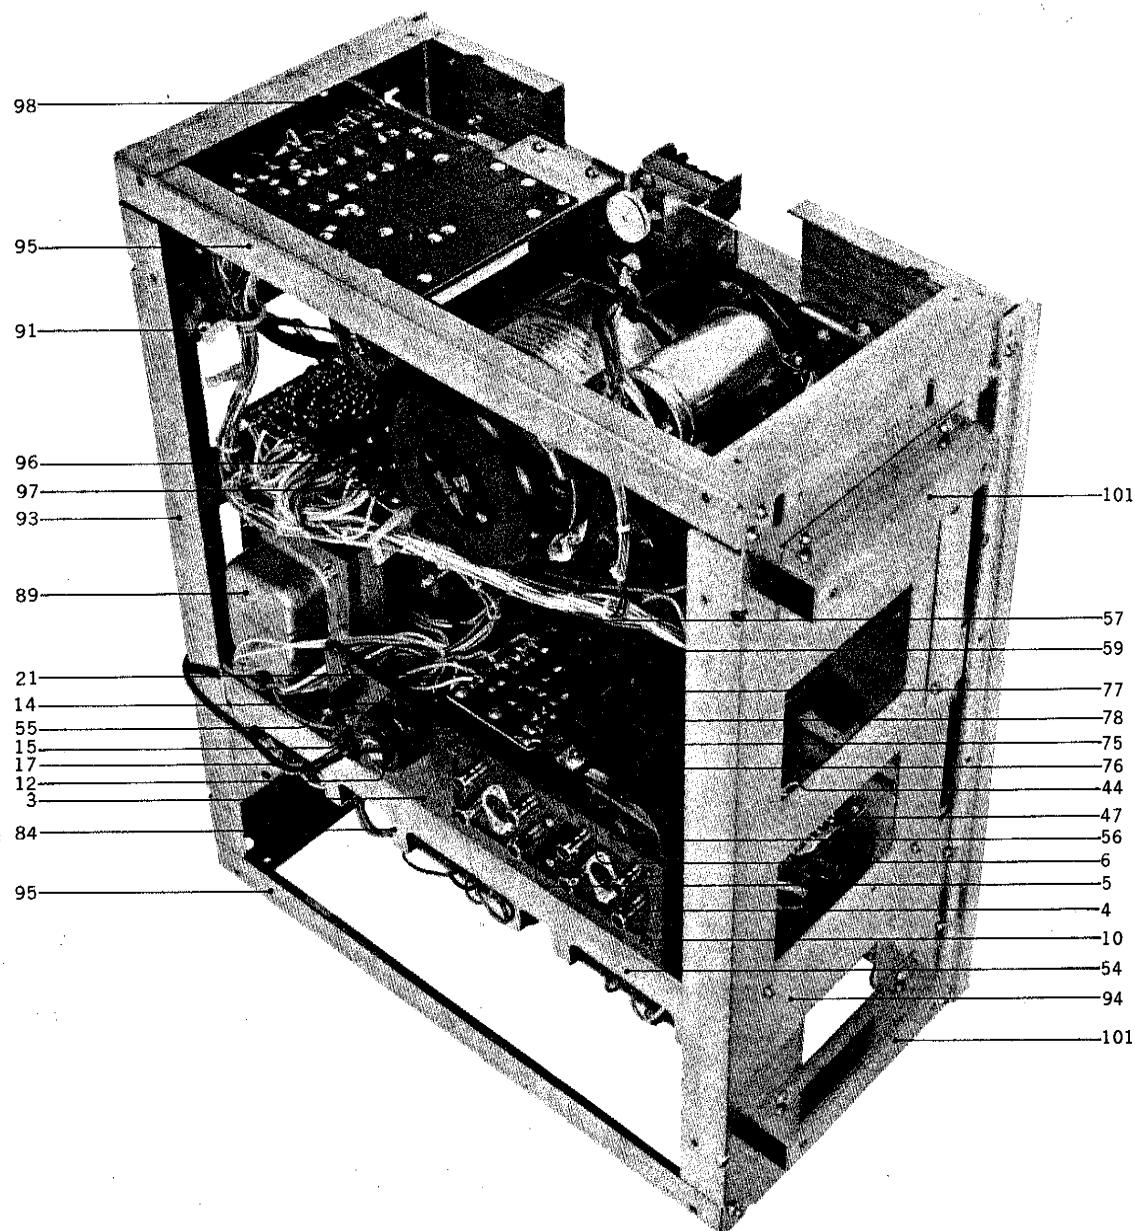


AMPLIFIER ASSEMBLY BLOCK

Ref. No.	Parts No.	Description	Schematic No.	Q'ty	Ref. No.	Parts No.	Description	Schematic No.	Q'ty
JACK PLATE BLOCK									
14-1x	BZ563624	Jack Plate Block Comp.	MU-2	1	14-12	EJ233370	Socket (Volt. Selector)	S-18010	40-2-3 1
14-2x	BZ563635	Jack Plate Block Comp. (3 core)	MU-2	1	14-13x	EF558066	Fuse 2A 125V	39-1-47	1
14-3	EZ548741	Jack Plate Bracket	MU-5231	1	14-14	ZS372025	ISO Screw, truss head 3x6		2
14-4	EJ563433	Jack Plate MU-2 (w/jack)	31-5-86	1	14-15	EZ382263	Strain Relief SR-4K-4	2-7-12	1
14-5	ES446973	Slide SW. SL-242B4D	25-3-51	1	14-16x	EZ246936	Strain Relief SR-6W-1 (WG, 3 core)		1
14-6	EA549270	Jack P.C. Board	MU-5237	1	14-17	EW540112	AC Cord (CUL) 2.5M	26-3-19	1
14-7x	ER589375	Carbon/R. RD1/4 680k(J) (Insu. type)	35-9-10	4	14-18x	EW315448	Australia Cord (3 core)	26-3-11	1
14-8x	ER558573	Carbon/R. RD1/4 27k(J) (Insu. type)	35-9-10	4	14-19x	EW524845	AC Cord (J) 2.5M	26-3-31	1
14-9x	ER368133	Carbon/R. RD1/4 22k(J) (Insu. type)	35-9-10	8	14-20x	ZW273778	Earth Lug M3		1
14-10	ZS201183	Screw, truss head 3x8(black)		4	14-21	BA558450	Power Supply P.C. Board Comp. (MU-5017)		1
14-11x	ZW273756	Nut M3		4	14-22x	ZS447772	Tapping Screw #2 3x6(BR.)		2

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

FIG. 15 PHOTO OF FINAL ASSEMBLY BLOCK

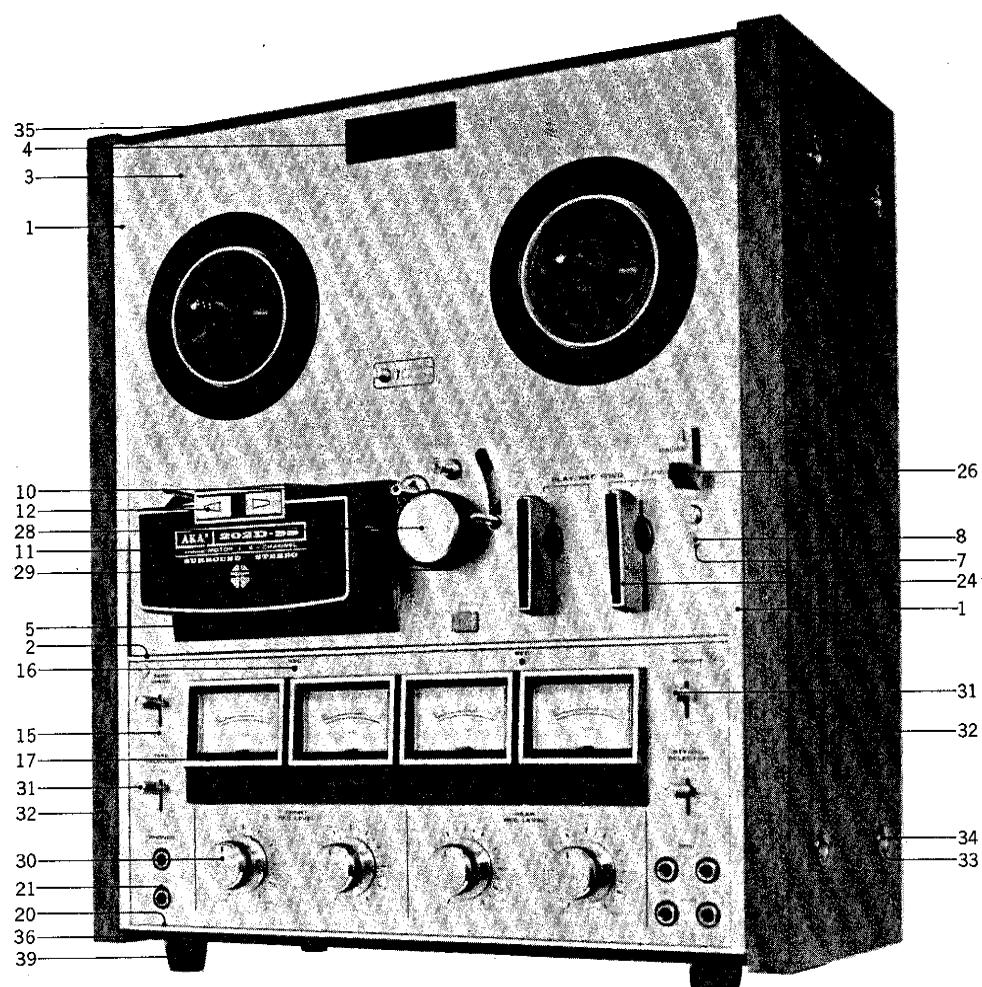

FINAL ASSEMBLY BLOCK

Ref. No.	Parts No.	Description	Schematic No.	Q'ty	Ref. No.	Parts No.	Description	Schematic No.	Q'ty
15-1	SE548921	Sash	MU-6205	2	15-25x	ZS253405	Mech. Knob Screw	7-1-46	2
15-2	SE548774	Sash B	MU-6204	1	15-26	SK314100	Pause Knob B	MR-612	1
15-3	SP548932	Mech. Panel A, w/ring	MU-6206	1	15-27x	ZS356804	Set Screw, hexagon socket 3x4(cup)		1
15-4	SE528906	Counter Escutcheon	ND-6008	1	15-28	SK425158	Pinch Roller Cap	MS-6020	1
15-5	SC544533	Head Cover Base	MU-6003	1	15-29	MP271170	Pinch Roller, LC D=38	LC-321	1
15-6x	ZS413155	Screw, binding head 3x6		4	15-30	SK548662	Volume Knob Comp.	MU-6219	4
15-7	ZW408418	Panel Washer	KD-6029	4	15-31	SK442765	Lever SW. Knob A-1	81-5603	4
15-8	ZS563308	Screw, oval countersunk head 3x6		4	15-32	BC548796	Side Plate	MU-6211	2
15-9x	HZ579126	Head Shield Plate	MU-6228	1	15-33	ZW548010	Spot Facing Washer	MU-6028	8
15-10	SC544544	Head Cover	MU-6004	1	15-34	ZS563321	Screw, binding head 4x14		8
15-11	SM548673	Head Cover Name Plate	MU-6220	1	15-35	SP548807	Upper Plate	MU-6212	1
15-12	SB544454	Direction Button	MU-6006	2	15-36	SP548818	Lower Plate	MU-6212	1
15-13x	ZS355511	Screw, binding head 3x6(black)		2	15-37x	ZW461610	Decorative Washer 3M		4
15-14x	ZS325495	Tapping Screw #2 3x6		5	15-38x	ZS482815	Screw, oval countersunk head 3x8		4
15-15	SP548954	Amp. Panel	MU-6208	1	15-39	SA377190	Rubber Foot, LM	LM-404	8
15-16	SZ457975	Lamp Lens B (Red)	55-5012	2	15-40x	ZW419646	Washer (SPC)D4.5x9.8x0.5t		8
15-17	SE544601	VU Meter Escutcheon	MU-6017	4	15-41x	ZS487776	Screw, truss head 4x18		8
15-18x	SZ548897	Escutcheon Support	MU-6221	4	15-42x	SP548820	Back Plate A	MU-6213	1
15-19x	ZS425788	Screw, round head 3x4		8	15-43x	ZS498273	Tapping Screw #2 3x8, w/washer		2
15-20	SE548785	Sash C	MU-6210	1	15-44x	EF304626	Fuse ST-4 1A	39-1-28	1
15-21	ZW526577	Collar B, Jack	MC-5006	6	15-45x	EF558066	Fuse 2A 125V	39-1-47	1
15-22x	ZS447772	Tapping Screw #2 3x6(BR)		2					
15-23x	ZW432347	Washer (Luminar)							
		D6.2x13x0.125t		2					
15-24	SK476684	Mech. Knob	LE-6018	2					

When ordering parts, please describe Parts Number, Serial Number, and Model Number in detail.

SECTION 3

SCHEMATIC DIAGRAM

1. 202D-SS SCHEMATIC DIAGRAM

