

T H E F I S H E R



PHONES

PHONES



L



A



C





B

 



R



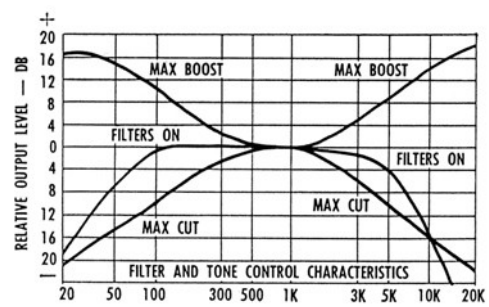

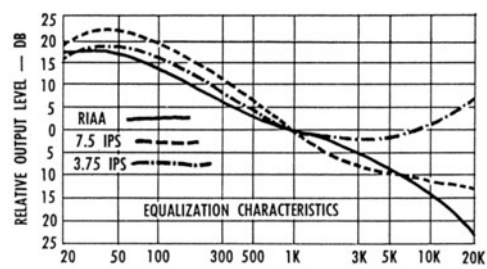

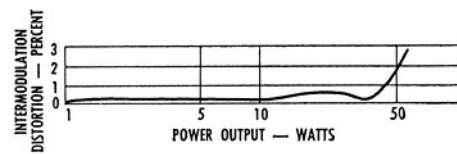

	L	A	C	B	R
MONO PHONO	●	●	○	●	●
REVERSE	○	●	○	●	○
STEREO	●	○	○	○	●
A	●	●	○	○	●
B	●	○	○	●	●
● = ON ○ = OFF					
NOTE: "C" BRIGHTENS WHEN CENTER SPEAKER IS USED					