 





# Schaltplan für Musikgerät 50

ab Gerät Nr. 13001


12AU6  
12.6V 0.15A




 
12AV6  
12.5V 0.15A



50C5  
50V 0.15A

 

35W4  
35V 0.15A

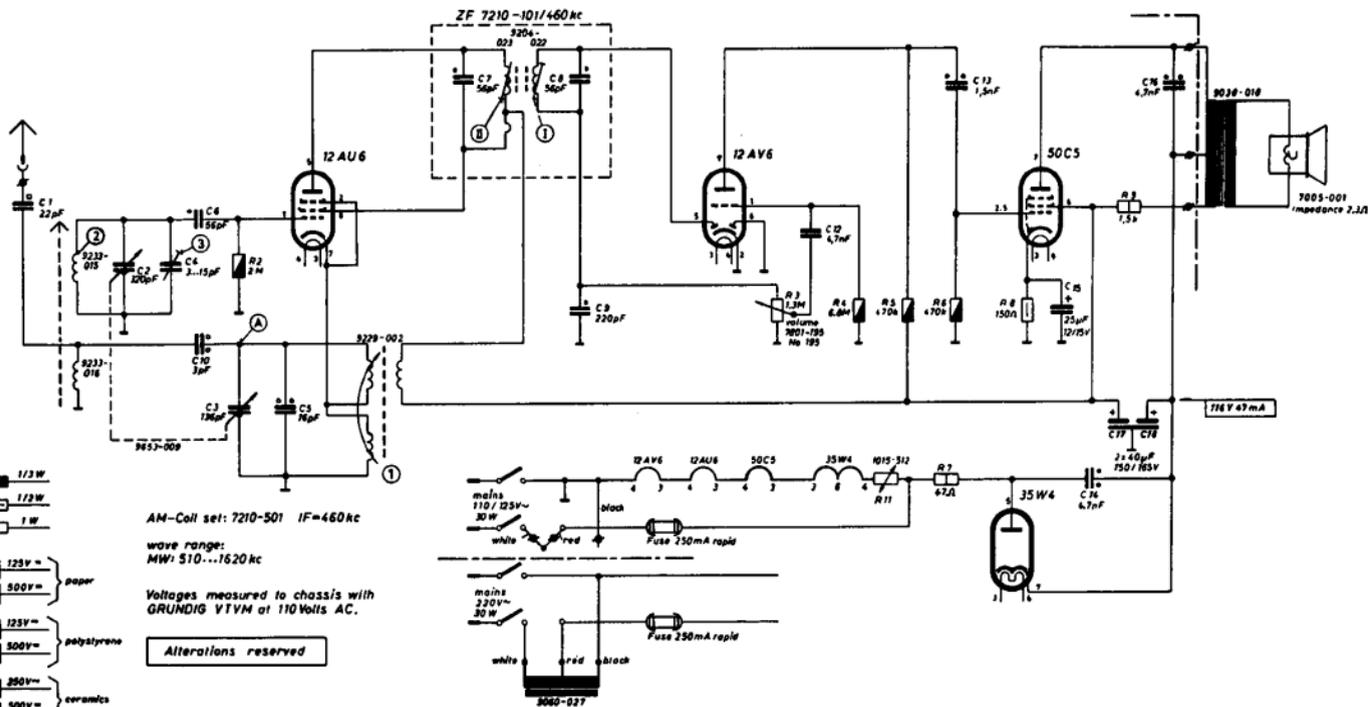 

C:	1	2,	4, 6, 10,	3, 8,	7,	6, 8,	12,	13,	15, 14, 17, 18,	16, 18,
R:		2,					3,	4, 11, 5, 6, 7,	8,	