

# KENWOOD

FM/AM CD RECEIVER

# KDC-7000

## INSTRUCTION MANUAL

KENWOOD CORPORATION



**Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new FM/AM CD receiver.**

### **For your records**

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on the product.

Model KDC-7000 Serial number \_\_\_\_\_

# WARNING

## ▲CAUTION

The use of optical instruments with this product will increase eye hazard.

## INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate this equipment with respect to the receiver
- Move this equipment away from the receiver
- Plug this equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

- AS the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

## FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# SAFETY PRECAUTIONS

## ▲WARNING

**To prevent fire and avoid personal injury in case of accidents**

- Make sure the faceplate is securely locked in place.
- When extending the power supply, memory backup or ground lead, avoid short circuits by using 0.75mm<sup>2</sup> (AWG 18) or larger automotive grade cable.
- Check to be sure that no metal objects (tools, needles, coins) are left inside the unit.
- If you smell or see smoke, disconnect the unit immediately and consult your KENWOOD dealer. Continued use can cause a fire or permanent damage to the unit.

## ▲CAUTION

**To keep the unit in proper working order**

- Be sure it's connected to a 12V DC power supply with a minus ground connection.
- Do not open front panel or top or bottom cover.
- Do not expose this unit to direct sunlight or high heat.
- Keep it clean and dry.
- Be sure it is fastened securely and not exposed to excess vibration.

 
## ▲CAUTION

**This unit is equipped with a theft deterrent faceplate. To prevent damage to the faceplate and case**

- Avoid exposure to direct sunlight and heat. High temperatures can cause deformation and warping.
- Avoid exposure to water.
- The faceplate is a high-precision instrument. When the faceplate is detached, store it in its special case. Never drop it or subject it to other shocks.
- Do not touch the faceplate terminal or faceplate mount with your fingers.

## NOTE

- If you have difficulty in installing this unit in your vehicle, please contact your KENWOOD dealer.
- If it doesn't seem to be working properly, first press the Reset button. If the malfunction persists, consult your KENWOOD dealer.

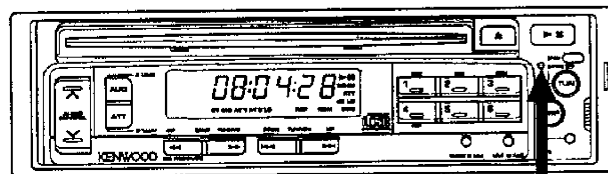

Reset button

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

# CARE AND MAINTENANCE

---

## Cleaning

 
1. Always turn the power OFF before cleaning.
2. Wipe the front panel and other exterior surfaces with a soft dry cloth or a soft cloth lightly moistened with a neutral detergent.

### **▲CAUTION**

- DO NOT use abrasive pads or paint thinner, benzene, or other volatile solvents. These may remove the indicator characters.

## CD slot cleaning

Since dust accumulates in the CD slot, it will sometimes need to be cleaned. Discs loaded in dusty slots may be damaged.

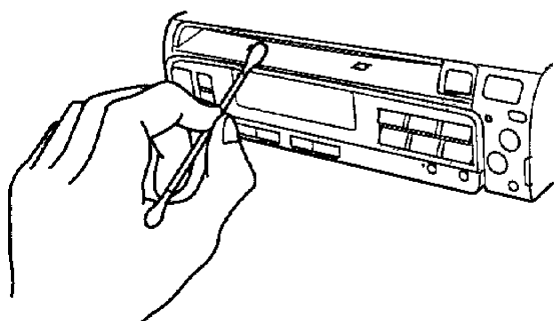

## Cleaning the faceplate terminal

If the faceplate terminal or faceplate mount terminal become dirty, wipe them clean with a soft, dry cloth.

# LENS FOGGING AND HEAT PROTECTION

---

## Lens Fogging

- In cold climates, there may be a period after you turn on your vehicle's heater when the lens that guides the laser beam used in your CD player fogs up. If this happens, your CD player will not work properly. If you wait about an hour, the fogging will disappear and your CD player will work normally.  
If it does not return to normal, please contact your KENWOOD dealer or authorized service center.

 
## Heat Protection

- In warm climates, when vehicles are left standing in direct sunlight with the windows closed, the temperature inside can rise above 60°C. Your CD player's protection circuits will then display the message "HOLD" and prevent the player from operating. Just open the windows or turn on the air conditioning. As soon as the "HOLD" message disappears, the player will operate normally.  
If it does not return to normal, press Reset button before use.

# HANDLING COMPACT DISCS

- Stains, dust, scratches or warping can cause skipping or other malfunctions. To enjoy your discs for a long time, please handle them as follows.

## <Holding a Disc>

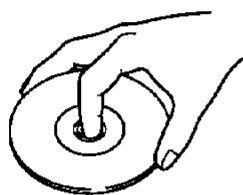

- Avoid touching the music storage area (the part with the glistening rainbow colors).

Paper tape




- Do not use paper tape on the label or music storage area.

## <Storing Your Discs>

 
- Do not store discs where they will be exposed to direct sunlight, high heat, or humidity.
- Especially in summer, never leave your discs exposed to sunlight on the dashboard or on the seat with the windows closed. High heat can cause warping.
- If you do not use your player for an extended period of time, remove the disc magazine from the changer and store it in a cool, dry place.
- Store your discs in their cases or in the magazine. To avoid scratches, dirt, or warping, do not leave them lying around without cases, piled up, or leaning on each other.

## <Cleaning Your Discs>

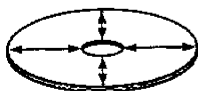

- If there are fingerprints or stains on a disc, wipe them off with a soft cotton cloth, wiping from the center to the outside edge. Never use paint thinner, benzene or conventional record cleaners.

## <Check Your New Discs>

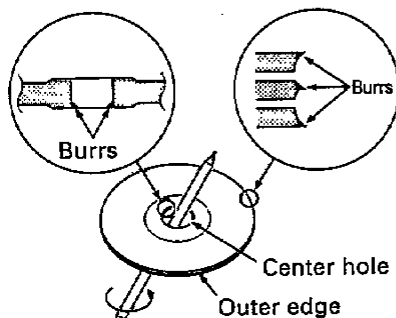 

- Some new discs have burrs on their outer edges or around the hole in the center. Use a ballpoint pen or similar instrument to remove them. Discs with burrs may not fit properly in the player or disc magazine, causing skipping when they are played.

## <Disc Accessories>

- There are several types of stabilizers, protective seals, and other disc accessories on the market, which claim to offer improved sound quality or disc protection. These accessories can, however, change the dimensions or thickness of a disk and may cause the disc changer to malfunction. They should not be used on discs played in this unit.

■ <b>Before you begin</b>	
FEATURES .....	8
■ <b>Your new CD Radio</b>	
ON/OFF, ALL MODE STANDBY & VOLUME CONTROLS .....	10
AUTO SEEK TUNING .....	11
MANUAL TUNING .....	12
LOCAL SCAN AND MONAURAL TUNING .....	13
TO PLAY COMPACT DISCS .....	14
INTENSITY .....	16
■ <b>Tuner features</b>	
PRESET STATIONS .....	17
AUTO MEMORY .....	18
PRESET SEEK .....	19
PRIORITY PRESET .....	20
■ <b>CD player features</b>	
TRACK SEARCH .....	21
TRACK REPEAT .....	22
TRACK SCAN .....	23
RANDOM PLAY .....	24
■ <b>Convenient features</b>	
SELECTABLE ILLUMINATION .....	25
AUDIO CONTROLS .....	26
CLOCK DISPLAYS/SETTING .....	28
THEFT DETERRENT FACEPLATE .....	29
CHANNEL BAND SELECTION .....	30
■ <b>Installation</b>	
ACCESSORIES .....	31
INSTALLATION PROCEDURE .....	32
CONNECTIONS .....	33
INSTALLATION .....	34
■ <b>Troubleshooting guide</b> .....	36
■ <b>Specifications</b> .....	37

# FEATURES

---

## ■ TUNER FEATURES

- **Auto seek tuning (p.11)**  
Automatically searches for stations you can receive.
- **Local scan (p.13)**  
When this feature is turned on, it combines scanning and Auto Memory and presets only strong stations offering good reception.
- **Monaural tuning (p.13)**  
When stereo reception conditions are poor, turning on this function switches reception to monaural, improving sound quality by reducing noise.
- **Preset stations (p.17)**  
Stores the frequencies of your favorite stations in memory, for one-touch tuning.
- **Auto memory (p.18)**  
Automatically stores the strongest stations you can pick up, for one-touch tuning.
- **Preset seek (p.19)**  
Receives the memorized stations sequentially.
- **Priority preset (p.20)**  
This feature allows instant one-touch access to a station you often listen to (for news, traffic information, etc.), regardless of your tuner's operating mode.

## ■ CD PLAYER FEATURES

- **Track repeat (p.22)**  
Plays the same track repeatedly.
- **Track scan (p.23)**  
Automatically plays the first part of each track on the disc in sequence, to help you find the one you want.
- **Random play (p.24)**  
Plays the tracks on a CD in random order.



---

## ■ CONVENIENT FEATURES

- **Mute (p.10)**  
Lets you quickly lower and restore volume with one-touch ease.
- **Selectable illumination (p.25)**  
Allows illumination color to be switched between green and orange.
- **Clock display (p.28)**  
Displays the time in the display window.
- **Theft deterrent faceplate (p.29)**  
When you leave the vehicle, you can take the faceplate with you, to help prevent theft.
- **Channel band selection (p.30)**  
Allows you to switch bands between FM:200kHz/AM:10kHz and FM:50kHz/AM:9kHz.

# ON/OFF, ALL MODE STANDBY & VOLUME CONTROLS

## POWER ON/OFF

**To turn the power ON**

- ▶ Press the Power button.

 
**To turn the power OFF**

- ▶ Press the Power button for more than one second.

## ALL MODE STANDBY

In tuner mode, briefly pressing the Power button puts the unit in All mode standby, waiting for a new mode selection.

OFF

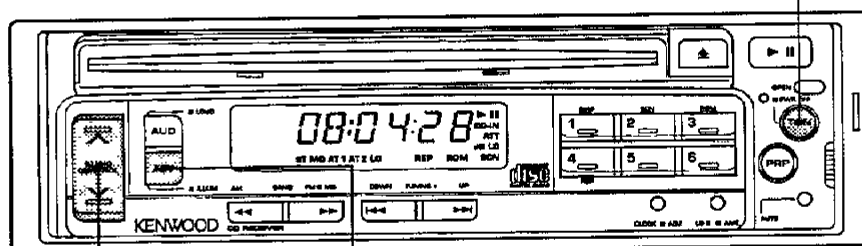

## VOLUME

**To increase the volume**

- ▶ Press the  $\wedge$  button.

**To lower the volume**


- ▶ Press the  $\vee$  button.  
(The display indicates the sound level in decibels (dB).)

1' 0L -28 dB

## MUTE

**To lower volume**

- ▶ Briefly press the Attenuator button.  
(The indicator blinks.)

F 1 92.1 

**To restore original sound level**

- ▶ Briefly press the Attenuator button again.  
(The indicator stops blinking.)

## NOTE

- Turning the power ON automatically restores the settings in use when the unit was turned OFF.
- Perform these operations with the power ON.

# AUTO SEEK TUNING

## WHILE LISTENING TO THE TUNER

- Press the Tuner button.  
(Tuner reception begins.)

**1**

### To select an FM band

- Briefly press the FM button to choose FM1, FM2 or FM3.

### To select an AM band

- Press the AM button.

F1

FM1

F2


FM2

F3

FM3

A

 AM

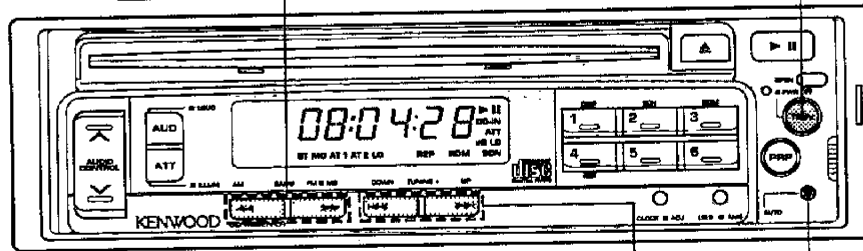

**2**

- Press the Auto button to select Auto tuning 1 mode.  
(If you see the AT1 display, you are Auto tuning 1 mode.)

F1 92.1

AT1

**3**

- Press either the Down seek or the Up seek button.  
(The Auto seek function will find the next station you can receive.)

DOWN  
SEEK

UP  
SEEK

F1 92.1

ST AT1

Display shows frequency of station received.

Illuminated when FM stereo broadcasts are received.

# MANUAL TUNING

## WHILE LISTENING TO THE TUNER

- Press the Tuner button.  
(Tuner reception begins.)

 
 
1

### To select an FM band

- Briefly press the FM button to choose FM1, FM2 or FM3.


### To select an AM band

- Press the AM button.

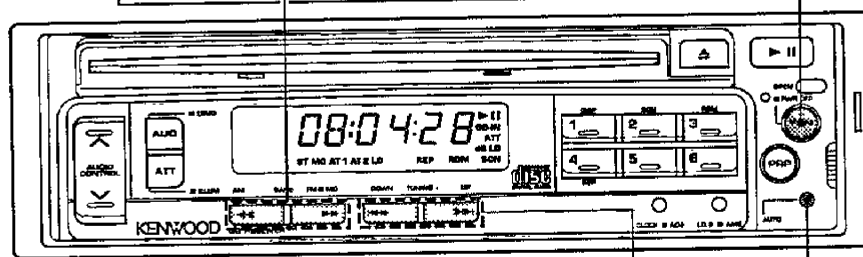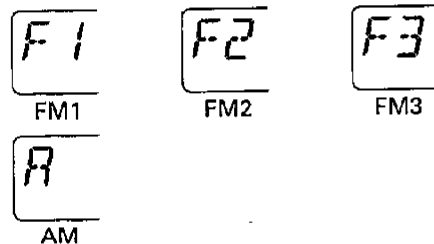

2

 - Press the Auto button to select Manual tuning mode.  
(If you do not see the AT1 and AT2 displays, you are in Manual tuning mode.)

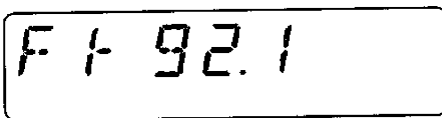

3

 
- Press either the down or up arrow buttons.

(The frequency will continue to change as long as you hold the button down.)



Down:  
for lower  
frequencies

Up:  
for higher  
frequencies

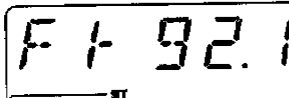

Display shows frequency of station received.

Illuminated when FM stereo broadcasts are received.


# LOCAL SCAN AND MONAURAL TUNING
 
## ■ LOCAL SCAN TUNING

1

### To turn on Local scan


- Briefly press the Local scan button.  
(The indicator light will light up.)

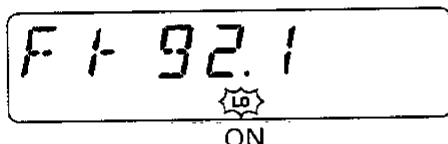

2

### To turn off Local scan

 - Briefly press the Local scan button again.  
(The indicator light will go out.)

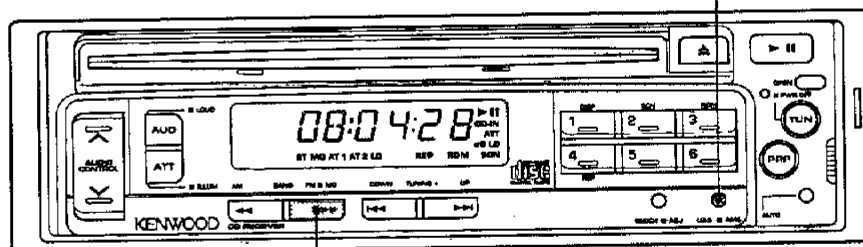


## ■ MONAURAL TUNING

1

### To turn on Monaural tuning

 - Press the Monaural tuning button for more than one second.  
(The indicator light will light up.)

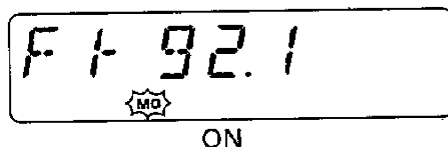

2




### To turn off Monaural tuning

   - Press the Monaural tuning button for more than one second.  
(The indicator light will go out.)

# TO PLAY COMPACT DISCS

## TO PLAY

- ▶ Insert a CD with the label side up. (The disc will be drawn in and the CD-IN and play indicator will appear on the display.)

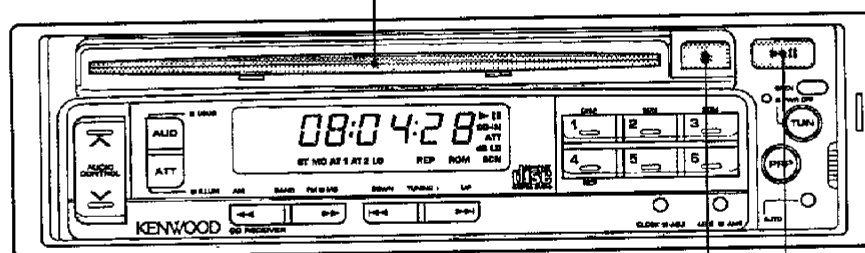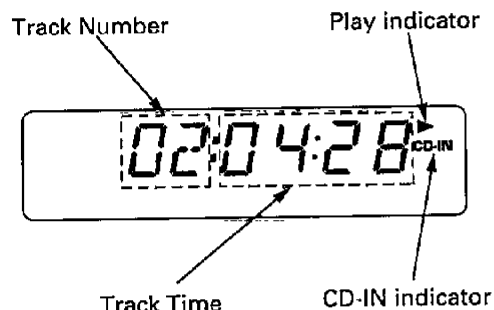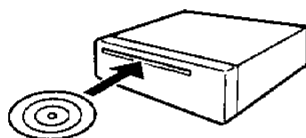


## TO STOP AND EJECT

- ▶ Press the Eject button. (The player will eject the disc.)

## TO PAUSE

 - ▶ Press the Play/Pause button. (The Pause indicator will appear on the display.)
- ▶ To restart play, press the Play/Pause button again.

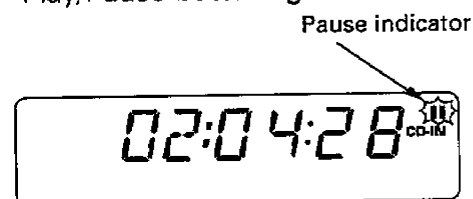

## NOTE

- If you press the Play/Pause button before a disc that has been ejected is removed from the disc slot, it will be drawn back into the player and played, automatically.
- To protect your discs, the player automatically draws in any disc that has been ejected but not removed within 15 seconds.
- Do not attempt to insert a disc in a slot where there is already another disc.

## SKIP AHEAD/SKIP BACK

Operation	Press
Skip Ahead	▶▶
Skip Back	◀◀

The action will stop when you release the button.

## TIME DISPLAY

 
- ▶ Each time you press the Display button, the display switches between current track and total CD playback time.  
(The "+" indicates total CD playback time.)

02:04:28<sup>+</sup> CD-IN

Current track playback time display

02:10:37<sup>+</sup> CD-IN

Total CD playback time display

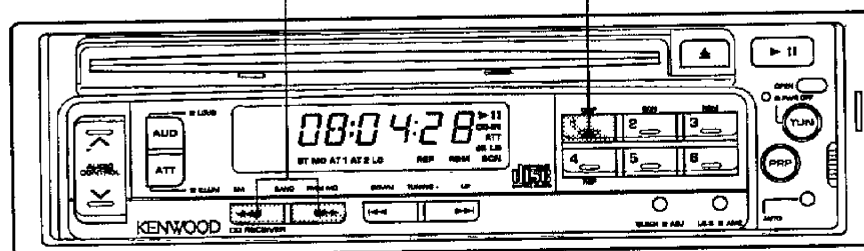


## ▲ CAUTION

- This unit is designed for playing 12cm (5in.) compact discs. Attempting to play 8cm(3in.) discs may damage the unit and should be avoided.

# INTENSITY

 
- If the Loud indicator light is not illuminated, press the Loud button for more than one second. (Loud indicator light will light up. Both bass and treble volume increase.)

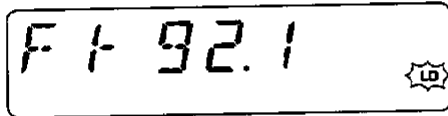

ON

## TO RESTORE ORIGINAL LEVELS

 - Press the Loud button again for more than one second. (Loud indicator light will go out.)

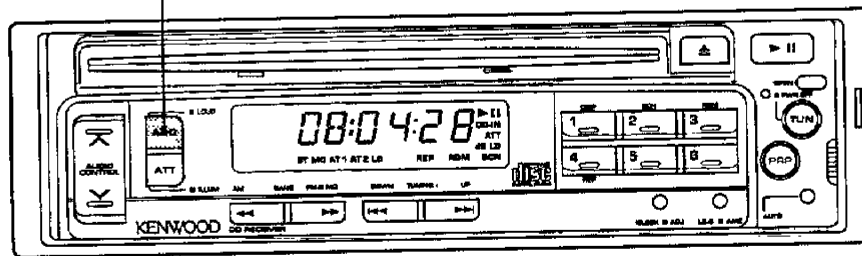



# PRESET STATIONS

**1**

 
Select the band and station you want to preset.

**2**

- Press the Preset station button you want to use for more than two seconds.

(When the station is entered in memory, the number of the button to which you've assigned it will appear on the display.)

F 1 92.1 -1

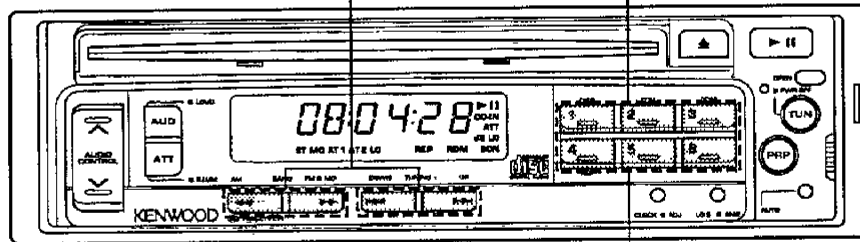

**3**

By repeating steps 1 and 2 you can preset each button for one station each from the FM1, FM2, FM3 and AM bands.

## 4 USING PRESET STATIONS

- Briefly press the button of the station you want.
- (When you press the button, you will hear the station assigned to it.)

F 1 92.1 -1

## NOTE

- When you assign a preset station to a button, the previous setting will be erased.

# AUTO MEMORY

 
1

## To select an FM band

- Briefly press the FM button to choose FM1, FM2 or FM3.



## To select an AM band

- Press the AM button.

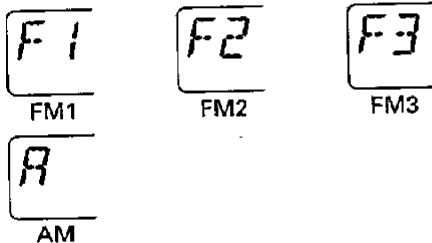

2

  - Press the Auto memory button for more than two seconds. (When the seek function finds a station, the "A" indicator will light up. The display will show the number of the button to which it has been assigned.)

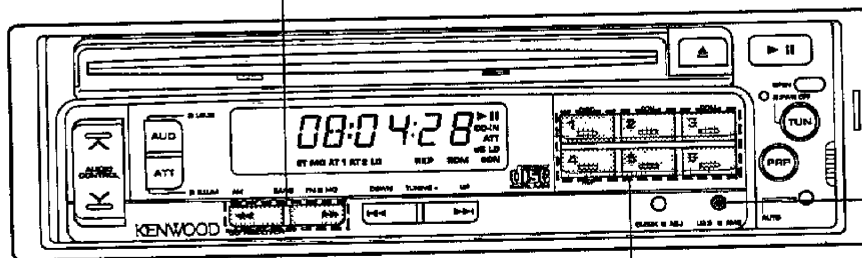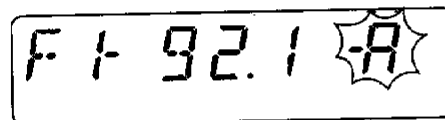


3

When six stations have been found, the Auto memory function stops. You will hear the last station selected.

## 4 USING PRESET STATIONS

 - Briefly press the button of the station you want. (When you press the button, you will hear the station assigned to it.)

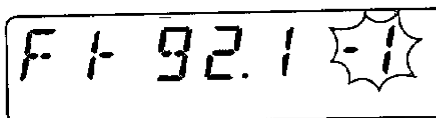

# PRESET SEEK

 
1

Store a station frequency for each Preset button.

2

- ▶ Press the Auto button to select Auto tuning 2 mode.  
(If you see the AT2 display, you are in Auto tuning 2 mode.)

F 1 92.1 - 1  
AT2

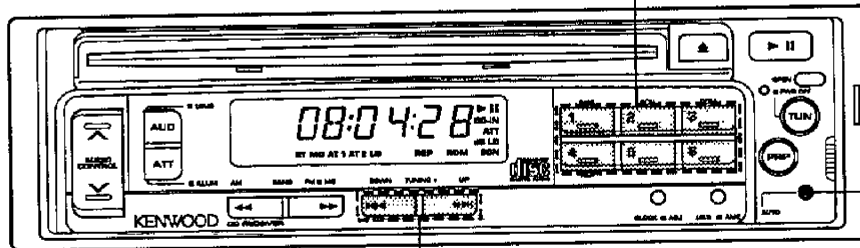

3

### Down preset seek

- ▶ Press the ◀◀ button.  
(The station stored in the previous Preset button is received and the button number is displayed.)

### Up preset seek

 
- ▶ Press the ▶▶ button.  
(The station stored in the next Preset button is received and the button number is displayed.)

# PRIORITY PRESET

- ▶ Press the Priority preset button.  
(As soon as reception begins.)

## TO TURN IT OFF

- ▶ Press the Priority preset button again.  
(The tuner will return to the previous mode.)

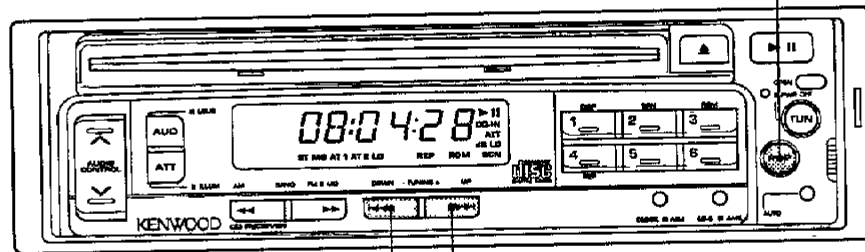

## TO CHANGE THE PRIORITY PRESET

- ▶ Press the Priority preset button and tune to the station you want.  
(The next time you press Priority preset, the tuner will shift to this station automatically.)

 
## NOTE

- Only seek and manual tuning can be used in Priority preset mode.

# TRACK SEARCH

## BACKWARD TRACK SEARCH

- Briefly press the ◀◀ button until you see the number of the track you want to play. The unit will begin playing the track shown on the display.

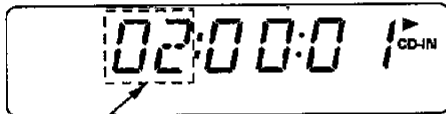


Track No.

## FORWARD TRACK SEARCH

 - Briefly press the ▶▶ button until you see the number of the track you want to play. The unit will begin playing the track shown on the display.




Track No.

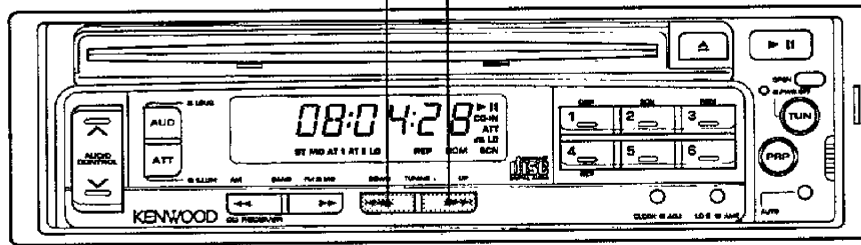

# TRACK REPEAT


**1**

 - To repeat the track you are listening to, press the Track repeat button.  
(The Repeat indicator will appear on the display.)

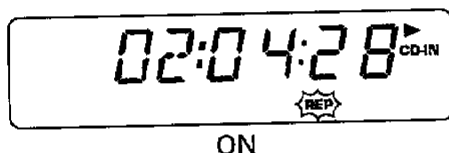

**2**

 The player will repeat the track you are playing.

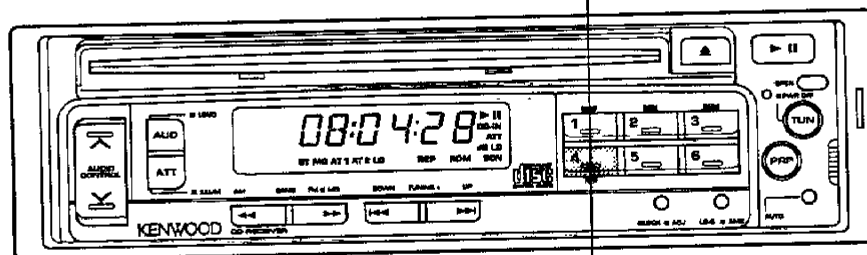

## TO STOP

- Press the Track repeat button again.  
(The Repeat indicator will disappear.)

 
 
# TRACK SCAN

**1**

- Press the Track scan button.

**2**

The player will play the first 10 seconds of each track. The track number will flash on the display.

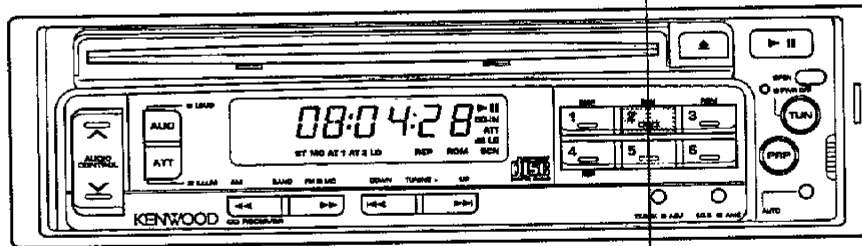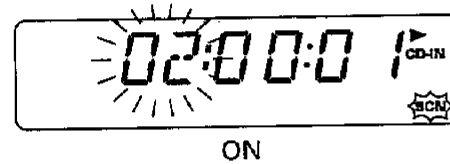

**3**

- To select a track, press the Track scan button again. (Scanning will stop and playback begin.)

# RANDOM PLAY

**1**

 
 
► Press the Random button.  
(The Random indicator will light up, and the player will randomly select another track from the disc you are playing. The track numbers on the display will change continuously.)



During random search

**2**

When the track is selected, playback will begin automatically.

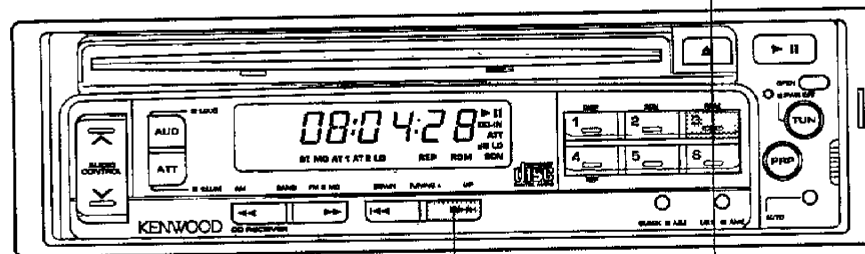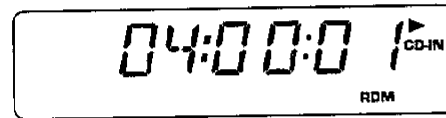

**3 TO SELECT ANOTHER TRACK**

► Press the ►►| button.  
(The player will randomly choose another track.)

 
**TO STOP**

► Press the Random button again.  
(The disc play returns to normal.)



# SELECTABLE ILLUMINATION

- Press the Illumination button for more than one second.  
(The illumination will change from green to orange or vice-versa.)

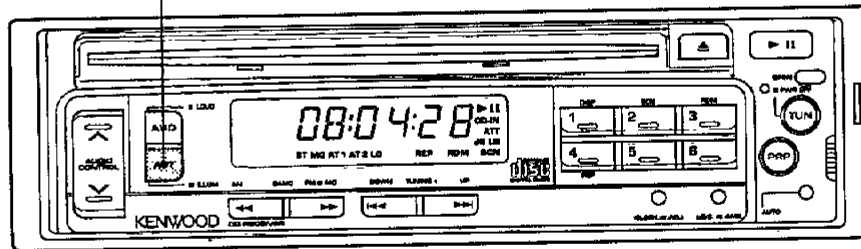


# AUDIO CONTROLS

**1**

- ▶ To select Bass, Treble, Balance, Fader, or return to volume, press the Audio button until the function indicator appears on the display.






**2**

 - ▶ Use the control button to adjust the level of the function you've chosen (For details, see the table on page 27).

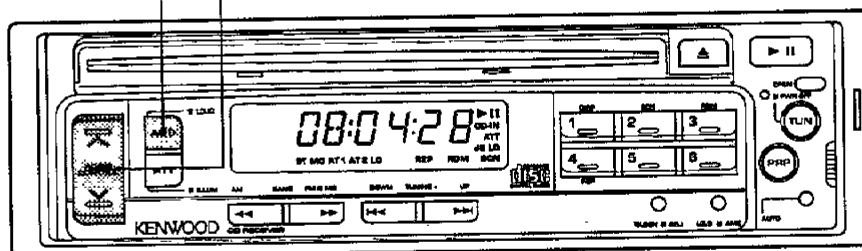

## PLEASE OBSERVE


After five seconds, the controller will return automatically to the Volume setting.

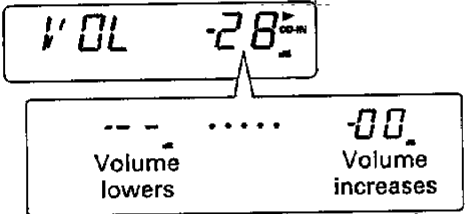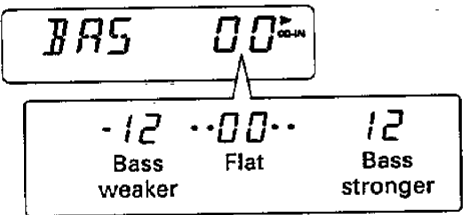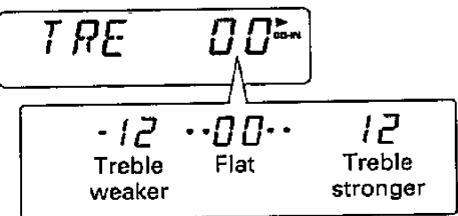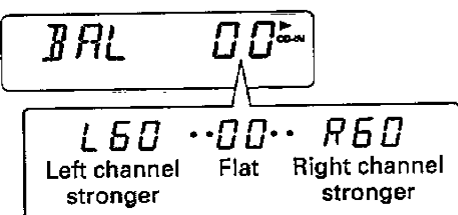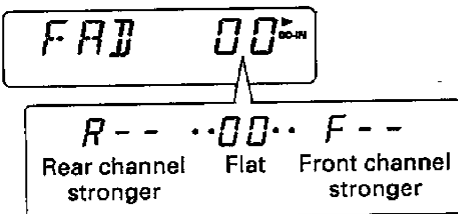Display	Audio Control Operation	
	Press the $\nabla$ button	Press the $\wedge$ button
<p>To adjust volume</p> 	Volume lowers	Volume increases
<p>To adjust bass</p> 	Bass weaker	Bass stronger
<p>To adjust treble</p> 	Treble weaker	Treble stronger
<p>To adjust right/left channel balance</p> 	Left channel stronger	Right channel stronger
<p>To adjust front/rear balance</p> 	Rear channel stronger	Front channel stronger

# CLOCK DISPLAYS/SETTING

 
## ■ Displays change like this

- ▶ Pressing the Clock button changes displays as indicated to the right.

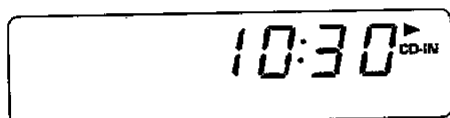

Clock indication

Time	Displays
Tuner	Frequency ⇄ Time
CD	Track Number / Track Time ⇄ Time

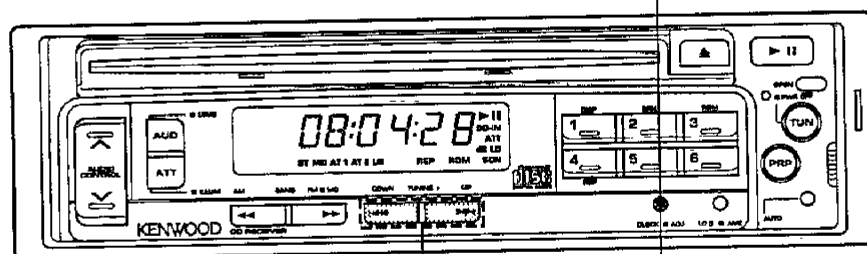 

## ■ To set the clock

**1**

- ▶ If the time is not being displayed, press the Clock button.

**2**

 
- ▶ While holding down the Clock button, press ◀◀ to change the hour and ▶▶ to change the minute.

# THEFT DETERRENT FACEPLATE

## ■ To remove the faceplate



1

Press the Open button to unlock the faceplate, then remove carefully.

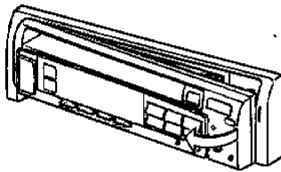

2

  
Place the faceplate in the storage case with the button side facing up.

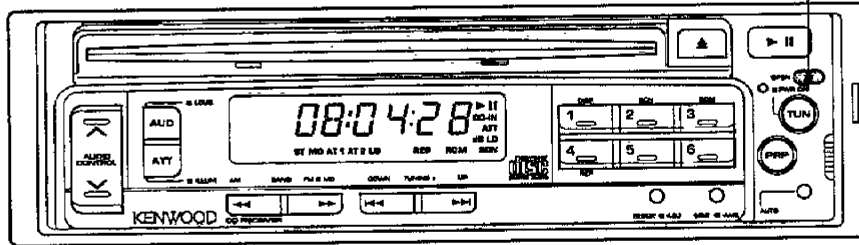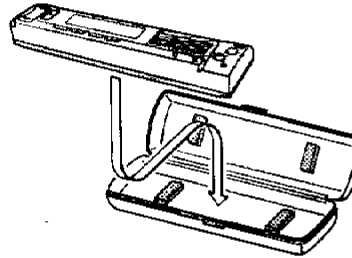

## ■ To install the faceplate


1

 Align the projections on the faceplate mount with the grooves on the left side of the faceplate.

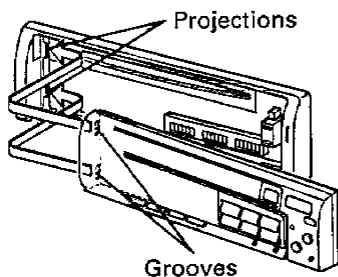

2

 Press on the right side of the faceplate until it locks in place.

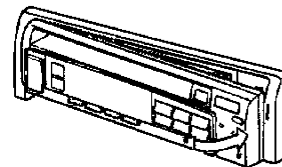

## NOTE

### Disabled system indicator

- To deter theft, this unit is equipped with a Disabled system indicator. It can be turned ON and OFF by holding down preset station buttons "1" and "3" while turning the power on.

# CHANNEL BAND SELECTION

 
**1**

Turn power OFF.

**2**

► Hold down preset station buttons "1" and "5"

► Turn power ON.  
(The bands will change to 50kHz for FM and 9kHz for AM.)

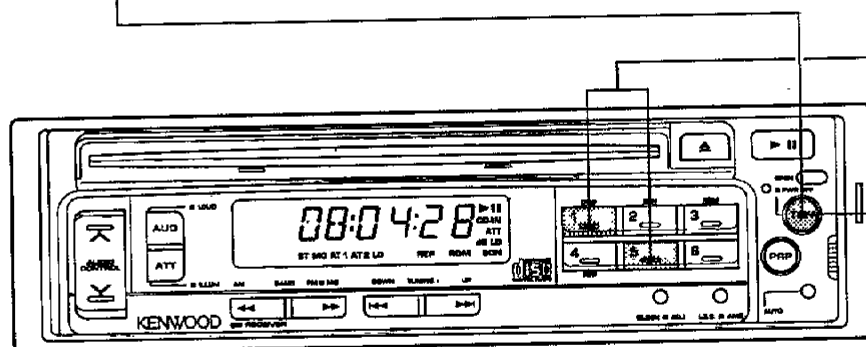







**3**

Repeating steps 1 and 2 will change the bands back to 200kHz for FM and 10kHz for AM.

## NOTE

- When the bands are changed, all memory settings will be erased.
- This feature is not used in the United States and Canada.

# ACCESSORIES

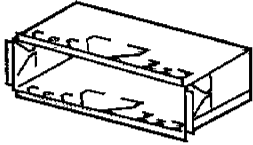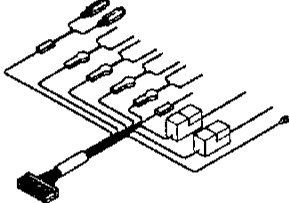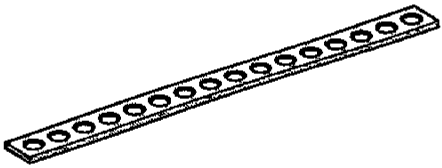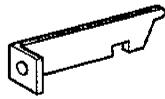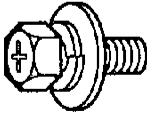Part Name	External View	Number of Items
Mounting case		1
Power cord		1
Metal mounting strap		1
Removal tool		1
Assembly screw with washer (M4 × 8)		1
Machine screw (M5 × 6)		4

# INSTALLATION PROCEDURE

 
1. Before starting installation, disconnect the negative (-) terminal of the battery. This will prevent short circuits.
2. Connect the Input and Output leads (see p.33).
3. Connect the Ground lead (Black) to the metal body of the car (see p.33).
4. Connect the Memory backup lead (Yellow) (see p.33).
5. Connect the Power supply lead (Red) (see p.33).
6. Install the unit in the car (see p.34).
7. Connect the negative (-) terminal of the battery.
8. Press the Reset button.

## ▲ CAUTION

- A short circuit may cause a blown fuse. A short circuit is a serious problem that could also cause a fire. Check the wiring carefully and, if any wires are short-circuited, rewire immediately. If no short-circuits are found, replace the fuse with one having the same rating (see indication in fuse box).
- Check that no unconnected wires or connectors are in contact with the body of the car. Extraneous noise or current entering the system can cause malfunction or damage.
- To provide more power, this product is equipped with a BTL (Balanced Transformer Less) system. But in this type of system, sharing different speaker terminals or connecting or grounding speaker terminals to the car can cause distortion or damage.


## ■ Installation Angle

This unit must be installed at an angle of less than 30° from the horizontal.

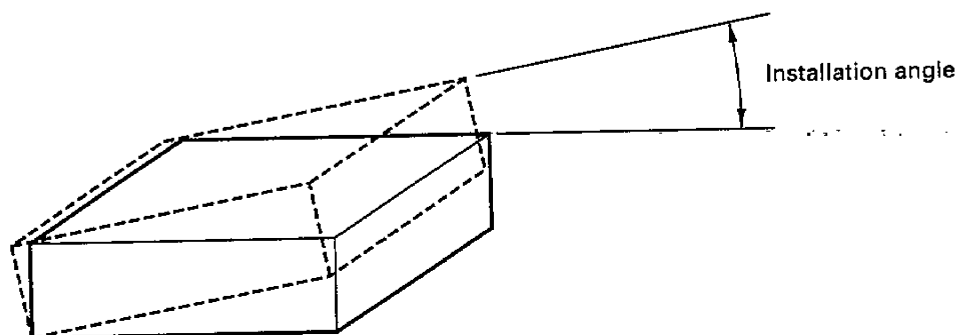


## ■ Speaker output selector switch.

 Set the selector switch on the bottom plate according to the speaker system used.

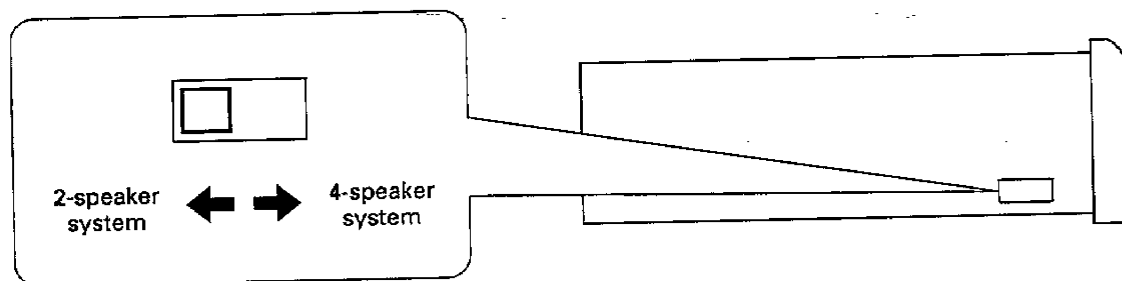



# CONNECTIONS

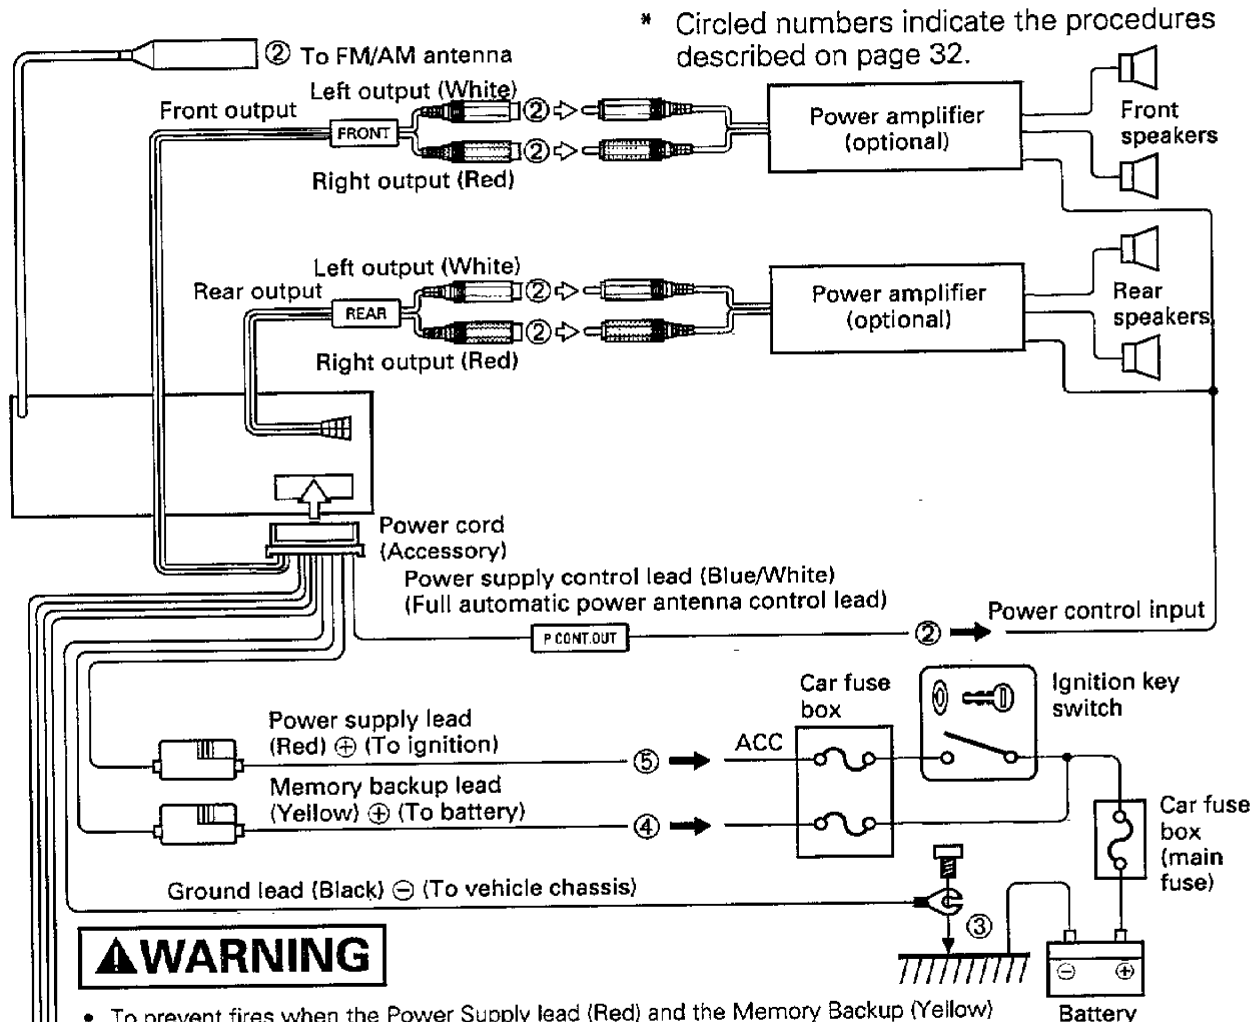 


## WARNING

- To prevent fires when the Power Supply lead (Red) and the Memory Backup (Yellow) lead are short-circuited by coming into contact with the vehicle chassis (ground), only connect the power supply after making the fuse box connections first.


## NOTE

 - Check to be sure that the speaker selector switch is set properly for the 4-speaker or 2-speaker system you are using.

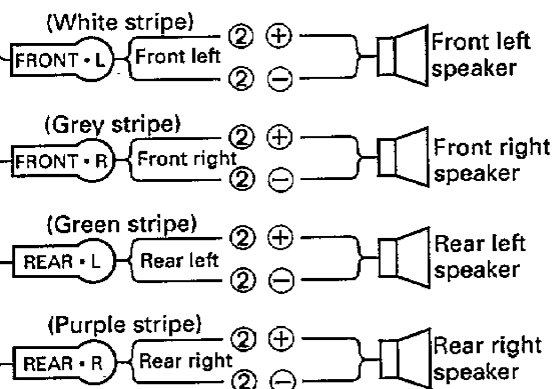


## CAUTION

 - When two speakers are connected to the system, be sure to connect them as indicated below. Any other connection will cause sound distortion and damage to the speakers.

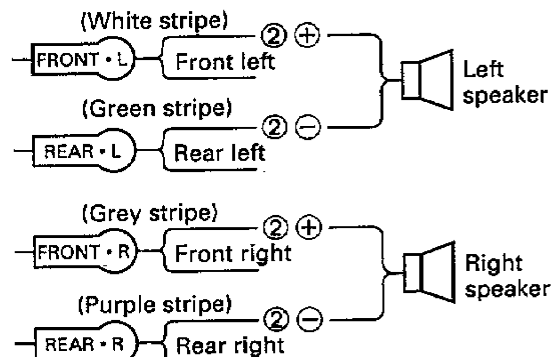


# INSTALLATION

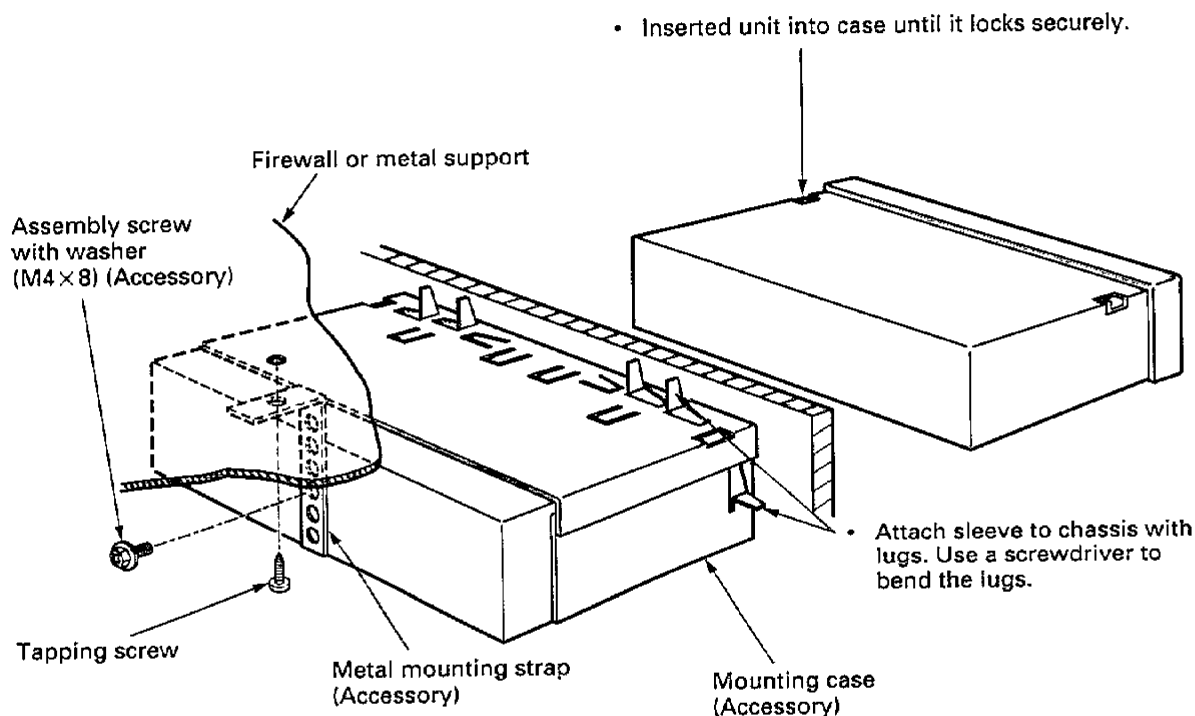 

## NOTE

 
- Securely install the unit. If the case is not installed correctly, the sound may be skipped.
- When installing in some cars made in Japan, insert Machine screws (M5 x 6) (Accessory) into 2 of the holes indicated below.

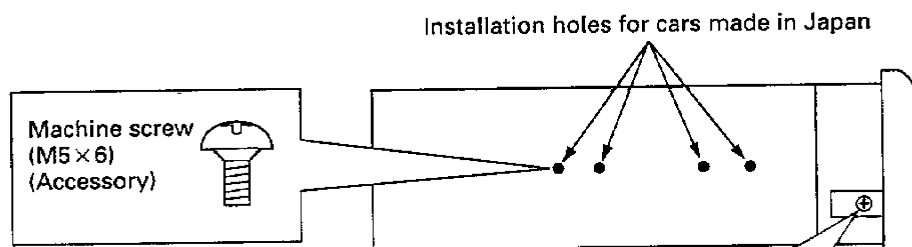


## CAUTION

After removing the panel, be sure to re-install this screw.

 
## ■ To remove the unit

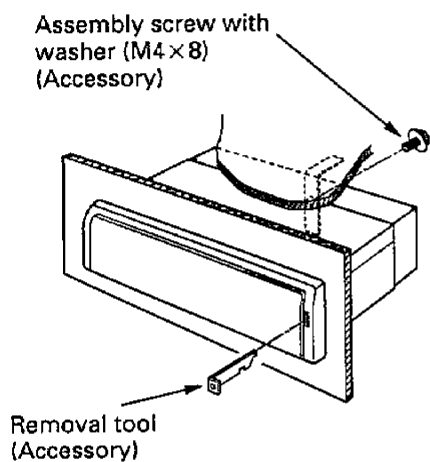

 1. Remove the assembly screw and washer holding on the back panel. Then insert removal tool into slot.

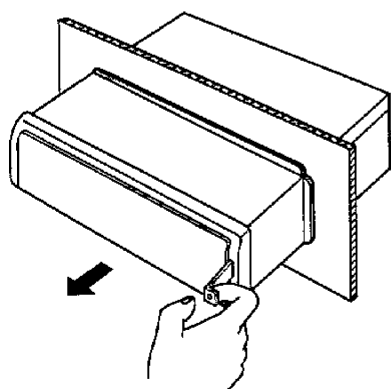

 2. Use the removal tool to pull out the unit.

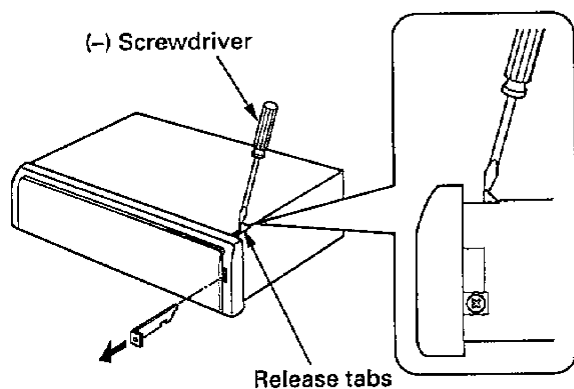

3. While using a screwdriver to press down the release tabs on the side of the chassis, pull out the removal tool.

# TROUBLESHOOTING GUIDE

Often, what appears to be a malfunction is due to user error. Before calling for service, please consult the following table.

Symptom	Cause	Remedy
Compact disc cannot be inserted.	A compact disc has already been inserted and you are trying to insert another disc.	Eject the previously inserted disc and insert another one.
A disc is ejected immediately after being inserted.	1. The compact disc is inserted upside down. 2. The compact disc is very dirty.	1. Insert the disc with the labeled side facing up. 2. Clean the disc (refer to "Cleaning of compact disc").
Even when the required track is specified, the specified track is not played or the player does not function.	The player is set to RANDOM PLAY.	Release RANDOM PLAY.
Sound is skipped by vibrations.	1. The compact disc is dirty or damaged.  2. The unit is not installed securely.	1. If the sound skips even while the car is stationary, clean the compact disc (refer to "Cleaning of compact disc"). 2. Install the unit securely.
The sound quality is poor due to noise during playback.	1. The compact disc is damaged or dirty.  2. The sound recorded in the compact disc itself is poor.	1. Clean the compact disc (refer to "Cleaning of compact disc"). 2. Try playing another compact disc. If its sound quality is good, the poor sound was due to the disc itself.
No sound one channel.	The balance/fader control is extremely rotated to one side.	Adjust the balance/fader control.
Poor reception.	The antenna is not extended.	Extend the antenna.
Operation switches do not function.	Correct operation is not obtained due to a sudden change in the power voltage, etc.	Press the Reset button of the front panel.
The tuner cannot be operated in the modes other than the Auto seek tuning and the Manual seek tuning.	The tuner is set to the Priority preset mode.	Cancel the Priority preset mode.

# SPECIFICATIONS

Specification subject to change without notice.

## Disc Section

Laser Diode .....	GaAlAs ( $\lambda=780$ nm)
Digital Filter (D/A) .....	8 Times Over Sampling
D/A Converter .....	1 bit (with D.P.A.C.)
Spindle Speed .....	500~200 rpm (CLV)
Wow & Flutter .....	Below Measurable Limit
Frequency Response ( $\pm 1$ dB) .....	10 Hz~20 kHz
Total Harmonic Distortion (1 kHz) .....	0.01%
Signal to Noise Ratio .....	93 dB
Dynamic Range .....	96 dB
Channel Separation .....	85 dB
Laser Diode Properties	
Material .....	GaAlAs
Wavelength .....	780 nm
Emission Duration .....	Continuous
Laser Output Power .....	Less than 44.6 $\mu$ W

\* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

## FM Tuner Section

Frequency Range .....	87.9 MHz~107.9 MHz
Channel Space .....	200 kHz
Usable Sensitivity .....	12.0 dBf (1.1 $\mu$ V/75 $\Omega$ )
50 dB Quieting Sensitivity .....	15.2 dBf (1.6 $\mu$ V/75 $\Omega$ )
Frequency Response ( $\pm 1$ dB) .....	30 Hz~15 kHz
Signal to Noise Ratio (IEC-A) .....	73 dB
Selectivity (DIN) .....	70 dB
Capture Ratio .....	1.5 dB
Stereo Separation (1 kHz) .....	40 dB

## AM Tuner Section

Frequency Range .....	530 kHz~1700 kHz
Channel Space .....	10 kHz
Usable Sensitivity .....	27 dB $\mu$

## Audio Section

Max. Power Output .....	25 W $\times$ 2 or 9 W $\times$ 4
Power Output (4 $\Omega$ , 30 Hz~20 kHz, 1% THD) .....	15 W $\times$ 2 or 6 W $\times$ 4
Tone Action .....	Bass: $\pm 8$ dB (100 Hz) Treble: $\pm 8$ dB (10 kHz)
Preout Level (10 k $\Omega$ ) .....	1.0 V

## General

Operating Voltage .....	14.4 V (11~16 V)
Current Consumption .....	5.0 A
Operating Temperature .....	-10~50 $^{\circ}$ C
Installation Size (W $\times$ H $\times$ D) .....	182 $\times$ 52 $\times$ 163 mm (7-3/16 $\times$ 2-1/16 $\times$ 6-7/16 in.)
Weight .....	1.8 kg (4.0 LBS)

KENWOOD