


# Service Manual

**74 SR45/01B/02B/05B/UBL**

**Stereo Receiver**

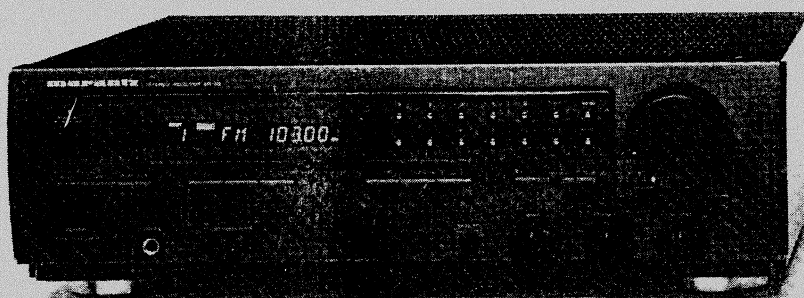

Model 74 SR45/02B

## TABLE OF CONTENTS

SECTION	PAGE
1. BLOCK DIAGRAM AND COMPONENTS .....	1
2. SCHEMATIC DIAGRAMS, PCB'S AND COMPONENTS .....	3
3. WIRING DIAGRAM .....	41
4. EXPLODED VIEW AND PARTS LIST .....	44
5. ALIGNMENT PROCEDURES .....	47
6. ELECTRICAL PARTS LIST .....	51

Please use this service manual with referring to the user guide (D.F.U.) without fail.

**marantz®**

**model SR-45**

First issue : 1995

## MARANTZ DESIGN AND SERVICE

Using superior design and selected high grade components, **MARANTZ** company has created the ultimate in stereo sound. Only original **MARANTZ** parts can insure that your **MARANTZ** product will continue to perform to the specifications for which it is famous.

Parts for your **MARANTZ** equipment are generally available to our National Marantz Subsidiary or Agent.

### ORDERING PARTS:

Parts can be ordered either by mail or by Fax.. In both cases, the correct part number has to be specified.

The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which part is required
5. Way of shipment
6. Signature: any order form or Fax. must be signed, otherwise such part order will be considered as null and void.

#### USA

MARANTZ AMERICA, INC.  
440 MEDINAH ROAD  
ROSELLE, ILLINOIS 60172-2330  
USA  
PHONE : 708-307-3100  
FAX : 708-307-2687

#### CANADA

LENBROOK INDUSTRIES LIMITED  
633 GRANITE COURT,  
PICKERING, ONTARIO L1W 3K1  
CANADA  
PHONE : 416-831-6333  
FAX : 416-831-6936

#### EUROPE

MARANTZ EUROPE B.V.  
P.O. BOX 80002  
BUILDING SFF2  
5600 JB EINDHOVEN  
THE NETHERLANDS  
PHONE : +31-40-732241  
FAX : +31-40-735578

#### PROFESSIONAL-USA

SUPERSCOPE TECHNOLOGIES, INC.  
MARANTZ PROFESSIONAL PRODUCTS  
1000 CORPORATE BLVD., SUITE D  
AURORA, ILLINOIS 60504 USA  
PHONE : 708-820-4800  
FAX : 708-820-8103

#### PROFESSIONAL-CANADA

TC ELECTRONICS CANADA LTD  
540 FIRING AVE.  
BAIE D'URFÉ, QUEBEC H9X 3T2  
CANADA  
PHONE : 514-457-4044  
FAX : 514-457-5524

#### TRADING

MARANTZ EUROPE B.V.  
P.O. BOX 80002  
BUILDING SFF2  
5600 JB EINDHOVEN  
THE NETHERLANDS  
PHONE : +31-40-732241  
FAX : +31-40-735578

#### AUSTRALIA

MARANTZ AUSTRALIA  
3 Figtree Drive  
Australia Centre  
Homebush, NSW2140 AUSTRALIA  
PHONE : +61 2 742.8311  
FAX : +61 2 7643074

#### HONG-KONG

FORWARD INTERNATIONAL CORP. LTD.  
15 TH FLOOR, REGENT CENTRE,  
88 QUEEN'S ROAD, CENTRAL, H. K.  
PHONE : +852 521-0883  
FAX : +852 521-7835

#### THAILAND

MRZ STANDARD CO., LTD.  
746-750 WANGBURAPA BANGKOK  
10200 THAILAND  
PHONE : +66 2222 9181  
FAX : +66 2225 8871

#### TAIWAN

PAI-YUING CO., LTD.  
6 TH FL NO. 148 SUNG KIANG RORD,  
TAIPEI, 10429, TAIWAN R.O.C.  
PHONE : +886 (2) 5221304-8  
FAX : +886 (2) 5630415

#### MALAYSIA

WO KEE HONG ELECTRONICS SDN. BHD.  
NO. 102 JALAN SS 21/35, DAMANSARA  
UTAMA, 47400 PETALING JAYA  
SELANGOR DARUL EHSAN,  
MALAYSIA  
PHONE : +60 3-7184666  
FAX : +60 3-7173828

#### SINGAPORE

WO KEE HONG (SINGAPORE) PTE. LTD.  
29, LENG KEE ROAD  
SINGAPORE 0315,  
PHONE : +65 475-4555  
FAX : +65 475-8623

#### JAPAN—Technical

MARANTZ JAPN INC.  
35-1, 7-chome, Sagamiono  
Sagamihara-shi, Kanagawa  
Japan  
PHONE : +81 427 48 2181  
FAX : +81 427 48 0889

#### 日本マランツ株式会社

本社 〒228 神奈川県相模原市相模大野7丁目35番1号  
営業本部 〒150 東京都渋谷区恵比寿南1丁目11番9号

### SHOCK, FIRE HAZARD SERVICE TEST:

**CAUTION:** After servicing this appliance and prior to returning to customer, measure the resistance between either primary AC cord connector pins ( with unit NOT connected to AC mains and its Power switch ON ), and the face or Front Panel of product and controls and chassis bottom.


Any resistance measurement less than 1 Megohms should cause unit to be repaired or corrected before AC power is applied, and verified before it is return to the user/customer.

Ref. UL Standard NO.1492.

In case of difficulties, do not hesitate to contact the Technical  
Department at above mentioned address.

950501KI

# 1. BLOCK DIAGRAM

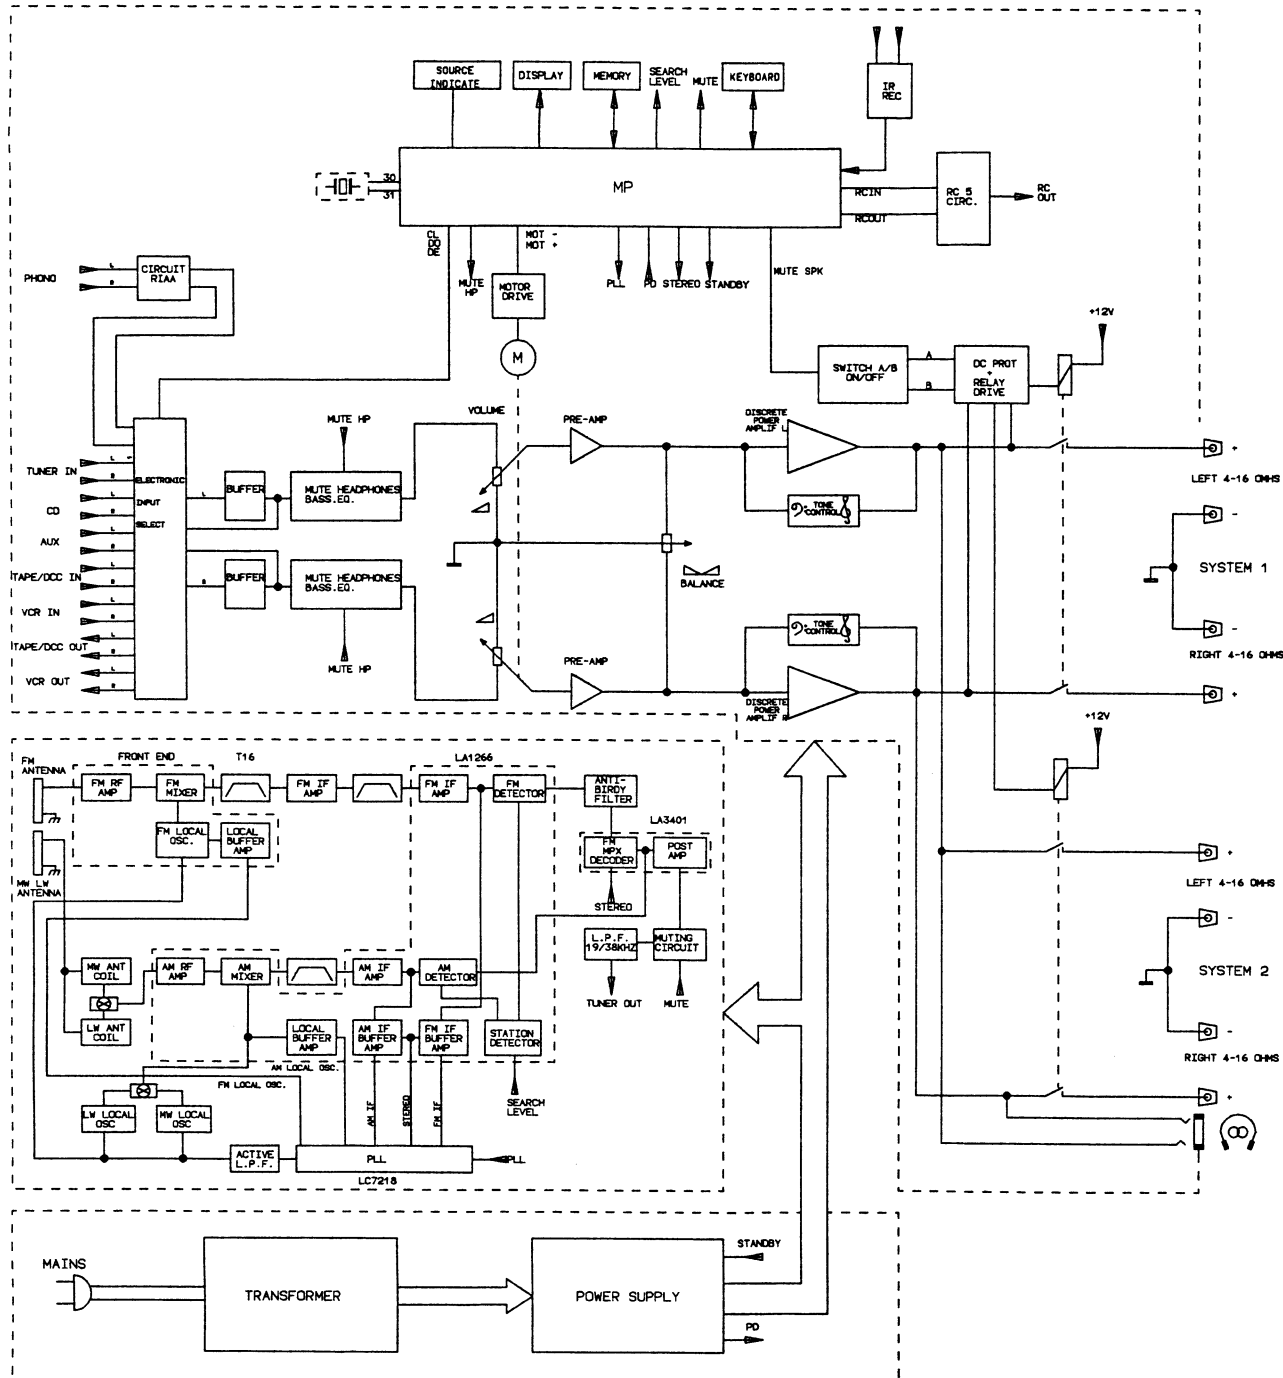


## RESISTOR

- KSW 0204 DIN
- MSW 0204 DIN
- KSW 0207 DIN
- MSW 0207 DIN
- KSW 0309 DIN
- MSW 0411 DIN
- KSW 0617 DIN
- MSW 0309 DIN
- NTC
- MSW 0414 DIN
- METAL OXIDE
- LOW NOISE
- LOW FLAMMABILITY
- SAFETY RESISTOR


## CAPACITOR

- ELECTROLYTIC
- TANTALUM ELECTROLYTIC
- FOIL
- CERAMIC
- MULTILAYER
- POLYPROPYLEN (KS-KP)

## TOP VIEW

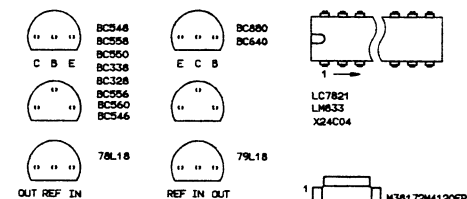

## FRONT VIEW

 


ATTENTION!  
OBSERVE MOS COMPONENTS HANDLING  
INSTRUCTIONS WHEN SERVICING!

ABSOLUTELY NECESSARY FOR THE SAFETY OF THE SET, THESE COMPONENTS  
MEET THE SAFETY REQUIREMENTS ACCORDING TO VDE OR IEC, RESP.  
AND MUST BE REPLACED BY PARTS OF SAME SPECIFICATION ONLY.

IF NOT OTHERWISE INDICATED ALL VOLTAGES ARE MEASURED  
AGAINST CHASSIS WITH A VOLTMETER (R1=10M $\Omega$ ).


# 2. SCHEMATIC DIAGRAM AND PCBS

## 2.1 SCHEMATIC DIAGRAM TUNER BOARD - PART 1

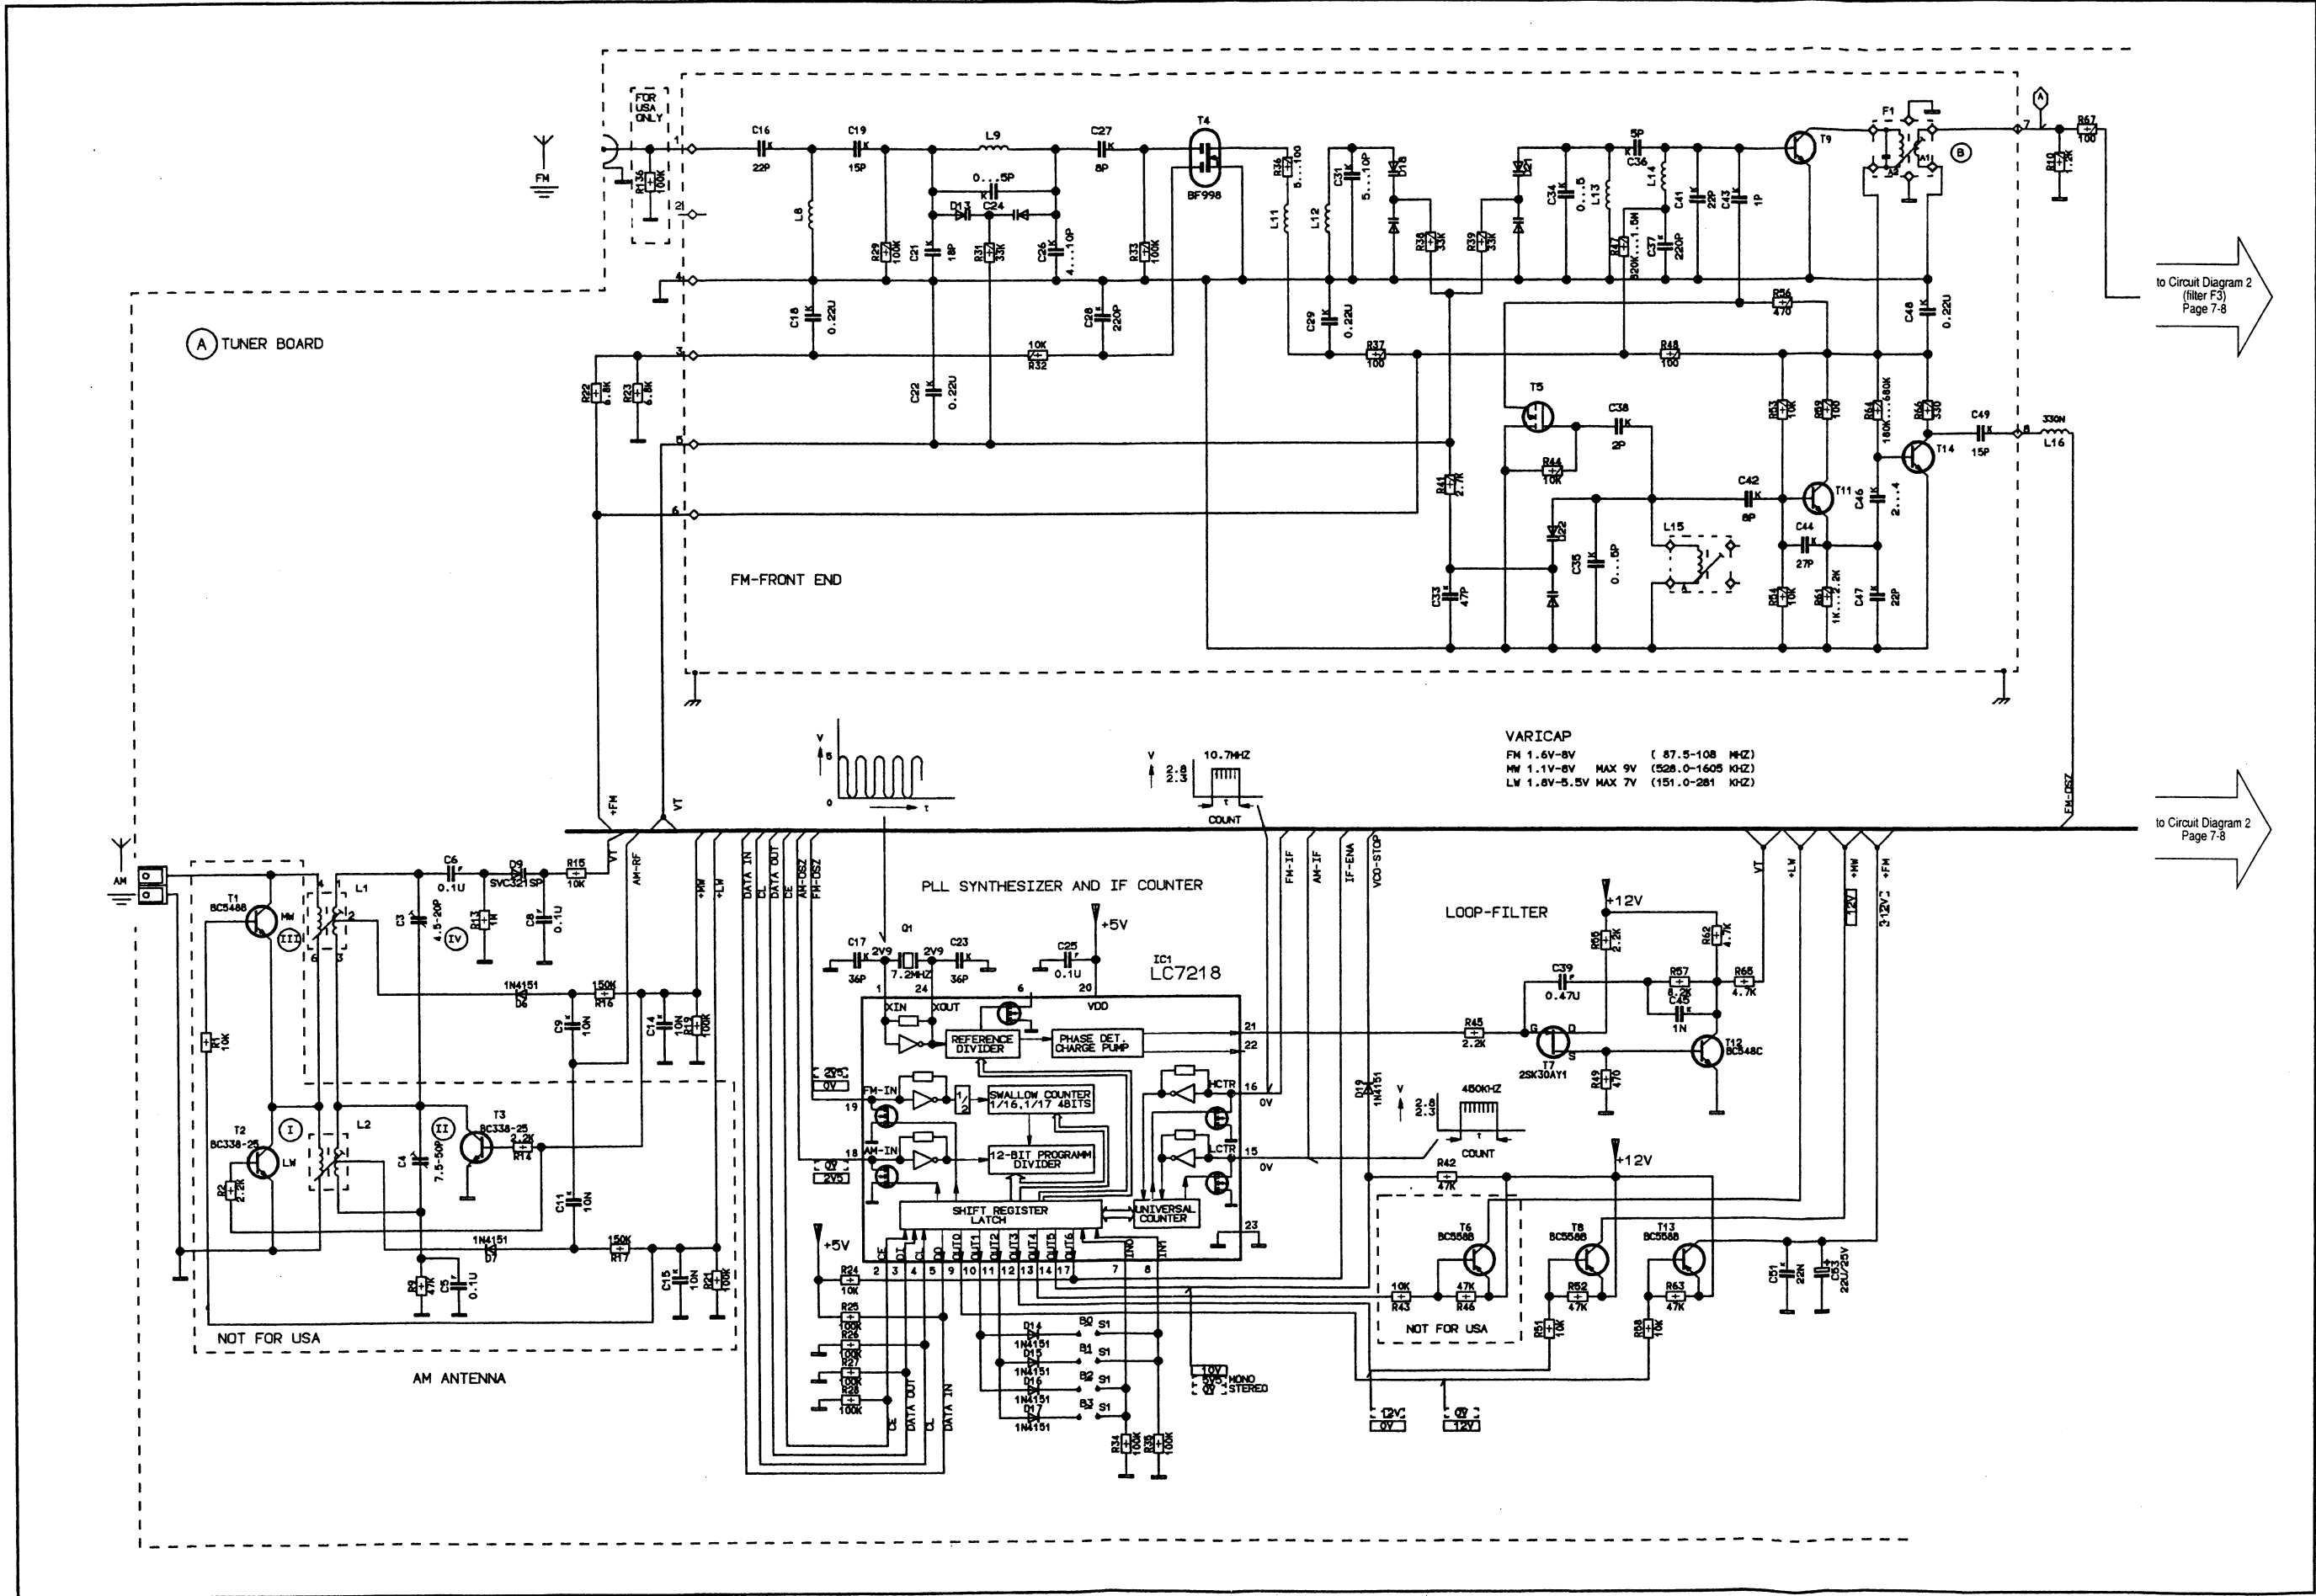





2.2 TUNER PCB  
(component side)

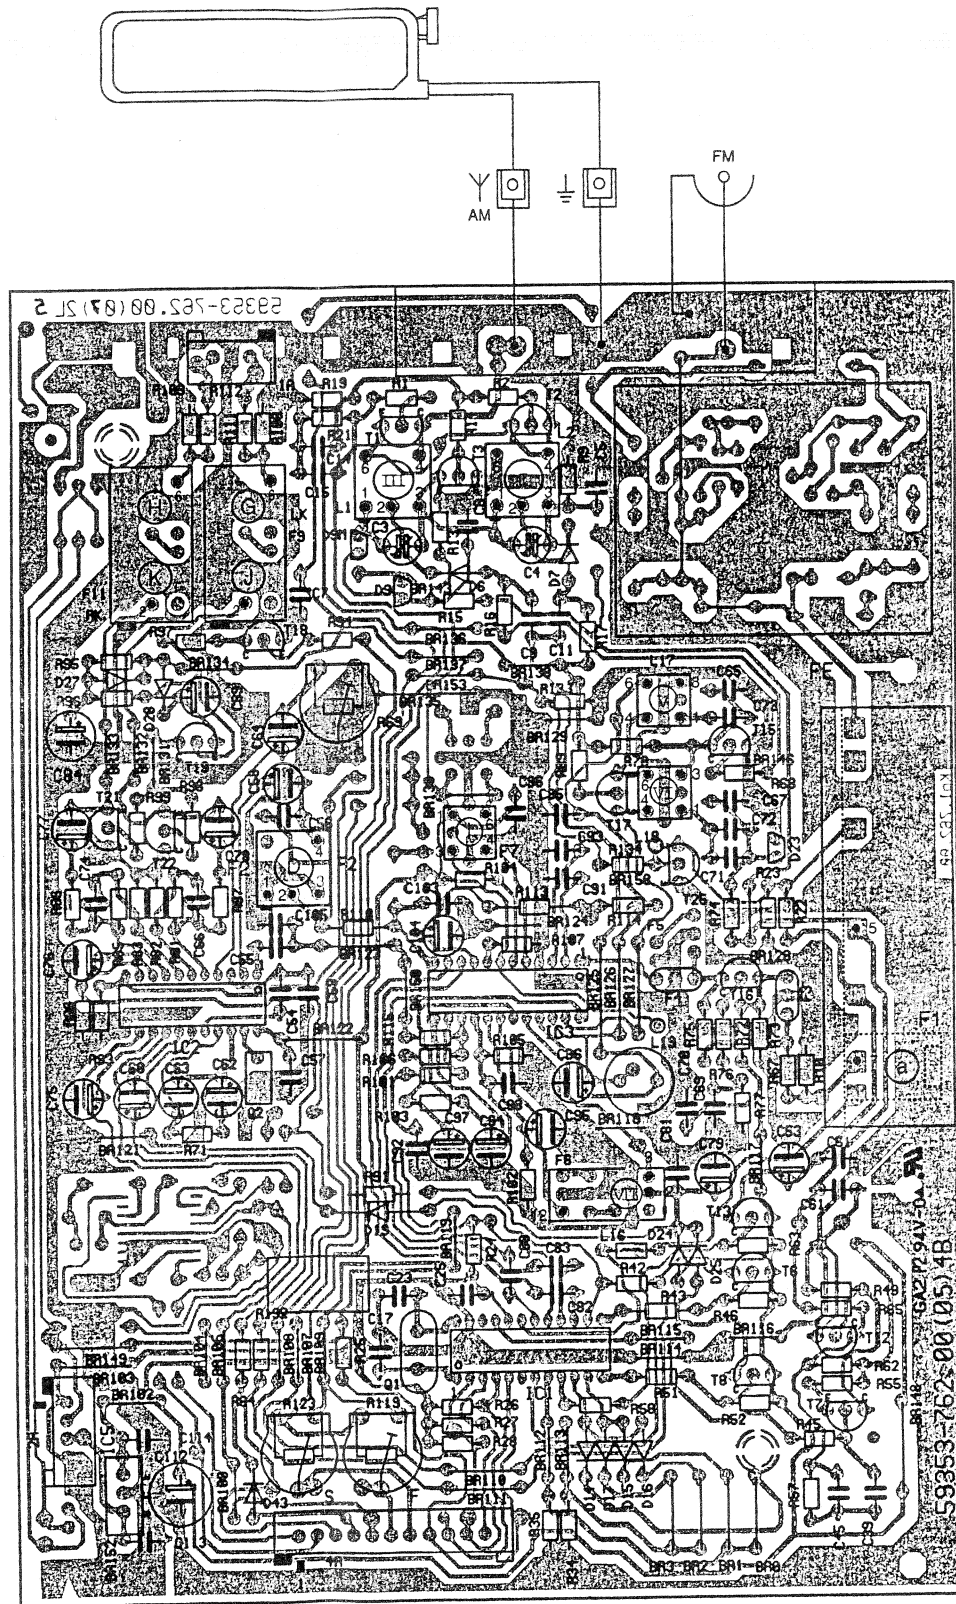


2.2 TUNER PCB  
(component side)

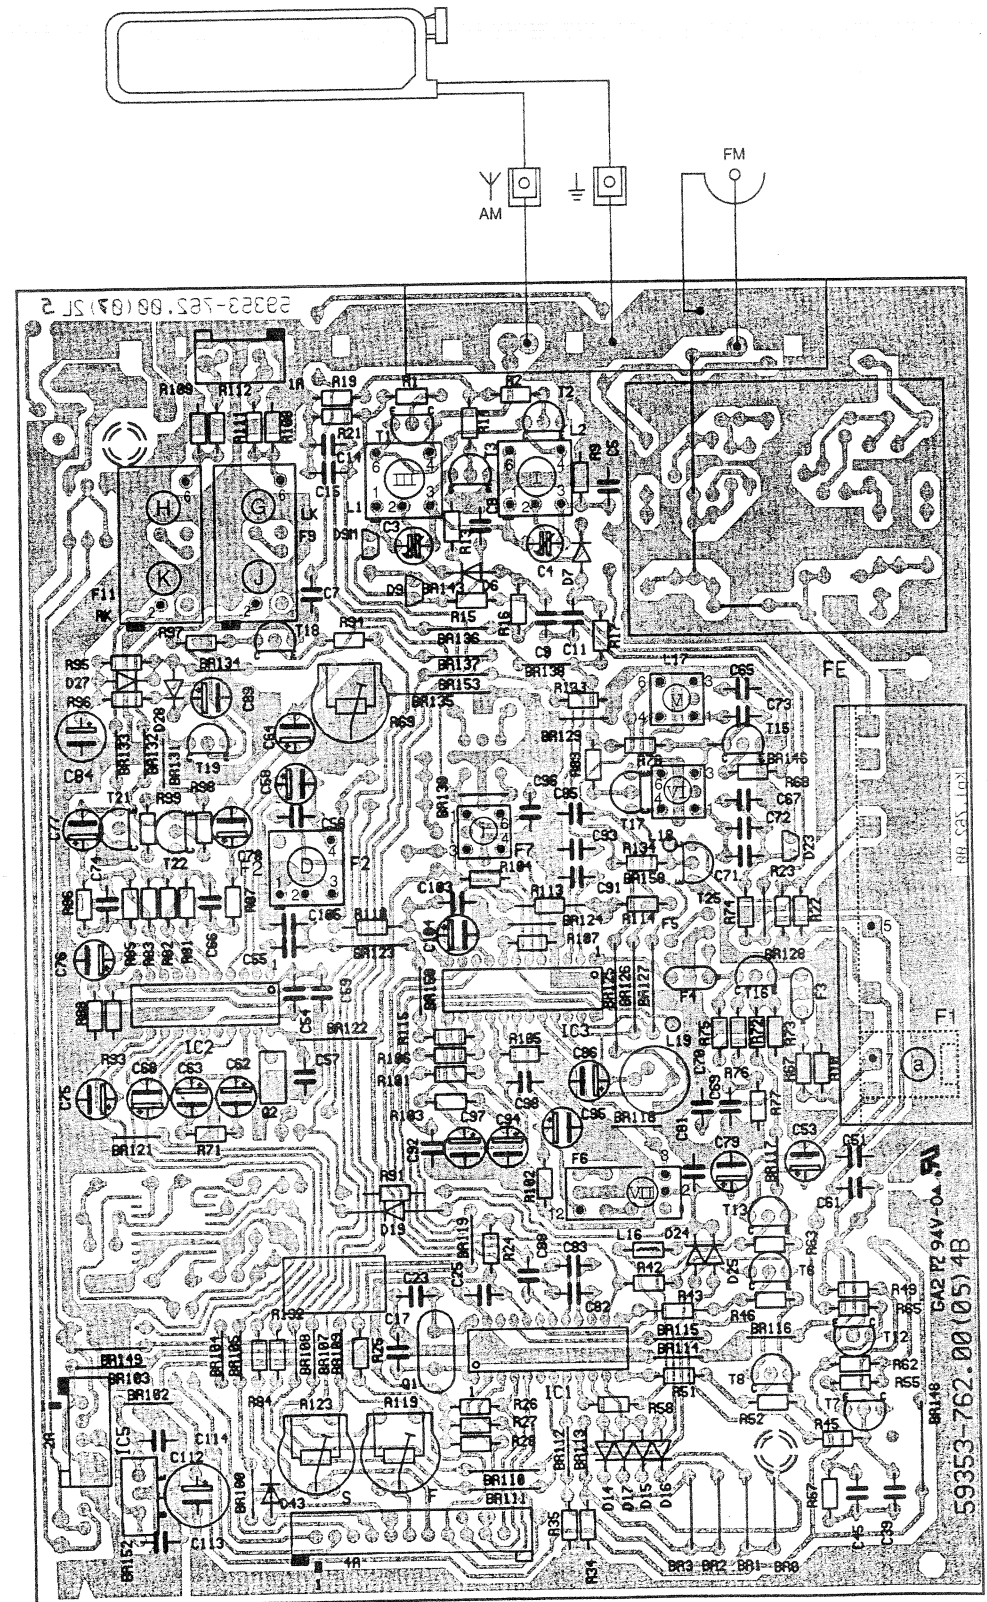


## 2.3 SCHEMATIC DIAGRAM TUNER BOARD - PART 2

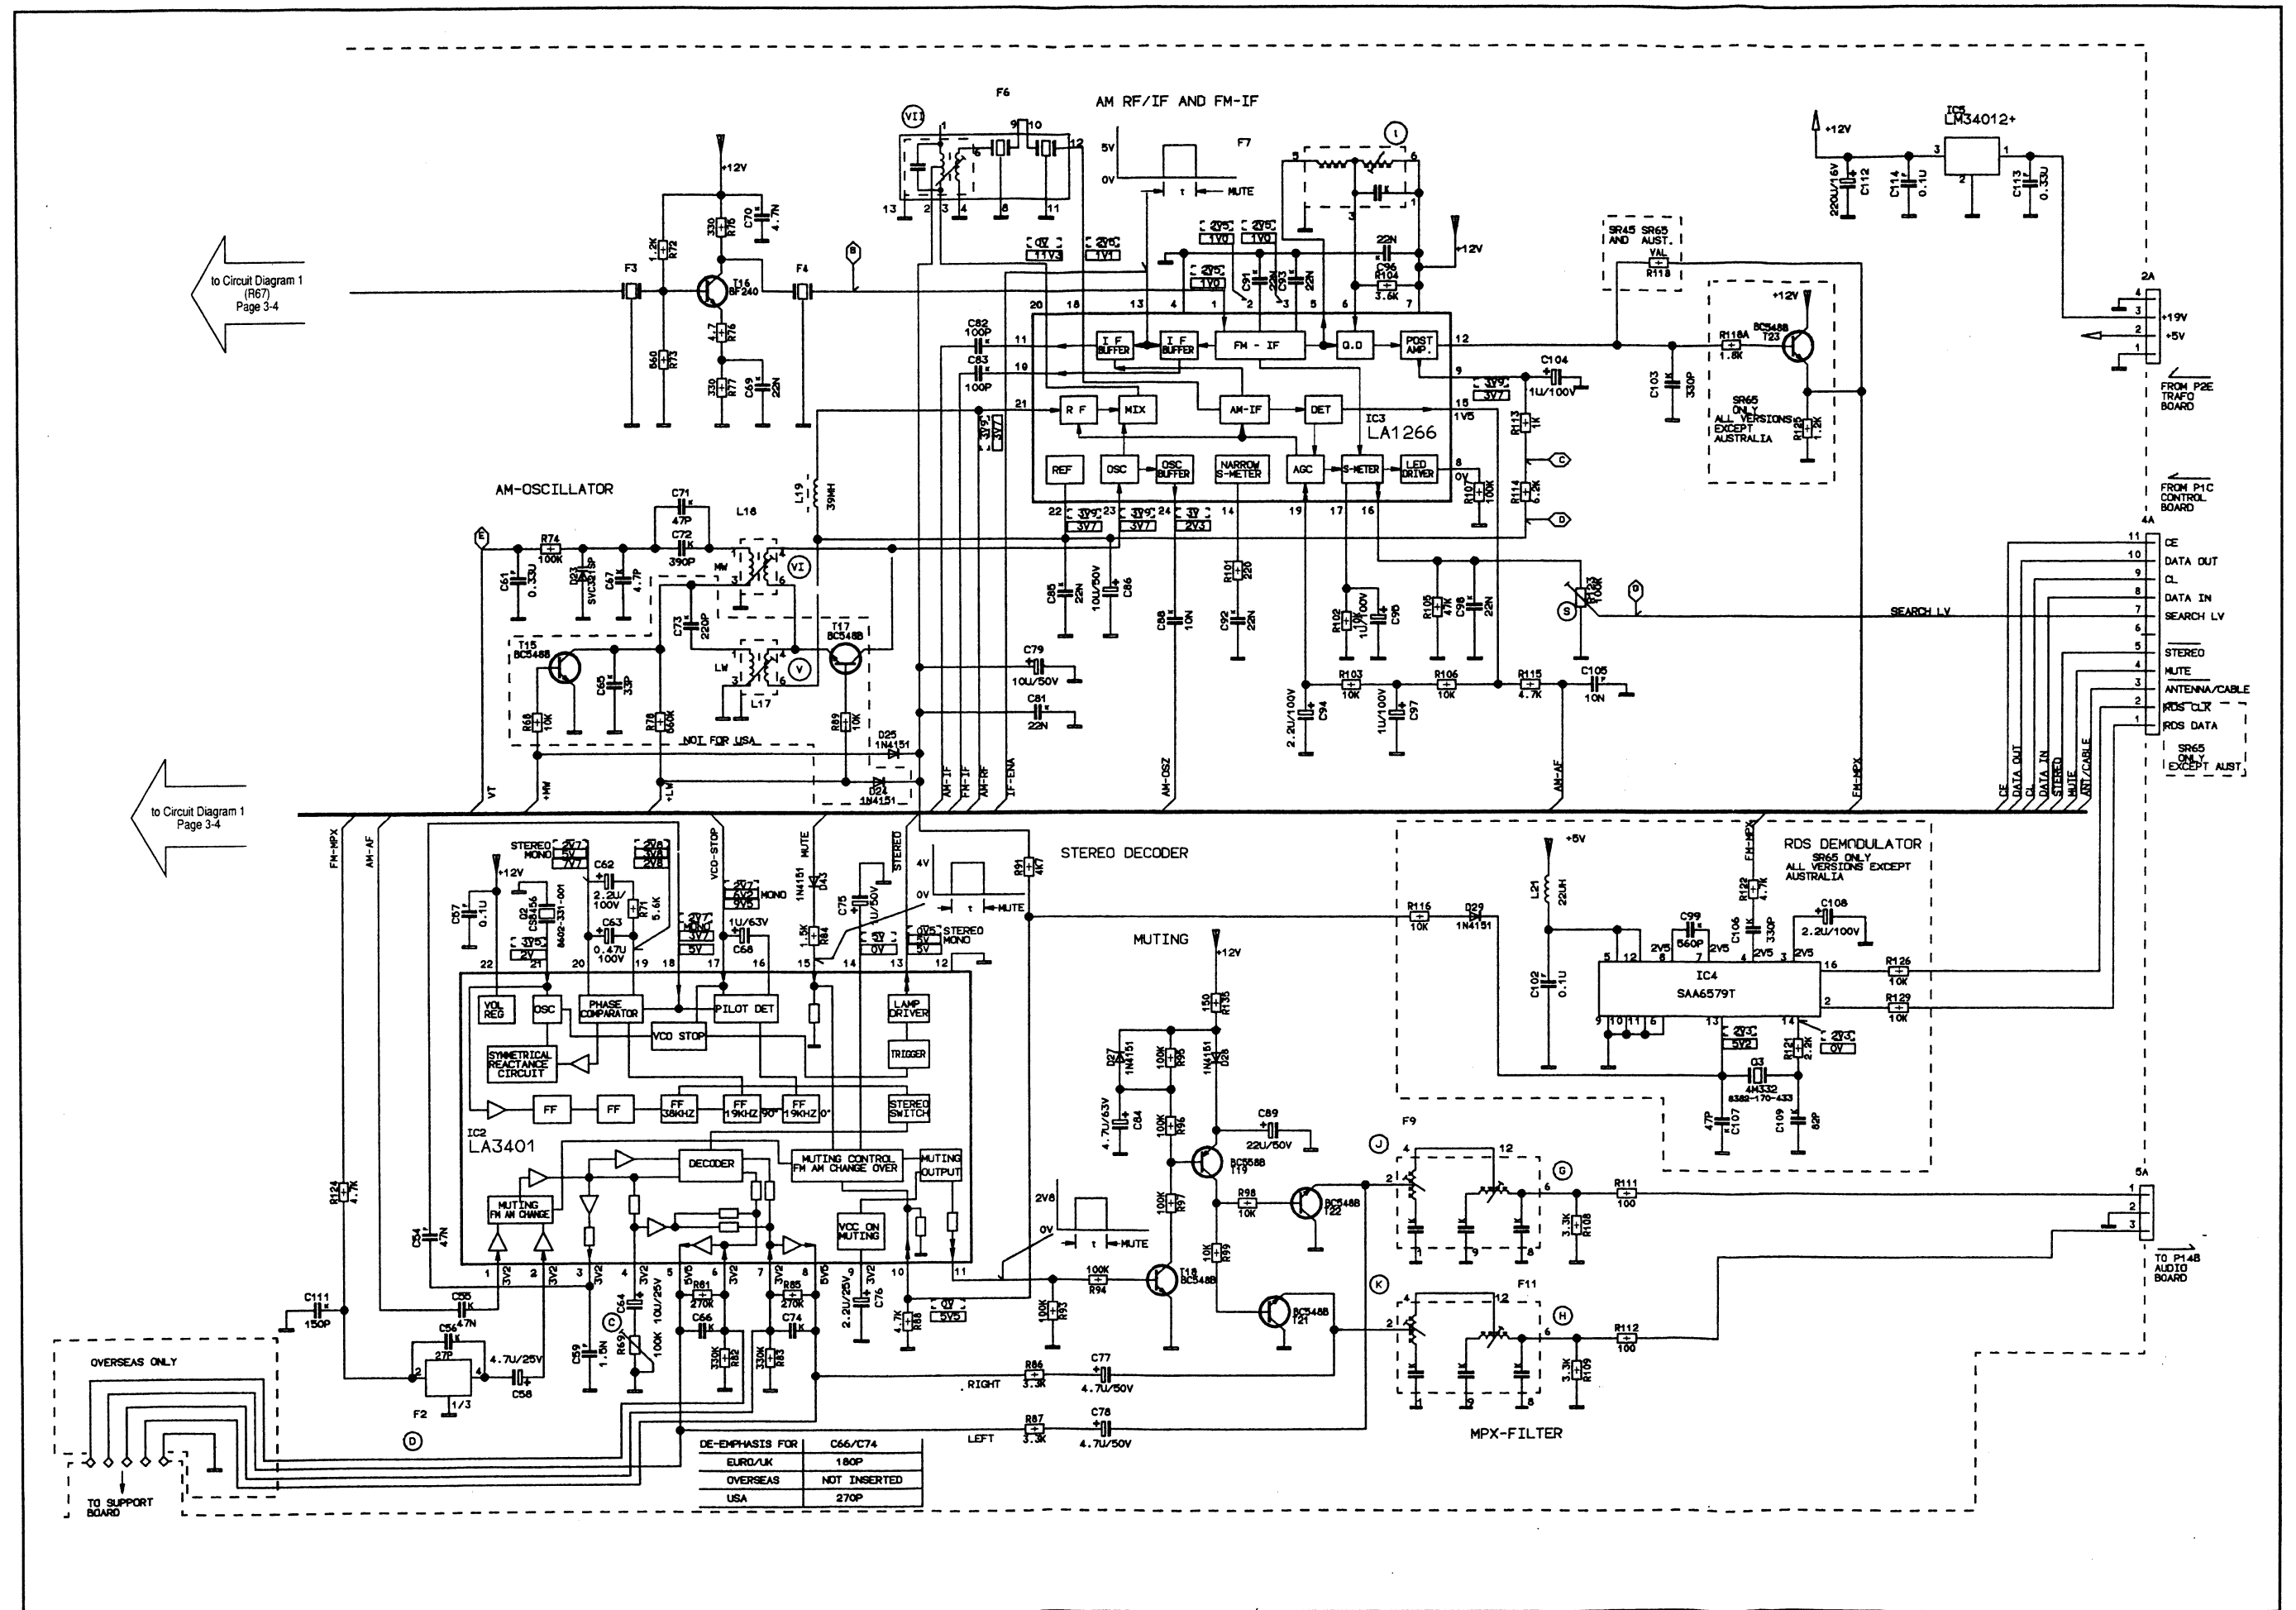


## 2.4 SCHEMATIC DIAGRAM: OPERATING BOARD, SUPPORT BOARD, SCAN BOARD

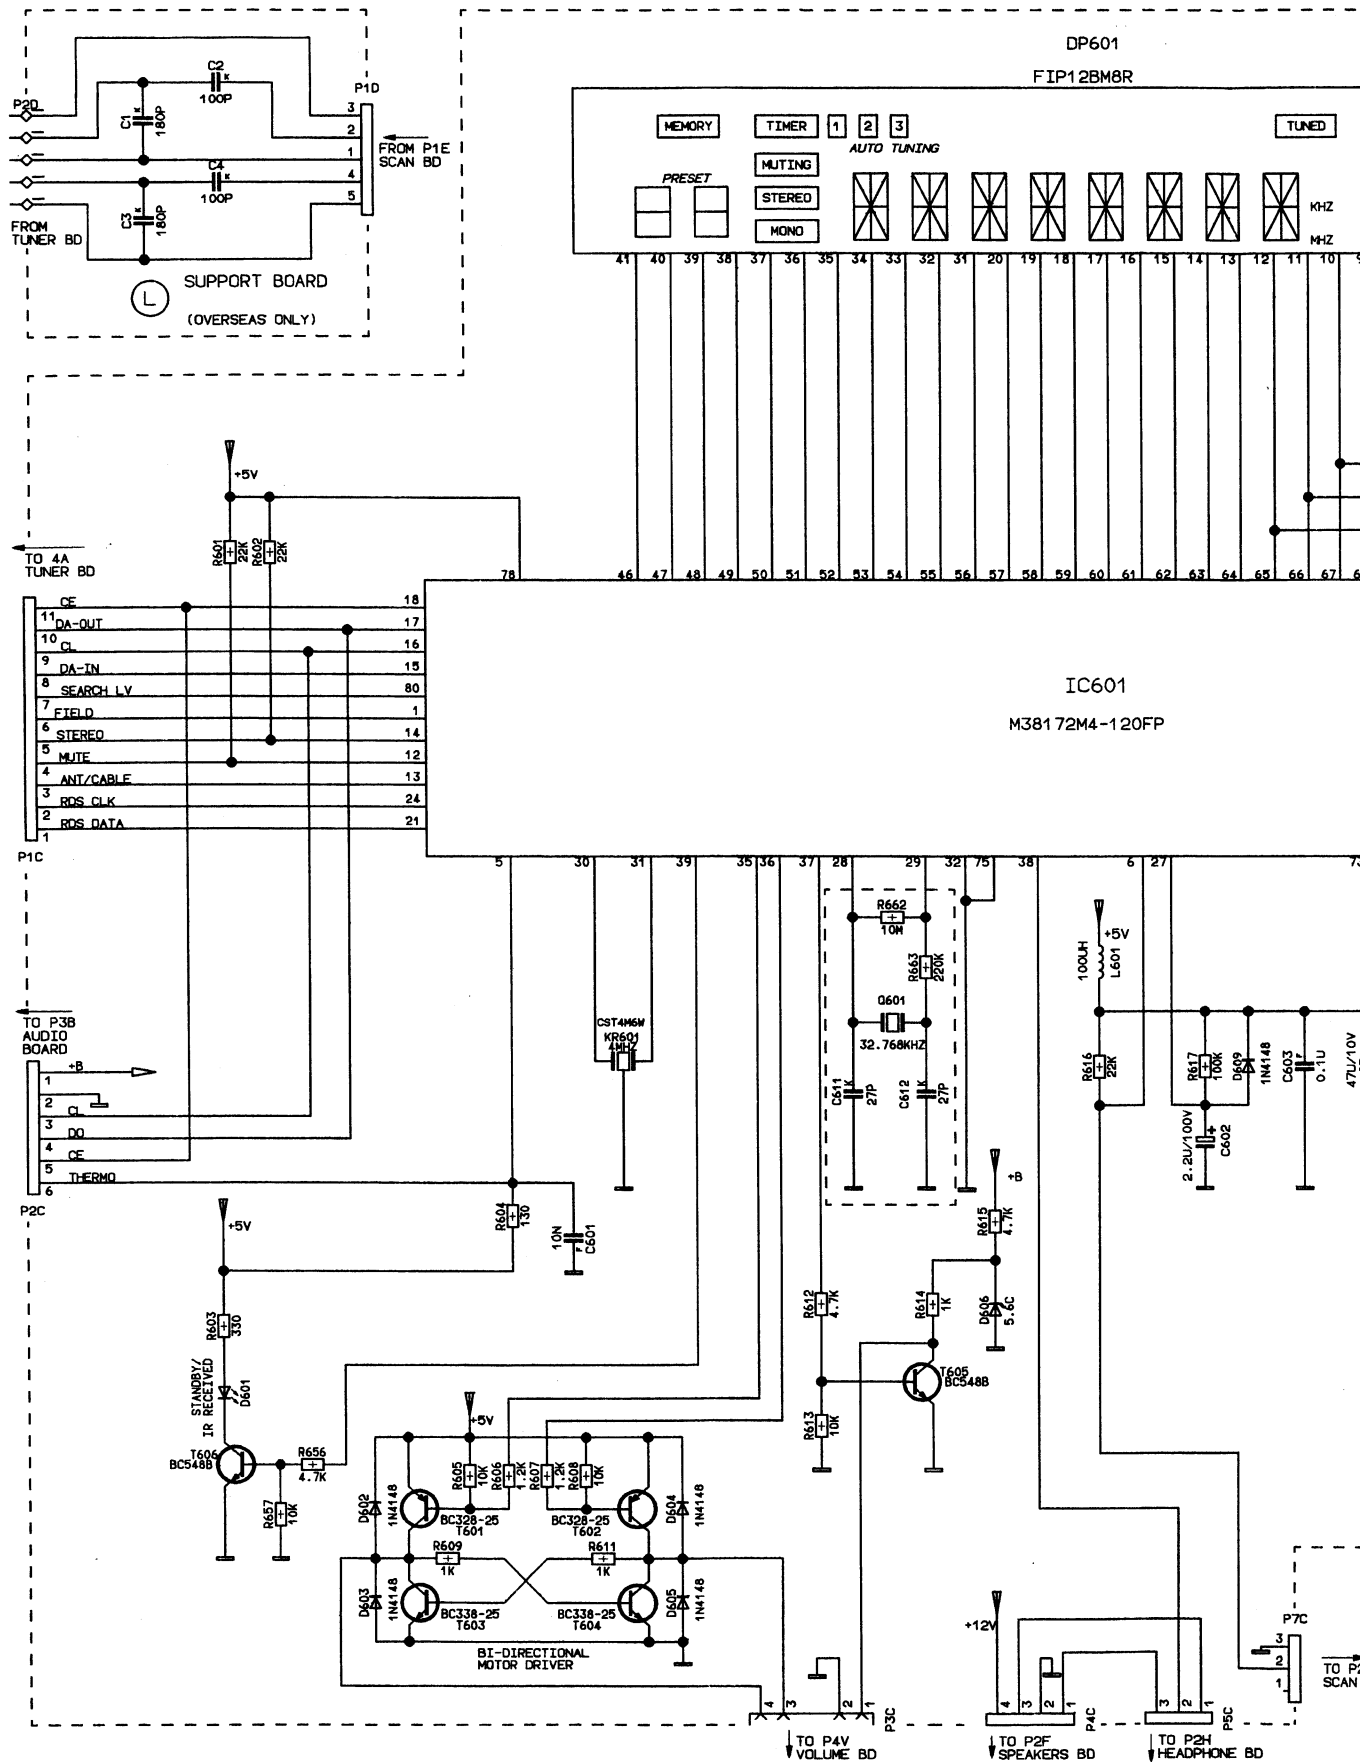

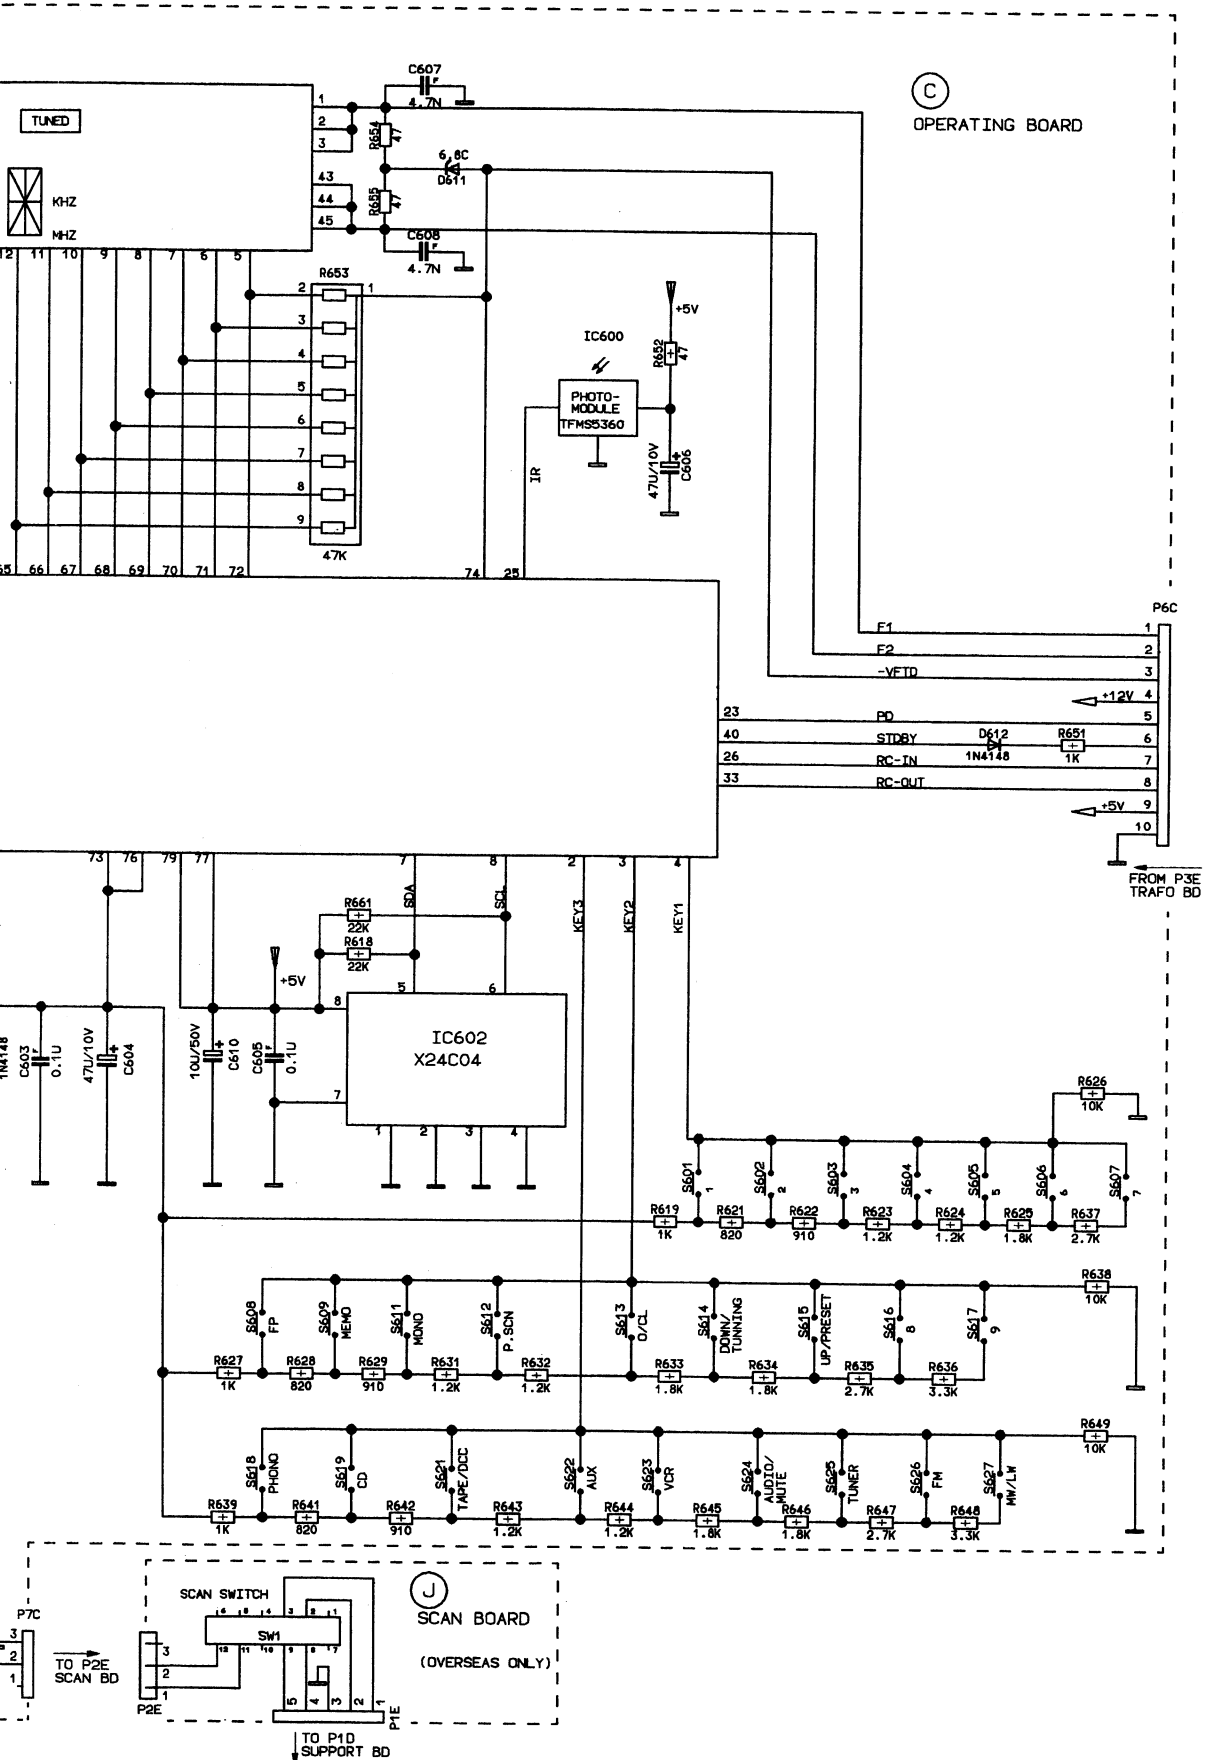





### 2.5.1 CONTROL PCB (component side)

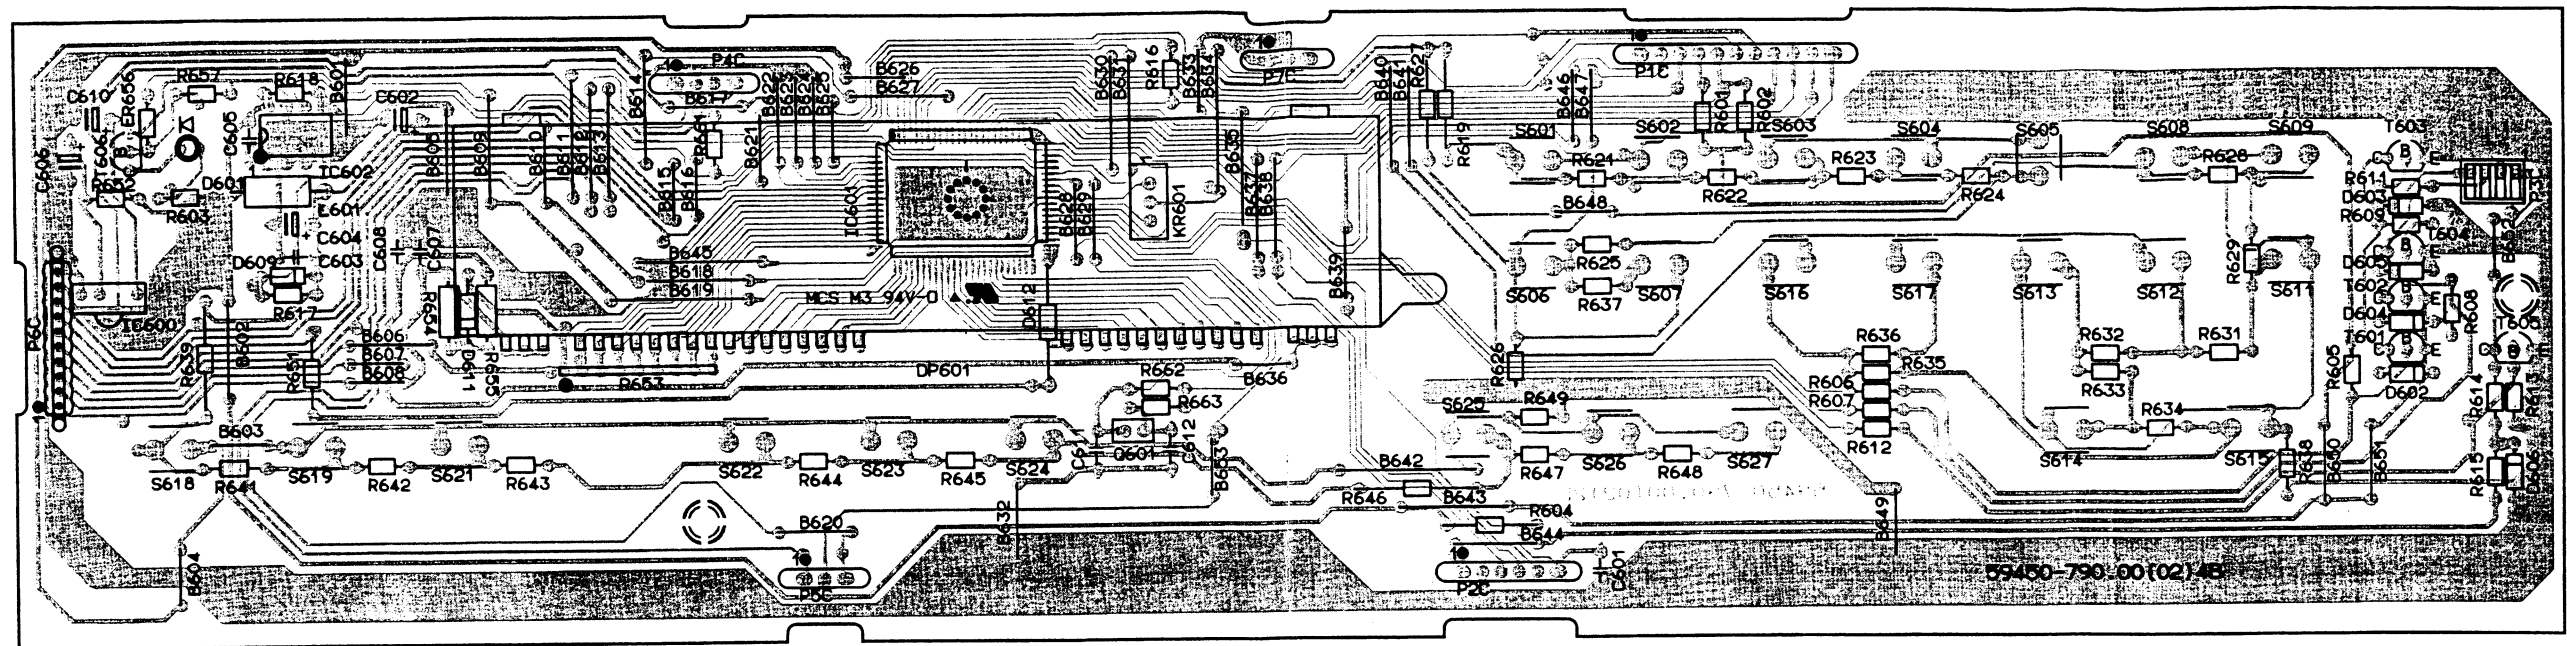

### 2.5.2 SCAN PCB (component side)


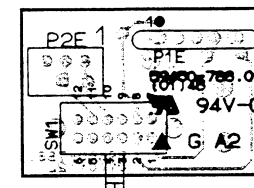


### 2.5.3 SUPPORT PCB (component side)


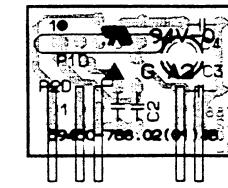


### PIN DESCRIPTION M3817x


Pin		Name	Function	Alternate Function
73, 32	V <sub>CC</sub> , V <sub>SS</sub>	Power supply	Power supply inputs 4.0 to 5.5V to V <sub>CC</sub> , and 0V to V <sub>SS</sub> .	
74	V <sub>EE</sub>	Pull-down power input	Applies voltage supplied to pull-down resistors of ports P0, P1, P2 and P3.	
76	V <sub>REF</sub>	Analog reference voltage	Reference voltage input pin for A-D converter.	
75	AV <sub>SS</sub>	Analog power voltage	GND input pin for A-D converter. Keep at the same potential as V <sub>SS</sub> .	
27	RESET	Reset input	To reset the microcomputer, this pin should be kept at an "L" level for more than 2μs under high-speed operating conditions. In low-speed operation start mode, internal reset is not released until the X <sub>CIN</sub> - X <sub>COU</sub> T clock has had time to stabilize.	
30	X <sub>IN</sub>	Clock input	Input and output signals for the internal clock generation circuit. It consist of internal feedback amplifier. Connect a ceramic resonator or quartz crystal between the X <sub>IN</sub> and X <sub>OUT</sub> pins to set the oscillation frequency. If an external clock is used, connect the clock source to the X <sub>IN</sub> pin and leave the X <sub>OUT</sub> pin open. This clock is used as system clock.	
31	X <sub>OUT</sub>	Clock output		
28	X <sub>CIN</sub>	Sub clock input	Input and output signals for the internal sub clock generation circuit. It consist of internal amplifier without feedback. Connect a ceramic resonator or quartz crystal and external feedback resistor between the X <sub>CIN</sub> and X <sub>COU</sub> T pins. If an external clock is used, connect the clock source to the X <sub>CIN</sub> pin and leave the X <sub>COU</sub> T pin open. This clock can also be used as the system clock.	
29	X <sub>COU</sub> T	Sub clock output		
56 - 49	P0 <sub>y</sub> SEG1-6/ DIG <sub>0</sub> - P0 <sub>y</sub> SEG2 <sub>y</sub> / DIG <sub>7</sub>	Output port P0	An 8-bit output port. The output structure is high-breakdown-voltage P-channel open drain with internal pull-down resistors connected between the output and the V <sub>EE</sub> pin. Are "L" at reset.	FLD automatic display pins
48 - 41	P1 <sub>y</sub> DIG <sub>8</sub> - P1 <sub>y</sub> DIG <sub>15</sub>	Output port P1	An 8-bit output port with the same function as port P0.	FLD automatic display pins
40 - 33	P2 <sub>0</sub> - P2 <sub>7</sub>	I/O port P2	An 8-bit CMOS I/O port. An I/O direction register allows each pin to be individually programmed as either input or output. At reset this port is set to input mode. The input levels are TTL compatible.	
64 - 57	P3 <sub>y</sub> SEG <sub>8</sub> - P3 <sub>y</sub> SEG <sub>15</sub>	Output port P3	An 8-bit output port with the same function as port P0.	FLD automatic display pins
26	P4 <sub>y</sub> INT <sub>0</sub>	Input port P4 <sub>0</sub>	A 1-bit CMOS input pin.	External interrupt input pin
25 - 22	P4 <sub>y</sub> INT <sub>1</sub> - P4 <sub>y</sub> INT <sub>4</sub>	I/O port P4	A 7-bit CMOS I/O port with the same function as port P2, with CMOS compatible input levels.	External interrupt input pins
21	P4 <sub>5</sub>			
20, 19	P4 <sub>6</sub> /T1OUT - P4 <sub>7</sub> /T3OUT			Timer output pins
12 - 9	P5 <sub>y</sub> SN <sub>11</sub> - P5 <sub>y</sub> SO <sub>UT</sub> 1 - P5 <sub>y</sub> SC <sub>LK</sub> 11 - P5 <sub>y</sub> SRD <sub>Y</sub> 1 - CS/SC <sub>LK</sub> 12	I/O port P5	An 8-bit I/O port with the same function as port P2. The output structure of this port is N-channel open drain, and the input levels are CMOS compatible. Keep the input voltage of this port between 0V and V <sub>CC</sub> .	Serial I/O1 I/O pins
8 - 5	P5 <sub>y</sub> SN <sub>12</sub> - P5 <sub>y</sub> SO <sub>UT</sub> 2 - P5 <sub>y</sub> SC <sub>LK</sub> 12 - P5 <sub>y</sub> SRD <sub>Y</sub> 2			Serial I/O2 I/O pins
18	P6 <sub>y</sub> PWM <sub>0</sub>	I/O port P6	A 6-bit CMOS I/O port with the same function as port P2, with CMOS compatible input levels.	14-bit PWM output pin
17	P6 <sub>1</sub> /PWM <sub>1</sub>			8-bit PWM output pin
16, 15	P6 <sub>2</sub> /CNTR <sub>0</sub> - P6 <sub>3</sub> /CNTR <sub>1</sub>			Event counter input pins
14, 13	P6 <sub>4</sub> , P6 <sub>5</sub>			
4 - 1, 80 - 77	P7 <sub>y</sub> /AN <sub>0</sub> - P7 <sub>y</sub> /AN <sub>7</sub>	I/O port P7	An 8-bit CMOS I/O port with the same function as port P2, with CMOS compatible input levels.	A-D converter input pins
72 - 65	P8 <sub>y</sub> SEG <sub>0</sub> - P8 <sub>y</sub> SEG <sub>7</sub>	I/O port P8	An 8-bit I/O port with the same function as port P2. The output structure of this port is P-channel open drain, and the input levels are CMOS compatible. Please note that this port does not have internal pull-down resistors.	FLD automatic display pins

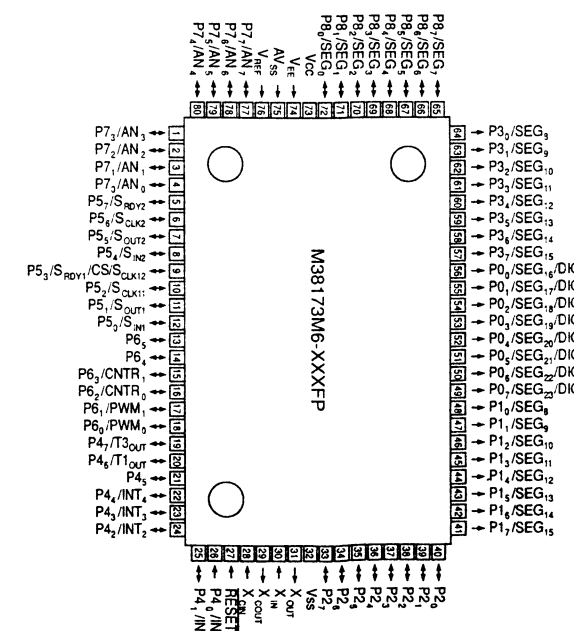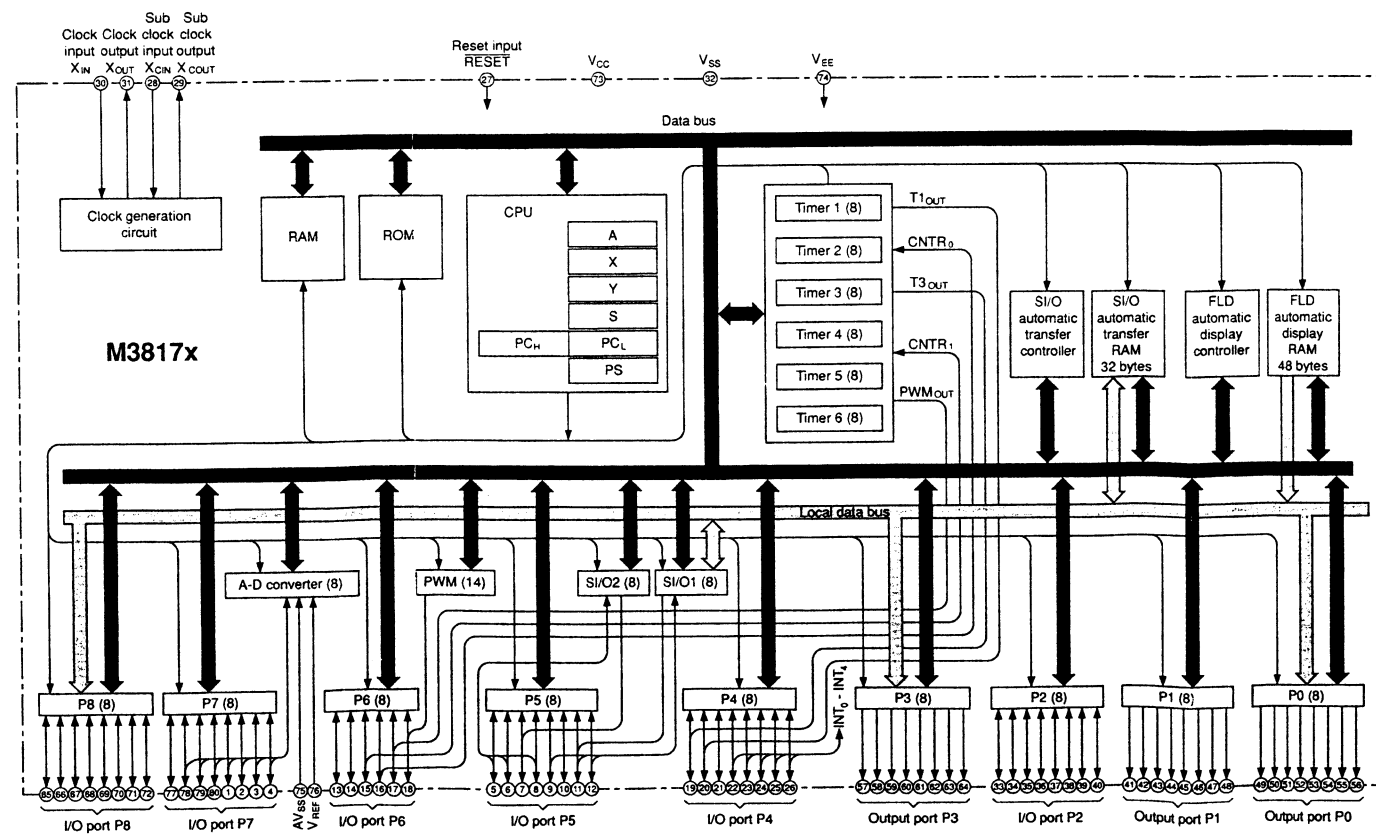


2.6 DISPLAY

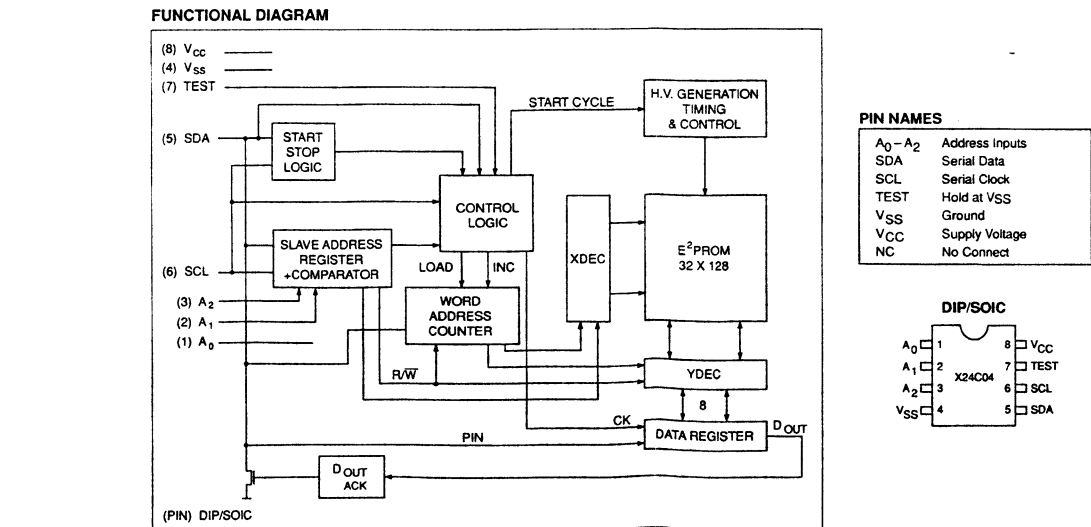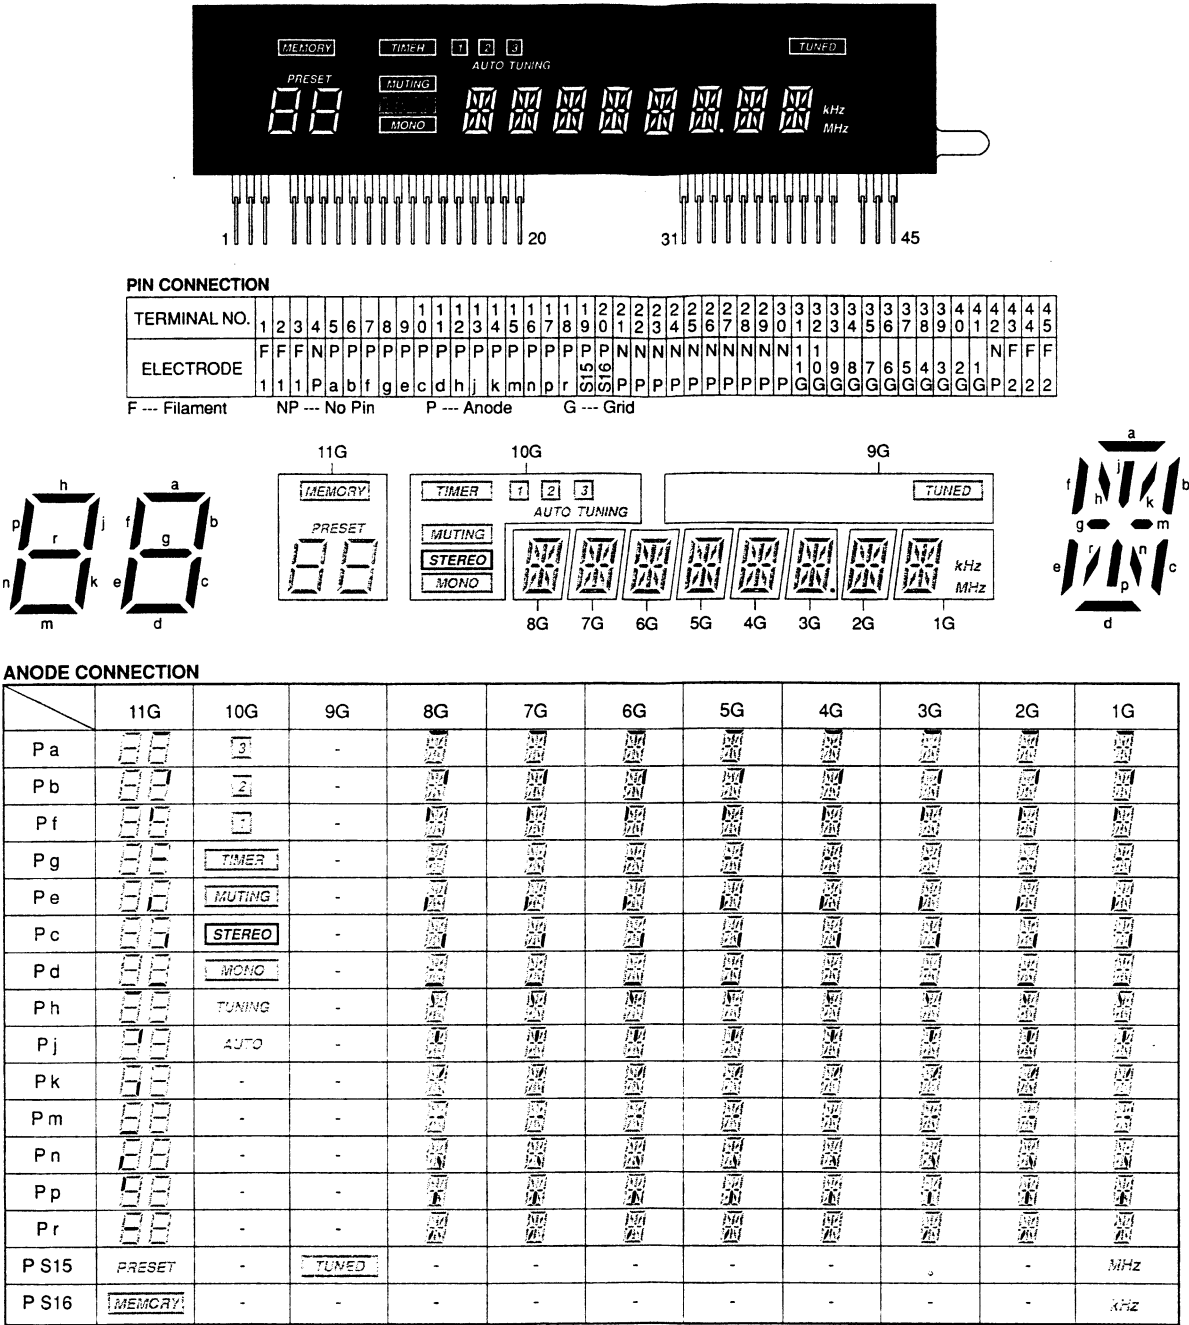

2.7 SCHEMATIC DIAGRAM (VERSIONS /02B/05B): AUDIO BOARD, VOLUME BOARD, POTENTIOMETER BOARD, LOUD SPEAKERS BOARD, SPEAKERS BOARD

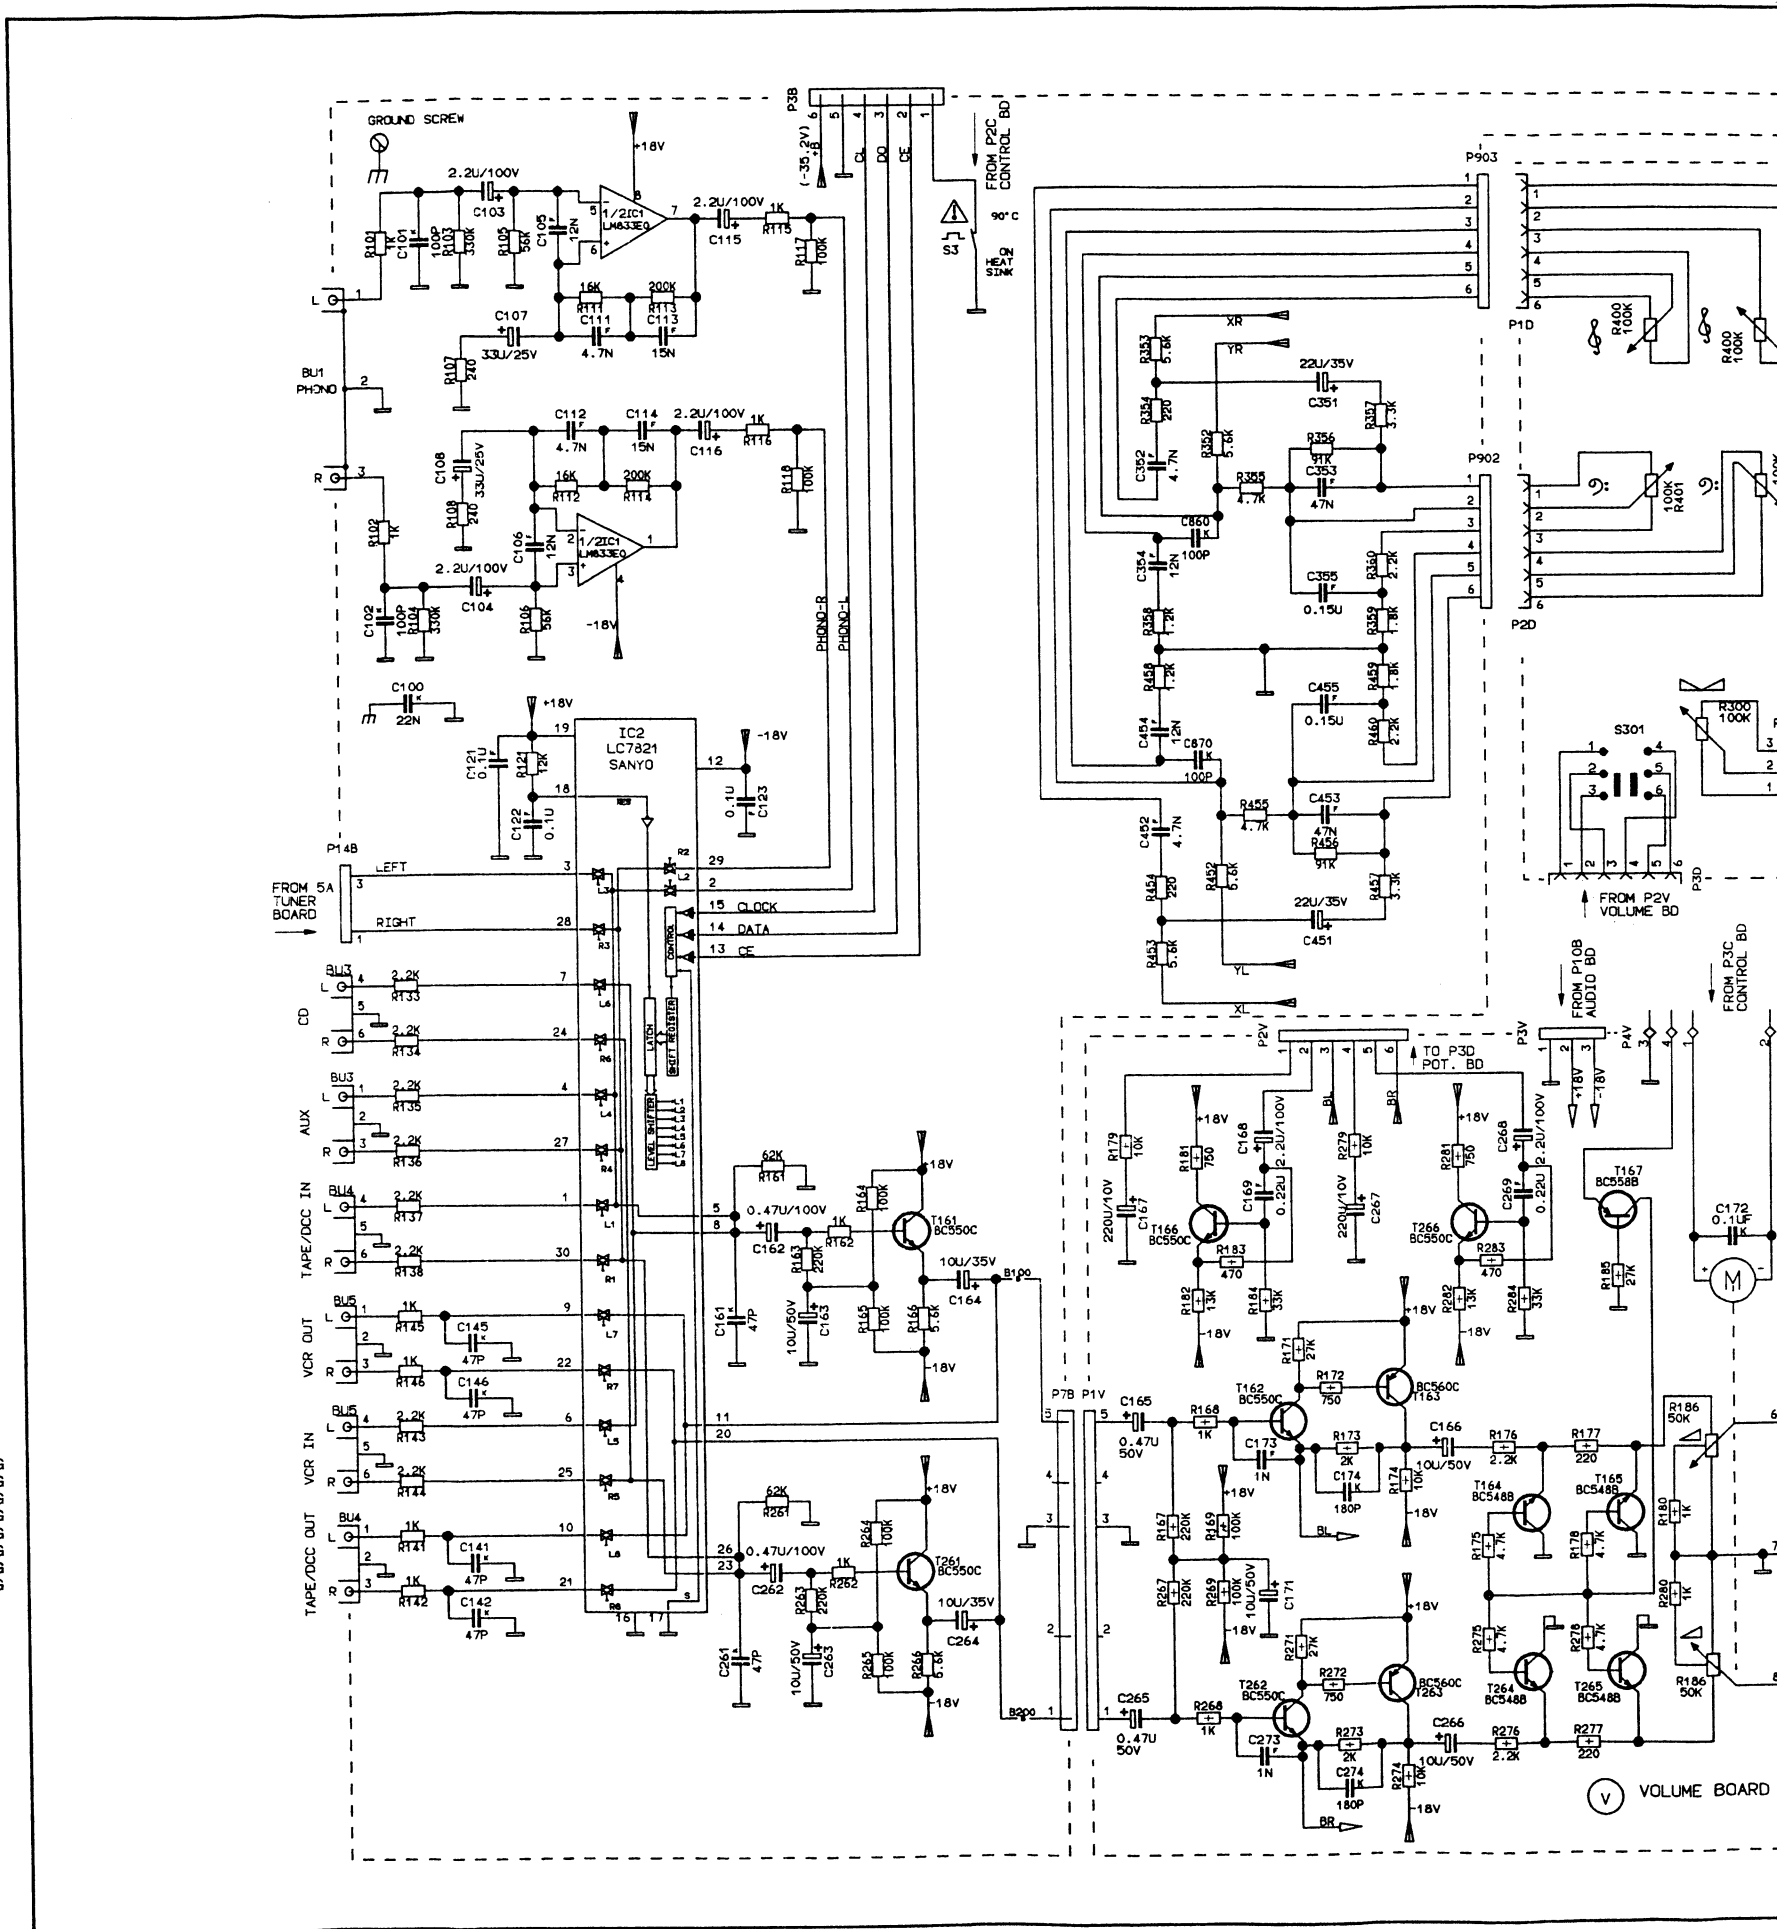


2.7 SCHEMATIC DIAGRAM (VERSIONS /02B/05B): AUDIO BOARD, VOLUME BOARD, POTENTIOMETER BOARD, LOUD SPEAKERS BOARD, SPEAKERS BOARD

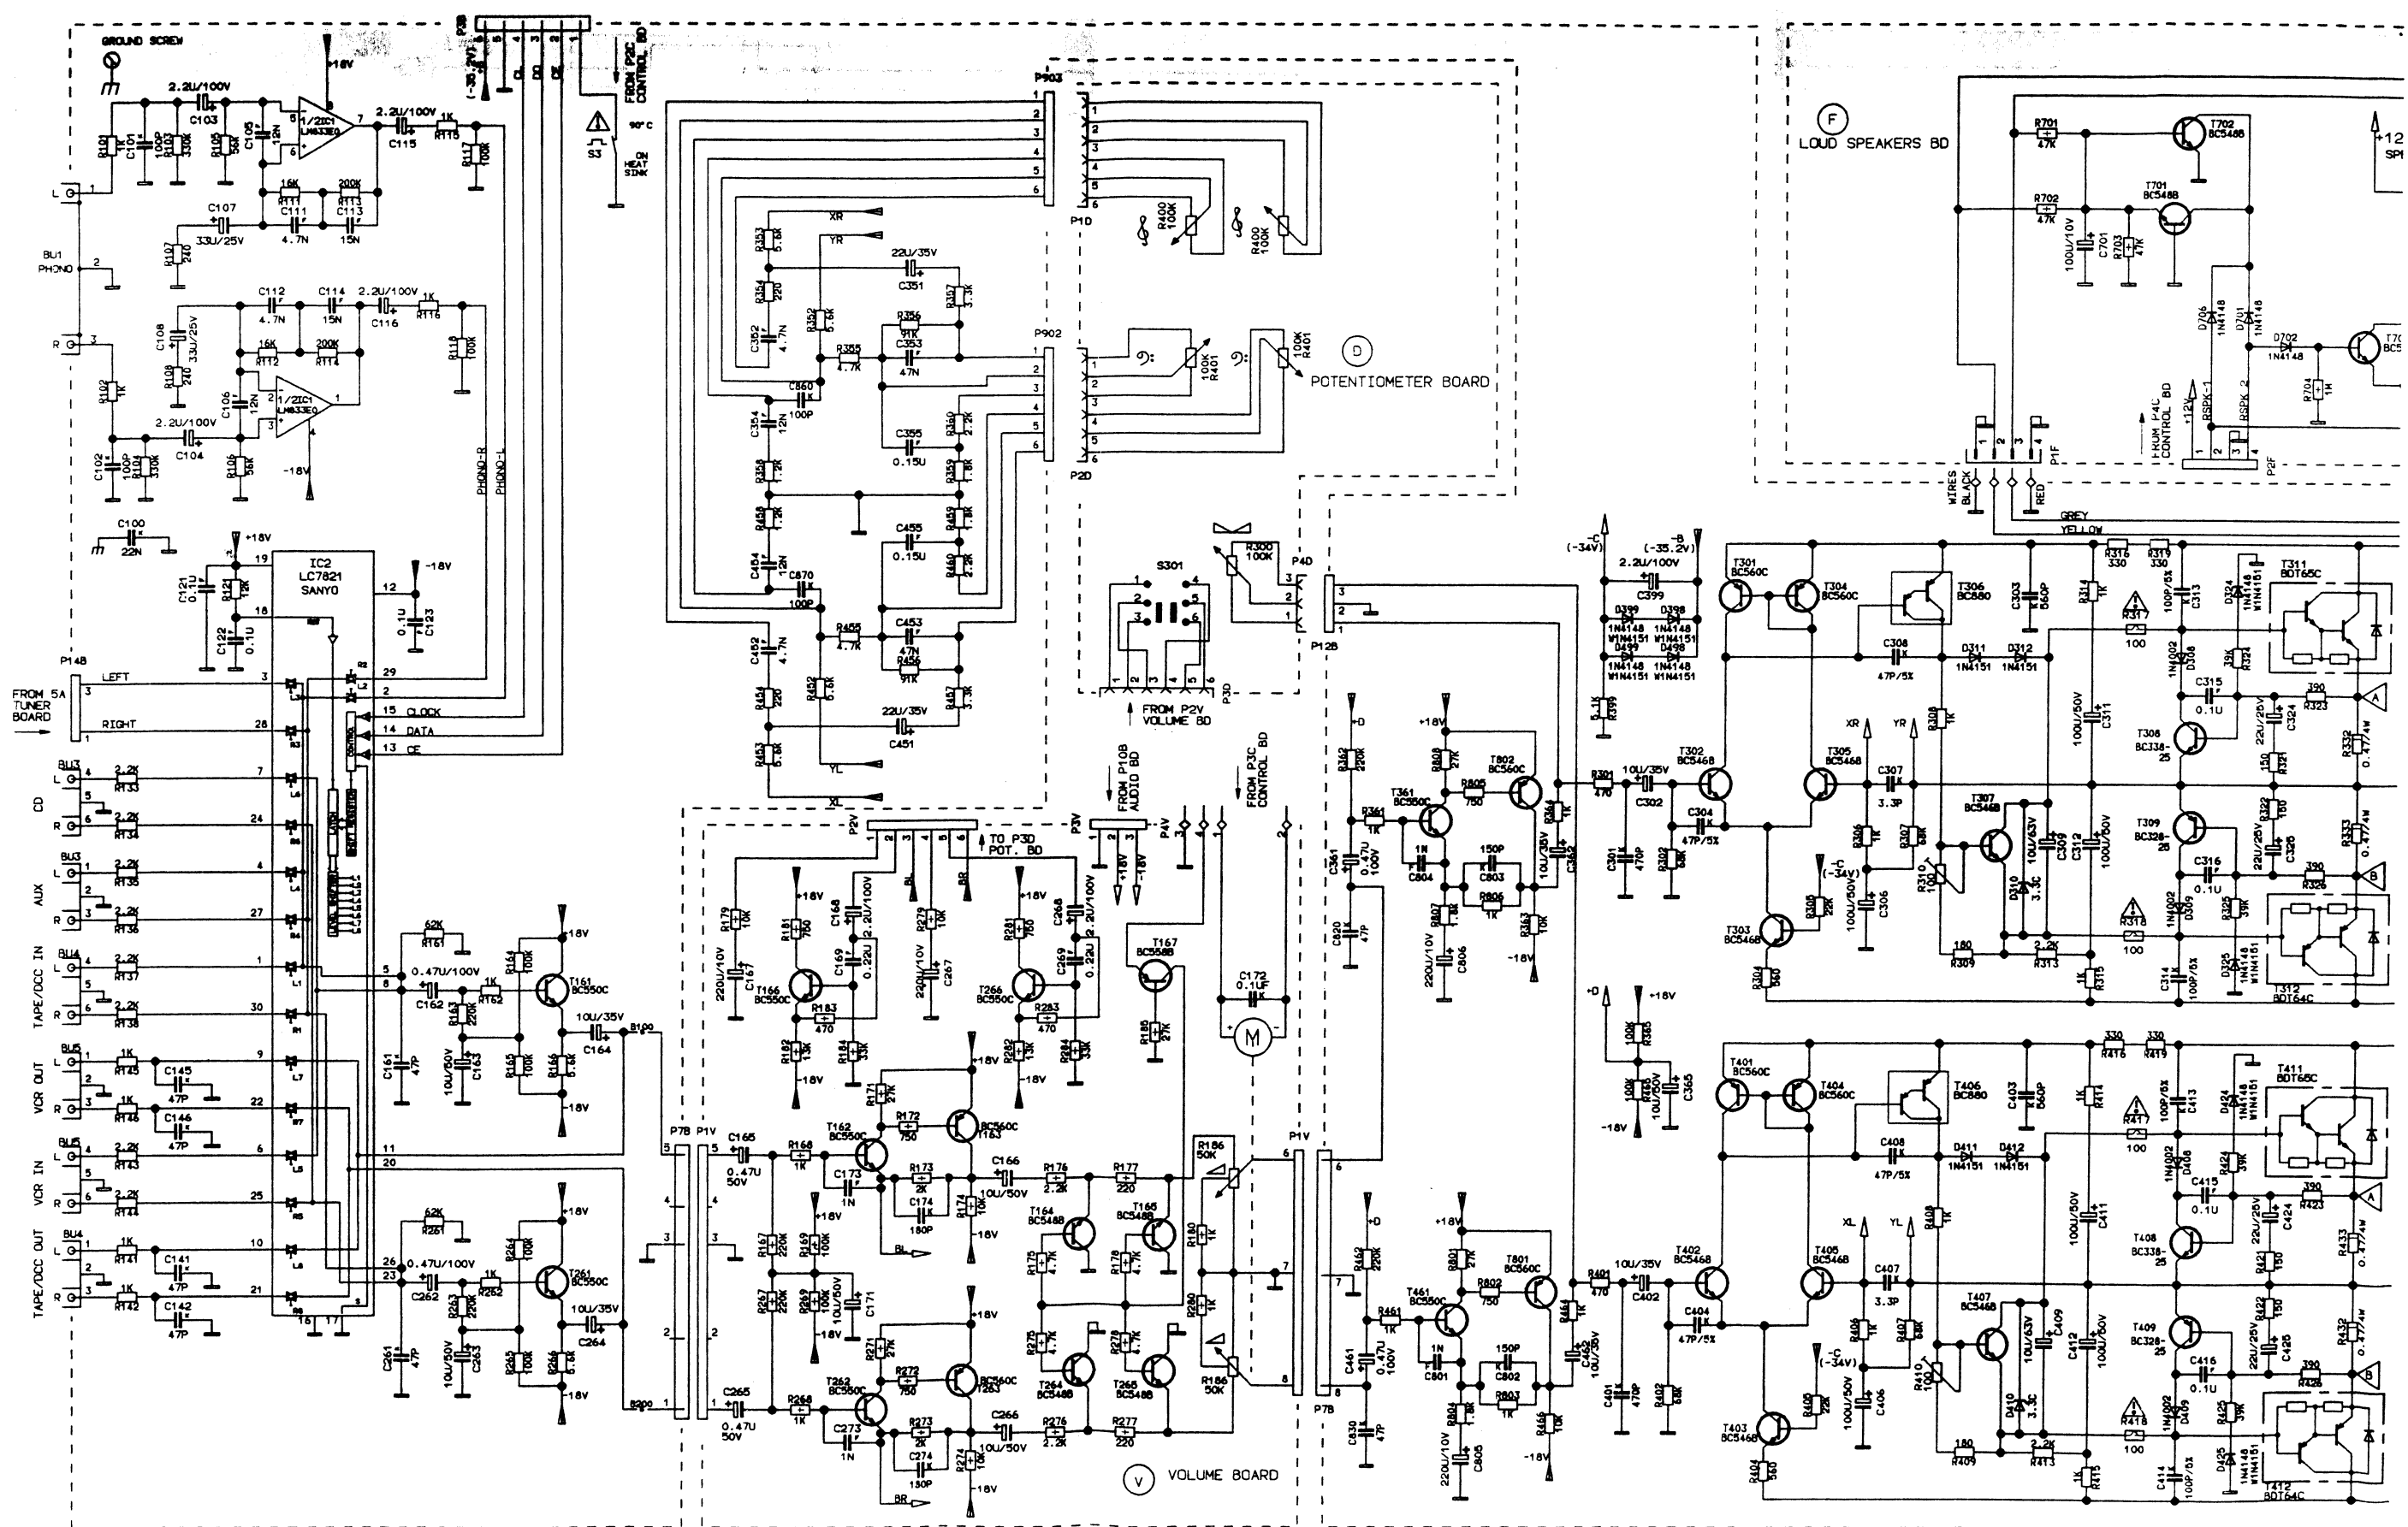






2.8.1 AUDIO PCB  
(component side)

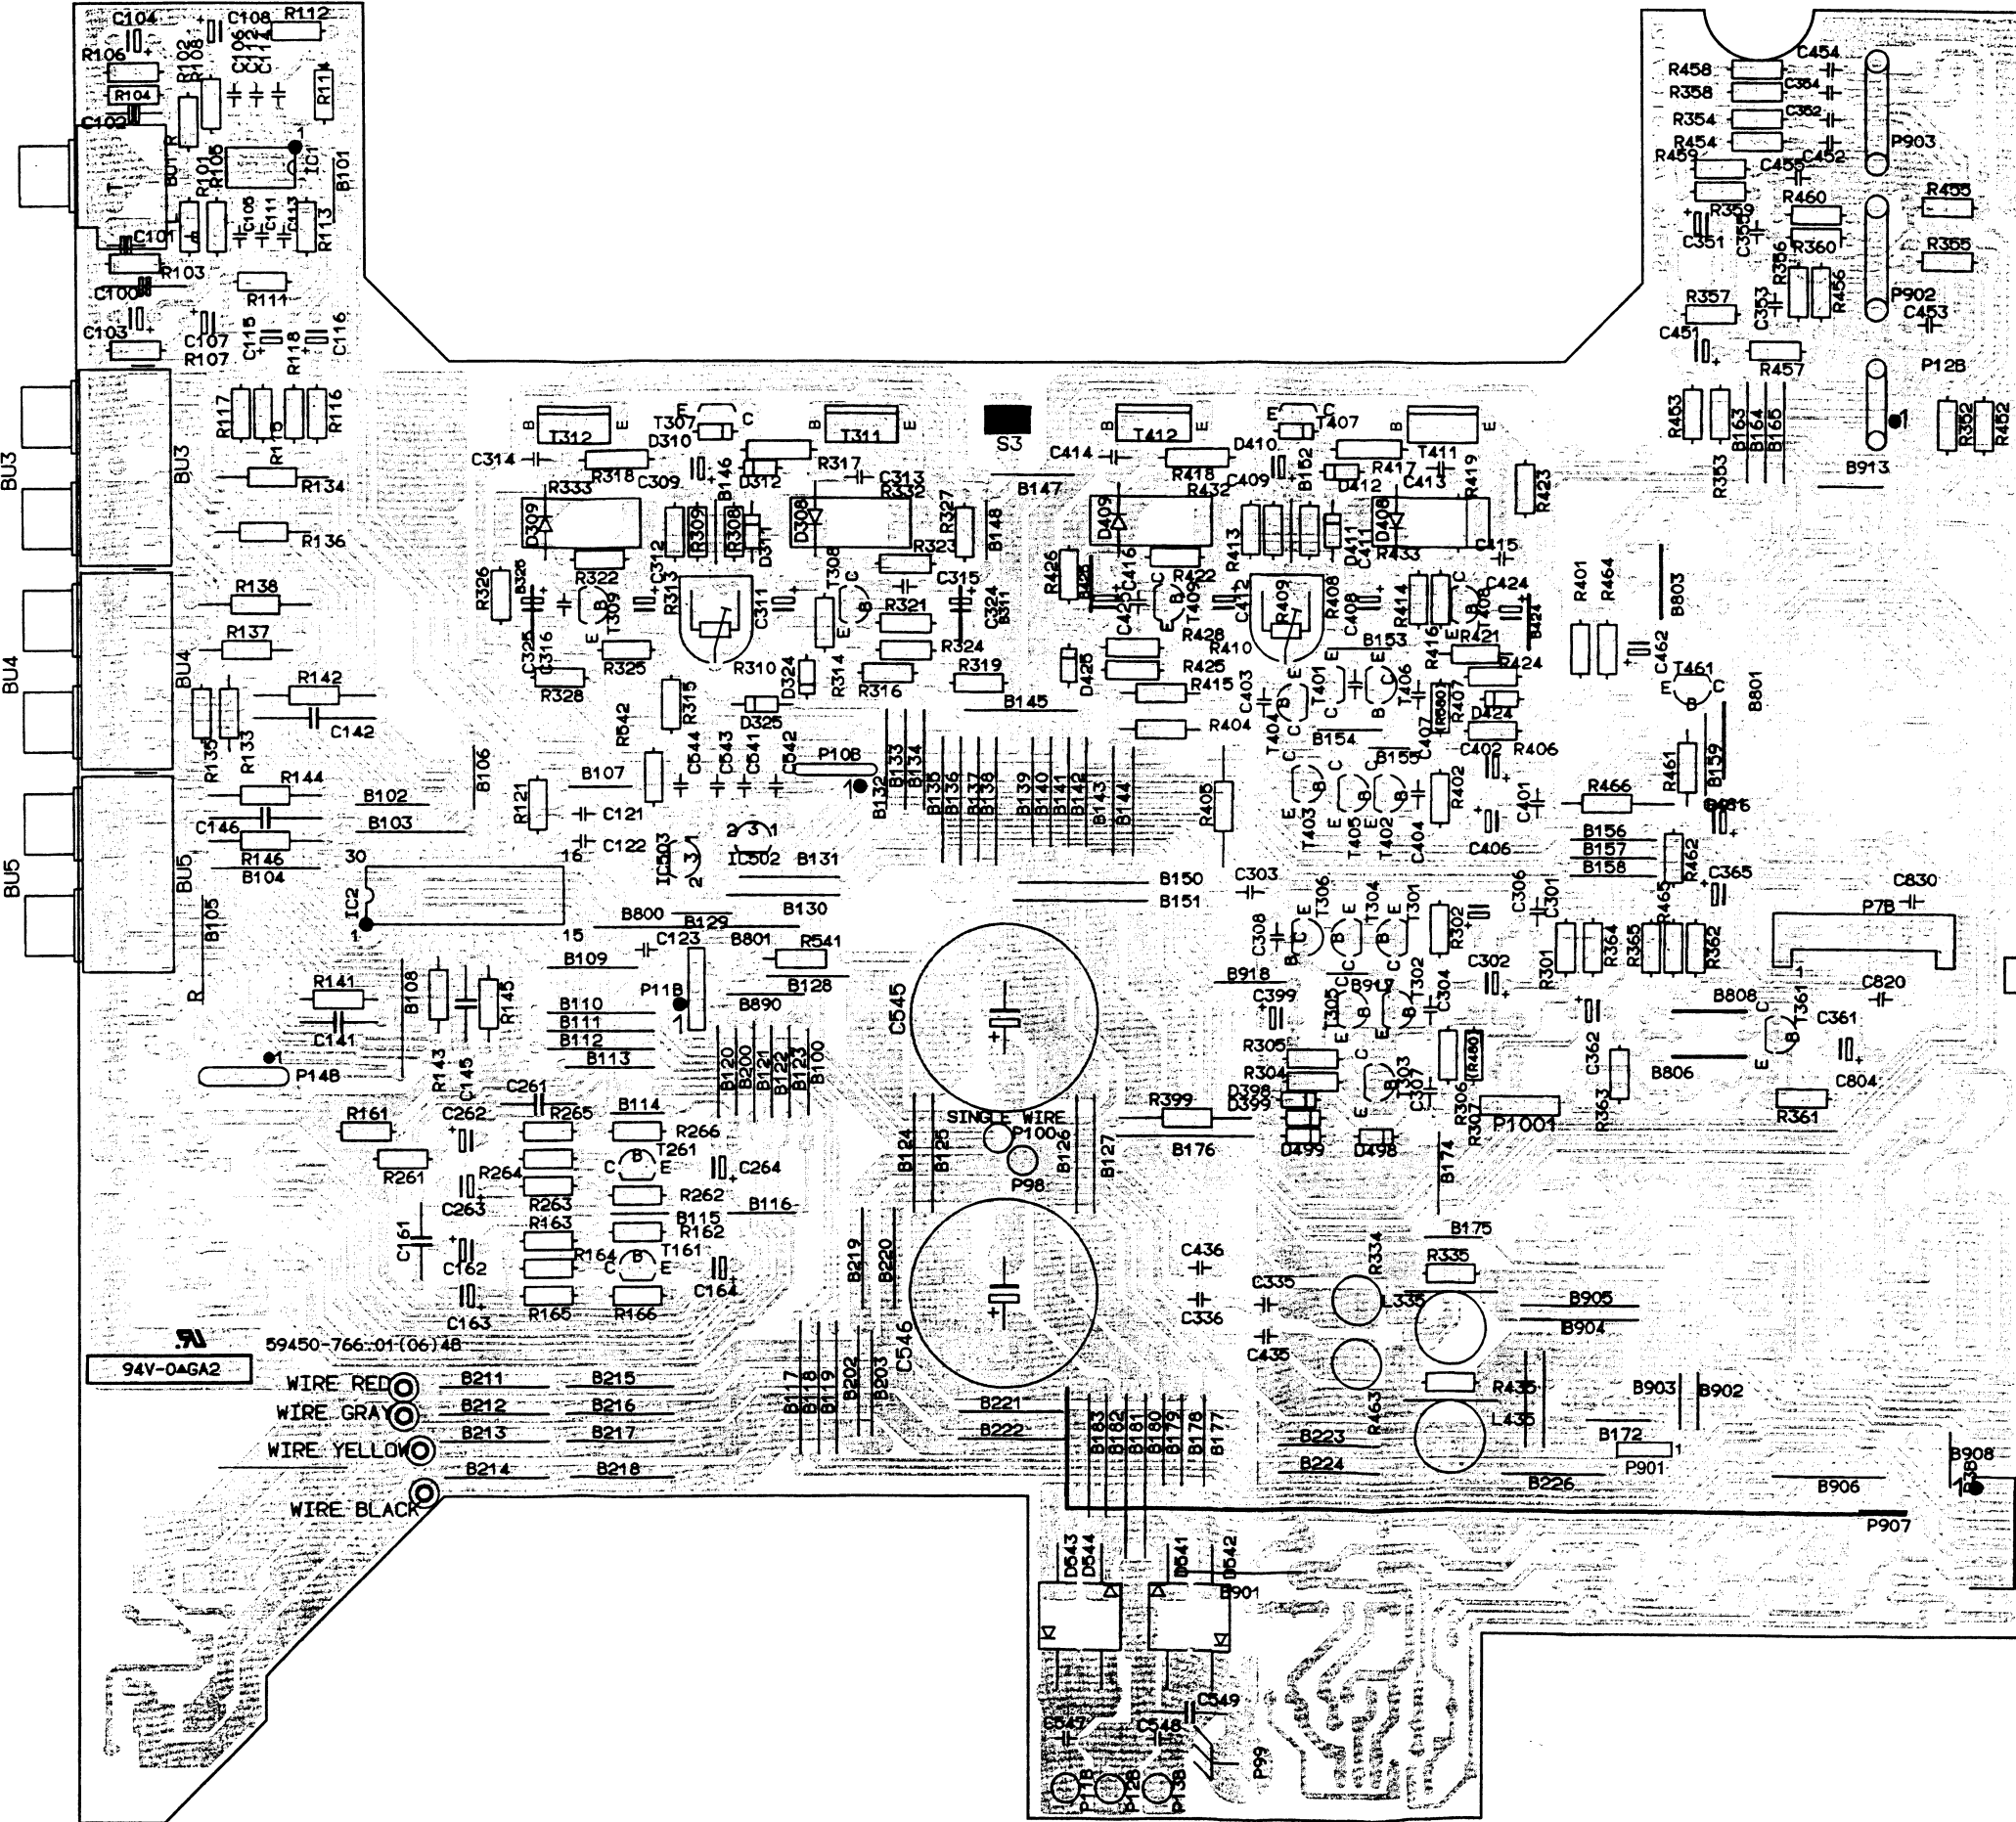


2.8.2 LOUD SPEAKERS PCB  
(component side)

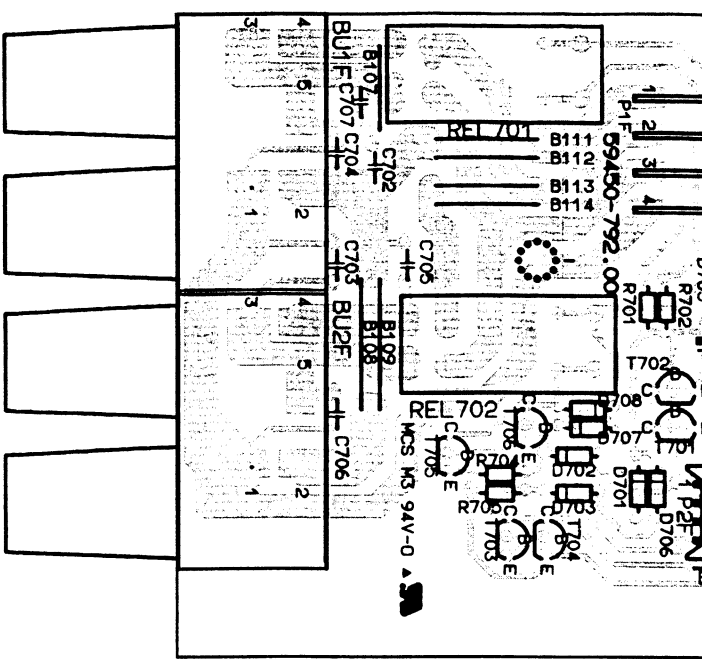




# 2.8.1 AUDIO PCB (component side)

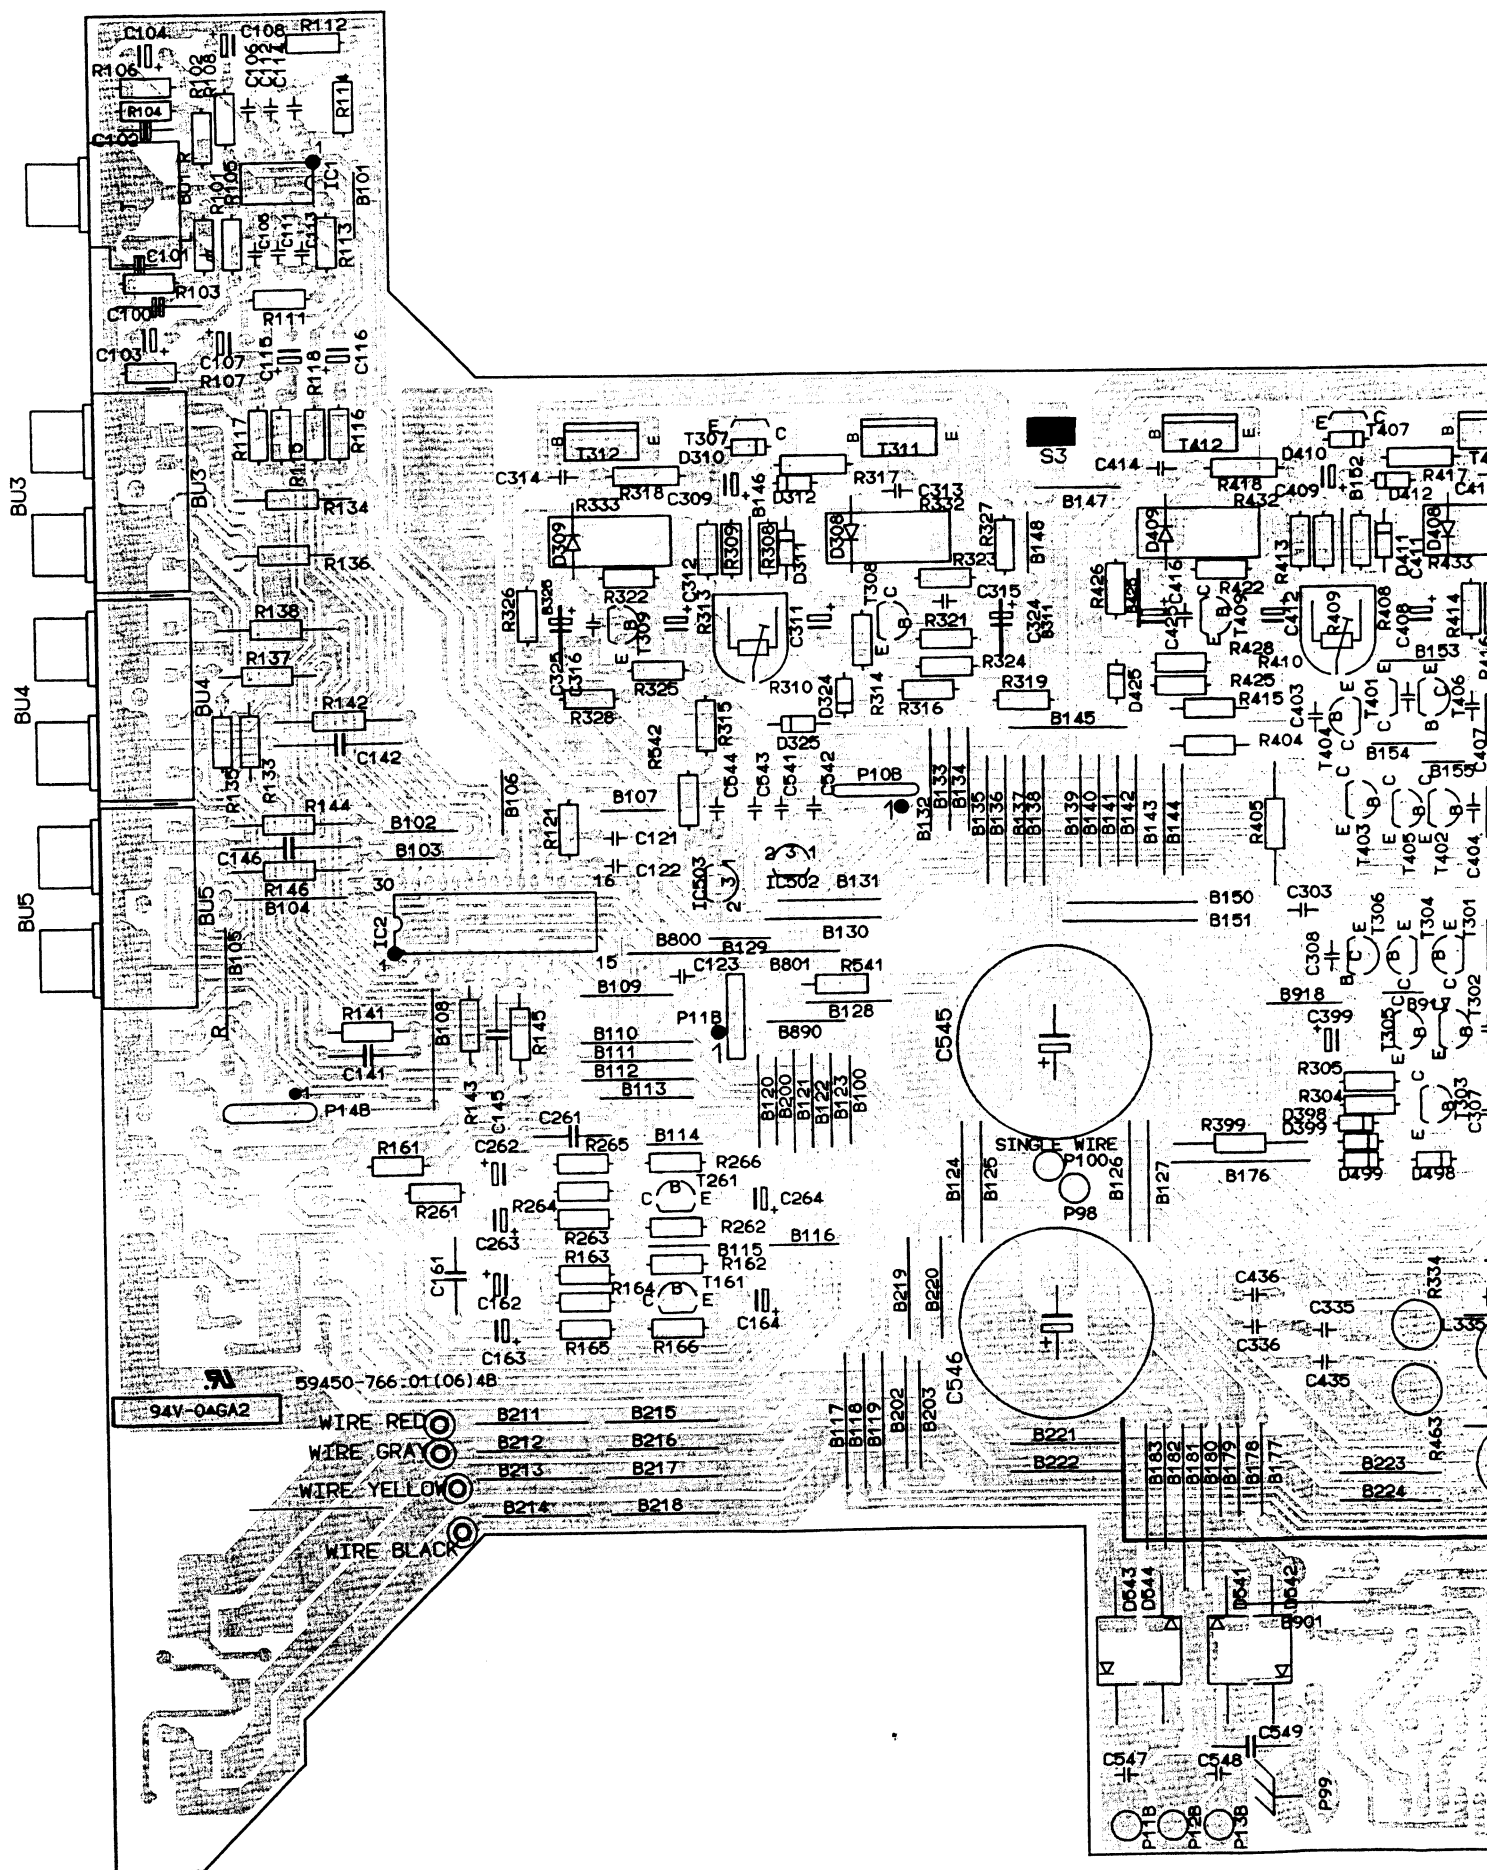






## 2.9 SCHEMATIC DIAGRAM (VERSION /01B): AUDIO BOARD, VOLUME BOARD, POTENTIOMETER BOARD, LOUD SPEAKERS BOARD, SPEAKERS BOARD

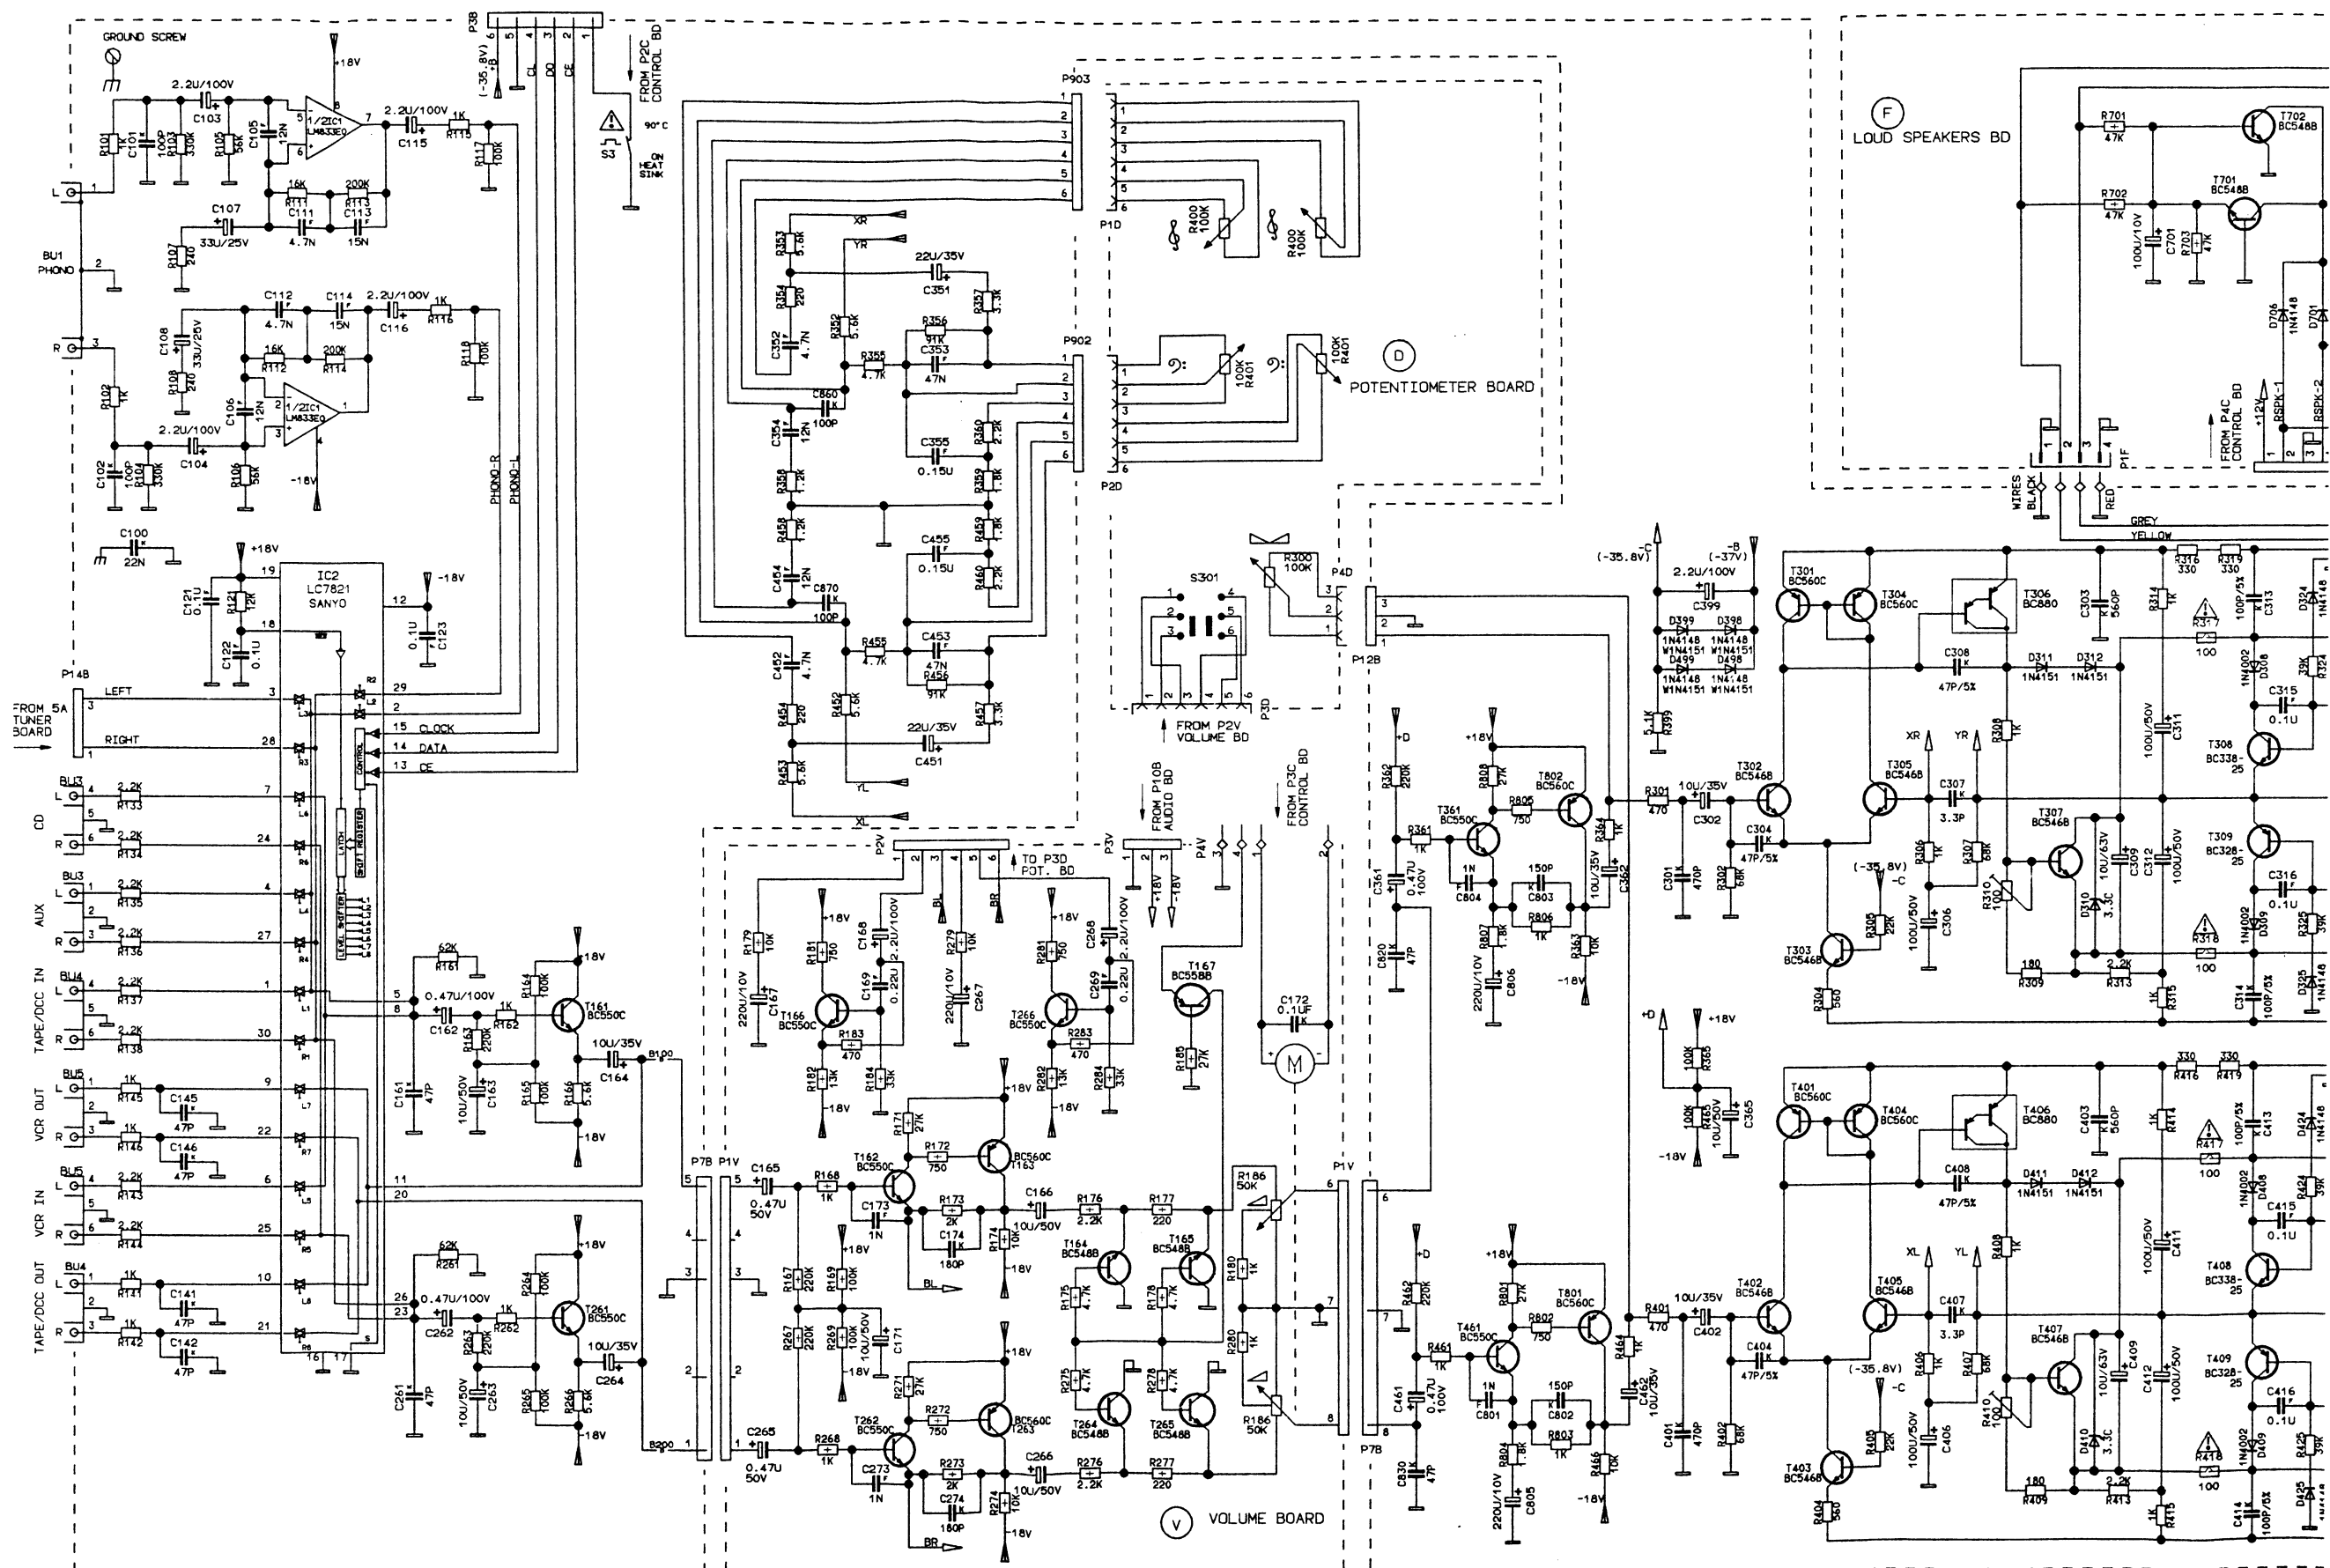




2.10 SCHEMATIC DIAGRAM (VERSION /UBL): AUDIO BOARD, VOLUME BOARD, POTENTIOMETER BOARD, LOUD SPEAKERS BOARD, SPEAKERS BOARD

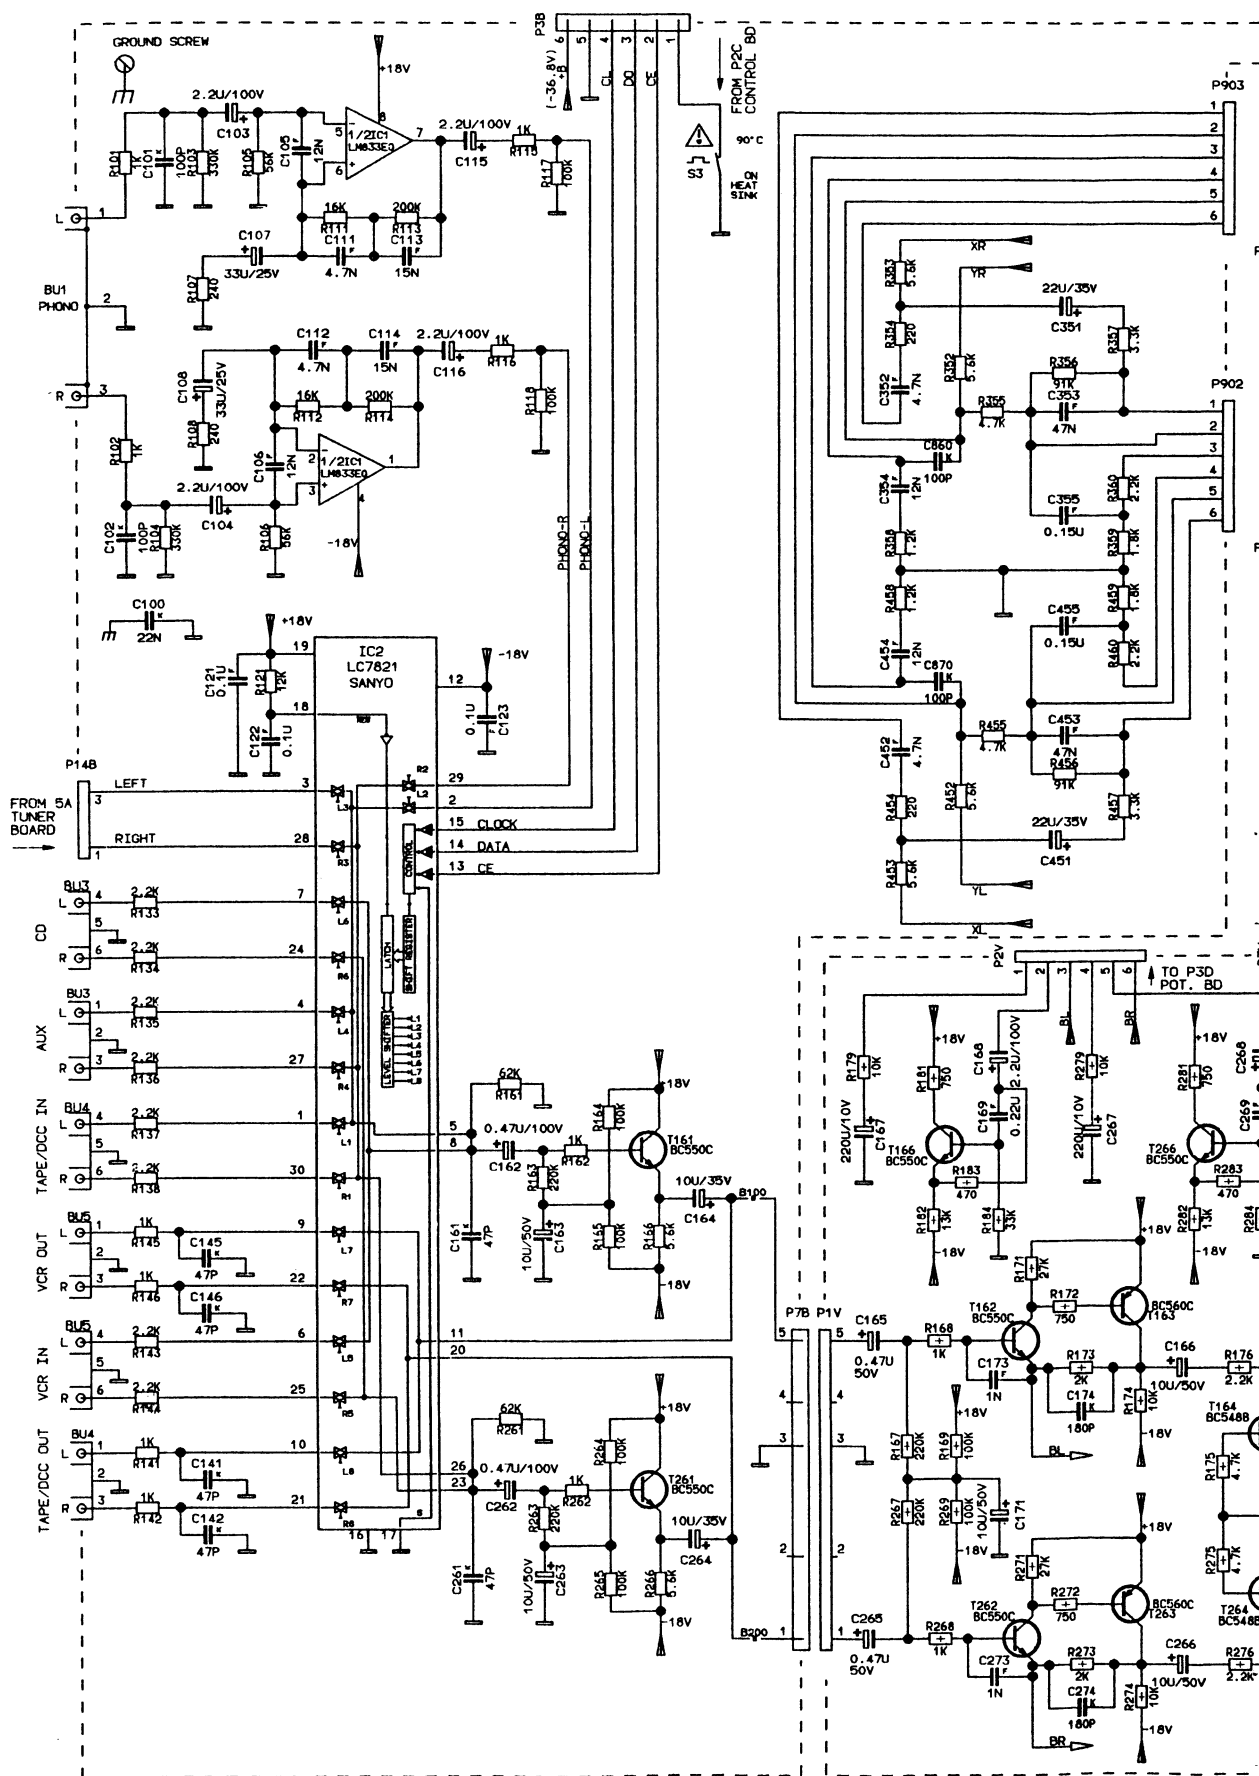


2.10 SCHEMATIC DIAGRAM (VERSION /UBL): AUDIO BOARD, VOLUME BOARD, POTENTIOMETER BOARD, LOUD SPEAKERS BOARD, SPEAKERS BOARD

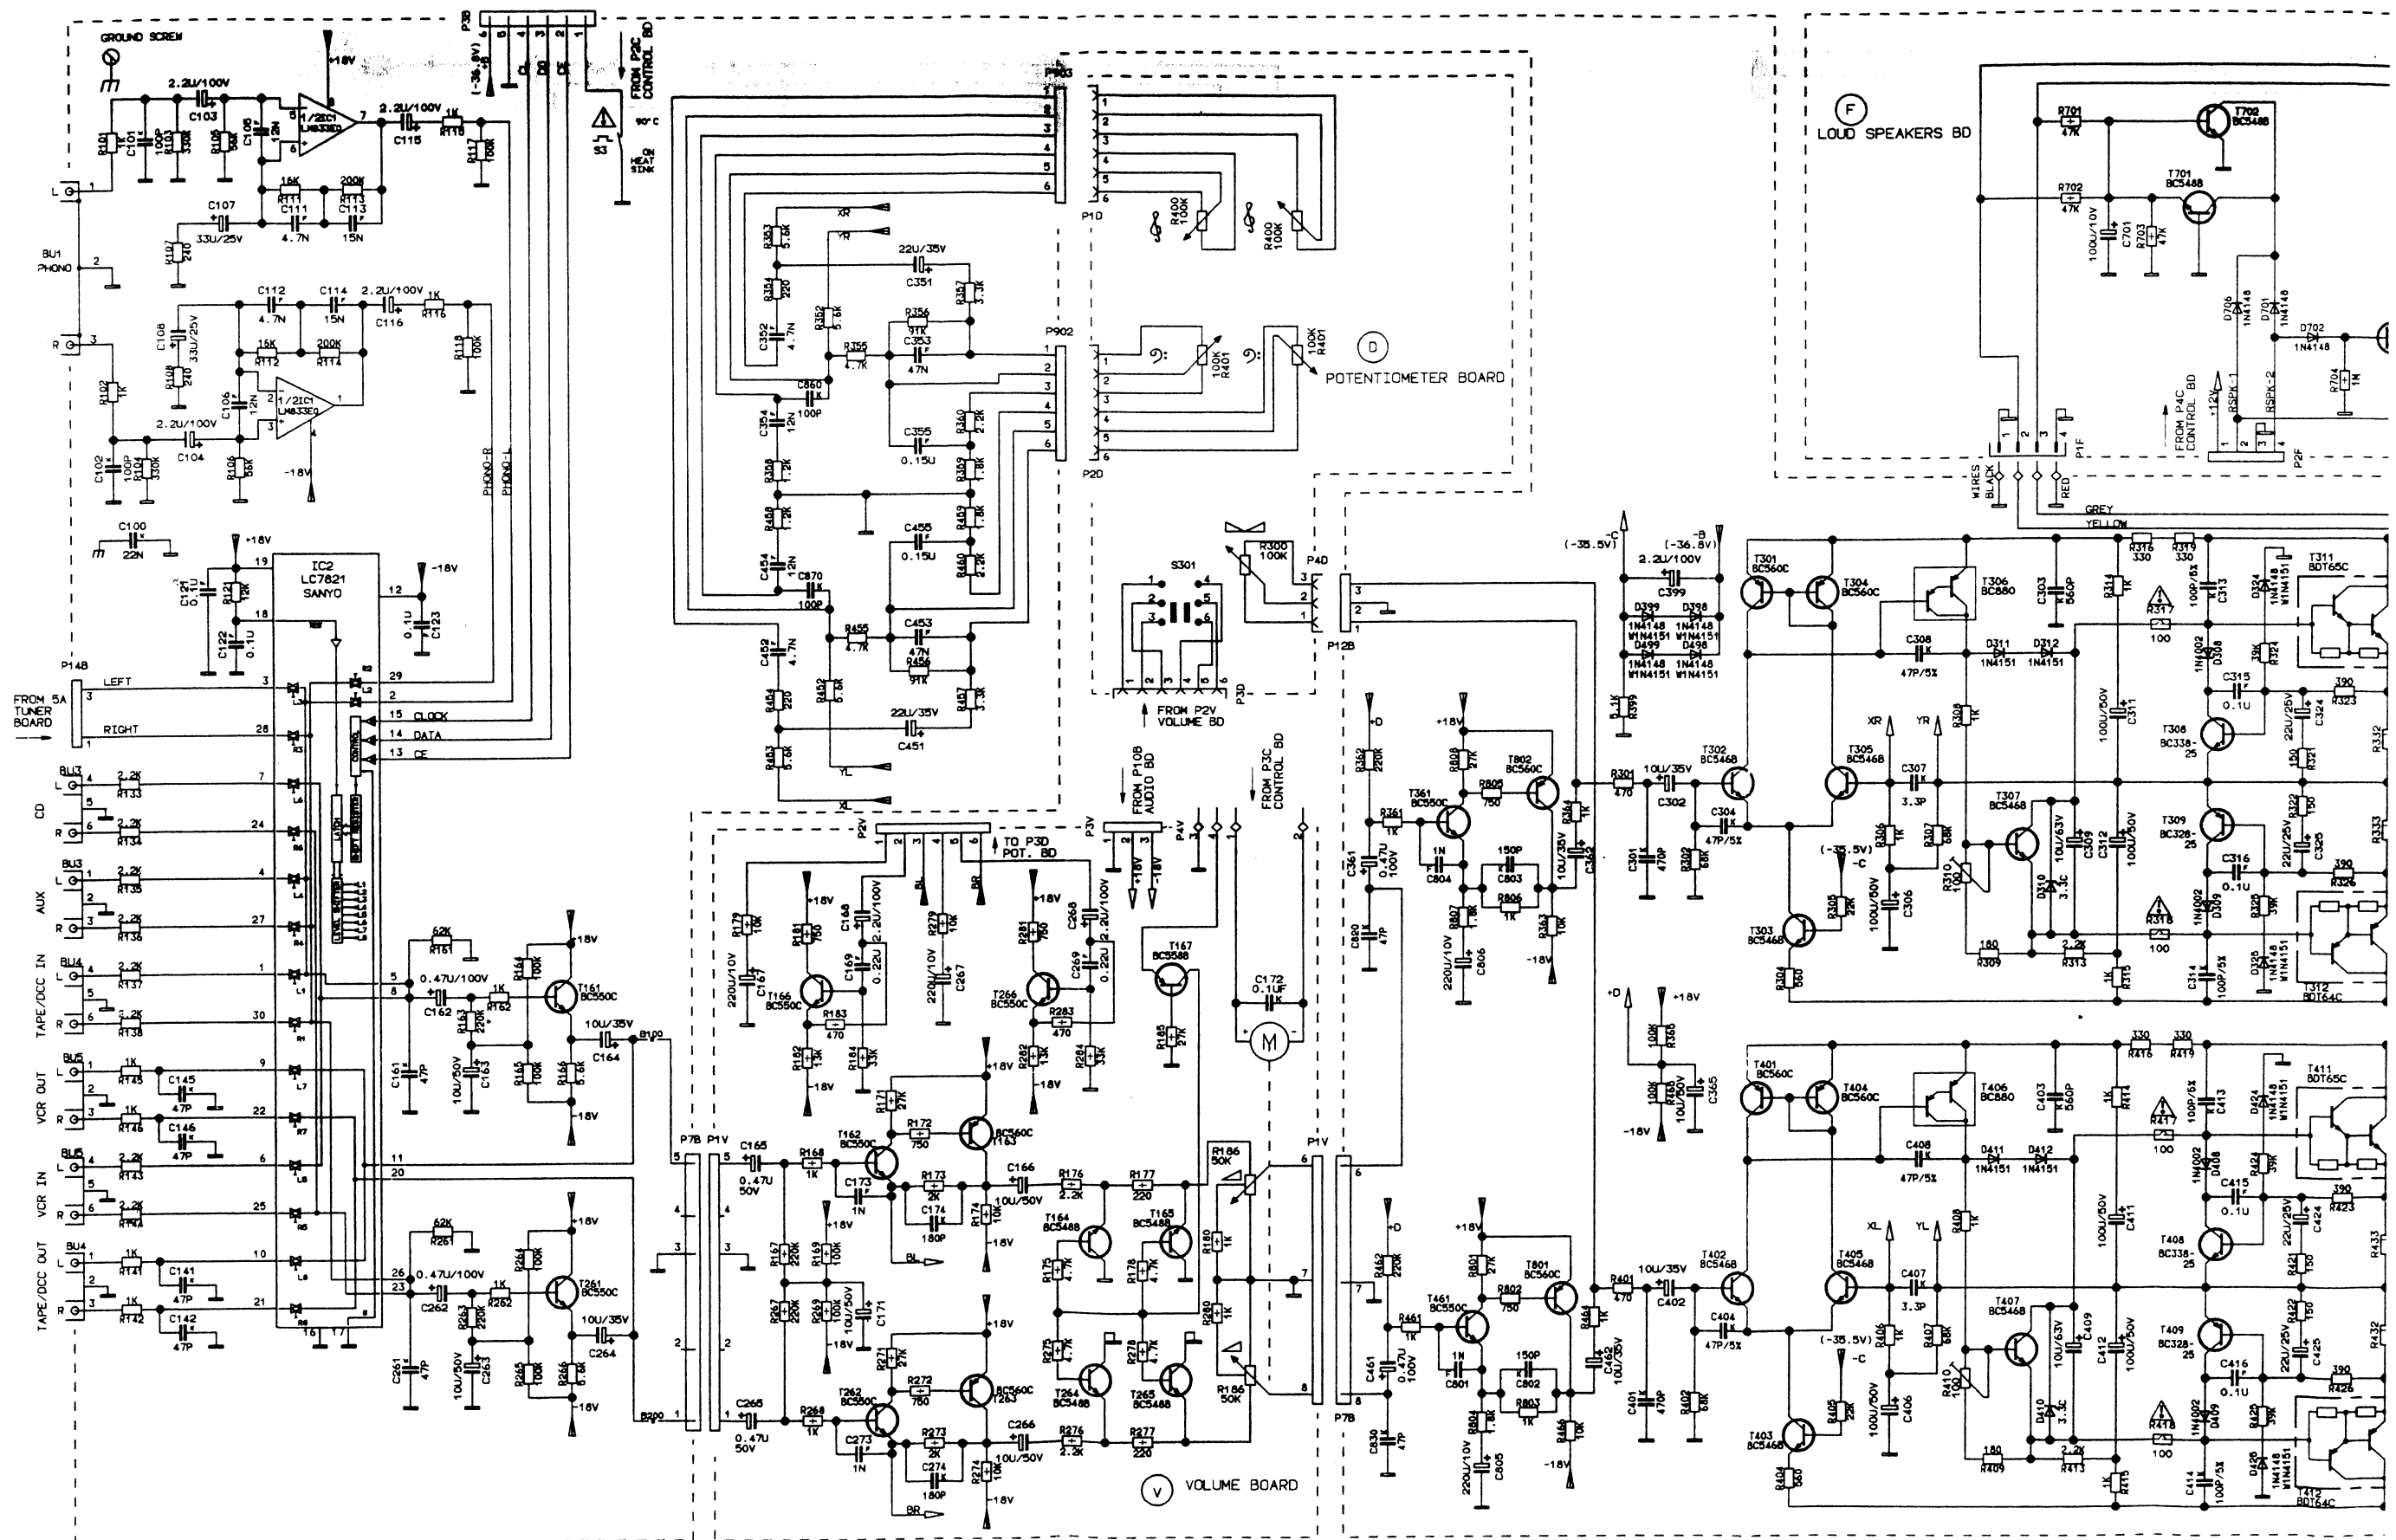







### 2.8.1 AUDIO PCB (component side)

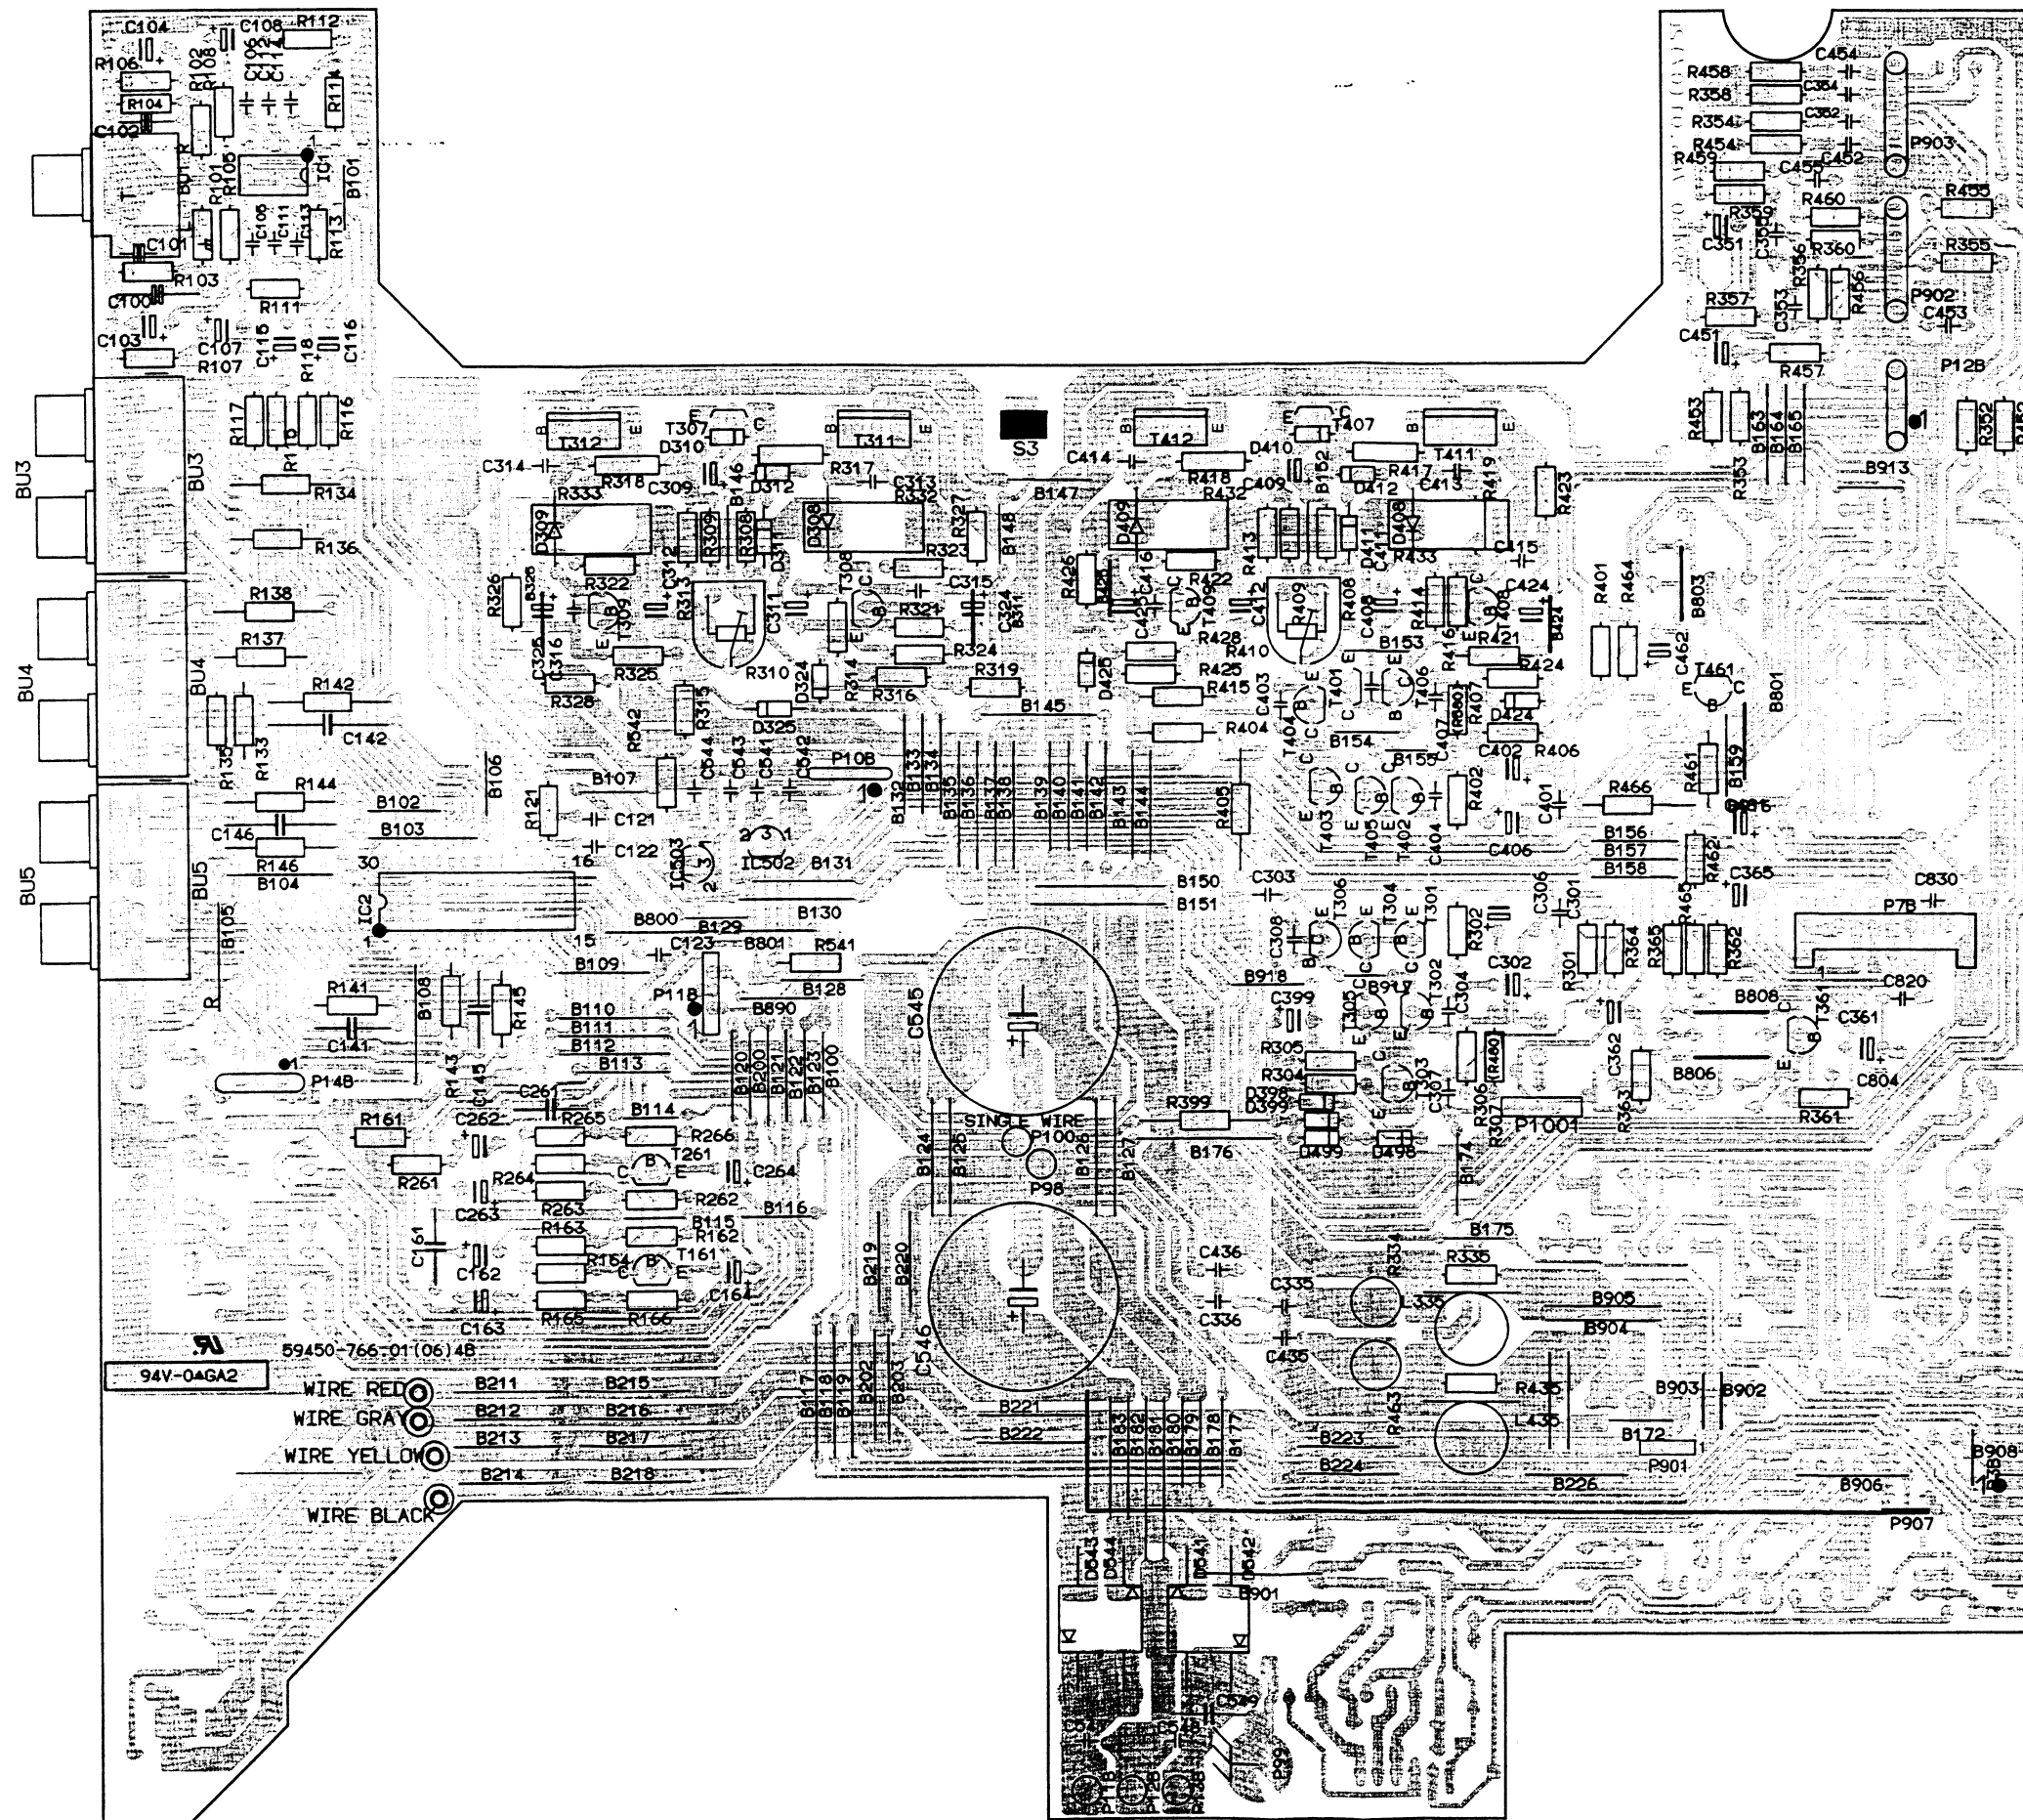


### 2.8.2 LOUD SPEAKERS PCB (component side)

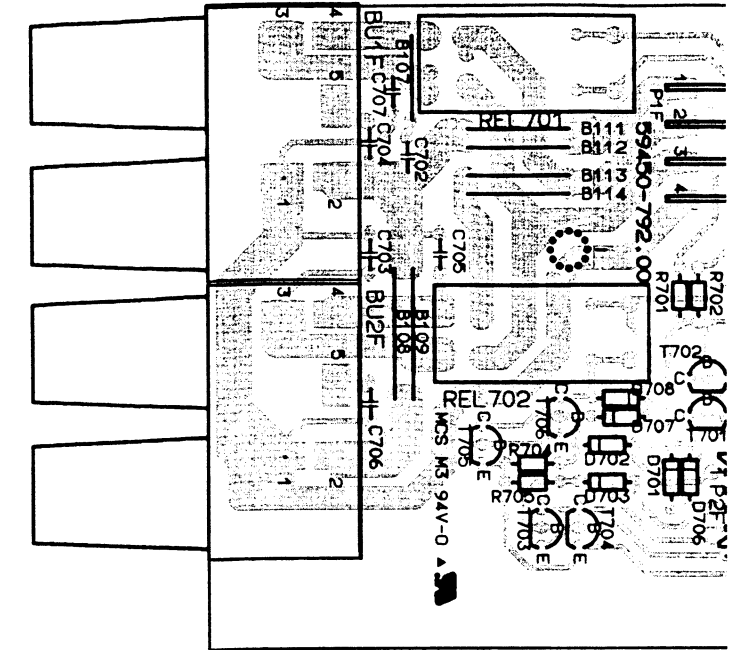


### 2.8.4 SPEAKERS PCB (component side)

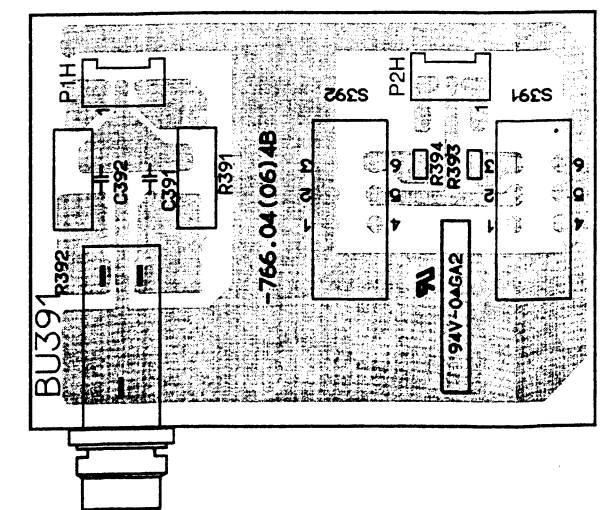


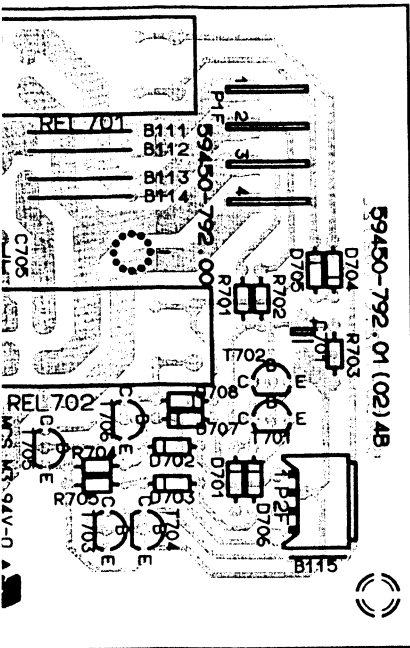


## 2.11 SCHEMATIC DIAGRAM (VERSIONS /02B/05B): TRAF0 BOARD, RC-BUS BOARD, AC OUTLET BOARD

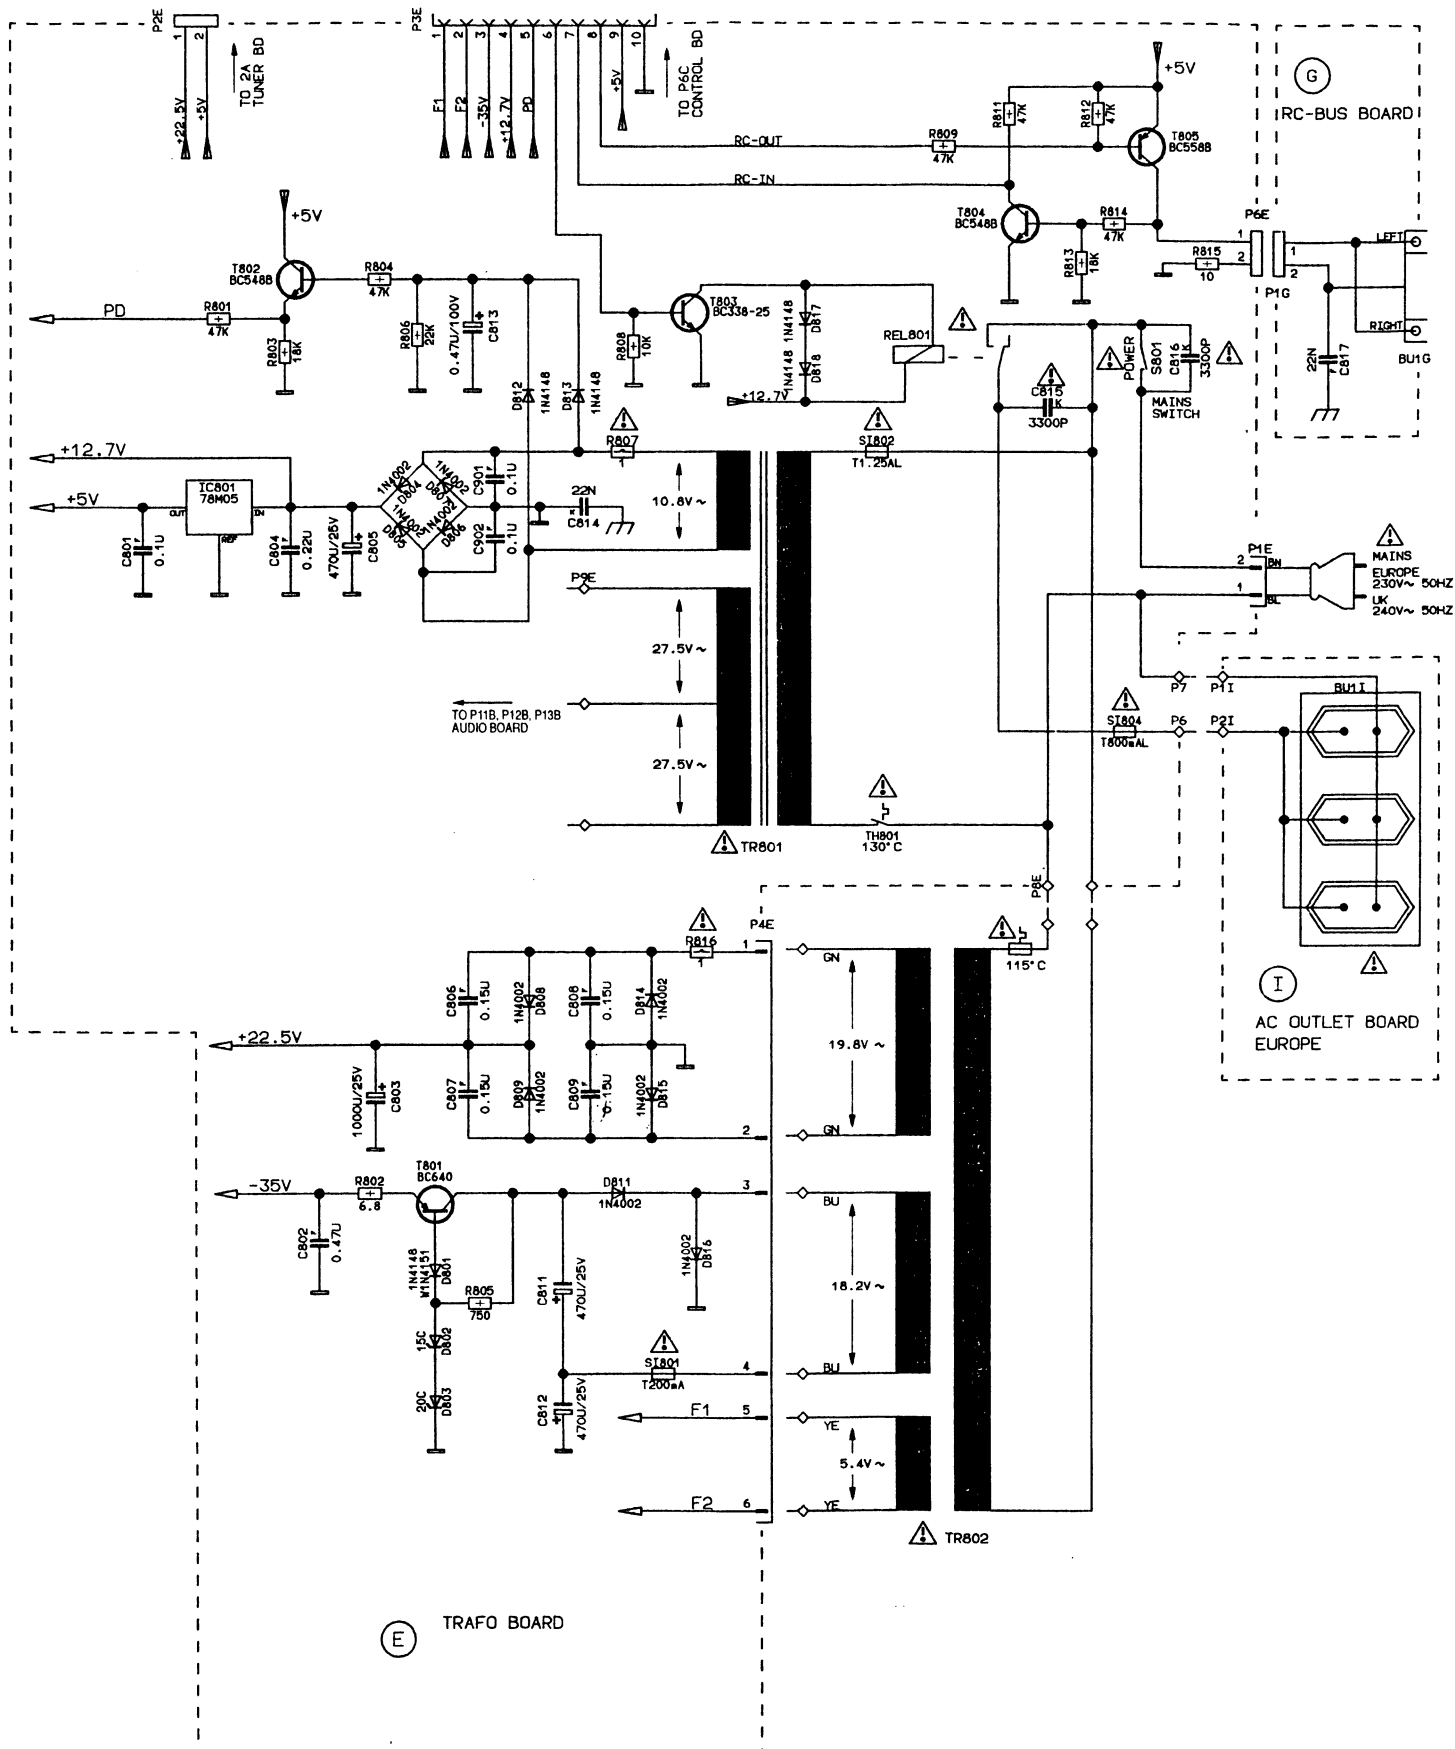




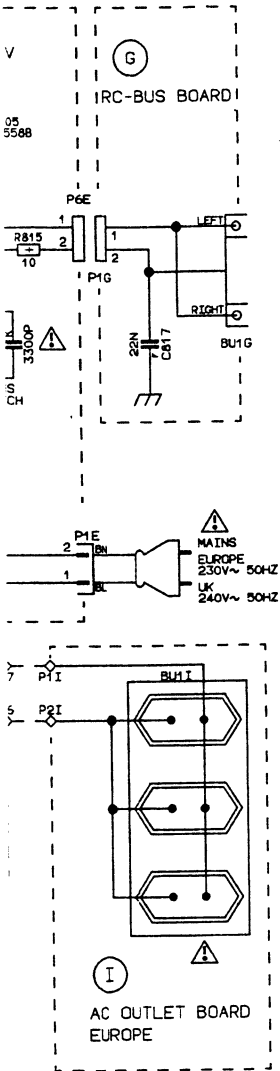


2.12.1 TRAFO PCB (VERSIONS /02B/05B)  
(component side)

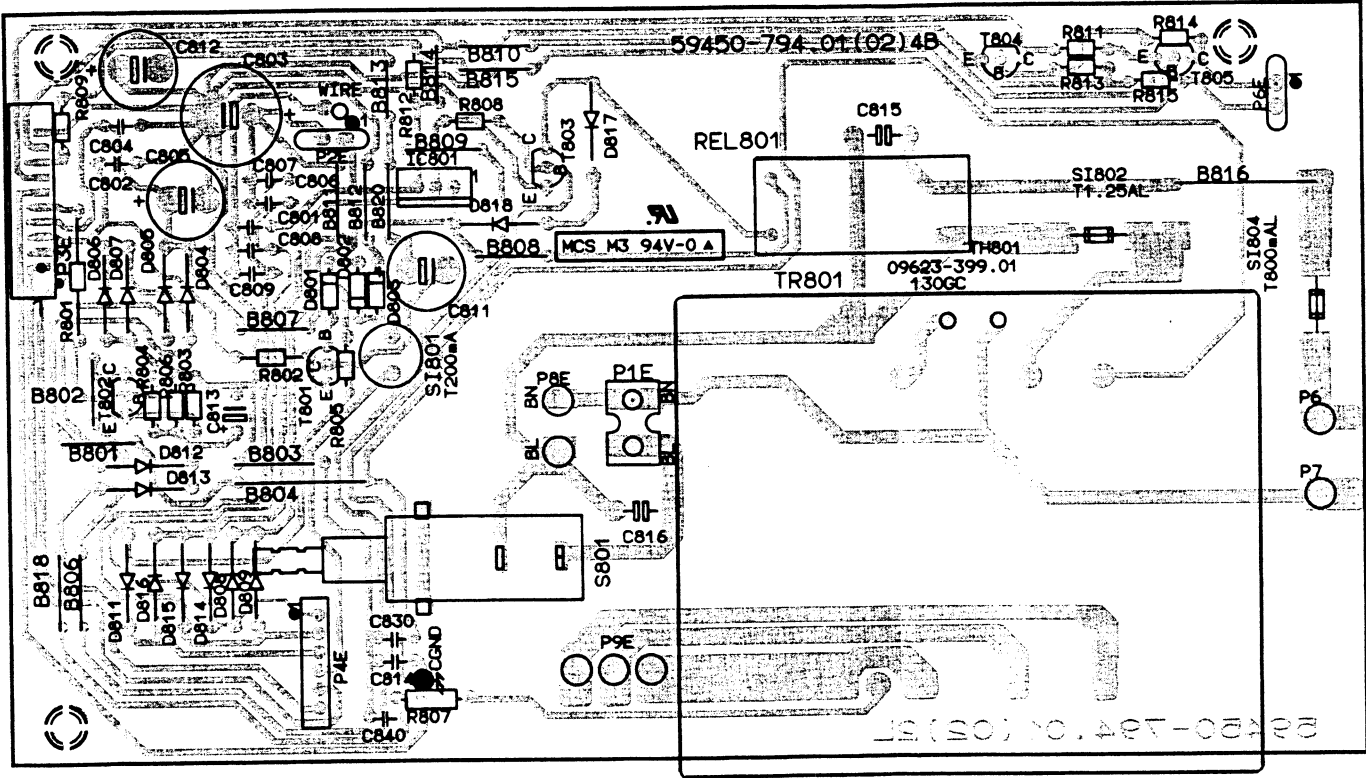

2.12.2 AC OUTLET PCB (VERSION /02B)  
(component side)

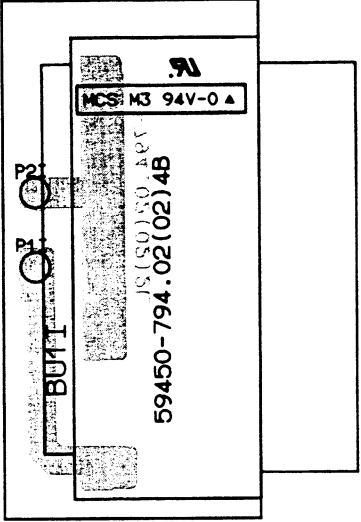

2.12.3 RC-BUS PCB (VERSIONS /02B/05B)  
(component side)

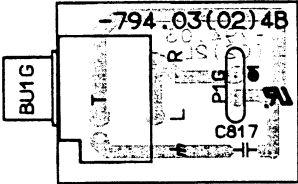

1200mA

94V-0A6A2

6X4

6AR5

6X5

6X6

6X7

6X8

6X9

6X10

6X11

6X12

6X13

6X14

6X15

6X16

6X17

6X18

6X19

6X20

6X21

6X22

6X23

6X24

6X25

6X26

6X27

6X28

6X29

6X30

6X31

6X32

6X33

6X34

6X35

6X36

6X37

6X38

6X39

6X40

6X41

6X42

6X43

6X44

6X45

6X46

6X47

6X48

6X49

6X50

6X51

6X52

6X53

6X54

6X55

6X56

6X57

6X58

6X59

6X60

6X61

6X62

6X63

6X64

6X65

6X66

6X67

6X68

6X69

6X70

6X71

6X72

6X73

6X74

6X75

6X76

6X77

6X78

6X79

6X80

6X81

6X82

6X83

6X84

6X85

6X86

6X87

6X88

6X89

6X90

6X91

6X92

6X93

6X94

6X95

6X96

6X97

6X98

6X99

6X100

6X101

6X102

6X103

6X104

6X105

6X106

6X107

6X108

6X109

6X110

6X111

6X112

6X113

6X114

6X115

6X116

6X117

6X118

6X119

6X120

6X121

6X122

6X123

6X124

6X125

6X126

6X127

6X128

6X129

6X130

6X131

6X132

6X133

6X134

6X135

6X136

6X137

6X138

6X139

6X140

6X141

6X142

6X143

6X144

6X145

6X146

6X147

6X148

6X149

6X150

6X151

6X152

6X153

6X154

6X155

6X156

6X157

6X158

6X159

6X160

6X161

6X162

6X163

6X164

6X165

6X166

6X167

6X168

6X169

6X170

6X171

6X172

6X173

6X174

6X175

6X176

6X177

6X178

6X179

6X180

6X181

6X182

6X183

6X184

6X185

6X186

6X187

6X188

6X189

6X190

6X191

6X192

6X193

6X194

6X195

6X196

6X197

6X198

6X199

6X200

6X201

6X202

6X203

6X204

6X205

6X206

6X207

6X208

6X209

6X210

6X211

6X212

6X213

6X214

6X215

6X216

6X217

6X218

6X219

6X220

6X221

6X222

6X223

6X224

6X225

6X226

6X227

6X228

6X229

6X230

6X231

6X232

6X233

6X234

6X235

6X236

6X237

6X238

6X239

6X240

6X241

6X242

6X243

6X244

6X245

6X246

6X247

6X248

6X249

6X250

6X251

6X252

6X253

6X254

6X255

6X256

6X257

6X258

6X259

6X260

6X261

6X262

6X263

6X264

6X265

6X266

6X267

6X268

6X269

6X270

6X271

6X272

6X273

6X274

6X275

6X276

6X277

6X278

6X279

6X280

6X281

6X282

6X283

6X284

6X285

6X286

6X287

6X288

6X289

6X290

6X291

6X292

6X293

6X294

6X295

6X296

6X297

6X298

6X299

6X300

6X301

6X302

6X303

6X304

6X305

6X306

6X307

6X308

6X309

6X310

6X311

6X312

6X313

6X314

6X315

6X316

6X317

6X318

6X319

6X320

6X321

6X322

6X323

6X324

6X325

6X326

6X327

6X328

6X329

6X330

6X331

6X332

6X333

6X334

6X335

6X336

6X337

6X338

6X339

6X340

6X341

6X342

6X343

6X344

6X345

6X346

6X347

6X348

6X349

6X350

6X351

6X352

6X353

6X354

6X355

6X356

6X357

6X358

6X359

6X360

6X361

6X362

6X363


6X364

6X365



6X366

6X367</


2.14.2 AC OUTLET PCB (VERSIONS /01B/UBL)  
(component side)


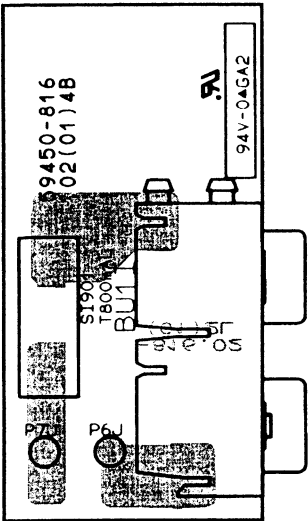


2.14.3 RC-BUS PCB (VERSIONS /01B/UBL)  
(component side)

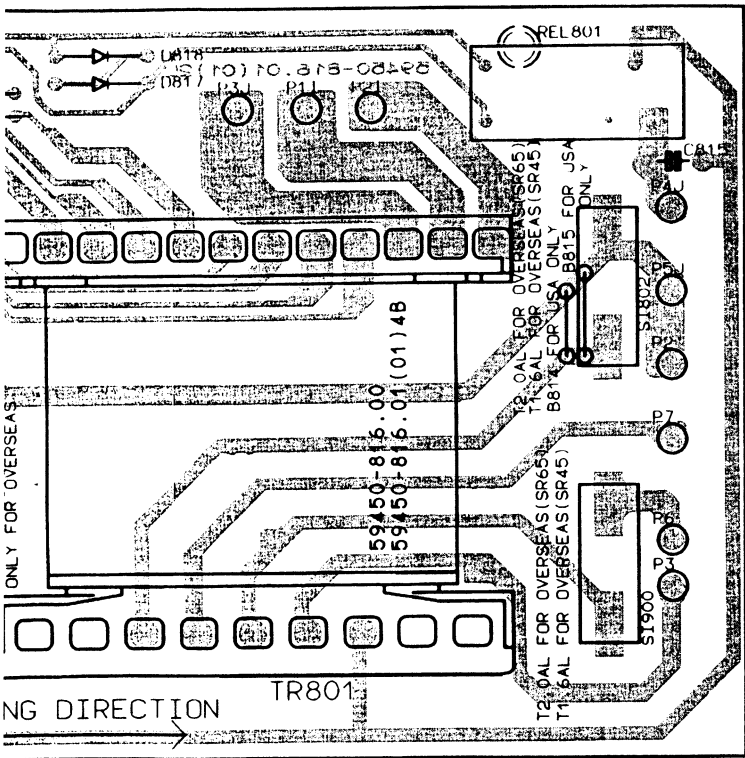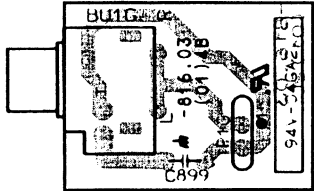


 2.15 SCHEMATIC DIAGRAM (VERSION /UBL): TRAF0 BOARD, RC-BUS BOARD, AC OUTLET BOARD

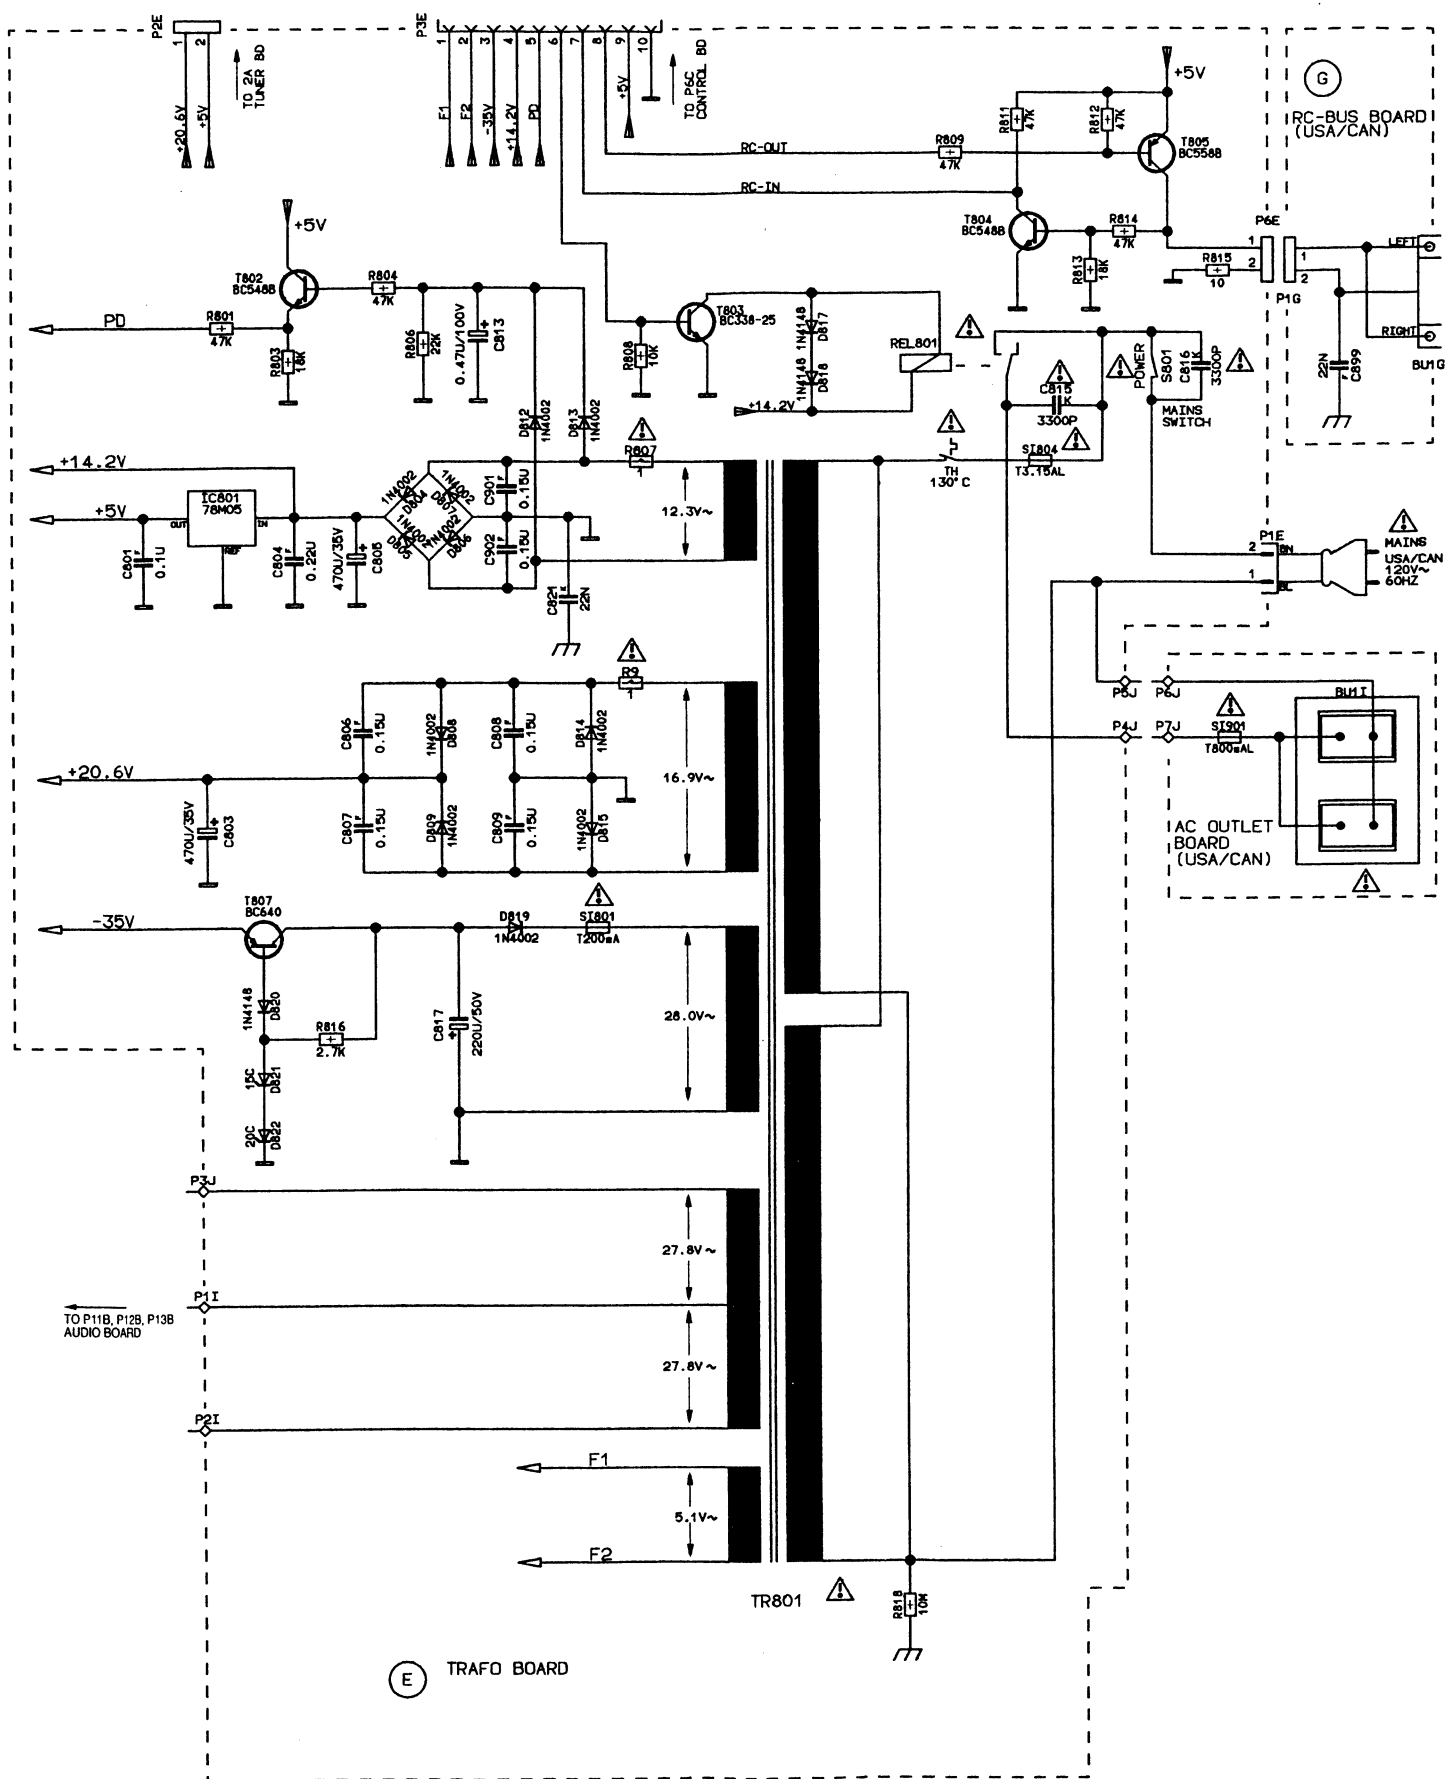

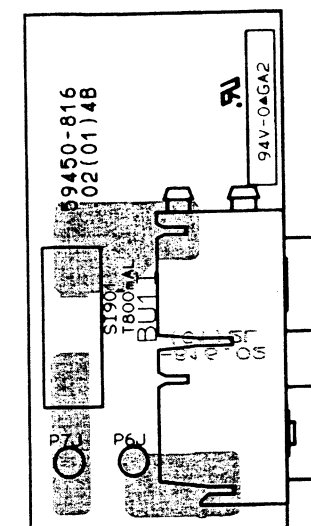



### 2.14.3 RC-BUS PCB (VERSIONS /01B/UBL) (component side)

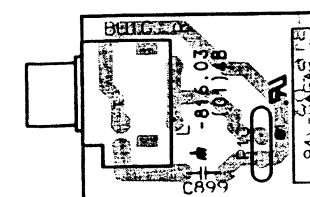



### 3. WIRING DIAGRAM

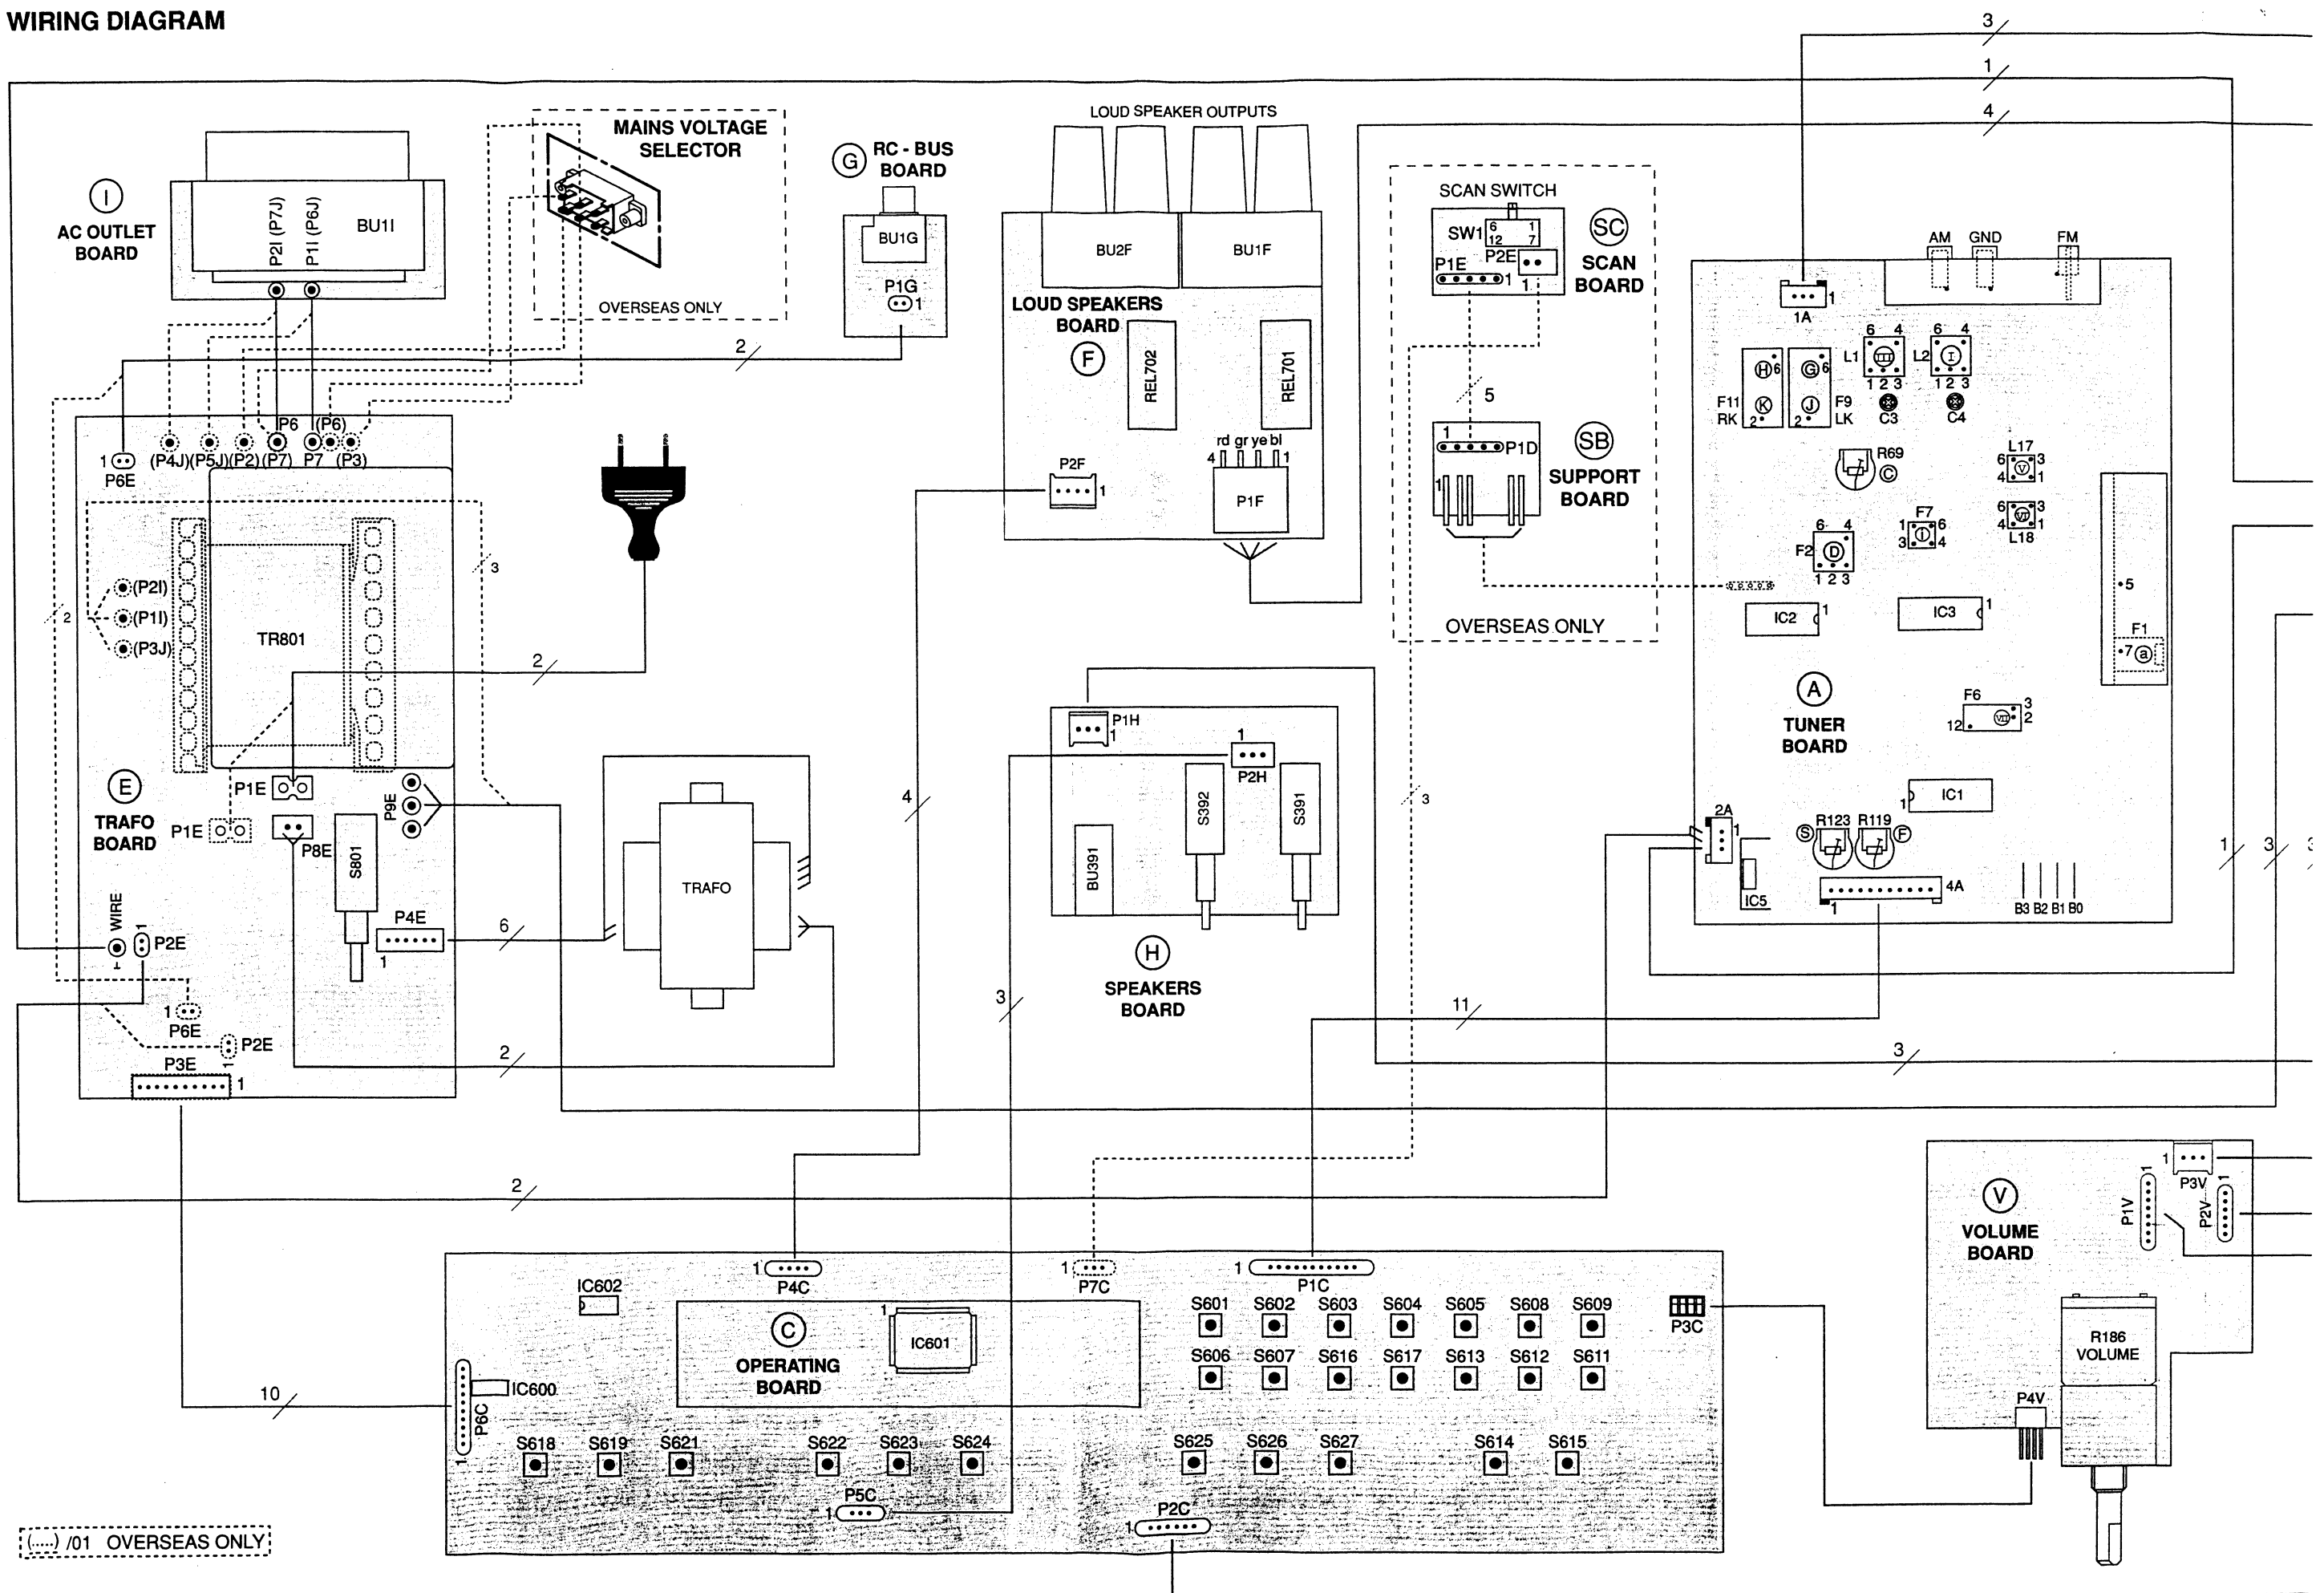


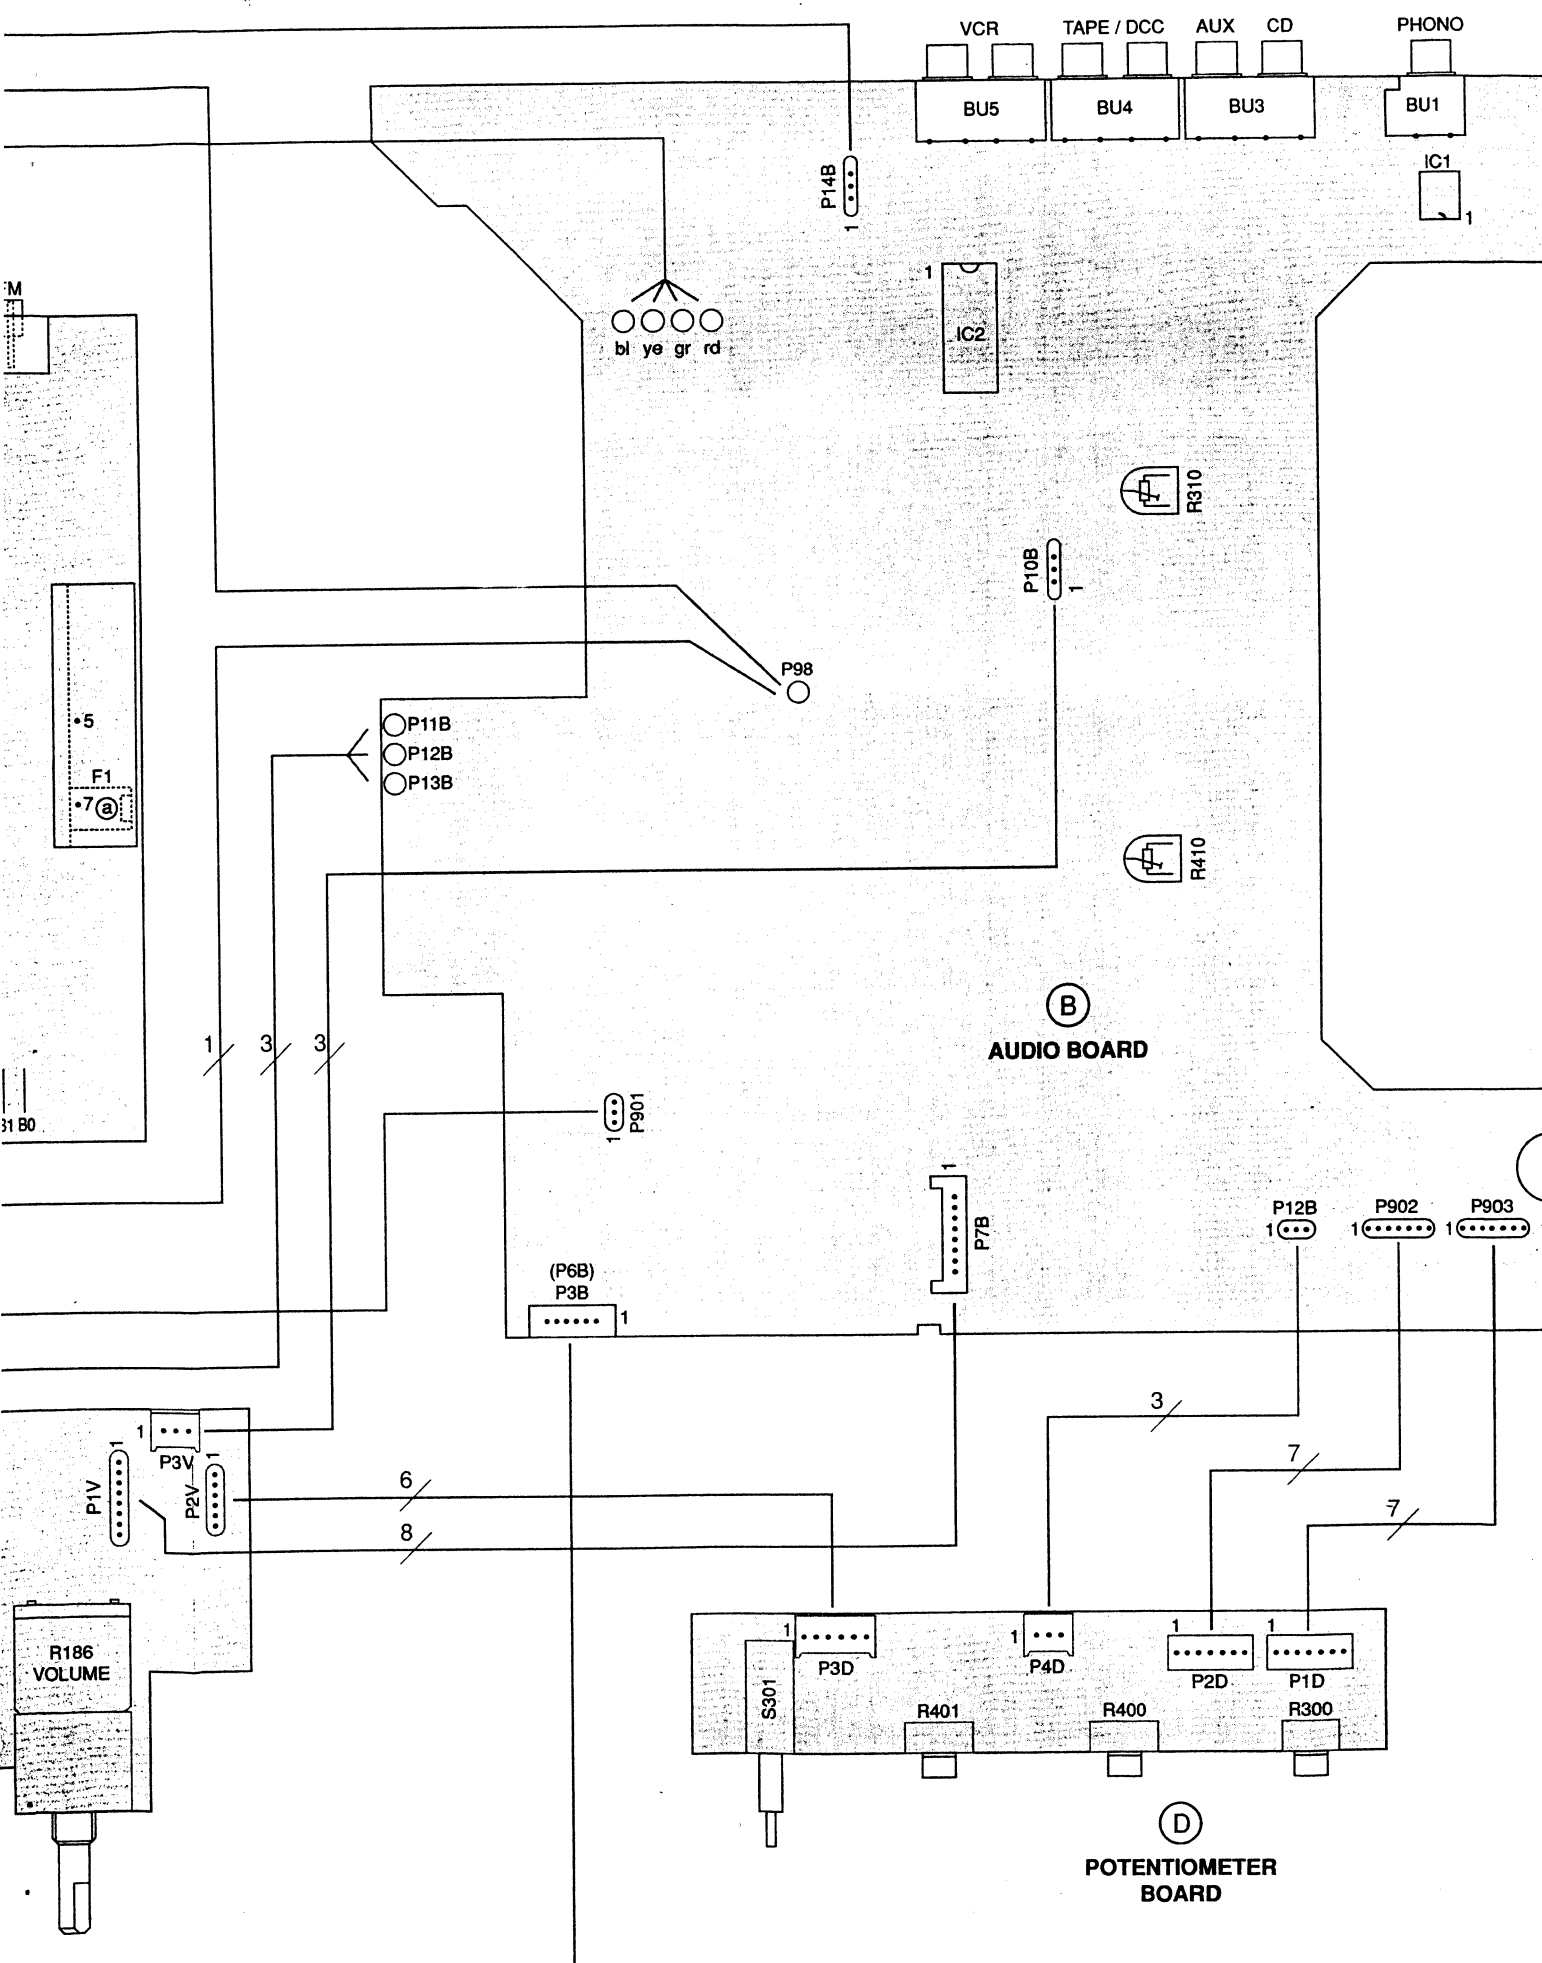


## 4. EXPLODED VIEW AND PARTS LIST

(VERS.:VERSION, U:U.S.A., F:JAPAN, K:FAR EAST, \*\*:EUROPE)

POS. NO	VERS.C OLOR	PART NO. (PH)	DESCRIPTION	PART NO. (MZ)
001B		482240421349	POWER LINK	QP40421349
003B		482241063889	POWER SWITCH KNOB	QP41063889
004B		482241063893	FUNCTION BUTTON	QP41063893
006B		482242651847	FRONT PANEL MOLD	QP42651847
007B		482245062514	WINDOW	QP45062514
008B		482242651846	FRONT PANEL ALUMI.	QP42651846
009B		482245911172	MARANTZ BADGE	185J251010
010B		482241341923	VOLUME KNOB	QP41341923
011B		482241331868	TONE/BALANCE KNOB	QP41331868
012B		482241063895	BASS-EQ BUTTON	QP41063895
013B		482226731463	HEAD PHONE JACK	QP26731463
015B		482241062446	TACT SWITCH	QP41062446
016B		482241063892	14 KEY BUTTON	QP41063892
017B		482241063894	TUNE KEY	QP41063894
▲ 001G	02B/05B	482227613636	MAINS SWITCH	QP27613636
011G		482246242048	FOOT (REAR)	183J057110
012G		482246242045	FOOT (FRONT)	183J057010
▲ 001R	02B	482226741233	MAINS OUTLET	QP26741233
002R		482226531305	RCA PIN JACK (RC-5)	QP26531305
003R		482229061254	SPEAKER TERMINAL	QP29061254
004R		482226710296	ANTENNA TERMINAL	QP26710296
005R		482221010531	TUNER PACK	QP21010531
006R		482226741153	RCA PIN JACK (4)	QP26741153
007R		482226731834	RCA PIN JACK (2)	QP26731834
001T	01B/02B/ 05B	482273622519	USER MANUAL	QP73622519
001T	U		USER MANUAL	QP73622544
BU1I	01B	482226731962	MAINS SOCKET	QP26731962
▲ L001	01B	482214621835	MAINS TRANSFORMER	QP14621835
▲ L001	U		MAINS TRANSFORMER	QP14621842
▲ L001	02B/05B	482214621834	MAINS TRANSFORMER	QP14621834
▲ L002	01B	482214621836	MAINS TRANS. (SUB)	QP14621836
▲ L002	U		MAINS TRANS. (SUB)	QP14621844
▲ L002	02B	482214621843	MAINS TRANS. (SUB)	QP14621843
▲ L002	05B	482214621849	MAINS TRANS. (SUB)	QP14621849
SW1	01B	482227613635	SCAN SWITCH	QP27613635
SWM1	01B	482227721807	SLIDE SWITCH	QP27721807
▲ W001	01B	482232111135	MAINS CORD	QP32111135
▲ W001	U		MAINS CORD	QP32111068
▲ W001	02B/05B	482232122917	MAINS CORD	QP32122917
Z001		482221810595	REMOTE COMMANDER	QP21810595

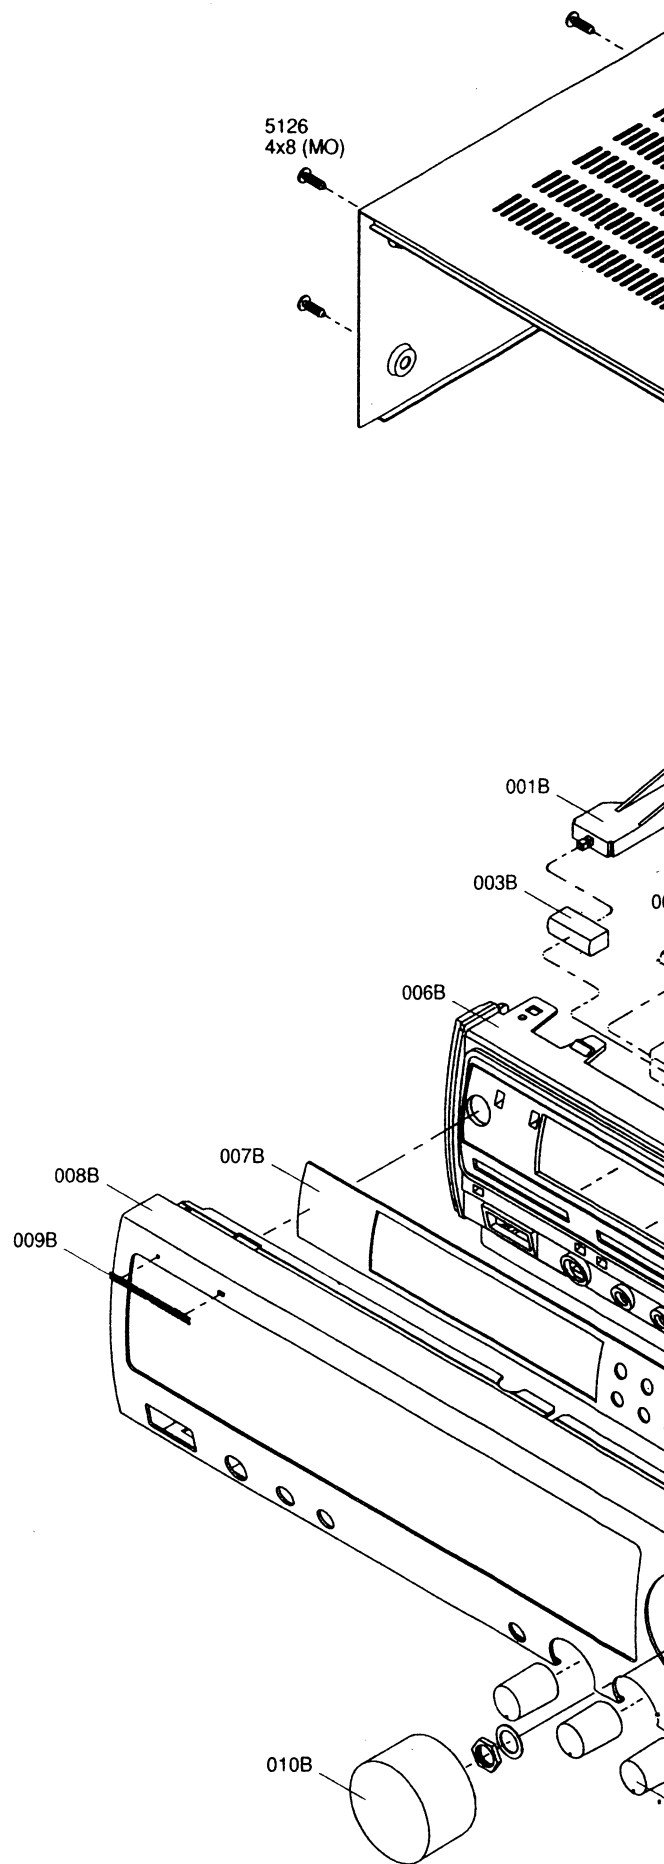

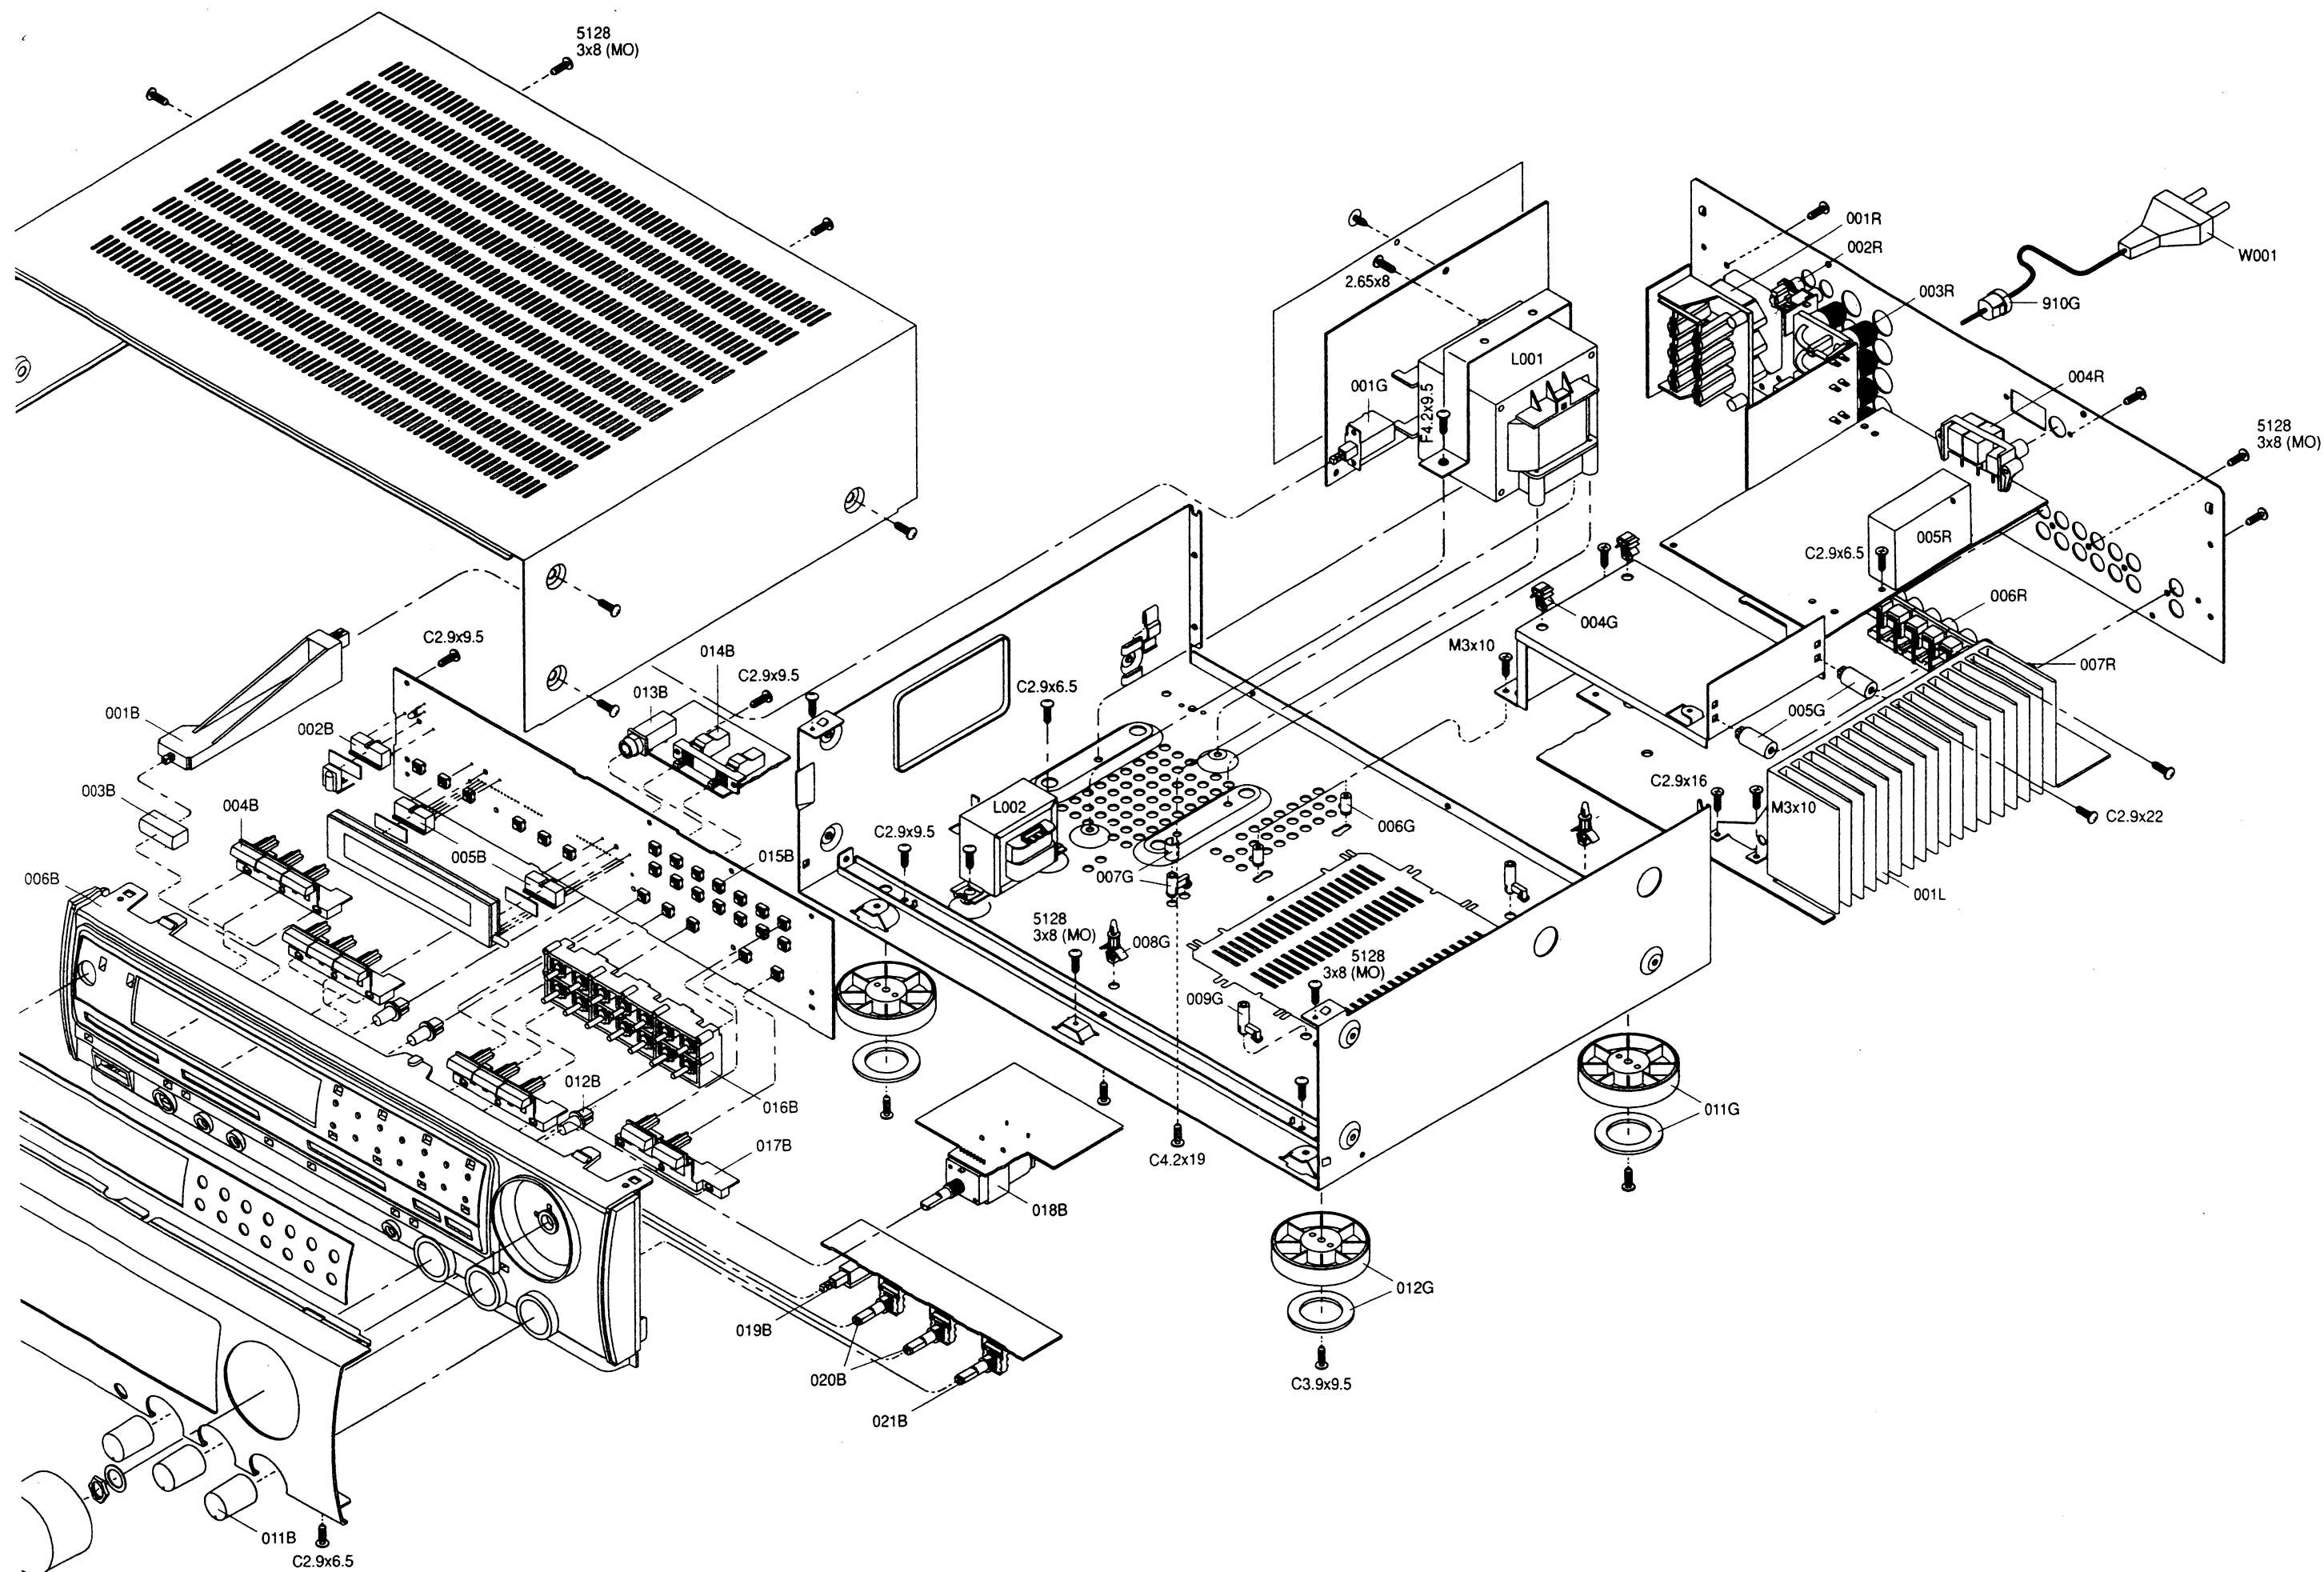


5. ALIGNMENT PROCEDURES

5.1 FM Alignment Procedures

(Function switch at "FM" position)

**Note:** The frontend is a completely preadjusted module. Only the IF-filter must be adjusted to the IF amplifier.  
The values of the tuning voltages are:  
87.5MHz = typ. 1.6V min 1.3V  
108MHz = typ. 8.0V max 9V

• FM IF Alignment

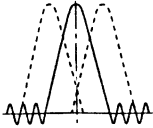Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Connect an FM sweep generator to FM aerial socket. $U_{RF}$ = approx. 100µV / 75Ω	98MHz	Connect an oscilloscope to measuring point (B)	With IF filter F1 (a) adjust for maximum level and symmetrical position. 

• FM Demodulator Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Connect an FM generator to FM aerial socket. $U_{RF}$ = 1mV / 75Ω $\Delta f$ = ±40kHz	98MHz	Connect a distortion analyzer to measuring point (R) and (L)	With filter F7 (i) adjust for minimum distortion. (typ. ≤0.2%)

• FM Field Strength IND - Search Stop Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Connect an FM generator to FM aerial socket. $U_{RF}$ = 1mV / 75Ω	98MHz	DC-VM to measuring point (F)	With R119 (F) set to 1.5V +0.05V.
2	Connect an FM generator to FM aerial socket. $U_{RF}$ = 15µV / 75Ω	98MHz	DC-VM to measuring point (G)	With R123 (S) set to 0.7V +0.05V.

• Multiplex Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Connect a stereo encoder to FM aerial socket.	106MHz $L_{mod.}$ = 1kHz	Connect AC-VM to measuring point (R)	With R69 (C) adjust for maximum and symmetrical crosstalk attenuation.
2		106MHz $R_{mod.}$ = 1kHz	Connect AC-VM to measuring point (L)	
3	Connect an FM generator to FM aerial socket.	98MHz $f_{mod.}$ = 38kHz	Connect AC-VM to measuring point (R) and (L)	With F9 (J), F11 (K) adjust for minimum level.
4		98MHz $f_{mod.}$ = 19kHz		With F9 (G), F11 (H) adjust for minimum level.

• Adjacent Channel Filter Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Connect an AF generator to the input of F2 (Pin 2). $U_{AF}$ = approx. 100mV	114 kHz	Connect AC-VM to the output of F2 (Pin 4).	With F2 (D) adjust for minimum level.

5.2 AM Alignment Procedures

(Function switch at "AM" position)

• MW/LW Oscillator Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1		531kHz (MW)	Connect DC-VM to measuring point (E)	With L18 (VI) set the tuning voltage to 1.1V.
2		153kHz (LW)		With L17 (V) set the tuning voltage to 1.8V.

• MW RF IF Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Feed in an AM generator signal via a frame aerial. $m = 30\%$ , $f_{mod.} = 1\text{kHz}$	1449kHz	Connect AC-VM to measuring point $\textcircled{R}$ and $\textcircled{L}$	With C3 $\textcircled{\text{IV}}$ and the IF Filter F6 $\textcircled{\text{VII}}$ set $U_{AF}$ to maximum level.
2		558kHz		With L1 $\textcircled{\text{III}}$ set $U_{AF}$ to maximum level.
3	Repeat the adjustment of C3 and L1 until sensitivity is maximized, end with C3.			

• LW RF IF Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Adjust
1	Feed in an AM generator signal via a frame aerial. $m = 30\%$ , $f_{mod.} = 1\text{kHz}$	261kHz	Connect AC-VM to measuring point $\textcircled{R}$ and $\textcircled{L}$	With C4 $\textcircled{II}$ set $U_{AF}$ to maximum level.
2		162kHz		With L2 $\textcircled{I}$ set $U_{AF}$ to maximum level.
3	Repeat steps 1 and 2 until sensitivity is maximized, end with C4.			

5.3 Amplifier Alignment Procedures



• Quiescent Current Alignment

Step	Signal Source Connection	Volume	Indicator Connection	Adjust
1	No input signal. Turn on the set for at least 2 minutes.	min.	Connect DC-VM to measuring point left channel (A) ↔ (B)	With R310 set the voltage to 10mV ±0.5mV.
2			Connect DC-VM to measuring point right channel (A) ↔ (B)	With R410 set the voltage to 10mV ±0.5mV.

• FM IF offset

The ceramic resonators have different intermediate frequencies as a result of tolerances. Dependent on the IF, a jumper has to be closed or a jumper has to be opened. B0 - B3 (see table).  
The resonators have been provided with a colour code.

 When replacing one of the ceramic resonators, take care that the colours codes of all resonators are the same.


 Measuring points  
 Trimming point

IF (MHz)	Jumper				Filter color
	B 3	B 2	B 1	B 0	
10.6500	0	1	0	0	Black
10.6750	0	1	1	0	Blue
10.7000	1	0	0	0	Red
10.7250	1	0	1	0	Orange
10.7500	1	1	0	0	White


0 = jumper open      1 = jumper closed



5.4 Amplifier Alignment Points

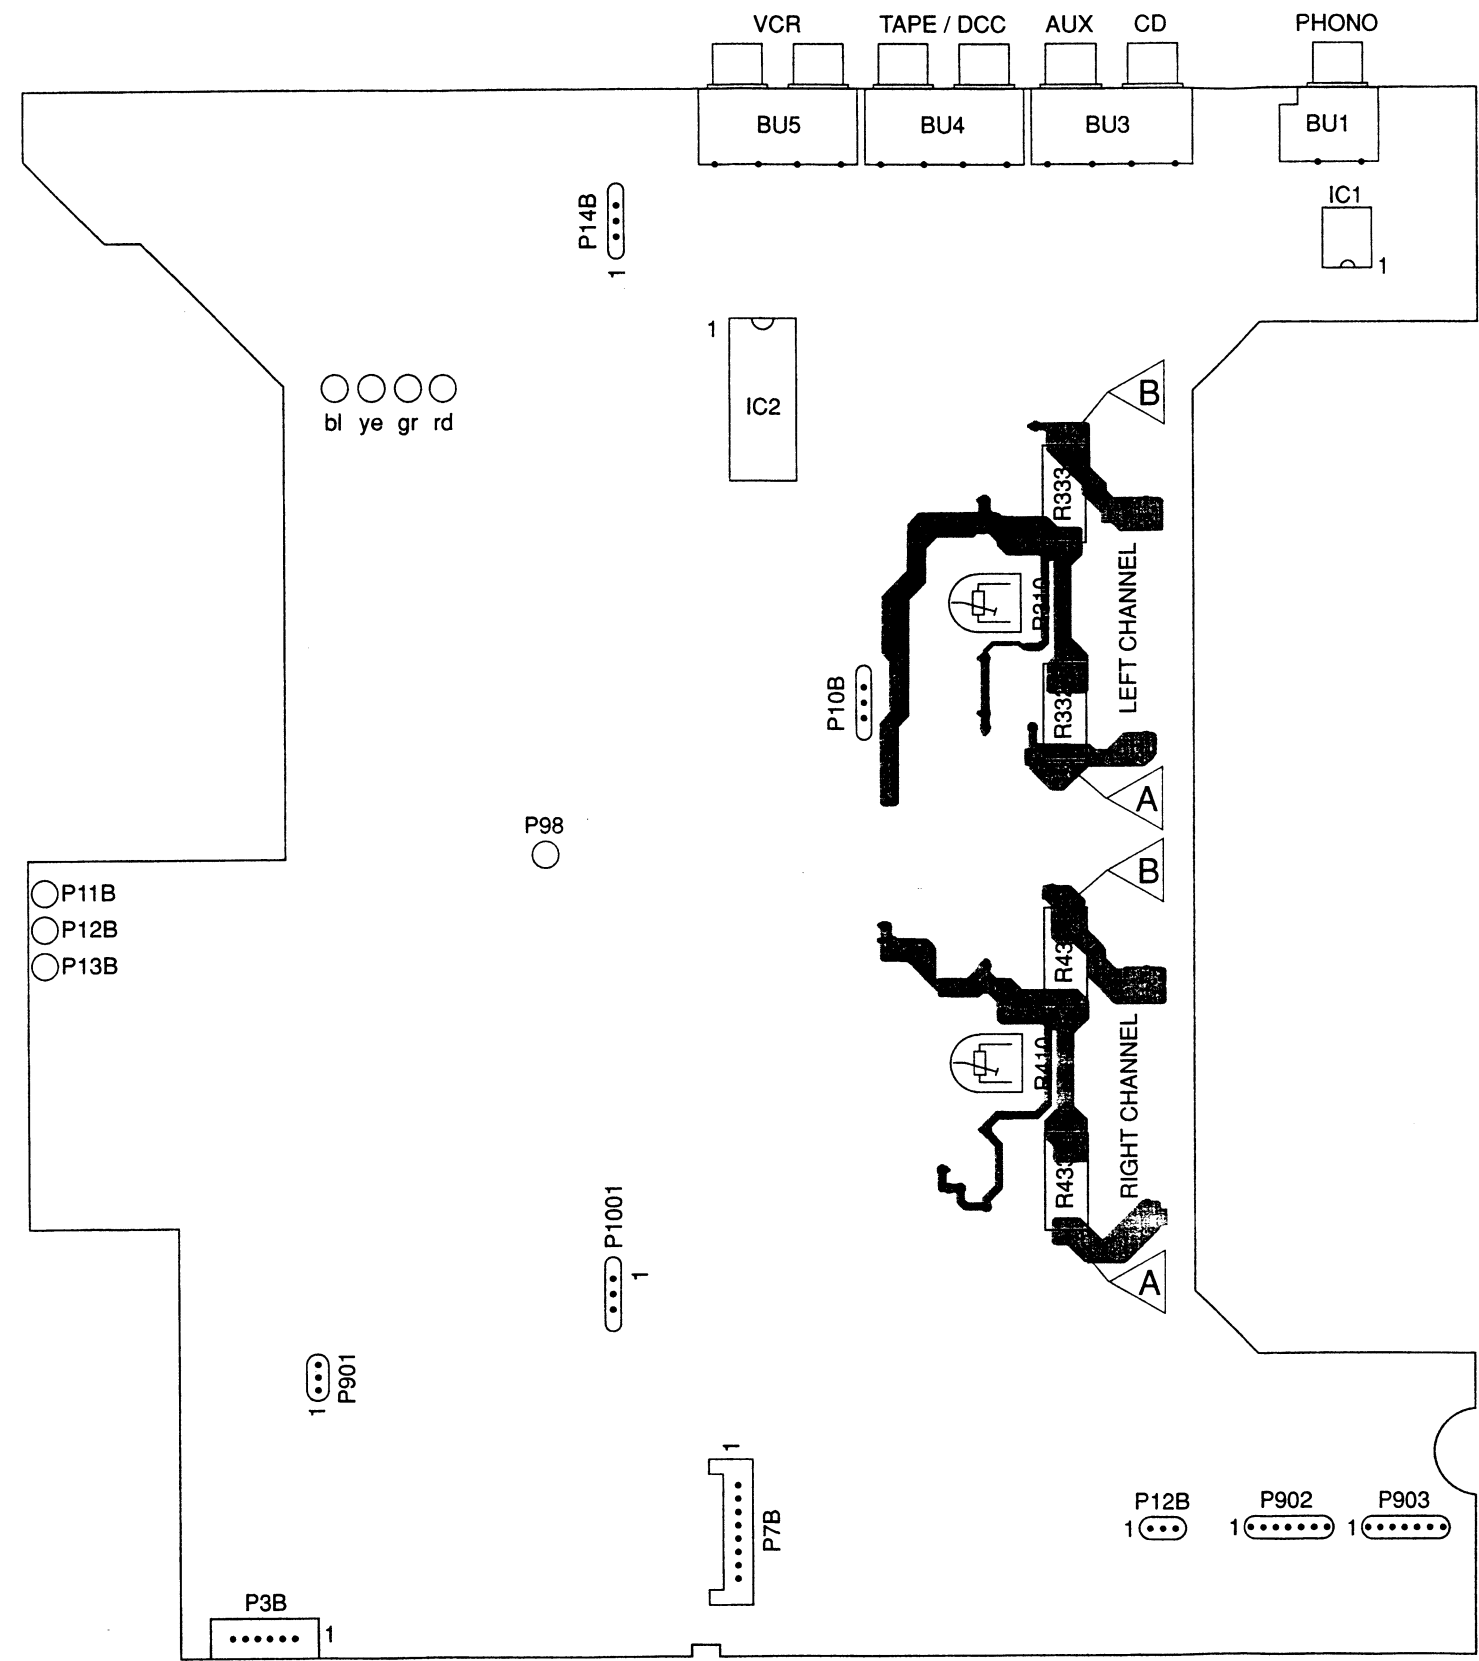

5.5 Tuner Alignment Points

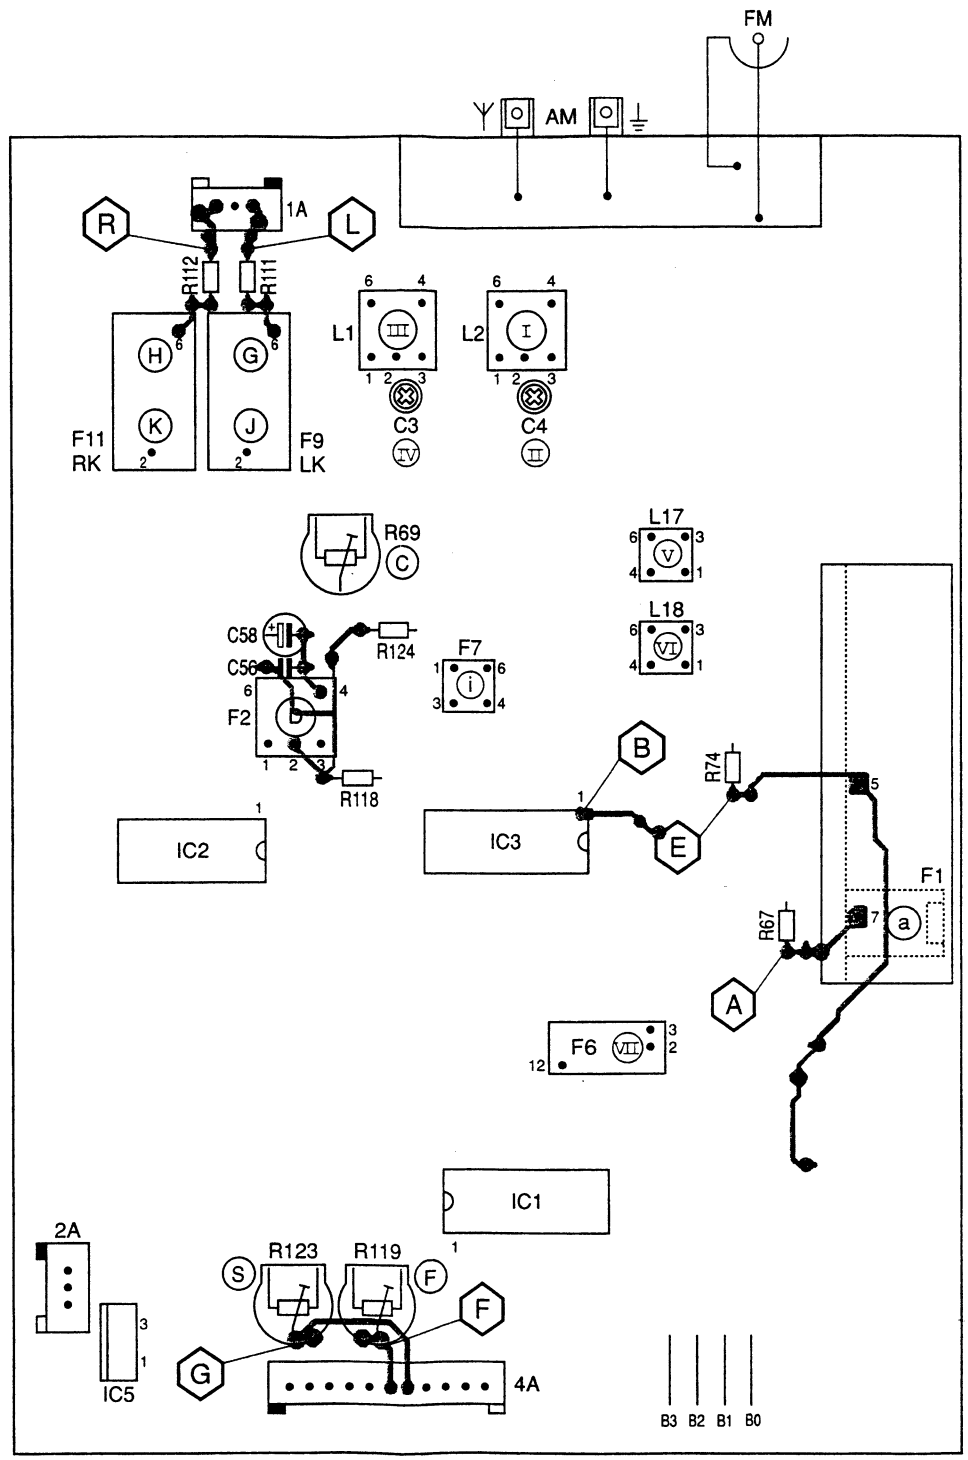

## 6. ELECTRICAL PARTS LIST

(VERS.:VERSION, U:U.S.A., F:JAPAN, K:FAR EAST, \*\*:EUROPE)

POS. NO	VERS.C OLO	PART NO. (PH)	DESCRIPTION	PART NO. (MZ)	POS. NO	VERS.C OLO	PART NO. (PH)	DESCRIPTION	PART NO. (MZ)
C3 C4 C545 C546 C702	02B	482212560222	CAPACITORS	QP12560222	D804		532213030684	DIODE 1N4002 -GA	QQ13030684
		482212560223	TRIM.CAP. 4.5-20pF	QP12560223	D809				
		482212442455	TRIM.CAP. 7.5-45pF	QP12442455	D811	02B/05B	532213030684	DIODE 1N4002 -GA	QQ13030684
		482212442455	ELE.CAP. 6800µF 50V	QP12442455	D812		482213030621	DIODE 1N4148WW.	QP13030621
		482212613722	ELE.CAP. 6800µF 50V	QP12613722					
C803		482212440214	CER.CAP. 0.01µF 10%	QP12613722	D813		482213030621	DIODE 1N4148WW.	QP13030621
▲ C815	01B/02B/ U	482212611805	ELE.CAP. CB1000µF 25V	QP12440214	D814		532213030684	DIODE 1N4002 -GA	QQ13030684
			CER.CAP. A 3300pF 20%	QP12611805	D816				
▲ C816		482212611805	CER.CAP. A 3300pF 20%	QP12611805	D817	01B/02B/ U	482213030621	DIODE 1N4148WW.	QP13030621
D6 D7 D9 D14 I D17		532213034052	SEMICONDUCTORS	QQ13034052	D818	01B/02B/ U	482213030621	DIODE 1N4148WW.	QP13030621
		532213034052	DIODE 1N4151	QQ13034052	D819	01B/U	532213030684	DIODE 1N4002 -GA	QQ13030684
		482213082789	DIODE 1N4151	QP13082789	D820	01B/U	482213030621	DIODE 1N4148WW.	QP13030621
			DIODE SVC321SP	QP13082789	D821	01B/U	482213083968	Z-DIODE 15V C 0.5W	QP13083968
		532213034052	DIODE 1N4151	QQ13034052	D822	01B/U	482213083968	Z-DIODE 15V C 0.5W	QP13083968
D19		532213034052	DIODE 1N4151	QQ13034052	IC1		482220983163	IC LM833N	QP20983163
D23		482213082789	DIODE SVC321SP	QP13082789	IC2		482220972748	IC LC7821	QP20972748
D24		532213034052	DIODE 1N4151	QQ13034052	IC3		482220971785	IC LA1266	QP20971785
D25		532213034052	DIODE 1N4151	QQ13034052	IC5		482220933347	IC LM340AT-12NSC	QP20933347
D27		532213034052	DIODE 1N4151	QQ13034052	IC01		482220930178	IC LC7218	QP20930178
D28		532213034052	DIODE 1N4151	QQ13034052	IC02		482220973434	IC LA3401	QP20973434
D43		532213034052	DIODE 1N4151	QQ13034052	IC502	01B/05B/ U	482220990579	IC MC78L18ACP	QP20990579
D308		532213030684	DIODE 1N4002 -GA	QQ13030684	IC503	01B/05B/ U	482220990581	IC MC79L18ACP	QP20990581
D309		532213030684	DIODE 1N4002 -GA	QQ13030684	IC600		482221230842	IR-SENSOR TFMS5360	QP21230842
D310		482213081781	Z-DIODE 3.3V B 0.5W	QP13081781	IC601		482220990583	IC M38172-M4-XXX	QP20990583
D311		532213034052	DIODE 1N4151	QQ13034052	IC602		482220990584	IC X24C04	QP20990584
D312		532213034052	DIODE 1N4151	QQ13034052	IC801		482220980891	IC MC78M05CT	QP20980891
D324		482213030621	DIODE 1N4148WW.	QP13030621	T1		482213040937	TRANS. BC548B	QP13040937
D325		482213030621	DIODE 1N4148WW.	QP13030621	T2		532213044779	TRANS. BC338-25	QQ13044779
D398		482213030621	DIODE 1N4148WW.	QP13030621	T3		532213044779	TRANS. BC338-25	QQ13044779
D399		482213030621	DIODE 1N4148WW.	QP13030621	T6		482213044197	TRANS. BC558B	QP13044197
D408		532213030684	DIODE 1N4002 -GA	QQ13030684	T7		482213042121	TRANS. FET F2072SK30A-TM-Y1	QP13042121
D409		532213030684	DIODE 1N4002 -GA	QQ13030684	T8		482213044197	TRANS. BC558B	QP13044197
D410		482213081781	Z-DIODE 3.3V B 0.5W	QP13081781	T12		482213044196	TRANS. BC548C	QP13044196
D411		532213034052	DIODE 1N4151	QQ13034052	T13		482213044197	TRANS. BC558B	QP13044197
D412		532213034052	DIODE 1N4151	QQ13034052	T15		482213040937	TRANS. BC548B	QP13040937
D424		482213030621	DIODE 1N4148WW.	QP13030621	T16		482213040902	TRANS. BF240	QP13040902
D425		482213030621	DIODE 1N4148WW.	QP13030621	T17		482213040937	TRANS. BC548B	QP13040937
D498		482213030621	DIODE 1N4148WW.	QP13030621	T18		482213040937	TRANS. BC548B	QP13040937
D499		482213030621	DIODE 1N4148WW.	QP13030621	T19		482213044197	TRANS. BC558B	QP13044197
D541		532213034939	DIODE 1N5401	QQ13034939	T21		482213040937	TRANS. BC548B	QP13040937
D544		482213082743	LED TLHR 4400 TFK	QP13082743	T22		482213040937	TRANS. BC548B	QP13040937
D601		482213030621	DIODE 1N4148WW.	QP13030621	T25		482213040937	TRANS. BC548B	QP13040937
D602					T161		482213041096	TRANS. BC550C	QP13041096
D605					T162		482213041096	TRANS. BC550C	QP13041096
D606		482213034173	Z-DIODE 5.6V C 0.5W	QP13034173	T163		482213061755	TRANS. BC560C	QP13061755
D609		482213030621	DIODE 1N4148WW.	QP13030621	T164		482213040937	TRANS. BC548B	QP13040937
D611		482213080515	Z-DIODE 5.1V C 0.5W	QP13080515	T165		482213040937	TRANS. BC548B	QP13040937
D612		482213030621	DIODE 1N4148WW.	QP13030621	T166		482213041096	TRANS. BC550C	QP13041096
D701					T167		482213044197	TRANS. BC558B	QP13044197
D708		482213030621	DIODE 1N4148WW.	QP13030621	T261		482213041096	TRANS. BC550C	QP13041096
D801	02B/05B	482213030621	DIODE 1N4148WW.	QP13030621	T262		482213041096	TRANS. BC550C	QP13041096
D802	02B/05B	482213083968	Z-DIODE 15V C 0.5W	QP13083968	T263		482213061755	TRANS. BC560C	QP13061755
D803	02B/05B	482213083968	Z-DIODE 15V C 0.5W	QP13083968	T264		482213040937	TRANS. BC548B	QP13040937

(VERS.:VERSION, U:U.S.A., F:JAPAN, K:FAR EAST, \*\*:EUROPE)

POS. NO	VERS.C OLO	PART NO. (PH)	DESCRIPTION	PART NO. (MZ)	POS. NO	VERS.C OLO	PART NO. (PH)	DESCRIPTION	PART NO. (MZ)
T265		482213040937	TRANS. BC548B	QP13040937	▲ R417		482211141024	RES. B 100 Ω 5%	QP11141024
T266		482213041096	TRANS. BC550C	QP13041096	▲ R418		482211141024	RES. B 100 Ω 5%	QP11141024
T301		482213061755	TRANS. BC560C	QP13061755	▲ R423	02B/05B/ U	482211711898	RES. A 390 Ω 5%	QP11711898
T302		482213044461	TRANS. BC546B	QP13044461					
T303		482213044461	TRANS. BC546B	QP13044461	▲ R426	02B/05B/ U	482211711898	RES. A 390 Ω 5%	QP11711898
T304		482213061755	TRANS. BC560C	QP13061755					
T305		482213044461	TRANS. BC546B	QP13044461	▲ R541	U		RES. B 220 Ω 5%	QP05210221
T306		482213063852	TRANS. BC880	QP13063852	▲ R541	02B/05B	482211711898	RES. A 390 Ω 5%	QP11711898
T307		482213044461	TRANS. BC546B	QP13044461	▲ R542	U		RES. B 220 Ω 5%	QP05210221
T308		532213044779	TRANS. BC338-25	QQ13044779	▲ R542	02B/05B	482211711898	RES. A 390 Ω 5%	QP11711898
					R653		482211192219	RES.NET. 8X47K Ω	QP11192219
T309		482213040988	TRANS. BC328-25PHI	QP13040988	▲ R807		482211170183	RES. B 1 Ω 5%	QP11170183
T311		482213062269	TRANS. BDT65C	QP13062269					
T312		532213061575	TRANS. BDT64C	QQ13061575					
T361		482213041096	TRANS. BC550C	QP13041096					
T401		482213061755	TRANS. BC560C	QP13061755	DP601		482213091507	MISCELLANEOUS FL-DISPLAY	QP13091507
T402		482213044461	TRANS. BC546B	QP13044461	F2		482221451727	ANTI BIRDIE FILTER	QP21451727
T403		482213044461	TRANS. BC546B	QP13044461	F3		482215762739	COIL CER. FILTER 70	QP15762739
T404		482213061755	TRANS. BC560C	QP13061755	F4		482215762739	COIL CER. FILTER 70	QP15762739
T405		482213044461	TRANS. BC546B	QP13044461	F6		482224271509	IF COIL SER. FILTER SFL450J3	QP24271509
T406		482213063852	TRANS. BC880	QP13063852					
T407		482213044461	TRANS. BC546B	QP13044461	F7		482215611092	FM-DEM. COIL	QP15611092
T408		532213044779	TRANS. BC338-25	QQ13044779	F9		482215611104	COIL MPX FILTER LPF-V20	QP15611104
T409		482213040988	TRANS. BC328-25PHI	QP13040988	F11		482215611104	COIL MPX FILTER LPF-V20	QP15611104
T411		482213062269	TRANS. BDT65C	QP13062269					
T412		532213061575	TRANS. BDT64C	QQ13061575	KR601	02B/05B	482224271559	CRYSTAL 32.768 KHz	QP24271559
T461		482213041096	TRANS. BC550C	QP13041096	L0		482215760207	HF-CHOKE COIL	QP15760207
T601		482213040988	TRANS. BC328-25PHI	QP13040988	L1		482215611094	MW DETECTOR COIL	QP15611094
T602		482213040988	TRANS. BC328-25PHI	QP13040988	L2		482215611095	LW DETECTOR COIL	QP15611095
T603		532213044779	TRANS. BC338-25	QQ13044779	L16		482215770423	CHOKE COIL AX 0.33μH	QP15770423
T604		532213044779	TRANS. BC338-25	QQ13044779	L17		482215611091	LW-OSC COIL	QP15611091
T605		482213044461	TRANS. BC546B	QP13044461	L18		482215611089	MW-OSC COIL	QP15611089
T606		482213044461	TRANS. BC546B	QP13044461	L19		482215753632	CHOKE COIL 39mH 5%	QP15753632
T701					L601		482215771739	CHO.COIL433003038991	QP15771739
I									
T706		482213040937	TRANS. BC548B	QP13040937	Q1		482224272294	X'TAL 7.2 MHz	QP24272294
					Q2		482224272295	X'TAL RESONATOR CSB456F11	QP24272295
T801	02B/05B	482214881194	TRANS. BC640	QP14881194	Q601	01B/U	482224271559	X'TAL 32.768 KHz	QP24271559
T802		482213040937	TRANS. BC548B	QP13040937	Q601	02B/05B	482224272527	X'TAL RESONATOR CST4.0MGW	QP24272527
T803	01B/02B/ U	532213044779	TRANS. BC338-25	QQ13044779					
T804		482213040937	TRANS. BC548B	QP13040937	▲ REL701		482228060592	RELAY V23037A0002A10	QP28060592
					▲ REL702		482228060592	RELAY V23037A0002A10	QP28060592
T805		482213044197	TRANS. BC558B	QP13044197					
T807	01B/U	482214881194	TRANS. BC640	QP14881194	▲ RL801	01B/02B/ U	482228050076	RELAY G2R117PVUSSV	QP28050076
RESISTORS					S3		482228220285	THERMO. SW 90GR.	QP28220285
R69		482210020694	TRIM.POT. A 100K Ω	QP10020694	S301		482227620531	PUSH SW BASS-EQ	QP27620531
R119		482210020694	TRIM.POT. A 100K Ω	QP10020694	S391		482227613634	PUSH SW	QP27613634
R123		482210020694	TRIM.POT. A 100K Ω	QP10020694	S392		482227613634	PUSH SW	QP27613634
R186		482210130886	MAIN VOLUME	QP10130886	▲ S801		482227613636	MAINS SW	QP27613636
R300		482210130887	BALANCE VOLUME	QP10130887					
R310		482210010075	RES. 100 Ω	QP10010075	▲ SI801	01B/02B/ 05B	482207152001	FUSE GR 200mA/T	QP07152001
▲ R317		482211141024	RES. B 100 Ω 5%	QP11141024	▲ SI801	U		FUSE GR 200mA/T	QP25350158
▲ R318		482211141024	RES. B 100 Ω 5%	QP11141024	▲ SI802	01B/02B/ 05B	482207031252	FUSE 1.25A/T L 250V	QP07031252
▲ R323	02B/05B/ U	482211711898	RES. A 390 Ω 5%	QP11711898					
▲ R326	02B/05B/ U	482211711898	RES. A 390 Ω 5%	QP11711898	▲ SI804	01B/02B U	482207038001	FUSE 800mA/T L 250V FUSE 1.25A/T L 250V	QP07038001 QP07033152
					▲ SI804				
R400		482210130888	TONE VOLUME	QP10130888	▲ TH801		482228240297	THERMO. SW	QP28240297
R401		482210130888	TONE VOLUME	QP10130888					
R410		482210010075	RES. 100 Ω	QP10010075					

## SPECIFICATION

### FM TUNER SECTION

Frequency range	87.5 ~ 108 MHz
Sensitivity	
DIN mono (s/n 26 dB 75 Ohms)	0.9 $\mu$ V
DIN stereo (s/n 46 dB 75 Ohms)	25 $\mu$ V
Selectivity adjacent channel 98 MHz	65 dB
Tuner output (1 kHz 75 kHz deviation)	1200 mV
Signal to noise ratio	
S/N DIN weighted mono	80 dB
S/N DIN weighted stereo	73 dB
Total harmonic distortion mono	0.1 %
Total harmonic distortion stereo	0.2 %
Accuracy of frequency response across 30 Hz~15 kHz bandwidth	+0.5 / -1.5 dB

### MW TUNER SECTION

Frequency range	/01 version: 520 ~ 1710 kHz
	531 ~ 1602 kHz
	/02 and /05 version: 531 ~ 1602 kHz
Sensitivity (s/n 20 dB 30% mod. 999 kHz)	400 $\mu$ V/m
Selectivity 999 kHz	35 dB
Signal to noise ratio at 999 kHz	54 dB

### LW TUNER SECTION

Frequency range	153 ~ 281 kHz
Sensitivity (s/n 20 dB 30% mod. 207 kHz)	800 $\mu$ V/m
Signal to noise ratio at 207 kHz	52 dB

### AMPLIFIER SECTION

Power output	DIN 4 $\Omega$	53 W
	DIN 8 $\Omega$	42 W
	RMS 8 $\Omega$	40 W
Dynamic power 8 $\Omega$ / 4 $\Omega$		64 / 100 W
T.H.D. at 8 $\Omega$ rated RMS output		0.01 %
Damping factor		70
Input sensitivity	: PHONO	2.5 mV / 47 k $\Omega$
	: CD / AUX / TAPE / DCC / VCR	185 mV / 47 k $\Omega$
S/N	: PHONO	78 dB
	: CD / AUX / TAPE / DCC / VCR	95 dB

### POWER REQUIREMENTS

/ 02 version	230 V AC, 50 / 60 Hz
/ 05, / 07 version	240 V AC, 50 / 60 Hz
/ 01 version (4 voltages)	110 / 120 / 220 / 240 V AC, 50 / 60 Hz

### DIMENSIONS

Width	420 mm
Height	132 mm
Depth	334 mm

WEIGHT	7.5 kg
--------	--------