



ARIES 34

2-PIECE MICRO HIFI SYSTEM

Owner's Manual



Quality Audio Since 1948

Thank you for purchasing this
Nakamichi product.
Please take the time to register
your product at:

www.nakamichi.com.au/register

Thank you for purchasing this Nakamichi product.

This unit has been designed and manufactured to meet international standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Please take the time to read the operating instructions for this unit.

Safety Information

CAUTION RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

There is a high voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product enclosure.



ATTENTION

The owner manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN, LIQUID OR MOISTURE.

WARNING: Do not install this equipment in confined spaces such as a bookcase or similar unit.

CAUTION: Please do not block any of the ventilation openings. Install this unit in accordance with the manufacturer's instructions. Slots and openings in the cabinet are there to provide ventilation and to ensure reliable operation of the unit and to protect it from overheating. The openings should never be blocked by placing this product on a bed, sofa, rug or similar surfaces. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

Safe way to remove the battery from the equipment: To remove the old batteries, follow the steps on page 10 in reverse order to the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery should be put in the appropriate container at designated collection points. Do not dispose of batteries with other waste. The battery should not be exposed to excessive heat such as sunshine, fire or the like.

Correct handling of batteries: Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property. Use only the type of batteries which are indicated in this manual. Small batteries such as the ones used in the remote control are easily swallowed by young children and this can be dangerous. Keep loose batteries away from young children and make sure the battery holder tray is secure in the remote control. Seek medical advice if you believe a battery has been swallowed.

CAUTION: This unit is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the unit. If the unit is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

**CLASS 1
LASER PRODUCT**

Caution:

This product is equipped with low power laser equipment inside, for your safety, don't open the laser radiation protective equipment. Don't look at the laser radiation district when the equipment is operating.

CAUTION: This product employs low power Laser equipment. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should this unit require maintenance, please contact an authorized service centre.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit.

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your unit, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the unit, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door or walked upon. Pay particular attention to plugs, wall outlets and the point where the cord exits the unit. To disconnect power from the mains, pull out the mains cord plug. When installing the unit ensure that the plug is easily accessible.

Placement of the device

Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. You should also avoid locations that are subject to vibration, excessive heat, cold or moisture.

As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.

Do not place the unit on an amplifier, a receiver or any other device that generates heat.

When the unit is turned on, if a TV is on nearby, lines may appear on the TV screen depending on the frequency of the broadcast. This is not a malfunction of the unit or TV. If you see such lines, move the unit and the TV further apart.

Maintenance

If the surface of the unit gets dirty, wipe with a soft cloth.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

WARNING To protect your hearing.



At full power, prolonged listening to the player can damage the ears of the user.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

For safety, disconnect the AC power plug from the outlet before cleaning.


Never spray liquid directly on this unit. Do not use thinner and alcohol as they could damage the surface of the unit.

Battery Safety Guidelines




Used correctly, domestic batteries are safe and dependable source of portable power. Problems can occur if they are misused or abused - resulting in leakage or, in extreme cases, fire or explosion.


Here are some simple guidelines to safe battery use designed to eliminate any such problems.

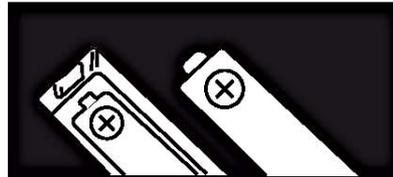


Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.

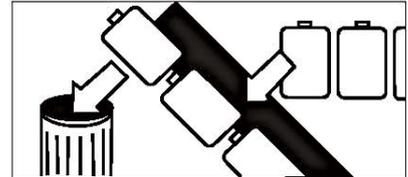


Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.

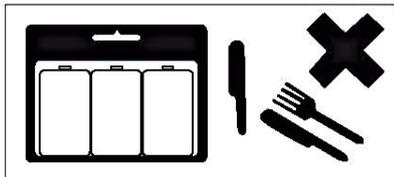


Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage, or in extreme cases, fire or even an explosion.

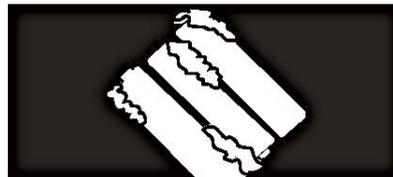

Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.

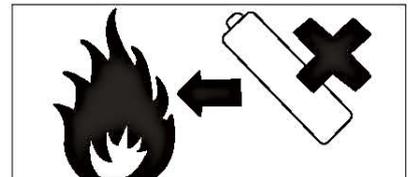


Never dispose of batteries in fire as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.

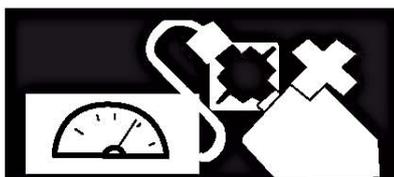


Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.



Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.

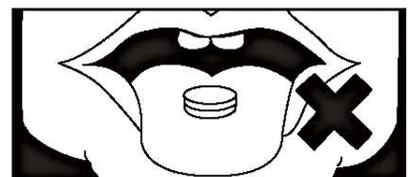


Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

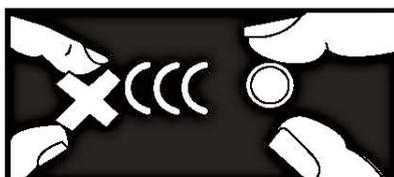

Keep loose button cells away from young children.



Make sure battery compartments are secure.

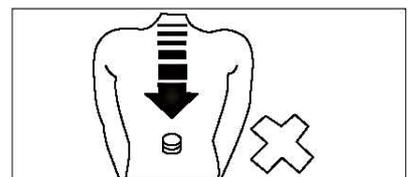

Seek medical advice if you believe a cell has been swallowed.

Table of Contents

Safety Information	1-3
Battery Safety Guidelines	4
Pack Contents	7
Product Overview	8
The CD Player	8
The Amplifier Player	8
Remote Control Overview	9
Remote Control Operation	9
Installation of Batteries	10
Connections	11
Connecting the Antenna	11
Connecting the Speakers	11
Connecting Auxiliary Equipment	12
Connecting Control Cable	13
Connecting the Headphone	13
Connecting the AC Power Cable	14
ECO-Power/Standby Features	15
Powering ON/OFF	15
Setting the Clock	15
Setting the Clock Manually	15
Setting the Clock Automatically	15
Sound Setting	16
Adjusting the Volume	16
Adjusting the Bass	16
Adjusting the Treble	16
Preset Equalizer	16
Adjusting the brightness LCD	16
FM Radio	16
Tuning a station	16
Preset Tuning	17
Presetting Stations	17
To change the FM Reception Mode	17
FM Display Modes	17
CD Operation	18
To play a CD	18
To Skip Search and Play	18
To Search	18
Text Display During Playback	18
Programme Play	18
Playing Repeatedly (CD)	18
MP3/WMA Disc Playing	19
Playing Repeatedly (MP3 disc)	19


Table of Contents

Use the USB _____	20
For devices with USB Cables	20
For memory cards	20
USB Storage Device Data Protection	20
Play from Bluetooth device _____	21
Pairing Bluetooth-enabled devices	21
Listen to music from Bluetooth device	21
Playing NFC (Near Field Communication) enabled devices _____	22
Playing an external device on Auxiliary Connection _____	22
Set the alarm timer _____	23
Activate / deactivate alarm timer	23
Set sleep timer	23
Disc handling _____	24
Troubleshooting _____	25
Specifications _____	26
Nakamichi Service Contact Details _____	27


What's Included

Make sure all of the following contents are included:


The Unit

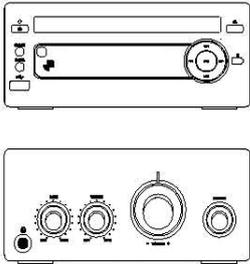


Speakers x 2

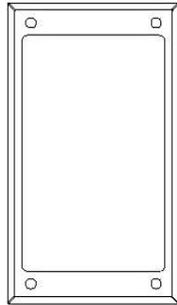


Remote Control

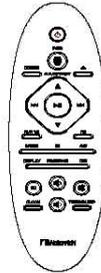


FM Antenna

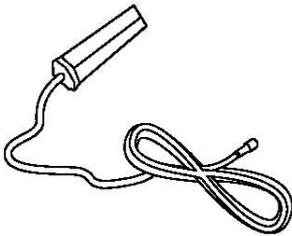


Control Cable

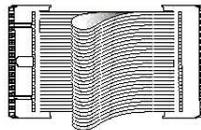

Owner's Manual

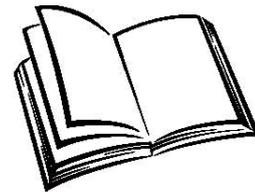


Audio L/R Cable x 1

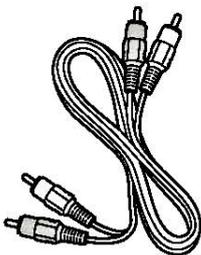

Product Overview


The CD Player

Front

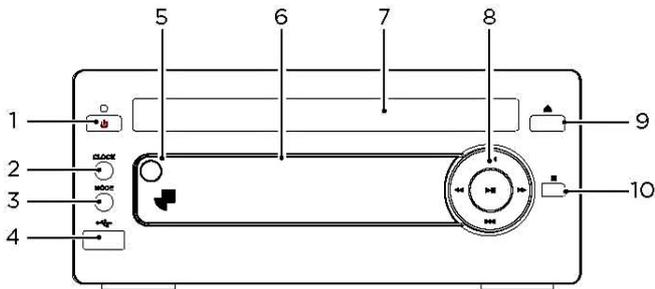

1. Standby Button
2. Clock Button
3. Mode Button
4. USB Jack
5. Remote Sensor
6. LCD Display
7. Disc Tray
8. Fast Forward Button (▶▶)
9. Tuning Forward Button (▶)
10. Reverse Button (◀◀)
11. Tuning Backward Button (◀)
12. Next Button (▶▶)


Rear

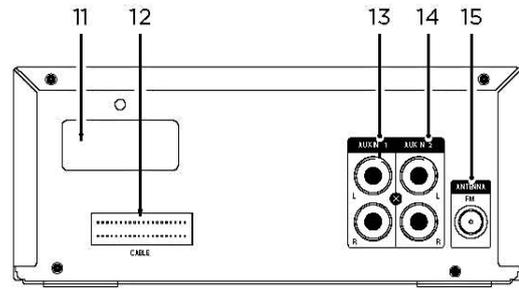

11. Preset Up Switch (▲)
12. Previous Button (◀◀)
13. Preset Down Switch (▼)
14. Play/Pause Button (BF)
15. Open/Close Button (▲)
16. Stop Button (■)
17. Built-in Bluetooth Antenna
18. Power Control Cable Socket
19. AUX 1 Input Terminals (L&R) (AUX IN 1)
20. AUX 2 Input Terminals (L&R) (AUX IN 2)
21. FM Antenna


Amplifier

Front

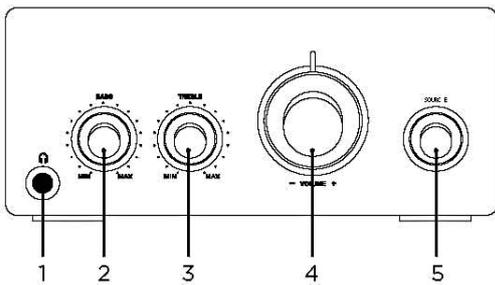


1. Headphone Terminal
2. Bass Control Knob
3. Treble Control Knob
4. Volume Control Knob
5. Source Select Knob

Rear

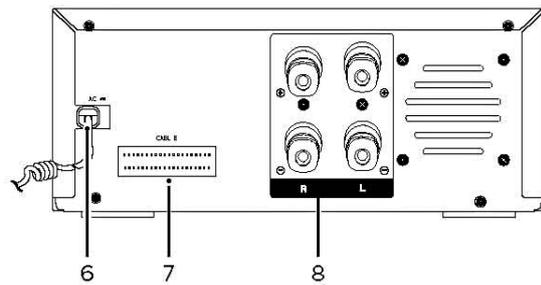

6. AC Power Cable
7. Power Control Cable Socket
8. Speaker Output Terminals (L&R)


Remote Control Overview

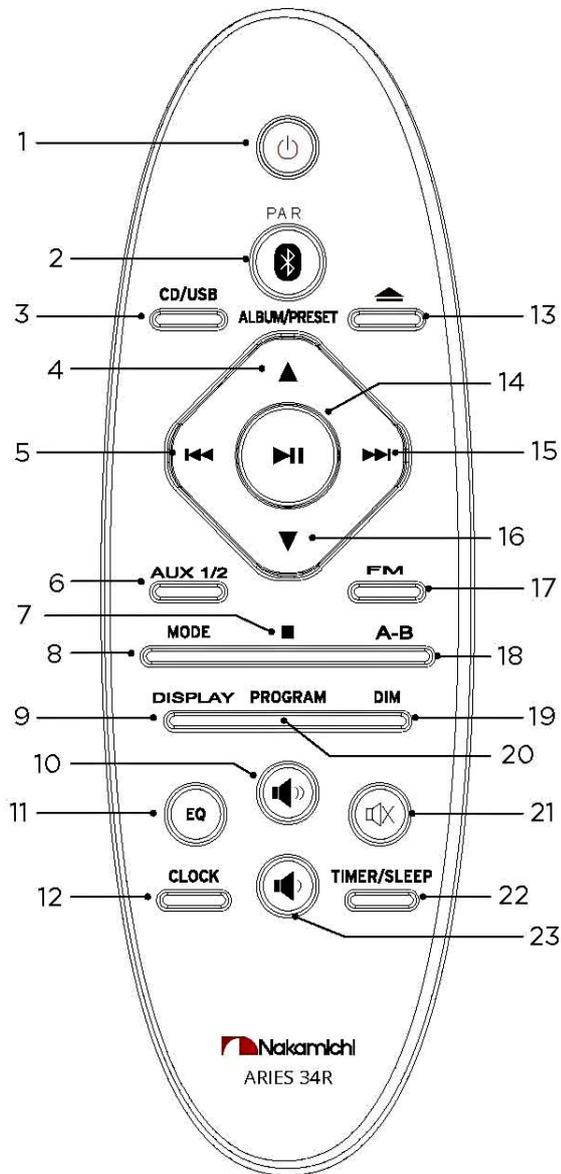


1. Standby Button
2. Bluetooth Function Button
(Press & hold to clear the pairing information)
3. CD /USB Button
4. Album Up Button
Preset Up button
5. Previous Button / Fast Backward Button
6. AUX 1/2 Function Button
7. Stop Button
8. Mode Button
9. Display Button
10. Volume Up Button
11. Preset Equalizer Button
12. Clock Button
13. OPEN / CLOSE Button
(CD open tray button)
14. Play/Pause Button
15. Next Button / Fast Forward Button
16. Album Down Button
Preset Down Button
17. FM Function Button
18. A-B Button
19. Dim Button (For LCD display)
20. Program Button
21. Mute Button
22. Timer Button
Sleep button
23. Volume Down Button

Installation of Batteries


1. Open the battery compartment.

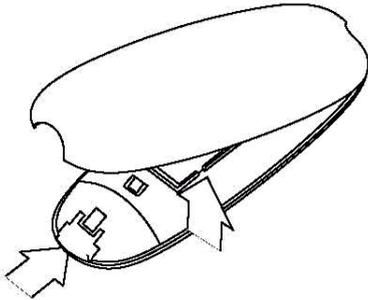

2. Insert 2 AAA batteries with correct polarity (+/-) as indicated in compartment.

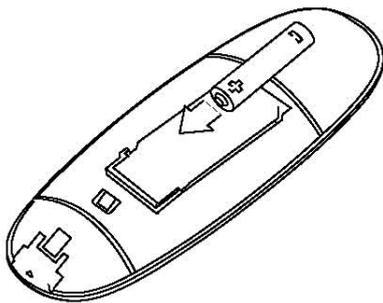

3. Close the battery compartment.

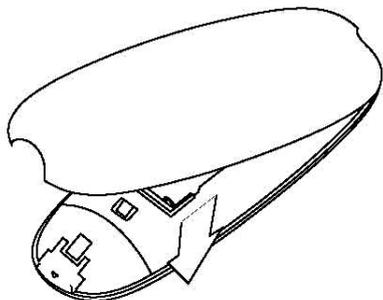

Please Note!


If you will not be using the remote for an extended period of time it is advised that you remove the batteries.

Please avoid the following which may cause your remote to fail:

- Dropping or impacting your remote.
- Spilling water or any liquid on your remote.
- Placing your remote on wet objects or surfaces.
- Leaving your remote in direct sunlight or near sources of excessive heat.
- Please don't use caustic cleaners (e.g. porcelain, stainless steel, toilet or even cleaner etc) on your remote as it may cause damage to your remote.

Remote Control Operation Range


1. Point the remote control towards the remote sensor IR of the front of the unit.
2. Make sure that there is no obstacle between the infrared remote sensor of the unit and remote control.

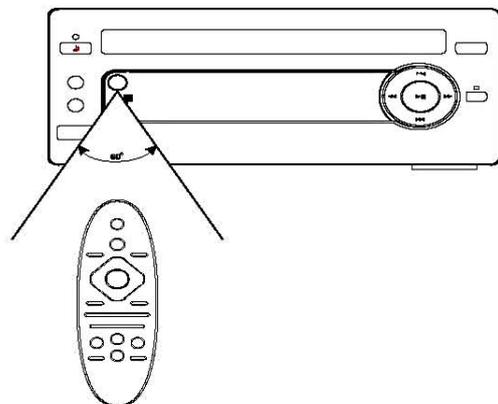

Connections

Caution: Make all connections before plugging the system into an AC power outlet

Connecting the Antenna

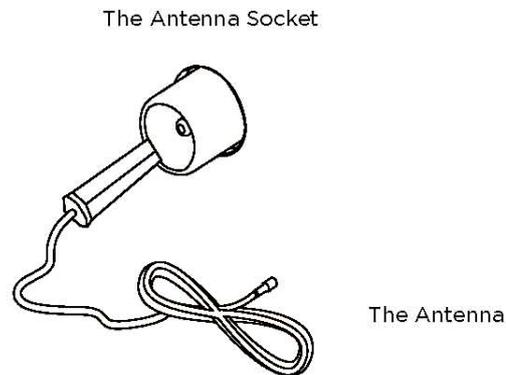


Connect the supplied FM antenna to the FM antenna socket on the rear of the CD player by turning the antenna's screw cap clockwise.

Please Note: Do not overtighten, this could damage the antenna.

Caution: To avoid interference, keep the antenna away from the system, the connecting cord and the AC cord.

Connecting the Speakers

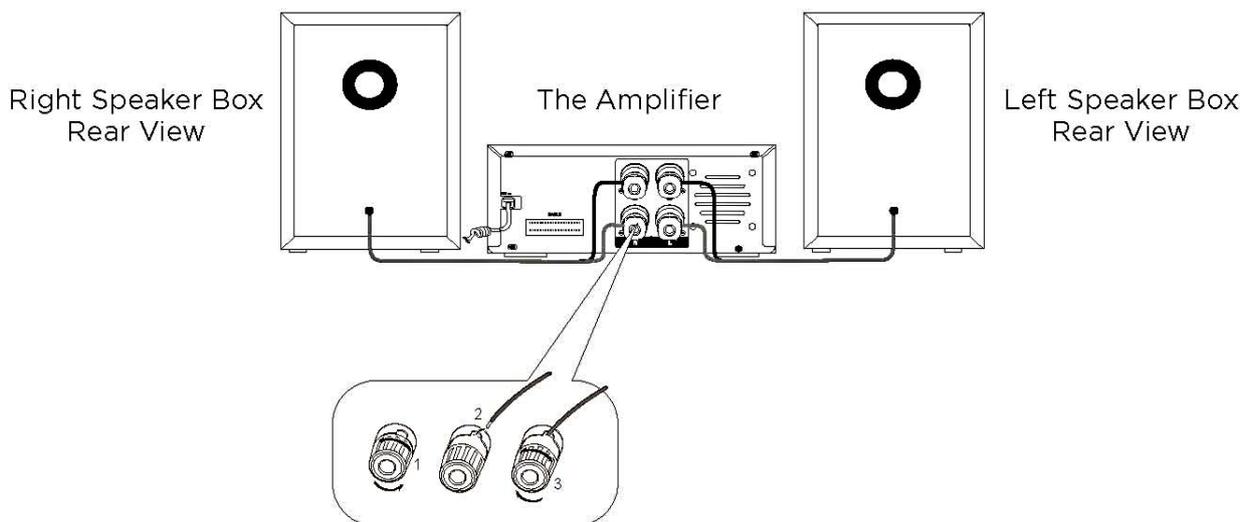

Connect the speaker cords between the terminals as shown below. Connect the speaker cable with the white line to the (-) terminals and speaker cable with the red line to the (+) terminals.


Connections

Connecting Auxiliary Equipment


Connect the AUX IN 1 terminals on the rear of the unit to the line output terminals on the auxiliary equipment with an audio cable illustrated below (1x audio cable supplied).

Connecting a device via AUX 1

The CD Player

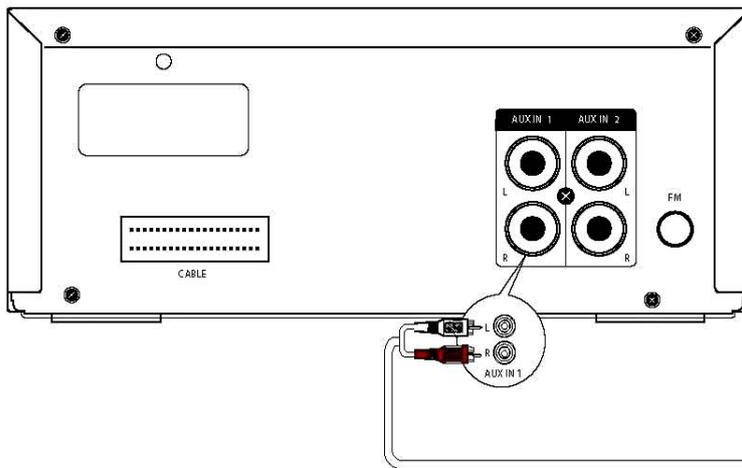


Auxiliary equipment

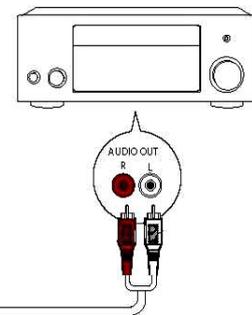


Connect the AUX IN 2 terminals on the rear of the unit to the line output terminals on the auxiliary equipment with an audio cable illustrated below (1x audio cable supplied).

Connecting a device via AUX 2

The CD Player

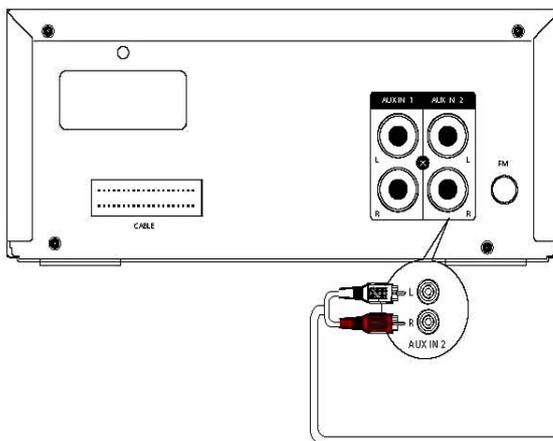


Auxiliary equipment

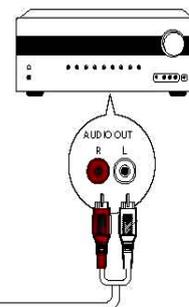

Connections

Connecting Control Cable


Connect the control cable between the CD player and the amplifier.

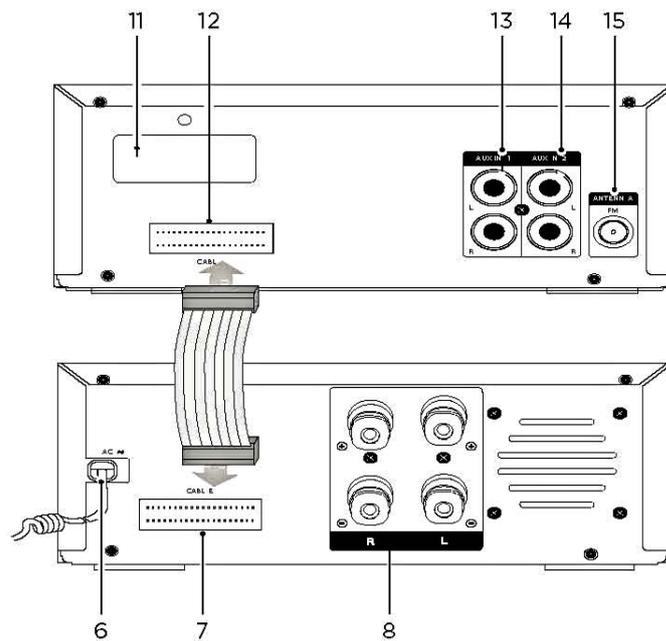

Connecting Headphones to the system

Connect a pair of headphones to the phone jack.

Please Note: No sound will come out of the speakers. Be sure to turn down the volume before connecting or putting on headphones. Excessive sound pressure from earphones and headphones can cause hearing loss.

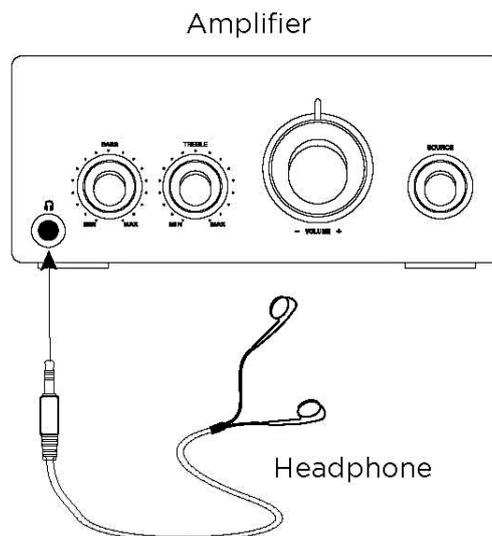


Connections

Connecting the AC Power Cable

Insert the AC Power cable into a wall outlet, then your unit is ready to use.

Caution: • Be sure to unplug the power plug from the outlet when going out or when the unit is not in use for an extended period of time.

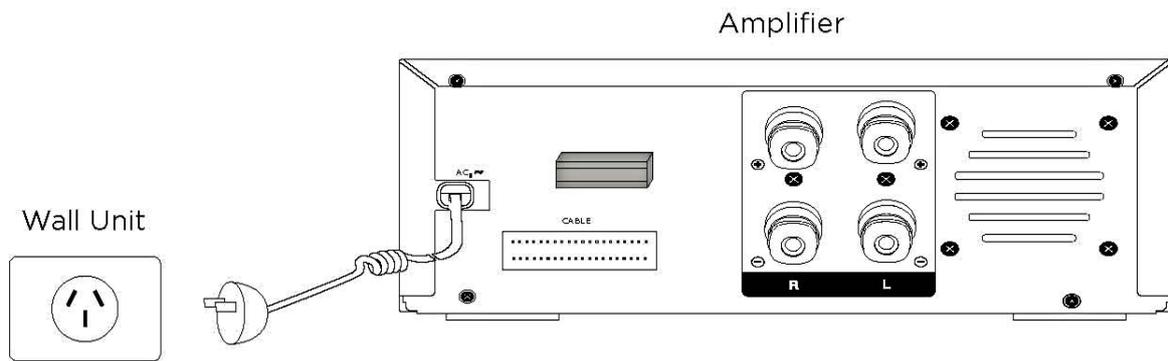

ECO-Power / Standby Features

Powering ON/OFF

When you insert the AC Power Cable into a wall outlet, the unit will be in Power mode.

Press the Standby  button to switch the unit on. The word “HELLO” will show in the display.

Press the Standby  button to switch the unit back to ECO POWER mode. The words “ECO POWER” will scroll across the display.

ECO Power	Note
The clock will not be displayed. Press the CLOCK button to display the clock on the LCD.	If the unit is idle for more than 15 minutes in normal mode, it will automatically switch to ECO POWER mode.

Setting the Clock

Setting the Clock Manually

1. In Standby mode, press and hold **CLOCK** button for 2 seconds to activate the clock setting mode. [CLOCK SET] scrolls on the display, and the [24] (24-hours time format) appears.
2. Press **▶▶/◀◀** button on the remote control to select 12/24 mode (time format), and then press **CLOCK** button to confirm. The hour digits begin to blink.
3. Press **▶▶/◀◀** button on the remote control to set the hour.
4. Press **CLOCK** button to confirm. The minute digits begin to blink.
5. Press **▶▶/◀◀** button on the remote control to set the minutes.
6. Press **CLOCK** button to confirm.

Please Note:

- The clock must be set in Standby mode and if the set-up time for each step is longer than 90 seconds, set-up will be cancelled.
- If a power failure occurs or the unit is disconnected from the mains, the clock setting will be lost.

Setting the Clock Automatically

When the RDS station display the time, press and hold the **DISPLAY** button on the remote control, the clock will automatically sync time of RDS.

This receiver allows you to use Radio Data System (RDS), which enables FM radio stations to send additional information (e.g. time) along with the regular programming signal.

Not all FM stations provide RDS service, nor do they provide the same type of services. If you are not familiar RDS services in your area, check with your local radio stations for details.

Sound Setting

Adjusting the Volume

To increase or decrease the volume, rotate the Volume Control knob (- **VOLUME** +) on the unit or press the Volume Up/Down buttons  on the remote control.

Adjusting the Bass

Rotate the **BASS** knob clockwise or counter clockwise on the Amplifier to adjust the intensity of the bass output sound.

Adjusting the Treble

Rotate the **TREBLE** knob clockwise or counter clockwise on the Amplifier to adjust the intensity of the treble output sound.

Preset Equalizer

You can adjust the sound reproduced simply by choosing from 5 preset equalizers. Press the EQ button on the remote control repeatedly to scroll through the following options:



Adjusting the Brightness LCD

This unit has three brightness levels for you to adjust the clock display. Press the DIM button on the remote control repeatedly to choose the desired brightness.

FM Radio

FM stations can be tuned in manually or automatically.

Caution: Before listening to the radio, please check that the FM antenna is correctly connected and adjusted for length and direction.

Tuning in a Station

1. Rotate the SOURCE button on the front of the amplifier until TUNER is displayed on the display screen, or press the FM button on the remote control.
2. Tune in a station using one of the following methods.
 - **Auto Tuning**
If you press and hold PROGRAM button on the remote control, display will show "AUTO" and the auto tuning will start. It will stop auto tuning when new radio station is received.
 - **Manual Tuning**
Repeatedly press the  buttons on the remote control or the  buttons on the front panel to change the frequency until you find the station you want. Press  buttons on the front panel to make minor modulation changes for the station you find.

FM Radio

Preset Tuning (Available only after the stations are preset)

Repeatedly press the **PRESET ▲/▼** buttons on the remote control or press the **▶▶/◀◀** buttons on the front panel to select the desired preset number. Its band and frequency are displayed on the Display panel.

Presetting Stations

You can manually preset up to 20 FM stations.
Tune in the desired station:

1. Press the **PROGRAM** button on the remote control, the preset number will be displayed.
2. Press the **PRESET ▲/▼** buttons on the remote control or press the **▶▶/◀◀** buttons on unit panel to select the preset number.

PRESET ▲ Increase the preset number by 1
PRESET ▼ Decrease the preset number by 1

3. Press the **PROGRAM** button again to store the station. The display will return to the broadcast frequency display.
4. Repeat above steps 1 to 3 for each station you want to store in memory with a preset number.

Please Note: If the system is unplugged or if a power failure occurs, the preset stations will not be erased after stored.

To change the FM Reception Mode

Press the **MODE** button to select the Stereo or Mono channel to receive the best FM reception mode.

FM Display Modes

Every time you press the **DISPLAY** button, the display will cycle through the following display modes: **Station Name, Programme Type, Clock, Radio Text, Frequency**
The information is displayed on the lower segment of the display.

Station Name

When an RDS station is received, the name of that station

Programme Type

Programme type identification signal. (E.g. News, Rock, Classical music)

Clock


The RDS CLOCK system may not properly operate in areas where RDS CLOCK service is not available. Once RDS CLOCK service is available, the RDS CLOCK system will commence operation.

Radio Text

This displays a station description.

Frequency

This shows the frequency of the current station, e.g. 89.80 MHz.

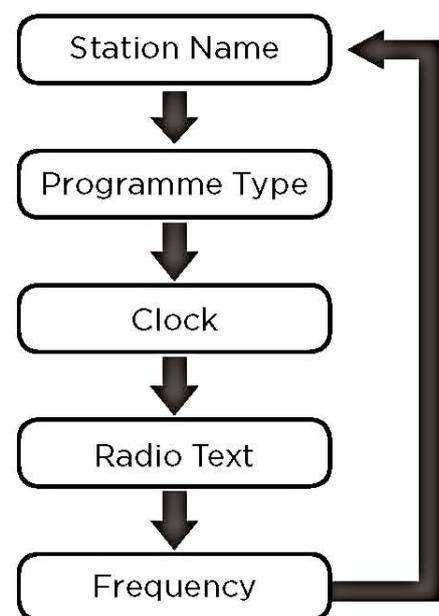

CD Operation

To play a CD

1. Rotate the SOURCE button on the front of the amplifier or press the CD/USB button on the remote control. The word "DISC" will be displayed on the front panel.
2. Press the  button on the front panel to open the disc door and place the disc on the disc tray (with the printed side up).
3. Press the  button to close the disc door, the unit will read the disc and play it automatically.
4. Press the  button to pause the playing, press the button again to continue play.
5. Press the  button to stop the disc playing.

To Skip Search and Play

- Press the  button once or more to skip backwards to previous track or more tracks on the disc.
- Press the  button once or more to skip forward to next track or more tracks on the disc.

To Search

Press and hold the  or  button or press / button for a few seconds on the remote control to search for the position that you intend to start playing.

Text Display During Playback

Press the **DISPLAY** button to select display information during play.

Programme Play

You can programme up to 20 tracks to play in any desired order. The player must be in **STOP** mode only with a CD inserted.

1. Insert a disc and press the  button when it starts playing.
2. Press the **PROGRAM** button, "**01 P--01**" appears.
3. Press the / buttons on the remote control to select the desired track number.
4. Press the **PROGRAM** button to confirm the track number to be stored.
5. Repeat steps 3-4 to select and store all desired tracks.
6. Press the  button to start programme play.
7. Press the  button twice to clear programme.

Please Note: Random play will not shuffle the programmed music list.

Playing Repeatedly (CD)

ONE and ALL Repeat Play can be set by pressing the **MODE** button. Press the MODE button until the desired below functions appear on the LCD display.

- To repeat the same track, the words "**TRK**" and "**REP**" will blink.
- To repeat playing all tracks on a disc, the words "**TRK**" will stay lit and "**REP ALL**" will blink.
- To play tracks randomly, the word "**TRK**" will stay lit and, **SHUF** will blink.

MP3 / WMA Disc Playing

Please Note: MP3/WMA music playback from CD maybe affected due to the type and format of disc or condition of the recording. If you are having trouble playing a certain disc, it is recommended to use USB input instead for best MP3/WMA playback.

1. Rotate the **SOURCE** button on the unit or press the **CD/USB** button on the remote control. The word "**DISC**" will be displayed on the front panel.
2. Press the **▲** button to open the disc door and place the MP3/WMA disc on the disc tray.
3. Press the **DISPLAY** button on the remote control, ID3 information (song, title and artist) will be displayed. Press this button again, the title, artist or album will be displayed if available.
4. When playing MP3/WMA discs, the current album and track will be displayed if available.
5. Press the **▶▶/◀◀** buttons to select the previous/next track. When pressing the **▶▶ / ◀◀** buttons for a few seconds, it will search backward or search forward.
6. Press the **ALBUM ▲** button or **ALBUM ▼** button on the remote control to select the next/previous album, and play the first track of this album.
If the playing has ended, press the **ALBUM ▲** button or **ALBUM ▼** button on the remote control to select the next/previous album.
7. Press the **▶||** button to start playing the disc.
8. Press the **■** button to stop playback.

Please Note: Play will continue to the final track when the selected tracks have been played. The first 2 digits of the display is the album number, the next 3 digits is the track number and the remaining digits display the minutes and seconds if available.

Playing Repeatedly (MP3 disc)

ONE, ALB and ALL repeat play can be set by pressing the **MODE** button.

- | | |
|---------------|---|
| One press | To repeat the same track, the words " TRK " and " REP " will blink. |
| Two presses | To repeat playing album, the words " TRK " will stay lit, " REP " and " ALB " will blink. |
| Three presses | To repeat playing all tracks on a disc, the words " TRK " will stay lit and " REP ALL " will blink. |
| Four presses | To play tracks randomly, the words " TRK " will stay lit and " SHUF " will blink. |
| Five presses | To cancel the repeat playing, the word " SHUF " will disappear. |

Use the USB

By connecting an USB mass storage device (including USB flash memory, USB flash players or memory cards) to this unit, you can enjoy the device's stored music through the unit.

1. Insert the USB device's USB plug into the  socket on the front of the unit.
2. Press the **CD/USB** button on the remote control or rotate the **SOURCE** select button on the Amplifier to select the USB function. The word "**USB**" will be displayed on the front panel.
3. The device's stored music will be played automatically.
4. When you store more than one folder in the USB flash, use the ALBUM  button or ALBUM  button on the remote control to select the next/previous folder. Then choose the track with the  or  button to play the folder.
5. The unit supports USB music file formats MP3, WMA only.

For devices with USB cables

1. Insert one plug of the USB cable (not supplied) to the  socket on the unit.
2. Insert the other plug of the USB cable to the USB output terminal of the USB device.

For memory cards

1. Insert the memory card into a card reader (not supplied).
2. Use a USB cable (not supplied) to connect the card reader into the  socket on the unit.

USB Storage Device Data Protection

- Always insert the USB device in the correct direction. Failure to do so may result in damage to the USB device and this unit.
- Do not remove the USB device while it is being accessed.
- Electrical interference and electrostatic discharges may cause the USB device to malfunction and suffer damage, resulting in data loss.

It is strongly recommended that any important data is backed up on a PC to protect against corruption, data loss or device malfunction. Please note that our company shall not accept any liability for damage or loss of stored data.

Please Note: USB connection is not compatible with all hard drive models.

Play from Bluetooth device

With this unit, you can listen to audio files from your portable devices (e.g. Smartphones, Tablets) if Bluetooth connection is available.

Pairing Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once.

1. Press the **BLUETOOTH** button  on the remote control or rotate the **SOURCE** select knob on the front panel until Bluetooth (BT) shows on display.
2. Turn on the Bluetooth function on your device (e.g. Smartphone).
3. Search/scan for other Bluetooth device with your device (e.g. Smartphone).
4. Select **ARIES 34** in the pairing list on your device (e.g. Smartphone).
5. Your device may request you to enter a passcode during pairing, press "0000" on your device (e.g. Smartphone).
6. You can now play music from your device (e.g. Smartphone) on your unit.
7. If you want to connect another Bluetooth device, please press Bluetooth button  for several seconds on your remote control to disconnect the previously paired device. Or you can turn off the Bluetooth connection on your portable device (e.g. Smartphone).

Please Note!

- The operational range between this unit and a Bluetooth device is approximately 10 metres.
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.
- The device will also be disconnected when the device is moved beyond the operation range.
- If you want to reconnect the device to the unit, place it within the operational range.

Listen to music from Bluetooth device

If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the unit.

1. Pair the device with the unit.
2. Start playing music via device.

Playing NFC (Near Field Communication) enabled devices (e.g. Smartphone)

Near Field Communication (NFC) makes connecting and sharing easy and fun. Devices and accessories that support NFC are connected wirelessly when you touch them together.

1. Turn on the NFC function on your device (e.g. Smartphone).
2. Place your device next to the NFC sensor on your unit (front of unit).
3. Some devices may have a pop up screen to confirm the connection to the Aries 34, select YES to accept.
4. You can start playing your music from your device via the Aries 34.
5. To disable the connection, just place your device (e.g. Smartphone) surface near the NFC sensor area (front of unit) again or turn off the NFC function on your device.


Please Note: The operational range between this unit and a Bluetooth device (e.g. Smartphone) is approximately 10 metres, any obstacles between this unit and a Bluetooth device can reduce the operational range.

Playing an external device on Auxiliary Connections


You can listen to an audio device via this unit, make sure that your device is connected to this unit (refer to page 12 for connection details).

1. Press AUX 1/AUX 2 button on your remote control to select the audio input your device has been connected to.
2. You can now start to play from your device (please refer to device manual for playing instructions).

(e.g. External CD Player)

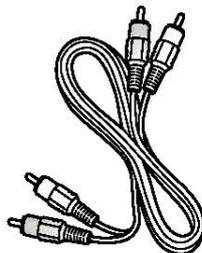

(e.g. Smartphone, Tablet or MP3 player)

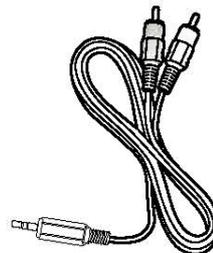

Set the alarm timer

This unit can be used as an alarm clock. You can select DISC, USB, TUNER as alarm source.

Note:

- In standby mode, press clock button, then the clock will be shown on the display if you set the clock correctly. If not, please refer to clock setting on page 15 to make sure the clock can appear on the display.
1. Once this has been done, press and hold the **TIMER/SLEEP** button until [TIMER SET] (set timer) scrolls on the display.
 2. Press **▶▶/◀◀** button on the remote control to select source.
 3. Press **TIMER/SLEEP** button to confirm. The hour digits are displayed and begin to blink.
 4. Press **▶▶/◀◀** button on the remote control to set hour, and then press **TIMER/SLEEP** button again. The minute digits are displayed and begin to blink.
 5. Press **▶▶/◀◀** button on the remote control to set minute, and then press **TIMER/SLEEP** button to confirm.
 6. Press **▶▶/◀◀** to adjust volume, and then press **TIMER/SLEEP** button to confirm. A clock icon appears on the display.

Activate / deactivate alarm timer

1. In the standby mode, press **TIMER/SLEEP** button repeatedly.
 - If timer is activated, the  icon is displayed.
 - If timer is deactivated, the  icon disappears on the display.


Note:

- The alarm timer is not available when the source is set as "AUX".
- If the USB/DISC source is selected but no device connected, the unit switches to TUNER automatically.

Set sleep timer

This unit can switch to standby mode automatically after a set period.

1. When the unit is turned on, press **SLEEP** button repeatedly to select a preset period (in minutes).

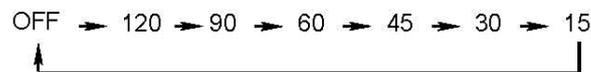


When the sleep timer is activated, SLEEP icon “” displayed.

Please Note: To deactivate the sleep timer, press **SLEEP** button repeatedly until [off] (sleep off) appears.

Disc Handling

- To keep the disc clean, please don't touch the disc's surface when you are holding it. You should hold the edges.
- If the disc is dirty, it will affect the sound quality. Please use a clean and soft cloth to wipe the disc from inside to outside. Don't wipe the disc in a circular motion.

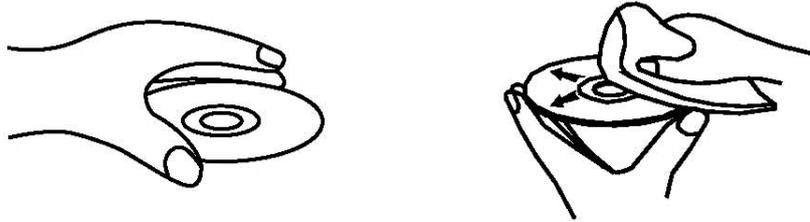

- Don't stick paper on the disc.
- After you have finished with the disc, please place it back in its original case. To avoid warping or damage, do not stack discs.
- Don't play any discs which has scratches or deformation, it may damage the unit.
- Clean your discs using only a soft dry cloth. Do not use any chemicals such as benzine, thinner, antistatic or record sprays as these can damage the disc surface.

Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight.
- Humid or dusty areas.
- Areas directly exposed to a heat outlet or heating appliance.

Troubleshooting

If you are having a problem with your unit, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the unit has been physically damaged, please contact Nakamichi. Service contact details on page 27.

Symptom	Possible Cause	Action
No sound is heard	Connections are incorrect, or loose	Check all connections and make corrections
Poor radio reception	The Antenna is disconnected	Reconnect the Antenna securely
	The Antenna is not properly extended and positioned	Extend Antenna to the best reception position
The disc skips	The disc is dirty or scratched	Clean or replace the disc
The disc does not play	The disc is upside down	Put the disc in with the label side up
	The disc is dirty	Remove disc from player, wipe with a clean cloth and re-insert
Unable to operate the remote control	The path between the remote control and the sensor on the player is blocked	Remove the obstruction
	The batteries have lost their charge	Replace the batteries
Operations are disabled	The built-in microprocessor has malfunctioned due to external electrical interference	Unplug the unit then plug it back in
The Bluetooth device cannot play	The audio quality is poor after connection	Move the device closer to the system
	The Bluetooth reception is poor	or remove any obstacle between the device and the system
The Bluetooth cannot connect with the system	The device does not support the profiles required for the system	Refer to the user manual of the device for how to enable the function
	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the function
	The system is not in the pairing mode	Disconnect that device or all other, then connect devices and try again
	The system is already connected with another Bluetooth-enabled device	

Specifications

Unit Specifications

Power Requirements	:	220-240V ~ 50/60Hz
FM Tuning Range	:	87.5-108 MHz
Power Consumption	:	28W (ECO Standby ≤ 0.5W)
USB port	:	5V = 500mA
Output Power @ 10% THD	:	45W x 2
THD	:	< 1% (1KHZ/1W)
Dimensions	:	(CD) 160(W) x 78(H) x 260(D) mm (Amplifier) 160(W) x 78(H) x 295(D) mm

Speaker Specification

Impedance	:	6 Ω
Input Power	:	45W
Dimensions	:	130(W) x 205(H) x 176(D) mm

Bluetooth Specification

Communication system	:	Bluetooth Standard version 4.0 and EDR specification
Output	:	Bluetooth Standard Power Class 2
Maximum communication Range	:	approx.10m
Frequency band	:	2.4 GHz Band (2.400GHz - 2.4835 GHz)
Compatible Bluetooth Profiles	:	Advanced Audio Distribution Profile (A2DP)
Supported Multi devices pairing	:	up to 8 devices
Supported codecs (Receive)	:	SBC(Sub Band Codec)
(Transmit)	:	SBC(Sub Band Codec)

Remote Control

Distance	:	6m
Angle	:	±30°

Note: Product information is subject to change without prior notice.

Nakamichi Service Contact Details

Australia

Telephone: 1300 565 197

Fax: 03 9548 7174

Email: warranty@nakamichi.com.au

Website: www.nakamichi.com.au

Address: 178 Boundary Road, Braeside Victoria 3195
Australia

Hours of Operation

Monday - Friday

9am to 5:30pm AEST excluding Public Holidays

New Zealand

Telephone: 0800 462 526

Fax: 09 266 7105

Email: warranty@nakamichi-ap.co.nz

Website: www.nakamichi.com.au

Address: 84 Kerrs Road, Manukau Auckland 2104
New Zealand

Hours of Operation

Monday - Friday

9am to 5:00pm excluding Public Holidays

Or visit the Nakamichi website anytime 24/7 and use the e-warranty service to make a claim.

 Nakamichi®