



Service Manual

CONTENTS

Block Diagram

Circuit diagram - □power part
□ CD part
□ LCD part
□ tuner part

tape part

PCB Layout diagram - □power board
□ cd board
□ LCD board
□ tuner board

Service parts list:

9940 000 00161 VDE POWER CORD SET

9940 000 01095□ BATTERY DOOR 9940 000 01094□ ROD ANTENNA

9940 000 00147□ CD MECHANISM DA1B3N 9940 000 01476□ TAPE DECK CS-21V-230 9940 000 01453□ TRANSFORMER 120/230V





[©] Copyright 2005 Philips Consumer Electronics B.V. Eindhoven, The Netherlands All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by YM 0511 Service Audio Printed in The Netherlands Subject to modification

CLASS 1 LASER PRODUCT



3141 785 30280































