

Service  
Service  
**Service**



# Service Manual



For repair information, we refer to manual AZ1008 (3140 785 22520), except the following mechanical parts in different colours :

## TABLE OF DIFFERENT MECHANICAL PARTS

ITEM	ARTICLE DESCRIPTION	AZ1008	AZ1011 (BLUE)	AZ1012 (GREEN)	AZ1013 (BURGUNDY)
3	CASSETTE DOOR	9965 000 07504	9965 000 08419	9965 000 08419	3140 114 39170
4	CASSETTE DOOR LENS	9965 000 07479	9965 000 07479	9965 000 07479	9965 000 07479
21	HANDLE HINGE ADAPTOR (L)	9965 000 07487	9965 000 08409	9965 000 08422	3140 114 41130
26	HANDLE HINGE ADAPTOR (R)	9965 000 07488	9965 000 08410	9965 000 08423	3140 114 41140
27	TUNING KNOB	9965 000 07489	9965 000 08411	9965 000 08411	9965 000 08411
28	VOLUME KNOB	9965 000 07490	9965 000 08412	9965 000 08412	9965 000 08412
29	SELECTOR KNOB	9965 000 07491	9965 000 08413	9965 000 08413	9965 000 08413
30	REPEAT/PROGRAM KEY	9965 000 07492	9965 000 08414	9965 000 08414	9965 000 08414
31	PLAY/STOP/FF/REW KEY	9965 000 07493	9965 000 08415	9965 000 08415	9965 000 08415
32	DBB KNOB	9965 000 07494	9965 000 07494	9965 000 07494	9965 000 07494
41	HANDLE	9965 000 07501	9965 000 08416	9965 000 08424	3140 114 41120
42	BATTERY DOOR	9965 000 07502	9965 000 08417	9965 000 08425	3140 114 41160
48	CD DOOR	9965 000 07503	9965 000 08418	9965 000 08426	3140 114 41180

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

**CLASS 1  
LASER PRODUCT**



**PHILIPS**