

CD Soundmachine

Register your product and get support at
www.philips.com/welcome

User Manual

AZ102C
 AZ102N
 AZ102S



PHILIPS

Meet Philips at the Internet
<http://www.philips.com>





AZ102C
 AZ102N
 AZ102S



Printed in China

PDCC-ZC-0735

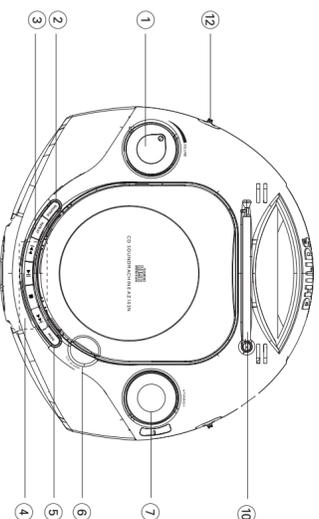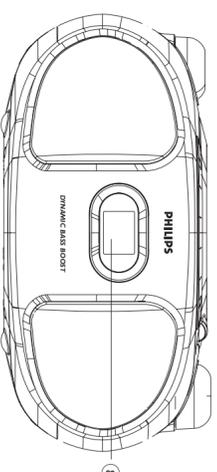

1

Important notes for users in the U.K.
Mains plug
 This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 3 Amp, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 3 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 3 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug


The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug marked E (or e) or coloured green (or green and yellow).


Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

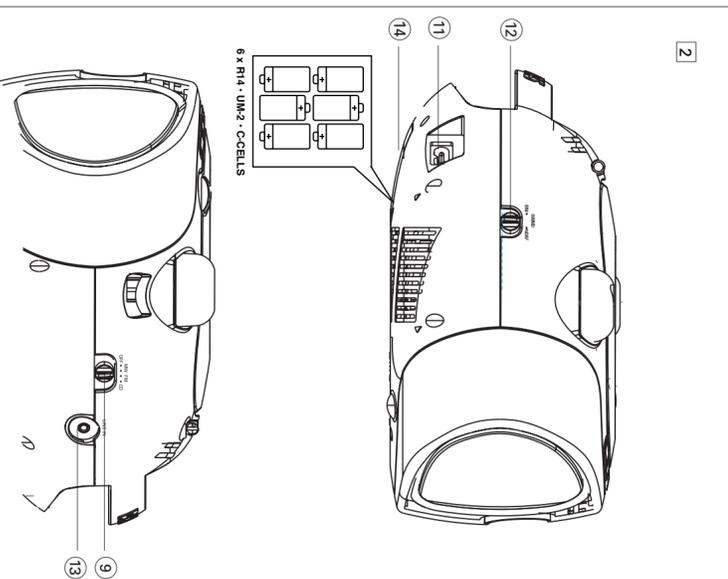

2

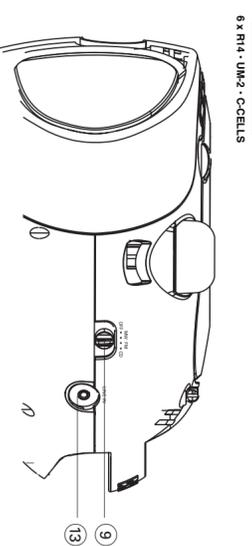

6 x R14 - UM2 - C-CELLS

English

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Supplied Accessories

– AC power cord

Top/front panels (See 1)

- 1 **VOLUME** – adjusts volume level.
- 2 **SHUFFLE** – plays all tracks in random order.
- 3 **REPEAT** – repeats a track/CD programme/entire CD.

- 4 **▶ || ◀** – starts or pause CD playback
 – selects the next/previous track – searches forward/backwards (press and hold the button) within the current track.

- 5 **PROG** – programs tracks and reviews the program

- 6 **LIFT TO OPEN** – opens/closes the CD door.

- 7 **TUNING** – tunes to radio stations

- 8 **Display** – shows the CD functions

Back panel (See 1 and 2)

- 9 **Source selector: CD, FM, MW, OFF**
 – selects CD or radio source of sound
 – power off switch

- 10 **Telescopic antenna** - improves FM reception.

- 11 **AC MAINS** – inlet for power cord.

- 12 **DBB** – turns the bass enhancement on/off.

- 13 **LINE-IN** – inlet for external audio source.

Bottom panel

- Battery door** – Press on the arrow and push to insert 6 x 1.5V R-14 UM-2-C-cells

Controls/Power Supply

CAUTION

- Visible and invisible laser radiation. If the cover is open, do not look at the beam.

- High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.

- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

- Use of controls or adjustments or performance of procedures other than herein may result in unsafe operation.

This set complies with the radio interference requirements of the European Union.

Power Supply

Whenever convenient, use the power supply cord if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

Batteries (not included)

- 1 Open the battery door and insert 6 batteries, type R-14 UM-2 or C-cells (preferably alkaline) with the correct polarity as indicated by the + and - symbols inside the compartment. Batteries are firmly and correctly in place. The set is now ready to operate.

Batteries contain chemical substances, so they should be disposed of properly.

- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Do not mix battery types e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

Power Supply

Using AC power

WARNING: Always check you have completely switched off the set, before you change or disconnect power supply.

- 1 Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local power supply. If it does not, consult your dealer or service center.

- 2 Connect the power cord to the AC MAINS – inlet and the wall socket. The set is now connected and ready for use.

- 3 To switch the set off completely, withdraw the power cord from the wall socket.

- 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.

Disconnect the power cord from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.

The type plate is located on the bottom of the set.

Helpful hints:

To avoid unnecessary energy consumption, always adjust the Source selector to OFF when using the set.

General Operation / Tuner

General operation

Switching on and off and selecting the function

- 1 To select your sound source, adjust the Source selector to: CD, FM or MW.
- 2 To switch off the set, adjust the Source selector to OFF position.

Adjusting volume and sound

Adjust the sound with the VOLUME and DBB controls.

Radio reception

- 1 Adjust the Source selector to FM or MW.
- 2 Turn TUNING to tune to a station.

Helpful hints:

To improve radio reception

- For FM, extend, incline and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.
- For MW, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

