

Register your product and get support at
www.philips.com/welcome

AZ1852



EN

User manual

PHILIPS

Contents

1	Important	4
	Safety	4
	Notice	7
	Trademark notice	9

2	Your CD Soundmachine	9
	Introduction	9
	What's in the box	10
	Overview of the main unit	11
	Overview of the remote control	13

3	Get started	14
	Install batteries	14
	Prepare the remote control	15
	Connect power	16

4	Play	17
	Play CD	17
	Play tape	18
	Play from USB devices	18
	Listen to an external device	18

5	Play options	19
	Adjust volume level	19
	Enhance bass	19
	Select play modes	19
	Program tracks	20
	Record from CD/USB to tape	21
	Record from radio to tape	21
	CD Ripping	21
	Tape/Tuner Ripping	22
	Folder and file name	23
	Delete from USB device	24
6	Listen to the radio	24
	Tune to a radio station	24
7	Product information	24
	Specifications	25
	Supported MP3 disc formats	26
	USB playability information	26
	Maintenance	27
8	Troubleshooting	28

1 Important

Safety

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.

- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
 - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing Safety

Listen at a moderate volume:

Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.

Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

Set your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.

Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

Listen at reasonable volumes for reasonable periods of time.

Be careful not to adjust the volume as your hearing adapts.

Do not turn up the volume so high that you can't hear what's around you.

You should use caution or temporarily discontinue use in potentially hazardous situations.

Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Be responsible
Respect copyrights


The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Trademark notice



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

 This apparatus includes this label:



2 Your CD Soundmachine

Introduction

With this apparatus, you can enjoy music from audio discs, external devices, and listen to radio stations.

The apparatus offers you multiple sound effect settings that enrich sound with Dynamic Bass Boost (DBB).

The apparatus supports the following media formats:





Note


- The type plate is located on the back of the apparatus.



What's in the box



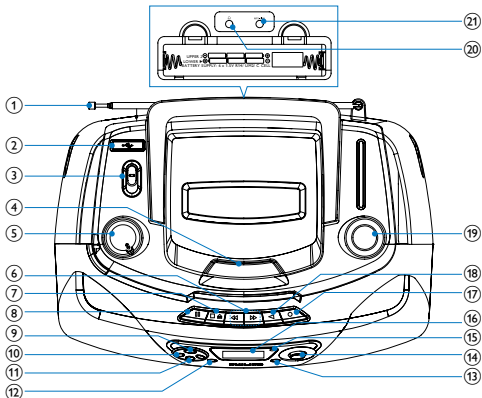

Check and identify the contents of the package:

- Main unit
- AC power cord
- Remote control
- User Manual
- Quick Start Guide

Overview of the main unit




- ① **Antenna**
- ② 
 - USB socket.
- ③ **Source selector: CD, USB, FM, TAPE (OFF).**
 - Select source and turn on/off the unit.
- ④ **LIFT-OPEN**
 - Open/Close the CD compartment
- ⑤ **VOLUME**
 - Adjust volume.
- ⑥ 
 - Fast rewind/wind the tape.

- ⑦ 
 - Stop the tape or open the tape compartment.
- ⑧ 
 - Pause tape Play.
- ⑨ 
 - Start or pause CD play
- ⑩ 
 - Skip to the previous/next track.
 - Search within a track.
- ⑪ 
 - Stop play or erase a program.
- ⑫ **USB REC**
 - Record from a disc to a USB device.
- ⑬ **MODE**
 - Select a play mode: REPEAT or SHUFFLE.
- ⑭ **DBB**
 - Turn on/off dynamic bass boost.
- ⑮ **IR**
 - Remote control sensor.
- ⑯ **Display panel**
 - Display current status.
- ⑰ 
 - Start tape Record.
- ⑱ 
 - Start tape play.
- ⑲ **TUNING**
 - Tune to radio stations
- ⑳ 
 - Headphone socket.

21 MP3 LINK

- Jack for an external audio device.

Overview of the remote control

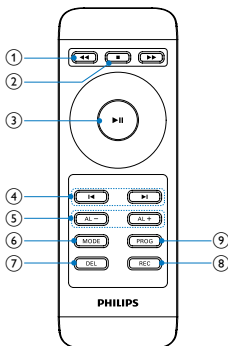

- Search within a track.



- Stop play.
- Erase a program.



- Start or pause play.



- Skip to the previous/next track.



- Skip to the previous/next album.

- ⑥ **MODE**
 - Select a play mode: REPEAT or SHUFFLE
- ⑦ **DEL**
 - Delete audio files stored on a USB device.
- ⑧ **REC**
 - Record from a disc to a USB device.
- ⑨ **PROG**
 - Program tracks.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.
If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No. _____

Serial No. _____


Install batteries



Note

- You can use both batteries and AC power as power supply of this apparatus.
- Batteries are not supplied with the accessories.

- 1 Open the battery compartment.
- 2 Insert 6 batteries (type: R-14, UM-2 or C-cells) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

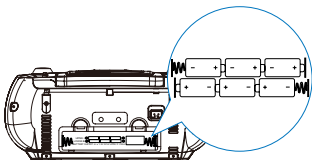

Prepare the remote control



Caution

 
 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.

For first-time use:

- 1 Remove the protective tab to activate the remote control batteries.

To replace the remote control batteries:

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 batterie with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



Connect power



Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the apparatus.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.




Note

- Install the apparatus near the power supply socket and where the power plug can be easily reached.
- 1 Connect the AC power cord to the AC input jack on the apparatus and to the power supply socket.
 - To switch the apparatus off completely, disconnect the AC power cord from the power supply socket.



Note

- To save energy: turn off the apparatus after use.

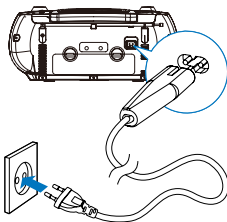










4 Play

Play CD

- 1 Slide the source selector to **CD**.
- 2 Pull **LIFT-OPEN** to open the disc tray.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
 - ↳ Play starts automatically.
 - To pause/resume play, press ►||.
 - To stop play, press ■.
 - Press **AL-/AL+** to select an album.
 - To skip to a track, press |◀▶|.
 - To search within a track, press and hold ◀◀▶▶. Release the button to resume normal play.

Play tape

 








- 1 Slide the source selector to **TAPE**.
- 2 Press   on main unit to open the tape door.
- 3 Load the tape with the open side upward and the full spool to the left.
- 4 Press  on main unit to start play.
 - To pause/resume play, press  on main unit .
 - To rewind or fast-forward, press    on main unit .
 - To stop play, press  .

Play from USB devices



Note

- Ensure that the USB device contains playable audio contents.

- 1 Connect the USB device to the  socket.
- 2 Slide the source selector to **USB**.
- 3 Press **AL-/AL+** to select a folder.
- 4 Press    to select a file.
- 5 Press   to start play.
 - To stop play, press .
 - To pause or resume play, press  .

Listen to an external device

You can listen to an MP3 player through this apparatus.

- 1 Use a cable with 3.5mm plugs on both ends (not supplied) to connect **MP3 LINK** jack (3.5mm) on this apparatus and the headphone jack on an MP3 player.

5 Play options




Adjust volume level

- 1 During play, turn **VOLUME** to increase/decrease the volume level.
-

Enhance bass



- 1 During play, press **DBB** to turn on or off dynamic bass enhancement.
 - ↳ If DBB is activated, DBB is displayed.
-

Select play modes

- 1 Press **MODE** repeatedly to select a play mode:
 - [/] (repeat) – repeat a track
 - [ ALL] (repeat all) - repeat an entire CD/program
 - [] (shuffle) - play tracks randomly
- 2 To return to normal play, press **MODE** repeatedly until play mode icons are no longer displayed.



Tip

- Only  and  AL can be selected when you play programmed tracks.
- When play CD , Mode should be Repeat/Repeat All/Shuffle.
- When Mp3, Mode should be Repeat/Repeat Album/Repeat All/Shuffle.

Program tracks

You can program a maximum of 20 tracks.

- 1 In CD/USB mode, at the stop position, press **PROG** to activate the program mode.
 - ↳ [PROG] (program) starts to blink.
- 2 For MP3/WMA tracks, press **AL-/AL+** to select an album.
- 3 Press **◀▶** to select a track number; then press **PROG** to confirm.
- 4 Repeat steps 2 to 3 to program more tracks.
- 5 Press **▶||** on the main unit to play the programmed tracks.
 - ↳ During play, [PROG] is displayed.
 - To erase the program, in the stop position, press **■**.
 - To review the program, in the stop position, press and hold **PROG** for more than 2 seconds.

① General information on cassette recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suitable for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil to avoid jamming the deck mechanism.
- The volume level is set automatically.



Tip

- –No recording at beginning 7 seconds.
- –Break safeguard tab to prevent the accidental erasure of a recording.

Record from CD/USB to tape

- 1 Slide the source to **CD/USB**.
- 2 Insert a CD/USB device.
- 3 (Optional) Set playing sequence (see “ Program tracks ” section).
- 4 Press **■▲** to open the tape door.
- 5 Insert a blank cassette.
- 6 Press **●** to start recording.
 - ↳ Disc play starts automatically from the beginning of the disc.
 - To pause/resume recording, press **||**.
 - To stop recording, press **■▲**.

Record from radio to tape

- 1 Slide the source selector to **FM**.
- 2 Rotate **TUNING** to tune to the radio station.
- 3 Press **■▲** to open the tape door.
- 4 Insert a blank tape.
- 5 Press **●** to start recording.
 - To pause/resume recording, press **||**.
 - To stop recording, press **■▲**.



CD Ripping

You can record music from Audio CD to USB mass storage device.

Record one track

- 1 Insert an audio CD.
- 2 Slide the source selector to **CD**.
- 3 Press **◀◀** or **▶▶** to select a track for recording.
- 4 Plug in an USB device.
- 5 Press **USB REC** to start recording the current track.
 - ↳ [RIP] starts to blink.

Record all tracks

- 1 Insert an audio CD.
- 2 Slide the source selector to **CD**.
- 3 Press  to stop playing.
- 4 Plug in an USB device.
- 5 Press **USB REC** to start recording.
 - ↳ **[RIP]** and **[ALB]** appear.
 - To stop recording, press .



Note

- When USB memory runs out, recording stops automatically.
- During recording MP3/WAM WMA file, make sure the whole file is recorded before stop recording. Otherwise the file cannot be played.






Tip

- Copyright-protected CD will not be recorded.

Tape/Tuner Ripping

You can record music from tape or radio to USB mass storage device.

- ① Insert a cassette tape.
- ② Slide the source selector to **TAPE** or **FM**.
- ③ Plug in a USB device.
- ④ To play tape, Press 
- ⑤ Press  to select starting point of tape, or adjust **TUNING** to select a radio station.

- ⑥ Press **USB REC.**
- ↳ Tape/tuner ripping begins. [Rip] flashes on display.
- ⑦ To stop ripping, Press **■**.

Folder and file name

For USB devices, a folder named **RECORD** is created after ripping, files are saved as below:

Root Folder	Sub-folder	Notes
RECORD	CDREC_01	Recorded files in CD format are saved in CDREC_XX folder.
	CDREC_02	
	CDREC_XX	
	:	
	COPY_01	Recorded files in MP3/WMA format saved in COPY_XX folder.
	COPY_02	
	COPY_XX	
	LINE_IN	Files recorded from FM/TAPE/MP3 Link are saved in LINE_IN folder.

Delete from USB device

- 1 During USB play, press **⏮/⏭** to select an audio file.
 - To delete an audio folder, in the stop position, press **AL-/AL+** to select an audio folder.
- 2 Press **DEL** .
 - ↳ A confirmation message is displayed.
- 3 While the message is displayed, press **DEL** again to confirm.
 - To cancel, press **■** .

6 Listen to the radio

Tune to a radio station



Note

- For optimal reception, fully extend and adjust the position of the FM antenna.

- 1 Switch the source selector to **FM**.
- 2 Turn the **TUNING** control knob to tune to a desired radio station.

7 Product information



Note

- Product information is subject to change without prior notice.

Specifications


Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24Bits / 44.1kHz
Total Harmonic Distortion	<1%
Frequency Response	60Hz -16kHz
S/N Ratio	>62dBA

Tuner

Tuning Range	FM: 87.5 - 108MHz;
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50 dB

 General

Power supply	220V, 60 Hz; or DC 6X1.5V  / SIZE "C" / R14 CELL
Operation Power Consumption	25 W
Dimensions - Main Unit (W x H x D)	360 x 256 x 161 mm
Net Weight	2.6 kg
Gross Weight	3.3 kg

Supported MP3 disc formats

- ISO9660, Joliet
 - Maximum title number: 512 (depending on file name length)
 - Maximum album number: 255
 - Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
 - Supported Bit-rates: 32~256 (kbps), variable bit rates
-

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.

- AAC, WAV, PCM audio files
 - DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
 - WMA files in Lossless format
-

Maintenance

Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

8 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.Philips.com/support), or contact Philips (see Contact information). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the Mains cord is connected securely.
- Ensure that there is power at the AC Mains.
- Ensure that the batteries are inserted correctly.

No sound or poor sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the system again.
- As a power-saving feature, the unit switches off automatically 15 minutes after track play reaches the end and no control is operated.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the battery.

- Aim the remote control directly at the sensor on the front of the unit.

USB device not supported

- The USB device is incompatible with the apparatus. Try another one.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.



© Royal Philips Electronics N.V. 2010

All rights reserved.

AZ1852_61_UM_V2.0_1012