


CD Soundmachine

AZ3300




**PHILIPS**



1

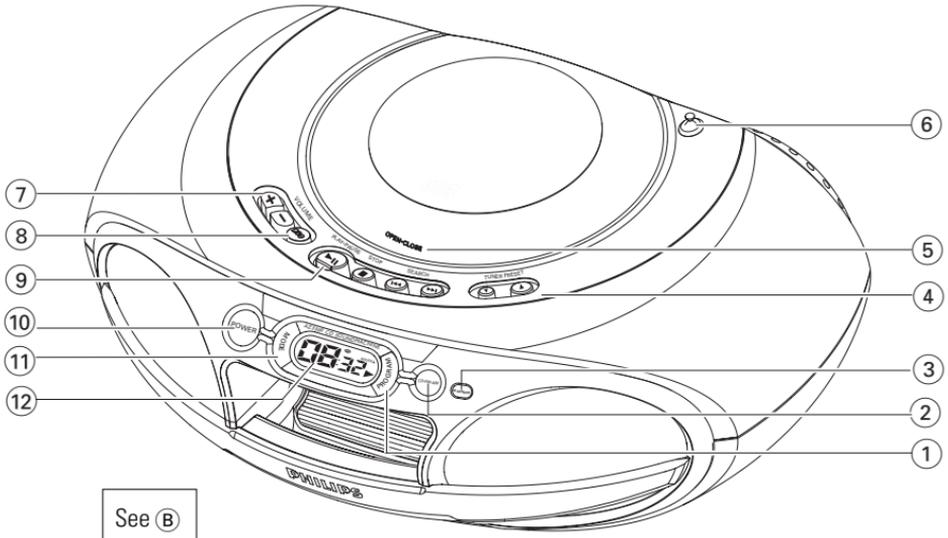

See B

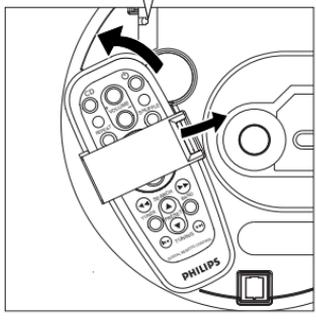

See A

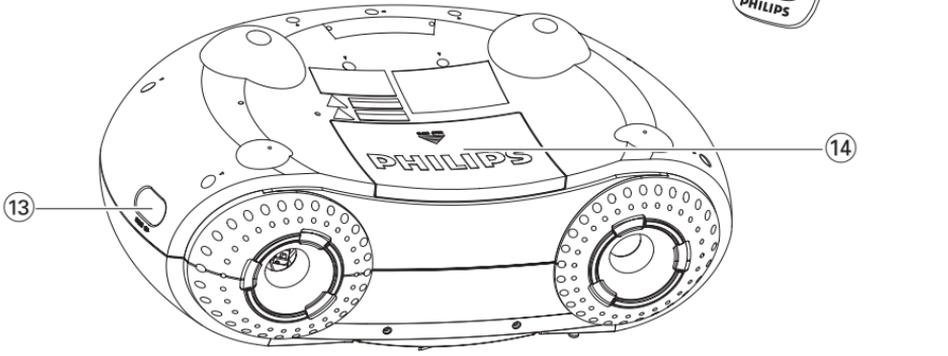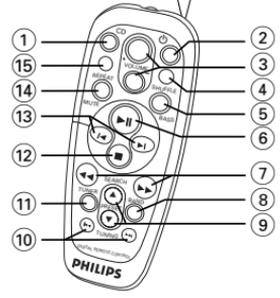

2



3




4



5



6

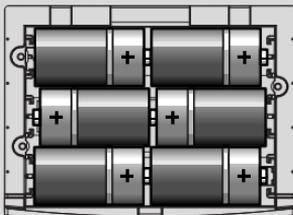


6 x R14/UM2/C-cells

7



8

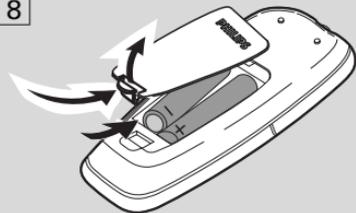

2 x AAA/R03/UM4

## **Important notes for users in the U.K.**

### **Mains plug**

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

### **How to connect a plug**

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

### **Copyright in the U.K.**

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

## ACCESSORIES

- 1 x AC mains lead
- 1 x Remote Control

## TOP AND FRONT PANEL (See [1])

## ① PROGRAM

**CD:** - programs tracks and reviews the program;  
**Tuner:** - programs preset radio stations.

② **CD•FM•MW•LW** - selects **CD / FM / MW / LW** function

③ **IR SENSOR** - infrared for remote control

④ **TUNER PRESET** ▼, ▲ - selects a preset radio station.

⑤ **OPEN•CLOSE** - opens / closes CD door.

⑥ **Telescopic antenna** - improves FM reception.

⑦ **VOLUME +, -** - to adjust volume level.

⑧ **DBB** (Dynamic Bass Boost) - activates a more vivid bass response.

⑨ **▶II** - starts or pauses CD playback.

■ - to stop playback or erase a CD program.

**SEARCH** ◀◀, ▶▶

**CD:** - searches backward and forward within a track;  
 - skips to the beginning of a current track/  
 previous/ later track.

**Tuner:** - (down, up) tunes to radio stations.

⑩ **POWER** - power on / off switch

⑪ **MODE** - selects different play modes: e.g. **REPEAT** or **SHUFFLE** (random) order.

⑫ **Display** - shows the status of the set.

## BACK PANEL (See [1])

⑬ **AC MAINS** - inlet for mains lead.

⑭ **Battery compartment** - for 6 batteries, type **R-14, UM2** or **C-cells**.

## REMOTE CONTROL (See [A])

- ① **CD** – selects CD sound source
- ② **⏻** – switches the set to standby / on if set operating on AC power. (Switches set off only if battery powered)
- ③ **VOLUME +, -** – adjusts volume level (*up, down*)
- ④ **SHUFFLE** – plays all CD tracks in random order
- ⑤ **BASS** – selects DBB on/off
- ⑥ **▶II** – starts/ pauses CD playback
- ⑦ **SEARCH** ◀◀, ▶▶ – searches backwards/ forwards within a track
- ⑧ **BAND** – selects FM/MW/LW waveband
- ⑨ **PRESET** ▲, ▼ – selects a preset radio station (*up, down*)
- ⑩ **TUNING** ◀◀, ▶▶ – tunes to tuner stations (*down, up*)
- ⑪ **TUNER** – selects tuner sound source
- ⑫ **■** – stops CD playback;  
 - erases a CD programme
- ⑬ **◀, ▶** – skips to the beginning of a current track previous/ subsequent track
- ⑭ **MUTE** – interrupts/ resumes sound
- ⑮ **REPEAT** – repeats a track /programme/ entire CD

## CAUTION

*Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.*

## POWER SUPPLY

Whenever convenient, use the AC power supply to conserve battery life. Make sure you remove the power plug from the set and wall socket before inserting batteries.

## Batteries (not included)

- Insert 6 batteries, type **R-14, UM-2** or **C-cells**, (preferably alkaline) with the correct polarity. (See [6])
- **Remote control**  
 Insert 2 batteries, type **AAA, R03** or **UM4** (preferably alkaline). (See [8])

## IMPORTANT !

- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- **Batteries contain chemical substances, so they should be disposed of properly.**

## Using AC Power


1. Check if the AC power supply, as shown on the **type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service centre.
2. Connect the mains lead to the wall socket.
3. To disconnect the mains supply, unplug the set from the wall socket.

## Storing your remote control

This set has a special built-in storage compartment for your remote control. The storage compartment has a latch to keep your remote control in place, and is located inside the CD compartment. (See [B])

## Placing your set

To avoid possible staining of surfaces, please do not stand this set in vertical position over a long period.

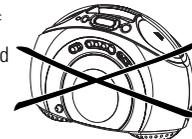

**The type plate is located on the bottom of the set.**

**This set complies with the radio interference requirements of the European Community.**

**For users in the U.K., please follow the boxed instructions 'Important notes...' on this sheet.**

## BASIC FUNCTIONS

## Switching on and off and selecting function

1. Press **POWER** on the set (or **⏻** on remote control) to switch on.
2. Press **CD•FM•MW•LW** once or more to select :  
 CD / Tuner function, and operate the respective function controls.
3. Press **POWER** to switch off the set.

**Note :** *The DBB setting, tuner presets and the volume level (maximum to 20) will be retained in the set's memory.*

## Adjusting volume and sound (See [2])

1. Adjust the volume with the **VOLUME +, -** controls.  
 → Display shows the volume level in number from 0-32.
2. Press **DBB** once or more to select dynamic bass boost on or off.  
 → Display: shows **DBB** when activated.

# DIGITAL TUNER

## DIGITAL TUNER

### Tuning to radio stations

1. Press **POWER** to on, then press **CD•FM•MW•LW** (or **TUNER** on remote control) to select **TUNER**.  
→ **TU** is displayed briefly and then the radio station frequency, waveband and, if programmed, a preset number are shown (See [3])
  2. Press **CD•FM•MW•LW** (or **BAND** on remote control) once or more to select your waveband.
  3. Press and hold **SEARCH** ◀◀ or ▶▶ until the frequency in the display starts running.  
→ The radio automatically tunes to a station of sufficient reception. Display shows *S r c h* during automatic tuning.
  4. Repeat step 2 if necessary until you find the desired station.
- To tune to a weak station, press ◀◀ or ▶▶ briefly and repeatedly until you have found optimal reception.

### To improve radio reception:

- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
- For **MW or LW**, the set uses a built-in aerial. Direct this aerial by turning the whole set.

### Programming radio stations

You can store up to a total of 30 radio stations (20 FM, 5 MW and 5 LW) in the memory, manually or automatically (Autostore).

# DIGITAL TUNER

## Manual programming

1. Tune to your desired station (see **Tuning to radio stations**).
2. Press **PROGRAM** to activate programming.  
→ **PROGRAM** flashes.
3. Press **TUNER PRESET** ▼,▲ once or more to select a preset number.
  - **Remote control** : Press **PRESET** ▲, ▼ once or more to select a preset station.
4. Press **PROGRAM** to confirm.
5. Repeat steps 1-4 to store other stations.

*Note* : You can erase a preset station by storing another frequency in its place.

## Autostore

Autostore automatically starts programming radio stations from preset 1. Available stations are programmed in order if the station with sufficient reception strength. Any previous presets e.g. manually programmed will be erased.

- Press **PROGRAM** for 2 seconds or more to activate autostore programming.  
→ The display shows *RUED*, **PROGRAM** blinks, followed by the radio station details when stored.

After all stations are stored, the first preset station will then automatically play.

## To listen to a preset station

- Press the **TUNER PRESET** ▼,▲ buttons once or more until the desired preset station is displayed.
- Remote control : optionally, press **PRESET** ▲, ▼ to select your preset station.

# CD PLAYER

## Playing a CD

This CD player plays Audio Discs including CD-Recordables and CD-Rewritables.

1. Adjust the **CD•FM•MW•LW** to **CD** (or **CD** on remote control)  
→ *OPEN* is displayed.
2. Open the CD Door.  
→ *OPEN* is displayed.
3. Insert a CD with the printed side facing up and close the door.  
→ *no cd* if no CD inserted/ CD dirty, incorrectly inserted or damaged.  
→ *no F cd* if you have inserted a non-finalized CD-R(W).
4. Press **▶▶** to start playback.  
→ *RRR* if your CD contains non-audio i.e. data files.
5. To pause playback press **▶||**. Press **▶||** again to resume play.  
→ Display: **▶** flashes during pause.
6. To stop CD playback, press the **■** button.

*Note* : CD play will also stop when:

- the CD door is opened
- the CD has reached the end
- you select **FM / MW / LW** function.

## Selecting a different track

- Press **SEARCH** ◀◀ or ▶▶ once or repeatedly to select your track.
- In the pause / stop position, press **▶||** to start playback.

# CD PLAYER

## Finding a passage within a track

1. Press and hold **SEARCH** ◀◀ or ▶▶.  
– The CD is played at high speed and low volume.
2. When you recognize the passage you want, release ◀◀ or ▶▶ to resume normal playback.

## Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback, and combine the modes with PROGRAM. (See [4])

**SHUFFLE** - tracks of the entire CD/ program are played in random order

**SHUFFLE REPEAT ALL** - to repeat the entire CD/ program continuously in random order

**REPEAT ALL** - repeats the entire CD/ program

**REPEAT** - plays the current track continuously

1. To select play mode, press **MODE** once or more.
2. Press **▶||** to start playback if in the stop position.
3. To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.  
– You can also press the **■** button to cancel your play mode.

## CD PLAYER

### Programming track numbers

In the stop position, select and store your CD tracks in the desired sequence. Up to 20 tracks can be stored in the memory.

1. Press **SEARCH** ◀◀ or ▶▶ on the set to select your desired track number.

2. Press **PROGRAM**.

→ Display: **PROGRAM**, *P R O G* briefly and your selected track number. (See [5])

→ If you attempt to program without first selecting a track number, *n o S E* is shown.

3. Repeat steps 1-2 to select and store all desired tracks.

→ Display: *F U L L* if you try to program more than 20 tracks.

### Reviewing the program

In the stop position, press and hold **PROGRAM** until the display shows all your stored track numbers in sequence.

### Erasing a program

You can erase the program by either:

- pressing ■ twice  
→ *E L R* is displayed briefly and **PROGRAM** disappears.
- You select **FM** / **MW** / **LW** function.
- Open the CD door.

## SAFETY & MAINTENANCE

### SAFETY & MAINTENANCE INFORMATION

(See [7])

- Don't expose the set, batteries, CDs to humidity, rain, sand or excessive heat.
- Clean the set with a dry cloth. Don't use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the set.
- Place the set on a hard and flat surface so that the system does not tilt. Make sure there is good ventilation to prevent the set overheating.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.

### CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- *Never* write on a CD or attach any stickers to it.

## TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** *Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

### RAMNo sound /power

- *Volume not adjusted*
- Adjust the VOLUME
- *Mains lead not securely connected*
- Connect the AC mains lead properly
- *Batteries exhausted/ incorrectly inserted*
- Insert (fresh) batteries correctly

### Severe radio hum or noise

- *Electrical interference: set too close to TV, VCR or computer*
- Move the set to increase the distance

### Poor radio reception

- *Weak radio signal*
- FM: Adjust the FM telescopic aerial

### n o c d indication

- *CD badly scratched or dirty*
- Replace/ clean CD, see Maintenance
- *Laser lens steamed up*
- Wait until lens has cleared

### n F c d indication

- *CD-R(W) is blank/ not finalized*
- Use a finalized CD-R(W)

### d R E R indication

- *CD contains non-audio files*
- Press **SEARCH** ◀◀ or ▶▶ once or more to skip to a CD audio track, instead of the data file

### The CD skips tracks

- *CD damaged or dirty*
- Replace or clean CD
- *SHUFFLE or PROGRAM is active*
- Switch off SHUFFLE / PROGRAM

### Remote control does not function properly

- *Batteries exhausted/ incorrectly inserted*
- Insert (fresh) batteries correctly
- *Distance/ angle between the set too large*
- Reduce the distance/ angle

### Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 materials: cardboard, expandable polystyrene, polyethylene.

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, exhausted batteries and old equipment.**

English

Français

Español

Deutsch

Nederlands

Meet Philips at the Internet  
<http://www.philips.com>



AZ 3300

**CLASS 1  
LASER PRODUCT**



Printed in China