

DVD Player

DVP3260 DVP3264 DVP3252 DVP5990 DVP3266K DVP5996K

Service

DVP3260/05/12 DVP3260/05(Second Generation)

DVP3264/12 DVP3260/12(Second Generation)

DVP3252/51/75 DVP3264/12(Second Generation)

DVP5990/12/05

DVP3266K/51

DVP5996K/51

Service

Service



Service Manual

This simple Service Manual is for " Exchange " Scenario

TABLE OF CONTENTS

	Page
• Instruction.....	2-1
• Software Upgrade.....	3-1
• Accessory list.....	4-1
• Revision List.....	5-1

©Copyright 2008 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by KC-ET 0809 Service Audio Printed in The Netherlands Subject to modification
Version 1.4

**CLASS 1
LASER PRODUCT**

GB 3139 785 33404

PHILIPS

How to remove the CD manually from the tray

1. Please do as below instruction in case the tray can not be open:
 - I. Power off the DVD player.
 - II. Please gently push the guider and wait until the tray comes out (Figure1).

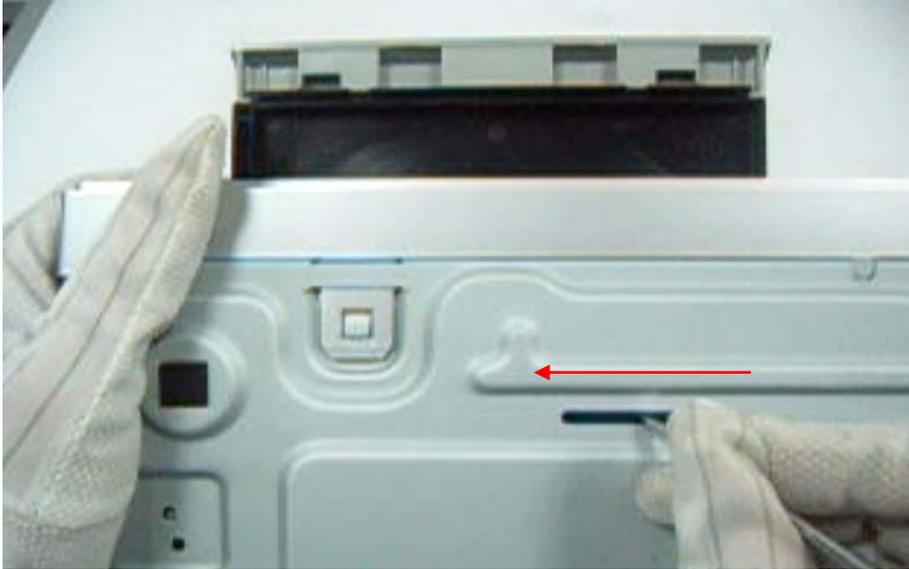


Figure 1

Software upgrade

Preparation to upgrade software

- 1) Start the CD Burning software and create a new CD project (Data Disc) with the following setting:
 Label: DVPXXXX (No need the label name)
 File Name: DVPXXXX_XX.BIN
 Power on the set and open the tray, then press <5><5> to check the File Name.

Note: It is required capital letter for the File System name

- 2) Burn the data onto a blank CDR

A. Procedure for software upgrade:

- 1) Power on the set and insert the prepared Upgrade CDR.
- 2) The set will starts reading disc & response with the following display TV screen:
 Upgrade File DETECTED
 Upgrade?
 Press Play TO START.
- 3) Press <OK> button to confirm, then screen will display :
 Files coping...
 UPGRADING...
- 4) The upgraded disc will automatically out when files coping complete, then take out the disc.
- 5) About 1 minute later, the trace will automatically close when upgrading complete.

B. Read out the software versions to confirm upgrading

- 1) Power on the set and press <Setup> button on the remote control.
- 2) Press<1><3><7><9>button to check the software information.

The software version and other information are display on the TV screen as follows:

Version	XX.XX.XX.XX (Main version)
SUB-VER	XX.XX.XX.XX (software version of application software)
8032	XX.XX.XX.XX
Servo	XX.XX.XX.XX (software version of Servo)
RISC	XX.XX.XX.XX
DSP	XX.XX.XX.XX
Region Code	X

Caution: The set must not be power off during upgrading, Otherwise the Main board will be damaged entirely.

Accessories Spare Parts List

Item No.	12NC No.	Description
RC	996510010908	Remote control for DVP3260/05/12, DVP3264/12, DVP3260/05/12(Second Generation) and DVP3264/12 (Second Generation)
	996510012682	Remote control for DVP5990/12/05
	996510010908	Remote control for DVP3252/51 and DVP3252/75
	996510010959	Remote control for DVP3266K/51
AV Cable	996510013355	Remote control for DVP5996K/51
	996510001106	AV Cable for DVP5990/05/12, DVP3252/51 , DVP3266K/51, DVP5996K/51 and DVP3252/75

Revision List

Version 1.0

- * Initial Release

Version 1.1

- * Adding DVP3252/51
- * Adding DVP5990/12/05
- * Update Accessory Spare Part List

Version 1.2

- * Adding DVP3266K/51
- * Update Accessory Spare Part List

Version 1.3

- * Adding DVP5996K/51
- * Adding DVP3252/75
- * Update Accessory Spare Part List

Version 1.4

- * Adding DVP3260/05 (Second Generation, OPU type: IM)
- * Adding DVP3260/12 (Second Generation, OPU type: IM)
- * Adding DVP3264/12 (Second Generation, OPU type: IM)