



Service Manual



Introduction of MC-122, MC-128 and MC-129

For service documentation please refer to Service manual MC-120 / MC-130 - 3140 785 32310.

MC-122/22 refers to MC-120/22 with the following adaptations:

1. Mechanical & Accessories

Add	3140 117 71191	Front Cab Assy MC-122 (with 414, 416, 417, 418)
Change 401	3140 117 71001	Cass Door Assy MC-122
409	3140 117 71491	Cass Key Set MC-122
	3140 118 51791	Speaker Box Assy

MC-128/37 refers to MC-120/37 with the following adaptations:

1. Mechanical & Accessories

Add	3140 117 69391	Front Cab Assy MC-128 (with 414, 416, 417, 418)
Change 401	3140 117 69461	Cass Door Assy MC-128
406	3140 117 69431	Front Panel Assy MC-128
419	3140 110 51811	Light-bar Assembly
423	3140 117 69581	CD Door Assy... MC-128
	3140 118 51671	Speaker Box Assy
	3139 238 05601	Remote Control

2. LED Board

Change 6901 to	6912 9322 070 81682	LED VS TLHY4405
----------------	---------------------	-----------------

MC-129/37 refers to MC-120/37 with the following adaptations:

1. Mechanical & Accessories

Add	3140 117 69481	Front Cab Assy MC-129 (with 414, 416, 417, 418)
Change 401	3140 117 69521	Cass Door Assy MC-129
406	3140 117 69501	Front Panel Assy MC-129
419	3140 110 51811	Light-bar Assembly
423	3140 117 69591	CD Door Assy... MC-129
	3140 118 51681	Speaker Box Assy
	3139 238 05611	Remote Control

2. LED Board

Change 6901 to	6912 4822 130 11589	LED VS LTL-1CHAE
----------------	---------------------	------------------



© Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

