

# Operating Instructions


COMPACT DISC PLAYER

# PD-101


# PD-201

COMPACT  
disc  
DIGITAL AUDIO

PD-201

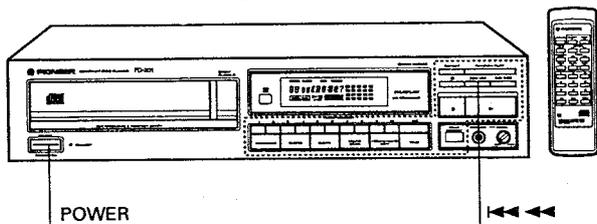

PD-101

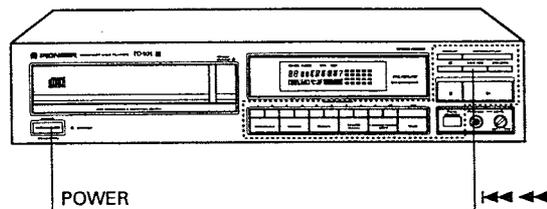

## DEMO MODE

- Demo mode allows you to see variation of the display. To enter the demo mode, press POWER and then  within 1 second without inserting the disc.
- To exit the demo mode, press any buttons boxed with broken lines (  ) in the above illustrations.

Thank you for buying this Pioneer product.

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## IMPORTANT NOTICE

### [For U.S. and Canadian models]

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

### [For Canadian model with the polarized plug]

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### [Pour le modèle canadien avec la fiche polarisée]

**ATTENTION:** POUR PREVENIR LES CHOCES ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

## LINE VOLTAGE SELECTOR SWITCH

**Only multi-voltage models are provided with this switch. U.S., Canadian, European, U.K., and Australian models are not provided with this switch.**

**Mains voltages in Saudi Arabia are 127V and 220V only.**

The line voltage selector switch is located on the rear panel of this player. Before your player is shipped from the factory, the switch is set to the power requirements of the player's destination. Check that it is set properly before plugging the power cord into the outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows:

- Use a medium-sized (flat blade) screwdriver. Insert the tip of the screwdriver into the groove of the selector switch and turn it so that the power voltage marking of your area points to the arrow.



"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."

 **PIONEER**  
The Art of Entertainment

# IMPORTANT 1



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT 2

If the apparatus is fitted with AC mains power outlet(s), see REAR PANEL FACILITIES for convenient connection of additional Hi-Fi component(s). Make all connections to the AC outlet(s) and the signal terminals first. Connect the plug to the wall socket last (make sure that the power switch is off.)

## FOR USE IN THE UNITED KINGDOM

The wires in this mains lead are coloured in accordance with the following code:

- Blue: Neutral
- Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not connect either wire to the earth terminal of a three pin plug.

Equipment sold in the U.K. is not supplied with a power plug.

# SAFETY INSTRUCTIONS

**READ INSTRUCTIONS** – All the safety and operating instructions should be read before the appliance is operated.

**RETAIN INSTRUCTIONS** – The safety and operating instructions should be retained for future reference.

**HEED WARNING** – All warnings on the appliance and in the operating instructions should be adhered to.

**FOLLOW INSTRUCTIONS** – All operating and use instructions should be followed.

**WATER AND MOISTURE** – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

**LOCATION** – The appliance should be installed in a stable location.

**WALL OR CEILING MOUNTING** – The appliance should not be mounted to a wall or ceiling.

**VENTILATION** – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

**HEAT** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

**POWER SOURCES** – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

**POWER-CORD PROTECTION** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**POLARIZATION** – If your purchased product is provided with a polarized power plug, please read the following instructions. This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**CLEANING** – The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

**POWER LINES** – An outdoor antenna should be located away from power lines.

**NONUSE PERIODS** – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

**OBJECT AND LIQUID ENTRY** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

**DAMAGE REQUIRING SERVICE** – The appliance should be serviced by a Pioneer authorized service center or qualified service personnel when:

- The power-supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- The appliance has been dropped or the enclosure damaged.

**SERVICING** – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.


**OUTDOOR ANTENNA GROUNDING** – If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

In the U.S.A. section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Fig. A.

**CART** – An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



NEC – NATIONAL ELECTRIC CODE

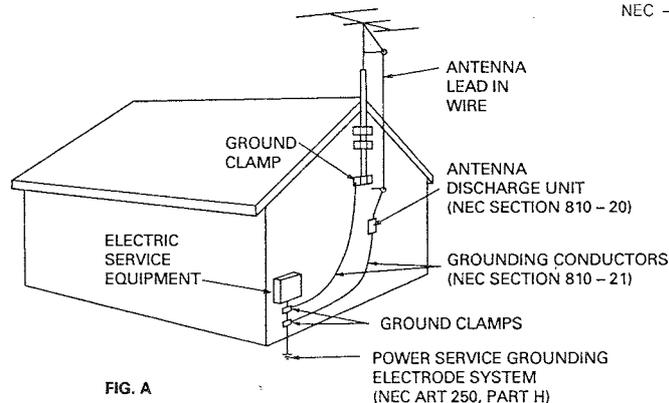

## [FOR EUROPEAN AND U.K. MODELS]

### CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.

Refer all servicing to qualified personnel.

The following caution label appears on your player.

Location: rear of the player



## [FOR U.S. MODEL]

### CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

## INFORMATION TO USER [FOR U.S. MODEL]

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this equipment with respect to the receiver
- move this equipment away from the receiver
- plug this equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:  
"How to Identify and Resolve Radio-TV Interference Problems"  
This booklet is available from the US Government Printing Office, Washington, D.C., 20402, Stock No. 004-000-00345-4.

*The above instructions apply only to units which will be operated in the United States.*



### Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

#### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

#### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

## We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

#### Decibel Level Example

30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

#### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



## [For Canadian model]

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

THE POWER SWITCH IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION.

## POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

## CONTENTS

ABOUT THESE OPERATING INSTRUCTIONS .....	4
CAUTIONS REGARDING HANDLING .....	4
CONNECTIONS .....	5
CONFIRM SUPPLIED ACCESSORIES .....	6
PUT BATTERIES INTO THE REMOTE .....	
CONTROL UNIT .....	6
NAMES AND FUNCTIONS OF PARTS .....	6
BASIC OPERATION .....	7
VARIOUS OPERATIONS .....	8
TO PLAY ONLY DESIRED TRACKS .....	9
CONVENIENT OPERATION FOR RECORDING .....	10
TROUBLESHOOTING .....	11
SPECIFICATIONS .....	Back cover

## ABOUT THESE OPERATING INSTRUCTIONS

The contents found in these Operating Instructions are based on the PD-201 model, but they are also applicable to the PD-101 models.

### AC power cord connection and functions

Some functions cannot be carried out depending on the connection of AC power cord.

Function	When the AC power cord is connected to the unswitched outlet of an amplifier or wall outlet.	When the AC power cord is connected to the switched outlet of an amplifier or audio timer.
Timer playback	No	Yes
Program memory	Yes	No
Output level memory	Yes	No

## CAUTIONS REGARDING HANDLING

### Location

**Install the player in a well ventilated location where it will not be exposed to high temperature or humidity.**

Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Also, installation of the player in a damp or dusty environment may result in malfunction or accident.

### Precautions regarding installation

- Avoid placing the player on heat-generating sources such as amplifiers.
- Install this compact disc player as far as possible from tuners and TV sets. Noise may be particularly noticeable when an indoor antenna is used. In such a case, make use of an outdoor antenna, or turn off power to the compact disc player.
- Please place this unit on a level surface.

## Cleaning the player

To clean the PLAYER, wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

## Storing discs

Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures.

## CD lens cleaner

 
The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, consult your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

## Condensation

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises sharply, condensation may form inside, and the unit may not be able to attain its full performance. In cases like this, allow the unit to stand for about an hour or raise the room temperature gradually.

## Cleaning and handling compact discs


- Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.
- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.
- With this player, use discs which display the mark shown below. (Optical audio digital discs.)
- When holding discs, do not touch their signal surfaces (the side reflecting a "rainbow" pattern, opposite the label side). Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.



### NOTE:

- When setting an 8 cm CD single, do not use the 8 cm CD single adaptor.
- Never attempt to load both 8 cm and 12 cm discs together, since disc damage or other malfunctions may result. Always load only one disc at a time.

## CONNECTIONS

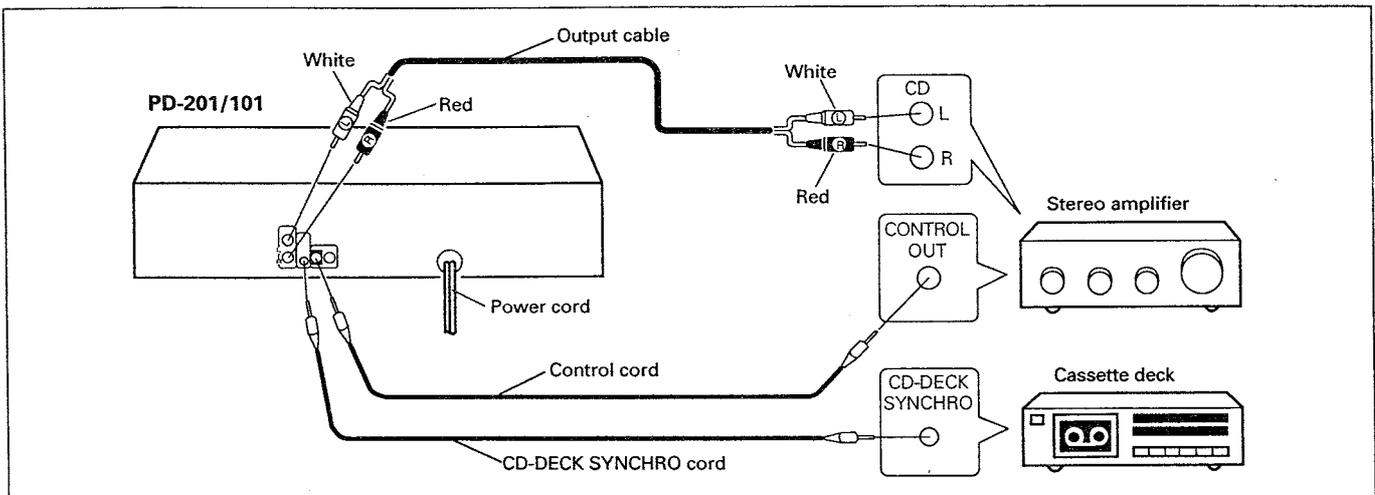

- Make sure that all of the components are turned off before making connections.

### CONNECTING THE OUTPUT CABLE:

Connect the LINE OUT jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.

- Be sure not to connect this unit to the amplifier's PHONO jacks, as sound will be distorted and normal playback will not be possible.

### CD-Deck synchro function

If you have a Pioneer cassette deck provided with the CD-Deck synchro function, connect the CD-DECK SYNCHRO jacks of the CD player and cassette deck. With this function, synchro recording can be carried out between player and deck.

- For details on connections and operation, refer to the Operating Instructions supplied with the cassette deck.
- The CD-DECK SYNCHRO cord is not supplied with the CD player.

### NOTE:

In order to enable the CD-DECK SYNCHRO recording function, the normal output cable must be connected to the stereo amplifier.

### System remote control with a Pioneer stereo amplifier that has the SR mark

(Available with the PD-101 and U.S. and Canadian models of the PD-201 only; Not available with models for military zones (multi-voltage types))

When a Pioneer stereo amplifier bearing the SR mark is used, connect the CONTROL IN jack on the rear panel of the CD player to the CONTROL OUT jack of the amplifier. This will enable the CD player to be controlled using the remote control unit supplied with the stereo amplifier. If you do not plan to use this feature, it is not necessary to connect CONTROL IN/OUT jacks.

- The control cord is supplied with the CD player.
- The remote control unit supplied with the amplifier can be used to control Play, Stop, Pause and Track Search.
- For instructions regarding connections and operation, refer to the Operating Instructions provided with your stereo amplifier.

### NOTES:


- When a control cord is connected to the player's CONTROL IN jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier.
- Be sure to connect both of the control cord's plugs securely to the CONTROL IN and CONTROL OUT terminals. Do not connect only one end of the cable.
- Be sure to turn off the power of the amplifier when connecting the power cord and output cord.

### CONNECTING THE POWER CORD:

Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier. (See the section "AC power cord connection and functions" on page 4.)


- Make sure plugs are inserted fully into the jacks and wall outlet.

## CONFIRM SUPPLIED ACCESSORIES

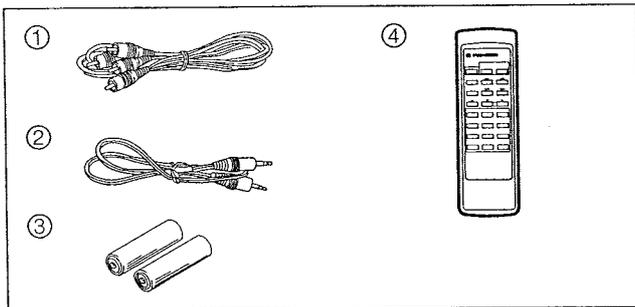

- ① Output cable x 1
- ② Control cord x 1 (PD-101 and U.S. and Canadian models of PD-201 only: Not available with models for military zones (multi-voltage types))
- ③ Remote control unit x 1 (PD-201 only)
- ④ AAA/R03 dry cell batteries x 2 (PD-201 only)

## PUT BATTERIES INTO THE REMOTE CONTROL UNIT

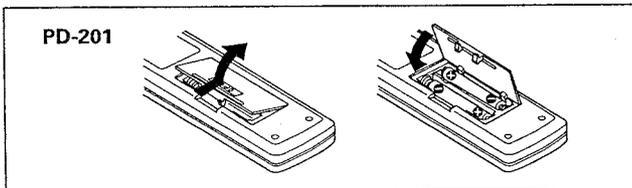

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries, taking care to align the (+) and (-) polarities correctly.

### NOTE:


- In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment, and replace the batteries with new ones.
- Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.

Incorrect use of batteries may cause leakage or rupture. Always be sure to follow these guidelines:

- A. Always insert batteries into the battery compartment correctly matching the positive (+) and negative (-) polarities, as shown by the display inside the compartment.
- B. Never mix new and used batteries.
- C. Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.

When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (REMOTE SENSOR) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

## NAMES AND FUNCTIONS OF PARTS

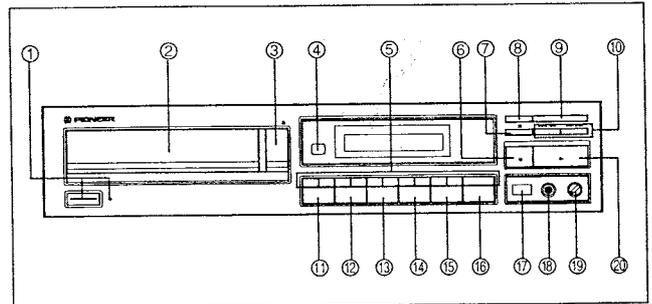

### FRONT PANEL


- ① **POWER STANDBY/ON switch and STANDBY indicator**
- ② **Disc tray**
- ③ **OPEN/CLOSE button (▲)**
- ④ **Remote sensor**  
Receives the signal from the remote control unit.  
● The PD-101 is not equipped with the remote sensor.
- ⑤ **TRACK NUMBER/Digit buttons (1 - 10, >10)**
- ⑥ **Pause button (||)**
- ⑦ **Stop button (■)**
- ⑧ **REPEAT button**
- ⑨ **RANDOM PLAY button**
- ⑩ **Track/Manual search buttons (◀◀ ▶▶ ▶▶▶▶)**
- ⑪ **PROGRAM button**
- ⑫ **CHECK button**
- ⑬ **CLEAR button**
- ⑭ **HI-LITE SCAN button**
- ⑮ **COMPU/AUTO EDIT button**
- ⑯ **TIME button**
- ⑰ **PEAK SEARCH button**
- ⑱ **Headphones jack (PHONES)**
- ⑲ **Headphones volume control (LEVEL)**
- ⑳ **Play button (▶)**

### NOTE:

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

### Notes for PD-101:

Operate the PD-101 using the remote control unit which accompanies the amplifier. (See page 5.)

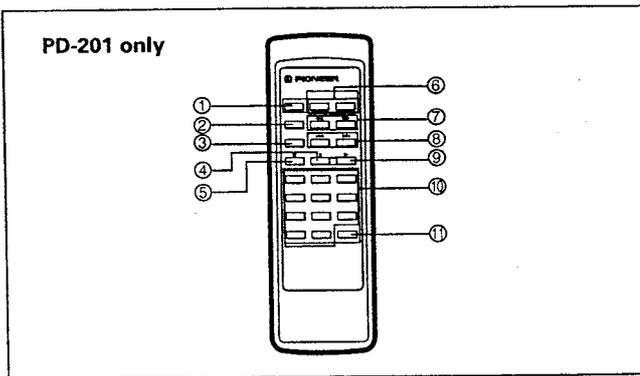


**REMOTE CONTROL UNIT**

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- ① **POWER** button
- ② **HI-LITE SCAN** button
- ③ **RANDOM PLAY** button
- ④ **PAUSE** button ( || )
- ⑤ **STOP** button ( ■ )
- ⑥ **OUTPUT LEVEL** buttons (-/+)
- ⑦ **MANUAL** search buttons ( <<< / >>> )
- ⑧ **TRACK** search buttons ( <<< / >>> )
- ⑨ **PLAY** button ( ▶ )
- ⑩ **Track number/Digit** buttons ( 1 - 10, >10 )
- ⑪ **Program** button ( PGM )

**BASIC OPERATION**

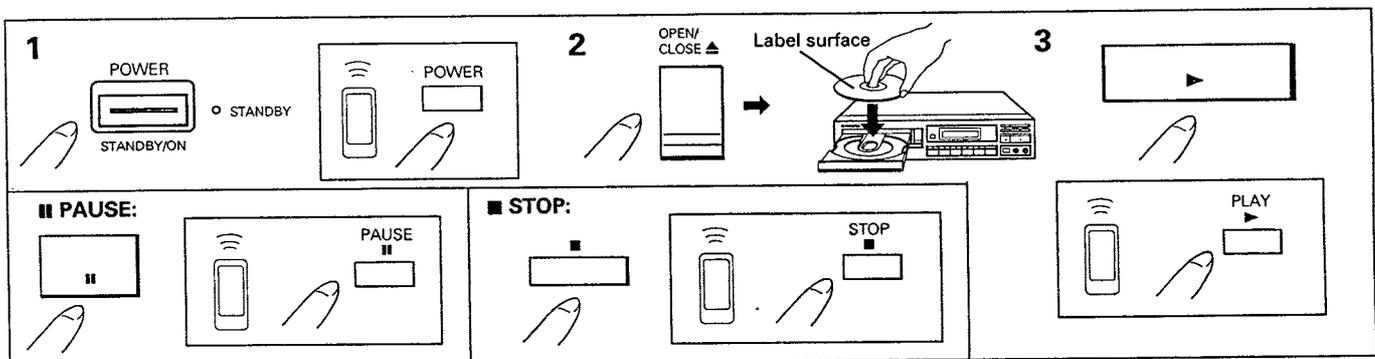

Operations indicated by the [ ] mark are performed with the remote control unit. (PD-201 only)

- 1 Press **POWER** to turn on the power to the player.
- 2 Press **OPEN/CLOSE** and load a disc.
  - Place the disc with the label surface facing UP.
- 3 Press **▶** to start playback.

**To pause playback temporarily:**

Press **||**. The **||** indicator lights and playback is paused at that point. Pressing **||** again or **▶** resumes playback from the position where pause mode was entered.

**To stop playback:**

Press **■**.


**To stop playback and take out the disc:**

Press **OPEN/CLOSE** and remove the disc. Press **OPEN/CLOSE** again to close the disc tray and then press **POWER** to turn off the power.

**Time display**

During playback, pressing the **TIME** button changes the time display in the following sequence: ① Time (elapsed playback time of the track being played) → ② Remain (remaining playback time of the track being played) → ③ AL Remain (remaining playback time from the playing point to the end of the disc) → ④ Total (total playback time of the disc).

- With track No. 30 or more, the Remain time ② cannot be displayed.
- During random playback, AL Remain time ③ cannot be displayed.
- During Program playback, the remaining playback time of the programmed tracks can be displayed with the AL Remain setting ③. The number of program steps and total time of program can be displayed with the Total setting ④.

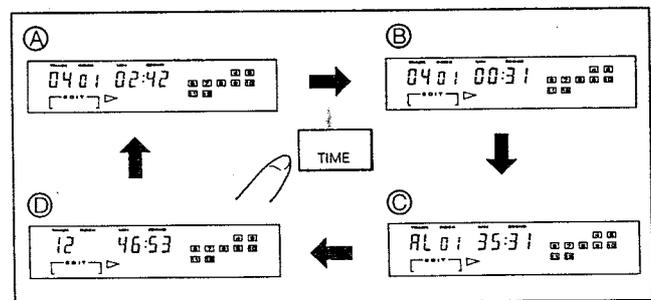

**Timer playback**

By using a commercially available audio timer, it is possible to initiate playback at any time automatically.


1. Turn on the power to the player, load a disc into the disc tray and close the disc tray with **OPEN/CLOSE**.
2. Set the time at which you wish playback to begin. The timer will supply power to both the amplifier and the player at the preset time, turning all the components on and initiating the playback mode. Playback starts from the first track.

**NOTES:**

- If no disc has been loaded in the player, the player will enter the standby mode when the audio timer turns the player's power on.
- Pressing any function buttons before commencement of timer start cancels the timer start function.

## VARIOUS OPERATIONS

### Direct play - To play a particular track by specifying the track number

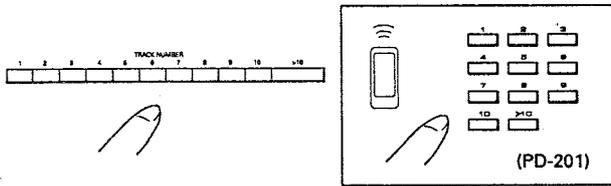


When the track No. is specified with the digit buttons, playback starts automatically from the beginning of the specified track.  
To specify track No. from 1 to 10, simply press the corresponding digit buttons (  $\square$  -  $\square$  ). To specify track No. 11 or above, use  $\square > 10$ .

**Example :** To enter track No. 26:  $\square > 10$ ,  $\square 2$ ,  $\square 6$   
To enter track No. 30:  $\square > 10$ ,  $\square 3$ ,  $\square 10$

- When entering 11 or above,  $\square 10$  functions as 0.
- When  $\square > 10$  is pressed, the digit button to be next entered should be pressed within 5 seconds.

### Track search - To search for a particular track

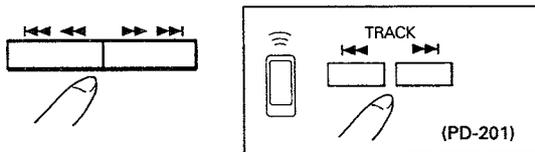

When  $\square \square \square \square$  is pressed once or a number of times, playback is advanced to the beginning of a track located after the track being played. The position of the located track corresponds to the number of times the button is pressed.


When  $\square \square \square \square$  is pressed once, playback returns to the beginning of the track being played. When this button is pressed more than once, playback is returned to a track located before the track being played.

- When  $\square \square \square \square$  or  $\square \square \square \square$  is operated in pause mode or stop mode, press  $\square$  to start playback.

#### NOTE:

During program playback, the  $\square \square \square \square$  or  $\square \square \square \square$  button can be used to select the programmed track.

### Manual search - To search for a particular passage

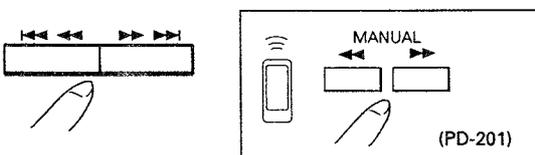


While  $\square \square \square \square$  is kept pressed, playback rapidly advances toward the end of the disc. When playback reaches the end of the disc, the player enters pause mode and "END" is displayed. While  $\square \square \square \square$  is kept pressed, playback rapidly reverses toward the beginning of the disc. When the desired passage is reached, release  $\square \square \square \square$  or  $\square \square \square \square$ . The player enters original mode (playback or pause) where  $\square \square \square \square$  or  $\square \square \square \square$  is released.

#### NOTE:

During program playback, Manual Search can be carried out in one program step only.

8  
<PRB1159>  
En


### To display the playing time of each track

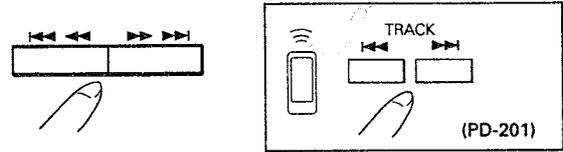

During stop mode, pressing  $\square \square \square \square$  displays the playing time of each track starting from track No.1.

- This function cannot be carried out with track No.30 or above.

### Hi-Lite scan

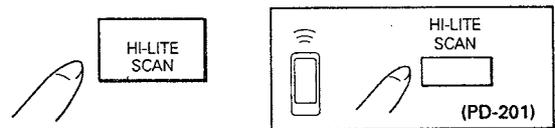


When HI-LITE SCAN is pressed during stop mode, playback starts from a point 1 minute after the beginning of the track, and each track is played for about 10 seconds. The SCAN indicator blinks during Hi-Lite scan mode.

- Hi-Lite scan can be carried out from the desired elapsed time of the track. During playback, press HI-LITE SCAN at the point you want to start Hi-Lite scan playback. The player memorizes the minute and second of the point and Hi-Lite scan playback is carried out from the memorized minute and second on each track.

#### NOTES:

 - When the playback time of a track is less than one minute or is shorter than the memorized time, Hi-Lite Scan playback is carried out from the beginning of the track for about 10 seconds. When playback time of a track is less than 10 seconds, the track is played from the beginning to the end.
- During program playback or random playback, pressing HI-LITE SCAN cancels program playback or random playback. The player memorizes the time of the point at which HI-LITE SCAN was pressed and Hi-Lite Scan playback is carried out from the memorized time on each track. However, the program contents will not be erased.
- One track repeat cannot be performed in Hi-Lite scan playback mode.


### To repeat playback (repeat play)



To repeatedly play the displayed track, press REPEAT once. The 1▶REP indicator lights. The REPEAT button can be pressed in any playback mode.

To repeatedly play all tracks on the disc in normal playback mode or in the specified playback mode (Program playback or Random playback), press REPEAT twice. The REP indicator lights.

### Random playback - To play all tracks in random order

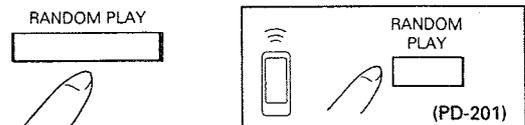

Press RANDOM PLAY. The RND indicator lights and all tracks on the disc are played in random order. After all tracks are played, the player enters stop mode.

**To search for the peak volume level within a disc (peak search)**



With this function, the peak level of CD can easily be searched for. This is convenient for adjusting the proper recording level.

**To search for the peak level of the entire disc: During stop mode, press PEAK SEARCH.**

- The player scans the entire disc and searches for the peak level. It takes about 1 minute with a 60-minute CD. While searching, the PEAK indicator blinks on the display.
- To cancel the peak search function, press ■.

**To search for the peak level of the programmed tracks: Program the desired tracks beforehand and press PEAK SEARCH.** The player scans all of the programmed tracks and searches for the peak level between them.


**To adjust the recording level**

1. When the player detects the peak level, a 6-second (approximate) portion of the disc including the peak level is played repeatedly.
2. Adjust the recording level on the tape deck.
3. Set the tape deck to recording mode and start CD play by pressing ►.

**NOTES:**

- The player sometimes detects the different peak level even when the peak search function is carried out on one disc.
- With some discs, the player cannot detect the proper peak level. This is not a malfunction.
- When the peak level exists on the beginning or end of the track, the section which contains the peak level is played repeatedly for about 3 seconds.

**Adjusting the sound volume (PD-201 only)**

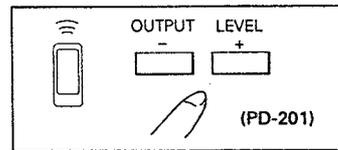

Press OUTPUT LEVEL "-" or "+" to adjust the output level.

- The output level can be adjusted between 0 dB and -25 dB in steps of 1 dB.
- The ATT display shows the selected level.
- The output level at the OUTPUT jacks and PHONES jack will be adjusted simultaneously.
- If the disc is in the player, the setting of the OUTPUT LEVEL button is not erased even when the power is turned off. However, if the power is turned off with an audio timer or by unplugging the power cord, the setting of the OUTPUT LEVEL button will be erased.

**TO PLAY ONLY DESIRED TRACKS**

**Program playback - To program tracks in desired order**

Programming is possible during stop or playback mode. Only during stop mode, the dialog display appears in each step to facilitate programming.

**1 Press PROGRAM.**

- "TRACK?" appears on the display.

**2 Enter the desired track numbers in a desired order with the digit button.**

- Up to 24 tracks (steps) can be programmed.

**3 Press ►.**

The tracks are played in the programmed order. When all programmed tracks have been played, the player enters stop mode.

**To stop Program playback, press ■.**

- To go to the previous or next step in a program, press ◀◀ ◀◀ or ▶▶ ▶▶.
- Each time a track is programmed, the display will show the programmed number.
- If the disc is in the player, the program contents will not be erased even if the power is turned off.

**Programming while listening to playback**

During normal playback or program playback, you can program the desired tracks.

**During normal playback or Hi-Lite scan playback (Direct program):** The track being played can be programmed.

1. During playback, press PROGRAM to enter the program mode.
2. Whenever a track to be programmed is played, press PROGRAM. You can repeat step 2 until up to 24 steps are programmed.
3. After programming, press ►. The current playback is cleared and the tracks are played in the programmed order.

**During program playback:**

Enter the desired tracks without pressing PROGRAM. The program contents are added to the program being played.

**Notes on time display**

- If the total playing time or total remaining time exceeds 100 minutes, the corresponding time will not be displayed.
- If track No. 30 or above is programmed, total remaining time or total playing time will not be displayed.

## TO PLAY ONLY DESIRED TRACKS

### Programming a pause


Inserting a pause in your program can be very useful when carrying out recording. Press **II** instead of entering a track number. "PA" appears on the display.

- For example, when recording on both sides of a cassette tape, if you program a pause after the last track to be recorded on the first side, program playback will pause at that point to allow you to switch tape sides. To resume program playback after the player enters pause mode, press **II**.

#### NOTES:


- A pause can be programmed only when the program procedure is performed under stop mode.
- A pause cannot be programmed at the beginning of a program, nor can two pauses be programmed one after the other.
- A pause inserted in a program is counted as one step.
- If a pause is programmed as the last step of a program, the player will not enter the pause mode.

### To clear all of the program contents

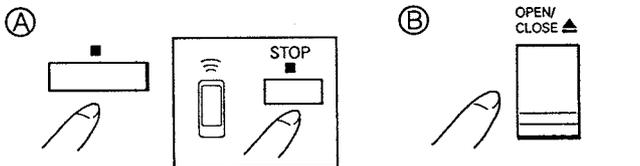

- (A) During stop mode, press **STOP**.
- (B) When the disc tray is ejected, the program contents will be cleared.

### To erase a program

 


During program mode, press **CLEAR**. The last program step is erased and the contents of the previous program step are displayed.

#### NOTE:


Contents of a program can be erased during playback as well. However, tracks preceding the currently playing track cannot be erased in this way.

### To check the program contents

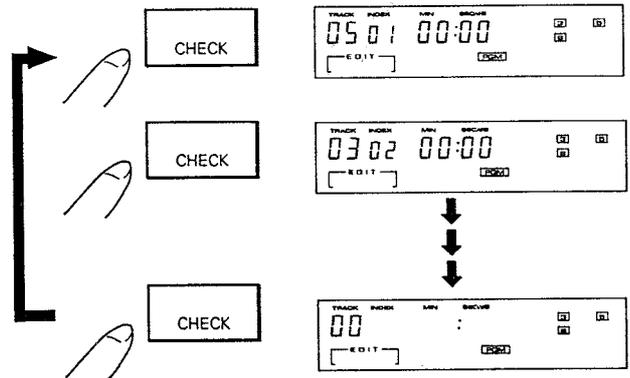


1. With the player in the program stop mode, press **CHECK**.
  - Each time the button is pressed, the programmed tracks will be displayed in the order they were programmed.
2. After confirming the last program step, the track number display will show "00".
3. When **CHECK** is pressed again, the display will return to that shown in step 1.

### To modify the program contents

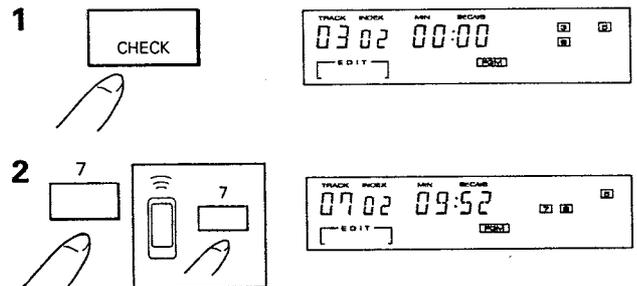

1. Press **CHECK** so that the program step to be corrected appears on the display.
2. Enter the new track No. with the digit buttons. For example, the programmed track No. 3 in step 2 is changed to track No. 7, using the **7** button.
  - Repeat steps 1 and 2 to change other tracks as desired.

## CONVENIENT OPERATION FOR RECORDING

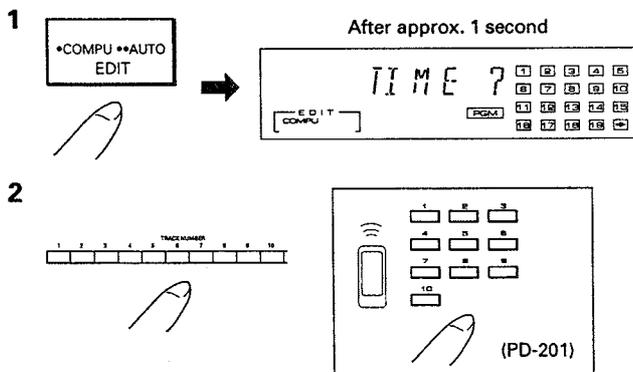

With this function, tracks are automatically programmed for both sides of the tape.

#### COMPU PROGRAM EDIT

The player automatically rearranges the order in which tracks are played back so that their total playing time becomes the specified playing time as near as possible.

#### AUTO PROGRAM EDIT

Tracks are selected within the designated time, starting from the first track and progressing in order.

#### 1 Select the Compu Program Edit mode or Auto Program Edit mode with COMPU/AUTO EDIT.

**To enter the Compu Program Edit mode:** Press the button once. "COMPU" appears on the display. After approximately 1 second "TIME?" appears on the display.

**To enter the Auto Program Edit mode:** Press the button twice. "AUTO" appears on the display. After approximately 1 second "TIME?" appears on the display.

## CONVENIENT OPERATION FOR RECORDING

To program all tracks on the disc: press the button once and do not perform step 2 below.  
In about three seconds, the player will automatically select the tape length (46, 60 or 90 minutes) which will allow recording of all tracks on the disc, then program the tracks.

### 2 Designate the length of tape to be used.

 
#### When the digit buttons are used:

Press the digit buttons to set the length (time) of the tape. Press the 10's digit button and 1's digit button sequentially. (To enter 9 minutes or less, press **[10]** and then the corresponding digit button.)

#### When the track search buttons are used:

Press **[<<<]** or **[>>>]** to set the length (time) of the tape.

- Each time the buttons are pressed, the time setting will change in the following order:




- The displayed time is memorized and the player starts calculation by pressing COMPU/AUTO EDIT or if other time setting is not selected within 3 seconds.


Example: The tape playing time 46 minutes is selected.

#### COMPU PROGRAM EDIT

 Side A




Side B

 


#### AUTO PROGRAM EDIT

 Side A



Side B

 

#### To confirm the programmed results:

After completion of programming, press COMPU/AUTO EDIT; each time the button is pressed, the program results will be alternately displayed for tape side A and B.

#### NOTES:

- Up to 24 steps can be programmed.
- With discs contained 24 tracks or more, programming may not be correctly performed.
- If the selected time is too short for any track to be programmed, programming cannot be performed.
- If you wish to enter the time with the digit buttons after the time is already entered with **[<<<]** or **[>>>]** in step 2, press **[>10]**. The digit buttons can now be operated.
- If the disc is in the player, the contents of the Compu program edit are not cleared even when the power is turned off. However, if the power is turned off with an audio timer or by unplugging the power cord, the program contents will be erased.

## TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used.

If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
Disc tray is not expelled when OPEN/CLOSE is pressed.	<ul style="list-style-type: none"> <li>Power plug is disconnected from outlet.</li> <li>The POWER switch is OFF (STANDBY).</li> </ul>	<ul style="list-style-type: none"> <li>Connect plug to amplifier or wall outlet.</li> <li>Press the POWER switch ON.</li> </ul>
When playback is started, it stops immediately. Pauses or stops during playback.	<ul style="list-style-type: none"> <li>Disc is loaded upside down.</li> <li>Smudges etc., on the disc.</li> </ul>	<ul style="list-style-type: none"> <li>Load the disc correctly with the label side UP.</li> <li>Clean the smudges from the disc and then play it again.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>Output cables are connected incorrectly or loosely.</li> <li>Incorrect operation of stereo amplifier.</li> <li>Pin plugs and/or amplifier terminals are dirty.</li> <li>Player is in pause mode.</li> </ul>	<ul style="list-style-type: none"> <li>Connect properly.</li> <li>Check the settings of amplifier switches and sound volume controls.</li> <li>Clean away dirt.</li> <li>Press the PLAY button.</li> </ul>
Sound is distorted, noise is output.	<ul style="list-style-type: none"> <li>Incorrect connections.</li> <li>Pin plugs and/or amplifier terminals are dirty.</li> <li>Interference is being picked up from a TV set.</li> </ul>	<ul style="list-style-type: none"> <li>Connect to amplifier's AUX or CD terminals. Do not connect to PHONO terminals.</li> <li>Clean away dirt.</li> <li>Switch OFF TV set, or move player away from TV set.</li> </ul>

## TROUBLESHOOTING

Symptom	Cause	Remedy
With certain discs, loud noise is produced, or play stops.	<ul style="list-style-type: none"> <li>● Disc has bad scratch or warp.</li> <li>● Disc is extremely dirty.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace the disc.</li> <li>● Clean disc.</li> </ul>
The picture of the TV screen is fluctuated or FM broadcast has noise interference.	<ul style="list-style-type: none"> <li>● Interference is being picked up from the CD player.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn off POWER of the player, or move the player away from TV or tuner.</li> </ul>
Remote control will not function.	<p>(PD-201 only)</p> <ul style="list-style-type: none"> <li>● Dead batteries.</li> <li>● Too far from player or wrong angle.</li> </ul> <ul style="list-style-type: none"> <li>● Obstruction between player and remote control unit.</li> </ul> <p>(PD-101 and U.S. and Canadian models of the PD-201 only)</p> <ul style="list-style-type: none"> <li>● Control cord is not connected.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace batteries.</li> <li>● The distance between remote control unit and player should be no more than about 7 meters. The operational angle against the front panel is within 30° from right or left end of player.</li> <li>● Relocate remote control unit or remove obstruction.</li> </ul> <ul style="list-style-type: none"> <li>● Connect control cord properly (see page 7).</li> </ul>

## SPECIFICATIONS

### 1. General

Type .....	Compact disc digital audio system
Power requirements	
European model .....	AC 220 - 240 V, 50/60 Hz
U.K. and Australian models .....	AC 220 - 240 V, 60 Hz
U.S. and Canadian models .....	AC 120 V, 60Hz
Other models .....	AC 110 - 127/220 - 240 V (Switchable), 50/60 Hz
Power consumption	
U.S. and Canadian models .....	12 W
Other models .....	13 w
Operating temperature .....	+5°C - +35°C +41°F - +95°F
Weight .....	3.5 kg (7 lb, 12 oz)
External dimensions	
U.S., Canadian, U.K. and European models .....	420(W) X 276(D) X 101(H) mm 16-9/16(W) X 10-7/8(D) X 4(H) in
Other models .....	420(W) X 276(D) X 96(H) mm 16-9/16(W) X 10-7/8(D) X 3-3/4(H) in

### 2. Audio section

Frequency response .....	2 Hz - 20 kHz
S/N ratio	
U.S. and Canadian models of PD-101 .....	98 dB or more (EIAJ)
Other models .....	102 dB or more (EIAJ)
Dynamic range .....	96 dB or more (EIAJ)
Harmonic distortion .....	0.003% or less (EIAJ)
Output voltage .....	2.0V
Wow and flutter .....	Limit of measurement (±0.001% W.PEAK) or less (EIAJ)
Channels .....	2-channel (stereo)

### 3. Output terminal

Audio line output jacks  
Control input/output jacks (available with the PD-101 and U.S. and Canadian models of the PD-201 only; Not available with models for military zones (multi-voltage types))  
CD-DECK SYNCHRO jack  
Headphone jack (with volume control)

### 4. Accessories

● Remote control unit (PD-201 only) .....	1
● Size AAA/R03/dry batteries (PD-201 only) .....	2
● Control cord (provided with PD-101 and U.S. and Canadian models of PD-201 only; Not available with models for military zones (multi-voltage types)) .....	1
● Output cable .....	1
● Operating instructions .....	1

#### NOTE:

*Specifications and design subject to possible modification without notice, due to improvements.*

Published by Pioneer Electronic Corporation.  
Copyright © 1992 Pioneer Electronic Corporation.  
All rights reserved.

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

**PIONEER ELECTRONICS [USA] INC.** 2265 East 220th Street, Long Beach, California 90810, U.S.A.  
P.O. BOX 1720, Long Beach, California 90801, U.S.A.

**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3, Canada

**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium, TEL: 03/750.05.11

**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911