


**TEAC.**

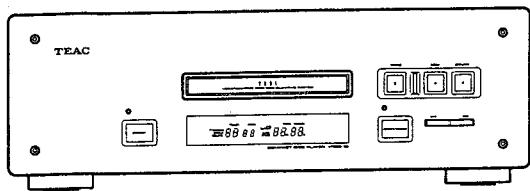

---

**SERVICE MANUAL**

---

**VRDS-10**

**Compact Disc Player**

---



# 1 SAFETY INFORMATION


## SAFETY INFORMATION

This product has been designed and manufactured according to FDA regulations "title 21, CFR, chapter 1, subchapter J, based on the Radiation Control for Health and Safety Act of 1968", and is classified as class 1 laser product. There is not hazardous invisible laser radiation during operation because invisible laser radiation emitted inside of this product is completely confined in the protective housings.


The label required in this regulation is shown ①.

### CAUTION

- If you remove the above-mentioned housings under the operating state of the product, there is a possibility of human access to the invisible laser radiation emitted from the optical pickup.
- Pay careful attention, not to let the invisible laser beam enter into your eyes.
- If you find a troubled state of the laser diode, change to the specified new optical pickup.
- If you find a troubled state of safety interlock parts, change to the same type parts described in parts list.

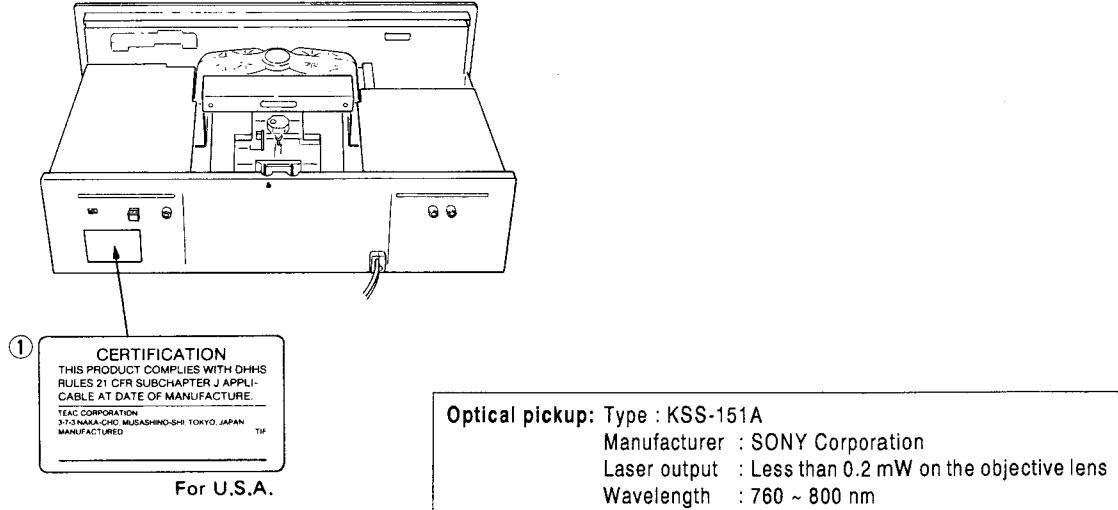

### • CAUTION • ACHTUNG • OBSERVERA • ADVARSEL

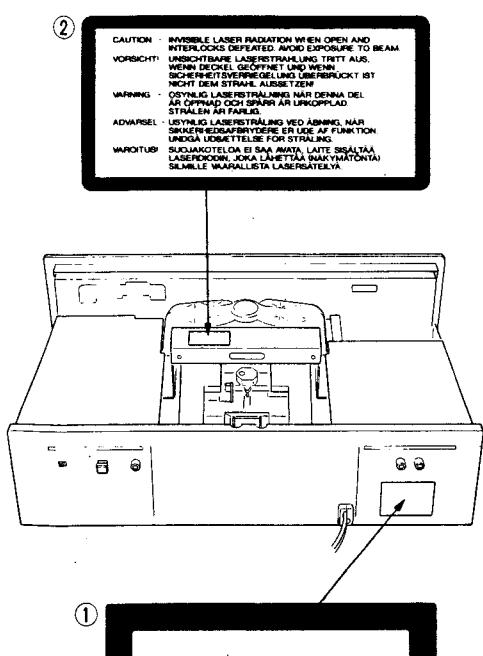

① THIS LABEL IS ATTACHED TO THE PLACE AS ILLUSTRATED TO INFORM THAT THE APPARATUS CONTAINS A LASER COMPONENT.

① DIESE AUFKLEBEMARKE IST AN DEM IN DER ABBILDUNG GEZEIGTEN ORT ANGEBRACHT UM DARAUF HINZUWEISEN, DASS IM INNERN DES GERÄTS EINE LASER-KOMPONENTE BEFINDET.

① PÅSKRIFTEN SITTER PÅ APPARATEN SOM VISAS SOM UPPMANING OM ATT APPARATEN OMFATTAR EN INBYGGD LASERKOMPONENT.

① DETTE MÆRKAT ER ANBRAGT SOM VIST I ILLUSTRACTIONEN FOR AT ADVARE BRUGEREN OM AT APPARATET INDEHOLDER EN LASERKOMPONENT.

② DETTE MÆRKAT ER SOM VIST PÅ ILLUSTRACTIONEN ANBRAGT PÅ INNERSIDEN AF TOPDÆKSLET FOR AT ADVARE BRUGEREN OM AT YDERLIGERE FREMTRÆNGEN VIL VÆRE FORBUNDEN MED FARE FOR AT UDSAETTE SIG FOR LASERSTRÅLING.

ADVARSEL – BETJENING AF ANDRE KONTROLLER OG REGULATORER ELLER BENYTTELSE AF ANDRE FREMGANGSMÅDER END BESKRIVET HERI ER FORBUNDEN MED FARE FOR UDSAETTELSE FOR LASERSTRÅLING.

VARNIG: APPARATEN INNEHÄLLER LASER KOMPONENT MED STRÅNING ÖVERSTIGANDE KLASSE 1

"ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING NAR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGA UDSAETTELSE FOR STRÅLING"

"VAROITUS! SUOJAKOTELOA EI SAA AVATA LAITE SISÄLTÄÄ LASERDIODIA, JOKA LÄHETTÄÄ (NÄKYMÄTÖNTÄ) SILMILLE VAARALLISTA LASERSÄTEILYÄ".

## 2 SPECIFICATIONS

### 仕様

#### AUDIO

<b>Number of Channels</b>	2
<b>Frequency Response</b>	1 - 20,000Hz ± 0.3dB
<b>Signal to Noise Ratio</b>	Better than 110dB (1kHz)
<b>Dynamic Range</b>	Better than 99dB (1kHz)
<b>Harmonic Distortion</b>	0.0013% (1kHz)
<b>Wow and Flutter</b>	Unmeasurable (Quartz accuracy)
<b>Channel Separation</b>	Better than 110dB (1kHz)
<b>Output Analog</b>	2.2Vrms
<b>Digital</b>	0.5Vp-p/75 Ω (Coaxial) -15dBm -- 21dBm (Optical)
<b>D/A Converter</b>	Bitstream Conversion
<b>Digital Filter</b>	8-times oversampling 20-bit digital filter
<b>Analog Filter</b>	3rd order Butterworth filter

#### PICK UP

<b>Type</b>	Optical 3-Beam laser pickup
<b>Objective Lens</b>	2-dimensional parallel drive
<b>Laser Type</b>	GaAlAs type semiconductor laser
<b>Wave Length</b>	780nm

#### SIGNAL FORMAT

<b>Sampling Frequency</b>	44.1kHz
<b>Quantization Bit</b>	16-bit linear/channel
<b>Channel Bit Rate</b>	4.3218Mb/sec
<b>Channel Modulation Code</b>	EFM (Eight to Fourteen Modulation)
<b>Error Correction</b>	CIRC (Cross Interleave Reed Solomon Code)

#### GENERAL

<b>Power Requirements</b>	120/230V AC, 50-60Hz (General Export Model)
	120V AC, 60Hz (U.S.A./Canada Model)
	230V AC, 50Hz (Europe Model)
	240V AC, 50Hz (U.K./Australia Model)
<b>Power Consumption</b>	22 watts
<b>Dimensions (W × H × D)</b>	442 × 149 × 331mm (17-3/8" × 5-7/8" × 13-1/16")
<b>Weight (net)</b>	10.0kg (22-1/16 lbs)
<b>Standard Accessories</b>	Wireless Remote Control Unit (RC-481), RCA pin-plug cord, Battery (SUM-3, "AA", "R6" type) × 2, Lock Plate

●Improvements may result in specification or feature changes without notice.

#### 〈オーディオ〉

オーディオチャンネル数	2チャンネル
周波数特性	1~20,000Hz ± 0.3dB
SN比	110dB以上(1kHz)
ダイナミックレンジ	99dB以上(1kHz)
高調波歪率	0.0013%以下(1kHz)
ワウ・フロッター	測定限界値以下(水晶発振精度)
チャンネルセパレーション	110dB以上(1kHz)
アナログ出力	2.2Vrms
デジタル出力	0.5Vp-p/75 Ω (COAXIAL) -15~21dBm (OPTICAL)
D/Aコンバーター	ビットストリーム
デジタルフィルター	8倍オーバーサンプリング
	20ビットデジタルフィルター
アナログフィルター	3次バターワースフィルター

#### 〈ピックアップ〉

方式	対物レンズ駆動、光学式3ビーム
対物レンズ駆動方式	2次元平行駆動
光源	半導体レーザー
波長	780nm

#### 〈信号フォーマット〉

標本化周波数	44.1kHz
量子化ビット数	16ビット・リニア/チャンネル
伝送レート	4.3218Mb/sec
変調方式	EFM
エラー訂正方式	CIRC

#### 〈一般〉

電源	100V AC 50-60Hz
消費電力	18W
外形寸法	442 × 149 × 331mm (W × H × D)
重量	10kg

#### 付属品

- ワイヤレスリモコン RC-481
- ピンプラグコード
- 乾電池(単3、SUM-3) × 2
- 取扱説明書


\*仕様および外観は、改善のため予告なく変更することがあります。

### 3 CASE AND FRONT PANEL REMOVAL

外装部品の外し方

Disassemble in number-order

番号順に外してください

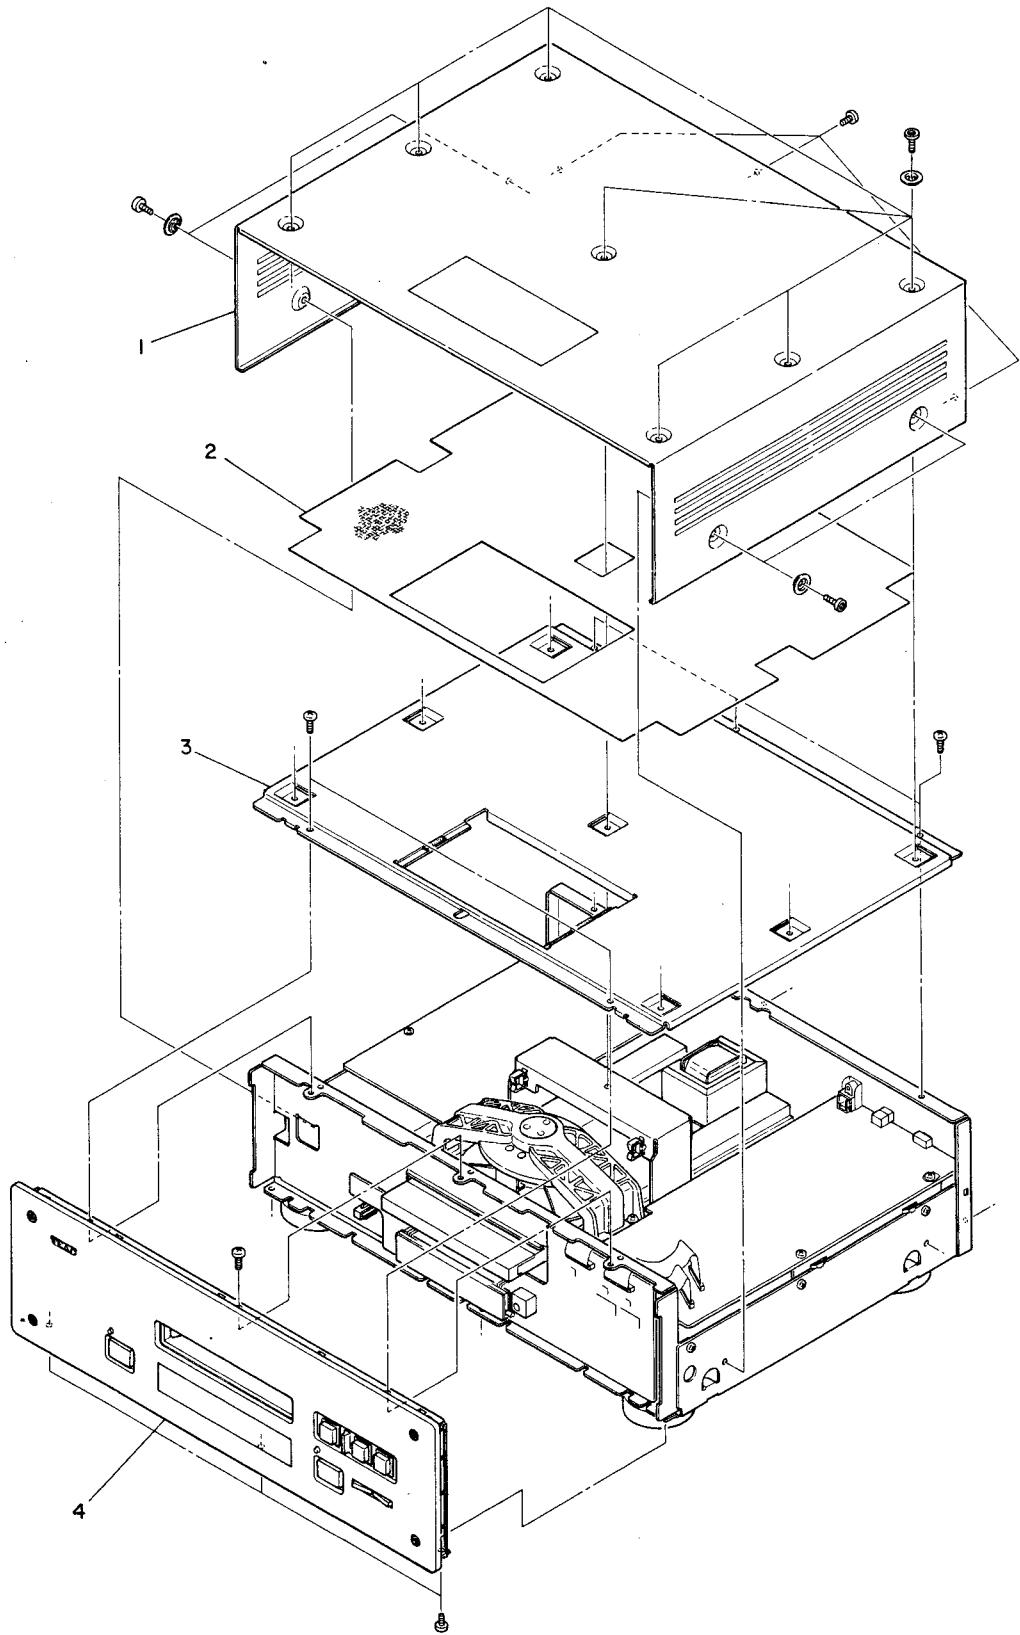

## 4 ADJUSTMENT AND CHECKS

### 調整と確認

#### 1. Replacement of the pickup assembly

- Before removing the pickup assembly be sure to solder -bridge where indicated in the inset (Fig. 4-1) to prevent the laser diode from being electrostatically damaged. After replacing the pickup assembly, be sure to unsolder the antistatic bridge. Or else the laser diode does not function.
- Before servicing the pickup assembly be sure to prevent electrostatic-inducer destruction by grounding not only test equipment in use but also yourself as shown in Fig. 4-2.
- \* Electrostatic charge drastically shortens the operating life of the laser diode or possibly results in its destruction.
- During the transportation, mounting and dismounting of the assembly, support with your fingers at points A and B as shown in Fig. 4-3. Be particularly careful not to touch the actuator, photosensor and LD plate and do not apply force to them.
- Don't touch the plated portion of the flat cable end directly with fingers.
- Use care not to break the flat cable.
- Soldering must be done quickly at less than 30W, 320°C.
- Don't disassemble the pickup ass'y.
- Don't apply shock to the pickup ass'y.
- Don't place the assembly in a place subject to excessive dust, heat or moisture.

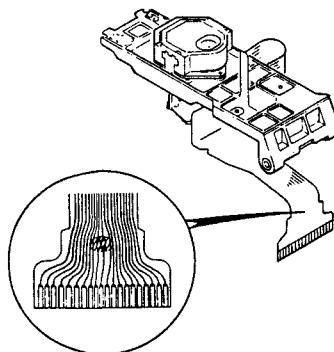


Fig. 4-1

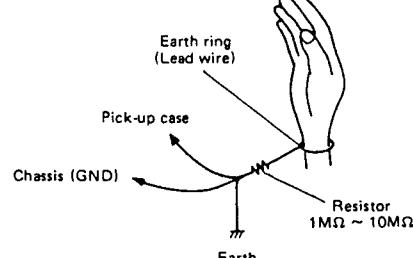


Fig. 4-2

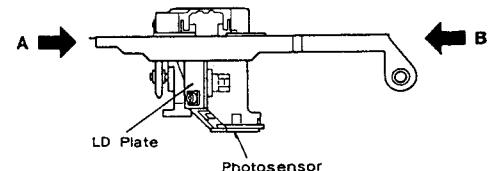


Fig. 4-3

#### 2. Objective

- Laser beams are similar to infrared rays. Don't look at the beams directly and keep your eyes at least 30cm away from them.
- Don't touch the objective with fingers.
- If objective becomes dirty, playback will deteriorate. To clean the objective, moisten a good cleaning tissue, such as made by KODAK, in isopropyl alcohol and wipe the objective gently. Wipe off and excess fluid with a dry cleaning tissue.

#### 2. 対物レンズについて

- レーザー光は近赤外線の為目視は困難です。目の安全の為、目をレンズから30cm以上離してください。
- レンズには手を触れないでください。
- レンズに汚れが付くと再生能力が低下しますので、次のように清掃してください。  
レンズクリーニングペーパー (KODAK社製など) に、イソプロピルアルコール (I.P.A.) を浸して清掃をし、液が残らないように必ず拭きとってください。


### 3. Laser diode check

[Iop (Intensity Optimum) check]

Connect a DC voltmeter to both ends of **R407** on SERVO PCB. Measure the DC voltage while playing a disc to check that the measured value does not exceed the Iop value indicated on the pickup by **10mA**. ( $I = \text{measured value} / 22$ ) If the measured value is higher than that indicated, the pickup may be damaged.

\* Pay special attention that parts are not damaged by static electricity.

● How to read numbers on sticker attached to the pickup  
(Example)

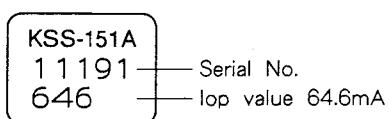

### 3. レーザーダイオードの破損チェック

[Iop (Intensity Optimum) 値確認]

(ピックアップ交換時には必ず実行のこと)

DC ボルトメーターを SERVO PCB の R407 の両端に接続する。PLAY 中の直流電圧を測定し、その電圧から電流換算した値 ( $I = \text{測定電圧} / 22$ ) がピックアップに表示してある Iop 値より **10mA** 以上増加していないことを確認する。増加の場合は、破損している可能性がある。

\* 静電破壊に十分注意すること。

● ピックアップ添付シールの読み方

(例)

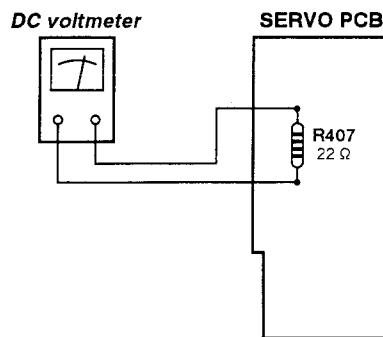
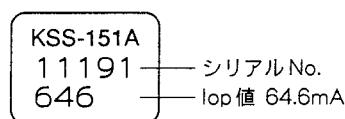


Fig. 4-4

### 4. Anti-shock bracket

To protect the laser pickup mechanism from shocks and movement during transit, it is secured by a special anti-shock bracket. Before starting operation, be sure to release this bracket, which is accessed from the bottom.

### 4. 防振装置について

本機は輸送時の振動からピックアップを守るため、防振装置で固定してあります。本機を動作させる場合は、必ず防振装置を解除してください。

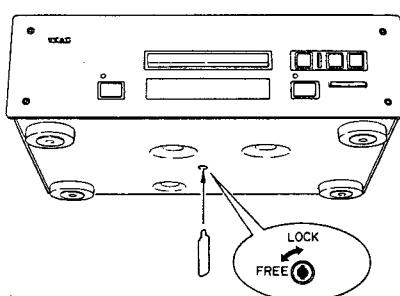


Fig. 4-5

## 4-1 SERVO ADJUSTMENT

TEST DISC: YEDS-18 or MCD-111 (Except 4-1-6 and  
4-1-7)

## 4-1 サーボ調整

テストディスク: YEDS-18またはMCD-111 (4-1-6および  
4-1-7を除く)


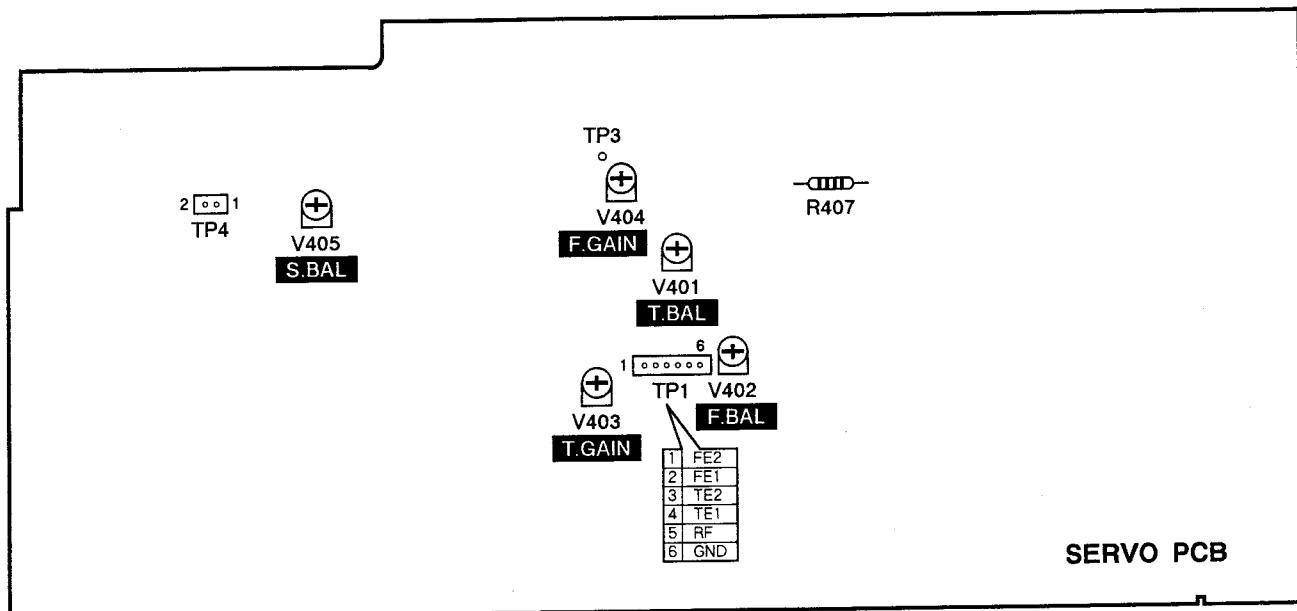


Fig. 4-6

### VOLTAGE CONVERSION (For general export models)

Be sure to remove the power cord from the AC outlet before repositioning the voltage converter switch.

1. Locate the voltage selector on the rear panel.
2. Using a flat-bladed screwdriver, set to the appropriate 230 V or 120 V position according to your area.

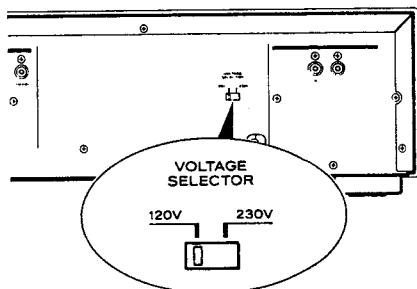

#### 4-1-1 Checking the pickup actuator operation

Before loading the disc, turn the power ON and check that the pickup actuator moves up and down three times. (If the pickup is not at inside on the disc, perform the above operation after moving the pickup to the inside.)

#### 4-1-2 Sled balance adjustment

1. Adjust **V405 (S.BAL)** for 0V potential between **TP4 pin 1** and **TP4 pin 2 (GND)**.

#### 4-1-3 Tracking balance adjustment

1. Connect the oscilloscope between **TP1 pin 4 (TE1)** and **TP1 pin 6 (GND)**, and press the **SEARCH** ( $\blacktriangleleft$  or  $\triangleright$ ) button.
2. Adjust **V401 (T.BAL)** so that the upper and lower amplitudes of the tracking error signal waveform become equal above and below 0V.

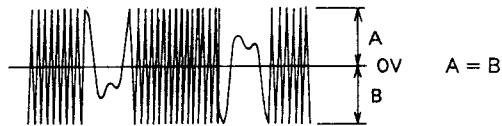


Fig. 4-7

#### 4-1-4 Focus balance adjustment

1. Connect the oscilloscope between **TP1 pin 5 (RF)** and **TP1 pin 6 (GND)**.
2. In the play mode, and adjust **V402 (F.BAL)** so that the waveform on the oscilloscope becomes maximum.

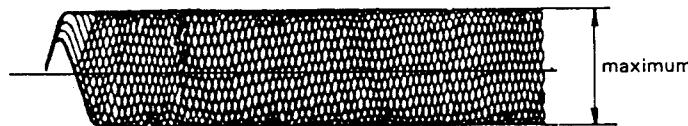


Fig. 4-8

#### 4-1-5 Focus offset check

1. After adjusting the focus balance, stop the player. Check for an offset voltage of **50mV or less** at **TP3**. If reading values are out of spec, adjust **V402 (F.BAL)** again.

#### 4-1-1 ピックアップアクチュエーター動作チェック

電源ON時ピックアップアクチュエーターが3回上下動すること。(ピックアップが最内周にないときは、最内周に移動後上記動作すること。) ディスクは装着しない。

#### 4-1-2 スレッドバランス調整

1. **TP4の1番ピンとTP4の2番ピン(GND)**間に電位差が0Vになるように **V405 (S.BAL)**を調整する。

#### 4-1-3 トラッキングバランス調整

1. **TP1の4番ピン(TE1)**と**TP1の6番ピン(GND)**間にオシロスコープを接続し、**SEARCH**ボタン( $\blacktriangleleft$ または $\triangleright$ )を押す。
2. トラッキングエラー信号の波形が0Vを中心に振れるよう **V401 (T.BAL)**を調整する。

#### 4-1-4 フォーカスバランス調整

1. **TP1の5番ピン(RF)**と**TP1の6番ピン(GND)**間にオシロスコープを接続する。
2. PLAY状態でオシロスコープの波形が最大になるように **V402 (F.BAL)**を調整する。

#### 4-1-5 フォーカスオフセット確認

1. フォーカスバランス調整後STOP状態にして **TP3**のオフセット電圧が **50mV以下**であることを確認する。  
もし規格に入らない場合は再度 **V402 (F.BAL)**を調整する。

#### 4-1-6 Focus gain adjustment (Use YEDS-18)

1. Apply  $1.16\text{kHz}/3.5\text{Vp-p}$  to TP1 pin 1 (FE2) from an external OSC via  $100\text{k}\Omega$  resistor.
2. Adjust V404 (F.GAIN) so that phase at TP1 pin 2 (FE1) is  $90^\circ$  with respect to that of the external OSC during playback.

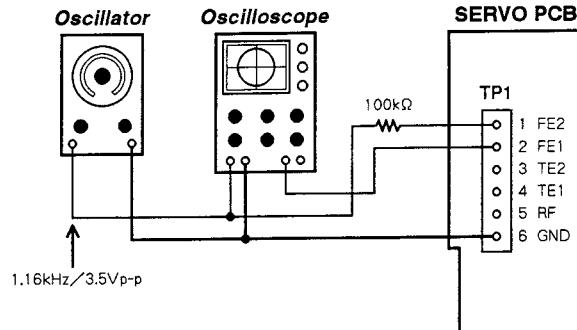


Fig. 4-9

#### 4-1-7 Tracking gain adjustment (Use YEDS-18)

1. Apply  $1.70\text{kHz}/4\text{Vp-p}$  to TP1 pin 3 (TE2) from an external OSC via  $100\text{k}\Omega$  resistor.
2. Adjust V403 (T.GAIN) so that phase at TP1 pin 4 (TE1) is  $90^\circ$  with respect to that of the external OSC during playback.

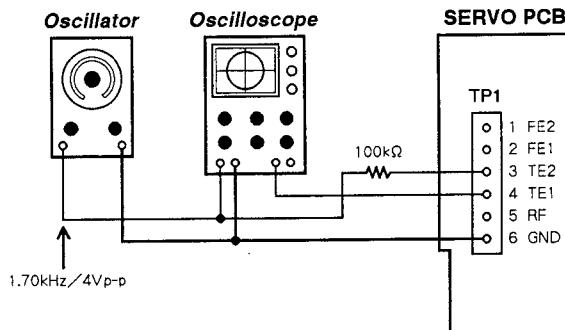


Fig. 4-10

#### 4-1-6 フォーカスゲイン調整 (YEDS-18使用)

1. 外部OSCより  $100\text{k}\Omega$  の抵抗を経由して  $1.16\text{kHz}/3.5\text{Vp-p}$  の信号を TP1 の 1 番ピン (FE2) に入力する。
2. プレイ状態で TP1 の 2 番ピン (FE1) と外部OSCとの位相が  $90^\circ$  になるように V404 (F.GAIN) を調整する。

#### 4-1-7 トラッキングゲイン調整 (YEDS-18使用)

1. 外部OSCより  $100\text{k}\Omega$  の抵抗を経由して  $1.70\text{kHz}/4\text{Vp-p}$  の信号を TP1 の 3 番ピン (TE2) に入力する。
2. プレイ状態で TP1 の 4 番ピン (TE1) と外部OSCとの位相が  $90^\circ$  になるように V403 (T.GAIN) を調整する。

## 4-2 AUDIO ADJUSTMENT オーディオ調整

ITEM 項目	DISC: YEDS-18 (MCD-111)		SPECIFICATIONS 規格	REMARKS 備考
	TRACK No. トラック	FREQUENCY 周波数		
1. Output level 出力レベル	2	1kHz	2.2 ± 0.3Vrms	
2. Channel level difference チャンネルレベル差	2	1kHz	1.0dB or less	
3. DC offset adjustment DC オフセット調整	17	1kHz	0 ± 5mV	Adjust V151 (Lch), V251 (Rch) on AUDIO PCB so that the offset voltage becomes 0mV. オフセット電圧が0mVになるようAUDIO PCBのV151 (Lch), V251 (Rch)を調整する。
4. Harmonic distortion 高調波歪率	2	1kHz	0.004 % or less	400Hz HPF in 20kHz LPF in
5. Frequency response 周波数特性	3~6	20Hz~20kHz	Within ± 1.0dB	reference level: 1kHz
6. S/N ratio S/N比	7		100dB or better	DIN AUDIO (Use SHIBASOKU 725 or equivalent)
7. Channel separation チャンネルセパレーション	8, 10	1kHz	95dB or better	DIN AUDIO
8. Emphasis effect エンファシス効果	13	16kHz	- 9.0 ± 1.0dB (YEDS-18) - 20 ± 1.0dB (MCD-111)	reference level: 1kHz


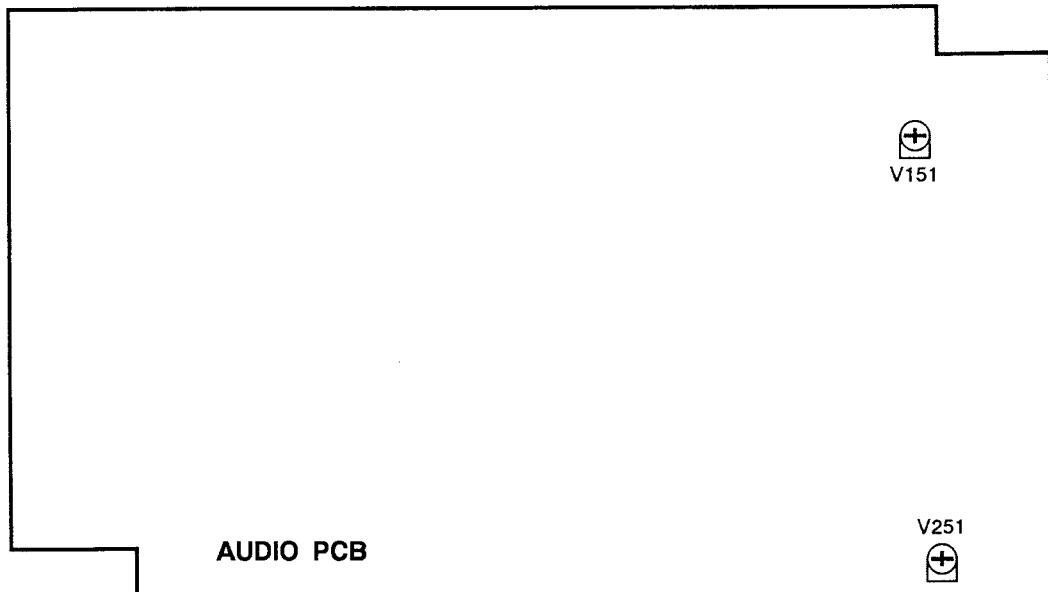


Fig. 4-11


## 5 IC BLOCK DIAGRAMS

IC ブロック ダイヤグラム


U121 SM5840AP

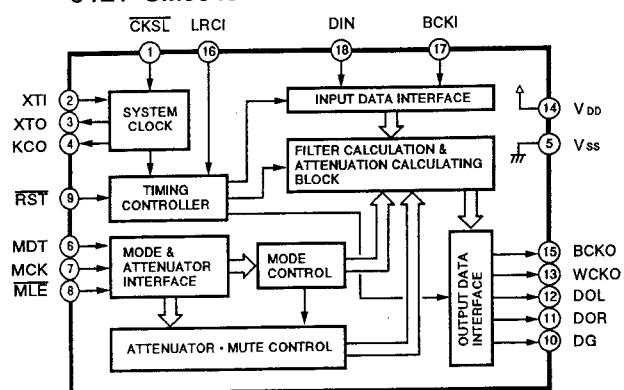


U151, 251 TDA1547

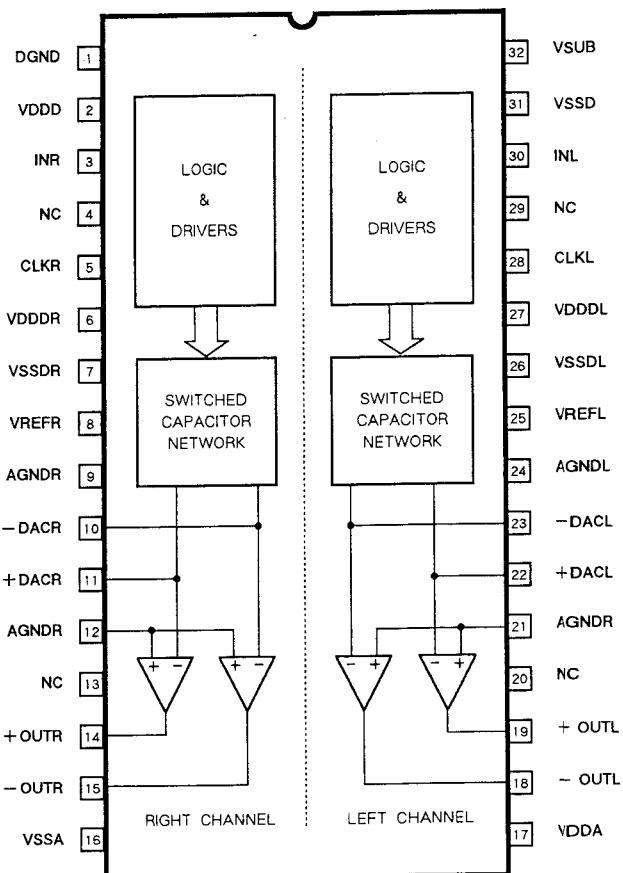


U122 SAA7350GP

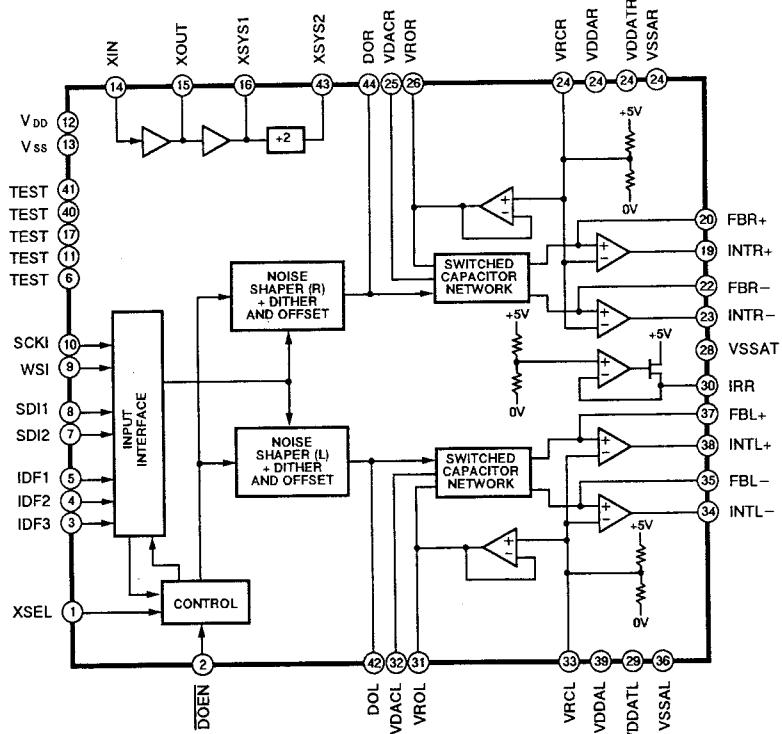


**U401 CXA1081S**

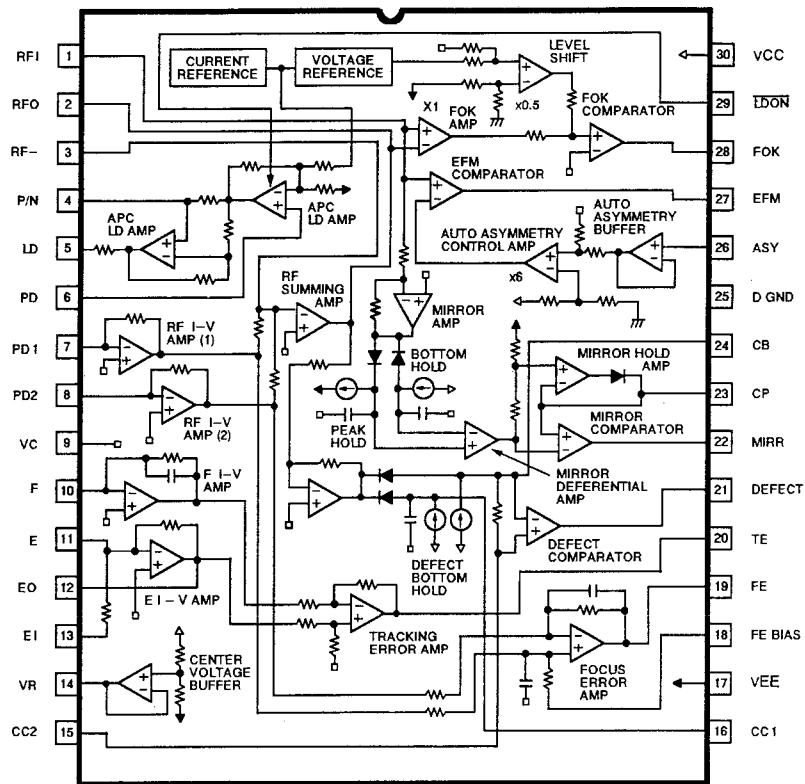


**U403 CXD2500AQ**

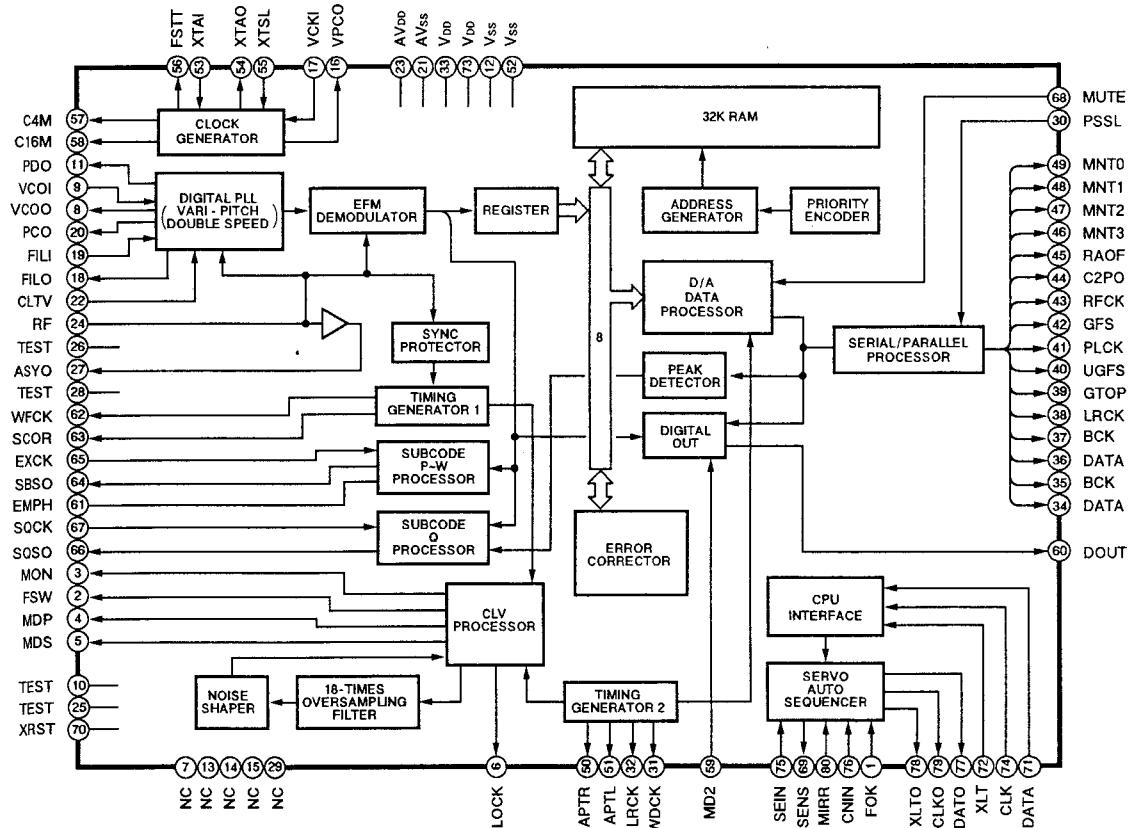


## U402 CXA1372S

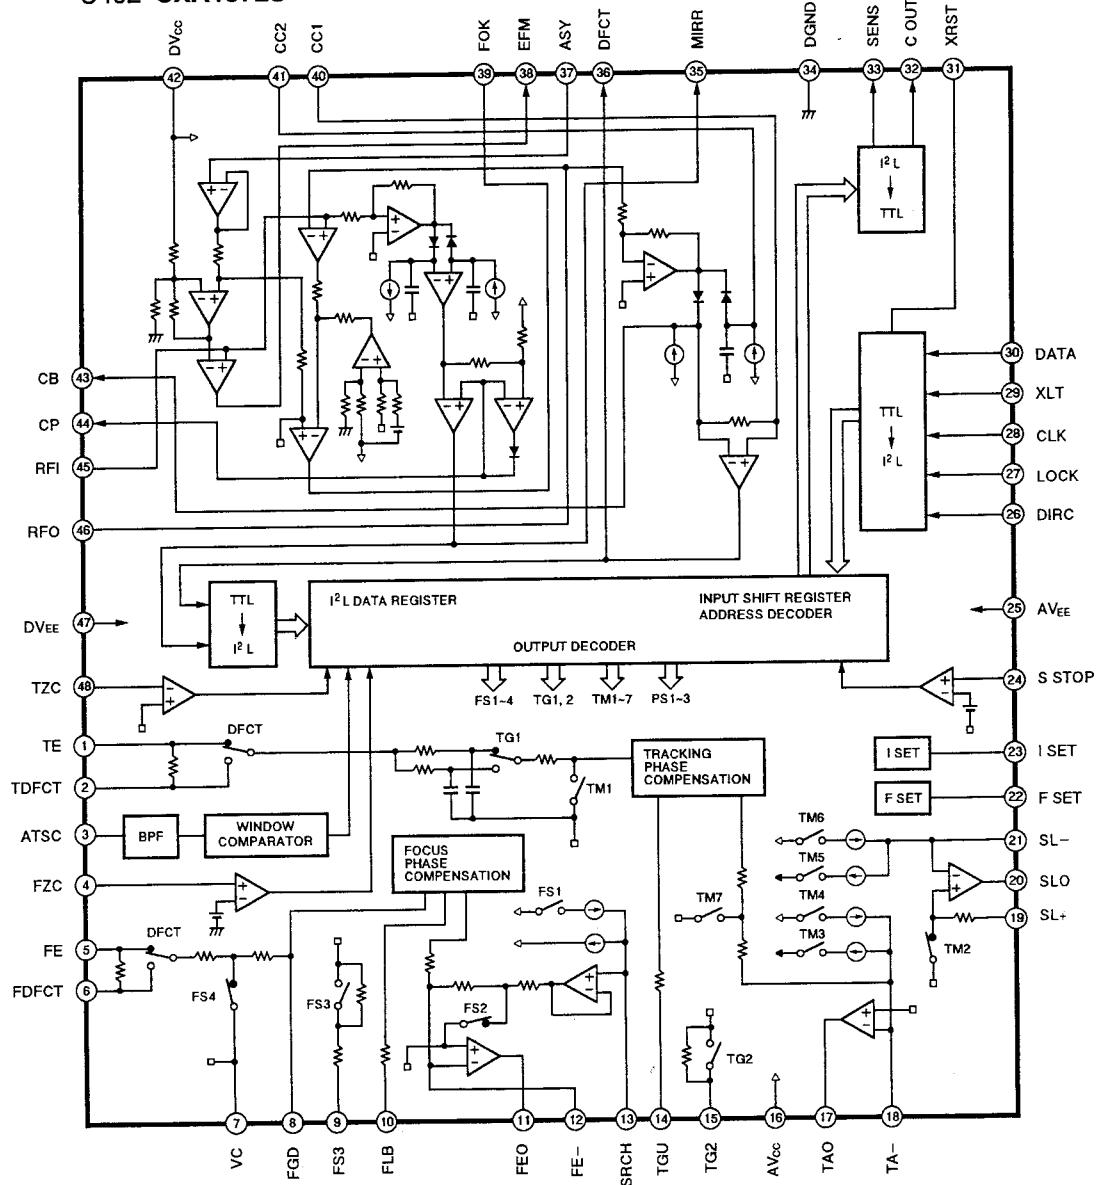


## U410 LB1649

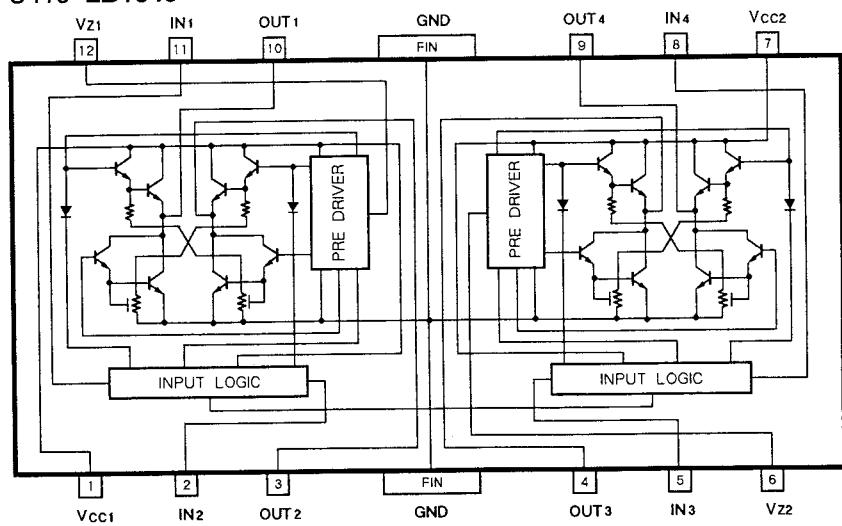

U491 uPD75212ACW

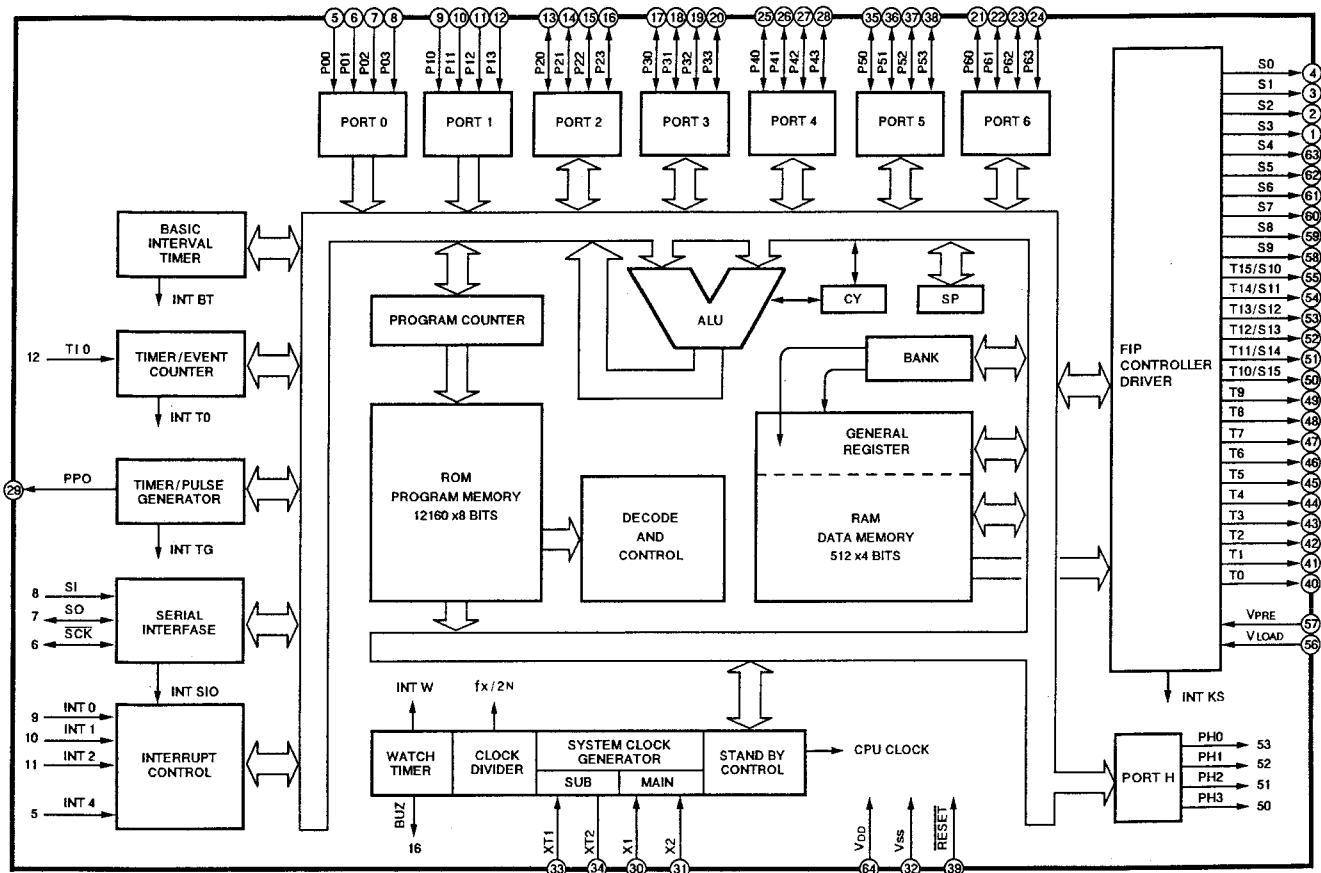

U501 uPD7566CS

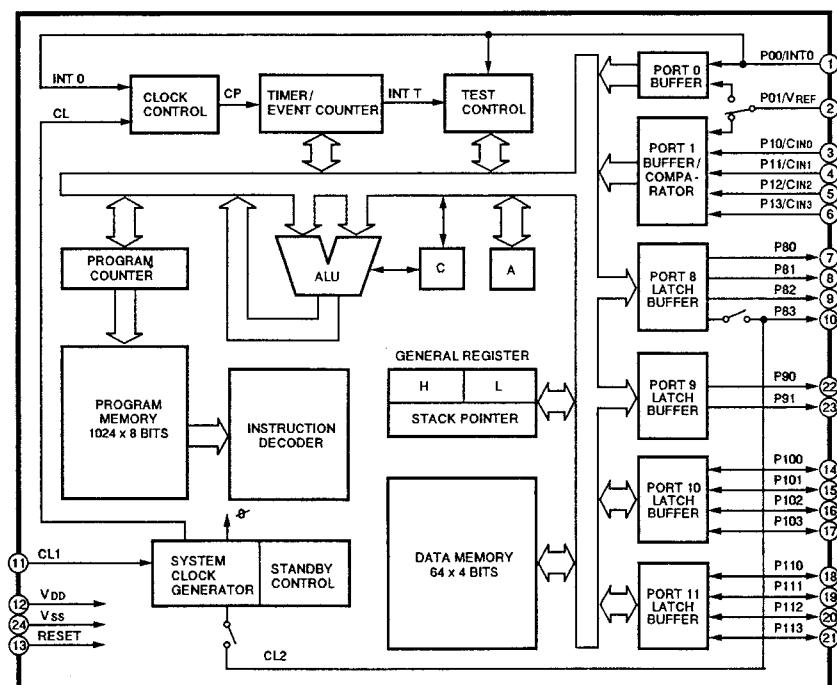

## PARTS LIST SECTION

### NOTES

- PC boards shown are viewed from parts side.
- Parts marked with \* require longer delivery time.
- The parts with no reference number or no parts number in the exploded views are not supplied.
- As regards the resistors and capacitors, refer to the circuit diagrams contained in this manual.
- △ Parts marked with this sign are safety critical components. They must be replaced with identical components - refer to the appropriate parts list and ensure exact replacement.
- Parts of [ ] mark can be used only with the version designated.  
[J]:JAPAN [US]:U. S. A. [C]:CANADA [GE]:GENERAL EXPORT  
[E]:EUROPE [UK]:U. K. [A]:AUSTRALIA  
[ETC]:GENERAL EXPORT, U. S. A. and CANADA


### 注 意

- プリント基板図は部品面が示されています。
- \*印の部品は納期が若干かかります。あらかじめご了承ください。
- 分解図に部番のない部品及び品番のない部品は供給しません。
- 標準の抵抗、コンデンサーは省略しております。回路図を参照してください。
- △印は安全重要部品です。交換する時は必ずティアック指定の部品を使用してください。
- 仕向先  
[J]:JAPAN [US]:U. S. A. [C]:CANADA [GE]:GENERAL EXPORT  
[E]:EUROPE [UK]:U. K. [A]:AUSTRALIA  
[ETC]:GENERAL EXPORT, U. S. A. and CANADA

## 6 EXPLODED VIEWS AND PARTS LIST

分解図とパーツリスト


EXPLODED VIEW-1

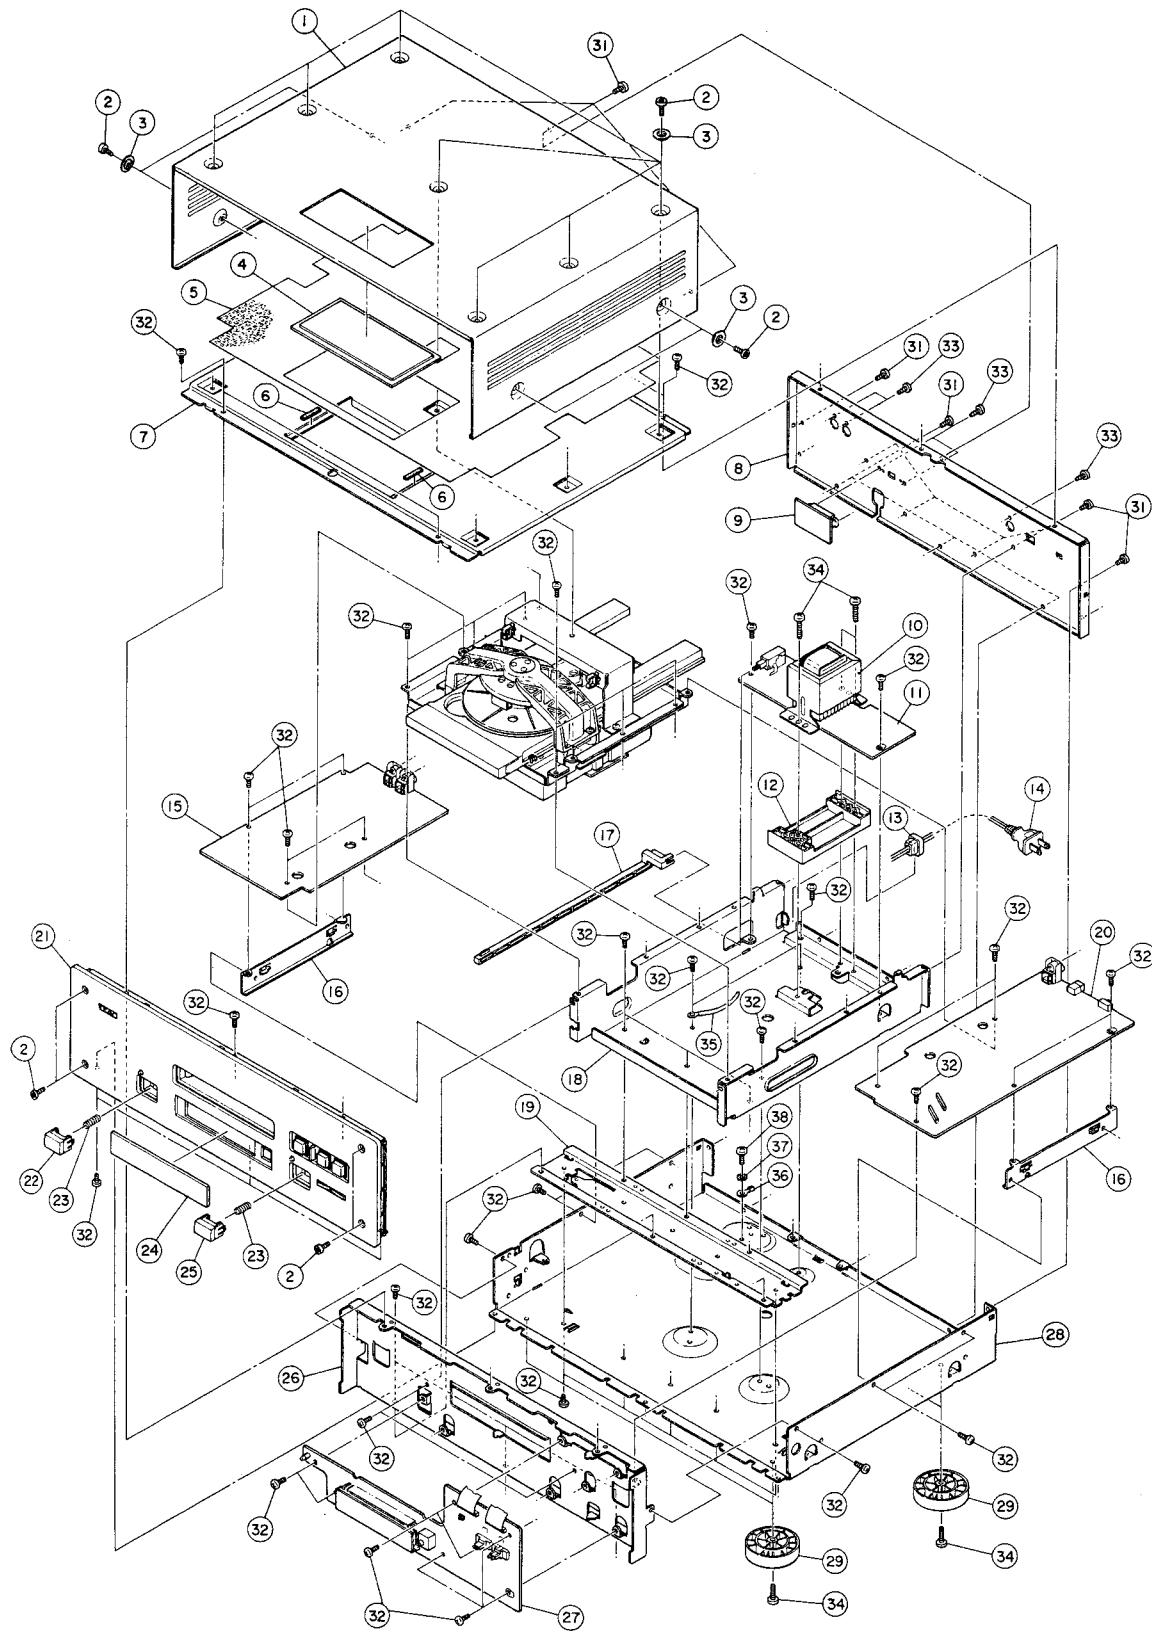

## EXPLODED VIEW-1

REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
I- 1	*5801533300	BONNET (A) [J,GE]	
	*5801533400	BONNET (B) [EXCEPT J,GE]	
I- 2	*5801532500	BOLT, HEXAGON SOCKET B [J,GE]	
	*5801539500	BOLT, HEXAGON SOCKET B(BLK)[EXCEPT J,GE]	
I- 3	*5801532900	COLLAR	
I- 4	*5801532600	BONNET WINDOW	
I- 5	*5801531500	BONNET CUSHION	
I- 6	*5801096900	RUBBER SHEET	
I- 7	*5801533200	TOP CHASSIS	
I- 8	*5801533000	REAR PANEL (A) [J,US,C,E,UK,A]	
	*5801533100	REAR PANEL (B) [GE,ETC]	
I- 9	*5200345600	VOLTAGE SELECTOR PCB ASSY [GE,ETC]	Refer to pages 24 and 26
I-10	△ 5320063300	POWER TRANSFORMER	Refer to pages 24 and 25
I-11	*5200345500	POWER PCB ASSY [J]	Refer to pages 24 and 25
	*5200345510	POWER PCB ASSY [US,C]	Refer to pages 24 and 25
	*5200345530	POWER PCB ASSY [GE,ETC]	Refer to pages 24 and 25
	*5200345540	POWER PCB ASSY [E]	Refer to pages 24 and 25
	*5200345550	POWER PCB ASSY [UK,A]	Refer to pages 24 and 25
I-12	*5801406000	TRANS BASE	
I-13	△ 5317003400	BUSHING, 2271 [EXCEPT C,ETC]	
	△ 5317005600	BUSHING, 2272 [C,ETC]	
I-14	△ 5350015600	AC CORD [J]	
	△ 5350017800	AC CORD, SPT-2 [US]	
	△ 5350017600	AC CORD, 3P [C,ETC]	
	△ 5350010800	AC CORD, SPT-1 [GE]	
	△ 5350017500	AC CORD, CLASS 2 [E]	
	△ 5128047000	AC CORD, BS [UK]	
	△ 5350018200	AC CORD, SAA [A]	
I-15	*5200345300	AUDIO PCB ASSY	Refer to pages 24 and 25
I-16	*5801531900	PCB ANGLE	
I-17	*5801532800	JOINT ROD	
I-18	*5801532000	CENTER CHASSIS	
I-19	*5801531600	CHASSIS ANGLE (B)	
I-20	*5200344700	SERVO PCB ASSY	Refer to pages 22 and 23
I-21	*5801529800	FRONT PANEL (A) ASSY [J,GE]	
	*5801529900	FRONT PANEL (B) ASSY [EXCEPT J,GE]	
I-22	*5801531000	BUTTON CAP (P) ASSY [J,GE]	
	*5801539600	BUTTON CAP (P) BLK ASSY [EXCEPT J,GE]	
I-23	*5801070200	POWER SPRING	
I-24	*5801532700	FL COVER	
I-25	*5801531100	BUTTON CAP (O/C) ASSY [J,GE]	
	*5801539700	BUTTON CAP (O/C) BLK ASSY [EXCEPT J,GE]	
I-26	*5801532200	FRONT CHASSIS	
I-27	*5200345400	KEY PCB ASSY	Refer to pages 22 and 23
I-28	-----	MAIN CHASSIS	
I-29	*5801414900	FOOT ASSY	
I-31	*5783693006	SCREW, BIND S-TITE M3X6 (NI BLK)	
I-32	*5783033006	SCREW, BIND S-TITE M3X6	
I-33	*5783543008	SCREW, BIND P-TITE M3X8 (NI BLK)	
I-34	*5783034020	SCREW, BIND S-TITE M4X20	
I-35	*5786713000	HARNESS CLIP	
I-36	*5786700600	EARTH LUG [C,ETC]	
I-37	*5785124000	WASHER, TOOTHED LOCK [C,ETC]	
I-38	*5783034006	SCREW, BIND S-TITE M4X6 [C,ETC]	


## EXPLODED VIEW-2

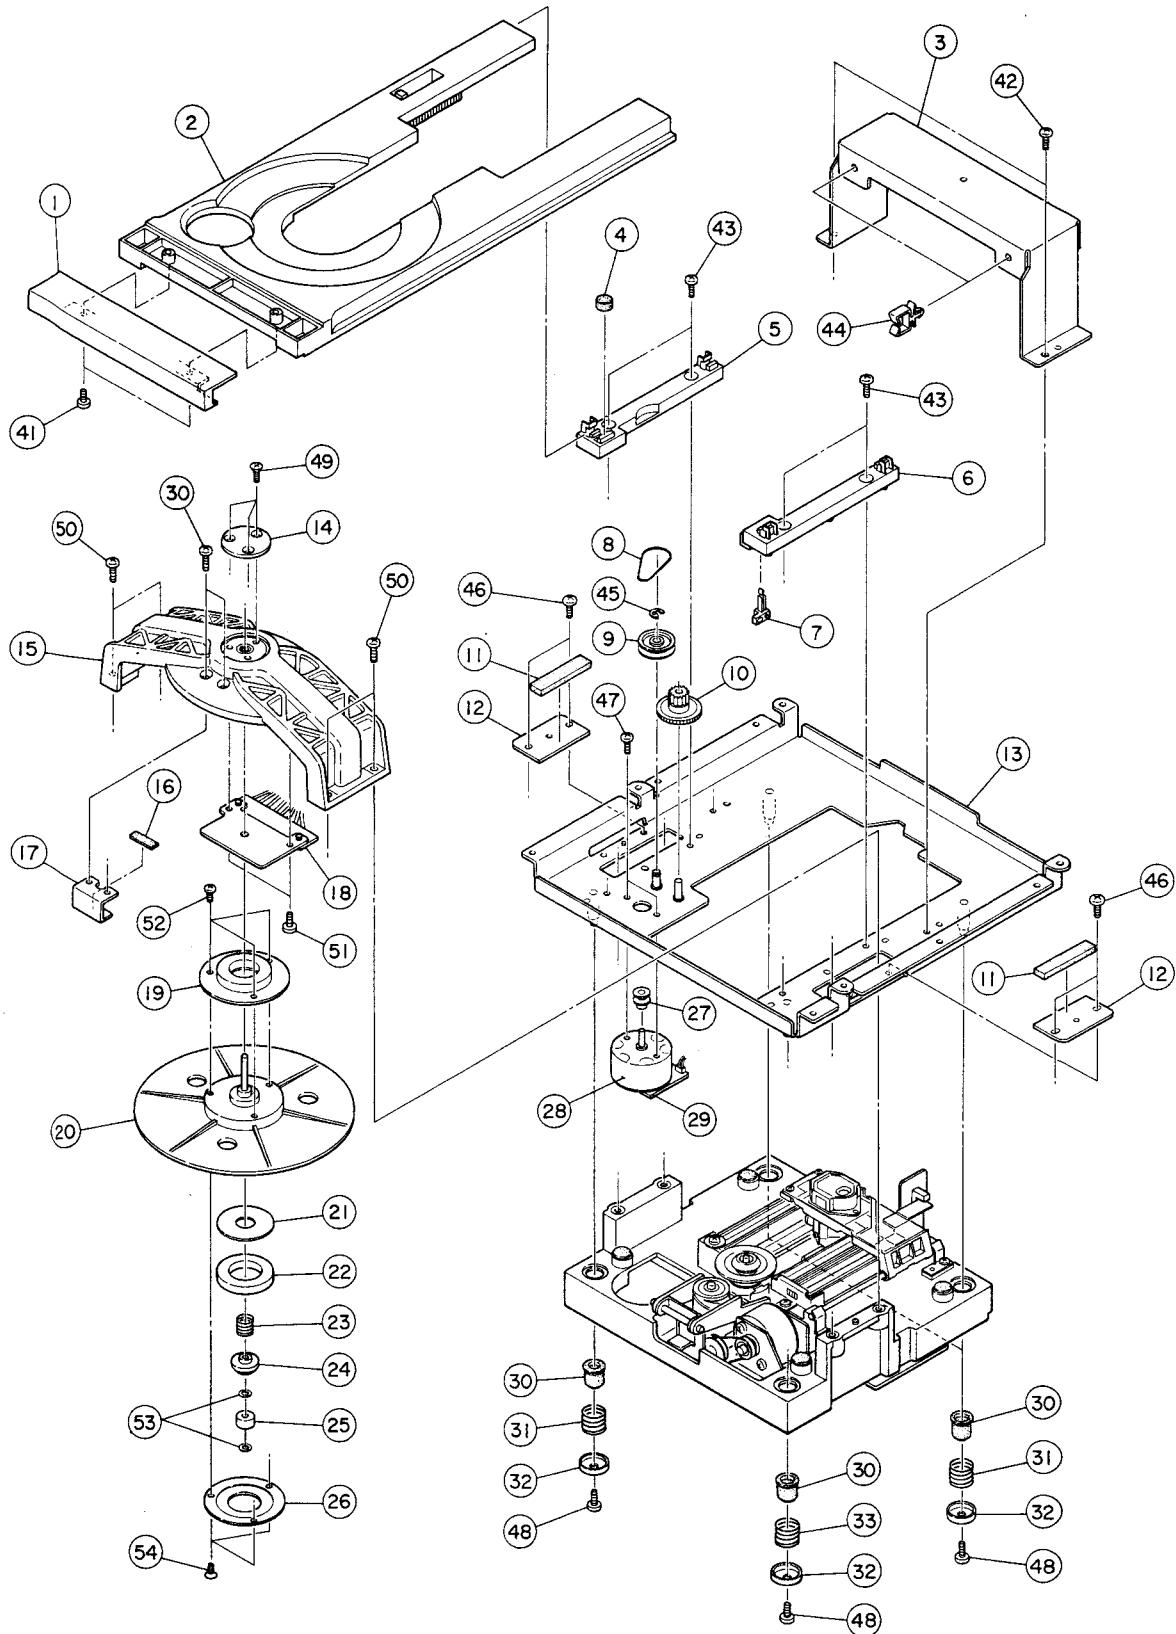

## EXPLODED VIEW-2

REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
2- 1	*5801532300	TRAY PANEL	
2- 2	*5801512600	TRAY (C)	
2- 3	*5801534000	TOP ANGLE	
2- 4	*5801132601	CUSHION	
2- 5	*5801203100	GUIDE (L)	
2- 6	*5801203001	GUIDE (R)	
2- 7	5301754000	SW, LEAF LSC-1220-IAU	
2- 8	5800979500	LOADING BELT	
2- 9	5800979400	GEAR (B)	
2-10	5800979300	GEAR (A)	
2-11	*5801497100	CUSHION	
2-12	*5801497000	STOPPER	
2-13	*5801531700	MECH BASE CHASSIS ASSY	
2-14	*5801535300	SPINDLE SUPPORT (G)	
2-15	*5801506800	HOUSING ASSY	
2-16	*5801096900	RUBBER SHEET	
2-17	*5801513200	ROTOR STOPPER	
2-18	*5801057510	COIL SUPPORT ASSY	
2-19	*5801117100	ROTOR MAGNET ASSY	
2-20	*5801507100	TURN TABLE ASSY	
2-21	*5801057000	CLAMPER YOKE	
2-22	*5801493500	MAGNET	
2-23	*5801096300	PRESSURE SPRING (C)	
2-24	*5801167701	CENTER CAP	
2-25	*5801056900	CENTER RING	
2-26	*5801057200	MAGNET HOLDER	
2-27	5800979200	MOTOR PULLEY	
2-28	5370009200	DC MOTOR, RF-500TB	
2-29	*5200344900	T-MOTOR PCB ASSY	
2-30	*5800846500	RUBBER BUSH	
2-31	*5800875001	FLOATING SPRING C	
2-32	*5800846700	SPRING SUPPORT	
2-33	*5801086601	FLOATING SPRING A	
2-41	*5783543008	SCREW, BIND P-TITE M3X8 (NI BLK)	
2-42	*5783033006	SCREW, BIND S-TITE M3X6	
2-43	*5783033008	SCREW, BIND S-TITE M3X8	
2-44	*5786772000	CABLE CLAMP, WS-IN	
2-45	*5786003000	E-RING, E-3 (JIS)	
2-46	*5783693006	SCREW, BIND S-TITE M3X6 (NI BLK)	
2-47	*5780002603	SCREW, BIND M2.6X3	
2-48	*5780023006	SCREW, BIND M3X6 (NI BLK)	
2-49	*5783663010	SCREW, FLAT B-TITE M3X10 (NI BLK)	
2-50	*5780023008	SCREW, BIND M3X8 (NI BLK)	
2-51	*5783533008	SCREW, BIND B-TITE M3X8 (NI BLK)	
2-52	*5780022004	SCREW, BIND M2X4 (NI BLK)	
2-53	*5785342200	WASHER, POLY 2.6X5X0.25T	
2-54	*5780212004	SCREW, FLAT M2X4 (NI)	

## EXPLODED VIEW-3

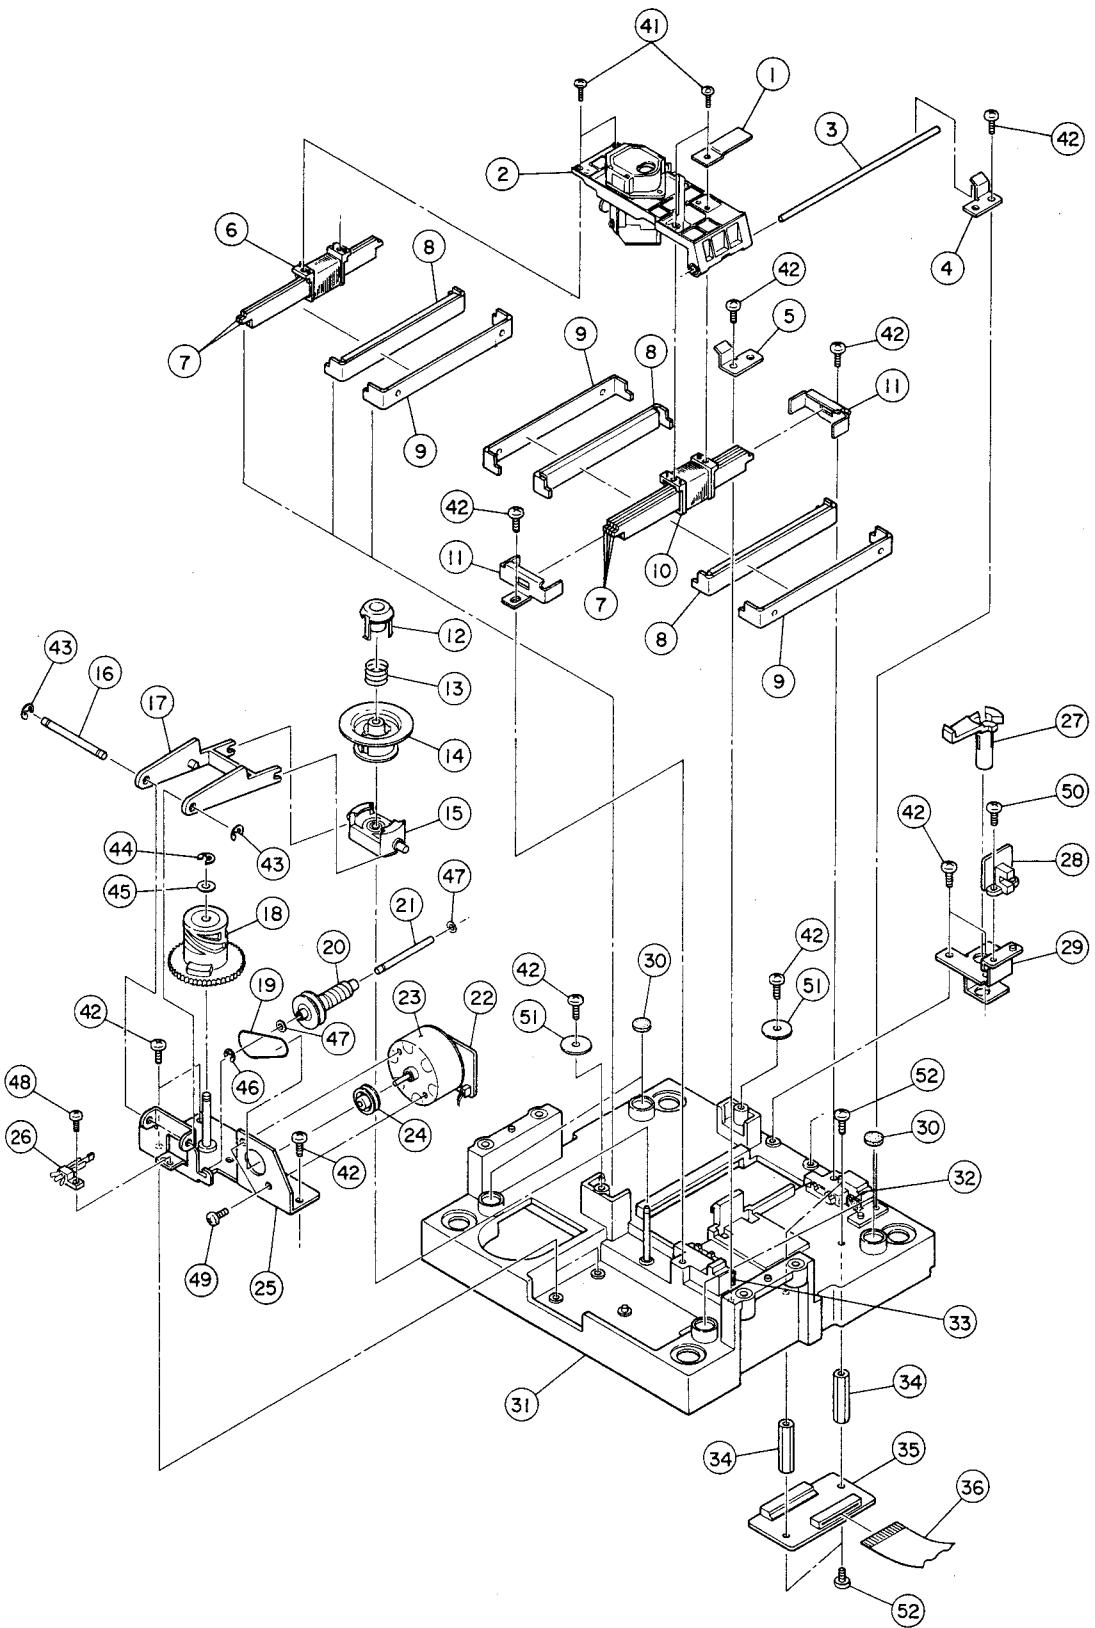

## EXPLODED VIEW-3

REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
3- 1	5801164700	SHUTTER	
3- 2	5347009800	LASER PICK UP ASSY, KSS-151A	
3- 3	5801058900	GUIDE SHAFT	
3- 4	5801059100	SHAFT HOLDER (R)	
3- 5	5801059000	SHAFT HOLDER (F)	
3- 6	5801078300	COIL (S)	
3- 7	5801059400	YODE (C)	
3- 8	*5801097400	YODE (B) ASSY	
3- 9	5801059200	YODE (A)	
3-10	5801078200	COIL (D)	
3-11	5801059600	YODE HOLDER	
3-12	5801167800	GUIDE RING	
3-13	5801096200	PRESSURE SPRING (G)	
3-14	5801165700	CLAMPER	
3-15	5801201100	HOLDER	
3-16	5801201800	SHAFT (B)	
3-17	5801201500	LIFT ARM	
3-18	5801202700	CYLINDER CAM	
3-19	5800979500	LOADING BELT	
3-20	5800669800	WORM ASSY	
3-21	5801201700	SHAFT (A)	
3-22	*5200345000	C-MOTOR PCB ASSY	Refer to pages 24 and 26
3-23	5370009200	DC MOTOR, RF-500TB	
3-24	5801170200	MOTOR PULLEY	
3-25	*5801521500	CLAMPER BASE (B)	
3-26	5301754000	SW, LEAF LSC-1220-IAU	
3-27	5801164901	PU LOCK ARM	
3-28	*5200345100	SENSOR PCB ASSY	Refer to pages 24 and 26
3-29	5801164800	LOCK ARM BRACKET	
3-30	*5801095900	RUBBER WASHER	
3-31	*5801203504	MECH BASE	
3-32	5801288300	STOPPER (B)	
3-33	5801288200	STOPPER (A)	
3-34	5730042300	SPACER, L=25	
3-35	*5200344800	JOINT PCB ASSY	Refer to pages 24 and 26
3-36	*5355243700	FLAT CABLE A, 20P	
3-41	*5783011704	SCREW, PAN B-TITE M1.7X4	
3-42	*5783533008	SCREW, BIND B-TITE M3X8 (NI BLK)	
3-43	*5786002000	E-RING, E-2 (JIS)	
3-44	*5786003000	E-RING, E-3 (JIS)	
3-45	*5785314100	WASHER, POLY 4X8X0.5T	
3-46	*5786001500	E-RING, E-1.5 (JIS)	
3-47	*5785302400	WASHER, POLY 2.1X5X0.25T	
3-48	*5780132004	SCREW, PAN SEMS-A M2X4	
3-49	*5780002603	SCREW, BIND M2.6X3	
3-50	*5783693008	SCREW, BIND S-TITE M3X8 (NI BLK)	
3-51	*5785022900	WASHER, FLAT 3X12X1.0T	
3-52	*5780023006	SCREW, BIND M3X6 (NI BLK)	

## 7 PC BOARDS AND PARTS LIST

基板図とパーツリスト

## KEY PCB ASSY



REF.NO.	PARTS NO.	DESCRIPTION
	*5200345400	KEY PCB ASSY
	*5210345400	KEY PCB
	5555590000	EARTH PLATE A
	*5801529700	LED HOLDER
	*5801158000	LED SPACER, L=6
	5347009100	FL DISPLAY, FIP10YMB
D501,502	*5801532100	FL GUIDE
D503,504	*5801180900	FL CUSHION
	5224012920	DIODE, IS2473
	5224017820	DIODE, MA165P-TA5
D505-508	5225028000	LED, SLV-31DC3F (ORG)
D509,510	5225028800	LED, SLR-34DC3F (ORG)
P501	5336299800	CONNECTOR SOCKET
P502	5336299900	CONNECTOR SOCKET
S501-506	5302108600	SW, TACT
U501	5220812900	IC, UPD7566CS-085
U502	5292210300	REMOTE MODULE
U504-508	5232255620	TR, DTC114ES
W501	5355243800	FLAT CABLE B, 19P
W502	5355243900	FLAT CABLE C, 18P
X501	5347006500	OSC, CERAMIC CSB700A

## SERVO PCB ASSY


REF.NO.	PARTS NO.	DESCRIPTION
	*5200344700	SERVO PCB ASSY
	*5210344700	SERVO PCB
	*5801385900	EARTH PLATE
	5555590000	EARTH PLATE A
	*5800990100	HEAT SINK
	5730018100	COATING CLIP, CP-1S
	*5347023000	SHIELD SHEET A (CU)
	*5347026000	SHIELD SHEET (CU) 55X15
CI	△ 5260428110	C, ELECT 4700UF/16V
C2	△ 5260427610	C, ELECT 3300UF/16V
DI	△ 5228010800	SILICON STACK, S2VB10
D11 - 13	5224017820	DIODE, MA165P-TA5
D2	5224016420	DIODE, S5688G
D401,402	5224017820	DIODE, MA165P-TA5
L401	5286033520	COIL, CHOKE 4.7UH

## SERVO PCB ASSY


REF.NO.	PARTS NO.	DESCRIPTION
L51	14727479	INDUCTOR FERRITE BEADS
L52	5286033820	COIL, CHOKE 8.2UH
L53	5286033120	COIL, CHOKE 2.2UH
P401	5336297000	CONNECTOR SOCKET
P402	5336127000	CONNECTOR PLUG (WHT)
P403	5336305200	CONNECTOR PLUG (RED)
P404	5336303200	CONNECTOR PLUG (WHT)
P405	5336305300	CONNECTOR PLUG (RED)
P406	5336303300	CONNECTOR PLUG (WHT)
P407	5336303400	CONNECTOR PLUG (WHT)
P408	5336296800	CONNECTOR SOCKET
P409	5336296900	CONNECTOR SOCKET
P410	5336303700	CONNECTOR PLUG (WHT)
P412	5336250200	CONNECTOR PLUG (WHT)
P413	5330512700	PIN JACK, IP
Q1	5230509100	TR, 2SB562C
Q11	5230781120	TR, 2SC1740SLN
Q401	5230509100	TR, 2SB562C
Q403,405	5231756200	TR, 2SD882Q/P
Q404,406	5230508900	TR, 2SB772P
S401	5300918300	SW, SLIDE SSSFI I-2A
TP1	13150492	CONNECTOR
TP2 , 4	13150488	CONNECTOR
TP3	5544750000	COMBINATION PIN
UI	△ 13447943	IC, NJM78M05FA
U11	5220040700	IC, UPD74HC04C
U2	△ 13447961	IC, NJM79M05FA
U401	5220441400	IC, CXA1081S
U402	5220447500	IC, CXA1372S
U403	5220099600	IC, CXD2500AQ
U404	5220442500	IC, LA6500
U405	5220447600	IC, TA8410AK
U406,407	5220440600	IC, NJM4565L
U409	5220440600	IC, NJM4565L
U410	5220430200	IC, LB1649
U491	5220829900	IC, UPD75212ACW
U493	5232255620	TR, DTC114ES
U494	5220052000	IC, TC74HC32AP
U51	5220041200	IC, UPD74HC00C
U52	5220057500	IC, M74HC6004P
U53	5292209800	OPTICAL MODULE, GPIF3IT
V401	5280021500	VR, SEMI-FIXED 22KB
V402,405	5280021100	VR, SEMI-FIXED 4.7KB
V403,404	5280021500	VR, SEMI-FIXED 22KB
X491	5347017700	OSC, EFO-GC4194A4
X51	5347010900	OSC, CRYSTAL 16.9344MHZ
Z1	5224592821	DIODE, ZENER RD33ESB1
Z2	5224585621	DIODE, ZENER RD6.2ESB1
Z403,404	5224585621	DIODE, ZENER RD6.2ESB1
Z405	5224587221	DIODE, ZENER RD9.1ESB1

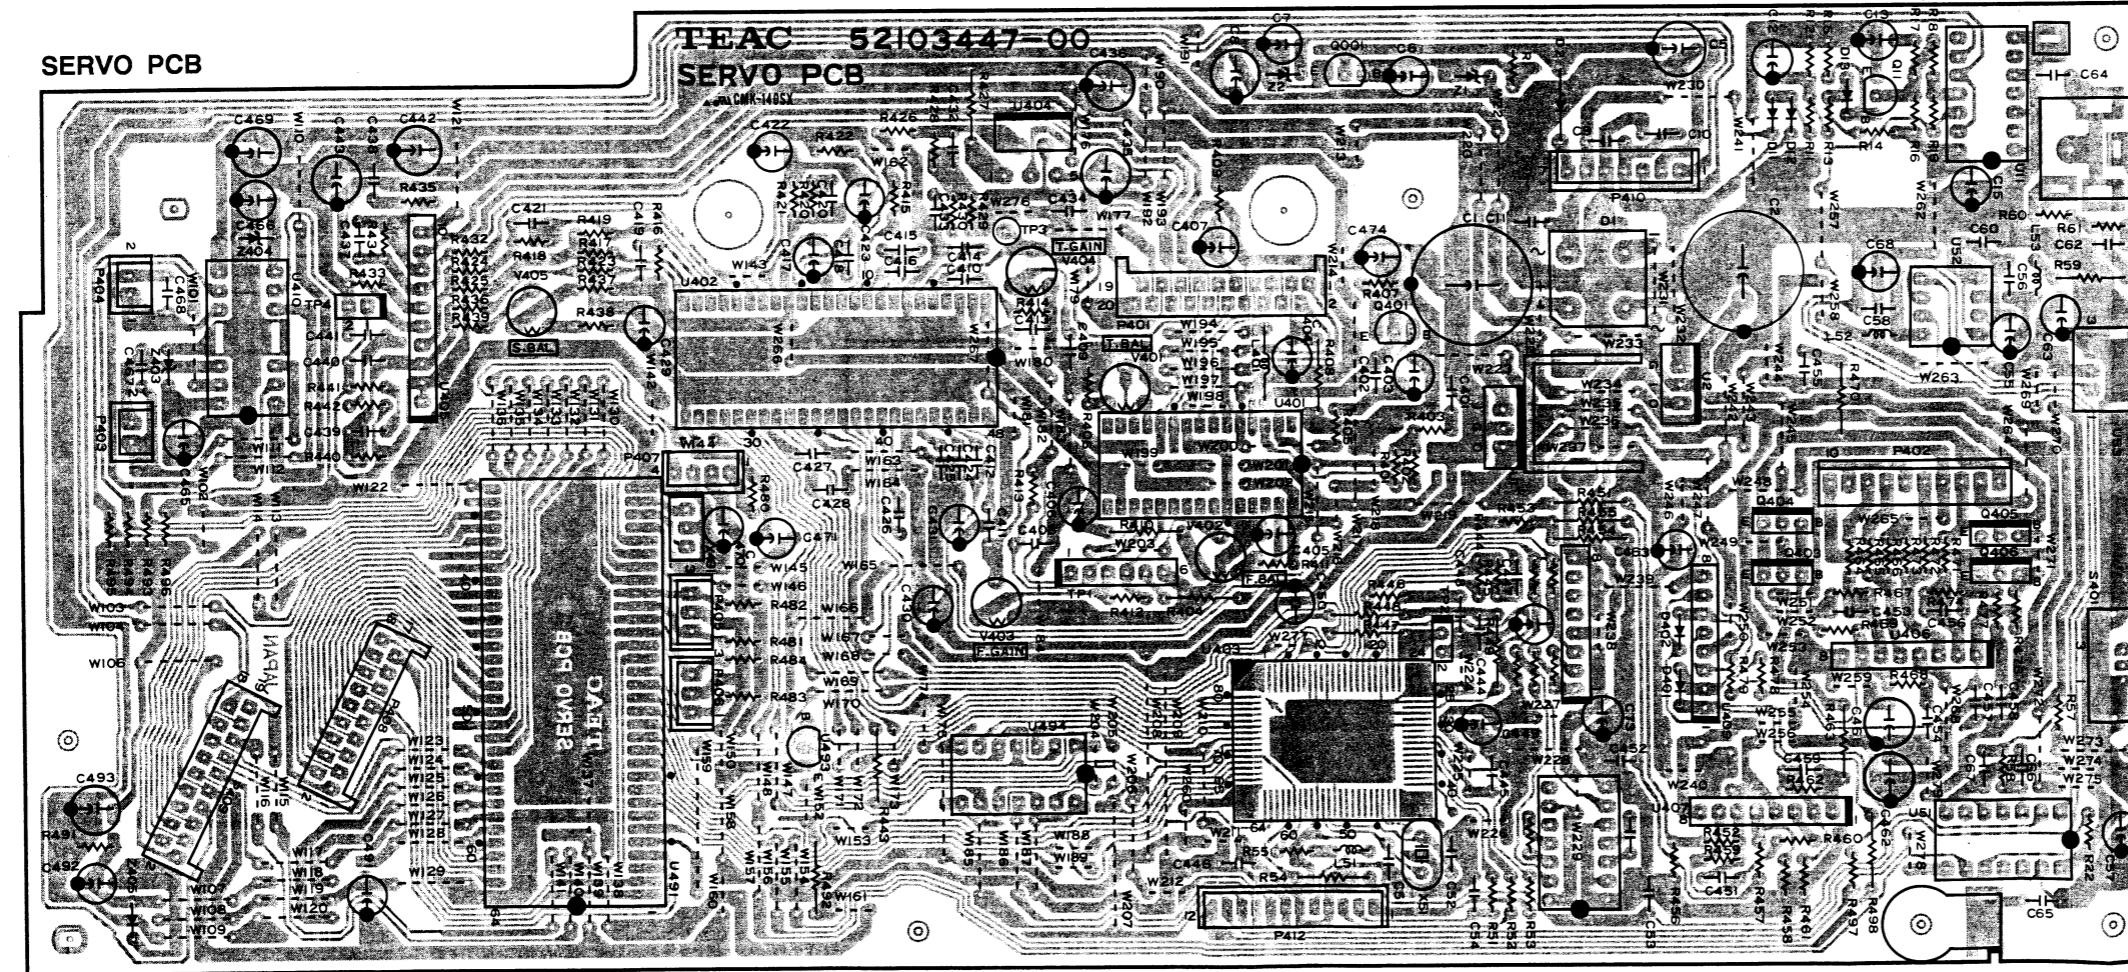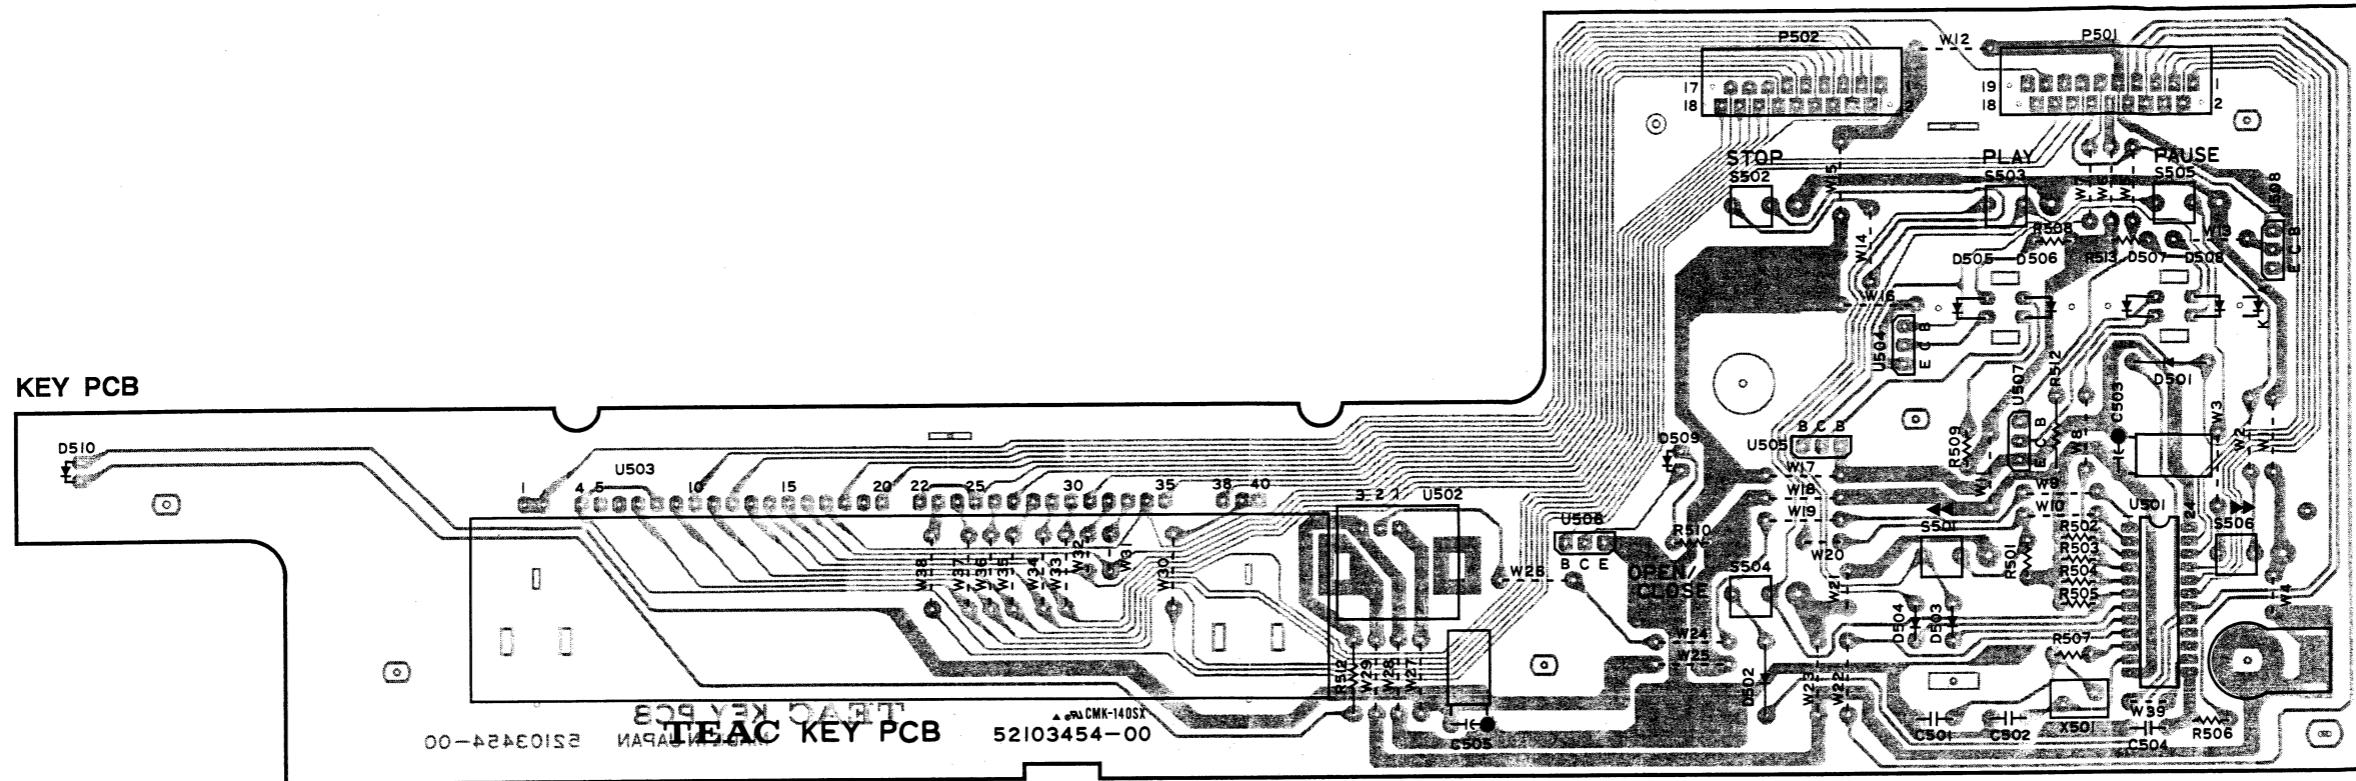


AUDIO PCB

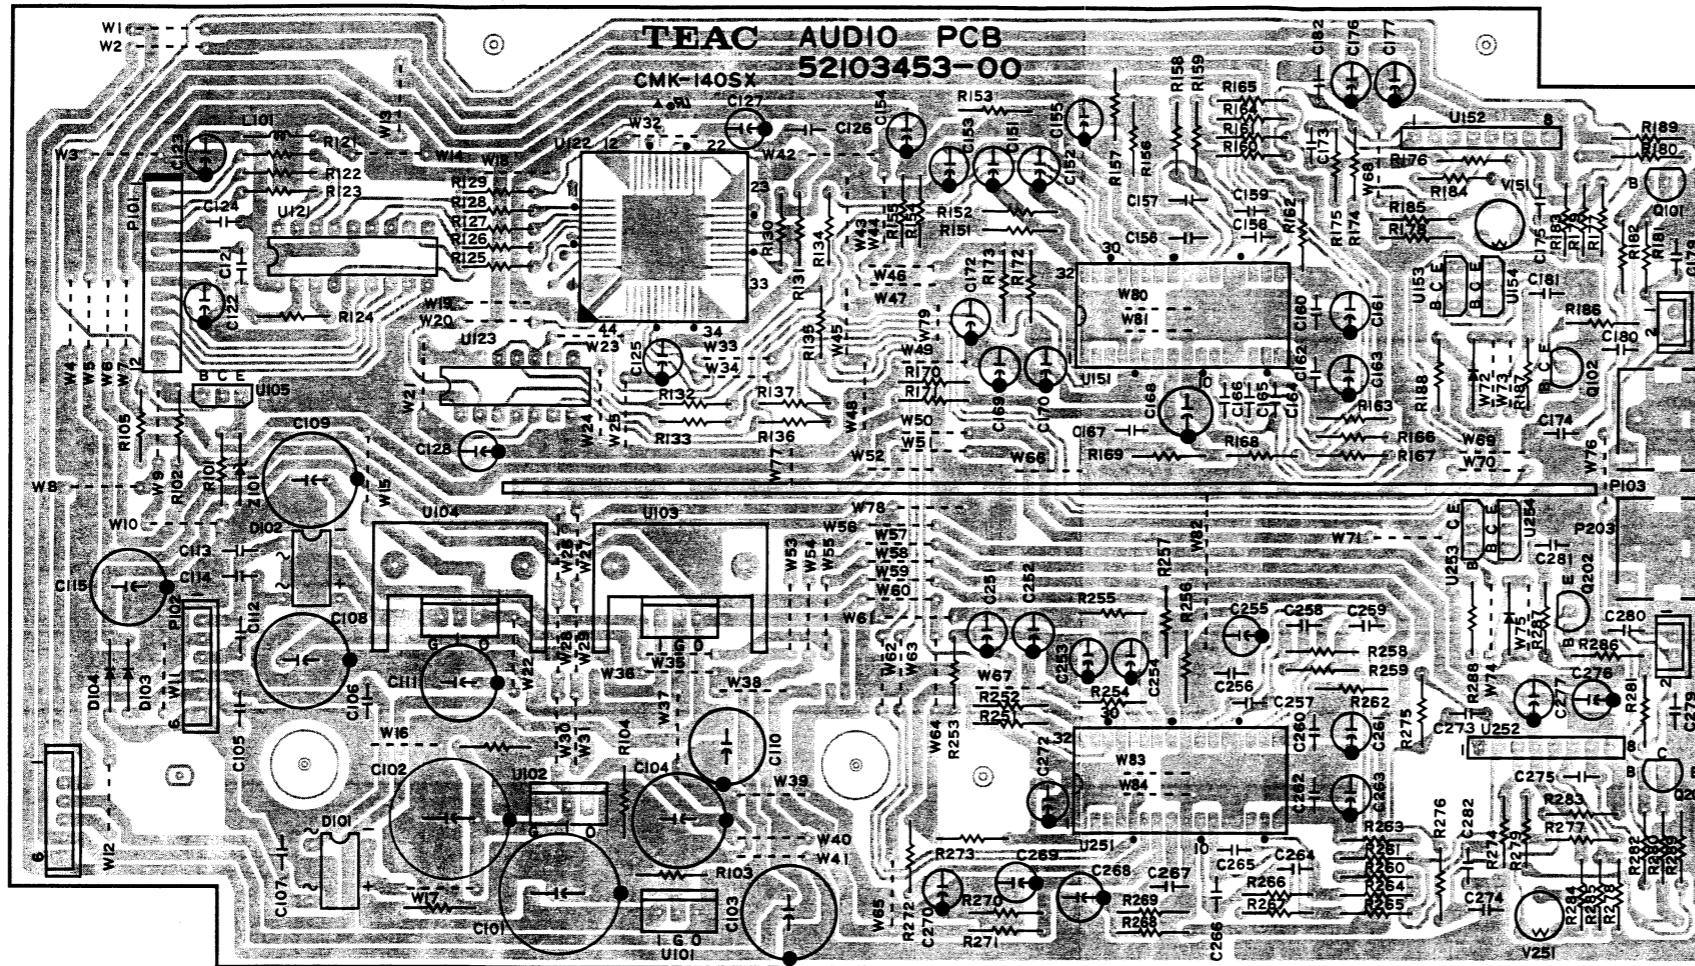


SENSOR PCB

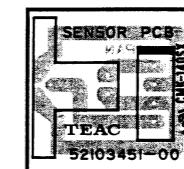


C-MOTOR PCB

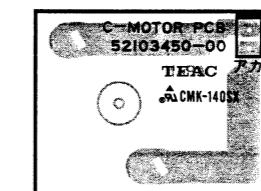


T-MOTOR PCB

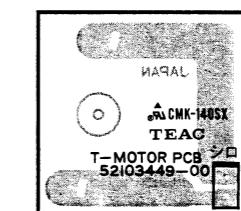


## VOLTAGE SELECTOR PCB

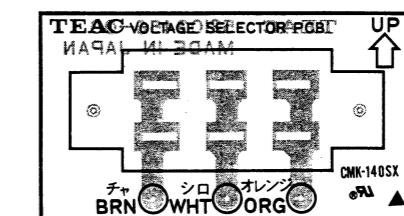

POWER PCB

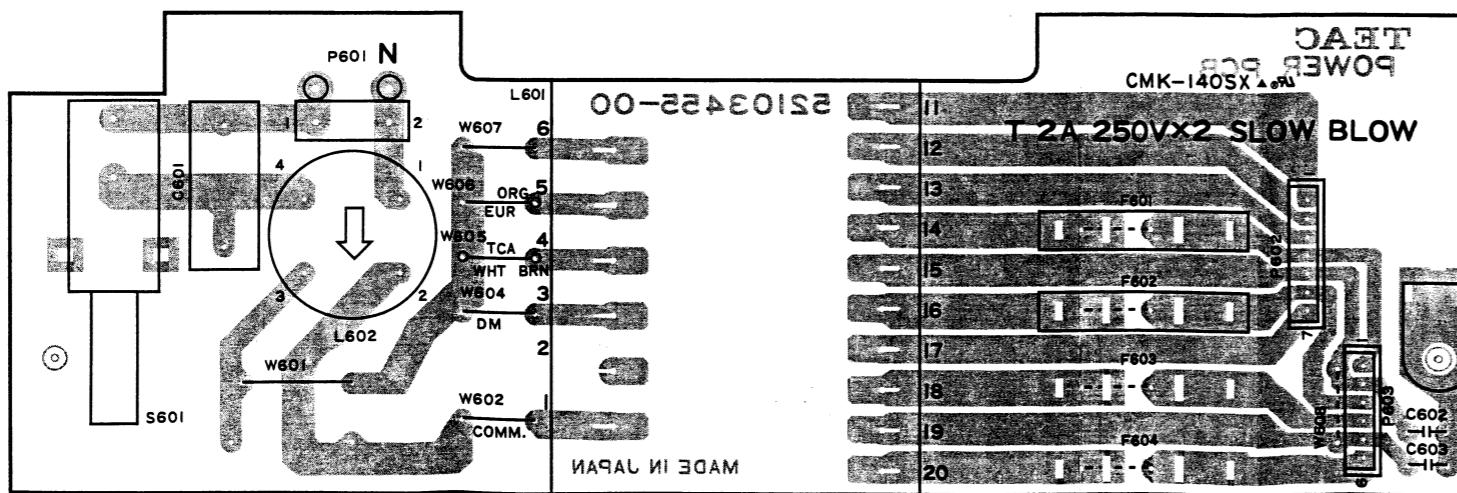

### JOINT PCB

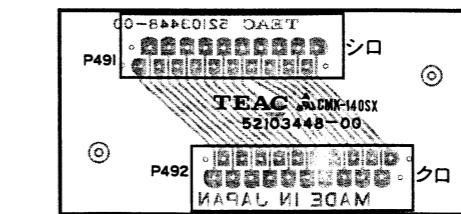

**AUDIO PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200345300	AUDIO PCB ASSY
	*5210345300	AUDIO PCB
	*5801385900	EARTH PLATE
	*5801433600	BUSS BAR, L142 N8 OFC 0.8
	5730039200	HEAT SINK
	*5347026200	SHIELD SHEET (CU) 19X5
	*5347026100	SHIELD SHEET (CU) 27X8
C101,102	△ 5260427110	C, ELECT 2200UF/25V
C108,109	△ 5260427010	C, ELECT 2200UF/16V
D101,102	△ 5228010700	SILICON STACK, SIWB(A)20
D103,104	5224012920	DIODE, IS2473
L101	5286033520	COIL, CHOKE 4.7UH
P102	5336303600	CONNECTOR PLUG (WHT)
P103	5330513700	PIN JACK, IP
P203	5330513800	PIN JACK, IP
Q101,201	5231762520	TR, 2SD1915TA
Q102,202	5231762520	TR, 2SD1915TA
R101	5241620620	R, METAL 220 F MRS25
R102	5241624620	R, METAL 10K F MRS25
R103,104	5241623020	R, METAL 2.2K F MRS25
R105	5241627020	R, METAL 100K F MRS25
R121-123	5241619820	R, METAL 100 F MRS25
R124	5241627020	R, METAL 100K F MRS25
R125-129	5241620620	R, METAL 220 F MRS25
R130	5241629420	R, METAL 1.0M F MRS25
R131	5241617420	R, METAL 10 F MRS25
R132-137	5241620620	R, METAL 220 F MRS25
R151,251	5241617420	R, METAL 10 F MRS25
R152,252	5241617420	R, METAL 10 F MRS25
R153,253	5241617420	R, METAL 10 F MRS25
R154,254	5241622620	R, METAL 1.5K F MRS25
R155,255	5241623420	R, METAL 3.3K F MRS25
R156,256	5241623420	R, METAL 3.3K F MRS25
R157,257	5241621620	R, METAL 560 F MRS25
R158,258	5241624920	R, METAL 13K F MRS25
R159,259	5241624920	R, METAL 13K F MRS25
R160,260	5241624620	R, METAL 10K F MRS25
R161,261	5241624620	R, METAL 10K F MRS25
R162,262	5241616620	R, METAL 4.7 F MRS25
R163,263	5241616620	R, METAL 4.7 F MRS25
R164,264	5241624620	R, METAL 10K F MRS25
R165,265	5241624620	R, METAL 10K F MRS25
R166,266	5241624920	R, METAL 13K F MRS25
R167,267	5241624920	R, METAL 13K F MRS25
R168	5241621620	R, METAL 560 F MRS25
R169,269	5241623420	R, METAL 3.3K F MRS25
R170,270	5241623420	R, METAL 3.3K F MRS25
R171	5241622620	R, METAL 1.5K F MRS25
R172,272	5241617420	R, METAL 10 F MRS25
R173,273	5241617420	R, METAL 10 F MRS25
R174,274	5241624120	R, METAL 6.2K F MRS25
R175,275	5241624120	R, METAL 6.2K F MRS25
R176,276	5241621620	R, METAL 560 F MRS25
R177,277	5241621920	R, METAL 750 F MRS25
R178,278	5241624620	R, METAL 10K F MRS25

**AUDIO PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
R179,279	5241621620	R, METAL 560 F MRS25
R180,280	5241622220	R, METAL 1.0K F MRS25
R181,281	5241619820	R, METAL 100 F MRS25
R182,282	5241623820	R, METAL 4.7K F MRS25
R183,283	5241624620	R, METAL 10K F MRS25
R184,284	5241624620	R, METAL 10K F MRS25
R185,285	5241627020	R, METAL 100K F MRS25
R186,286	5241621020	R, METAL 330 F MRS25
R187,287	5241623820	R, METAL 4.7K F MRS25
R188,288	5241627020	R, METAL 100K F MRS25
R189,289	5241626220	R, METAL 47K F MRS25
R268	5241621620	R, METAL 560 F MRS25
R271	5241622620	R, METAL 1.5K F MRS25
UI01	△ 13447947	IC, NJM78M12FA
UI02	△ 13447965	IC, NJM79M12FA
UI03	△ 13447943	IC, NJM78M05FA
UI04	△ 13447961	IC, NJM79M05FA
UI05	5232254720	TR, DTA114ES
UI21	5220099800	IC, SM5840AP
UI22	5220110700	IC, SAA7350AGP
UI23	5220052200	IC, TC74HC86AP
UI51,251	5220100800	IC, TDA1547
UI52,252	5220448100	IC, NJM2114L
UI53,253	5232254720	TR, DTA114ES
UI54,254	5232255620	TR, DTC114ES
V151,251	5280181302	VR, SEMI-FIXED 2.2KB
Z101	5224584921	DIODE, ZENER RD5.1ESB2

**POWER PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200345500	POWER PCB ASSY [J]
	*5200345510	POWER PCB ASSY [US,C]
	*5200345530	POWER PCB ASSY [GE, ETC]
	*5200345540	POWER PCB ASSY [E]
	*5200345550	POWER PCB ASSY [UK,A]
	*5210345500	POWER PCB
	5332015800	FUSE HOLDER
	5555590000	EARTH PLATE A
C601	△ 5267704100	SPARK KILLER 0.0047UF/250V
F601,602	△ 5307050200	FUSE, 2A SLOW BLOW [J,US,C,GE,ETC]
F601,602	△ 5307053100	FUSE, 2A TIME LAG [E,UK,A]
L602	△ 5292806300	NOISE FILTER
P601	5327007200	TERMINAL, 2P
S601	△ 5300054700	SW, PUSH SDDLDI I-I

**SENSOR PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200345100	SENSOR PCB ASSY
	*5210345100	SENSOR PCB
	5228014100	PHOTO INTERRUPTER, GPIA51HR

**C-MOTOR PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200345000	C-MOTOR PCB ASSY
	*5210345000	C-MOTOR PCB

**T-MOTOR PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200344900	T-MOTOR PCB ASSY
	*5210344900	T-MOTOR PCB

**VOLTAGE SELECTOR PCB ASSY**

REF.NO.	PARTS NO.	DESCRIPTION
	*5200345600	VOLTAGE SELECTOR PCB ASSY [GE, ETC]
	*5210345600	VOLTAGE SELECTOR PCB
	△ 5300918600	VOLTAGE SELECTOR, SDKGA4

**JOINT PCB ASSY**


REF.NO.	PARTS NO.	DESCRIPTION
	*5200344800	JOINT PCB ASSY
	*5210344800	JOINT PCB
P491	5336366000	CONNECTOR SOCKET
P492	5336300000	CONNECTOR SOCKET


**INCLUDED ACCESSORIES**

REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
	*5700138600	OWNER'S MANUAL [J]	
	*5700138800	OWNER'S MANUAL [EXCEPT J]	
	*5744084300	REMOTE CONTROL UNIT, RC-48I	
	5347006900	BATTERY [J]	
	5347007000	BATTERY [EXCEPT J]	
	5350017300	PIN PLUG CORD	
	*5801543100	LOCK PLATE	

# TEAC SCHEMATIC DIAGRAM VRDS-10

1 2 3 4 5 6 7 8

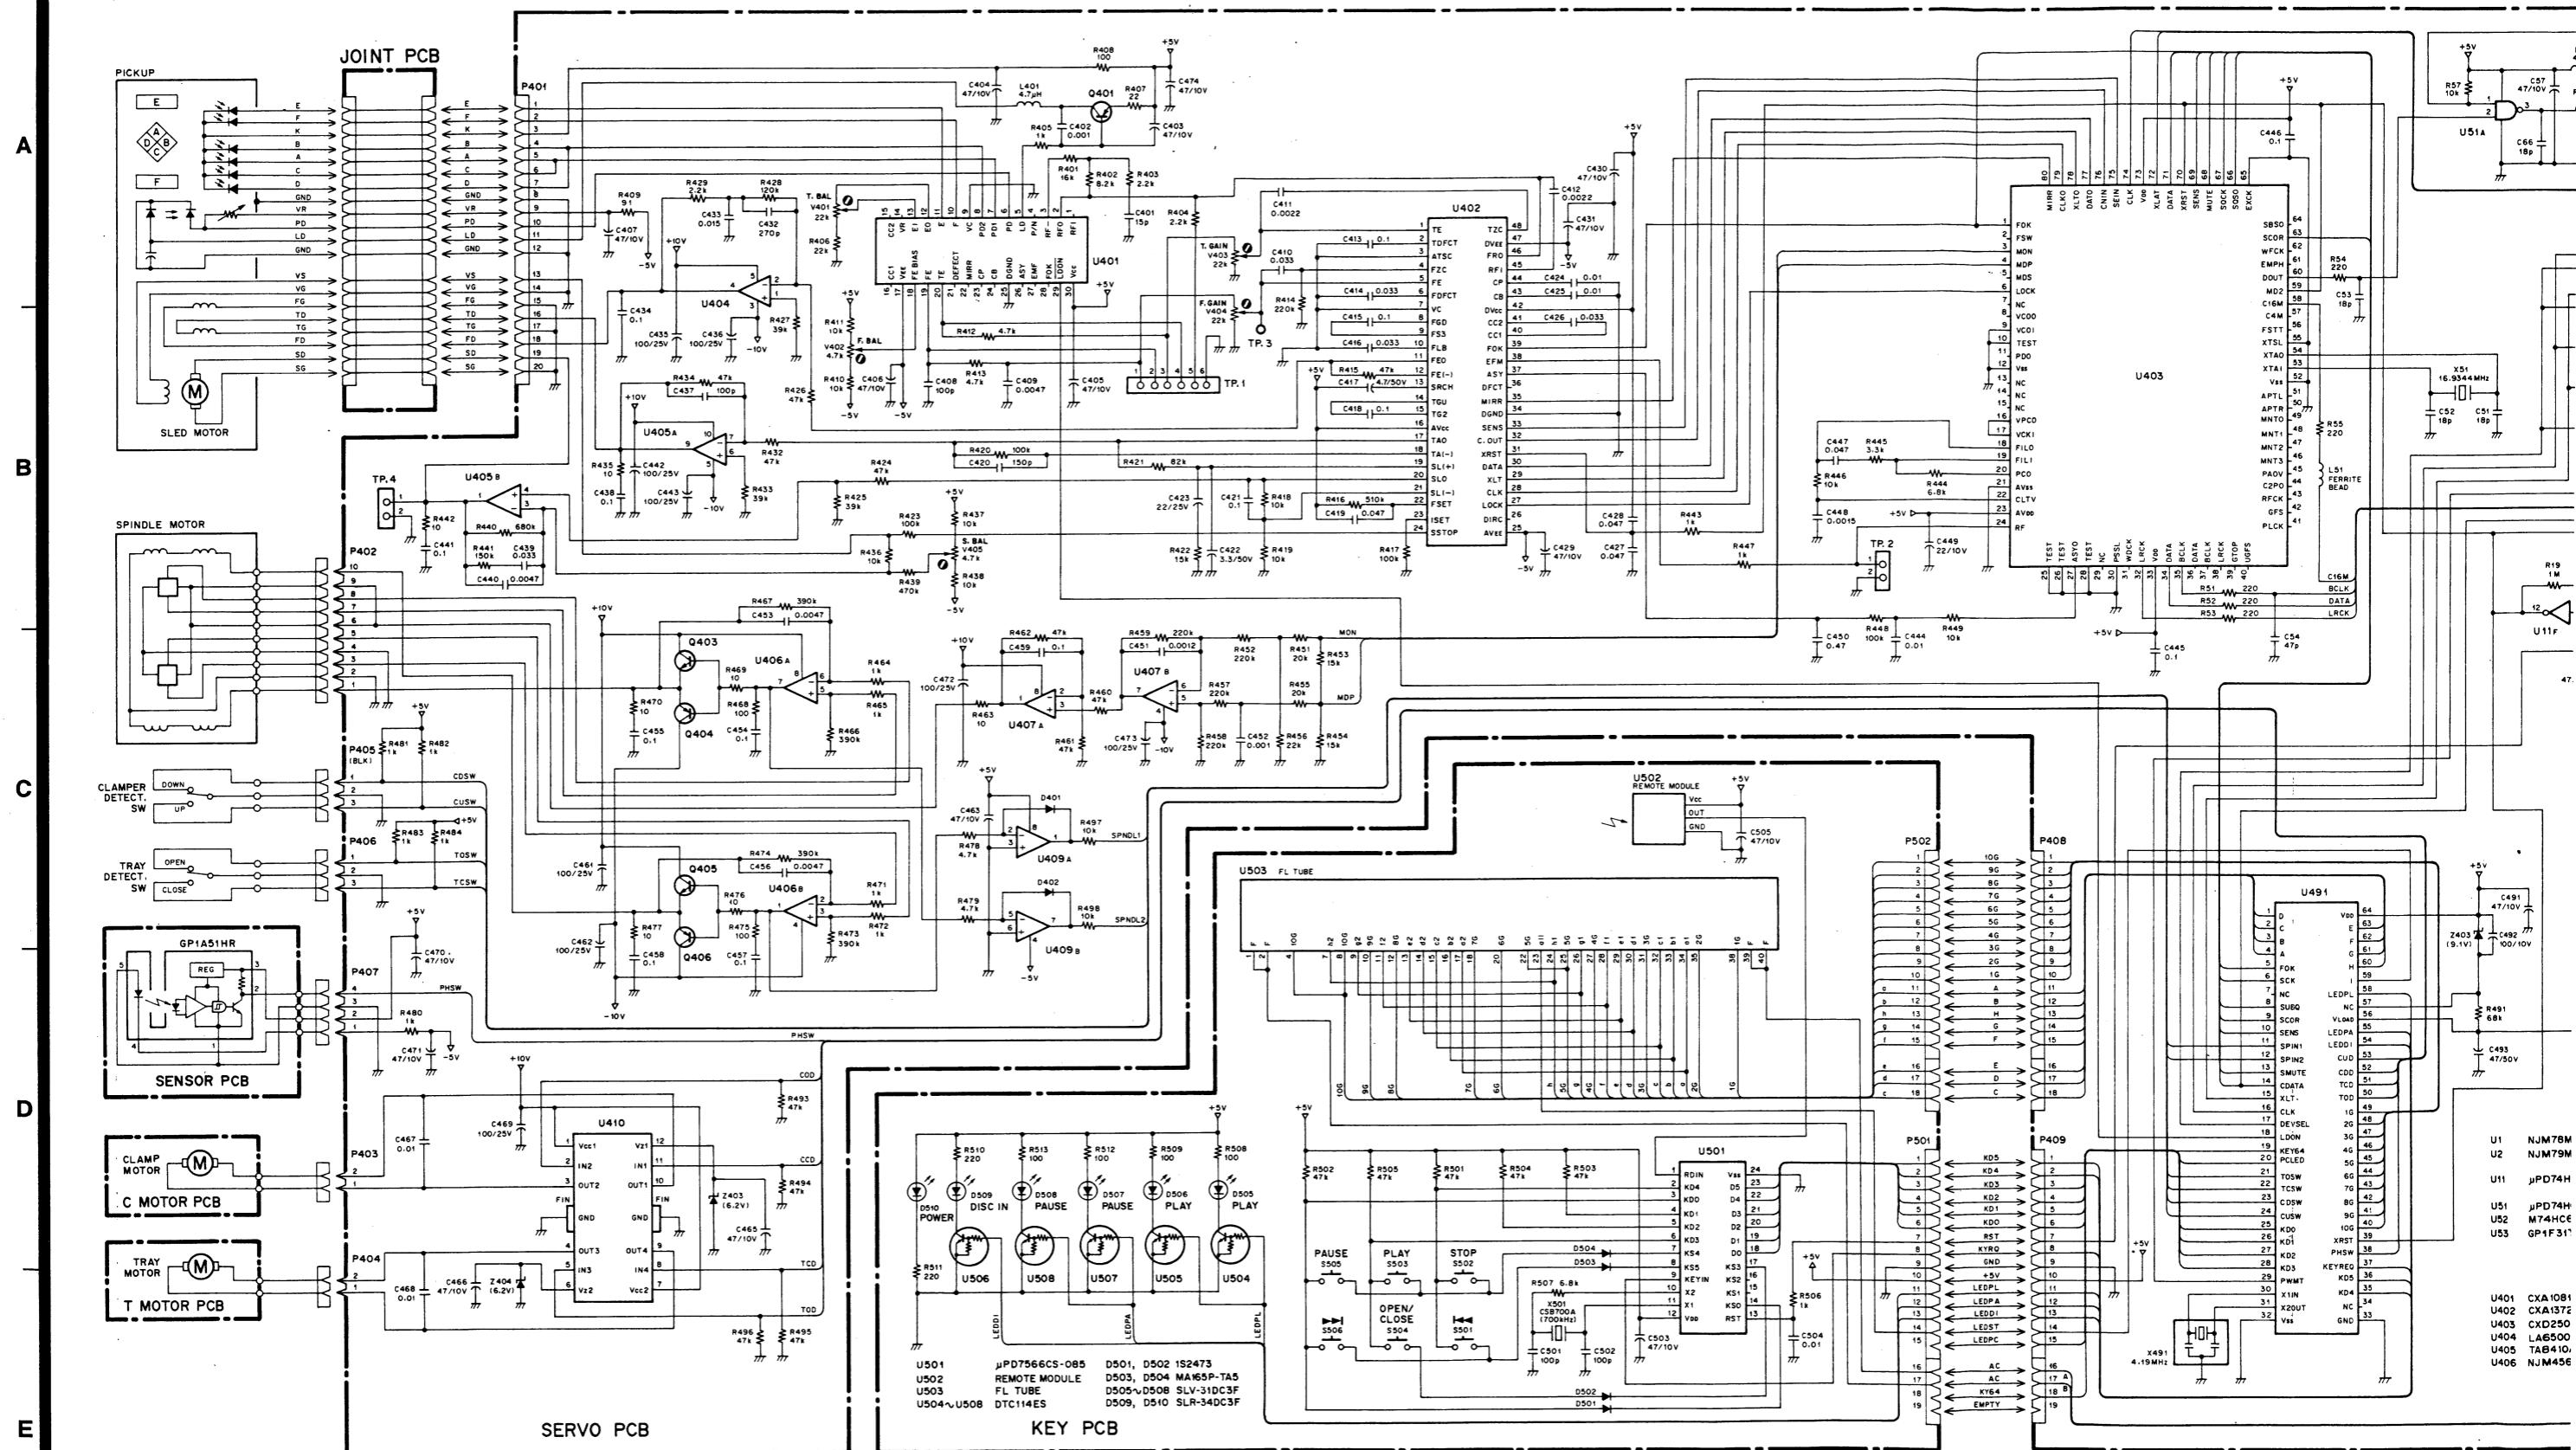

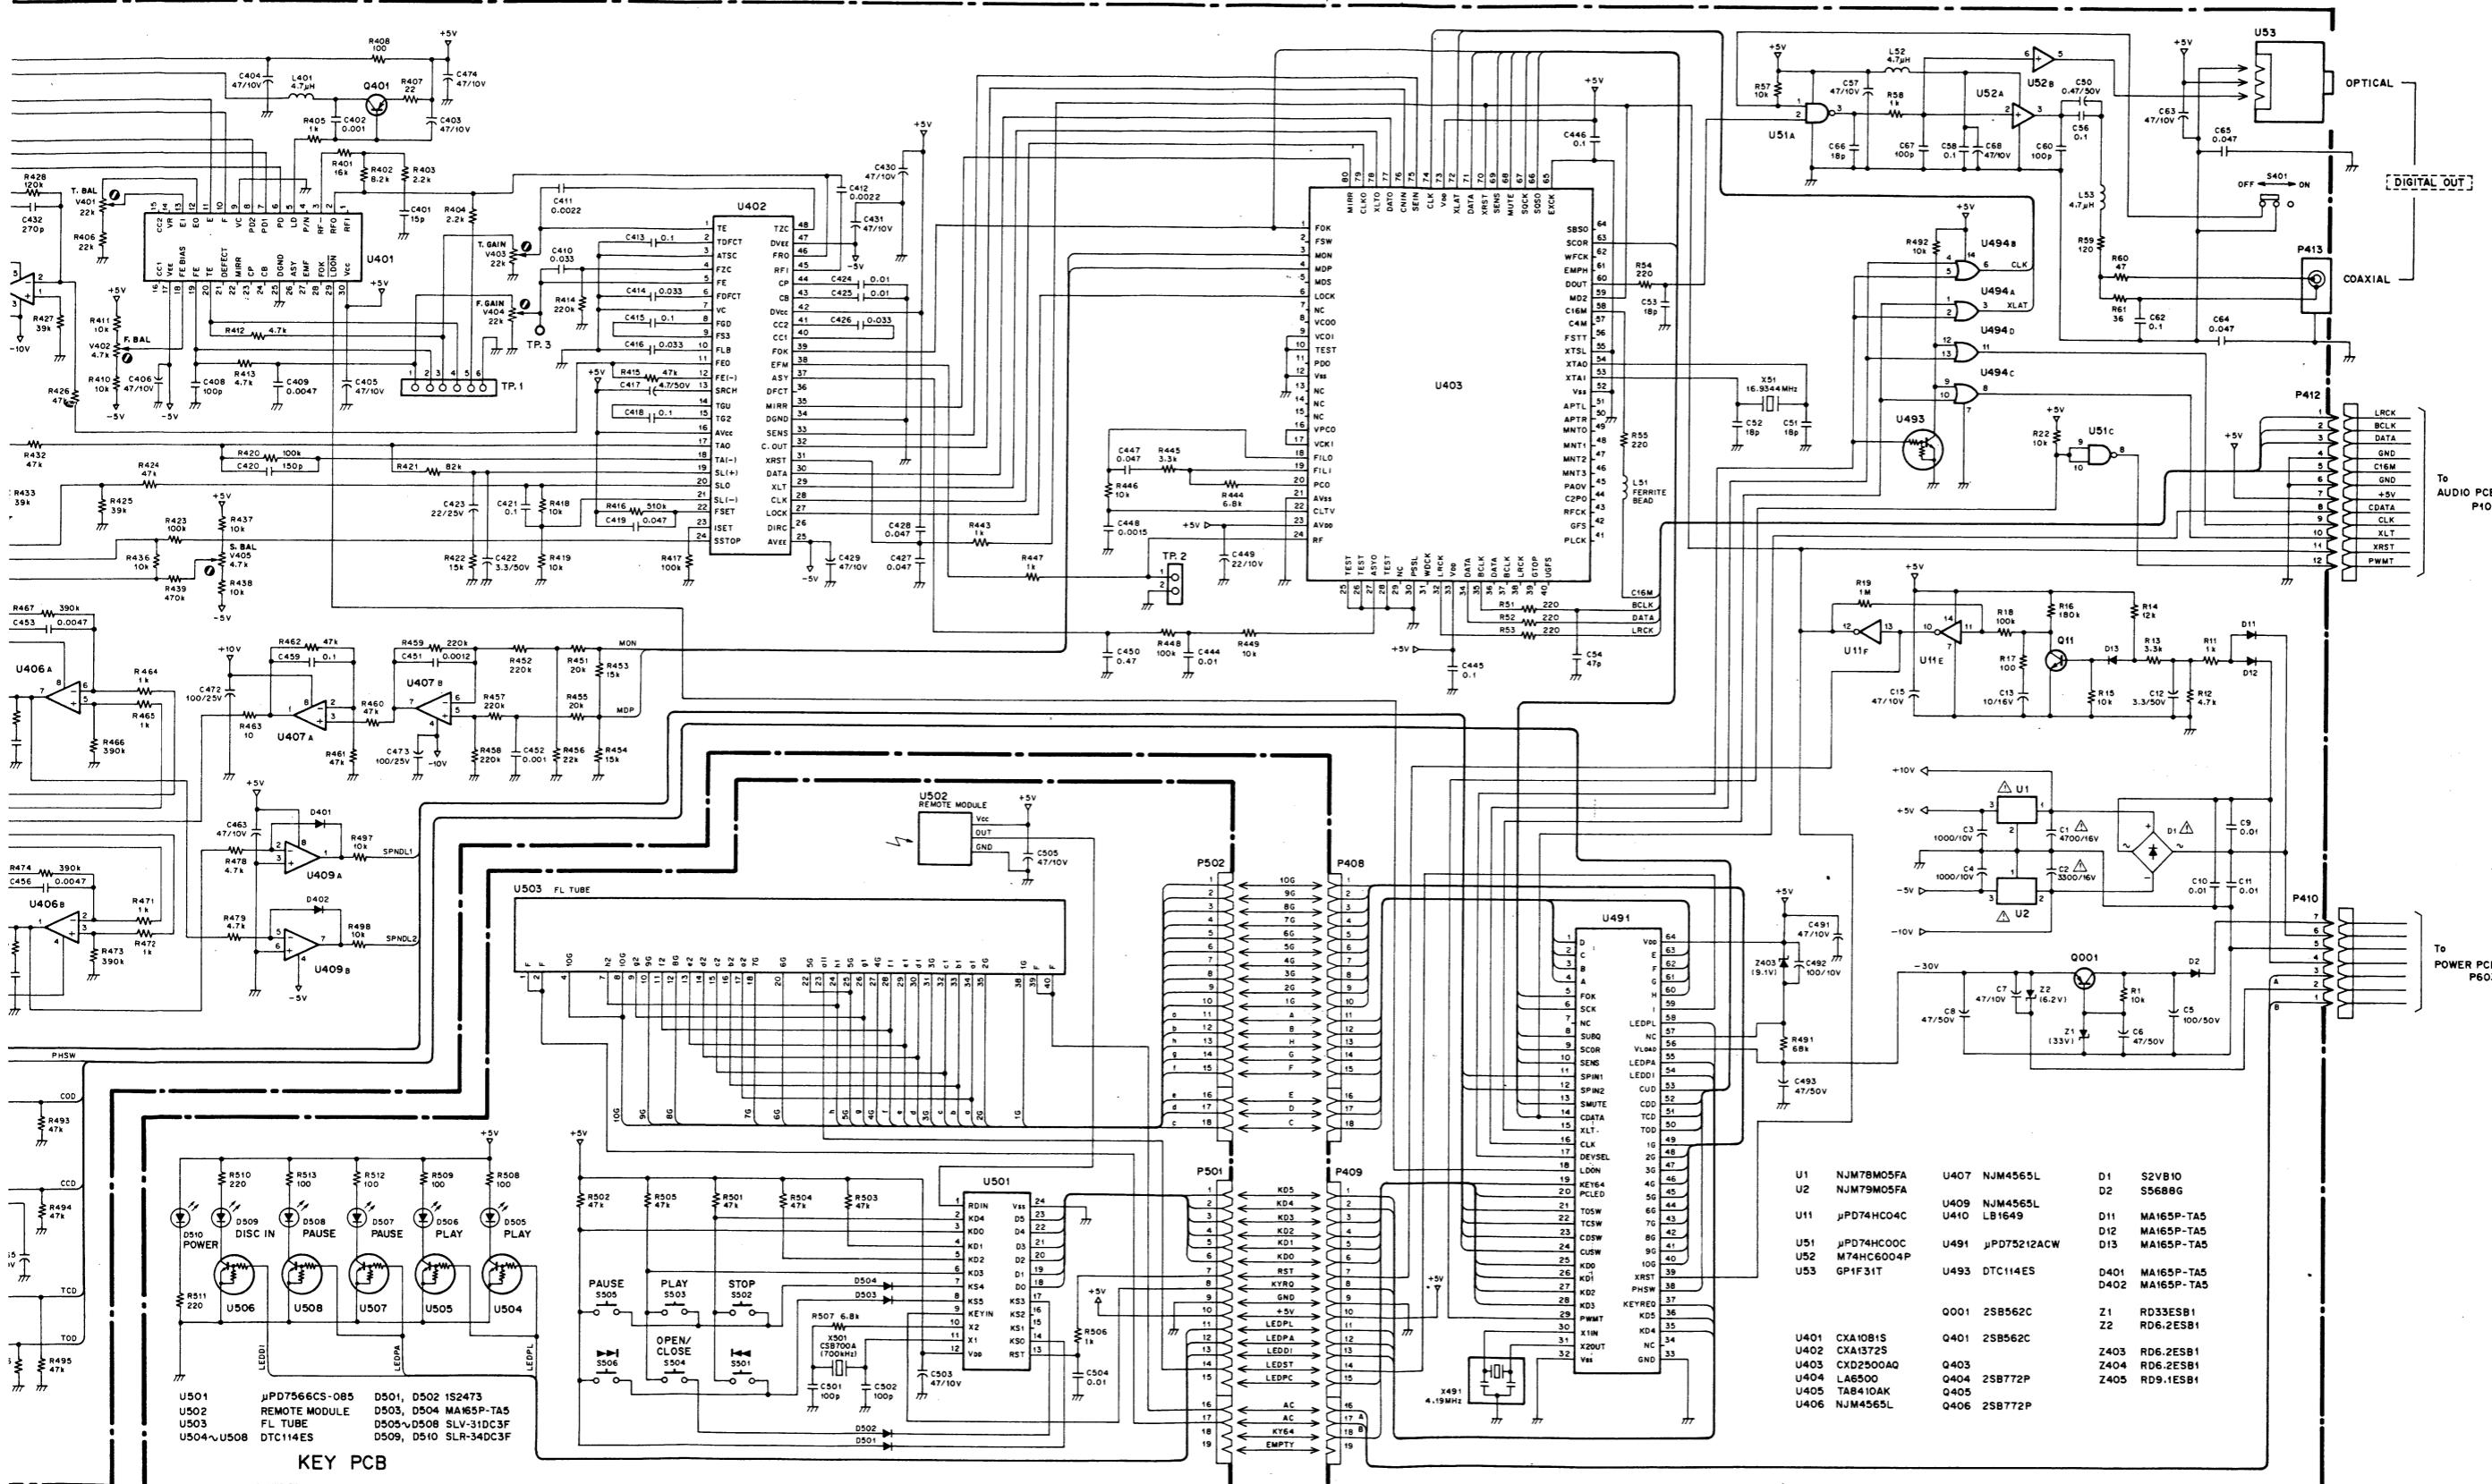


# VRDS-10

## Compact Disc Player

1 st Issue; October 1992

# TEAC SCHEMATIC DIAGRAM VRDS-10

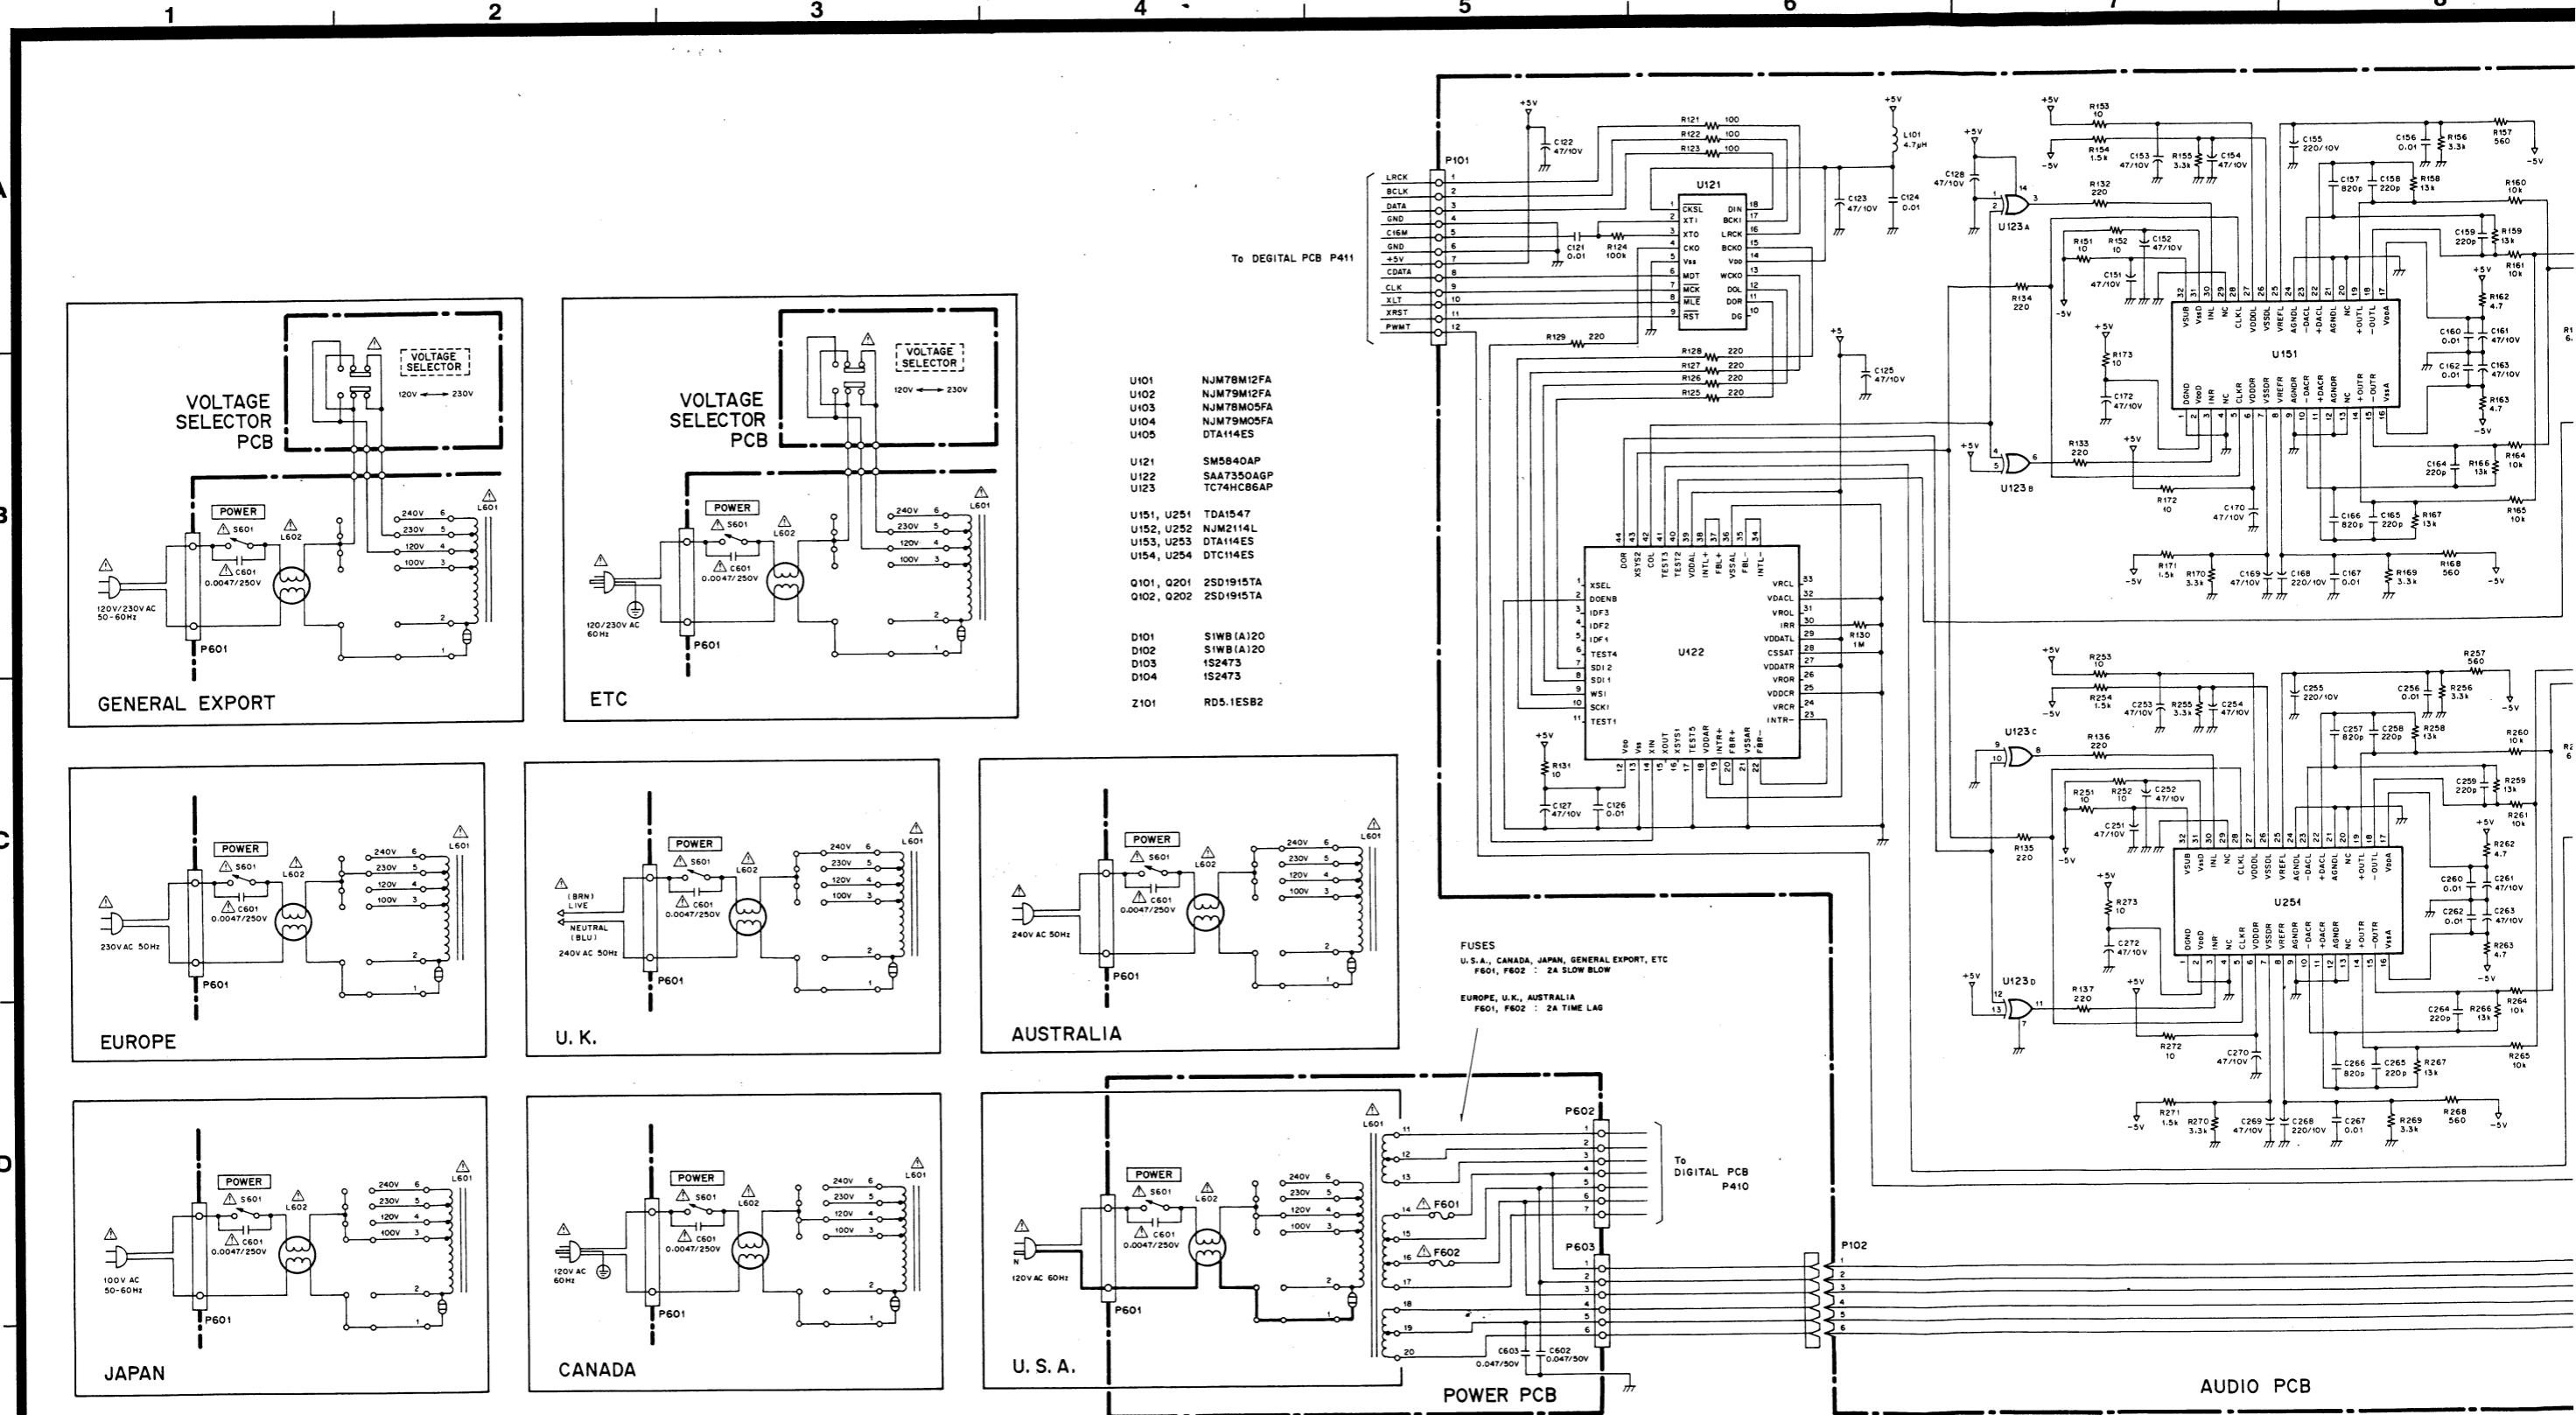

## INSTRUCTIONS FOR SERVICE PERSONNEL


BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

## NOTES:

1. Resistor values are in ohms ( $k = \text{kilo-ohms}$ ,  $M = \text{megohms}$ ).
2. Capacitor values are in microfarads ( $p = \text{picofarads}$ ).
3. △ Parts marked with this sign are safety critical components. They must always be replaced with identical components—refer to the appropriate parts list and ensure exact replacement.

## 注意

1. 抵抗の単位はΩ ( $k = k\Omega$ ,  $M = M\Omega$ ) です。
2. コンデンサの単位はμF ( $p = pF$ ) です。
3. △マークのある部品は安全規格重要部品です。交換するときは必ずティアック指定の部品を使用してください。

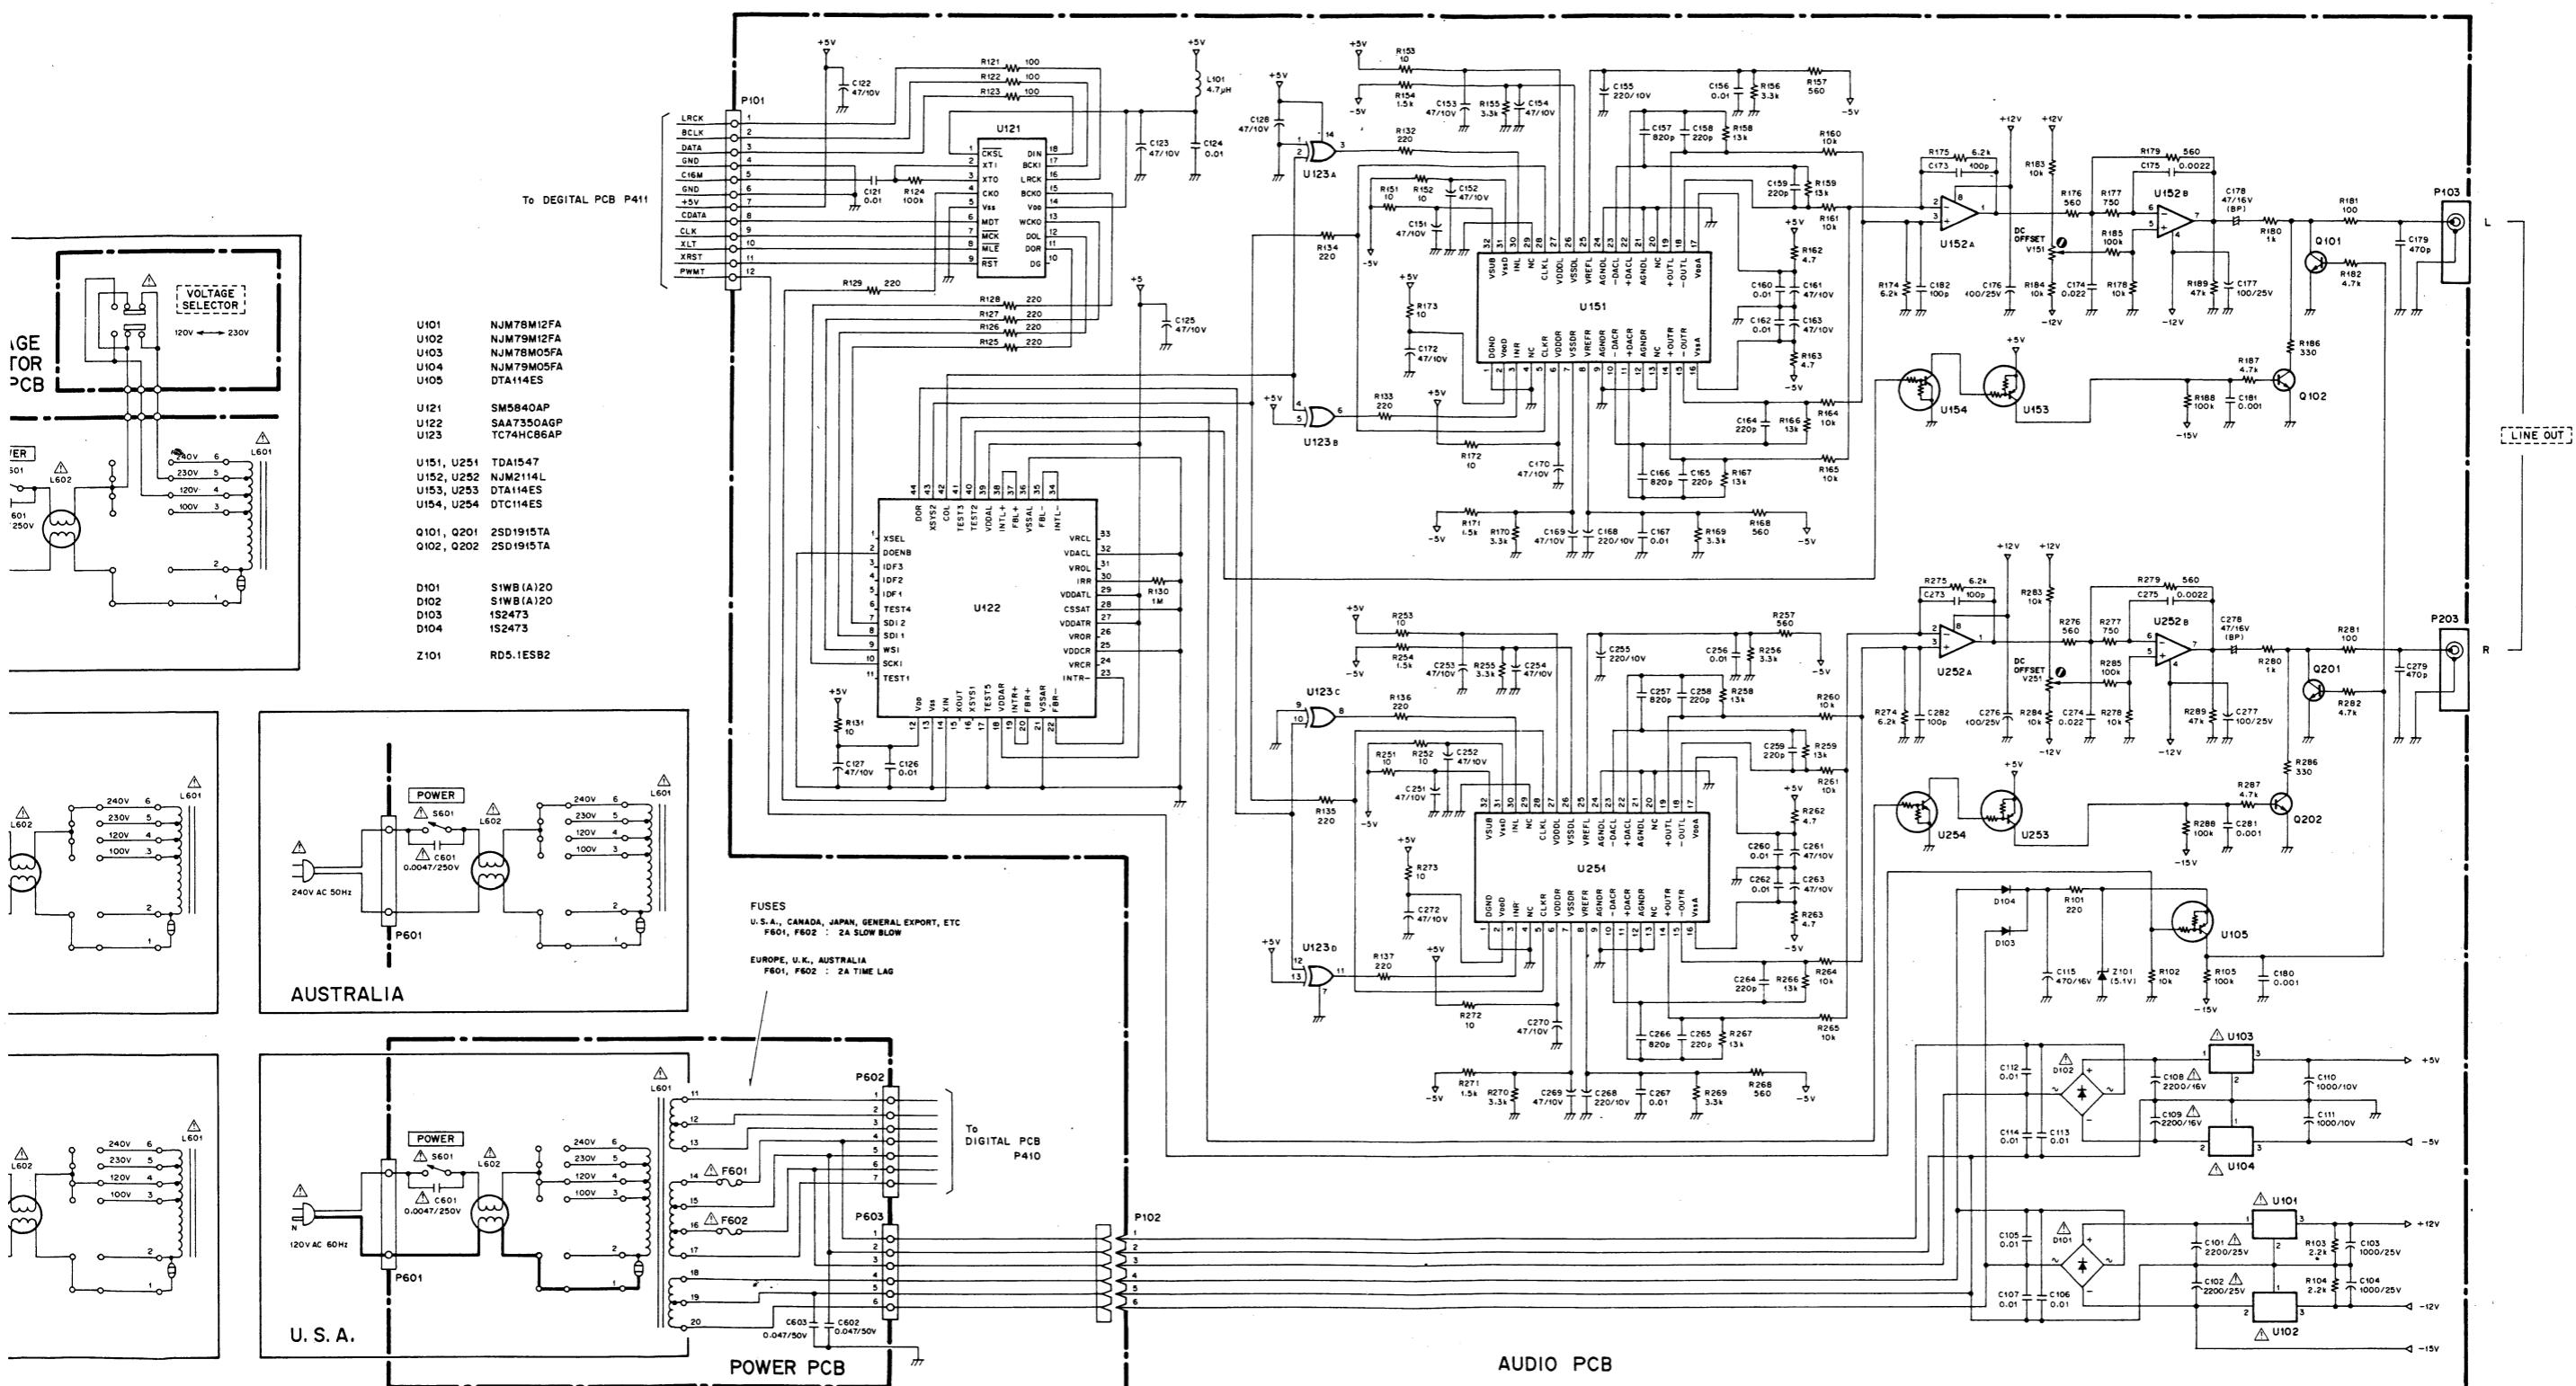**注意**

# VRDS-10

## Compact Disc Player

1 st Issue; October 1992