


Technics TAPE DECK MODEL RS-612US SCHEMATIC DIAGRAM

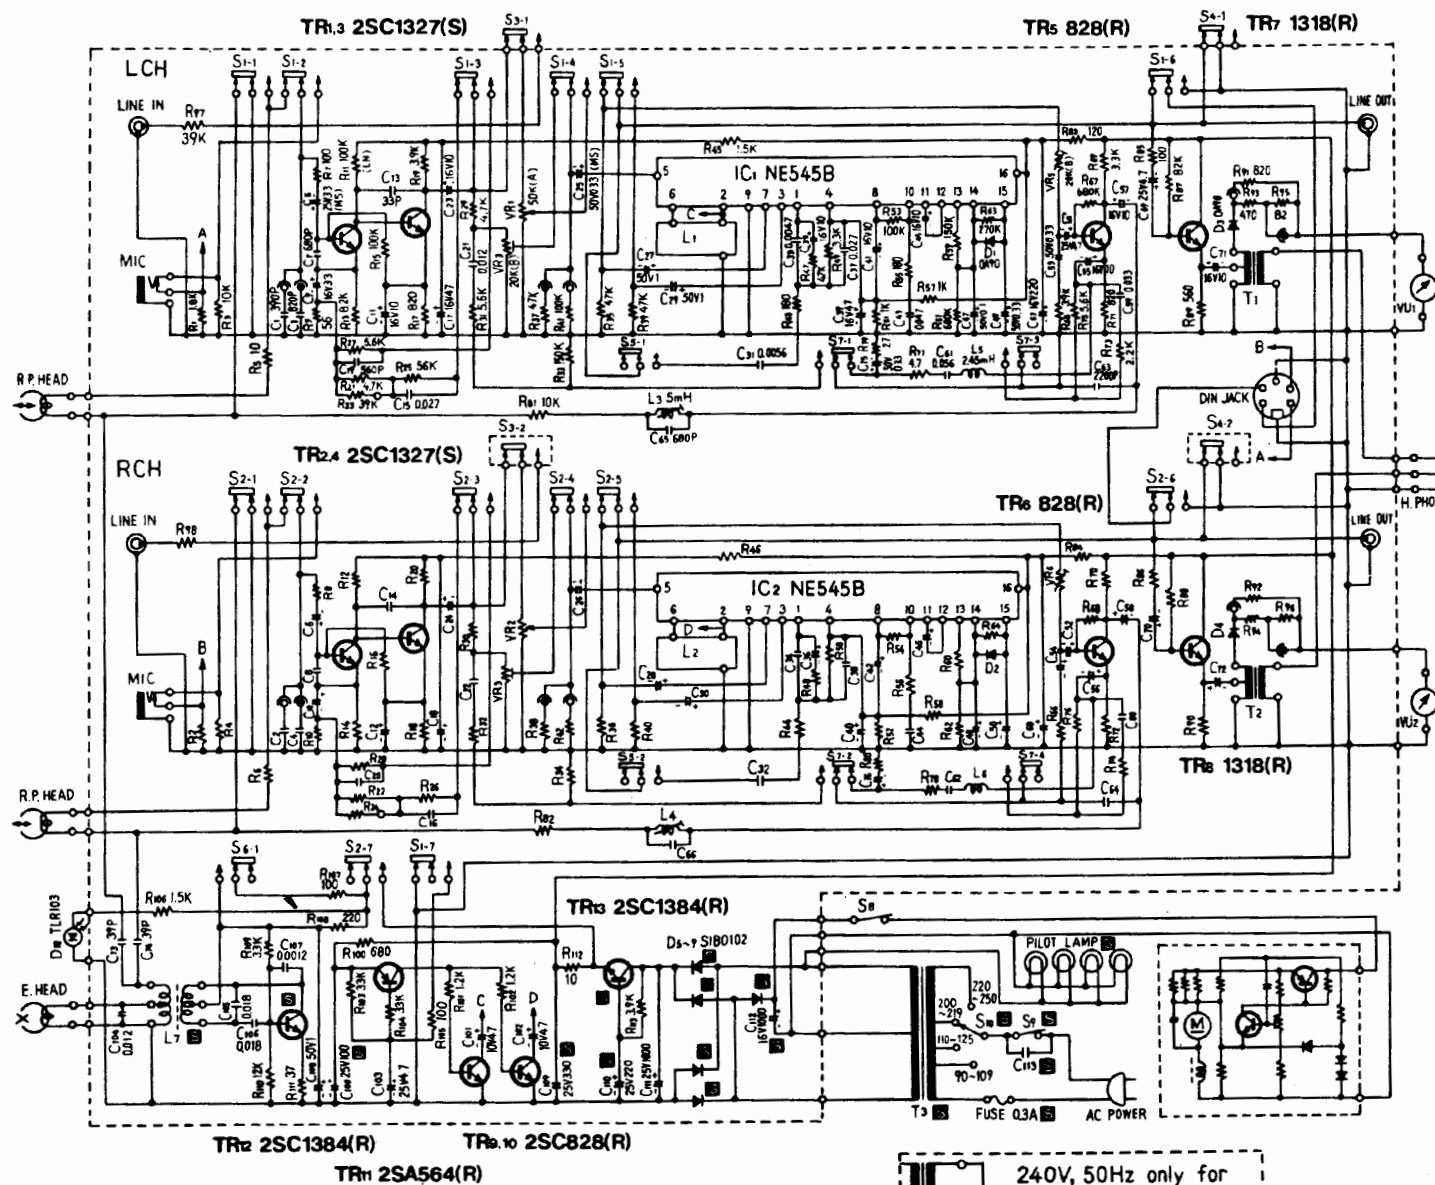

NOTE:

- S1-1~S1-7
- S2-1~S2-7... $\frac{1}{2}$ SELECT SW
(SHOWN IN PLAYBACK POSITION)
- S3-1, S3-2... INPUT SELECT SW
(SHOWN IN MIC POSITION)
- S4-1, S4-2... MUTING SW
(OFF AT PLAY & RECORD POSITION)
- S5-1, S5-2... DOLBY $\frac{1}{2}$ OUT SW
(SHOWN IN OUT POSITION)
- S6-1... BIAS SELECT SW
(SHOWN IN LOW POSITION)
- S7-1~S7-4... EQ SELECT SW
(SHOWN IN 120dB POSITION)
- S8... MOTOR $\frac{1}{2}$ OFF SW
(ON AT PLAY, REC, FF & REW POSITION)
- S9... AC POWER $\frac{1}{2}$ OFF SW
(SHOWN IN ON POSITION)
- S10... VOLTAGE SELECT SW
- VR1, VR2... RECORD IN PUT LEVEL CONTROL
- VR3, VR4... PLAYBACK LEVEL ADJ.
- VR5, VR6... RECORD LEVEL ADJ.
- L3, L4... RECORD BIAS ADJ.

• \square indicates that only parts specified by manufacturer be used for replacement in critical circuits.

• This schematic diagram is subject to change, to accommodate improvements in design.

