
# SPEAKER SYSTEM NS-45E

# BERVICE MANUAL NETWORK CIRCUIT DIAGRAM

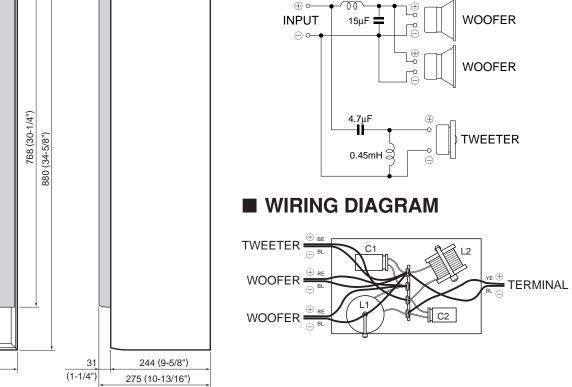

## SPECIFICATIONS

0

233 (9-3/16")

Unit : mm (inch)

DIMENSIONS

Maximum Input Power	
Sensitivity	
Crossover Frequency	
Dimensions (W x H x D)	233 x 880 x 275 mm
	(9-3/16" x 34-5/8" x 10-13/16")
Weight	11.6 kg (25 lbs. 8 oz.) /1 piece
Accessories	Speaker cord (4m) x 2, Stand x 8,
	Screw x 16, Leg x 8


. このサービスマニュアルは、エコマーク認定の再生紙を使用しています。 This Service Manual uses recycled paper.

Nominal Input Power ...... 80 W

Specifications are subject change without notice due to product improvements.





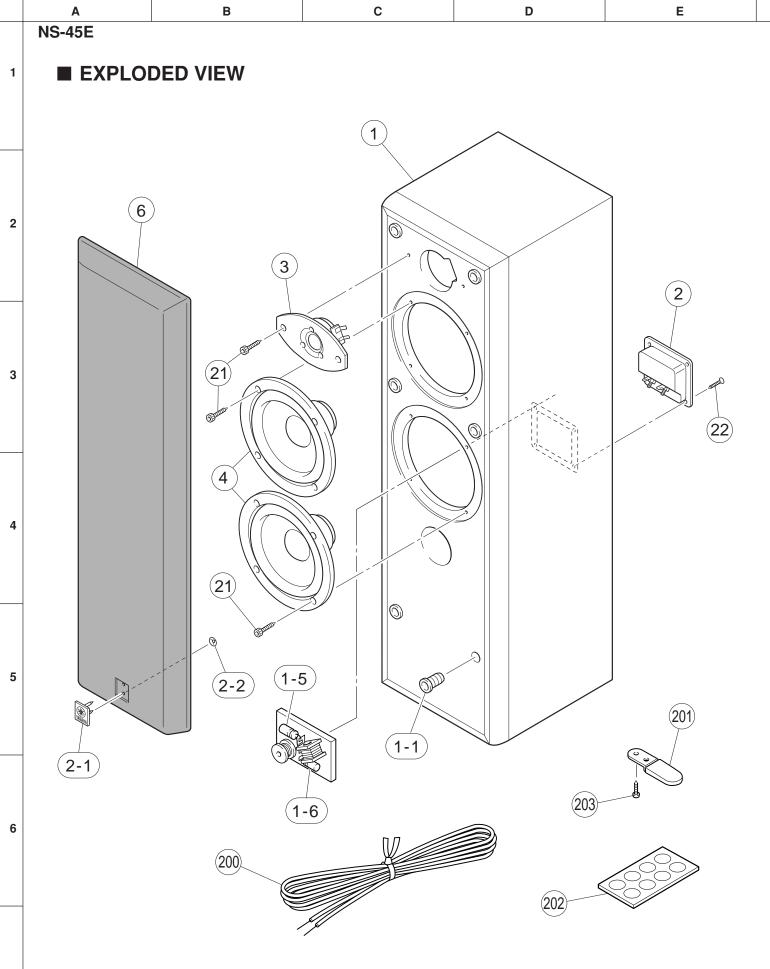

#### PARTS LIST

	Ref. No.	PART NO.	Description			Remarks	Markets
*	1	V4126000	SPEAKER CABINET				inditioto
	1-1	VU932600	HOLDER				
	1-5	FM177150	ELECTROLYTIC CAP	15uF	50V		
	1-6	VD929600	ELECTROLYTIC CAP	4.7uF	50V		
*	2	V4106400	SPEAKER TERMINAL	203-TST			
	2-1	V2729700	EMBLEM	A			
	2-2	VP161000	PUSH NUT	SPN1.5			
*	3	XW307A00	LOUD SPEAKER	TWEETE	R		
*	4	XW309A00	LOUD SPEAKER	WOOFER	२		
*	6	V4140500	FRONT GRILLE ASS'Y				
	21	V2769000	HEXAGON SOCET TAPPING SCREW	4x20	MFC2-BL		
	22	EN230180	OVAL HEAD TAPPING SCREW	3.5x16	MFC2-BL		
			ACCESSORIES				
	200	VT704200	SPEAKER CABLE	4.0m			
	201	V4564100	STAND ASS'Y	STANDX	1		
*	202	V4564500	LEG	LEGx8			
	203	EP040250	BIND HEAD TAPPING SCREW	4x16	ZMC2-BL		


\* New Parts

## ATTACHING THE STANDS



When placing the speakers, be sure to use the stands to increase stability.

Use the 8 specified holes located on the base of the speaker.

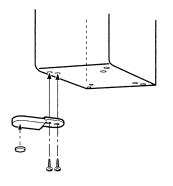

#### Procedures

1. Put a screw through the inside hole on the stand and screw it into the speaker at one of the outside holes on the base of the speaker.

At this time, screw it untightly so that the stand can still be moved.

- 2. Put another screw through the outside hole on the stand, and screw it into the inside hole on the base of the speaker.
- 3. Tighten both of the screws firmly.
- 4. Attach the leg to the bottom of the end portion of the stand.
- 5. Attach the other stands to the other corners of the base of the speaker in the same way and confirm that all 4 stands have been firmly attached.

#### Note

Be carefull not to apply force to the side of the speaker, otherwise the speaker may fall causing damage to the speaker or personal injury.