

NAD 7250PE

**STEREO RECEIVER
RECEPTEUR AM/FM STEREO
STEREO MW/UKW RECEIVER**

THIS IS THE LAST COPY
AVAILABLE/IN STOCK.
IT MUST NOT BE TAKEN
OUT WITHOUT PERMISSION.
PLEASE SEE CM.

**INSTRUCTIONS FOR INSTALLATION AND OPERATION
MANUEL D'INSTALLATION ET D'UTILISATION
BEDIENUNGSANLEITUNG**

REAR PANEL

1. AC Line Cord
2. AC Outlets (not in U.K. version).
3. Speakers A.
4. Speakers B.
5. Antenna Terminals.
6. AM Rod Antenna
7. Phono Input.
8. Phono Ground.

LE PANNEAU ARRIERE

9. Video.
10. CD Input.
11. AUX Input.
12. Tape Input/Output
13. Preamp Out, Main In.
14. Soft Clipping.
15. Speaker Impedance


1. Cordon d'alimentation.
2. Prises CA.
3. Enceintes A.
4. Enceintes B.
5. Bornes d'antennes
6. Antenne AM.
7. Entrée phono
8. Masse phonolecteur.

9. Vidéo.
10. Entrée lecteur de disque compact.
11. Entrée Auxiliaire
12. Entrée/Sortie magnétophone
13. Sortie de préamplification
14. Corréage en douceur.
15. Impédance

RÜCKSEITE

1. Netzkabel.
2. Sekundär-Steckdosen.
3. Anschlüsse für Lautsprechergruppe A.
4. Anschlüsse für Lautsprechergruppe B.
5. Antennen-Anschlüsse.
6. Mittelwellen (AM)-Femiantenne.
7. Platteneingang.
8. Masseanschluss für Plattenspieler.

9. Video.
10. CD-Eingang.
11. Reserve Eingang
12. Tonbandgerät Eingang/Ausgang.
13. Vorverstärker-Ausgang/Endverstärker-Eingang.
14. Impulsbegrenzungsschalter.
15. Lautsprecherimpedanz-Schalter.

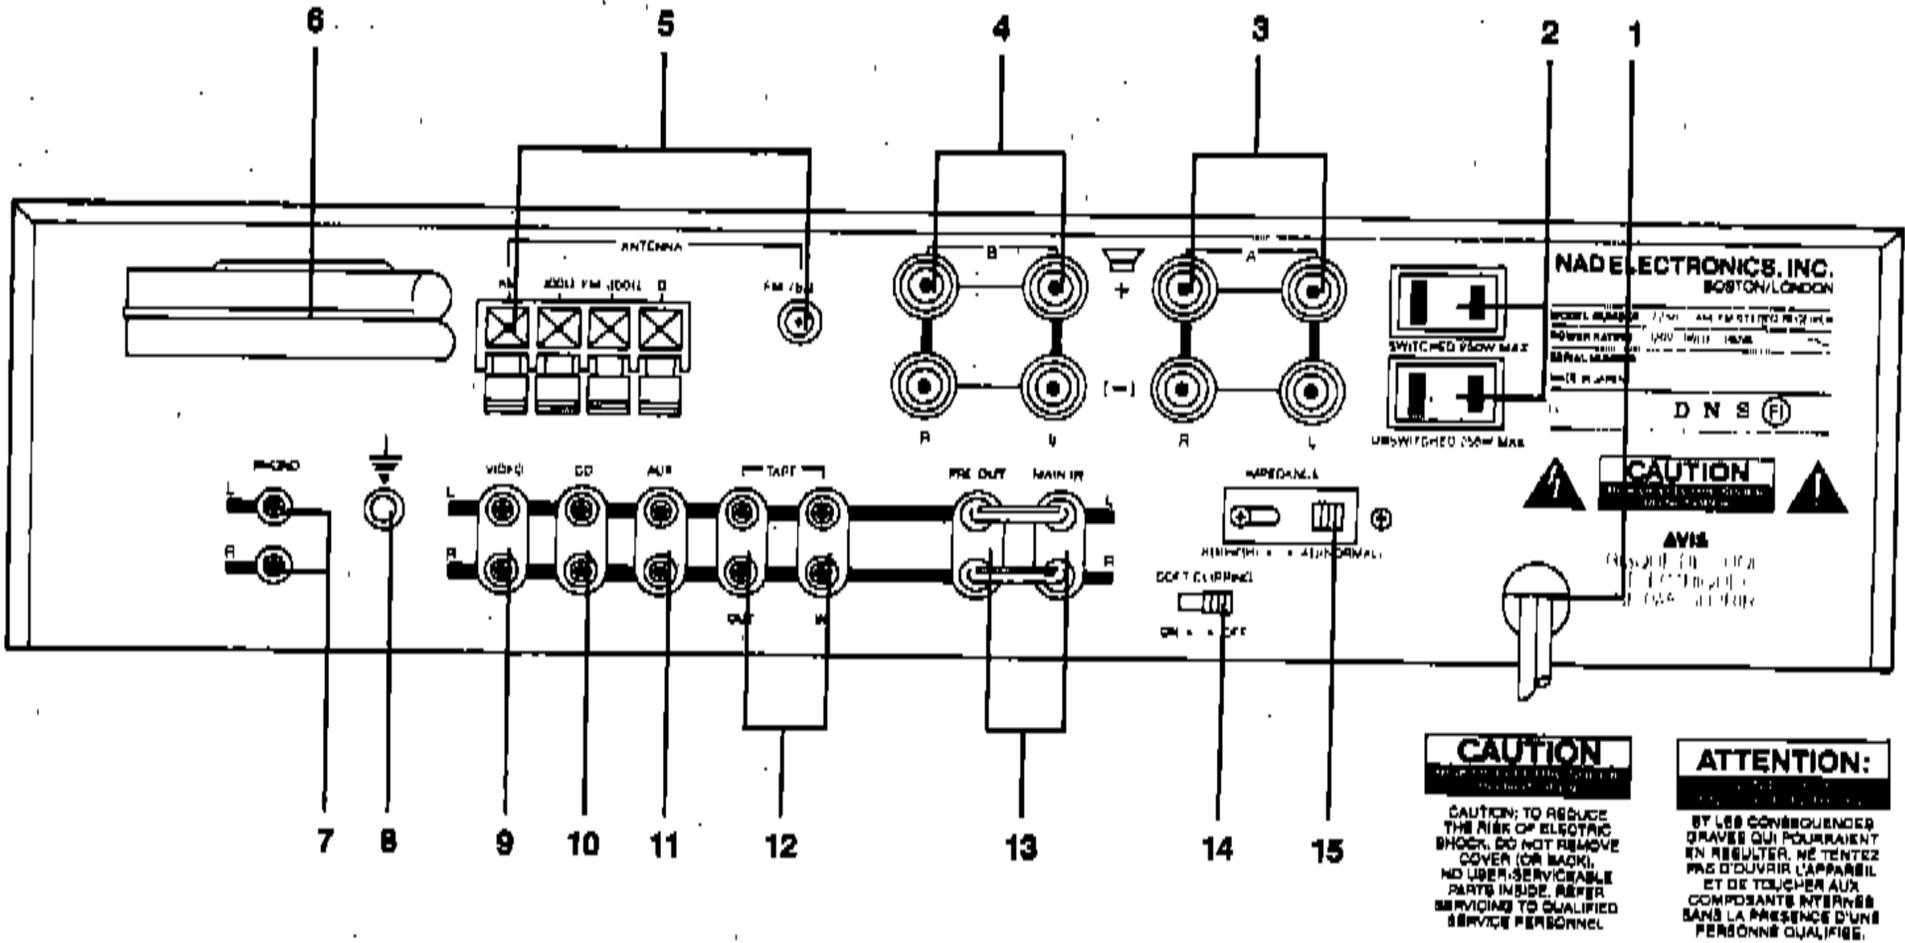

FRONT PANEL

1. Power.
2. Phono.
3. Speaker Selector.
4. Bass.
5. Treble.
6. Bass EQ.
7. Infraonic Filter Off.
8. Mono.
9. FM NR Off.
10. Tape Monitor.
11. Input Selector.

LE PANNEAU AVANT


1. Alimentation.
2. Casque d'écoute.
3. Sélecteur d'enceintes.
4. Graves.
5. Aigus.
6. Bass EQ.
7. Filtre Infraonique.
8. Mono.
9. FM NR Off.
10. Commutateur de surveillance de bande.
11. Sélecteur d'entrée.

12. «Low Level»
13. Commutateur de contour sonore
14. Volume Equilibrage
15. Affichage de la fréquence d'accord
16. Temoins
17. Touches de présélection
18. Mémoire.
19. AM FM
20. Syntonisation électronique
21. Touche de syntonisation

FRONTSEITE

1. Netzschalter.
2. Kopfhörer-Anschluss.
3. Lautsprecher-Wahlschalter.
4. Basssteller.
5. Höhensteller.
6. Bass Equalizer-Schalter
7. Schalter für Infrarot-Filtre
8. Mono-Stereo-Schalter.
9. Stereo-Rauschminderung.
10. Vor-Über-Band-Schalter.
11. Eingangs-Wahlschalter.

12. Schalter für Lautstärkeablenkung.
13. Gehörhörige Lautstärke-Einstellung
14. Lautstärke Balance-Steller
15. Abstimmanzeige.
16. Anzeigen für Betriebszustände.
17. Stationstasten.
18. Eingabebereitschaft für Stationenlastenspeicher.
19. Wellenbereichsschalter für UKW Mittelwelle
20. Wippe zur Frequenzeinstellung
21. Suchtast.

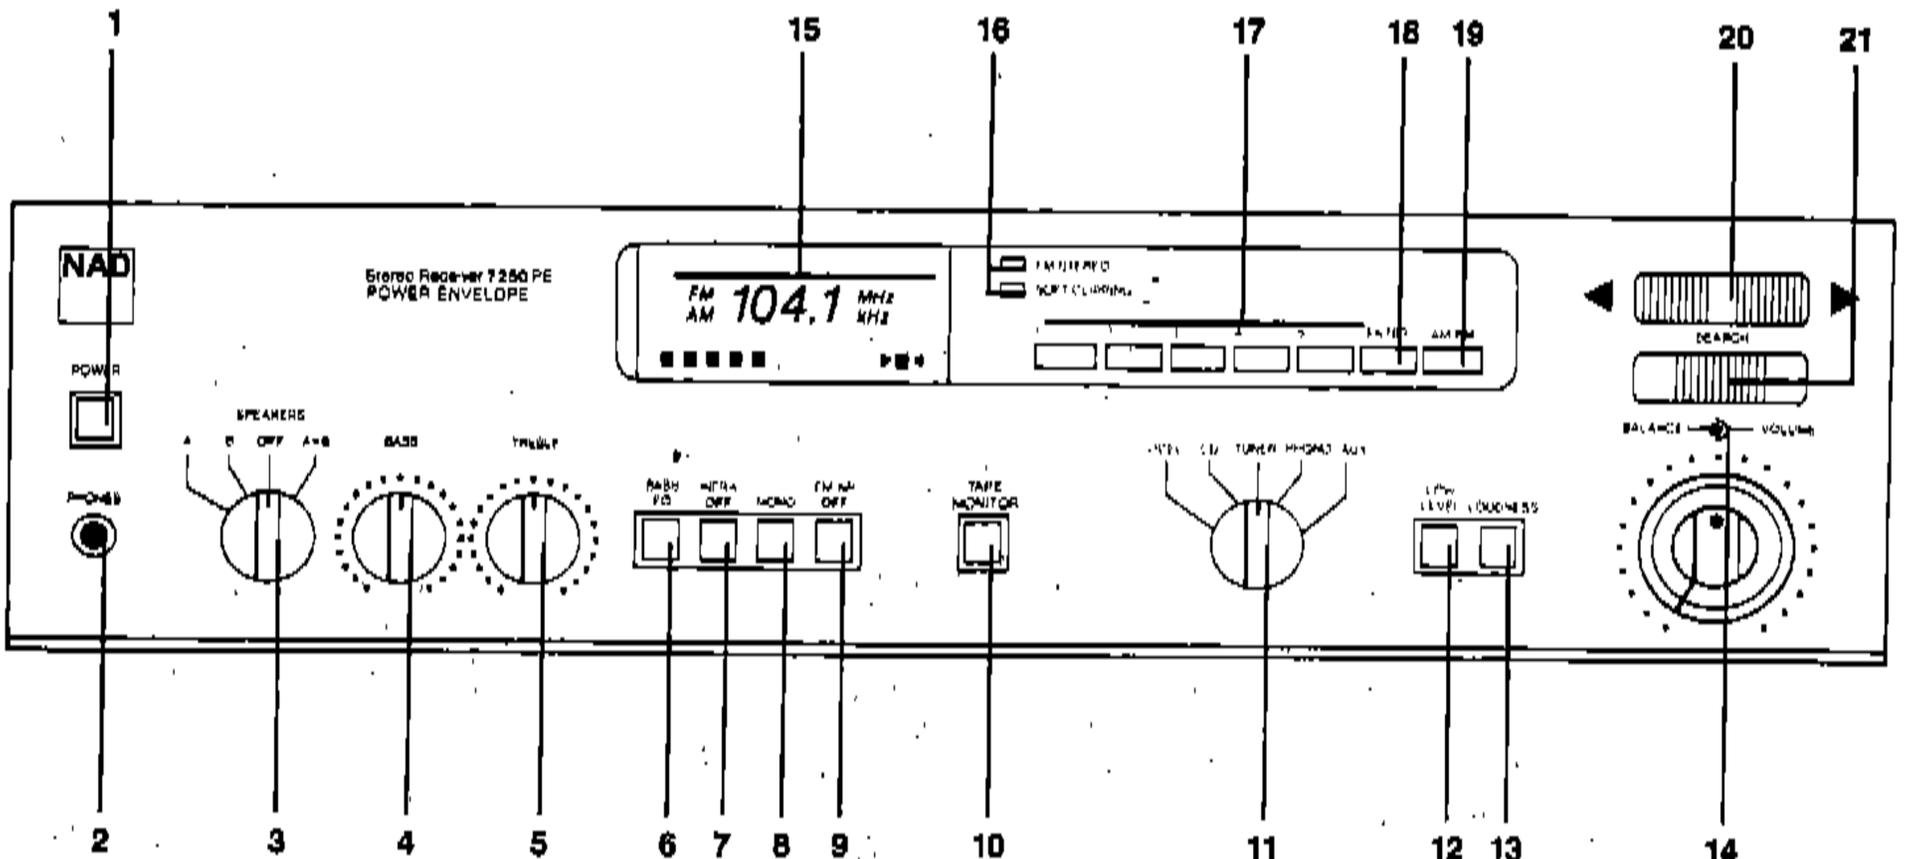

ENGLISH

A NOTE ON INSTALLATION

This unit may be installed on any sturdy, level surface. Since its power transformer generates a magnetic hum field of moderate strength, a turntable (especially one with a moving-coil pickup cartridge) should not be located directly to the left of the amplifier nor directly above it.

The amplifier generates a modest amount of heat and thus requires some ventilation. Do not place it on a rug or other soft surface that it could sink into, obstructing the air inlets on its bottom. And be careful not to obstruct the air outlet grille on the top cover.

CAUTION: To prevent a fire or shock hazard, do not permit liquid or moisture to enter the amplifier. If liquid is accidentally spilled on it, immediately shut off its power and unplug its AC power cord. Allow sufficient time for complete evaporation to occur before operating the amplifier again. (If the liquid is anything but water and/or alcohol, the amplifier should be examined by a service technician before power is applied to it.)

Do not open the amplifier, or attempt to modify or repair it yourself. Refer all servicing to a qualified technician.

REAR PANEL CONNECTIONS

1. AC LINE CORD

Plug the AC line cord into a "live" wall socket.

2. AC CONVENIENCE OUTLETS (not in U.K. model)

The AC power line cords of other stereo components may be plugged into these accessory outlets. The SWITCHED outlet is intended for all-electronic products (e.g., a tuner, equalizer, or other signal processor), and will be switched on and off by the amplifier's main POWER button. The UNSWITCHED outlet should be used to power products involving mechanical operations (e.g., a turntable or tape deck); such products should be switched on and off with their own power switches.

The UNSWITCHED outlet can also be used to power any device containing a clock timer, or a digital tuner that requires uninterrupted AC power to maintain station tuning information stored in its memory.

3. SPEAKERS A

If the wiring to each loudspeaker will not be longer than about 6 meters (20 feet), then connections should be made using 18-gauge wire such as common lamp cord ("zip" cord), available from hardware and electrical-supply stores in either white, black, or brown insulation. If the wiring to the speakers will be longer than about 6 meters, heavier 16-gauge or 14-gauge wire is preferred. Heavy-duty wiring is especially desirable if you are using speakers of low impedance or two pairs of speakers wired in parallel.

This amplifier is equipped with special high-current speaker terminals to handle the highest peak power levels that may occur in the "bridged" mode or with low-impedance loudspeakers.

To make connections, separate the two conductors of the cord, strip off about a half-inch (1 cm) of insulation from each, and in each conductor twist together the exposed wire strands. Unscrew the red or black cap on the terminal, in order to expose the small opening in the base of the terminal. Insert the bared wire into the hole, and screw the cap down tight until it grasps the wire and holds it securely.

Repeat for each conductor, connecting the wires from the left-channel speaker to the (L+) and (L-) terminals and the wires from the right-channel speaker to the (R+) and (R-) terminals in the "A" group. Check to be sure that no loose strand of wire is touching any adjacent terminal or the amplifier chassis.

Phasing. Stereo speakers should operate in phase with each other in order to yield a good stereo image and to reinforce rather than cancel each other's output at low frequencies. If your speakers are easily moved, their phasing can easily be checked. Make the connections to both speakers, place the speakers face-to-face only a few inches apart, play some music, and listen. Then swap the connection of the two wires at the back of ONE of the speakers, and listen again. The connection which produces the fullest, boomiest bass output is the correct one. Connect the wires securely to the speaker terminals, being careful not to leave any loose strands of wire that might touch the wrong terminal and create a partial short-circuit; then move the speakers to their intended locations.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure; that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

If the speakers cannot easily be set face-to-face, then phasing must rely on the "polarity" of the connecting wires. Note that the SPEAKERS terminals on the amplifier are color coded: In each channel the red terminal has positive "+" polarity and the black terminal is negative "-". The terminals at the rear of the speakers are also marked for polarity, either via red and black connectors or by labels: "+", 1, or 8 ohms for positive, "-", 0, or G for negative. As a general rule the positive (red) terminal on the amplifier is to be connected to the positive terminal of the speaker, in each channel.

To facilitate this, the two conductors comprising the speaker wire in each channel are different, either in the color of the wire itself (copper vs. silver) or in the presence of a small ridge or rib pattern on the insulation of one conductor. Use this pattern to establish consistent wiring to both speakers of a stereo pair. Thus if you connect the copper colored wire (or ribbed insulation) to the red amplifier terminal in the Left channel, do the same in the Right channel. At the other end of the wire, if you connect the copper colored wire (or the ribbed insulation) to the red or positive terminal on the left-channel speaker, do the same at the right-channel speaker.

4. SPEAKERS B

A second pair of loudspeakers may be connected to the amplifier, using the "B" group of terminals, in the same manner as the connections made to the SPEAKERS A terminals.

If the second pair of speakers is located near the first pair and will be played simultaneously, then they must be correctly phased with respect to the first pair as well as with each other. But if the second pair of speakers is located away from the first pair (in another room, for example) or will not be played at the same time as the first pair, then their phasing need not match that of the first pair. Of course, as with any stereo speakers, the second pair still must be in phase with each other.

The SPEAKERS B terminals may also be used to connect an adapter unit for electrostatic headphones. The black "-" terminals in each channel share a common ground.

Another useful option for the SPEAKERS B terminals is to connect a second pair of speakers wired for "ambience recovery," enhancing the apparent spaciousness of stereo recordings. Locate a pair of small loudspeakers along the side walls of the listening area, slightly behind the main listening area and as far as possible to the left and right. (Often it useful to aim such speakers upward or toward the rear, so that their sound reflects randomly off the walls before reaching you.) Connect a wire from the (L+) terminal to the positive terminal of the left-rear speaker, and a second wire from the (R+) terminal to the positive terminal of the right-rear speaker. Make no connection to the (L-) and (R-) terminals on the amplifier; instead, connect a wire from the negative terminal of the left-rear speaker to the negative terminal of the right-rear speaker. Thus wired, these rear speakers receive the left-minus-right "difference" portion of the composite stereo signal.

5. ANTENNA TERMINALS

If you are using an external FM antenna with a coaxial cable, it should be connected to the 75-ohm coaxial socket. Other types of antenna wires may be attached to the four antenna terminals.

In order to make connections to the four antenna terminals, remove any connectors that may be fitted on the antenna wires. Strip off 1 cm of insulation from each wire, and in each conductor twist together the exposed wire strands.

Press down the plastic tab below the appropriate terminal. Insert the bared wire into the small hole in the terminal,

and pull the tab up. The terminal will grasp the wire and hold it in place.

AM Antenna. Since the tuner is equipped with a ferrite rod antenna, no external antenna will be needed for satisfactory reception of most local broadcasting stations. But if you wish to improve reception of distant AM stations, attach a long-wire outdoor antenna to the AM terminal. As its name implies, a "long-wire" antenna is a simple, straight wire whose length may be anything from a few feet up to about 100 feet (30 meters), mounted parallel to the earth and as high as is convenient.

In some cases the effectiveness of a long-wire antenna will be improved by connecting a second wire from the Ground (G) terminal to a true earth-ground, i.e. a copper-plated rod driven several feet into the earth. A substitute electrical ground may also prove effective: a cold-water pipe, a steam radiator, or the third hole of a modern electrical wall socket.

FM Antennas. An antenna must be connected to the tuner for effective reception of stereo FM broadcasts. A ribbon-wire "folded dipole" antenna is included to get you started. When you stretch out the ribbon-wire antenna you will note that it is in the form of a T. The "crossbar" portion of the T should be stretched out horizontally and tacked in place—on a wall, on the back of a cabinet, or on the floor. The "vertical" section of the T goes to the tuner's antenna terminals. Connect its two wires to the two 300Ω input terminals.

In view of the exceptional sensitivity of NAD tuner circuits, you may find that the ribbon-wire dipole antenna is all you need for reception of strong local stations. But it is not very efficient at rejecting "multipath" and other forms of FM interference, and it cannot easily be rotated to optimize its pickup pattern for best reception of stations in different directions. Therefore, in most cases you should use a better antenna. The recommended options, in order of increasing cost, are as follows:

(1) A basic "rabbit-ears" indoor TV antenna without auxiliary coils or tuning switches. Electrically, such an antenna is just another dipole (similar to the ribbon-wire antenna) with its tuned elements made of solid metal, but with the advantage that it can be rotated. Stretch out each of its two arms to a length of 30 inches (75 cm), and orient them horizontally or at a shallow angle less than 45 degrees upward. The ribbon wire emerging from the antenna's base should be connected to the tuner's two 300Ω terminals in place of the supplied ribbon-wire antenna. Now, for each station in turn, after you tune the station you can rotate the antenna for best reception.

(2) A more elaborate rabbit-ears indoor TV antenna with a tuning switch. This type of antenna does NOT have greater sensitivity than the simpler rabbit-ears unit, so if your problem is that the signals you want to receive are weak (as shown on the signal-strength meter), then an outdoor antenna is the only effective solution. But in cities and in large buildings where signals are strong but are contaminated by reflected "multipath" signals that interfere with good reception, the tuning switch on an elaborate indoor antenna may improve reception by reducing the interference.

(3) An electrically tuned indoor antenna, such as the Technics Wing or B.I.C. Beam Box. Again, such antennas usually do not provide any advantage over the simplest type of "rabbit-ears" unit for receiving weak signals. But where strong signals are contaminated with interference, the antenna's aiming and tuning controls can reject the interference and yield cleaner reception.

(4) An outdoor antenna. Even the finest indoor antenna, no matter how elaborate, cannot fully exploit the capabilities of a good FM tuner. For the lowest noise, minimum distur-

tion, and largest choice of well-received broadcasts, an outdoor antenna is the best complement to a fine tuner.

A roof-mounted antenna has three fundamental advantages. First, its large size yields better sensitivity (pulling in a stronger signal from the desired station) and a narrower directional pattern for more effective rejection of multipath reflections arriving from other directions. Second, its location on a roof or tall mast places it above many sources of interference—passing cars and buses, other buildings, etc. Third, the strength of received FM signals is directly proportional to the height of any antenna above the ground.

If you already have an outdoor television antenna, using a splitter to extract FM signals from it may produce excellent results. However, many TV antennas are deliberately designed to be relatively weak at FM frequencies in order to minimize potential interference with TV signals at nearby frequencies (Channel 6 in the U.S.). You may be able to use a splitter to extract FM signals from an apartment building's master TV antenna system, but usually this yields poor results because many master antenna systems have "traps" to stop FM signals.

The best choice is a directional FM-only antenna, mounted as high above ground as is practical, and separated by at least two meters (7 feet) from other antennas, vertically and horizontally. If desired stations are located in different directions (more than 90 degrees apart), the antenna should be mounted on a rotor for aiming. Brand names of good FM antennas in the U.S. include Jerrold, Finco, Wineguard, Antennacraft, and Archer (Radio Shack).

Use shielded lead-in cable rather than plain "twin-lead" wire, both to minimize interference and to preserve strong signals during years of weathering. The cable may be either 75-ohm coaxial or a shielded 300-ohm type. Disconnect any indoor antenna before connecting the cable from the outdoor antenna.

If you are using a 75-ohm coaxial antenna cable that lacks a connector, you may attach its center conductor to either 300 Ω antenna terminal and connect the cable shield to the ground (G) antenna terminal. This unbalanced connection provides the required 75 Ω impedance for the cable. But the 300 Ω antenna terminals are connected to the FM tuner circuit through an internal "balun" transformer. The 75 Ω coaxial socket is wired directly to the tuner circuit, bypassing the balun transformer, so to obtain the best possible sensitivity, the coaxial cable should be connected to the 75 Ω socket.

If you install an outdoor antenna yourself, observe these important CAUTIONS:

1. Do not mount the antenna close to electric power lines. Plan the installation so that the antenna mast cannot accidentally touch power lines, either while you are installing it or later.

2. Include a lightning arrestor in the installation, to protect both yourself and the tuner circuit from potential danger during electrical storms.

6. AM ROD ANTENNA

The ferrite rod antenna provides effective reception of local medium-wavelength AM radio stations. The rod is mounted on a pivot. For best reception, swing it away from the metal chassis of the receiver.

7. PHONO INPUT

Plug the signal cables from your turntable into these jacks. If the cables or plugs are color-coded, refer to your turntable's instruction manual to learn which cable or plug is for the Left channel (upper jack) and which for the Right (lower jack). Be careful to insert each plug fully into the socket so that the plug's metal skirt fits tightly over the exterior of the socket. If necessary, crimp the plug's metal skirt slightly so as to obtain a tight fit with the socket.

8. PHONO GROUND

If your turntable is equipped with a grounding wire (usually a green wire terminating in a U-shaped spade lug), connect it to this terminal. Turn the thumb-nut counter-clockwise, place the spade lug under the nut, and tighten the thumb-nut clockwise to secure the lug. If the grounding wire has no spade lug, strip off 1 cm of insulation to expose the bare wire, twist the wire strands tightly together, insert the wire through the small hole in the shaft of the Ground terminal, and tighten the thumb-nut to fasten the wire in place.

If you encounter a persistent low-level hum or buzz in the sound, connect a wire from the Ground terminal to a true earth-ground, i.e. a copper-plated rod driven several feet into the earth. A substitute electrical ground may also prove effective: a cold water pipe, a steam radiator, or the third hole of a modern electrical wall socket.

9. VIDEO

Connect a video-related audio signal here, such as the audio output from a video cassette recorder, video disc player, TV monitor/receiver, or stereo television decoder.

Alternatively, any "line-level" audio signal may be connected here, such as the playback from a spare tape deck.

10. CD INPUT

Connect the audio signal cables from a digital Compact Disc player to these jacks. The input signal will be fed to the Volume control before reaching any active circuitry, so the amplifier's circuits cannot be overloaded by high-level signals from the digital player.

If you don't have a CD player, any other line-level signal source (such as a spare tape deck) may be connected to the CD input.

11. AUX INPUT

Use the Auxiliary Input jacks for the playback signals from any "high-level" source such as a second audio tape deck, a digital tape or disc player, or the audio output from a video tape or disc player.

12. TAPE INPUT/OUTPUT

The tape connections may be used with recorders of all types: cassette, micro-cassette, open-reel, digital, etc. To make recordings, connect a stereo patch cord from the amplifier's TAPE OUT jacks to the recorder's LINE IN jacks (not to its microphone inputs). To play back tapes, connect a stereo patch cord from the recorder's LINE OUT jacks to the amplifier's TAPE IN jacks.

The TAPE IN/OUT jacks may be used for connecting a signal processing accessory instead of a tape recorder. Examples of such accessories include a dynamic range processor, a dynamic noise filter, a DBX disc decoder, or any other device whose operation depends on the setting of a signal threshold. Connect a patch cord from the TAPE OUT jacks to the processor's inputs, and another patch cord from the processor's outputs to the TAPE jacks.

Other signal processing accessories, such as a graphic equalizer or the special equalizer supplied with some loudspeakers, may be connected either to the TAPE jacks or at the Preamp Out jacks. The choice is a matter of convenience.

13. PREAMP OUT, MAIN IN

Each channel of the amplifier includes two independent sections or stages: the control preamplifier (including the phono preamp and most front-panel controls), and the power amplifier (which provides the power to drive loudspeakers). In normal operation the preamp and power amp are connected together via factory-installed U-shaped metal jumpers that bridge the PRE-OUT and MAIN-IN jacks. Check to be

sure that they are fully inserted into the jacks and that nothing is touching them.

By removing the metal jumpers (after first switching OFF the POWER), you can connect various signal-processing accessories in the path between preamp and power amp: an equalizer, a time-delay ambience reproducer, a stereo image enhancer, an electronic crossover, etc. To use a signal processor, connect a stereo patch cord from the PRE-OUT jacks to the processor's line-level input jacks, and a second patch cord from the processor's output jacks to the amplifier's MAIN-IN jacks.

NOTE: Any signal processor whose operation depends on the setting of a threshold, such as a dynamic noise filter, should be connected to TAPE IN/OUT jacks—where the signals are unaffected by the amplifier's volume and tone controls—rather than to the PRE-OUT jacks.

If you remove the metal jumpers, save them in case you may want to disconnect the signal processor and return to normal operation at a later time. If the jumpers should be lost, a conventional stereo patch cord can be used to connect PRE-OUT to MAIN-IN in each channel.

This receiver can be used as the heart of an elaborate audiophile sound system. The preamp output is capable of driving several power amplifiers simultaneously, or of driving the long signal cables required to connect to power amps which are located near the speakers (or to "powered" active loudspeakers with built-in power amplifiers).

14. SOFT CLIPPING

When an amplifier is overdriven beyond its specified power output it normally produces "hard clipping" of the signal with harsh distortion and power-supply buzz as the output transistors saturate. The NAD Soft Clipping circuit gently limits the output waveform and minimizes audible distortion when the amplifier is overdriven. If your listening involves moderate peak power levels, the Soft Clipping may be left OFF. But we recommend that it be switched ON when

playing music at very high levels that might exceed the amplifier's power capacity.

15. SPEAKER IMPEDANCE

The impedance of a loudspeaker varies with frequency, and in many loudspeakers the impedance is lowest at the frequencies where the highest power demands occur in music. In many "8Ω" loudspeakers this minimum impedance is from 4 to 6 ohms, and in "4Ω" speakers the minimum is typically 3 ohms. If you connect two sets of speakers to the amplifier, their combined impedance is approximately half the impedance of either.

For these reasons, all NAD amplifiers and receivers are designed to produce maximum power output into impedances of 2 to 6 ohms at the 4Ω (NORMAL) setting of the impedance selector. If you are not sure of the true impedance of your speakers, or if you are connecting two pairs of speakers, leave the impedance switch at 4Ω (NORMAL).

If you are using a single pair of loudspeakers whose true impedance is above 6 ohms at all frequencies, you can optimize the amplifier for maximum power delivery at this higher impedance by re-setting the switch to 8Ω (HIGH).

To prevent accidental re-setting, the impedance switch is held by a slotted bracket which is fastened by a screw next to the switch. Use a small screwdriver to loosen the bracket screw, turning it about a half-turn counter-clockwise, and then slide the switch to the 8Ω (HIGH) position. The bracket will move with the switch. Tighten the screw to secure the switch in its new position.

CAUTION: If the impedance switch is set to 8Ω (HIGH) with loudspeakers whose true impedance is lower than 6 ohms, or with two pairs of speakers connected in parallel, the amplifier will tend to overheat and shut down when operated at high output levels. The amplifier will resume normal operation after it cools; but such abuse could also cause internal fuses to blow in order to protect the amplifier. If this occurs, return the amplifier to your dealer for service.

FRONT PANEL CONTROLS

1. POWER

Depress this button to switch on the receiver and any other equipment plugged into the SWITCHED convenience outlet on the rear panel. The frequency display will illuminate when the power is on. To switch the power off, depress the button again and release it.

If you prefer, you may leave the POWER switch permanently engaged and use an external switch (such as a clock timer) to turn the power on and off.

2. PHONES

Plug stereo headphones in here. The circuit will provide proper drive signals for all conventional stereo headphones regardless of their impedance, with just one exception: electrostatic headphones usually are supplied with an adapter unit which must be connected directly to the speaker terminals on the rear panel.

Before plugging any headphones in, turn down the VOLUME control for safety. And when you are not listening to the headphones it is wise to unplug them from the PHONES jack. Otherwise, when not wearing the phones you might inadvertently turn up the volume to a high level and feed dangerously strong signals to the headphones.

You may freely use headphone extension cables. If you want to use a headphone Y-connector to drive two headsets simultaneously, they should be identical models. Connecting together two headphones that differ widely in impedance usually will produce a substantial loss of volume in the headset having the higher impedance (or in both).

3. SPEAKER SELECTOR

When this switch is set to "A", sound is heard only from the loudspeakers connected to the SPEAKERS A terminals on the rear panel. When the switch is set to "B," the SPEAKERS A terminals are shut off and sound is heard only from the loudspeakers connected to the SPEAKERS B terminals. At the "A+B" setting the amplifier's output power is fed to both sets of speakers in parallel. At the "OFF" setting both sets of speakers are silenced.

Thus if you have your main stereo speakers wired to the "A" terminals and a set of extension speakers wired to the "B" terminals, you can choose to hear only the main speakers (A), only the extension speakers (B), or both (A+B).

The amplifier's output signal is present at the PHONES jack at all settings of the SPEAKERS selector switch. When using headphones it normally is advisable to switch OFF the loudspeakers. Then the VOLUME control may freely be used to adjust the loudness level in the headphones with no fear of overdriving the speakers or disturbing neighbors.

If you have connected an adapter unit for electrostatic headphones to the SPEAKERS B terminals, you can use the SPEAKERS selector to switch between your main stereo speakers (A) and the headphones (B).

If you have connected speakers wired for "ambience recovery" to the SPEAKERS B terminals, you can use the SPEAKERS selector to listen to conventional stereo (A), to switch off the main speakers and listen only to the stereo L-minus-R "difference" signal in the rear speakers (B), or to listen to spatially enhanced stereo (A+B). You will find that the stereo difference signal is usually lacking in bass. If the difference signal is very weak, the recording lacks stereo separation.

4. BASS

The Bass control adjusts the relative level of the low frequencies in the sound. The electrical response of the amplifier is flattest when the control is set in the detent at the 12 o'clock position. Rotation of the knob to the right (clockwise) increases the level of low-frequency sounds, and

rotation counter-clockwise decreases their level. Adjust the Bass control to achieve the tonal balance that sounds most natural to you.

At moderate rotations away from center the effect of the Bass control is subtle, because its action is confined to the lowest audible frequencies where significant energy is seldom found in recordings. Only at large rotations away from center is there a substantial boost or cut at the mid-bass frequencies that are common in music.

5. TREBLE

The Treble control adjusts the relative level of the high frequencies in the sound. The response of the amplifier is flattest when the control is set in the detent at the 12 o'clock position. Rotation of the Treble control to the right (clockwise) increases the level of high-frequency sounds, and rotation counter-clockwise decreases their level. Adjust the Treble control to achieve the tonal balance that sounds most natural to you.

Boosting the Treble increases the brilliance and clarity of details in the sound, but also makes any noise more prominent. Turning down the Treble makes the sound mellower while suppressing hiss and record surface noise; but too much Treble roll-off will make the sound dull.

6. BASS EQ

This circuit boosts the lowest bass frequencies, those below 60 Hz. In virtually all loudspeakers the useful output rolls off at frequencies below the woofer/cabinet resonance (which typically occurs between 40 and 70 Hz). The BASS EQ circuit compensates for this rolloff, extending the useful response of the speakers significantly lower in frequency.

If your loudspeakers already have extended and powerful deep-bass response, the BASS EQ provides other benefits:

- It helps to correct the rolled-off bass in some recordings.
- It provides effective "loudness compensation" to restore subjectively correct tonal balance at low volume levels.
- It helps to compensate for listening-room acoustics. ("Standing waves" in the room tend to weaken the low bass and reinforce the mid-bass at typical listening positions.)

Of course very low frequencies are not found in all music, nor in all recordings, so the effect of the BASS EQ often won't be obvious. Sometimes you may find that switching it in and out does not produce any apparent change in the sound, simply because the recording contains no energy at very low frequencies. But usually the BASS EQ will provide an audible (and occasionally a dramatic) strengthening of the deepest bass.

The BASS EQ circuit also includes an infrasonic filter that rolls off the response below 25 Hz to prevent inappropriate amplification of non-musical signals below the audio range.

CAUTION: Be prepared to switch off the equalization when playing recordings (especially digitally mastered discs) that contain unusually powerful recorded bass. The combination of a high playback volume level, the BASS EQ, and a bass-heavy input signal could overdrive the amplifier into clipping and—more important—overdrive your woofers beyond their safe excursion limits; causing the voice-coils to clatter against the magnet back-plates. (This risk is particularly serious with small woofers, those smaller than six inches in diameter, which usually are not designed to accept high power levels at the lowest frequencies.) As long as a speaker sounds good it probably is OK; but distorted or unmusical sounds, such as clattering or buzzing, signal distress in a woofer.

Be alert, also, for signs of acoustic feedback (in which the low-frequency vibrations from the speakers are picked up by the record-playing stylus and are re-amplified). If you encounter a sustained low-frequency roar, or frequent groove-jumping, immediately turn down the Volume and switch off the BASS EQ until a more nearly vibration-free mounting for the turntable is found.

7. INFRASONIC FILTER OFF

The output from a record player usually contains strong but inaudible impulses at infrasonic frequencies (below 20 Hz) due to disc warps, stylus/tonerarm resonance, and vibrations reaching the turntable. If these are amplified at full strength, they may waste amplifier power, and produce excessive woofer cone excursions, muddying the sound.

The infrasonic filter attenuates these unwanted signals. The filter is normally in-circuit (with the button OUT), and it is especially desirable to have it in-circuit when a large low-frequency boost is being applied via the BASS control.

If you want to bypass the infrasonic filter, depress the INFRA OFF button. As long as the button is OUT, the filter is active.

A second infrasonic filter is included in the BASS EQ circuit and is automatically engaged when the bass equalization is used. It is not affected by the INFRA OFF button.

8. MONO

This button blends the two stereo channels together to produce monophonic sound. This blend minimizes rumble and surface noise in old monophonic records. The button must be OUT for normal stereo listening.

The MONO button also disables the stereo FM circuits in the tuner. Normally the tuner receives monophonic transmissions in mono and automatically switches on its multiplex decoding circuits when a stereo FM broadcast is received (as shown by the FM STEREO indicator). But when a very weak FM stereo signal is received, it may be excessively noisy because of the multiplex encoding technique used for stereo broadcasting. In that case, depress the MONO button to lock the tuner in the mono mode, in order to obtain consistently quieter and cleaner sound.

Remember to disengage the MONO button when you re-tune to a stronger signal. As long as the MONO button is engaged, no broadcasts can be received in stereo.

9. FM NR OFF

The tuner contains an FM Noise Reduction circuit that automatically reduces noise in weak FM stereo signals by reducing the stereo separation. As the received signal becomes weaker and the stereo subcarrier becomes noisier, the circuit automatically reduces the contribution of the stereo subcarrier to the final sound, obtaining the best practical compromise between quieting and subjective image breadth. Even with maximum noise reduction, the circuit maintains enough channel separation to produce a stereo image that is appreciably wider and more spacious than mono.

For normal operation of the circuit, leave the button OUT. The FM noise-reduction circuit operates only on those weak stereo FM signals that would be noisy without it. It does not affect the reception of strong signals.

If you want to turn off the noise-reduction and restore full stereo separation, press the FM NR OFF button. You may not hear an obvious difference when this button is pressed, since most broadcast signals are strong enough to disengage the circuit automatically.

10. TAPE MONITOR

When this button is pressed it lets you hear the playback signal from your tape recorder, or any other device connected to TAPE IN input jacks on the rear panel. If you have

a signal-processing accessory (such as a graphic equalizer or dynamic expander) connected to the TAPE IN/OUT jacks, pressing TAPE MONITOR allows you to hear the processed signal.

The TAPE MONITOR button affects only what you hear, not what is being recorded. The program source chosen by the INPUT SELECTOR is always fed to the TAPE OUT jacks for recording, and is not affected by any other controls (Volume, Balance, tone controls, etc.).

CAUTION: If you have nothing connected to the TAPE IN/OUT jacks, or have a tape deck connected but not running, then when you press TAPE MONITOR you will hear nothing but silence—regardless of what other selector buttons you may press! To disengage the TAPE MONITOR circuit and restore the normal signal path, press the TAPE button again and release it.

The standard purpose of the TAPE MONITOR is to allow you to listen to recorded tapes, and also to check on tape recordings as they are being made. If you have a three-head tape deck that allows off-the-tape monitoring during recording, the TAPE MONITOR switch will let you hear the playback signal from the tape immediately after it is recorded, so that you can check on its quality. (Of course, you must also set the Source/Tape switch on the recorder to Tape.)

COPYING TAPES: If you want to copy a recording from one tape deck to another, connect the playback cable from the "source" deck (the machine containing the tape to be copied) to the AUX input. Connect the "copying" or "dubbing" recorder to the TAPE IN/OUT jacks. Select AUX on the INPUT SELECTOR to hear the source tape and feed its signal to the copying recorder. If you then press the TAPE MONITOR button you will hear the signal after it has passed through the copying recorder's electronics.

If you need greater flexibility in connecting and copying among multiple tape decks, the best method is to purchase an external switch-box, connect it to the TAPE IN/OUT jacks, and connect the tape decks to the switch-box.

11. INPUT SELECTOR

This switch selects the input signal for the amplifier. The selected input signal will be heard through the loudspeakers or headphones as long as the TAPE MONITOR button is disengaged. The selected input signal will also be fed out through the TAPE OUT jacks for tape recording or signal processing.

12. LOW LEVEL

This button reduces the volume of the amplified sound by approximately 20 decibels. It has no effect on the signal fed to the TAPE OUT jacks for taping or processing. The LOW LEVEL switch has several practical uses:

- It extends the useful range of the Volume control. With high-output signal sources, with efficient loudspeakers, or with sensitive headphones, you may find that the sound is too loud over most of the range of the Volume control, so that you are restricted to using only settings near the lower end of the control range. In this case, engaging the Low Level switch to reduce the output level will allow you to use the full range of the Volume control for normal listening.

- It provides optimum signal-to-noise ratio for low-level listening in quiet environments. For example, if you are listening to soft music late at night when the surroundings are quiet, the Low Level switch minimizes the already-low residual noise of the preamplifier and tone-control circuits, ensuring noise-free listening.

- It provides a convenient temporary cut in volume, to be used while answering the telephone for instance. When the button is pressed again and released, it restores the volume precisely to the pre-set level.

13. LOUDNESS COMPENSATION

This button engages a "loudness compensation" circuit which, at low-to-medium settings of the Volume control, boosts the bass response of the amplifier in order to compensate for the human ear's diminished sensitivity to low-frequency sounds at low loudness levels. The circuit also provides a slight treble boost to overcome the "masking" of subtle high-frequency details by background noise.

Instead of using this button, you may prefer to use the tone controls and BASS EQ to obtain the tonal balance that sounds most natural to you, at any volume level.

14. VOLUME/BALANCE

The knurled outer ring of this two-section knob is the Volume control, which adjusts the overall loudness of the sound. The control is designed for accurate tracking of the two channels, so that the stereo balance will not shift noticeably as the Volume control setting is varied.

The center section of the dual knob is the Balance control, which adjusts the relative levels of the left and right channels. A detent at the 12 o'clock position marks the point of equal balance. Rotation of the knob to the right (clockwise) decreases the level of the left channel so that only the right channel is heard, thus shifting the sonic image to the right. Rotation of the knob to the left shifts the sonic image toward the left speaker.

Adjust the Balance control to produce a natural spread of sound across the space between the speakers, with any monophonic sound (such as a radio announcer's voice) appearing as a phantom image centered midway between the speakers.

Ideally the detented center position of the Balance control would be its normal setting. But several common circumstances may cause an unequal balance between the channels, requiring a compensatory off-center setting of the Balance control to restore the most uniform spread of stereo sound between the speakers. Examples include unequal output from the two channels of the phono cartridge, different acoustical environments around the two loudspeakers, or simply a listening position that is closer to one speaker than to the other.

These controls do not affect the signals fed to the TAPE REcording jacks.

15. TUNING DISPLAY

This display is in three parts: frequency, signal strength, and tuning.

Frequency. The display shows the tuning band and the frequency to which the tuner is set, for example "FM 103.70 MHz" or "AM 1290 kHz." The fifth digit of the FM frequency display is reduced in size and brightness. In Europe and elsewhere the fifth digit will be either 0 or 5 since the tuning increment is 0.05 MHz.

Signal Strength. The signal strength meter is a series of five bars. The number of illuminated bars increases with the strength of the received signal. If only one or two bars illuminate, the signal is too weak for noise-free reception in stereo, but reception may be satisfactory in mono. Strong signals are indicated by four or five illuminated bars. If fewer than four bars are illuminated when you are correctly tuned to a station, then you are not getting all of the noise-reducing in stereo that the tuner is capable of, and a better antenna (or a re-aiming of your present antenna) is needed in order to pull in a stronger signal.

Tuning. The center-tuning indicator (FM only) consists of an illuminated rectangular bar (like those in the signal strength meter) flanked on either side by a triangular pointer. The triangular pointers illuminate to indicate that the tuning is within an FM station's channel but not at the center of that channel. The pointer shows the direction that the tuning must

be shifted in order to tune the station correctly. When you are accurately center-tuned the triangular pointer fades out and only the middle bar is illuminated.

On the AM band, tune for maximum signal strength.

16. STATUS INDICATORS

The FM STEREO indicator illuminates when a stereo FM broadcast is received and decoded. Note that if the MONO button is engaged, all broadcasts will be received in mono.

If an FM station is broadcasting only in mono, or if a stereo broadcast signal is too weak for reasonably noise-free reception in stereo, then the tuner will automatically switch into the mono mode, and the FM STEREO light will not illuminate. Also, if you have mis-tuned away from the center of a station's broadcast channel, the stereo decoding circuits may not lock onto the signal and it may be received only in mono.

The SOFT CLIPPING indicator illuminates when the Soft Clipping switch (on the rear panel) is engaged.

17. PRESETS

You can store the frequencies of ten favorite stations (5 FM and 5 AM) in these pre-sets, using the ENTER button. Then, to tune those stations from day to day, just press the appropriate pre-set button.

The pre-sets preserve their frequency assignments when the power is switched off, or when the AC line cord is unplugged, for a period of at least two weeks. Thus you can re-arrange your stereo system, or move the equipment from room to room, without losing the pre-set frequencies. But if you leave the power off for a month or more, you may have to re-program the tuning pre-sets.

18. MEMORY ENTER

This button engages the Memory Enter mode. Use this mode to enter the frequencies of your favorite stations in the ten pre-sets (five pre-sets on the FM band and another group of five pre-sets on AM). The procedure is as follows.

(1) Decide which station you want to assign to each pre-set. On each band you may arrange the stations in any order that you find convenient to use or easy to remember: alphabetical (1 = WABC, 2 = WCBS, 3 = WNYC . . .), numerical (1 = BBC1, 2 = BBC2 . . .), or in order of increasing frequency (1 = 89.7, 2 = 90.9, 3 = 95.3, etc). If you are not certain of the frequencies of the stations, check the station/frequency directory in a local newspaper or broadcasting guide.

(2) Select the FM or AM band, as appropriate. Using the Up/Down Tuning control, manually tune to the first station on your list. Check the signal-strength display (AM) or center-tune indicator (FM) to be sure that you have tuned precisely to the center of the station's broadcast channel. Press the ENTER button, then press Pre-set #1 to store the first station in the tuner's memory. (NOTE: After you press ENTER, you will have approximately ten seconds to store a station in one of the pre-sets. After that interval, the ENTER mode will automatically de-activate.)

(3) Tune to the second station on your list. Press the ENTER button and, within ten seconds, press Pre-set #2 to store the second station.

(4) Tune to the third station on your list, press ENTER, and press Pre-set #3 to store the station. Continue in this manner with any other stations that you want to store in the remaining pre-sets. Then switch to the other tuning band (FM or AM) and repeat the process for the second set of five pre-sets.

Incidentally, if you make a mistake or change your mind, it is not necessary to re-program all five pre-sets in sequence. You can re-program any pre-set simply by tuning

to the desired frequency, pressing ENTER, and pressing the pre-set that you want to re-program.

After you finish programming the pre-sets, you may wish to post your list of stations and associated pre-set numbers nearby for reference.

CAUTION: In day-to-day operation, be careful not to press the ENTER button by accident. Doing so will activate the ENTER mode, and if you then press any of the pre-set buttons you will unintentionally re-program that pre-set. You would then have to manually re-tune to the station you wanted, and re-ENTER it into the pre-set.

If you press ENTER accidentally, you may wait ten seconds for the ENTER mode to disengage. Or you can immediately force the tuner out of the ENTER mode, in either of two ways: switch to the other tuning band (e.g., from FM to AM and back), or tap the Up/Down Tuning rocker to change the tuned frequency.

19. AM/FM

This button switches between the two tuning bands: FM or medium-wave AM. The digital tuning display shows the tuned frequency in MHz (for FM) or kHz (for AM).

The tuning circuit has a "last station selected" memory. When you switch between tuning bands, the circuit automatically re-tunes the last station that you were tuned to when you previously used that band.

20. UP/DOWN TUNING

The Up/Down Tuning control is a "rocker" switch that allows you to tune up and down the AM or FM radio spectrum. Press the right-hand section of the rocker to tune toward higher frequencies, or the left-hand section to tune toward lower frequencies.

When the Tuning rocker is pressed momentarily, the tuned frequency shifts up or down by one step, unless the SEARCH mode has been engaged. (If SEARCH is engaged the tuner will scan in a station-by-station mode rather than in small tuning steps.)

In North America the size of the minimum tuning step is 10kHz on the AM band. In Europe and elsewhere the tuning step is 9 kHz on AM. Each time the Tuning rocker is tapped, the tuned frequency will shift up or down by this increment, as shown on the digital frequency display.

If the Tuning rocker is held down with continuous pressure rather than just being tapped, the circuit pauses briefly and then scans rapidly up or down in frequency.

To tune a broadcast signal, press continuously on either side of the Tuning rocker until the tuned frequency is close to the desired broadcast frequency. Then fine-tune in small increments by tapping the Tuning rocker. If you know the exact frequency of the broadcast station, simply tune to that frequency. If you don't know the exact frequency, tune to the vicinity of the correct frequency and then observe the Signal Strength and Tuning indicators while fine-tuning. For AM

broadcasts, fine-tune to obtain maximum signal strength. On FM, fine-tune until the center-tune indicator is illuminated.

21. SEARCH

When the SEARCH button is engaged, the tuner scans in a station-by-station mode rather than in small frequency increments. When the Up/Down Tuning rocker is tapped, the tuner scans rapidly up or down in frequency and automatically stops at the next station whose signal is strong enough for good reception. A muting circuit automatically silences the output during the scan, until the tuning circuits lock onto a station.

The manual tuning mode (with the SEARCH button OUT) partially over-rides the scan muting. In this mode all stations (and the inter-station noise) remain audible at a reduced volume level while the tuning is being scanned up or down in frequency.

If you want to search for very weak signals, or if you need to fine-tune away from the center of a station's broadcast channel in order to cure an interference problem, use the manual tuning mode and switch off the FM muting.

A NOTE ON OVERLOAD PROTECTION

Because NAD amplifiers sound so clean and musical when driven beyond their nominal power ratings and when used to drive low-impedance loudspeakers, you may be tempted to stress this amplifier beyond its design capacity. It can safely and cleanly drive impedances as low as 2 ohms with wide-range musical signals whose peak level is 100 watts or more, but it may overheat if called upon to deliver high power continuously into a low impedance.

Thus you may play music at volume levels which cause the brief transient peaks and climaxes in music to exceed the amplifier's rated power by a considerable margin (and with Soft Clipping the music will continue to sound good at those high peak levels). But if you overdrive the amplifier continuously rather than only on peaks, the output transistors may overheat. If the output transistors become dangerously hot, a thermal circuit breaker will automatically shut off the amplifier to protect them.

Thus if both channels of sound go silent while the POWER Indicator remains illuminated (indicating that the power-supply fuses are intact), the thermal circuit breaker may have been activated. To resume operation, simply turn off the amplifier and wait a minute or two for the output stage to cool, and the circuit breaker will re-set automatically. In most cases a very slight reduction in volume level will prevent further interruptions in the sound.

If the protective circuit breaker interrupts the sound often, several likely causes should be considered: papers or a cloth obstructing the ventilation grille in the amplifier's cover, or a loose strand of wire causing a partial short-circuit between speaker terminals, or an attempt to drive low-impedance speakers with the impedance switch set to 8 ohms.