MODEL 2010 Amplifier-Speaker

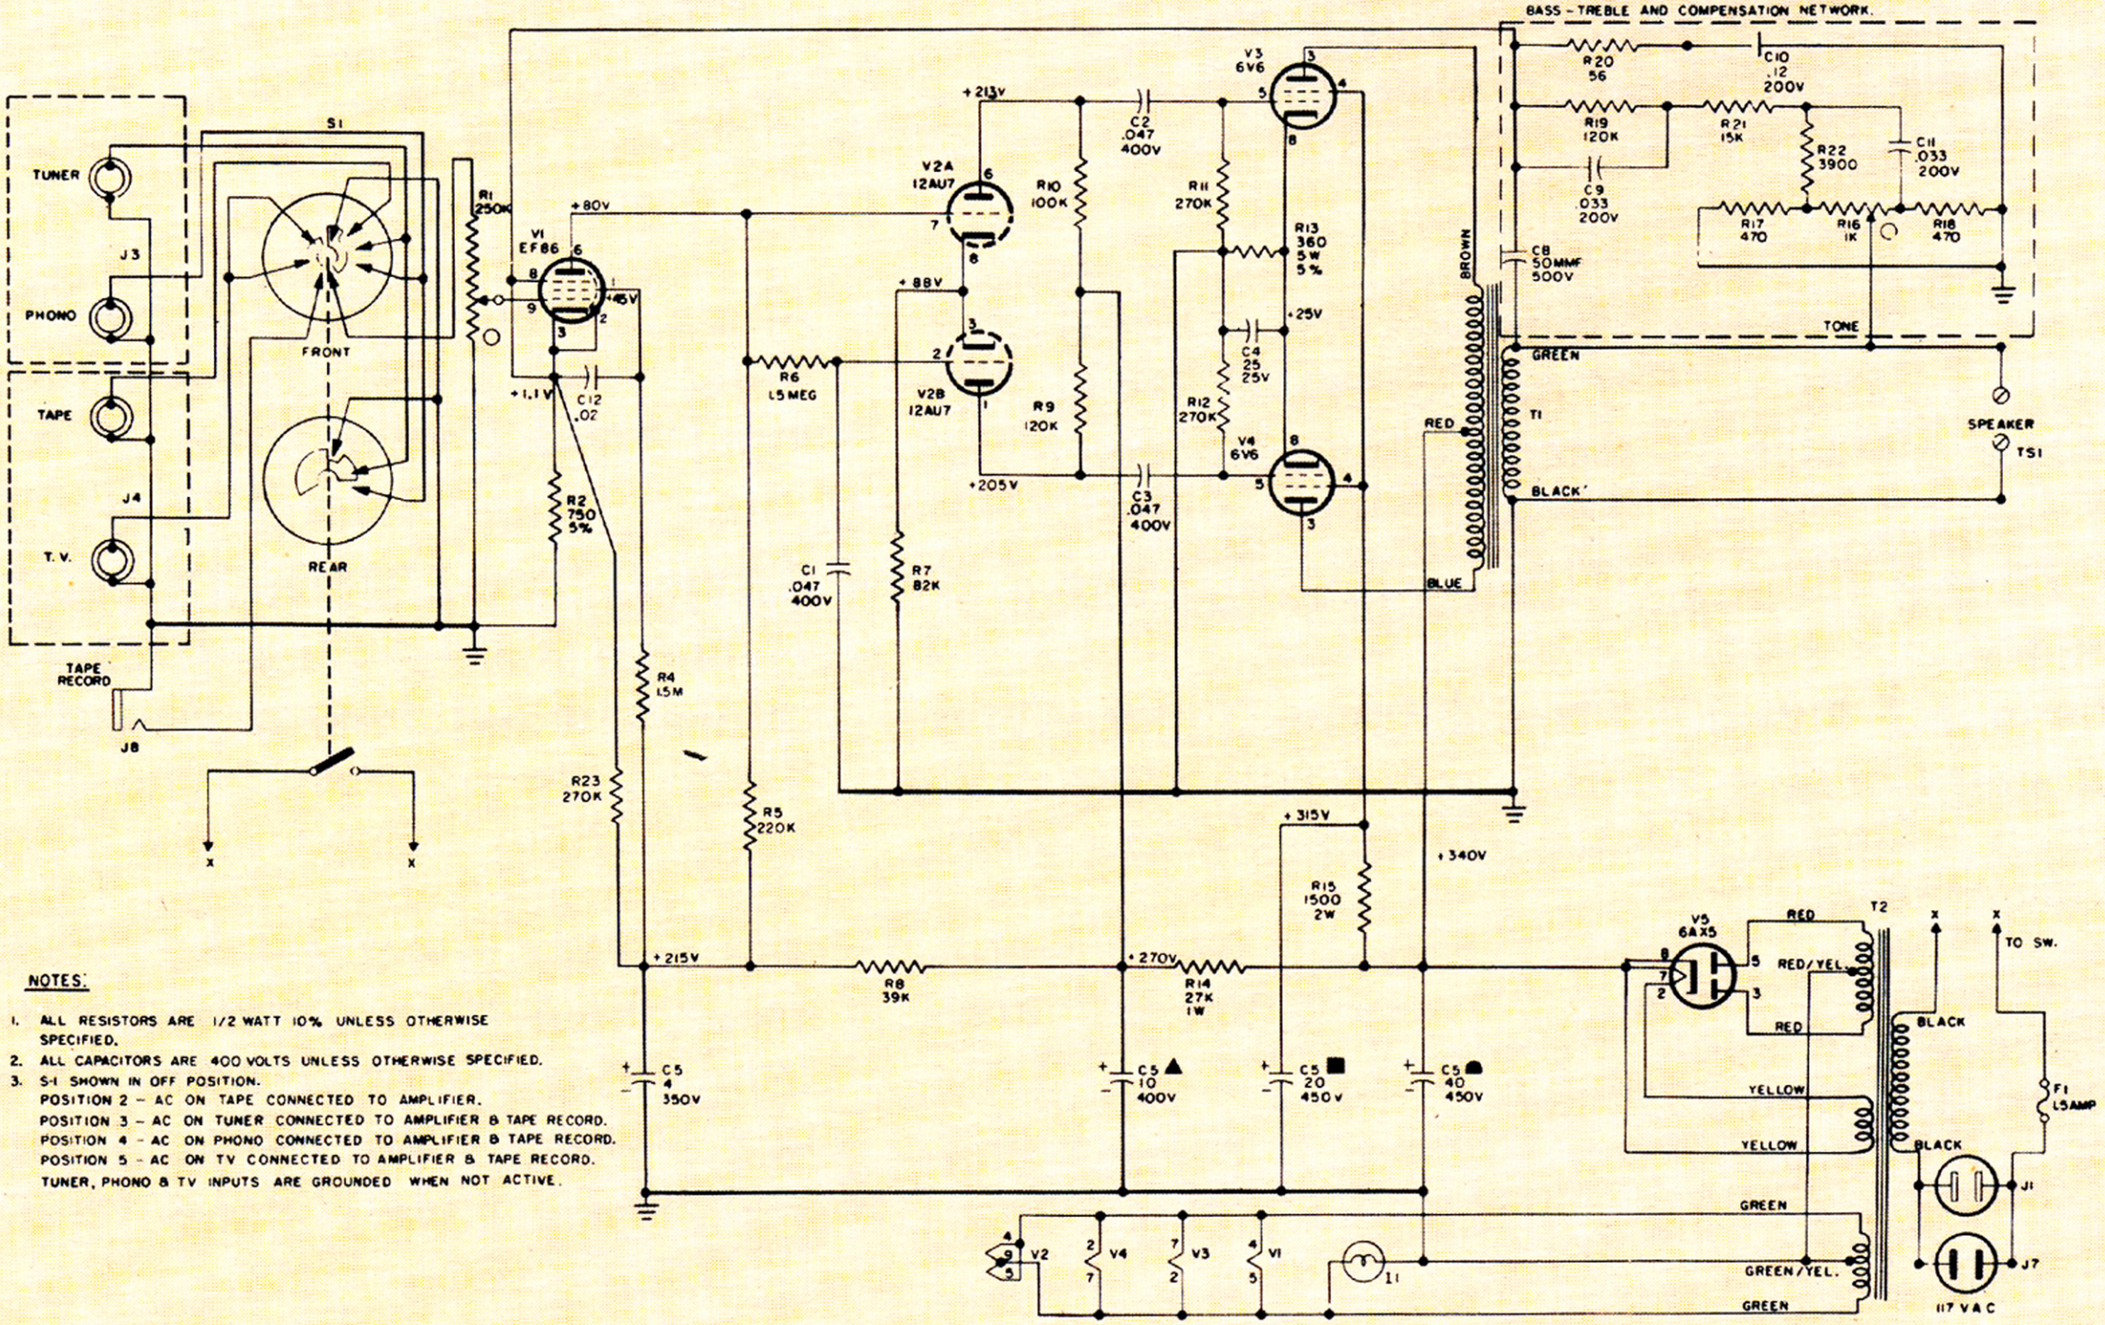

NOTES:

1. ALL RESISTORS ARE 1/2 WATT 10% UNLESS OTHERWISE SPECIFIED.
2. ALL CAPACITORS ARE 400 VOLTS UNLESS OTHERWISE SPECIFIED.
3. S-1 SHOWN IN OFF POSITION.
   POSITION 2 – AC ON TAPE CONNECTED TO AMPLIFIER.
   POSITION 3 – AC ON TUNER CONNECTED TO AMPLIFIER & TAPE RECORD.
   POSITION 4 – AC ON PHONO CONNECTED TO AMPLIFIER & TAPE RECORD.
   POSITION 5 – AC ON TV CONNECTED TO AMPLIFIER & TAPE RECORD.
   TUNER, PHONO & TV INPUTS ARE GROUNDED WHEN NOT ACTIVE.