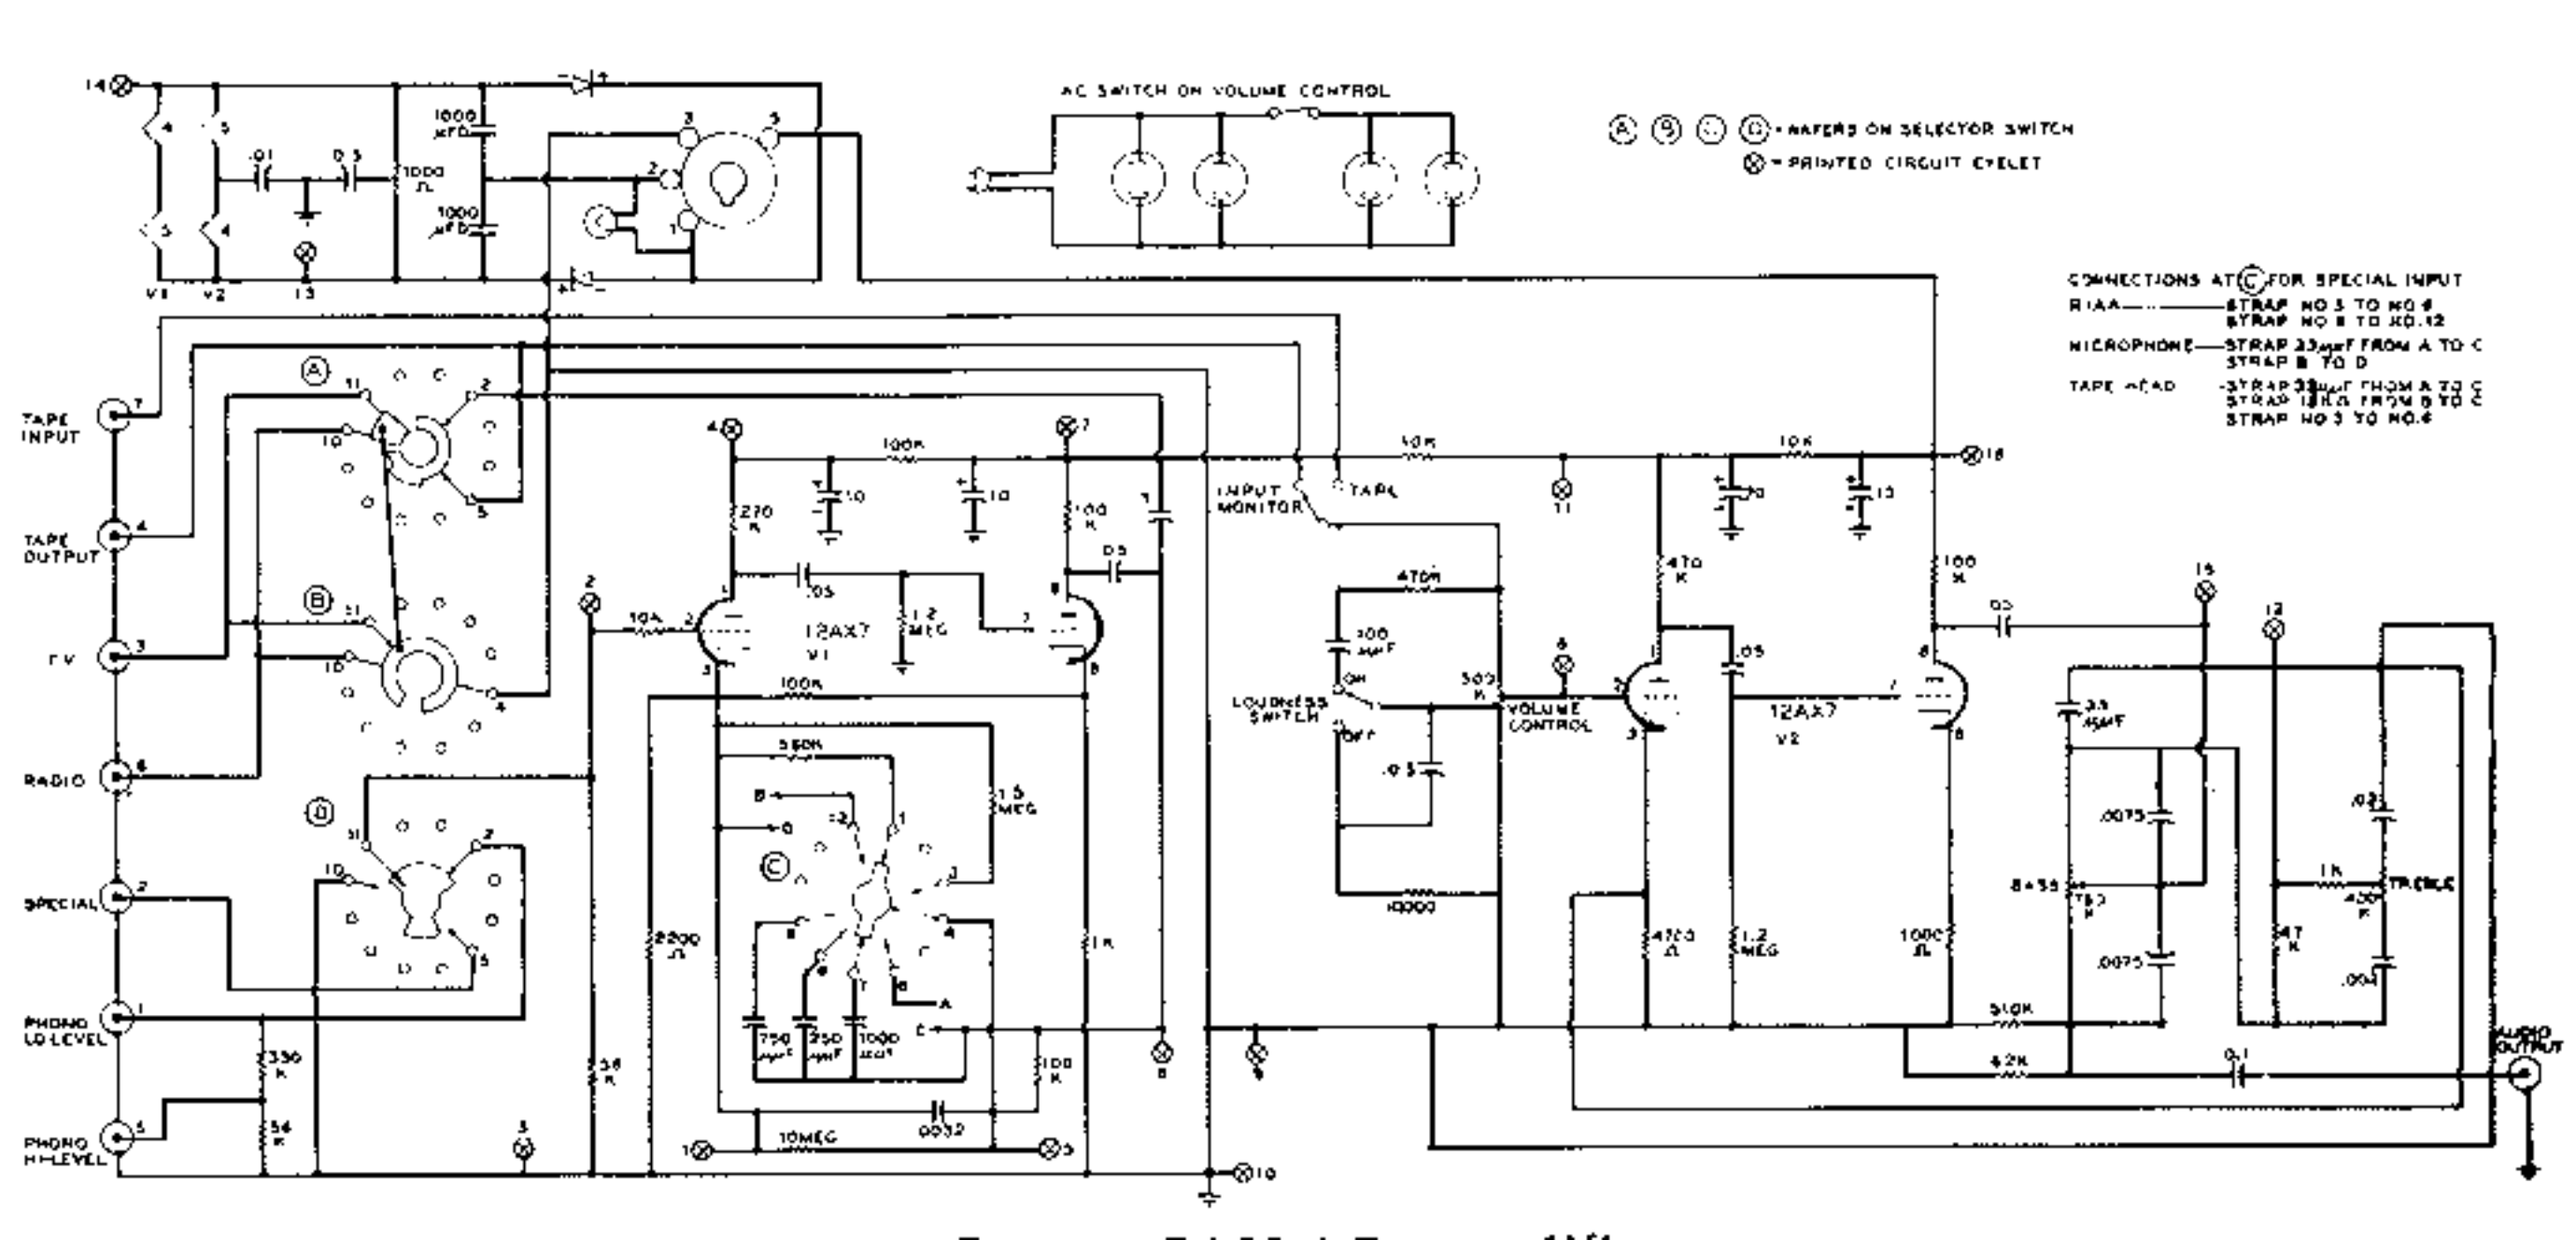
AC SWITCH ON VOLUME CONTROL
Ⓐ Ⓑ Ⓒ Ⓓ = WAFERS ON SELECTOR SWITCH
⊗ = PRINTED CIRCUIT EYELET
CONNECTIONS AT Ⓒ FOR SPECIAL INPUT
RIAA — STRAP NO 3 TO NO 4
STRAP NO 8 TO NO 12
MICROPHONE — STRAP 33μμF FROM A TO C
STRAP B TO D
TAPE HEAD — STRAP 33μμF FROM A TO C
STRAP 1MΩ FROM B TO C
STRAP NO 3 TO NO 4
TAPE INPUT
TAPE OUTPUT
TV
RADIO
SPECIAL
PHONO LO LEVEL
PHONO HI LEVEL
12AX7 V1
12AX7 V2
INPUT MONITOR
TAPE
LOUDNESS SWITCH
VOLUME CONTROL
TREBLE
AUDIO OUTPUT