Marantz 7

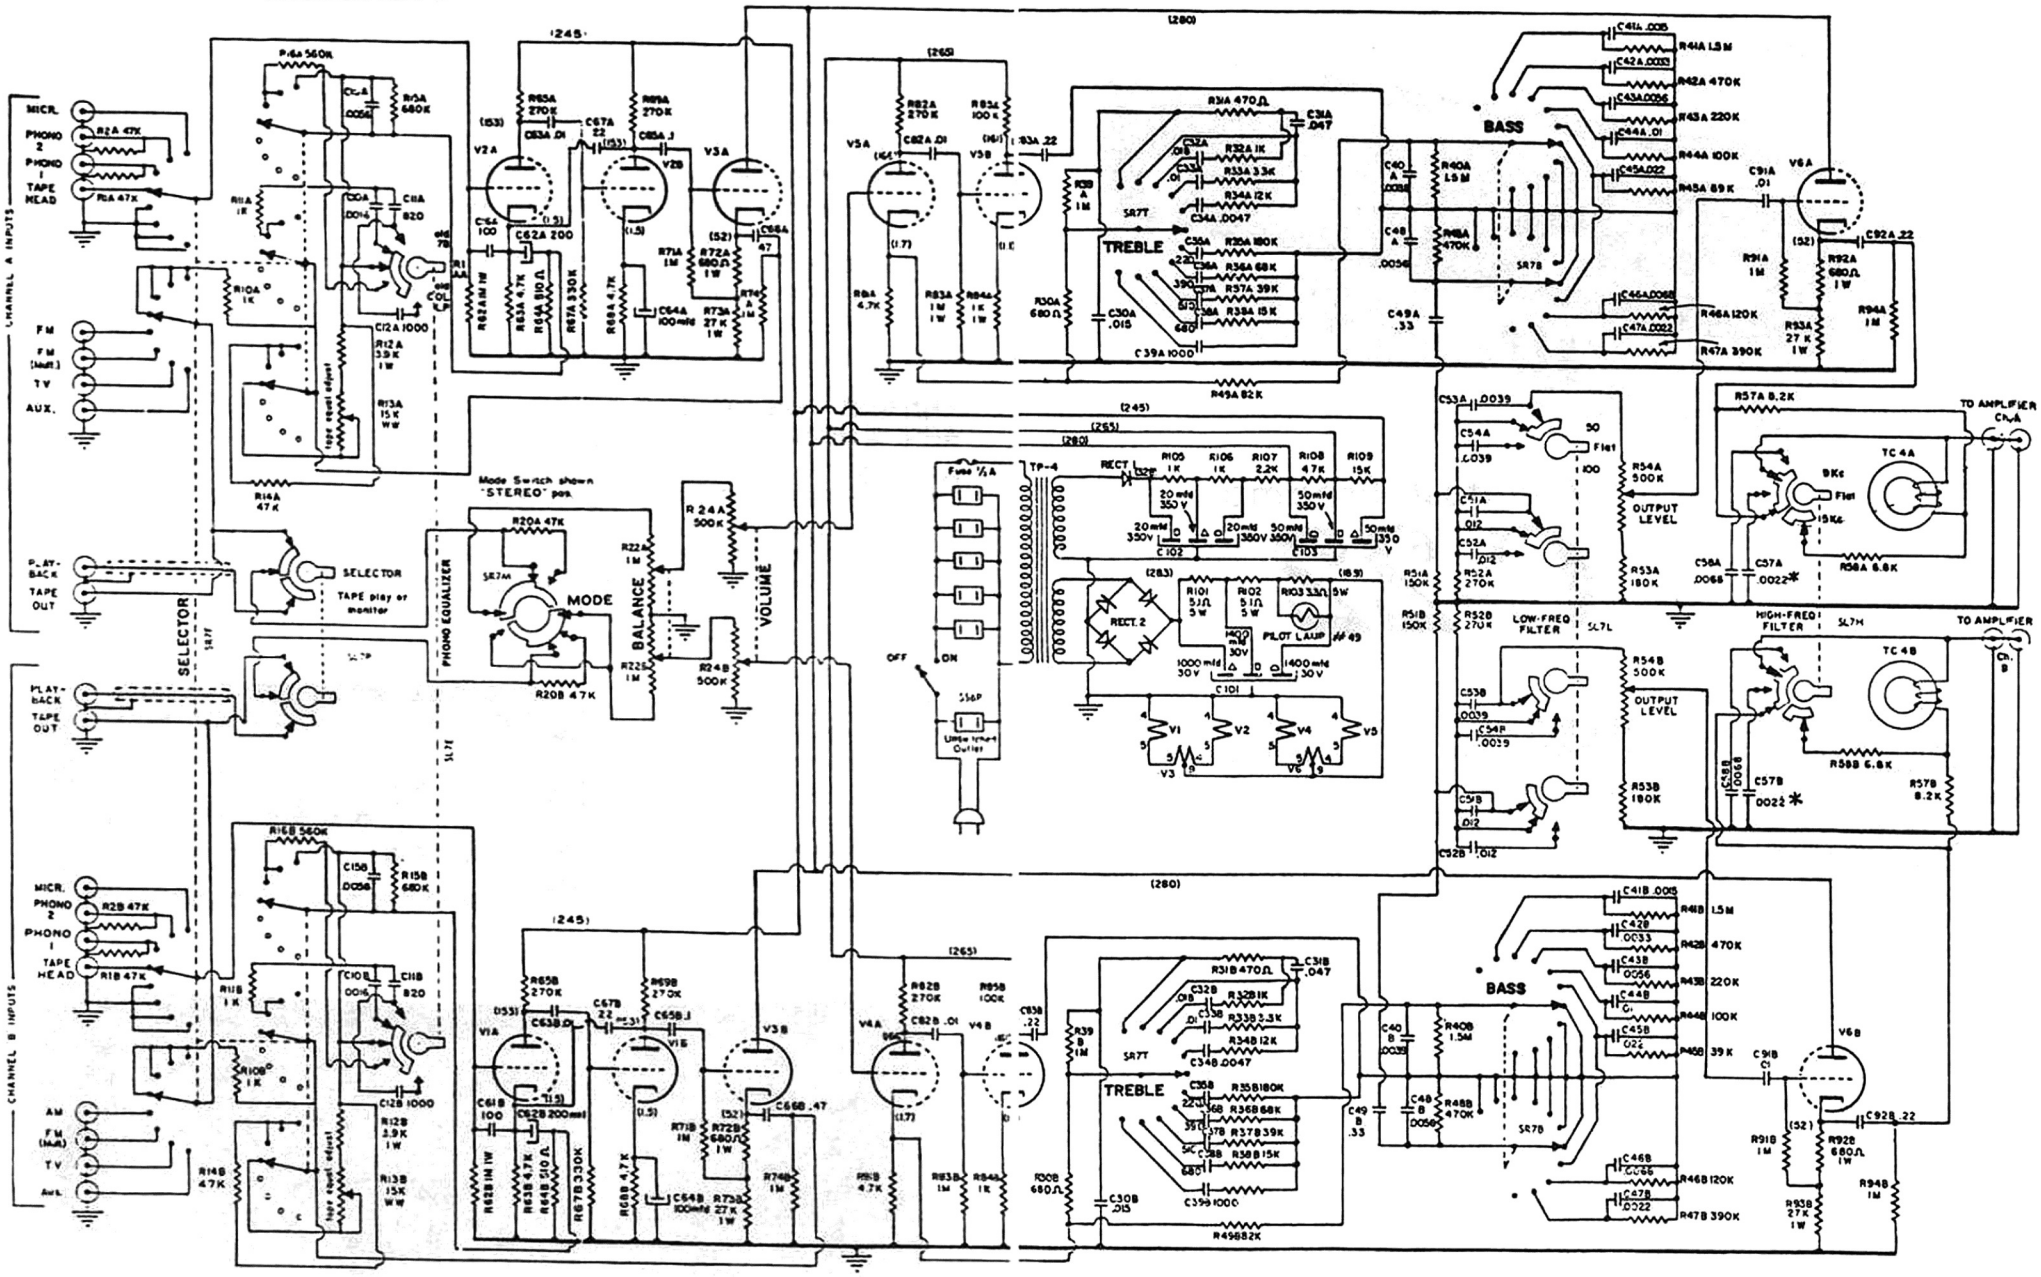
CHANNEL A INPUTS
CHANNEL B INPUTS
MICR.
PHONO 2
PHONO 1
TAPE HEAD
FM
FM (Multi.)
TV
AUX.
PLAY-BACK TAPE OUT
SELECTOR
SELECTOR TAPE play or monitor
PHONO EQUALIZER
Mode Switch shown "STEREO" pos.
MODE
BALANCE
VOLUME
TREBLE
BASS
LOW-FREQ FILTER
HIGH-FREQ FILTER
OUTPUT LEVEL
TO AMPLIFIER CH.A
TO AMPLIFIER CH.B
RECT.1
RECT.2
PILOT LAMP
OFF
ON
V1A
V2A
V3A
V4A
V5A
V6A
V1B
V2B
V3B
V4B
V5B
V6B