



INFORMATION SHEET FOR SME TONEARM 3009-II

We recommend that you use the SME tonearm 3009-II to receive optimum performance from the SL-110 DIRECT DRIVE PLAYER SYSTEM.

The followings are the assembly of SME tonearm 3009-II with the SL-110.

- ① Remove the arm panel from the player case. (8 screws).
 - ② Superimpose the printed template on the arm panel and spike the centres of the two 1-1/8" diameters and the four 3/64" diameter holes.
 - ③ Drill two holes 1-1/8" diameter and cutaway the intermediate section to form the slot.
 - ④ Drill the four 3/64" diameter holes.
 - ⑤ Route the SME audio lead through the rubber grommet in the back of the chassis. To prevent accidental withdrawal, the lead can be anchored to the pillar at the rear of the chassis with a piece of tape.
 - ⑥ Connect the ground wire to the internal ground as indicated.
The external terminals at the rear of the chassis are left unconnected.
 - ⑦ Mount the tonearm on the arm panel. (4 wood screws).
 - ⑧ Connect the audio lead to the tonearm.
 - ⑨ Re-fit the arm panel to the player case. (8 screws).
- * Proceed with the other adjustments to the arm detailed in the instructions.

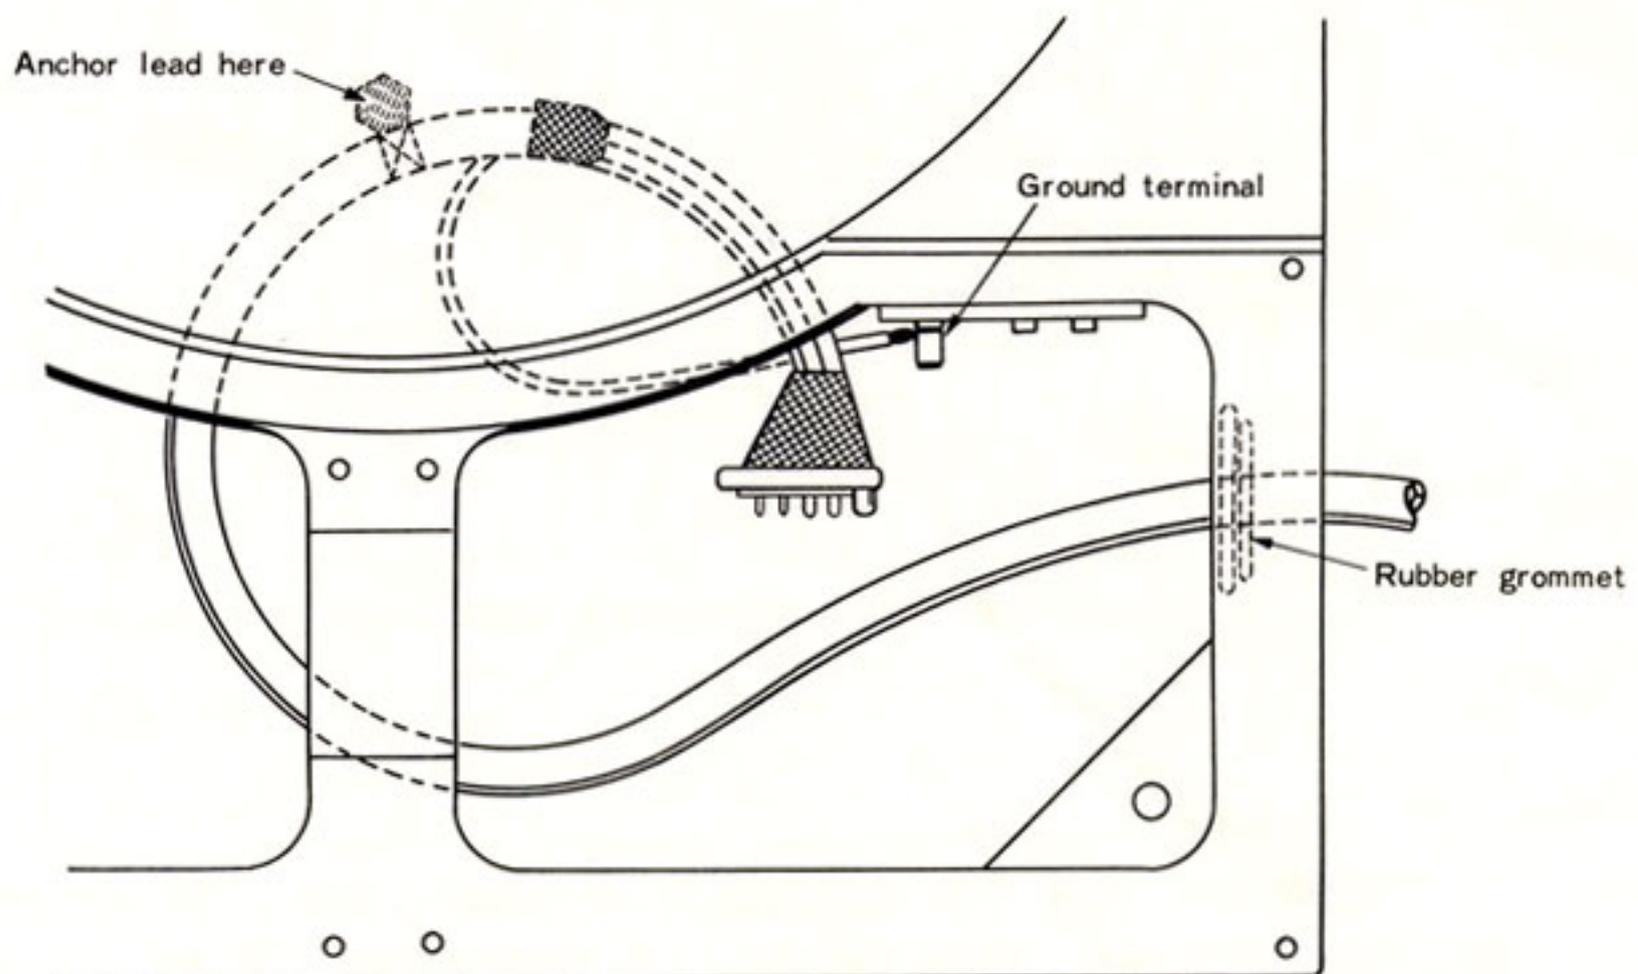

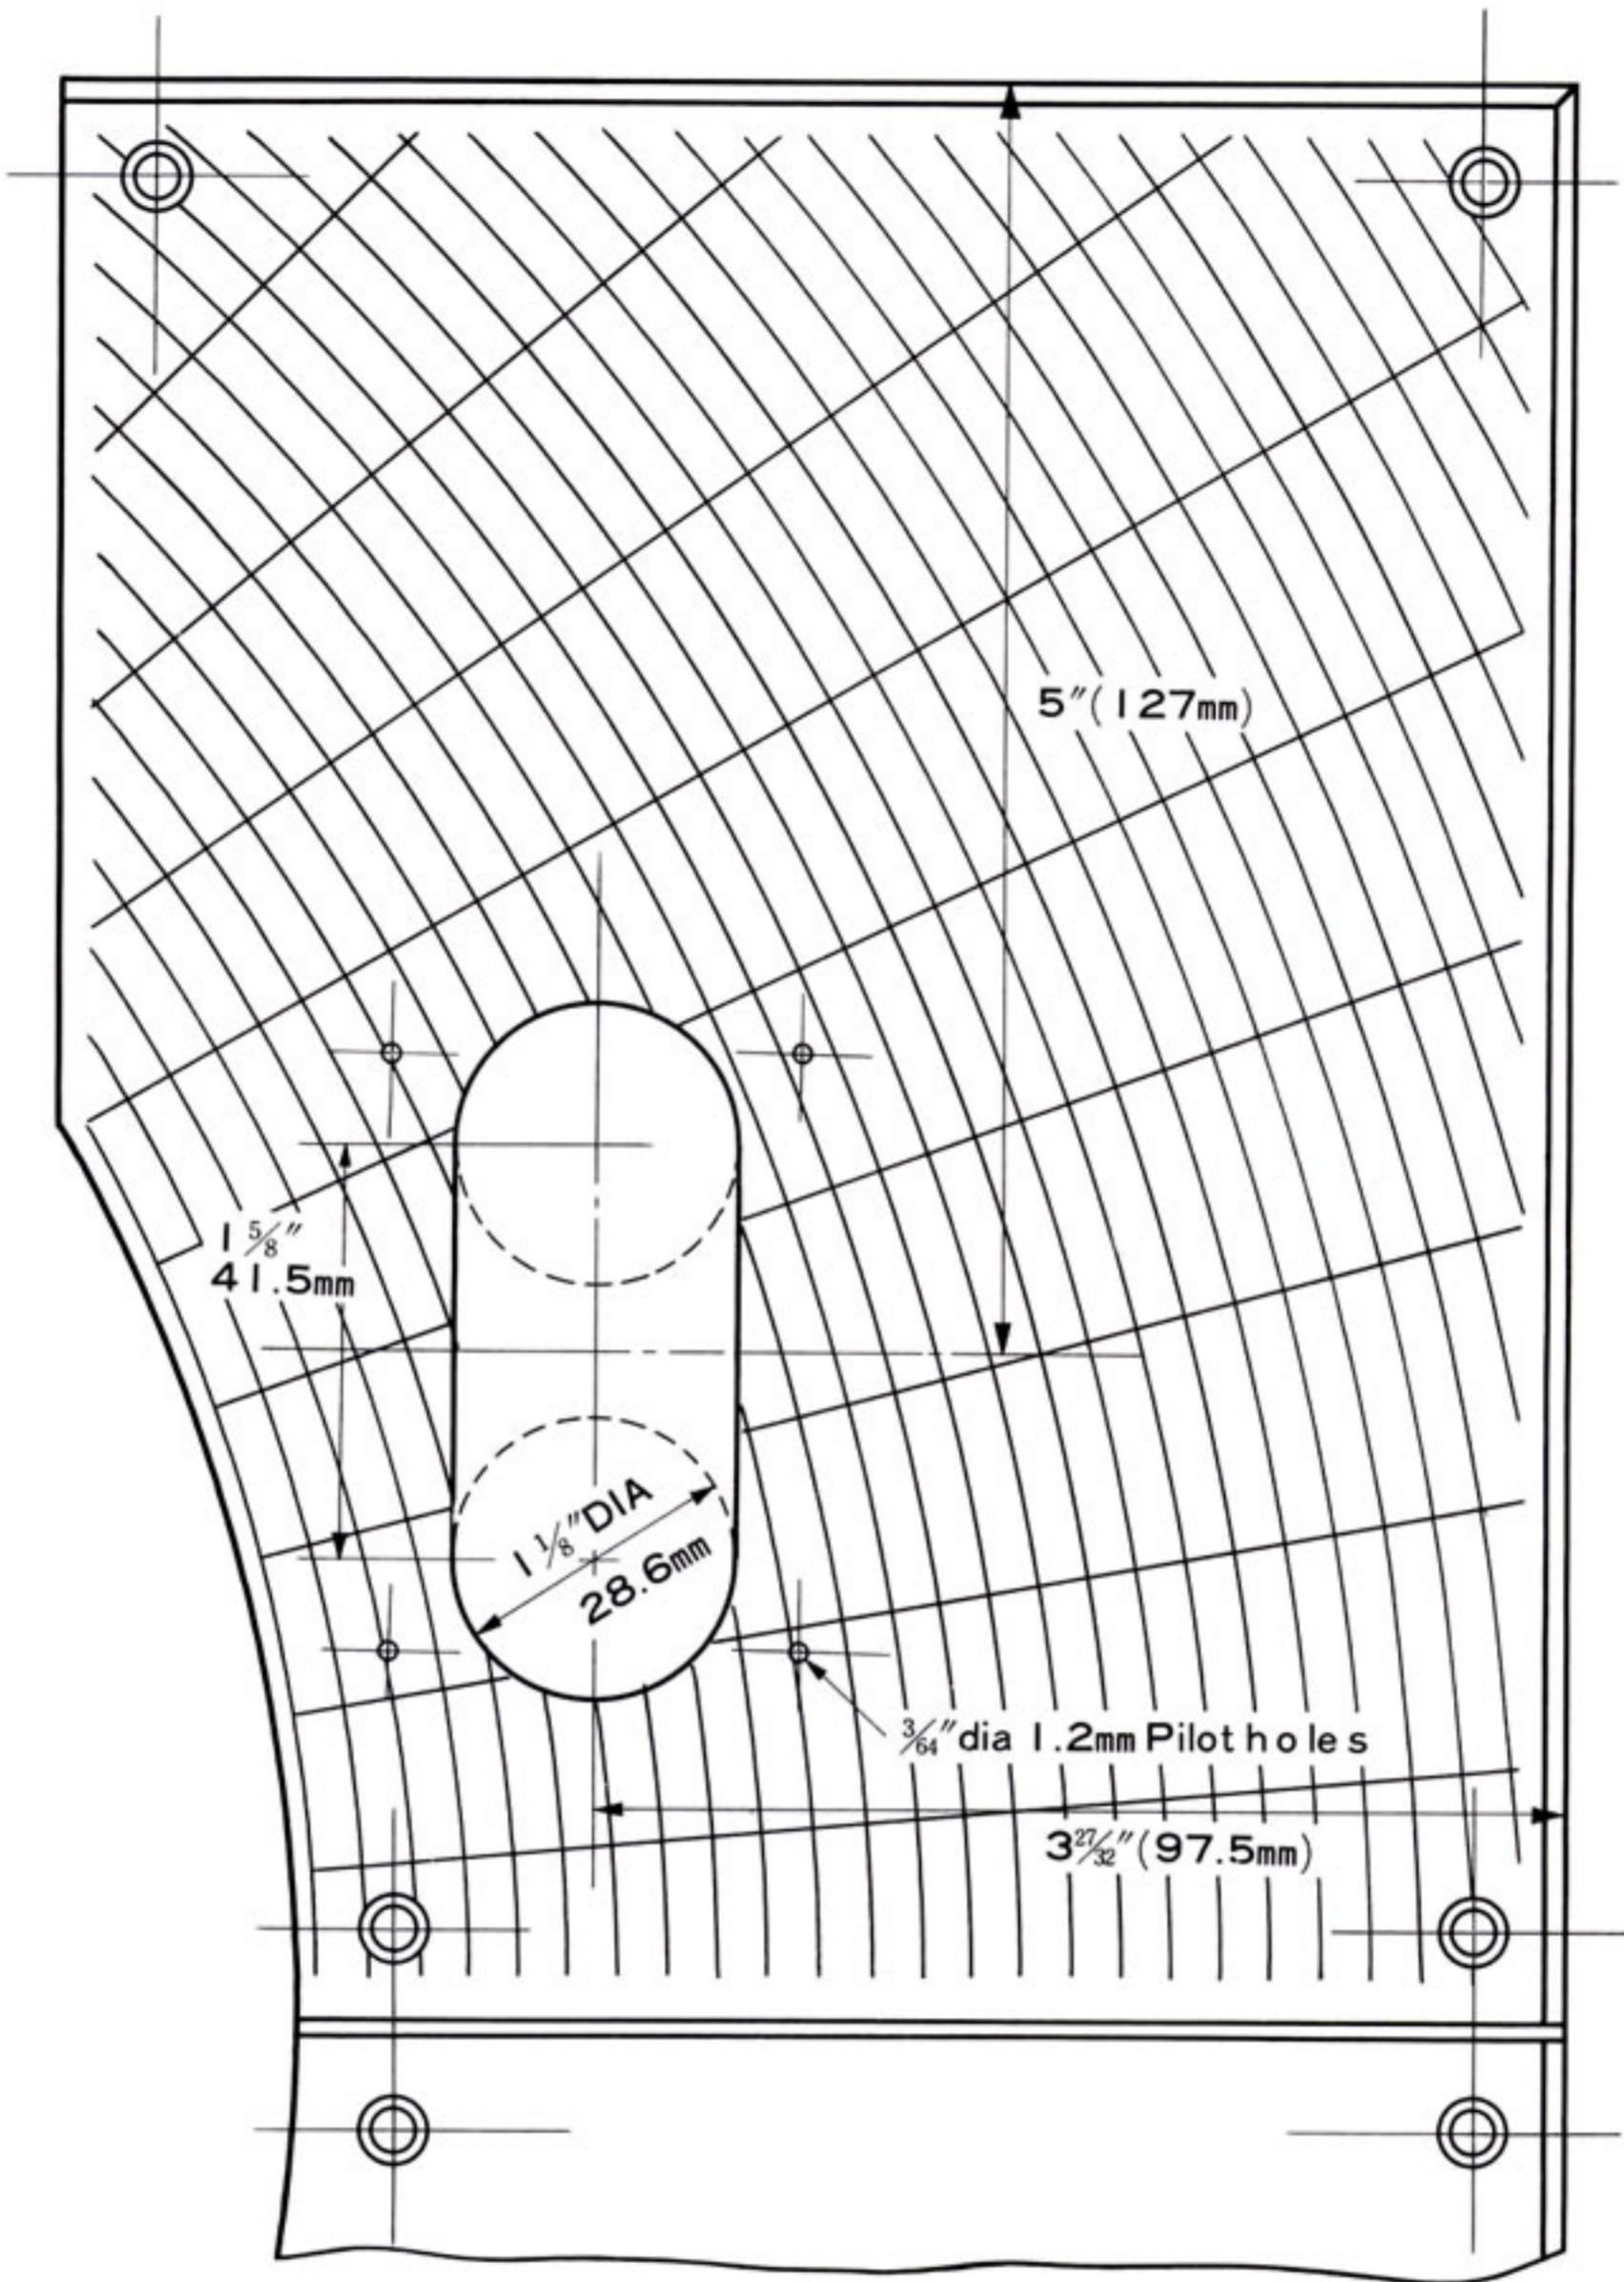

TEMPLATE FOR THE ASSEMBLY OF SME 3009-II IMPROVED PRECISION TONEARM WITH THE SL-110 / DIRECT DRIVE PLAYER SYSTEM.

NOTE

These instructions were compiled by **SME**.

SH-11P3 is already processed for the **SME** tonearm 3009-II.