

marantz® SERVICE BULLETIN		Date: 8-Dec-2004	Model: LC3050/N1B
		Page: 1 / 1	REF.NBR: MZ04-079
Level		Application:	
★ ★		See below	
		Subject: Wipe effect.	
		Int.ref:	



[PHENOMENON]

When you have on the screen a picture example of a face and the picture is moving slowly, it is like out of focus and you also get double contours.


[SOLUTION]

1) Replace IC03 on the MAIN PCB.

Service manual page 23

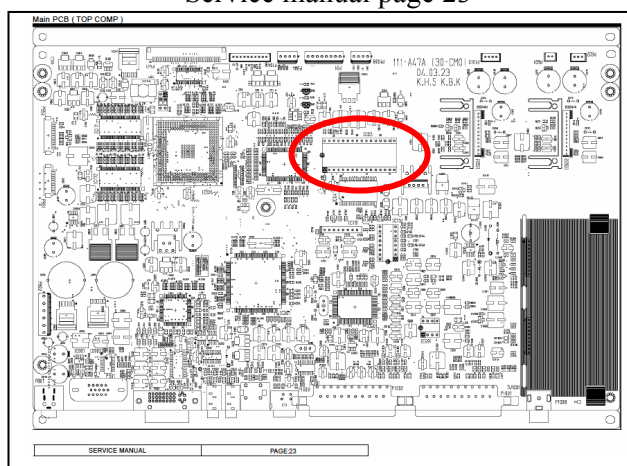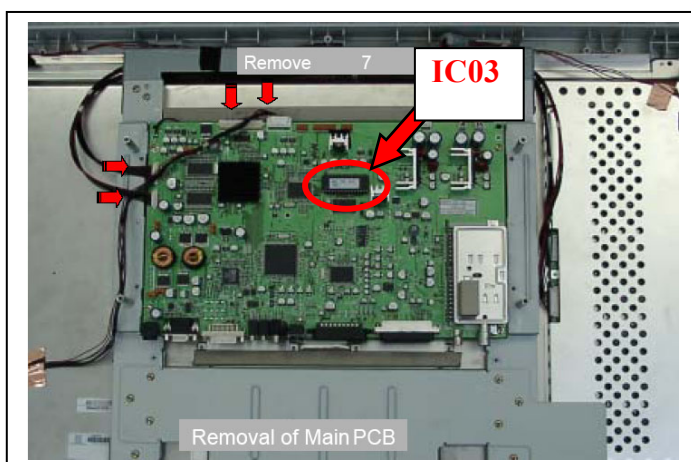

Label of NEW IC03

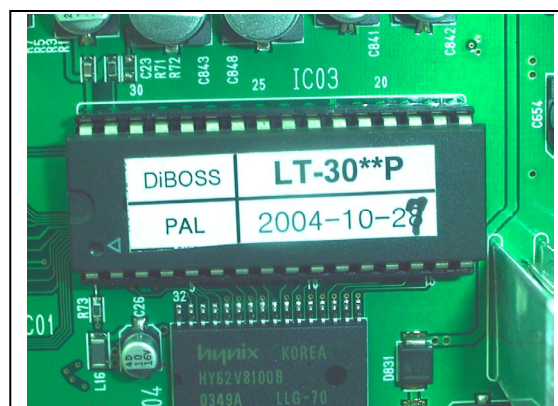

[NECESSARY PART]

POS.NO IC03 (EPROM programmed): **90M-HJ000010R**

Factory Spare part no.: 1ICST80B60BS (M27W201-80B6 EPROM)

[REMARKS]

The production of LC3050/N1B has been finished.

Approved by **N.Sensui** Written by **S.NAGAO**