


# SCHEMATIC DIAGRAM NAD3020i AMPLIFIER



- S201 : FUNCTION SWITCH (OFF)  
 S201 1-2 : TAP/MONITOR  
 S201 3-4 : CD/AUX  
 S201 5-6 : TUNER  
 S201 7-8 : PHONO  
 S201 1-2 : STEREO/MONO SWITCH (STEREO)  
 S201 1-2 : LOW LEVEL SWITCH (OFF)  
 S201 : POWER SWITCH (OFF)  
 S201 : TURBO SWITCH (8 OHM POSITION)  
 S201 : SOFT CLIPPING SWITCH (OFF)

- NOTES :  
 1. RESISTORS ARE 1/4W 5%, UNLESS OTHERWISE SPECIFIED.  
 2. X DENOTES RESISTORS MOUNTED UP FROM P.C.B.  
 3. C DENOTES CAPACITORS MOUNTED ON MAIN HEATSINK.  
 4. # DENOTES PARTS USED FOR FIT ONLY.  
 5. R455 AND R455 USED FOR IDLING CURRENT ADJUST ONLY.  
 6. VOLTAGES SHOWN ARE MEASURED WITH NO SIGNAL APPLIED.

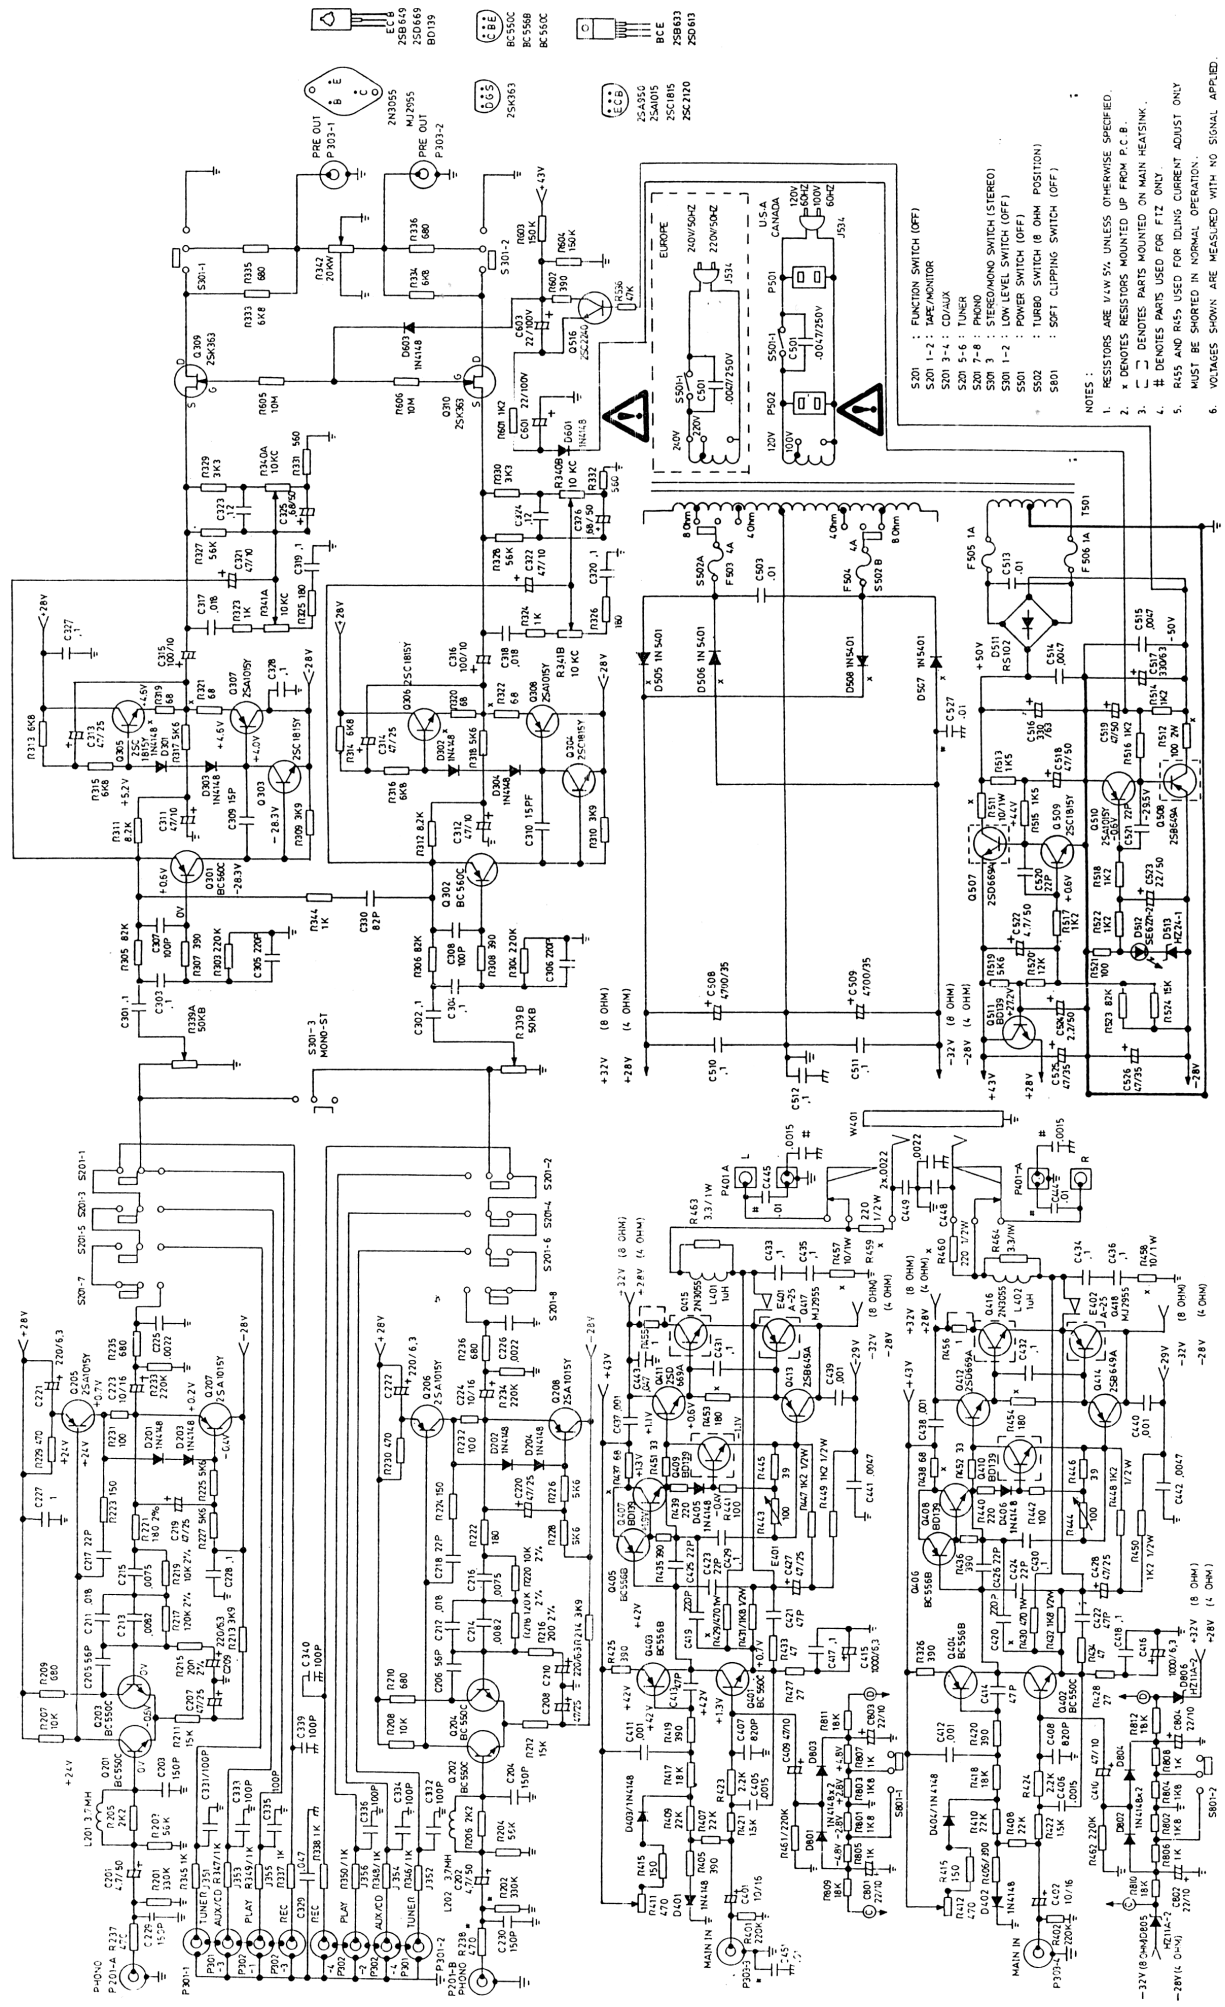