


PIONEER CT-F9191 KCU

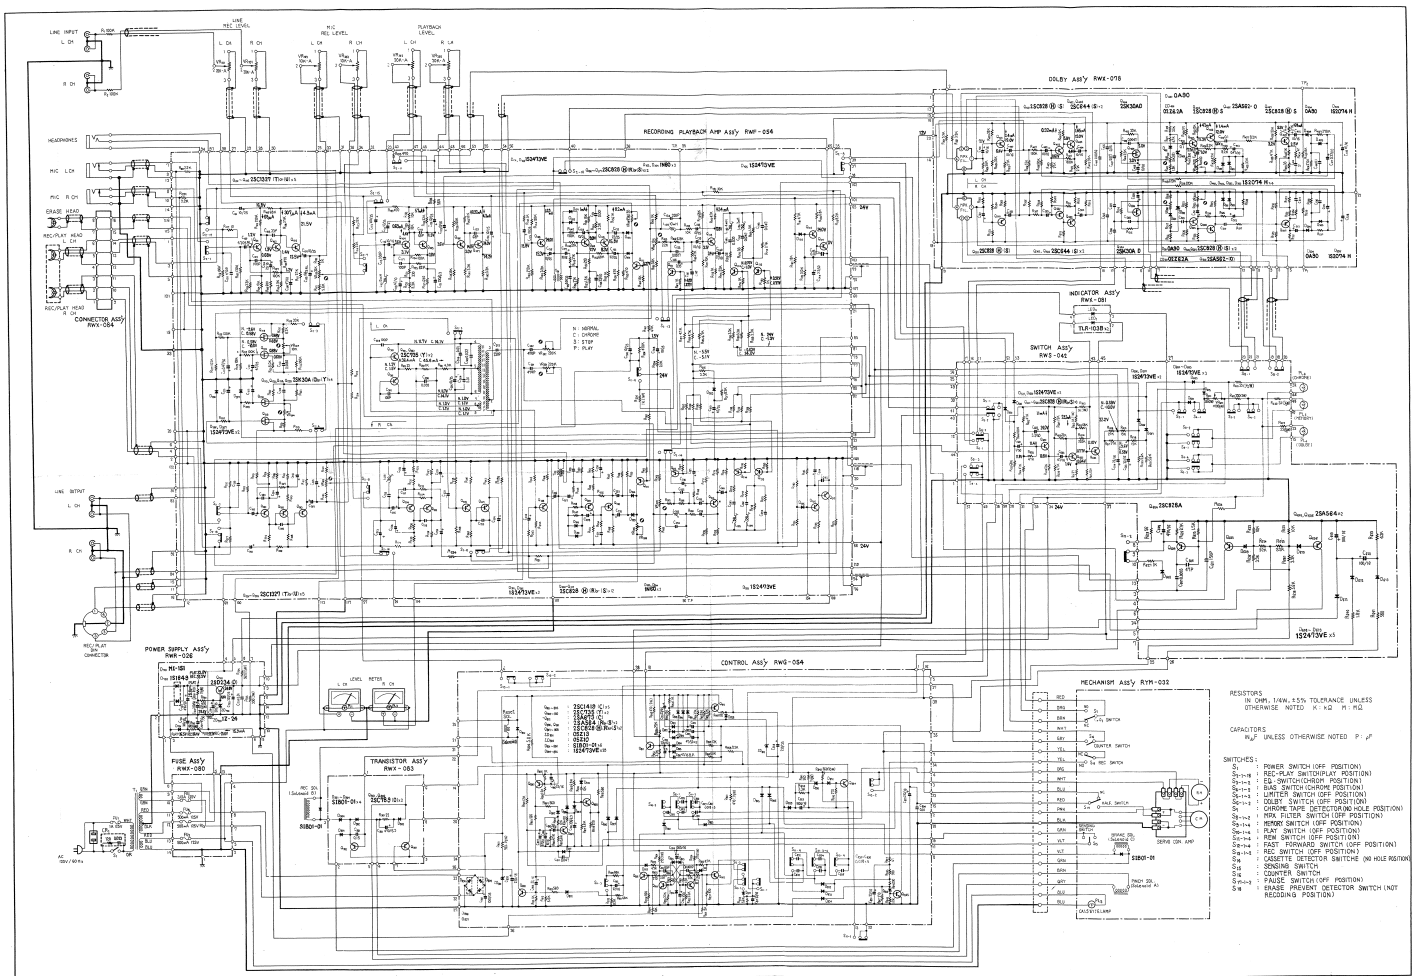

- RESISTORS
 IN OHM, 1/4W, 1% TO 5% UNLESS OTHERWISE NOTED. P, 1/2 P, 1/4 P
- CAPACITORS
 IN P.F. UNLESS OTHERWISE NOTED. P, 1/2 P
- SWITCHES:
- S1 POWER SWITCH (OFF POSITION)
 - S2-2 REC-PLAY SWITCH (PLAY POSITION)
 - S2-1 EJECT SWITCH (CHROME POSITION)
 - S3-1 LATCH SWITCH (OFF POSITION)
 - S3-2 DOLBY SWITCH (OFF POSITION)
 - S4-1 CROM-TRIP (EJECTOR-HOLE POSITION)
 - S4-2 MFR. FILTER SWITCH (OFF POSITION)
 - S4-3 STOP SWITCH (OFF POSITION)
 - S4-4 PLAY SWITCH (OFF POSITION)
 - S4-5 FHM SWITCH (OFF POSITION)
 - S4-6 REC. SWITCH (OFF POSITION)
 - S4-7 CASSETTE SELECTOR SWITCH (NO HOLE POSITION)
 - S4-8 SENSING SWITCH
 - S4-9 CONTROL SWITCH
 - S4-10 PAUSE SWITCH (OFF POSITION)
 - S4-11 ERASE PREVENT DETECTOR SWITCH (LEFT RECORDING POSITION)