


## 6. ADJUSTMENTS

### ADJUSTMENT PREPARATION

- R631, R632 are turned to the arrow direction to be perpendicular to the front panel.
- Switch S903 (Speaker Impedance Switch) must be set in the  $8\Omega$  position.

### ❖ CAUTION

When using TE, exchange the bracket and change switch to the 8 ohm position.

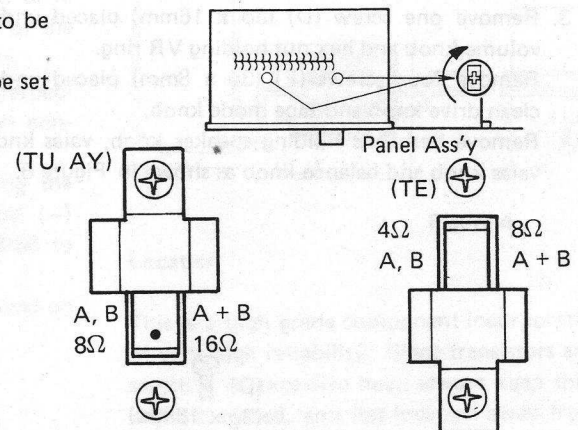

1. Idle current adjustment can easily be done by setting the semi-fixed VR R631, 632 (470 ohm) to mechanical mid point VR as shown in Figure 11.
2. The idle current between TP and TP must be less than 30 mA when power has been on for 60 seconds.


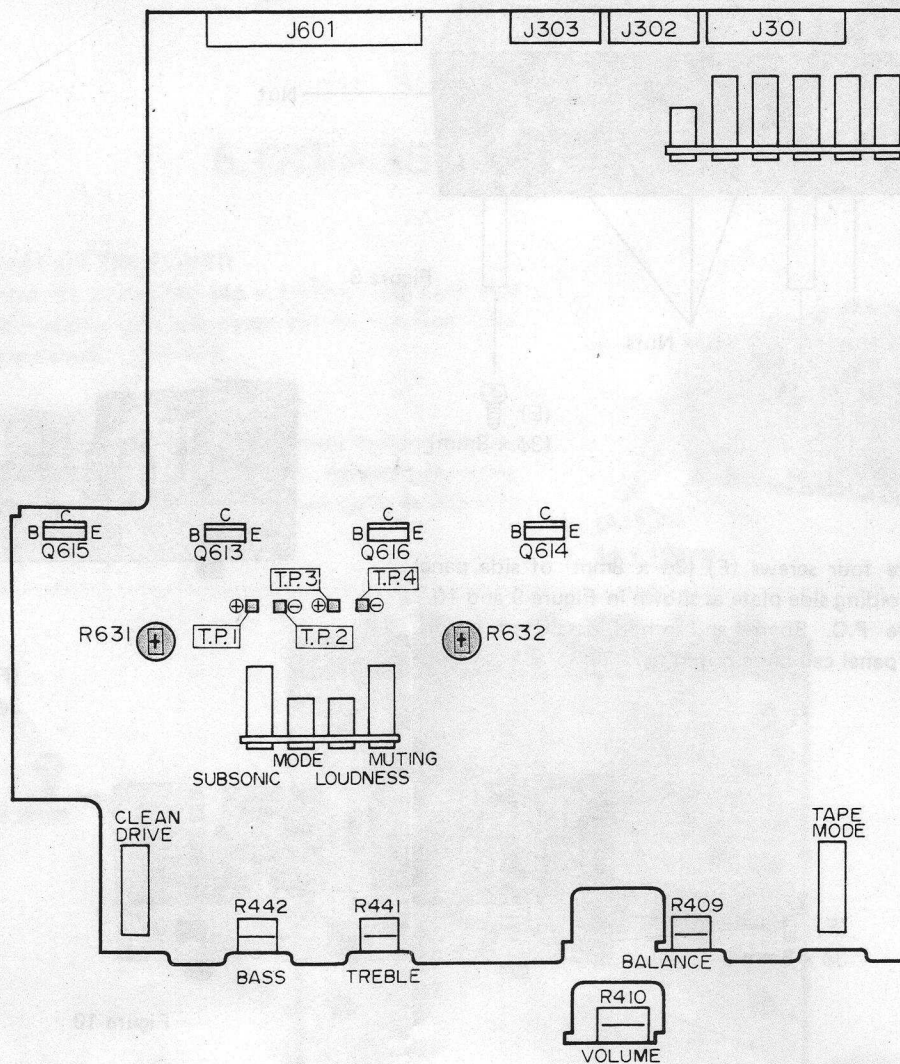


Figure 11



- 12 -

## ARTS LOCATIONS

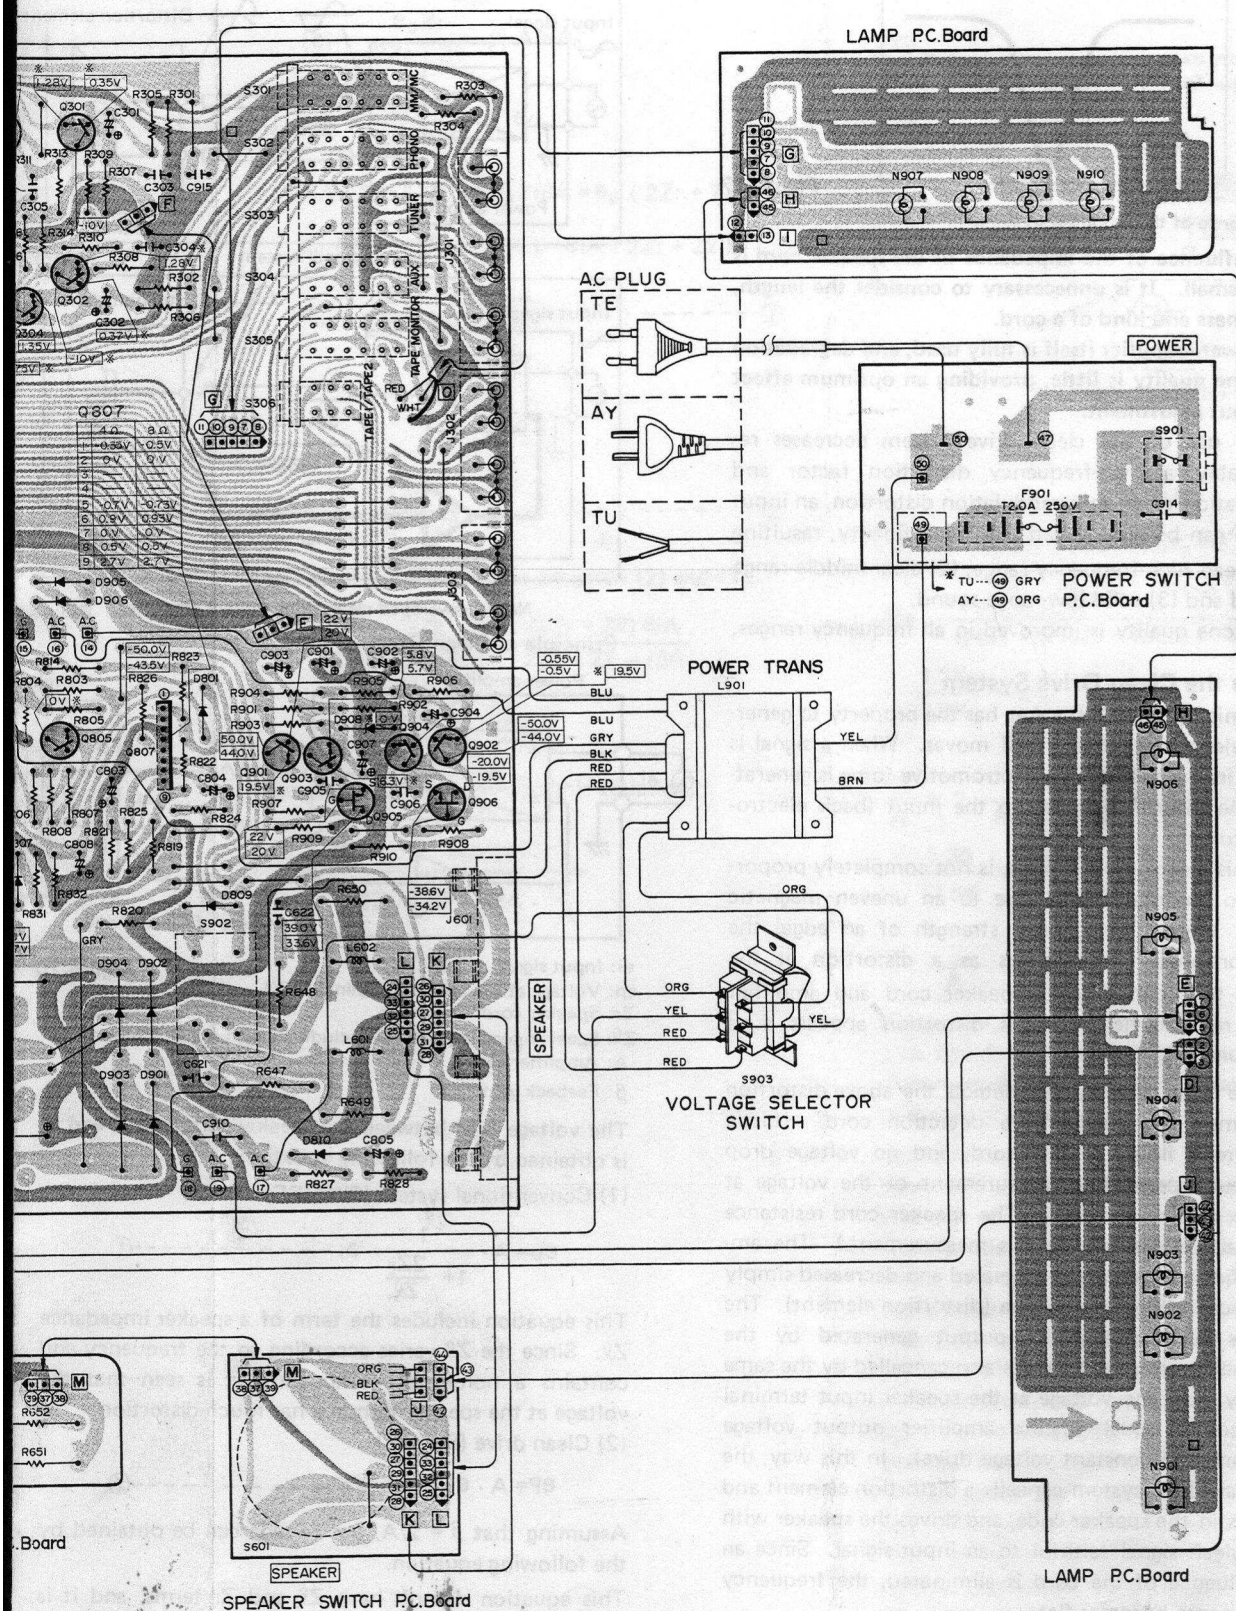



**CAUTION**  
The  $\Delta$   
list de  
with t