

CD RECEIVER

# KDC-3024A/G/YA/YG KDC-307A/G/YA/YG


## SERVICE MANUAL

# KENWOOD


© 2002-11 PRINTED IN JAPAN  
B53-0002-00 (N) 1874

CD mechanism operation description is not in this service manual.  
Please, refer to service manual X92-4030-0x (B51-7867-00).


CD mechanism extension cord : W05-0618-00

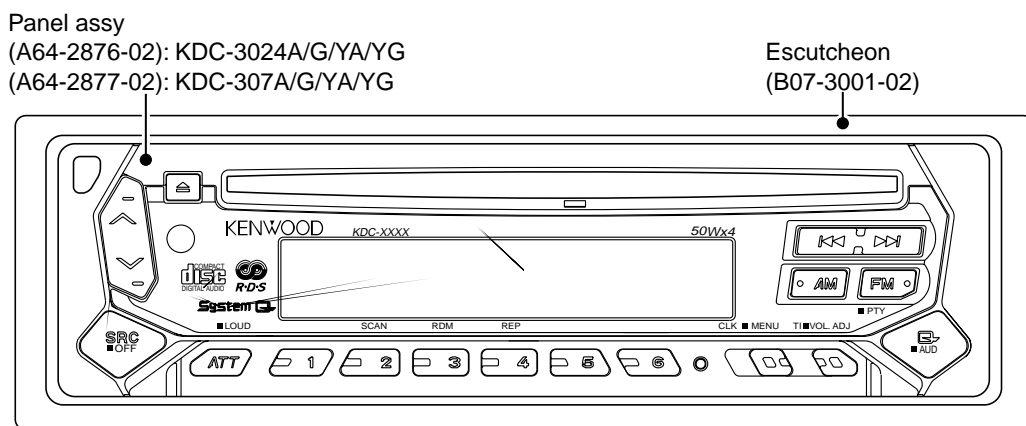


DC cord  
(E30-4790-05)

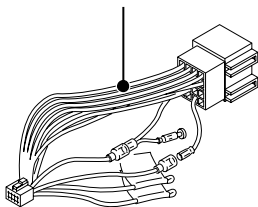


Mounting hard ware assy  
(J21-9716-03)

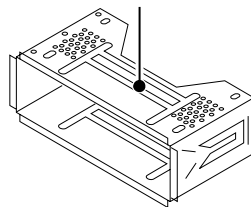


Plastic cabinet assy  
(A02-1486-13)

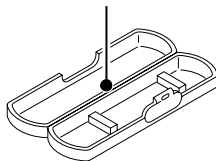


Lever  
(D10-4589-04)x2

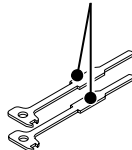

Antenna adaptor  
(T90-0523-05)

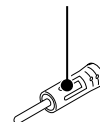

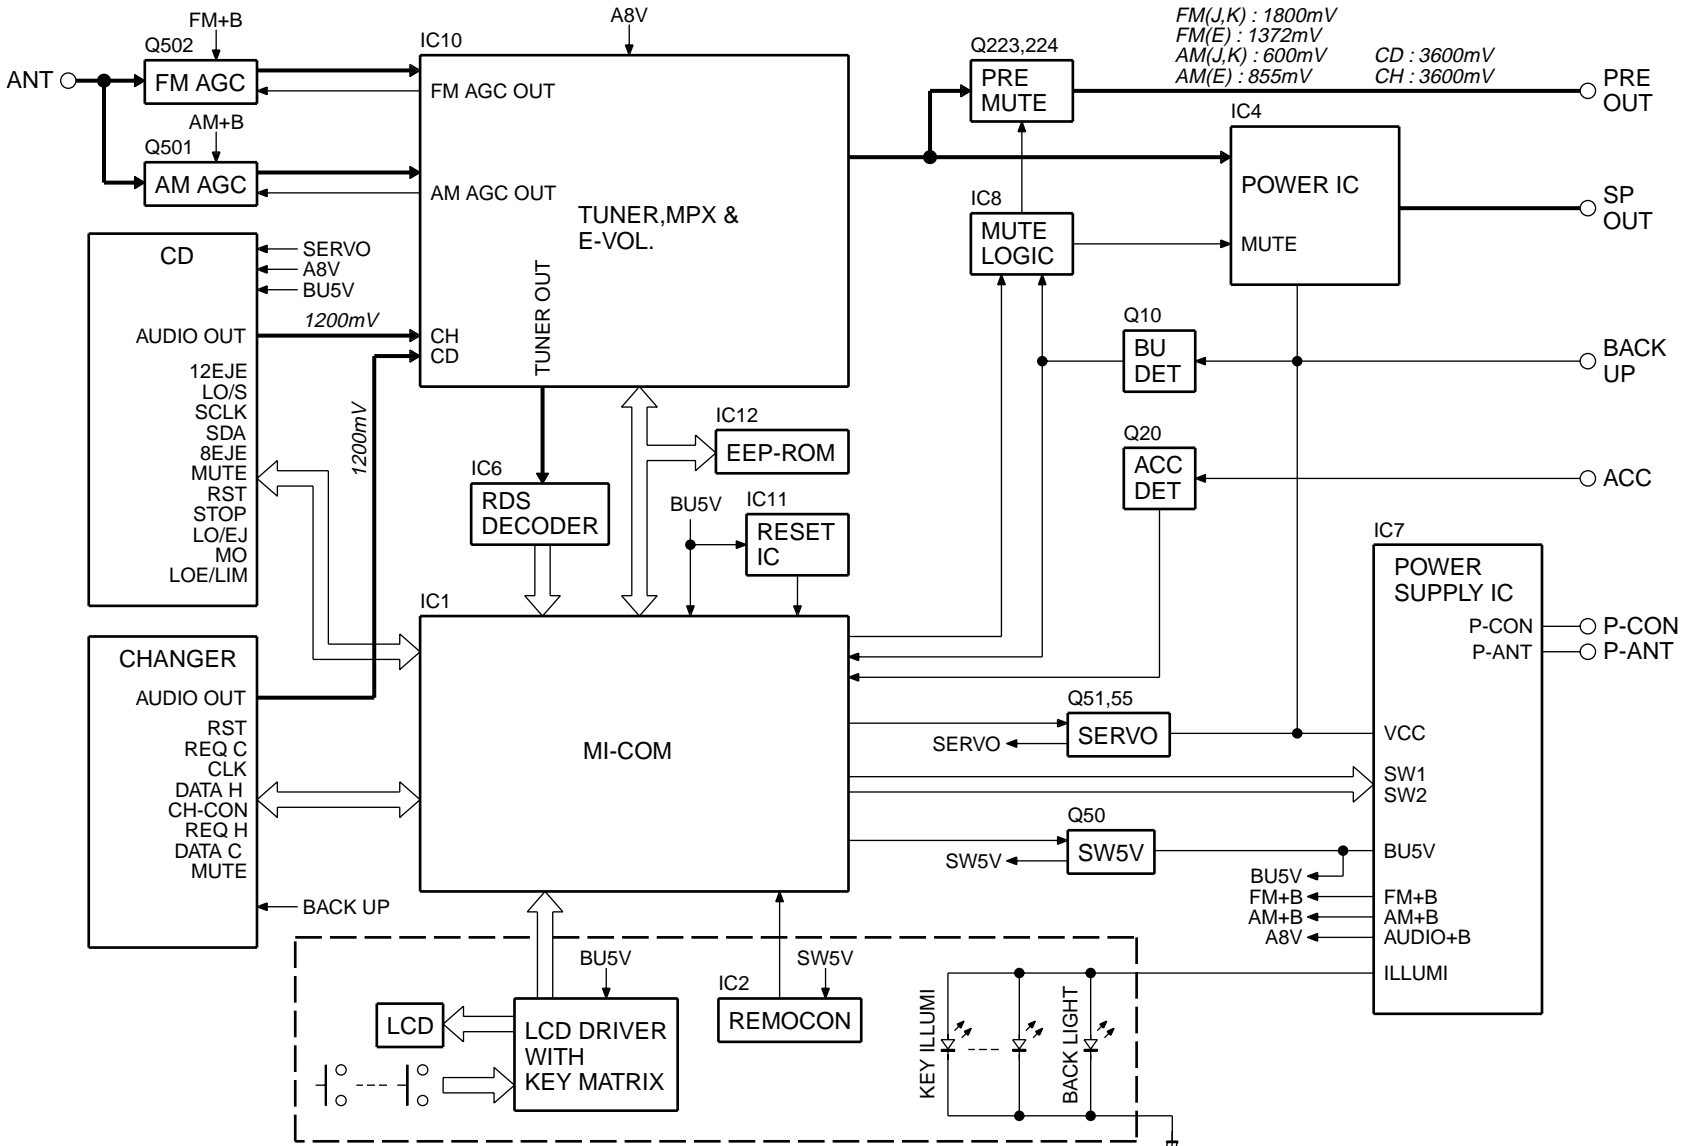

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## BLOCK DIAGRAM

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## COMPONENTS DESCRIPTION

### ● SWITCH UNIT (X16-1472-7x)

Ref.No.	Application/Functions	Operation/Condition/Compatibility
IC1	LCD driver & key matrix	
Q1	Key scan start	When Q1 base goes Lo, key scan start.

### ● ELECTRIC UNIT (X25-9612-7x)

Ref.No.	Application/Functions	Operation/Condition/Compatibility
IC1	System control $\mu$ -com	System $\mu$ -com
IC4	Power amplifire	E-Vol output encoder power amplification for speaker.
IC6	RDS decoder	RDS data decode to tuner receive signals.
IC7	Power supply (Multi AVR)	-
IC8	MUTE Logic	When a pin 1, 2, or 13 is "H", MUTE turns on When a pin 3, 4, or 5 is "H", P-AMP mute turns ON. Changer is RESET when a pin 9, 10, or 11 is "L".
IC10	Tuner & E-Vol.	FM/AM tuner & stereo decoder & E-Vol.
IC11	Power on reset	When B.U. 5V voltage is less than 3.5V, power reset.
IC12	E2P-ROM	Writing and read-out of adjustment data for a tuner
Q10	B.U. detector	BU on (base "H") : Collector "H"
Q20	A.C.C detector	ACC ON (base : "H") : Collector "L"
Q40	MUTE driver	Base "L" : Mute on (collector "L")
Q50	SW 5V	Base "L" : SW5V on
Q51	SERBO AVR control	Pin 2 "H" : Serbo on (pin 4 "H")
Q55	SERBO AVR	Base "H" : Serbo on
Q70	Surge detector	Base "H" : Surge detect
Q101	DSI driver	Base "H" : DSI on
Q102	PANEL 5V SW	Panel attch : PAN5V on
Q201	Noise buffer	Tuner noise input, Emitter output
Q223,224	MUTE	Base "H" : Mute on
Q252	S_METER RC & MPTH TC SW	Base "H" : RC&TC=Long (Base "L" at AF serch)
Q253	S_METER RC & MPTH TC SW	Emitter "H": Collector "H"
Q501	AM RF amplifire	Base "H" : Gain UP
Q502	FM RF amplifire	Gate "H" :Gain UP
Q503	MPX buffer	MPX input buffer with RDS

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## MICROCOMPUTER'S TERMINAL DESCRIPTION

### ● SYSTEM MICROCOMPUTER $\mu$ PD780058GC502 (X25 : IC1)

Pin No.	Name	I/O	Description	Processing Operation
1	TDF DET	I	Panel detection	H:Panel detached L:Panel attached
2	8EJE SW	I		H:Eject is completed Except 8cm CD model:always output L
3	NC	O	Not used (out put L)	
4	Avss			
5	L-RST	O	LCD driver RESET	H:Panel detached L:RESET $\Delta$ 3 normal H , Power off L When 7seg model,output L
6	L-CE	O	LCD driver selection	H>Select (panel communication) When panel attached,output L
7	AVREF1			
8	NC		Not used (connected to 9pin)	
9	IC10-DATA	I/O	IC10,E2PROM data communication	$\Delta$ 3 non communication : H
10	IC10-CLK	O	IC10,E2PROM clock communication	$\Delta$ 3 non communication : H
11	L-DATAL	I	Data input from the LCD driver	Non communication : H When panel detached : L $\Delta$ 3 Pull down on X25 unit,Pull up on X16 unit
12	L-DATAS	O	Data output to the LCD driver	When panel detached , output L
13	L-CLK	O	Clock output to the LCD driver	When panel detached , output L
14	R-DATA	I	Data input from the RDS	Except RDS model : output L
15	R-QUAL	I	Quality input from the RDS	Except RDS model : output L
16	CH-DATAC	I	Data input from the changer (new 5L)	Except changer model : output L
17	CH-DATAH	O	Data output to the changer (new 5L)	When non communication ,last data keeping Except changer model : output L
18	CH-CLK	I/O	Clock input/output with the Changer (new 5L)	Check the old and new Except changer model : output L
19	CH-REQH	O	Request output to the changer (new 5L)	L:Requeset Except changer model : output L
20	NC	O	Not used (output L)	
21	AFS	O	Noise detection time constant switching terminal	H:Normal L:FM/AM seek and AF search $\Delta$ 3 (When tuner SRC auto zero , L)
22-24	NC	O	Not used (output L)	
25	CH-CONT	O	Changer control	H:Changer on L:Changer off Except changer model : output L
26	TYPE REF	O	5V lines output for destination setting	H:During destination reading
27	SD	I	Tuner SD input	H:Station detected
28	NC	O	Not used (output L)	
29	TYPE2	I	Destination type selection terminal 2	Refer to destination type list.
30	TYPE1	I	Destination type selection terminal 1	Refer to destination type list.
31	TYPE0	I	Destination type selection terminal 0	Refer to destination type list.
32	TUNER-TYPE1	I	Destination available/genuine model rool off	H:genuine model 1 L:available model
33	Vss1			
34	TUNER-TYPE0	I	Destination available/genuine model noise cancel	H:genuine model 0 L:available model
35	MUTE	O	Mute (E.Vol,Preset) control	H:mute on L:mute off Power off after that 15 second L
36	M-DATA	I/O	Data input/output with the CD mechanism	$\Delta$ 3 non communication : H
37	M-CLK	O	Clock output to the CD mechanism	$\Delta$ 3 non communication : H
38	ADJ	O	Tuner lines adjustment	When adjustment = H PS1-0,1=L PS1-2,2-0,1=Hi-z IC10-DATA,CLK=Hi-z
39	P-MUTE	O	Power IC mute control	H:mute off L:mute on Power off after that 15 second H
40	SVR	O	Power IC servo control	H:When momentary power down detected L:Nomal
41	P-STBY	O	Power IC standby control	H:Power IC ON L:Power IC OFF
42	SW5V	O	SW 5V control	H:SW5V OFF L:SW5V ON Power off after that 10 second H

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Name	I/O	Description	Processing Operation																																				
43	B.U-DET	I	Back up detection terminal	H:power down L:B.U. on																																				
44	ACC-DET	I	ACC detection terminal	H:ACC OFF L:ACC ON																																				
45	PS1-0	O	Power supply IC SW1 control 0 Audio 8V,P-CON	<table border="1"> <thead> <tr> <th colspan="3">BA4911 SW1</th> <th colspan="3">Power supply IC output</th> </tr> <tr> <th>PS1-2</th> <th>PS1-1</th> <th>PS1-0</th> <th>A8V</th> <th>P-CON</th> <th>P-ANT</th> </tr> </thead> <tbody> <tr> <td>L</td> <td>L</td> <td>L</td> <td colspan="3">STANBY</td> </tr> <tr> <td>L</td> <td>L(H)</td> <td>H(L)</td> <td>ON</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>L</td> <td>H</td> <td>H</td> <td>ON</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>H</td> <td>H</td> <td>H</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </tbody> </table>	BA4911 SW1			Power supply IC output			PS1-2	PS1-1	PS1-0	A8V	P-CON	P-ANT	L	L	L	STANBY			L	L(H)	H(L)	ON	OFF	OFF	L	H	H	ON	ON	OFF	H	H	H	ON	ON	ON
BA4911 SW1			Power supply IC output																																					
PS1-2	PS1-1	PS1-0	A8V	P-CON	P-ANT																																			
L	L	L	STANBY																																					
L	L(H)	H(L)	ON	OFF	OFF																																			
L	H	H	ON	ON	OFF																																			
H	H	H	ON	ON	ON																																			
46	PS1-1	O	Power supply IC SW1 control 1 Audio 8V,P-CON																																					
47	PS1-2	O	Power supply IC SW1 control 2 P-ANT																																					
48	PS2-0	O	Power supply IC SW2 control 0 ILL,FM,AM	<table border="1"> <thead> <tr> <th colspan="2">BA4911 SW2</th> <th colspan="3">Power supply IC output</th> </tr> <tr> <th>PS2-1</th> <th>PS2-0</th> <th>ILLUMI</th> <th>FM</th> <th>AM</th> </tr> </thead> <tbody> <tr> <td>L</td> <td>L</td> <td colspan="3">STANBY</td> </tr> <tr> <td>L(H)</td> <td>H(L)</td> <td>ON</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>H</td> <td>H</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> </tbody> </table>	BA4911 SW2		Power supply IC output			PS2-1	PS2-0	ILLUMI	FM	AM	L	L	STANBY			L(H)	H(L)	ON	ON	OFF	H	H	ON	OFF	ON											
BA4911 SW2		Power supply IC output																																						
PS2-1	PS2-0	ILLUMI	FM	AM																																				
L	L	STANBY																																						
L(H)	H(L)	ON	ON	OFF																																				
H	H	ON	OFF	ON																																				
49	PS2-1	O	Power supply IC SW2 control 1 ILL,FM,AM																																					
50	BEEP		BEEP																																					
51	DSI	O	DSI control	H:Light on L:Light off When panel attached,output L When panel detached,flashing at the panel (H/L) FIX model is output L																																				
52	NC	O	Not used (out put L)																																					
53	NC	O	Not used (out put L)																																					
54	LOE/LIM SW	I	CD mechanism down&limit detection	H:Chucking detection L:Normal																																				
55	MO SW	O	CD mechanism loading motor control output	H:Loading,Eject,Break L:Play																																				
56	LO/EJ	I/O	CD mechanism loading/Eject switching terminal	H:Eject L:Loading																																				
57	M-STOP	O	Stop output to the CD mechanism	H:Play L:Stop																																				
58	M-RST	O	Reset output to the CD mechanism	H:Normal L:CD mechanism reset																																				
59	M-MUTE	I	Mute input from the CD mechanism	H:mute off L:mute on																																				
60	RESET		Reset input from the System microcomputer																																					
61	REMO	I	Remote control input																																					
62	R-CLK	I	RDS clock input	Except RDS model : output L																																				
63	CH-REQC	I	Request input from the changer (new 5L)	H:Changer detection L:Request Except Changer model : output L																																				
64	LOS SW	I	CD mechanism loading's switch detected	H:No disc L:DISK IN(Loading Start)																																				
65	KEY-REQ	I	Key input detected (11pin L connected to the DATA L)	H:Key no input L:Key input (edge key data reading start)																																				
66	12EJE SW	I	12cm disc detected	L:12cm disc																																				
67	Vss0																																							
68	VDD1																																							
69	X2		$\Delta$ 3 MAIN X'tal oscillating circuit	$\Delta$ 3 4.19MHz X'tal connection																																				
70	X1		$\Delta$ 3 MAIN X'tal oscillating circuit	$\Delta$ 3 4.19MHz X'tal connection																																				
71	IC		TEST																																					
72	XT2		Not used	OPEN																																				
73	XT1																																							
74	VDD0		VDD	Connected to VDD																																				
75	AVREF0		A/D converter reference voltage control output, connection to the 80pin AVCONT																																					
76	S-METER	I	S-meter input																																					
77	NOISE	I	FM noise detection input	$\Delta$ 3																																				
78	PHONE	I	2way mute	2.5V or greater:NAVI MUTE 1.0V or less:TEL MUTE Except phone mute model : output L																																				
79	NC	O	Not used (out put L)																																					
80	AVCONT	O	A/D converter standard voltage control output	H:During A/D converter active same timing with PON																																				

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## MICROCOMPUTER'S TERMINAL DESCRIPTION

### ● MECHANISM MICROCOMPUTER MN6627771KP (X32 : IC2)

Pin No.	Name	I/O	Description	Processing Operation
1	TVD	O	Traverse driver output (PWM output)	
2	SPL	O	Spindle motor drive output (PWM output)	
3	PC	O	Spindle motor ON output	L:ON H:OFF (default )
4	PWM	O	multi-purpose PWM output	It's possible to setup the TOSF2
5	TBAL	O	Tracking balance adjust output (PWM output)	
6	FBAL	O	Focus balance adjust output (PWM output)	
7	NRFDET	I	RF detection signal input	L:detected
8	OFT	I	Off-track signal input	H:detected
9	BDO	I	Drop out signal input	H:detected
10	LDON	O	Laser on signal output H:ON	When command FO on,LDON is H
11	DSLB	O	DSL balance output	
12	DVDD1	-	Power supply for digital circuit	
13	DVSS1	-	Ground lines for digital circuit	
14	AVSS2	-	Ground lines for analog circuit	For DSL,PLL and AD
15	DSL F	I/O	Loop filter terminal for DSL	The bias of ARF output terminal in one
16	ARF	I	RF signal input	
17	RFSW	I	When DSL circuit,constant switch terminal	
18	PLL F	I/O	Loop filter terminal for PLL	
19	PLL F2	I/O	Loop filter characteristic switching terminal for PLL	
20	IREF	I	Standard voltage input terminal	
21	RFENV	I	RF envelope signal input	Analog input
22	TRCRS	I	Track cross signal input	Analog input
23	TE	I	Tracking error signal input	Analog input
24	FE	I	Focusing error signal input	Analog input
25	AVDD2	-	Power supply for analog circuit	For DSL,PLL and AD
26	AVSS1	-	Ground lines for analog circuit	For audio output (Lch and Rch in one)
27	OUTR	O	Rch audio output	
28	AVDD1	-	Power supply for analog circuit	For audio output (Lch and Rch in one)
29	OUTL	O	Lch audio output	
30	DVSS3	-	Ground lines for digital circuit	
31	CSEL	I	Oscillation frequency specification terminal	H:33.8488MHz L:16.9344MHz
32	NC	O	Not used	
33	ASEL	I	Audio output polarity switching terminal	L:Reverse H:Non reverse
34	MSEL0	I	Destination type selection port (set 2bit)	Order "MSEL 0" and "MSEL 1" Set up
35	MSEL1	I	Destination type selection port (set 2bit)	Order "MSEL 0" and "MSEL 1" Set up
36	ICRST	O	Reset control terminal for external DAC	
37	BCLK	O	Bit clock output for serial data	
38	LRCK	O	L/R identification signal output	
39	SRDATA	O	Serial data output	
40	VREFP	I	A/D converter standard power supply input	
41	HOT	I	Temperature protection detection terminal (AD input)	Over C5(h):on
42	8EJE_SW	I	8cm disc eject stop detection terminal	H:Stop
43	12EJE/SDET_SW	I	Judge the 8cm or 12cm disc	12cm disc stop detection terminal
44	LOE/LIM_SW	I	Pick-up inside detected	Loading end detection terminal
45	PCK	O	PLL extracted clock output,etc	
46	EFM	O	EFM signal output,etc	
47	SENSE	O	Optics servo status signal output,etc	
48	CLVS	O	Spindle servo phase synchronous signal output,etc	L:Normal operation H:Luff servo
49	DEMPH	O	Dephase detection signal output,etc	H:on
50	DVDD2	-	Power supply for digital circuit	
51	X1	I	Main clock input terminal	

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Name	I/O	Description	Processing Operation
52	X2	O	Main clock output terminal	
53	DVSS2	-	Ground lines for digital circuit	
54	XSUB1	I	When external DAC,external clock input terminal	
55	XSUB2	O		
56	TEST1	I	Test port 1	Normal operation is H fixed
57	TEST2	I	Test port 2	Normal operation is H fixed
58	NC	O	Not used	
59	VER/HOR	O	Put length or breadth switching motor terminal	H:Put length L:Put breadth
60	DRV_MUTE	O	Driver mute control terminal	L:MUTE ON H:MUTE OFF
61	/MUTE_L	O	Audio Lch MUTE output	L:MUTE
62	/MUTE_R	O	Audio Rch MUTE output	L:MUTE
63	/RST	I	LSI reset input terminal	H:Normal L:Reset
64	OCD_CLK	I	When OCD connected, clock input	
65	/MSTOP	I	Standby detection terminal	H:Normal L:Mecha stop
66	DATA	I/O	I2C bus data line (communication line with system computer)	At that time serial writer connected
67	SBIO	I	When connected to serial writer,data input terminal	
68	/CLK	I/O	I2C bus clock line (communication line with system computer)	At that time serial writer connected
69	TX	O	Digital audio interface signal output	
70	EQCNT	O	RF EQ switching terminal	L:x2 times H:x1 times
71	XSEL	I	During the external DAC connection	MCLK external input (H:input)
72	MCNT	I	CD mecha Loading/Eject control ON/OFF	L:OFF (HOST control) H:mechanism control
73	P-ON	O	Audio and servo origin power control terminal	L:power on H:power off
74	MOTOR	O	Loading/Eject control switching terminal	At that time LO/EJ is "H"
75	LO/EJ	O	Loading/Eject control terminal or output L	When 72pin (P82) is "L",output "L"
76	CD-RW	O	CD-RW control terminal	H:CD-RW L:normal
77	LDCNT	O	LD control terminal	Operation is same LDON as timing
78	DVDD3	-	Power supply for digital circuit	
79	FOD	O	Focus driver output (PWM output)	
80	TRD	O	Tracking driver output (PWM output)	

System mi-com Destination type list

	TYPE2	TYPE1	TYPE0	MODEL NAME
uPD780058GC499	L	L	L	KDC-2024SA/SYA, 2024SG/SYG
	L	L	H	KDC-2022, 2022V,202MR
	L	H	L	RY-391CD, RX-491CD
	L	H	H	KDC-4023, 2023, 3023
uPD780058GC501	L	L	H	KDC-122, 122S
	L	H	H	KDC-1023, 1023S
	H	L	H	KDC-222, 222S
uPD780058GC502	L	L	L	KDC-3024G/YG, 307G/YG
	L	H	H	KDC-3023R
	H	L	L	KDC-3024A/YA, 307A/YA
	H	L	H	KDC-4024/Y/V/YV
uPD780058GC503	L	L	L	KDC-2094YA/YG
H:	R135	R137	R139	
L:	R136	R138	R140	

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## ADJUSTMENT

### 1. IC10 (TDA7513) -The Tuner adjustment method

- When IC10 and its circumference are fixed, according to the following order, it readjusts if needed.
- The adjustment item changes with parts to exchange. Please refer to "Parts vs Adjustment item table".

#### 1-1. VCO Coil Adjustment -- Adjustment of Tuning Voltage

Voltage Check Point : Vt-Check Land  
(PWB Side\_B, around D506)

Adjustment Coil : L507 (VCO Coil)

The adjustment method : VCO coil is turned and adjusted according to the following tables.

TYPE	Mode	freq.	Voltage	Fig
E/M	AM	1611kHz	$5.5 \pm 0.1(V)$	(C)
K	AM	1700kHz	$5.8 \pm 0.1(V)$	(C)
J	FM	90.0MHz	$5.6 \pm 0.1(V)$	(C)
W(Wide Band)	FM	108.0MHz	$7.2 \pm 0.1(V)$	(C)

M : AM Adjustment

For Your Information : The frequency of SET is only set up by Pre-Set-Key in case this adjustment

#### 1-2. Adjustment of 1st & 2nd-MIX Coil



Voltage Check Point : S\_METER-Check Land  
(PWB Side\_B, around W572)

Adjustment Coil : 1stIFT = L508 / 2ndIFT = L509

Setting of Signal Generator : Refer to the following tables

TYPE	MODE	freq.	Mod.	ANT Input	Fig
K	AM	1000kHz	OFF	35dBuEMF	(B),(C)
E,M,J,W	AM	999kHz	OFF	35dBuEMF	(B),(C)

- ①The appearance and the coil with which S-METER DC voltage serves as the maximum are turned and adjusted in the above-mentioned SG input.
- ②By the above-mentioned adjustment method, same adjustment is performed to both sides (1st&2nd MIX Coil).

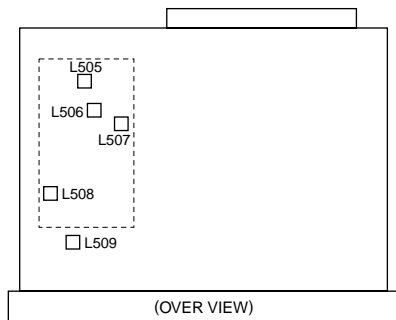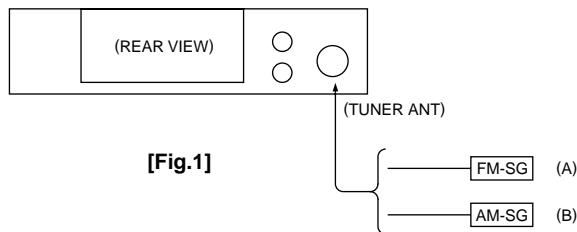

[Fig.2]

### 1-3. Adjustment of FM\_ANT&RF Coil

Voltage Check Point : S\_METER-Check Land (PWB Side\_B, around W572)

Adjustment Coil : ANT\_Coil = L505  
RF\_Coil = L506

Setting of Signal Generator : Refer to the following tables.


TYPE	MODE	freq.	Mod.	ANT Input	Fig
E/M	FM	87.5MHz	OFF	5 or 11dBuEMF	(A),(C)
K	FM	87.9MHz	OFF	5 or 11dBuEMF	(A),(C)
J	FM	76.0MHz	OFF	5 or 11dBuEMF	(A),(C)
W(Wide Band)	FM	65.0MHz	OFF	5 or 11dBuEMF	(A),(C)

- ①The appearance and the coil with which S-METER DC voltage serves as the maximum are turned and adjusted in the above-mentioned SG input.
- ②By the above-mentioned adjustment method, same adjustment is performed to both sides (ANT&RF Coil).

### 1-4. Adjustment of STEREO (adjustment of 456k-VCO)

Adjust in TEST\_MODE

- How to enter the test mode  
While pressing on [ FM ] and [ PRESET 6 ] keys, reset the unit.
- Adjustment method  
Complete on condition that show "ALL OFF" when pressing on [ PRESET 1 ] and [ PRESET 6 ] keys.  
(Writing adjustment valve to the EEPROM.)  
Effect of adjustment is in cofirmation of adjustment status at [ PRESET 4 ] key.
- Display of [ PRESET 4 ]  
Adjustment "OK" : 14seg model "E2P OK" 7seg model "EPO"  
Adjustment "NG" : 14seg model "E2P ERR" 7seg model "EPE"
- Releasing the test mode  
Reset mode only.  
ACC off, Power off, Power down and Remove the panel mode is not releasing.

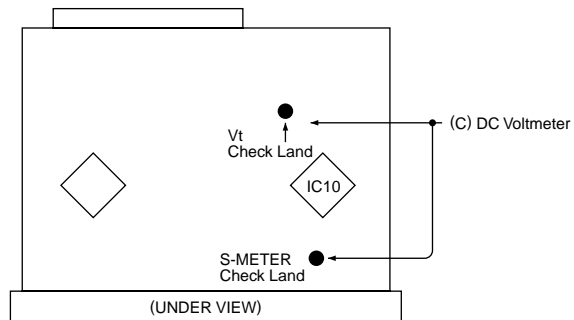

[Fig.3]



# KDC-3024A/G/YA/YG,307A/G/YA/YG

## ADJUSTMENT

### 2.IC10 (TDA7513) Replacement-Parts vs Adjustment Item Table


- When the parts in the following tables are exchanged, please readjust according to a table.
- When other parts are exchanged, please perform only a check of operation. There is no necessity for readjustment.

Replacement parts				Adjustment Item					
Parts Name	Ref Number	TYPE	Parts Number	VCOVt	1st MIX	2nd MIX	ANT Coil	RF Coil	Stereo
	IC10	ALL	TDA7513	○	○	○	○	○	○
EEP-ROM	IC12	ALL	M24C01-WMN6T BR24C01AF-W S-24CS02AFJ-TB	○	○	○	○	○	○
Antenna Coil	L505	J E,K,M W(Wide Band)	L31-0966-05 L31-0967-05 L31-0968-05				○		
RF Coil	L506	J E,K,M W(Wide Band)	L31-0969-05 L31-0970-05 L31-0971-05					○	
VCO Coil	L507	J E,K,M W(Wide Band)	L32-0932-05 L32-0933-05 L32-0934-05	○	○	○	○	○	
1st MIX Coil	L508	ALL	L30-0770-05		○				
2nd MIX Coil	L509	ALL	L30-0771-05			○			
Variable Capacitance Diodes	D504	J,E,K,M W(Wide Band)	KV1720S KV1735S	○	○	○	○	○	
Variable Capacitance Diodes	D505	J,E,K,M W(Wide Band)	KV1720S KV1735S	○	○	○	○	○	
Variable Capacitance Diodes	D506	J,E,K,M W(Wide Band)	KV1720S KV1735S	○	○	○	○	○	
X'tal	X501	ALL	L77-2077-05						
				* The "○" mark shows that the adjustment is need.					



# PC BOARD (FOIL SIDE VIEW)


X32-5380-00 (J74-1485-12)

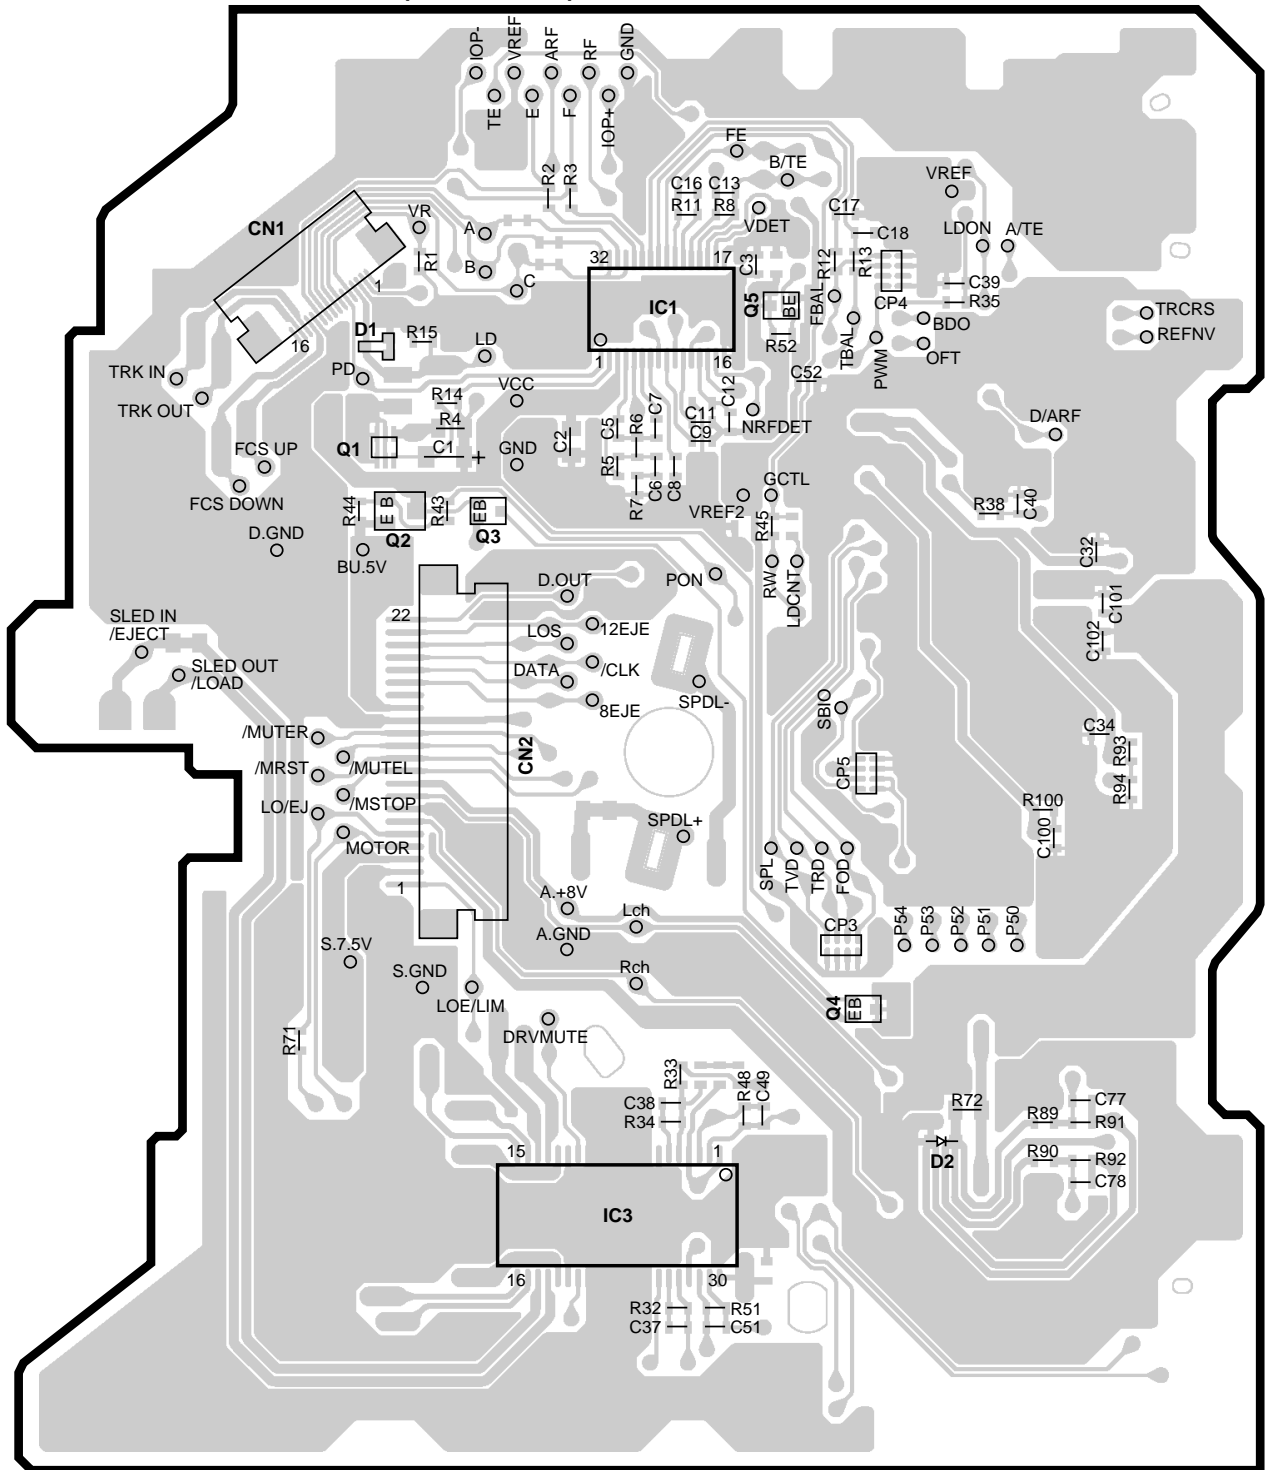

X32-5380-00

Ref. No	address	Ref. No	address	Ref. No	address
IC1	2H	Q2	3G	Q5	2H
IC3	5H	Q3	3G		
Q1	3G	Q4	5I		

# PC BOARD (FOIL SIDE VIEW)

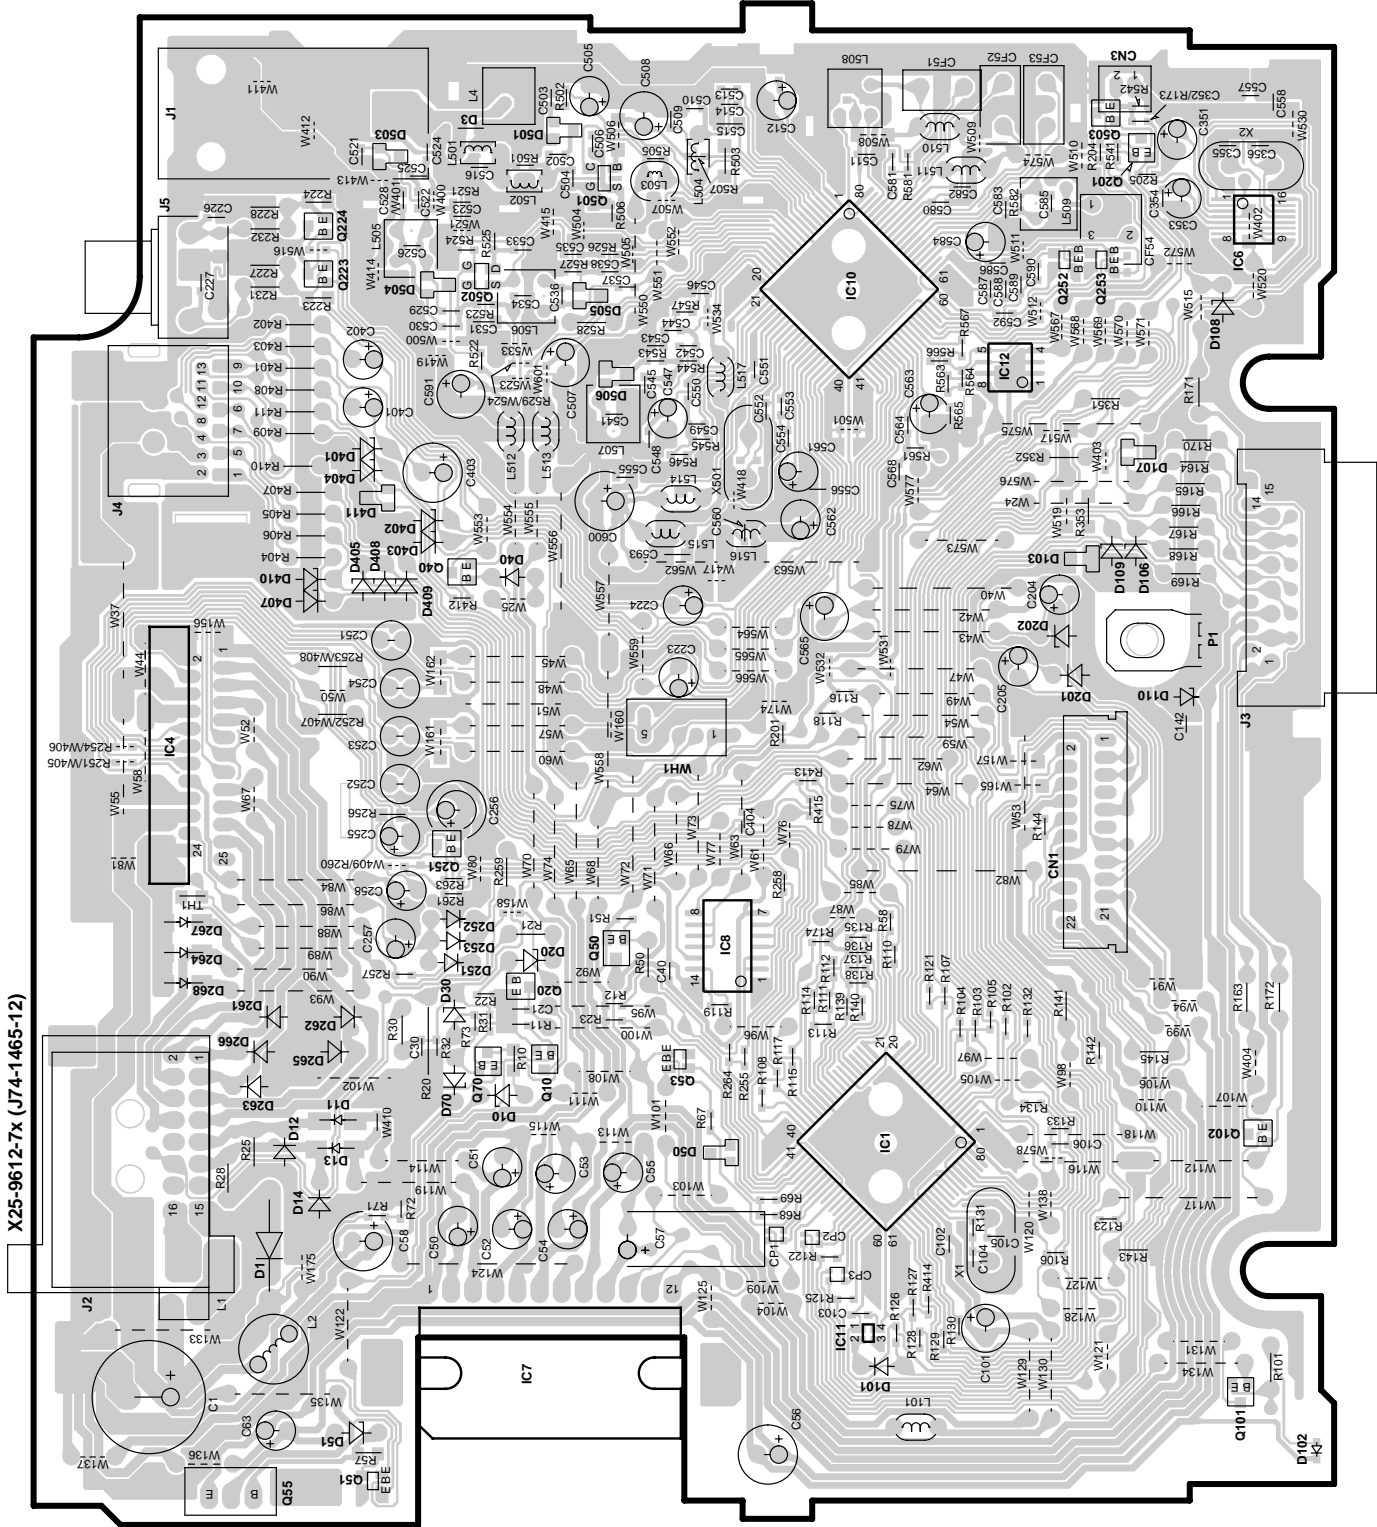


**X25-9612-7x**

Ref. No	address	Ref. No	address	Ref. No	address	Ref. No	address
IC1	5N	IC12	3N	Q55	6L	Q251	4L
IC4	4K	Q10	5M	Q70	5L	Q252	2N
IC6	2O	Q20	5M	Q101	6O	Q253	2O
IC7	6M	Q40	3L	Q102	5O	Q501	2M
IC8	4M	Q50	4M	Q201	2O	Q502	2L
IC10	2N	Q51	6L	Q223	2L	Q503	2O
IC11	6N	Q53	5M	Q224	2L		

Refer to the schematic diagram for the values of resistors and capacitors.


# PC BOARD (COMPONENT SIDE VIEW)

X16-1472-7x  
(J74-1288-22)

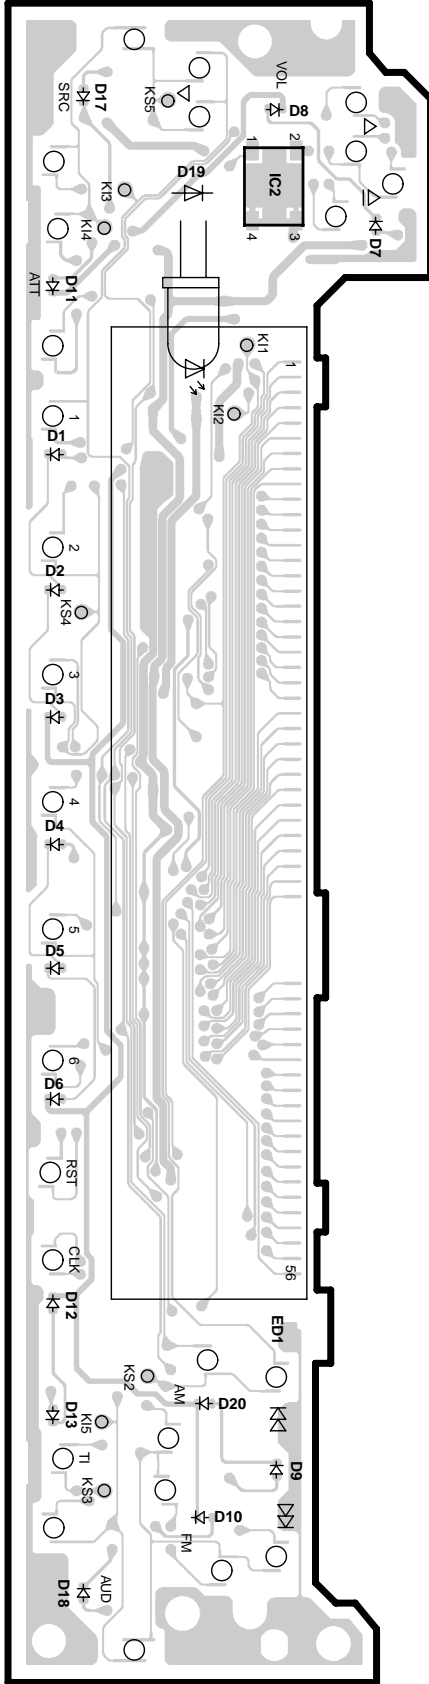

# (FOIL SIDE VIEW)

X16-1472-7x  
(J74-1288-22)

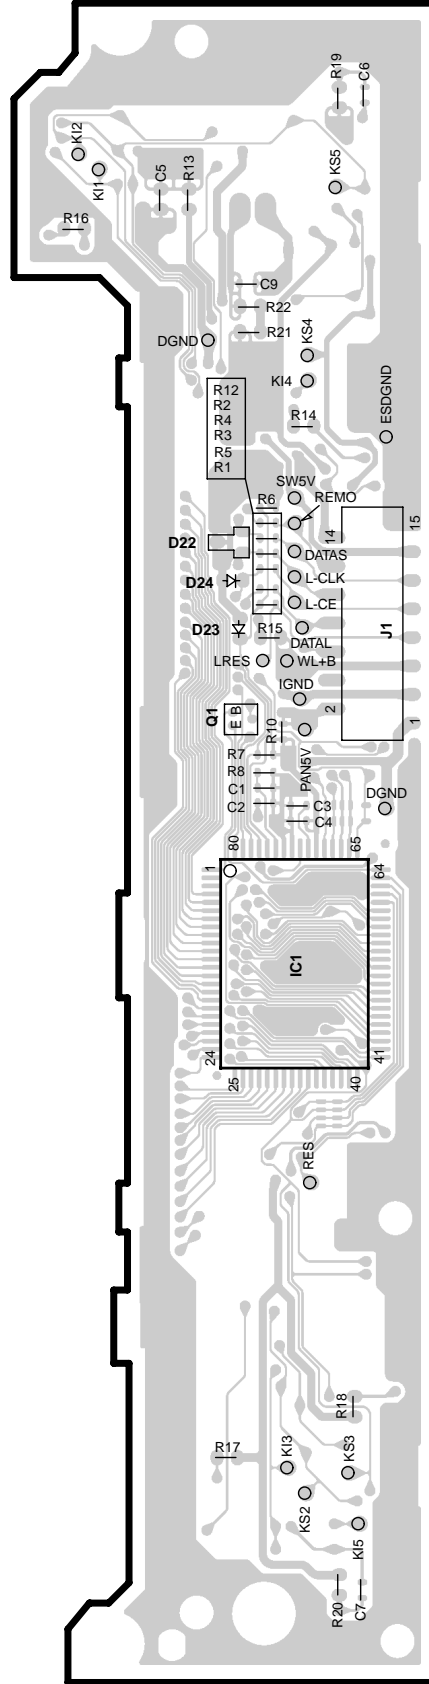

X16-1472-7x


Ref. No	address
IC1	5S
IC2	2Q
Q1	4S

CD PLAYER UNIT (X32-5380-00)


DTC143TUA  
UN5111  
2SA1036K  
2SA1362  
2SA1576A




2SC4081

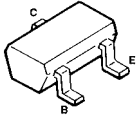

DTA114EUA  
DTA124EUA  
DTC124EUA

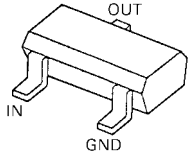

DAN202U

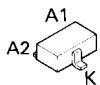


DA204U  
DTA114YU




MA142WK  
UN521




3SK126

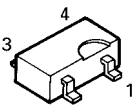


BR24C01AF-W

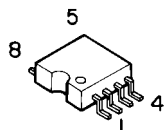


MCH6101

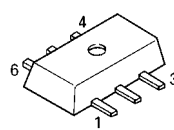

to MAIN UNIT

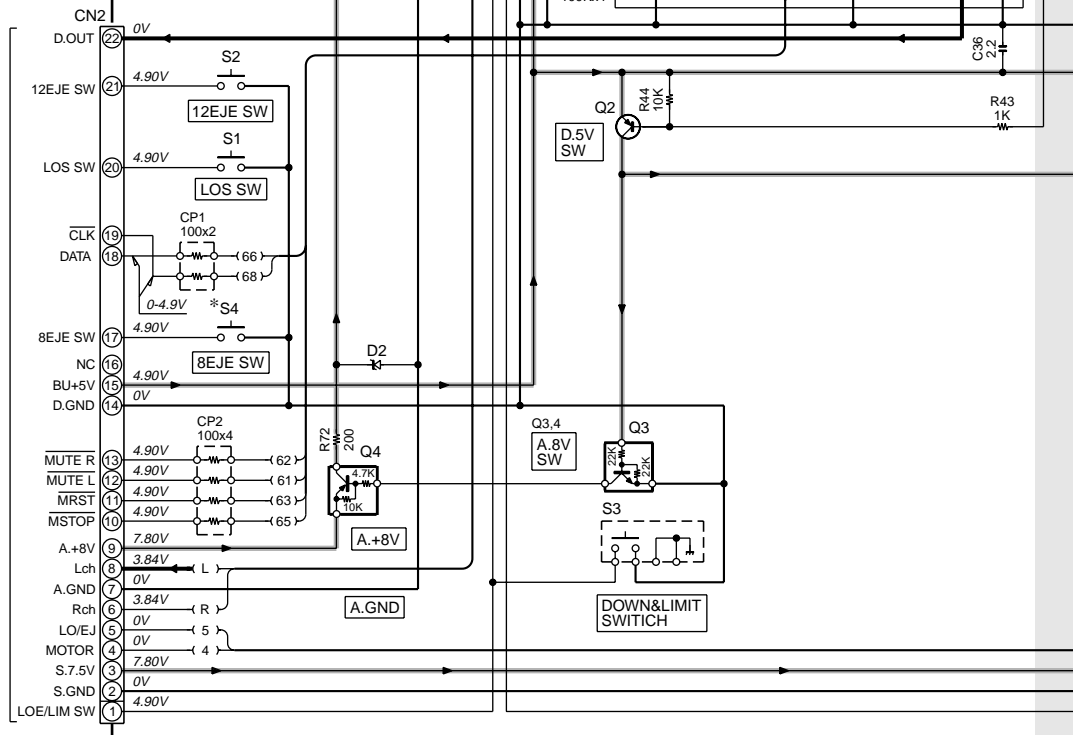


IC2  
CD SIGNAL PROCESS  
BUILT-IN MI-COM


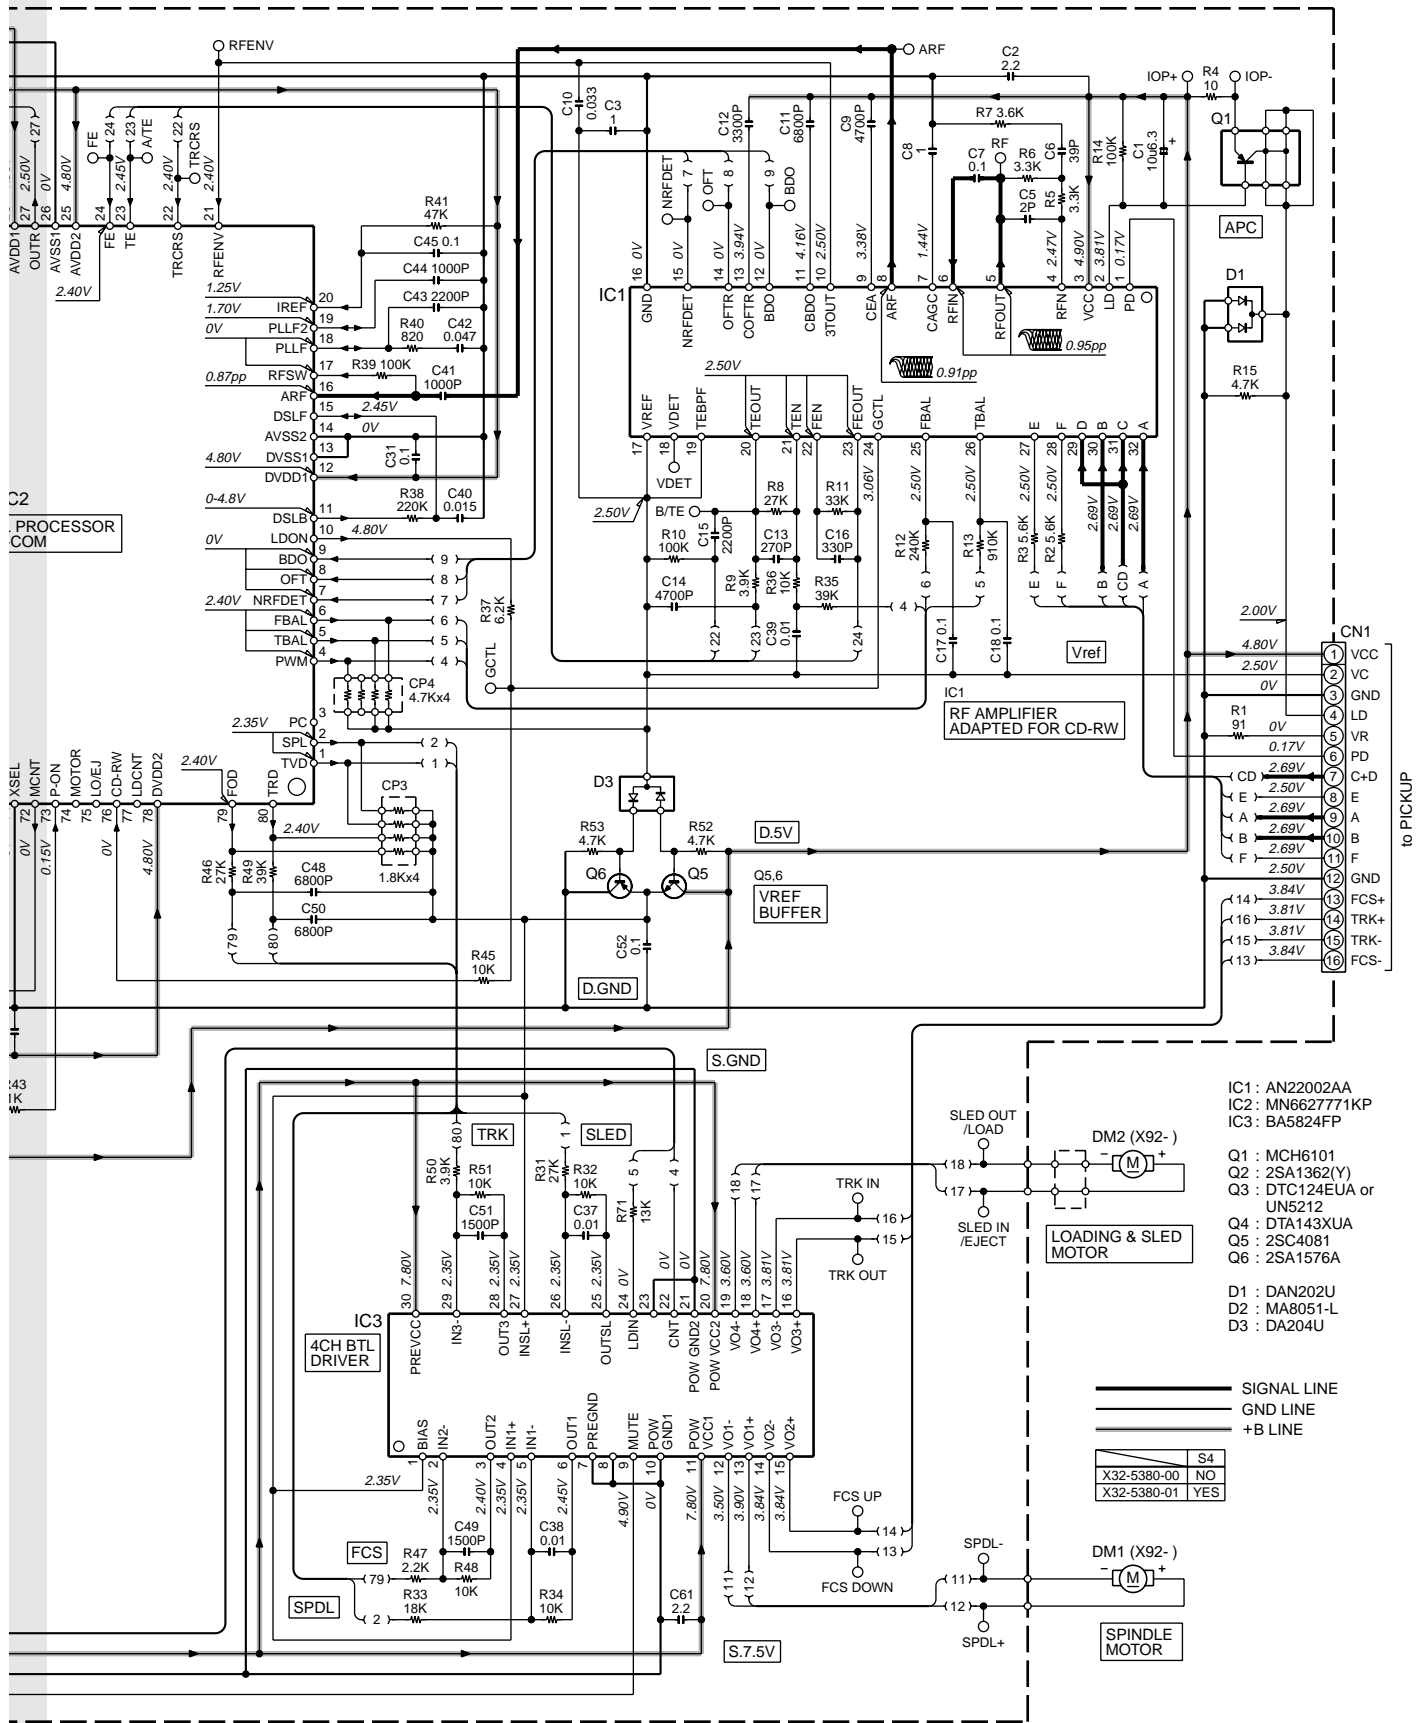


**CAUTION:** For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).  
 ⚠ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.  
 • DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.





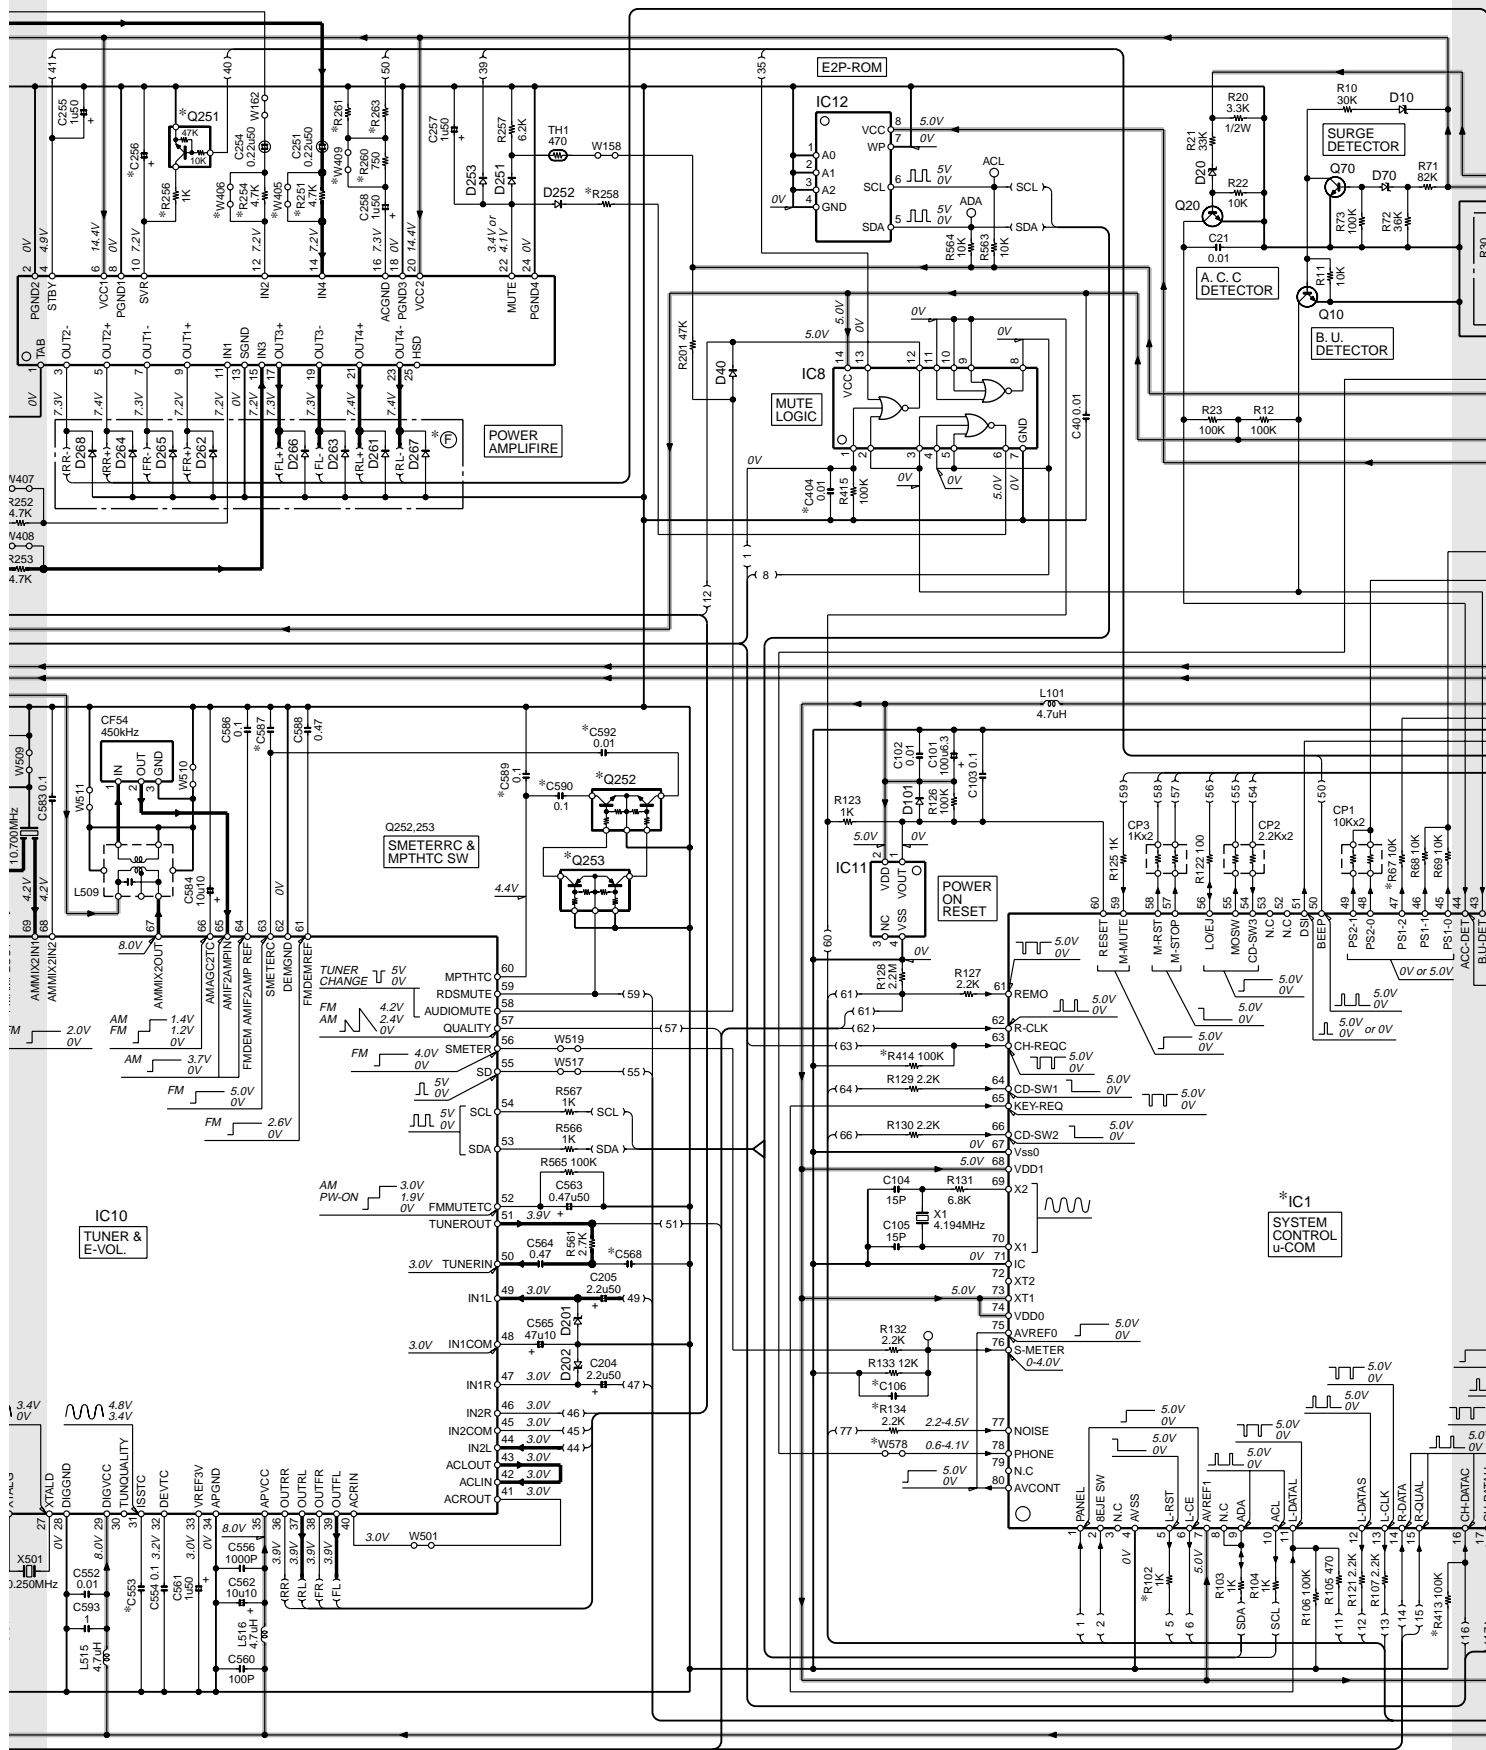

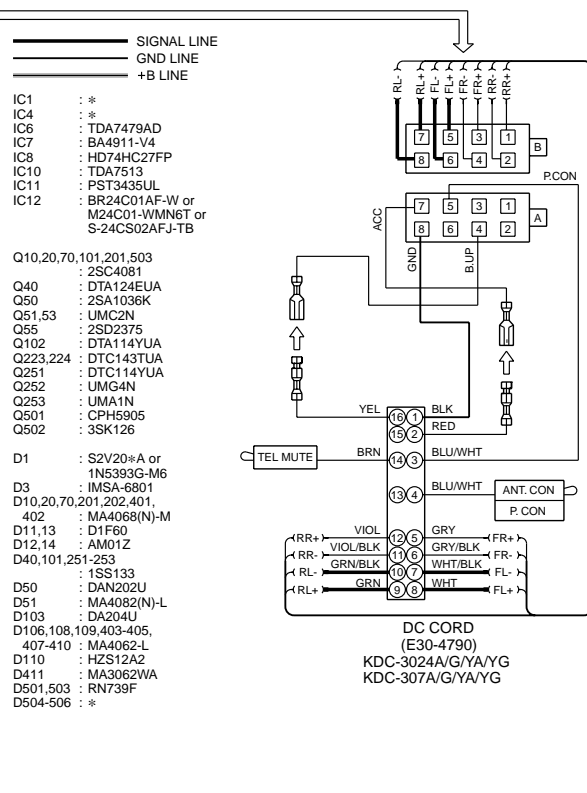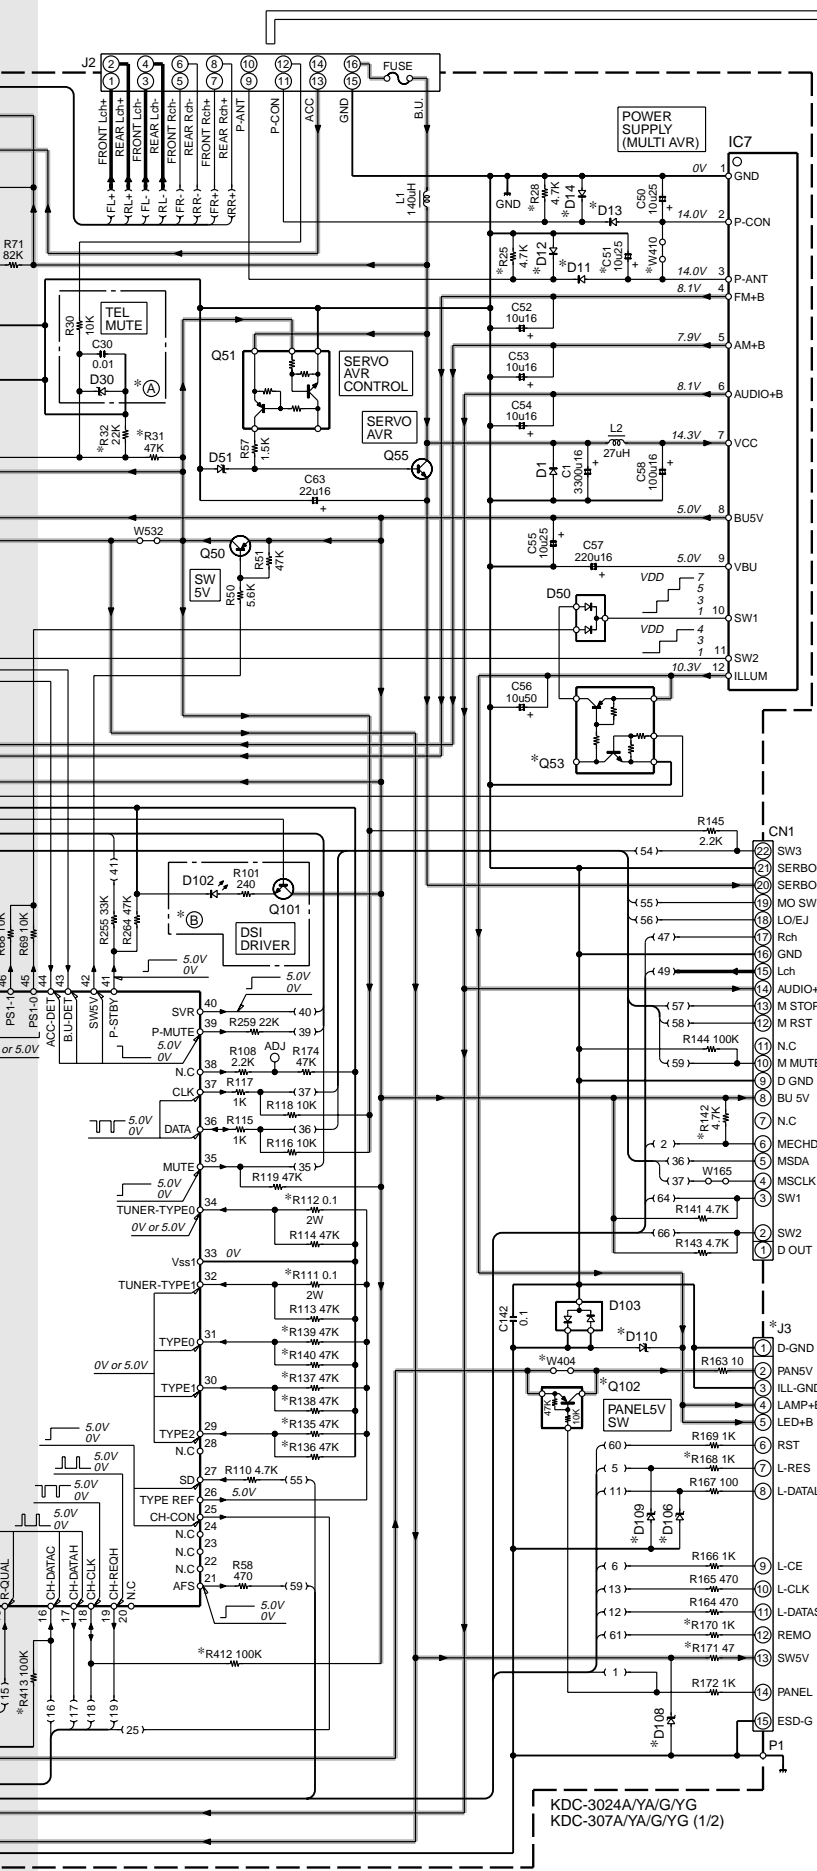

- IC1 : \*  
 IC4 : \*  
 IC6 : TDA7479AD  
 IC7 : BA4911-V4  
 IC8 : HD74HC27FP  
 IC10 : TDA7513  
 IC11 : PST3435UL  
 IC12 : BR24C01AF-W or M24C01-WN6T or S-24CS02AFJ-TB

- Q10,20,70,101,201,503 : 2SC4081  
 Q40 : DTA124EUA  
 Q50 : 2SA1036K  
 Q51,53 : UMC2N  
 Q55 : 2SD2375  
 Q102 : DTA114YUA  
 Q223,224 : DTC143TUA  
 Q251 : DTC114YUA  
 Q252 : UMG4N  
 Q253 : UMA1N  
 Q501 : CPH5905  
 Q502 : 3SK126

- D1 : S2V20\*A or 1N5393G-M6  
 D3 : IMSA-6801  
 D10,20,70,201,202,401,402 : MA4068(N)-M  
 D11,13 : D1F60  
 D12,14 : AM01Z  
 D40,101,251-253 : 1SS133  
 D50 : DAN202U  
 D51 : MA4082(N)-L  
 D103 : DA204U  
 D106,108,109,403-405,407-410 : MA4062-L  
 D110 : HZS12A2  
 D411 : MA3062WA  
 D501,503 : RN739F  
 D504-506 : \*

(X25-9612-7X)

MODEL NAME	UNIT No.	(A)	(B)	(D)	(E)	(F)	(C)	C51,404,529,557,558,589	C106	C227,228,528,530,532	C256
KDC-3024A (E)											
KDC-307A (E)											
KDC-3024YA (E)	2-72	YES					NO	NO	1000P	YES	33u50
KDC-307YA (E)											
KDC-3024G (E)											
KDC-307G (E)	2-73	YES					NO	NO	1000P	YES	33u50
KDC-3024YG (E)											
KDC-307YG (E)											

UNIT No.	C521	C522	C523	C524	C526	C530,536,541	C537,538	C553	C568	C581	C587	CF52,53
2-72	0.1	33P	27P	100P	5P	4P	8P	0.047	220P	2P	820P	L72-0716-05
2-73	0.1	33P	27P	100P	5P	4P	8P	0.047	220P	2P	820P	L72-0716-05

UNIT No.	CN3	D11-14,106,109,110	D108	D504-506	IC1	IC4	J3
2-72	NO	YES	NO	KV1720S	UPD780058GC502	TDA7560	E58-0879-05
2-73	NO	YES	NO	KV1720S	UPD780058GC502	TDA7560	E58-0879-05

UNIT No.	L505	L506	L507	Q40,102,252,253	Q53,251	R25,28,31,32,102,134,138,140,168,521
2-72	L31-0967-05	L31-0970-05	L32-0933-05	YES	NO	YES
2-73	L31-0967-05	L31-0970-05	L32-0933-05	YES	NO	YES



UNIT No.	R67,111,112,137,139,142,170,171,173,251-254,256,260,412-414,529	R135	R136	R258	R261	R263	R526
2-72	NO	YES	NO	220	10	4.3K	5.6K
2-73	NO	NO	YES	220	10	4.3K	5.6K

UNIT No.	W160,161,400-404	W405-410,524,578	WH1
2-72	NO	YES	NO
2-73	NO	YES	NO

**CAUTION** : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).  
 Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.  
 • DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

1  
 2  
 3  
 4  
 5  
 6  
 7

### SWITCH UNIT (X16-1472-7X)

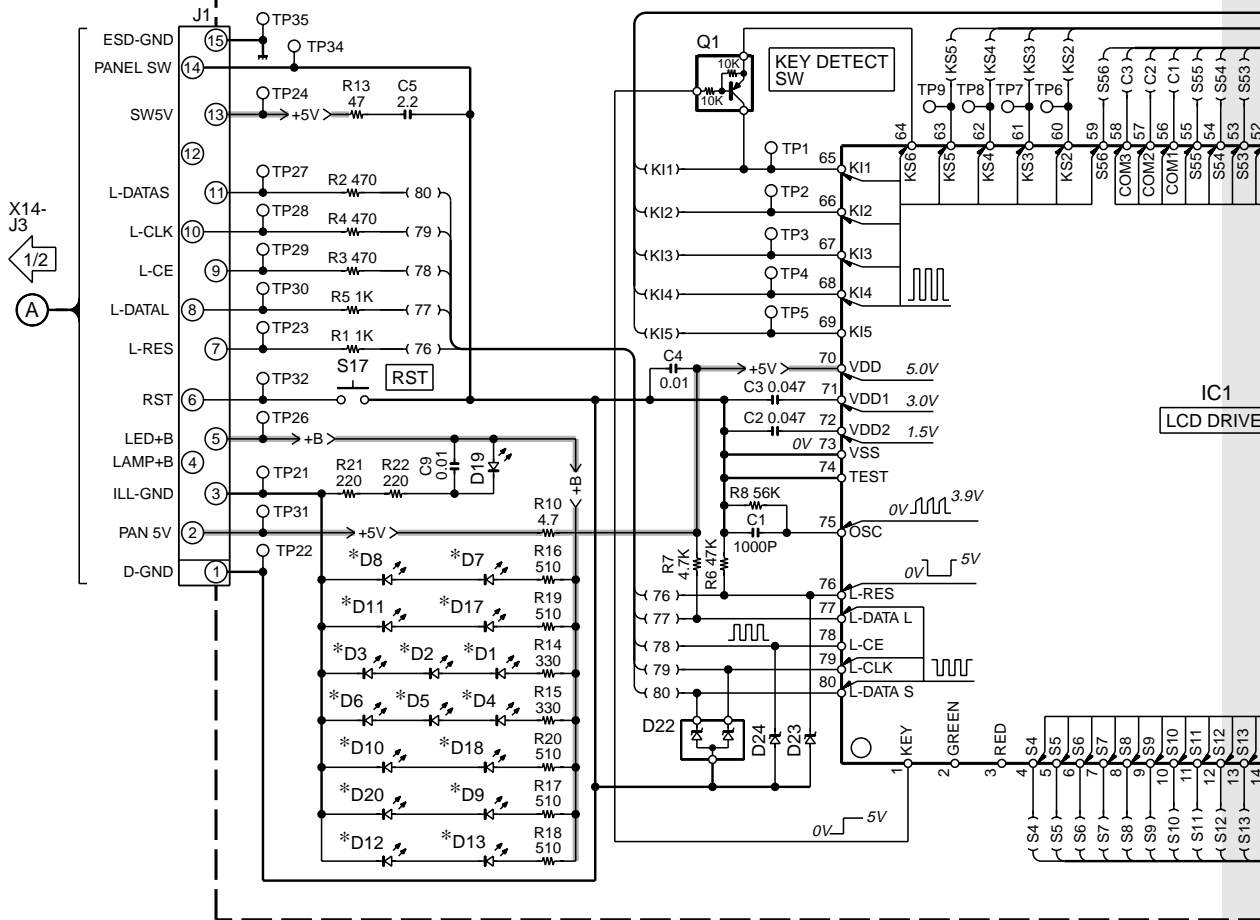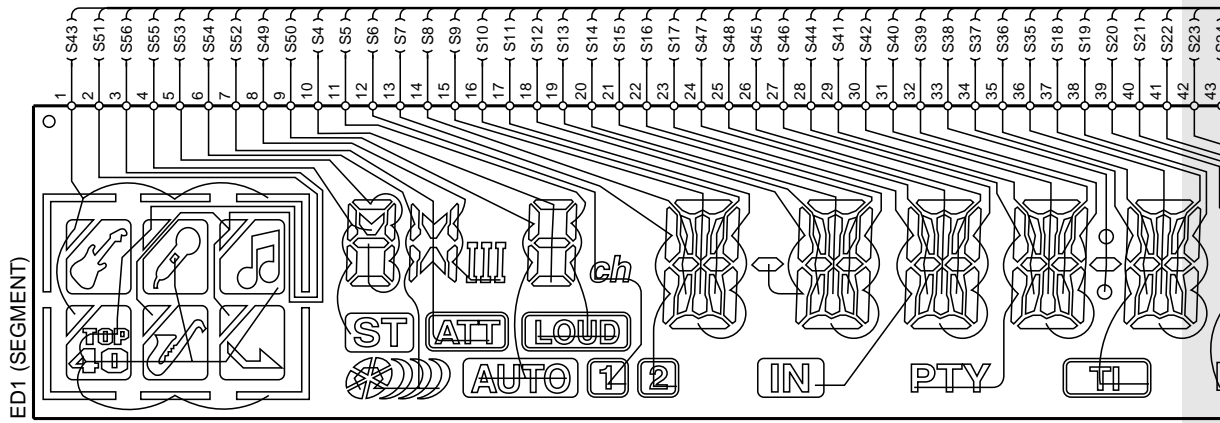

1

2


3

4

5

6

7

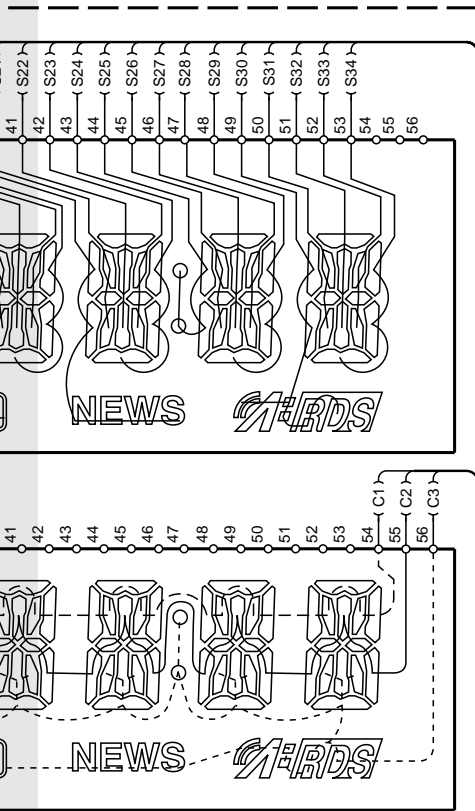

**CAUTION :** For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).




△ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

(X16-1472-7X)

MODEL NAME	UNIT No.	D1-13, 17,18,20
KDC-3024A (E)	2-72	B30-1567-05 (RED)
KDC-307A (E)		
KDC-3024YA (E)		
KDC-307YA (E)		
KDC-3024G (E)	2-73	B30-1533-05 (GREEN)
KDC-307G (E)		
KDC-3024YG (E)		
KDC-307YG (E)		


IC1 : LC75883E  
 Q1 : DTA114EUA  
 D1-13,17,18,20 : \*  
 D19 : B30-1633-05  
 D22 : MA3062WA  
 D23,24 : MA8062

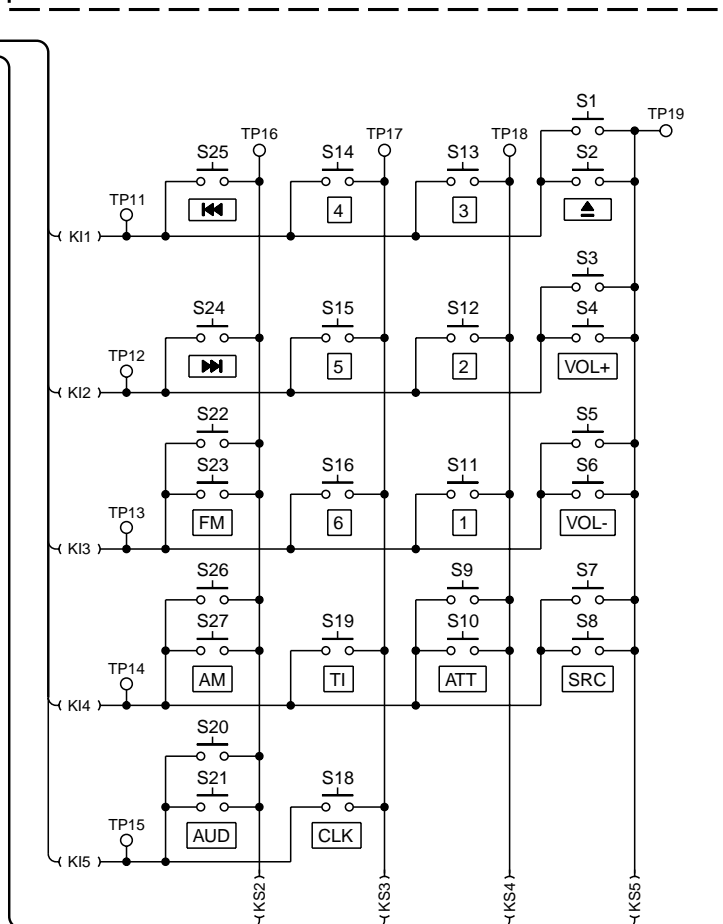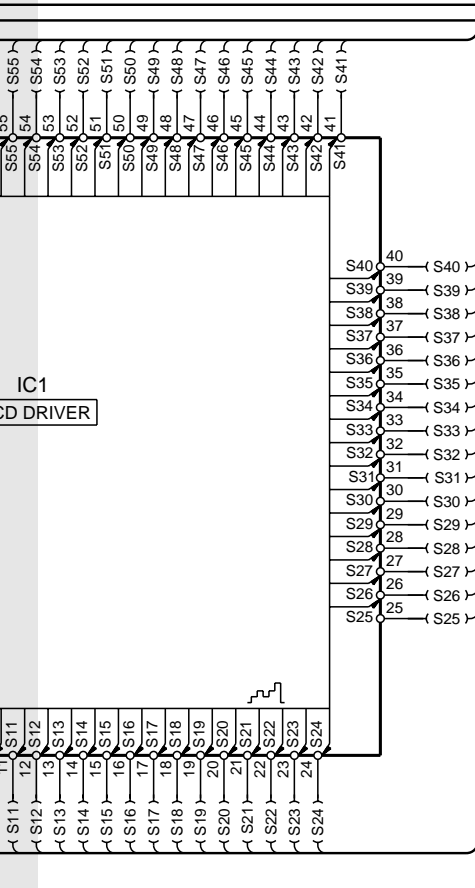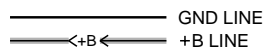

KDC-3024A/G/YA/YG/307A/G/YA/YG (2/2)

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## EXPLODED VIEW (MECHANISM)

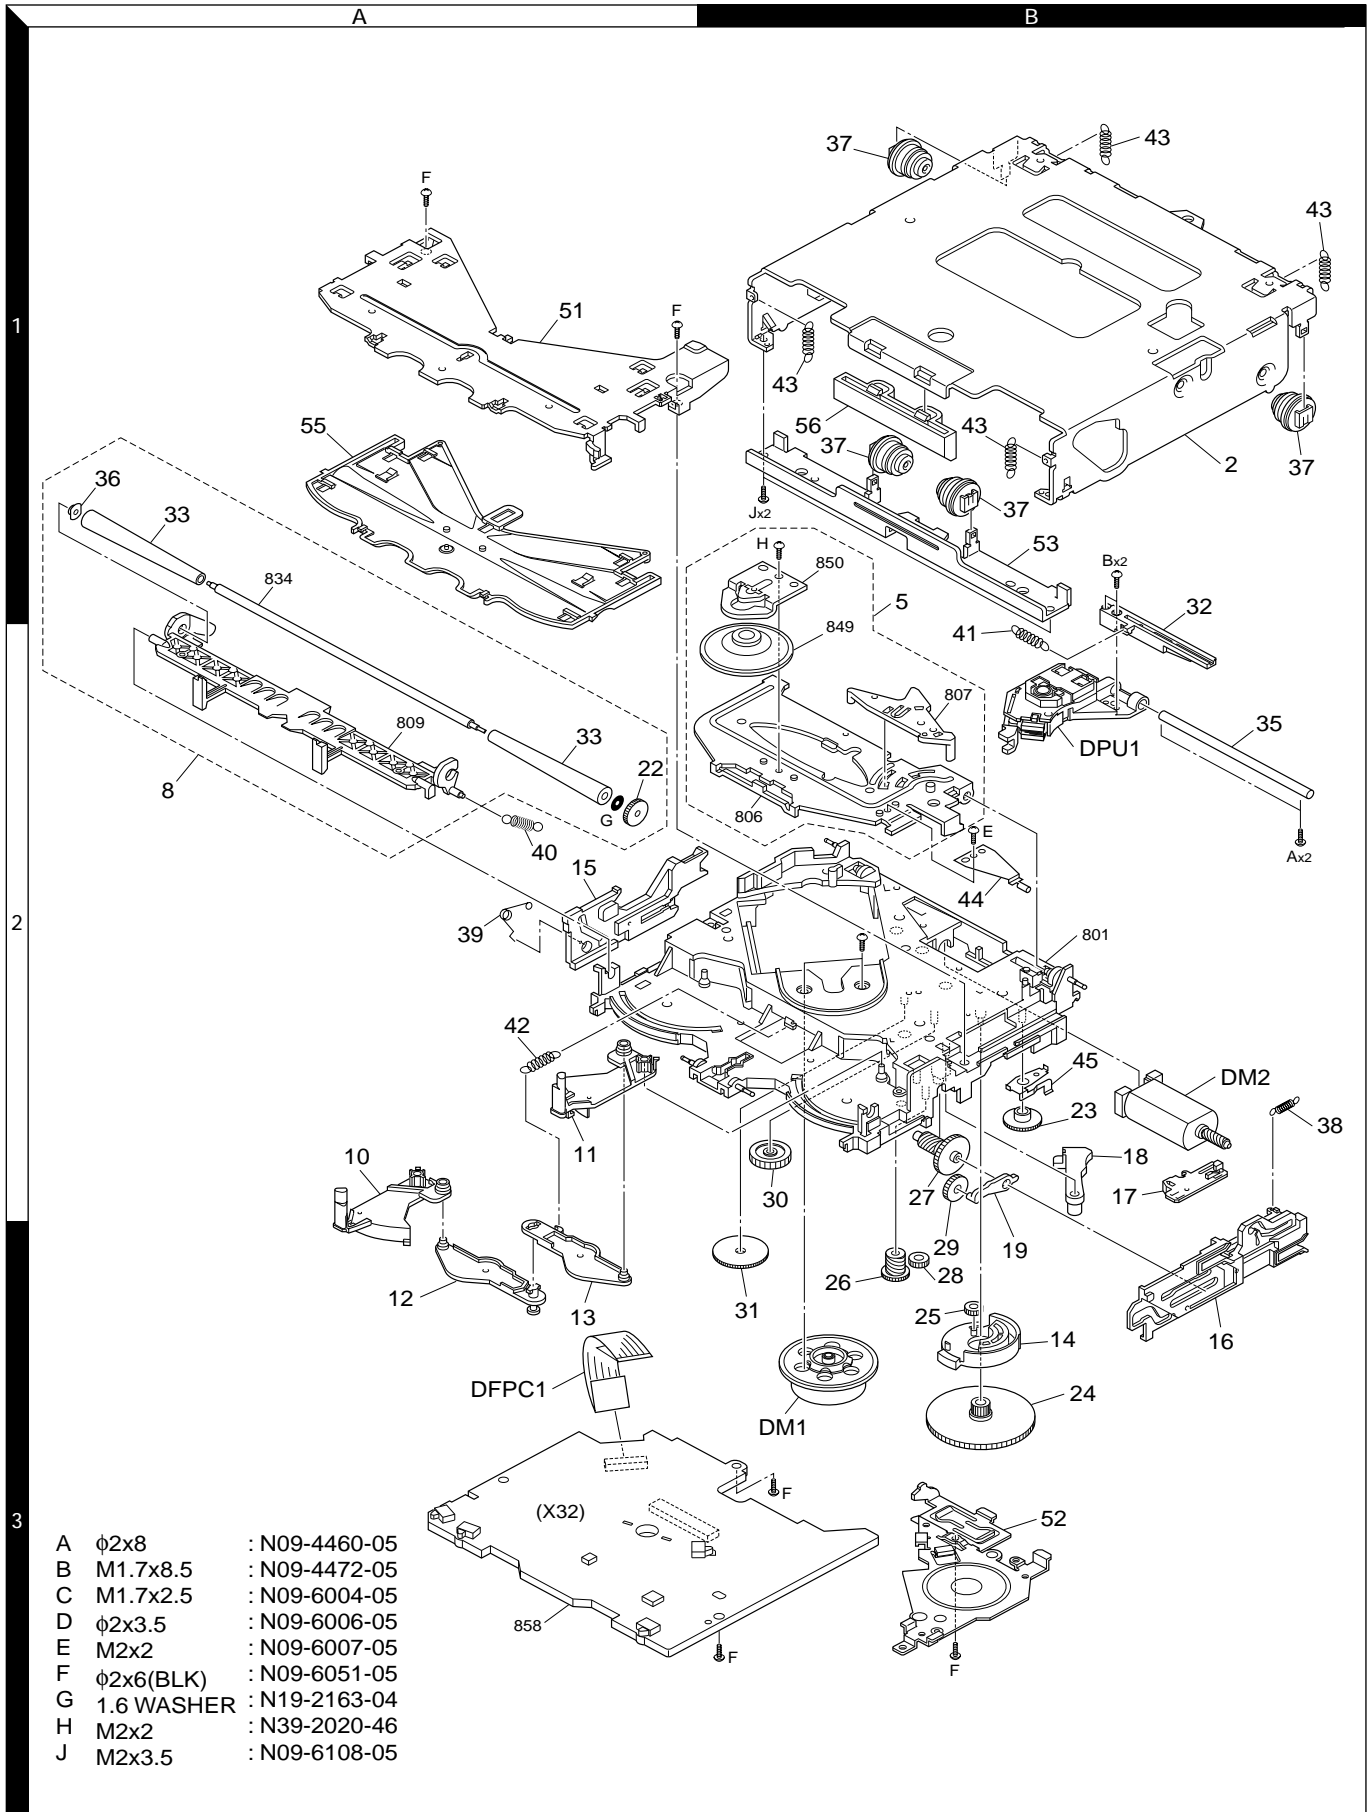

Parts with the exploded numbers larger than 700 are not supplied.



# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
<b>KDC-3024A/G/YA/YG,307A/G/YA/YG</b>					
201	1C		A02-1486-13	PLASTIC CABINET ASSY	
203	1C		A22-2863-03	SUB PANEL ASSY	
205	2C		A46-1750-01	REAR COVER	
206	1D		A52-0804-02	TOP PLATE	
PA1	3C	*	A64-2876-02	PANEL ASSY	E2E3Z2
PA1	3C	*	A64-2876-02	PANEL ASSY	Z3
PA1	3C	*	A64-2877-02	PANEL ASSY	E4E5Z4 Z5
-			B46-0100-50	WARRANTY CARD	E2E3E4
-			B46-0100-50	WARRANTY CARD	E5
-			B46-0182-14	ID CARD	E2E3E4
-			B46-0182-14	ID CARD	E5
-			B46-0606-04	ID CARD	ZZ3Z4
-			B46-0606-04	ID CARD	Z5
-			B58-1365-04	CAUTION CARD	
-		*	B64-2484-00	INSTRUCTION MANUAL(ENGLISH)	E2E3E4
-		*	B64-2484-00	INSTRUCTION MANUAL(ENGLISH)	E5
-		*	B64-2485-00	INSTRUCTI.MANUAL(FRE.GER.ITA.)	E2E3E4
-		*	B64-2485-00	INSTRUCTI.MANUAL(FRE.GER.ITA.)	E5
-		*	B64-2486-00	INSTRUCTI.MANUAL(DUT.SPA.POR.)	E2E3E4
-		*	B64-2486-00	INSTRUCTI.MANUAL(DUT.SPA.POR.)	E5
-		*	B64-2487-00	INSTRUCTI.MANUAL(ENG.RUS.POL.)	ZZ3Z4
-		*	B64-2487-00	INSTRUCTI.MANUAL(ENG.RUS.POL.)	Z5
-		*	B64-2488-00	INSTRUCTION MANUAL(SWED.FINN.)	ZZ3Z4
-		*	B64-2488-00	INSTRUCTION MANUAL(SWED.FINN.)	Z5
-		*	B64-2489-00	INSTRUCTI.MANUAL(CZE.HUN.CRO.)	ZZ3Z4
-		*	B64-2489-00	INSTRUCTI.MANUAL(CZE.HUN.CRO.)	Z5
210	3D		B07-3001-02	ESCUTCHEON	
211	3C	*	B10-4345-01	FRONT GLASS	E2E3Z2
211	3C	*	B10-4345-01	FRONT GLASS	Z3
211	3C	*	B10-4346-01	FRONT GLASS	E4E5Z4
211	3C	*	B10-4346-01	FRONT GLASS	Z5
213	1C		D10-4446-03	LEVER	
214	2C		D10-4447-03	LEVER	
215	1C		D10-4589-04	LEVER	
216	1C		D21-2329-04	SHAFT	
218	2C		E29-1872-02	CONDUCTIVE RUBBER	
△ DC1	1C		E30-4790-05	DC CORD	
△ DC1	1C		E30-6134-05	DC CORD	
FC1	2D		E39-0476-05	FLAT CABLE	
△ 999			F52-0011-05	FUSE(MINI BLADE TYPE)	
△ F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)	
224	1C		G01-2987-04	TORSION COIL SPRING	
225	1C		G01-3096-04	EXTENSION SPRING	
226	3C		G01-3149-04	COMPRESSION SPRING	
-		*	H10-4856-02	POLYSTYRENE FOAMED FIXTURE	
-		*	H25-0329-04	PROTECTION BAG (280X450X0.03)	
-		*	H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2742-03	ITEM CARTON CASE	E2
-		*	H54-2743-03	ITEM CARTON CASE	E3
-		*	H54-2748-03	ITEM CARTON CASE	E4

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
-		*	H54-2749-03	ITEM CARTON CASE	E5
-		*	H54-2752-03	ITEM CARTON CASE	Z2
-		*	H54-2753-03	ITEM CARTON CASE	Z3
-		*	H54-2754-03	ITEM CARTON CASE	Z4
-		*	H54-2755-03	ITEM CARTON CASE	Z5
229	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
232	3C		K24-3822-04	KNOB (RELEASE)	
233	3C		K24-3823-04	KNOB (SRC)	
234	3C		K24-3824-04	KNOB (AUD)	
235	3C		K24-3825-03	KNOB (VOL)	
236	3C		K24-3826-04	KNOB (EJECT)	
237	3C		K25-1396-03	KNOB (PRE1-6,ATT,RESET)	
238	3C		K25-1397-03	KNOB (AUTO,CLK,FM,AM)	
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	1C		N29-0205-04	RETAINING RING (1.5)	
242	1C		T90-0523-05	ANTENNA ADAPTOR	
242	1C		T90-0534-05	ANTENNA ADAPTOR	
DME1	1D	*	X92-4640-00	MECHANISM ASSY	
<b>SWITCH UNIT (X16-1472-7x)</b>					
245	2C		B11-1358-04	OPTICAL DIFFUSER	
246	2C		B11-1359-04	REFLECTION SHEET	
248	2C		B19-2130-03	LIGHTING BOARD	
D1 -13			B30-1533-05	LED(1608,PG)	E3E5Z3
D1 -13			B30-1533-05	LED(1608,PG)	Z5
D1 -13			B30-1567-05	LED(1608,RED)	E2E4Z2
D1 -13			B30-1567-05	LED(1608,RED)	Z4
D17 , 18			B30-1533-05	LED(1608,PG)	E3E5Z3
D17 , 18			B30-1533-05	LED(1608,PG)	Z5
D17 , 18			B30-1567-05	LED(1608,RED)	E2E4Z2
D17 , 18			B30-1567-05	LED(1608,RED)	Z4
D19			B30-1633-05	LED(WHITE)	
D20			B30-1533-05	LED(1608,PG)	E3E5Z3
D20			B30-1533-05	LED(1608,PG)	Z5
D20			B30-1567-05	LED(1608,RED)	E2E4Z2
D20			B30-1567-05	LED(1608,RED)	Z4
ED1			B38-1083-05	LIQUID CRYSTAL	
C1			CK73GB1H102K	CHIP C 1000PF K	
C2 , 3			CK73GB1E473K	CHIP C 0.047UF K	
C2 , 3			CK73GB1H473K	CHIP C 0.047UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C9			CK73GB1H103K	CHIP C 0.010UF K	
249	2C		E29-1887-04	CONDUCTIVE RUBBER	
250	2C		E29-1888-04	CONDUCTIVE RUBBER	
J1			E59-0828-05	RECTANGULAR PLUG	
-			J19-5130-04	HOLDER (LED)	
R1			RK73GB2A102J	CHIP R 1.0K J 1/10W	

E2 : KDC-3024A E3 : KDC-3024G E4 : KDC-307A E5 : KDC-307G  
Z2 : KDC-3024YA Z3 : KDC-3024YG Z4 : KDC-307YA Z5 : KDC-307YG

△ indicates safety critical components.

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### SWITCH UNIT (X16-1472-7x)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R2 -4			RK73GB2A471J	CHIP R 470 J 1/10W	
R5			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R6			RK73GB2A473J	CHIP R 47K J 1/10W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R8			RK73GB2A563J	CHIP R 56K J 1/10W	
R10			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73FB2B470J	CHIP R 47 J 1/8W	
R14 , 15			RK73FB2B331J	CHIP R 330 J 1/8W	
R16 -20			RK73FB2B511J	CHIP R 510 J 1/8W	
R21 , 22			RK73FB2B221J	CHIP R 220 J 1/8W	
D22			MA3062WA	ZENER DIODE	
D23 , 24			MA8062	ZENER DIODE	
IC1			LC75883E	MOS-IC	
Q1			DTA114EUA	DIGITAL TRANSISTOR	
Q1			UN5111	DIGITAL TRANSISTOR	
<b>ELECTRIC UNIT (X25-9612-7x)</b>					
D102			B30-1567-05	LED(1608,RED)	
C1			C90-5242-05	ELECTRO 3300UF 16WV	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C50			CE04NW1E100M	ELECTRO 10UF 25WV	
C52 -54			CE04NW1C100M	ELECTRO 10UF 16WV	
C55			CE04NW1E100M	ELECTRO 10UF 25WV	
C56			CE04CW1H100M	ELECTRO 10UF 50WV	
C57			C90-2980-05	ELECTRO 220UF 16WV	
C58			C90-2962-05	ELECTRO 100UF 16WV	
C63			CE04NW1C220M	ELECTRO 22UF 16WV	
C101			CE04NW0J101M	ELECTRO 100UF 6.3WV	
C102			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1C104K	CHIP C 0.10UF K	
C104 , 105			CC73GCH1H150J	CHIP C 15PF J	
C106			CK73GB1H102K	CHIP C 1000PF K	
C142			CK73GB1C104K	CHIP C 0.10UF K	
C204 , 205			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	
C223 , 224			CE04NW1C100M	ELECTRO 10UF 16WV	
C251-254			C90-5296-05	NP-ELECT 0.22UF 50WV	
C255			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C256			CE04NW1A330M	ELECTRO 33UF 10WV	
C257			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C258			C90-2935-05	ELECTRO 1.0UF 50WV	
C351			C90-2592-05	ELECTRO 10UF 6.3WV	
C352			CC73GCH1H331J	CHIP C 330PF J	
C353			C90-2592-05	ELECTRO 10UF 6.3WV	
C354			CK73GB1H103K	CHIP C 0.010UF K	
C355 , 356			CC73GCH1H100D	CHIP C 10PF D	
C502			CK73GB1H152K	CHIP C 1500PF K	
C503			CK73GB1C104K	CHIP C 0.10UF K	
C504			CK73GB1H103K	CHIP C 0.010UF K	
C505			C90-2595-05	ELECTRO 4.7UF 16WV	
C506			CK73GB1C104K	CHIP C 0.10UF K	
C507			CE04CW1A330M	ELECTRO 33UF 10WV	
C508			CE04CW1A220M	ELECTRO 22UF 10WV	
C509			CC73GCH1H680J	CHIP C 68PF J	

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
C510			CC73GCH1H101J	CHIP C 100PF J	
C511			CK73GB1H103K	CHIP C 0.010UF K	
C512			C90-2595-05	ELECTRO 4.7UF 16WV	
C513 , 514			CK73GB1H103K	CHIP C 0.010UF K	
C515			CK73FB1C105K	CHIP C 1.0UF K	
C516			CC73GCH1H100D	CHIP C 10PF D	
C521			CK73GB1C104K	CHIP C 0.10UF K	
C522			CC73GCH1H330J	CHIP C 33PF J	
C523			CC73GCH1H270J	CHIP C 27PF J	
C524			CC73GCH1H101J	CHIP C 100PF J	
C525			CK73GB1H103K	CHIP C 0.010UF K	
C526			CC73GCH1H050C	CHIP C 5.0PF C	
C528			CC73GCH1H060D	CHIP C 6.0PF D	
C530			CC73GCH1H040C	CHIP C 4.0PF C	
C531			CK73FB1C105K	CHIP C 1.0UF K	
C533 , 534			CK73GB1H103K	CHIP C 0.010UF K	
C535			CC73GCH1H020C	CHIP C 2.0PF C	
C536			CC73GCH1H040C	CHIP C 4.0PF C	
C537 , 538			CC73GCH1H080D	CHIP C 8.0PF D	
C541			CC73GCH1H040C	CHIP C 4.0PF C	
C542			CC73GCH1H220J	CHIP C 22PF J	
C543			CC73GCH1H680J	CHIP C 68PF J	
C544			CC73GCH1H150J	CHIP C 15PF J	
C545			CK73GB1H682K	CHIP C 6800PF K	
C546			CK73GB1H103K	CHIP C 0.010UF K	
C547			C90-2594-05	ELECTRO 10UF 10WV	
C548			CK73GB1E223K	CHIP C 0.022UF K	
C549			CK73GB1H222K	CHIP C 2200PF K	
C550			CK73GB1E333K	CHIP C 0.033UF K	
C551 , 552			CK73GB1H103K	CHIP C 0.010UF K	
C553 , 554			CK73GB1C104K	CHIP C 0.10UF K	
C555 , 556			CK73GB1H102K	CHIP C 1000PF K	
C560			CC73GCH1H101J	CHIP C 100PF J	
C561			C90-2608-05	ELECTRO 1.0UF 50WV	
C562			C90-2594-05	ELECTRO 10UF 10WV	
C563			C90-2606-05	ELECTRO 0.47UF 50WV	
C564			CK73GB1A474K	CHIP C 0.47UF K	
C565			CE04NW1A470M	ELECTRO 47UF 10WV	
C568			CC73GCH1H221J	CHIP C 220PF J	
C580			CK73GB1H103K	CHIP C 0.010UF K	
C581			CC73GCH1H020C	CHIP C 2.0PF C	
C582 , 583			CK73GB1C104K	CHIP C 0.10UF K	
C584			C90-2594-05	ELECTRO 10UF 10WV	
C585			CK73GB1H103K	CHIP C 0.010UF K	
C586			CK73GB1C104K	CHIP C 0.10UF K	
C587			CK73GB1H821K	CHIP C 820PF K	
C588			CK73GB1A474K	CHIP C 0.47UF K	
C590			CK73GB1C104K	CHIP C 0.10UF K	
C591			CE04CW1A330M	ELECTRO 33UF 10WV	
C592			CK73GB1H103K	CHIP C 0.010UF K	
C593			CK73FB1C105K	CHIP C 1.0UF K	
C600			CE04CW1A101M	ELECTRO 100UF 10WV	
CN1			E40-9550-05	FLAT CABLE CONNECTOR	
J1			E04-0312-05	RF COAXIAL CABLE RECEPTACLE	



# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-9612-7x)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
△ J2			E58-0863-15	RECTANGULAR RECEPTACLE		R107 , 108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
J3			E58-0879-05	RECTANGULAR RECEPTACLE		R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	
J5			E63-0852-05	PIN JACK		R113 , 114			RK73GB2A473J	CHIP R 47K J 1/10W	
CF51			L72-0781-05	CERAMIC FILTER		R115			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CF52 , 53			L72-0716-05	CERAMIC FILTER		R116			RK73GB2A103J	CHIP R 10K J 1/10W	
CF54			L72-0743-05	CERAMIC FILTER		R117			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L1			L33-1170-05	CHOKE COIL ASSY		R118			RK73GB2A103J	CHIP R 10K J 1/10W	
L2			L33-1807-05	CHOKE COIL		R119			RK73GB2A473J	CHIP R 47K J 1/10W	
L4			L33-1123-05	LINE FILTER COIL		R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L101			L40-4795-91	SMALL FIXED INDUCTOR(4.7UH,J)		R122			RK73GB2A101J	CHIP R 100 J 1/10W	
L501			L40-6891-58	SMALL FIXED INDUCTOR		R123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L502			L40-3301-58	SMALL FIXED INDUCTOR(33U)		R125			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L503			L40-1021-56	SMALL FIXED INDUCTOR(1MH)		R126			RK73GB2A104J	CHIP R 100K J 1/10W	
L504			L40-1011-58	SMALL FIXED INDUCTOR		R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L505		*	L31-0967-05	FM-RF COIL		R128			RK73GB2A225J	CHIP R 2.2M J 1/10W	
L506		*	L31-0970-05	FM-RF COIL		R129 , 130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L507		*	L32-0933-05	OSCILATING COIL		R131			RK73GB2A682J	CHIP R 6.8K J 1/10W	
L508		*	L30-0770-05	FM IFT		R132			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L509		*	L30-0771-05	AM IFT		R133			RK73GB2A123J	CHIP R 12K J 1/10W	
L510-517			L40-4795-91	SMALL FIXED INDUCTOR(4.7UH,J)		R134			RK73GB2A222J	CHIP R 2.2K J 1/10W	
X1			L77-1167-05	CRYSTAL RESONATOR(4.19M)		R135			RK73GB2A473J	CHIP R 47K J 1/10W	E2E4Z2
X2			L77-2002-05	CRYSTAL RESONATOR		R135			RK73GB2A473J	CHIP R 47K J 1/10W	Z4
X501			L77-2077-05	CRYSTAL RESONATOR		R136			RK73GB2A473J	CHIP R 47K J 1/10W	E3E5Z3
D	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		R136			RK73GB2A473J	CHIP R 47K J 1/10W	Z5
E	2D		N80-3010-46	PAN HEAD TAPTITE SCREW		R138			RK73GB2A473J	CHIP R 47K J 1/10W	
F	2D		N83-3020-46	PAN HEAD TAPTITE SCREW		R140			RK73GB2A473J	CHIP R 47K J 1/10W	
G	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW		R141			RD14BB2C472J	RD 4.7K J 1/6W	
CP1			R90-1049-05	MULTI-COMP 10K X2		R143			RD14BB2C472J	RD 4.7K J 1/6W	
CP2			R90-1047-05	MULTI-COMP 2.2K X2		R144			RK73GB2A104J	CHIP R 100K J 1/10W	
CP3			R90-1046-05	MULTI-COMP 1K X2		R145			RD14BB2C222J	RD 2.2K J 1/6W	
R10			RK73FB2B303J	CHIP R 30K J 1/8W		R163			RD14BB2C100J	RD 10 J 1/6W	
R11			RK73GB2A103J	CHIP R 10K J 1/10W		R164 , 165			RD14BB2C471J	RD 470 J 1/6W	
R12			RK73GB2A104J	CHIP R 100K J 1/10W		R166			RD14BB2C102J	RD 1.0K J 1/6W	
R20			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		R167			RD14BB2C101J	RD 100 J 1/6W	
R21			RD14BB2C333J	RD 33K J 1/6W		R168 , 169			RD14BB2C102J	RD 1.0K J 1/6W	
R22			RK73GB2A103J	CHIP R 10K J 1/10W		R172			RD14BB2C102J	RD 1.0K J 1/6W	
R23			RK73GB2A104J	CHIP R 100K J 1/10W		R174			RK73GB2A473J	CHIP R 47K J 1/10W	
R25			RD14BB2C472J	RD 4.7K J 1/6W		R201			RK73GB2A473J	CHIP R 47K J 1/10W	
R28			RD14BB2C472J	RD 4.7K J 1/6W		R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RD14BB2C103J	RD 10K J 1/6W		R205			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R31			RK73GB2A473J	CHIP R 47K J 1/10W		R223 , 224			RK73FB2B271J	CHIP R 270 J 1/8W	
R32			RK73GB2A223J	CHIP R 22K J 1/10W		R227 , 228			RD14BB2C303J	RD 30K J 1/6W	
R50			RD14BB2C562J	RD 5.6K J 1/6W		R231 , 232			RD14BB2C101J	RD 100 J 1/6W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W		R255			RK73GB2A333J	CHIP R 33K J 1/10W	
R57			RK73FB2B152J	CHIP R 1.5K J 1/8W		R257			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R58			RK73GB2A471J	CHIP R 470 J 1/10W		R258			RK73GB2A221J	CHIP R 220 J 1/10W	
R68 , 69			RK73GB2A103J	CHIP R 10K J 1/10W		R259			RD14BB2C223J	RD 22K J 1/6W	
R71			RK73GB2A823J	CHIP R 82K J 1/10W		R261			RK73GB2A100J	CHIP R 10 J 1/10W	
R72			RK73GB2A363J	CHIP R 36K J 1/10W		R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R73			RK73GB2A104J	CHIP R 100K J 1/10W		R264			RK73GB2A473J	CHIP R 47K J 1/10W	
R101			RD14BB2C241J	RD 240 J 1/6W		R351 , 352			RD14BB2C222J	RD 2.2K J 1/6W	
R102-104			RK73GB2A102J	CHIP R 1.0K J 1/10W		R353			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R105			RK73GB2A471J	CHIP R 470 J 1/10W		R415			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A104J	CHIP R 100K J 1/10W		R501			RK73GB2A682J	CHIP R 6.8K J 1/10W	
						R502			RK73GB2A222J	CHIP R 2.2K J 1/10W	

E2 : KDC-3024A  
Z2 : KDC-3024YA

E3 : KDC-3024G  
Z3 : KDC-3024YG

E4 : KDC-307A  
Z4 : KDC-307YA

E5 : KDC-307G  
Z5 : KDC-307YG

△ indicates safety critical components.

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-9612-7x)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R503			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R506			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R507			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R521-524			RK73GB2A104J	CHIP R 100K J 1/10W	
R525			RK73GB2A331J	CHIP R 330 J 1/10W	
R526			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R527			RK73GB2A104J	CHIP R 100K J 1/10W	
R528			RD14BB2C104J	RD 100K J 1/6W	
R541			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R542			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R543			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R544			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R545			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R546			RK73GB2A333J	CHIP R 33K J 1/10W	
R547			RK73GB2A220J	CHIP R 22 J 1/10W	
R561			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R563, 564			RK73GB2A103J	CHIP R 10K J 1/10W	
R565			RK73GB2A104J	CHIP R 100K J 1/10W	
R566, 567			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R581			RK73GB2A102J	CHIP R 1.0K J 1/10W	
W156, 157			R92-2053-05	CHIP R 0 J 1/8W	
W158			R92-1252-05	CHIP R 0 OHM J 1/16W	
W161, 162			R92-2053-05	CHIP R 0 J 1/8W	
W165			R92-2053-05	CHIP R 0 J 1/8W	
W405, 406			R92-1252-05	CHIP R 0 OHM J 1/16W	
W409, 410			R92-1252-05	CHIP R 0 OHM J 1/16W	
W415			R92-2053-05	CHIP R 0 J 1/8W	
W500, 501			R92-1252-05	CHIP R 0 OHM J 1/16W	
W504, 505			R92-1252-05	CHIP R 0 OHM J 1/16W	
W506			R92-2053-05	CHIP R 0 J 1/8W	
W507			R92-1252-05	CHIP R 0 OHM J 1/16W	
W508			R92-2053-05	CHIP R 0 J 1/8W	
W509			R92-1252-05	CHIP R 0 OHM J 1/16W	
W510			R92-2053-05	CHIP R 0 J 1/8W	
W511, 512			R92-1252-05	CHIP R 0 OHM J 1/16W	
W516			R92-1252-05	CHIP R 0 OHM J 1/16W	
W517			R92-2053-05	CHIP R 0 J 1/8W	
W519			R92-2053-05	CHIP R 0 J 1/8W	
W521			R92-1252-05	CHIP R 0 OHM J 1/16W	
W523, 524			R92-1252-05	CHIP R 0 OHM J 1/16W	
W530			R92-2053-05	CHIP R 0 J 1/8W	
W531, 532			R92-1252-05	CHIP R 0 OHM J 1/16W	
W533			R92-2053-05	CHIP R 0 J 1/8W	
W534			R92-1252-05	CHIP R 0 OHM J 1/16W	
W578			R92-1252-05	CHIP R 0 OHM J 1/16W	
W601			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1			S2V20*A	DIODE	
D1			1N5393G-M6	DIODE	
D3			IMSA-6801	SURGE ABSORBER	
D10			MA4068(N)-M	ZENER DIODE	
D11			D1F60	DIODE	
D12			AM01Z	DIODE	
D13			D1F60	DIODE	

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
D14			AM01Z	DIODE	
D20			MA4068(N)-M	ZENER DIODE	
D30			MA4047-M	ZENER DIODE	
D40			1SS133	DIODE	
D50			DAN202U	DIODE	
D51			MA4082(N)-L	ZENER DIODE	
D70			MA4068(N)-M	ZENER DIODE	
D101			1SS133	DIODE	
D103			DA204U	DIODE	
D106			MA4062-L	ZENER DIODE	
D107			MA3062WA	ZENER DIODE	
D109			MA4062-L	ZENER DIODE	
D110			HZS12A2	ZENER DIODE	
D201, 202			MA4068(N)-M	ZENER DIODE	
D251-253			1SS133	DIODE	
D261-263			AM01Z	DIODE	
D264			D1F60	DIODE	
D264			S1J	DIODE	
D265, 266			AM01Z	DIODE	
D267, 268			D1F60	DIODE	
D267, 268			S1J	DIODE	
D501			RN739F	DIODE	
D503			RN739F	DIODE	
D504-506		*	KV1720S	VARIABLE CAPACITANCE DIODE	
IC1		*	UPD780058GC502	MI-COM IC	
IC4			TDA7560	ANALOGUE IC	
IC6		*	TDA7479AD	ANALOGUE IC	
IC7			BA4911-V4	ANALOGUE IC	
IC8			HD74HC27FP	MOS-IC	
IC10		*	TDA7513	ANALOGUE IC	
IC11		*	PST3435UL	MOS-IC	
IC12			BR24C01AF-W	MEMORY IC	
IC12			M24C01-WMN6T	MEMORY IC	
IC12		*	S-24CS02AFJ-TB	MEMORY IC	
Q10			2SC4081	TRANSISTOR	
Q20			2SC4081	TRANSISTOR	
Q40			DTA124EUA	DIGITAL TRANSISTOR	
Q50			2SA1036K	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q55			2SD2375	TRANSISTOR	
Q70			2SC4081	TRANSISTOR	
Q101			2SC4081	TRANSISTOR	
Q102			DTA114YUA	DIGITAL TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q223, 224			DTC143TUA	DIGITAL TRANSISTOR	
Q252		*	UMG4N	TRANSISTOR	
Q253		*	UMA1N	TRANSISTOR	
Q501		*	CPH5905	TRANSISTOR	
Q502			3SK126	FET	
Q503			2SC4081	TRANSISTOR	
TH1			PTH9C42BE471Q	POSITIVE RESISTOR	
<b>CD PLAYER UNIT (X32-5380-00)</b>					
C1			C92-0566-05	CHIP-TAN 10UF 6.3WV	
C2			CK73FB1A225K	CHIP C 2.2UF K	

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### CD PLAYER UNIT (X32-5380-00)

Ref. No.	Added	New	Parts No.	Description	Destination
C3			CK73GB0J105K	CHIP C 1.0UF K	
C5			CC73GCH1H020C	CHIP C 2.0PF C	
C6			CC73GCH1H390J	CHIP C 39PF J	
C7			CK73GB1C104K	CHIP C 0.10UF K	
C8			CK73GB0J105K	CHIP C 1.0UF K	
C9			CK73GB1H472K	CHIP C 4700PF K	
C10			CK73GB1C333K	CHIP C 0.033UF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CC73GCH1H271J	CHIP C 270PF J	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1H222K	CHIP C 2200PF K	
C16			CC73GCH1H331J	CHIP C 330PF J	
C17 , 18			CK73GB1C104K	CHIP C 0.10UF K	
C31 -34			CK73GB1C104K	CHIP C 0.10UF K	
C36			CK73FB1A225K	CHIP C 2.2UF K	
C37 -39			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H153K	CHIP C 0.015UF K	
C41			CK73GB1H102K	CHIP C 1000PF K	
C42			CK73GB1E473K	CHIP C 0.047UF K	
C43			CK73GB1H222K	CHIP C 2200PF K	
C44			CK73GB1H102K	CHIP C 1000PF K	
C45 -47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CK73GB1H682K	CHIP C 6800PF K	
C49			CK73GB1H152K	CHIP C 1500PF K	
C50			CK73GB1H682K	CHIP C 6800PF K	
C51			CK73GB1H152K	CHIP C 1500PF K	
C52			CK73GB1C104K	CHIP C 0.10UF K	
C61			CK73FB1A225K	CHIP C 2.2UF K	
C69 -72			CK73GB1H222K	CHIP C 2200PF K	
C75 , 76			CK73GB1H682K	CHIP C 6800PF K	
C100-102			CK73GB1H102K	CHIP C 1000PF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN1			E41-0193-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
CN2			E41-0129-05	FLAT CABLE CONNECTOR	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			R90-1019-05	MULTI-COMP 100 X2	
CP2			R90-1014-05	MULTI-COMP 100 X4	
CP3 , 4			R90-0974-05	MULT R 1.8KX4	
CP5			R90-0720-05	MULTI-COMP 100K X4	
R1			RK73GB2A910J	CHIP R 91 J 1/10W	
R2 , 3			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R4			RK73FB2B100J	CHIP R 10 J 1/8W	
R5 , 6			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R7			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R8			RK73GB2A273J	CHIP R 27K J 1/10W	
R9			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A333J	CHIP R 33K J 1/10W	
R12			RK73GB2A244J	CHIP R 240K J 1/10W	
R13			RK73GB2A914J	CHIP R 910K J 1/10W	
R14			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	Added	New	Parts No.	Description	Destination
R15			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R31			RK73GB2A273J	CHIP R 27K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A183J	CHIP R 18K J 1/10W	
R34			RK73GB2A103J	CHIP R 10K J 1/10W	
R35			RK73GB2A393J	CHIP R 39K J 1/10W	
R36			RK73GB2A103J	CHIP R 10K J 1/10W	
R37			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R39			RK73GB2A104J	CHIP R 100K J 1/10W	
R40			RK73GB2A821J	CHIP R 820 J 1/10W	
R41			RK73GB2A473J	CHIP R 47K J 1/10W	
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R44 , 45			RK73GB2A103J	CHIP R 10K J 1/10W	
R46			RK73GB2A273J	CHIP R 27K J 1/10W	
R47			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R48			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52 , 53			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R71			RK73GB2A133J	CHIP R 13K J 1/10W	
R72			RK73FB2B201J	CHIP R 200 J 1/8W	
R81 , 82			RK73FB2B331J	CHIP R 330 J 1/8W	
R85 , 86			RK73FB2B331J	CHIP R 330 J 1/8W	
R87 , 88			RK73FB2B101J	CHIP R 100 J 1/8W	
R93			RK73GB2A104J	CHIP R 100K J 1/10W	
R100			RK73GB2A100J	CHIP R 10 J 1/10W	
S1 , 2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D1			MA142WK	DIODE	
D2			MA8051-L	ZENER DIODE	
D3			DA204U	DIODE	
IC1			AN22002AA	ANALOGUE IC	
IC2		*	MN6627771KP	MOS-IC	
IC3			BA5824FP	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			2SA1362(Y)	TRANSISTOR	
Q3			DTC124EUA	DIGITAL TRANSISTOR	
Q3			UN5212	DIGITAL TRANSISTOR	
Q4			DTA143XUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
<b>CD MECHANISM ASSY (X92-4640-00)</b>					
2		1B	A10-4827-12	CHASSIS	
5		1B	D10-4576-33	ARM ASSY	
8		2A	D10-4579-03	LEVER ASSY	
10		3A	D10-4581-13	ARM	
11		2A	D10-4582-13	ARM	
12		3A	D10-4583-03	ARM	
13		3A	D10-4584-03	ARM	

E2 : KDC-3024A  
Z2 : KDC-3024YA

E3 : KDC-3024G  
Z3 : KDC-3024YG

E4 : KDC-307A  
Z4 : KDC-307YA

E5 : KDC-307G  
Z5 : KDC-307YG

△ indicates safety critical components.




# KDC-3024A/G/YA/YG,307A/G/YA/YG

## PARTS LIST

### CAPACITORS


CC 45 TH 1H 220 J  
 1 2 3 4 5 6

- 1 = Type ... ceramic, electrolytic, etc.
- 2 = Shape ... round, square, etc.
- 3 = Temp. coefficient
- 4 = Voltage rating
- 5 = Value
- 6 = Tolerance

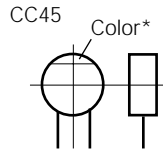

#### • Capacitor value

- 010 = 1pF
- 100 = 10pF
- 101 = 100pF
- 102 = 1000pF = 0.001μF
- 103 = 0.01μF

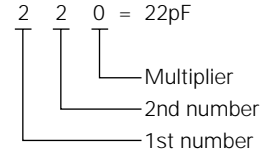

#### • Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example : CC45TH = -470±60ppm/°C

#### • Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10μF : -10~+50 Less than 4.7μF : -10~+75

#### (Less than 10pF)

Code	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

#### • Voltage rating

2nd word \ 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	2150	4000	5000	6300	8000	-

### CHIP CAPACITORS


(EX) CC 73 F SL 1H 000 J  
 1 2 3 4 5 6 7  
 (Chip) (CH, RH, UJ, SL)

(EX) CK 73 F F 1H 000 Z  
 1 2 3 4 5 6 7  
 (Chip) (B, F)

Refer to the table above.

- 1 = Type
- 2 = Shape
- 3 = Dimension
- 4 = Temp. coefficient
- 5 = Voltage rating
- 6 = Value
- 7 = Tolerance

#### • Dimension

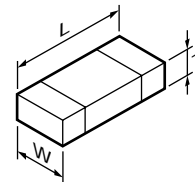

#### Chip capacitor

Code	L	W	T
Empty	5.6±0.5	5.0±0.5	Less than 2.0
A	4.5±0.5	3.2±0.4	Less than 2.0
B	4.5±0.5	2.0±0.3	Less than 2.0
C	4.5±0.5	1.25±0.2	Less than 1.25
D	3.2±0.4	2.5±0.3	Less than 1.5
E	3.2±0.2	1.6±0.2	Less than 1.25
F	2.0±0.3	1.25±0.2	Less than 1.25
G	1.6±0.2	0.8±0.2	Less than 1.0
H	1.0±0.05	0.5±0.05	0.5±0.05

#### Chip resistor

Code	L	W	T
E	3.2±0.2	1.6±0.2	1.0
F	2.0±0.3	1.25±0.2	1.0
G	1.6±0.2	0.8±0.2	0.5±0.1
H	1.0±0.05	0.5±0.05	0.35±0.05

### RESISTORS

#### • Chip resistor (Carbon)

(EX) RD 73 E B 2B 000 J  
 1 2 3 4 5 6 7  
 (Chip) (B, F)

#### • Carbon resistor (Normal type)

(EX) RD 14 B B 2C 000 J  
 1 2 3 4 5 6 7  
 (Chip) (B, F)

- 1 = Type ... ceramic, electrolytic, etc.
- 2 = Shape ... round, square, etc.
- 3 = Dimension
- 4 = Temp. coefficient
- 5 = Voltage rating
- 6 = Value
- 7 = Tolerance

#### • Rating wattage

Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

# KDC-3024A/G/YA/YG,307A/G/YA/YG

## SPECIFICATIONS

### FM section

Frequency Range ..... 87.5MHz~108.0MHz  
Frequency step ..... 50kHz  
Usable Sensitivity (S/N 26dB)  
87.5MHz-108.0MHz ..... 0.7 $\mu$ V/75 $\Omega$   
Quieting Sensitivity (S/N 46dB)  
87.5MHz-108.0MHz ..... 1.6 $\mu$ V/75 $\Omega$   
Frequency Response ( $\pm$ 3.0dB) ..... 30Hz~15kHz  
S/N (dB) ..... 65dB (MONO)  
Selectivity (DIN)(dB) .....  $\geq$ 80dB ( $\pm$ 400kHz)  
Stereo Separation  
87.5MHz-108.0MHz ..... 35dB (1kHz)

### MW section

Frequency Range (kHz) ..... 531kHz~1611kHz  
(Frequency step) ..... (9kHz)  
Usable Sensitivity (S/N 20dB) ..... 25 $\mu$ V

### LW section

Frequency Range (kHz) ..... 153kHz~281kHz  
Usable Sensitivity (S/N 20dB) ..... 45 $\mu$ V

### CD section

Laser Diode ..... GaAlAs ( $\lambda$ =780nm)  
Digital Filter (D/A) ..... 8 times Over Sampling  
D/A Converter ..... 1bit  
Spindle Speed ..... 500-200 (CLV)  
Wow & Flutter ..... Below Mesurable Limit  
Frequency Respons ..... 10-20kHz  
THD ..... 0.01% (1kHz)  
S/N Ratio (dB) ..... 96dB (1kHz)  
Dynamic Range ..... 93dB  
Channel Separation ..... 85dB

Preout Level (mV) / Load ..... 2000mV/10k $\Omega$  (CD)  
Preout Impedance ( $\Omega$ ) .....  $\leq$ 600 $\Omega$

### AMP section

PWR (MAX) ..... 50W  $\times$  4  
PWR DIN45324,+B = 14.4V ..... 30W  $\times$  4

### TONE section

Bass ..... 100Hz $\pm$ 10dB  
Middle ..... 1kHz $\pm$ 10dB  
Treble ..... 10kHz $\pm$ 10dB

### GENERAL

Operating Voltage (11~16v allowable) ..... 14.4V  
Current Consumption ..... 10A  
Installation Size  
(W) ..... 182 (mm) 7-3/16 (in)  
(H) ..... 53 (mm) 2-1/16 (in)  
(D) ..... 157(mm) 6-3/16 (in)  
Weight ..... 3.1lbs (1.4kg)

---

**KENWOOD** follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

---

## KENWOOD CORPORATION

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo 192-8525, Japan

**KENWOOD USA CORPORATION**  
P.O. BOX 22745, 2201 East Dominguez Street, Long Beach, CA90801-5745, U.S.A.

**KENWOOD ELECTRONICS CANADA INC.**  
6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

**KENWOOD ELECTRONICS LATIN AMERICA S.A.**  
P.O. Box 55-2791 Paitilla, Plaza Credicorp Bank Panama,  
Piso 9, Oficina 901, Calle 50, Panama, Rep. de Panama

**KENWOOD ELECTRONICS BRASIL LTDA.**  
Alameda Ministro Rocha Azevedo No. 456,  
Edificio Jaú, 10o Andar, Cerqueira César, Cep 0140-001,  
São Paulo-SP-Brasil

**KENWOOD ELECTRONICS UK LIMITED**  
Kenwood House, Dwight Road, Watford, Herts, WD18 9EB, United Kingdom

**KENWOOD ELECTRONICS DEUTSCHLAND GMBH**  
Rembrücker-Str. 15, 63150 Heusenstamm, Germany

**KENWOOD ELECTRONICS FRANCE S.A.**  
13, Boulevard Ney, 75018 Paris, France

**KENWOOD ELECTRONICS BELGIUM N.V.**  
Leuvensesteenweg 248 J, 1800 Vilvoorde, Belgium

**KENWOOD ELECTRONICS ITALIA S.p.A.**  
Via G. Sirtori 7/9, 20129 Milano, Italy

**KENWOOD IBÉRICA S.A.**  
Bolivia, 239-08020 Barcelona, Spain

**KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001 499 074)**  
16 Giffnock Avenue, Centrecourt Estate, North Ryde,  
N.S.W. 2113, Australia

**KENWOOD ELECTRONICS (HONG KONG) LTD.**  
Unit 3712-3724, Level 37, Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong, N.T.,  
Hong Kong

**KENWOOD ELECTRONICS GULF FZE**  
P.O. Box 61318, Jebel Ali, Dubai, U.A.E.

**KENWOOD ELECTRONICS (THAILAND) CO., LTD.**  
2019 New Pechburi Road, Bangkapi, Huaykwang, Bangkok, 10320 Thailand

**KENWOOD ELECTRONICS SINGAPORE PTE. LTD.**  
1 Genting Lane, #07-00, Kenwood Building, Singapore, 349544

**KENWOOD ELECTRONICS (MALAYSIA) SDN BHD**  
#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1, 46300 Petaling Jaya, Selangor Darul Ehsan,  
Malaysia