


SERVICE MANUAL

AM/FM STEREO RECEIVER

SANSUI G-3500/301 G-4500/401

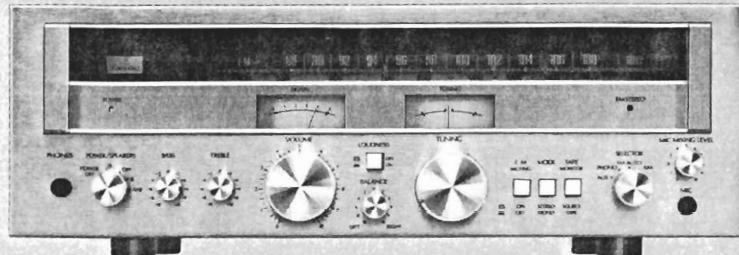

Sansui

SANSUI ELECTRIC CO., LTD.

SPECIFICATIONS

G-3500/301

Audio section

Power output

Min. RMS, both channels driven, from 20 to 20,000 Hz, with no more than 0.1% total harmonic distortion.

26 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion

. less than 0.1% at or below rated min.

RMS power output

Intermodulation distortion (70 Hz : 7 kHz = 4:1 SMPTE method)

. less than 0.1%

Frequency response (at 1 watt)

. 10 to 50,000 Hz +1 dB -2 dB

RIAA curve deviation (PHONO)

. +0.5 dB -0.5 dB (30 to 15,000 Hz)

Damping factor approximately 30 at 8-ohm load

Input sensitivity and impedance (1 kHz, for rated power output)

PHONO 2.5 mV/47 kilohms

(Max. input capability: 200 mV at 1 kHz, less than 0.5% total harmonic distortion)

AUX, TAPE 150 mV/47 kilohms

MIC 8 mV/10 kilohms

Output level (1 kHz)

TAPE REC (pin jack) 150 mV/47 kilohms

Channel separation (1 kHz, at rated power output)

PHONO better than 50 dB

AUX better than 50 dB

Hum and noise (short-circuit, A network)

PHONO 75 dB

AUX 95 dB

Controls

BASS ±10 dB (50 Hz)

TREBLE ±10 dB (10 kHz)

LOUDNESS (-30 dB) 7 dB at 50 Hz

5 dB at 10 kHz

FM section

Tuning range 88 to 108 MHz

Usable sensitivity

Mono IHF 11.0 dBf (1.95 μV)

DIN 1.2 μV

Stereo IHF 19.0 dBf

50 dB Quieting sensitivity

Mono 15 dBf

Stereo 38 dBf

Signal to noise ratio (at 65 dBf)

Mono 71 dB

Stereo 68 dB

Distortion (at 65 dBf)

Mono less than 0.18% at 100 Hz

less than 0.15% at 1,000 Hz

less than 0.25% at 6,000 Hz

Stereo less than 0.3% at 100 Hz

less than 0.25% at 1,000 Hz

less than 0.3% at 6,000 Hz

Alternate channel selectivity (at 400 kHz)

50 dB

Capture ratio 1.3 dB

Image response ratio 48 dB (at 98 MHz)

Spurious response ratio 70 dB (at 98 MHz)

Stereo separation 30 dB at 100 Hz

40 dB at 1,000 Hz

28 dB at 10,000 Hz

Frequency response 30 to 15,000 Hz +0.5 dB -1.0 dB

Antenna input impedance

. 300 ohms balanced

75 ohms unbalanced

AM section

Tuning range 530 to 1,600 kHz

Usable sensitivity (Bar antenna)

. 50 dB/m (300 μV/m)

Selectivity 35 dB

Signal to noise ratio 46 dB

Power requirements

Power voltage 100, 120, 220, 240 V (50/60 Hz)

120 V (Usable 110 ~ 130 V)

60 Hz (for U.S.A. and Canada only)

Power consumption

Rated consumption 90 watts 110 VA

Dimensions 433 mm (17-1/16") W

153 mm (6-1/16") H

354 mm (14") D

Weight 7.5 kg (16.5 lbs) net

8.9 kg (19.6 lbs) packed

* Design and specifications subject to change without notice for improvements.

to be continued

SPECIFICATIONS

G-4500/401

Audio section
Power output
Min. RMS, both channels driven, from 20 to 20,000 Hz, with no more than 0.1% total harmonic distortion.
40 watts per channel into 8 ohms
Load impedance 8 ohms
Total harmonic distortion less than 0.1% at or below rated min. RMS power output
Intermodulation distortion (70 Hz : 7 kHz = 4:1 SMPTE method) less than 0.1%
Frequency response (at 1 watt) 10 to 50,000 Hz +1 dB -2 dB
RIAA curve deviation (PHONO) +0.5 dB -0.5 dB (30 to 15,000 Hz)
Damping factor approximately 30 at 8-ohm load
Input sensitivity and impedance (1 kHz, for rated power output)
PHONO 2.5 mV/47 kilohms
(Max. input capability; 200 mV at 1 kHz, less than 0.5% total harmonic distortion)
AUX, TAPE 150 mV/47 kilohms
MIC 8 mV/10 kilohms
Output level (1 kHz)
TAPE REC (pin jack) 150 mV/47 kilohms
Channel separation (1 kHz, at rated power output)
PHONO better than 50 dB
AUX better than 50 dB

Hum and noise (short-circuit, A network)
PHONO 75 dB
AUX 95 dB
Controls
BASS ±10 dB (50 Hz)
TREBLE ±10 dB (10 kHz)
LOUDNESS (-30 dB) 7 dB at 50 Hz
5 dB at 10 kHz

FM section
Tuning range 88 to 108 MHz
Usable sensitivity
Mono IHF 11.0 dBf (1.95 μV)
DIN 1.2 μV
Stereo IHF 19.0 dBf
50 dB Quieting sensitivity
Mono 15 dBf
Stereo 38 dBf
Signal to noise ratio (at 65 dBf)
Mono 71 dB
Stereo 68 dB
Distortion (at 65 dBf)
Mono less than 0.18% at 100 Hz
less than 0.15% at 1,000 Hz
less than 0.25% at 6,000 Hz
Stereo less than 0.3% at 100 Hz
less than 0.25% at 1,000 Hz
less than 0.3% at 6,000 Hz

Alternate channel selectivity (at 400 kHz)
 50 dB

Capture ratio 1.3 dB
Image response ratio 48 dB (at 98 MHz)
Spurious response ratio 70 dB (at 98 MHz)
Stereo separation 30 dB at 100 Hz
40 dB at 1,000 Hz
28 dB at 10,000 Hz
Frequency response 30 to 15,000 Hz +0.5 dB -1.0 dB
Antenna input impedance 300 ohms balanced
75 ohms unbalanced

AM section
Tuning range 530 to 1,600 kHz
Usable sensitivity (Bar antenna)
 50 dB/m (300 V/m)
Selectivity (+10 kHz) 35 dB
Signal to noise ratio 46 dB
Power requirements
Power voltage 100, 120, 220, 240 V (50/60 Hz)
120 V (Usable 110 ~ 130 V)
60 Hz (for U.S.A. and Canada only)
Power consumption
Rated consumption 115 watts 145 VA
Dimensions 433 mm (17-1/16") W
153 mm (6-1/16") H
354 mm (14") D
Weight 8.1 kg (17.9 lbs) net
9.5 kg (20.9 lbs) packed

* Design and specifications subject to change without notice for improvements.

1. OPERATIONS

Pop-noise preventive circuit

In order to prevent the annoying pop-noise to the loudspeakers at turning the power of the amplifier ON, the pop-noise preventive circuit adopted in the G-4500/401 is the combination of the conventional driver-voltage delay type used in the power supply (rectifier) circuit and the NF delay type pop-noise preventive circuits. The configuration of NF delay type pop-noise preventive circuit is shown in Fig. 1.

In this circuit, the switching (ON-OFF) of the transistor TR05 is made by the time constant of the capacitor C40 and resistor R88. Thereby the NF resistor, R51 is controlled, and the gain of the main amplifier stage is lowered when TR05 is ON, thus the voltage drift (transient voltage) of the main amplifier at turning the power ON does not appear on the speaker terminals for very short period of time. In other words, at the instant that the power is turned ON, the voltage at the point A rises up to +13V, then the voltage decreases by means of the time constant of C40 and R88 as shown in Fig. 2. At this time, the diode D11 is inversely biased, consequently, the potential voltage of the point B is 0V as Fig. 3. Because of this, TR05 turns to the cut-off, thus the NF resistor, R51 acquires such a state as its resistance value becomes equivalently very large, which decreases the gain of the power amplifier. When the charge of the C40 is completed, the voltage of the point B (see Fig. 3) becomes negative, as a result, the diode D11 is biased. Therefore, TR05 is turned ON, and the circuit of this equipment is normally operated approximately 2 seconds after the power is turned ON to prevent the pop-noise which flows to loudspeakers.

Fig. 1

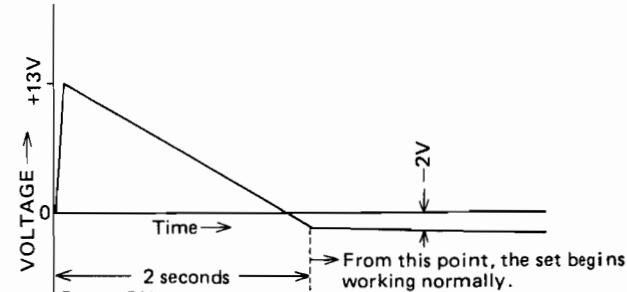
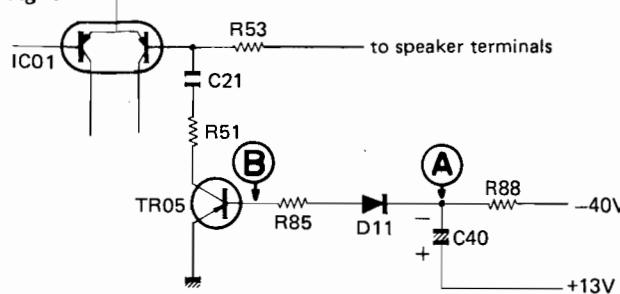


Fig. 2 Voltage variation during a certain period of time at ①


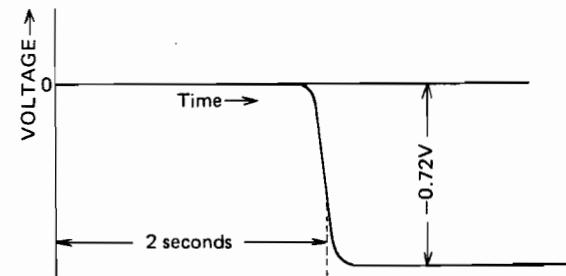


Fig. 3 Voltage variation at ②

2. BLOCK DIAGRAM

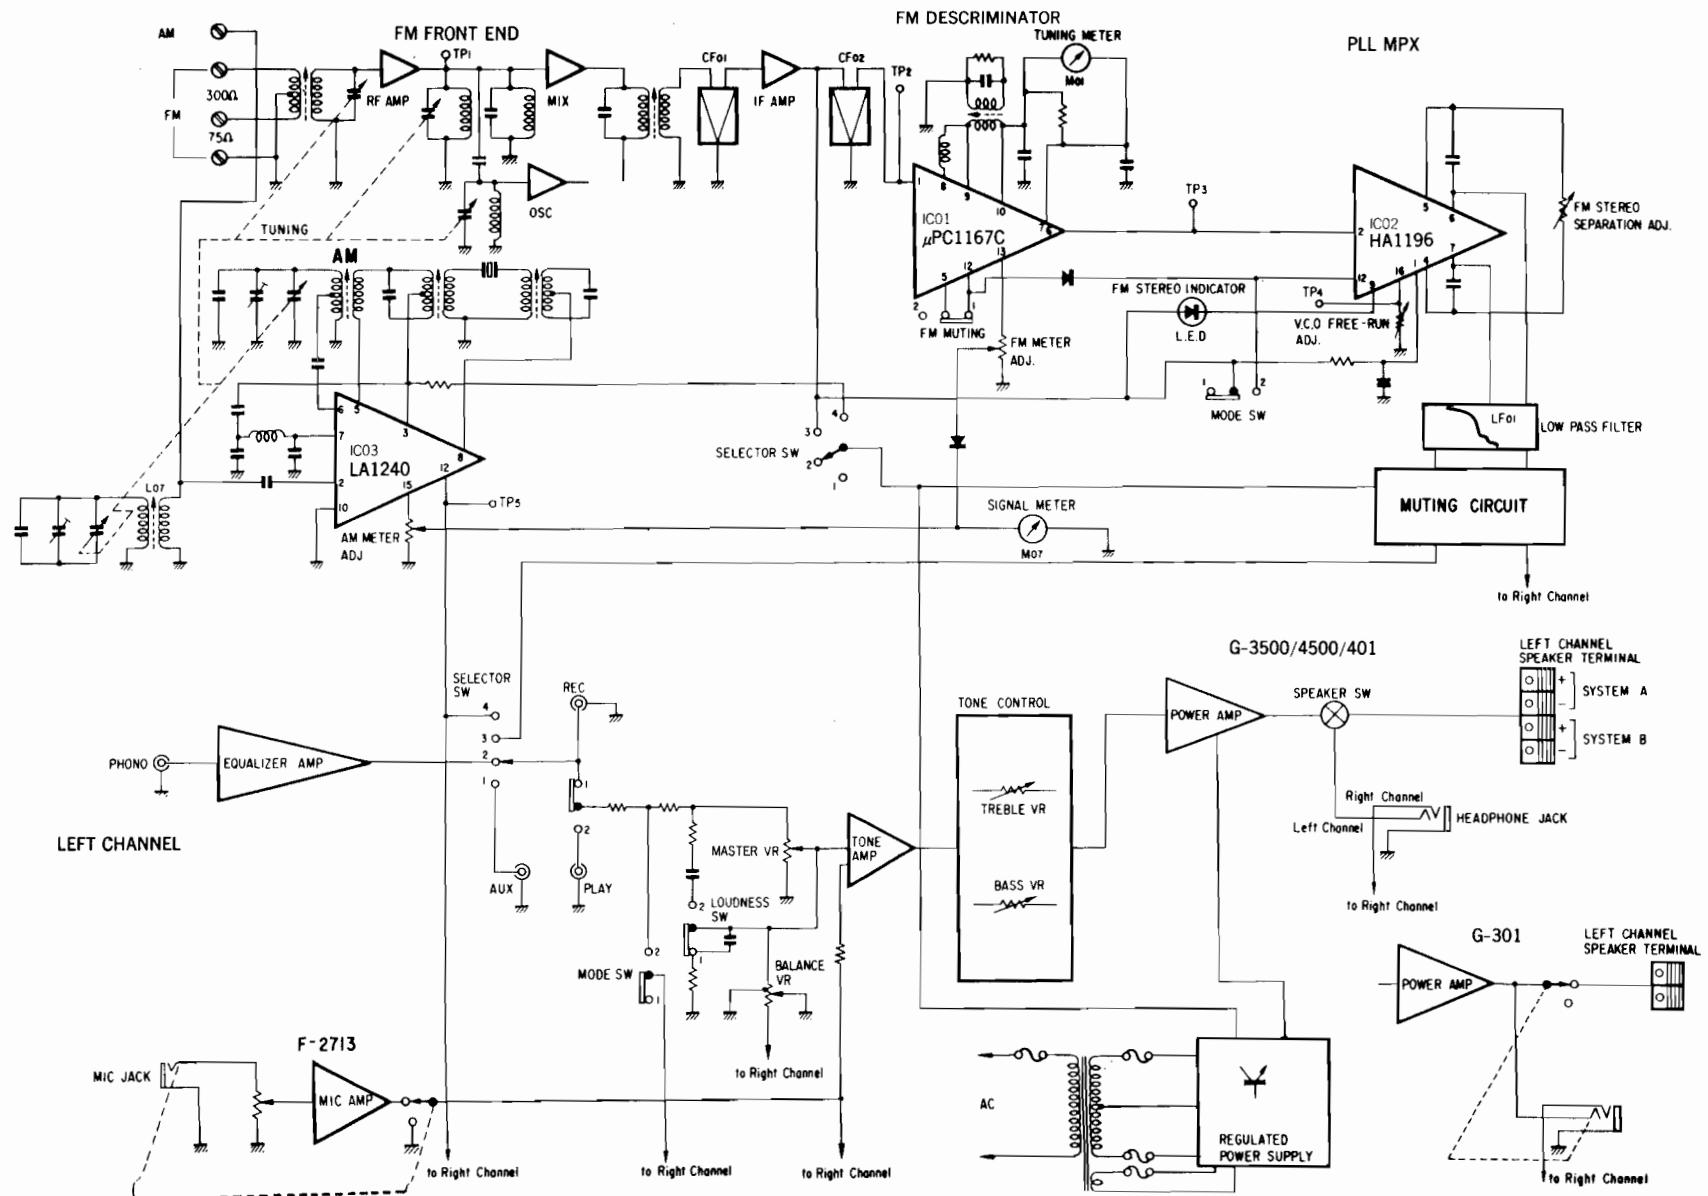




3. ADJUSTMENTS

* Refer to illustration of F-2924 circuit board on next page.

3-1. FM Adjustment

Note: 1. Selector FM AUTO
2. FM Muting Switch OFF

3. Connection ... Connect the output of genescope to TP through 100 pF ceramic capacitor.

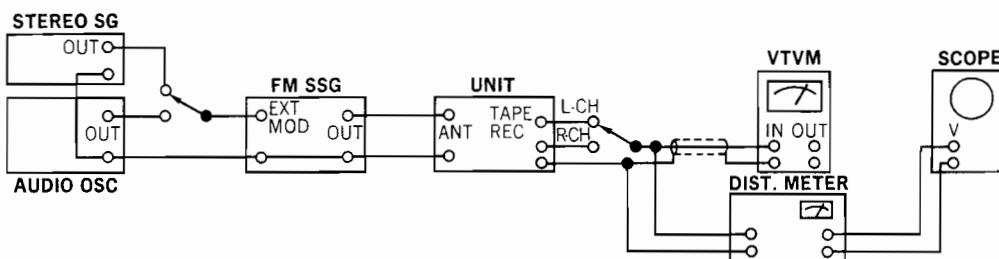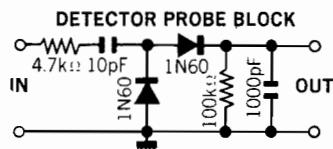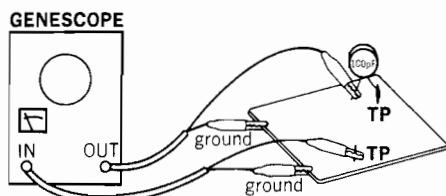


1) FM IF Adjustment & Dial Calibration

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
		FROM	TO				
1.	IF Coil	Output 80 dB Genescope	TP01 F-2924	TP02 F-2924 Use Detector Probe	T01 F-2924	Max. IF waveform	
2.	Discriminator Coil	Same as above	Same as above	TP03 F-2924	T02, T03 F-2924	Steep linearity of S curve Make symmetrical S curve	
	Discriminator Coil In case of using Dist Meter	98 MHz ANT Input 65 dBf (59.8 dB) 1000 Hz (100% MOD) FM SSG	ANT terminal 300Ω	REC terminal Dist Meter	T02, T03 F-2924	Min. T.H.D.	
3.	Tuning Meter	98 MHz ANT Input 65 dBf (59.8 dB) 1000 Hz (100% MOD) FM SSG	Same as above	Tuning Meter	T02 F-2924	Center on Meter	
4.	90 MHz Dial Calibration	90 MHz ANT Input 65 dBf (59.8 dB) 1000 Hz (100% MOD) FM SSG	Same as above	REC terminal VTVM & Scope	L03 F-2924	Max. indication on Signal meter & Center indication on Tuning meter	
	106 MHz Dial Calibration	106 MHz ANT Input 65 dBf (59.8 dB) 1000 Hz (100% MOD) FM SSG	Same as above	Same as above	TC03 F-2924		
5.	90 MHz RF Adj.	90 MHz ANT Input Minimum value with sine wave 1000 Hz (100% MOD) FM SSG	Same as above	Same as above	L01, L02 F-2924	Same as above	
	106 MHz RF Adj.	106 MHz ANT Input Minimum value with sine wave 1000 Hz (100% MOD) FM SSG	Same as above	Same as above	TC01, TC02 F-2924	Same as above	
6.	Signal Meter Volume	98 MHz ANT Input 65 dBf (59.8 dB) 1000 Hz (100% MOD) FM SSG	Same as above	Signal Meter	VR03 F-2924	4.3 on Meter	

2) FM STEREO Adjustment

Note: 1. Mode STEREO

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
		FROM	TO				
1.	PLL VCO Adj.	98 MHz ANT Input 65 dBf (59.8 dB) FM SSG Pilot 19 kHz (9% MOD) SUB 1 kHz + Pilot (100% MOD) STEREO SG	ANT terminal 300Ω	Stereo indicator	VR01 F-2924	Light indicator	Adjust the VR01 within center of lighting level.
	PLL VCO Adj. In case of using Freq. counter	98 MHz ANT Input 65 dBf (59.8 dB) FM SSG No mode	Same as above	TP04 F-2924 Use Freq. counter	VR01 F-2924	76 kHz ±150 Hz	
2.	Separation	98 MHz ANT Input 65 dBf (59.8 dB) FM SSG Pilot 19 kHz (9% MOD) R (or L) Mode 1 kHz + Pilot (100% MOD) STEREO SG	Same as above	REC terminal R-CH → L-CH VTVM & Scope	VR02 F-2924	Set -34 dB	Confirm separation L-CH → R-CH (-34 dB)

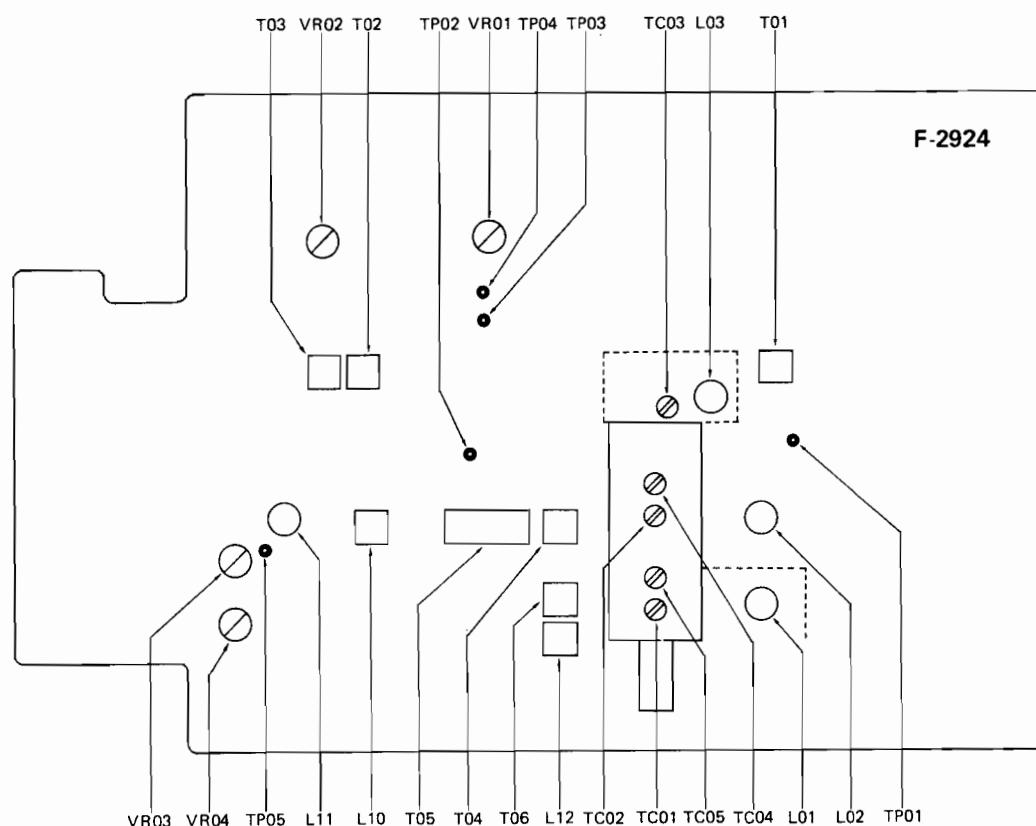


* NEW MEASUREMENT FOR FM

Input signal level under the provision of IHFM-T-200, a new measurement method is indicated by available power ratio "dBf". To obtain approximate available power ratio "dBf", abstract 0.8 from attenuator indication of general FMSG (open load indication type); however, the conventional measurement, IHFM-T-100 is designated together too.

The way of modulation on IHFM-T-200 is shown below.


	modulation frequency	modulation mode	modulation factor
FM MONO	1000 Hz		100%
FM STEREO	1000 Hz	SUB	Pilot 9% Pilot + SUB 100%

* The relation between the standard input 65 dBf of IHFM-T-200 and the former indication "dB" is shown below.

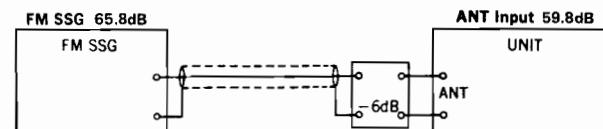

3-2. AM IF Adjustment & Dial Calibration

Note: 1. Selector AM

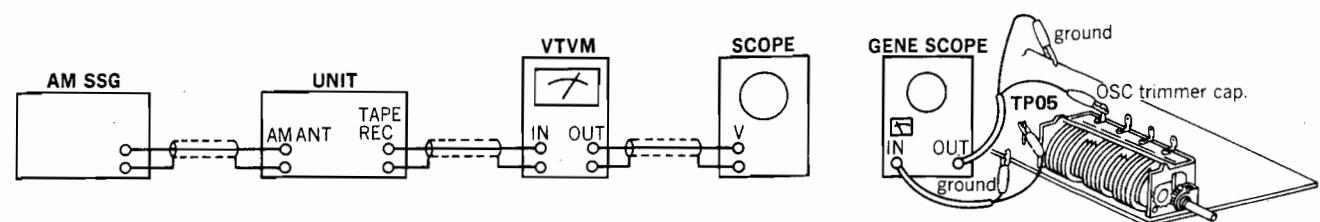


STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
		FROM	TO				
1.	IF Coil	Genescope Output level 70 dB		TC04 F-2924	TP05 F-2924	T05 L10 F-2924	Max. IF waveform
2.	600 kHz Dial Calibration	600 kHz ANT Input 60 dB 400 Hz (MOD 30%) AM SSG	AM ANT terminal	REC terminal L or R-CH	VTVM & Scope	T04 F-2924	Max. indication on signal meter
	1400 kHz Dial Calibration	1400 kHz ANT Input 60 dB 400 Hz (MOD 30%) AM SSG	Same as above	Same as above	TC04 F-2924	Same as above	
3.	600 kHz RF Adj.	600 kHz ANT Input 50 dB 400 Hz (MOD 30%) AM SSG	Same as above	Same as above	Bar Antenna L07	Same as above	
	1400 Hz RF Adj.	1400 kHz ANT Input 50 dB 400 Hz (MOD 30%) AM SSG	Same as above	Same as above	TC05 F-2924	Same as above	
4.	Signal Meter volume	1000 kHz ANT Input 80 dB 400 Hz (MOD 30%) AM SSG	Same as above	Signal Meter	VR04 F-2924	4.5 on meter	

3-3. Bias Current Adjustment (See the Picture of Top View on page 8)

1. Confirm AC power supply voltage (100 V, 120 V, 220 V or 240 V).
2. Master Volume Minimum
3. Room Temperature 18°C ~ 28°C (65°F ~ 83°F)
4. Before this adjustment, turn bias adjustment volumes of VR04 and VR05 fully counterclockwise, then run this unit for more than three minutes.

Note: For this adjustment, measure the voltage between the lead + (plus) side of R77 (R78) and the lead - (minus) side of R79 (R80) on both channels.

(Measure output voltage on both channel)

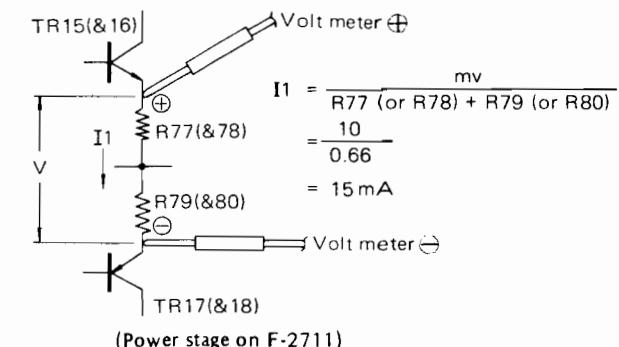

(Power stage on F-2711)


STEP	SUBJECT	EQUIPMENT	MEASURE OUTPUT	ADJUST	ADJUST FOR
1	Bias Current L-CH	DC Volt meter	* See above	VR04 F-2711	10 mV ± 1 mV (15 mA)
2	Bias Current R-CH	DC Volt meter	* See above	VR05 F-2711	10 mV ± 1 mV (15 mA)

4. PARTS LOCATION & PARTS LIST

Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors which was appended previously to each Sansui Manual.

4-1. F-2924 AM/FM Tuner & FM MPX Circuit Board (Stock No. 7521861)

Conductor Side

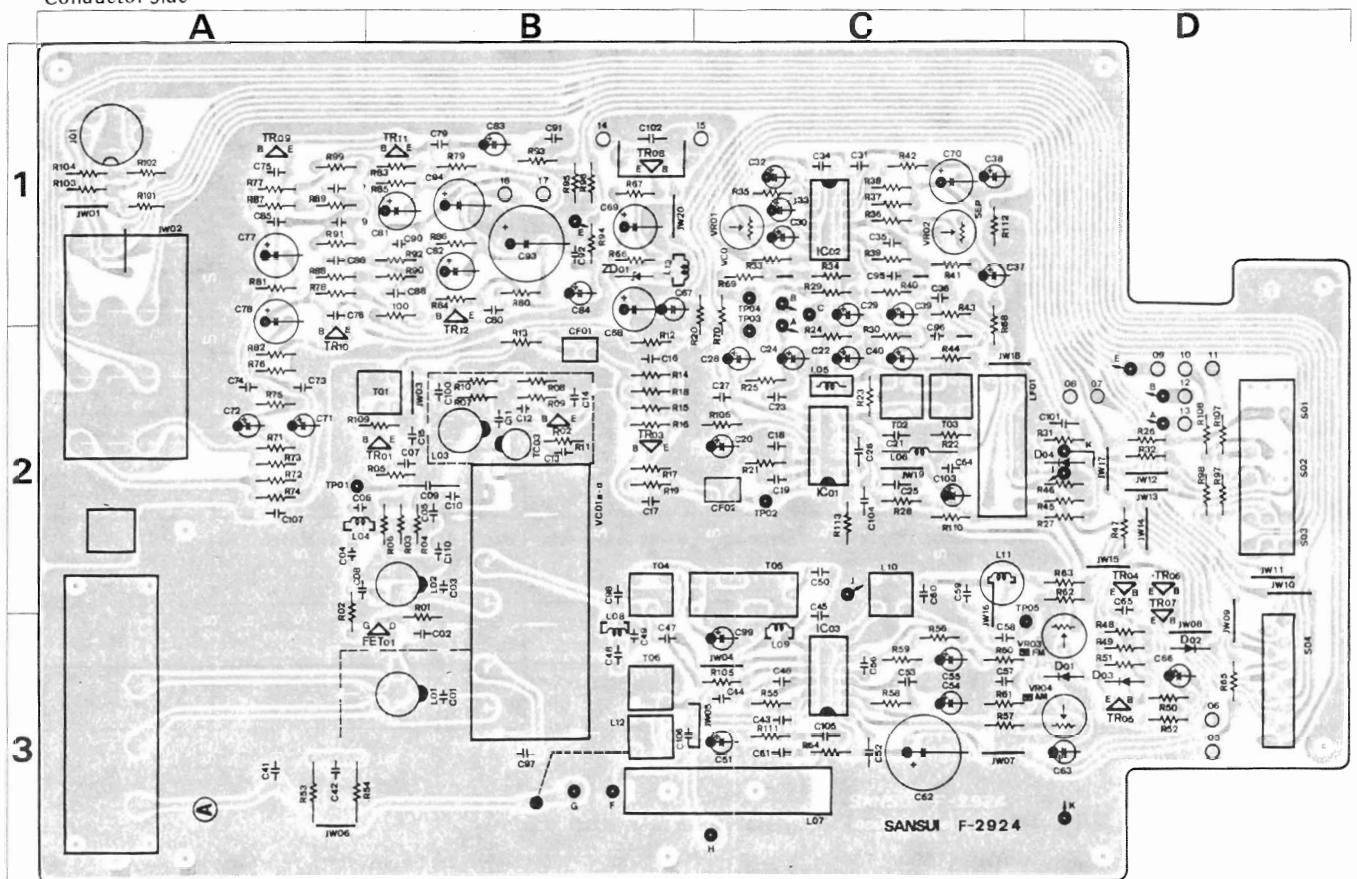


Parts List

Parts No.	Stock No.	Description	Position
•Transistors			
TR01,02	0305801,2	2SC1047 B,C	2B
TR03	0306341,2	2SC1674 L,K	2B
TR04	0305951,2	2SC945 Q,P	2D
TR05	0300470	2SA726W F	3D
TR06,07	0306581,2	2SC1634	2D 3D
TR08	0308450,1	2SD356 C,D	1B
TR09,1C	0300901,1	2SA906 G,H	1A 2A
TR11,12	0306070,1	2SC1313 F,G	1B
•ICs			
IC 01	0360750	μPC1167C	2C
IC 02	0360320	HA1196	1C
IC 03	0360800	LA1240	3C
•FET			
FT01	0370172	2SK49 (H)	3B
•Diodes			
D 01 ~ 04	0311160	1S2473D	3D 2D
•Zener Diodes			
ZD01	0315970	EQA01-13R	1B
•Capacitors			
C 01 ~ 03	0669347	12pF 50V C.C.	3B 2B
C 04	0669210	10pF 50V C.C.	2A
C 06	0669503	3pF 50V C.C.	2A
C 09	0679012	1.5pF 500V	2B
		Gimmick Capacitor	
C 10	0669355	20pF 50V C.C.	2B
C 11, 13	0662210	10pF 50V C.C.	2B
C 32	0573159	1.5μF 35WV T.C.	1C
C 33	0573339	3.3μF 35WV T.C.	1C
C 34	0629005	360pF 50V P.C.	1C
C 49	0620301	300pF 50V P.C.	3B
C 89, 90	0620161	160pF 50V P.C.	1A 1B
C 95, 96	0620561	560pF 50V P.C.	1C 2C
C 97	0669563	3pF 50V C.C.	3B
C 98	0669400	15pF 50V C.C.	2B
•Coils			
L 01	420072G	Antenna Coil (FM)	3B
L 02	421034Q	RF Coil	2B

Parts No.	Stock No.	Description	Position
L 03	4220400	O.S.C. Coil	2B
L 04	4900140	1μH Inductor Coil	2A B
L 05	4290300	18μH Inductor Coil	2C
L 06	4290011	Peaking Coil 3.5μH	2C
L 07	4200750	Antenna Coil (AM)	3C
L 08	4900140	1μH Inductor Coil	3B
L 09	4900110	100μH Inductor Coil	3C
L 10	4230620	IF Coil (AM)	2C
L 11	4900060	22mH Inductor	2C
L 13	4900110	100μH Inductor Coil	1B
T 01	4235930	IF Coil (FM)	2B
T 02	4235990 1	IF Coil	2C
T 03	4236000, 1	IF Coil	2C
T 04	4220650	O.S.C. Coil (AM)	2B
T 05	0910370	Ceramic Filter (AM)	2C
T 06	4230620	IF Coil	3B
CF 01, 02	0910380	Ceramic Filter (FM)	2B 2C
LF 01	0910220	Low Pass Filter	2C
VR01	1034250	4.7kΩ (B) VCO Free Run Adjusting VR	1C
VR02	1035210	220kΩ (B) Stereo Separation Adjusting VR	1C
VR03	1035150	22kΩ (B) FM Meter Adjusting VR	3C, D
VR04	1035110	4.7kΩ (B) AM Meter Adjusting VR	3D
S 01	1131060, 1	Push Switch, FM muting	2D
S 02	1101840	Rotary Switch, selector	2D
VC01	1220210	AM FM Variable Capacitor	2B
TC03	1230090	Trimmer Capacitor	2B
J 01	2090030	5P DIN Socket	1A
	2210330	4P Antenna Terminal	
	2230180	Ground Terminal	
	2200410, 1	8P Input Terminal	

4-2. F-2711 Pre/Main & Power Supply Circuit Board (Stock No. 7572141/G-3500) (Stock No. 7572081/G-301)
Conductor Side (Stock No. 7572151/G-4500) (Stock No. 7572131/G-401)

Conductor Side

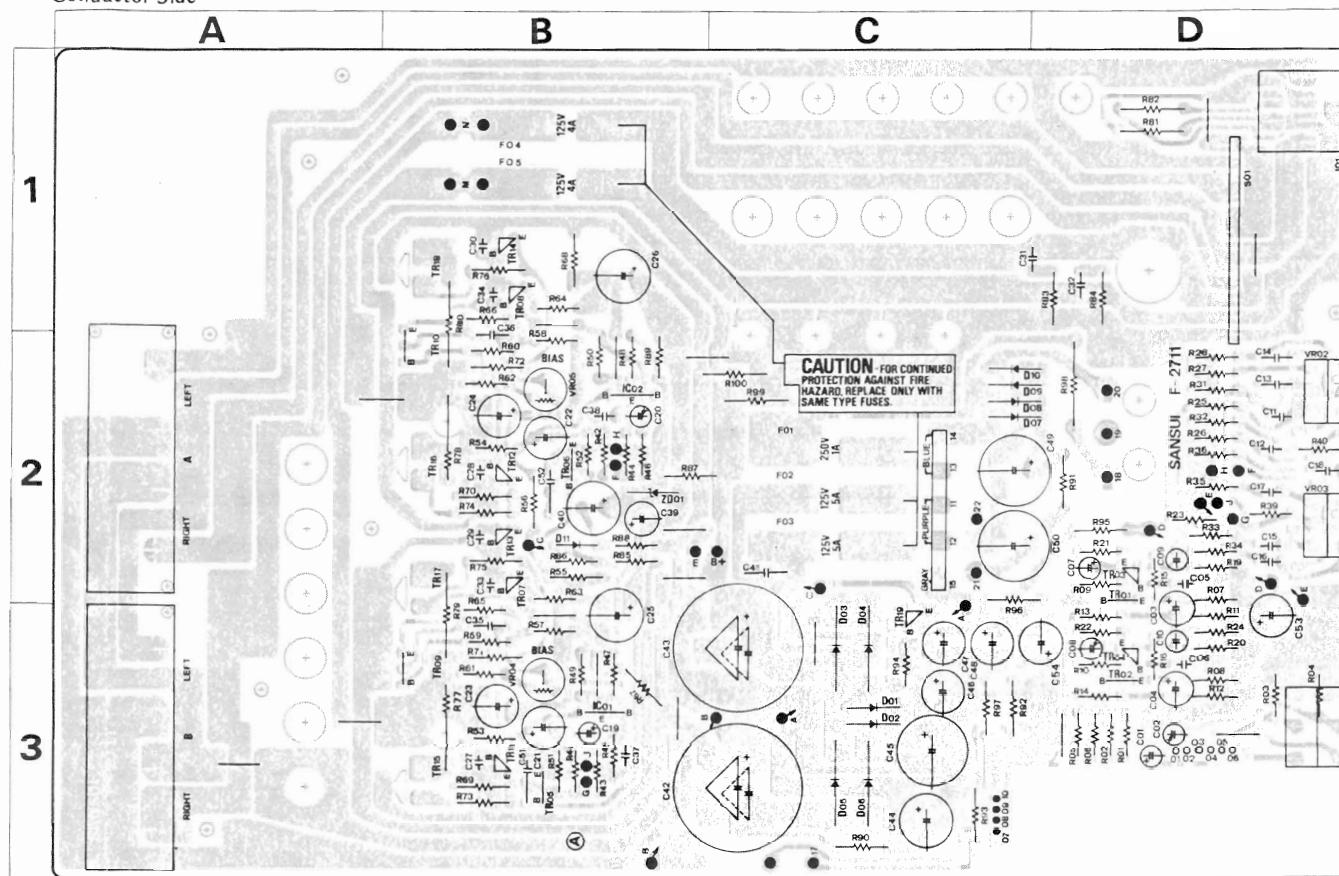

Parts List


Part No.	Stock No.	Description	Position
• Transistors			
TR01_02	0300470_1	2SA726W F, G	2D 3D
TR03_04	0306070_1	2SC1313 F, G	2D 3D
TR07_08	0306521_2	2SC1439 B, V	2B 1B
TR09_10	0305951_2	2SC945 P, Q	3B.2B
TR11_12	0308521_2	2SD438 E, F	3B.2B
TR13_14	0303361_2	2SB560 E, F	2B 1B
TR15_16	0306541_2	2SC1986 Q, Y	3B.2B
TR17_18	0300911_2	2SA771 Q, Y	2B.1B
TR19	0308521_2	2SD438 E, F	3C
• ICs			
IC 01_02	0360290_1	2SA798 E, F	3B.2B
• Diodes			
D 01_02	0310340	10D1	3C
D 03 ~ 06	0311530	3D2	3C
D 07 ~ 10	0310340	10D1	2C
• Zener Diode			
ZD01	0315970	EQA01-13R	2B
C 41	0655103	10.000pF 500V C.C.	2C
R 55, 56	0210182	1.8kΩ ½W N.I.R.	2B
R 67, 68	0192101	100Ω ½W F.R.	3B.1B
R 69 ~ 72	0192221	220Ω ½W F.R.	3B.2B
R 73 ~ 76	0192689	6.8Ω ½W F.R.	1, 2B
R 77 ~ 80	0212338	0.33Ω 2W N.I.R.	1, 2B
R 81, 82	0211221	220Ω 1W N.I.R.	1D
R 83, 84	0210479	4.7Ω ¼W N.I.R.	1D
R 91	0192220	22Ω ¼W F.R.	2D
VR01	1011130_1	250kΩ (B) x 2 Level Volume	3D
VR02	1015300_1	100kΩ x 2 Bass Volume	2D
VR03	1015300_1	100kΩ x 2 Treble Volume	2D
VR04, 05	1035050	470Ω Volume, bias current	
F 01	0432220i 2310220 2210340	IA 250V Fuse Holder (Large) 4P Outlet Terminal	

Part No.	Stock No.	Description	Position
CG-3500/301>			
C 42, 43	054009	6,800μF 35V E.C.	
R 87	0210182	1.8kΩ ½W N.I.R.	2C
R 90	0210271	270Ω ½W N.I.R.	3C
R 92	0210681	680Ω ½W N.I.R.	3C
R 93	0210331	330Ω ½W N.I.R.	3C
R 95	0210681	680Ω ½W N.I.R.	2D
R 96	0210151	150Ω ½W N.I.R.	2C
R 97	0210271	270Ω ½W N.I.R.	3C
R 99, 100	0211222	2.2kΩ 1W N.I.R.	2C
F 02, 03	0432290	5A 125V AC Fuse	2C
CG-4500/401>			
Transistors			
TR05, 06	0300510, 1	2SA733 P, Q	3B 2B
Diodes			
D 11	0311160	1S2473D	2B
C 42, 43	0549116	6,800μF 50V E.C.	
R 87	0210222	2.2kΩ ½W N.I.R.	2B
R 90	0210471	470Ω ½W N.I.R.	3C
R 92	0210102	1kΩ ½W N.I.R.	3C
R 93	0210681	680Ω ½W N.I.R.	3C
R 95	0210102	1kΩ ½W N.I.R.	2D
R 96	0210271	270Ω ½W N.I.R.	2C
R 97	0210681	680Ω ½W N.I.R.	3C
R 99, 100	0211272	2.7kΩ 1W N.I.R.	2C
F 02, 03	0432500	7A 125V Fuse	2C
CG-3500/4500/401>			
S 01	1101950	SP Selector Switch	1D
I 01	2430320	Headphone Jack Socket	
I 01	2430340	Headphone Jack Socket	
<G-301>			

* The circuit boards, F-2708, F-2709, F-2710, F-2712, F-2713 and F-2716 are not supplied as the assembled, the individual parts on the circuit boards, however, are provided for orders.

4-3. F-2708 Circuit Board for Signal Meter

Conductor Side

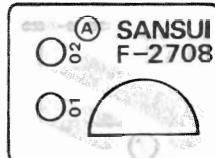


Parts List

Parts No.	Stock No.	Description
M01	4301230,1	Signal Meter

4-5. F-2710 Circuit Board for Stereo Indicator

Conductor Side

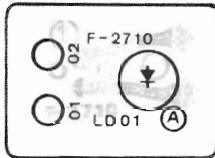


Parts List

Parts No.	Stock No.	Description
LD01	0319060	Light Emitted Diode

4-7. F-2713 Microphone Amp Circuit Board

Conductor Side

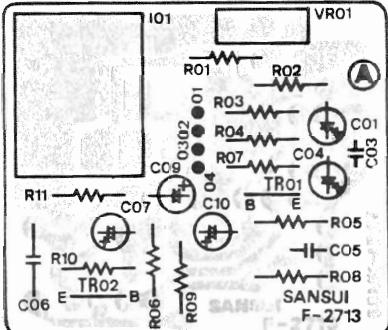


Parts List

Parts No.	Stock No.	Description
Transistors		
TR01	0300470,1	2SA726W F,G
TR02	0306070,1	2SC1313 F,G
VR01	1005340,1	20kΩ (A) Mixing Volume
J 01	2430330	Mic. Jack Socket

4-4. F-2709 Circuit Board for Tuning Meter

Conductor Side

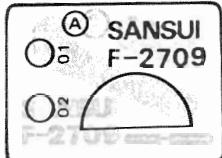


Parts List

Parts No.	Stock No.	Description
M02	4301240,1	Tuning Meter

4-6. F-2712 Loudness Circuit Board

Conductor Side

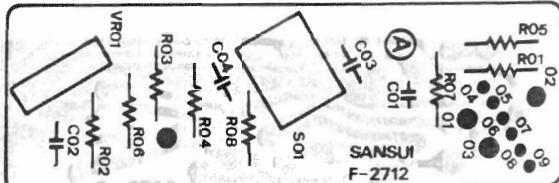


Parts List

Parts No.	Stock No.	Description
VR01	1005350,1	250kΩ (B) x 2 Balance Volume
S 01	1131490,1	Push Switch, loudness

4-8. F-2716 Voltage Selector Circuit Board

Conductor Side

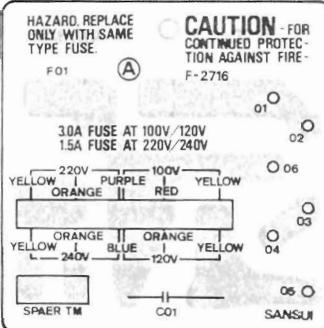

Parts List

Parts No.	Stock No.	Description
C 01	0659802	0.0047μF 150V C.C.
F 01	0432230	1.5A 250V } G-3500/301
	0432260	3A 250V }
	0432250	2.5A 250V }
	0432290	5A 125V } G-4500/401
F 881	0435110	1.25A 250V EU, BS G-301
	0435130	2A 250V EU, BS G-401
	2310220	Fuse Holder (Large)

Abbreviations

C.R.	: Carbon Resistor	E.C.	: Electrolytic Capacitor
S.R.	: Solid Resistor	B.P.E.C.	: Bi-Polar Electrolytic Capacitor
Ce.R.	: Cement Resistor	C.C.	: Ceramic Capacitor
M.R.	: Metal Film Resistor	Mi.C.	: Mica Capacitor
F.R.	: Fusing Resistor	O.C.	: Oil Capacitor
N.I.R.	: Non-Inflammable Resistor	P.C.	: Polystyrene Capacitor
M.C.	: Mylar Capacitor	T.C.	: Tantalum Capacitor


NOTE:

◆ **Changing Power Supply Voltage:** (This is applicable for universal type).


Your unit is adjusted to operate at the correct power supply voltage of your area prior to shipment from our factory. If you move to an outside country after purchasing it or send it as a gift to a friend living in an area where the voltage is different, it may be necessary to operate at the correct power supply voltage.

* When necessary, remove the bonnet from the unit and reconnect leads from power supply circuit board as described below in accordance with the required voltage (100 V, 120 V, 220 V or 240 V).


1) For 100V

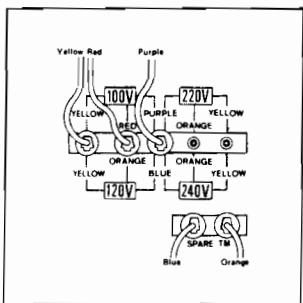


2) For 120V

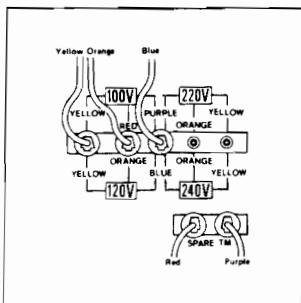

3) For 220V

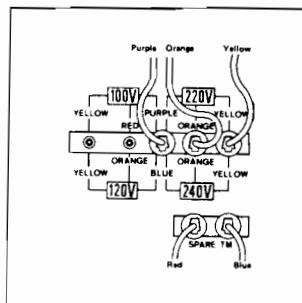

4) For 240V

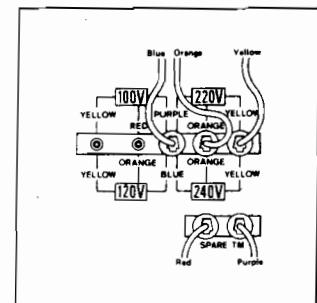

5. PARTS REPLACEMENT

5-1. Square Knobs of Loudness, FM Muting, Mode & Tape Monitor

1. Take off a wood bonnet, front & inside panels.
2. Then, pull out knobs to which are not glued as Fig. 1.

5-3. Master Volume

1. Take off the two panels and one nut for master volume.
2. Then, unsolder six points installing the master volume on pattern side of F-2711 printed board.

5-2. Tuning & Signal Meter

1. Complete 1. & 2. above.
2. Take off the meter as Fig. 2, then put it back into same place until snapped.

Fig. 1

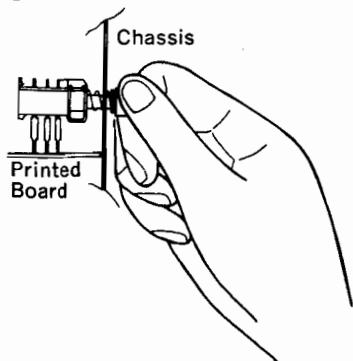


Fig. 2



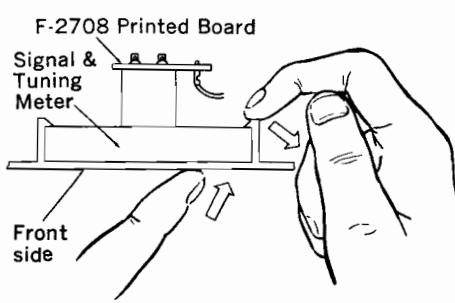


Fig. 3 Level Volume
(Bottom side) Soldering points

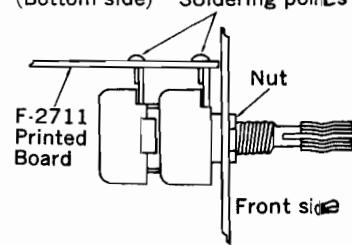

6. OTHER PARTS


6-1. Front View

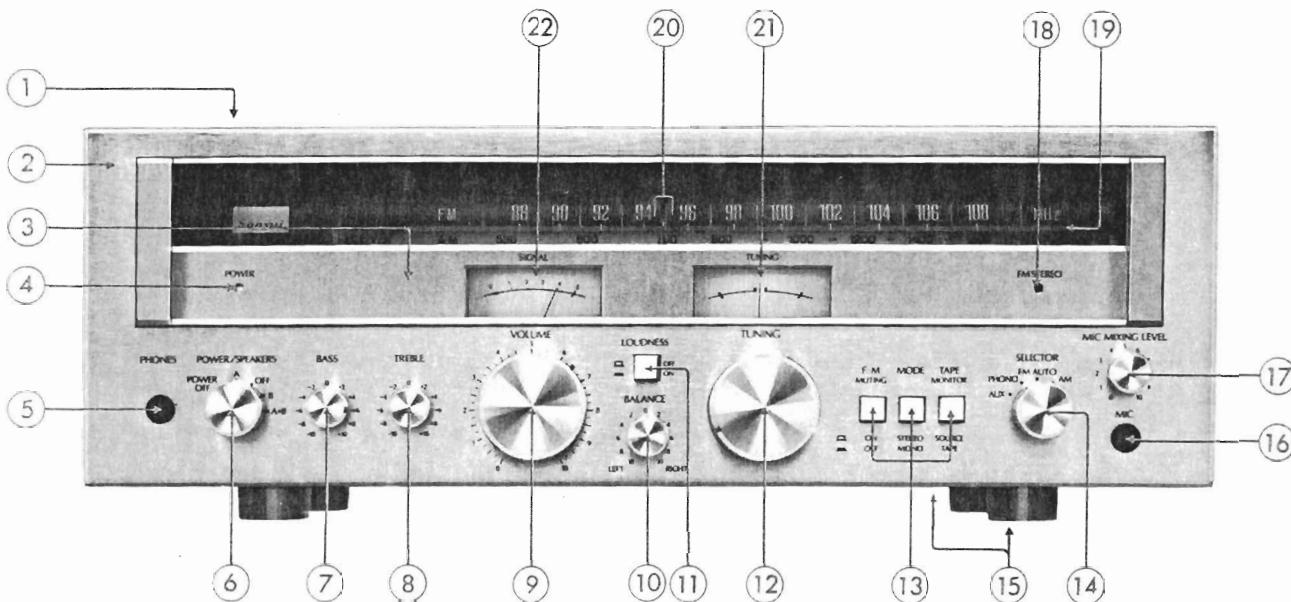

Parts List (Front & Top View)


Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
1	5727150 5236690	Wood Bonnet W.B. Type Bushing	5408562	5408502	Dial Scale (G-3500) Dial Scale (G-301)
2	7007631 7008001	Front Panel Ass'y (G-3500/4500) Front Panel Ass'y (G-301)	19	5408572 5408512	Dial Scale (G-4500) Dial Scale (G-401)
3	7008011	Front Panel Ass'y (G-401)	20	5305720	Backside Panel for dial scale
4	5305690	Inside Panel	21	7116032	Dial Pointer Ass'y
5	5426410 2430320 2430340 5319142 119053C 1101850	Power Illuminator Bar Headphone Jack Socket (G-3500/4500/401) Headphone Jack Socket (G-301) Power & Speakers Switch Knob Power Rotary Switch (G-301) Power & Speaker Rotary Switch (G-3500/4500/401)	22	4301120, 1 4301110, 1	Tuning Meter Signal Meter
6	5236470	M9 x 7, spacer nut	23	2450070	AC Outlet
7	5319133 1015300, 1	BASS Volume Knob 100kΩ x 2 Bass Volume	24	3910600	Strain Relief, power cord
8	5319133 1015300, 1	Treble Volume Knob 100kΩ x 2 Treble Volume	25	3800470, 1	AC Cord
9	5318981 1011130, 1	Volume Knob 250kΩ (B) x 2 Volume	26	2210340	4P Speaker Terminal
10	5319133 1005350, 1	Balance Volume Knob 250kΩ (B) Balance Volume	27	2200410, 1	8P Input Terminal
11	5326690 1131490, 1	Loudness Switch Knob Loudness Switch	28	2230180	Ground Terminal
12	5318972	Tuning Knob	29	2210330	4P Antenna Terminal
13	5326690 1131060, 1	Knob, tape monitor switch Tape Monitor Switch	30	6146670	D-44 Type Pulley
14	5319142 1101840	Selector Switch Knob Selector Switch	31	4200750	Bar Antenna
15	5236470 5058793	M9 x 7, spacer nut Bottom Plate	32	5289171	Bar Antenna Holder
16	5517250 2430370	Leg Microphone Jack Socket	33	7036590	Tuning Unit
17	5319133 1005340, 1 0319060	Microphone Mixing Volume Knob 20kΩ (A) Mic Mixing Volume L.E.D., FM Stereo Indicator	34	7136101	Tension Unit
18	5289180 5136030	L.E.D. Holder Plastic Rivet	35	0400650	Pilot Lamp Ass'y
			36	4002880	Power Transformer (G-3500)
			37	4002884	Power Transformer (G-301)
				4002870	Power Transformer (G-4500)
				4002874	Power Transformer (G-4C1)
			TR15, 16	0306541, 2	2SC1986 (Q, Y) } Transistor
			TR17, 18	0300911, 2	2SA771 (Q, Y) } Transistor
				5288721	Plate for TR
			C 701	06598C1 05981C7 0659811	0.01μF 150V C.C. XX, UL 0.01μF 250V M.C. EU, BS 0.01μF 125V C.C. CS

6-2. Top View


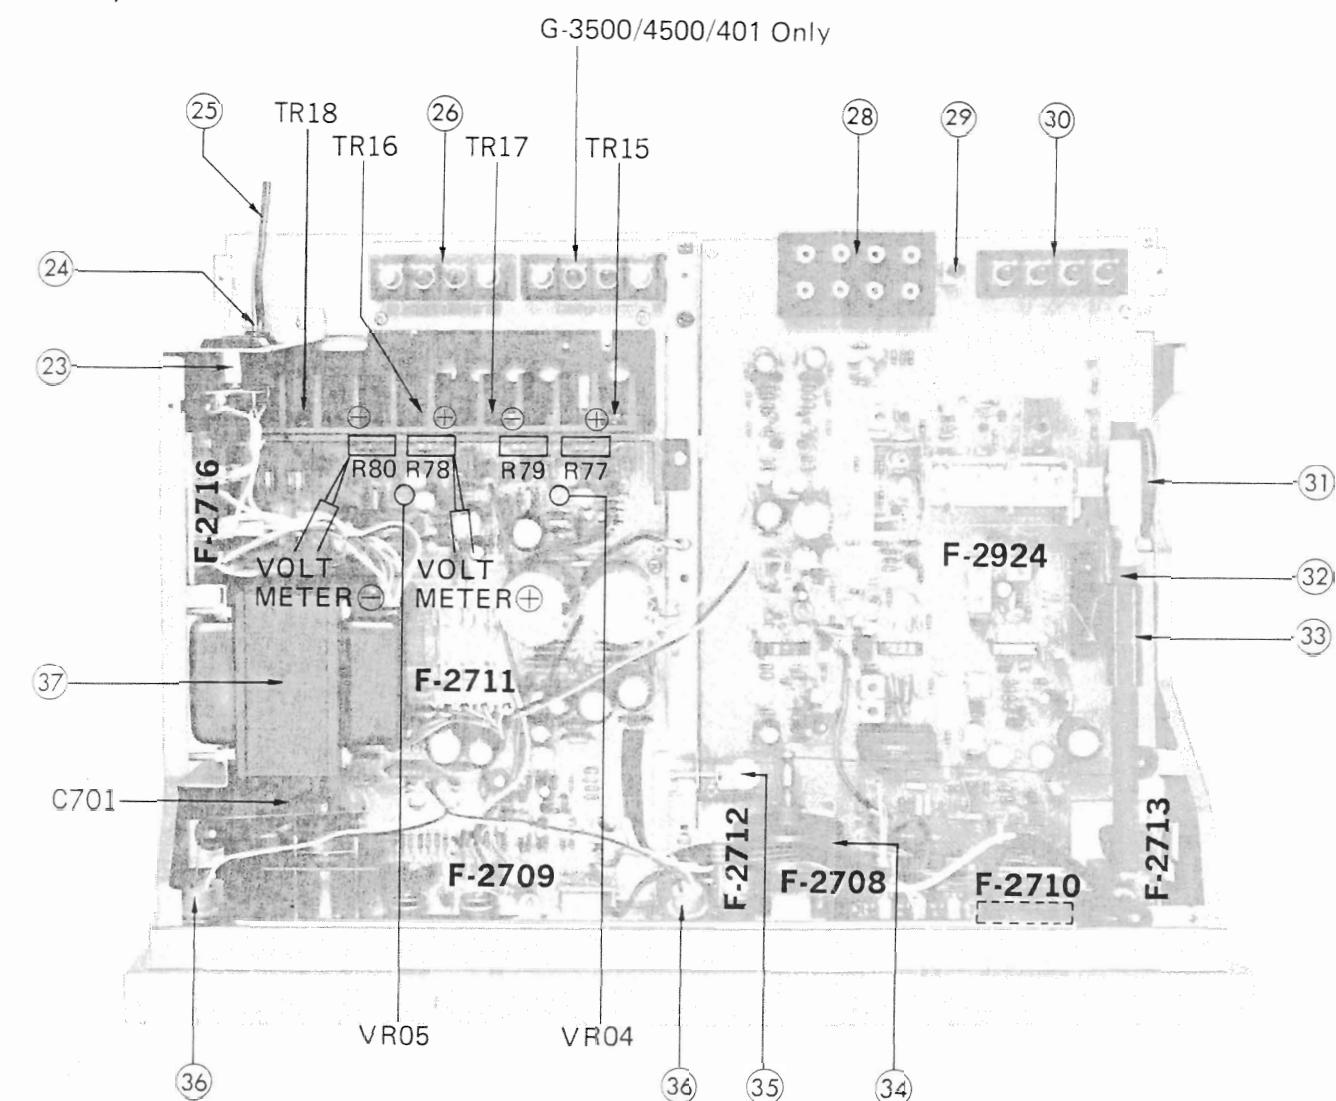


- * Design and specifications subject to change without notice for improvement.
- * La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.
- * Änderungen, die den technischen Fortschritt dienen, bleiben vorbehalten.

7. SCHEMATIC DIAGRAM 7-1. G-3500/301

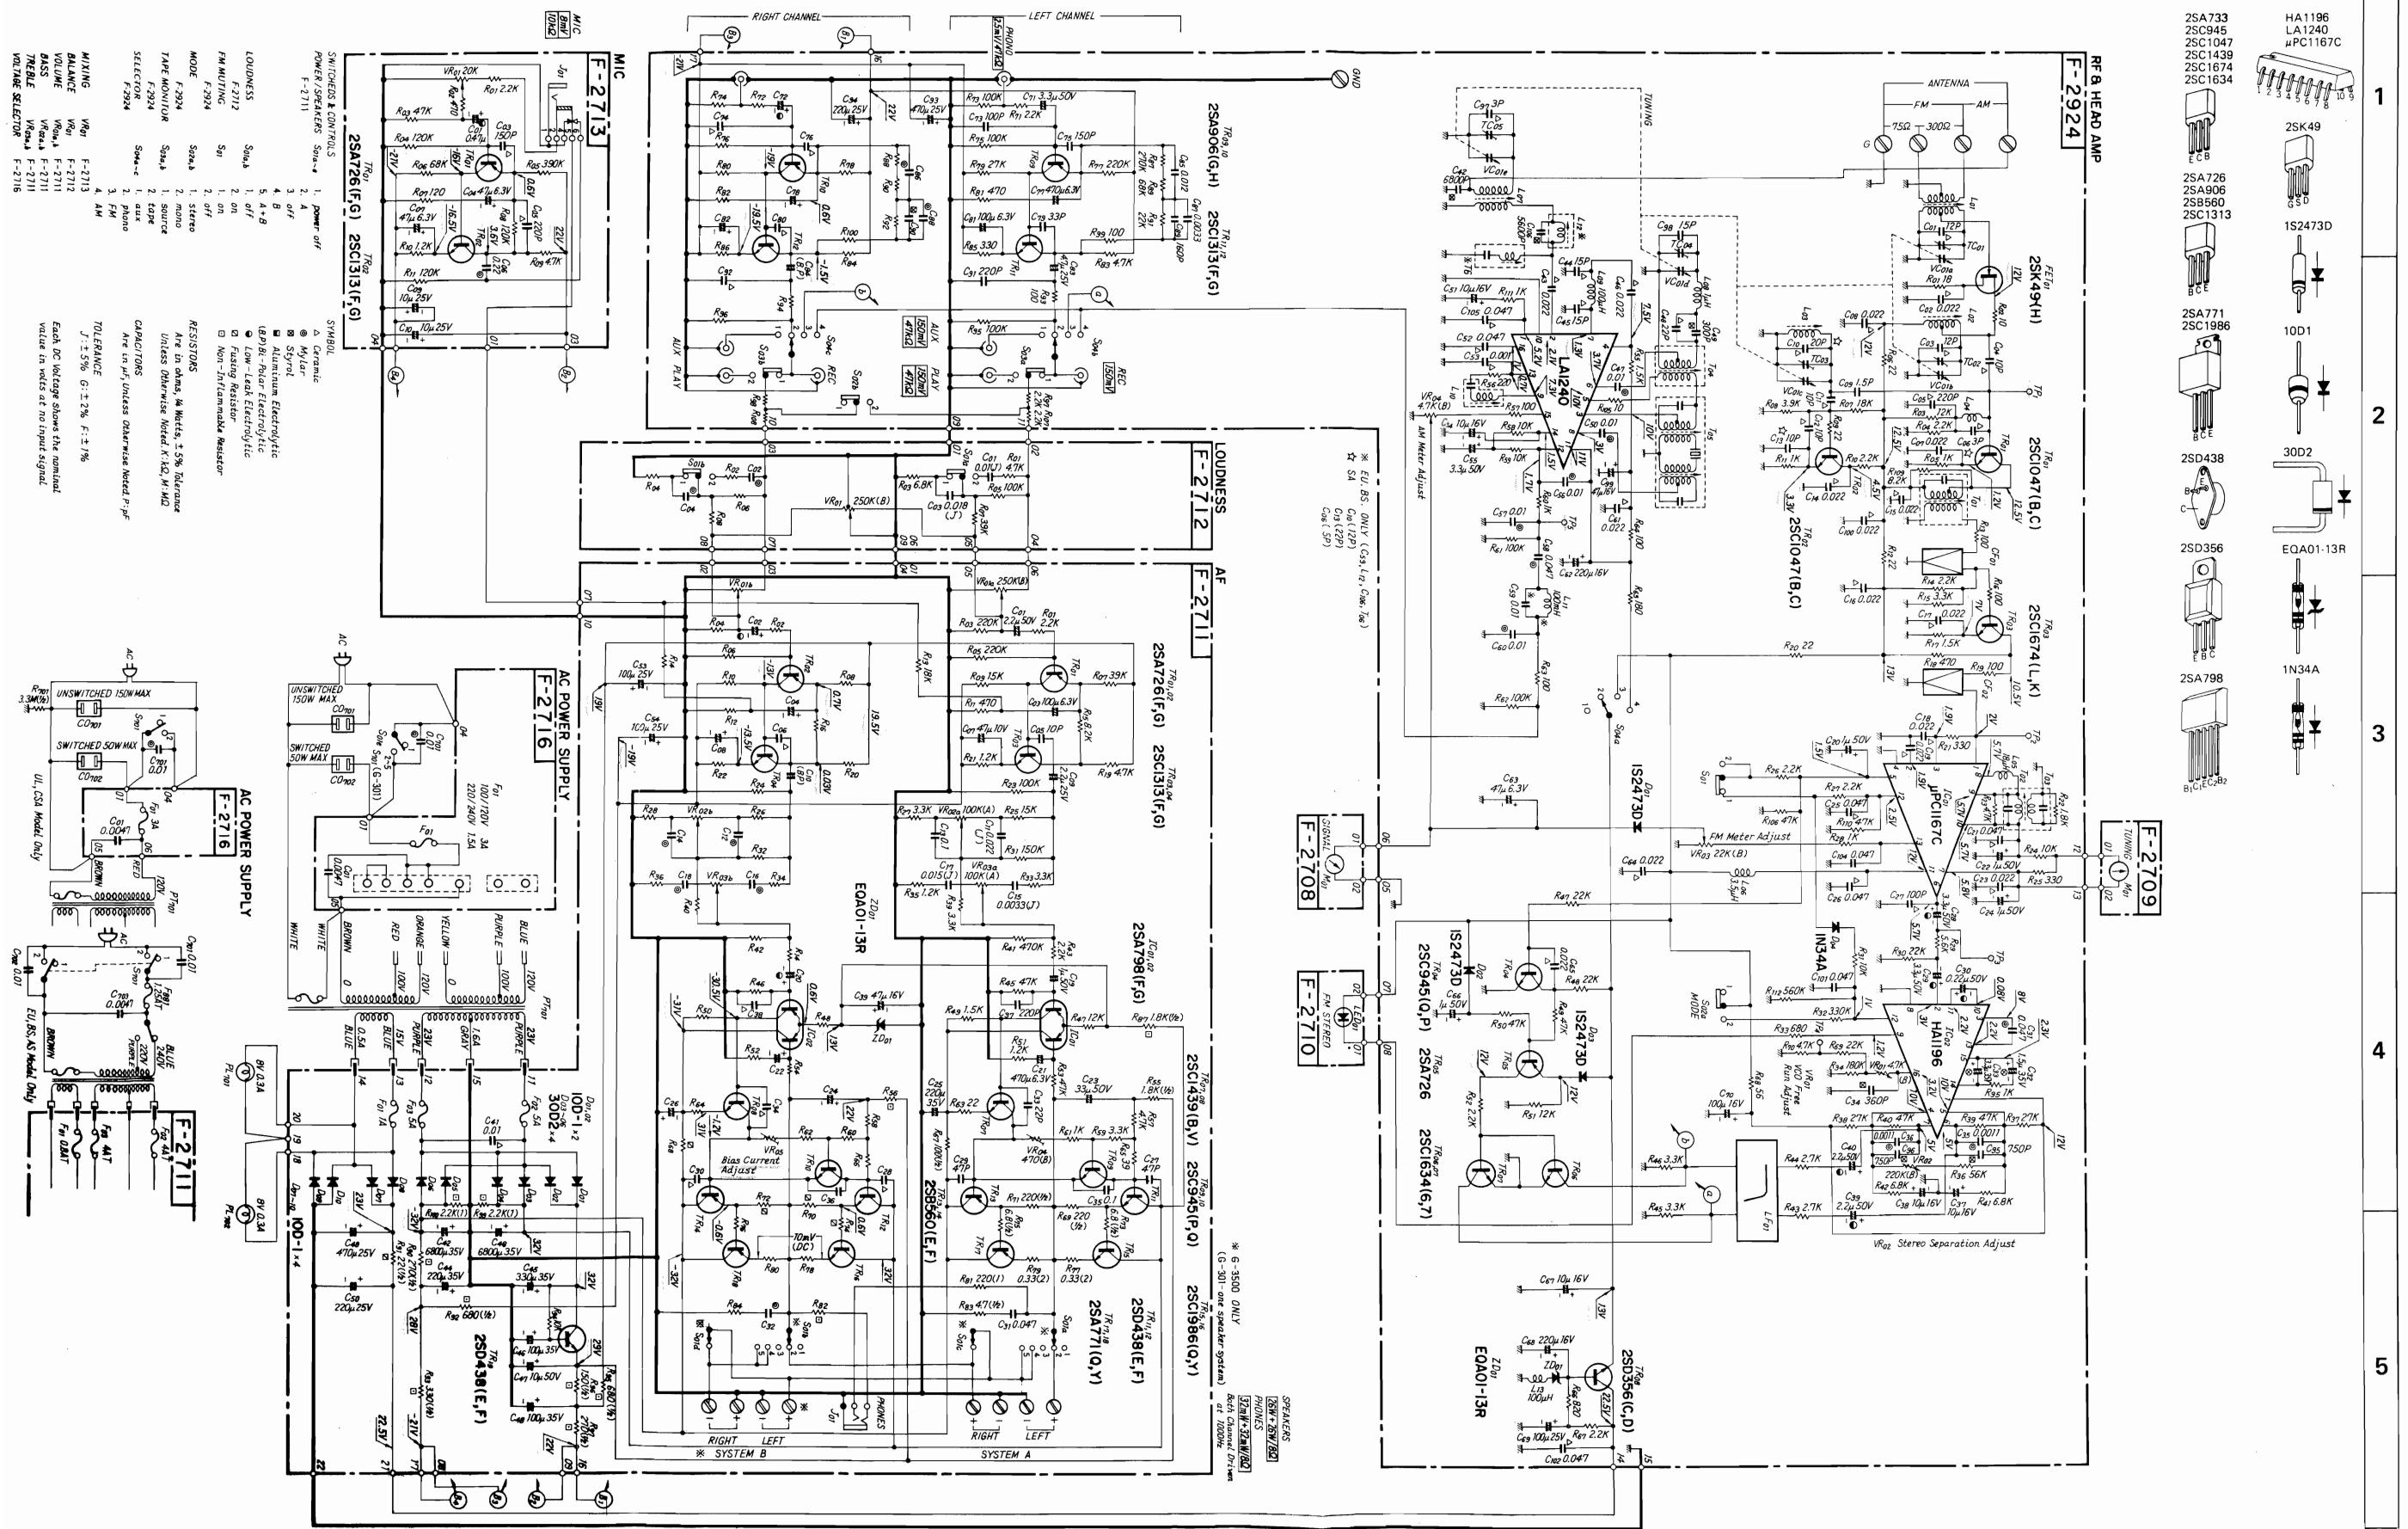

7-2. G-4500/401

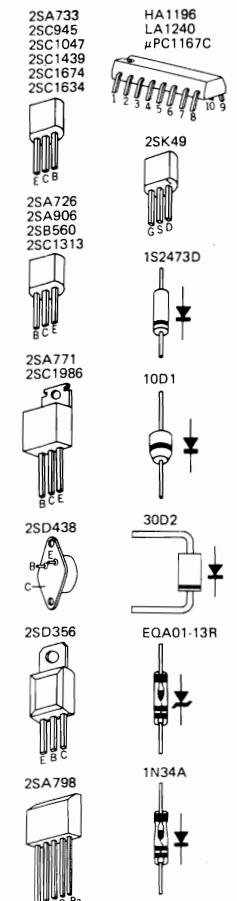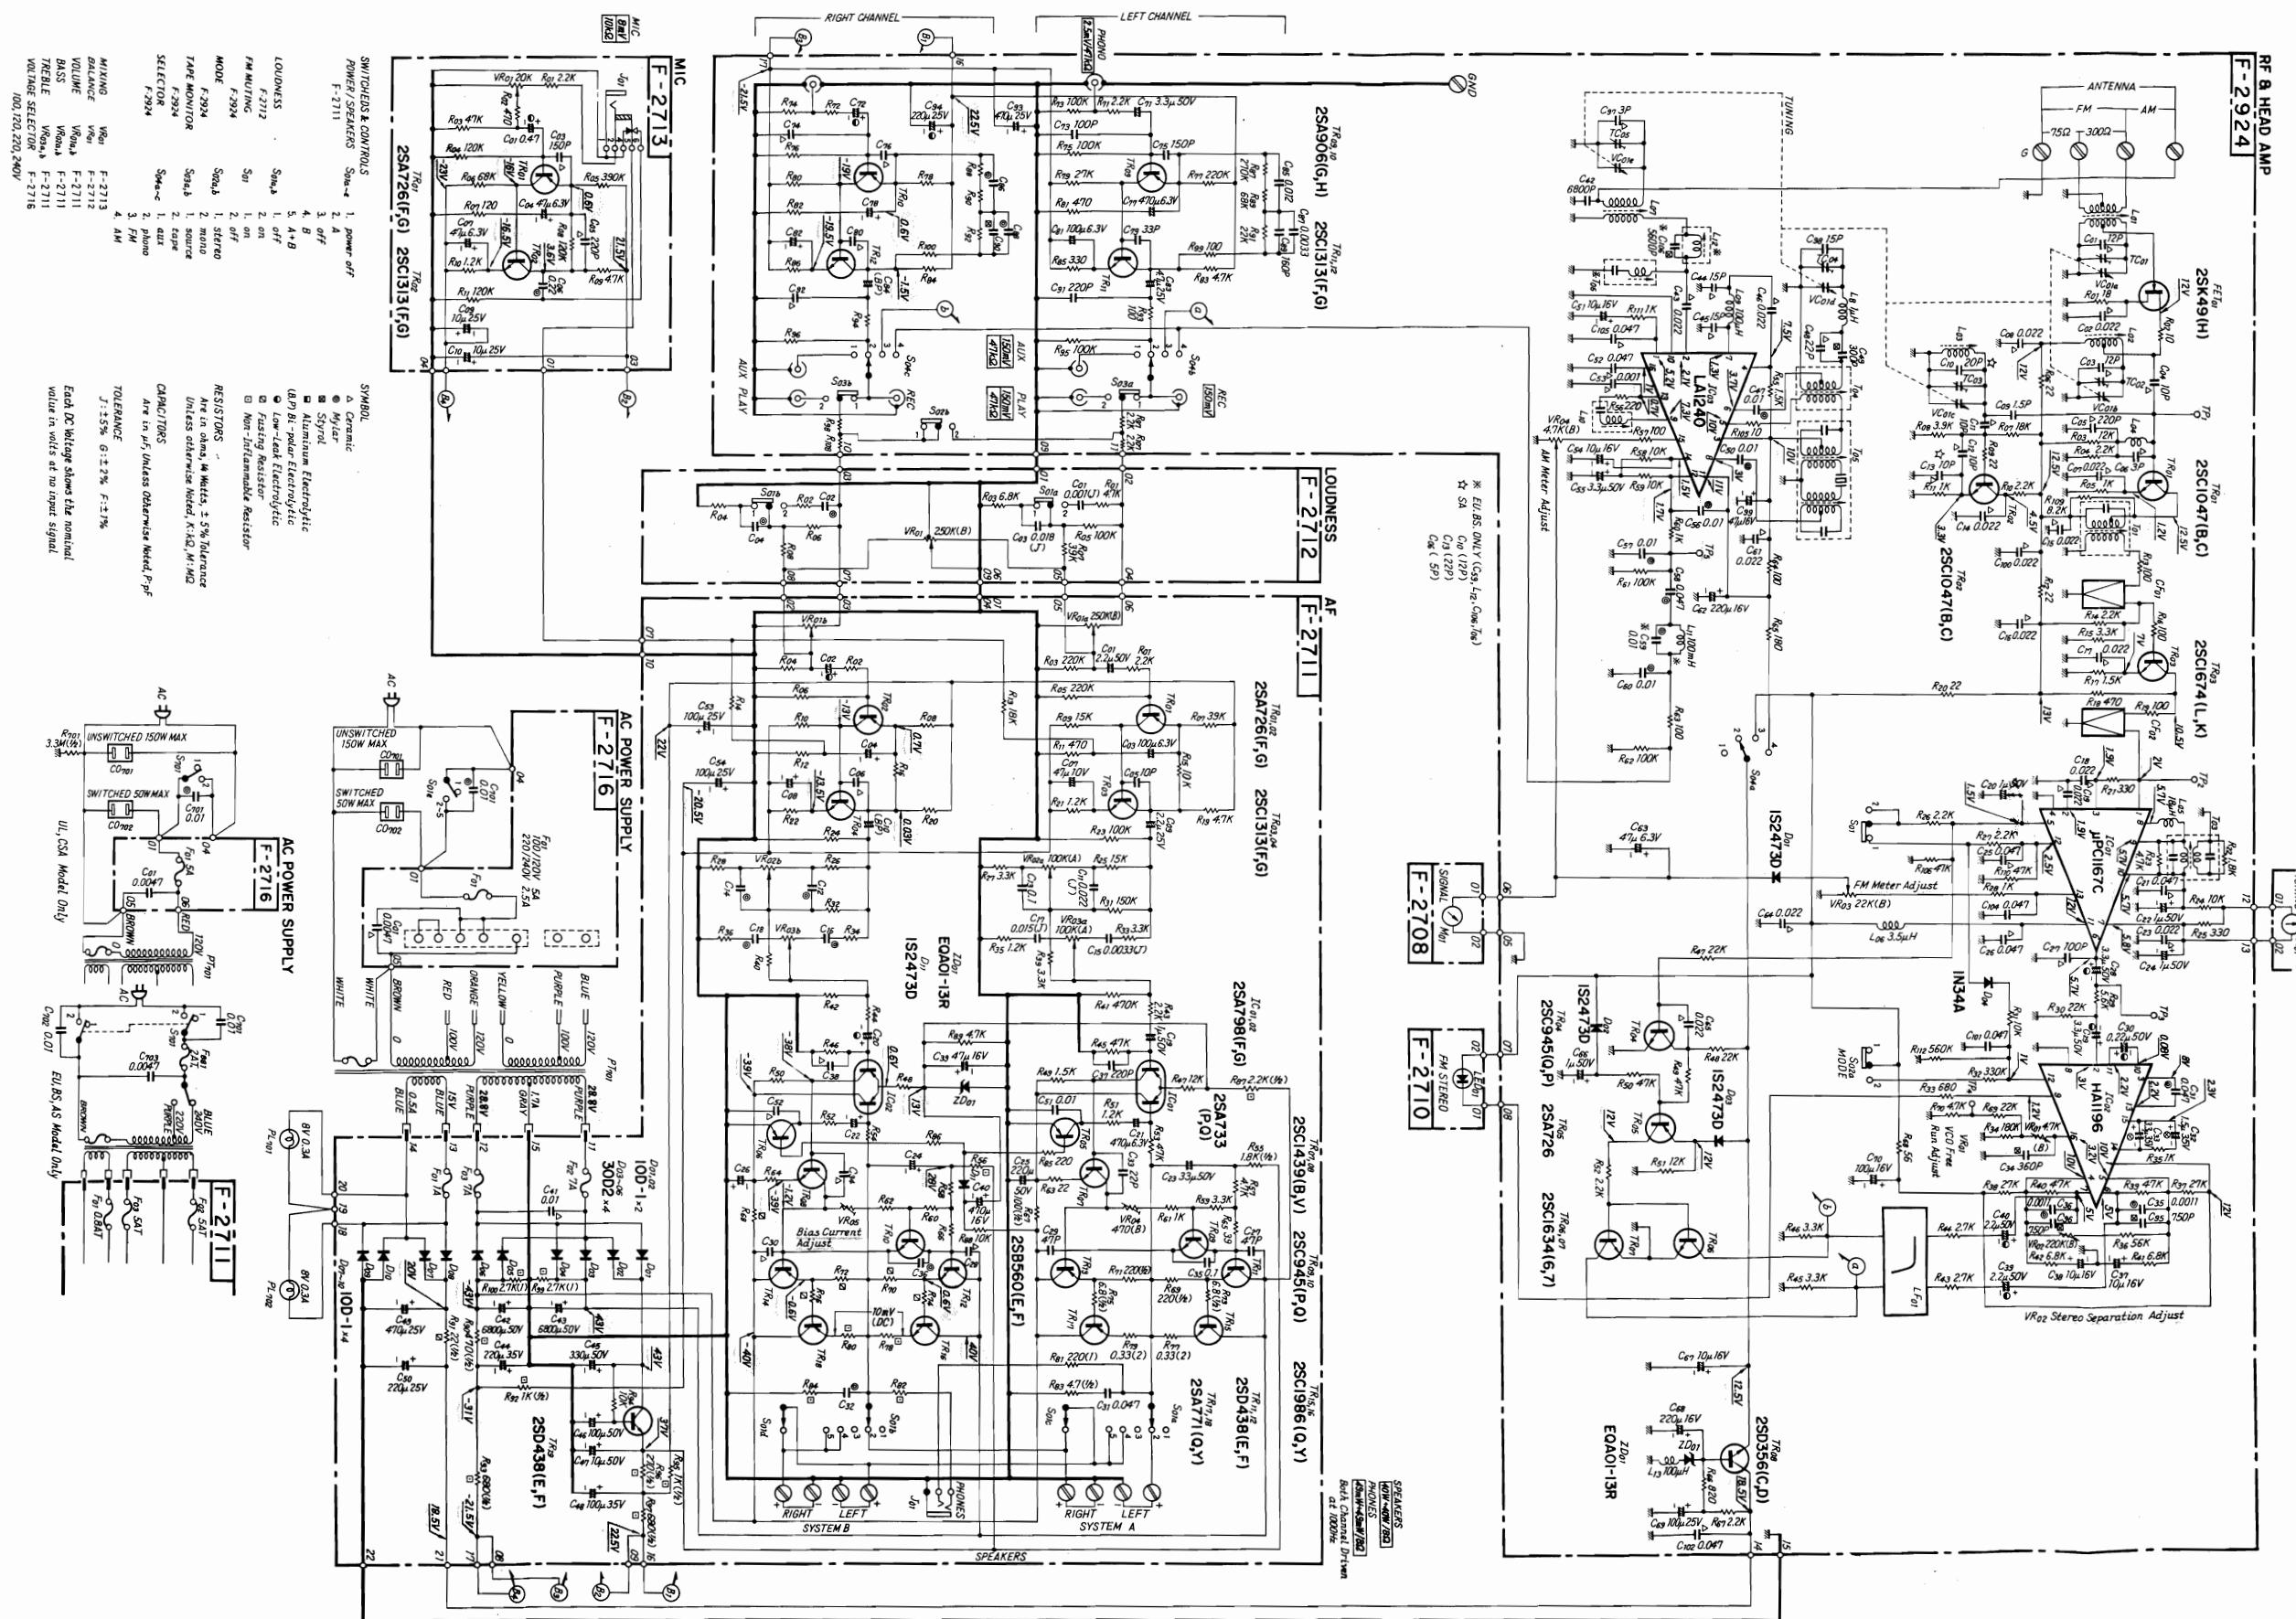

8. THREADING OF DIAL CORD

- * If a dial cord is cut off or slips, replace it by following procedures.
As this unit uses 0.5 mm ϕ cord, please replace it with the same type certainly.
- * The length of dial cord is approximately 160 cm (65.3 inch).

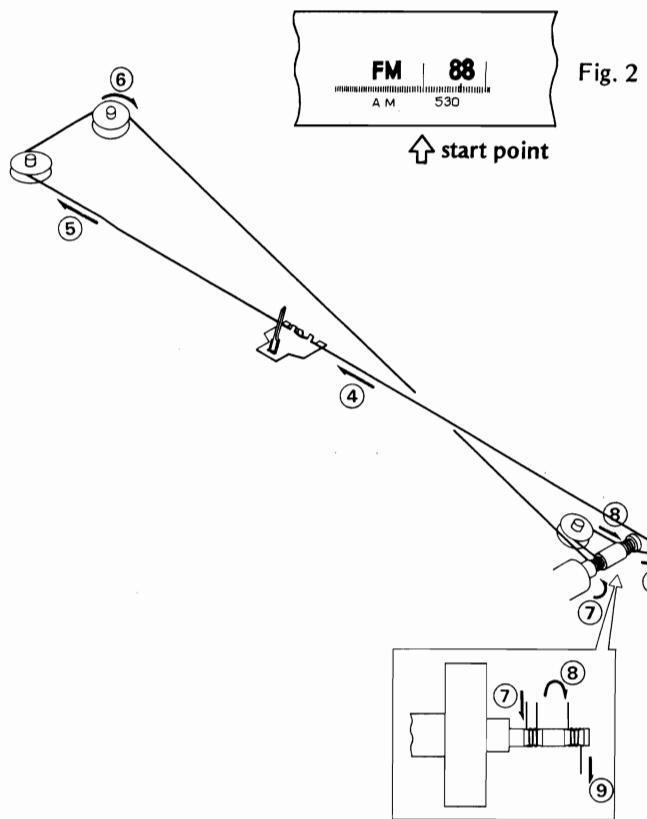


Fig. 2

Fig. 1

8-1. Threading of Dial Cord

Thread the dial cord in numerical order from 1 to 14 as Fig. 1.
* Close the variable capacitor completely (Maximum Capacitance).

Stock No.	Description
6036050	Dial Cord (0.5 mm ϕ)
6146670	Dial Pulley

8-2. Attachment of Dial Pointer


- 1) Close the variable capacitor completely.
- 2) Set the dial pointer to start point on dial scale as Fig. 2.
- * Confirm that the dial pointer runs smoothly on the dial scale by turning the turning shaft.

9. PACKING LIST

Part No.	Stock No.	Description
9116143		Vinyl Cover
9028090		Styrofoam Packing
9001500		Carton Case (G-3500)
9001410		Carton Case (G-301)
9001490		Carton Case (G-4500)
9001400		Carton Case (G-401)
5996080		Curt Stopper

10. ACCESSORY PARTS LIST

Stock No.	Description
9204330	Operating Instructions (G-3500/4500)
9204290	Operating Instructions (G-301)
9204280	Operating Instructions (G-401)
9237860	Schematic Diagram (G-3500/301)
9237950	Schematic Diagram (G-4500/401)
3820100	FM Antenna

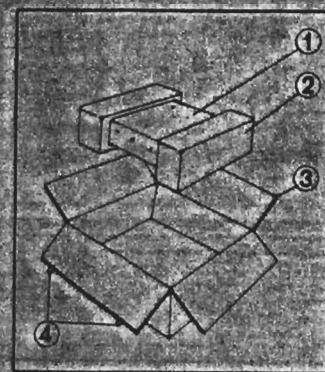

MEMO

SANSUI ELECTRONICS CORPORATION : 55-11 Queens Blvd. Woodside, N.Y. 11377 U.S.A.
333 West Alondra Blvd. Gardena, California 90247 U.S.A.
3036 Koaapaka St. Honolulu, Hawaii 96819 U.S.A.
SANSUI AUDIO EUROPE N.V. : North Trade Bldg. (9th floor) Noorderlaan 133-Bus 1,2030 Antwerp, Belgium
SANSUI AUDIO EUROPE S.A. : Arabela center, 6 Frankfurt AM Main, Lyoner Strasse 44-48, West Germany
SANSUI ELECTRIC COMPANY LTD. : 14-1, Izumi 2-chome, Suginami-ku, Tokyo 168 Japan PHONE: (03) 323-1111/TELEX: 232-2076

Sansui