


1
Hotta

Setting up your Kenwood Audio/Video System

Spectrum 755 AV

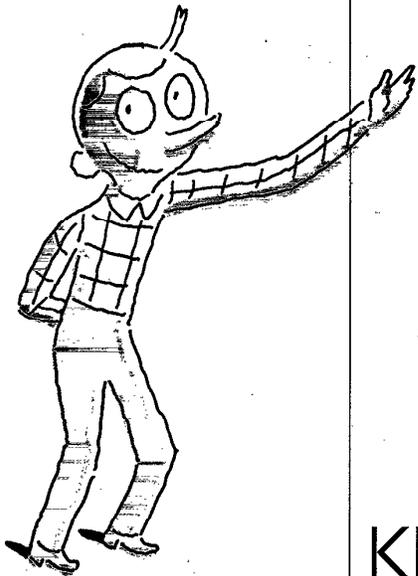

KENWOOD

Licensing

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: US numbers 3,632,886; 3,746,792; and 3,959,590; Canadian numbers 1,004,603 and 1,037,877. 'Dolby', 'Pro Logic' and the  symbol are trademarks of Dolby Laboratories Licensing Corporation.

The image shows the Dolby Pro Logic logo, which consists of the word "Dolby" in a stylized font above the word "Pro Logic" in a similar font. The logo is positioned on the right side of the page.

Safety first

WARNING:
**TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT
EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

Safety Symbols

We've placed these safety symbols on the back of the unit.



CAUTION:

To prevent electric shock, match the wide blade of the plug to the wide slot in a wall socket, and insert fully.



The lightning bolt symbol is to alert you to the danger of electric shock from the operation of electric parts inside the unit.



The exclamation point symbol is to let you know that there are important operating and servicing instructions in this manual that you should read before you operate this unit.

Canadian IC Compliance Notice

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Rechargeable Battery Warning

If this unit uses a rechargeable battery, use the battery charger that came with the unit only. Do NOT take apart, damage, burn, or short circuit the battery, or expose it to heat—this could cause it to burst or to release toxic materials. Keep the battery away from children.

About the power supply

This unit is designed for operation in the USA and Canada using a power supply of AC 120 volts only.

Safety Precautions

Read this page carefully to ensure safe operation.

Please read all of the safety and operating instructions before operating this unit. Adhere to all warnings on the unit and in this manual. Follow all the safety and operating instructions. These safety and operating instructions should be retained for future reference.

1 Power sources. The unit should be connected to a power supply only of the type described in this manual or as marked on the unit. If you are not sure of the type of power supply to your home, consult your unit dealer or local power company. For units intended to operate from battery power, or other sources, refer to the instruction manual.

2 Power-cord protection. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.

3 CAUTION—Polarization. This unit may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your outlet. Do not defeat the safety purpose of the polarized plug.

4 Ventilation. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the unit and to protect it from overheating, and these openings must not be blocked or covered. The unit should be situated so that its location or position does not interfere with its proper ventilation.

To maintain good ventilation, do not put records or a table-cloth on the unit. Place the unit at least 4 inches away from the walls.

Do not use the unit on a bed, sofa, rug or similar surface that may block the ventilation openings. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

- 5 Water and moisture.** The unit should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
- 6 Temperature.** The unit may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above $+41^{\circ}\text{F}$.
- 7 Heat.** The unit should be situated away from heat sources such as radiators, heat registers, stoves, or other units (including amplifiers) that produce heat.
- 8 Electric Shock.** Care should be taken so that objects do not fall and liquid is not spilled into the enclosure through openings. If a metal object, such as a hair pin or a needle, comes into contact with the inside of this unit, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this unit.
- 9 Enclosure removal.** Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.
- 10 Cleaning.** Unplug this unit from the wall outlet before cleaning. Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc. to clean the cabinet. Use a clean dry cloth.
- 11 Lightning.** For added protection for this unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power-line surges.
- 12 Abnormal smell.** If an abnormal smell or smoke is detected, immediately turn the power OFF and unplug the unit from the wall outlet. Contact your dealer or nearest service center.
- 13 Damage requiring service.** The unit should be serviced by qualified service personnel when:

The power supply cord or the plug has been damaged.

Objects have fallen, or liquid has been spilled into the unit.

The unit has been exposed to rain or water.

The unit has been dropped, or the enclosure damaged.

The unit exhibits a marked change in performance.

The unit does not appear to operate normally by following the instruction manual. Adjust only those controls that are covered by the instruction manual as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.

- 14 Servicing.** The user should not attempt to service the unit beyond that described in the instruction manual. All other servicing should be referred to qualified service personnel.
- 15 Power lines.** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 16 AC outlets.** Do not connect other audio equipment with a power consumption larger than that specified to the AC outlet on the rear panel. Never connect other electrical units, such as an iron or toaster, to it to prevent fire or electric shock.
- 17 Overloading.** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 18 Attachment.** Do not use attachments not recommended by the unit manufacturer as they may cause hazards.
- 19 Replacement parts.** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 20 Safety check.** Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
- 21 Carts and stands.** Don't put this unit on a cart or stand that is unsteady or that can not support the unit's weight. If you move this unit on a cart or stand, be careful—quick stops, excessive force and pushing over or uneven surfaces, may cause the cart to overturn and damage your equipment.



FCC Warning

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.


Important

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Cable System Installer Notice

Article 820-40 of the NEC provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

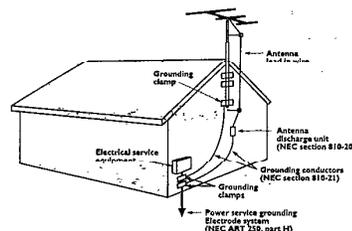

Contents

Safety First	3	Plugging in the power cords	20
Welcome	6	Turning on the power	21
Unpacking	6	Tuning the speakers	22
Did you get everything?	6	Setting the center speaker mode	22
You may need to purchase	6	Calibrating the speaker levels	22
You'll need these tools	6	Loading batteries into the remote	22
Assembling the rack	7	Doing the calibrating	22
How to get replacement parts for your rack	10	Setting the subwoofer level	24
Placing your system	11	Adjusting the delay time	25
Stacking your components in the rack	11	Before you start	25
Positioning your speakers	11	Doing the adjusting	25
Left and right speakers	11	Warranty	27
Center channel speaker	11		
Surround speakers	11		
Subwoofer	12		
Connecting your components	13		
Connecting your speakers	13		
Left and right front speakers	13		
Surround speakers	13		
Center speaker	13		
Subwoofer	14		
Connecting your CD player, cassette deck, and optional turntable or VCR	15		
Connecting your antennas	16		
Connecting the antenna wires to the antenna jacks	16		
Using the AM indoor loop antenna (supplied) ...	16		
Using the FM indoor antenna (supplied)	16		
Using an AM outdoor antenna (optional)	17		
Using a FM outdoor antenna (optional)	17		
Connecting the system control cables	18		
Connecting other audio components	19		

Welcome

Setting up your SPECTRUM System isn't difficult, but getting your system up and running will be even easier if you follow the step-by-step directions in this manual.

Unpacking

Unpack all of the components carefully, and examine them for shipping damage. If any are damaged or fail to operate, notify your dealer immediately. If your SPECTRUM System was shipped to you directly, notify the shipping company without delay. Only the person or company who originally received the system can file a claim against the carrier for shipping damage. Keep the original carton and packing materials in case you need to transport or ship your SPECTRUM System.

Did you get everything?

Check the lists below to make sure you have everything. And before you start setting up the system, look at the list of tools and other items you need. If you're setting up other components along with your system, read the manual that came with each of those components to see what you need.

Receiver parts

- Receiver (KR-896)
- Remote Control (RC-50800)
- 2 Batteries for remote
- FM indoor antenna
- AM loop antenna
- Loop antenna stand

CD player parts

- CD Player (DP-R896)
- Audio cable
- System control cable

Cassette deck parts

- Cassette Deck (KX-W595)
- 2 Audio cables

Left and right front speaker parts

- 2 Front speakers (JL-886)
- 2 Speaker wires

Subwoofer parts

- Subwoofer (SW-30)
- 8' Audio cable

Center and Surround speaker parts

- Center speaker (CRS-123 Center)

- 2 Surround speakers (CRS-123 Surround)
- 3 Speaker wires

Rack parts

- Left panel
- Right panel
- Rack base
- Rack top
- Top back panel
- Bottom back panel
- Fixed shelf
- Removable shelf
- Glass door
- Hardware bag (see page 7 for contents of the hardware bag)

You may need to purchase

- Audio cables
- Video cables
- Speaker wire




You'll need these tools

- Screwdriver (slot and/or Phillips)


Assembling the rack

Hardware list


Before assembling your rack check to be sure that you received all of the hardware listed below.

Item	Description	Quantity
I	 Allen bolt 4 (SRC-776C) 8 (SRC-776N)	
J	 Phillips head screw (short)	12
K	 Phillips head screw (long)	4 (SRC-776C) ONLY
L	 Allen wrench	1
M	 Hinge insert	2
N	 Magnetic catch	1
O	 Wood dowel (long)	2
Q	 Wood dowel (short)	6
R	 Glue	1
S	 Shelf pin	4
T	 Upper hinge	1
U	 Lower hinge	1
V	 Catch plate	1
W	 Catch plate pad	1


Step 1

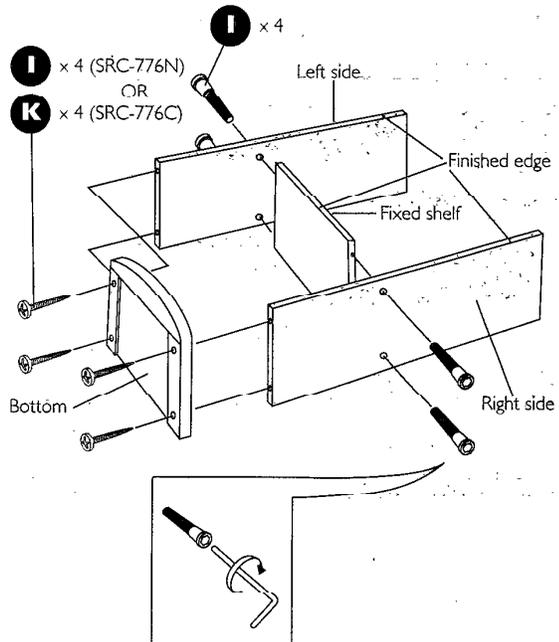


Step 2

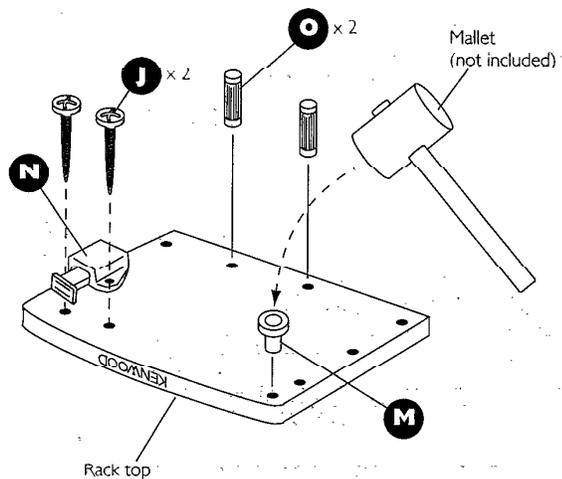

Step 3

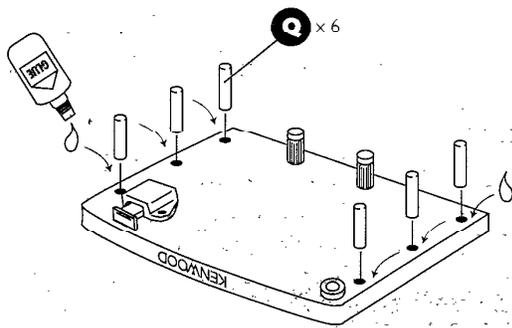

Step 4

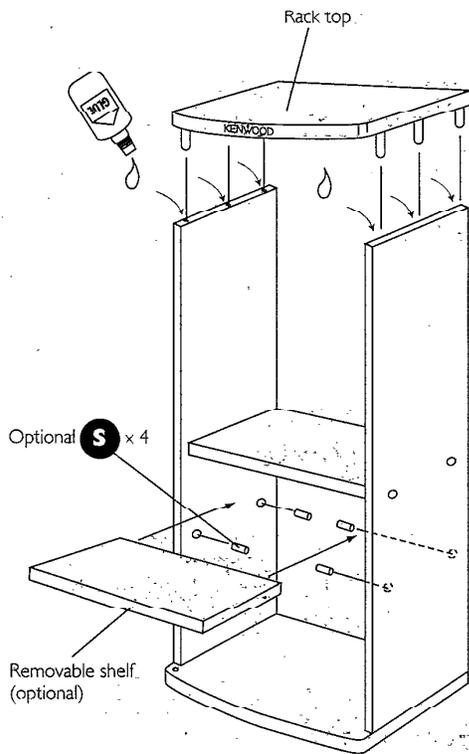


Step 5

Top of panel should be 1/2" below top edge of rack

Black surface of both back panels face toward inside of rack

J x 10

Bottom of panel should be even with bottom shelf

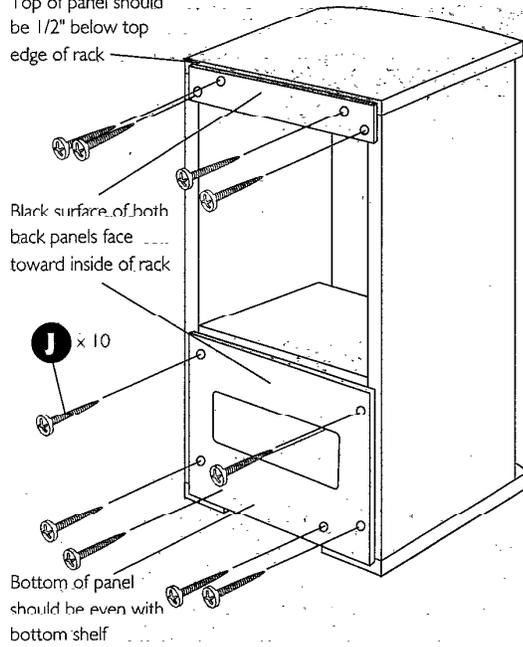


Step 6


Glass door (top)

Edge of hinge even with edge of glass


Screws face toward the inside of the rack

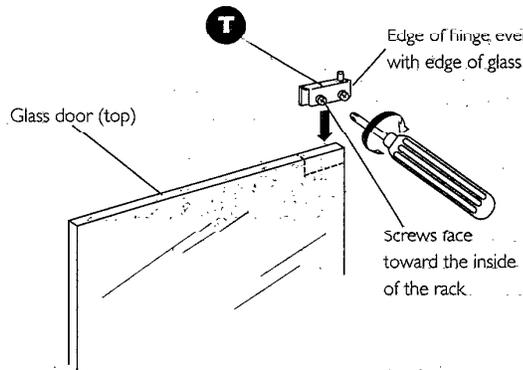


Step 7

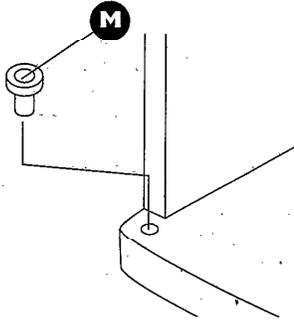

Step 8

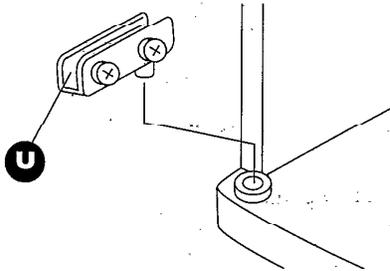

Step 9

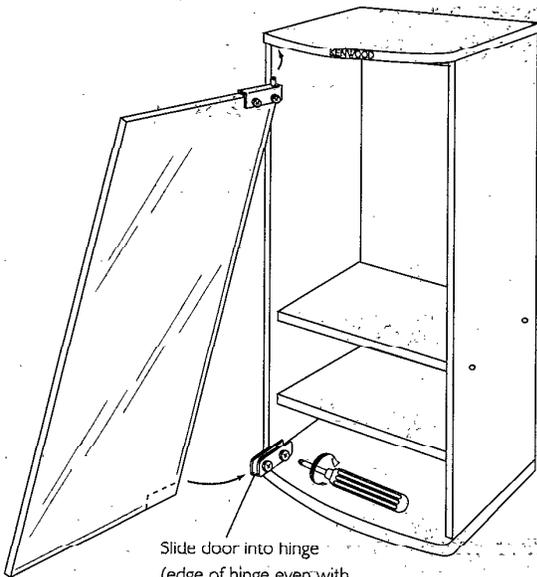


Step 10

First close the door to see where the magnetic catch contacts it.

Attach the cushion **W** to the door where the magnetic catch contacted it.

Slip the catch plate **V** over the cushion.

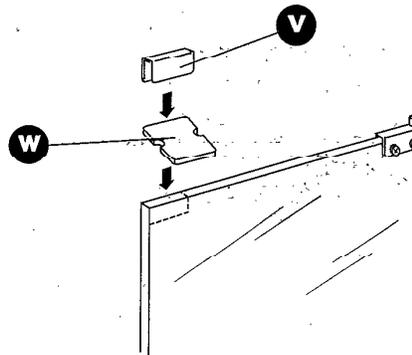

How to get replacement parts for your rack

If any of the rack parts are missing or damaged, look for the rack model number on the ID sticker on the back panel. Then, contact the appropriate company for replacement parts.

If your rack's model number is:

SRC-776C

contact:

Tocabi America
755 Otay Valley Road
Chula Vista, CA 91911
(619) 661-6136

or

SRC-776N

contact:

Kenwood
1900 Gulf Street
Lamar MO 64759
(800) 327-9782


Use the following parts list to identify missing or damaged parts:

Item	Description	Quantity	SRC-776C Part No.	SRC-776N Part No.
A	Left side panel	1	XW1096	349415-2
B	Rack bottom	1	XW1097	349414-4
C	Right side panel	1	XW1095	349416-0
D	Rack top	1	XW1094	349319-9
E	Bottom back panel	1	XW1082	433937-1
F	Fixed shelf	1	XW0900	344737-5
G	Removable shelf	1	XW0901	344738-3
H	Top back panel	1	XW0905	431295-3
J	Allen screws	8 (SRC-776N) 4 (SRC-776C)	S0035	423699-8
J	Short screws	12	S0034	414954-8
K	Long screws (SRC-776C ONLY)	4	S0025	
L	Allen wrench	1	M0018	408737-2
M	Hinge inserts	2	P0054	425226-8
N	Magnetic door catch	1	P0098	431264-3
O	Long wooden dowels	2	W0981	429169-7
Q	Short wooden dowels	6	W0092	404578-5
R	Glue	1	G0012	404589-0
S	Shelf pegs	4	M0019	424881-3
T	Top door hinge	1	M0026	425226-8
U	Bottom door hinge	1	M0027	425226-8
V	Door catch plate	1	M0011	422201-6
W	Catch plate pad	1	G0047	422201-6
X	Glass door	1	G0242	431298-8

Placing your system

Stacking your components in the rack

To make sure that they're properly ventilated and stable, stack them according to the following diagram. If you're using a turntable, place it on top of the rack.

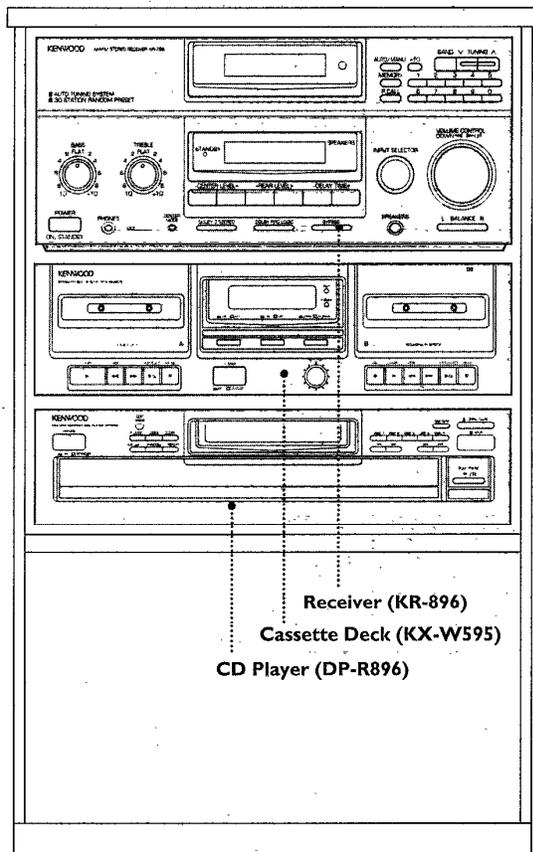

Positioning your speakers

Where do you put your speakers? Just follow the diagram. These speaker locations are excellent for many different rooms, and you can vary them to fit your particular room. Experiment with speaker locations to get the most out of your system.

The left, right, and center speakers are magnetically shielded so you can place them next to your TV without worrying about picture discoloration.

Left and right front speakers

Place the left and right front speakers on each side of your TV screen.

- For the best stereo effect, place the speakers at least 2 feet from the sides of the TV. However, keep them close enough to the screen that the sound from the speakers seems to be coming from the screen.

- To enhance the stereo effect (especially if the speakers are more than 8 feet apart), rotate each speaker slightly toward the listening area.

Center speaker


Place the center speaker above or below the middle of the TV or video screen.

- Make sure that the speaker is aimed directly toward the listeners at seated ear level. If you do place it above or below ear level, aim it toward the listeners by tilting it up or down.
- Make sure the center speaker is about the same height as the left and right speakers. Try not to place it more than 2 feet higher or lower than the left and right speakers.

Surround speakers

- Place the surround speakers directly to the sides of the listening area, pointing at the listeners.

- Mount each speaker at least 2 feet above the listeners' heads, with the back of the cabinet (the side with the speaker jack) flush against the wall. You can hang the speakers on the wall using ordinary picture hangers, or you can place them on shelves.

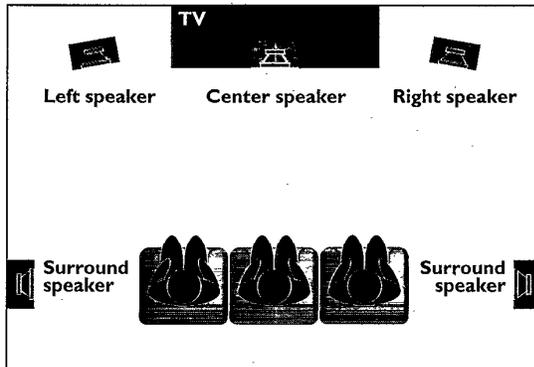

Subwoofer

A subwoofer doesn't send sound waves in a particular direction, so where you place it in the room isn't as important as where you place the other speakers. If you place the subwoofer near your TV, it may distort the picture color. If this happens, move the subwoofer away from the TV until the picture returns to normal.

For the smoothest match between the subwoofer and the front speakers, place them all in a straight line.

For deeper bass, place the subwoofer next to a wall. For the deepest bass, place the subwoofer in a corner. However, this may yield uneven bass throughout the room. Some areas may have too much bass, while other areas may not have enough.

Once you settle on a location, be sure to leave yourself some room for minor movements of a few inches to help fine-tune the sound in the seating area.

Connecting your components

Important:

Please wait until you've connected all of the cables before plugging any of the components into AC wall outlets and turning them on.

Connecting your speakers

Connect your speakers first. You'll have an easier time getting to the connections on the backs of the components before you connect all of the other cables.

1 Place the speakers in their approximate locations first, then leave a little extra speaker wire so you can fine-tune their locations.

2 Use the speaker wire supplied with the speakers. If you need longer wire, buy speaker wire that is 18-gauge or thicker. Remember, the smaller the number, the thicker the wire: 18-gauge wire is thicker than 20-gauge.

A few tips

- To save you time, we've removed the insulation from the ends of the speaker wire we supplied.
- When connecting speaker wires, be sure to connect positive connections to each other and negative connections to each other. Connecting positive to negative (+ to -) or negative to

positive (- to +) can cause poor sound quality.

- Never allow the positive and negative speaker wires to touch each other. Touching wires can cause a short circuit, which could damage your electronics.

Left and right front speakers


Connect the left and right speakers to the 'Front Speakers' jacks on the receiver.

Surround speakers


Connect the surround speakers to the 'Surround Speakers' jacks on the receiver.

Center speaker

Connect the center speaker to the 'Center Speaker' jack on the receiver.

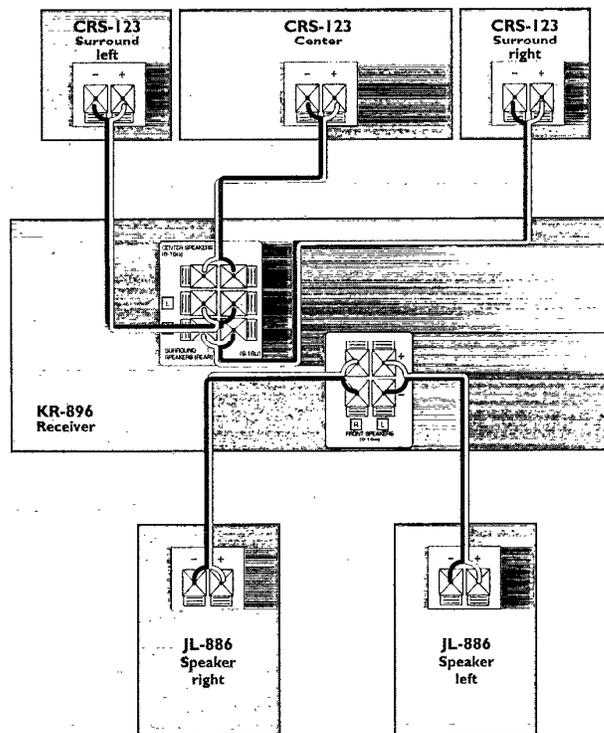

To connect the wire:

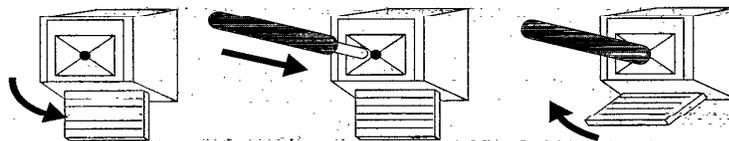

1 Unlock the lever


2 Insert the wire

3 Lock the lever

Subwoofer


Use the cable that came with the subwoofer

Connect the subwoofer to the 'Subwoofer Pre Out' jack on the receiver.
(You can connect the cable to either one of the jacks on the subwoofer.) If the supplied cable isn't long enough, buy an audio cable that is shielded.

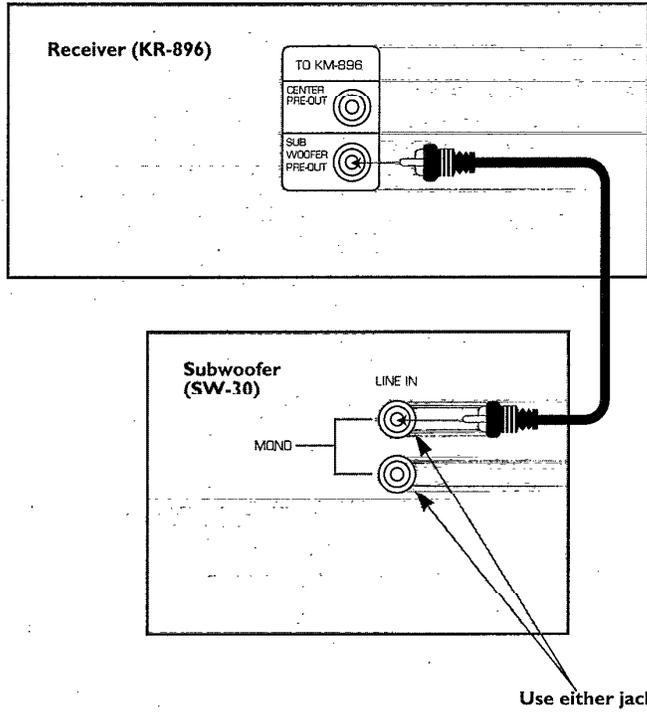

Connecting your CD player, cassette deck, and optional turntable or VCR

Use the cables that came with the audio and video components. You can connect any turntable that has a magnetic phono cartridge.

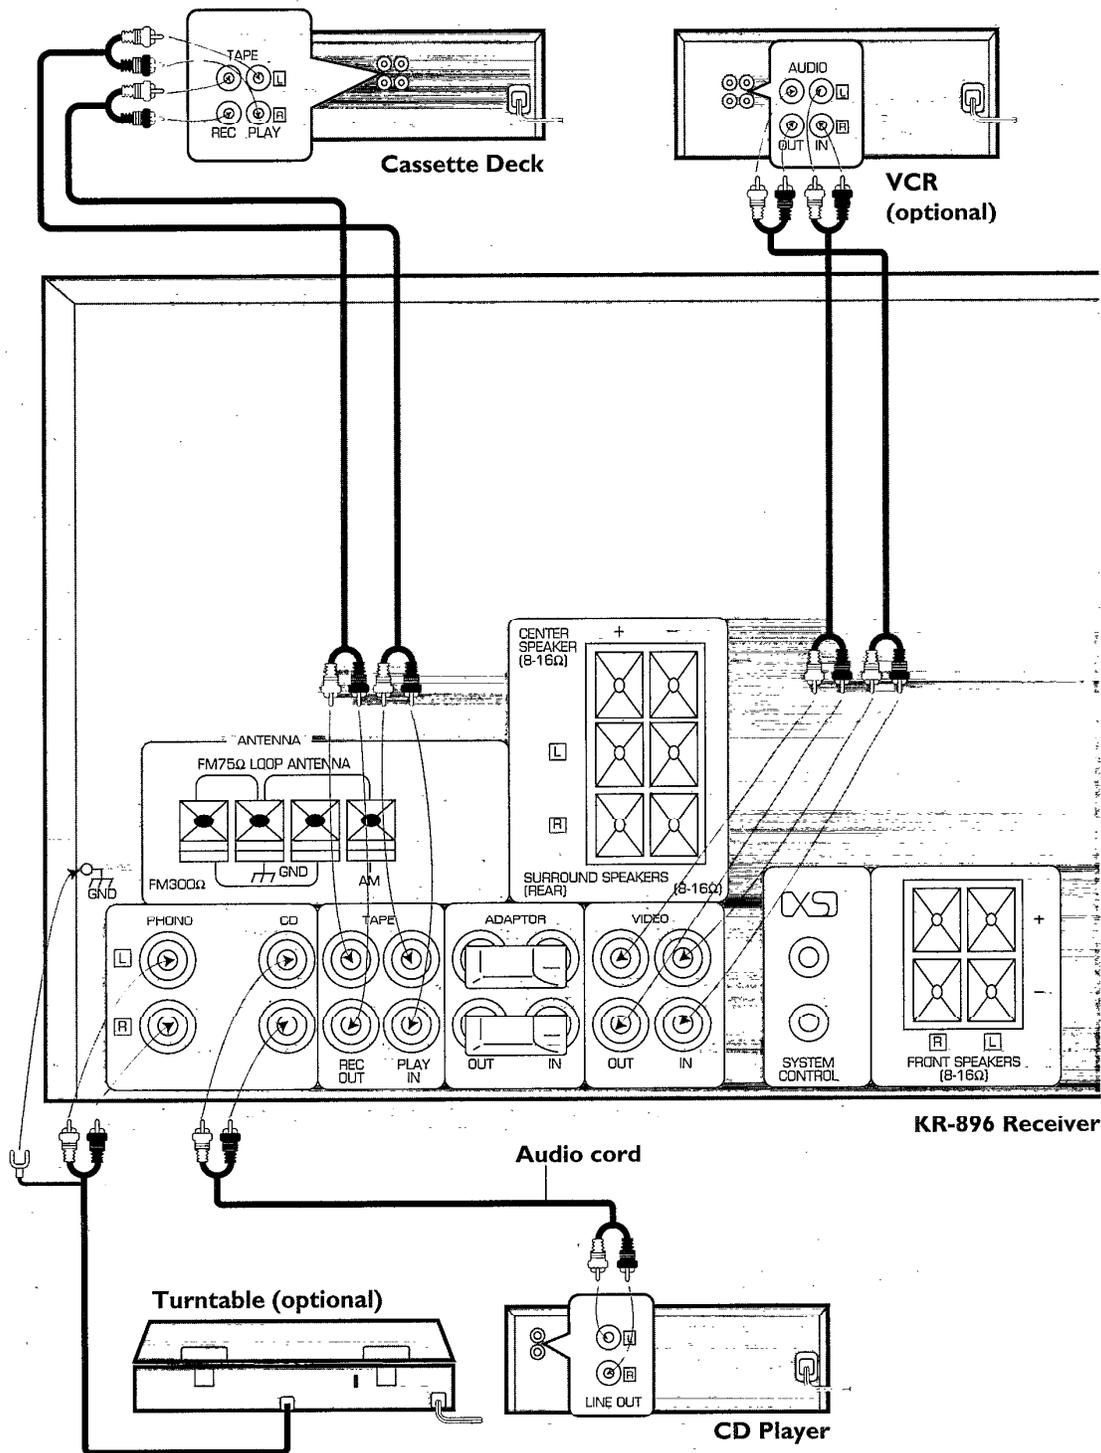


Connecting your antennas


The quality of your FM/AM reception depends on how well you place your antennas. So please follow the instructions carefully.

Connecting the antenna wires to the antenna jacks


- 1 Unlock lever



- 2 Insert wire




- 3 Lock lever



Using the AM indoor loop antenna (supplied)


Place the antenna as far away as possible from the main system, television, speaker wires and power cords.

Rotate the antenna until you get the best reception.

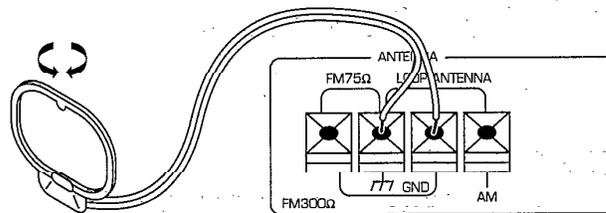

Using the FM indoor antenna (supplied)


Use this antenna until you can install an outdoor antenna. When you do, remove the indoor antenna.

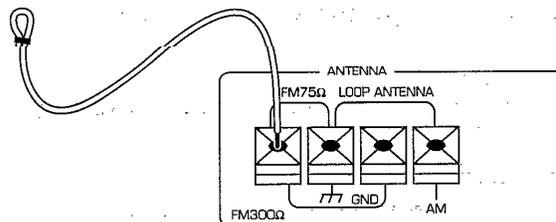

- 1 Remove the insulation from the wire tip, and twist the wire tightly to get rid of any loose strands.
- 2 Connect the end of the wire to the left-most antenna jack on the receiver.
- 3 Fully extend the antenna, and place it along a wall or bookshelf.
- 4 Adjust the antenna to find the position that provides the best reception.
- 5 Attach the looped end to the wall or bookshelf.

Using an AM outdoor antenna (optional)

If you're using the AM loop antenna, but reception is poor, run a vinyl-coated wire of more than 20 feet outdoors. Do not disconnect the loop antenna.

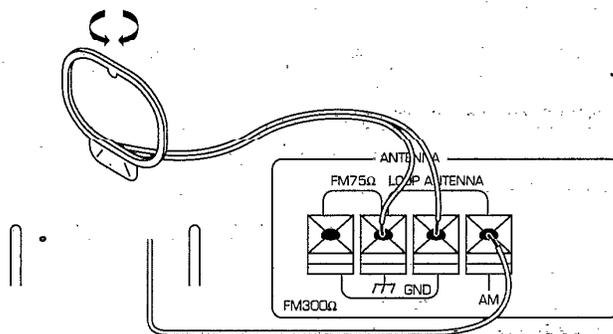


Using an FM outdoor antenna (optional)

For the best reception and sound quality, we recommend using an outdoor FM antenna. Since most outdoor antennas use either 75 ohm or 300 ohm connections, your Spectrum System's receiver provides connections for both. Contact your local electronics dealer/installer for more information.

Connecting the system control cables


Connect the system control cables as shown below. Be sure to push the plugs all the way in.

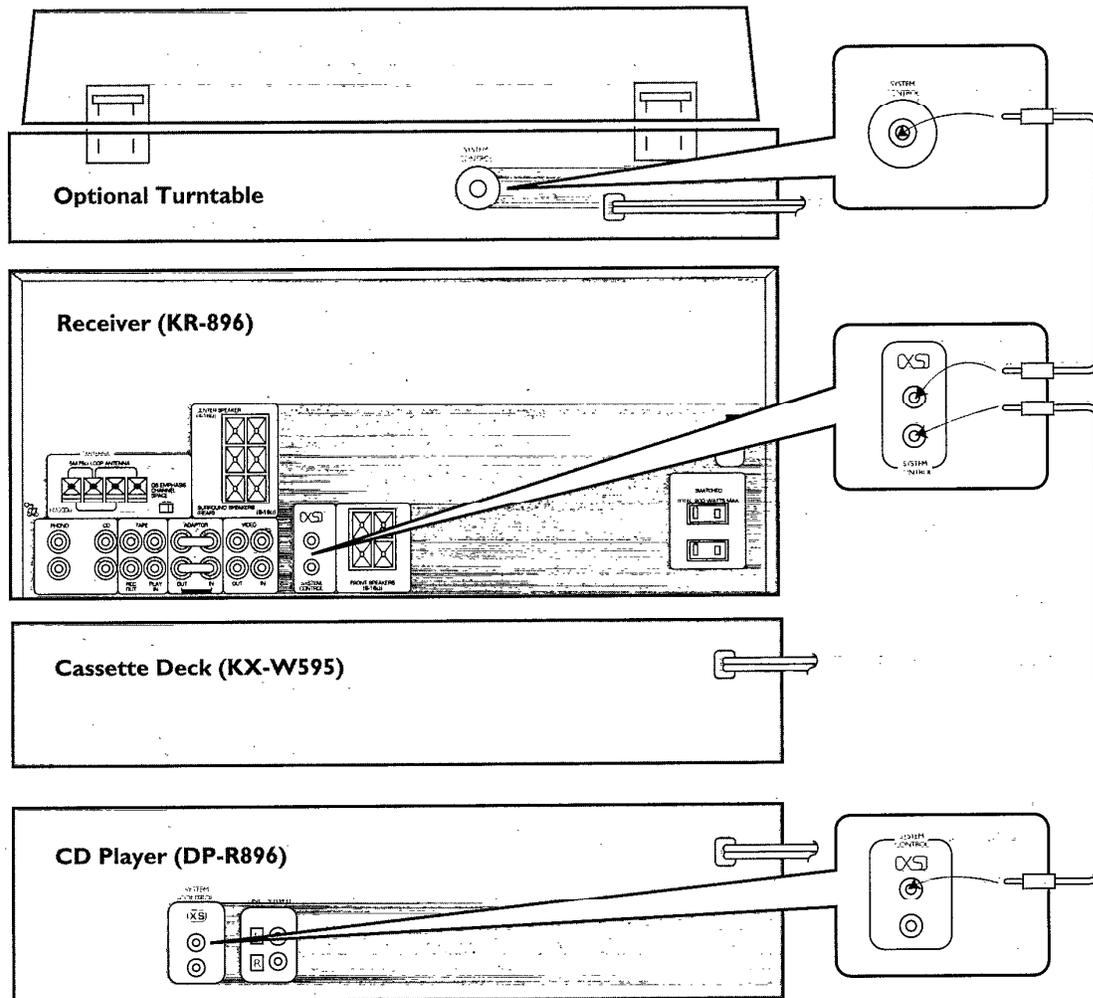

Connecting other audio components

You can connect a graphic equalizer or similar component to your SPEC-TRUM System.

Remove the shorting plugs from the 'Adapter' jacks, and connect the component to those jacks.


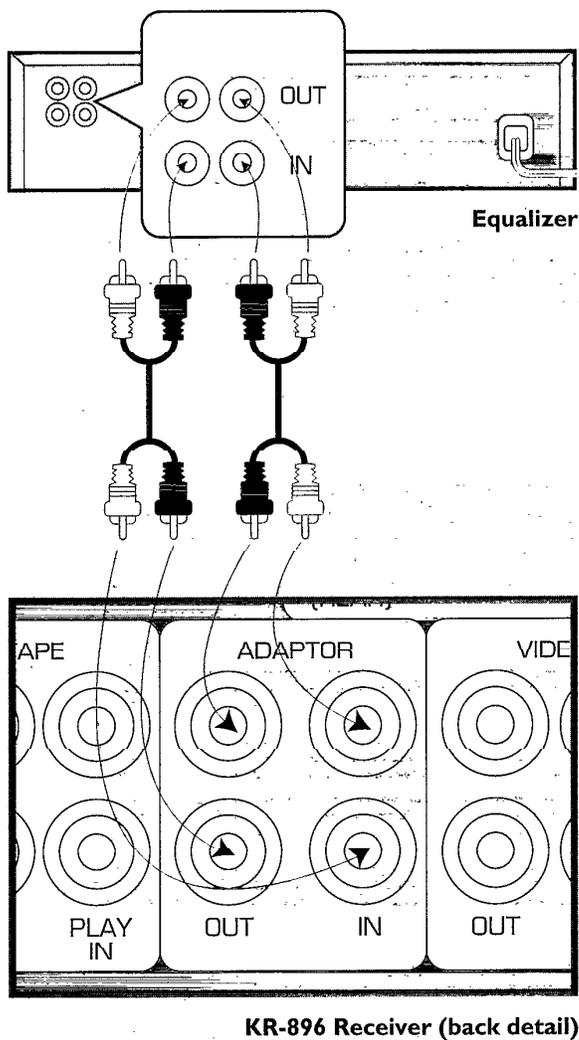


A few tips:

- Read the manual that came with the other component.
- If you're using the 'Adapter' jacks, keep the shorting plugs for future use.
- If you're not connecting another component to the 'Adapter' jacks, be sure you insert the shorting plugs properly into the jacks. Otherwise, the sound will be cut off.
- Never plug a shorting plug into jacks other than the 'Adapter' jacks. You could damage the amplifier.

Plugging in the power cords




Important: Make sure you follow these instructions carefully when you plug in the power cords. If the connections are wrong, they could cause electrical overload and fire.

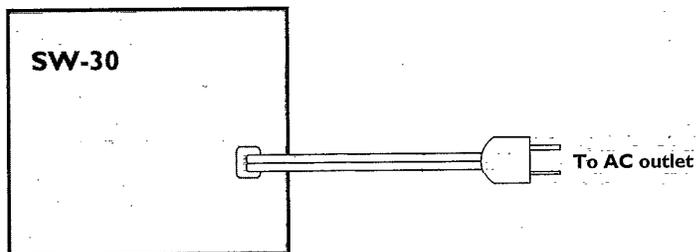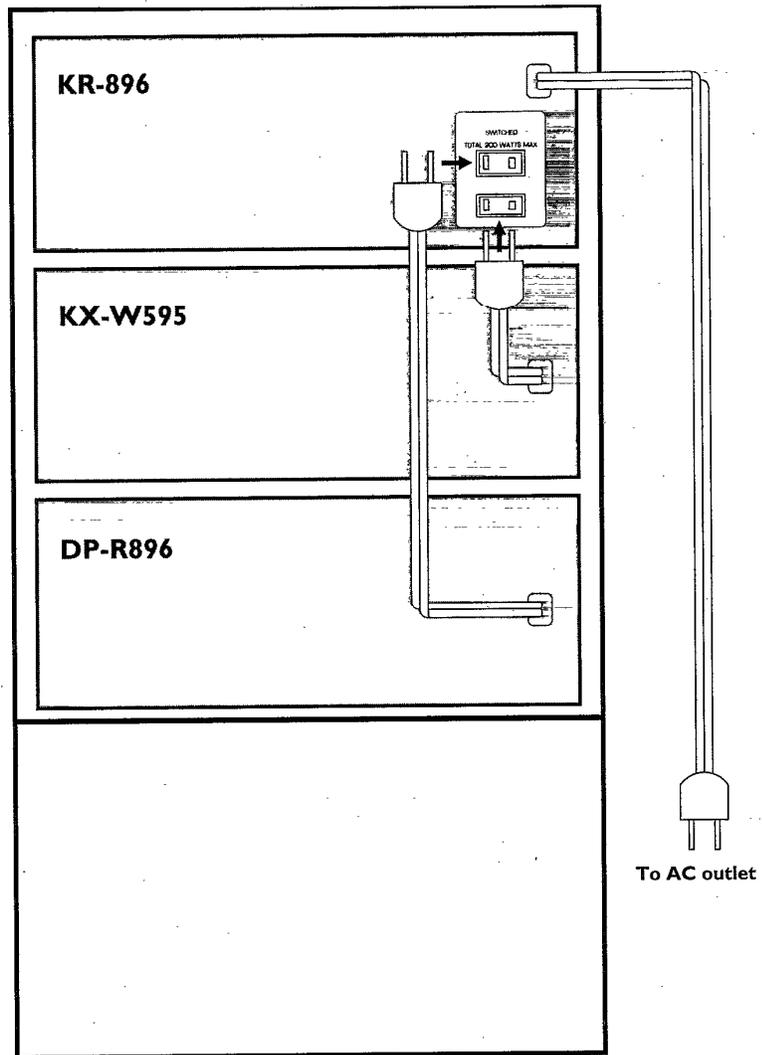


Turning ON the power

If you've connected all of the power and system control cables as we've shown, you can turn on the power to the entire system from the receiver.

- Press the power switch on the receiver (or the POWER button on the remote) to turn the entire system ON and OFF.

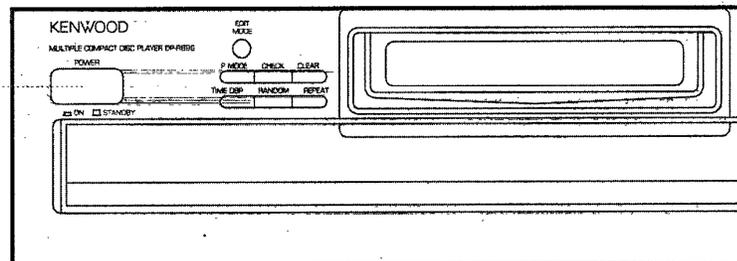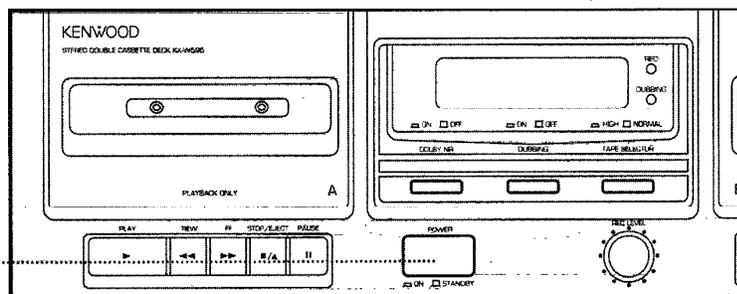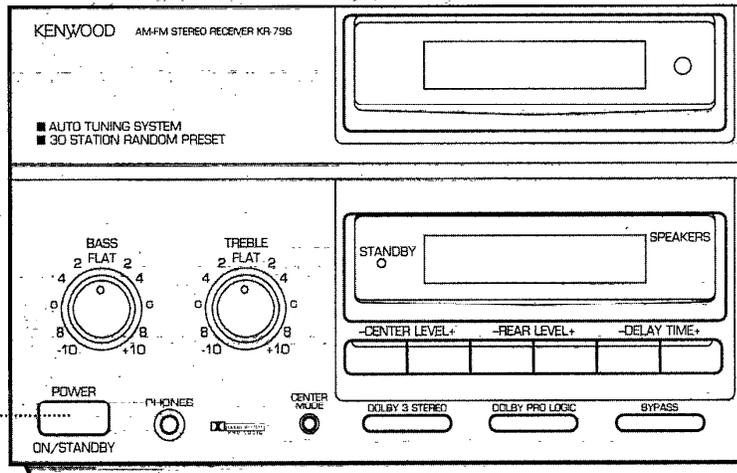

Subwoofer

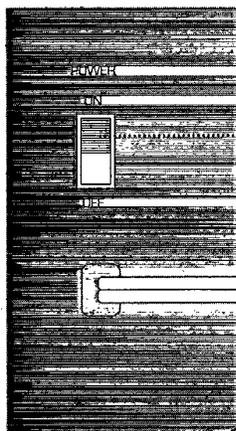

Important:


- Since the subwoofer, CD player and cassette deck have mechanical switches you must press their POWER switches when you turn the system ON for the very first time. After the first time, they will automatically turn ON and OFF with the rest of the system. (The subwoofer's auto on circuit will activate it when it receives an input signal, and it will go into standby after not receiving an input signal for 7 minutes).

Tuning the speakers

Setting the center speaker mode

To get the best performance out of your system, you need to set the center speaker mode, even if you're not using a center speaker.

- 1 Turn the power to the system ON.
 - 2 Make sure that the receiver is in either the DOLBY PRO LOGIC or DOLBY 3 STEREO mode.
 - 3 Using a pen or other pointed object, press the CENTER MODE button on the receiver's front panel. Each time you press the button, your unit cycles through the mode settings and shows them on the receiver's display.
- If you're using the center speaker that came with your system, or another small or medium-size center speaker, select 'Normal'.
 - If you're using a large center speaker, select 'Wideband'.
 - If you're not using a center speaker, select 'Phantom' (the center channel signal is sent to the left and right speakers).

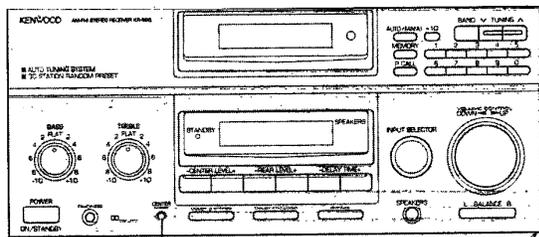

**CENTER MODE
button**

Calibrating the speaker levels

Calibrating is an important step in making sure your system sounds as good as possible. During calibration, you're balancing the sound coming from each speaker to create the right surround-sound environment.

Loading batteries into your remote

You'll use the remote to calibrate the system, so you'll need to load the batteries. You'll find the instructions for the remote in your 'Using Your Kenwood Audio/Video System' manual.

Doing the calibrating

- 1 Eliminate as many external noise sources as possible.
- 2 Turn the system's power ON.
- 3 Select DOLBY PRO LOGIC mode.
- 4 Set the volume to -20 dB. If this level is uncomfortably loud, lower the volume to -25 dB.
- 5 Press the TEST TONE button on the remote.

You'll hear test noise cycle between the channels in the following order:
LEFT>CENTER>RIGHT>SURROUND. (If the center channel is in the PHANTOM mode, it cannot be adjusted.)

- 6 Sit in the place where you and your guests are most likely to sit while watching movies or listening to music. Listen to the test noise level of each channel carefully.
- 7 If the left and right channels are not both the same volume, use the BALANCE control on the receiver's front panel to adjust them so they both play the test noise at the same volume.
- 8 Press the CENTER button on the remote to activate the center channel adjustment. Using the MULTI-

LEVEL CONTROL buttons on the remote, adjust the center channel level so that it matches the level of the left and right channels.

The test noise stops cycling and remains in the center channel while it's being adjusted.

The receiver displays the level of the center channel while it's being adjusted.


- 9 Press the REAR button on the remote to activate the surround channel adjustment. Using the MULTI-LEVEL CONTROL buttons on the remote, adjust the surround channel level so that it matches the level of the left and right channels.

The test noise stops cycling and remains in the surround channel while it's being adjusted.


The receiver displays the level of the surround channel while it's being adjusted.

- 10 When all of the channels sound like they're the same volume, you've balanced your system.

- 11 Press the TEST TONE button on the remote to turn off the test noise.

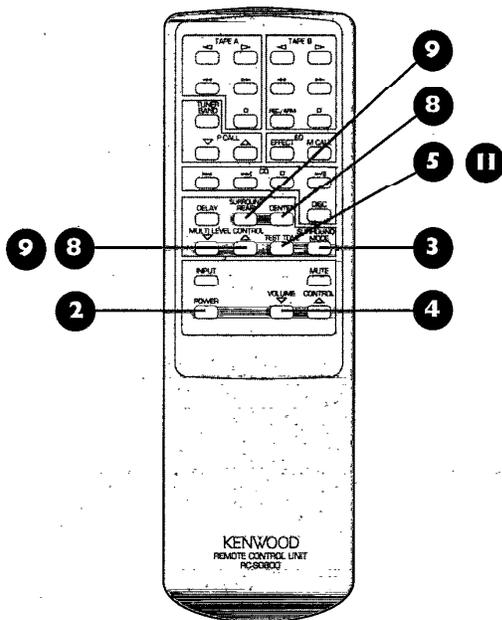

You can also make the adjustments by using the CENTER LEVEL and REAR LEVEL buttons on the receiver's front panel (but it's easier with the remote because you can sit in the listening area).

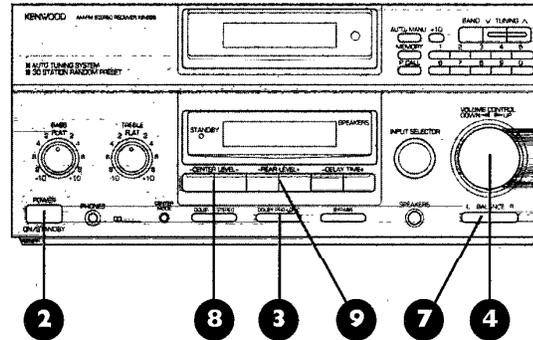


Setting the subwoofer level

The level control for the subwoofer is located on the rear panel of the subwoofer.

- 1 Select DOLBY PRO LOGIC mode.
- 2 Play video material with strong bass content that you're familiar with.
- 3 Adjust the subwoofer level so that it blends well with the other speakers.
- 4 Confirm the level by playing music with strong bass content in the BYPASS mode.

If you're using your system only for music, adjust the subwoofer in the BYPASS mode, using music.

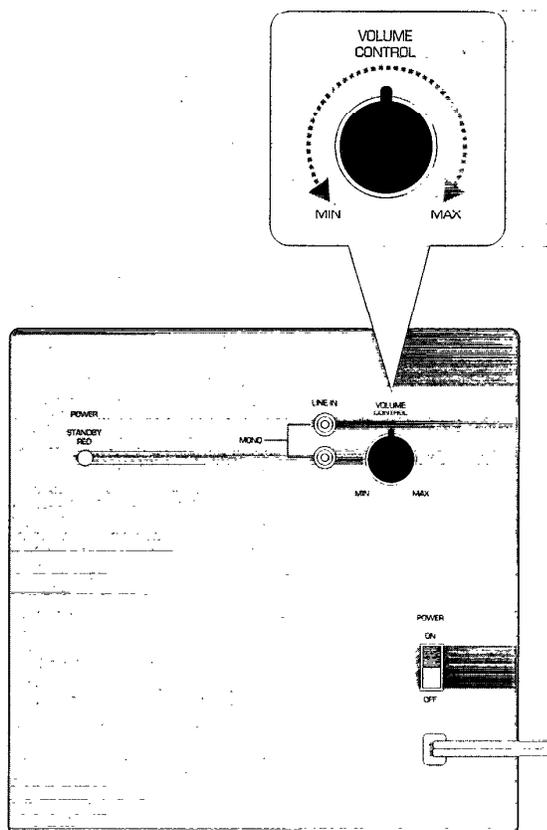

Adjusting the delay time

Setting the delay time compensates for the way our ears receive sound from different directions. When you're watching a movie, the surround speakers are typically closer to you than the front speakers. Without using delay, sound from the surround speakers would reach your ears at the wrong time compared to the front speakers—which would ruin the surround effect. Adjusting for the delay time blends the sound of the front and surround speakers. Unless you rearrange your room, you should only need to make this adjustment once.

Before you start

- 1 Measure the distance from the main seating area to the front speakers and the distance from the main seating area to the surround speakers.
- 2 Look at the point on the graph below that represents where these distances meet, and note the delay time.


Distance to surround speakers	35 ft					15	
	30 ft				15	15	
	25 ft			15	15	20	
	20 ft		15	15	20	25	
	15 ft		15	15	20	25	30
	10 ft	15	15	20	25	30	30
	5 ft	15	20	25	30	30	30
	5 ft	10 ft	15 ft	20 ft	25 ft	30 ft	
	Distance to front speakers						

Doing the adjusting


You can adjust the delay time from 15 to 30 milliseconds (ms). In the average living room, 20 ms sounds good, but you can fine-tune the delay time until the sound from the front and surround speakers blends.

- 1 Select DOLBY PRO LOGIC mode.
- 2 Press the DELAY button on the remote. The receiver will display '20ms'.
- 3 Use the MULTI-LEVEL CONTROL buttons on the remote to increase or decrease the desired delay

time shows on the amplifier's display. Each time you press the MULTI-LEVEL CONTROL buttons (up or down) you adjust the delay time 5 ms.

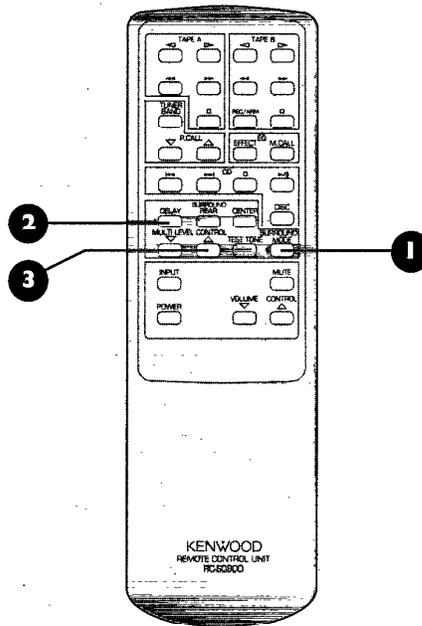

You can also make the adjustments by using the DELAY TIME buttons on the receiver's front panel.

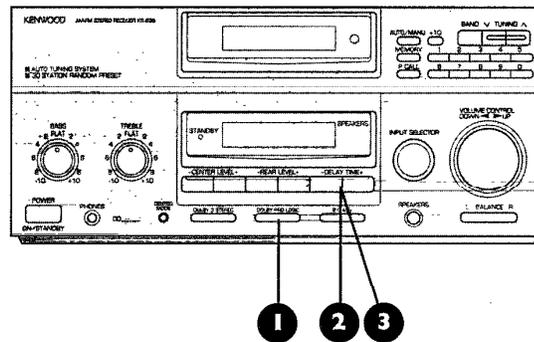



CONGRATULATIONS!

Your SPECTRUM System is ready to go! Now, look at the 'Using your Kenwood Audio/Video System' manual to operate your system. Have fun!

Warranty

Write the serial numbers (they're on the back of each unit, along with the model number) in the space below. If you need to call your dealer for information or service, you'll need the model and serial numbers. We suggest you keep your sales receipt as proof of purchase to validate your warranty coverage.

See the complete text of the warranty below. Please read it carefully.

Model number	Serial number
KR-896	
DP-R896	
KX-W595	
JL-886	
SW-30	
CRS-123 Center	
CRS-123 Surround	

Kenwood Limited Warranty

Spectrum Systems

Kenwood is proud of its audio equipment, and stands behind it. For that reason, we offer you, the owner of a new Kenwood product, the following warranty:

Warranty period: One year parts & labor

This Kenwood product is warranted for the stated period from the date of the original purchase.

Scope of warranty

Except as specified below, this warranty covers all defects in material and workmanship in Kenwood products. The following are not covered by the warranty:

- 1 Voltage and/or line frequency conversions.
- 2 Periodic check-ups which do not disclose any defects covered by the warranty.
- 3 Units on which the serial number has been defaced, modified or removed.
- 4 Damage or deterioration:
 - a Occurring to any external cabinet, including but not limited to appearance items such as knobs, speaker grill and batteries.
 - b Resulting from accident, misuse, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the owner's manual.

- c Resulting from repair or attempted repair by anyone not authorized by Kenwood.
- d Resulting from installation of parts or accessories that do not conform to the quality or specifications of the original parts or accessories.
- e Occurring during shipment (claims must be presented to the shipper)
- 5 Product purchased or serviced outside the United States and its territories, unless the product is purchased through the U.S.A. Military Exchange Service.

Who is protected

This warranty is extended only by the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

What we will pay for

We will pay all labor and material expenses for covered items. Payment of shipping charges is discussed in the next section of this warranty.

How to obtain warranty service

If your Kenwood product requires service:

- 1 Take or ship it to any Kenwood Authorized Service Center along with a complete description of the problem. If you are uncertain as to whether a Service Center is authorized, please call "1-800-KENWOOD" (1-800-536-9663) for the nearest service center in the continental U.S.A.).
- 2 Although you must pay any shipping charges if it is necessary to ship the product for warranty service, we will pay the return shipping charges if the repairs are covered by the warranty.
- 3 Whenever your units are taken or sent for warranty service, you must include a copy of the original dated sales receipt as proof of warranty coverage.

LIMITATION OF IMPLIED WARRANTIES

ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED IN THE DURATION TO THE LENGTH OF THIS WARRANTY.

EXCLUSION OF CERTAIN DAMAGES

KENWOOD'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF SAID PRODUCT, AT OUR OPTION, AND SHALL NOT INCLUDE DAMAGES OF ANY KIND, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If a problem develops during or after the Limited Warranty Period, or if you have questions regarding the operation of the product, you should contact your Kenwood Authorized Dealer or Authorized Service Center. If the problem or your question is not handled to your satisfaction, please contact our Customer Relations Department at the address below.

Kenwood Service Corporation

PO Box 22745
Long Beach, CA 90801-5745
USA

For your nearest
Kenwood Authorized Service Center, call:

1-800-536-9663
24 hours a day, 7 days a week

KENWOOD USA CORPORATION
PO Box 22745
Long Beach, California 90801-5745