



T752

Surround Sound Receiver

ENGLISH



Owner's Manual

SAFETY INFORMATION



EXPLANATION OF GRAPHICAL SYMBOLS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

PRECAUTIONS

Read the Operating Instructions carefully and completely before operating the unit. Be sure to keep the Operating Instructions for future reference. All warnings and cautions in the Operating Instructions and on the unit should be strictly followed, as well as the safety suggestions below.

INSTALLATION

- 1 Water and Moisture** - Do not use this unit near water, such as near a bathtub, washbowl, swimming pool, or the like.
- 2 Heat** - Do not use this unit near sources of heat, including heating vents, stoves, or other appliances that generate heat. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).
- 3 Mounting surface** - Place the unit on a flat, even surface.
- 4 Ventilation** - The unit should be situated with adequate space around it so that proper ventilation is assured. allow 10 cm (4 in.) clearance from the rear and the top of the unit, and 5 cm (2 in.) from each side. - Do not place on a bed, rug, or similar surface that may block the ventilation openings. - Do not install the unit in a bookcase cabinet, or airtight rack where ventilation may be impeded.
- 5 Objects and liquid entry** - Take care that objects or liquids do not get inside the unit through the ventilation openings.
- 6 Carts and stands** - When placed or mounted on a stand or cart, the unit should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart to overturn or fall.
- 7 Wall or ceiling mounting** - The unit should not be mounted on a wall or ceiling, unless specified in the Operating Instructions.



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRONIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE



This product is manufactured to comply with the radio interference requirements of EEC DIRECTIVE 92/31/EC and 93/68/EEC

ELECTRIC POWER

- 1 Power Sources** - Connect this unit only to power sources specified in the Operating Instructions, and as marked on the unit.
- 2 Polarization** - As a safety feature, some units are equipped with polarized AC power plugs which can only be inserted one way into a power outlet. If it is difficult or impossible to insert the AC power plug into an outlet, turn the plug over and try again. If it still does not easily insert into the outlet, please call a qualified service technician to service or replace the outlet. To avoid defeating the safety feature of the polarized plug, do not force it into a power outlet.
- 3 AC power cord** - When disconnecting the AC power cord, pull it out by the AC power plug. Do not pull the cord itself.
 - Never handle the AC power plug with wet hands, as this could result in fire or shock.
 - Power cords should be routed to avoid being severely bent, pinched, or walked upon. Pay particular attention to the cord from the unit to the power socket.
 - Avoid overloading AC outlets and extension cords beyond their capacity, as this could result in fire or shock.
- 4 Extension cord** - To help prevent electric shock, do not use a polarized AC power plug with an extension cord, receptacle, or other outlet unless the polarized plug can be completely inserted to prevent exposure of the blades of the plug.
- 5 When not in use** - Unplug the AC power cord from the AC outlet if the unit will not be used for several months or more. When the cord is plugged in, a small amount of current continues to flow to the unit, even when the power is turned off.

CAUTION

Modifications or adjustments to this product, which are not expressly approved by the manufacturer, may void the user's right or authority to operate this product.

MAINTENANCE

Clean the unit only as recommended in the Operating Instructions.

DAMAGE REQUIRING SERVICE

Have the unit serviced by a qualified service technician if

- The AC power plug has been damaged.
- Foreign objects or liquid have gotten inside the unit.
- The unit has been exposed to rain or water - The unit does not seem to operate normally.
- The unit exhibits a marked change in performance.
- The unit has been dropped, or the cabinet has been damaged

DO NOT ATTEMPT TO SERVICE THE UNIT YOURSELF**OWNER'S RECORD**

For your convenience, record the model number and serial number (you will find them on the rear of your set) in the space provided below. Please refer to them when you contact your dealer in case of difficulty.

Model No. :

Serial No. :

TABLE OF CONTENTS	
Safety Information	2-3
Getting the Most from the NAD T 752	5
Unpacking and Setup	6
What's in the Box	6
Save the packaging	6
Choosing a Location	6
About the T 752	7
E.A.R.S., Matrix, and Digital Surround	7
Ease of Use	7
Integration	7
Upgradability	8
About the HTR 2 System Remote Control	8
Quickstart	9
Play a DVD Movie	9
Front Panel	10-11
Rear Panel	12-13
Attention!	12
Setting up the T 752	14
Getting Started	14
Dealing With Hum and Noise	14
About the On-Screen Displays (OSD) and Front-Panel Readout	15
Displaying the OSD	15
Navigating the OSD and Making Changes	15
Input Setup	15
Input Settings	15
Speaker Setup	16
Speaker Settings	16
Listening Mode	16
Channel-Balance (Test) Setup	16
Using an SPL Meter	16
Setting Channel Balance	16
Speaker Distance	17
Setting Speaker Distance	17
Creating and Using Presets	17
Creating Presets	17
Recalling Presets	17
Using the T 752	18
Selecting Sources	18
Adjusting the Volume	18
Muting the Sound	18
Listening to Radio	18
About Antennas	19
Selecting the Radio	19
Tuning Stations	19
Setting Radio Presets	19
Selecting Radio Presets	19
Choosing the FM Mute/ Mode	19
About RDS	19
About the T 752's Listening Modes	20
Displaying the Signal Mode	21
Selecting Listening Modes	21
Adjusting Listening Modes	22
Adjusting Channel Levels "On the Fly"	22
To Adjust Channel Levels	22
Adjusting the Tone Controls	22
Using the HTR 2 Remote Control	23
Specifications	23
Controlling the T 752	23
Learning Codes From Other Remotes	23
Punch-Through	23
Copy a Command From Another Key	24
Macro Commands	24
Recording Macros	24
Executing Macros	24
Key-Illumination Timeout	25
Factory Reset	25
Delete Mode	25
Loading Code-Libraries	25
Summary of HTR 2 Modes	26
Trigger Setup	26
Assigning the Trigger Output	26
Troubleshooting	27
Specifications	28

Thank you for choosing NAD.

The T 752 A/V Surround Sound Receiver is a technologically advanced and highly capable product — yet we have invested great effort in making it simple and easy to use. The T 752 delivers a range of genuinely useful options for surround sound and stereo listening alike, using powerful digital signal processing and superbly accurate digital-audio circuitry. However, we have also been careful to ensure that the receiver is as musically transparent and spatially accurate as possible, incorporating much of what we've learned from a quarter-century's experience designing audio and home-theater components. As with all our products, NAD's "Music First" design philosophy guided the T 752's design, such that it can confidently promise you both state-of-the-art surround home-theater and audiophile-quality music listening for years to come.

We encourage you to take a few minutes now to read right through this manual. Investing a little time here at the outset might save you a good deal of time later, and is by far the best way to ensure that you make the most of your investment in the NAD T 752, and get the most from this powerful and flexible home-theater component.

One more thing: We urge you to register your T 752 ownership on the NAD Worldwide Web site:

< <http://NADelectronics.com/w/Registration.html> >

For warranty information contact your local distributor.

WHAT'S IN THE BOX

Packed with your T 752 receiver you will find:

- An AM loop antenna
- A FM ribbon-wire antenna with balun
- A removable AC cable (if you wish, any IEC-standard AC cable of suitable wattage may be substituted).
- The HTR 2 remote control with 4 (four) AAA batteries.
- This owner's manual.

Save the packaging

Please save the box and all of the packaging in which your T 752 arrived. Should you move or otherwise need to transport your receiver, this is by far the safest container in which to do so. We've seen too many otherwise perfect components damaged in transit for lack of a proper shipping carton, so please: Save that box!

CHOOSING A LOCATION

Choose a location that is well ventilated (with at least several inches to both sides and behind), and that will provide a clear line of sight, within 25 feet/8 meters, between the receiver's front panel and your primary listening/viewing position—this will ensure reliable infrared remote control communications. The T 752 generates a modest amount of heat, but nothing that should trouble adjacent components. It is perfectly possible to stack the T 752 atop other components, but the reverse usually should be avoided. Nonetheless, it is generally preferable that the T 752 stand alone. It is especially important that sufficient ventilation be provided; if you are contemplating locating the T 752 within a cabinet or other furniture, consult your NAD audio/video specialist for advice on providing adequate airflow.

Though the T 752 is among the most technically sophisticated A/V receivers, we worked hard to make it one of the most musically transparent home-theater components available as well; this is what we mean by NAD's "Music First" design philosophy. Here are just a few examples:

- The T 752 uses NAD's proprietary Power Drive™ amplifier technology for all channels to preserve accurate, linear reproduction regardless of the loudspeaker. This uniquely efficient power-supply topology provides the real-world benefits of high dynamic power that remains uncompromised by low-impedance speakers. The result is dynamic, detailed, "un-receiver-like" sound in stereo and multichannel modes alike. NAD's exclusive Soft Clipping™ circuitry further enhances sound quality and dynamic potential.
- High-performance components used throughout the receiver's analog audio circuits maximize quality from all sources, including multichannel analog sources such as DVD-Audio and SACD.
- Preamp output (all channels) and main-amp input jacks (for front channels) make potential expansion as flexible as possible.
- Gold-surfaced connectors are employed throughout to ensure maximum signal integrity.

E.A.R.S., MATRIX AND DIGITAL SURROUND

A key element of the T 752's unique musical aptitude is NAD's proprietary Enhanced Ambience Recovery System (EARS). In sharp contrast to many "ambience-synthesis" music-surround modes, EARS exploits the T 752's substantial DSP power to route the ambient content that is "encrypted" in virtually all natural-acoustic recordings to the appropriate main, center and surround speakers, *without resorting to artificially generated reflections or regeneration*. EARS' natural ambience yields a subtle but exceptionally effective surround mode that naturally enhances the spatial presentation in a fashion suitable for serious music listening. The T 752 also incorporates a second proprietary surround mode, Matrix 7.1. This creates a full 6.1/7.1-channel environment from stereo and surround-encoded recordings, oftentimes with extraordinarily good results. Dolby ProLogic II Music and DTS Neo:6 Music modes can also create enjoyable experience from 2-channel sources.

On the digital side, the T 752 combines extraordinarily high-speed DSP processing employing one of the most advanced high-speed DSP "engines" available, with fully 24-bit, 96 kHz-sampling-capable D/A converters for all channels. A single, high-precision master clock synchronizes all digital circuits to eliminate the timing errors ("jitter") that otherwise compromise sonics. The result is legitimately state-of-the-art surround decoding from Dolby Digital and DTS sources, and 6.1/7.1-channel reproduction, with genuinely superior sound quality in all modes.

EASE OF USE

Despite the effort NAD has invested in the T 752 receiver's sonic performance, we expended no less in making it powerfully easy to use. Its design is uniquely simple for so sophisticated a component, and the HTR 2 universal remote control is equally understandable, as are the T 752's own front-panel and on-screen displays. Its simple yet powerful system of "presets" permits you to fine-tune your listening setup for different conditions, sources, or listeners, and to recall these multiple parameters with a single keypress.

INTEGRATION

The T 752 receiver offers extensive, flexible system-integration options through its configurable DC trigger outputs and input, and its standard-protocol IR communications links.

UPGRADABILITY

The T 752 receiver permits flexible system growth via individually accessible pre-out and main-in jacks for all three front channels, enabling external amplifiers to be used for any of these while still maintaining utility of the receiver's on-board power-amplifier channels for additional channels, remote-room links, or any other suitable purpose. Of course, the T 752's Surround Back channel outputs let a system grow from 5.1 to 6.1 or 7.1 channels, simply by adding a 1- or 2-channel external amplifier. See "Rear Panel (Audio Pre-Out)," below.

ABOUT THE HTR 2 SYSTEM REMOTE CONTROL

Packed with your T 752 is the NAD HTR 2 remote control, a full-system remote especially designed to be easy to use and easy to understand. Be sure to read the section "Using the HTR 2 Remote Control," below, to familiarize yourself with the remote's layout and operations before proceeding to setup your receiver.

Chances are, you will want to use your HTR 2 as your primary way to command your entire A-V system. The HTR 2 can be employed to operate additional NAD or other-brand components such as a DVD/CD player, television, satellite/HDTV tuner, VCR, or virtually anything else that operates via standard infrared remote control.


In case you simply cannot wait to experience the performance of your new NAD T 752 receiver, we provide the following "Quickstart" instructions to get you underway. The steps below connect your DVD player to the T 752's DVD input; be sure to read "Input Setup", below.

PLAY A DVD MOVIE

- Connect the T 752's composite video or S-Video MONITOR OUT jack to your TV/monitor's corresponding input.
- Connect your DVD player's composite video or S-Video output to the T 752's corresponding DVD input.
- Connect the DVD player's optical digital output to the T 752's optical DIGITAL IN 1 input.
- Connect your left and right front speakers to the T 752's FRONT L and R outputs, being sure to connect red to red (" + ") and black to black (" - "), with care to avoid stray wires or strands crossing between terminals. (Connect center and surround speakers as well, if you like). If your system includes a powered subwoofer, connect the T 752's AUDIO PRE-OUT SW1 jack to its line input.
- Press in the main power switch (green pushbutton) on the T 752's front panel (this puts the T 752 into STANDBY mode and illuminates an amber LED to indicate it is ready to receive remote commands), then use the HTR 2's [ON] key to power up the receiver. Be sure the TV/monitor is powered up, with the correct input selected.
- Start playback of the DVD player. Press the HTR 2 remote's [Amp] Device Selector key, and then its (red) DVD/numeric 1 key to select the DVD input. You should hear multichannel or stereo sound, and see an image on the TV/monitor. (If one or the other fails to appear, you may need to use the receiver's on-screen menu system to check assignment of audio, video, and digital inputs; see "Configuring the T 752", below.)

Enjoy the movie or music, but be sure to set aside time to read this manual thoroughly, and to set up, calibrate, and configure your T 752 carefully and completely.

FRONT PANEL

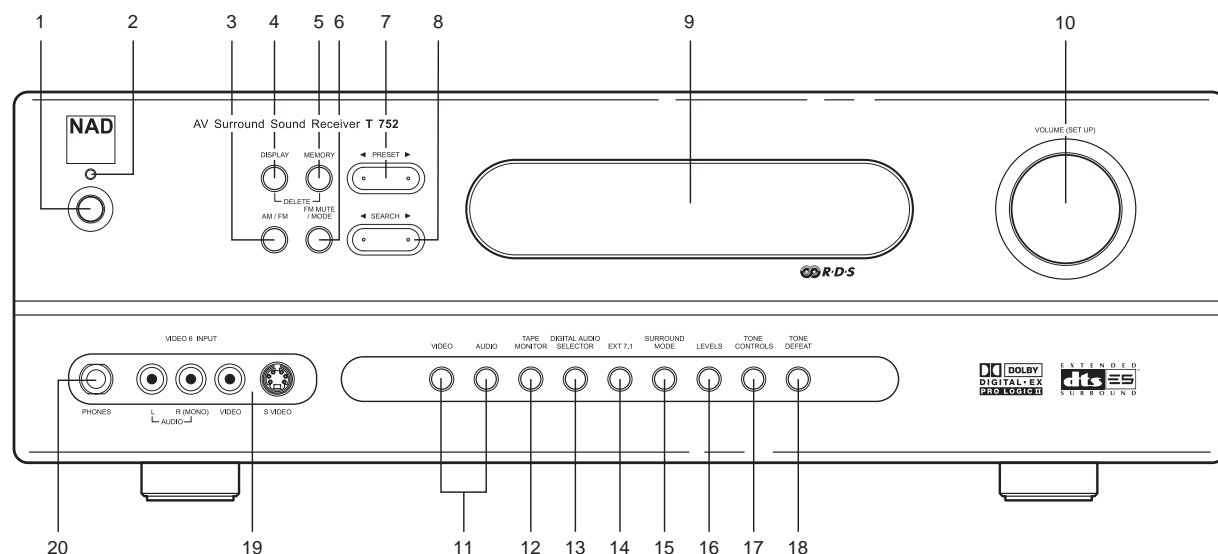

- 1 **POWER:** Press in to switch the receiver to Standby; the amber indicator (2) above the power button will light, but the main VFL display remains dark, and very little power is consumed. Pressing any other front-panel key, or the HTR 2 remote's [ON] button, will switch the receiver on, making it operational, changing the amber Standby indicator to green and illuminating the VFL display. Pressing any front panel button (other than the [POWER] button) will also switch the receiver on. Press the remote's [OFF] button to return to Standby. Pressing POWER again turns the unit OFF completely, recommended if you do not plan to use your receiver for an extended period of time. It is usual (and perfectly acceptable) to leave the T 752 in Standby mode in between normal viewing and listening sessions.

Note that when you do choose to switch off from Standby using the front panel Power button, the T 752's memory back-up system will store channel level, tuner preset, and other settings for several weeks while the unit is switched off, or even unplugged from AC power altogether.

- 2 **STANDBY:** Illuminates amber when the T 752 is in Standby mode; green when it is powered on; and flashes momentarily to indicate infrared commands received from the HTR 2 remote. Protection Mode is indicated by a red illumination, and indicates that there is a problem with your set-up or the unit itself. When the fault is removed, normal operation can be resumed (this may require turning the unit off and on again). This indicator will be steadily dark only when POWER is switched off (or the receiver is unplugged from the AC supply).
- 3 **AM/FM:** Press to toggle between the tuner's AM and FM bands.
- 4 **DISPLAY:** Press to display the channel mode of the currently selected source (other than the internal AM/FM tuner), in the format "front/rear/LFE." For example, a Dolby Digital or DTS 5.1-channel source will display 3/2.1. Note that the display shows signal channels, not speakers; for example, a 2-channel analog or digital source (whether stereo or surround-encoded) will show 2/0.0, even though the receiver's <Speaker Settings> may indeed be set up to use the subwoofer with all sources, and the current Listening Mode may employ center and surround speakers.

When the AM/FM tuner is the selected input, sequentially pressing DISPLAY shows the currently tuned station's RDS data, toggling between the current station's Radio Text and Station Name displays (see Listening to Radio, below).

- 5 **MEMORY:** Use to store tuned stations to the T 752's 40 preset-memory locations. (See "Listening to Radio," below.)
- 6 **FM MUTE/MODE:** In the normal Mute position, only the stations with a strong signal can be listened to, and the noise between stations is muted. Pressing the [FM Mute/Mode] button allows distant (and potentially noisy) stations to be received. (See "Listening to Radio," below.)
- 7 **PRESET <>:** Press to step up or down between radio presets; 30 FM and 10 AM station presets are available. Note that this function "wraps": Pressing > will step from Preset 30 to Preset 1, or vice versa using the < key. "Unused" presets are skipped over. (Note that Presets must previously have been stored; see "Listening to Radio," below.)
- 8 **SEARCH <>:** Press momentarily to step up or down between FM or AM frequencies. Press and hold SEARCH <> for more than 2 seconds to search up or down; the T 752's tuner will stop at the next sufficiently strong signal it encounters. Note that this function, too, "wraps," and will continue searching up or down from one end of the AM or FM band to the other.

Note that: SEARCH <> tunes the FM band by 0.05 MHz steps (twice the precision of most tuners and receivers). On the AM band, SEARCH <> moves by 10 kHz or 9 kHz steps. To change the step amount, hold in the FM MUTE/MODE and AM/FM keys simultaneously.

- 9 **VFL DISPLAY:** The Vacuum Fluorescent Display provides visual information on all of the T 752's important modes, settings, and functions.
- 10 **VOLUME (SETUP):** Turn clockwise to increase the master-volume setting; counterclockwise to lower it. The VFL and on-screen displays show the setting, displayed in decibels between -60 and +18.

The **VOLUME(SETUP)** knob is also used to increment/decrement individual channel levels and other adjustable parameters.

- 11 VIDEO:** Use to select a video input along with its assigned audio and digital inputs (see "Input Setup," below). Press repeatedly to step through the T 752's Video inputs.

AUDIO: Use to select analog audio input independently of video input. Press repeatedly to step through the T 752's audio inputs. See "Input Setup," below.

- 12 TAPE MONITOR:** Press to engage the Tape Monitor loop. The signal present at the rear-panel TAPE MONITOR IN jacks will be heard. Press again to release and return to the previously selected input.

NOTE: Selecting any other input selection while Tape Monitor is engaged automatically releases it.

- 13 DIGITAL AUDIO SELECTOR:** Use to select digital audio input independently of video input to cycle through the T 752's 6 digital audio inputs (OPT 1-2; Coaxial 3-6). Press repeatedly to step through the T 752's digital audio inputs. The digital inputs are shown collectively as Digital 1-6 in the VFL display's small corner readout. Any digital input can be assigned to any video input (DVD, SAT, VCR, VIDEO 4-6). The chart below shows the default assignments; see "Input Setup," below.

Digital Input Jack	Default Assignment
OPT 1	DVD
OPT 2	SAT
Coax 3	VCR
Coax 4	VIDEO 4
Coax 5	VIDEO 5
Coax 6	VIDEO 6

NOTE: Digital inputs take precedence: The T 752 will automatically play any active signal present at the selected digital input; if none is present, it will "fall back" to the analog audio input assigned to that Video input. Digital inputs can be selected OFF to listen to the analog input of a source with an assigned digital input.

NOTE: Changing the digital audio input via the Digital Audio Selector is a temporary setting that will be lost when the input is changed or the receiver is cycled through Standby or OFF. (See the section "Input Setup" below to reassign digital inputs to video or audio inputs.)

- 14 EXT 7.1:** Press to listen to the component connected to the T 752's 7.1 CH. INPUT jacks (typically, a DVD-Audio or SACD-Multichannel player). Press again to return to the input that was previously selected. The HTR 2 remote's [Ext. 7.1/5.1] key (*10+*) works similarly.

- 15 SURROUND MODE:** Use to select the T 752's Listening Mode. Press repeatedly to step through the T 752's Listening Modes. See "About the T 752's Listening Modes," below.

NOTE: Depending on the format of the currently selected input (digital or analog; stereo or multichannel), different modes will be available. See "About the T 752's Listening Modes," below.

- 16 LEVELS:** Press repeatedly to select the channel, and then use the VOLUME(SETUP) knob to adjust the levels of the T 752's 7 channels/pairs in turn: front-left, -center, -right; surround; surround back; subwoofer. The selected channel appears on the VFL and on-screen displays; use the VOLUME(SETUP) knob to adjust its level relative to the others over a range of ± 12 dB. Channel levels may also be adjusted via the on-screen menus; see "Adjusting Channel Levels," below.

NOTE: The HTR 2 remote's [Surr.], [Center], and [Sub] $\blacktriangle/\blacktriangledown$ keys provide direct access to those channels' relative levels, however in this case the level changes are only temporary and are not saved in memory.

- 17 TONE CONTROLS:** Press to adjust treble using the VOLUME(SETUP) knob over a ± 12 dB range; press again to adjust bass, and a third time to exit tone-control adjustment.

- 18 TONE DEFEAT:** Press to disable the tone controls; press again to re-enable them (for instance, to compare a tone setting to unmodified sound).

NOTE: While TONE DEFEAT is engaged, the TONE CONTROLS key will have no effect.


- 19 VIDEO 6 INPUT:** Use these convenience jacks for occasional sources, such as a camcorder, portable MP3 or tape player, or a videogame console, or any other analog audio, or composite or S-Video video source. Select the Video 6 input using the HTR 2 remote, or the front-panel VIDEO key.

- 20 PHONES:** Accepts stereo headphone using a standard 1/4-inch stereo phone plug (use a suitable adapter for headphones equipped with a smaller plug); set the Listening Mode to "Stereo." Plugging in headphones automatically mutes output from all channels' speaker and pre-out jacks (but not from the record-out jacks of TAPE, VCR, or VIDEO 4).

NOTE: For headphone listening the front left/right speakers must be set to "Large" on the OSD's Speaker Settings page, otherwise headphone bass response will be restricted.

NOTE: Plugging in headphones will automatically switch the T752 to "Stereo" mode.

REAR PANEL

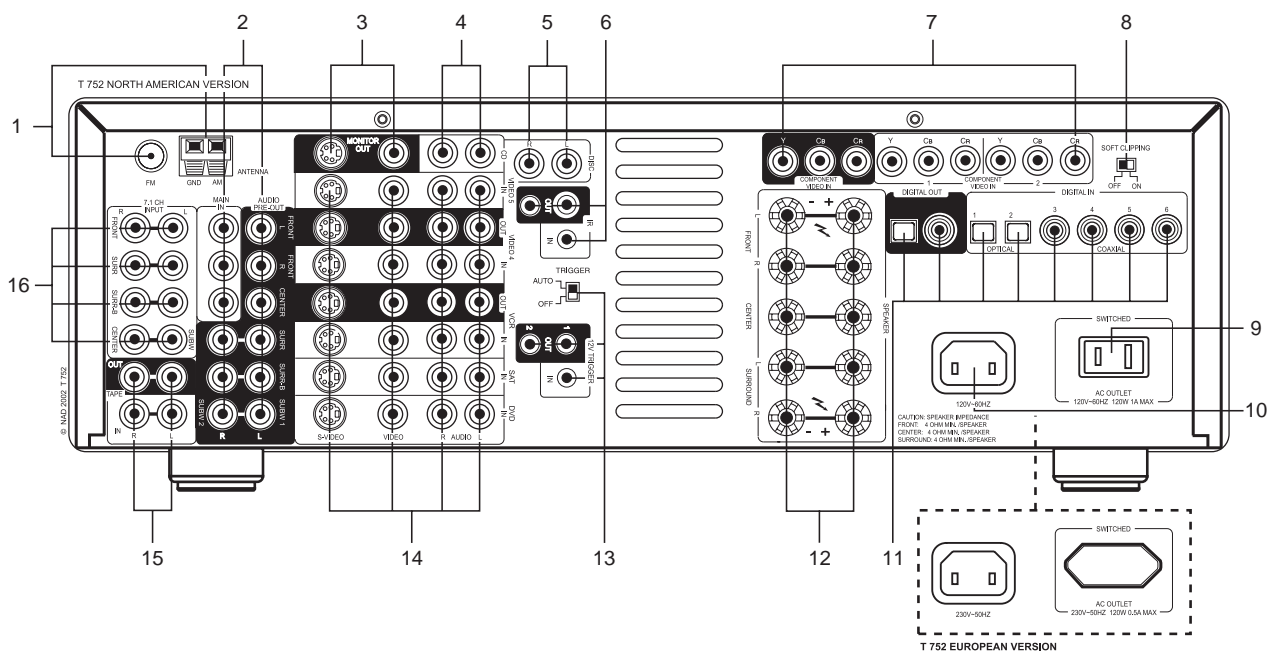

ATTENTION!

Please make all connections to your T 752 receiver with the unit powered off or unplugged. (It is also advisable to power-down or unplug all associated components while making or breaking any signal or AC power connections.)

- 1 **FM & AM ANTENNA:** The supplied wire "dipole" FM antenna will connect to the FM connector using the supplied "balun" adapter. It will usually work best when mounted on a vertical surface such as a wall, with arms fully outstretched forming a horizontal "T" perpendicular to the origin point of the signal. Experiment with placement and orientation of to yield the clearest sound and lowest background noise. In areas of difficult FM reception an external FM antenna can yield dramatic gains in quality; consult your NAD audio specialist or a professional antenna installer.

The AM loop antenna supplied with the T 752 (or a suitable replacement) is required for AM reception. Open the clip terminal lever, insert the wire and close, ensuring that the lever locks the wire in place. Testing different positions for the antenna may improve reception; vertical orientation will usually produce the best results. Antenna proximity to large metal objects (appliances; radiators) may impair reception, as will attempts to lengthen the wire to the loop.

NOTE: An external AM antenna can improve long-distance reception substantially; consult your NAD audio specialist or a professional antenna installer. Do not connect anything other than a loop antenna to the AM ANTENNA terminal. Do not remove the AM loop antenna.

- 2 **MAIN IN/AUDIO PRE-OUTS/SUBWOOFER OUT:** The T 752's five built-in power amplifier channels will deliver excellent quality with even very demanding, low sensitivity home-theater speaker systems. However, it is also possible to use the T 752 as a pre-amplifier with external power amplifiers for some or all channels (remove the supplied jumpers if necessary). Unlike the five full range channels, there is no power amplifier built-into the T 752 for a subwoofer.

For example, you might add an outboard, 2-channel (stereo) power amplifier to your system and use the T 752's front left/right on-board channels to power surround back speaker pair:

- Remove the black "jumpers" that bridge the FRONT-L and FRONT-R pairs of jacks labeled AUDIO PRE-OUT and MAIN IN (save the jumpers).
- Using good quality dual-RCA audio cables connect the T 752's FRONT-L/R AUDIO PRE-OUT jacks to the left and right line-level audio inputs of your power amplifier; now use short cables of the same type to "jump" the T 752's L/R MAIN IN jacks to its L/R SURR.B AUDIO PRE-OUT jacks.
- Connect your main front left/right loudspeakers to the outboard power amplifier's left/right speaker outputs; connect your surround back loudspeakers to the T 752's FRONT L/R speaker outputs, which are now employed for surround-back reproduction. (Observe the cautions outlined in the "SPEAKERS" paragraphs later in this section.)

Be sure to review the "Speaker Setup" and "Channel-Balance (Test) Setup" sections, below.

Connect the SW output to a powered ("active") subwoofer (or to a power amplifier channel driving a passive system).

SURR-B jacks supply signals from the surround-back channels if the T 752 is so configured (see "Speaker Setup," below). Connect to one or two channels of an appropriate external power amplifier or other amplified component to furnish amplification for one or two surround back speakers. You NAD audio specialist will be happy to advise you.

NOTE: Never connect the T 752's speaker outputs and the speaker outputs of an external amplifier to the same speakers.

- 3 **MONITOR OUT:** Connect to video input of the monitor/television, using quality dual-RCA and/or S-Video cables designed for video signals. In general, the S-Video connection is superior and should be used if your TV/monitor provides the corresponding input.

NOTE: The T752 "transcodes" S-Video to composite-video signals, so that S-Video signals connected to the DVD, SAT, VCR, and VIDEO4-6 inputs will be present at both the S-Video and composite MONITOR OUT jacks when any of these inputs is selected. This provides the convenience of requiring only a single video connection (usually S-Video) between the T 752 and the TV/monitor.

- 4 **CD:** Connect the analog stereo audio output from a CD player or other line-level audio source to this input.

- 5 **DISC:** Connect the analog stereo audio output from a second CD player or other line-level audio source to this input.
NOTE: Connecting a phonograph turntable to the T 752 requires an outboard magnetic phono-preamp component such as the NAD PP1; you cannot connect turntable directly to the DISC inputs.

- 6 **IR:** These mini-jacks accept and output remote-control codes in electrical format, using industry-standard protocols, for use with "IR-repeater" and multi-room systems and related technologies. Consult your NAD audio specialist for more information.

- 7 **COMPONENT VIDEO IN 1/2; OUT:** Connect the COMPONENT VIDEO IN 1 AND 2 inputs to component-video outputs from compatible source components, typically a DVD player and terrestrial or satellite HDTV tuner. Connect the T 752 COMPONENT VIDEO OUT to the component-video input of a compatible video monitor/TV. Be sure to observe consistency in connecting the Y/Cr/Cb jacks (some source and TV components label these Y/Pb/Pr) to the corresponding sources/inputs; do not rely purely on the color-coding of the jacks, which may not always be consistent among brands. The routing of the component-video inputs is fixed: COMPONENT VIDEO IN 1 is routed to the COMPONENT VIDEO OUT jacks when the DVD input is selected; COMPONENT VIDEO IN 2 is selected when the SAT input is active; the audio and digital inputs assigned to DVD and SAT will be used (see also, "Source Setup," below).

NOTE: The T 752's component-video inputs and outputs are fully wide-band, compatible with all HDTV formats. The T 752 does not display its on-screen menus on its component-video output. To use on-screen menus, you will need to make an S-Video or composite connection between the T 752 and the monitor/TV, and select it for menu display.

- 8 **SOFT CLIPPING:** Enables NAD's proprietary Soft Clipping circuitry on all channels. Soft Clipping gently limits the output of the T 752 to minimize audible distortion, even should the receiver be over-driven.

NOTE: Soft Clipping may simply be left on at all times to reduce the likelihood of audible distortion from excessive volume settings. However, for critical listening, to preserve optimum dynamics you may wish to defeat it by setting this switch off.

- 9 **SWITCHED AC OUTLET:** This convenience jack can supply switched power to another component or accessory. It is powered on and off by the front panel POWER key (or the HTR2's [On] and [Off] keys).

NOTE: The total draw of all devices connected to this jack must not exceed 120 watts.

- 10 **AC POWER INLET:** Connect to the supplied IEC-standard removable AC power cord or a compatible cord.

- 11 **DIGITAL IN OPT 1-2; COAX3-6:** Connect to the coaxial S/PDIF-format digital outputs of sources such as CD or DVD players, HDTV or satellite tuners, or other components; connect DIGITAL IN OPT1-2 to optical S/PDIF-format digital outputs.

DIGITAL OUT: Connect the optical and/or coaxial DIGITAL OUT ports to the corresponding S/PDIF digital input of a recording component such as a CD recorder, DAT deck, or computer soundcard. See "Source Setup", below.

- 12 **SPEAKERS:** Connect the left and right front, center, and left and right surround speaker outputs to the corresponding loudspeakers. Each output's "+" (red) terminal and "-" (black) terminal must be connected to the corresponding "+" and "-" terminals of the loudspeaker. Use extra care to ensure that no stray wires or strands cross between posts or terminals at either end.

NOTE: Use stranded wire of at least 16 gauge (AWG); specialized speaker cable may be valuable (consult your NAD audio specialist). Connections to the T 752 can be made with banana-type plugs, or using bare wire, or pins, by loosening the terminal's plastic nut, making a clean, neat connection, and re-tightening carefully (use the transverse hole through the post for bare-wire or pin connections). To minimize the danger of short-circuits, ensure that only 1/2-inch of exposed wire or pin is employed in connecting.

NOTE: This unit is designed to produce optimum sound quality when connected to speakers with impedances within the receiver's operating range. Please check front, center, and surround speakers are rated to be 4Ω min. per speaker.

IMPORTANT NOTE: For optimum surround performance, the T 752 speaker settings and levels must be set correctly via the receiver's setup routines; see "Setting Up the T 752", below.

- 13 **12V TRIGGER IN/OUT:**

TRIGGER IN connects to the 12-volt trigger outputs of compatible components such as power controllers and home automation devices. The TRIGGER AUTO/OFF switch selects the 12V Trigger Input and disables the remote and front panel ON function.

TRIGGER OUT connects to 12V Input of compatible devices (such as amplifiers and projector-lifts) to automate turn on/off or activation. See "Trigger Setup", below your NAD audio specialist also can provide more information on using the T 752's triggers.

- 14 **DVD, SAT, VCR, VIDEO 4, VIDEO 5:** These comprise the T 752's principal inputs. Connect S-Video, composite video, and analog stereo audio from source components such as DVD players and HDTV/satellite tuners (see "Source Setup," below). VCR and VIDEO 4 may be used with recording components such as videocassette or DVD-recorders; connect the T 752 S-Video/composite video OUT jacks to these components' record-inputs. (Note that VCR/VIDEO 4 may freely be used for play-only components, in which case their OUT jacks would remain unconnected.)

- 15 **TAPE IN/OUT:** Connect the T 752's TAPE OUT jacks to the stereo analog audio inputs, of an audio recording component such as a cassette deck or CD recorder, or of an outboard analog audio processor such as a stereo equalizer; connect the receiver's TAPE IN jacks to the component's corresponding outputs. The signals present at the TAPE IN jacks can be heard by selecting the front panel TAPE MONITOR button, or the HTR 2's [Tape] (zero) key.

NOTE: The signal present at the TAPE OUT jacks is determined by the source last selected via the front panel Video or Audio keys (or the HTR 2's input-select keys).

NOTE: Digital input signals are not available at the analog TAPE OUT jacks; they are only available at the DIGITAL OUT jacks.

- 16 **7.1 CH. INPUT:** Connect to the corresponding analog audio outputs of a multichannel source component such as a DVD-Audio or multichannel-SACD player, or external multichannel decoder. Typically, these sources will produce 5.1-channel output, in which case the SURROUND BACK jacks are left unconnected. The signals present at these jacks may be heard by selecting the front-panel EXT. 7.1 key or the HTR 2's [Ext 7.1/5.1] button. See "Selecting Sources," below.

NOTE: There is no bass-management or other processing (other than master-volume control) available to this 7.1 CH. INPUT. While the multichannel audio outputs of a DVD-Video player can be connected to these jacks, using the T 752's own Dolby Digital and DTS decoding and digital-analog converters, via a digital connection, will usually produce superior results.

GETTING STARTED

Before you make the first connection to your T 752, you should have the arrangement of your listening room/home theater components and furniture mapped out, at least initially. Unfortunately, a discussion of the vital questions of loudspeaker placement and listening/viewing positions is beyond our scope here. Suffice it to say that these two questions will influence your system's ultimate performance every bit as powerfully as your selection of electronics and speakers. Your NAD audio specialist dealer will be happy to advise you, and to recommend reference materials.

NOTE: You will need the HTR 2 remote handset to configure your T 752. See "Using the HTR 2 Remote", below.

DEALING WITH HUM AND NOISE

Hum and noise sometimes prove a challenge in complex, multichannel audio systems. Note these considerations to help prevent hum and noise problems:

- Power all your system's audio component from AC outlets originating from the same circuit of your house wiring. As far as possible, power all audio components from the same outlet, or adjacent outlets on the same circuit. It may be useful to power video displays (and computers!) from outlets on another circuit, especially if that circuit is supplied from the other "leg" of the house wiring.
- Do not bundle analog audio cables with AC power cables, or with coaxial digital-audio cables. It is best if they cross at right angles if they must be in close proximity.
- Employ high-quality, well-shielded audio cable throughout, and ensure that all connections are secure.
- A pencil-eraser can be used to burnish copper- and gold-plated contacts to ensure good, low-resistance contact; specialized contact-cleaners can also be useful. Avoid unnecessary unplugging and re-plugging, since the gold (or copper) contact plating of typical cable connectors, even very high-quality ones, is very thin and easily worn.

Track down hum/noise problems one component at a time, working backwards from the receiver. That is: Connect the speakers to the receiver only, and check for hum. Then connect one component only (a CD player, for example) alone, with no other components connected and check for hum. Connect additional components, one at a time, to the receiver and check for hum. At each stage, if hum/noise appears, examine the audio cabling and AC-power routing of the new component. In some cases, moving the new component's AC cord to a different outlet, or installing a ground-lift (3-to-2-prong adapter) on its power cord, will eliminate the hum.

ABOUT THE ON-SCREEN DISPLAYS (OSD) AND FRONT-PANEL READOUT

The T 752 receiver employs a simple, self-explanatory system of on-screen display "menus" that will appear on the connected video monitor/TV. These are required during the setup process (and are useful in day-to-day operation), so be sure to connect the monitor/TV before proceeding with setup.

NOTE: The on-screen displays are carried on both the S-Video and composite MONITOR OUT jacks, but are not incorporated into the component-video output.

DISPLAY THE OSD

Press any of the HTR 2 remote's central cursor keys ([**◀**], [**▲**], [**▶**], [**▼**], and [**Enter**]) to display the T 752's main <Setup> menu on your video monitor/TV. If the OSD does not appear, check your MONITOR OUT connections.

NOTE: The OSD does not appear on the T 752's component-video output, nor does it appear on the VIDEO 3 and 4 record-outputs; these are for recording, not monitoring.

NAVIGATING THE OSD AND MAKING CHANGES

Use the HTR 2 remote's [**▲▼**] keys to move up or down among the Setup menu's list of items; use [**Enter**] to select a menu item, and use [**◀▶**] to change the parameter-value (setting) of any item. Selecting the <Save and Exit> returns "up" to the <Setup> menu while saving any parameter-value changes to the T 752's memory; selecting <Do Not Save and Exit> also returns to the main <Setup> menu, but abandons any changes made on the previous menu. Selecting <Exit> from the main Setup menu exits the OSD altogether, retaining parameter-value changes, if any, made previously.

INPUT SETUP

The T 752 is equipped with eight configurable inputs: six audio-video inputs labeled DVD, SAT, VCR, and VIDEO4-6 (including VIDEO 6 on the front panel), and two audio-only inputs labeled CD and DISC. These are flexibly configurable: For each labeled video input-jack position (DVD, SAT, VCR, VIDEO4-6) as displayed on the <Video In> line of the <Input Settings> menu, you may freely assign: an analog audio input selected on the <Audio In> line; and a digital input selected on the <Digital In> line. These will become active whenever that input is selected.

NOTE: An incoming digital signal present at the assigned digital input will always take precedence over the assigned analog-audio input, even if both are present. The digital signal can be temporarily selected "OFF" using the front panel DIGITAL AUDIO SELECTOR button.

INPUT SETTINGS

From the main <Setup> menu, select the <Input settings> menu item using the HTR 2 remote's [**▲▼**], and [**Enter**] keys. Using the [**◀▶**] keys select the video input (DVD, SAT, VCR, VIDEO 1-6) you wish to configure. Use the [**▲▼**] keys to move to the <Audio In> line, and then use the [**◀▶**] keys to select the analog audio input you wish to be linked to that input (usually, this will be the same, i.e., "DVD" with "DVD," "Video 4" with "Video 4," and so on).

NOTE: It is not necessary to have an analog audio input connected for every video input you employ. In fact, in some cases—for example for a DVD player—it may be preferable to make only a coaxial or optical digital audio link to the T 752 for audio playback. This avoids possible confusion, and ensures that the T 752's high-performance surround and digital audio circuitry will always be employed.

Now use the [**▲▼**] keys to move to the <Digital In> line and select the digital input ("Opt 1-2," "Coax 1-4") you wish linked to that input. If you set <Digital In> to "Off," no incoming digital signal will be selected by that input. (Set an input's <Digital In> to "Off" only if you wish to ensure that that input will not play an incoming digital bitstream, even if one is present.)

NOTE: The <Trigger Out> line of the <Input Settings> menu is used to configure the T 752's 12-volt trigger. See "Trigger Setup," below.

The component-video inputs are not configurable. Selecting the DVD input routes the COMPONENT VIDEO IN 1 to the COMPONENT VIDEO OUT jacks; selecting SAT routes COMPONENT VIDEO IN 2 to the COMPONENT VIDEO OUT jacks. Note that the OSD does not appear on the component-video output.

NOTE THAT: The combination of analog-audio input and digital input assigned above will always be recalled whenever that input is selected via the front-panel VIDEO key, or the HTR 2 remote's input-select keys, or by recalling a Preset;

The digital and analog audio inputs assigned to a video input can be overridden by using the front-panel AUDIO and DIGITAL AUDIO SELECTOR keys; however, the assigned input will return whenever that video input is reselected, either via the front panel VIDEO key or using the HTR 2's input-select keys (or a Preset);

The TAPE MONITOR loop is not configurable, and will not appear in the rotation;

Any audio input and any digital input may be configured with any video input, and the same analog and/or digital inputs may be assigned to multiple video inputs;

The analog audio input selected on the <Audio In> line is also routed to the TAPE OUT jacks.

NOTE: That signals from digital inputs are not available on the analog TAPE OUT jacks.



ABOUT THE ON-SCREEN DISPLAYS (OSD) AND FRONT-PANEL READOUT



SPEAKER SETUP

Every surround-sound system requires "bass-management" to direct low-frequency content from any or all channels to the speakers best able to reproduce it. For this function to operate correctly, it is important that you correctly identify your speakers' capabilities.

We use the terms "Small" and "Large" (and "None"), but note that physical size may be irrelevant.

- A "Small" speaker is any model, regardless of physical size, that lacks significant deep-bass response, that is, below about 80 Hz.
- A "Large" speaker is any full-range model, that is, one with deep-bass response
- A "None" speaker is one that is not present in your system. For example, you might not have any surround-back speakers installed; in that case, you would set the <Surr Back> setup item to "None."

SPEAKER SETTINGS

From the OSD's main <Setup> menu select the <Speaker Settings> line using the HTR 2 remote's [▲▼], and [Enter] keys. Using the [◀ ▶] keys, set <Front:> to "Large" or "Small" as your main-front speakers require according to the guidelines noted above. Similarly, set <Center:>, <Surround:>, and <Surr Back:> to "Large," "Small," or "None" as your system's loudspeakers require. Set <Sub:> to "On" or "Off," selecting "On" only if you have a subwoofer connected to the T 752's SUB analog output jack.

NOTE: The Speaker Settings configuration is "global"; that is, it remains in force with all inputs and in all listening modes. However, speaker settings are part of the T 752's Preset system; consequently, multiple speaker settings can be stored for easy recall as different types of recordings or listening modes require. See "Creating and Using Presets," below.

NOTE: You can set Subwoofer to "On" even with "Large" front speakers, in which case bass content from any channels set to "Small" will be routed to both the subwoofer and to the front speakers; LFE-channel signal will pass only to the sub. In most subwoofer-equipped systems, setting front speakers to "Small" is usually the better option.

LISTENING MODE

From the OSD's main <Setup> menu select the <Listening Mode> line using the HTR 2 remote's [▲▼], and [Enter] keys. Using the [▲▼] and [◀ ▶] keys you can select mode variations, and adjust various parameters, depending on the current Listening Mode. For more information, see "About the T 752's Listening Modes," below.

NOTE: Listening Mode is part of the T 752's Preset system. See "Creating and Using Presets," below;

NOTE: The Listening Mode used the last time a given input was selected will be recalled the next time that input is selected, unless overridden by a Dolby Digital or DTS signal, which automatically invoke their native Listening Modes.

CHANNEL-BALANCE (TEST) SETUP

Adjusting the relative balance of your system's loudspeakers ensures that surround-sound recordings, whether music or film, will present the balance of effects, music, and dialog that the artists intended. Additionally, if your system incorporates a subwoofer it establishes a correct relationship between the volume of the subwoofer and the other speakers, and thus of low-frequencies (bass) to other sonic elements.

USING AN SPL METER

It is quite practical to perform the T 752 Level setup routines "by ear," and careful work will produce acceptably accurate results. However, the use of an inexpensive sound-pressure level (SPL) meter, such as Radio Shack part number 33-2050, makes this task easier, more accurate and more repeatable. Ownership of such a meter could prove a valuable audio tool; your NAD audio specialist may be able to help you with temporary use of a meter.

The SPL meter should be placed at the primary listening position, at approximately the height of the seated listener's head. A tripod is helpful, but with a little duct tape almost anything—a pole lamp, music-stand, or ladder-backed chair, for example—can do as well. Just be sure that no large acoustically reflective surfaces obstruct or are near the microphone element. Orient the meter with its microphone (usually at one end) pointing straight up toward the ceiling (not forward toward the speakers) and ensure that its "C" weighting scale is selected. Set the meter to display 75 dB SPL. (On Radio Shack meters this necessitates either setting the meter to its 80 dB range and taking your readings at the -5 point, or selecting the 70 dB range and reading at the +5 point.)

SETTING CHANNEL BALANCE

Press the HTR 2 remote's [Test] key, activating the T 752's channel-balancing test signal and displaying the <Channel Levels> menu on the OSD. You will hear a "surf" sound that cycles through your speakers, beginning with the left-front. (If you do not hear the test signal, check your speaker connections (above), and your <Speaker settings> OSD menu settings, (above).)



ABOUT THE ON-SCREEN DISPLAYS (OSD) AND FRONT-PANEL READOUT

As the test signal cycles around the speakers, the OSD (and the VFL front panel display) will highlight the currently playing channel. Now use the remote's [◀ ▶] keys to adjust the loudness of the noise output from the currently playing channel to the required level (it's usually simplest to begin with the left-front). The "level offset" reading on the right will change by 1 dB increments; ±12 dB adjustment is available.

NOTE: If you are balancing levels "by ear", choose one speaker—usually the center—as a reference and adjust each of the others in turn to "sound as loud" as the reference. Be sure that you remain in the primary listening position while balancing all channels.

Using the remote's [▲ ▼] and [◀ ▶] keys adjust each speaker to produce the same SPL meter reading (or subjective loudness). Note that:

- All speakers must be in their final locations before level-setting.
- Your subwoofer (if any) should be set with its integral crossover defeated, or if undefeatable, set to its highest-possible frequency if you are using the T 752's SUBWOOFER output. Final subwoofer-level adjustment "by-ear," using music and film sound material, is frequently useful.
- Due to the effects of room acoustics, matched-pair speakers (front; surround; back) will not always calibrate to exactly the same level offset readings.

SPEAKER DISTANCE

Your system's speaker distance settings are a subtle but important refinement of your setup. Informing the T 752 of the loudspeaker-to-listener dimensions of each speaker automatically imposes the correct delays, optimizing imaging, intelligibility, and surround-sound ambience. Enter your dimensions with precision within about 1 foot (30 cm).

SETTING SPEAKER DISTANCE

From the OSD's main <Setup> menu, select the <Speaker Distance> item using the remote's [▲ ▼] and [Enter] keys. Using the [◀ ▶] keys, set <Center:> to the distance measuring from your principal listening position to the front surface of the center loudspeaker. Using the same remote keys, set <Surr.:> to the distance to the nearest surround-channel speaker.

NOTE: Distance can be displayed as feet or meters selectable by the <DISTANCE> item in the Speaker Distance menu.

CREATING AND USING PRESETS

The T 752's simple but powerfully flexible system of "Presets" allows you to customize virtually every aspect of your audio-video playback, and recall them with a single key-press. Every parameter of T 752 operation that is available from the main <Setup> menu—input settings, level settings, delay settings, speaker settings, and listening mode selection and adjustments—is stored, together, as a single Preset. You might create one Preset optimized for pop music and another for classical, or Presets that recall each family member's favorite setup, or one for fully cinematic home-theater playback and another for late-night movies, with each Preset's surround mode, channel levels, and speaker-setup fine-tuned to a particular scenario or preference.

CREATING PRESETS

Creating a Preset consists simply of storing a complete set of all settings accessible from the main <Setup> menu, including Tone Control settings. To save a collection of settings to a Preset, use the HTR 2 remote's [▲ ▼] keys to scroll to the main <Save to Preset> item. Use [▲ ▼] to scroll to the desired Preset's line [1-5]; <Stored> will be flashing. Now press the HTR 2's [Enter] to store the Preset; <Stored> will be stop flashing, confirming that the Preset has been stored.

NOTE: The selected Preset remains in force until you select a different Preset.

NOTE: It is strongly recommended to leave Preset 1 "empty"; that is, memorized with no changes at all made to the calibrated values you have entered on all of the <Setup> menu lines. This will make returning to your calibrated setup defaults easy.

RECALLING PRESETS

You may recall a Preset at any time; the newly recalled Preset will replace the previous Preset (if any). Presets can only be recalled using the HTR 2 remote:

Press the HTR 2's square [A/V Preset] key (red dot), then press the numeric key 1-5 corresponding to the desired preset.

NOTE: The [A/V Preset] key works as a momentary "shift" key: You must press it every time before invoking a Preset via a numeric key.



You may operate the T 752 receiver from its front panel or via the HTR 2 remote control. Since the remote will be the primary controller for most cases, we will focus on remote-controlled operations. Be sure also to read the section, "Front Panel" above.

SELECTING SOURCES

With the HTR 2's remote's [Amp] device selected, the remote's numeric-key section directly selects the receiver's inputs, plus the internal tuner ([Tuner]), Tape Monitor ([Tape]), and multichannel input ([Ext. 7.1/5.1]) refer to the red labels directly above each key.

- When an audio-only source (CD, DISC, TUNER) is selected, the most recently-selected video signal remains selected, until another audio-video input is selected
- When you change sources, the VFL will display the new input in its primary display.
- A newly selected input's listening mode (Stereo, EARS, Pro Logic II, etc.) will revert to the mode to which it is configured on the <Input Settings> line of the setup menu, unless the incoming signal is a Dolby Digital or DTS source, in which case the input will be set automatically to the appropriate decoding mode.

ADJUSTING THE VOLUME

Use the HTR 2 remote's <Volume up/down> keys to adjust the "master volume" of the T 752, raising or lower all channels together. Note that:

- A momentary keypress will change the master volume by 1 dB increments; if you hold down <Volume up/down> the master-volume change will "run-on" until the key is released.
- The T 752's OSD will show the volume setting as a line graphic with a numeric display above in dB relative to the reference level.

Since recordings vary considerably in overall average level, there is no imperative to listen at any particular master-volume setting. A setting of -20 may sound "as loud" from one CD or DVD as -10 does from another.

- If muting has been activated (below), adjusting master-volume via the HTR 2 remote or the front-panel knob automatically releases the mute function.
- The T 752 will power-up from Standby mode at whatever master volume setting was last used: however, if the prior setting was greater than -20 dB the T 752 will power up to -20 dB. This prevents inadvertently beginning a session at excessive volume.

MUTING THE SOUND

Use the HTR 2 remote's <Mute> key to silence all channels completely. Muting is always available, regardless of source or listening mode selections. Note that:

- Cycling through Standby or powering off does not release muting; the T 752 will return from Standby with muting on if Standby was invoked with muting on.
- Changing input or listening-mode selections does not release muting.
- Adjusting the master-volume upward via the HTR 2 or the front-panel knob automatically releases the mute function.

LISTENING TO RADIO

The T 752's internal AM/FM tuner offers very high quality sound from radio broadcasts. Note that reception and sound quality will always be dependent to a degree on the type of antenna(s) used, as well as proximity to the broadcast origin, geography, and weather conditions.

ABOUT ANTENNAS

The supplied ribbon-wire FM antenna can be connected to the rear-panel FM-antenna input using the 'balun' included adapter, and should be fully extended to form a "T". This folded-dipole antenna will usually work best oriented vertically, with the arms of its "T" full outstretched and arranged perpendicular to the origin of the desired broadcast. There are no 'rules,' however, and experimenting freely with antenna placement and orientation may yield the clearest sound and lowest background noise. In areas of poor FM reception, an exterior FM antenna can improve performance dramatically. If radio listening is important to you, consider consulting an antenna installation professional to optimize your system.

The supplied AM 'loop' antenna will usually provide adequate reception. However, an exterior AM antenna can be used to improve reception; consult an antenna professional for more information.

SELECTING THE RADIO

Press the AM/FM key on the T 752 front panel, the HTR 2's orange [TUNER] (the numeric 9 key), or the yellow [AM] and [FM] keys to select the receiver's radio mode. Each subsequent press of either key will toggle the unit between its FM and AM bands.

TUNING STATIONS

Press SEARCH <> on the front panel momentarily to step up or down between FM or AM frequencies. Press and hold SEARCH <> for more than 2 seconds to search up or down; the T 752's tuner will stop at the next sufficiently strong signal it encounters. See "Front Panel," above. Pressing the SEARCH <> keys momentarily during the search process will stop the search.

After first pressing amber [TUNER] mode-select key on the HTR 2 to set the remote to control radio functions, press [TUNE DOWN] or [TUNE UP] on the HTR 2 (yellow lettering); hold in to perform slow manual search, press momentarily to automatically search (see above).

SETTING RADIO PRESETS

The T 752 can store as many as 40 of your favorite radio stations for immediate recall; 30 FM stations and 10 AM. To store a radio preset, first tune the desired frequency (see above), then press the front panel MEMORY key. Press the PRESET <> key to select the preset number to be assigned. Then press the MEMORY key once again. The STORED message will appear in the VFL Display.

NOTE: The Radio Presets must be stored from the front panel; this setup function is not accessible from the HTR 2 remote.

NOTE: The T 752's Radio Presets are distinct from its "global" Presets that can be used to manage listening and setup modes and levels. See "Using Presets," above.

SELECTING RADIO PRESETS

Press PRESET <> on the front panel to step up or down between presets; press and hold SEARCH <> to "scroll" continuously up or down. The HTR 2 remote's [PRESET ▲▼] keys work similarly.

CHOOSING THE FM MUTE / MODE

The front-panel FM MUTE/Mode key is a dual-purpose control. First, it "toggles" the T 752 between stereo mute and unmuted stereo reception (assuming that a multiplex-stereo station of sufficient strength is tuned). FM Mute eliminates noise from "empty" FM frequencies but also mutes very weak or distant stations; it also causes the search function to skip them. Toggling off the FM Mute will result in reduced noise if the FM station signal level is less than the FM Stereo threshold (since mono FM is inherently less noise-prone), though at the sacrifice of the stereo effect.

NOTE: Toggling between FM Mute on or off also defeats the T 752's FM muting circuit. If you wish to listen to a particularly weak or distant broadcast, toggle off the FM Mute and tune it manually.

ABOUT RDS

The Radio Data System (RDS) permits compatible FM receivers to display text determined by the broadcaster. The T 752 supports two RDS modes, station-name (PS mode) and radio-text (RT mode). However, not every FM station incorporates RDS in its broadcast signal; in most areas you will find from one to several RDS-enabled stations, but it is by no means impossible that your favorite stations will not be broadcasting RDS data.

VIEW RDS TEXT

When an RDS-enabled FM broadcast is tuned, after a brief delay the "RDS" symbol will light in the T 752's front-panel readout and the readout's character section will show its station-name (PS) text: "ROCK101," for example. Press the front-panel DISPLAY key to toggle the readout between this and the station's radio-text (RT) readout, if any, which might scroll song- or artist-name, or any other text of the station's choosing.

ABOUT THE T 752'S LISTENING MODES

The T 752 receiver offers nine distinct listening modes, tailored for different types of recordings or program material. The table below lists which modes are available to what input signals.

With a two-channel (STEREO) source the following listening modes can be selected:

- **Stereo**
- **Downmix**

All output is directed to the left/right-front channels; low frequencies are directed to the subwoofer if one is present in the Speaker settings. Select Stereo when you wish to listen to a stereo (or monaural) production, such as a music CD or FM broadcast, without surround enhancement. Stereo recordings, whether in PCM/digital or analog form and whether surround-encoded or not encoded, are reproduced as recorded; multichannel digital recordings (Dolby Digital and DTS) are reproduced in "Downmix" mode via the left- and right-front channels only, as Lt/Rt (left/right-total) signals.

- **Dolby Pro Logic**
- **Dolby Pro Logic II (PLII)**

Two-channel recordings, whether stereo or surround-encoded, are reproduced with Dolby Pro Logic, or ProLogic II surround processing, yielding output to left-, center-, and right-front channels, and discrete left/right surround channels (assuming these are present in the current <Speakers Setup>. PLII does not employ the surround back speakers (if any).

NOTE: ProLogic II is a more recent evolution of the original Dolby ProLogic surround processing that yields more stable imaging and full bandwidth sound to the rear channels in Movie mode, offering sound that is more similar to Dolby Digital decoding.

The T 752 provides two PLII variations: MOVIES and MUSIC. See "Adjusting Listening Modes," below.

- **DTS Neo:6**

Two-channel recordings, whether stereo or surround-encoded, are reproduced with Neo:6 surround with output to left, center-, and right-front channels and discrete left/right surround channels (assuming these are present in the current <Speakers Setup>); DTS Neo:6 does not employ the surround back speakers (if any).

The T 752 provides two DTS Neo:6 variations: MOVIES and MUSIC. See "Adjusting Listening Modes," below.

- **EARS**

Two-channel recordings, whether stereo or surround-encoded, are reproduced with proprietary NAD surround processing with signals output to the left, center-, and right-front channels and discrete left/right surround channels, plus subwoofer (assuming these are present in the current <Speakers Setup>); EARS does not employ the surround back speakers (if any). EARS extracts the natural ambience present in nearly all well-produced stereo recordings. It does not synthesize any ambience or other sonic elements and thus remains truer to the sound of the original musical performance than most other music-surround options.

Select EARS for listening to stereo music recordings and broadcasts. EARS produces a subtle but highly natural and believable ambience from nearly all "natural-acoustic" stereo recordings; typically, these include classical, jazz, and folk genres as well as numerous examples from others. Its virtues include a realistic, stable "front-stage" sonic imaging and spacious but unexaggerated ambient "virtual acoustics" that remain faithful to the original recording.

- **Matrix 7.1**

Two-channel recordings, whether stereo or surround-encoded, are reproduced with proprietary surround processing via the full suite of front, surround, and one or two surround back speakers (if these are present in the current Speaker Settings setup), plus subwoofer (if any). Matrix 7.1 can produce a very natural, cohesive all-channels surround from high-quality recordings, both for stereo music and for surround-encoded music or movie programs.

- **Enhanced-Stereo 1 (ST1)**

All recordings reproduced in stereo (Downmix, from Dolby Digital/DTS multichannel sources) via the maximum speaker complement configured in the current <Speakers Setup>). ST1 can be useful for maximum volume from all channels, or for multi-speaker background music (cocktail party) listening.

- **Enhanced-Stereo 2 (ST2)**

All recordings reproduced in stereo (Downmix, from Dolby Digital/DTS multichannel sources) via the surround speakers only (plus subwoofer, if any), assuming these are configured in the current <Speakers Setup>). ST2 can prove useful in certain late-night or very low-volume listening situations.

The following Surround Sound Modes require a specially encoded signal that must be present in digital format to be decoded by the T752. These modes are automatically switched on when the appropriate data stream is detected selected in the setup menu of the source media.

- **Dolby Digital**
- **Dolby Digital EX**
- **DTS**
- **DTS ES 6.1**

Digital recordings in Dolby Digital or DTS formats are reproduced via the channels employed in the original recording (up to the maximum channels present in the current <Speaker Settings> setup).

NOTE: The DVD player must be sending a Dolby Digital or DTS bit-stream from its digital output. Your DVD player probably includes its own setup menu that (among other things) lets you select the default bit-stream format, and usually includes an "Auto" setting that directs the player to choose the Dolby Digital/ DTS signal whenever these are available. In a few cases, you may have to set the player's bit-stream manually to "DD/DTS" or an equivalent. In the case of DVDs that carry both Dolby Digital and DTS, you will select one or the other from the disc's (not the player's) main menu.

Note also that while most Dolby Digital recordings are 5.1-channel surround productions, older examples may be multichannel, 2-channel, or even monaural; the T 752 will automatically reproduce the Dolby Digital signal with the maximum number of channels available.

Both Dolby Digital/EX and DTS/ES 6.1-channel recordings are reproduced using the surround back channel, if present in the current Speaker Settings setup; additionally, the T 752 creates surround-back signal from non-EX/ES, 5.1-channel Dolby Digital and DTS recordings.

Dolby Digital EX creates six full-bandwidth output channels from any 5.1-channel Dolby Digital recordings. The very best results occur with movies or other programs bearing the Dolby Digital Surround EX mark, which are produced to take full advantage of this playback mode.

The table below indicates which listening modes are available with the two types of audio signal sources: digital- or analog-input 2-channel (whether the actual signal is monaural, stereo or surround-encoded), and digital-multichannel (Dolby Digital or DTS). Where a listening mode is not available to a given signal source, it will not appear in the <Listening Mode> selection rotation.

<u>2-ch analog or PCM</u>	<u>Multi-ch. (DD/DTS)</u>
Stereo	Downmix
EARS	--
--	Dolby Digital/EX or DTS/ES
Dolby Pro Logic II	--
DTS Neo:6	--
Matrix 7.1	--
Enhanced Stereo I	Enhanced Stereo I*
Enhanced Stereo II	Enhanced Stereo II*
	*downmixed signals

DISPLAYING THE SIGNAL MODE

Keying the front panel's DISPLAY or HTR 2 remote's [DISP] key will display on the VFL the channel-mode of the currently selected input signal, in the format "front/surround.subwoofer" (see "4 DISPLAY" in the "Front Panel" section, above).

The following table shows examples of displays seen with various signal types:

<u>Source</u>	<u>Readout/OSD</u>
Analog	Analog
Digital PCM	Digital PCM
Multichannel (Dolby Digital)	Dolby D 3/2/.1 (full surround) Dolby D 3/1/.1 Dolby D 2/0 etc.
Multichannel (DTS)	dts 3/2/.1 (full surround) dts 3/1/.1 dts 2/0 etc.

SELECTING LISTENING MODES

Keying the HTR 2 remote's [SURR MODE] button steps through each of the T 752's Listening Modes available to the current input signal. It also momentarily displays the Listening Mode in the OSD.

NOTE: Changing the type of input signal may automatically change the Listening Mode: If the new signal is a Dolby Digital or DTS recording, it will automatically invoke its native mode. The reverse is also true if Dolby Digital or DTS was previously selected.



ADJUSTING LISTENING MODES

Several of the T 752's listening modes have one or more selectable variations and adjustable parameters you can modify to suit your system, the recording, or your personal preferences.

Use the HTR 2 remote's [Surr. Mode] key, or the front panel SURROUND MODE key, to select the Listening Mode you wish to display and listen to; this will display on the T752's VFL Display. One can also select variations using the HTR 2 [◀ / ▶] cursor keys on the <MODE:> line of the OSD. Use the HTR 2's [▲/▼] and [◀ / ▶] cursor keys to navigate among and modify that mode's adjustable parameters (if any).

NOTE: Listening Mode parameter changes are maintained when you change listening modes. You may also save a modified Listening Mode for easy recall by saving it to a Preset (see "Using Presets", above.)

Dolby Pro Logic II (PLII)

PLII MOVIES is optimized for film soundtracks.

PLII MUSIC for music recordings.

DIMENSION (-3 to +3): Adjusts front-rear emphasis of the surround effect independently from the relative channel levels.

CENTER WIDTH (0 to 7): Modifies the "hard-centeredness" of the center image, by gradually mixing mono-center content to the front-left/right speakers as well; a setting of 0 retains the center-channel-only default, while a setting of 7 yields a fully phantom center channel.

PANORAMA (ON/OFF): Adds a "wraparound" effect by extending some stereo content into the surround channels.

DTS Neo:6

Neo: 6 MOVIES is optimized for film soundtracks, Neo:6 MUSIC for music recordings.

Stereo

Downmix

Dolby Digital

Dolby Digital EX

Enhanced-Stereo 1 (ST1)

Enhanced-Stereo 2 (ST2)

DYN. RANGE (25, 50, 75, 100PCT): You can select the effective dynamic range (subjective range from soft to loud) for playback of Dolby Digital soundtracks. For fully cinematic effect, always select 100PCT, the default. Settings of 75, 50, and 25PCT progressively reduce dynamic range, making soft sounds comparatively louder while limiting the peak loudness of loud ones; the 25PCT setting will yield the least dynamic range and is best for late-night sessions or other times when you wish to retain maximum dialog intelligibility while minimizing overall volume levels.

ADJUSTING CHANNEL LEVELS "ON THE FLY"

You can make changes to the relative levels of center, surround, and subwoofer outputs. This may prove useful in a number of circumstances; for example, to increase (or tone down) a film's dialog level by raising (lowering) the center channel, or to reduce excessive deep bass (or enhance deep bass) by lowering (raising) the subwoofer level without having to go into the CHANNEL LEVELS OSD menu.

TO ADJUST CHANNEL LEVELS

Use the HTR 2 remote's [Surr.], [Center], and [Sub] [▲/▼] keys for direct-access level adjustment of these channels, over a range of ±12 dB. You can also adjust all channel levels using the front panel's Levels key (see "Front Panel," above), or via the <Channel Levels> line of the main <Setup> menu.

NOTE THAT: The surround back channels (if any) adjust in lockstep with the surround channels;

Channel Level changes made via the HTR 2 are retained even if you cycle the receiver through Standby.

Channel Levels are part of the T 752's Preset system. See "Creating and Using Presets," below.

Level settings are added/subtracted to the setup levels established by the T 752 level-calibration routine, invoked by the HTR 2 [Test] key. However, selecting any Preset will revert channel levels to those stored in the preset.

ADJUSTING THE TONE CONTROLS

The T 752 bass and treble controls are adjusted using the front panel's TONE CONTROLS (and TONE DEFEAT) buttons; see "Front Panel," above.

NOTE: Bass/treble settings affect only the front left/right channels, and are active in all listening modes. Bass/treble settings are part of a Preset: Bass/treble settings in effect when a Preset is stored will be reinstated whenever that Preset is recalled.

SPECIFICATIONS

- Controls up to 8 devices.
- 44 function keys.
- Learns up to 352 commands.
- Records up to 44 macros with a maximum of 64 commands each.
- Configurable punch-through.
- Key illumination with programmable timeout.
- Upgradable.
- Contains pre-programmed library of NAD remote codes.

The NAD HTR 2 is ready to operate the T 752 receiver right out of the box, but it is really eight remotes in one. Each of the 8 Device Selector keys at the top of the handset can call up a new "page" of remote-control codes to be transmitted by the remaining 44 keys. You may "teach" codes from any infrared-remote-controlled component, regardless of brand, to any or all of these. Obviously, the most logical system is that you teach the codes from your DVD player to the [DVD] Device Selector "page," your television's codes to the [TV] "page," and so on, but there is no required scheme: You may load any commands to any key on any page (see "Learning Codes From Other Remotes," below).

The HTR 2 is already preprogrammed with a full complement of commands for the T 752 receiver on its [AMP] Device Selector page, and as well as with library commands to operate most NAD-brand DVD, CD, or TAPE components on the corresponding Device Selector "pages." These default commands are permanent: Even if you teach the HTR 2 new commands to take their place, the underlying library commands remain in place and can easily be recalled should you add an NAD component to your system later (see "Delete Mode", below).

NOTE: For use with the T 752, it should not be necessary to re-program any keys on the HTR 2 [AMP] page. However, in order for the HTR 2 to control your specific NAD-brand components you may need to load one or more different code-libraries; see "Loading Code Libraries," below.

CONTROLLING THE T 752

The HTR 2 is divided into two main sections. Eight Device Selector keys at the top—[AMP], [DVD], [TV], and so on—set the handset's remaining keys to a "page" of commands to control a particular component. A Device Select key determines only what component the HTR 2 will command; it does not perform any function on the receiver. All of the remaining keys are function keys that can "learn" control codes from virtually any infrared remote controller, allowing you to teach the codes of your equipment, regardless of brand, to the HTR 2.

However, the HTR 2 is already preprogrammed to operate the T 752. All of the function keys on the [AMP] Device Selector "page" perform T 752 functions. (The HTR 2 can also command many other NAD components, from its [DVD], [CD], [TUNER], and [TAPE] pages.)

It is important to note that certain HTR 2 keys perform different functions depending on the selected Device Selector "page." The color of the Device Selector key-labeling corresponds to the labeling of the function keys. Most centrally, the red [AMP] Device Selector "page" corresponds to the red input-select labeling adjacent to the numeric keys: When the HTR 2's [AMP] Device Selector page is active, these keys select the receiver inputs. Similarly, the purple [DVD] Device Selector "page" corresponds to several purple labels, the green [TV] page to green labels, and so on.

LEARNING CODES FROM OTHER REMOTES

Begin by positioning the HTR 2 "nose-to-nose" with the source remote so the two devices' infrared windows are about 2 inches apart.

- Enter Learning Mode: On the HTR 2, simultaneously press-and-hold for 3 seconds both a Device Selector key and the [•] "record" key (just below the [DISP] key), until the Learn LED at the center of the HTR 2 turns steady green.
- Press the HTR 2's function key you wish to teach a command; the Learn LED will turn amber.
- Press-and-hold the function key on the source remote: The HTR 2's Learn LED will flicker amber for a second or two, then turn solid green. The command is learned.
- Press the HTR 2's Device Selector key again to exit the learning mode.

If the Learn LED does not flicker amber you may need to vary the distance between the remotes. If the Learn LED turns red rather than green, that particular command of that source remote command could not be learned.

Cancel Operation:

You can cancel configuring a key, by pressing the active Device Selector key before the learn is complete; the Learn LED will turn red.

Example: Learning "DVD Pause":

Position the HTR 2 and your DVD player's remote as described above.

- On the HTR 2, simultaneously press-and-hold [DVD] and [•]; the Learn LED turns steady green.
- Press the HTR 2's [||] (pause) key; the Learn LED turns amber.
- Press-and-hold the DVD player's remote's pause key; the HTR 2's Learn LED flickers amber and then turns solid green. The command is learned.
- Press [DVD] again to exit the learning mode.

PUNCH-THROUGH

The HTR 2's "punch-through" function allows you to retain a function key from one Device Select "page" on another, so that, for example, the AMP [SURR MODE] function might still control the T 752 when the DVD Device Selector page is active

NOTE: The HTR 2's [VOL] keys are pre-programmed as "punched-through" for all Device Select pages: [VOL] will operate the T 752's master-volume regardless of the currently selected device. The [SURR.] [CENTER.] and [SUB] Channel Volume controls similarly are pre-programmed as punched-through.

To set a punch through, after entering the Learning Mode, and pressing the desired key to be punched-through, simply press the device key twice of the device to punch through to. The status LED will turn green; press the Device Selector key again to exit Learning Mode.

Example: Punch-through the from the DVD "page" to the AMP [SURR MODE] key:

- On the HTR 2, simultaneously press-and-hold [DVD] and [•] (record); the Learn LED turns steady green.
- Press [SURR MODE]; the Learn LED turns amber.
- Press [AMP] twice; the Learn LED turns green.
- Press [DVD] again to exit the learning mode.

COPY A COMMAND FROM ANOTHER KEY

You may copy a command from any HTR 2 key to any other. To copy a key function, after entering the Learning Mode, and pressing the desired key to be copied to, simply press the device key from which you wish to copy, having first pressed its Device Selector key if it resides on another "page." The status LED will turn green; press the Device Selector key again to exit Learning Mode.

Example: Copy the Pause command from the CD page to the AMP [] key:

- On the HTR 2, simultaneously press-and-hold [AMP] and [•] (record); the Learn LED turns steady green.
- Press [] (pause); the Learn LED turns amber.
- Press [CD]; press [] (pause); the Learn LED turns green.
- Press [AMP] again to exit the learning mode.

NOTE: The copy and punch-through functions are similar. However, if you copy a command and then subsequently delete, or over-write the original (source-key) command, the copied-to key's command remains unchanged. If you punch-through to a command and then delete or over-write the original key, the punched-through functions also change accordingly.

MACRO COMMANDS

A "macro" command is a series of two or more remote codes issued automatically from a single keypress. You might use a macro to automate a simple command sequence, such as, "Turn on the DVD player and then press 'play.'" Or you might compose an elaborate macro to power up an entire system, select a source, choose a Listening Mode, and begin playback—again, all from a single keypress. The HTR 2 can store one macro on each of its function keys (these exclude the Device Selector keys).

NOTE: Macros are independent of the currently selected device.

RECORDING MACROS

To record a macro, simultaneously press-and-hold for 3 seconds both the [MACRO] key and the HTR 2 function key to which you wish to assign the macro, until the status LED turns green. The macro button will also light up. Press the sequence of function keys to be recorded into the macro, being sure to first press the requisite Device Selector key for each function (you may switch devices while recording the macro as many times as necessary), allowing you to create macro containing commands from more than one Device Selector "page." When you have finished entering the desired command sequence, press [MACRO] again to store the macro; the Learn LED and [MACRO] key illumination will turn off.

NOTE: Each macro can store a maximum of 64 command steps. If you exceed this number, the macro will be stored automatically after the 64th command is added.

Example: Record a Macro to the [0] key to Turn on the T 752, Select the DVD Input, and Commence Playback:

- On the HTR 2, simultaneously press-and-hold [MACRO] and [0] (numeric zero); the Learn LED turns steady green.
- Press [AMP]; press [ON]; press [1] (red "DVD"); press [DVD]; press [play] (the Learn LED blinks as each step is added).
- Press [MACRO] again to exit the macro-record mode.

To clear a macro, perform the above steps without entering any functions.

EXECUTING MACROS

To execute a macro, press and release [MACRO]; its key illumination lights for 5 seconds. While it remains lit, press an HTR 2 key to which a macro has previously been stored. The corresponding macro will run; as each step executes, its "parent" Device Selector's key flashes lights briefly; when execution is finished, the [MACRO] key illumination goes out. Pressing any other HTR 2 key while a macro is executing will abort the macro. Remember that you must hold the HTR 2 so that its infrared emitter can activate the target components.

NOTE: When a macro executes, a 1 second delay is automatically inserted between its commands. If you need more than a 1 second delay between particular commands—for example, to permit a component to power up completely—you can record “empty” steps into the macro by changing Device Selector “pages” without entering actual command functions.

KEY-ILLUMINATION TIMEOUT

The HTR 2's key-illumination can be set to remain lit for 0-9 seconds. The default value is 2 seconds.

To set the illumination timeout, simultaneously press-and-hold for 3 seconds both the HTR 2's [DISP] and the [0-9] key, with the digit corresponding to the desired timeout duration; the Learn LED will flash twice to confirm the new setting. When set to zero, the illumination will not turn on at all.

NOTE: Key illumination is the biggest drain on the HTR-2's batteries. A short key-illumination timeout will extend battery life appreciably; turning it off altogether (set it to 0 seconds) will lengthen it still further.

FACTORY RESET

The HTR-2 can be reset to its factory state, deleting all learned commands, copied and punched-through keys, macros, and other setup information, reverting all keys to their pre-programmed library commands. To perform a factory reset simultaneously press-and-hold for 10 seconds the HTR 2's [ON] and [RTN] keys; the Learn LED will start to flash green. Release [ON] and [RTN] before the second flash is complete; the Learn LED will turn red, indicate the remote has been reset.

NOTE: You must release [ON] and [RTN] before the second flash goes out, otherwise the unit will not reset; should this occur, repeat the full procedure.

DELETE MODE

The HTR 2 can store learned, copied, and “default library” commands on any single key. (The default library commands are the pre-programmed NAD codes, such as the native T 752 commands on the [AMP] “page.”) You can delete commands by layers back “down” to the default library command on any key, removing learned commands, punched-through functions, and copied keys.

NOTE: The default library commands cannot be deleted, so you need not worry that using Delete Mode might cause irreparable changes.

To enter Delete Mode, simultaneously press-and-hold for 3 seconds both the desired key's Device Selector key and the [RTN] key, until the Learn LED turns green. Press the function key whose command you wish to delete; the Learn LED flashes; the number of times indicates which type of function has become active—see the table below. Press the active Device Selector key again to exit Delete Mode.

NOTE: You may delete multiple function-key commands on the same Device Selector “page,” but to delete from more than one Device Selector page you must exit Delete Mode and then re-enter it on the required page.

Flashes	Command Type
1	Default Library Command
2	Copied Library Command
3	Learned Command

LOADING CODE-LIBRARIES

The HTR 2 can store a different library of default NAD codes for each of its Device Selector “pages.” If the original default library does not control your NAD CD player, tape deck, DVD player, or other component, follow the procedure below to change the code-library.

Begin by ensuring that the component you wish the HTR 2 to control is plugged in and powered-up (“on,” not merely in standby). To enter the HTR 2's Library Mode, simultaneously press-and-hold for 3 seconds both the desired Device Selector key and the [A/V PRESET] key, until the Learn LED turns green. While keeping the HTR 2 pointed toward the component, enter the first appropriate three-digit code-library number from the table below. If the component turns off, press [ENTER] to accept that code-library number and exit the Library Mode. If the component does not turn off, enter the next three-digit code-library number from the table. When you enter the correct number the component will turn off; press [ENTER] to accept that code-library number and exit the Library Mode.

NAD-brand component	HTR 2 code-library numbers
CD	
CD Player (new)	200
CD Player (old)	201
TAPE	
Tape Deck B	400
Tape Deck A	401
DVD	
T562	600
T550, L55	601
T531, T571	602

SEARCH MODE

If none of the codes from the table, when entered, turns on the component, and if you are quite sure you have followed the above procedure completely and carefully, you may want to try the "search" method as follows:

Enter Library Mode by simultaneously pressing-and-holding for 3 seconds both the desired Device Selector key and the [A/V PRESET] key, until the Learn LED turns green. Now press-and-hold the HTR 2's [▲] (or [▼]) key; the remote will step through all the available codes at a rate of approximately 1 per second. When the component turns off, immediately release the cursor key; press [ENTER] to accept that code-library and exit the Library Mode. Try a few commands; should you prove to have stepped past the needed code-library, re-enter the Library Mode and use the cursor key to step back to it.

NOTE: It is possible that search mode will find code-libraries that operate, at least partially, some other-brand (non-NAD) components. You may certainly exploit such capabilities as you find them. However, since we can only ensure the completeness or accuracy of NAD code-libraries, we cannot support the HTR 2's operation with other-brand components.

CHECKING CODE-LIBRARY NUMBER

You can check the current code-library on any Device Selector key as follows. Enter Library Mode by simultaneously pressing-and-holding for 3 seconds both the desired component's Device Selector key and the [A/V PRESET] key, until the Learn LED turns green. Press the [DISP] key; the HTR 2 indicates the current code-library by flashing its [TAPE], [VCR], and [MACRO] keys. For example, to indicate code-library #501 the HTR 2 will flash [TAPE] 5 times, pause, and then flash [MACRO] once. You might wish to make a note of your components' code-library numbers.

SUMMARY OF HTR 2 MODES

<u>Mode</u>	<u>Keys To Press (for 3 seconds)</u>
Learn/Copy/Punch Through	Device Key + Record Key
Delete Mode	Device Key + Return Key
Macro Record	Macro Key + Function Key
Library Mode	Device Key + Preset Key
Back Light Timeout	Display Key + Digit Key
Factory Reset	(see "Factory Reset," above)

TRIGGER SETUP

The T 752's rear-panel TRIGGER output can be assigned to any of its six AV inputs: DVD, SAT, VCR, VIDEO 4-6. Whenever the assigned input is selected, either manually or by recalling a Preset, the TRIGGER output will produce +12 Vdc, which can be used to activate a connected component or system. See you NAD audio specialist for more information.

ASSIGNING THE TRIGGER OUTPUT

From the OSD's main <Setup> menu, select the <Input Settings> item using the remote's [▲/▼] and [◀/▶] keys; use the same keys to toggle the <Trigger 1 ON/OFF> line. One can select the video input (DVD, SAT, VCR, or VIDEO 4-6) you wish to assign to the TRIGGER 1 output. Select <Save and Exit> to store the trigger assignment.

CONDITION	POSSIBLE CAUSE(S)	POSSIBLE SOLUTIONS(S)
NO SOUND FROM ALL CHANNELS	<ul style="list-style-type: none"> AC power unplugged Power not switched on Outlet is unpowered Tape Monitor is engaged 	<ul style="list-style-type: none"> Check AC cable, connection, and outlet Disengage Tape Monitor
NO SOUND FROM SOME CHANNELS	<ul style="list-style-type: none"> Faulty/missing cables <Speaker Settings> channel (s) set to "None" on <Speaker Settings> menu Power-amp or speaker-connections faulty 	<ul style="list-style-type: none"> Check cables Check <Speaker Settings> menu Check power amp, cabling, and speakers
NO SOUND FROM SURROUND CHANNELS	<ul style="list-style-type: none"> No surround listening mode is engaged Surround-channels set to "None" on <Speaker Settings> menu Surround-channels level set too low on <Channel Levels> menu 	<ul style="list-style-type: none"> Select appropriate listening mode Correct <Speakers Settings> or <Channel Levels> settings
NO SOUND FROM SUBWOOFER	<ul style="list-style-type: none"> Subwoofer is off, unpowered, or improperly connected Subwoofer set to "OFF" on <Speaker Settings> menu Sub level set too low on <Channel Levels> menu 	<ul style="list-style-type: none"> Power-up subwoofer, check sub's AC outlet, or check connections Correct <Speakers Settings> or <Levels setup> settings
NO SOUND FROM CENTER CHANNEL	<ul style="list-style-type: none"> Source is a 2/0 (etc.) Dolby Digital or DTS recording without center channel; Center set to "OFF" on <Speaker Settings> menu Center level set too low on <Channel Levels> menu 	<ul style="list-style-type: none"> Play a known 5.1-channel recording or select Dolby Pro Logic or Mono mode Correct <Speakers Settings> or <Channel Levels> settings
NO DOLBY DIGITAL/DTS	<ul style="list-style-type: none"> Source's digital output is not connected to a T 752 digital input Source component not configured for multi channel digital output 	<ul style="list-style-type: none"> Check connections Check source component setup
T 752 DOES NOT RESPOND TO HTR 2 REMOTE	<ul style="list-style-type: none"> Batteries are flat or incorrectly inserted IR transmitter window on remote, or IR receiver window on T 752 is obstructed T 752 front panel is in very bright sunlight or ambient light 	<ul style="list-style-type: none"> Check batteries Check IR windows and ensure clear line-of-sight from remote to T 752 Reduce sunlight/room lighting
T 752 DOES NOT RESPOND FROM THE AC OUTLET TO FRONT-PANEL COMMANDS	<ul style="list-style-type: none"> Microprocessor error T752 may have over heated 12V TRIGGER IN/OUT is set to AUTO or "on" position 	<ul style="list-style-type: none"> Power-down the T 752 via the front-panel Power key <u>and unplug it from the AC outlet</u> Wait five minutes, re-connect and power up Switch to OFF position

SPECIFICATIONS

AV SURROUND SOUND RECEIVER

T752

Amplifier Section

Power output Stereo Mode

(8 ohms within rated distortion) 2 x 90W

IHF dynamic power; 8 ohms 2 x 150W

IHF dynamic power; 4 oh ms 2 x 200W

Power output Surround Mode 5 x 80W

Total harmonic distortion at rated power 0.08%

IM distortion at rated power 0.08%

Damping factor 8 ohms 60

Input sensitivity and impedance 200mV / 50k ohms

Frequency response 5 to 20,000 Hz ± 0.8 dB

Signal/noise ratio; ref rated power / 8 ohms (A-WTD) >90dB

Signal/noise ratio; ref 1W / 8 ohms (A-WTD) >80dB

Remote Control Yes

Tuner Section

Input sensitivity Mono 16.1dBf

50dB Stereo: 36.1dBf

Harmonic Distortion; FM Mono 0.25%

Harmonic Distortion; FM Stereo 0.5%

Signal / noise; Mono 60dB

Signal / noise; Stereo 55dB

Stereo separation at 1kHz 40dB

Frequency Response; ± 1.5 dB 30Hz - 15kHz

Physical Specifications

Dimensions (W x H x D) 17 1/8 x 5 3/16 x 13 3/4"
(435 x 132 x 350mm)

Net Weight 36 lbs (16.3kg)

Shipping Weight 38 lbs (17.1kg)

Specifications are subject to change without notice. For updated documentation and features please log onto www.nadelectronics.com for the latest information about your T752.



www.NADelectronics.com

©2002 NAD Electronics International

A Division of Lenbrook Industries LTD

All rights reserved. No part of this publication may be reproduced, stored or transmitted in any form without the written permission of NAD Electronics International

A Division of Lenbrook Industries LTD

T752 Manual GB/F/D/NL 09/02 China