PHILIPS RADIOPLAYER

MODEL 125

SPECIFICATIONS

(Subject to alteration without notice)



| Power Supply | 220-260V, 40-60 c/s. |
|------------------------|---|
| Tuning Ranges | 530-1620 kc/s. 5.9-18.4 Mc/s. |
| Magnified S/W Ranges | 9.4-10.0 Mc/s (31M band) 11.4-12.1 Mc/s (25M band) 15.0-15.7 Mc/s (19M band) 17.4-18.0 Mc/s (16M band) |
| Intermediate Frequency | 455 kc/s. |
| Cabinet | Wooden table |

VALVE EQUIPMENT AND VOLTAGE ANALYSIS

| Valve Function | Valve No. | Valve Type | Plate Volts | Screen Volts | Osc. P Volts | |
|---|--------------|--------------------------------------|----------------|-----------------|-----------------|--|
| R.F. Amplifier | VI | 6N8 | 252 | 49 | | |
| Frequency Converter | V2 | 6AN7 | 252 | 92 | 99 | |
| 1.F. Amplifier, A.V.C. and Demodulator | V3 | 6N8 | 252 | 75 | : <u> </u> | |
| Audio Amplifier | V4 | 6N8 | 41 | 12 | | |
| Power Amplifier | V5 | 6M5 | 235 | 252 | | |
| Rectifier | V6 | 6X5GT V6 Cathode to L14 C.T. — 308V. | | | | |
| Dial Lamps | VII & VI2 | 6.3V 0.32A tubular screw | | | | |

NOTE: These voltages are measured with an "1,000 ohms per voit" meter and may vary $\frac{1}{2}$ 10% from the figures quoted. They are measured from the socket points indicated to chassis or across the resistors listed. The receiver should be in a "no signal" condition.

TO REMOVE CHASSIS FROM CABINET.

Remove the power plug from the mains outlet socket. Remove the cabinet back and the four control knobs (a firm pull is all that is necessary). Release the dial cursor assembly from the dial cord and withdraw the dial lamps plug from its socket. The chassis is held to the cabinet by means of four screws in the base of the chassis and three in the baffle. Removal of these screws permits the chassis to be withdrawn from the cabinet. As the chassis is withdrawn, it should be tilted to prevent the baffle fouling the dial assembly.

The chassis may be refitted to the cabinet by a reversal of the above procedure.

MAINS VOLTAGE ADJUSTMENT.

The power transformer is provided with two primary winding tappings—220/240 volts and 250/260 volts—for adjustment of the receiver to the supply voltage at the point of installation. The receiver is adjusted at the factory to the 220/240 volts tapping.

DIAL CALIBRATION ADJUSTMENT.

If station calibrations are incorrect by an equal amount over the length of the dial scale, the condition may be corrected by loosening the cursor to dial cord clamping screw, making the necessary adjustment, and firmly retightening the screw.

ALIGNMENT.

The incorporation of a removable cabinet bottom cover allows nearly all of the alignment work to be performed without having to remove the chassis from the cabinet. It is, however, necessary to remove the chassis for adjustment of the aerial trimmers for the continuous short wave and both magnified bands. Before commencing alignment, set the dial cursor, with the tuning capacitor fully closed, to the 300 mark on the escalator scale.

A diagram showing the location of the trimming capacitors is published with the circuit diagram drawing. The B/C aerial trimmer (not shown on the drawing) is mounted on top of the chassis.

The iron cores for the secondaries of the 1.F. transformers are accessible from the top of the cans; those for the primaries are accessible from the bottom.

There is an interdependence between trimmers and it is necessary that the broadcast and continuous short wave bands be completely aligned before alignment of the magnified bands is attempted.

Alignment frequencies are:---

Broadcast band 1,420 kc/s. and 600 kc/s.

band 18.4 Mc/s., 17.8 Mc/s., 6 Mc/s. Magnified band ! 11.9 Mc/s.

Magnified band II 15.3 Mc/s., 17.8 Mc/s.

Capacitive trimmer adjustments are used on all frequencies except 600 kc/s., where the B/C oscillator iron core is used, and 6 Mc/s., where the S/W oscillator iron core is used. Do not attempt to adjust the iron core of the aerial and R.F. coils.

In trimming magnified band II, use the series trimmer C34 at 15.3 Mc/s and the parallel trimmer C41 at 17.8 Mc/s. The procedure here, if calibrations do not come correct at the first attempt, is to halve out the error each time until calibrations are correct.

The magnified band oscillator trimmers should not be finally adjusted until the chassis is refitted to the cabinet.

If an oscillator coil has been replaced, a preliminary adjustment of the iron core is necessary. This is done at 600 kc/s, for the broadcast coil and 6 Mc/s, for the short wave coil. The adjustment consists of setting the

dial cursor to the appropriate frequency and adjusting the iron core until a signal of that frequency is received.

The oscillator and signal frequency relationships are:—
Continuous S/W band: Oscillator frequency higher than signal.

Magnifled band 1:

- 31 metres band: Oscillator frequency higher than signal.
- 25 metres band: Oscillator frequency lower than signal.

Magnified band II:

- 19 metres band: Oscillator frequency higher than signal.
- 16 metres band: Oscillator frequency lower than signal.

REMOVAL OF INCLINATOR DIAL ASSEMBLY.

This operation can be carried out with the chassis in position in the cabinet, but it is facilitated if it is first removed—see "To Remove Chassis from Cabinet." In order to prevent possible damage to the dial glass, it is well to remove it also—see "Dial Glass Removal."

The inclinator dial assembly is held in place by means of two mounting brackets located at the ends. Removal of these brackets, from within the cabinet, permits the assembly to be lifted clear of the cabinet. If the operation is performed with the chassis in position, make sure that the dial lamp plug is removed from its socket, and the dial cursor is released from the dial cord before proceeding.

DIAL GLASS REMOVAL

Raise the dial glass into its maximum forward position. This allows access to the dial glass clamping screws in the dial assembly end housing. Loosen the clamping screws (it is not necessary that they be completely removed) and withdraw the dial glass from the assembly. When the dial glass is replaced, make sure that it is securely clamped.

DIAL LAMP REPLACEMENT.

This operation is carried out from outside the cabinet. The dial lamps are located, one at each end of the dial glass, in the end housing. The covers are a clip fit and are easily removed.

PARTS LISTS

| | CAPACITORS | 1 | | CAPACITORS | |
|-------------------|------------------------|---------------------------------------|------------------------|--|-----------|
| No. | Description | Code No. | No. | Description | Code No. |
| C1 | 150 pF mica | - 1 | C49 | 20 pF mica | |
| C2, 13, 14, | | | C51, 52 | Part of 2nd 1.F. transfor | mer |
| 18, 24, | | | C54 | 0.002 mF 600V paper | |
| 25, 37, 42, 43 | 30 pF air trimmer | CZ.113.700 | C56 | 100 pF mica + 10% | |
| C3, 19 | 50 pF mica + 1 pF | | C58 | 0.005 mF 600V paper | |
| , | | | C59 | 0.05 mF 400V paper | |
| C4, 20 | 120 pF mica + 1% | CZ.065.712 | C60, 66 C63 | 0.02 mF 400V paper 50 pF mica | |
| C5 | 65 pF mica + 1 pF | CZ.064.111 | C64 | 200 pF mica | |
| C6, 22 | 260 pF mica + 1% | | C65 C68 | 0.02 mF 600V paper I pF wire | |
| C7, 8, 9 | 3 gang tuning | CZ.108.204 | | RESISTORS | |
| C10, 62 | 0.1 mF 200V paper | | No. | Description | Code No. |
| C11, 26 | 0.001 mF mica | | R1, 7, 14 | I megohm ¥W carbon | |
| C12, 23, | | | R2, 31 | 250,000 ohms ½W carb | |
| 34, 41 | 8 pF air trimmer | CZ.113.500 | R3 | 25,000 ohms 1W carbo | |
| C15, 27, | | | R4 | 20,000 ohms ½W carbor | |
| 50, 55 | 0.01 mF 600V paper | | R5 R6 | 75 ohms IW W/W 10 50 ohms IW W/W 10 | |
| C16 | 30 pF mica | | R8 | 30,000 ohms IW carbo | 1.4 |
| C17 | 5 pF mica | | R9 | 15,000 ohms IW carbo | |
| CZI | 60 pF mica 1 pF | CZ.064.109 | R10 | 30,000 ohms 1W carbo | |
| C28, 29, 53 | 100 pF mica | 1 | RII | 25,000 ohms ½W carbo | |
| C30 | 40 pF ceramic T 1 p | pF | R12 | 100 ohms ½W carbon | |
| | | CZ.096.403 | R13 | 100,000 ohms ½W carb | on |
| C31 | 20 pF mica + 1 pF | CZ.064.101 | R15, 16, 18, 26, 30 | 0.5 megohm ½W carbon | |
| C33 | 190 pF mica + 1% | i | R17 | 150,000 ohms 1W carb | |
| C33 | | | R19, 21, 29 | 50,000 ohms ½W carbo | |
| C35 | 45 pF mica + 1 pF | CZ.064.108 | R20, 32 | 10,000 ohms ½W carbon | 1 |
| C36 | 225 pF mica + 1% | CZ.065.715 | R22 | 0.5 megohm tapped carbon potentiometer | |
| C38 | 450 pF mica + 2% | CZ.066.117 | R23, 25 | 2 megohms ½W carbon | 2.029.129 |
| C39 | | · · · · · · · · · · · · · · · · · · · | R24 | 2 megohms TW carbon | |
| | 0.0045 mF mica ± | | R27 | 250,000 ohms 1W carb | on . |
| C44, 45 | 24 mF 525V electroly | ytic | R28 | 100,000 ohms IW carb | on |
| C46, 47 | Part of 1st 1.F. trans | stomer | R33 | 250 ohms 3W W/W | 10% |
| C48, 61 | 0.05 mF 200V paper | , | R34 | 25 ohms \W W/W 10 | 0% |
| | | 1 | R35 | 100 ohms ½W carbon | |


COILS

| | | | | | | | |
|-------------|--------|----------------------|------------|------|--------|----------------------|------------|
| No. | Ohms | Description | Code No. | No. | Ohms | Description | Code No. |
| L1 L2 | 23 | B/C Aerial Coil | | L13 | 45 | | 4000 740, |
| | 2 3 | (2 white spots) | CZ.323.008 | L14 | 600 (| Power Transformer | C7 344 313 |
| L3 | 1 1 | S/W Aerial Coil (1 a | red | LIS | <0.5 € | rower transformer | CZ.344.217 |
| L4 | <0.5 } | and I white spot) | CZ.323,009 | L16 | ≺0.5 丿 | | |
| L5 | 45 } | B/C R.F. Coil | | L17 | 520 | Filter Choke | CZ.341.002 |
| L6 | 2 5 | (2 black spots) | CZ.323.225 | L18 | 12 3 | | |
| L7 | <0.5 } | S/W R.F. Coil | | L19 | 12 | 1st J.F. Transformer | CZ.320.421 |
| L8 | <0.5 ∮ | (2 yellow spots) | CZ.323.226 | L20 | 12 3 | | |
| L9 | 1 } | B/C Oscillator Coil | | 1.21 | 12 | 2nd I.F. Transformer | CZ.320.420 |
| LIO | 3) | (1 blue spot) | CZ.330.602 | L22 | 350 î | Speaker Transformer | |
| LII | <0.5 } | S/W Oscillator Coil | | L23 | ر 0.5 | 6,000 ohms | CZ.345.007 |
| L12 | <0.5 ₺ | (I white spot) | CZ.330.603 | L24 | 1.5 | Speaker | CZ.161.216 |
| | | | | | 1.3 | Speaker | CE.101.210 |

IMPORTANT! In ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.

MISCELLANEOUS COMPONENTS

| No. on | Dial | | No. o | n Dial | | |
|----------|--|-------------|------------|----------|--------------------------|-------------|
| Layout C | rawing Description | Code No. | | Drawing | Description | Code No. |
| • | • | | - Lary vot | Diawing | Description | Code 140. |
| | Assembly, baffle | CR.005.240 | _ | Clamp, | incl, dial mounting | CS.235,205 |
| | Assembly, cabinet bottom cover | | - | Clip, c | oil can mounting | CS.235.831 |
| _ | Assembly, cursor | CR.480.614 | | Cloth, i | paffle | CE.081.82 |
| | Assembly, dial housing R.H. | CR.272.604 | _ | Cover, | front (incl. dial) | CS.430.842 |
| | Assembly, dial housing L.H. | CR.272.605 | - | Cover, | rear (incl. dial) | CS.430.843 |
| _ | Assembly, inclinator dial | CR.484.815 | | Cord, b | affle | CE.085.40 |
| _ | Assembly, lamp cover R.H. | CR.272.401 | 5 | Cord, c | dial drive | CS.361.830 |
| _ | Assembly, lamp cover L.H. | CR.272.400 | Ţ | Drum, | dial | CS.360.007 |
| | Assembly, pressure plate R.H. | CR.391.206 | _ | Key, W | //C clicker | CS.365.808 |
| _ | Assembly, pressure plate L.H. | CR.391.207 | | Knob, (| control | CS.432.616 |
| 7 | Assembly, pulley spindle | CR.436.209 | _ | Mount, | incl. dial | CS.235.830 |
| , | Assembly, pulley spindle bracket | | _ | Plate, c | lamping (incl. dial) | CS.235.200 |
| 6 | (bottom of baffle) | CR.265.003 | - | Plate, f | riction (incl. dial) | CS.366.200 |
| 0 | Assembly, pulley spindle bracket | | _ | Plate, s | pindle bearing | CS.400,207 |
| | (top of baffle) | CR.265.002 | | Plug, 2 | -pin polarised | CR.102,200 |
| -8 | Assembly, terminal | CZ.376.200 | 4 | | wooden | CS.360.201 |
| _ | Assembly, tuning spindle | CR.371.318 | _ | | C" (tuning spindle) | C5.281.802 |
| - | Assembly, T/C clicker | CR.450.032 | 3 | | ial cord | CS.281.807 |
| _ | Assembly, T/C switch | CZ.200.507 | _ | | al slide | CS.382.202 |
| _ | Assembly, slider hinge | CR.432.200 | ****** | Scale, d | liał | CS.412.327 |
| | Assembly, W/C clicker | CR.450.038 | _ | Socket, | 2-pin polarised | CR.102.401 |
| _ | Assembly, W/C switch | CZ.203.501 | _ | Socket, | | CZ.369.702 |
| _ | Assembly, W/C sw. mounting | | | Socket, | | CZ.369.703 |
| _ | Back, cabinet bracket | CR.264,800 | - | | compression (incl. dial) | |
| _ | Badge, Philips | CS.462.099 | 2 | | dial drum | CS.210.010 |
| _ | | CS.436.414 | _ | | return (incl. dial) | CS.212.201 |
| _ | Bank, W/C switch (A4) | CZ.200.509 | | Strip, n | | CS.050.403 |
| | Bank, W/C switch (A1-2) Bank, W/C switch (A3) | CZ.200.508 | | | mains on/off | CZ. 220.001 |
| | Bank, T/C switch | CZ.200.510 | | | , W/B indicator | CS.442,029 |
| | Bracket, cover attaching R.H. | CZ.200.512 | _ | | r, T/C indicator | CS.442.028 |
| - | Bracket, cover attaching L.H. | CS.229.803 | | | felt (incl. dial) | CS.424.020 |
| | | C\$.229.802 | _ | | felt (knobsthin) | CS.467.053 |
| | | | _ | Washer, | felt (knobs—thick) | CS.467.052 |
| | | | | | | |

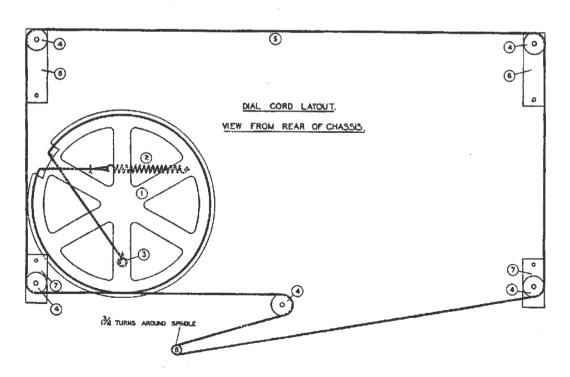

SERVICE DATA

