


Operating Instructions

STEREO RECEIVER SX-337 SX-227

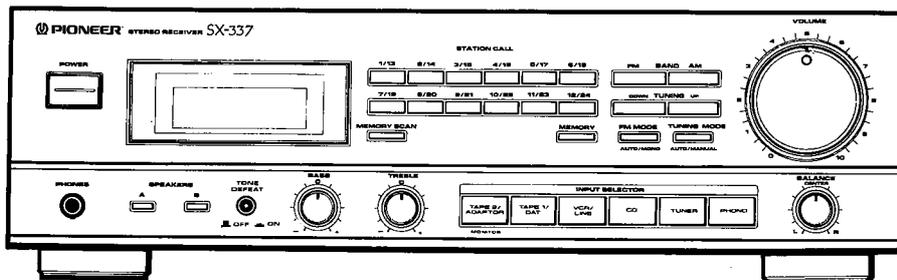

- The illustration shows model SX-337.

Thank you for buying this Pioneer product.

Please read through these operating instructions so you will know how to operate your unit properly. After you have finished reading the instructions, keep the manual in a safe place for future reference.

In some countries or regions, the shape of the power plug and power output may sometimes differ from that shown in the drawings. However, the method of connecting and operating the unit is the same.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT 1



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK). NO
USER-SERVICEABLE PARTS INSIDE. REFER
SERVICING TO QUALIFIED SERVICE
PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance



PIONEER
The future of sound and vision.

IMPORTANT 2

If the apparatus is fitted with AC mains power outlet(s), see REAR PANEL FACILITIES for convenient connection of additional Hi-Fi component(s). Make all connections to the AC outlet(s) and the signal terminals first. Connect the plug to the wall socket last, make sure that the power switch is off. Disconnect the wall plug when the equipment is not in (regular) use, e.g. when on vacation.

FOR USE IN THE UNITED KINGDOM

The wires in this mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Equipment sold in the U.K. is not supplied with a power plug.

INSTALLATION

LOCATION

Install the receiver in a well ventilated location where it will not be exposed to high temperature or humidity.

Do not install the receiver in a location which is exposed to direct rays of the sun, or near to hot appliances or radiators. Excessive heat can adversely affect the cabinet and internal components. Installation of the receiver in a damp or dusty environment may result in malfunction or accident. (Also avoid installation near cookers etc., where the receiver may be exposed to smoke from oil, steam or heat.)



POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

MAINTENANCE OF EXTERNAL SURFACES

- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the surfaces are very dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and wrung out well, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.
- Never use thinners, benzine, insecticide sprays and other chemicals on or near this unit, since these will corrode the surfaces.


CONTENTS

INSTALLATION	2	LISTENING TO THE BROADCAST	9
CHECKING ACCESSORY ITEMS	3	PRESETTING STATIONS	10
CONNECTIONS	4	TO LISTEN TO OTHER MUSIC SOURCES	11
HINTS FOR BETTER RECEPTION.....	5	TAPE RECORDING	12
FRONT PANEL FACILITIES.....	6	TROUBLESHOOTING	13
REAR PANEL FACILITIES.....	8	SPECIFICATIONS	14
SETTING THE UNIT BEFORE OPERATION.....	8		

CHECKING ACCESSORY ITEMS



FM T-type Antenna

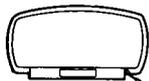


AM Loop Antenna


Setting Up the AM Antenna

- Insert the stopper on the bottom of the antenna into the hole on the leg.
- To permanently fix the antenna, screw the leg to a wall or something similar before assembling (fixing the antenna in the direction that gives the best reception).
- Place the antenna on a level surface and rotate it to locate the orientation that yields the best reception.

AM Loop Antenna Set up

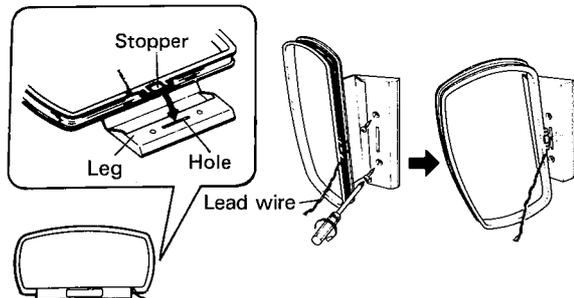

CONNECTIONS

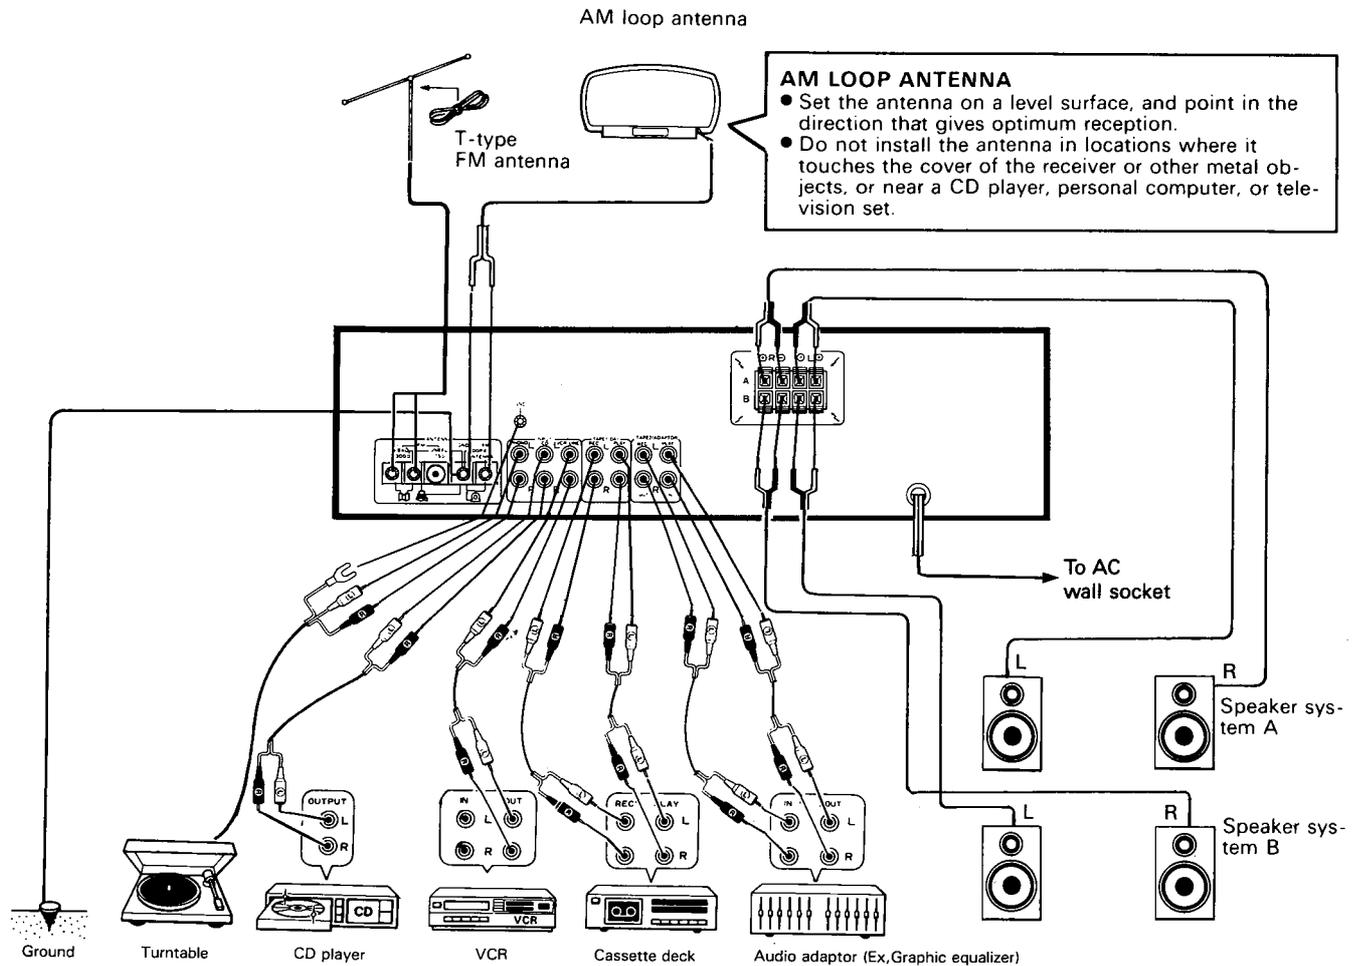

Grounding


Although grounding is not necessary for reception it is recommended for protection against damage from lightning if an outdoor FM antenna is used. Grounding is recommended as well, to help reduce noise and hum.

DANGER:

Never make the ground connection to a gas pipe as sparks could cause the gas to ignite.

Audio input/output jacks of this unit are dull and tin-plated, aiming at high quality.

Connecting the speaker cords

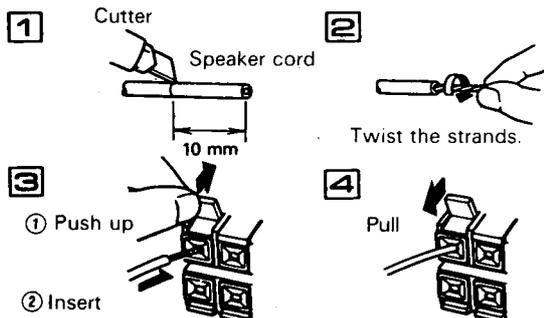

Connecting the input/output cords

When other stereo components are connected, note the following instructions:

- Connect the plugs properly. Faulty connections can cause noise and also breakdowns and failures.
- The white terminal is for the left channel and the red terminal is for the right channel.

CAUTION ABOUT SPEAKER CONNECTIONS

When using either A or B:

- The speaker systems used should have an impedance of between 4 and 16 Ω (SX-337), 8 and 16 Ω (SX-227).

When using A and B simultaneously:

- The speaker systems used should have an impedance of between 8 and 16 Ω .

- Be sure that connections are secure. Check to make sure that wires do not protrude from their terminals.
- Do not allow the speaker cords to become shorted. Damage may result to your unit.
- Do not attempt to simultaneously connect two sets of speakers to a single side (A or B). When using two sets of speakers, connect one set to side A and one set to side B.

HINTS FOR BETTER RECEPTION

OUTDOOR FM ANTENNA

The main advantage of FM over AM is the quality of the broadcast signal. In order to benefit fully from the high signal quality of FM broadcasts, it is recommended that a special-purpose FM antenna be installed. In weak signal areas, a multi-element antenna should be used.

NOTE:

Consult your dealer as to the selection and actual installation of the FM antenna.

FM ANTENNA CONNECTIONS

There are two ways of connecting the FM antenna to the antenna input terminals: with a 300Ω twin-lead feeder or with a 75Ω coaxial cable. If full justice is to be done to the tuner's performance, a 75Ω coaxial cable is recommended since it is more immune than the twin-lead feeder to noise and interference from external sources. If an FM antenna has already been erected outdoors, connect it, referring to the figure.

GROUNDING

Grounding is recommended if reception of FM programs is impaired by noise. To ground, connect a thick polyvinyl wire to the GND terminal and attach the other end to a metal water pipe or grounding bar or wind it around a copper plate and bury it.

DANGER:

Never connect a wire to a gas pipe for grounding since sparks may ignite the gas.

OUTDOOR AM ANTENNAS

If it is not possible to obtain adequate AM reception even by changing the orientation of the AM loop antenna, a separate indoor antenna, or an outdoor antenna should be installed.

INDOOR AM ANTENNA




Use a vinyl insulated wire (5 — 6 m) and connect one end to the AM antenna terminal and affix the other end to the wall or ceiling, as high as possible.

OUTDOOR AM ANTENNA

If reception quality is not improved sufficiently even when an indoor antenna is used, a vinyl insulated wire should be installed outside and fixed in place.


CAUTION:

Do not detach the AM loop antenna when using an indoor or an outdoor AM antenna.

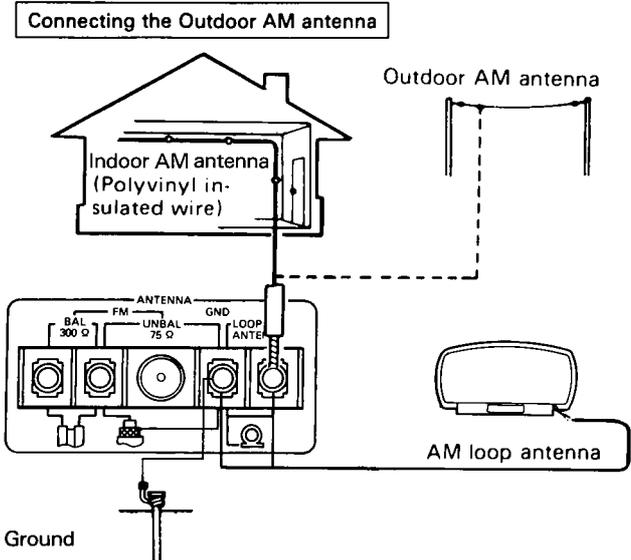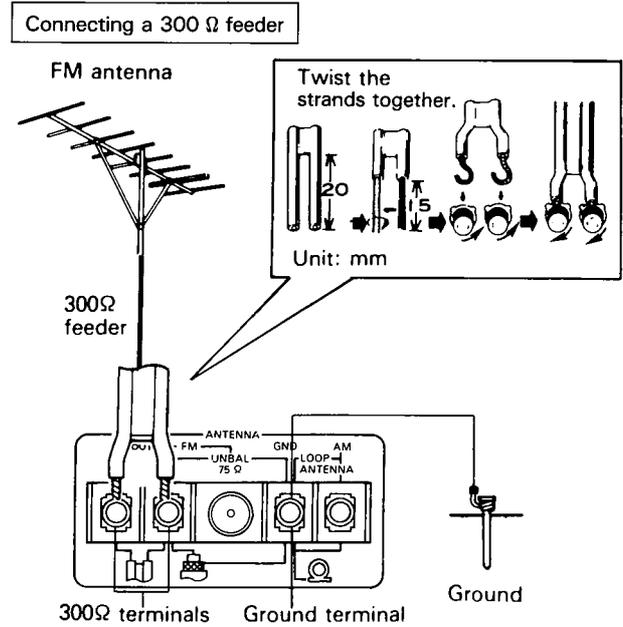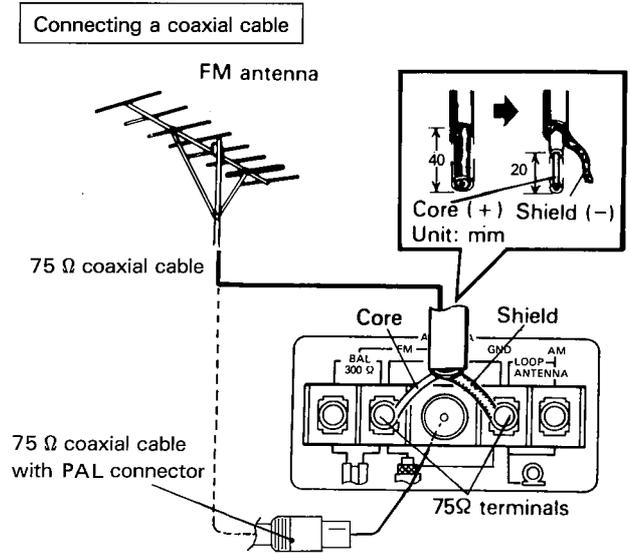

FRONT PANEL FACILITIES

The illustration shows model SX-337.

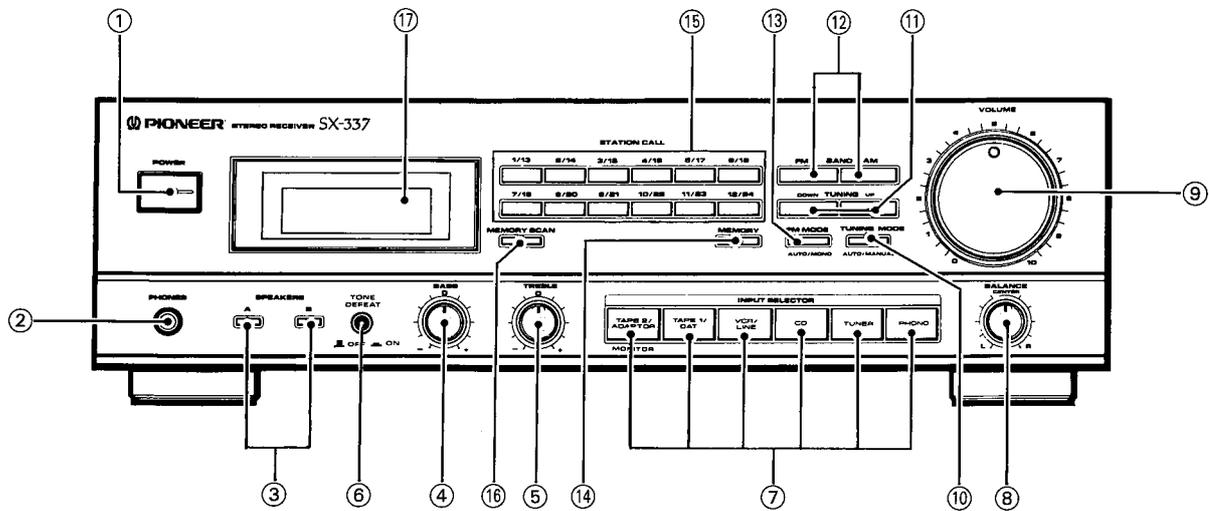

① POWER switch

When this switch is pressed, power is supplied to the unit. Press the switch again to turn power off.

② PHONES jack

Connect the plug on your headphones to this jack. To listen to a program through the headphones only, set both SPEAKERS A and B switches to the OFF position.

③ SPEAKERS switches (■ off, ■ on)

These are used to select the speaker through which you wish to listen.

A: When the speakers connected to A terminals are in use.

B: When the speakers connected to B terminals are in use.

- Turn both A and B speakers to off position when only the headphones are in use.

CAUTION: (SX-227 only)

No sound will be heard through the speakers when both A and B switches are pressed if only one set of speakers has been connected to either A or B SPEAKERS terminals.

④ BASS tone control

Use to adjust the low-frequency tone.

The center position is the "0" (normal) position. When moved to the right, low-frequency tones are emphasized; when moved to the left, low-frequency tones are de-emphasized.

⑤ TREBLE tone control

Use to adjust the high-frequency tone.

The center position is the "0" (normal) position. When moved to the right, high-frequency tones are emphasized; when moved to the left, high-frequency tones are de-emphasized.

⑥ TONE DEFEAT Switch (■ OFF, ■ ON)

ON: In this position, the input signal is not adjusted by the BASS and TREBLE controls, resulting in an unequalized, or flat sound.

OFF: In this position, the BASS and TREBLE controls can be used to adjust the sound.

⑦ INPUT SELECTOR switches

Use to select playback source.

[TAPE 1/DAT] — Press when listening to tape playback with a cassette deck or digital audio tape deck (DAT).

[VCR/LINE] — Press when listening to programs from a component connected to the VCR/LINE terminals.

[CD] — Press when listening to compact disc playback with a CD player.

[TUNER] — Press when listening to AM or FM broadcasts with a tuner.

[PHONO] — Press when listening to record playback on a turntable.

MONITOR switch

[TAPE 2/ADAPTOR] — Press when listening to tape playback with a cassette deck or when using a graphic equalizer.

⑧ BALANCE control

Should normally be left in the center position. Adjust balance if sound is louder from one of the speakers. If the right side is louder, turn toward L position and if the left side louder, turn toward R position.

⑨ VOLUME control

Use to adjust volume level.

⑩ TUNING MODE AUTO/MANUAL switch

Works during FM reception.

Use this switch to select either the AUTO mode or the MANUAL mode.

When the "AUTO" indicator is lit, the receiver is in the AUTO mode. (See page 9)

⑪ TUNING switches (DOWN, UP)

UP: The FM or AM band is scanned in the direction of increasing frequency.

DOWN: The FM or AM band is scanned in the direction of decreasing frequency.

⑫ **BAND selector switches**

These switches are used to select either AM or FM reception.

AM: Push this switch for AM reception.

FM: Push this switch for FM reception.

⑬ **FM MODE AUTO/MONO selector switch**

Use to select the auto stereo mode or monaural mode when listening to FM broadcasts.

Auto stereo mode:

Normally leave in this mode for reception. When a stereo FM broadcast is received, it will be automatically reproduced in stereo sound.

Monaural mode:

When receiving distant stations or stations with weak broadcast signals, the input signal may be weak, thus resulting in increasing noise during FM stereo broadcasts. In this event, setting the receiver to the monaural mode will reduce the noise. In this case, however, FM stereo broadcasts will be reproduced in monaural sound.

The monaural mode has been selected when the FM MONO indicator is lit.

NOTE:

This switch has no effect on reception of AM broadcasts.

⑭ **MEMORY switch**

This is used to memorize stations. When the switch is pressed, the frequency indicator will flash. To memorize the frequency of any station, press a STATION CALL switch while the frequency indicator is flashing. (See page 10)

⑮ **STATION CALL switches**

These switches are used to preset and recall desired broadcasting stations.

⑯ **MEMORY SCAN switch**

Press this switch to scan the stations in the memory.

⑰ **OPERATION DISPLAY panel**

(a) Indicates the function selected by the INPUT SELECTOR.

(b) Indicates frequency or channel (STATION CALL number).


(c) Indicates TAPE 2 monitor

(d) FM STEREO indicator


(e) AUTO tuning indicator

(f) FM MONO indicator

(g) TUNED indicator

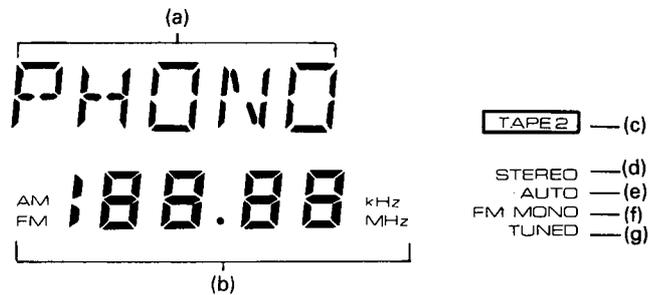

REAR PANEL FACILITIES

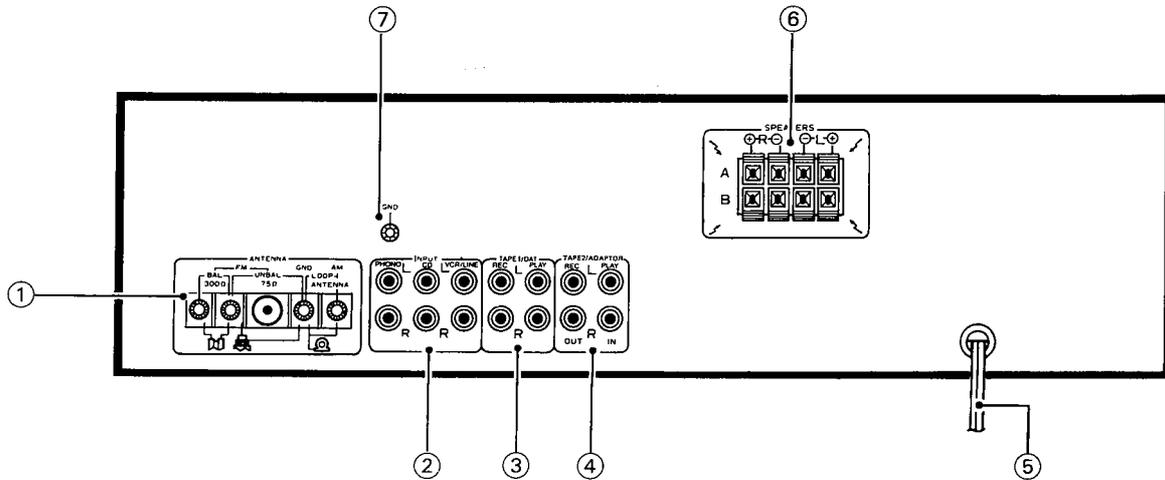

① FM/AM ANTENNA terminals

Use these antenna terminals for receiving FM and AM broadcasts.

② INPUT jacks

PHONO...Connect to the output cables from a turntable.
 CD...Connect to the output jacks of a compact disc player.
 VCR/LINE...Connect to the output jacks of a video cassette recorder, etc.

③ TAPE 1/DAT jacks

Connect these jacks to a cassette deck or digital audio tape deck (DAT).

④ TAPE 2/ADAPTOR jacks

Connect these jacks to a cassette deck or Audio Adaptor.

⑤ Power cord

⑥ SPEAKERS terminals


A: Connect to a first set of speakers.
 B: Connect to a second set of speakers.

⑦ GND terminal

Connect to the ground lead of a turntable.

SETTING THE UNIT BEFORE OPERATION

- Before operating the unit, be sure to set it as shown below.

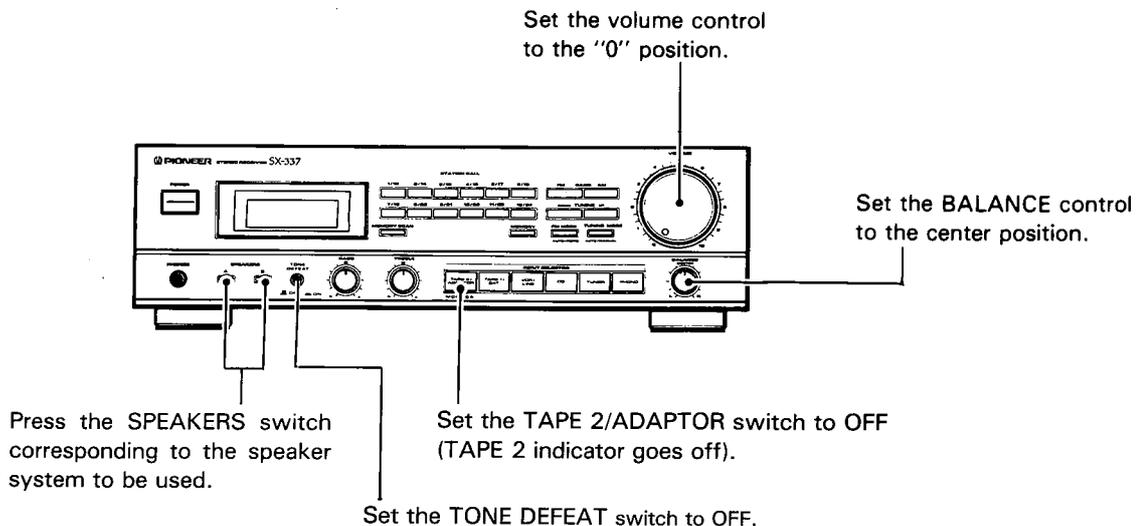


LISTENING TO THE BROADCAST

- Check that all terminals are properly connected before switching on the unit.

AUTO TUNING (FM reception)

The electronic tuning circuit inside the unit will search for the station.

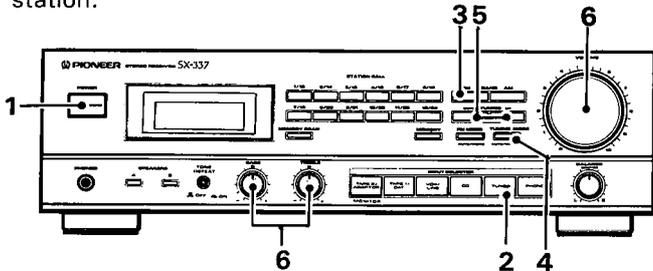


1. Turn on the **POWER** switch.
2. Press the **TUNER** switch of the **INPUT SELECTOR** switches.
3. Set the **BAND** selector switches for FM reception.
4. Press the **TUNING MODE AUTO/ MANUAL** switch to establish the **AUTO** tuning mode (the **AUTO** indicator lights).
5. Press the **TUNING** switches "**UP**" or "**DOWN**" for a higher or lower frequency as desired.

NOTE:

When the **AUTO TUNING** is in use, reception may not be possible over long distances or when signals are weak. At these times manual tuning is recommended.

6. Adjust the **VOLUME** control and the **tone controls**.

MANUAL TUNING (FM/AM reception)

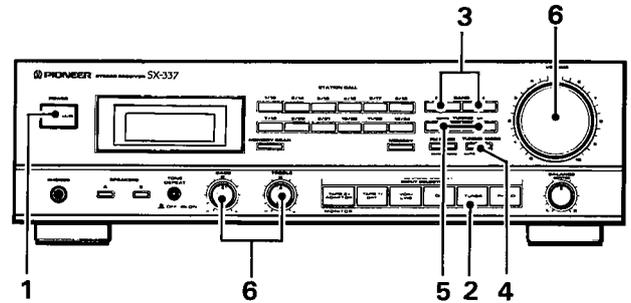

1. Turn on the **POWER** switch.
2. Press the **TUNER** switch of the **INPUT SELECTOR** switches.
3. Select your desired broadcasting band using the **BAND** selector switches.
4. Press the **TUNING MODE AUTO/MANUAL** switch to establish the **MANUAL** tuning mode (the **AUTO** indicator goes off).
5. Use the **TUNING** switches to locate the frequency of the desired station.


NOTE:

The **TUNED** indicator will not function for broadcasts received over long distances or when signals are weak.

6. Adjust the **VOLUME** control and the **tone controls**.

PRESETTING STATIONS


PRESETTING

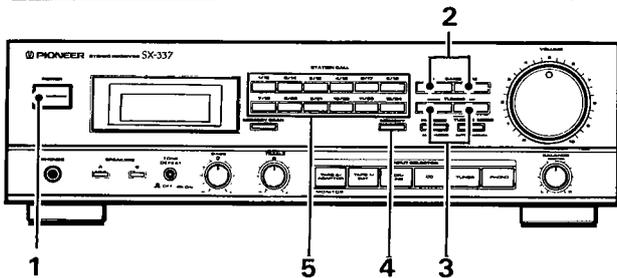

1. Turn on the POWER switch of the unit.
2. Select band of station to be memorized.
3. Tune is desired station.
 - See the AUTO TUNING section for information on reception using Auto Tuning.
 - See the MANUAL TUNING section for information on reception using Manual Tuning.

When memorizing an FM station, either press the FM MODE switch to memorize the station in the monaural mode, or memorize the station in the auto stereo mode (with FM MODE switch left in the AUTO position).


4. Press the MEMORY switch.
 - The display will flash (about 5 seconds).

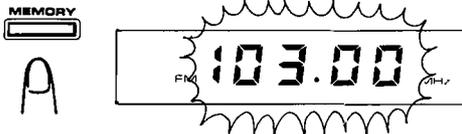

5. Press the STATION CALL switch.
 - While the display is flashing, press the switch corresponding to the station which you wish to preset or re-preset.


When presetting a station to Mode 1 (e.g. presetting a station to No. 9):

By pressing the STATION CALL 9/21 switch once, the station will be preset to Mode 1. (1 ~ 12)

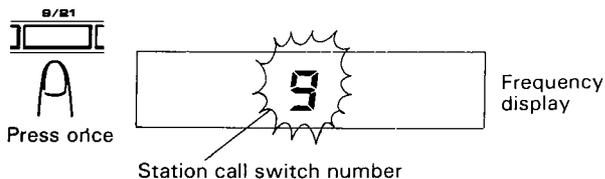

When presetting a station to Mode 2 (e.g. presetting a station to No. 21):

By pressing the STATION CALL 9/21 switch twice, the station will be preset to Mode 2. (13 ~ 24)

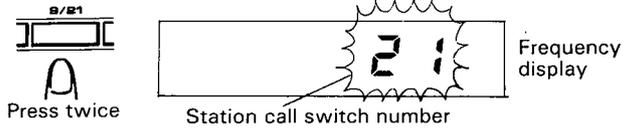


- After you press the STATION CALL switch, the display will flash for about 3 seconds, then the station will be memorized. If you press another switch while the display is flashing, the station will not be memorized.

MEMORY SCAN

Pressing the MEMORY SCAN switch, radio broadcasts preset in the memory are scanned in order for convenient confirmation. The scanning of preset stations can be cancelled by pressing the MEMORY SCAN switch once more or by pressing one of the STATION CALL switches.

RECEPTION USING PRESET TUNING

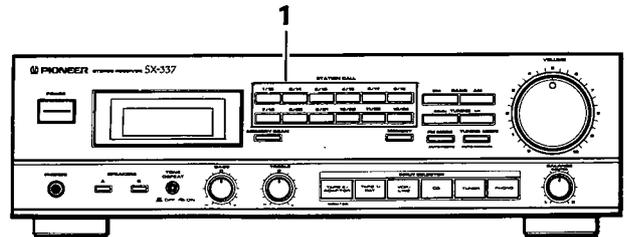


1. Press the STATION CALL switch into which the desired station has been memorized.
 - To listen to a Mode 1 broadcast, press the switch once, and to listen to a Mode 2 broadcast, press it twice.
 - By pressing the STATION CALL switch, the switch number will be displayed, then the frequency will be displayed.

In this way, simple and accurate reception of any desired station is possible.

Last station memory

- The last station received on either band is memorized and can be tuned in again just by pressing TUNER and BAND selector switches.
- These last two stations are in memory even if POWER is turned off.

TO LISTEN TO OTHER MUSIC SOURCES

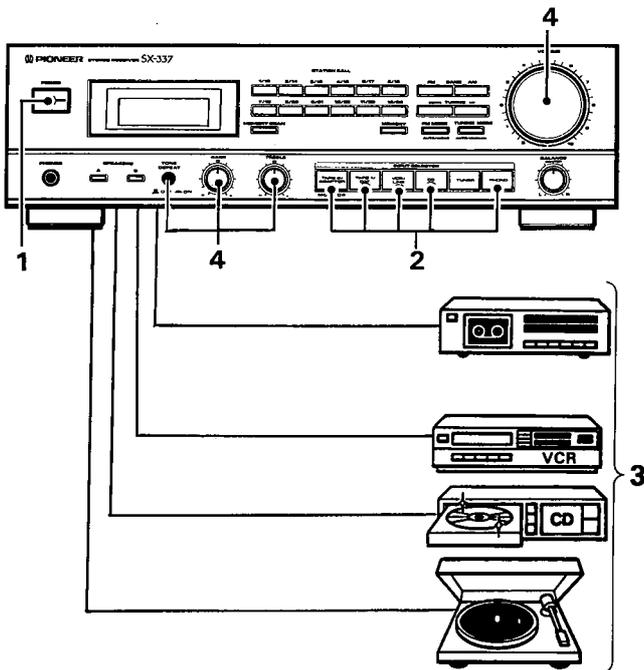


1. Turn on the **POWER** switch of the unit. Also turn on the power to the stereo components you wish to use.
2. Use the **INPUT SELECTOR** switches and tape monitor switches as appropriate to select the desired program source.

	INPUT SELECTOR switch	TAPE 2/ADAPTOR (MONITOR) switch
To listen to a tape on the cassette deck connected to TAPE 2/ADAPTOR jacks.	—	ON
To listen to the component connected to VCR/LINE jacks.	VCR/LINE	OFF
To listen to a CD	CD	OFF
To listen to records	PHONO	OFF
To listen to TAPE 1/DAT	TAPE 1/DAT	OFF

3. Operate the appropriate stereo component to play back the program source.
4. Adjust the **VOLUME** control and the tone controls.

TAPE RECORDING

You can record an FM or AM broadcast, or a sound source connected to the VCR/LINE, CD, PHONO, or TAPE 1/DAT jacks.

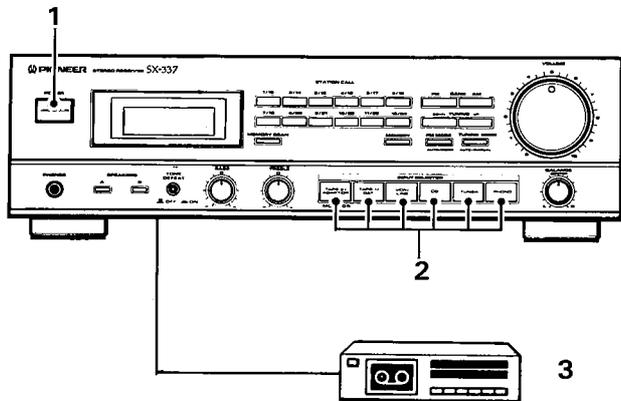


1. Turn on the **POWER** switch of the unit.
2. Select and operate the sound source to be recorded.
3. Operate the cassette deck connected to the **TAPE 1/DAT** or **TAPE 2/ADAPTOR** jacks.
 - For details of operating the cassette deck, read the operating instructions of the cassette deck.

COPYING TAPES

When two cassette decks are used, the sound played back on the deck connected to the TAPE 1/DAT jacks can be recorded on the deck connected to the TAPE 2/ADAPTOR jacks.

- To edit a recording of an FM broadcast in order to cut out unwanted commercials, recording only the desired material onto another tape.

- To make a tape copy with contents identical to the original tape.

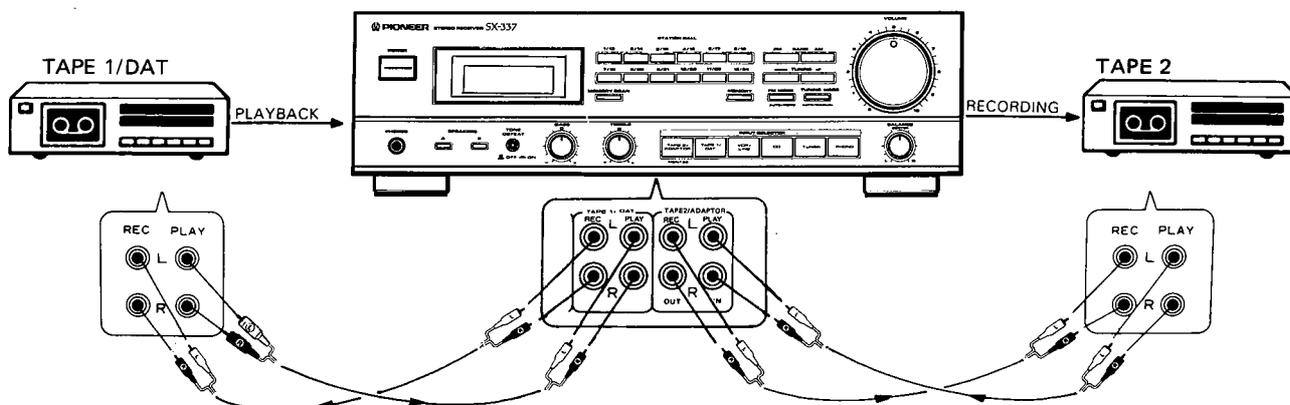

1. Load the playback tape (i.e. the pre-recorded tape) in the deck connected to the TAPE1/DAT jacks, and the tape to be recorded in the other deck connected to the TAPE2/ADAPTOR jacks.
2. Press the proper **INPUT SELECTOR** switch.
 - To copy from the cassette deck connected to TAPE 1/DAT jacks to the deck connected to the TAPE 2/ADAPTOR jacks...Press TAPE 1/DAT.
3. Operate the cassette decks to begin copying.
 - Set the cassette deck with the original (playback) tape to the playback mode, and set the cassette deck with the non-recorded tape to the recording mode.

TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used.

If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
Power does not come on even when POWER switch is pressed.	<ul style="list-style-type: none"> Power cord is disconnected. 	<ul style="list-style-type: none"> Connect cord securely.
No sound is produced, even when INPUT SELECTOR switches are selected.	<ul style="list-style-type: none"> VOLUME control is set to 0 (MIN). 	<ul style="list-style-type: none"> Turn up the VOLUME control.
	<ul style="list-style-type: none"> Speaker connecting wires are disconnected from speaker terminals. 	<ul style="list-style-type: none"> Connect wires to terminals securely.
	<ul style="list-style-type: none"> One or both of the input cords are disconnected. 	<ul style="list-style-type: none"> Connect input cords securely.
	<ul style="list-style-type: none"> TAPE 2 switch is in the ON position. 	<ul style="list-style-type: none"> Press the switch to the OFF position.
Sound is produced from one speaker only.	<ul style="list-style-type: none"> BALANCE control is set too far to one side or the other. 	<ul style="list-style-type: none"> Set BALANCE control to center position.
	<ul style="list-style-type: none"> One of the speaker connecting wires or input cords is disconnected. 	<ul style="list-style-type: none"> Connect wires and cords securely.
Tone controls don't work.	<ul style="list-style-type: none"> TONE DEFEAT switch is in the ON position. 	<ul style="list-style-type: none"> Press the switch to the OFF position.
Noise is produced during reception of AM broadcasts when the power switch of this unit or other components is turned ON or OFF.	<ul style="list-style-type: none"> AM loop antenna picks up electrical noise created by switch contacts. 	<ul style="list-style-type: none"> Place AM loop antenna as far away as possible from this and other components.
High noise level.	<ul style="list-style-type: none"> Station has not been tuned in to correct frequency. 	<ul style="list-style-type: none"> Tune the station in correctly.
	FM reception <ul style="list-style-type: none"> Accessory T-type antenna remains bundled up or it is not pointing in the right direction. 	<ul style="list-style-type: none"> Stretch both ends of antenna taut and turn to a direction yielding optimum reception.
	<ul style="list-style-type: none"> Weak broadcasting station signals. 	<ul style="list-style-type: none"> Replace accessory T-type antenna with outdoor FM antenna.
	<ul style="list-style-type: none"> Noise picked up from other equipment (or, in particular, from passing automobiles). "Multipath" results when signals from broadcasting station entering antenna directly are mixed with signals which have been reflected by mountains or high buildings on their way to antenna. This results in distorted sound and noise. 	<ul style="list-style-type: none"> Try altering direction and mounting position of antenna. If an outdoor antenna has been erected, place it as far away as possible from passing traffic and use a 75 Ω coaxial cable for connections.
	AM reception <ul style="list-style-type: none"> AM antenna not pointing in right direction. 	<ul style="list-style-type: none"> Change AM antenna's direction and find a position where reception is improved.
	<ul style="list-style-type: none"> Weak broadcasting station signals. 	<ul style="list-style-type: none"> Erect outdoor AM antenna or connect ground wire.
	<ul style="list-style-type: none"> Noise being picked up from other equipment (especially electrical appliances using motor or fluorescent lights). 	<ul style="list-style-type: none"> Stop using the appliances generating noise or remove them from the vicinity of stereo equipment.
No auto tuning. (FM reception)	<ul style="list-style-type: none"> Input signals are not strong enough. 	<ul style="list-style-type: none"> If an accessory T-type antenna is used, change over to an outdoor antenna. Perform manual tuning.
Control was not possible regardless of what operation switch was pressed.	<ul style="list-style-type: none"> Static electricity affected the unit when the air was dry, such as in winter. 	<ul style="list-style-type: none"> Unplug the power cord of the unit from the AC wall outlet, then plug it in again.

SPECIFICATIONS

[Model SX-337]

Amplifier Section

Continuous Power Output (both channels driven, DIN)

1 kHz, T.H.D. 1%, 4 Ω	80 W + 80 W
1 kHz, T.H.D. 1%, 8 Ω	65 W + 65 W
20 Hz - 20 kHz, T.H.D. 0.07%, 8 Ω	50 W + 50 W

IEC power output

63 Hz - 12.5 kHz, T.H.D. 0.7%, 4 Ω	74 W + 74 W
63 Hz - 12.5 kHz, T.H.D. 0.7%, 8 Ω	63 W + 63 W

Dynamic power output

2/4/8 Ω 120/110/80 W

Total Harmonic Distortion*

1 kHz, 50 W, 8 Ω 0.01%

Input (Sensitivity/Impedance)

PHONO 2.5 mV/47 k Ω

CD, VCR/LINE, TAPE 1/DAT, TAPE 2 150 mV/22 k Ω

Phono Overload Level (T.H.D. 0.01%, 1,000 Hz)

PHONO 130 mV

Output (Level/Impedance)

TAPE REC 150 mV/2,2 k Ω

Frequency Response

PHONO (RIAA Equalization) 20 Hz to 20,000 Hz \pm 0.5 dB

CD, VCR/LINE, TAPE 1/DAT, TAPE 2

..... 10 Hz to 70,000 Hz \pm ^{0.5}_{3.0} dB

Signal-to-Noise Ratio (DIN, continuous power/50 mW)

PHONO 68 dB/59 dB

CD, VCR/LINE, TAPE 1/DAT, TAPE 2 86 dB/60 dB

Tone control

BASS \pm 8dB (100Hz)

TREBLE \pm 8dB (10kHz)

FM Tuner Section

Frequency range 87.5 MHz to 108 MHz

Usable Sensitivity 10.8 dBf, IHF (0.95 μ V/75 Ω)

50 dB Quieting Sensitivity

MONO 15.3 dBf (1.6 μ V/75 Ω)

STEREO 37.1 dBf (19.5 μ V/75 Ω)

Sensitivity (DIN)

MONO 0.9 μ V/75 Ω

STEREO 29 μ V/75 Ω

Signal-to-Noise Ratio

MONO 78 dB (at 85 dBf)

STEREO 75 dB (at 85 dBf)

Signal-to-Noise Ratio (DIN)

MONO 66 dB

STEREO 66 dB

Distortion

STEREO 0.3% (1 kHz)

Alternate Channel Selectivity 55 dB (400 kHz)

Stereo Separation 35 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz (\pm 1 dB)

Antenna Input 300 Ω balanced, 75 Ω unbalanced

AM Tuner Section

Frequency range 531 kHz to 1,602 kHz

Sensitivity

IHF, Loop antenna 300 μ V/m

Selectivity 20 dB

Signal-to-Noise Ratio 50 dB

Antenna AM Loop Antenna

Miscellaneous

Power Requirements a.c. 240 Volts ~, 50/60 Hz

Power Consumption 470 Watts

Dimensions 420 (W) x 125 (H) x 339 (D) mm

Weight (without package) 7.0 kg

Furnished Parts

FM T-type Antenna	1
AM Loop Antenna	1
Operating Instructions	1

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

* Measured by audio spectrum analyzer.

[Model SX-227]

Amplifier Section

Continuous Power Output (both channels driven, DIN)

1 kHz, T.H.D. 1%, 4 Ω	55 W + 55 W
1 kHz, T.H.D. 1%, 8 Ω	45 W + 45 W
40 Hz — 20 kHz, T.H.D. 0.07%, 8 Ω	38 W + 38 W

IEC power output

63 Hz — 12.5 kHz, T.H.D. 0.7%, 4 Ω	49 W + 49 W
63 Hz — 12.5 kHz, T.H.D. 0.7%, 8 Ω	45 W + 45 W

Dynamic power output

4/8 Ω	70/55 W
-------	---------

Total Harmonic Distortion*

1 kHz, 38 W, 8 Ω	0.01%
------------------	-------

Input (Sensitivity/Impedance)

PHONO	2.5 mV/47 kΩ
CD, VCR/LINE, TAPE 1/DAT, TAPE 2	150 mV/22 kΩ

Phono Overload Level (T.H.D. 0.01%, 1,000 Hz)

PHONO	130 mV
-------	--------

Output (Level/Impedance)

TAPE REC	150 mV/2,2 kΩ
----------	---------------

Frequency Response

PHONO (RIAA Equalization)	20 Hz to 20,000 Hz ± 0.5 dB
CD, VCR/LINE, TAPE 1/DAT, TAPE 2	10 Hz to 70,000 Hz ± _{3.0} ^{0.5} dB

Signal-to-Noise Ratio (DIN, continuous*power/50 mW)

PHONO	68 dB/59 dB
CD, VCR/LINE, TAPE 1/DAT, TAPE 2	86 dB/60 dB

Tone control

BASS	± 8dB (100Hz)
TREBLE	± 8dB (10kHz)

FM Tuner Section

Frequency range	87.5 MHz to 108 MHz
Usable Sensitivity	10.8 dBf, IHF (0.95 μV/75 Ω)
50 dB Quieting Sensitivity	
MONO	15.3 dBf (1.6 μV/75 Ω)
STEREO	37.1 dBf (19.5 μV/75 Ω)
Sensitivity (DIN)	
MONO	0.9 μV/75 Ω
STEREO	29 μV/75 Ω
Signal-to-Noise Ratio	
MONO	78 dB (at 85 dBf)
STEREO	75 dB (at 85 dBf)
Signal-to-Noise Ratio (DIN)	
MONO	66 dB
STEREO	66 dB
Distortion	
STEREO	0.3% (1 kHz)
Alternate Channel Selectivity	55 dB (400 kHz)
Stereo Separation	35 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz (± 1 dB)
Antenna Input	300 Ω balanced, 75 Ω unbalanced

AM Tuner Section

Frequency range	531 kHz to 1,602 kHz
Sensitivity	
IHF, Loop antenna	300 μV/m
Selectivity	20 dB
Signal-to-Noise Ratio	50 dB
Antenna	AM Loop Antenna

Miscellaneous

Power Requirements	a.c. 240 Volts ~, 50/60 Hz
Power Consumption	250 Watts
Dimensions	420 (W) x 125 (H) x 339 (D) mm
Weight (without package)	6.2 kg

Furnished Parts

FM T-type Antenna	1
AM Loop Antenna	1
Operating Instructions	1

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

* Measured by audio spectrum analyzer.

Published by Pioneer Electronic Corporation.
Copyright © 1990 Pioneer Electronic Corporation.
All rights reserved.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS [USA] INC. 2265 East 220th Street, Long Beach, California 90810, U.S.A.

P.O. BOX 1720, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3, Canada

PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium, TEL: 03/750.05.11

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911

<90C00FF4E01>

Printed in Japan <ARB1233-A>