


# DENON

## AV SURROUND RECEIVER **AVR-1905**

OPERATING INSTRUCTIONS  
BEDIENUNGSANLEITUNG  
MODE D'EMPLOI  
ISTRUZIONI PER L'USO

INSTRUCCIONES DE OPERACION  
GEBRUIKSAANWIJZING  
BRUKSANVISNING

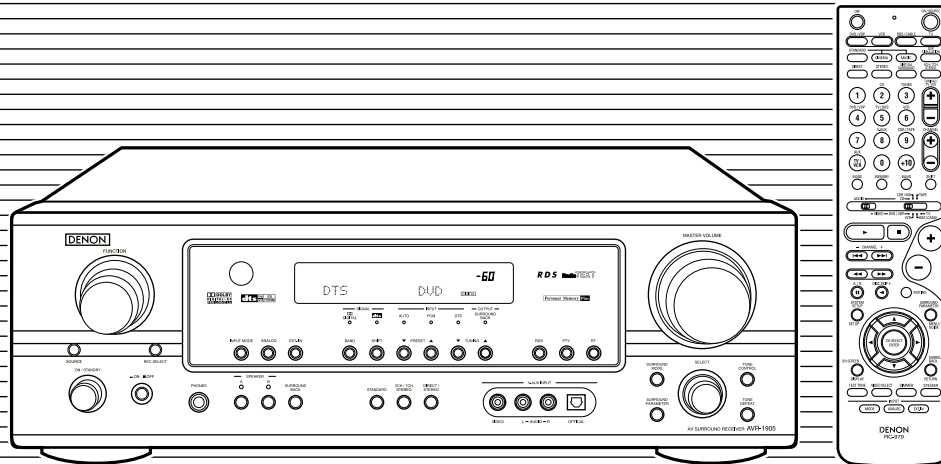

|                              |        |              |     |
|------------------------------|--------|--------------|-----|
| FOR ENGLISH READERS          | PAGE   | 2 ~ PAGE     | 41  |
| FÜR DEUTSCHE LESER           | SEITE  | 42 ~ SEITE   | 80  |
| POUR LES LECTEURS FRANCAIS   | PAGE   | 81 ~ PAGE    | 119 |
| PER IL LETTORE ITALIANO      | PAGINA | 120 ~ PAGINA | 158 |
| PARA LECTORES DE ESPAÑOL     | PAGINA | 159 ~ PAGINA | 197 |
| VOOR NEDERLANDSTALIGE LEZERS | PAGINA | 198 ~ PAGINA | 236 |
| FOR SVENSKA LÄSARE           | SIDA   | 237 ~ SIDA   | 275 |



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA**

|   |  |   |
|---|--|---|
| <ul style="list-style-type: none"> <li>Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack.</li> <li>Vermeiden Sie hohe Temperaturen. Beachten Sie, daß eine ausreichend Luftzirkulation gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.</li> <li>Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.</li> <li>Evitate di esporre l'unità a temperature alte. Assicuratevi che ci sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.</li> <li>Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola.</li> <li>Vermijd hoge temperaturen. Zorg voor een degelijk hitteafvoer indien het apparaat op een rek wordt geplaatst.</li> <li>Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack.</li> </ul> | <ul style="list-style-type: none"> <li>Keep the set free from moisture, water, and dust.</li> <li>Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.</li> <li>Protéger l'appareil contre l'humidité, l'eau et l'humidité.</li> <li>Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.</li> <li>Mantenga el equipo libre de humedad, agua y polvo.</li> <li>Laat geen vochtigheid, water of stof in het apparaat binnendringen.</li> <li>Utsätt inte apparaten för fukt, vatten och damm.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not let foreign objects in the set.</li> <li>Keine fremden Gegenstände in das Gerät kommen lassen.</li> <li>Ne pas laisser des objets étrangers dans l'appareil.</li> <li>E' importante che nessun oggetto è inserito all'interno dell'unità.</li> <li>No deje objetos extraños dentro del equipo.</li> <li>Laat geen vreemde voorwerpen in dit apparaat vallen.</li> <li>Se till att främmande föremål inte tränger in i apparaten.</li> </ul>   |
| <ul style="list-style-type: none"> <li>Unplug the power cord when not using the set for long periods of time.</li> <li>Wenn das Gerät eine längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.</li> <li>Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> <li>Disinnestate il filo di alimentazione quando avete l'intenzione di non usare il filo di alimentazione per un lungo periodo di tempo.</li> <li>Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.</li> <li>Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt.</li> <li>Koppla ur nätkabeln om apparaten inte kommer att användas i lång tid.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not let insecticides, benzene, and thinner come in contact with the set.</li> <li>Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.</li> <li>Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.</li> <li>Assicuratevi che l'unità non venga in contatto con insetticidi, benzolo o solventi.</li> <li>No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.</li> <li>Laat geen insektenverdelgende middelen, benzine of verdunder met dit apparaat in contact komen.</li> <li>Se till att inte insektsmedel på spraybruk, bensin och thinner kommer i kontakt med apparatens hölje.</li> </ul> | <ul style="list-style-type: none"> <li>Never disassemble or modify the set in any way.</li> <li>Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern.</li> <li>Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.</li> <li>Non smontate mai, né modificate l'unità in nessun modo.</li> <li>Nunca desarme o modifique el equipo de ninguna manera.</li> <li>Nooit dit apparaat demonteren of op andere wijze modificeren.</li> <li>Ta inte isär apparaten och försök inte bygga om den.</li> </ul> |
| <ul style="list-style-type: none"> <li>Handle the power cord carefully. Hold the plug when unplugging the cord.</li> <li>Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.</li> <li>Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.</li> <li>Maneggiare il filo di alimentazione con cura. Agitare per la spina quando scollegate il cavo dalla presa.</li> <li>Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.</li> <li>Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.</li> <li>Håll i kabeln när den kopplas från el-uttaget.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not obstruct the ventilation holes.</li> <li>Die Belüftungsöffnungen dürfen nicht verdeckt werden.</li> <li>Ne pas obstruer les trous d'aération.</li> <li>Non coprite i fori di ventilazione.</li> <li>No obstruya los orificios de ventilación.</li> <li>De ventilatieopeningen mogen niet worden beblokkeerd.</li> <li>Täpp inte till ventilationsöppningarna.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not obstruct the ventilation holes.</li> <li>Die Belüftungsöffnungen dürfen nicht verdeckt werden.</li> <li>Ne pas obstruer les trous d'aération.</li> <li>Non coprite i fori di ventilazione.</li> <li>No obstruya los orificios de ventilación.</li> <li>De ventilatieopeningen mogen niet worden beblokkeerd.</li> <li>Täpp inte till ventilationsöppningarna.</li> </ul>  |
| <ul style="list-style-type: none"> <li>Handle the power cord carefully. Hold the plug when unplugging the cord.</li> <li>Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.</li> <li>Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.</li> <li>Maneggiare il filo di alimentazione con cura. Agitare per la spina quando scollegate il cavo dalla presa.</li> <li>Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.</li> <li>Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.</li> <li>Håll i kabeln när den kopplas från el-uttaget.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not obstruct the ventilation holes.</li> <li>Die Belüftungsöffnungen dürfen nicht verdeckt werden.</li> <li>Ne pas obstruer les trous d'aération.</li> <li>Non coprite i fori di ventilazione.</li> <li>No obstruya los orificios de ventilación.</li> <li>De ventilatieopeningen mogen niet worden beblokkeerd.</li> <li>Täpp inte till ventilationsöppningarna.</li> </ul>   | <ul style="list-style-type: none"> <li>Do not obstruct the ventilation holes.</li> <li>Die Belüftungsöffnungen dürfen nicht verdeckt werden.</li> <li>Ne pas obstruer les trous d'aération.</li> <li>Non coprite i fori di ventilazione.</li> <li>No obstruya los orificios de ventilación.</li> <li>De ventilatieopeningen mogen niet worden beblokkeerd.</li> <li>Täpp inte till ventilationsöppningarna.</li> </ul>  |

**DECLARATION OF CONFORMITY**

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3.

Following the provisions of 73/23/EEC, 89/336/EEC and 93/68/EEC Directive.

**ÜBEREINSTIMMUNGSERKLÄRUNG**

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:

EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3.

Entspricht den Verordnungen der Direktive 73/23/EEC, 89/336/EEC und 93/68/EEC.

**DECLARATION DE CONFORMITE**

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:

EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3.

D'après les dispositions de la Directive 73/23/EEC, 89/336/EEC et 93/68/EEC.

**DICHIARAZIONE DI CONFORMITÀ**

Dichiaro con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:

EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

In conformità con le condizioni delle direttive 73/23/EEC, 89/336/EEC e 93/68/EEC.

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

**DECLARACIÓN DE CONFORMIDAD**

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3.

Seguindo las provisiones de las Directivas 73/23/EEC, 89/336/EEC y 93/68/EEC.

**EENVORMIGHEIDSVERKLARING**

Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:

EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de bepalingen van de Richtlijnen 73/23/EEC, 89/336/EEC en 93/68/EEC.

**ÖVERENSSTÄMMELSESINTYG**

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:

EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3.

Enligt stadgarna i direktiv 73/23/EEC, 89/336/EEC och 93/68/EEC.

**CAUTION**

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. No naked flame sources, such as lighted candles, should be placed on the apparatus.

Please be care the environmental aspects of battery disposal. The apparatus shall not be exposed to dripping or splashing for use. No objects filled with liquids, such as vases, shall be placed on the apparatus.

- We greatly appreciate your purchase of the AVR-1905.
- To be sure you take maximum advantage of all the features the AVR-1905 has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference, should any questions or problems arise.

“SERIAL NO. \_\_\_\_\_  
PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE  
CABINET FOR FUTURE REFERENCE”

■ INTRODUCTION

Thank you for choosing the DENON AVR-1905 Digital A / V Surround Receiver. This remarkable component has been engineered to provide superb surround sound listening with home theater sources such as DVD, as well as providing outstanding high fidelity reproduction of your favorite music sources. As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review the contents of this manual before proceeding.


TABLE OF CONTENTS

|  |  |
|--|--|
| 1 Before Using.....3                   | 11 Surround.....23 ~ 28                        |
| 2 Cautions on Installation.....3       | 12 DSP Surround Simulation.....28 ~ 30         |
| 3 Cautions on Handling.....3           | 13 Listening to the Radio.....31 ~ 35          |
| 4 Features.....4                       | 14 Last Function Memory.....35                 |
| 5 Connections.....5 ~ 9                | 15 Initialization of the Microprocessor.....35 |
| 6 Part Names and Functions.....9, 10   | 16 Additional Information.....35 ~ 39          |
| 7 Using the Remote Control Unit.....10 | 17 Troubleshooting.....40                      |
| 8 Setting up the System.....11 ~ 16    | 18 Specifications.....41                       |
| 9 Remote Control Unit.....17 ~ 19      | List of Preset Codes.....276 ~ 278             |
| 10 Operation.....19 ~ 23               |  |

■ ACCESSORIES

Check that the following parts are included in addition to the main unit:


- |                                      |                           |
|--------------------------------------|---------------------------|
| ① Operating instructions.....1       | ④ R6P/AA batteries.....2  |
| ② Service station list.....1         | ⑤ AM loop antenna.....1   |
| ③ Remote control unit (RC-979).....1 | ⑥ FM indoor antenna.....1 |



1 BEFORE USING

Pay attention to the following before using this unit:

- **Moving the set**  
To prevent short circuits or damaged wires in the connection cords, always unplug the power cord and disconnect the connection cords between all other audio components when moving the set.
- **Before turning the power switch on**  
Check once again that all connections are proper and that there are not problems with the connection cords. Always set the power switch to the standby position before connecting and disconnecting connection cords.
- **Store this instructions in a safe place**  
After reading, store this instructions along with the warranty in a safe place.
- **Note that the illustrations in this instructions may differ from the actual set for explanation purposes.**
- **V. AUX terminal**  
The AVR-1905's front panel is equipped with a V. AUX terminal. Remove the cap covering the terminal when you want to use it.




2 CAUTIONS ON INSTALLATION

Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV. If this happens, take the following steps:

- Install this unit as far as possible from the tuner or TV.
- Set the antenna wires from the tuner or TV away from this unit's power cord and input/output connection cords.
- Noise or disturbance tends to occur particularly when using indoor antennas or 300 Ω/ohms feeder wires. **We recommend using outdoor antennas and 75 Ω/ohms coaxial cables.**

**For heat dispersal, leave at least 10 cm of space between the top, back and sides of this unit and the wall or other components.**

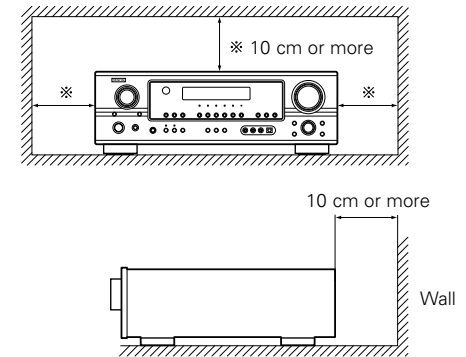

3 CAUTIONS ON HANDLING

- **Switching the input function when input jacks are not connected**  
A clicking noise may be produced if the input function is switched when nothing is connected to the input jacks. If this happens, either turn down the MASTER VOLUME control or connect components to the input jacks.
- **Muting of PRE OUT jacks, HEADPHONE jack and SPEAKER terminals**  
The PRE OUT jacks, HEADPHONE jack and SPEAKER terminals include a muting circuit.
- **Whenever the unit is in the STANDBY state, the apparatus is still connected on AC line voltage. Please be sure to turn the power off (Off) when you leave home for, say, a vacation.**

## 4 FEATURES

### 1. Dolby Digital

Using advanced digital processing algorithms, Dolby Digital provides up to 5.1 channels of wide-range, high fidelity surround sound. Dolby Digital is the default digital audio delivery system for DVD and North American DTV.

### 2. Dolby Pro Logic IIx compatibility

Dolby Pro Logic IIx furthers the matrix decoding technology of Dolby Pro Logic II to decode audio signals recorded on two channels into up to 7.1 playback channels, including the surround back channel. Dolby Pro Logic IIx also allows 5.1-channel sources to be played in up to 7.1 channels. The mode can be selected according to the source. The Music mode is best suited for playing music, the Cinema mode for playing movies, and the Game mode for playing games. The Game mode can only be used with 2-channel audio sources.

### 3. Dolby Pro Logic II Game mode compatibility

In addition to the previously offered Music and Cinema modes, the AVR-1905 also offers a Game mode optimum for games.

### 4. DTS (Digital Theater Systems)

DTS provides up to 5.1 channels of wide-range, high fidelity surround sound, from sources such as laser disc, DVD and specially-encoded music discs.

### 5. DTS-ES Extended Surround and DTS Neo:6

The AVR-1905 can be decoded with DTS-ES Extended Surround, a multi-channel format developed by Digital Theater Systems Inc. The AVR-1905 can be also decoded with DTS Neo:6, a surround mode allowing 6.1 channels playback of regular stereo sources.

### 6. DTS 96/24 compatibility

The AVR-1905 can be decoded with sources recorded in DTS 96/24, a multi-channel digital signal format developed by Digital Theater Systems Inc. DTS 96/24 sources can be played in the multi-channel mode on the AVR-1905 with high sound quality of 96 kHz/24 bits or 88.2 kHz/24 bits.

### 7. Future Sound Format Upgrade Capability via Eight Channel Outputs

For future multi-channel audio format(s), the AVR-1905 is provided with 5.1 channel (five main channels, plus one low frequency effects channel) inputs, along with a full set of 7.1 channel pre-amp outputs, controlled by the 8 channel master volume control. This assures future upgrade possibilities for any future multi-channel sound format.

### 8. Front input Terminal

The unit is equipped with a Front Input connector for the convenient connection of a video camera or other equipment.

### 9. Video Conversion Function

The AVR-1905 is equipped with a function for converting the signals input to the video input connector and S-Video input connector. With this function, the AVR-1905's monitor out connector and the monitor (TV) can be connected with video pin-plug cords or an S-Video connection cord.

### 10. Component Video Switching

In addition to composite video and "S" video switching, the AVR-1905 provides 3 sets of component video (Y, Pb/Cb, Pr/Cr) inputs, and one set of component video outputs to the television, for superior picture quality.

### 11. Auto Surround Mode

This function stores the surround mode last used for an input signal in the memory and automatically sets that surround mode the next time that signal is input.

### 12. Preset Memory Tuning

56-Station AM/FM Random Preset Memory tuning.

### 13. On Screen Display


Troublesome operations such as adjusting the delay time and other parameters according to the listening environment are greatly simplified. The various parameters can be set simply by selecting the graphic displayed on the monitor screen according to the listening room's system environment.

## 5 CONNECTIONS

- Do not plug in the AC cord until all connections have been completed.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- **Use the AC OUTLET for audio equipment only. Do not use them for hair driers, etc.**
- Note that binding pin plug cords together with AC cords or placing them near a power transformer will result in generating hum or other noise.
- Noise or humming may be generated if a connected audio equipment is used independently without turning the power of this unit on. If this happens, turn on the power of the this unit.


### Connecting the audio components

- When making connections, also refer to the operating instructions of the other components.

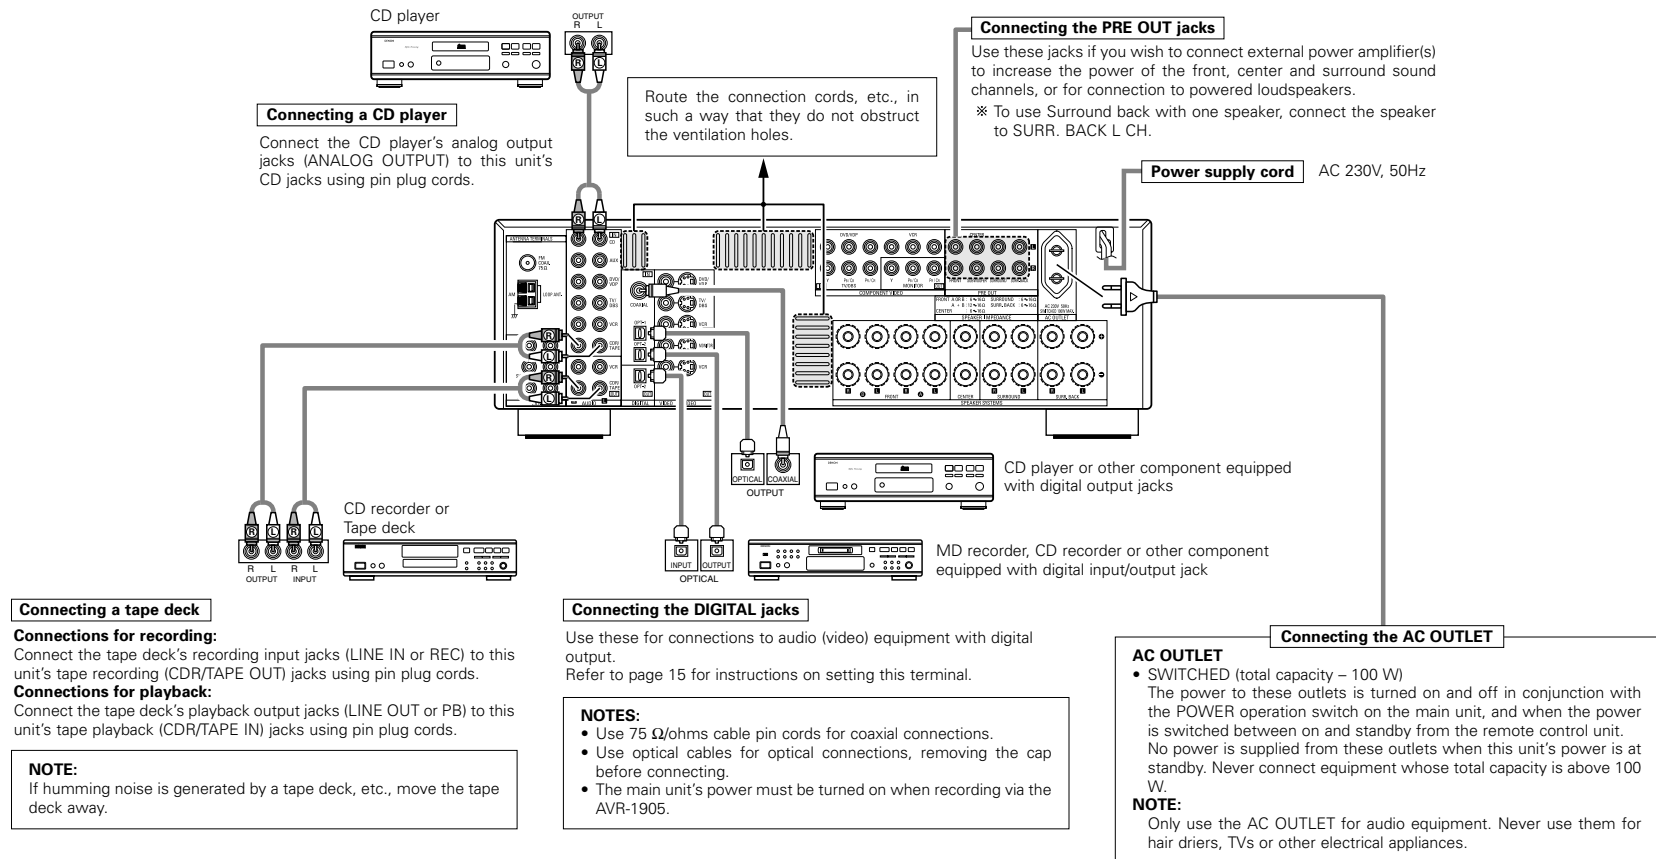


## Connecting the video components

- To connect the video signal, connect using a 75 Ω/ohms video signal cable cord. Using an improper cable can result in a drop in video quality.
- When making connections, also refer to the operating instructions of the other components.
- The AVR-1905 is equipped with a function for up-converting video signals.
- The signal connected to the video signal terminal is output to the S-Video monitor out terminals.
- The REC OUT terminals have no conversion function, so when recording only connect the video terminals.

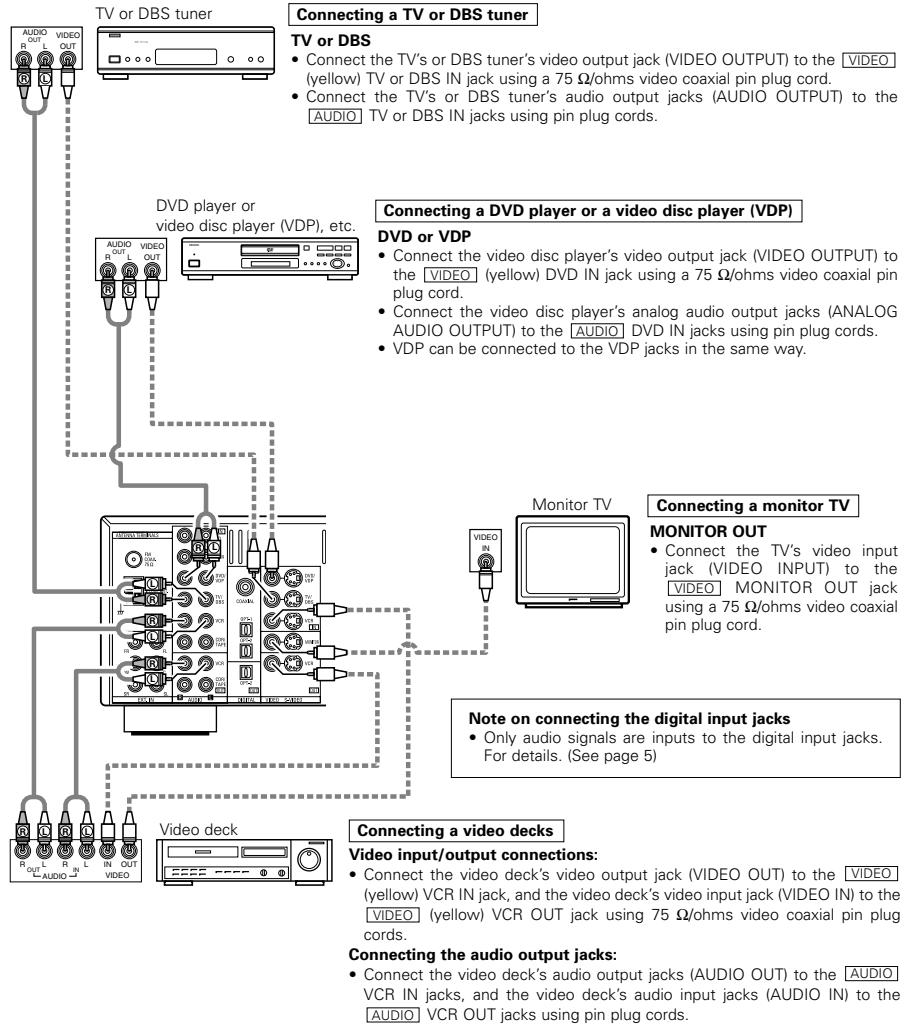

## Connecting the video components equipped with S-Video jacks

- When making connections, also refer to the operating instructions of the other components.
- **A note on the S input jacks**  
The input selectors for the S inputs and pin jack inputs work in conjunction with each other.
- The AVR-1905 is equipped with a function for converting video signals.
- The signal connected to the S-Video signal terminal is output to the composite video monitor out terminals.
- The REC OUT terminals have no conversion function, so when recording only connect the S-Video terminals.

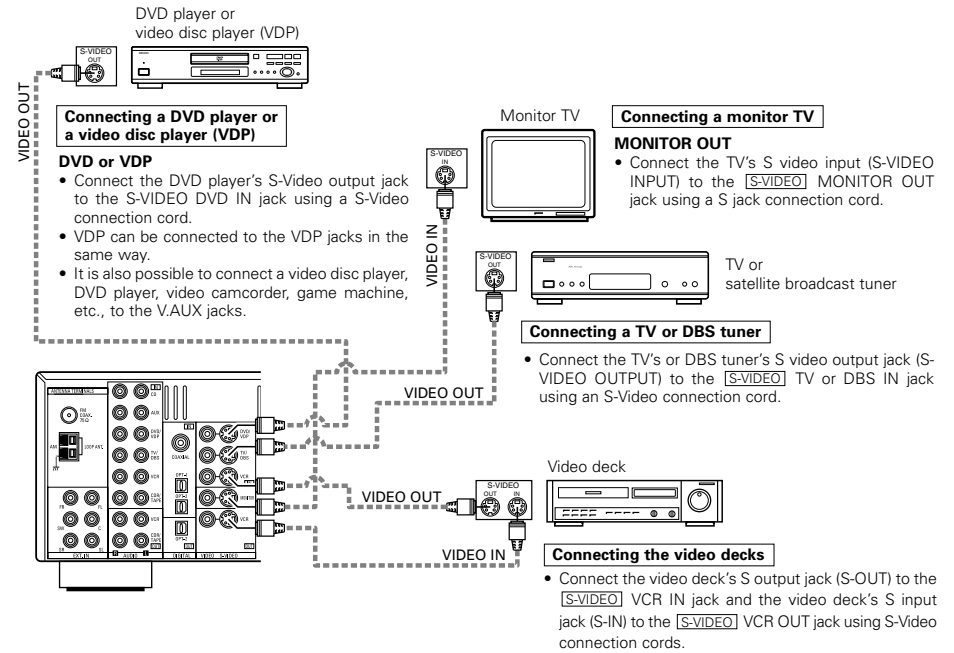

## Connecting the video component equipped with Color Difference (Component - Y, P<sub>R</sub>/C<sub>R</sub>, P<sub>B</sub>/C<sub>B</sub>) Video jacks

- When making connections, also refer to the operating instructions of the other components.
- The signals input to the color difference (component) video jacks are not output from the VIDEO output jack (yellow) or the S-Video output jack. In addition, the video signals input to the VIDEO input (yellow) and S-Video input jacks are not output to the color difference (component) video jacks.
- Some video sources with component video outputs are labeled Y, C<sub>B</sub>, C<sub>R</sub>, or Y, P<sub>B</sub>, P<sub>R</sub>, or Y, R-Y, B-Y. These terms all refer to component video color difference output.

### Connecting a DVD player

#### DVD IN jacks


- Connect the DVD player's color difference (component) video output jacks (COMPONENT VIDEO OUTPUT) to the COMPONENT DVD/VDP IN jack using 75 Ω/ohms coaxial video pin-plug cords.
- In the same way, another video source with component video outputs such as a TV/DBS tuner, etc., can be connected to the TV/DBS color difference (component) video jacks.

### Connecting a monitor TV

#### MONITOR OUT jack

- Connect the TV's color difference (component) video input jacks (COMPONENT VIDEO INPUT) to the COMPONENT MONITOR OUT jack using 75 Ω/ohms coaxial video pin-plug cords.

- The color difference input jacks may be indicated differently on some TVs, monitors or video components ("CR, CB and Y", "R-Y, B-Y and Y", "PR, PB and Y", etc.). For details, carefully read the operating instructions included with the TV or other component.

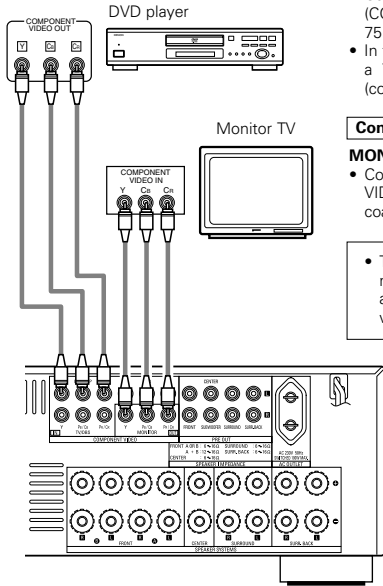


### • Video Conversion signals

| Signal input to the AVR-1905                         | Monitor Output jacks                                   |   |  |
|--|--|---|--|
|  | Video signal output to VIDEO MONITOR OUT jack (yellow) | Video signal output to S-Video MONITOR OUT jack | Video signal output to color difference (component) Video MONITOR OUT jack |
| Video signal input jack                              | ○  | ○<br>(Up-conversion)                            | ×  |
| S-Video signal input jack                            | ○<br>(Down-conversion)                                 | ○   | ×  |
| Color difference (component) Video signal input jack | ×  | ×   | ○  |


(○ : Video signal output, × : Video signal not output)

## Connecting the antenna terminals

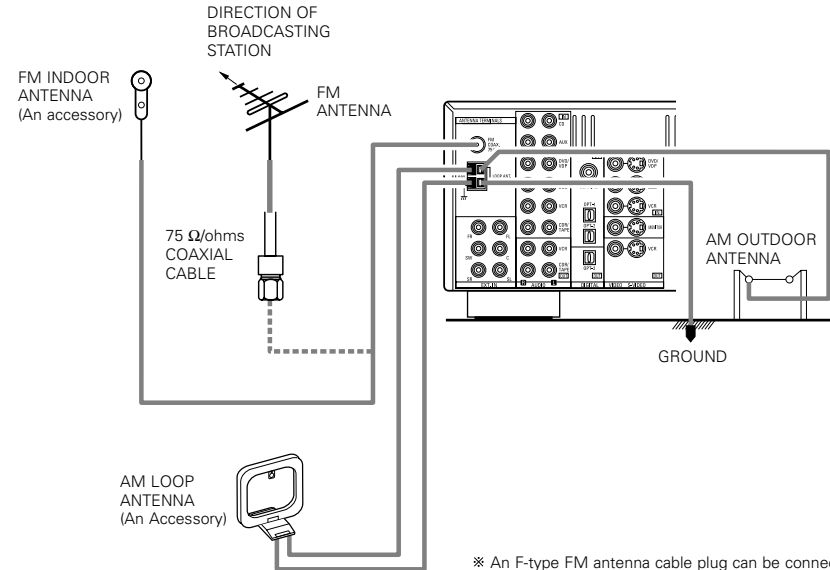

※ An F-type FM antenna cable plug can be connected directly.

### AM loop antenna assembly

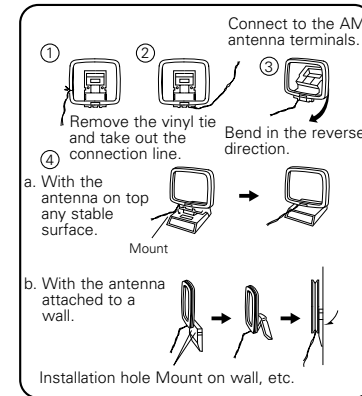

### Connection of AM antennas

1. Push the lever.
2. Insert the conductor.
3. Return the lever.




### NOTES:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

### Connecting the external input (EXT. IN) jacks


- These jacks are for inputting multi-channel audio signals from an outboard decoder, or a component with a different type of multi-channel decoder, such as a DVD Audio player, a multi-channel SACD player, or other future multi-channel sound format decoder.
- When making connections, also refer to the operating instructions of the other components.

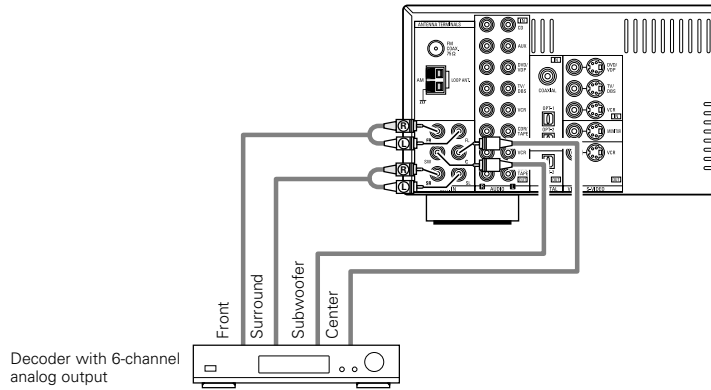

\* For instructions on playback using the external input (EXT. IN) jacks. (See page 21)

### Connecting the video component equipped with V. AUX jacks

To connect the video signal, connect using a 75 Ω/ohms video signal cable cord.

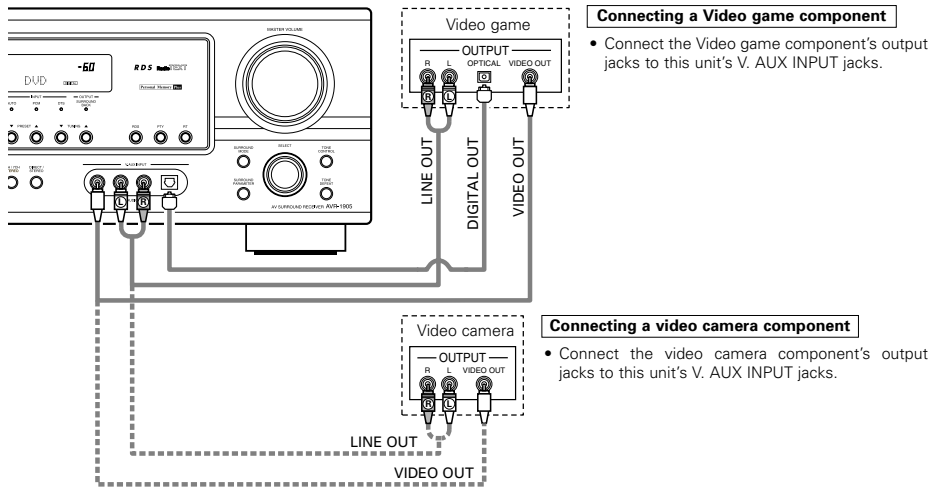

\* The V. AUX INPUT terminal is covered with a cap. Remove this cap in order to use the terminal. (See page 3 for instructions on removing the cap.)

### Speaker system connections

- Connect the speaker terminals with the speakers making sure that like polarities are matched (⊕ with ⊕, ⊖ with ⊖). Mismatching of polarities will result in weak central sound, unclear orientation of the various instruments, and the sense of direction of the stereo being impaired.
- When making connections, take care that none of the individual conductors of the speaker cord come in contact with adjacent terminals, with other speaker cord conductors, or with the rear panel.

#### Speaker Impedance

- When speaker systems A and B are used separately, speakers with an impedance of 6 to 16 Ω/ohms can be connected for use as front speakers.
- Be careful when using two pairs of front speakers (A + B) at the same time, since use of speakers with an impedance of 12 to 16 Ω/ohms.
- Speakers with an impedance of 6 to 16 Ω/ohms can be connected for use as center and surround and surround back speakers.
- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance are connected.

**NOTE:**  
NEVER touch the speaker terminals when the power is on.  
Doing so could result in electric shocks.

#### Connecting the speaker cords

1. Loosen by turning counterclockwise.
2. Insert the cord.
3. Tighten by turning clockwise.



#### Protector circuit

- This unit is equipped with a high-speed protection circuit. The purpose of this circuit is to protect the speakers under circumstances such as when the output of the power amplifier is inadvertently short-circuited and a large current flows, when the temperature surrounding the unit becomes unusually high, or when the unit is used at high output over a long period which results in an extreme temperature rise. When the protection circuit is activated, the speaker output is cut off and the power supply indicator LED flashes. Should this occur, please follow these steps: be sure to switch off the power of this unit, check whether there are any faults with the wiring of the speaker cables or input cables, and wait for the unit to cool down if it is very hot. Improve the ventilation condition around the unit and switch the power back on. If the protection circuit is activated again even though there are no problems with the wiring or the ventilation around the unit, switch off the power and contact a DENON service center.

#### Note on speaker impedance


- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance (for example speakers with an impedance of lower than 4 Ω/ohms) are connected. If the protector circuit is activated, the speaker output is cut off. Turn off the set's power, wait for the set to cool down, improve the ventilation around the set, then turn the power back on.



**Connections**

- When making connections, also refer to the operating instructions of the other components.

Connection jack for subwoofer with built-in amplifier (subwoofer), etc.

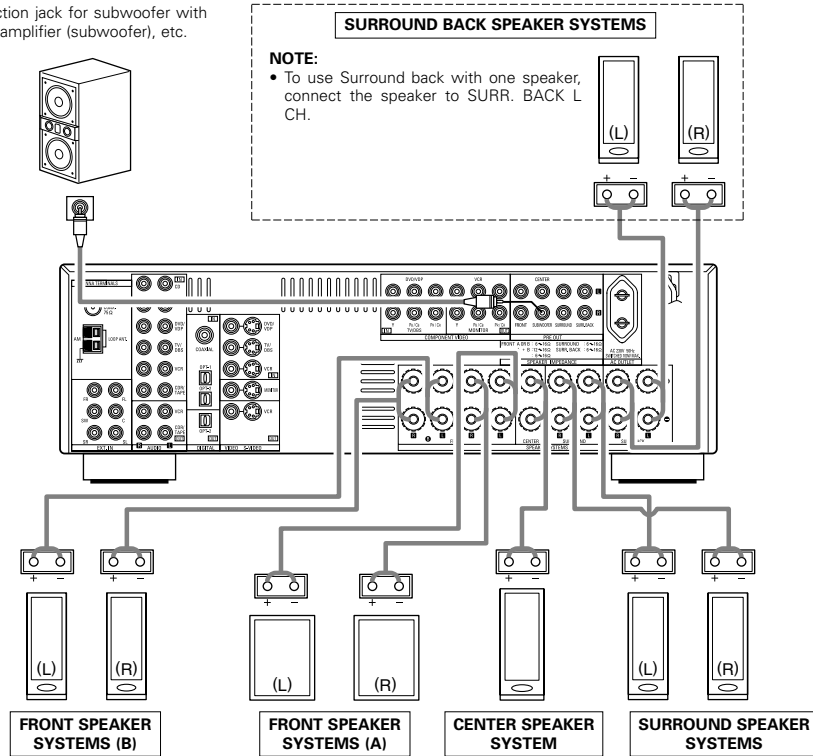

**SURROUND BACK SPEAKER SYSTEMS**


**NOTE:**

- To use Surround back with one speaker, connect the speaker to SURR. BACK L CH.

**6 PART NAMES AND FUNCTIONS**

**Front Panel**

- For details on the functions of these parts, refer to the pages given in parentheses ( ).

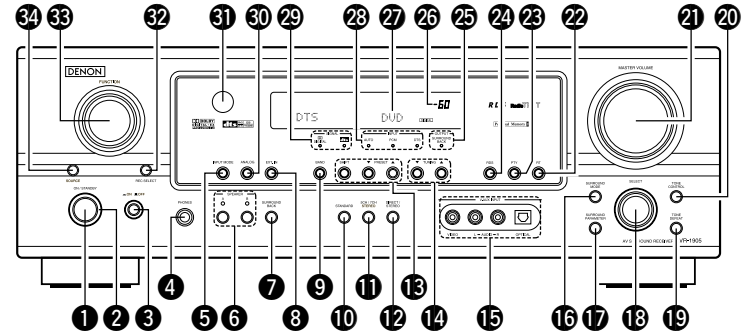


- |   |                                     |
|---|-------------------------------------|
| 1 Power ON/STANDBY switch .....(12, 19, 31)   | 18 SELECT knob .....(20, 25, 29)    |
| 2 POWER indicator .....(12, 19)               | 19 TONE DEFEAT button .....(22)     |
| 3 Power switch .....(12, 19)                  | 20 TONE CONTROL button .....(22)    |
| 4 Headphones jack (PHONES) .....(22)          | 21 MASTER VOLUME control .....(20)  |
| 5 INPUT MODE button .....(20, 21)             | 22 RT button.....(35)               |
| 6 SPEAKER A/B buttons .....(19, 35)           | 23 PTY button.....(34)              |
| 7 SURROUND BACK button .....(26)              | 24 RDS button.....(33, 34)          |
| 8 EXT. IN button .....(20, 21)                | 25 OUTPUT indicator.....(26)        |
| 9 BAND button .....(31)                       | 26 MASTER VOLUME indicator.....(20) |
| 10 STANDARD button .....(23 ~ 26)             | 27 Display                          |
| 11 5CH/7CH STEREO button .....(29)            | 28 INPUT mode indicator .....(20)   |
| 12 DIRECT/STEREO button.....(21)              | 29 SIGNAL indicator .....(20)       |
| 13 Preset station select buttons .....(32)    | 30 ANALOG button .....(20, 21)      |
| 14 TUNING ▲ (up) / ▼ (down) buttons .....(31) | 31 Remote control sensor.....(10)   |
| 15 V. AUX INPUT jacks.....(3, 8)              | 32 REC SELECT button.....(23)       |
| 16 SURROUND MODE button.....(20)              | 33 FUNCTION knob .....(20, 23)      |
| 17 SURROUND PARAMETER button .....(24, 29)    | 34 SOURCE selector button .....(20) |

**• Precautions when connecting speakers**

If a speaker is placed near a TV or video monitor, the colors on the screen may be disturbed by the speaker's magnetism. If this should happen, move the speaker away to a position where it does not have this effect.

**Remote control unit**


• For details on the functions of these parts, refer to the pages given in parentheses ( ).

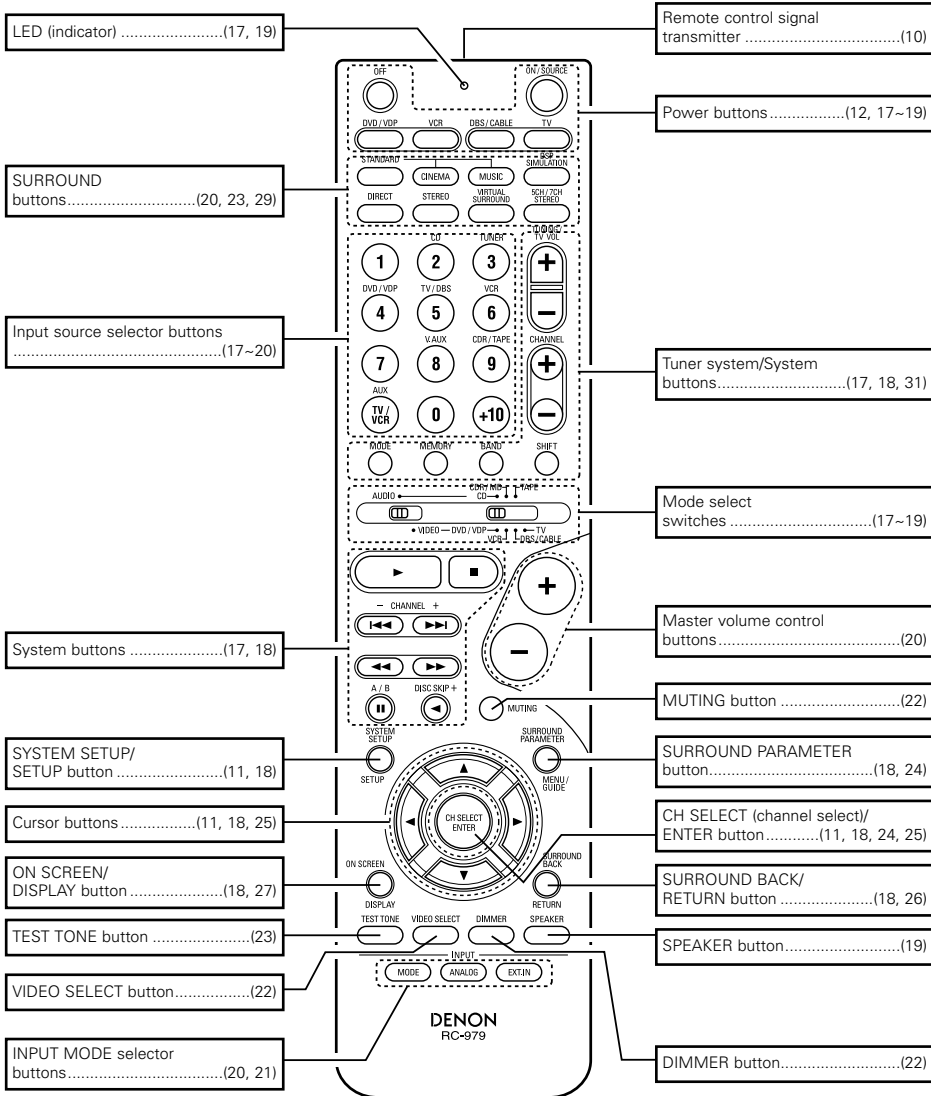

**7 USING THE REMOTE CONTROL UNIT**

Following the procedure outlined below, insert the batteries before using the remote control unit.

**Range of operation of the remote control unit**

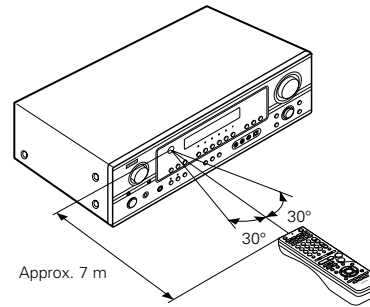


Point the remote control unit at the remote control sensor as shown on the diagram at the left.

**NOTES:**

- The remote control unit can be used from a straight distance of approximately 7 meters, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor, if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

**Inserting the batteries**

- ① Press as shown by the arrow and slide off.
- ② Insert the R6P/AA batteries properly, as shown on the diagram.
- ③ Close the lid.

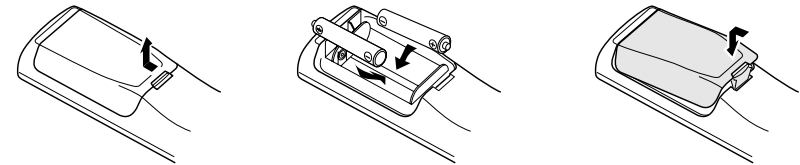


**NOTES:**

- Use only R6P/AA batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- Have replacement batteries on hand so that the old batteries can be replaced as quickly as possible when the time comes.
- Even if less than a year has passed, replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the set. (The included battery is only for verifying operation. Replace it with a new battery as soon as possible.)


## 8 SETTING UP THE SYSTEM

- Once all connections with other AV components have been completed as described in "CONNECTIONS" (see pages 5 to 9), make the various settings described below on the monitor screen using the AVR-1905's on-screen display function. These settings are required to set up the listening room's AV system centered around the AVR-1905.

### Use the following buttons to set up the system

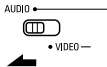**1**  Set the slide switch to "AUDIO".

**2** Use the following buttons to set up the system:

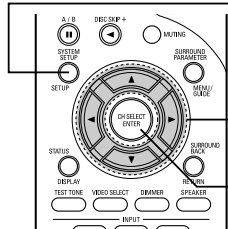

**SYSTEM SETUP button**

Press this to display the system setup on the display.

**CURSOR buttons (▲, ▼, ◀, ▶)**

Press this change what appears on the display.

**ENTER button**

Press this to switch the display. Also use this button to complete the setting.

- System setup items and default values (set upon shipment from the factory)

| System setup          |   | Default settings              |            |              |                   |            |                 |                 |            |
|-----------------------|---|-------------------------------|------------|--------------|-------------------|------------|-----------------|-----------------|------------|
| Speaker Configuration | Input the combination of speakers in your system and their corresponding sizes (SMALL for regular speakers, LARGE for full-size, full-range) to automatically set the composition of the signals output from the speakers and the frequency response. | Front Sp.                     | Center Sp. | Surround Sp. | Surround Back Sp. | Subwoofer  |                 |                 |            |
|                       |   | Large                         | Small      | Small        | Small / 2 spkrs   | Yes        |                 |                 |            |
| Delay Time            | This parameter is for optimizing the timing with which the audio signals are produced from the speakers and subwoofer according to the listening position.  | Front L                       | Front R    | Center       | Surround L        | Surround R | Surround Back L | Surround Back R | Sub-woofer |
|                       |   | 3.6 m                         | 3.6 m      | 3.6 m        | 3.0 m             | 3.0 m      | 3.0 m           | 3.0 m           | 3.6 m      |
| Subwoofer mode        | This selects the subwoofer speaker for playing deep bass signals.   | Subwoofer mode = LFE (Normal) |            |              |                   |            |                 |                 |            |
| Crossover Frequency   | Set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer.   | 80 Hz                         |            |              |                   |            |                 |                 |            |
| Test Tone             | This adjusts the volume of the signals output from the speakers and subwoofer for the different channels in order to obtain optimum effects.  | Front L                       | Front R    | Center       | Surround L        | Surround R | Surround Back L | Surround Back R | Sub-woofer |
|                       |   | 0 dB                          | 0 dB       | 0 dB         | 0 dB              | 0 dB       | 0 dB            | 0 dB            | 0 dB       |
| Digital In Assignment | This assigns the digital input jacks for the different input sources.   | Input source                  | CD         |              | DVD/VDP           |            | TV/DBS          |                 |            |
|                       |   | Digital Inputs                | COAXIAL    |              | OPTICAL 1         |            | OPTICAL 2       |                 |            |

| System setup       |   | Default settings                |   |
|--------------------|---|---------------------------------|---|
| Auto Surround Mode | Auto surround mode function setting.  | Auto Surround Mode = ON         |   |
| Ext. In SW Level   | Set the Ext. In Subwoofer channel playback level.   | Ext. In SW Level = +15 dB       |   |
| On Screen Display  | This sets whether or not to display the on-screen display that appears on the monitor screen when the controls on the remote control unit or main unit are operated. A setting to prevent flickering. | On Screen Display = ON / Mode 1 |   |
| Auto Tuner Presets | FM stations are received automatically and stored in the memory.  | A1 ~ A8                         | 87.5/89.1/98.1/108.0/90.1/90.1/90.1 MHz       |
|                    |   | B1 ~ B8                         | 522/603/999/1404/1611 kHz, 90.1/90.1/90.1 MHz |
|                    |   | C1 ~ C8                         | 90.1 MHz                                      |
|                    |   | D1 ~ D8                         | 90.1 MHz                                      |
|                    |   | E1 ~ E8                         | 90.1 MHz                                      |
|                    |   | F1 ~ F8                         | 90.1 MHz                                      |
| G1 ~ G8            | 90.1 MHz  |                                 |   |


**NOTES:**

- The on-screen display signals are output with priority to the S-VIDEO MONITOR OUT jack during playback of a video component. For example, if the TV monitor is connected to both the AVR-1905's S-Video and video monitor output jacks and signals are input to the AVR-1905 from a video source (VDP, etc.) connected to both the S-Video and video input jacks, the on-screen display signals are output with priority to the S-Video monitor output. If you wish to output the signals to the video monitor output jack, do not connect a cord to the S-VIDEO MONITOR OUT jack. (For details, see page 16.)
- The AVR-1905's on-screen display function is designed for use with high resolution monitor TVs, so it may be difficult to read small characters on TVs with small screens or low resolutions.
- The setup menu is not displayed when headphone are being used.

**Speaker system layout**


Basic system layout

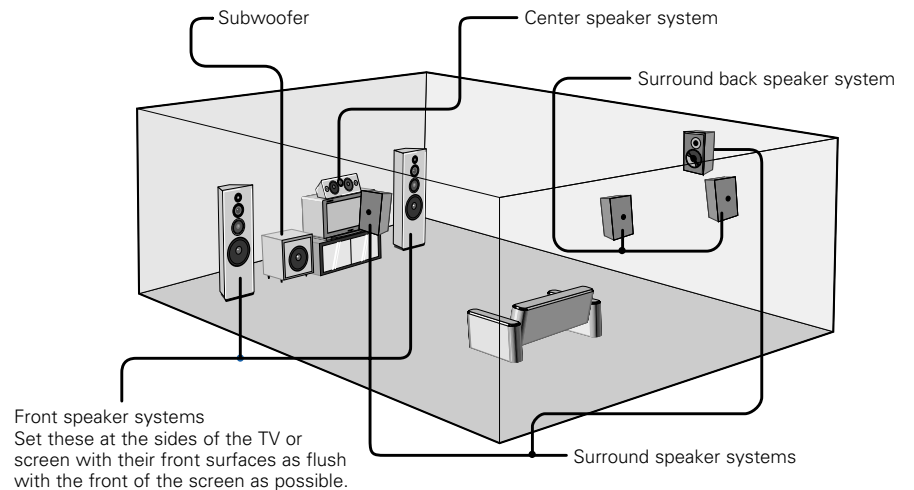

- The following is an example of the basic layout for a system consisting of eight speaker systems and a television monitor:






**Before setting up the system**

**1** Refer to "CONNECTIONS" (pages 5 to 9) and check that all connections are correct.

**2**  Press the Power switch (button).  
(Main unit)

-  ON  
The power turns on and indicator is light.  
Set the power switch to this position to turn the power on and off from the included remote control unit.
-  OFF  
The power turns off and indicator is off.  
In this position, the power cannot be turned on and off from the remote control unit.

**3**  Turn on the power.  
(Main unit)  Press the Power ON/STANDBY switch (button).  
(Remote control unit)



**4**  Press the SYSTEM SETUP button to enter the setting.  
(Remote control unit)

\*SYSTEM SET UP

```

> System Setup
Speaker Configuration
1 Front Sp. Large
2 Center Sp. Small
3 Surround Sp. Small
4 S. Back Sp. Small
5 S. Back Sp. 2sp
6 Subwoofer Yes
        
```

**NOTE:** Please make sure the "AUDIO" position of the slide switch on the remote control unit.


**5**  Press the ENTER or  (down) button to switch to the Speaker Configuration Setup.  
(Remote control unit)

**NOTE:**

- Press the SYSTEM SETUP button again to finish system set up. System set up can be finished at any time. The changes to the settings made up to that point are entered.

**Setting the type of speakers**


- Set up in function of your speaker systems. Performing this setup optimizes the system.
- The composition of the signals output to the different channels and the frequency response are adjusted automatically according to the combination of speakers actually being used.

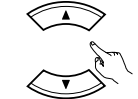**1**  Set whether or not speakers are connected and, if so, their size parameters.  
(Remote control unit)

- To select the speaker



```

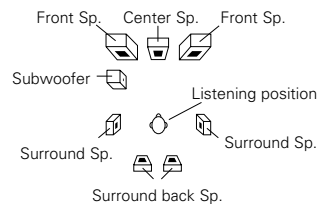System Setup
Speaker Configuration
>1 Front Sp. Large
2 Center Sp. Small
3 Surround Sp. Small
4 S. Back Sp. Small
5 S. Back Sp. 2sp
6 Subwoofer Yes
        
```



- To select the parameter

1 FRONT LARGE

**2**  Press the ENTER or  (down) button to enter the settings and switch to the SPEAKER DISTANCE setting.  
(Remote control unit)

- **Parameters**
- Large.....Select this when using speakers that have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode.
- Small.....Select this when using speakers that do not have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode. When this is set, bass sound with a frequency below the frequency set for the Crossover Frequency mode is sent to the subwoofer.
- None.....Select this when no speakers are installed.
- Yes/No.....Select "Yes" when a subwoofer is installed, "No" when a subwoofer is not installed.
- 2spkrs/1spkr.....Set the number of speakers to be used for the surround back channel.

\* If the subwoofer has sufficient low frequency playback capacity, good sound can be achieved even when "Small" is set for the front, center and surround speakers.


## Setting the delay time

- Input the distance between the listening position and the different speakers to set the delay time for the surround mode.

### Preparations:

Measure the distances between the listening position and the speakers (L1 to L5) on the diagram at the right).

- L1: Distance between center speaker and listening position
- L2: Distance between front speakers and listening position
- L3: Distance between surround speakers and listening position
- L4: Distance between surround back speaker and listening position
- L5: Distance between subwoofer and listening position

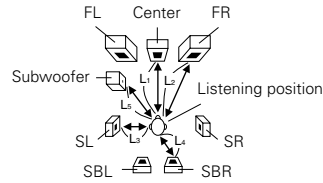

### CAUTION:

※ Please note that the difference for every speaker should be 6.0 m or less.

### NOTE:

- No setting when "None" has been selected for the Speaker Configuration setting.

**1** Select the speaker to be set.

(Remote control unit)

| Delay Time |                |
|------------|----------------|
| > 7        | Front L 3.6m   |
| 8          | Front R 3.6m   |
| 9          | Center 3.6m    |
| 10         | Surr. L 3.0m   |
| 11         | Surr. R 3.0m   |
| 12         | S. Back L 3.0m |
| 13         | S. Back R 3.0m |
| 14         | Subwoofer 3.6m |

**2** Set the distance between the speaker and listening position.  
The distance changes in units of 0.1 meters each time the button is pressed. Select the value closest to the measured distance.

(Remote control unit)

**3** Press the ENTER or (down) button to enter the setting and switch the SUBWOOFER MODE setting.

(Remote control unit)

## Setting the Subwoofer mode and Crossover Frequency

This screen is not displayed when not using a subwoofer.

- Set the crossover frequency and subwoofer mode according to the speaker system being used.

**1** Select the "Subwoofer Mode".

(Remote control unit)

Select the setting.

(Remote control unit)

**2** Select the "Crossover Frequency" mode.

(Remote control unit)

Select the frequency.

(Remote control unit)

- 40 / 60 / 80 / 100 / 120 / 150 / 200 / 250 Hz can be selected.

**3** Press the ENTER or (down) button to enter the setting and switch to the Test Tone setting.

(Remote control unit)

**NOTES:**

— **Assessment of low frequency signal range** —

- The signals produced from the subwoofer channel are LFE signals (during playback of Dolby Digital or DTS signals) and the low frequency signal range of channels set to "SMALL" in the setup. The low frequency signal range of channels set to "LARGE" are produced from those channels.

— **Crossover Frequency** —

- When "Subwoofer" is set to "Yes" at the "Speaker Configuration Setting", set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer (the crossover frequency).
- For speakers set to "Small", sound with a frequency below the crossover frequency is cut, and the cut bass sound is output from the subwoofer instead.

**NOTE:** For ordinary speaker systems, we recommend setting the crossover frequency to 80 Hz. When using small speakers, however, setting the crossover frequency to a high frequency may improve frequency response for frequencies near the crossover frequency.

— **Subwoofer mode** —

- The subwoofer mode setting is only valid when "Large" is set for the front speakers and "YES" is set for the subwoofer in the "Speaker Configuration" settings (see page 12).
- When the "LFE+MAIN" playback mode is selected, the low frequency signal range of channels set to "Large" are produced simultaneously from those channels and the subwoofer channel. In this playback mode, the low frequency range expand more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.
- Selection of the "LFE" play mode will play the low frequency signal range of the channel selected with "Large" from that channel only. Therefore, the low frequency signal range that are played from the subwoofer channel are only the low frequency signal range of LFE (only during Dolby Digital or DTS signal playback) and the channel specified as "Small" in the setup menu.
- Select the play mode that provides bass reproduction with quantity.
- When the subwoofer is set to "Yes", bass sound is output from the subwoofer regardless of the subwoofer mode setting in surround modes other than Dolby/DTS.
- In surround modes other than Dolby Digital and DTS, if the subwoofer is set to "YES", the low frequency portion is always output to the subwoofer channel. For details, refer to "Surround Modes and Parameters" on page 30.

**Setting the Test Tone**

- Use this setting to adjust to that the playback level between the different channel is equal.
- From the listening position, listen to the test tones produced from the speakers to adjust the level.
- The level can also be adjusted directly from the remote control unit. (For details, see page 23.)


**1**




(Remote control unit)

- Use the (left) button to the Test Tone.
- Press the ENTER or (down) button to switch to the Digital In Assignment.

17 T.TONE <YES

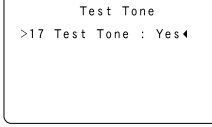


**2**



(Remote control unit)

- Set the mode. Select "Auto" or "Manual".

T.TONE AUTO

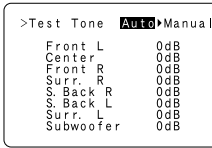

- **Auto:** Adjust the level while listening to the test tones produced automatically from the different speakers.
- **Manual:** Select the speaker from which you want to produce the test tone to adjust the level.

**3**




(Remote control unit)


- Press the (down) button to start Test Tone.

**4**

- a. If the "Auto" mode is selected: Test tones are automatically emitted from the different speakers. The test tones are emitted from the different speakers in the following order, at 4-second intervals the first time and second time around, 2-second intervals the third time around and on:




\* When the surround back speaker setting is set to "1sp" for "Speaker Configuration", this is set to "SB".



(Remote control unit)


- Use the CURSOR left and right buttons to adjust all the speakers to the same volume. The volume can be adjusted between -12 dB and +12 dB in units of 1 dB.

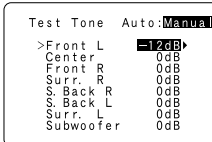



(Remote control unit)

- b. When the "Manual" mode is selected Use the CURSOR up and down to select the speaker for which you want to output test tones, then use the CURSOR left and right to adjust so that the volume of the test tones from the various speakers is the same.

Example: When the volume is set to -12 dB while the Front Lch speaker is selected

**5**  After completing the adjustment, press the ENTER button.  
(Remote control unit)


**6**  Press the ENTER or  (down) button to enter the setting and switch the DIGITAL input setting.  
(Remote control unit)

**NOTES:**

- When you adjust the channel levels while in the TEST TONE mode, the channel level adjustments made will affect all surround modes. Consider this mode a Master Channel Level adjustment mode.
- You can adjust the channel levels for each of the following surround modes: DIRECT, STEREO, STANDARD (DOLBY/DTS SURROUND), 5/7 CH STEREO, MONO MOVIE, ROCK ARENA, JAZZ CLUB, VIDEO GAME, MATRIX and VIRTUAL.

### Setting the Digital In Assignment

• This setting assigns the digital input jacks of the AVR-1905 for the different input sources.

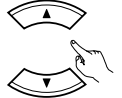**1**  Select the digital input jack to be assigned to the input source.  
(Remote control unit)

• To select the digital input jack


Digital In Assignment



>18 COAXIAL : CD

19 OPTICAL1 : DVD/VDP

20 OPTICAL2 : TV/DBS

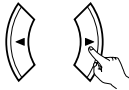18 COAX CD

**2**  • To select the input source  
Select "OFF" if nothing is connected.  
(Remote control unit)

**3**  Press the ENTER or  (down) button to enter the setting and switch the Auto Surround Mode setting.  
(Remote control unit)

**NOTE:**


- TUNER and V. AUX cannot be selected.

### Setting the Auto Surround Mode

For the three kinds of input signals as shown below, the surround mode played the last is stored in the memory. At next time it the same signal inputs, the memorized surround mode is automatically selected and the signal is played.

Note that the surround mode setting is also stored separately for the different input function.

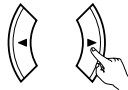

|   | SIGNAL  | Default Auto Surround Mode |
|---|---|----------------------------|
| ① | Analog and PCM 2-channel signals  | STEREO                     |
| ② | 2-channel signals of Dolby Digital, DTS or other multichannel format    | Dolby PLIIx Cinema         |
| ③ | Multichannel signals of Dolby Digital, DTS or other multichannel format | Dolby or DTS Surround      |

**1**  Select "ON" if you want to use the auto surround mode, "OFF" if you do not want to use it.  
(Remote control unit)

21 AUTOSURR. ON


>21 Auto Surround Mode

ON  OFF

**2**  Press the ENTER or  (down) button to switch the Ext. In SW Level setting.  
(Remote control unit)

### Setting the Ext. In SW Level

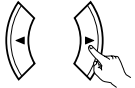

- Set the playback level of the analog input signal connected to the Ext. In terminal.

**1**  (Remote control unit) Select desired setting.

- Select according to the specifications of the player being used.
- Also refer to the player's operating instructions.
- +15dB (default) recommended. (0, +5, 10 and +15 can be selected.)


>22 Ext. In SW Level  
 Subwoofer Level  
**+15dB**

22 EXT. IN SW+15

**2**  (Remote control unit) Press the ENTER or  (down) button to switch the On Screen Display setting.

### Setting the On Screen Display (OSD)


- Use this to turn the on-screen display (messages other than the menu screens) on or off.
- Sets the on-screen display's display mode.
  - Mode 1: Prevents flickering of the on-screen display when there is no video signal.
  - Mode 2: Flickering is not prevented.
 Use this mode if the on-screen display does not appear in the mode 1, as may happen according to the TV being used.

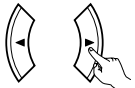
**1**  (Remote control unit) Select "ON" or "OFF".

23 OSD      ON



On Screen Display  
 >23 **ON** ▶ OFF  
 24 **MODE1** ▶ MODE2

**2** Select the "On Screen Display" mode. Select the "MODE1" or "MODE2".

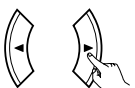 (Remote control unit)

 (Remote control unit)

On Screen Display  
 23 **ON** : OFF  
 >24 **MODE1** ▶ MODE2


**3**  (Remote control unit) Press the ENTER or  (down) button to switch the Auto Preset Memory setting.

### Auto Tuner Presets

- Use this to automatically search for FM broadcasts and store up to 56 stations at preset channels A1 to 8, B1 to 8, C1 to 8, D1 to 8, E1 to 8, F1 to 8 and G1 to 8.



**NOTE:**

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.


**1**  (Remote control unit) Use the CURSOR button to select "Yes". "Search" flashes on the screen and searching begins. "Completed" appears once searching is completed. The display automatically switches to screen.

>25 Auto Preset Memory  
 Auto Tuning And  
 Preset Station Memory  
 Storing Preset Memory  
 Start Yes◀

25 PRESET <YES

**2**  (Remote control unit) Press the ENTER or  (down) button if you want to start the settings over from the beginning.

### After setting up the system

**1**  (Remote control unit) Press the SYSTEM SETUP button to finish system set up.

This completes the system setup operations. Once the system is set up, there is no need to make the settings again unless other components or speakers are connected to or the speaker layout is changed.

**On-screen display signals**

|   | Signals input to the AVR-1905    |                           | On-screen display signal output                        |   |
|---|----------------------------------|---------------------------|--|---|
|   | VIDEO signal input jack (yellow) | S-video signal input jack | Video signal output to VIDEO MONITOR OUT jack (yellow) | Video signal output to S-Video MONITOR OUT jack |
| 1 | ×                                | ×                         | ○  | ○   |
| 2 | ○                                | ×                         | ○  | ○   |
| 3 | ×                                | ○                         | ○  | ○   |
| 4 | ○                                | ○                         | ×  | ○   |

(○): Signal    ×: No signal                      (○): On-screen signals output    ×: On-screen signals not output




## 9 REMOTE CONTROL UNIT


### Operating DENON audio components

- Turn on the power of the different components before operating them.

- 1** Set mode switch 1 to "AUDIO".




- 2** Set mode switch 2 to the position for the component to be operated. (CD, CDR/MD or Tape deck)



- 3** Operate the audio component.


- For details, refer to the component's operating instructions.
- ※ While this remote control is compatible with a wide range of infrared controlled components, some models of components may not be operated with this remote control.

#### 1. CD player (CD) and CD recorder and MD recorder (CDR/MD) system buttons

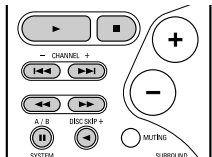


- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶ : Auto search (cue)
- ⏸ : Pause
- DISC SKIP + : Switch discs (for CD changers only)

#### 2. Tape deck (TAPE) system buttons

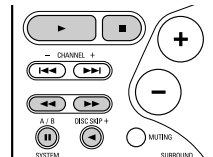


- ◀◀ : Rewind
- ▶▶ : Fast-forward
- : Stop
- ▶ : Forward play
- ◀ : Reverse play
- A/B : Switch between decks A and B

#### 3. Tuner system buttons

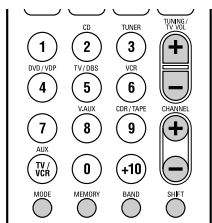

- SHIFT : Switch preset channel range
- CHANNEL +, - : Preset channel up/down
- TUNING +, - : Frequency up/down
- BAND : Switch between the AM and FM bands
- MODE : Switch between auto and mono
- MEMORY : Preset memory


- NOTE:**
- TUNER can be operated when the switch is at "AUDIO" position.

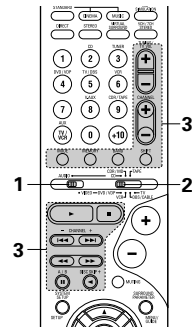

### Preset memory


DENON and other makes of components can be operated by setting the preset memory. This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown on the List of Preset Codes (pages 276~278). Operation is not possible for some models.

- 1** Set mode switch 1 to "AUDIO" or "VIDEO".



Set the AUDIO side for the CD, Tape deck or CDR/MD position, to the VIDEO side for the DVD/VDP, DBS/CABLE, VCR or TV position.

- 2** Set mode switch 2 to the component to be registered.



- 3** Press the ON/SOURCE button and the OFF button at the same time.



- Indicator flash.

- 4**
- |   |   |   |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
| 0 |   |   |
- Referring to the included List of Preset Codes, use the number buttons to input the preset code (a 3-digit number) for the manufacturer of the component whose signals you want to store in the memory.

- 5** To store the codes of another component in the memory, repeat steps 1 to 4.

#### NOTES:


- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Depending on the model and year of manufacture, this function cannot be used for some models, even if they are of makes listed on the included list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and check.
- **The preset memory can be set for one component only among the following: CDR/MD, DVD/VDP and DBS/CABLE.**

The preset codes are as follows upon shipment from the factory and after resetting:

|                |             |
|----------------|-------------|
| TV, VCR.....   | HITACHI     |
| CD, TAPE.....  | DENON       |
| CDR/MD.....    | DENON (CDR) |
| DVD/VDP.....   | DENON (DVD) |
| DBS/CABLE..... | ABC (CABLE) |


**Operating component stored in the preset memory**

**1** Set mode switch 1 to "AUDIO" or "VIDEO".




Set the AUDIO side for the CD, tape deck or CDR/MD position, to the VIDEO side for the DVD/VDP, DBS/CABLE, VCR or TV position.

**2** Set mode switch 2 to the component you want to operate.




**3** Operate the component.  
 • For details, refer to the component's operating instructions.  
 ※ Some models cannot be operated with this remote control unit.

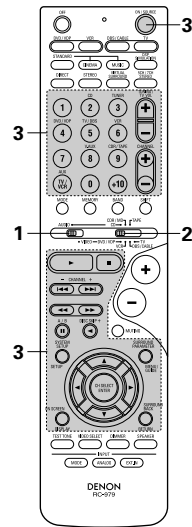


**1. Digital video disc player (DVD) system buttons**

- POWER : Power on/standby (ON/SOURCE)
- OFF : DENON DVD Power off
- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶ : Auto search (to beginning of track)
- ⏸ : Pause
- 0 ~ 9, +10 : 10 key
- DISC SKIP : Disc skip + (for DVD changer only)
- DISPLAY : Switch display
- MENU : Menu
- RETURN : Return
- SETUP : Setup
- ▲, ▼, ◀, ▶ : Cursor up, down, left and right
- ENTER : Enter setting

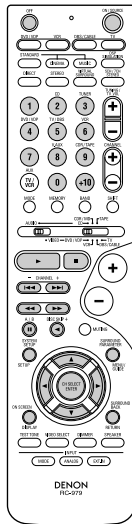


**2. Video disc player (VDP) system buttons**

- POWER : Power on/standby (ON/SOURCE)
- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶ : Auto search (cue)
- ⏸ : Pause
- 0~9, +10 : 10 key

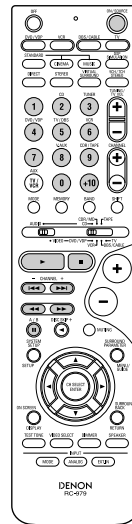


**3. Video deck (VCR) system buttons**

- POWER : Power on/standby (ON/SOURCE)
- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ⏸ : Pause
- Channel : Channels +, -

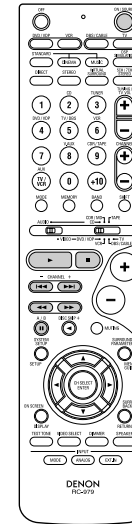


**4. Digital broadcast satellite (DBS) tuner and cable (CABLE) system buttons**

- POWER : Power on/standby (ON/SOURCE)
- MENU : Menu
- RETURN : Return
- ▲, ▼, ◀, ▶ : Cursor up, down, left and right
- ENTER : Enter
- CHANNEL : Switch channels +, -
- 0~9, +10 : Channels
- DISPLAY : Switch display
- VOL +, - : Volume up/down

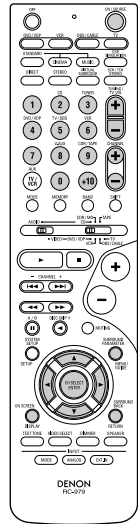

**5. Monitor TV (TV) system buttons**

- POWER : Power on/standby (ON/SOURCE)
- MENU : Menu
- RETURN : Return
- ▲, ▼, ◀, ▶ : Cursor up, down, left and right
- ENTER : Enter
- CHANNEL : Switch channels +, -
- 0~9, +10 : Channels
- DISPLAY : Switch display
- TV/VCR : Switch between TV and video player
- TV VOL : Volume up/down +, -

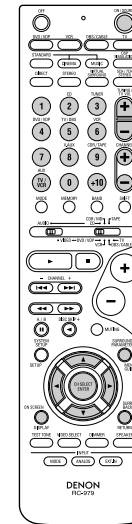

**NOTE:**

- Some manufacturers use different names for the DVD remote control buttons, so also refer to the instructions on remote control for that component.

**NOTES:**

- For this CD, CDR, MD and TAPE components, buttons can be operated in the same way as for Denon audio components (page 17).
- The TV can be operated when the switch is at DVD/VDP, VCR, TV position.


# 10 OPERATION

## Before operating


### Punch Through

• "Punch Through" is a function allowing you to operate the PLAY, STOP, MANUAL SEARCH and AUTO SEARCH buttons on the CD, TAPE, CDR/MD, DVD/MDP or VCR components when in the DBS/CABLE or TV mode. By default, nothing is set.

**1** Set mode switch 1 to "VIDEO".



**2** Set mode switch 2 to the component to be registered (DBS/CABLE or TV).



**3** Press the DVD/VDP POWER button and the TV POWER button at the same time.



• Indicator flash.

**4** Input the number of the component you want to set. (See Table 1)




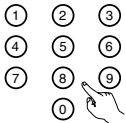


Table 1

|            | No. |
|------------|-----|
| CD         | 1   |
| TAPE       | 2   |
| CDR/MD     | 3   |
| DVD/MDP    | 4   |
| VCR        | 5   |
| No setting | 0   |

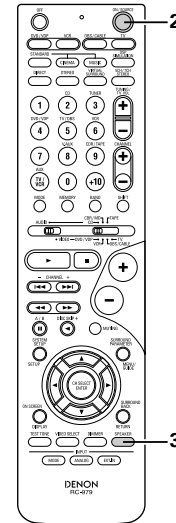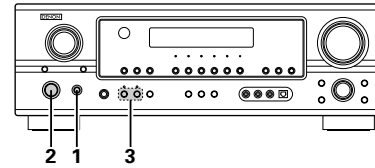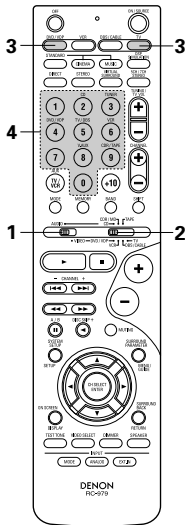

### Preparations:


Check that all connections are proper.

**1** Press the power switch (button).



- **ON**  
The power turns on and indicator is light.  
Set the power switch to this position to turn the power on and off from the included remote control unit.
- **OFF**  
The power turns off and power indicator is off.  
In this position, the power cannot be turned on and off from the remote control unit.

**2** Turn on the power.  
Press the Power ON/STANDBY switch (button).





When pressed, the power turns on and the display lights. The sound is muted for several seconds, after which the unit operates normally. When pressed again, the power turns off, the standby mode is set and the display turns off.

**3** Select the front speakers.  
Press the SPEAKER A or B button to turn the speaker on.



- The front speaker A, B setting can be also be changed with the SPEAKER button on the remote control unit.

Playing the input source

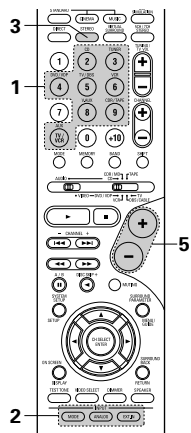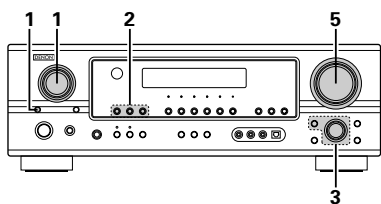

**1** Select the input source to be played.

**Example: CD**



(Main unit)



(Remote control unit)

※ To select the input source when REC OUT is selected, press the SOURCE button then operate the input function selector.



(Main unit)

**2** Select the input mode.

- Selecting the analog mode  
Press the ANALOG button to switch to the analog input.



(Main unit)



(Remote control unit)

- Selecting the external input (EXT. IN) mode  
Press the EXT. IN to switch the external input.



(Main unit)



(Remote control unit)

- Selecting the AUTO, PCM and DTS modes  
The mode switches as shown below each time the INPUT MODE button is pressed.



(Main unit)



(Remote control unit)



**Input mode selection function**

Different input modes can be selected for the different input sources. The selected input modes for the separate input sources are stored in the memory.

① AUTO (auto mode)

In this mode, the types of signals being input to the digital and analog input jacks for the selected input source are detected and the program in the AVR-1905's surround decoder is selected automatically upon playback. This mode can be selected for all input sources other than TUNER.

The presence or absence of digital signals is detected, the signals input to the digital input jacks are identified and decoding and playback are performed automatically in DTS, Dolby Digital or PCM (2 channel stereo) format. If no digital signal is being input, the analog input jacks are selected.

Use this mode to play Dolby Digital signals.

② PCM (exclusive PCM signal playback mode)

Decoding and playback are only performed when PCM signals are being input.

Note that noise may be generated when using this mode to play signals other than PCM signals.

③ DTS (exclusive DTS signal playback mode)

Decoding and playback are only performed when DTS signals are being input.

④ ANALOG (exclusive analog audio signal playback mode)

The signals input to the analog input jacks are decoded and played.

⑤ EXT. IN (external decoder input jack selection mode)

The signals being input to the external decoder input jacks are played without passing through the surround circuitry.

**NOTE:**

- Note that noise will be output when CDs or LDs recorded in DTS format are played in the "PCM" (exclusive PCM signal playback) or "ANALOG" (exclusive PCM signal playback) mode. Select the AUTO or DTS mode when playing signals recorded in DTS.

**Notes on playing a source encoded with DTS**

- Noise may be generated at the beginning of playback and while searching during DTS playback in the AUTO mode. If so, play in the DTS mode.
- In some rare cases the noise may be generated when you perform the operation to stop playback of a DTS-CD or DTS-LD.

**3** Select the play mode.  
Press the SURROUND MODE button, then turn the SELECT knob.

**Example: Stereo**



(Main unit)



(Remote control unit)



- To select the surround mode while adjusting the surround parameters, tone defeat or tone control, press the surround mode button then operate the selector.

**4** Start playback on the selected component.  
• For operating instructions, refer to the component's manual.

**5** Adjust the volume.



The volume level is displayed on the master volume level display.



(Main unit)



(Remote control unit)



- The volume can be adjusted within the range of -70 to 0 to 18 dB, in steps of 1 dB. However, when the channel level is set as described on page 23, if the volume for any channel is set at +1 dB or greater, the volume cannot be adjusted up to 18 dB. (In this case the maximum volume is adjusted to "18 dB — (Maximum value of channel level)".)

Input mode when playing DTS sources

- Noise will be output if DTS-compatible CDs or LDs are played in the "ANALOG" or "PCM" mode. When playing DTS-compatible sources, be sure to connect the source component to the digital input jacks (OPTICAL/COAXIAL) and set the input mode to "DTS".

**Input mode display**

- In the AUTO mode
- In the DIGITAL PCM mode
- In the DIGITAL DTS mode
- In the ANALOG mode



One of these lights, depending on the input signal.



**Input signal display**

- DOLBY DIGITAL
- DTS
- PCM




- The **DIGITAL** indicator lights when digital signals are being input properly. If the **DIGITAL** indicator does not light, check whether the digital input component setup (page 15) and connections are correct and whether the component's power is turned on.

**NOTE:**

- The **DIGITAL** indicator will light when playing CD-ROMs containing data other than audio signals, but no sound will be heard.


## Playback using the external input (EXT. IN) jacks

- 1 Set the external input (EXT. IN) mode.  
Press the EXT. IN to switch the external input.




Once this is selected, the input signals connected to the FL (front left), FR (front right), C (center), SL (surround left) and SR (surround right) channels of the EXT. IN jacks are output directly to the front (left and right), center and surround (left and right) speaker systems as well as the pre-out jacks without passing through the surround circuitry.

In addition, the signal input to the SW (subwoofer) jack is output to the PRE OUT SUBWOOFER jack.

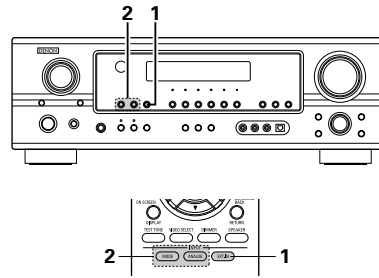

- 2 Cancelling the external input mode  
To cancel the external input (EXT. IN) setting, press the INPUT MODE (AUTO, PCM, DTS) or ANALOG button to switch to the desired input mode. (See page 20.)



- When the input mode is set to the external input (EXT. IN), the play mode (DIRECT, STEREO, STANDARD (DOLBY/DTS SURROUND), 5CH/7CH STEREO or DSP SIMULATION) cannot be selected.

### NOTES:

- In play modes other than the external input mode, the signals connected to EXT. IN jacks cannot be played. In addition, signals cannot be output from channels not connected to the input jacks.
- The external input mode can be set for any input source. To watch video while listening to sound, select the input source to which the video signal is connected, then set this mode.
- If the subwoofer output level seems to high, set the "SW ATT." surround parameter to "ON".


## Playing audio sources (CDs and DVDs)

The AVR-1905 is equipped with two 2-channel playback modes exclusively for music. Select the mode to suit your tastes.

- 1 **DIRECT mode**  
Use this mode to achieve good quality 2-channel sound while watching images. In this mode, the audio signals bypass such circuits as the tone circuit and are transmitted directly, resulting in good quality sound.



- 2 **STEREO mode**  
Use this mode to adjust the tone and achieve the desired sound while watching images.


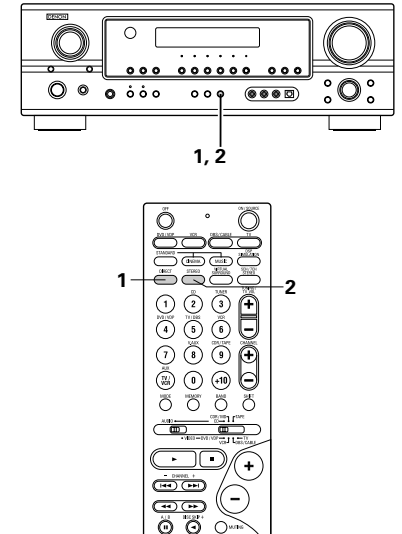


**After starting playback**

**[1] Adjusting the sound quality (tone)**

- The tone control function will not work in the direct mode.

**1** The tone switches as follows each time the TONE CONTROL button is pressed.

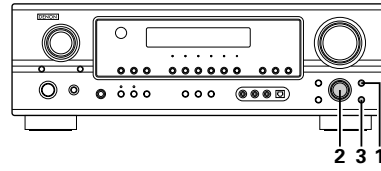

**2** With the name of the volume to be adjusted selected, turn the SELECT knob to adjust the level.



- To increase the bass or treble: Turn the control clockwise. (The bass or treble sound can be increased to up to +12 dB in steps of 2 dB.)
- To decrease the bass or treble: Turn the control counterclockwise. (The bass or treble sound can be decreased to up to -12 dB in steps of 2 dB.)


**3** If you do not want the bass and treble to be adjusted, turn on the tone defeat mode.



- The signals do not pass through the bass and treble adjustment circuits, so it provides higher quality sound.

**NOTE:**

To prevent hearing loss, do not raise the volume level excessively when using headphones.

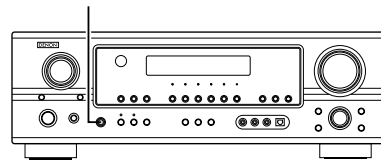

**[2] Listening over headphones**

**1** Plug the headphones' plug into the jack.



- Connect the headphones to the PHONES jack. The pre-out output (including the speaker output) is automatically turned off when headphones are connected.


**[3] Turning the sound off temporarily (MUTING)**

**1** Use this to turn off the audio output temporarily. Press the MUTING button.



(Remote control unit)

- Cancelling MUTING mode.
  - Press the MUTING button again.
  - Muting will also be cancelled when MASTER VOL is adjusted up or down.



**[4] Combining the currently playing sound with the desired image**


**1** Simulcast playback  
Use this switch to monitor a video source other than the audio source. Press the VIDEO SELECT button repeatedly until the desired source appears on the display.



(Remote control unit)

• Cancelling simulcast playback.

- Select "SOURCE" using the VIDEO SELECT button.
- Switch the program source to the component connected to the video input jacks.

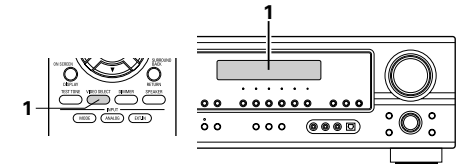

Display



**[5] Checking the currently playing program source, etc.**

**1** On screen display


- Each time an operation is performed, a description of that operation appears on the display connected to the unit's VIDEO MONITOR OUT jack.



(Remote control unit)

Also, the unit's operating status can be checked during playback by pressing the remote control unit's ON SCREEN/DISPLAY button.

Such information as the position of the input selector and the surround parameter settings is output in sequence.




**2** Using the dimmer function

- Use this to change the brightness of the display. The display brightness changes in four steps (bright, medium, dim and off) by pressing the main unit's DIMMER button repeatedly.







(Remote control unit)



## Multi-source recording

### Playing one source while recording another (REC OUT mode)

- 1 Press the REC SELECT button.  (Main unit)
- 2 With "RECOU SOURCE" displayed, turn the FUNCTION knob to select the source you wish to record.  (Main unit)
- 3 Set the recording mode.
  - For operating instructions, refer to the manual of the component on which you want to record.
- 4 To cancel, turn the function knob and select "SOURCE".  (Main unit)

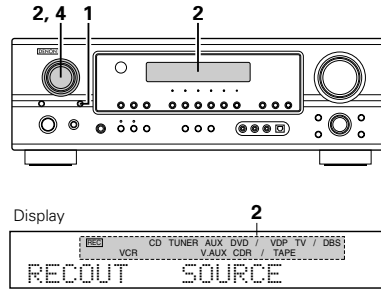

#### NOTES:


- Recording sources other than digital inputs selected in the REC OUT mode are also output to the multi source audio output jacks.
- Digital signals are not output to the REC SOURCE or audio output jacks.
- The DIGITAL IN's signal selected with the function selector knob are output to the DIGITAL OUT (OPTICAL) jack.

## 11 SURROUND


### Before playing with the surround function

- Before playing with the surround function, be sure to use the test tones to adjust the playback level from the different speakers. This adjustment can be performed with the system setup (see page 11) or from the remote control unit, as described below.
- Adjusting with the remote control unit using the test tones is only possible in the "Auto" mode and only effective in the STANDARD (DOLBY/DTS SURROUND) modes. The adjusted levels for the different modes are automatically stored in the memory.


- 1 Set the STANDARD (DOLBY/DTS SURROUND) modes.

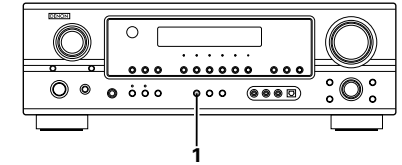

- 2 Press the TEST TONE button.





- 3 Test tones are output from the different speakers. Use the channel volume adjust buttons to adjust so that the volume of the test tones is the same for all the speakers.

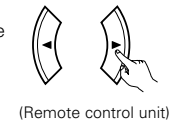

#### NOTE:

- Please make sure the "AUDIO" position of the slide switch on the remote control unit.

- 4 After completing the adjustment, press the TEST TONE button again.

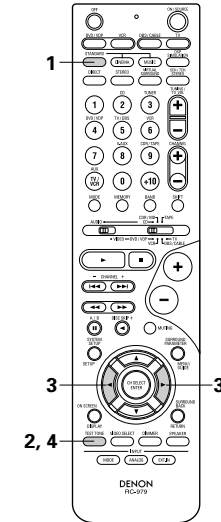


- After adjusting using the test tones, adjust the channel levels either according to the playback sources or to suit your tastes, as (described) below.

**1** Select the speaker whose level you want to adjust.



(Remote control unit)

The channel switches as shown below each time the button is pressed.




※ When the surround back speaker setting is set to "1sp" for "Speaker Configuration", this is set to "SB".

**NOTE:**


- Please make sure the "AUDIO" position of the slide switch on the remote control unit.

**2** Adjust the level of the selected speaker.




(Remote control unit)

- ※ Default setting of channel level is 0 dB.
- ※ The level of the selected speaker can be adjusted within the range of +12 to -12 dB using the cursor buttons.
- ※ SW channel level can be turned off by decreasing one step from -12 dB.  
OFF ↔ -12 dB ↔ 12 dB

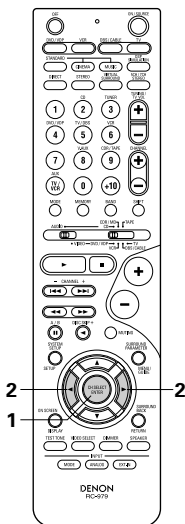

**Dolby Pro Logic IIx (Pro Logic II) mode**

To play in the PL IIx mode, set "S.BackSp" at the Speaker Configuration setting to "1Sp" or "2Sp".

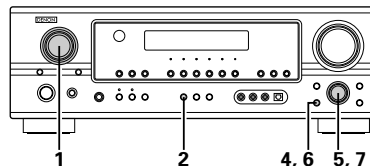

**1** Select the function to which the component you want to play is connected.

**Example: DVD**



(Main unit)



(Remote control unit)

**2** Select the Dolby Surround Pro Logic IIx mode.




(Main unit)



(Remote control unit)

- The Dolby Pro Logic II indicator lights.

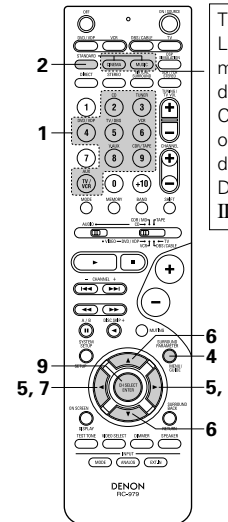

The Dolby Surround Pro Logic IIx Cinema or Music mode can be chosen directly by pressing the CINEMA or MUSIC button on the remote control unit during playback in the Dolby Surround Pro Logic IIx mode.

**3** Play a program source with the **DOLBY SURROUND** mark.

- For operating instructions, refer to the manuals of the respective components.


**4** Select the surround parameter mode.




(Main unit)



(Remote control unit)




- ※ To perform this operation from the remote control unit, check that the mode selector switch is set to "AUDIO".


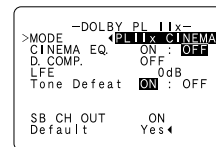





**5** Select the optimum mode for the source.

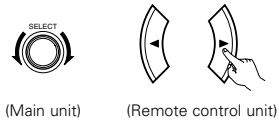



- When the "SB CH OUT" parameter is set to "ON". (Set "S.BackSp" at system set up to "SMALL" or "LARGE".)

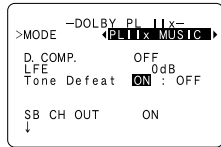


- When the "SB CH OUT" parameter is set to "OFF". (Set "S.BackSp" at system set up to "NONE".)



**6** Select the various parameters. (See "Surround parameters ①" for a description of the various parameters.)

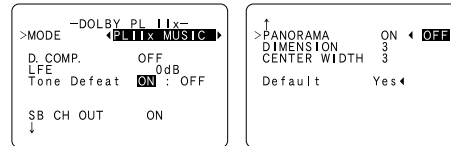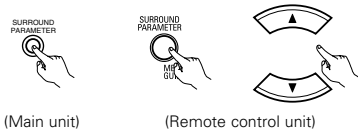


**7** Set the various surround parameters.



**8** When the surround parameters are set using the buttons on the main unit, stop operating buttons after completing the settings. The settings are automatically finalized and the normal display reappears after several seconds.


**9** Press the ENTER button to finish surround parameter mode.



**NOTE:**

- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

**DTS NEO:6 mode**

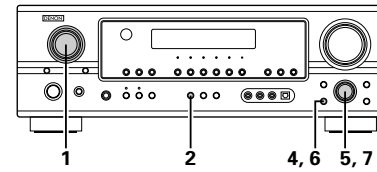

**1** Select the function to which the component you want to play is connected.


**Example: DVD**



**2** Select the DTS NEO:6 mode.





- The mode switches as shown below each time the button is pressed.




**3** Play a program source.

**4** Select the surround parameter mode.

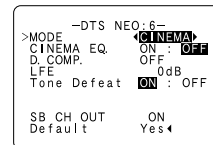



- \* To perform this operation from the remote control unit, check that the mode selector switch is set to "AUDIO".

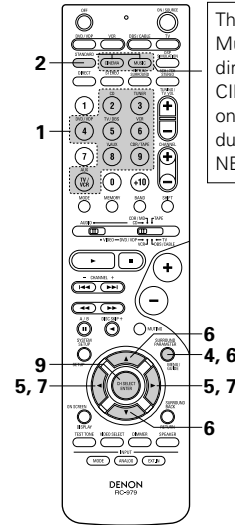


The DTS NEO:6 Cinema or Music mode can be chosen directly by pressing the CINEMA or MUSIC button on the remote control unit during playback in the DTS NEO:6 mode.


**5** Select the optimum mode for the source.

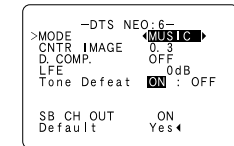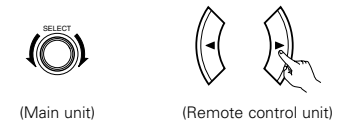

**6** Select the various parameters.

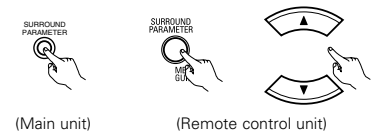


**7** Set the various surround parameters.

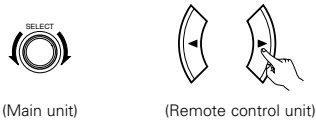

**8** When the surround parameters are set using the buttons on the main unit, stop operating buttons after completing the settings. The settings are automatically finalized and the normal display reappears after several seconds.

**9** Press the ENTER button to finish surround parameter mode.



**NOTE:**

- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

**Surround parameters ①**

**Pro Logic IIx and Pro Logic II Mode:**

- The Cinema mode is for use with stereo television shows and all programs encoded in Dolby Surround.
- The Music mode is recommended as the standard mode for auto sound music systems (no video), and is optional for A/V systems.
- The Pro Logic mode offers the same robust surround processing as original Pro Logic in case the source contents is not of optimum quality.
- The Game mode for playing games. The game mode can only be used with 2-channel audio sources. Select one of the modes ("Cinema", "Music", "Pro Logic" or "Game").

**Panorama Control:**

This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging. Select "OFF" or "ON".

**Dimension Control:**

This control gradually adjust the soundfield either towards the front or towards the rear. The control can be set in 7 steps from 0 to 6.

**Center Width Control:**

This control adjust the center image so it may be heard only from the center speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees. The control can be set in 8 steps from 0 to 7.

**DTS NEO:6 Mode:**

**• Cinema**

This mode is optimum for playing movies. Decoding is performed with emphasis on separation performance to achieve the same atmosphere with 2-channel sources as with 6.1-channel sources. This mode is effective for playing sources recorded in conventional surround formats as well, because the in-phase component is assigned mainly to the center channel (C) and the reversed phase component to the surround (SL, SR and SB channels).

**• Music**

This mode is suited mainly for playing music. The front channel (FL and FR) signals bypass the decoder and are played directly so there is no loss of sound quality, and the effect of the surround signals output from the center (C) and surround (SL, SR and SB) channels add a natural sense of expansion to the sound field.

**CENTER IMAGE (0.0 to 1.0: default 0.3):**

The center image parameter for adjusting the expansion of the center channel in the DTS NEO:6 MUSIC mode has been added.

**Dolby Digital mode (only with digital input) and DTS Surround (only with digital input)**

**1** Select the input source.

Playback with a digital input

- ① Select an input source set to digital (COAXIAL/OPTICAL) (see page 15).

**Example: DVD**



- ② Set the input mode to "AUTO" or DTS.




**2** Select the STANDARD (Dolby/DTS Surround) mode.





When performing this operation from the main unit's panel, press the SURROUND MODE button, then turn the SELECT knob and select Dolby Pro Logic IIx or DTS NEO:6.



**3** Operate the SURROUND BACK button to switch Surround Back CH ON/OFF.

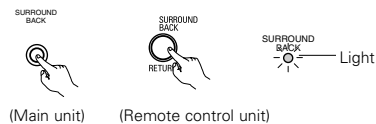

- Lights when the SURROUND BACK button is on.

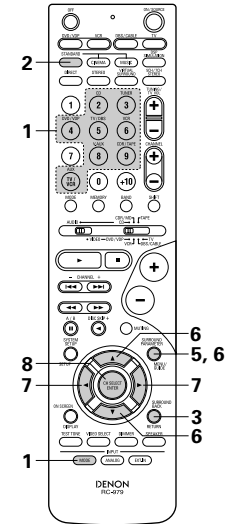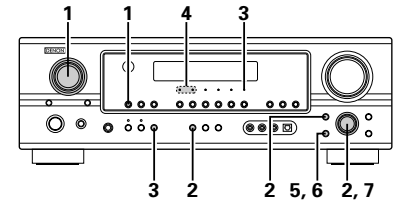

**4** Play a program source with the **DOLBY DIGITAL**, **DTS** mark.




- The Dolby Digital indicator lights when playing Dolby Digital sources.




- The DTS indicator lights when playing DTS sources.

**5** Display the surround parameter menu.



(Main unit)



(Remote control unit)

-Dolby Digital EX-

>CINEMA EQ. ON ◀ OFF

D. COMP. OFF

LFE Tone Defeat ON : OFF

SB CH OUT MTRX ON

Default Yes ◀

-DTS ES DSCRT6.1-


>CINEMA EQ. ON ◀ OFF

LFE Tone Defeat ON : OFF


SB CH OUT ES DSCRT

Default Yes ◀

**6** Select the various parameters.




(Main unit)




(Remote control unit)

**7** Adjust the parameter settings.




(Main unit)

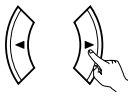

(Remote control unit)

**8** Press the ENTER button to finish surround parameter mode.




(Remote control unit)

**NOTE:**

- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

**Dialogue Normalization**


The dialogue normalization function is activated automatically when playing Dolby Digital program sources. Dialogue normalization is a basic function of Dolby Digital which automatically normalizes the dialog level (standard level) of the signals which are recorded at different levels for different program sources, such as DVD, DTV and other future formats that will use Dolby Digital. These contents can be verified with the ON SCREEN/DISPLAY button.





The number indicates the normalization level when the currently playing program is normalized to the standard level.

**Checking the input signal**

The input signal can be checked by pressing the remote control unit's ON SCREEN/DISPLAY button.



- SIGNAL:** Displays the type of signal (DTS, DOLBY DIGITAL, PCM, etc.).
- fs:** Displays the input signal's sampling frequency.
- FORMAT:** Displays the input signal's number of channels. "Number of front channels/Number of surround channels/LFE on/off"  
"SURROUND" is displayed for 2-channel signal sources recorded in Dolby Surround.
- OFFSET:** Displays the dialog normalization offset value.
- FLAG:** Displays the special identification signal recorded in the input signal.  
"MATRIX" is displayed when matrix processing is conducted on the surround back channel, "DISCRETE" is displayed when discrete processing is conducted.  
Not displayed when no identification signal is recorded.

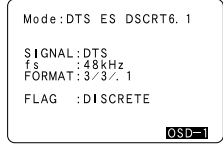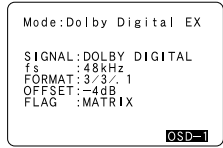

In addition, screen information is displayed in the following order when the ON SCREEN button is pressed repeatedly:

- OSD-1 Input signal
- OSD-2 Input/output
- OSD-3 Auto surround mode
- OSD-4~10 Tuner preset stations

**NOTE:**

OSD-3: This is displayed when the auto surround mode is set to "ON" and the input mode is set to "Auto".  
It is not displayed when the input mode is set to "Analog" or "EXT. IN".

**Surround parameters ②**

**CINEMA EQ. (Cinema Equalizer):**

The Cinema EQ function gently decreases the level of the extreme high frequencies, compensating for overly-bright sounding motion picture soundtracks. Select this function if the sound from the front speakers is too bright.

This function only works in the Dolby Pro Logic IIx, Dolby Digital, DTS Surround and DTS NEO:6 modes. (The same contents are set for all operating modes.)

**D.COMP. (Dynamic Range Compression):**

Motion picture soundtracks have tremendous dynamic range (the contrast between very soft and very loud sounds). For listening late at night, or whenever the maximum sound level is lower than usual, the Dynamic Range Compression allows you to hear all of the sounds in the soundtrack (but with reduced dynamic range). (This only works when playing program sources recorded in Dolby Digital or DTS.) Select one of the four parameters ("OFF", "LOW", "MID" (middle) or "HI" (high)). Set to OFF for normal listening.

**LFE (Low Frequency Effect):**

This sets the level of the LFE (Low Frequency Effect) sounds included in the source when playing program sources recorded in Dolby Digital or DTS.

If the sound produced from the subwoofer sounds distorted due to the LFE signals when playing Dolby Digital or DTS sources when the peak limiter is turned off with the subwoofer peak limit level setting (system setup menu), adjust the level as necessary.

Program source and adjustment range:

- 1. Dolby Digital: -10 dB to 0 dB
- 2. DTS Surround: -10 dB to 0 dB

※ **When DTS encoded movie software is played, it is recommended that the LFE LEVEL be set to 0 dB for correct DTS playback.**

※ **When DTS encoded music software is played, it is recommended that the LFE LEVEL be set to -10 dB for correct DTS playback.**

**TONE:**

This adjusts the tone control. This can be set individually for the separate shroud mode other than Direct mode.

**SB CH OUT (Surround Back):**

(1) (Multi channel source)

- "OFF" .....Playback is conducted without using the surround back speaker.
- "NON MTRX" .....The same signals those of the surround channels are output from the surround back channels.
- "MTRX ON" .....Surround back channel is reproduced using digital matrix processing.
- "ES MTRX" .....When playing DTS signals, the surround back signals undergo digital matrix processing for playback.
- "ES DSCRT" .....When a signal identifying the source as a discrete 6.1-channel source is included in the DTS signals, the surround back signals included in the source are played.
- "PL IIx Cinema" .....Processing is performed with the Cinema mode of the PL IIx decoder and the Surround Back channel is reproduced.
- "PL IIx Music" .....Processing is performed with the Music mode of the PL IIx decoder and the Surround Back channel is reproduced.

(2) (2ch source)

- "OFF" .....Playback is conducted without using the surround back speaker.
- "ON" .....Playback is conducted using the surround back speaker.

**NOTE:** This operation can be performed directly using the SURROUND BACK button on the main unit's panel.

**12 DSP SURROUND SIMULATION**

- This unit is equipped with a high performance DSP (Digital Signal Processor) which uses digital signal processing to synthetically recreate the sound field. One of 7 preset surround modes can be selected according to the program source and the parameters can be adjusted according to the conditions in the listening room to achieve a more realistic, powerful sound.

**Surround modes and their features**

|   |                     |   |
|---|---------------------|---|
| 1 | 5CH/7CH STEREO      | The front left channel signals are output to the surround and surround back signal left channels, the front right channel signals are output to the surround and surround back signal right channels, and the in-phase component of the left and right channels is output to the center channel. Use this mode to enjoy stereo sound. |
| 2 | MONO MOVIE (NOTE 1) | Select this when watching monaural movies for a greater sense of expansion.   |
| 3 | ROCK ARENA          | Use this mode to achieve the feeling of a live concert in an arena with reflected sounds coming from all directions.  |
| 4 | JAZZ CLUB           | This mode creates the sound field of a live house with a low ceiling and hard walls. This mode gives jazz a very vivid realism.   |
| 5 | VIDEO GAME          | Use this to enjoy video game sources.   |
| 6 | MATRIX              | Select this to emphasize the sense of expansion for music sources recorded in stereo. Signals consisting of the difference component of the input signals (the component that provides the sense of expansion) processed for delay are output from the surround channel.  |
| 7 | VIRTUAL             | Select this mode to enjoy a virtual sound field, produced from the front 2-channel speakers or headphones.  |

※ Depending on the program source being played, the effect may not be very noticeable. In this case, try other surround modes, without worrying about their names, to create a sound field suited to your tastes.

NOTE 1: When playing sources recorded in monaural, the sound will be one-sided if signals are only input to one channel (left or right), so input signals to both channels. If you have a source component with only one audio output (monophonic camcorder, etc.) obtain a "Y" adapter cable to split the mono output to two outputs, and connect to the L and R inputs.

**Personal Memory Plus**


This set is equipped with a personal memorize function that automatically memorizes the surround modes and input modes selected for the input different sources. When the input source is switched, the modes set for that source last time it was used are automatically recalled.

※ The surround parameters, tone control settings and playback level balance for the different output channels are memorized for each surround mode.

**DSP surround simulation**



- To operate the surround mode and surround parameters from the remote control unit.

**1** Select the surround mode for the input channel.



(Remote control unit)


The surround mode switches in the following order each time the DSP SIMULATION button is pressed:

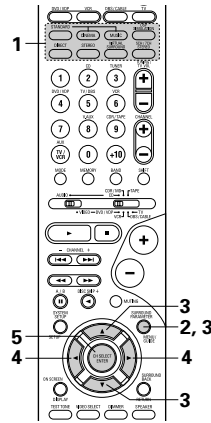

**2** (Remote control unit)

To enter the surround parameter setting mode, press the SURROUND PARAMETER button.

- The surround parameter switches in the following order each time the SURROUND PARAMETER button is pressed for the different surround modes.

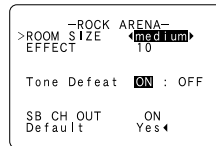

**3** (Remote control unit)

Select the various parameters.

**4** (Remote control unit)

Adjust the parameter settings.

**5** (Remote control unit)


Press the ENTER button to finish surround parameter mode.

**NOTE:**


- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

- Operating the surround mode and surround parameters from the main unit's panel.


**1** Turn the SELECT knob to select the surround mode.

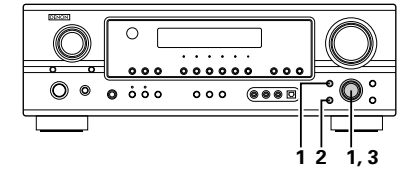

- When turned clockwise



- When turned counterclockwise



(Main unit)

※ To select the surround mode while adjusting the surround parameters, tone defeat or tone control, press the SURROUND MODE button then operate the selector.

**2** (Main unit)

Press the SURROUND PARAMETER button. Press and hold in the surround parameter button to select the parameter you want to set.

- The parameters which can be set differ for the different surround modes. (Refer to "Surround Modes and Parameters" on page 30.)

**3** Display the parameter you want to adjust, then turn the SELECT knob to set it.

**NOTE:**

- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

**Surround parameters ③**

**ROOM SIZE:**

This sets the size of the sound field.

There are five settings: "small", "med.s" (medium-small), "medium", "med.l" (medium-large) and "large". "small" recreates a small sound field, "large" a large sound field.

**EFFECT LEVEL:**

This sets the strength of the surround effect.

The level can be set in 15 steps from 1 to 15.

**DELAY TIME:**

In the matrix mode only, the delay time can be set within the range of 0 to 110 ms.

■ Surround modes and parameters

| Mode                | Signals and adjustability in the different modes |        |              |                   |            |                                    |                          |                          |                             |
|---------------------|--|--------|--------------|-------------------|------------|------------------------------------|--------------------------|--------------------------|-----------------------------|
|                     | Channel output                                   |        |              |                   |            | When playing Dolby Digital signals | When playing DTS signals | When playing PCM signals | When playing ANALOG signals |
|                     | FRONT L/R  | CENTER | SURROUND L/R | SURROUND BACK L/R | SUB-WOOFER |                                    |                          |                          |                             |
| DIRECT              | ○  | ×      | ×            | ×                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| STEREO              | ○  | ×      | ×            | ×                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| EXTERNAL INPUT      | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ×                                  | ×                        | ×                        | ○                           |
| DOLBY PRO LOGIC II  | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○*                                 | ○*                       | ○                        | ○                           |
| DOLBY PRO LOGIC IIx | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○*                                 | ○*                       | ○                        | ○                           |
| DTS NEO:6           | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○*                                 | ○*                       | ○                        | ○                           |
| DOLBY DIGITAL       | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ×                        | ×                        | ×                           |
| DTS SURROUND        | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ×                                  | ○                        | ×                        | ×                           |
| 5CH/7CH STEREO      | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| ROCK ARENA          | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| JAZZ CLUB           | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| VIDEO GAME          | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| MONO MOVIE          | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| MATRIX              | ○  | ⊗      | ⊗            | ⊗                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |
| VIRTUAL             | ○  | ×      | ×            | ×                 | ⊗          | ○                                  | ○                        | ○                        | ○                           |

○ : Signal / Adjustable  
 × : No signal  
 ⊗ : Turned on or off by speaker configuration setting

○ : Able  
 × : Unable  
 \* : Only for 2 ch contents.

| Mode                | Signals and adjustability in the different modes |              |            |                       |              |              |             |         |  |
|---------------------|--|--------------|------------|-----------------------|--------------|--------------|-------------|---------|--|
|                     | SURROUND PARAMETER                               |              |            |                       |              |              |             |         |  |
|                     | ROOM SIZE  | EFFECT LEVEL | DELAY TIME | PRO LOGIC II/IIx ONLY |              |              | NEO:6 MUSIC | EXT. IN |  |
| PANORAMA            |  |              |            | DIMENSION             | CENTER WIDTH | CENTER IMAGE | SW ATT      |         |  |
| DIRECT              | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| STEREO              | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| EXTERNAL INPUT      | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ○       |  |
| DOLBY PRO LOGIC II  | ×  | ×            | ×          | ○ (OFF)               | ○ (3)        | ○ (3)        | ×           | ×       |  |
| DOLBY PRO LOGIC IIx | ×  | ×            | ×          | ○ (OFF)               | ○ (3)        | ○ (3)        | ×           | ×       |  |
| DTS NEO:6           | ×  | ×            | ×          | ×                     | ×            | ×            | ○ (0.3)     | ×       |  |
| DOLBY DIGITAL       | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| DTS SURROUND        | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| 5CH/7CH STEREO      | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| ROCK ARENA          | ○ (Medium)                                       | ○ (10)       | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| JAZZ CLUB           | ○ (Medium)                                       | ○ (10)       | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| VIDEO GAME          | ○ (Medium)                                       | ○ (10)       | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| MONO MOVIE          | ○ (Medium)                                       | ○ (10)       | ×          | ×                     | ×            | ×            | ×           | ×       |  |
| MATRIX              | ×  | ×            | ○ (30msec) | ×                     | ×            | ×            | ×           | ×       |  |
| VIRTUAL             | ×  | ×            | ×          | ×                     | ×            | ×            | ×           | ×       |  |

○ : Adjustable

× : Not adjustable

| Mode                | Signals and adjustability in the different modes    |         |                  |              |            |      |
|---------------------|---|---------|------------------|--------------|------------|------|
|                     | Parameter (default values are shown in parentheses) |         |                  |              |            |      |
|                     | When playing Dolby Digital and DTS signals          |         | SB CH OUT (MODE) | TONE CONTROL | CINEMA EQ. | MODE |
| D.COMP.             | LFE   |         |                  |              |            |      |
| DIRECT              | ○ (OFF)   | ○ (0dB) | ×                | ×            | ×          | ×    |
| STEREO              | ○ (OFF)   | ○ (0dB) | ×                | ○ (0dB)      | ×          | ×    |
| EXTERNAL INPUT      | ×   | ×       | ×                | ×            | ×          | ×    |
| DOLBY PRO LOGIC II  | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ○ (OFF)    | ○    |
| DOLBY PRO LOGIC IIx | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ○ (OFF)    | ○    |
| DTS NEO:6           | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ○ (OFF)    | ○    |
| DOLBY DIGITAL       | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ○ (OFF)    | ×    |
| DTS SURROUND        | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ○ (OFF)    | ×    |
| 5CH/7CH STEREO      | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| ROCK ARENA          | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| JAZZ CLUB           | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| VIDEO GAME          | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| MONO MOVIE          | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| MATRIX              | ○ (OFF)   | ○ (0dB) | ○                | ○ (0dB)      | ×          | ×    |
| VIRTUAL             | ○ (OFF)   | ○ (0dB) | ×                | ○ (0dB)      | ×          | ×    |

○ : Able  
 × : Unable


○ : Adjustable  
 × : Not adjustable

## 13 LISTENING TO THE RADIO


### Auto preset memory

This unit is equipped with a function for automatically searching for FM broadcast stations and storing them in the preset memory.

The "Auto tuner preset" operation can also be performed at "System setup". (See page 16.)

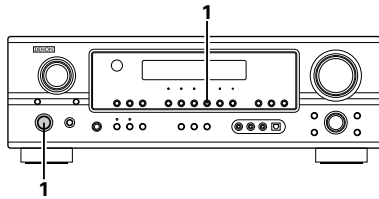

- 1 When the main unit's power operation switch turn on while pressing the set's PRESET ▲ (+) button the unit automatically begins searching for FM broadcast stations.

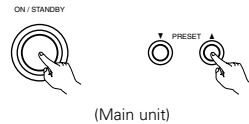

- 2 When the first FM broadcast station is found, that station is stored in the preset memory at channel A1. Subsequent stations are automatically stored in order at preset channels A1 to A8, B1 to B8, C1 to C8, D1 to D8, E1 to E8, F1 to F8 and G1 to G8, for a maximum of 56 stations.

- 3 Channel A1 is tuned in after the auto preset memory operation is completed.



#### NOTES:

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.
- To interrupt this function, press the power operation switch.

### DEFAULT VALUE

| AUTO TUNER PRESETS |  |
|--------------------|--|
| A1 ~ A8            | 87.5/89.1/98.1/108.0/90.1/90.1/90.1 MHz      |
| B1 ~ B8            | 522/603/999/1404/1611 kHz/90.1/90.1/90.1 MHz |
| C1 ~ C8            | 90.1 MHz                                     |
| D1 ~ D8            | 90.1 MHz                                     |
| E1 ~ E8            | 90.1 MHz                                     |
| F1 ~ F8            | 90.1 MHz                                     |
| G1 ~ G8            | 90.1 MHz                                     |


### Auto tuning

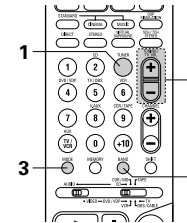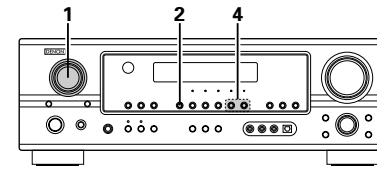


- 1 Set the input source to "TUNER".




- 2 Watching the display, press the BAND button to select the desired band (AM or FM).



- 3 Press the MODE button to set the auto tuning mode.



- 4 Press the TUNING ▲ (+) or ▼ (-) button.

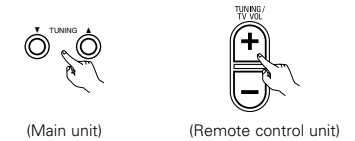

- Automatic searching begins, then stops when a station is tuned in.

#### NOTE:

- When in the auto tuning mode on the FM band, the "STEREO" indicator lights on the display when a stereo broadcast is tuned in. At open frequencies, the noise is muted and the "TUNED" and "STEREO" indicators turn off.

### Manual tuning

- 1 Set the input function to "TUNER".

- 2 Watching the display, press the BAND button to select the desired band (AM or FM).



- 3 Press the MODE button to set the manual tuning mode. Check that the display's "AUTO" indicator turns off.

- 4 Press the TUNING ▲ (+) or ▼ (-) button to tune in the desired station. The frequency changes continuously when the button is held in.

#### NOTE:

- When the manual tuning mode is set, FM stereo broadcasts are received in monaural and the "STEREO" indicator turns off.

Preset stations

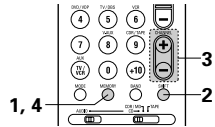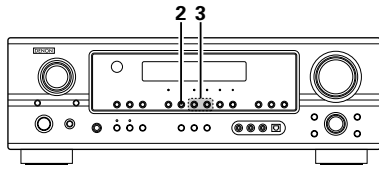


**Preparations:**

Use the "Auto tuning" or "Manual tuning" operation to tune in the station to be preset in the memory.

**1** Press the MEMORY button.  
 (Remote control unit)


**2** Press the SHIFT button and select the desired memory block (A to G).



**NOTE:**

- Please make sure the "AUDIO" position of the slide switch on the remote control unit.

**3** Press the PRESET ▲ (+) or ▼ (-) button to select the desired preset channel (1 to 8).

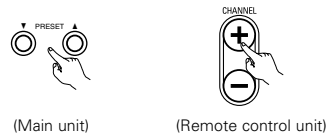


**4** Press the MEMORY button again to store the station in the preset memory.  
 (Remote control unit)

\* To preset other channels, repeat steps 1 to 4.  
 A total of 56 broadcast stations can be preset – 8 stations (channels 1 to 8) in each of blocks A to G.

Checking the preset stations

- The preset (broadcast) stations can be checked on the on screen display (OSD).

**1** Press the ON SCREEN/DISPLAY button repeatedly until the "Tuner Preset Stations" screen appears on the OSD.




| Tuner Preset Stations |             |
|-----------------------|-------------|
| A1                    | FM 87.50MHz |
| A2                    | FM 89.10MHz |
| A3                    | FM 98.10MHz |
| A4                    | FM108.00MHz |
| A5                    | FM 90.10MHz |
| A6                    | FM 90.10MHz |
| A7                    | FM 90.10MHz |
| A8                    | FM 90.10MHz |

OSD-4

Recalling preset stations


**1** Watching the display, press the SHIFT button to select the preset memory block.



**NOTE:**

- Please make sure the "AUDIO" position of the slide switch on the remote control unit.

**2** Watching the display, press the PRESET ▲ (+) or ▼ (-) button to select the desired preset channel.

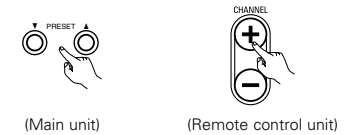



## RDS (Radio Data System)

RDS (works only on the FM band) is a broadcasting service which allows station to send additional information along with the regular radio program signal. The following three types of RDS information can be received on this unit:

### ■ Program Type (PTY)

PTY identifies the type of RDS program. The program types and their displays are as follows:

|         |                 |          |                       |          |                |
|---------|-----------------|----------|-----------------------|----------|----------------|
| NEWS    | News            | ROCK M   | Rock Music            | PHONE IN | Phone In       |
| AFFAIRS | Current Affairs | EASY M   | Easy Listening Music  | TRAVEL   | Travel         |
| INFO    | Information     | LIGHT M  | Light Classical       | LEISURE  | Leisure        |
| SPORT   | Sports          | CLASSICS | Serious Classical     | JAZZ     | Jazz Music     |
| EDUCATE | Education       | OTHER M  | Other Music           | COUNTRY  | Country Music  |
| DRAMA   | Drama           | WEATHER  | Weather               | NATION M | National Music |
| CULTURE | Culture         | FINANCE  | Finance               | OLDIES   | Oldies Music   |
| SCIENCE | Science         | CHILDREN | Children's programmes | FOLK M   | Folk Music     |
| VARIED  | Varied          | SOCIAL   | Social Affairs        | DOCUMENT | Documentary    |
| POP M   | Pop Music       | RELIGION | Religion              |          |                |

### ■ Traffic Program (TP)

TP identifies programs that carry traffic announcements. This allows you to easily find out the latest traffic conditions in your area before you leaving home.

### ■ Radio Text (RT)

RT allows the RDS station to send text messages that appear on the display.

**NOTE:** The operations described below using the RDS, PTY and RT buttons will not function in areas in which there are no RDS broadcasts.

## RDS search

Use this function to automatically tune to FM stations that provide RDS service.

- 1 Set the input source to "TUNER".




- 2 Press the RDS button until "RDS SEARCH" appears on the display.



```

•RDS
New tuning system for
your convenience.
1 Push [RDS] button.
> RDS-RDS station
PTY-Program category
TP-Traffic info.
2 Tune by preset
[Up]-[Down] button.
CH B5
FM105.50MHz -PSNAME-
    
```

- 3 Press the PRESET ▲ (+) or ▼ (-) button to automatically begin the RDS search operation.

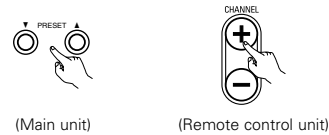



If no RDS stations is found with above operation, all the reception band are searched.

- 4 When a broadcast station is found, that station's name appears on the display.

- 5 To continue searching, repeat step 3. If no other RDS station is found when all the frequencies are searched, "NO RDS" is displayed.

```

•RDS
New tuning system for
your convenience.
1 Push [RDS] button.
RDS-RDS station
PTY-Program category
TP-Traffic info.
2 Tune by preset
[Up]-[Down] button.
CH B5
FM105.50MHz -PSNAME-
    
```

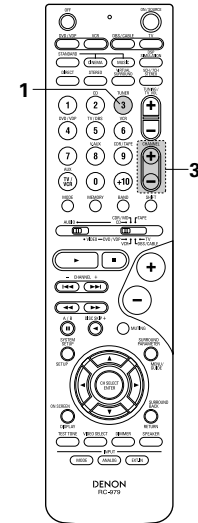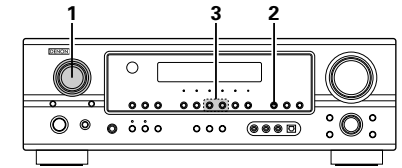

**PTY search**

Use this function to find RDS stations broadcasting a designated program type (PTY).  
For a description of each program type, refer to "Program Type (PTY)".

- 1** Set the input source to "TUNER".



(Main unit)



(Remote control unit)

- 2** Press the RDS button until "PTY SEARCH" appears on the display.



(Main unit)

```

●RDS
New tuning system for
your convenience!
1 Push [RDS] button.
RDS-RDS station
> PTY -Program category
  TP -Traffic info.
2 Tune by preset
  [Up] - [Down] button.
CH B5
FM105.50MHz -PSNAME-
    
```

- 3** Watching the display, press the PTY button to call out the desired program type.



(Main unit)


```

●RDS-PTY
1 Select category
  by PTY button
> NEWS AFFAIRS
  INFO SPORT
  EDUCATE DRAMA
  -Next-
2 Tune by preset
  [Up] - [Down] button
CH B5
FM105.50MHz -PSNAME-
    
```

- 4** Press the PRESET ▲ (+) or ▼ (-) button to automatically begin the PTY search operation.





(Main unit)



(Remote control unit)

If there is no station broadcasting the designated program type with above operation, all the reception bands are searched.

- 5** The station name is displayed on the display after searching stops.

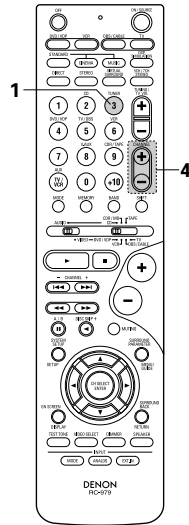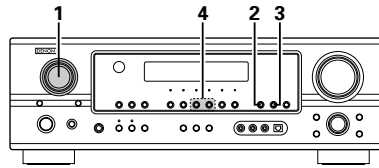

- 6** To continue searching, repeat step 4.  
If no other station broadcasting the designated program type is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

```

●RDS-PTY
1 Select category
  by PTY button NO PTY-
  NEWS AFFAIRS
  INFO SPORT
  EDUCATE DRAMA
  -Next-
2 Tune by preset
  [Up] - [Down] button
CH B5
FM105.50MHz -PSNAME-
    
```

**TP search**

Use this function to find RDS stations broadcasting traffic program (TP stations).

- 1** Set the input source to "TUNER".



(Main unit)



(Remote control unit)

- 2** Press the RDS button until "TP SEARCH" appears on the display.



(Main unit)

```

●RDS
New tuning system for
your convenience!
1 Push [RDS] button.
RDS-RDS station
PTY-Program category
> TP -Traffic info.
2 Tune by preset
  [Up] - [Down] button.
CH B5
FM105.50MHz -PSNAME-
    
```

- 3** Press the PRESET ▲ (+) or ▼ (-) button TP search begins.



(Main unit)



(Remote control unit)



If no TP station is found with above operation, all the reception bands are searched.

- 4** The station name is displayed on the display after searching stops.

- 5** To continue searching, repeat step 3.  
If no other TP station is found when all the frequencies are searched, "NO PROGRAMME" is displayed.



```

●RDS
New tuning system for
your convenience!
1 Push [RDS] NO TP-
RDS-RDS station
PTY-Program category
TP -traffic info.
2 Tune by preset
  [Up] - [Down] button.
    
```

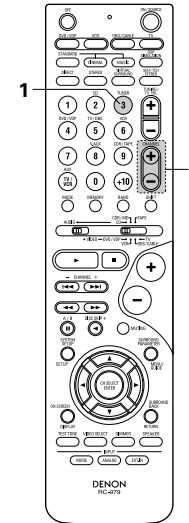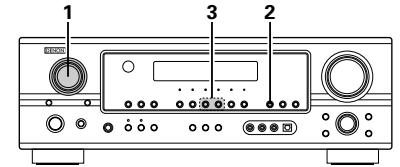

**RT (Radio Text)**

“RT” appears on the display when radio text data is received.  
 When the RT button is pressed while receiving an RDS broadcast station, the text data broadcast from the station is displayed. To turn the display off, press the RT button again. If no text data is being broadcast, “NO TEXT DATA” is displayed.

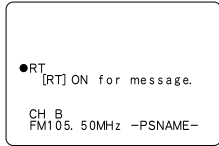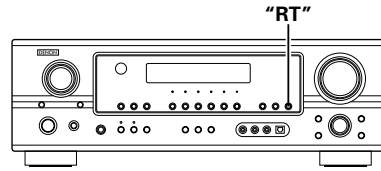


**14 LAST FUNCTION MEMORY**

- This unit is equipped with a last function memory which stores the input and output setting conditions as they were immediately before the power is switched off. This function eliminates the need to perform complicated resettings when the power is switched on.
- The unit is also equipped with a back-up memory. This function provides approximately one week of memory storage when the main unit's power switch is off and with the power cord disconnected.

**15 INITIALIZATION OF THE MICROPROCESSOR**

When the indication of the display is not normal or when the operation of the unit does not shows the reasonable result, the initialization of the microprocessor is required by the following procedure.

- 1 Switch off the unit using the main unit's power switch.
- 2 Hold the following SPEAKER A button and B button, and turn the main unit's power switch.
- 3 Check that the entire display is flashing with an interval of about 1 second, and release your fingers from the 2 buttons and the microprocessor will be initialized.

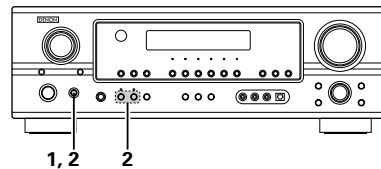

**NOTES:**

- If step 3 does not work, start over from step 1.
- If the microprocessor has been reset, all the button settings are reset to the default values (the values set upon shipment from the factory).

**16 ADDITIONAL INFORMATION**

**Optimum surround sound for different sources**

There are currently various types of multi-channel signals (signals or formats with more than two channels).


**Types of multi-channel signals**

Dolby Digital, Dolby Pro Logic, DTS, high definition 3-1 signals (Japan MUSE Hi-Vision audio), DVD-Audio, SACD (Super Audio CD), MPEG multi-channel audio, etc.  
 “Source” here does not refer to the type of signal (format) but the recorded content. Sources can be divided into two major categories.

**Types of sources**


- **Movie audio** Signals created to be played in movie theaters. In general sound is recorded to be played in movie theaters equipped with multiple surround speakers, regardless of the format (Dolby Digital, DTS, etc.).

**Movie theater sound field**

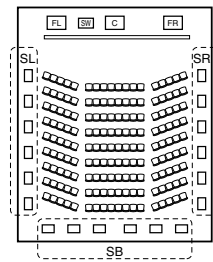

**Multiple surround speakers**  
 (For 6.1-channel system)

**Listening room sound field**

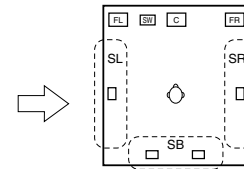


In this case it is important to achieve the same sense of expansion as in a movie theater with the surround channels.  
 To do so, in some cases the number of surround speakers is increased (to four or eight) or speakers with bipolar or dipolar properties are used.

- ( SL: Surround L channel
- ( SR: Surround R channel
- ( SB: Surround back channel (1 spkr or 2 spkrs)

**Other types of audio**

These signals are designed to recreate a 360° sound field using three to five speakers.

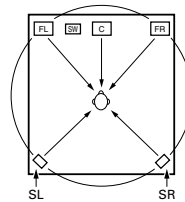


In this case the speakers should surround the listener from all sides to create a uniform sound field from 360°. Ideally the surround speakers should function as “point” sound sources in the same way as the front speakers.

These two types of sources thus have different properties, and different speaker settings, particularly for the surround speakers, are required in order to achieve the ideal sound.

## Surround back speakers


A 6.1-channel system is a conventional 5.1-channel system to which the “surround back” (SB) channel has been added. This makes it easy to achieve sound positioned directly behind the listener, something that was previously difficult with sources designed for conventional multi surround speakers. In addition, the acoustic image extending between the sides and the rear is narrowed, thus greatly improving the expression of the surround signals for sounds moving from the sides to the back and from the front to the point directly behind the listening position.

Change of positioning and acoustic image with 5.1-channel systems

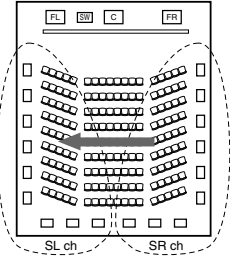

Movement of acoustic image from SR to SL

Change of positioning and acoustic image with 6.1-channel systems

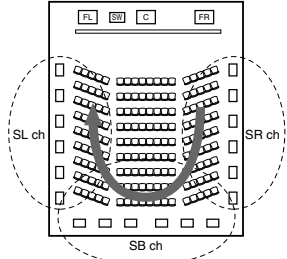

Movement of acoustic image from SR to SB to SL

With this set, speaker(s) for 1 or 2 channels are required to achieve a 6.1-channel system (DTS-ES, etc.). Adding these speakers, however, increases the surround effect not only with sources recorded in 6.1 channels but also with conventional 2- to 5.1-channel sources. Furthermore, all the DENON original surround modes (see page 28) are compatible with 7.1-channel playback, so you can enjoy 7.1-channel sound with any signal source.

### Number of surround back speakers

Though the surround back channel only consists of 1 channel of playback signals for 6.1-channel sources (DTS-ES, etc.), we recommend using two speakers. When using speakers with dipolar characteristics in particular, it is essential to use two speakers.

Using two speakers results in a smoother blend with the sound of the surround channels and better sound positioning of the surround back channel when listening from a position other than the center.

### Placement of the surround left and right channels when using surround back speakers

Using surround back speakers greatly improves the positioning of the sound at the rear. Because of this, the surround left and right channels play an important role in achieving a smooth transition of the acoustic image from the front to the back. As shown on the diagram above, in a movie theater the surround signals are also produced from diagonally in front of the listeners, creating an acoustic image as if the sound were floating in space.

To achieve these effects, we recommend placing the speakers for the surround left and right channels slightly more towards the front than with conventional surround systems. Doing so sometimes increases the surround effect when playing conventional 5.1-channel sources in the 6.1 surround or DTS-ES Matrix 6.1 mode. Check the surround effects of the various modes before selecting the surround mode.


## Speaker setting examples

Here we describe a number of speaker settings for different purposes. Use these examples as guides to set up your system according to the type of speakers used and the main usage purpose.

### 1. DTS-ES compatible system (using surround back speakers)


#### (1) Basic setting for primarily watching movies

This is recommended when mainly playing movies and using regular single way or 2-way speakers for the surround speakers.

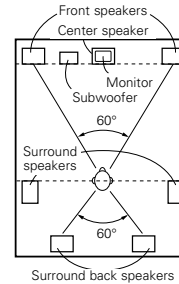

As seen from above

- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.
- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 cm above ear level at the prime listening position.
- When using two surround back speakers, place them at the back facing the front at a narrower distance than the front left and right speakers. When using one surround back speaker, place it at the rear center facing the front at a slightly higher position (0 to 20 cm) than the surround speakers.
- We recommend installing the surround back speaker(s) at a slightly downward facing angle. This effectively prevents the surround back channel signals from reflecting off the monitor or screen at the front center, resulting in interference and making the sense of movement from the front to the back less sharp.

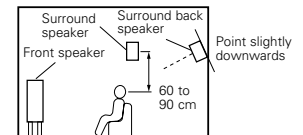


As seen from the side

#### (2) Setting for primarily watching movies using diffusion type speakers for the surround speakers


For the greatest sense of surround sound envelopment, diffuse radiation speakers such as bipolar types, or dipolar types, provide a wider dispersion than is possible to obtain from a direct radiating speaker (monopolar). Place these speakers at either side of the prime listening position, mounted above ear level.

Path of the surround sound from the speakers to the listening position

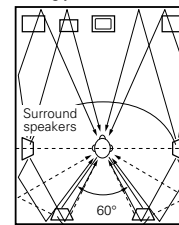


As seen from above

- Set the front speakers, center speaker and subwoofer in the same positions as in example (1).
- It is best to place the surround speakers directly at the side or slightly to the front of the viewing position, and 60 to 90 cm above the ears.
- Same as surround back speaker installation method (1). Using dipolar speakers for the surround back speakers as well is more effective.
- The signals from the surround channels reflect off the walls as shown on the diagram at the left, creating an enveloping and realistic surround sound presentation.

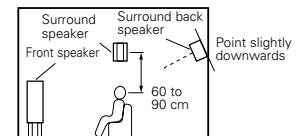


As seen from the side

**2. When not using surround back speakers**

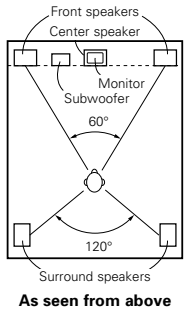

- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.
- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 cm above ear level at the prime listening position.

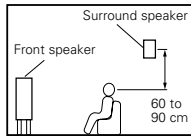

As seen from the side

**Surround**

The AVR-1905 is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

**Dolby Surround**

**(1) Dolby Digital**

Dolby Digital is the multi-channel digital signal format developed by Dolby Laboratories.

Dolby Digital consists of up to "5.1" channels - front left, front right, center, surround left, surround right, and an additional channel exclusively reserved for additional deep bass sound effects (the Low Frequency Effects - LFE - channel, also called the ".1" channel, containing bass frequencies of up to 120 Hz).

Unlike the analog Dolby Pro Logic format, Dolby Digital's main channels can all contain full range sound information, from the lowest bass, up to the highest frequencies - 22 kHz. The signals within each channel are distinct from the others, allowing pinpoint sound imaging, and Dolby Digital offers tremendous dynamic range from the most powerful sound effects to the quietest, softest sounds, free from noise and distortion.

**■ Dolby Digital and Dolby Pro Logic**

| Comparison of home surround systems               | Dolby Digital  | Dolby Pro Logic                            |
|---|--|--|
| No. recorded channels (elements)                  | 5.1 ch   | 2 ch                                       |
| No. playback channels                             | 5.1 ch   | 4 ch                                       |
| Playback channels (max.)                          | L, R, C, SL, SR, SW  | L, R, C, S (SW - recommended)              |
| Audio processing                                  | Digital discrete processing<br>Dolby Digital encoding/decoding | Analog matrix processing<br>Dolby Surround |
| High frequency playback limit of surround channel | 20 kHz   | 7 kHz                                      |

**■ Dolby Digital compatible media and playback methods**

Marks indicating Dolby Digital compatibility: .

The following are general examples. Also refer to the player's operating instructions.

| Media  | Dolby Digital output jacks                                 | Playback method (reference page)           |
|--|--|--|
| LD (VDP)                                     | Coaxial Dolby Digital RF output jack<br>* 1                | Set the input mode to "AUTO".<br>(Page 20) |
| DVD  | Optical or coaxial digital output<br>(same as for PCM) * 2 | Set the input mode to "AUTO".<br>(Page 20) |
| Others<br>(satellite broadcasts, CATV, etc.) | Optical or coaxial digital output<br>(same as for PCM)     | Set the input mode to "AUTO".<br>(Page 20) |

\* 1 Please use a commercially available adapter when connecting the Dolby Digital RF output jack of the LD player to the digital input jack. Please refer to the instruction manual of the adapter when making connection.

\* 2 Some DVD digital outputs have the function of switching the Dolby Digital signal output method between "bit stream" and "(convert to) PCM". When playing in Dolby Digital surround on the AVR-1905, switch the DVD player's output mode to "bit stream". In some cases players are equipped with both "bit stream + PCM" and "PCM only" digital outputs. In this case connect the "bit stream + PCM" jacks to the AVR-1905.

**(2) Dolby Pro Logic IIx**

- Dolby Pro Logic IIx furthers the matrix decoding technology of Dolby Pro Logic II to decode audio signals recorded on two channels into up to 7.1 playback channels, including the surround back channel. Dolby Pro Logic IIx also allows 5.1-channel sources to be played in up to 7.1 channels.

The mode can be selected according to the source. The Music mode is best suited for playing music, the Cinema mode for playing movies, and the Game mode for playing games. The Game mode can only be used with 2-channel audio sources.

**(3) Dolby Pro Logic II**

- Dolby Pro Logic II is a new multi-channel playback format developed by Dolby Laboratories using feedback logic steering technology and offering improvements over conventional Dolby Pro Logic circuits.
- Dolby Pro Logic II can be used to decode not only sources recorded in Dolby Surround (※) but also regular stereo sources into five channels (front left, front right, center, surround left and surround right) to achieve surround sound.
- Whereas with conventional Dolby Pro Logic the surround channel playback frequency band was limited, Dolby Pro Logic II offers a wider band range (20 Hz to 20 kHz or greater). In addition, the surround channels were monaural (the surround left and right channels were the same) with previous Dolby Pro Logic, but Dolby Pro Logic II they are played as stereo signals.
- Various parameters can be set according to the type of source and the contents, so it is possible to achieve optimum decoding (see page 30).

※ Sources recorded in Dolby Surround

These are sources in which three or more channels of surround have been recorded as two channels of signals using Dolby Surround encoding technology.

Dolby Surround is used for the sound tracks of movies recorded on DVDs, LDs and Video cassettes to be played on stereo VCRs, as well as for the stereo broadcast signals of FM radio, TV, satellite broadcasts and cable TV.

Decoding these signals with Dolby Pro Logic II makes it possible to achieve multi-channel surround playback. The signals can also be played on ordinary stereo equipment, in which case they provide normal stereo sound.

There are two types of DVD Dolby surround recording signals.

- ① 2-channel PCM stereo signals
- ② 2-channel Dolby Digital signals

When either of these signals is input to the AVR-1905, the surround mode is automatically set to Dolby Pro Logic II when the "DOLBY/DTS SURROUND" mode is selected.

**■ Sources recorded in Dolby Surround are indicated with the logo mark shown below**

Dolby Surround support mark: 

Manufactured under license from Dolby Laboratories.  
 "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

**DTS Digital Surround**

Digital Theater Surround (also called simply DTS) is a multi-channel digital signal format developed by Digital Theater Systems.

DTS offers the same "5.1" playback channels as Dolby Digital (front left, front right and center, surround left and surround right) as well as the stereo 2-channel mode. The signals for the different channels are fully independent, eliminating the risk of deterioration of sound quality due to interference between signals, crosstalk, etc.



DTS features a relatively higher bit rate as compared to Dolby Digital (1234 kbps for CDs and LDs, 1536 kbps for DVDs) so it operates with a relatively low compression rate. Because of this the amount of data is great, and when DTS playback is used in movie theaters, a separate CD-ROM synchronized with the film is played.

With LDs and DVDs, there is of course no need for an extra disc; the pictures and sound can be recorded simultaneously on the same disc, so the discs can be handled in the same way as discs with other formats.

There are also music CDs recorded in DTS. These CDs include 5.1-channel surround signals (compared to two channels on current CDs). They do not include picture data, but they offer surround playback on CD players that are equipped with digital outputs (PCM type digital output required).

DTS surround track playback offers the same intricate, grand sound as in a movie theater, right in your own listening room.

**■ DTS compatible media and playback methods**

Marks indicating DTS compatibility:  and .

The following are general examples. Also refer to the player's operating instructions.

| Media    | Dolby Digital output jacks                              | Playback method (reference page)  |
|----------|---|---|
| CD       | Optical or coaxial digital output (same as for PCM) ※ 2 | Set the input mode to "AUTO" or "DTS" (page 20). Never set the mode to "ANALOG" or "PCM". ※ 1 |
| LD (VDP) | Optical or coaxial digital output (same as for PCM) ※ 2 | Set the input mode to "AUTO" or "DTS" (page 20). Never set the mode to "ANALOG" or "PCM". ※ 1 |
| DVD      | Optical or coaxial digital output (same as for PCM) ※ 3 | Set the input mode to "AUTO" or "DTS" (page 20).  |

※ 1 DTS signals are recorded in the same way on CDs and LDs as PCM signals. Because of this, the undecoded DTS signals are output as random "hissy" noise from the CD or LD player's analog outputs. If this noise is played with the amplifier set at a very high volume, it may possibly cause damage to the speakers. To avoid this, be sure to switch the input mode to "AUTO" or "DTS" before playing CDs or LDs recorded in DTS. Also, never switch the input mode to "ANALOG" or "PCM" during playback. The same holds true when playing CDs or LDs on a DVD player or LD/DVD compatible player. For DVDs, the DTS signals are recorded in a special way so this problem does not occur.

※ 2 The signals provided at the digital outputs of a CD or LD player may undergo some sort of internal signal processing (output level adjustment, sampling frequency conversion, etc.). In this case the DTS-encoded signals may be processed erroneously, in which case they cannot be decoded by the AVR-1905, or may only produce noise. Before playing DTS signals for the first time, turn down the master volume to a low level, start playing the DTS disc, then check whether the DTS indicator on the AVR-1905 (see page 20) lights before turning up the master volume.

※ 3 A DVD player with DTS-compatible digital output is required to play DTS DVDs. A DTS Digital Output logo is featured on the front panel of compatible DVD players. Recent DENON DVD player models feature DTS-compatible digital output – consult the player's owner's manual for information on configuring the digital output for DTS playback of DTS-encoded DVDs.

MANUFACTURED UNDER LICENSE FROM DIGITAL THEATER SYSTEMS, INC.  
 U.S. PAT. NO'S. 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 AND OTHER U.S. AND WORLD-WIDE PATENTS ISSUED AND PENDING.  
 "DTS", "DTS-ES", "Neo:6", AND "DTS 96/24" ARE TRADEMARKS OF DIGITAL THEATER SYSTEMS, INC.  
 © 1996, 2003 DIGITAL THEATER SYSTEMS, INC. ALL RIGHTS RESERVED.

## DTS-ES Extended Surround™

DTS-ES Extended Surround is a new multi-channel digital signal format developed by Digital Theater Systems Inc. While offering high compatibility with the conventional DTS Digital Surround format, DTS-ES Extended Surround greatly improves the 360-degree surround impression and space expression thanks to further expanded surround signals. This format has been used professionally in movie theaters since 1999.

In addition to the 5.1 surround channels (FL, FR, C, SL, SR and LFE), DTS-ES Extended Surround also offers the SB (Surround Back, sometimes also referred to as "surround center") channel for surround playback with a total of 6.1 channels. DTS-ES Extended Surround includes two signal formats with different surround signal recording methods, as described below.

### ■ DTS-ES™ Discrete 6.1

DTS-ES Discrete 6.1 is the newest recording format. With it, all 6.1 channels (including the SB channel) are recorded independently using a digital discrete system. The main feature of this format is that because the SL, SR and SB channels are fully independent, the sound can be designed with total freedom and it is possible to achieve a sense that the acoustic images are moving about freely among the background sounds surrounding the listener from 360 degrees.

Though maximum performance is achieved when sound tracks recorded with this system are played using a DTS-ES decoder, when played with a conventional DTS decoder the SB channel signals are automatically down-mixed to the SL and SR channels, so none of the signal components are lost.

### ■ DTS-ES™ Matrix 6.1

With this format, the additional SB channel signals undergo matrix encoding and are input to the SL and SR channels beforehand. Upon playback they are decoded to the SL, SR and SB channels. The performance of the encoder used at the time of recording can be fully matched using a high precision digital matrix decoder developed by DTS, thereby achieving surround sound more faithful to the producer's sound design aims than with conventional 5.1- or 6.1-channel systems.

In addition, the bit stream format is 100% compatible with conventional DTS signals, so the effect of the Matrix 6.1 format can be achieved even with 5.1-channel signal sources. Of course it is also possible to play DTS-ES Matrix 6.1 encoded sources with a DTS 5.1-channel decoder.

When DTS-ES Discrete 6.1 or Matrix 6.1 encoded sources are decoded with a DTS-ES decoder, the format is automatically detected upon decoding and the optimum playing mode is selected. However, some Matrix 6.1 sources may be detected as having a 5.1-channel format, so the DTS-ES Matrix 6.1 mode must be set manually to play these sources.

(For instructions on selecting the surround mode, see page 26.)

The DTS-ES decoder includes another function, the DTS Neo:6 surround mode for 6.1-channel playback of digital PCM and analog signal sources.

### ■ DTS Neo:6™ surround

This mode applies conventional 2-channel signals to the high precision digital matrix decoder used for DTS-ES Matrix 6.1 to achieve 6.1-channel surround playback. High precision input signal detection and matrix processing enable full band reproduction (frequency response of 20 Hz to 20 kHz or greater) for all 6.1 channels, and separation between the different channels is improved to the same level as that of a digital discrete system.

DTS Neo:6 surround includes two modes for selecting the optimum decoding for the signal source.

#### • DTS Neo:6 Cinema

This mode is optimum for playing movies. Decoding is performed with emphasis on separation performance to achieve the same atmosphere with 2-channel sources as with 6.1-channel sources.

This mode is effective for playing sources recorded in conventional surround formats as well, because the in-phase component is assigned mainly to the center channel (C) and the reversed phase component to the surround (SL, SR and SB channels).

#### • DTS Neo:6 Music

This mode is suited mainly for playing music. Changes in the sound quality are reduced by decoding with emphasis on the front channel signals (FL and FR), and a natural sense of expansion is given to the sound field by the effect of the surround signals output from the center (C) and surround (SL, SR and SB) channels.

## DTS 96/24

The sampling frequency, number of bits and number of channels used for recording of music, etc., in studios has been increasing in recent years, and there are a growing number of high quality signal sources, including 96 kHz/24 bit 5.1-channel sources.

For example, there are high picture/sound quality DVD video sources with 96 kHz/24 bit stereo PCM audio tracks. However, because the data rate for these audio tracks is extremely high, there are limits to recording them on two channels only, and since the quality of the pictures must be restricted it is common to only include still pictures.

In addition, 96 kHz/24 bit 5.1-channel surround is possible with DVD audio sources, but DVD audio players are required to play them with this high quality.

DTS 96/24 is a multi-channel digital signal format developed by Digital Theater Systems Inc. in order to deal with this situation.

Conventional surround formats used sampling frequencies of 48 or 44.1 kHz, so 20 kHz was about the maximum playback signal frequency. With DTS 96/24, the sampling frequency is increased to 96 or 88.2 kHz to achieve a wide frequency range of over 40 kHz.

In addition, DTS 96/24 has a resolution of 24 bits, resulting in the same frequency band and dynamic range as 96 kHz/24 bit PCM.

As with conventional DTS Surround, DTS 96/24 is compatible with a maximum of 5.1 channels, so sources recorded using DTS 96/24 can be played in high sampling frequency, multiple channel audio with such normal media as DVD videos and CDs.

Thus, with DTS 96/24, the same 96 kHz/24 bit multi-channel surround sound as with DVD-Audio can be achieved while viewing DVD-Video images on a conventional DVD-Video player (\*1). Furthermore, with DTS 96/24 compatible CDs, 88.2 kHz/24 bit multi-channel surround can be achieved using normal CD/LD players (\*1).

Even with the high quality multi-channel signals, the recording time is the same as with conventional DTS surround sources.

What's more, DTS 96/24 is fully compatible with the conventional DTS surround format, so DTS 96/24 signal sources can be played with a sampling frequency of 48 kHz or 44.1 kHz on conventional DTS or DTS-ES surround decoders (\*2).

\*1 A DVD player with DTS digital output capabilities (for CD/LD players, a player with digital outputs for conventional DTS CDs/LDs) and a disc recorded in DTS 96/24 are required.

\*2 The resolution is 24 or 20 bits, depending on the decoder.

## 17 TROUBLESHOOTING

If a problem should arise, first check the following.

1. Are the connections correct ?

2. Have you operated the receiver according to the Operating Instructions ?

3. Are the speakers, turntable and other components operating properly ?

If this unit is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

Disconnect the power immediately and contact your store of purchase.

|  | Symptom  | Cause  | Measures   | Page          |
|--|--|--|--|---------------|
| Common problems when listening to the CD, records, tapes and FM broadcasts, etc. | DISPLAY not lit and sound not produced when power switch set to on.  | <ul style="list-style-type: none"> <li>Power cord not plugged in securely.</li> </ul>  | <ul style="list-style-type: none"> <li>Check the insertion of the power cord plug.</li> <li>Turn the power on with the remote control unit after turning the POWER switch on.</li> </ul>   | 5<br>19       |
|  | DISPLAY lit but sound not produced.  | <ul style="list-style-type: none"> <li>Speaker cords not securely connected.</li> <li>Improper position of the audio function button.</li> <li>Volume control set to minimum.</li> <li>MUTING is on.</li> <li>Digital signals not input Digital input selected.</li> </ul> | <ul style="list-style-type: none"> <li>Connect securely.</li> <li>Set to a suitable position.</li> </ul>   | 8, 9<br>20    |
|  |  |  | <ul style="list-style-type: none"> <li>Turn volume up to suitable level.</li> <li>Switch off MUTING.</li> </ul>  | 20<br>22      |
|  |  |  | <ul style="list-style-type: none"> <li>Input digital signals or select input jacks to which digital signals are being input.</li> </ul>  | 20            |
|  | DISPLAY not lit and power indicator is flashing rapidly.   | <ul style="list-style-type: none"> <li>Speaker terminals are short-circuited.</li> <li>Block the ventilation holes of the set.</li> <li>The unit is operating at continuous high power conditions and/or inadequate ventilation.</li> </ul>                                | <ul style="list-style-type: none"> <li>Switch power off, connect speakers properly, then switch power back on.</li> </ul>  | 8, 9          |
|  |  |  | <ul style="list-style-type: none"> <li>Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on.</li> <li>Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on.</li> </ul> | 5, 8<br>5, 8  |
|  | Sound produced only from one channel.  | <ul style="list-style-type: none"> <li>Incomplete connection of speaker cords.</li> <li>Incomplete connection of input/output cords.</li> </ul>  | <ul style="list-style-type: none"> <li>Connect securely.</li> <li>Connect securely.</li> </ul>   | 8, 9<br>5 ~ 9 |
| Positions of instruments reversed during stereo playback.                        | <ul style="list-style-type: none"> <li>Reverse connections of left and right speakers or left and right input/output cords.</li> </ul> | <ul style="list-style-type: none"> <li>Check left and right connections.</li> </ul>  | 9  |               |

|                      | Symptom  | Cause   | Measures   | Page           |
|----------------------|--|---|--|----------------|
| When playing records | Humming noise produced when record is playing.   | <ul style="list-style-type: none"> <li>Ground wire of turntable not connected properly.</li> <li>Incomplete PHONO jack connection.</li> <li>TV or radio transmission antenna nearby.</li> </ul>   | <ul style="list-style-type: none"> <li>Connect securely.</li> </ul>  | 5              |
|                      |  |   | <ul style="list-style-type: none"> <li>Connect securely.</li> <li>Contact your store of purchase.</li> </ul>   | 5<br>—         |
|                      | Howling noise produced when volume is high.  | <ul style="list-style-type: none"> <li>Turntable and speaker systems too close together.</li> <li>Floor is unstable and vibrates easily.</li> </ul>   | <ul style="list-style-type: none"> <li>Separate as much as possible.</li> </ul>  | —              |
|                      |  |   | <ul style="list-style-type: none"> <li>Use cushions to absorb speaker vibrations transmitted by floor. If turntable is not equipped with insulators, use audio insulators (commonly available).</li> </ul> | —              |
| Sound is distorted.  | <ul style="list-style-type: none"> <li>Stylus pressure too weak.</li> <li>Dust or dirt on stylus.</li> <li>Cartridge defective.</li> </ul> | <ul style="list-style-type: none"> <li>Apply proper stylus pressure.</li> <li>Check stylus.</li> <li>Replace cartridge.</li> </ul>  | —<br>—<br>—  |                |
|                      |  | <ul style="list-style-type: none"> <li>MC cartridge being used.</li> </ul>  | <ul style="list-style-type: none"> <li>Replace with MM cartridge or use a head amplifier or step-up transformer.</li> </ul>  | 5              |
| Remote control unit  | This unit does not operate properly when remote control unit is used.  | <ul style="list-style-type: none"> <li>Batteries dead.</li> <li>Remote control unit too far from this unit.</li> <li>Obstacle between this unit and remote control unit.</li> <li>Different button is being pressed.</li> <li>⊕ and ⊖ ends of battery inserted in reverse.</li> </ul> | <ul style="list-style-type: none"> <li>Replace with new batteries.</li> <li>Move closer.</li> <li>Remove obstacle.</li> </ul>  | 10<br>10<br>10 |
|                      |  |   | <ul style="list-style-type: none"> <li>Press the proper button.</li> <li>Insert batteries properly.</li> </ul>   | —<br>10        |



## 18 SPECIFICATIONS

### ■ Audio section

#### • Power amplifier

|                          |                               |               |  |
|--------------------------|-------------------------------|---------------|--|
| <b>Rated output:</b>     | Front:                        | 80 W + 80 W   | (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08% T.H.D.) |
|                          |                               | 115 W + 115 W | (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)           |
|                          | Center:                       | 80 W          | (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08% T.H.D.) |
|                          |                               | 115 W         | (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)           |
|                          | Surround:                     | 80 W + 80 W   | (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08% T.H.D.) |
|                          |                               | 115 W + 115 W | (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)           |
|                          | Surround Back:                | 80 W + 80 W   | (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08% T.H.D.) |
|                          |                               | 115 W + 115 W | (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)           |
| <b>Output terminals:</b> | Front:                        | A or B        | 6 ~ 16 Ω/ohms                                |
|                          |                               | A + B         | 12 ~ 16 Ω/ohms                               |
|                          | Center, Surround, Surr. Back: |               | 6 ~ 16 Ω/ohms                                |

#### • Analog

|   |  |
|---|--|
| <b>Input sensitivity / input impedance:</b> | 200 mV / 47 kΩ/kohms                     |
| <b>Frequency response:</b>                  | 10 Hz ~ 100 kHz: +1, -3 dB (DIRECT mode) |
| <b>S/N ratio:</b>                           | 98 dB (IHF-A weighted) (DIRECT mode)     |

### ■ Video section

#### • Standard video jacks

|  |                           |
|--|---------------------------|
| <b>Input / output level and impedance:</b> | 1 Vp-p, 75 Ω/ohms         |
| <b>Frequency response:</b>                 | 5 Hz ~ 10 MHz — +1, -3 dB |

#### • S-video jacks

|  |   |
|--|---|
| <b>Input / output level and impedance:</b> | Y (brightness) signal — 1 Vp-p, 75 Ω/ohms |
|  | C (color) signal — 0.286 Vp-p, 75 Ω/ohms  |
| <b>Frequency response:</b>                 | 5 Hz ~ 10 MHz — +1, -3 dB                 |

#### • Color component video jacks

|  |  |
|--|--|
| <b>Input / output level and impedance:</b> | Y (brightness) signal — 1 Vp-p, 75 Ω/ohms                          |
|  | P <sub>B</sub> /C <sub>B</sub> (blue) signal — 0.7 Vp-p, 75 Ω/ohms |
|  | P <sub>R</sub> /C <sub>R</sub> (red) signal — 0.7 Vp-p, 75 Ω/ohms  |
| <b>Frequency response:</b>                 | 5 ~ 30 MHz — +1, -3 dB   |

### ■ Tuner section

|                                    |  |                        |
|------------------------------------|--|------------------------|
| <b>Receiving Range:</b>            | <b>[FM]</b> (note: μV at 75 Ω/ohms, 0 dBf=1 × 10 <sup>-15</sup> W) | <b>[AM]</b>            |
| <b>Usable Sensitivity:</b>         | 87.50 MHz ~ 108.00 MHz   | 522 kHz ~ 1611 kHz     |
| <b>50 dB Quieting Sensitivity:</b> | 1.0 μV (11.2 dBf)  | 18 μV                  |
| <b>S/N ratio:</b>                  | MONO   | 1.6 μV (15.3 dBf)      |
|                                    | STEREO   | 23 μV (38.5 dBf)       |
| <b>Total Harmonic Distortion:</b>  | MONO   | 77 dB (IHF-A weighted) |
|                                    | STEREO   | 72 dB (IHF-A weighted) |
|                                    | MONO   | 0.15 % (1 kHz)         |
|                                    | STEREO   | 0.3 % (1 kHz)          |

### ■ General

|                                     |                                |
|-------------------------------------|--------------------------------|
| <b>Power supply:</b>                | AC 230 V, 50 Hz                |
| <b>Power consumption:</b>           | 260 W                          |
|                                     | 1 W Max (Standby)              |
| <b>Maximum external dimensions:</b> | 434 (W) × 147 (H) × 417 (D) mm |
| <b>Mass:</b>                        | 11.4 kg                        |

### ■ Remote control unit (RC-979)

|                             |                                |
|-----------------------------|--------------------------------|
| <b>Batteries:</b>           | R6P/AA Type (two batteries)    |
| <b>External dimensions:</b> | 55 (W) × 225 (H) × 34.5 (D) mm |
| <b>Mass:</b>                | 165 g (including batteries)    |

\* For purposes of improvement, specifications and design are subject to change without notice.

**List of Preset Codes / Liste von voreingestellten Codes / Liste de codes  
préréglés / Lista dei codici pre-regolati / Lista de Códigos Pre-ajustados /  
Lijst van vooringestelde codes / Förteckning över förinställda koder**

**DVD**

|            |                    |
|------------|--------------------|
| Denon      | 014, *[111]        |
| Aiwa       | 009                |
| Hitachi    | 010                |
| JVC        | 006, 011           |
| Konka      | 012, 013           |
| Magnavox   | 005                |
| Mitsubishi | 004                |
| Panasonic  | 014                |
| Philips    | 005, 015, 016, 017 |
| Pioneer    | 003, 008           |
| Sanyo      | 018                |
| Sony       | 002, 019, 020      |
| Toshiba    | 001, 021, 022      |
| Zenith     | 023                |

**VDP**

|            |                    |
|------------|--------------------|
| Denon      | 028, 029, 112      |
| Magnavox   | 026                |
| Mitsubishi | 028                |
| Panasonic  | 029, 030           |
| Philips    | 026                |
| Pioneer    | 028, 031           |
| RCA        | 032                |
| Sony       | 033, 034, 035, 036 |

**VCR**

|               |                                   |
|---------------|-----------------------------------|
| Admiral       | 081                               |
| Aiko          | 095                               |
| Aiwa          | 009                               |
| Akai          | 026, 027, 070, 072, 082, 083, 084 |
| Alba          | 055                               |
| Amstrad       | 009                               |
| ASA           | 042                               |
| Asha          | 087                               |
| Audio Dynamic | 005, 085                          |
| Audiovox      | 088                               |
| Beaumarck     | 087                               |
| Broksonic     | 086, 093                          |
| Calix         | 088                               |
| Candle        | 006, 087, 088, 089, 090           |
| Canon         | 049, 057                          |
| Capehart      | 025, 055, 056, 071                |
| Carver        | 015                               |
| CCE           | 095                               |
| Citizen       | 006, 007, 087, 088, 089, 090, 095 |

|                 |  |
|-----------------|--|
| Craig           | 007, 087, 088, 091, 115  |
| Curtis Mathes   | 006, 049, 073, 080, 087, 090, 092  |
| Cybernex        | 087  |
| Daewoo          | 025, 055, 059, 074, 089, 093, 095, 096   |
| Daytron         | 025, 055   |
| DBX             | 005, 085   |
| Dumont          | 053  |
| Dynatech        | 009  |
| Electrohome     | 001, 088, 097  |
| Electroponic    | 088  |
| Emerson         | 001, 009, 017, 027, 086, 088, 089, 092, 093, 097, 100, 101, 102, 103, 104, 117 |
| Fisher          | 009, 028, 031, 053, 054, 091, 099, 115   |
| GE              | 007, 011, 049, 050, 051, 052, 073, 080, 087                                    |
| Go Video        | 047, 048   |
| Goldstar        | 000, 006, 012, 062, 088  |
| Gradiente       | 094  |
| Grundig         | 042  |
| Harley Davidson | 094  |
| Harman Kardon   | 040, 062   |
| Hi-Q            | 091  |
| Hitachi         | 009, 013, 023, 026, 058, *[108], 109, 110, 111                                 |
| JC Penny        | 004, 005, 007, 023, 028, 049, 062, 085, 087, 088                               |
| Jensen          | 013, 026   |
| JVC             | 004, 005, 006, 026, 029, 043, 044, 045, 046, 085                               |
| Kenwood         | 004, 005, 006, 026, 029, 033, 045, 085, 090                                    |
| Kodak           | 088  |
| Lloyd           | 009, 094   |
| LXI             | 088  |
| Magnavox        | 015, 016, 042, 049, 063, 106   |
| Magnin          | 087  |
| Marantz         | 004, 005, 006, 015, 042, 049, 085, 090   |
| Marta           | 088  |
| MEI             | 049  |
| Memorex         | 009, 033, 049, 053, 060, 081, 087, 088, 091, 094, 115                          |
| Metz            | 123, 124, 125, 126, 127, 128   |

|                 |   |
|-----------------|---|
| MGA             | 001, 017, 027, 041, 097   |
| MGN Technology  | 087   |
| Midland         | 011   |
| Minolta         | 013, 023  |
| Mitsubishi      | 001, 003, 008, 013, 014, 017, 027, 029, 039, 040, 041, 045, 097 |
| Motorola        | 081   |
| Montgomery Ward | 001, 002, 007, 009, 049, 063, 081, 115, 117                     |
| MTC             | 009, 087, 094   |
| Multitech       | 007, 009, 011, 087, 090, 094                                    |
| NAD             | 038   |
| NEC             | 004, 005, 006, 018, 026, 029, 045, 061, 062, 085                |
| Nikko           | 088   |
| Noblex          | 087   |
| Optimus         | 081, 088  |
| Optonica        | 021   |
| Panasonic       | 024, 049, 064, 066, 067, 068, 069, 107                          |
| Perdio          | 009   |
| Pentax          | 009, 013, 023, 058, 090   |
| Philco          | 015, 016, 049   |
| Philips         | 015, 021, 042, 049, 105   |
| Pilot           | 088   |
| Pioneer         | 005, 013, 029, 036, 037, 038, 045, 085                          |
| Portland        | 025, 055, 090   |
| Proscan         | 063, 080  |
| Pulsar          | 060   |
| Quartz          | 033   |
| Quasar          | 034, 035, 049   |
| Radio Shack     | 001, 002, 021, 081, 087, 088, 091, 094, 097, 098, 115           |
| Radix           | 088   |
| Randex          | 088   |
| RCA             | 007, 013, 019, 023, 058, 063, 064, 065, 073, 080, 082, 087      |
| Realistic       | 009, 021, 031, 033, 049, 053, 081, 087, 088, 091, 094, 097, 098 |
| Ricoh           | 055   |
| Salora          | 033, 041  |
| Samsung         | 007, 011, 051, 059, 070, 083, 087, 089, 113                     |
| Sanky           | 081   |
| Sansui          | 005, 026, 029, 045, 061, 085, 114                               |
| Sanyo           | 032, 033, 053, 087, 091, 115, 116                               |

|                  |  |
|------------------|--|
| SBR              | 042  |
| Scott            | 017, 020, 086, 089, 093, 117                               |
| Sears            | 013, 023, 028, 031, 033, 053, 054, 088, 091, 098, 099, 115 |
| Sentra           | 055  |
| Sharp            | 001, 002, 021, 097   |
| Shogun           | 087  |
| Sony             | 075, 076, 077, 078, 079, 121, 122                          |
| STS              | 023  |
| Sylvania         | 009, 015, 016, 017, 041, 049, 094                          |
| Symphonic        | 009, 094   |
| Tandy            | 009  |
| Tashiko          | 009, 088   |
| Tatung           | 004, 026, 030  |
| Teac             | 004, 009, 026, 094   |
| Technics         | 024, 049   |
| Teknika          | 009, 010, 022, 049, 088, 094                               |
| TMK              | 087, 092   |
| Toshiba          | 013, 017, 020, 041, 059, 089, 098, 099, 117                |
| Totevision       | 007, 087, 088  |
| Unirech          | 087  |
| Vecrtor Research | 005, 062, 085, 089, 090                                    |
| Victor           | 005, 045, 046, 085   |
| Video Concepts   | 005, 027, 085, 089, 090                                    |
| Videosonic       | 007, 087   |
| Wards            | 013, 021, 023, 087, 088, 089, 091, 094, 097, 118, 119, 120 |
| XR-1000          | 094  |
| Yamaha           | 004, 005, 006, 026, 062, 085                               |
| Zenith           | 060, 078, 079  |

**TV**

|               |   |
|---------------|---|
| Admiral       | 045, 121                                    |
| Adventura     | 122   |
| Aiko          | 054   |
| Akai          | 016, 027, 046                               |
| Alleron       | 062   |
| A-Mark        | 007   |
| Amtron        | 061   |
| Anam          | 006, 007, 036                               |
| Anam National | 061, 147                                    |
| AOC           | 003, 007, 033, 038, 039, 047, 048, 049, 133 |
| Archer        | 007   |
| Audiovox      | 007, 061                                    |
| Bauer         | 155   |
| Belcor        | 047   |
| Bell & Howell | 045, 118                                    |

|                |  |
|----------------|--|
| Bradford       | 061  |
| Brockwood      | 003, 047   |
| Candle         | 003, 030, 031, 032, 038, 047,<br>049, 050, 122   |
| Capehart       | 003  |
| Celebrity      | 046  |
| Circuit City   | 003  |
| Citizen        | 029, 030, 031, 032, 034, 038,<br>047, 049, 050, 054, 061, 095,<br>122, 123                     |
| Concerto       | 031, 047, 049  |
| Colortyme      | 003, 047, 049, 135   |
| Contec         | 013, 051, 052, 061   |
| Cony           | 051, 052, 061  |
| Craig          | 004, 061   |
| Crown          | 029  |
| Curtis Mathes  | 029, 034, 038, 044, 047, 049,<br>053, 095, 118   |
| Daewoo         | 027, 029, 039, 048, 049, 054,<br>055, 106, 107, 137  |
| Daytron        | 003, 049   |
| Dimensia       | 044  |
| Dixi           | 007, 015, 027  |
| Electroband    | 046  |
| Electrohome    | 029, 056, 057, 058, 147  |
| Elta           | 027  |
| Emerson        | 029, 051, 059, 060, 061, 062,<br>118, 123, 124, 139, 148                                       |
| Envision       | 038  |
| Etron          | 027  |
| Fisher         | 014, 021, 063, 064, 065, 118   |
| Formenti       | 155  |
| Fortress       | 012  |
| Fujitsu        | 004, 062   |
| Funai          | 004, 062   |
| Futurtech      | 004  |
| GE             | 020, 036, 037, 040, 044, 058,<br>066, 088, 119, 120, 125, 147                                  |
| Goldstar       | 000, 015, 029, 031, 039, 048,<br>051, 056, 057, 067, 068, 069,<br>116                          |
| Grundy         | 062  |
| Hitachi        | 029, 031, 051, 052, 070, 111,<br>112, 113, 124, <b>*[134]</b>                                  |
| Hitachi Pay TV | 151  |
| Infinity       | 017, 071   |
| Janeil         | 122  |
| JBL            | 017, 071   |
| JC Penny       | 020, 034, 039, 040, 041, 044,<br>048, 050, 058, 066, 069, 076,<br>088, 090, 095, 125, 136, 159 |

|                   |   |
|-------------------|---|
| JCB               | 046   |
| JVC               | 019, 051, 052, 072, 073, 091,<br>117, 126   |
| Kawasho           | 018, 046  |
| Kenwood           | 038, 056, 057   |
| Kloss             | 010, 032  |
| Kloss Novabeam    | 005, 122, 127, 131  |
| KTV               | 074, 123  |
| Loewe             | 071   |
| Logik             | 144   |
| Luxman            | 031   |
| LXI               | 008, 014, 017, 024, 040, 044,<br>063, 071, 075, 076, 077, 118,<br>125                                       |
| Magnavox          | 005, 010, 017, 030, 033, 038,<br>050, 056, 071, 078, 079, 085,<br>089, 108, 109, 110, 127, 131,<br>132, 145 |
| Marantz           | 015, 017, 071, 080  |
| Matsui            | 027   |
| Memorex           | 014, 027, 045, 083, 118, 144  |
| Metz              | 160, 161, 162, 163  |
| MGA               | 001, 039, 048, 056, 057, 058,<br>065, 081, 083  |
| Midland           | 125   |
| Minutz            | 066   |
| Mitsubishi        | 001, 016, 039, 048, 056, 057,<br>058, 065, 081, 082, 083, 105   |
| Montgomery Ward   | 011, 020, 144, 145, 146   |
| Motorola          | 121, 147  |
| MTC               | 031, 034, 039, 048, 095   |
| NAD               | 008, 075, 076, 128  |
| National          | 002, 036, 061, 147  |
| National Quenties | 002   |
| NEC               | 031, 038, 039, 048, 057, 084,<br>086, 135, 147  |
| Nikko             | 054   |
| NTC               | 054   |
| Optimus           | 128   |
| Optonica          | 011, 012, 093, 121  |
| Orion             | 004, 139  |
| Panasonic         | 002, 009, 017, 036, 037, 071,<br>141, 143, 147  |
| Philco            | 005, 010, 030, 050, 051, 056,<br>079, 085, 127, 131, 132, 145,<br>147                                       |
| Philips           | 005, 015, 017, 050, 051, 056,<br>078, 087, 088, 089, 131, 132,<br>147                                       |
| Pioneer           | 124, 128, 142   |
| Portland          | 054   |

|                |  |
|----------------|--|
| Price Club     | 095  |
| Proscan        | 040, 044, 125  |
| Proton         | 035, 051, 092, 129   |
| Pulsar         | 042  |
| Quasar         | 036, 037, 074, 141   |
| Radio Shack    | 011, 044, 063, 093, 118  |
| RCA            | 040, 044, 125, 130, 137, 151,<br>152   |
| Realistic      | 014, 063, 093, 118   |
| Saisho         | 027  |
| Samsung        | 003, 015, 034, 053, 055, 057,<br>094, 095, 136, 153  |
| Sansui         | 139  |
| Sanyo          | 013, 014, 021, 022, 063, 064,<br>081, 096  |
| SBR            | 015  |
| Schneider      | 015  |
| Scott          | 062  |
| Sears          | 008, 014, 021, 022, 023, 024,<br>025, 040, 052, 057, 062, 063,<br>064, 065, 073, 075, 076, 097,<br>098, 125, 159 |
| Sharp          | 011, 012, 013, 026, 093, 099,<br>100, 104, 121   |
| Siemens        | 013  |
| Signature      | 045, 144   |
| Simpson        | 050  |
| Sony           | 043, 046, 138, 146, 150  |
| Soundesign     | 030, 050, 062  |
| Spectricon     | 007, 033   |
| Squareview     | 004  |
| Supre-Macy     | 032, 122   |
| Supreme        | 046  |
| Sylvania       | 005, 010, 017, 030, 078, 079,<br>085, 089, 101, 127, 131, 132,<br>145, 155                                       |
| Symphonic      | 004, 148   |
| Tandy          | 012, 121   |
| Tatung         | 036, 124   |
| Technics       | 037  |
| Teknika        | 001, 030, 032, 034, 052, 054,<br>078, 083, 095, 144, 156, 157  |
| Tera           | 035, 129   |
| Toshiba        | 008, 014, 034, 063, 075, 076,<br>095, 097, 136, 158, 159   |
| Universal      | 020, 066, 088  |
| Victor         | 019, 073, 126  |
| Video Concepts | 016  |
| Viking         | 032, 122   |
| Wards          | 005, 045, 066, 078, 085, 088,<br>089, 093, 102, 103, 131, 132,<br>148  |

|                        |                               |
|------------------------|-------------------------------|
| Zenith                 | 042, 114, 115, 140, 144, 149  |
| Zonda                  | 007                           |
| <b>CABLE</b>           |                               |
| ABC                    | 006, <b>*[007]</b> , 008, 009 |
| Archer                 | 010, 011                      |
| Century                | 011                           |
| Citizen                | 011                           |
| Colour Voice           | 012, 013                      |
| Comtronic              | 014                           |
| Eastern                | 015                           |
| Garrard                | 011                           |
| Gemini                 | 030, 033, 034                 |
| General Instrument     | 030, 031, 032                 |
| Hytex                  | 006                           |
| Jasco                  | 011                           |
| Jerrold                | 009, 016, 017, 026, 032       |
| Magnavox               | 018                           |
| Movie Time             | 019                           |
| NSC                    | 019                           |
| Oak                    | 000, 006, 020                 |
| Panasonic              | 001, 005                      |
| Philips                | 011, 012, 013, 018, 021       |
| Pioneer                | 002, 003, 022                 |
| RCA                    | 029                           |
| Regency                | 015                           |
| Samsung                | 014, 023                      |
| Scientific Atlanta     | 004, 024, 025                 |
| Signal                 | 014                           |
| SL Marx                | 014                           |
| Starcom                | 009                           |
| Stargate               | 014                           |
| Television             | 014                           |
| Tocom                  | 007, 016                      |
| TV86                   | 019                           |
| Unika                  | 011                           |
| United Artists         | 006                           |
| Universal              | 010, 011                      |
| Viewstar               | 018, 019                      |
| Zenith                 | 027, 028                      |
| <b>DBS (SATELLITE)</b> |                               |
| Alphastar              | 054                           |
| Chaparral              | 035, 036                      |
| Dishnet                | 053                           |
| Drake                  | 037, 038                      |
| EchoStar Dish          | 062, 066                      |
| GE                     | 048, 055, 056                 |
| General Instruments    | 039, 040, 041                 |
| Grundig                | 070, 071, 072, 073            |
| Hitachi                | 058, 059                      |

Hughes Network 063, 064, 065, 069

JVC 057

Kathrein 074, 075, 076, 083

Magnavox 060

Nokia 070, 080, 084, 085, 086

Philips 060

Primestar 051

Proscan 048, 055, 056

RCA 048, 055, 056, 068

Realistic 042

Sierra I 036

Sierra II 036

Sierra III 036

Sony 049, 067

STS1 043

STS2 044

STS3 045

SRS4 046

Technisat 077, 078, 079, 081, 082

Toshiba 047, 050

Uniden 061

**CD**

Denon **\*[111]**

Aiwa 001, 035, 043

Burmster 002

Carver 003, 035

Emerson 004, 005, 006, 007

Fisher 003, 008, 009, 010

JVC 018, 019

Kenwood 011, 012, 013, 014, 017

Magnavox 006, 015, 035

Marantz 016, 028, 035

MCS 016, 024

Onkyo 025, 027

Optimus 017, 020, 021, 022, 023

Philips 014, 032, 033, 035

Pioneer 006, 022, 030

Sears 006

Sony 023, 031

Teac 002, 009, 028

Technics 016, 029, 036

Wards 035, 037

Yamaha 038, 039, 040, 041

Zenith 042

**CDR**

Denon **\*[111]**, 112

Philips 112

**MD**

Denon 113

Kenwood 003, 004

Onkyo 007

Sharp 005

Sony 006

**TAPE**

Denon **\*[111]**

Aiwa 001, 002

Carver 002

Harman/Kardon 002, 003

JVC 004, 005

Kenwood 006

Magnavox 002

Marantz 002

Onkyo 016, 018

Optimus 007, 008

Panasonic 012

Philips 002

Pioneer 007, 008, 009

Sony 013, 014, 015

Technics 012

Victor 004

Wards 007

Yamaha 010, 011

- \*[ ] : Preset codes set upon shipment from the factory.
- \*[ ] : Sie Voreinstellungscodes wurden vor der Auslieferung werkseitig eingestellt.
- \*[ ] : Les codes pré-réglés diffèrent en fonction de la livraison de l'usine.
- \*[ ] : I codici di presettaggio sono impostati in fabbrica prima della consegna.
- \*[ ] : Los códigos vienen preprogramados de fábrica.
- \*[ ] : Voorinstelde codes bij het verlaten van de fabriek.
- \*[ ] : Förinställda koder har ställts in vid transporten från fabriken.

|  |   |   |
|--|---|---|
| <b>DVD preset codes</b><br><b>DVD-Voreinstellungscodes</b><br><b>Codes pré-réglés DVD</b><br><b>Codici di preselezione DVD</b><br><b>Códigos de preajuste de DVD</b><br><b>DVD-voorkeuzecodes</b><br><b>Förinställda DVD-koder</b> | <b>111</b>  | <b>014</b>  |
| <b>DENON</b><br>Model No.<br>Modellnr<br>Modèle numéro<br>Modello No<br>Nº de modelo<br>Modelnr<br>Modellnr  | DVD-700<br>DVD-900<br>DVD-1000<br>DVD-1400<br>DVD-1500<br>DVD-2200<br>DVD-2800<br>DVD-2800II<br>DVD-2900<br>DVD-3800<br>DVD-A11<br>DVD-A1 | DVD-800<br>DVD-1600<br>DVD-2000<br>DVD-2500<br>DVD-3000<br>DVD-3300 |

**MEMO:**

**DENON, Ltd.**  
TOKYO, JAPAN  
[www.denon.com](http://www.denon.com)

Printed in China 511 4179 000