


HITACHI

SERVICE MANUAL

YK

No. 0490E

CP-X955W
CP-X955E

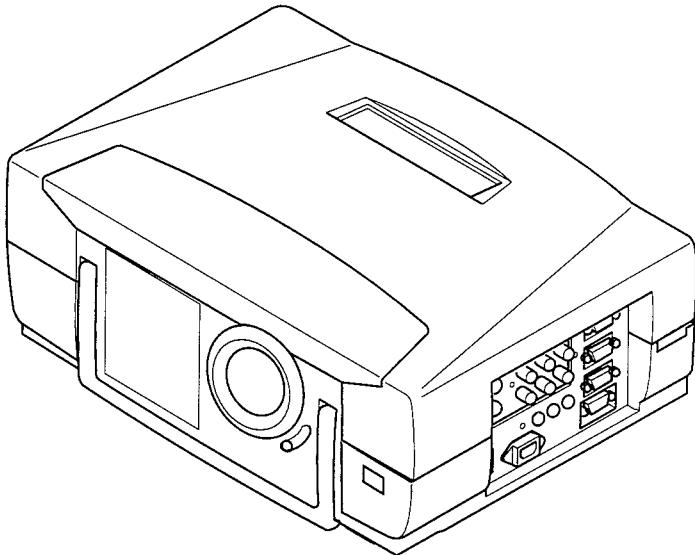

Caution

Be sure to read this manual before servicing. To assure safety from fire, electric shock, injury, harmful radiation and materials, various measures are provided in this Hitachi liquid crystal projector. Be sure to read cautionary items described in the manual to maintain safety before servicing.

Service Warning

1. When replace the lamp, to avoid burns to your fingers. The lamp becomes too hot.
2. Never touch the lamp bulb with a finger or anything else. Never drop it or give it a shock. They may cause bursting of the bulb.
3. This projector is provided with a high voltage circuit for the lamp. Do not touch the electric parts of power unit (main), when turn on the projector.
4. Do not touch the exhaust fan, during operation.
5. The LCD module ass'y is likely to be damaged. If replacing to the LCD module ass'y, do not hold the FPC of the LCD module ass'y.

Contents

1. Features	2
2. Specifications	2
3. Names of each part	3
4. Adjustment	7
5. Troubleshooting	10
6. Service points	18
7. Dust cleaning	21
8. Block diagram	22
9. Wiring diagram	24
10. Basic circuit diagram	25
11. Connector Connection diagram	41
12. Disassembly diagram	43
13. Replacement Parts list	45

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT.

Liquid Crystal Projector

October 1998 Image & Information Media Systems Division Yokohama Operation

1. Features


- ▶ 1.3" polysilicon liquid crystal panel
- ▶ 150W UHB lamp
- ▶ Video input compatible with NTSC/PAL/SECAM video signals
- ▶ RGB input compatible with IBM® PCs, Macintosh® and NEC® PC98 computer signals
- ▶ Power zoom and power focus
- ▶ 2 VIDEO IN systems, 2 RGB IN systems, and 1 RGB OUT system
- ▶ RS232C communication
- ▶ Mouse emulation

2. Specifications

Liquid crystal panel	Drive system	TFT active matrix
	Panel size	1.3inches
	Number of pixels	1024 (H) x 768 (V)
Lamp		UHB lamp 150W
Video input	System	NTSC , 4.43NTSC , PAL , M-PAL , or SECAM
	Level	Composite 1.0Vp-p (75Ω termination) Y/C Y : 1.0Vp-p (75Ω termination) C : 0.286Vp-p (NTSC burst signal, 75Ω termination) 0.3Vp-p (PAL/SECAM burst signal, 75Ω termination)
RGB input / output	Video signal	Analog RGB input 0.7Vp-p (75Ω termination)
	Sync signal	H/V separate or H/V composite, TTL level
Audio	Input	200mVrms, 20kΩ or less
	Output	0~200mVrms, 1kΩ
Speaker output		2W + 2W (stereo)
Power supply		AC100~120V/2.9A, AC220~240V/1.3A (50/60Hz)
Power consumption		250W
Dimensions		404 (W) x 162 (H) x 312 (D) mm
Weight		8kg
Temperature range		Operation : 0~35°C Storage : -20~60°C
Accessories		Remote control1 Batteries LR62 Power cord3 Stereo mini cable1 MAC adapter1 RGB signal cable1 Video/Audio cable1 Mouse cable3 S-Video cable1

3. Names of each part

●Main unit

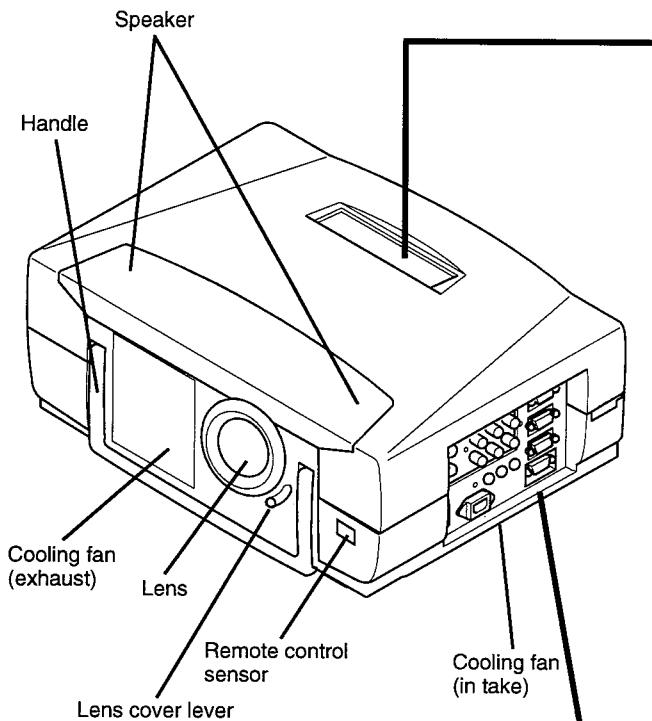

●Operation section

ON indicator

This blinks in the standby mode and lights in the operation mode.

STANDBY/ON button

Power ON/OFF button.
OFF sets the unit in standby mode.

LAMP indicator

This lights when the lamp does not light.

TEMP indicator

This lights when temperature inside the projector is too high.

INPUT button

To select the input source.

RGB1 → RGB2 → VIDEO1 → VIDEO2

MUTE button

ZOOM button
Adjusts picture size.

FOCUS button

Adjusts focus.

MENU button

Picture adjustments.

RESET button

Resets unit to factory settings.

●Input terminal section

VIDEO input terminal

S-VIDEO input terminal

Mini DIN-4pin connector (1/2)

VIDEO input terminal

RCA Jack (1/2)

AUDIO L/R input terminal

RCA Jack (1/2)

MAIN POWER switch


Main power ON/OFF switch.

| : ON

○ : OFF

AC IN socket

Connect the provided power cord.

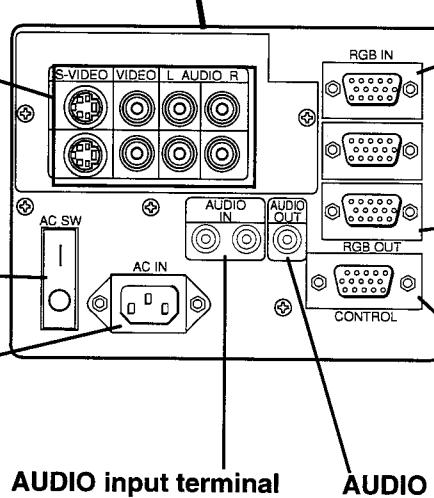

RGB input terminal

RGB input terminal
D-sub 15pin shrink terminal (1/2)
AUDIO input terminal
Stereo mini jack (1/2)

RGB output terminal

RGB output terminal
D-sub 15pin shrink terminal
AUDIO output terminal (RGB/VIDEO)
Stereo mini jack

CONTROL terminal

D-sub 15pin shrink terminal

AUDIO output terminal (RGB/VIDEO)

Stereo mini jack

● Remote control transmitter

STANDBY / ON button

Power ON/OFF button.

OFF sets the unit in standby mode.

FOCUS button

Adjusts focus.

ZOOM button

Adjusts picture size.

POSITION button

Moves the picture by DISK PAD after presed the POSITION button.

DISK PAD

When displays the on-screen menus, selects or adjusts the menu items.

When removes the on-screen menus,

MENU ON button

Displays the on-screen menus.


BLANK ON button

The blank screen is displayed by pressing BLANK.

And the blank screen will be revealed by pressing BLANK again.

INPUT SELECT button

Selects the input source.

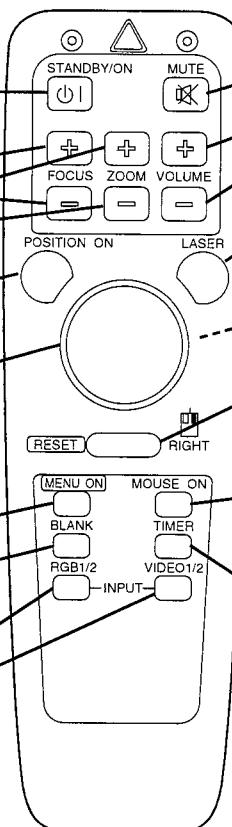


MUTE button

VOLUME button

Adjusts volume.

LASER on

MOUSE LEFT button



RESET / RIGHT button

When displays the on-screen menus, resets the menu item to factory settings. When removes the on-screen menus, works as right quick button.

MOUSE ON button

Mouse starts

- Menu off
Back light of MENU OFF button off,
- Position off
Back light of POSITION ON button off
- Blank off

TIMER ON / OFF button

Displays or removes the time setting menu item TIMER.

When the blank screen is displayed, TIMER can not be displayed.


Function for service

Function	Operation
Displayed the operating time of the lamp	Press the RESET button of the projector or the TIMER button of the remote control, for 3 seconds.
Reset the operating time of the lamp	Press the RESET button of the projector or the remote control, for 3 seconds. (During be displayed the operating time of the lamp.)
Displayed the operating time of the projector	Press the MUTE button of the projector or the remote control, for 3 seconds. (During be displayed the operating time of the lamp.)

When replacing the lamp, Reset the operating time of lamp.

Reset the lamp timer :

Please carry out the following operation within 10 minutes from power on, if you replaced the lamp after 2,000 hours.

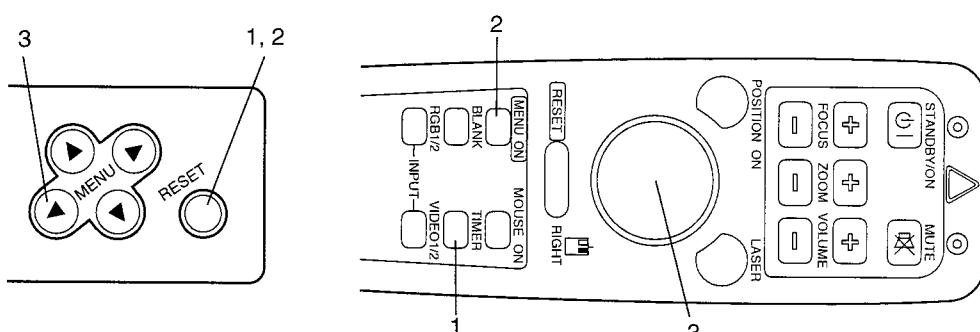

- 1) Press the RESET button on projector for 3 seconds or remote control TIMER button for 3 seconds and display the total lamp used time.
- 2) Press the RESET button on projector or remote control MENU ON button during displaying the lamp used time.
- 3) Select the "0" on the screen using the MENU (◀) button or DISK PAD.

LAMP 1501 hr


LAMP 1501 □→0 ■CANCEL



Caution

Cautions on use of the laser pointer.

- The laser pointer on the remote control unit radiates the laser beam from the laser aperture.
- Do not stare directly into the laser aperture or radiate the laser beam to other persons as the laser emitted is a class II laser and it could damage your vision, etc.
Especially pay attention if children are present.
- The three under labels are caution labels for the laser beam.

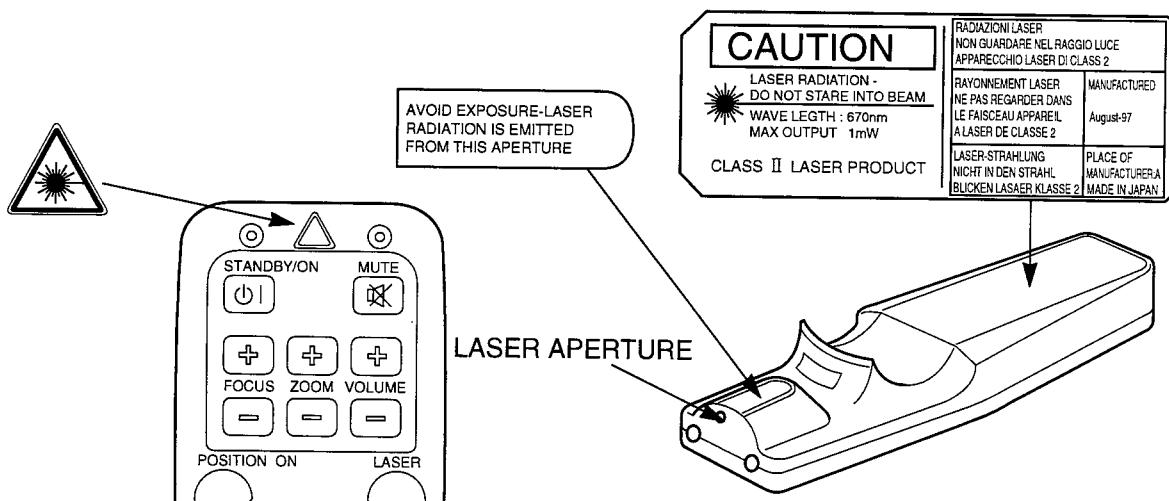

Message table

On-screen display

The following messages are displayed on the screen.

CHANGE THE LAMP "CALL A MAINTENANCE PERSON"	Lamp has 1,900 hours on it and may need to be changed.
"CHANGE THE LAMP" "CALL A MINTENANCE PERSON." "THE POWER WILL TURN OFF AFTER 20 Hr."	Lamp has 1,980 hours on it. See P.4 "Reset the lamp timer"
Blinking of "CHANGE THE LAMP"	When the lamp has 2,000 hours or more on it, the message will blink, and the power will turns off after 10 minutes.
NO INPUT IS DETECTED	Signal is not input.
SYNC IS OUT OF RANGE	The horizontal frequency of the input signal exceeds the range of the projector, it cannot be displayed.

Indicator display


The ON indicator, LAMP indicator and TEMP indicator will light or blink in the following cases.

	Indicator status	Meaning	Remedy
ON indicator	Lights green	Standby mode	_____
	Blinks green	During warming up	_____
	Lights green	During operation	_____
	Blinks green	During cooling down	_____
LAMP indicator	Lights red	Lamp cannot light	Cool projector by power off for 20 minutes.
TEMP indicator	Lights red	Temperature inside too high	Correctly reinstall so as not to block ventilation holes.
	Blinks red	Cooling fan accidented	call a maintenance person.

*When the LAMP indicator lights, turn the power off. If the problem cannot be recovered, contact your dealer.

4. Adjustment

4 - 1 Position to be adjusted

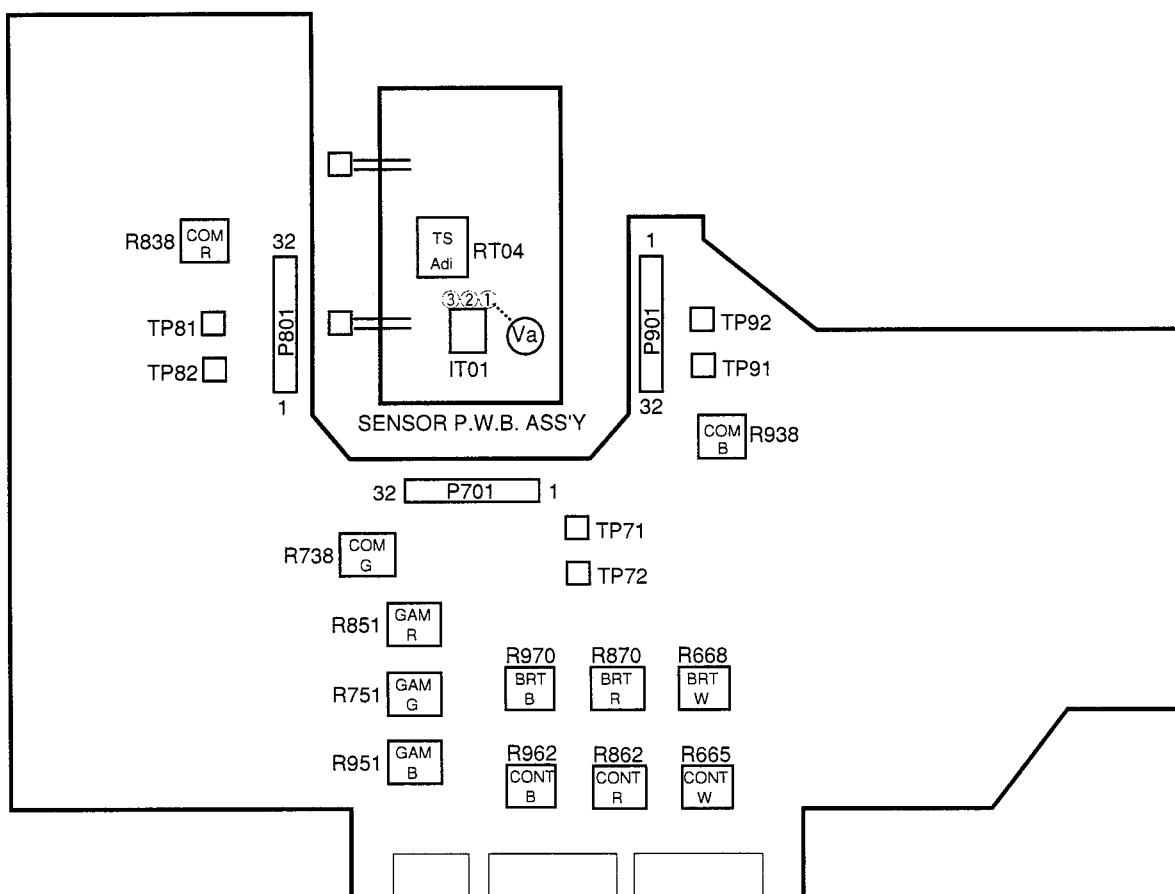

4 - 2 White balance adjustment

Preparations for adjustment

- ① Apply heat-running for 10 minutes or more before adjustment.
- ② Project 40" size image with the "+" ZOOM button set to max.

Adjustment procedure

- ① Input 16 steps monochrome green at 0.7Vp-p with a timing signal at XGA VESA (60).
- ② Adjust R665 (W SUB CONTRAST) and R668 (W SUB BRIGHT) so that brightness of 16 steps is best,visual check.
- ③ Input black pattern at 0.21Vp-p with a timing signal of XGA VESA (60).
- ④ Adjust R870 (R SUB BRIGHT) and R970 (B SUB BRIGHT) so that the chromaticity at the center of the picture is $X=0.30\pm 0.01$, $Y=0.34\pm 0.01$ (Low-brightness white balance) using Minolta CL-100.

4 - 3 Convergence adjustment

Preparations for adjustment

- ① Apply heat-running for 10 minutes or more before adjustment.
 - ② Input a cross-hatch signal to the RGB input terminal with a timing signal of XGA VESA (60).
 - ③ Project about a 40" size image and adjust H.PHASE so that the vertical lines of cross-hatch pattern are seen most clear.
 - ④ Loosen 2 screws ④ of both the R and B panel's metal fittings. (See Figs.4 - 1 and 4 - 2.)
- (Note) Do not loosen screws ④ too much. If they are loosened too much, the convergence may drift when they are tightened.
- (Note) Exclusive tools are required to adjust convergence.

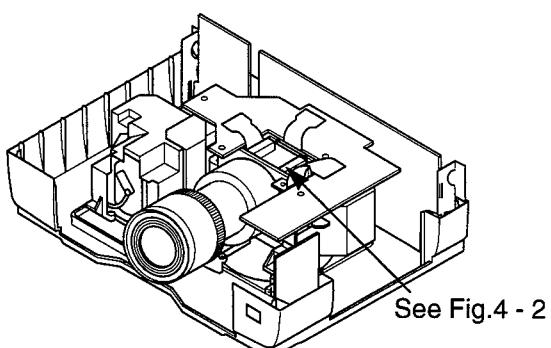


Fig.4 - 1

- ③ Press the RESET button of the remote control transmitter to set the picture adjustment to NORMAL.
- ④ Press the MENU button and select "N" of COLOR BAL.
- ⑤ Input white pattern at 0.52Vp-p with a timing signal of XGA VESA (60).
- ⑥ Adjust R862 (R SUB CONTRAST) and R962 (B SUB CONTRAST) so that the chromaticity at the center of the picture is $X=0.30\pm 0.01$, $Y=0.35\pm 0.01$ (Middle-brightness white balance) using Minolta CL-100.
- ⑦ Repeat ③ to ⑥ and adjust low-brightness and middle-brightness white balance.

Adjustment procedure

- ① Regarding the G panel as standard, adjust the convergence at the picture center of the R panel using ⑥ for the vertical direction, ⑦ for the horizontal direction.
- ② Adjust the convergence at the edge of the picture using ⑧.
- ③ Then, regarding the G panel as standard, adjust the convergence of B panel in the same procedure as ① and ②.
- ④ Repeat steps ① to ③ and adjust so that convergence of whole picture satisfy the following values.

	Adjustment value
Horizontal	± 1 dot
Vertical	± 1 dot

G is a standard

- ⑤ Tighten 4 screws to fix panels.

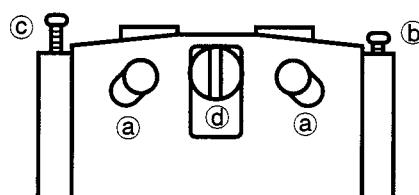


Fig.4 - 2

4 - 4 Sensor adjustment

Preparations for adjustment

- ① Apply heat-running for 10 minutes or more before adjustment.



Adjustment procedure


Adjust RT04 to get following values.


0.020 ± 0.002 [V]


(Connect \oplus side to TP1 and \ominus side to TP2 by digital meter.)


5. Troubleshooting

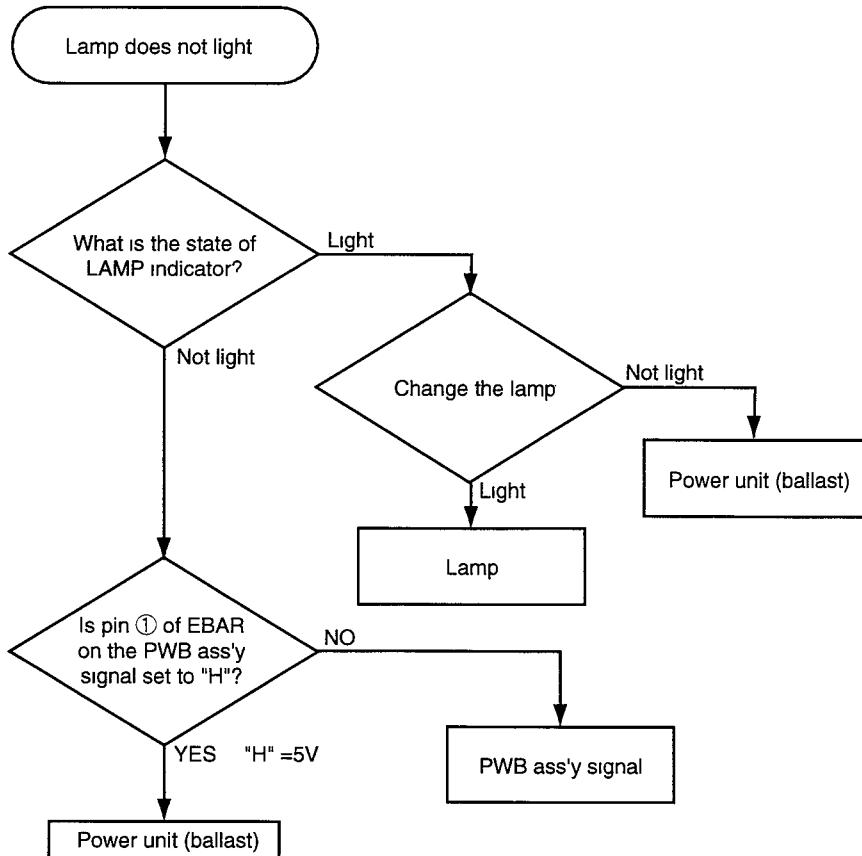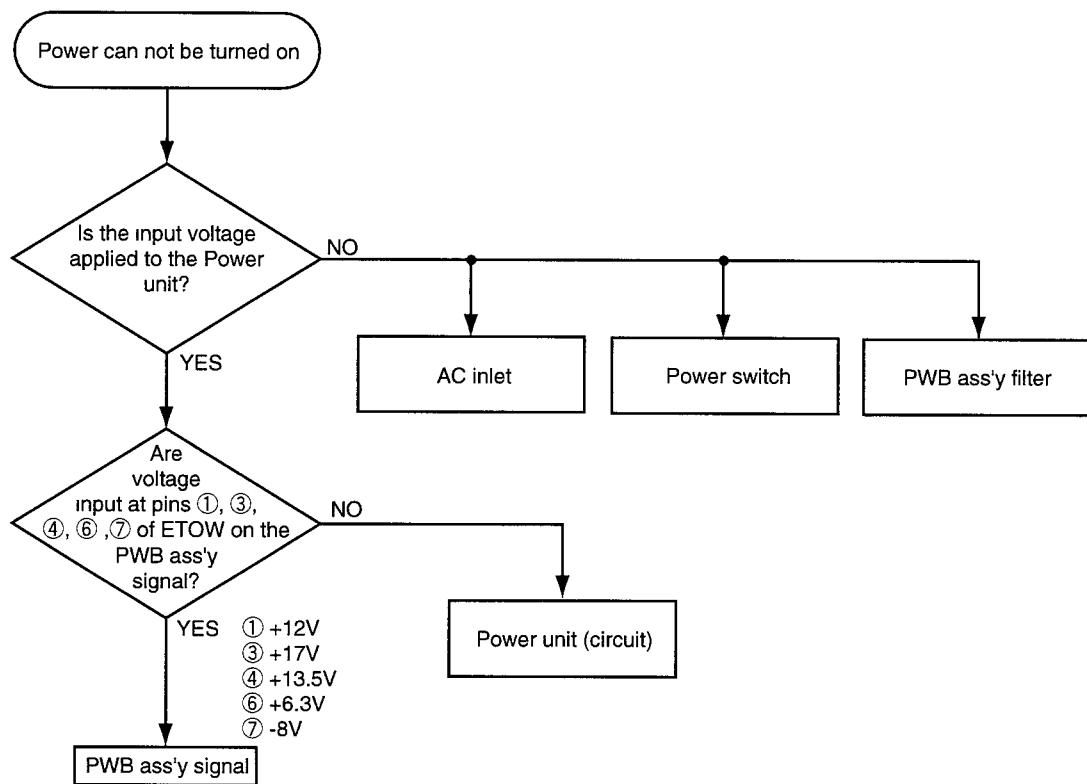


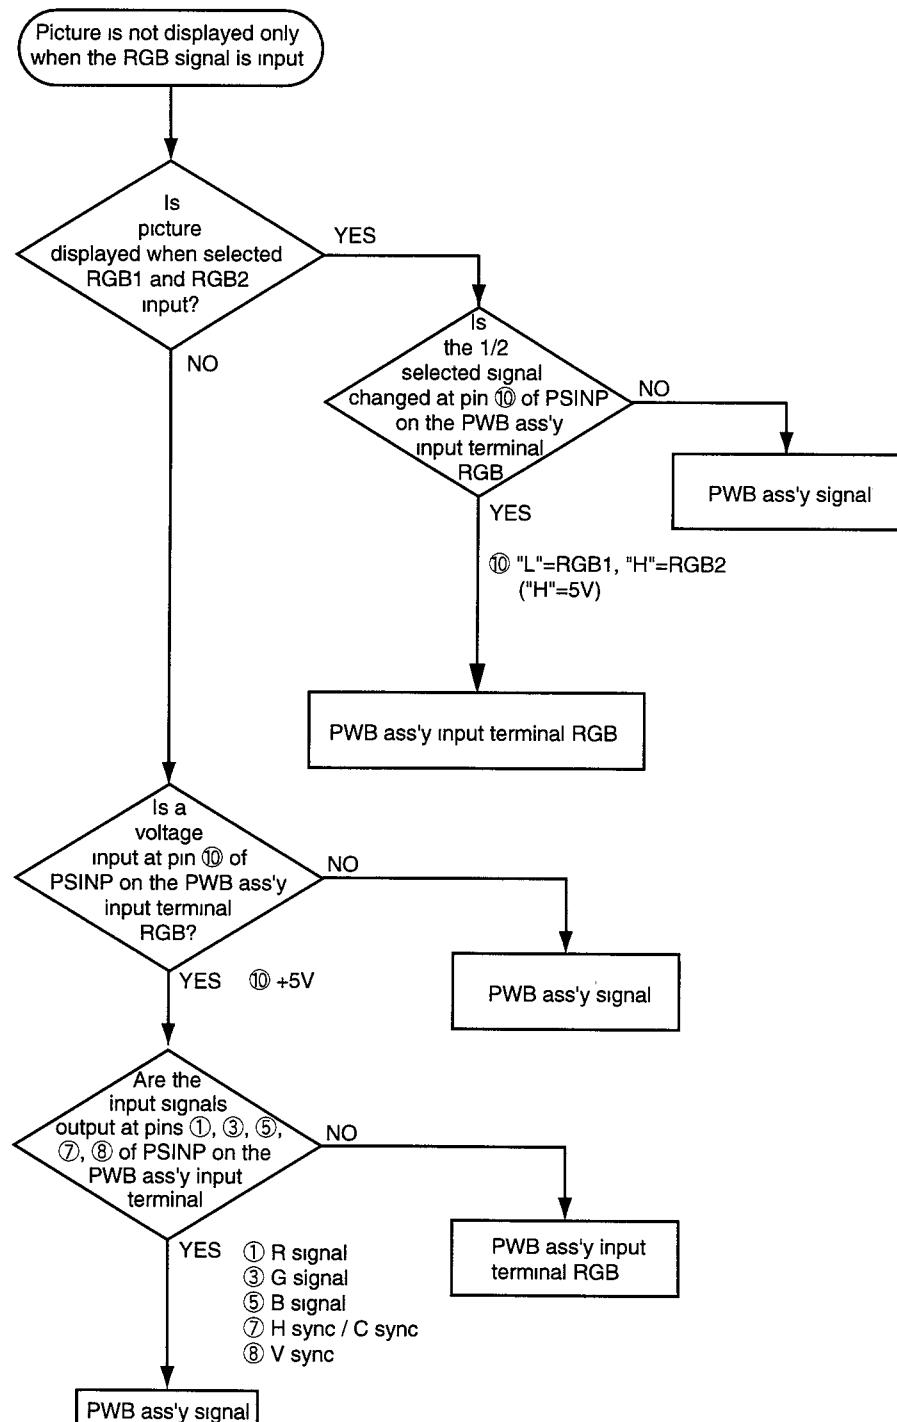


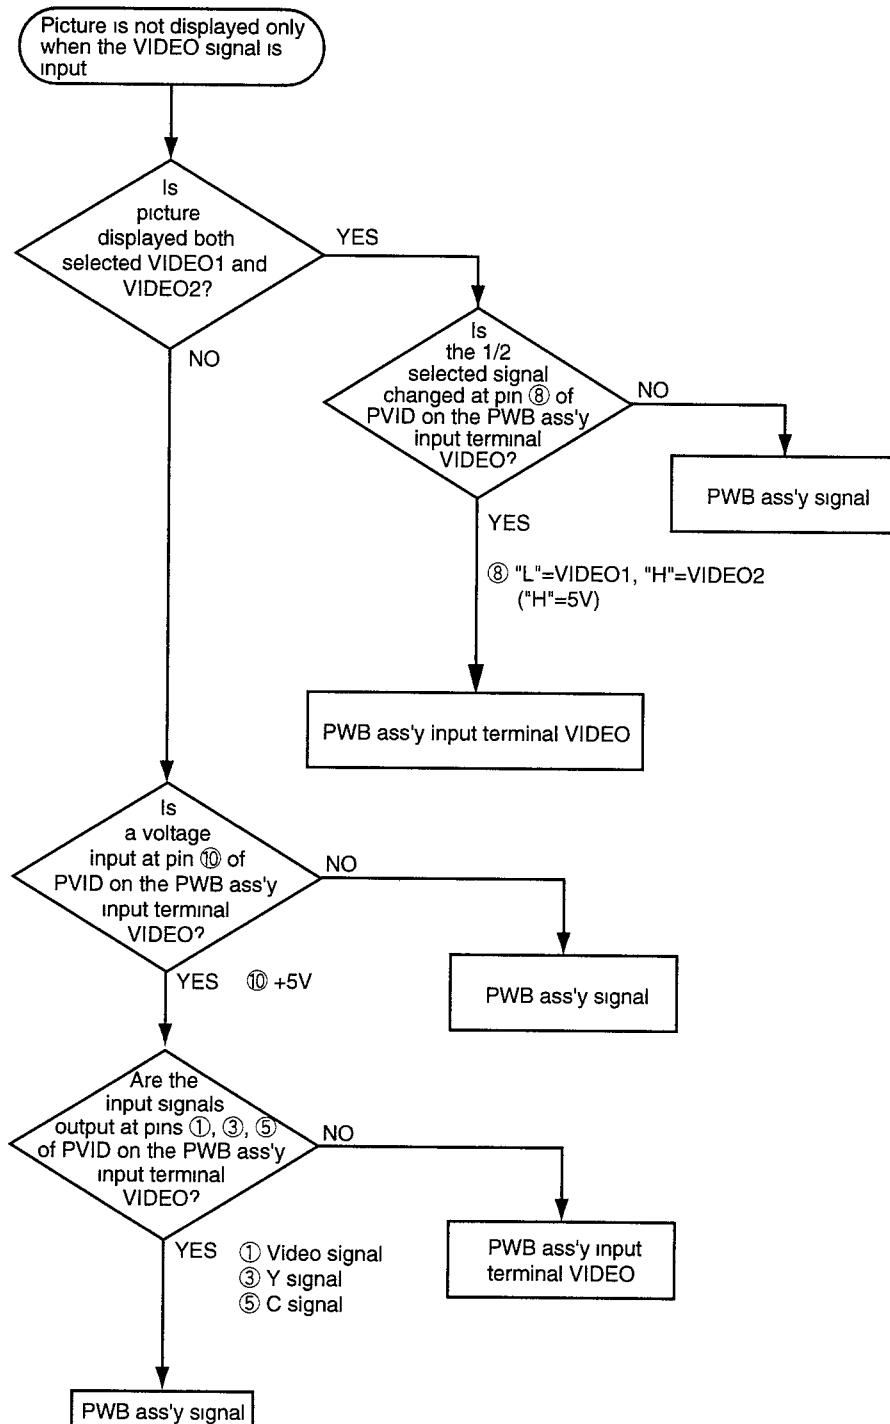

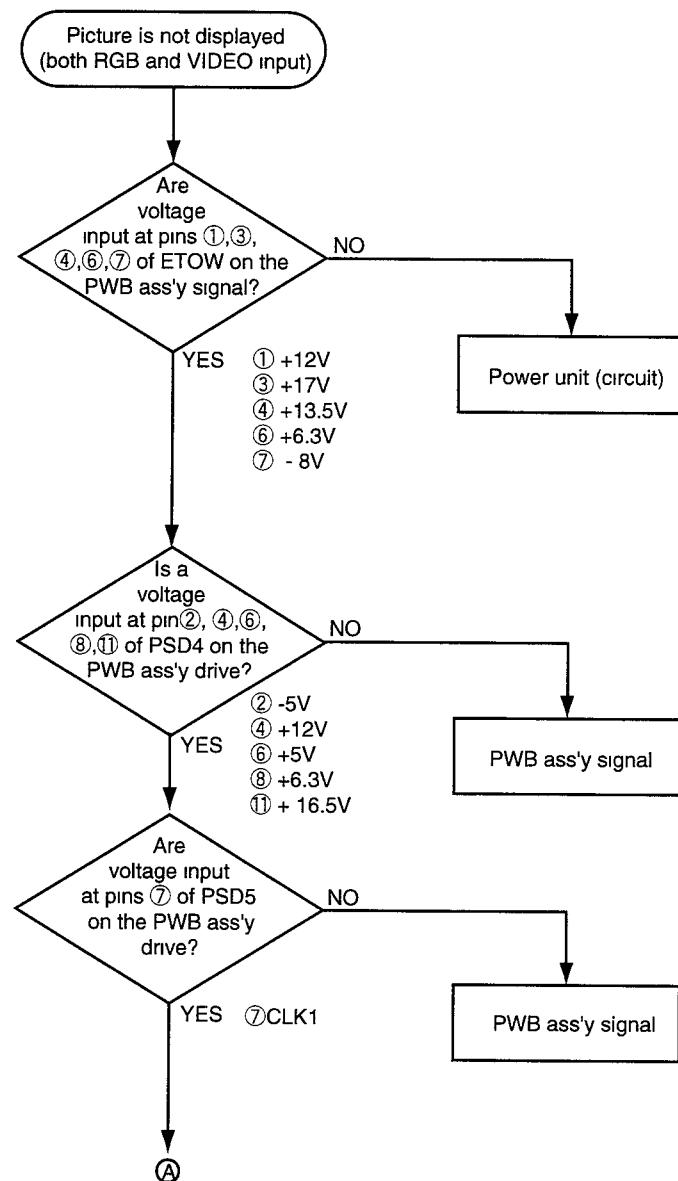


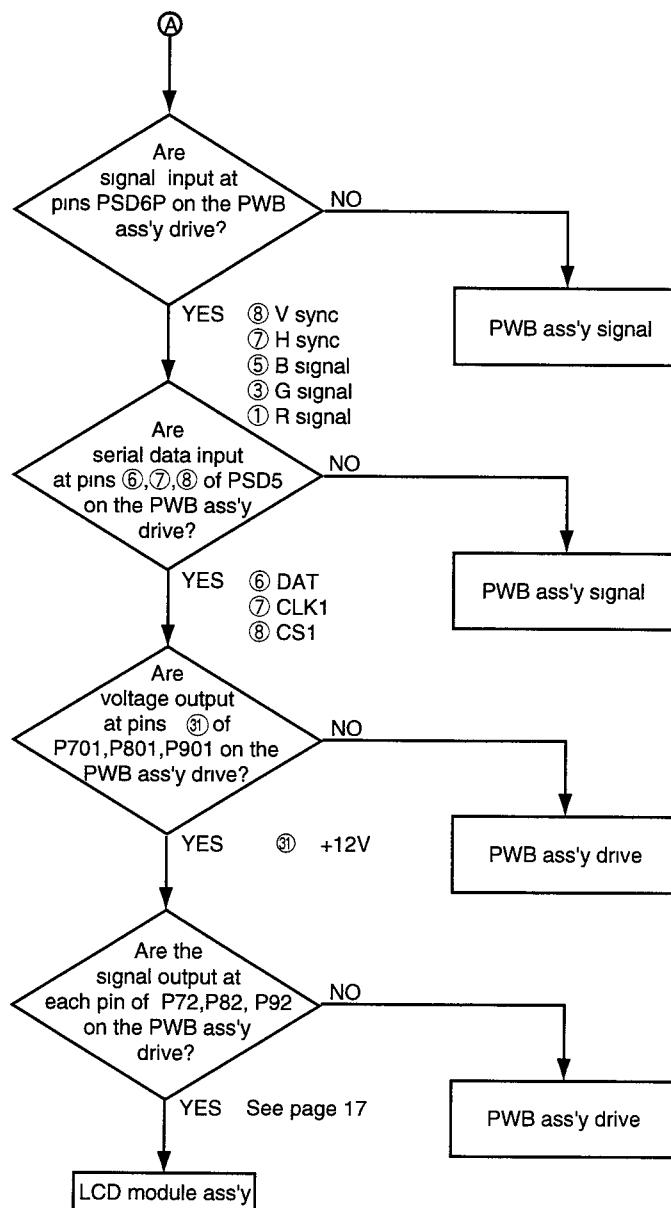

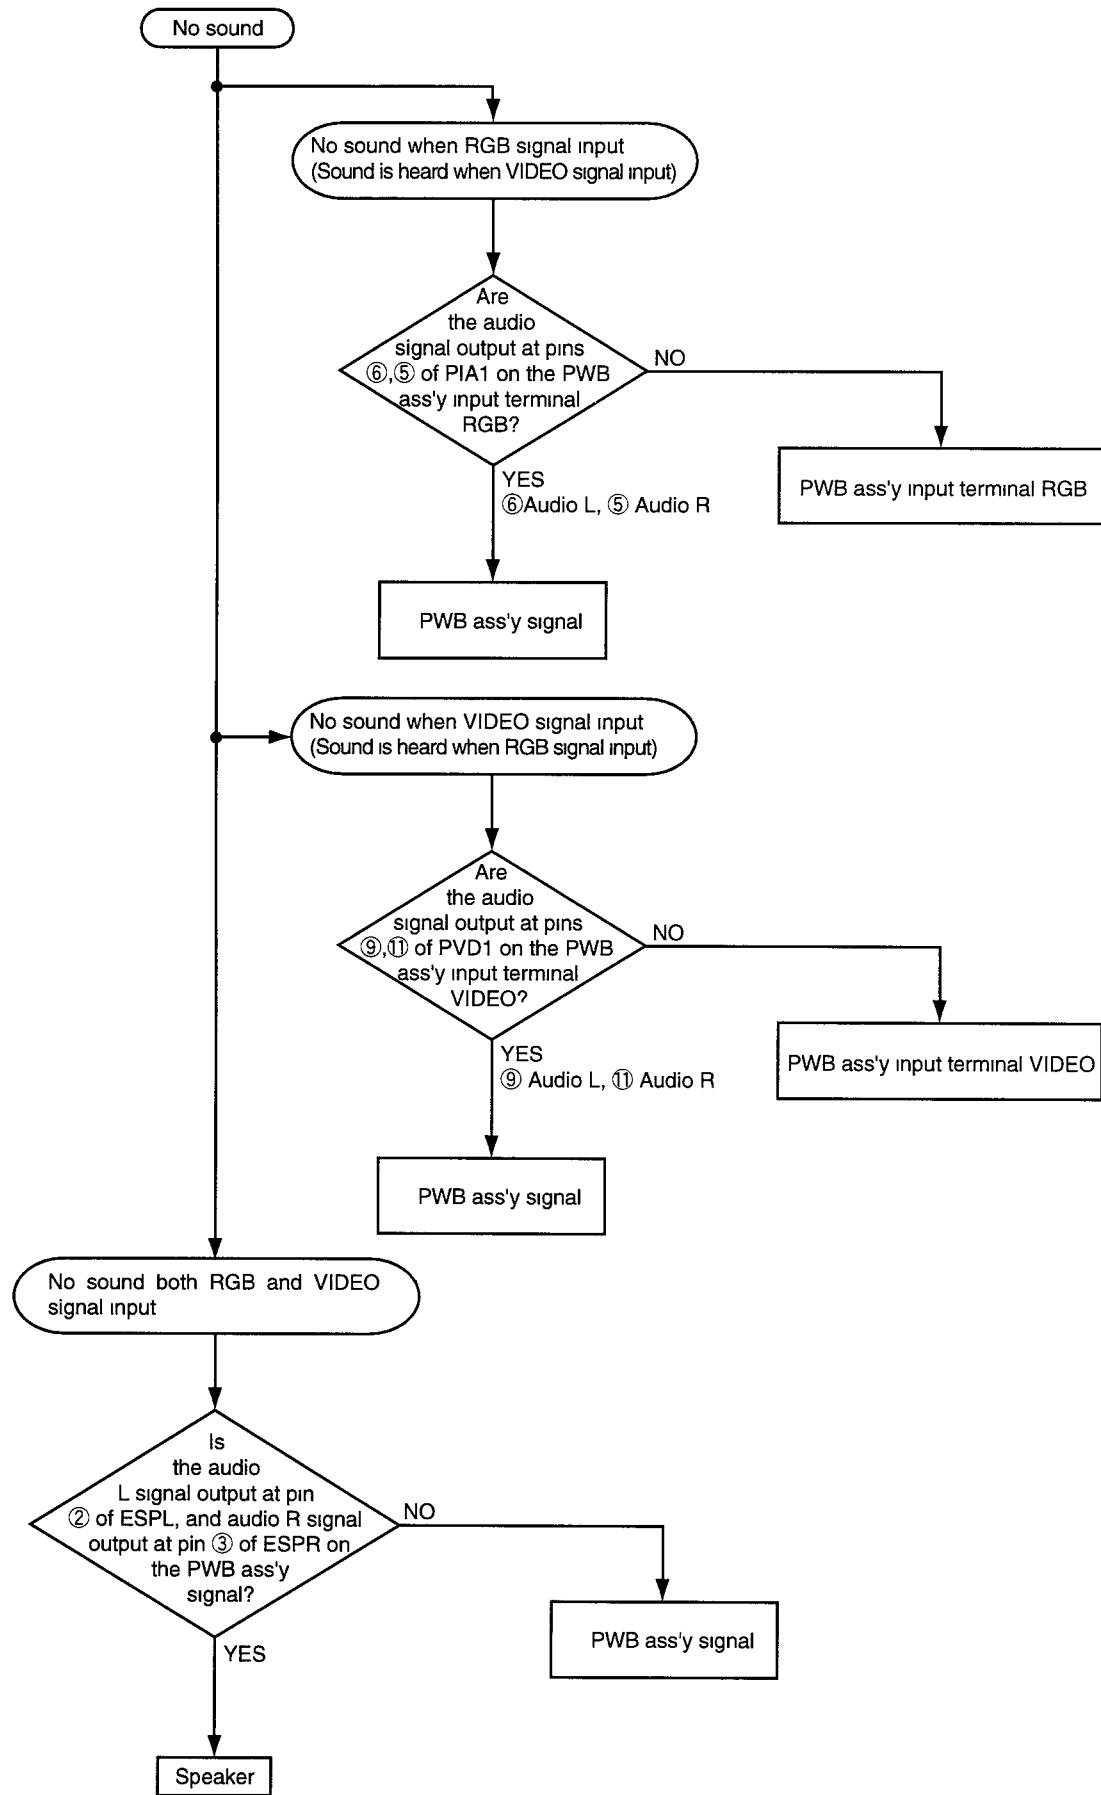

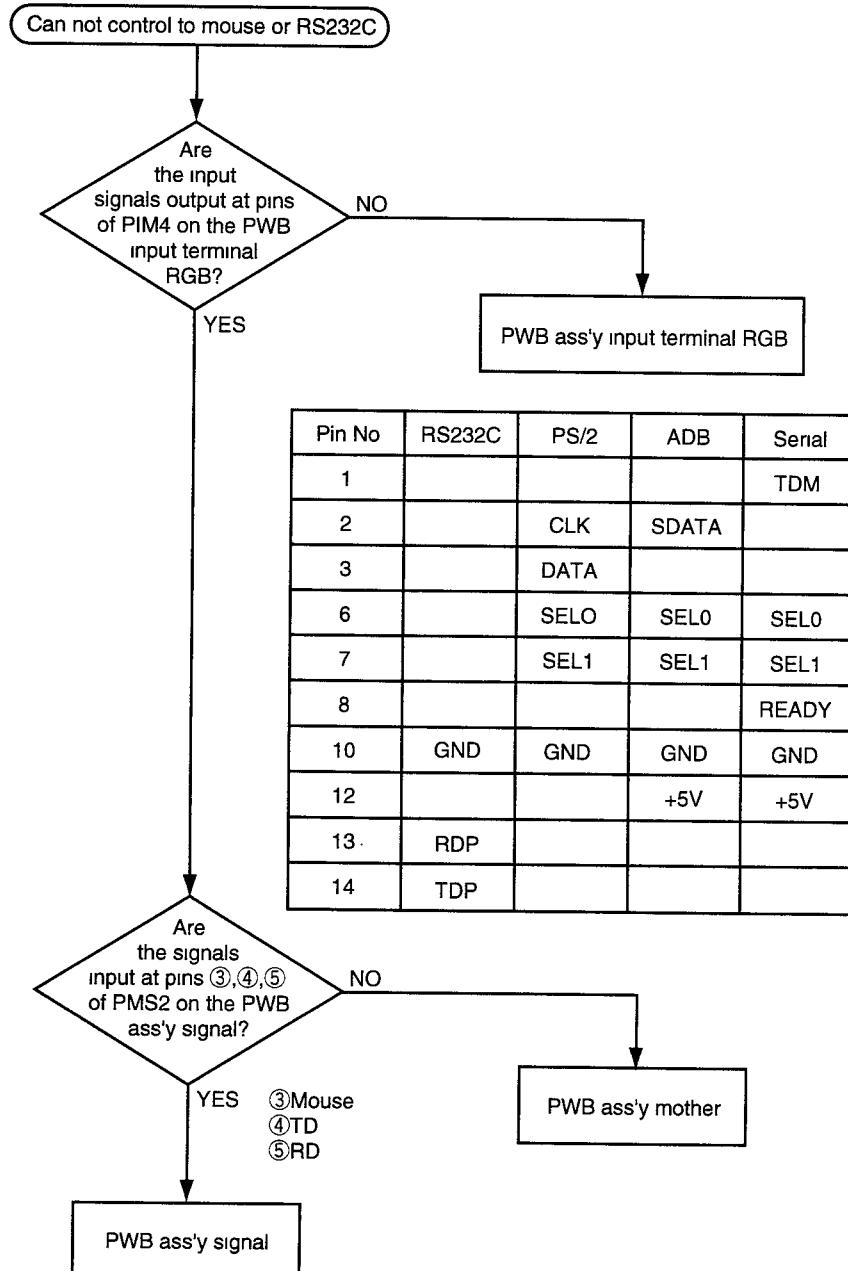

Signal waveforms of P501, P601 and P701 (Input signal is VGA3)

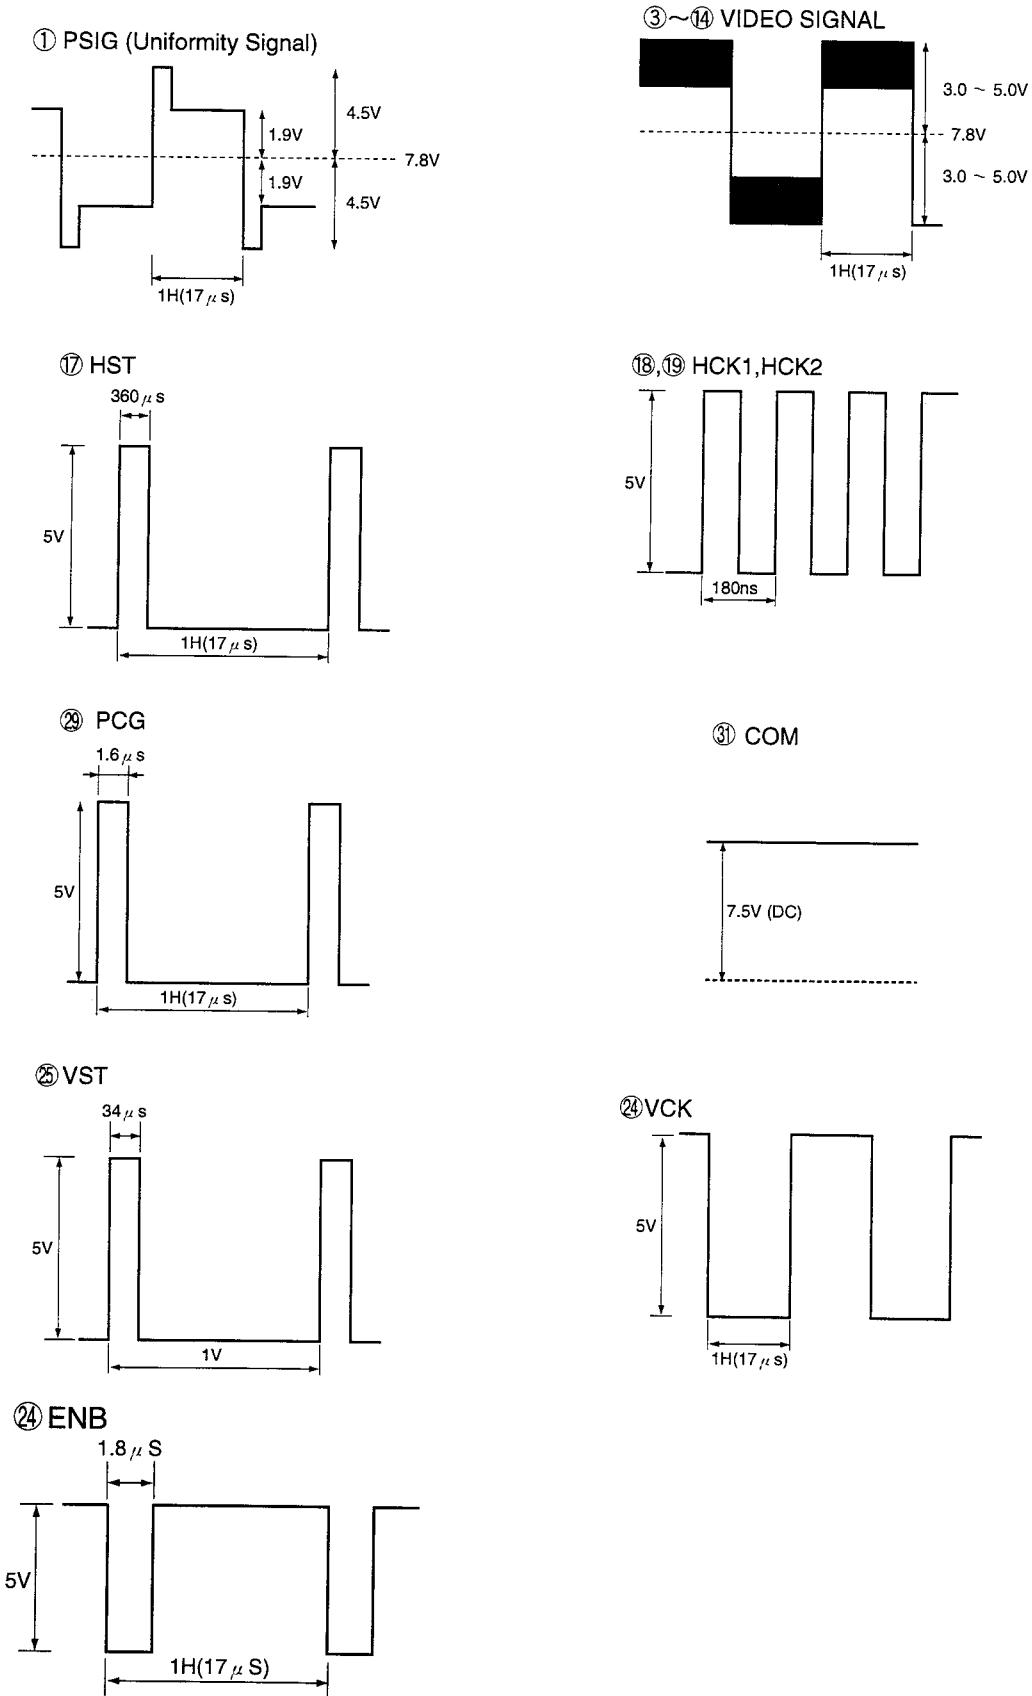

6. Service points

6 - 1 Removing the lamp

1. Loosen screw A1 and remove the lamp cover.
2. Loosen 3 screws A2 and remove the lamp.


Caution : After change the new lamp, tighten 3 screws A2.

If 3 screws are loose, the unit may be broken by incomplete connection of the lamp.

Lamp becomes too hot. To avoid burns to your finger.

Turn the power off and let the projector cool.


After change the new lamp, reset the operating time of the lamp.

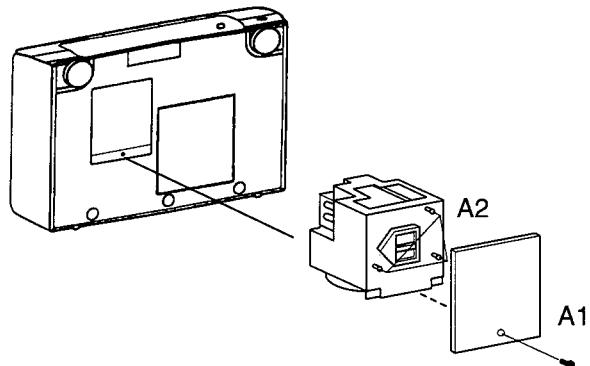

6 - 2 Removing the PWB ass'y drive, the lens prism unit, the LCD module ass'y, The front cover ass'y and exhaust fan, the handle (Fig. 6 - 2)


(1) Removing the PWB ass'y drive.

1. Remove 5 screws B1 and remove the upper case ass'y and disconnect the operation panel connector.
2. Remove 7 screws B0 and remove the upper shield case.
3. Disconnect 2 connectors for speaker from PWB ass'y signal.
4. Release the lock of the connector housing and disconnect the FPC of the LCD module ass'y.
5. Remove 4 screws B2 and disconnect 3 connectors and remove the PWB ass'y drive.

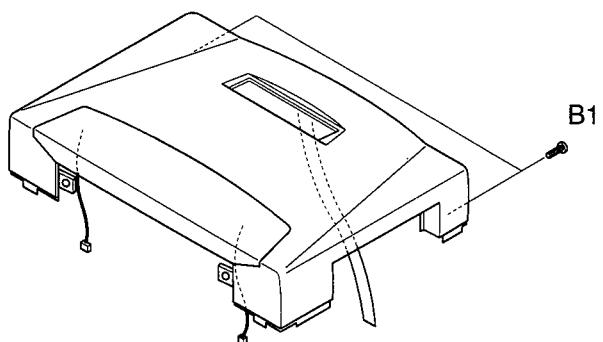

(2) Removing the lens prism unit.

1. Remove the PWB ass'y drive.
(Refer to Item 6 - 2 (1).)
2. Disconnect 2 connectors for motor from the PWB ass'y signal.
3. Remove 4 screws B3 and remove the lens prism unit with DC motors.
4. Remove 2 screws B4 and remove the DC motor ass'y from lens prism unit.

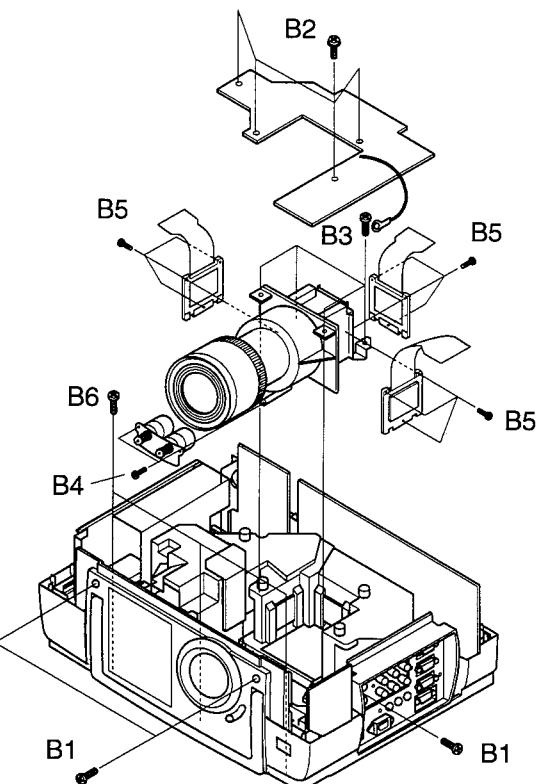

(3) Remove the LCD module ass'y.

1. Remove the lens prism unit with DC motor.
(Refer to steps 1 and 3 of Item 6 - 2 (2).)
2. Remove 3 screws B5 and remove the LCD module ass'y.

(4) Removing the front cover ass'y and exhaust fan.

1. Remove the lens prism unit with DC motor.
(Refer to steps 1 to 3 of Item 6 - 2 (2).)
2. Remove 3 screws B6 and remove the front cover ass'y (with exhaust fan).
3. Disconnect connector for exhaust fan from PWB ass'y signal.
- 4 Remove 4 screws B7 and remove the exhaust fan.

(5) Removing the lens shutter unit.

1. Remove the front cover ass'y.
(Refer to Item 6 - 2 (4).)
2. Remove 4 screws B8 and remove the lens shutter unit.

(6) Removing the handle.

1. Remove the front cover ass'y.
(Refer to Item 6 - 2 (4).)
2. Pull out the stick and remove the handle.

6 - 3 Removing Power unit, PWB ass'y signal, PWB ass'y input terminal.

(1) Removing the Power unit (ballast).

1. Remove the upper case ass'y. (Refer to step 1 to 2 of item 6 - 2 (1).)
2. Remove 2 screws C1 and disconnect the lamp connector.
3. Disconnect 4 connectors.
4. Remove 4 screws C2 and remove the power unit holder ass'y.

(2) Removing the power unit (circuit).

1. Remove the upper case ass'y.
(Refer to step 1 to 2 of item 6 - 2 (1).)
2. Remove 1 screws C4 and remove the holder metal .
3. Remove screw C5 and remove the ground connection wire.
4. Disconnect 2 connectors and remove the power unit (circuit).

(3) Removing the PWB ass'y filter.

1. Remove the upper case ass'y.
(Refer to steps 1 to 2 of item 6 - 2 (1).)
2. Disconnect 2 connectors and remove the PWB ass'y filter. < Refer to Fig. Remove the PWB ass'y Filter >

(4) Removing the PWB ass'y signal.

1. Remove the PWB ass'y drive.
(Refer to step 1 to 2 item 6 - 2 (1).)
2. Disconnect all 8 connectors of PWB ass'y signal.
3. Remove screw C4 and remove the holder metal.
4. Remove screw C5 and remove the ground connection wire and remove the PWB ass'y signal.

(5) Removing the PWB ass'y input terminal video.

1. Remove the upper case ass'y.
(Refer to step 1 to 2 item 6 - 2 (1).)
2. Remove 2 screws C6 and remove the connector and remove the PWB ass'y input terminal video.



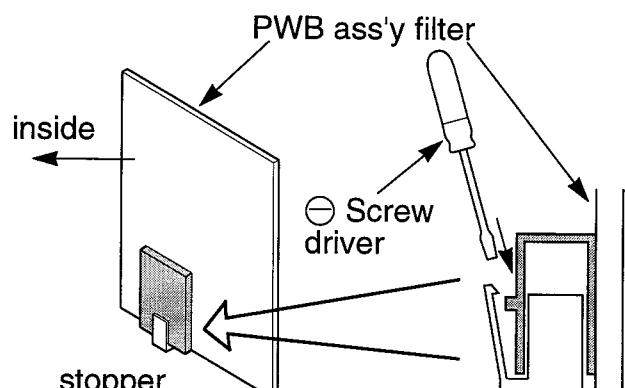


Fig. Remove the PWB ass'y Filter

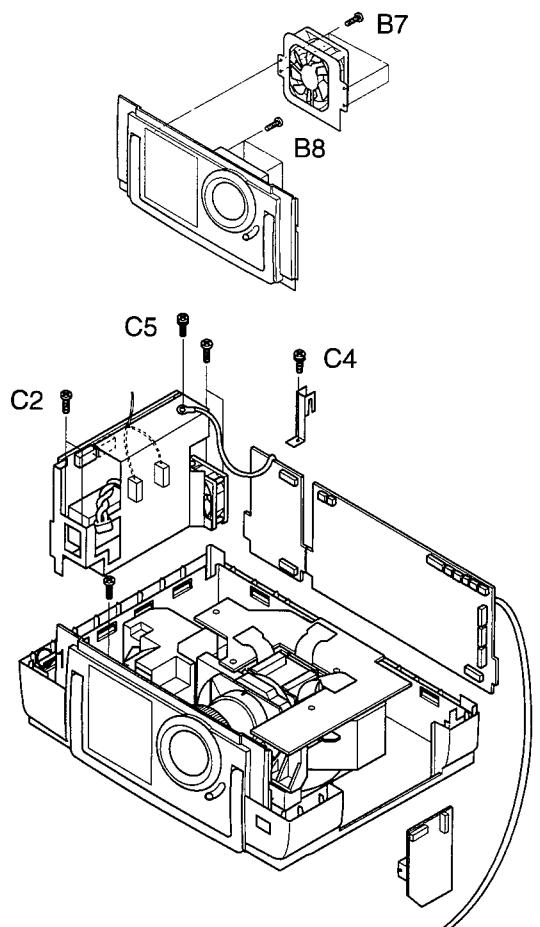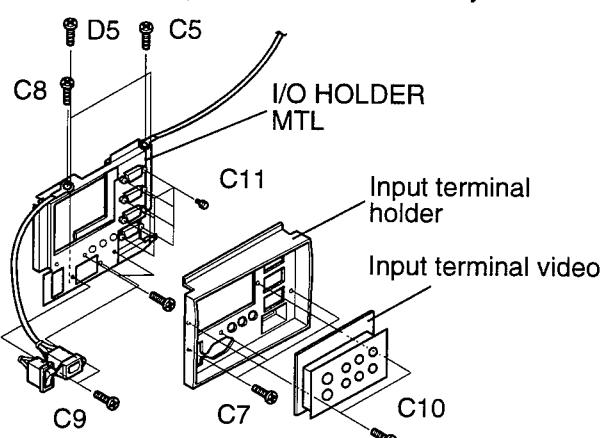

(6) Removing the PWB ass'y input terminal RGB.

1. Remove the PWB ass'y signal.
(Refer to item 6 - 3 (4).)
2. Remove the PWB ass'y input terminal video.
(Refer to item 6 - 3 (5).)
3. Remove 3 screws C7 and remove I/O terminal holder.
4. Remove screw C8 and remove the ground connection wire from AC inlet.
5. Remove 2 screws C9 and remove the AC inlet holder.
6. Remove 2 screws D5 and remove I/O HOLDER MTL.
7. Remove 8 screws C11 and 2 screws C10 remove the PWB ass'y input terminal RGB.

6 - 4 Removing the dichroic optics unit, intake fan, PWB ass'y mother.

(1) Removing the dichroic optics unit.


1. Remove the lens prism unit.
(Refer to step 1 to 3 of itemen 6 - 2 (2).)
2. Remove screw D1 and remove the micro switch.
3. Remove screw D2 and remove the thermal sensor switch.
4. Remove 4 screws D3 and remove the dichroic optics unit.

(2) Removing the intake fan.

1. Remove the dichroic optics unit.
(Refer to item 6 - 4 (1).)
2. Disconnect connector from the PWB ass'y signal.
3. Remove 4 screws D4 and remove the intake fan.

(3) Removing the PWB ass'y mother.

1. Remove the power unit (filter).
(Refer to item 6 - 3 (3).)
2. Remove the PWB ass'y signal.
(Refer to item 6 - 3 (4).)
3. Remove the PWB ass'y input terminal video.
(Refer to item 6 - 3 (5).)
4. Remove the PWB ass'y input terminal RGB.
(Refer to item 6 - 3 (6).)
5. Remove 3 screws D5 and remove the PWB ass'y mother.

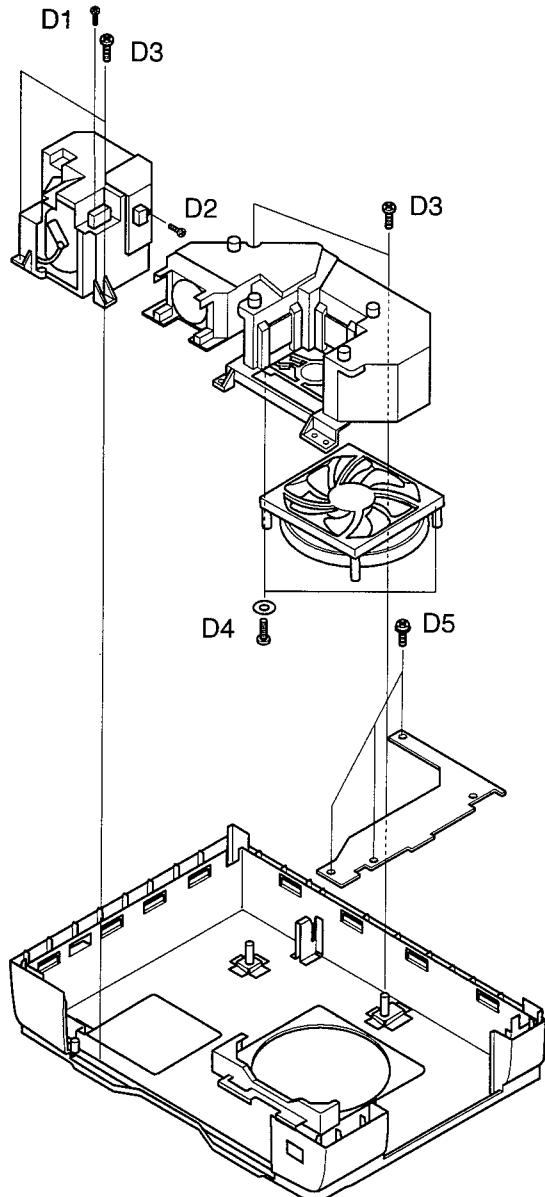

7. Dust cleaning

(1) Check dust condition

1. Show the white picture on the screen (whose size is 60") to check dust condition.
2. If dust condition is not good, should be clean the LCD module ass'y and the Air filter.


(2) Clean the LCD module ass'y

1. Remove the LCD module ass'y. (Refer Item 6 - 2 (3)).
2. Blow the air on both side of the LCD module by dust blower or air gun.
3. If dusts are still on, wipe it with the special glass cleaning cloth.
4. Fix the LCD module, and check dust condition.
5. If it is OK, adjust convergence. (see 4 - 3)

(3) Clean the air filter

1. Remove the air filter from the bottom of the projector. (see Fig.7 - 1)
2. Wipe the air filter with a cloth moistend with water or neutral detergent, and wipe with a dry cloth.

(1) Remove 1 screws.

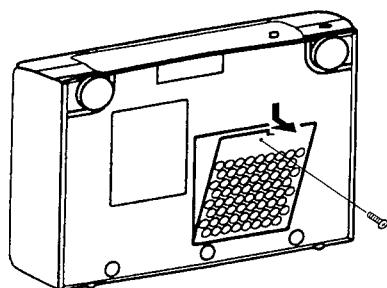

(2) Remove the air filter.


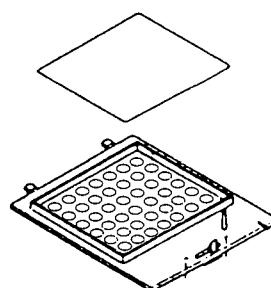



Fig.7 - 1

8. Block diagram


8.1 Circuit diagram

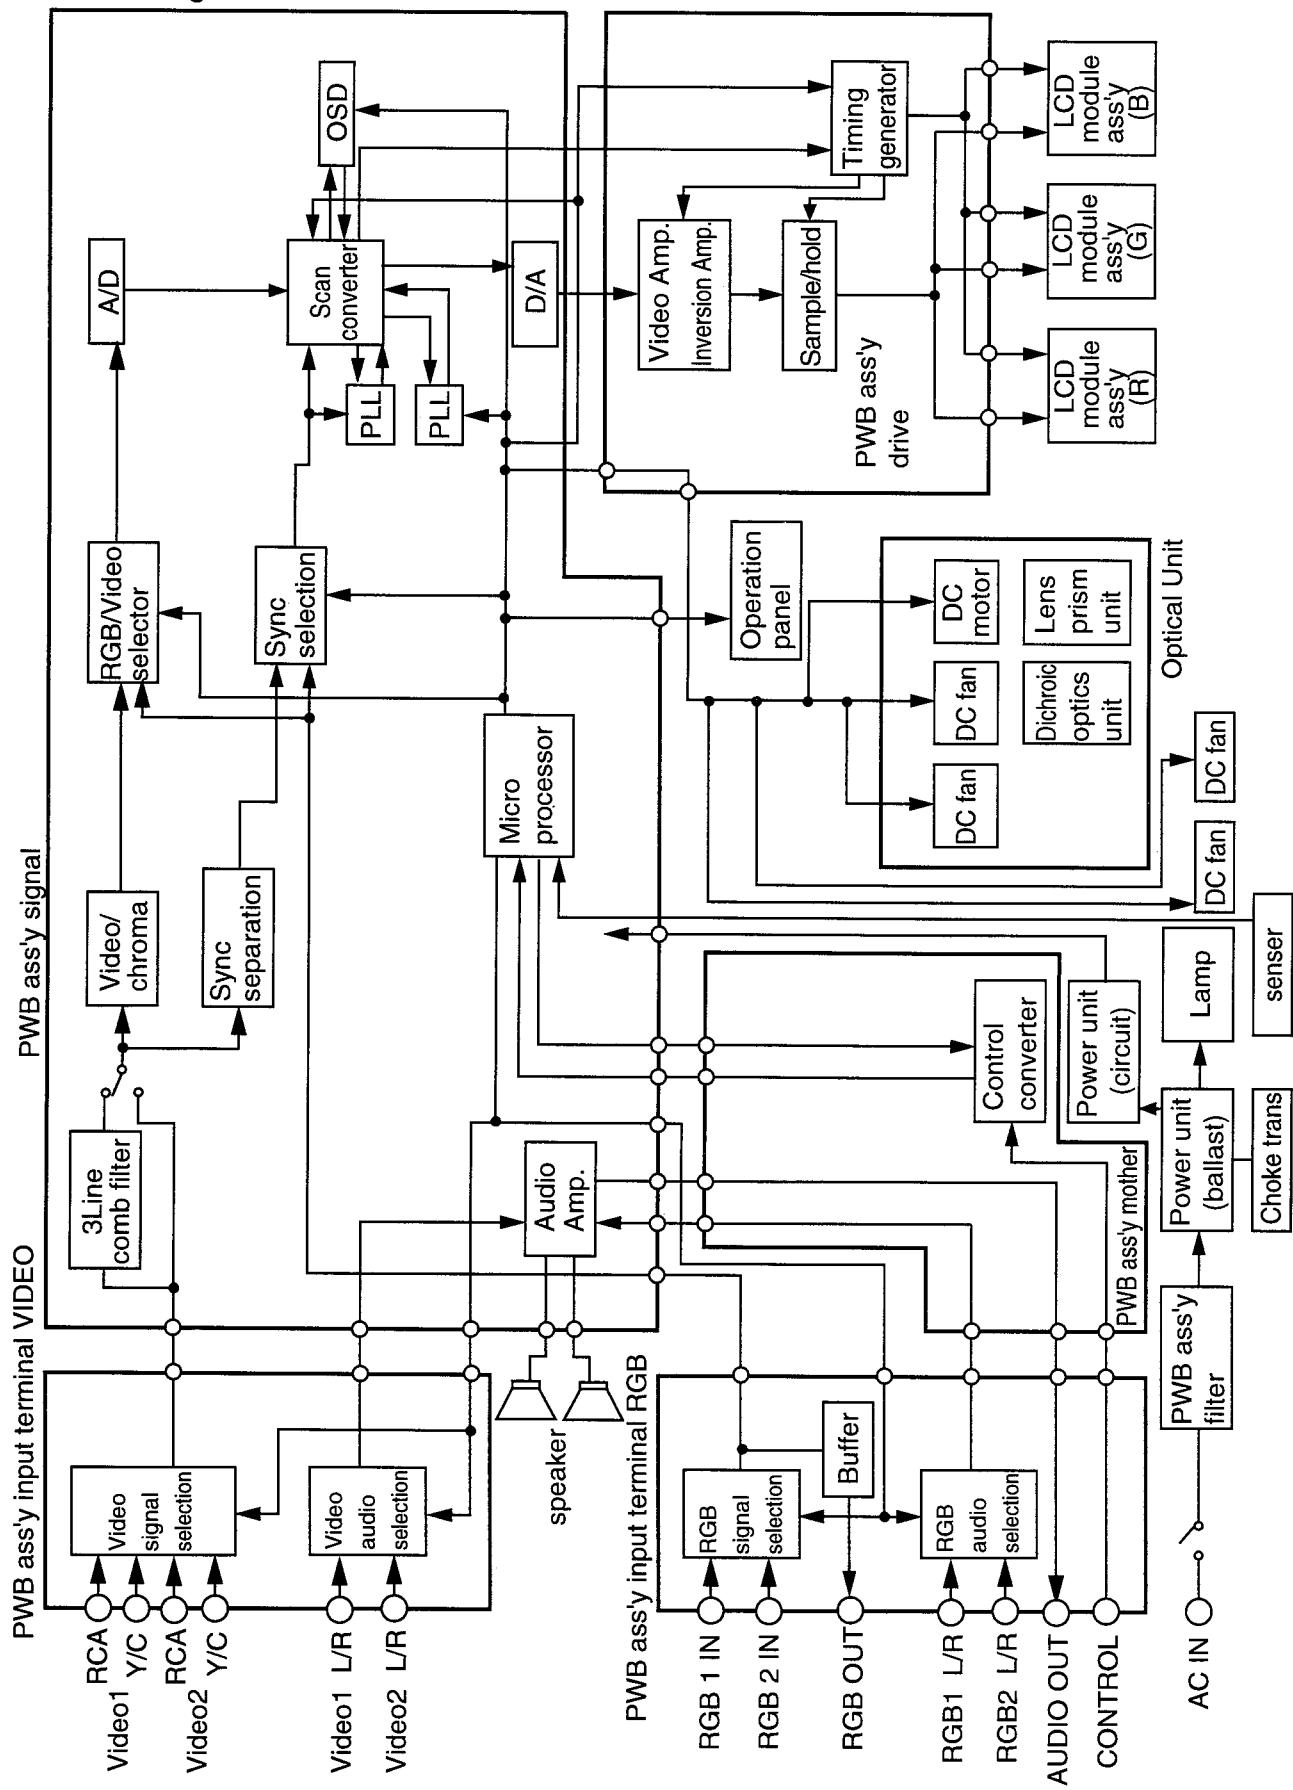


8.2 Layout of optical system

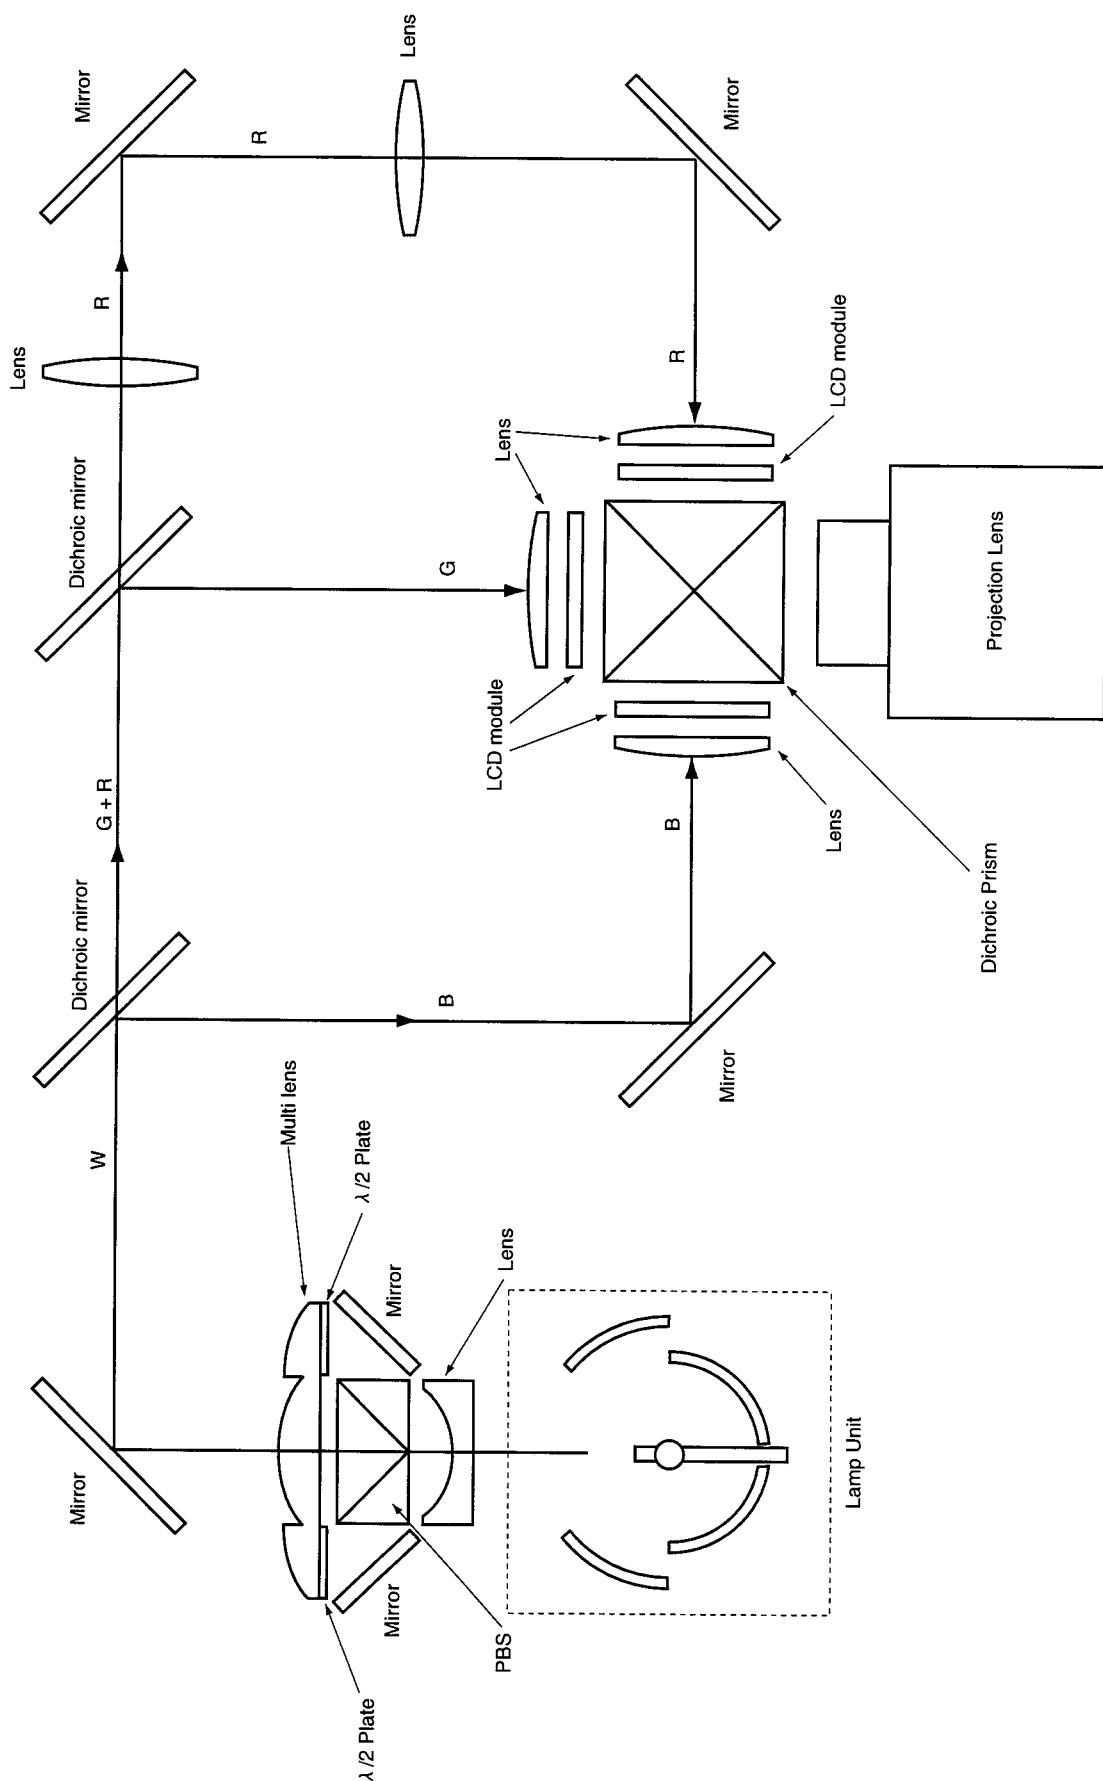


9. Wiring diagram

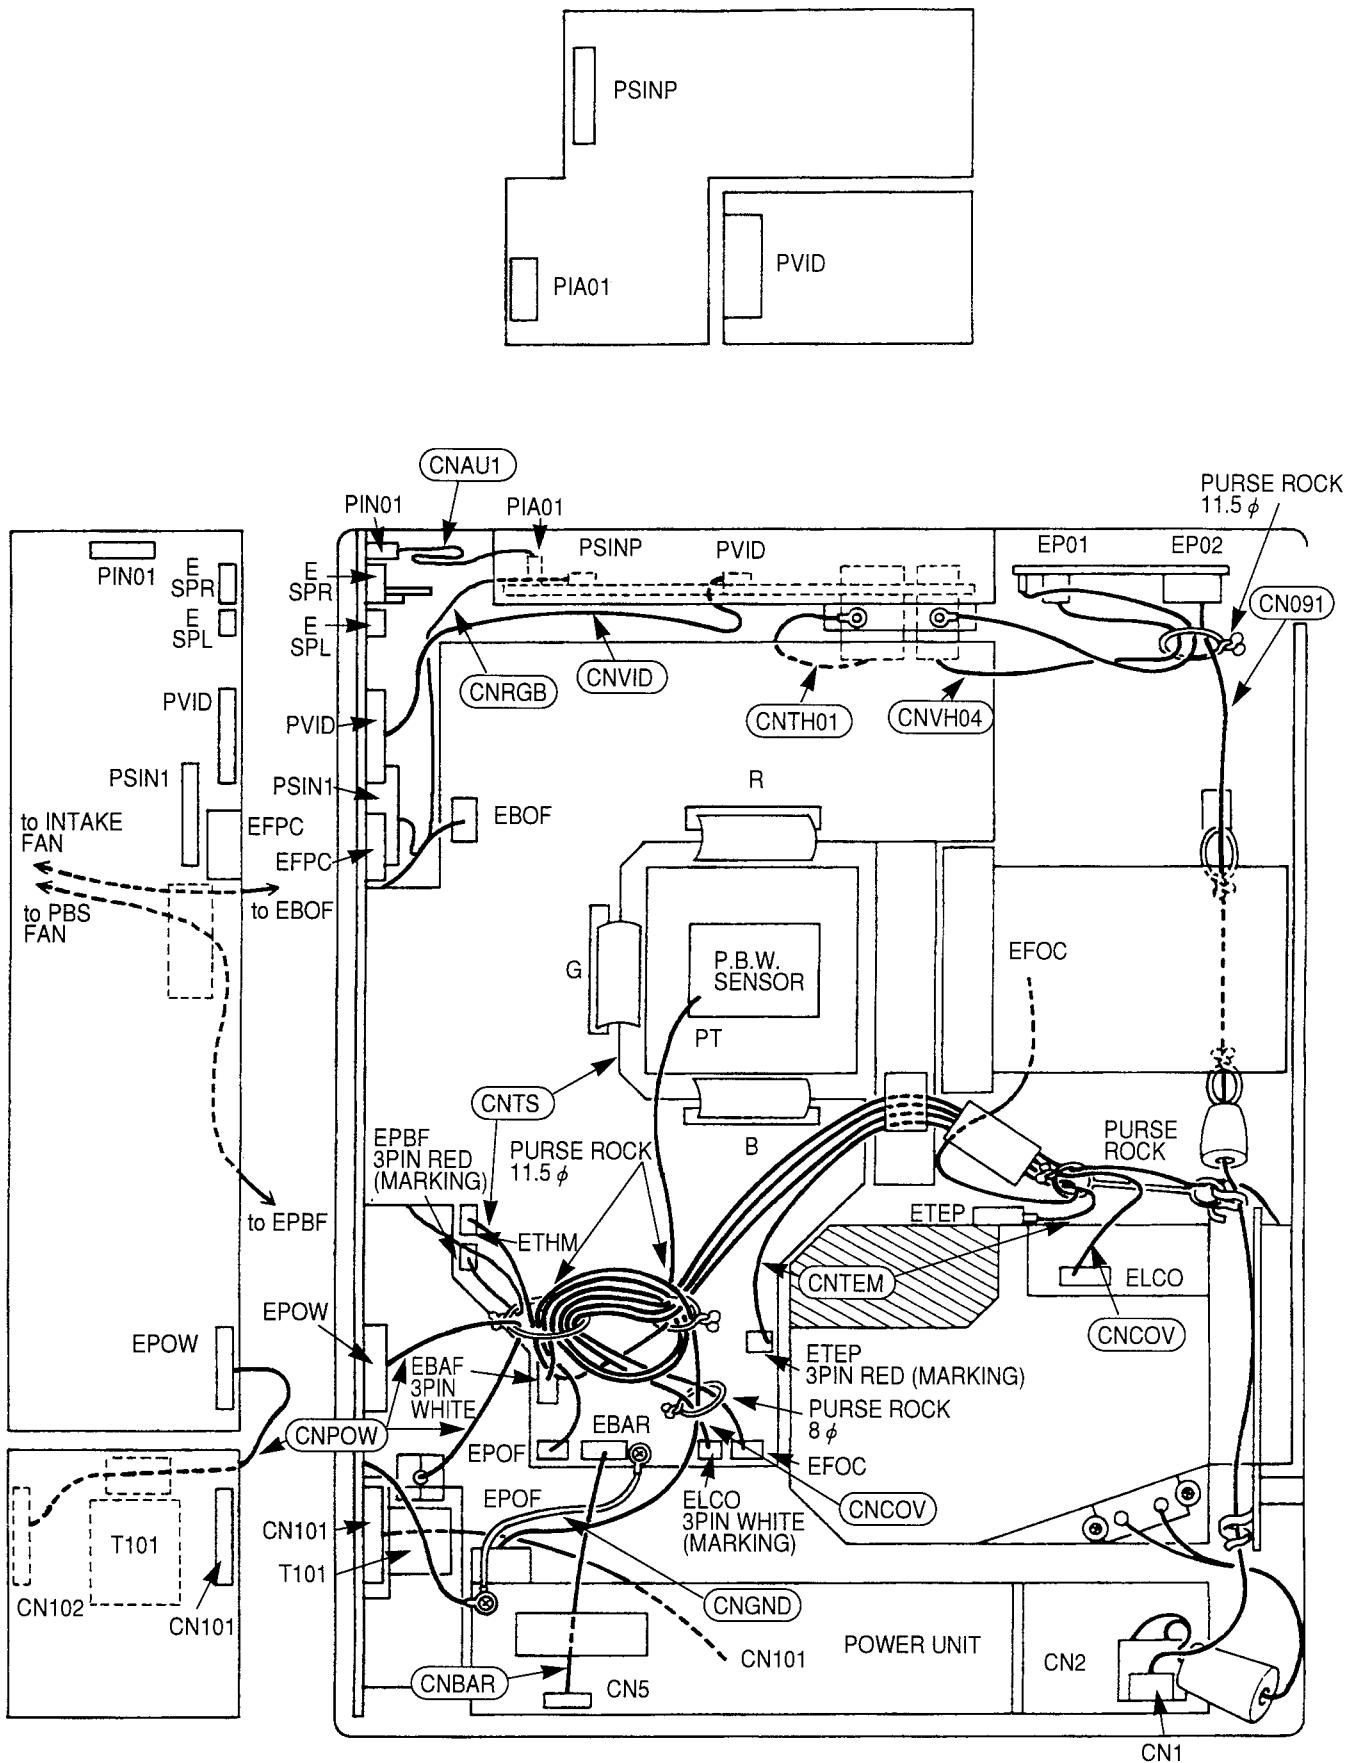



10. Basic circuit diagram

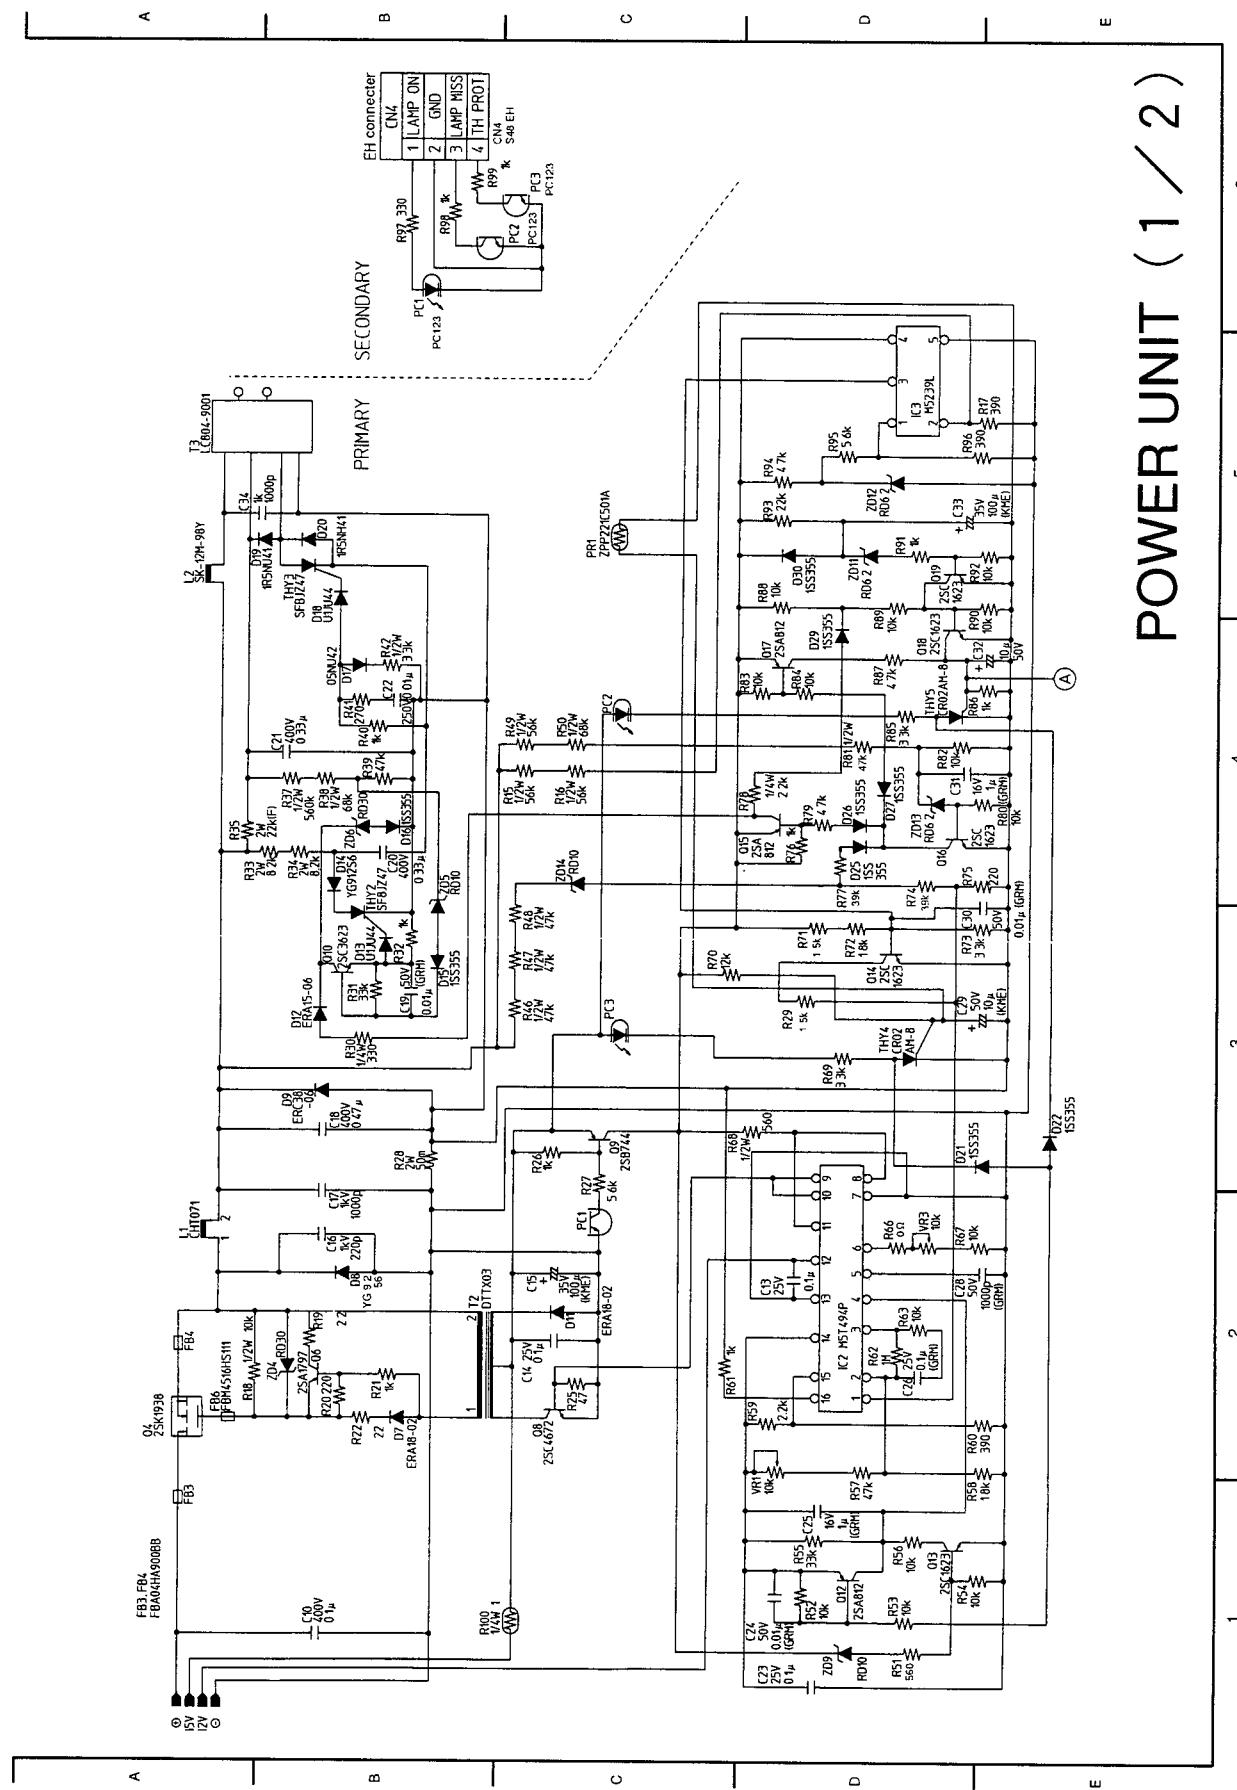


- 25 -

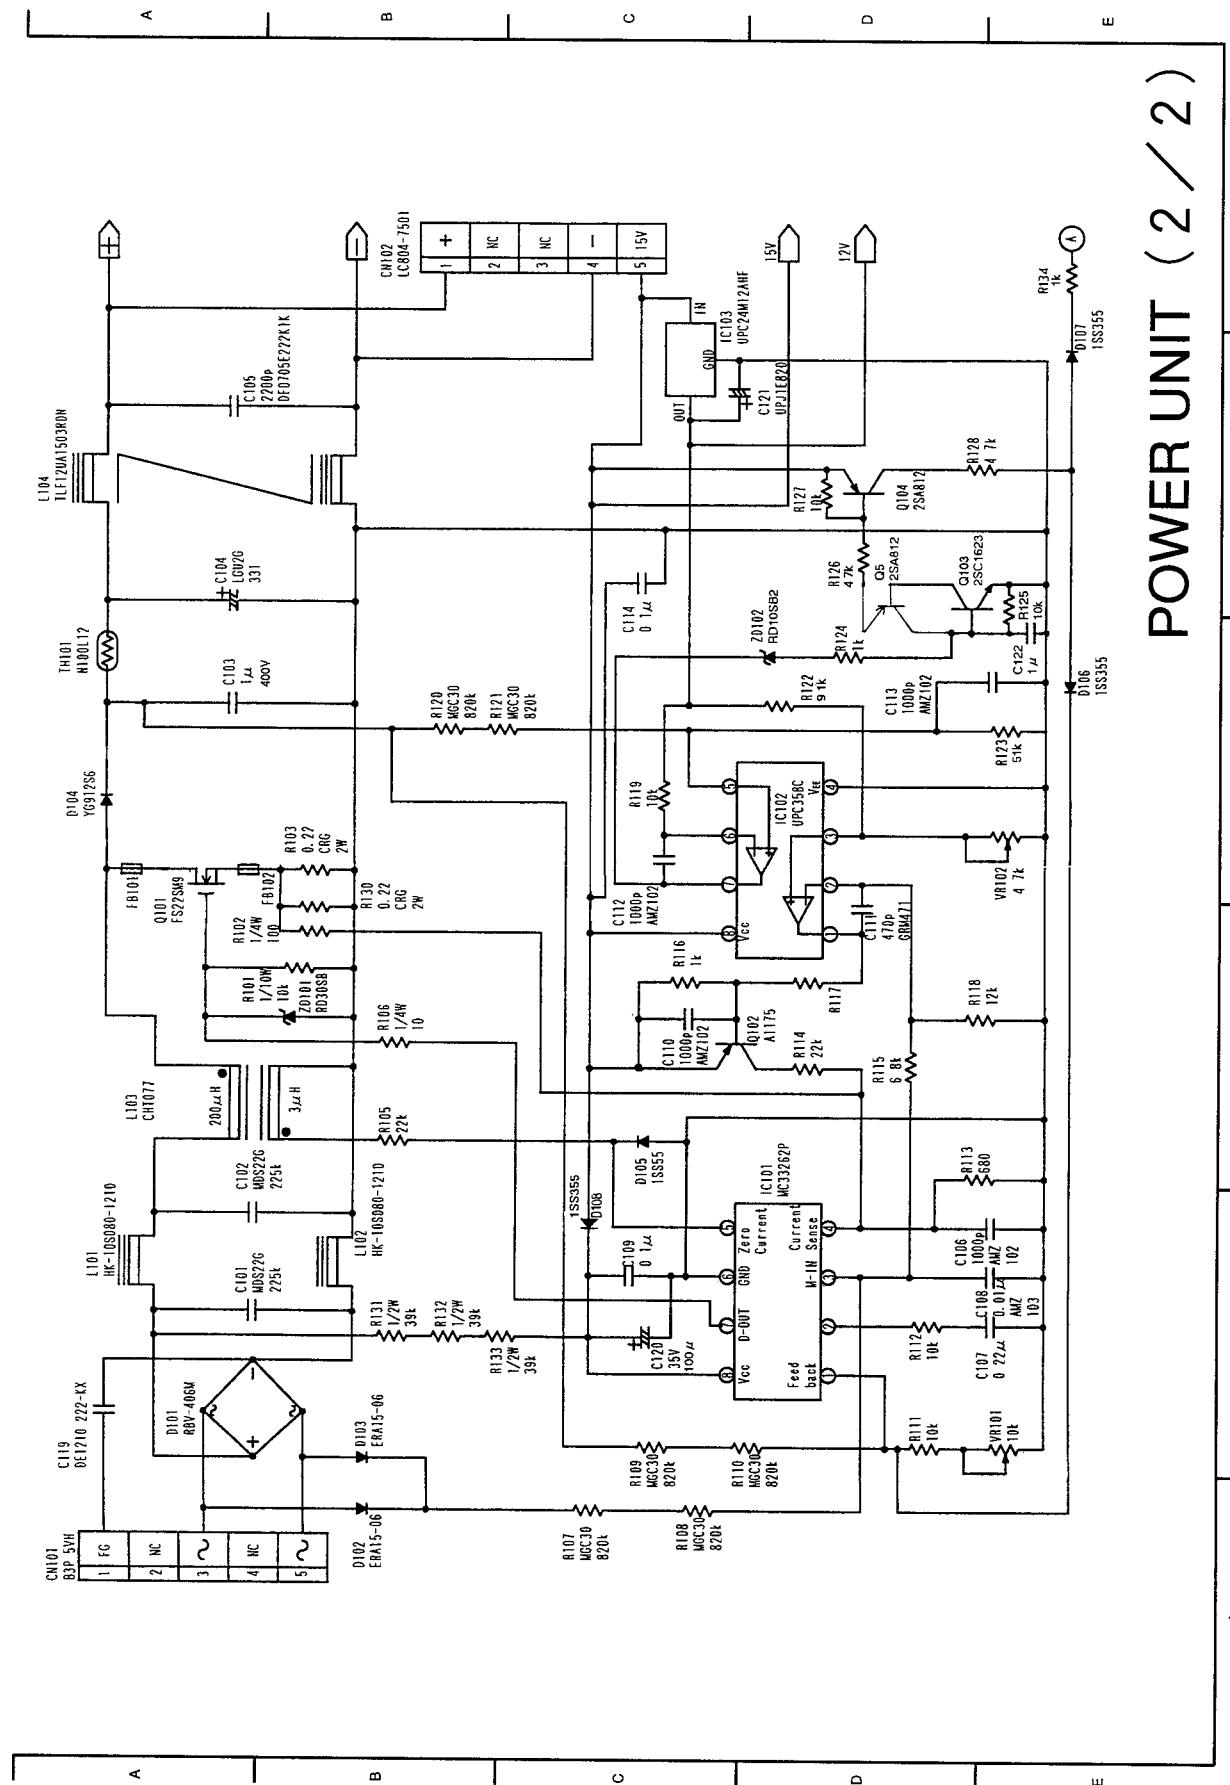


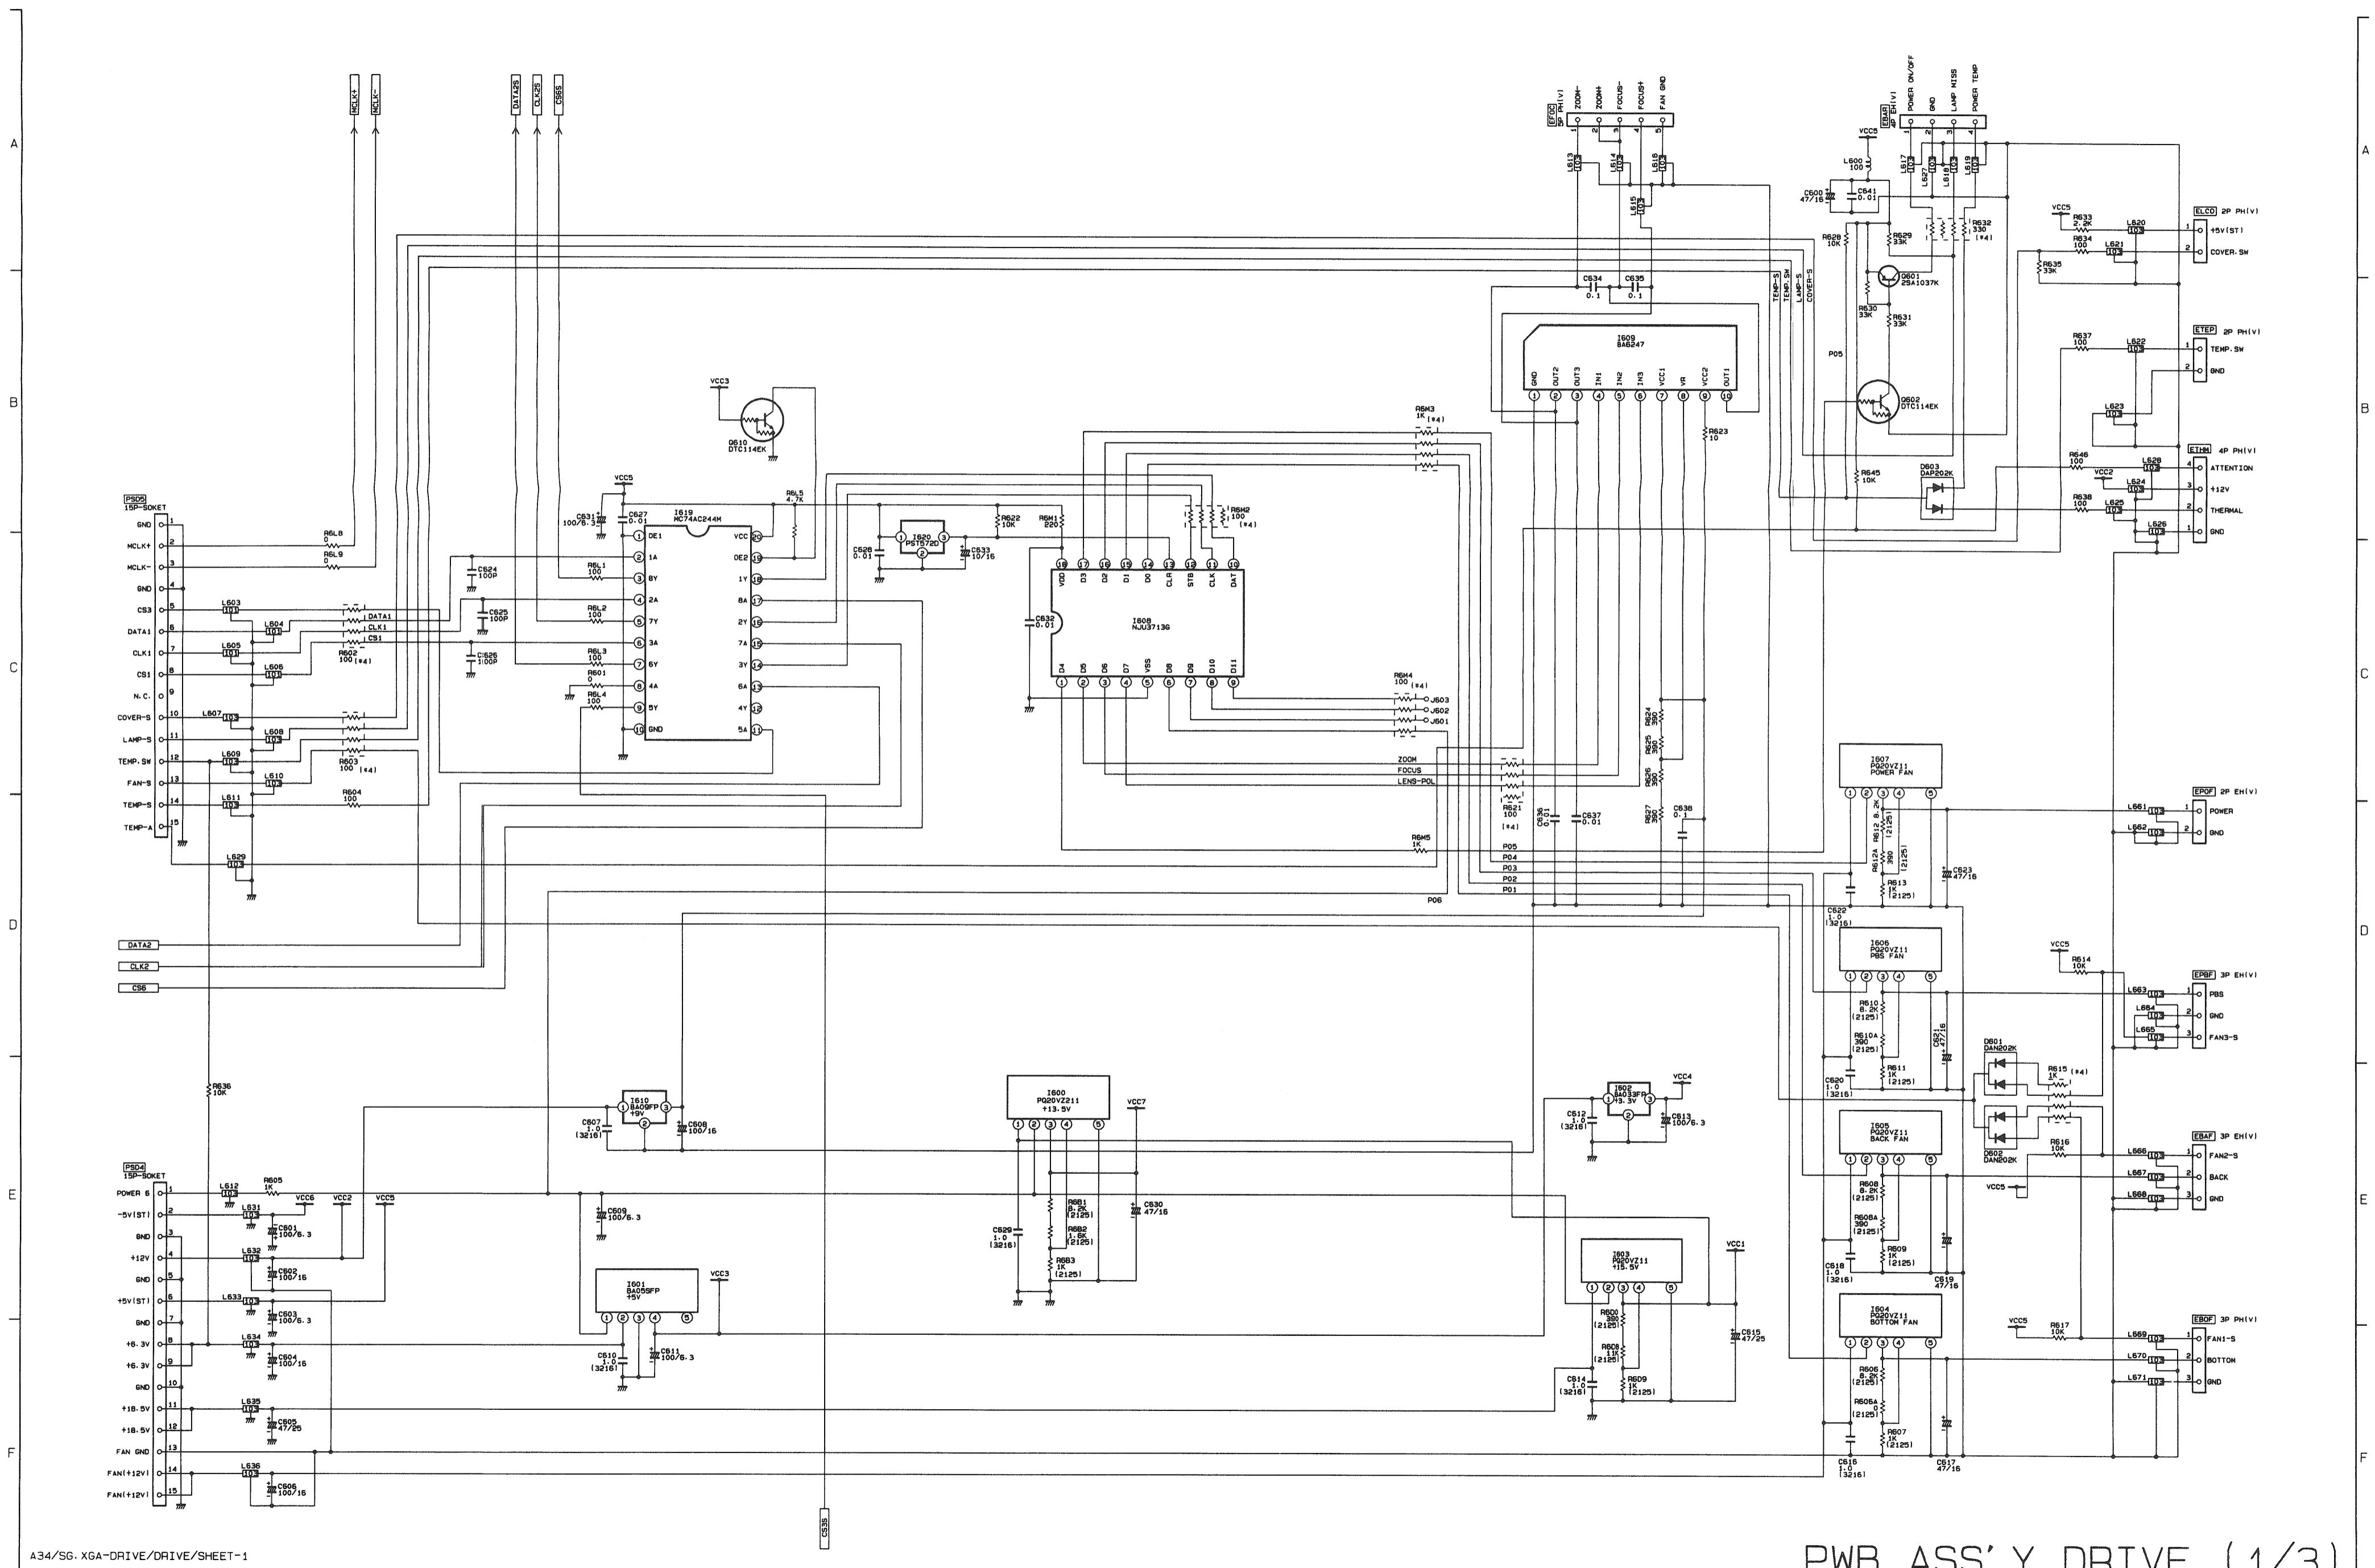


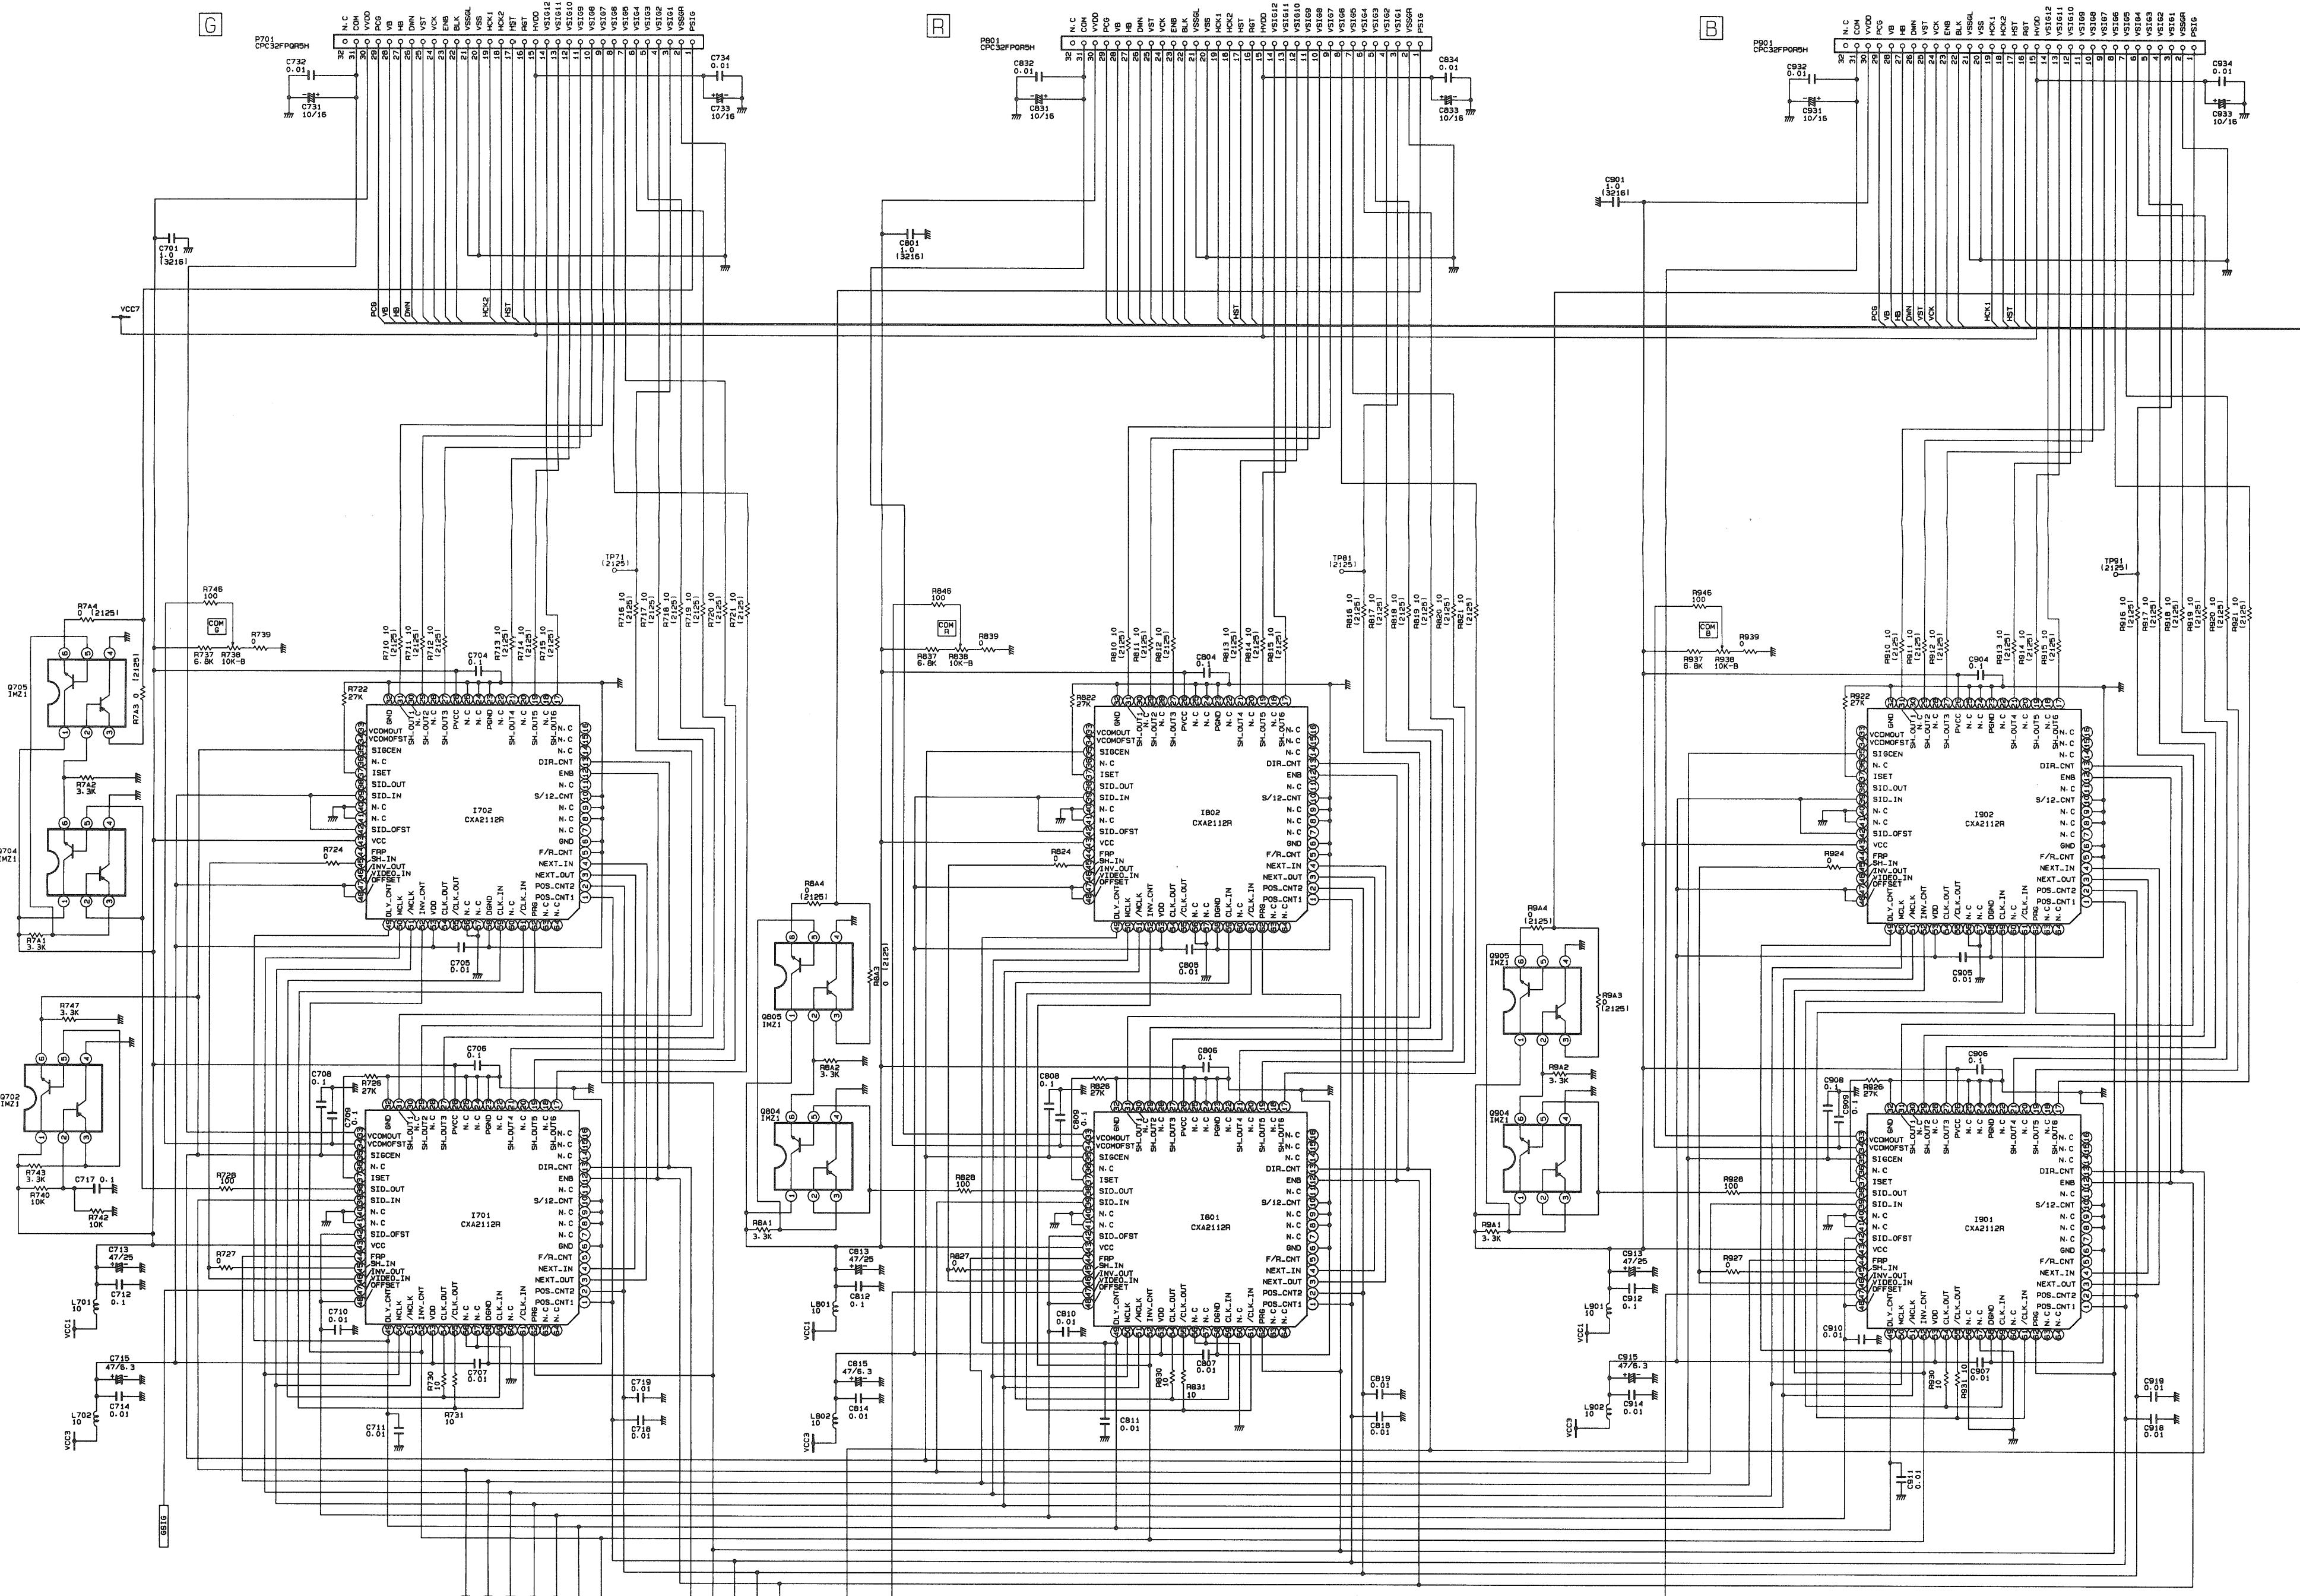


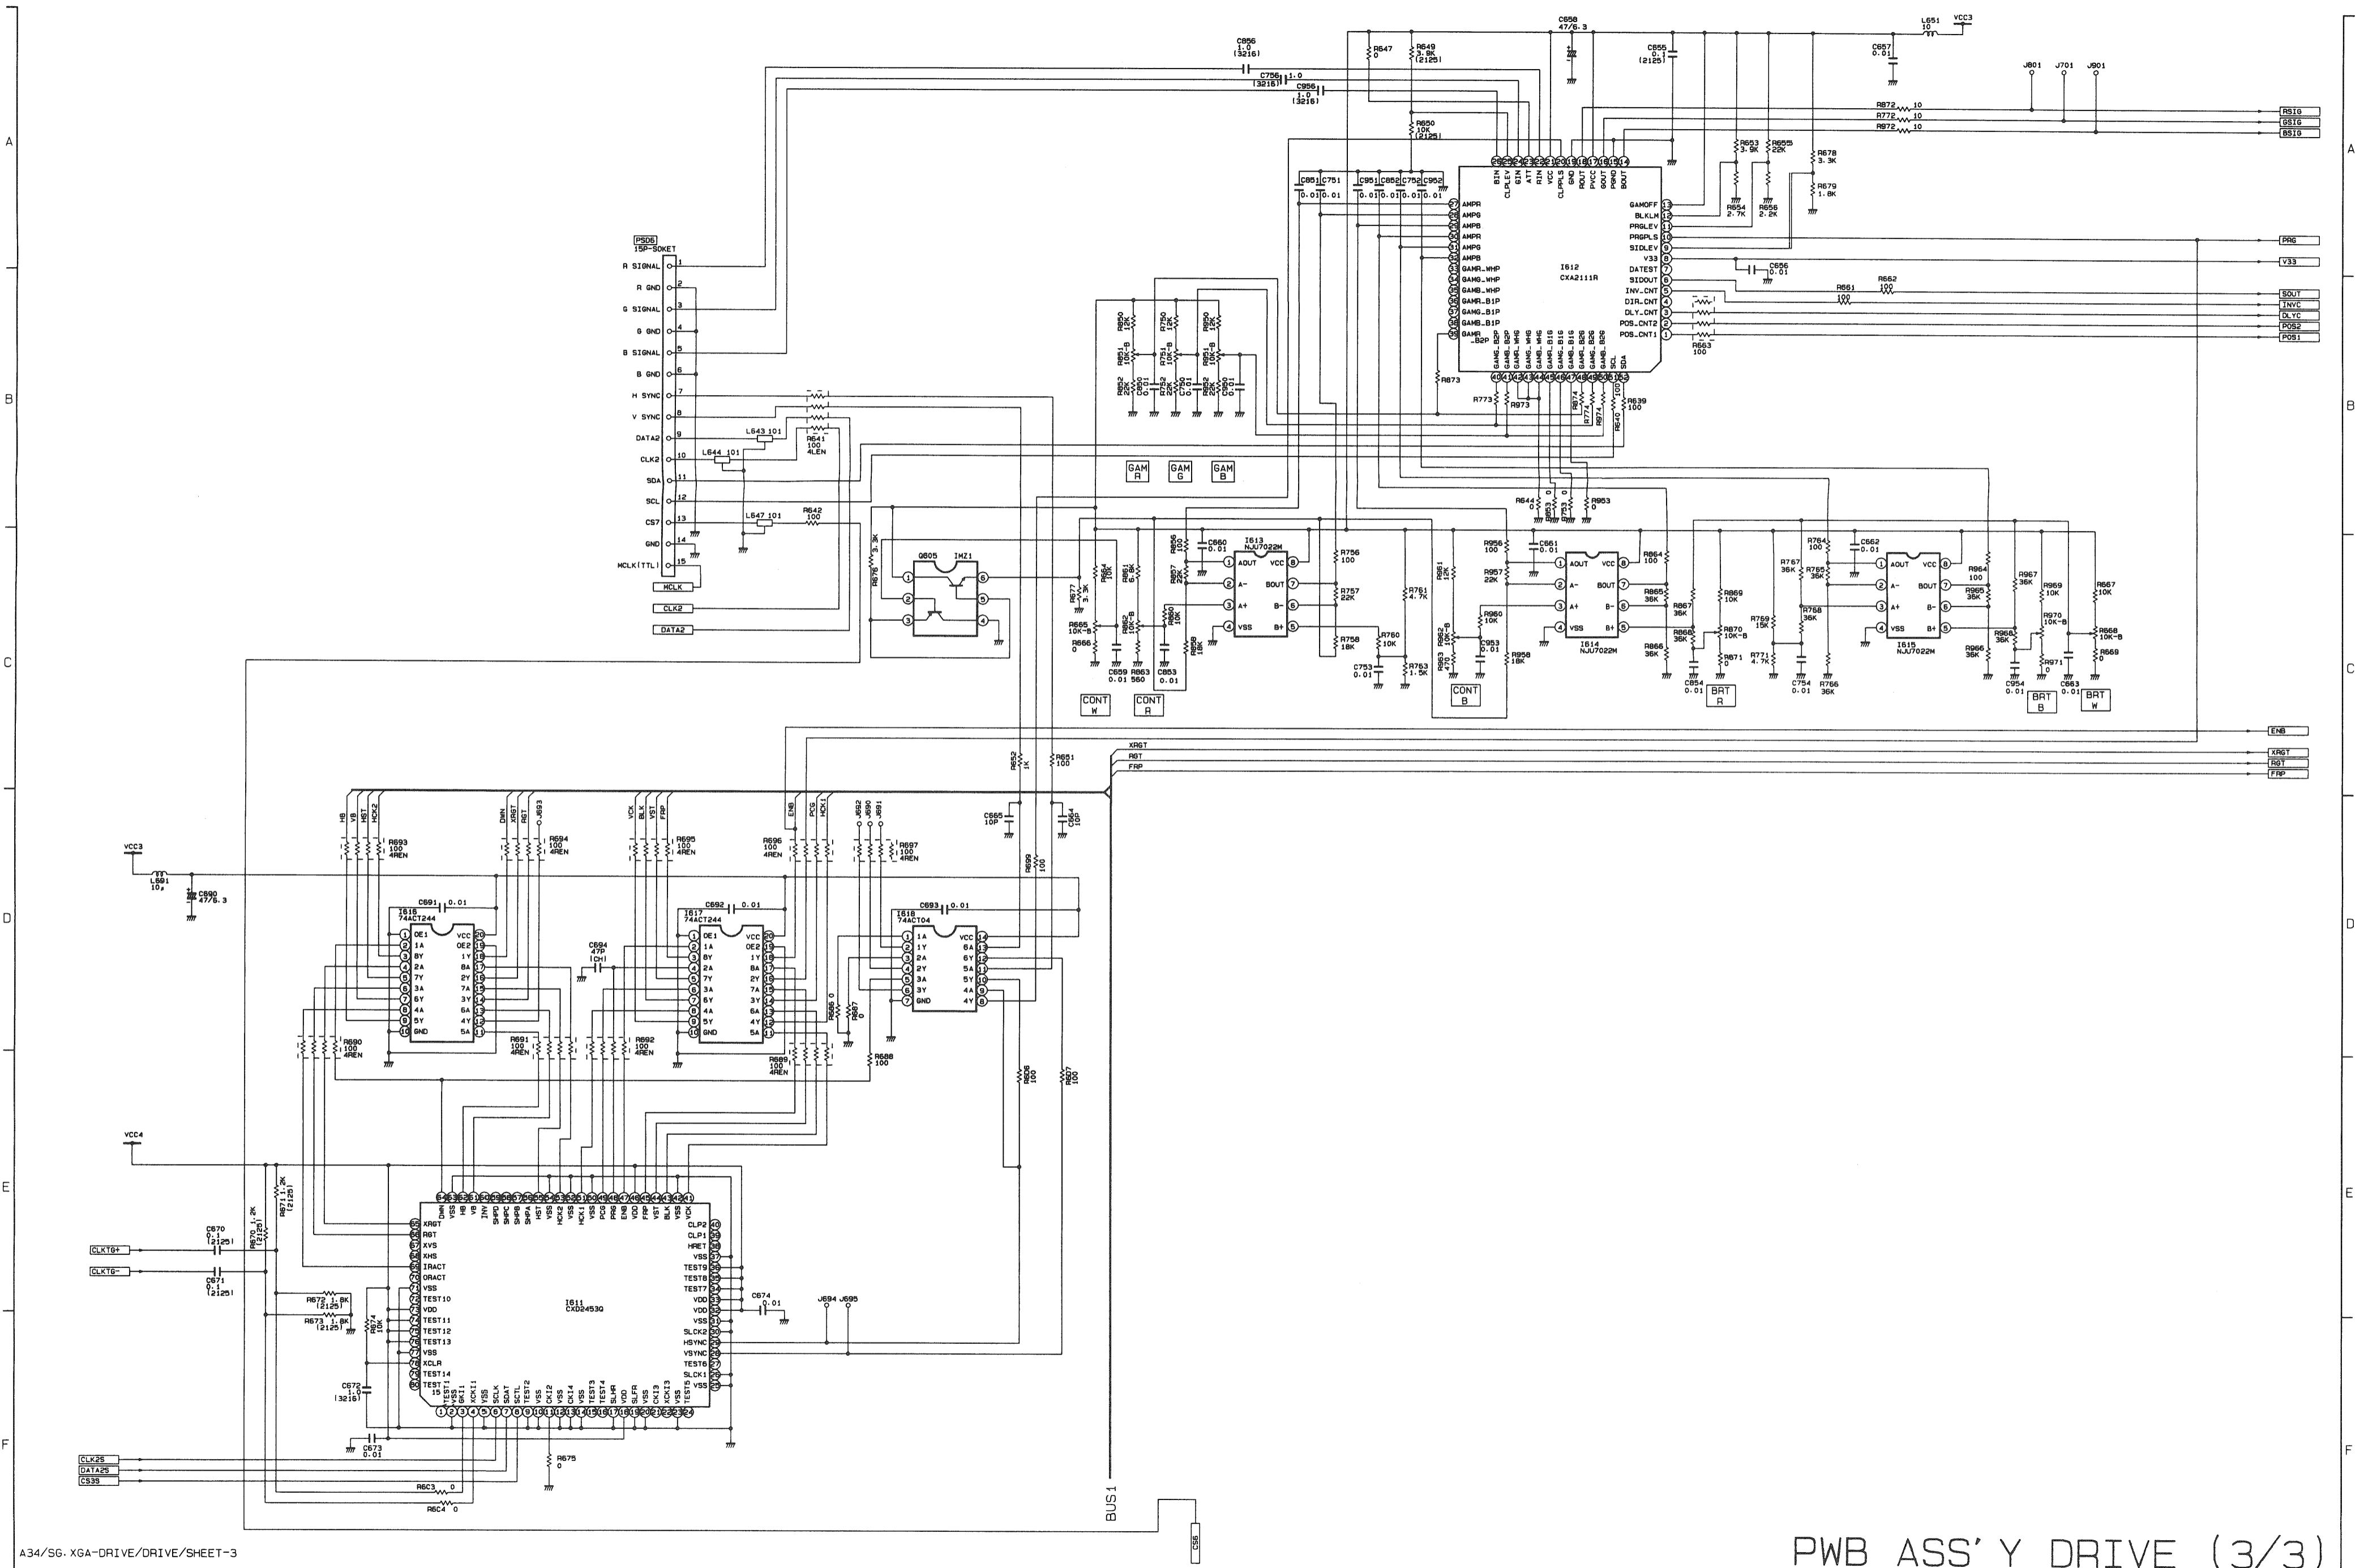



PWB ASS'Y DRIVE (3/3)

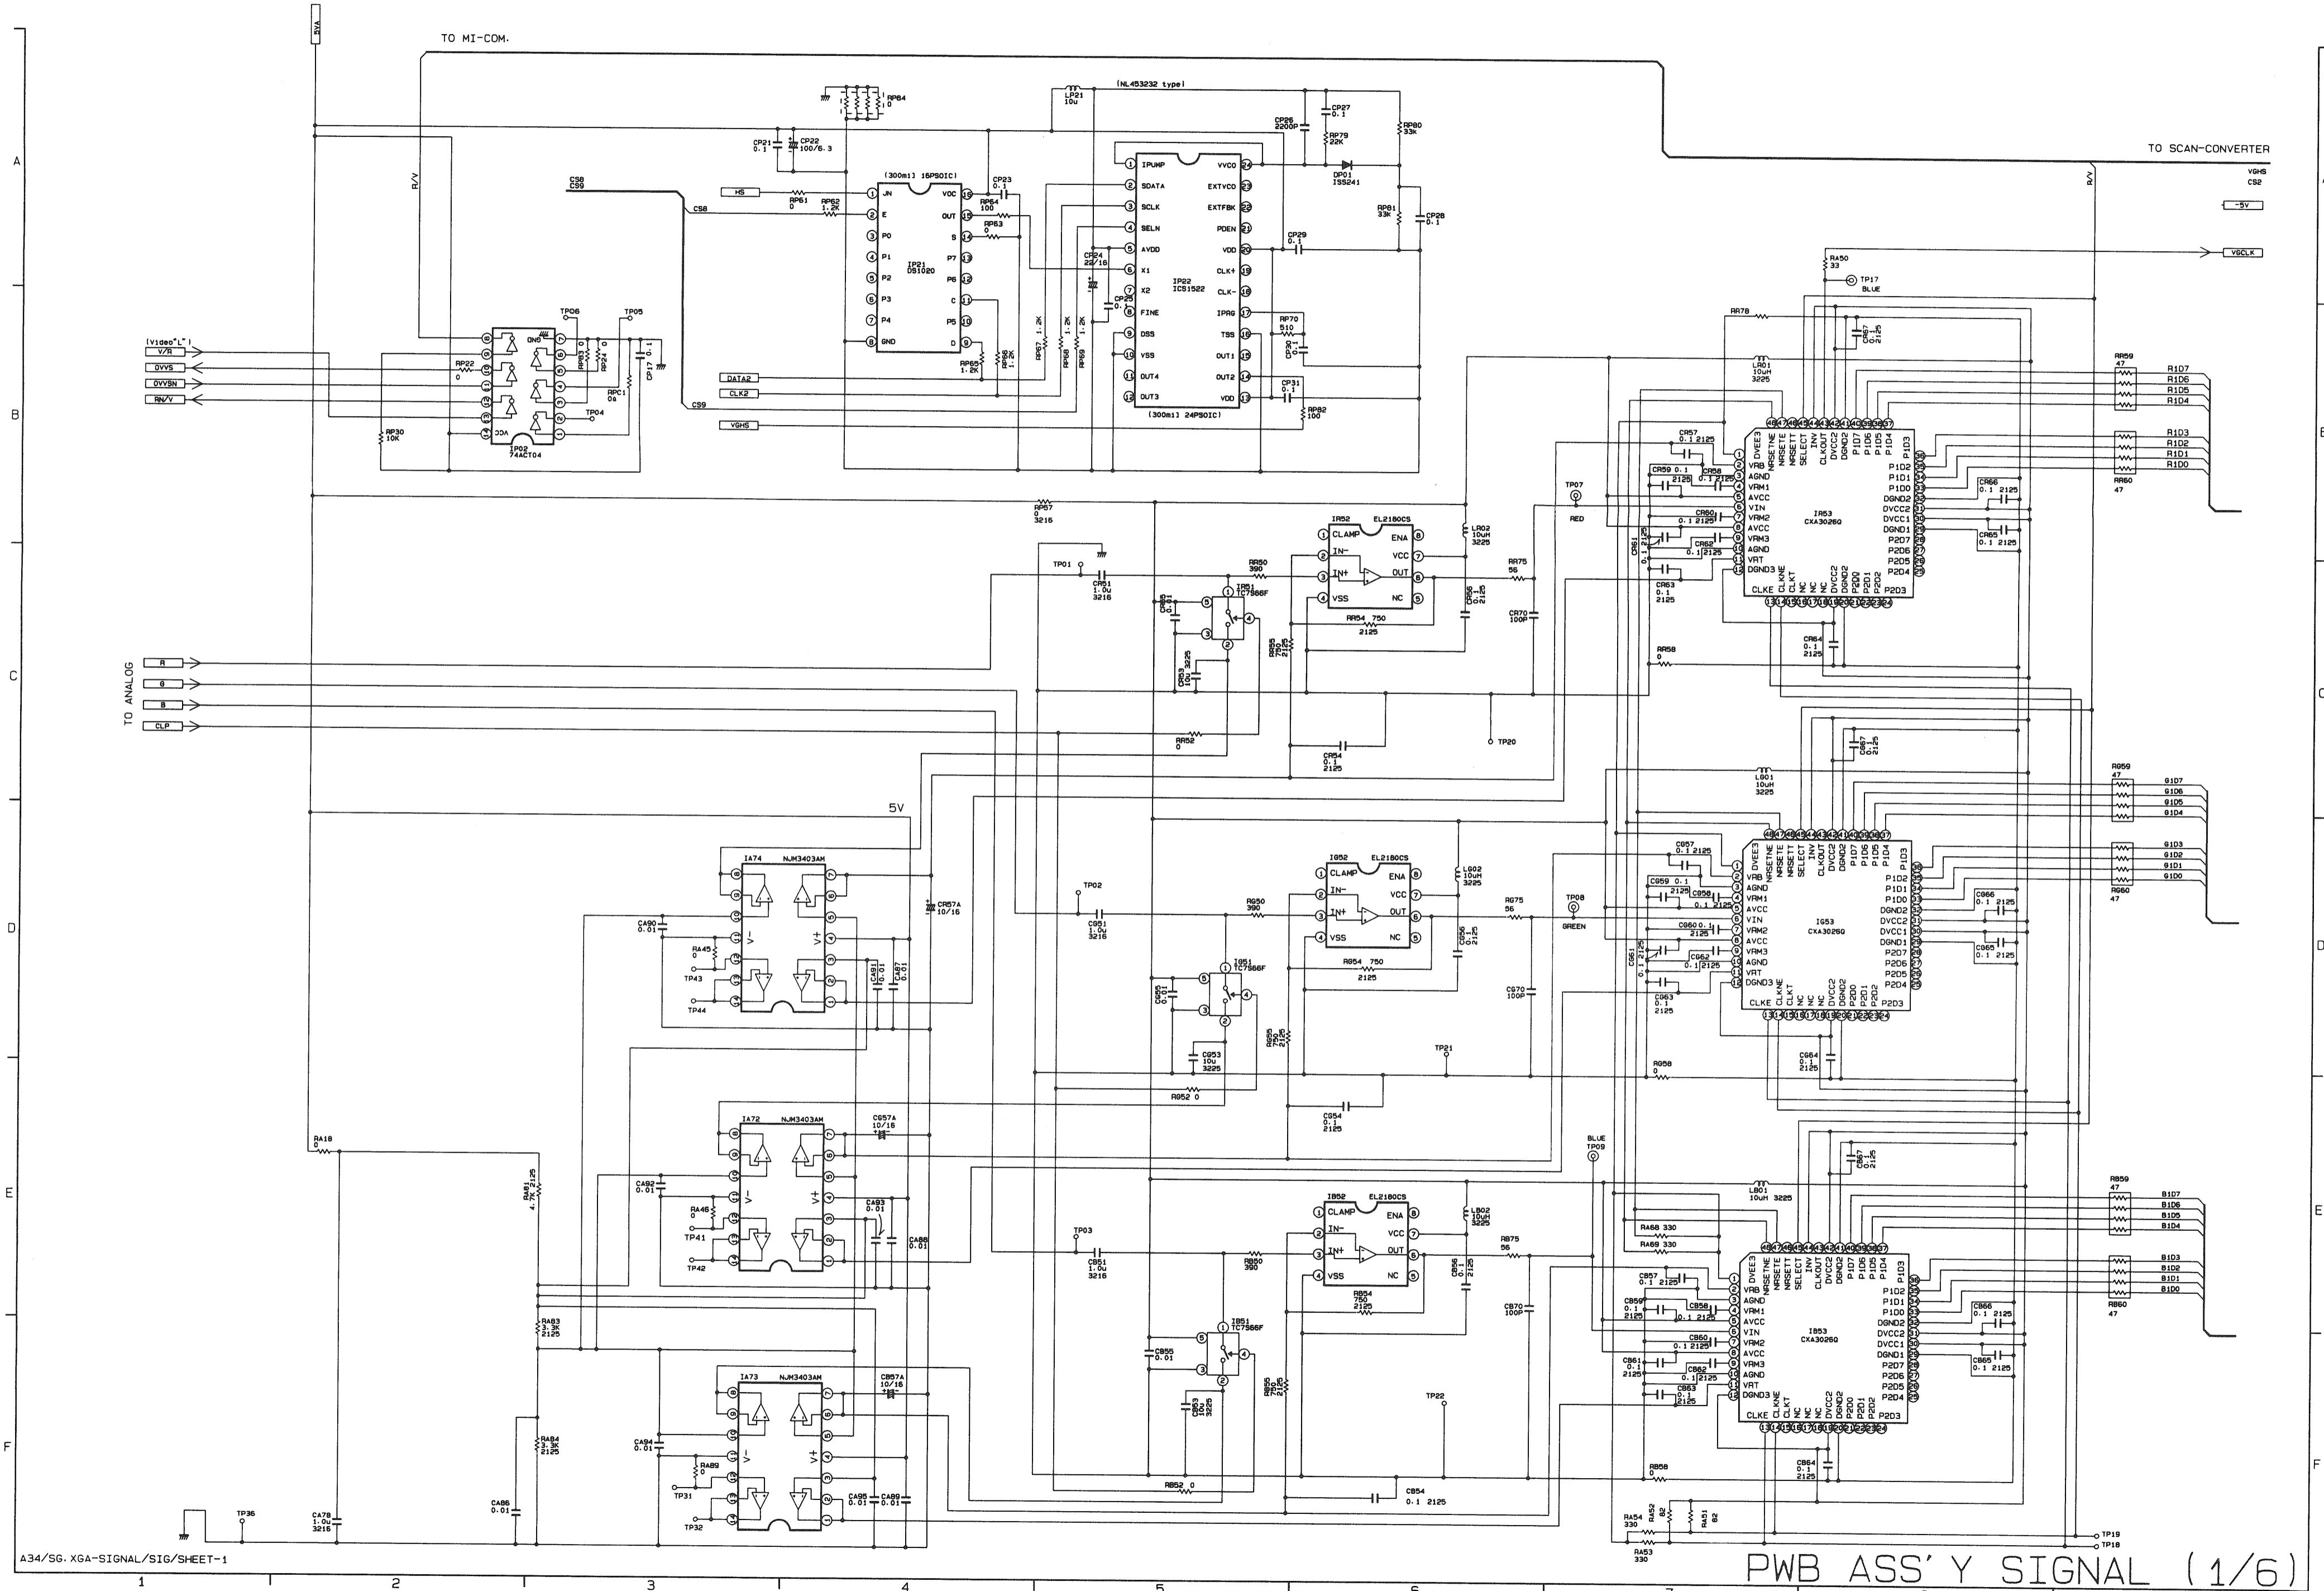


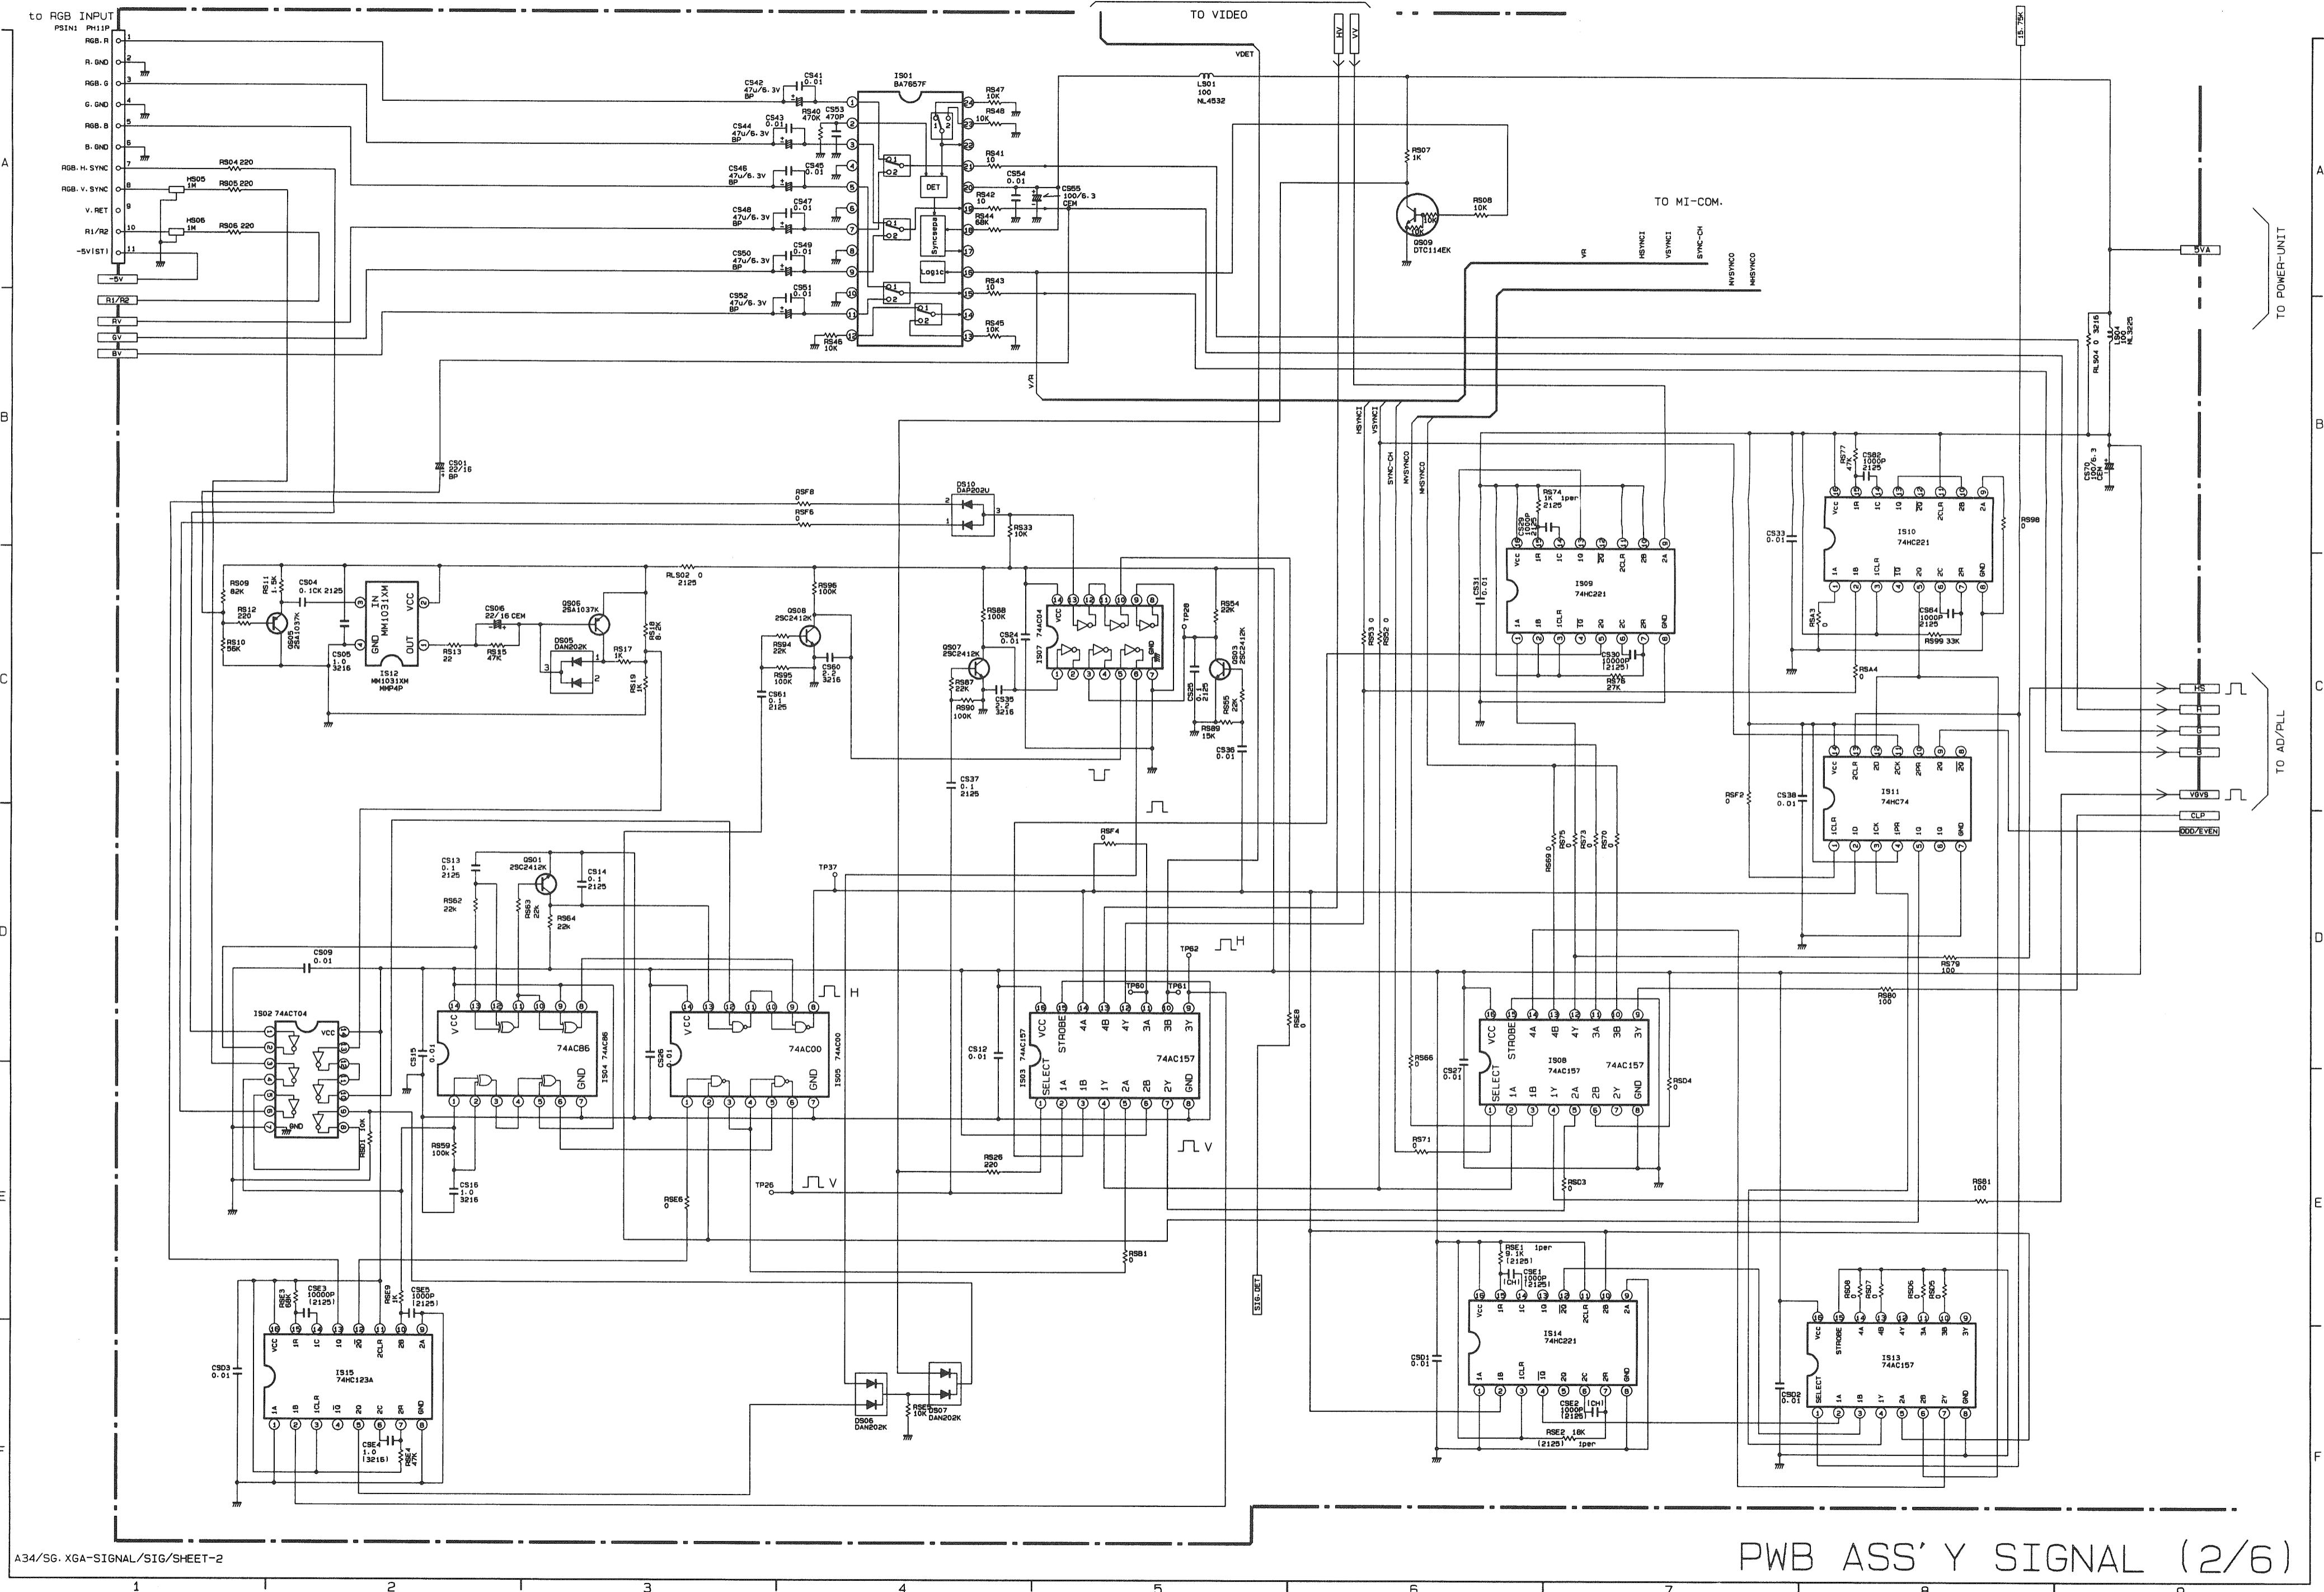

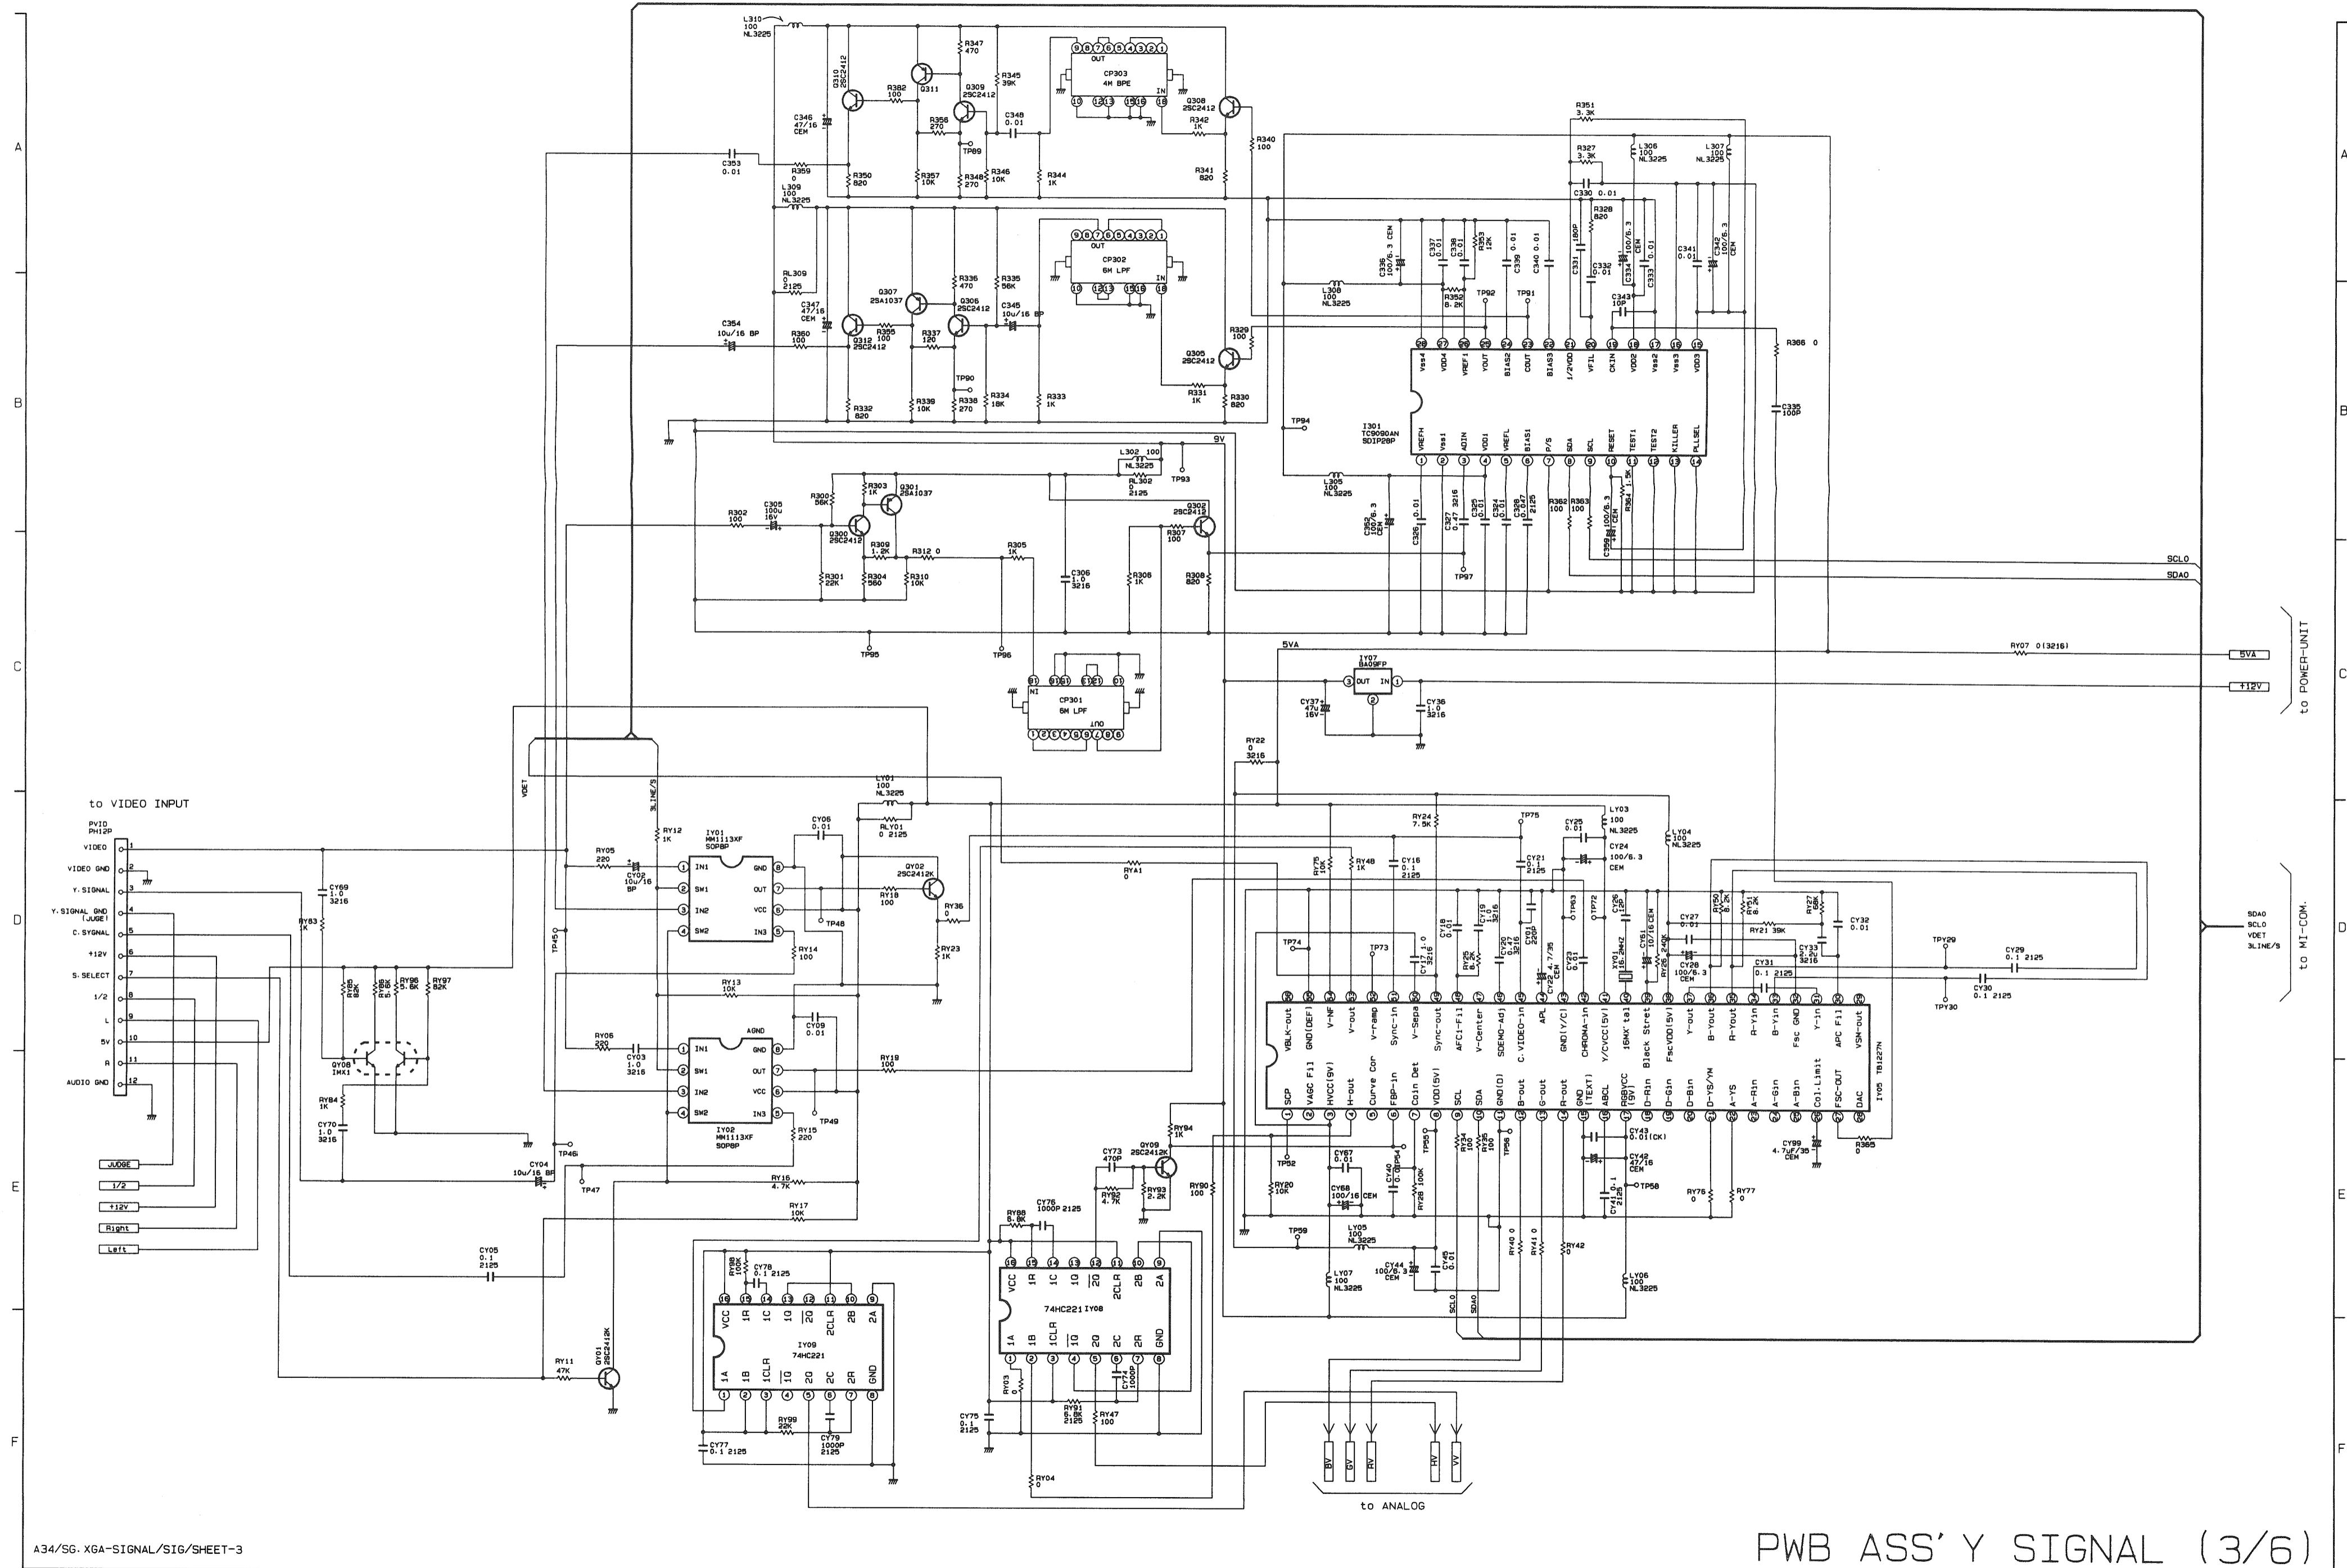


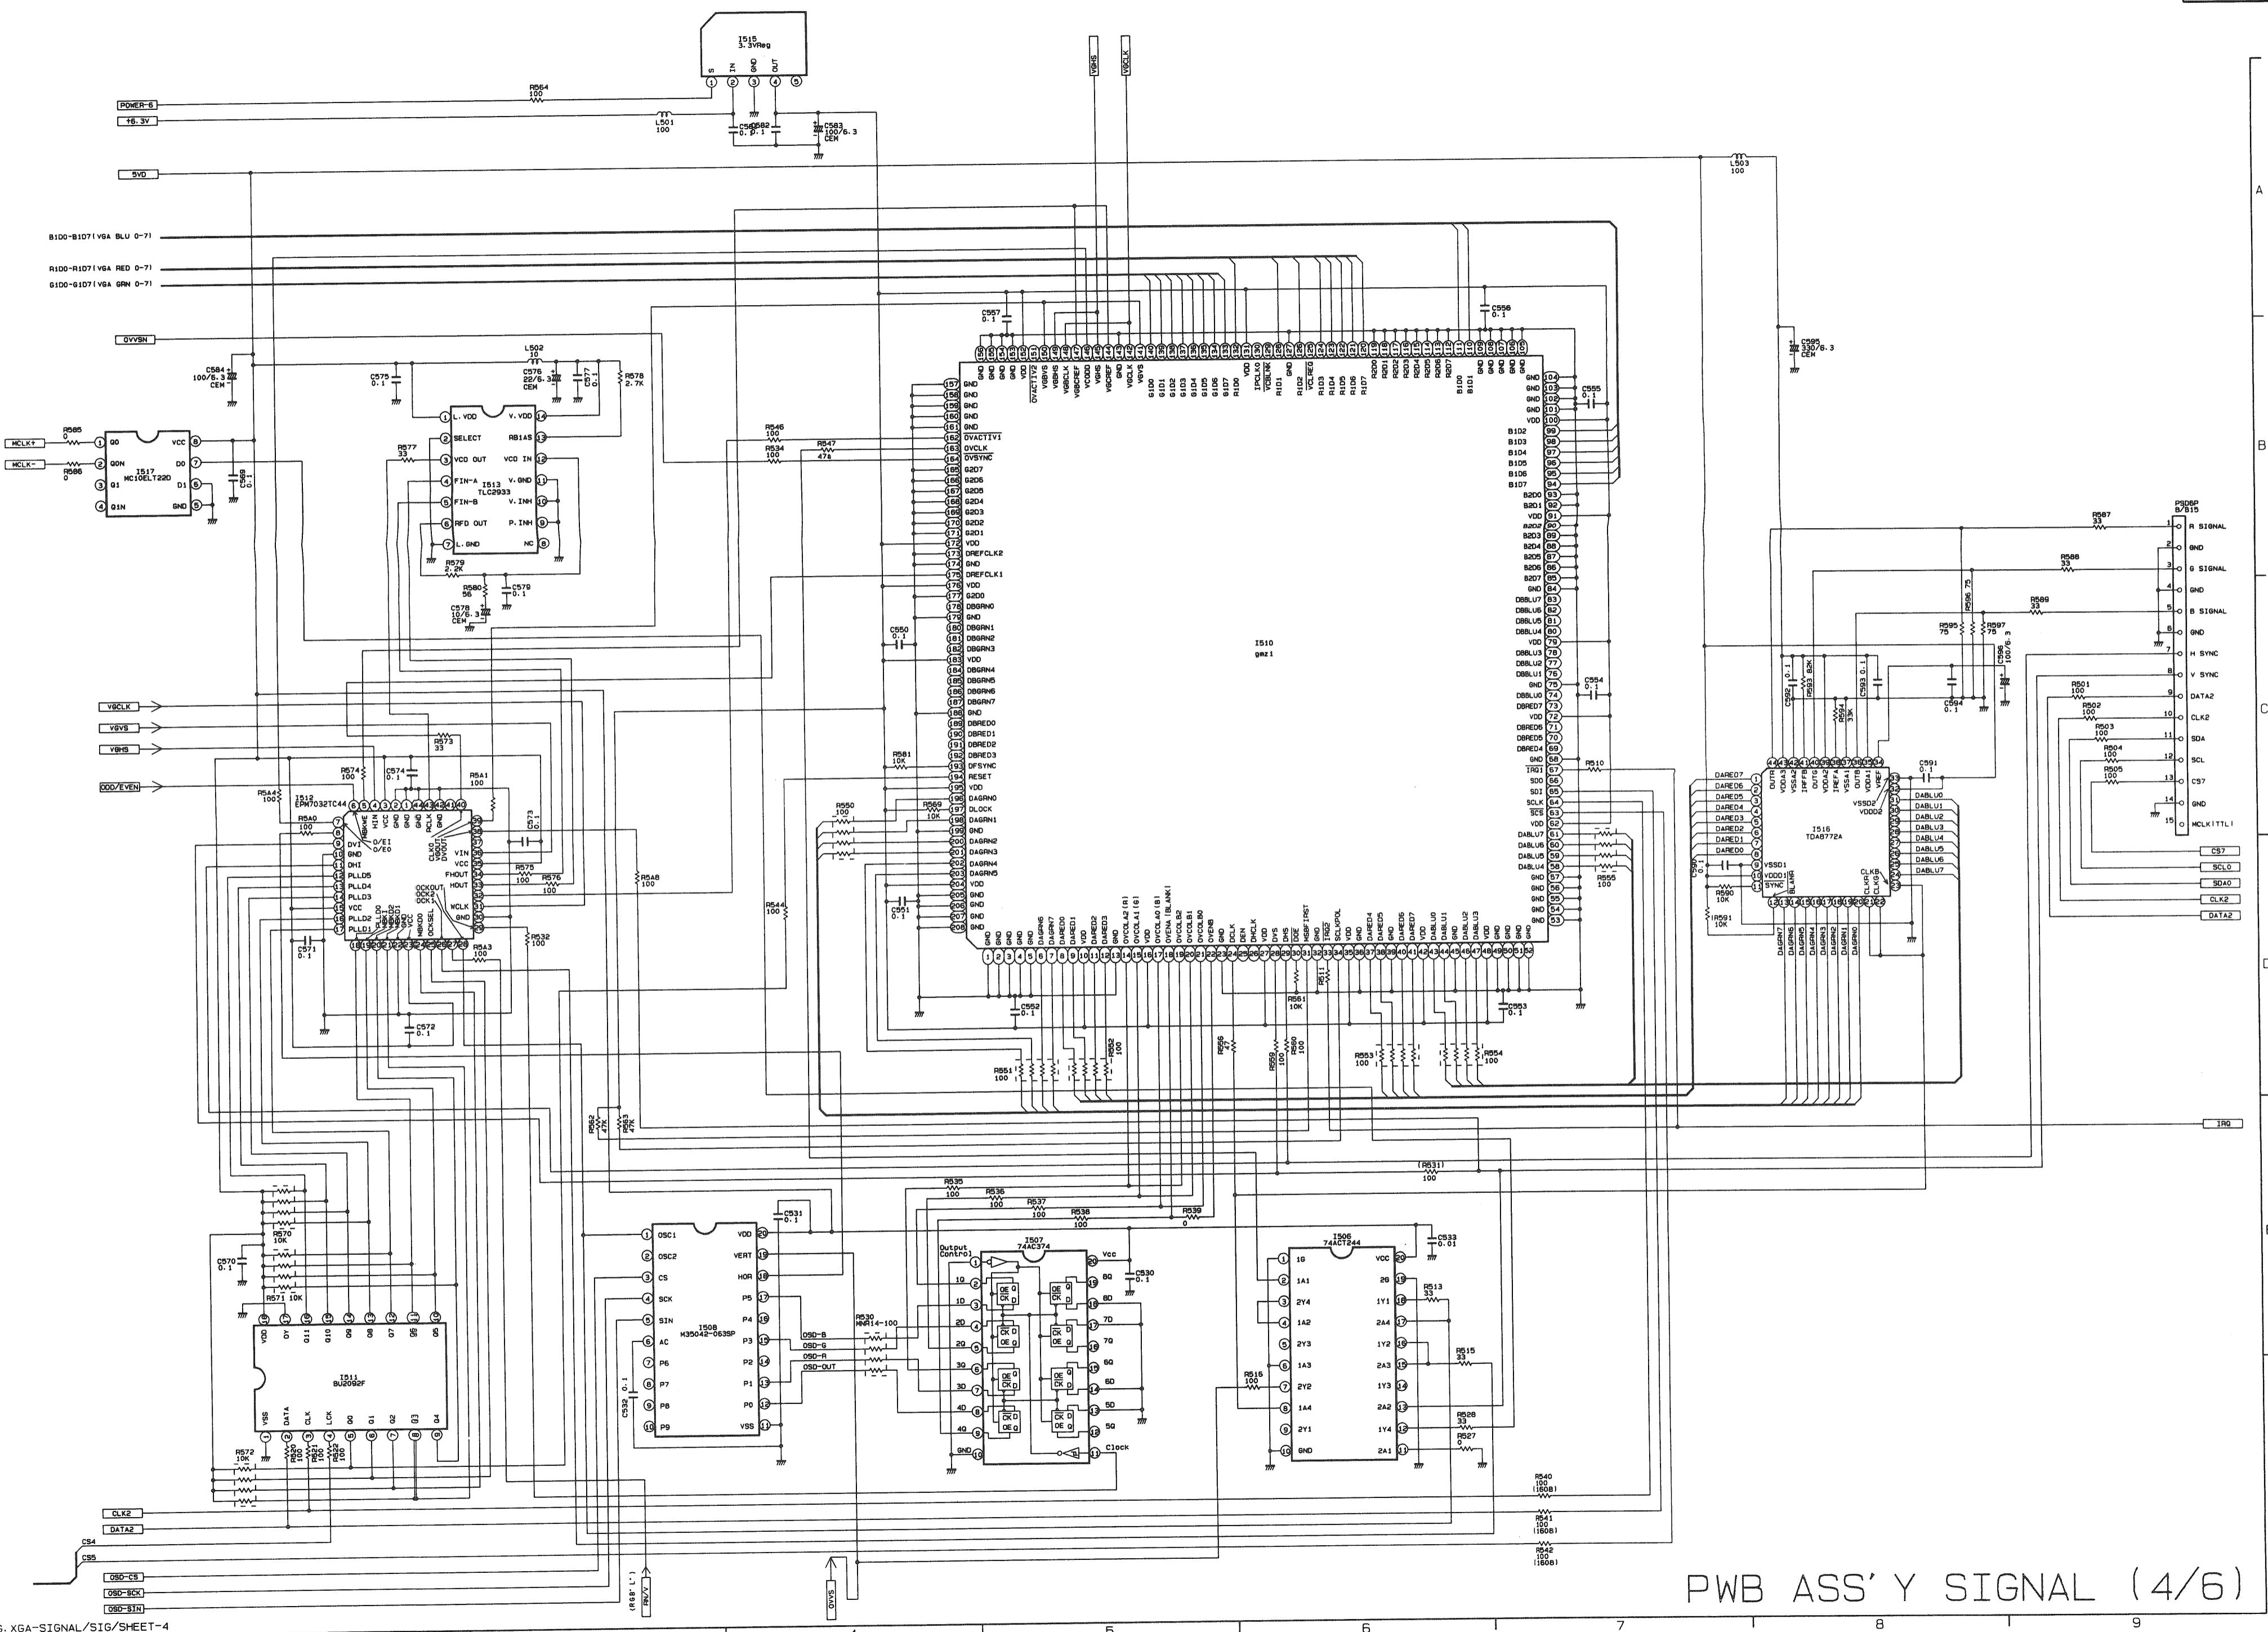


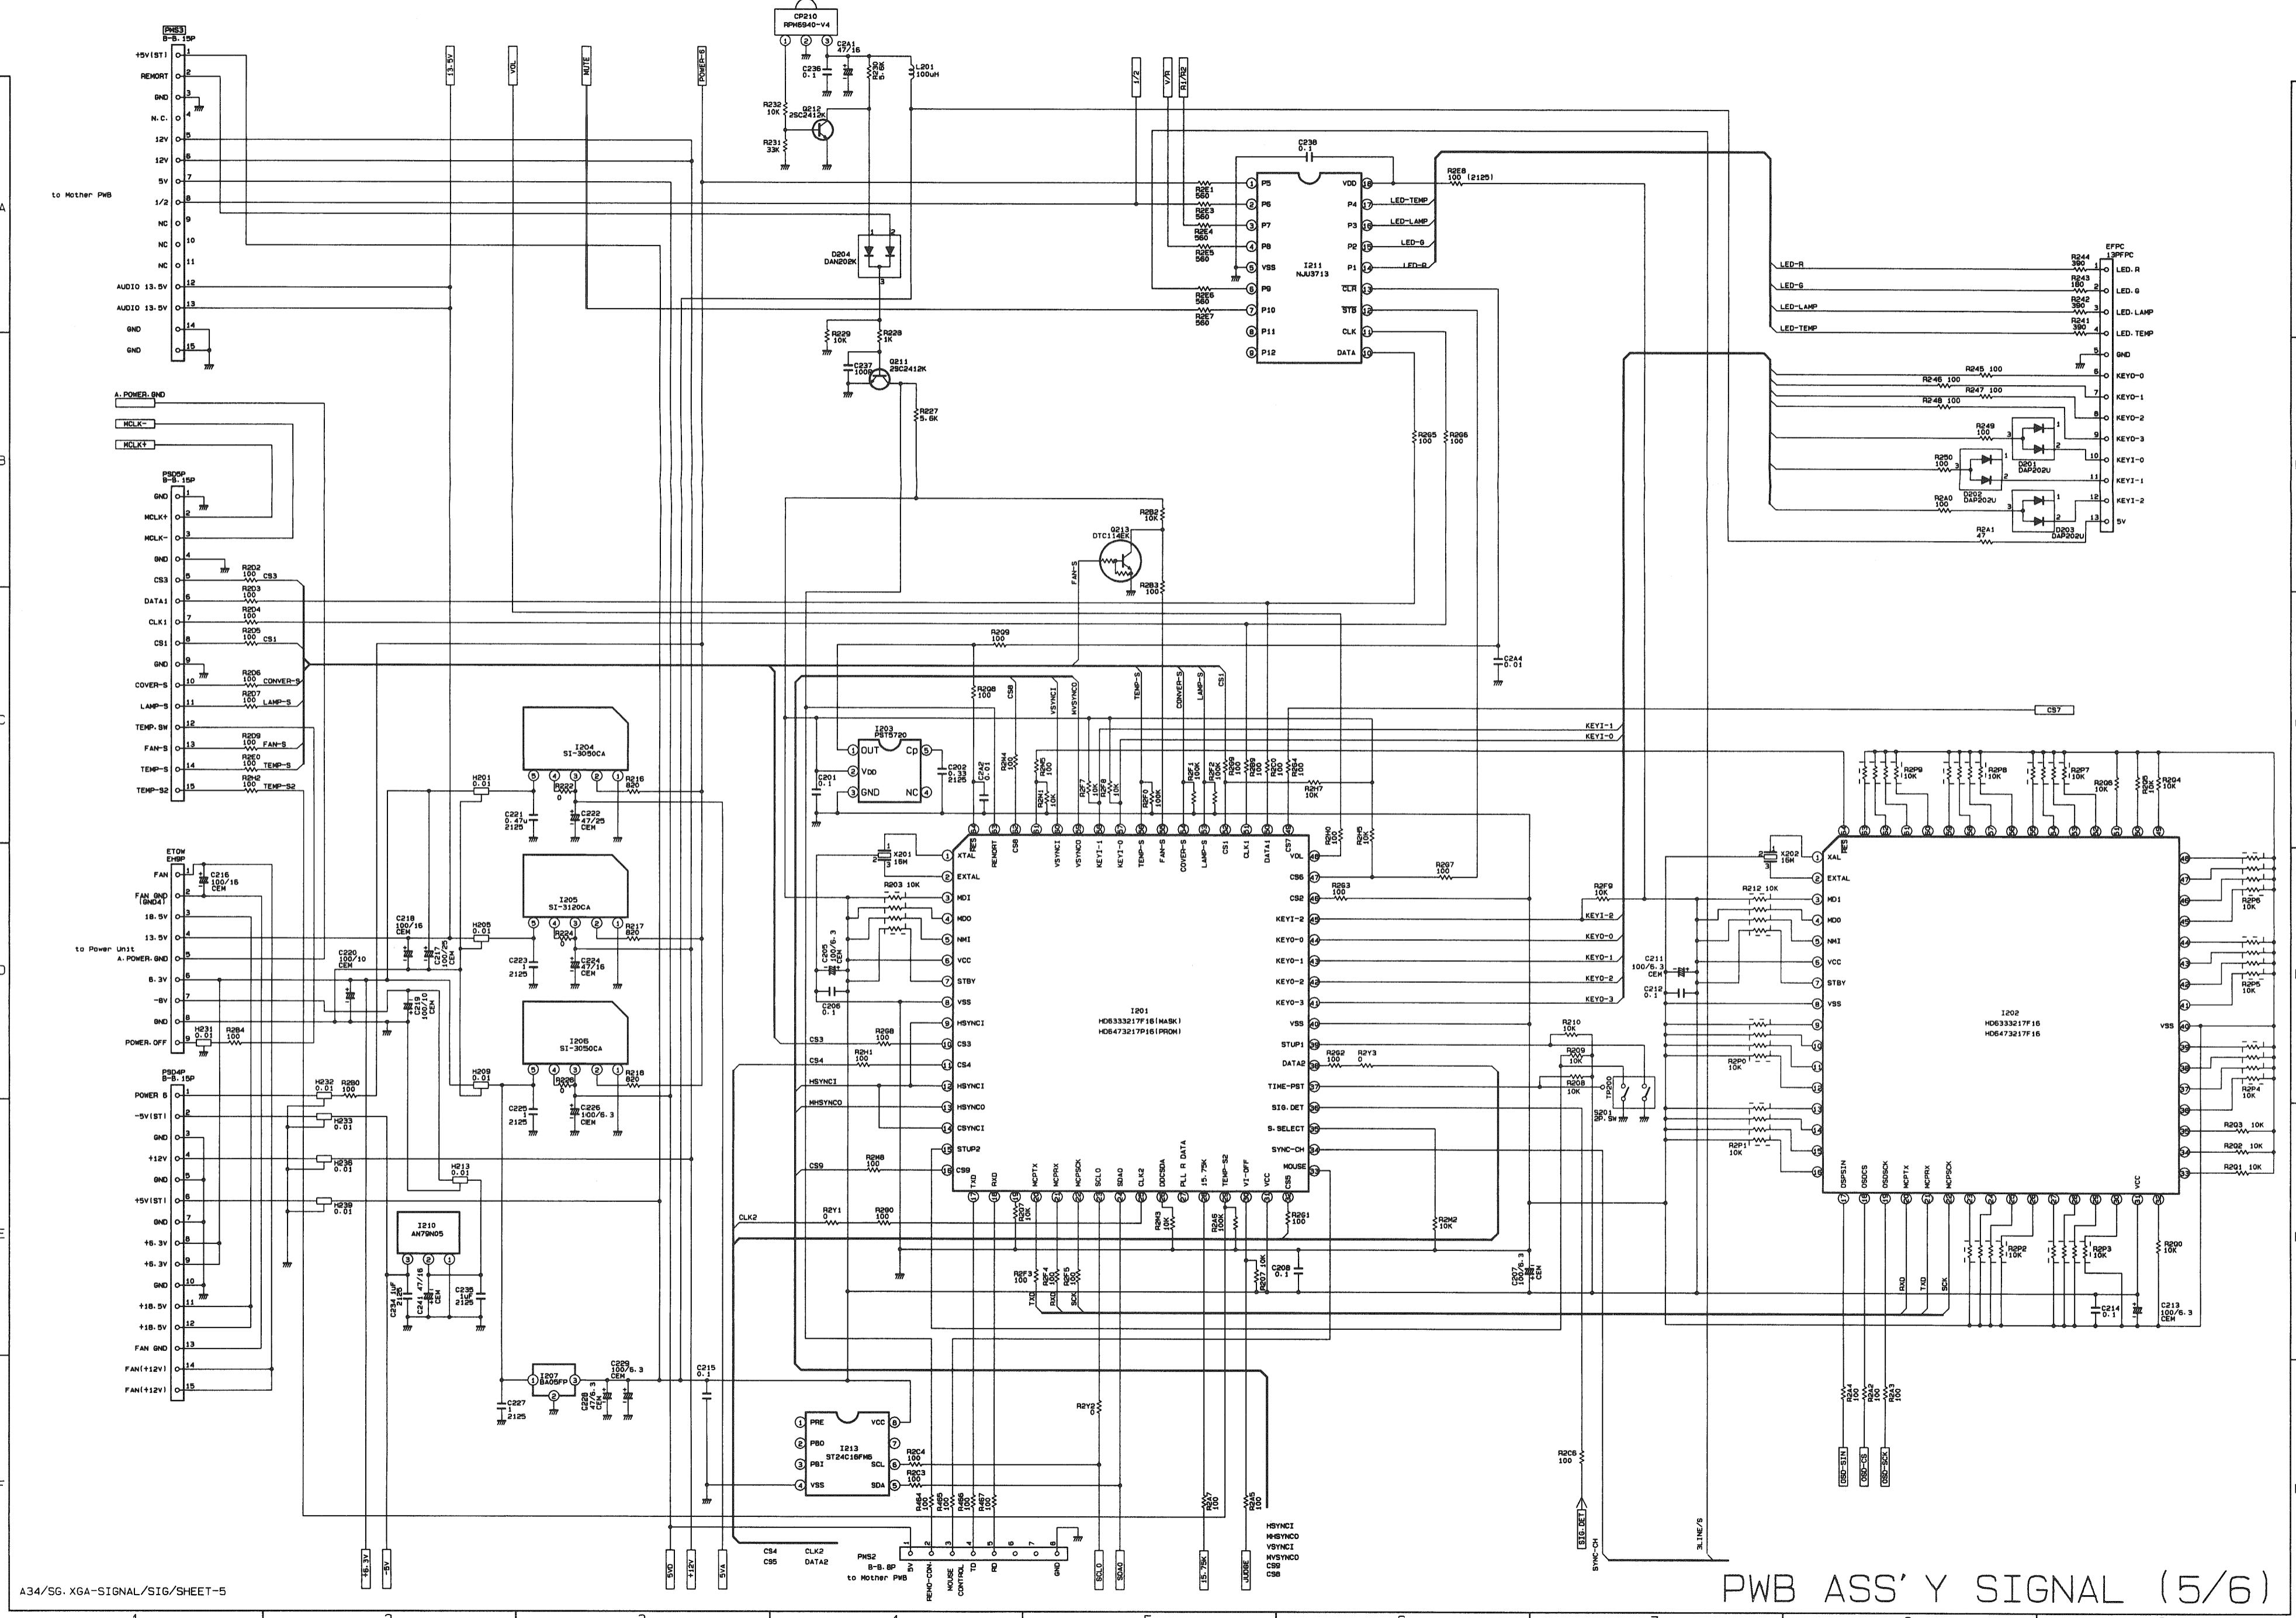


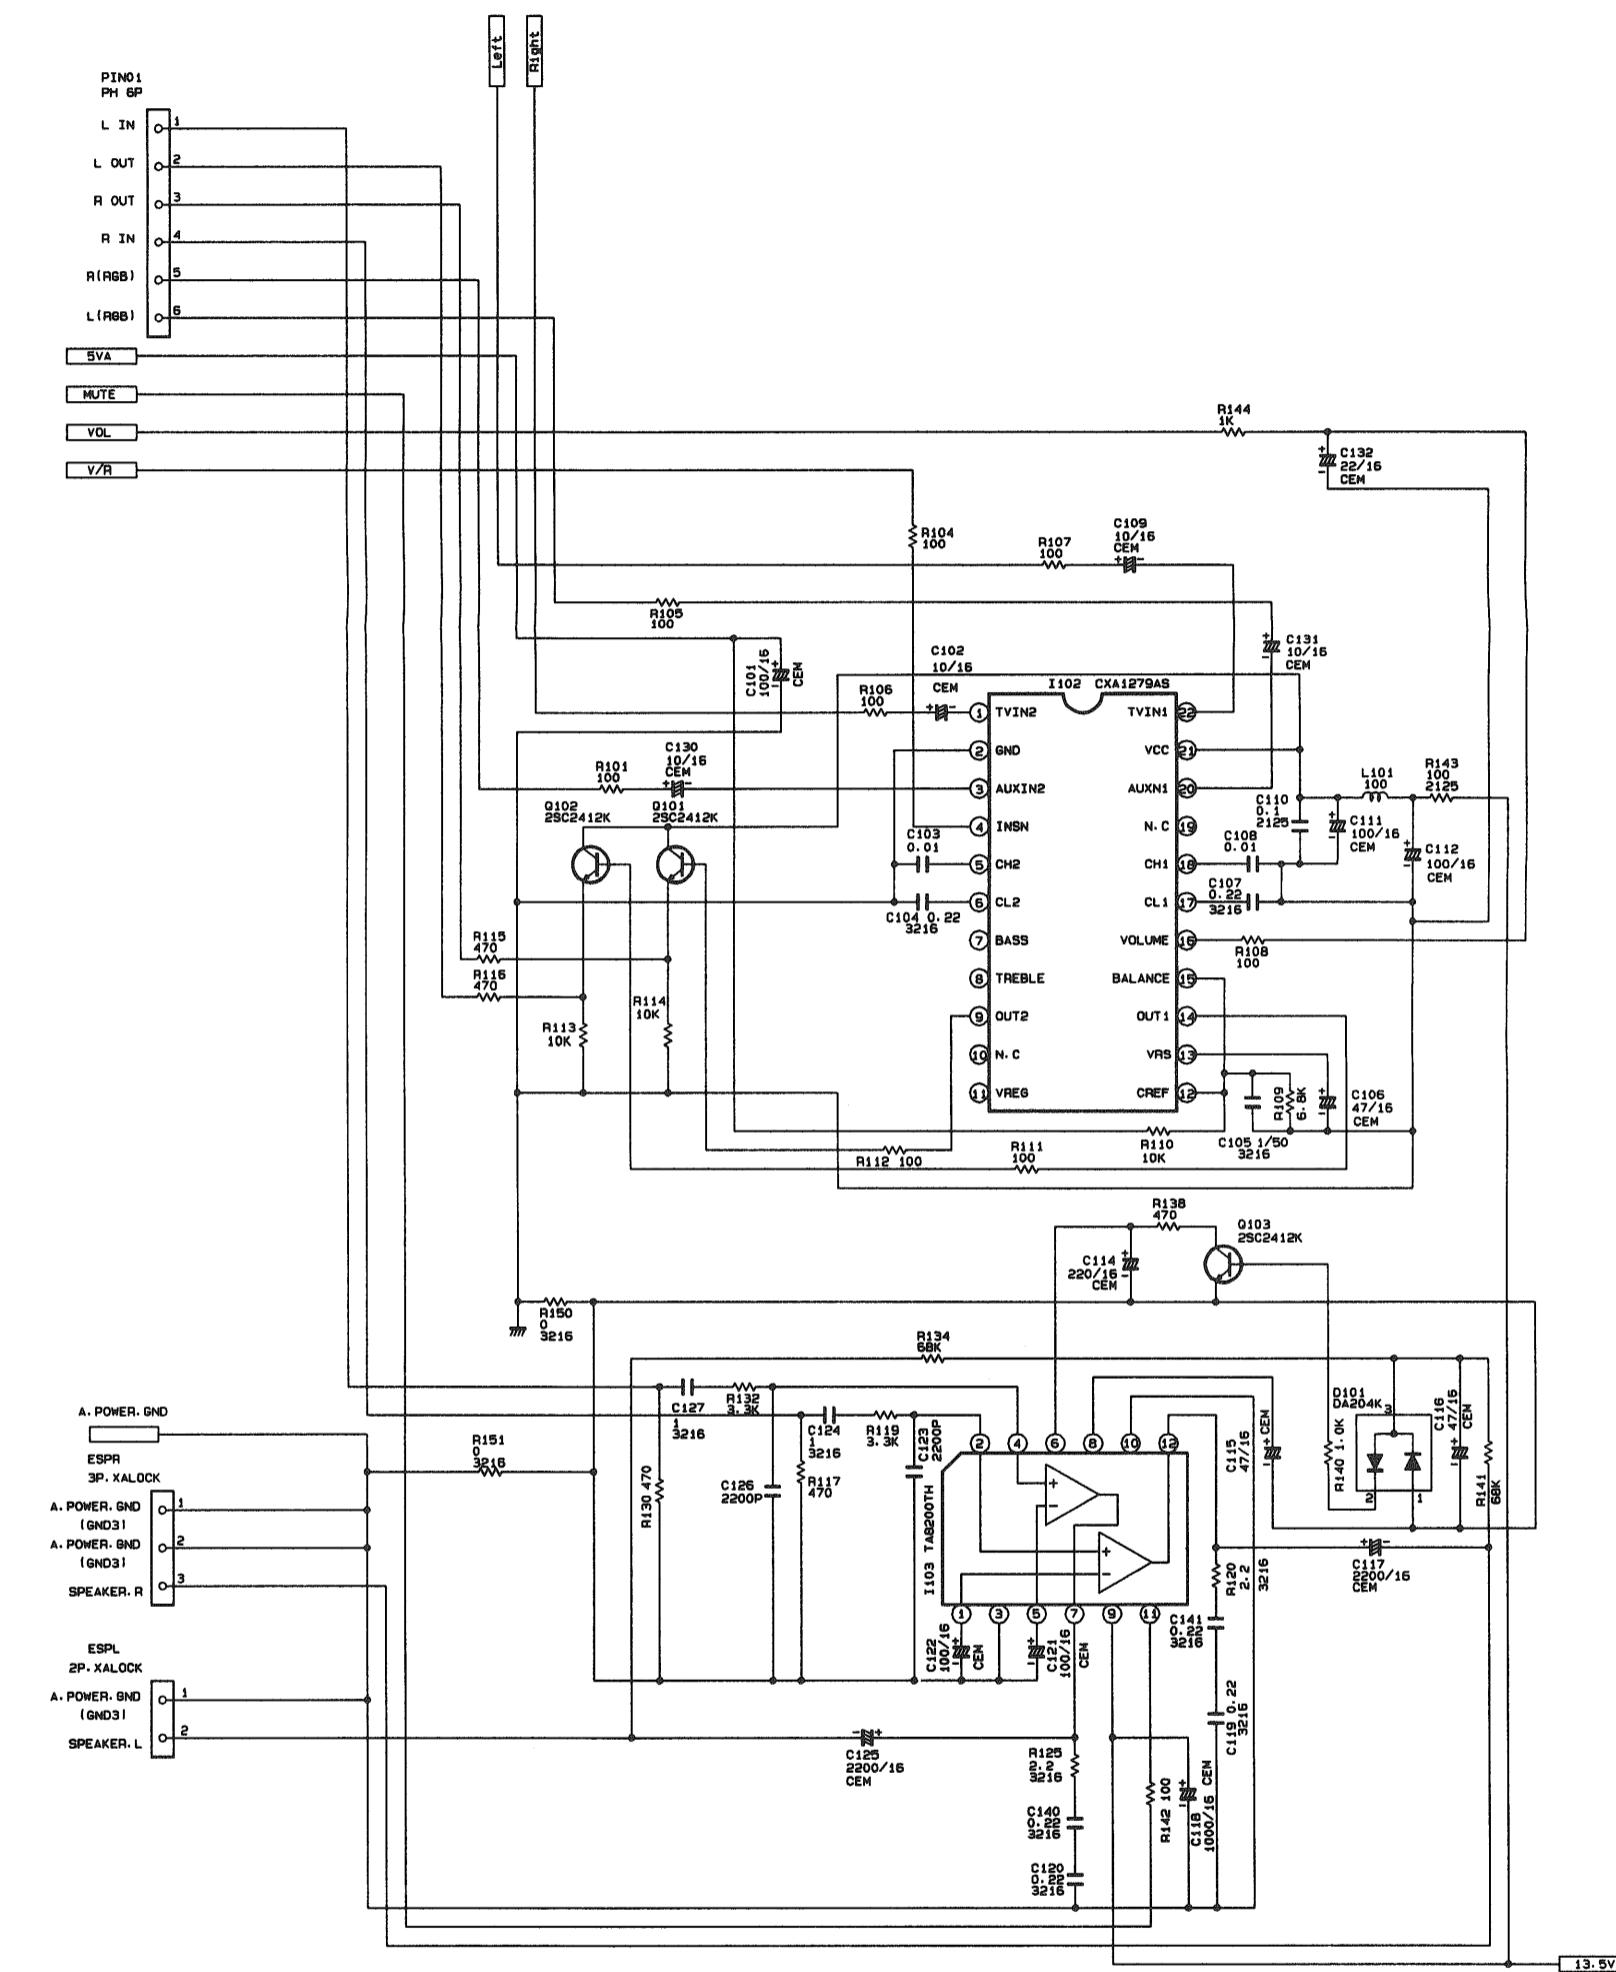


PWB ASS' Y SIGNAL (6/6)

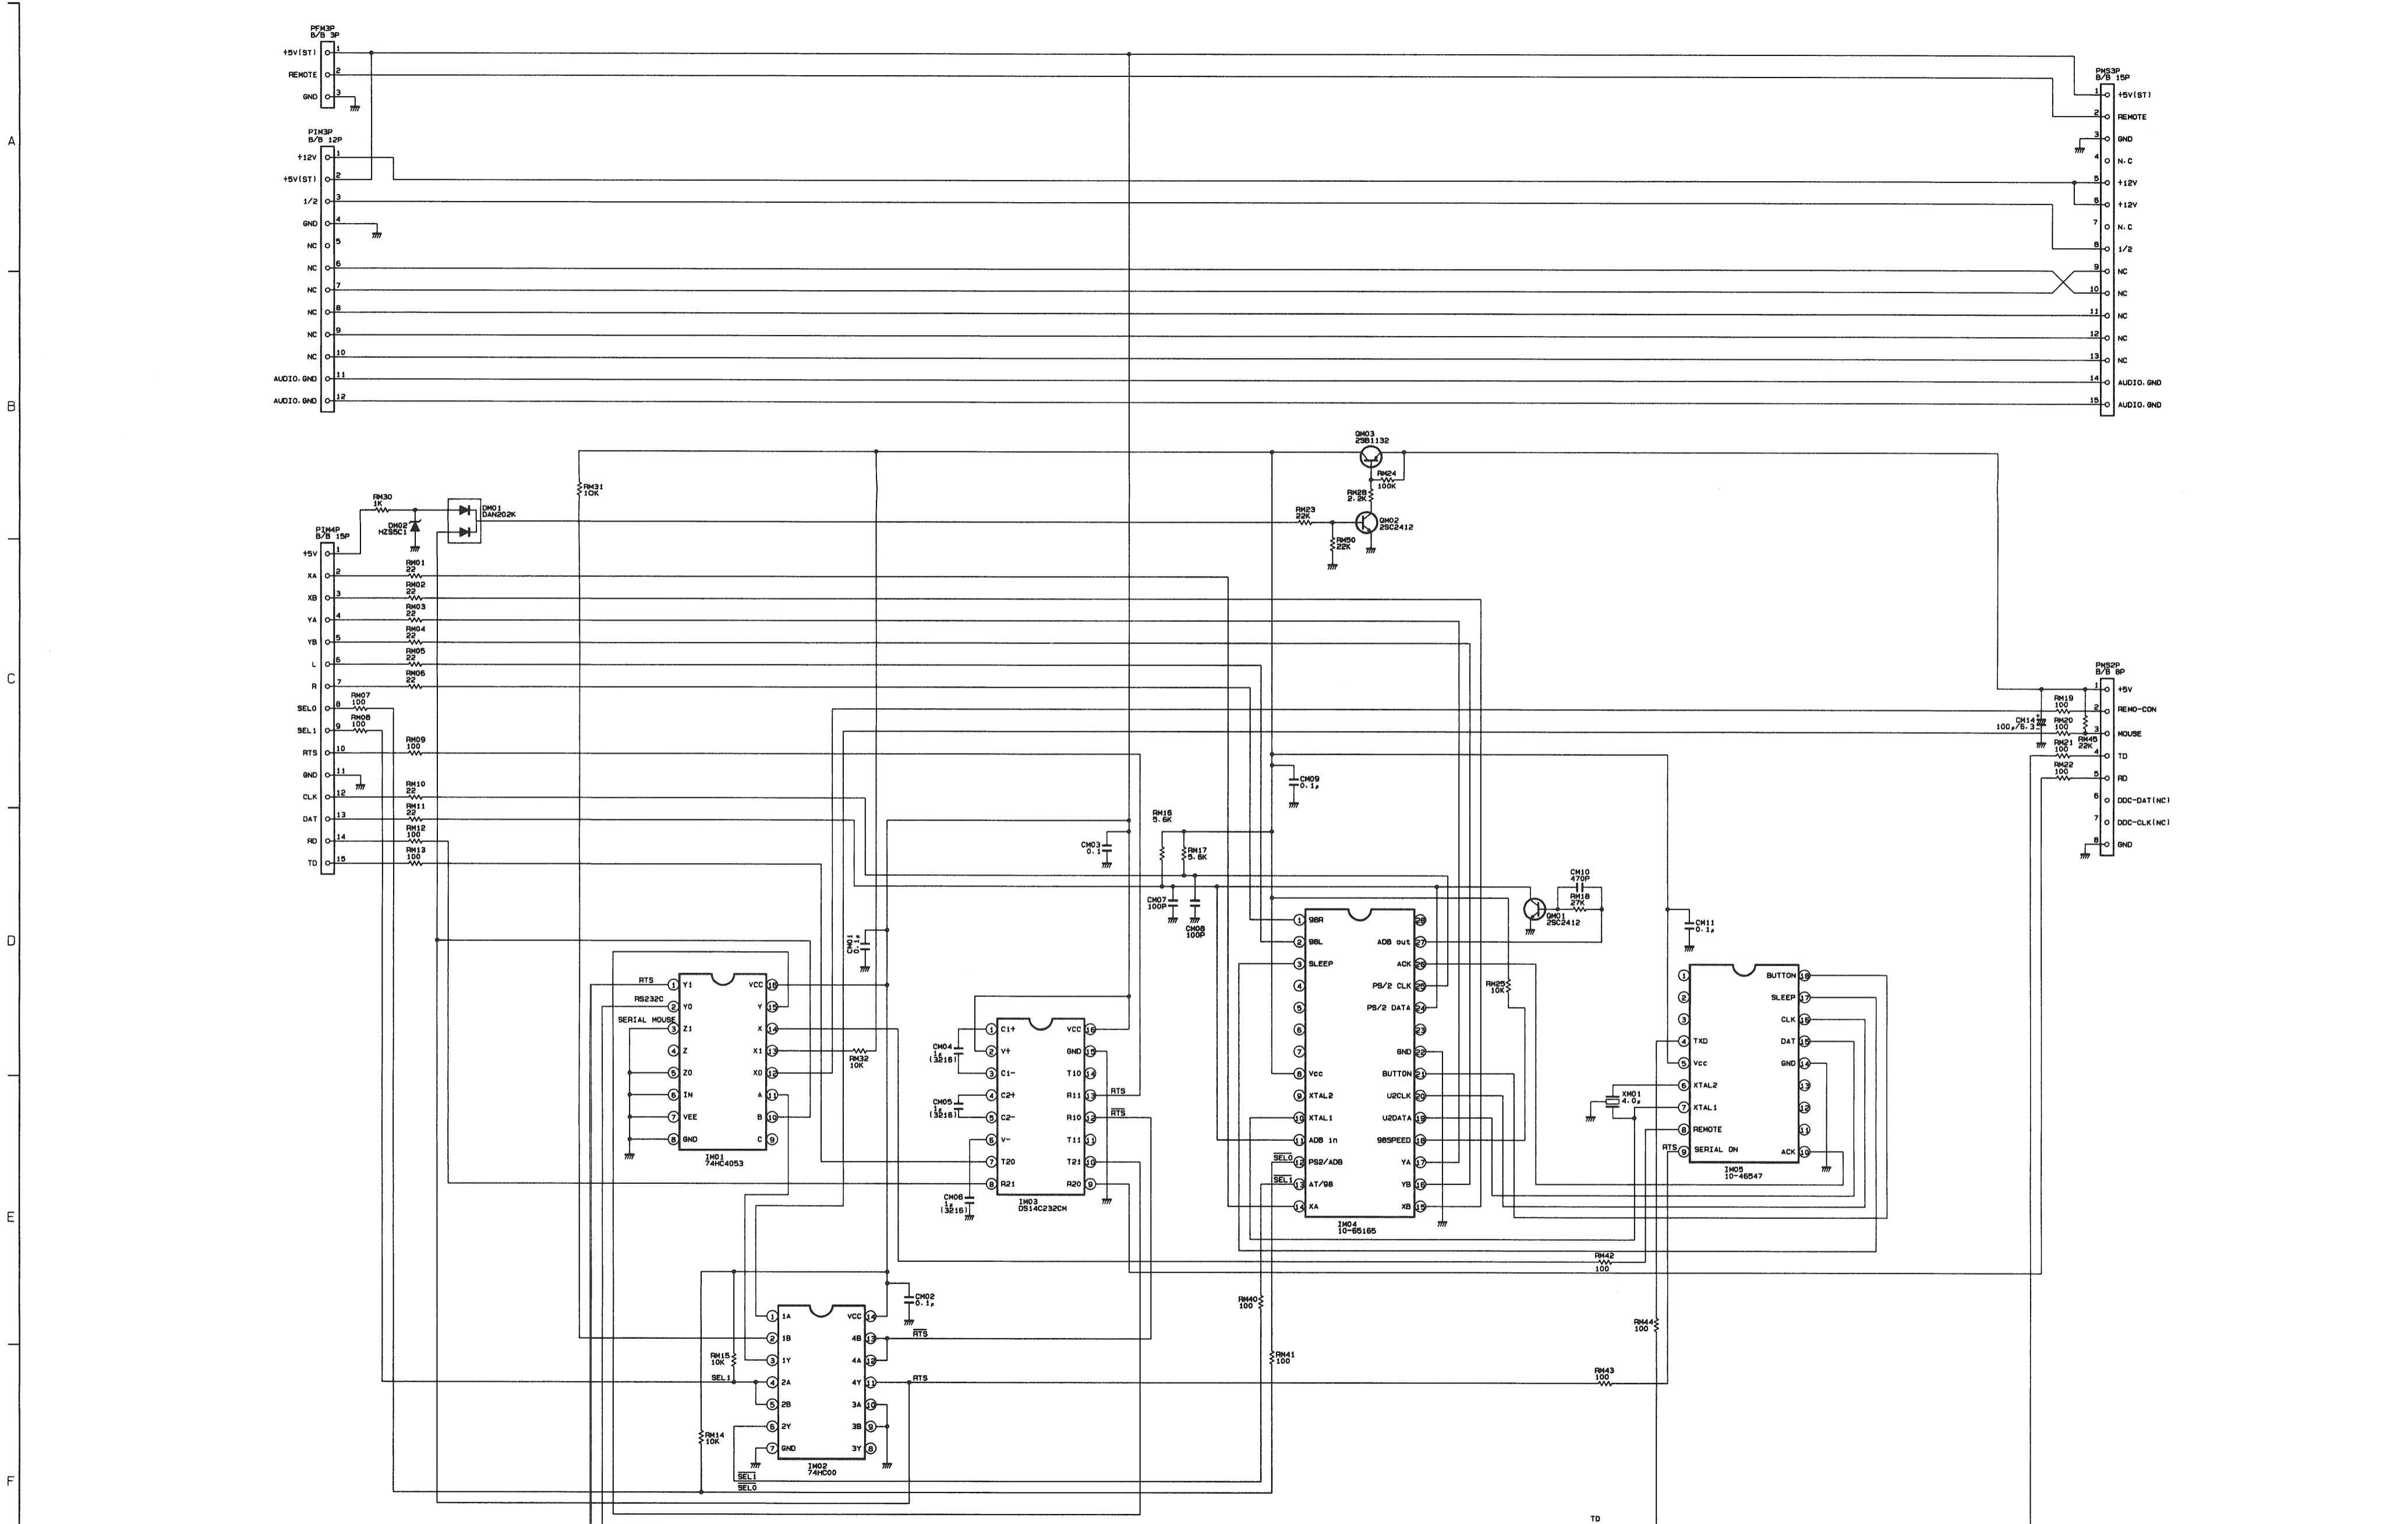


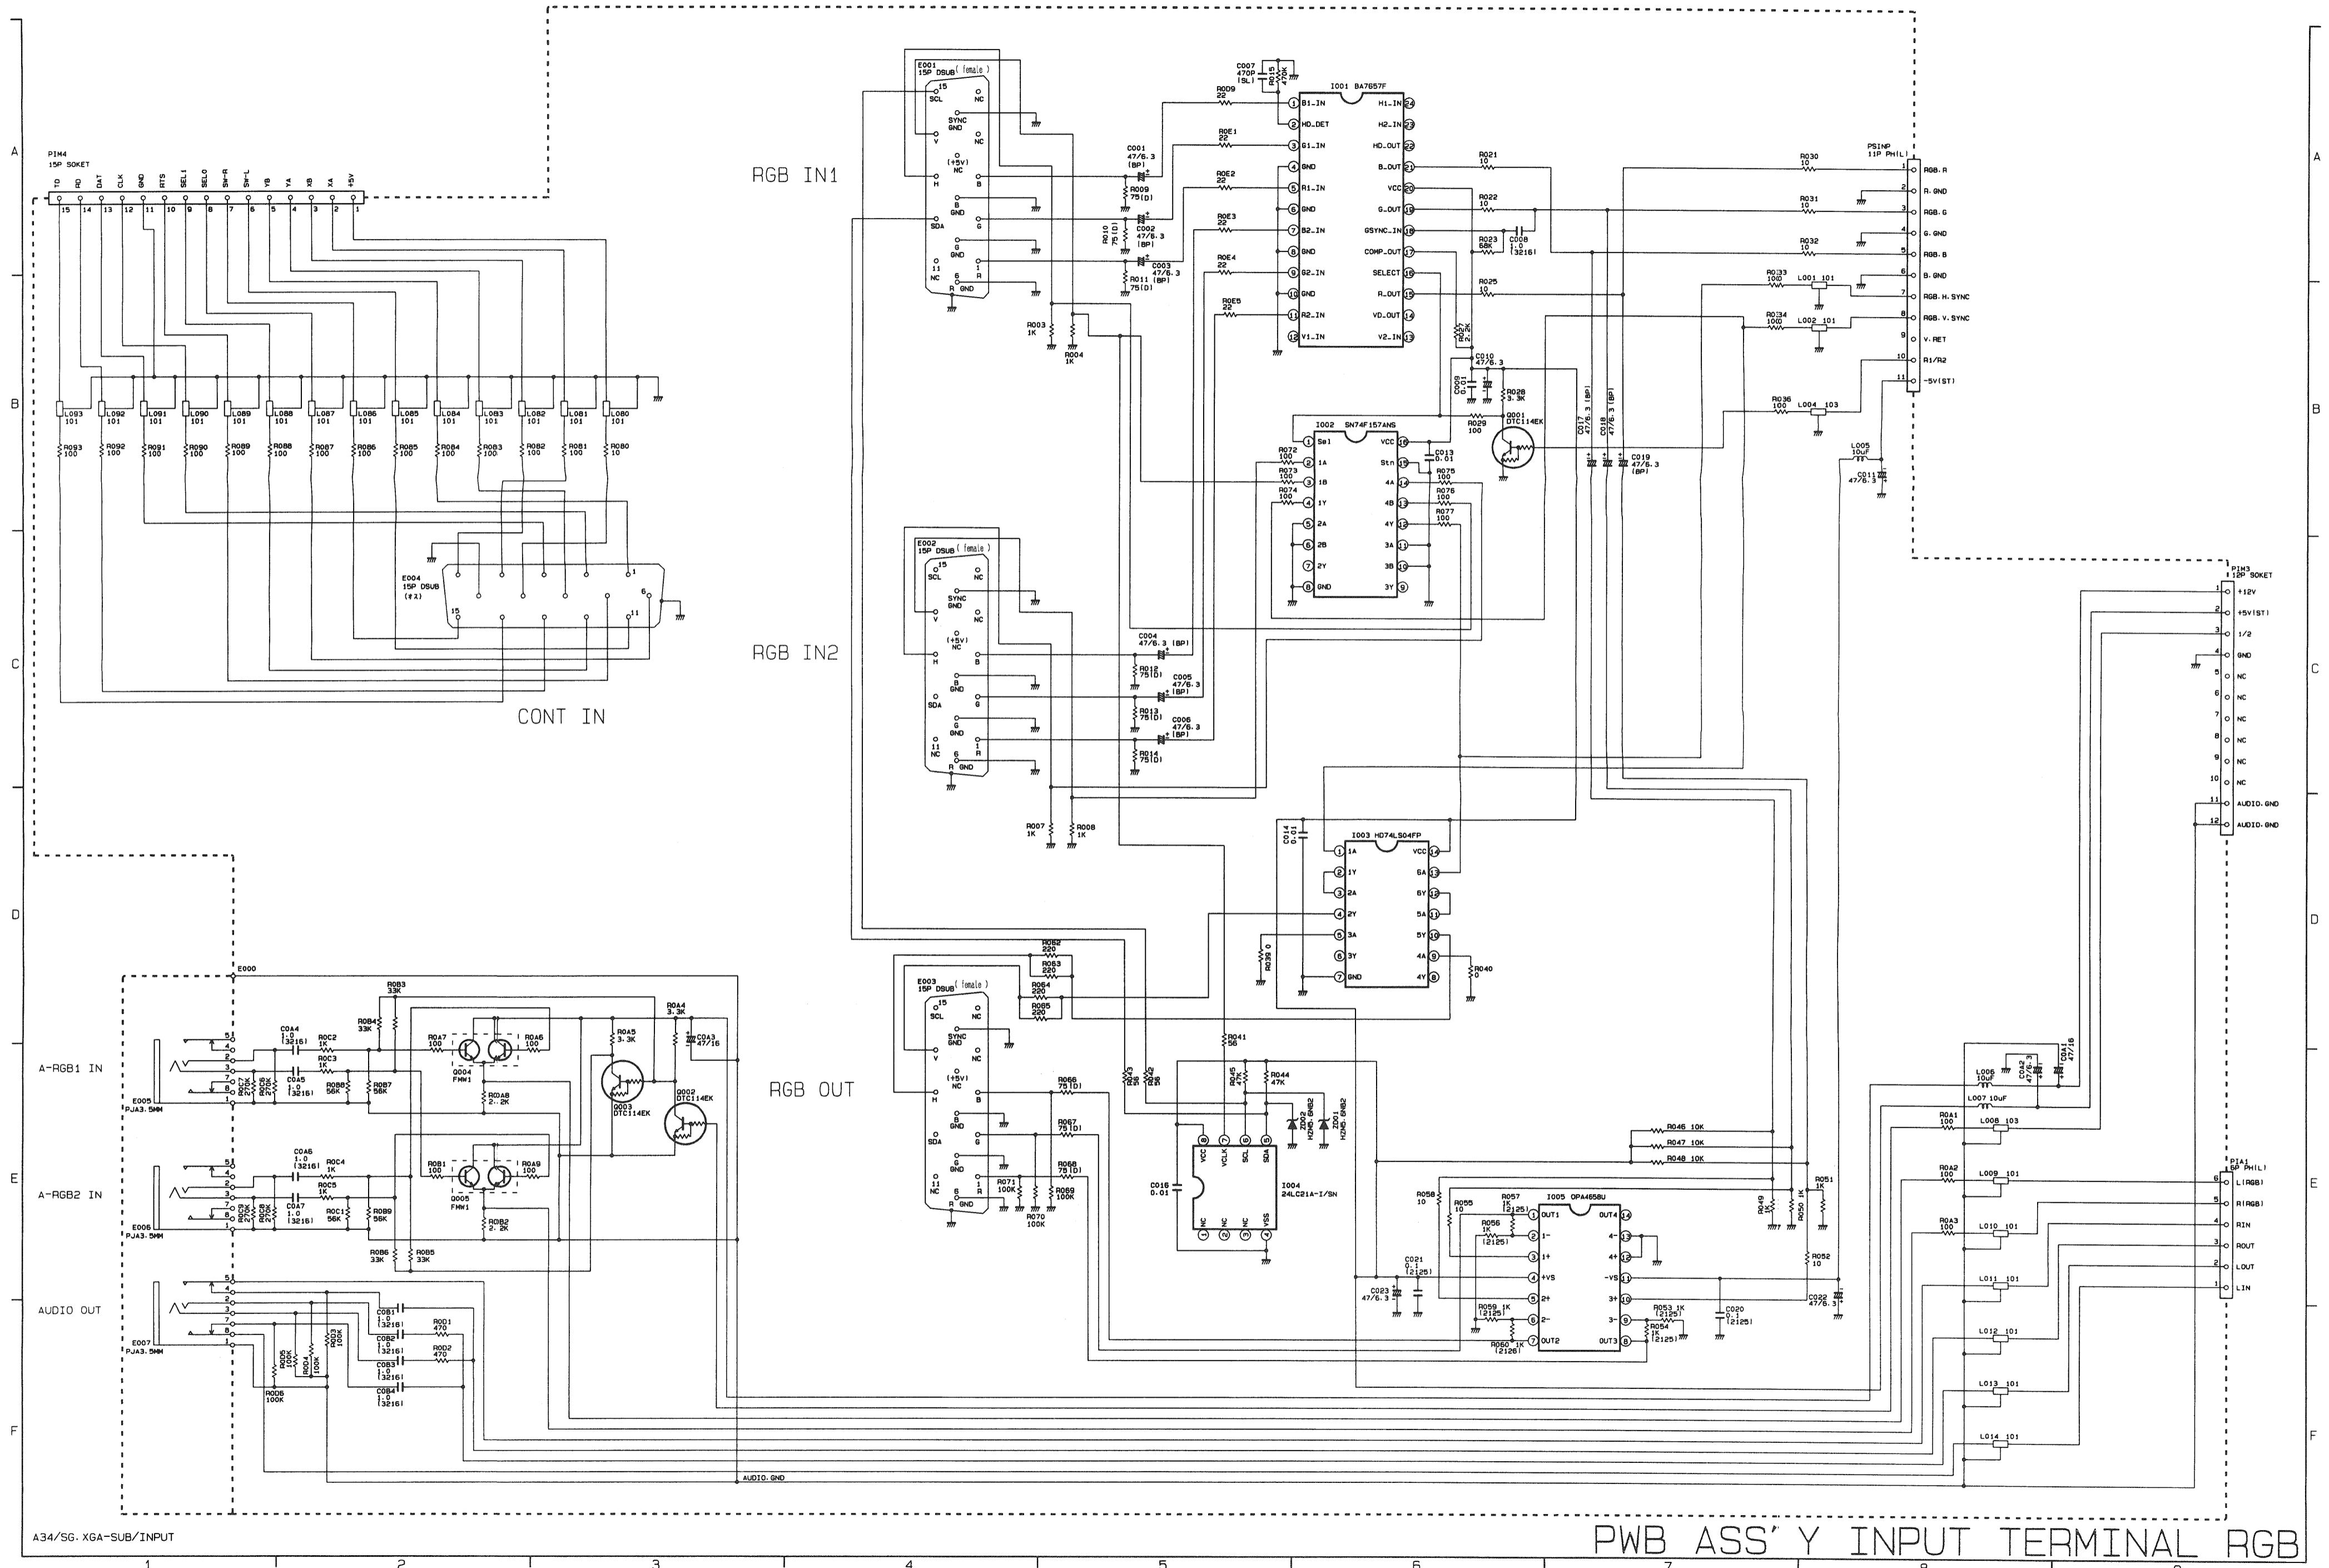

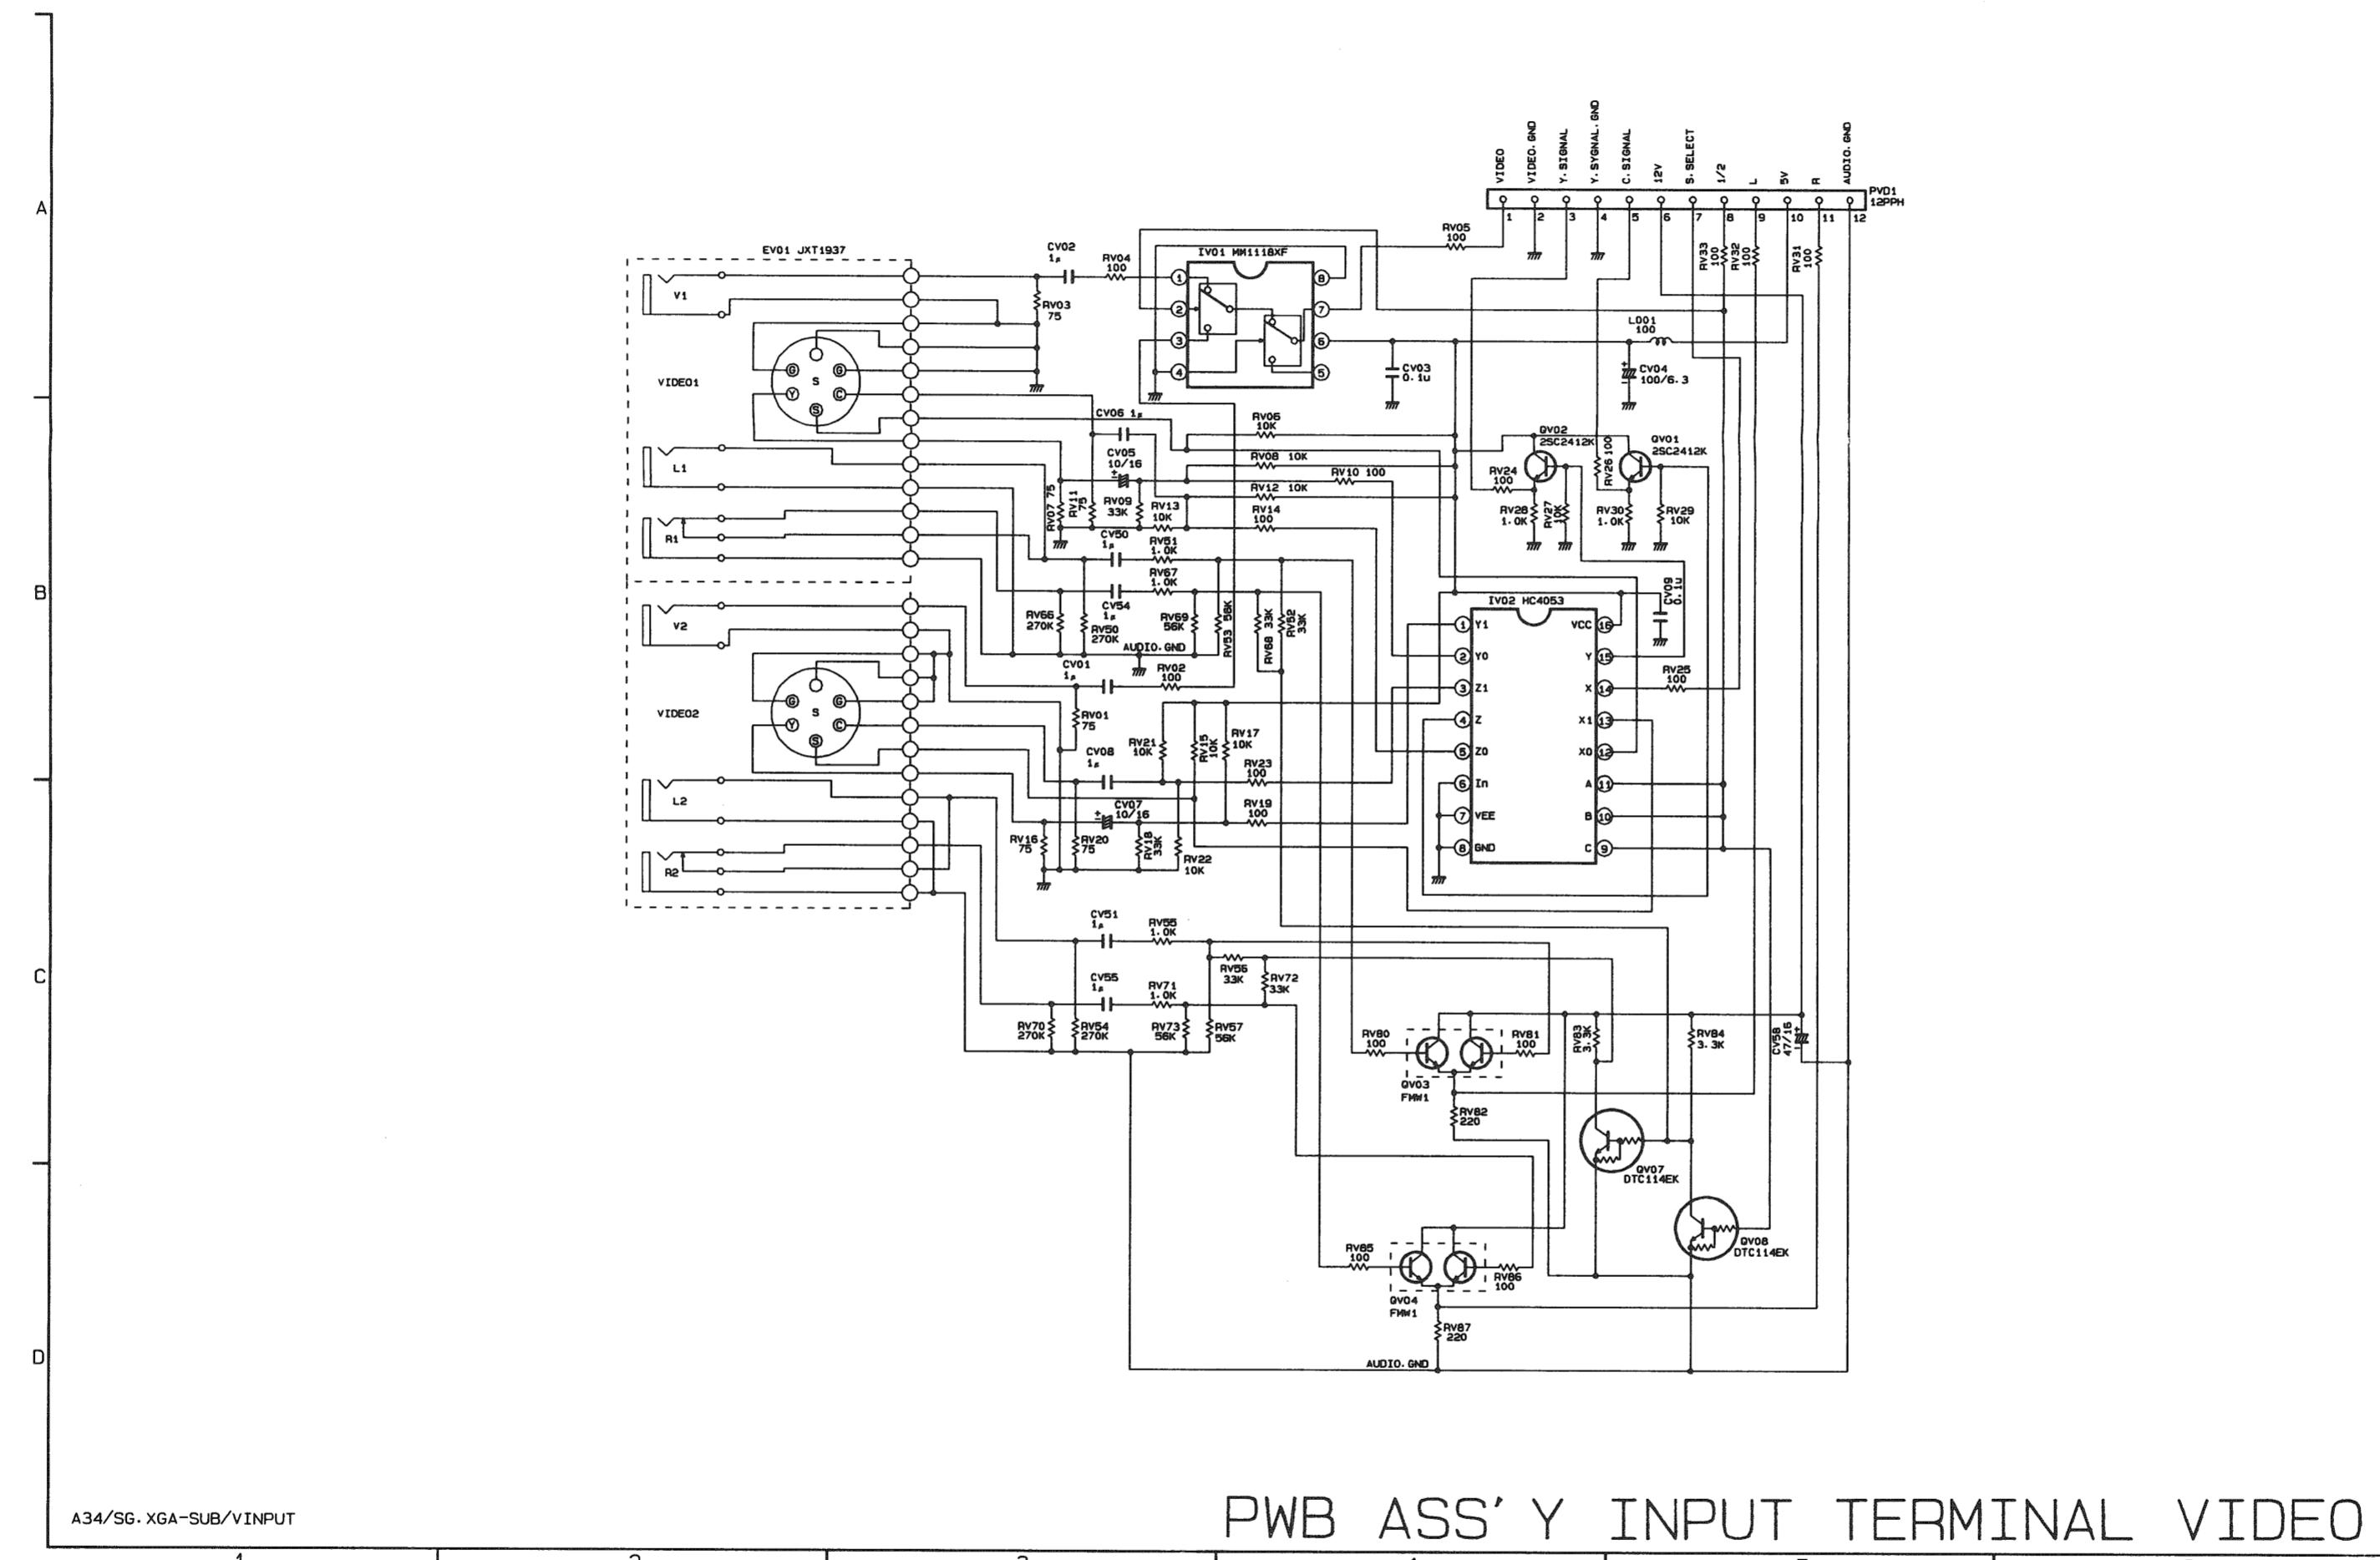


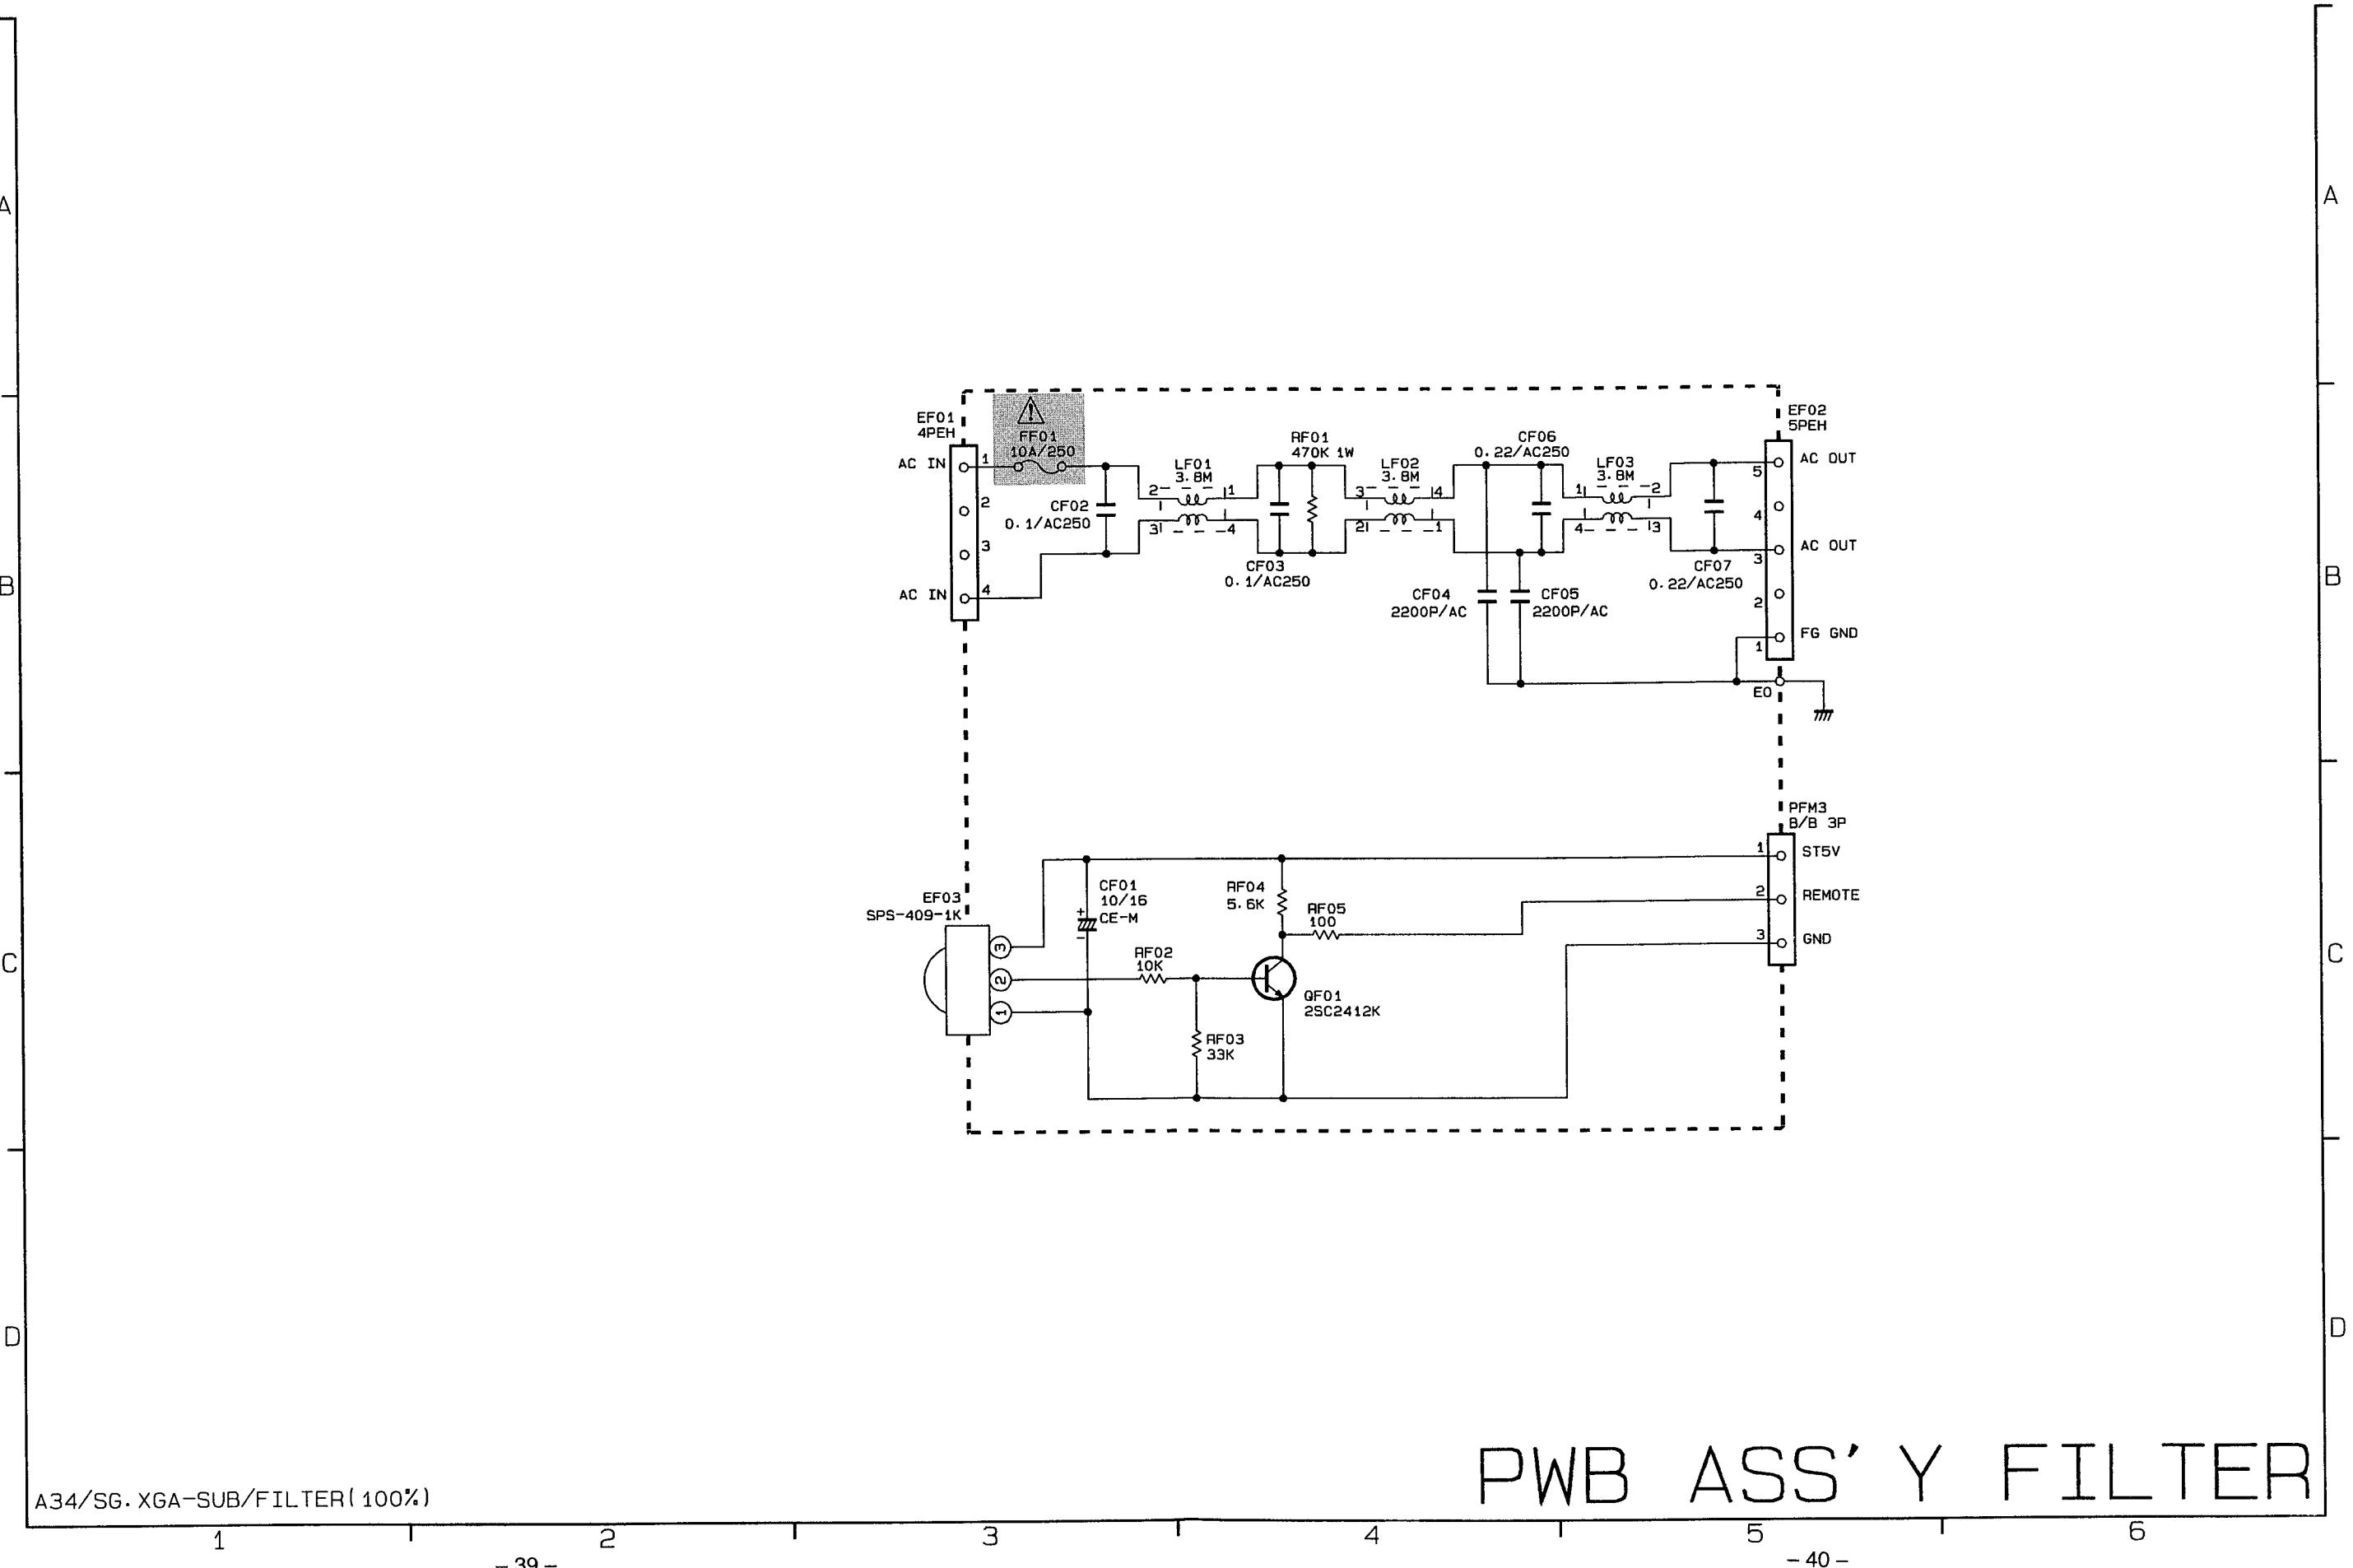


11. Connector connection diagram

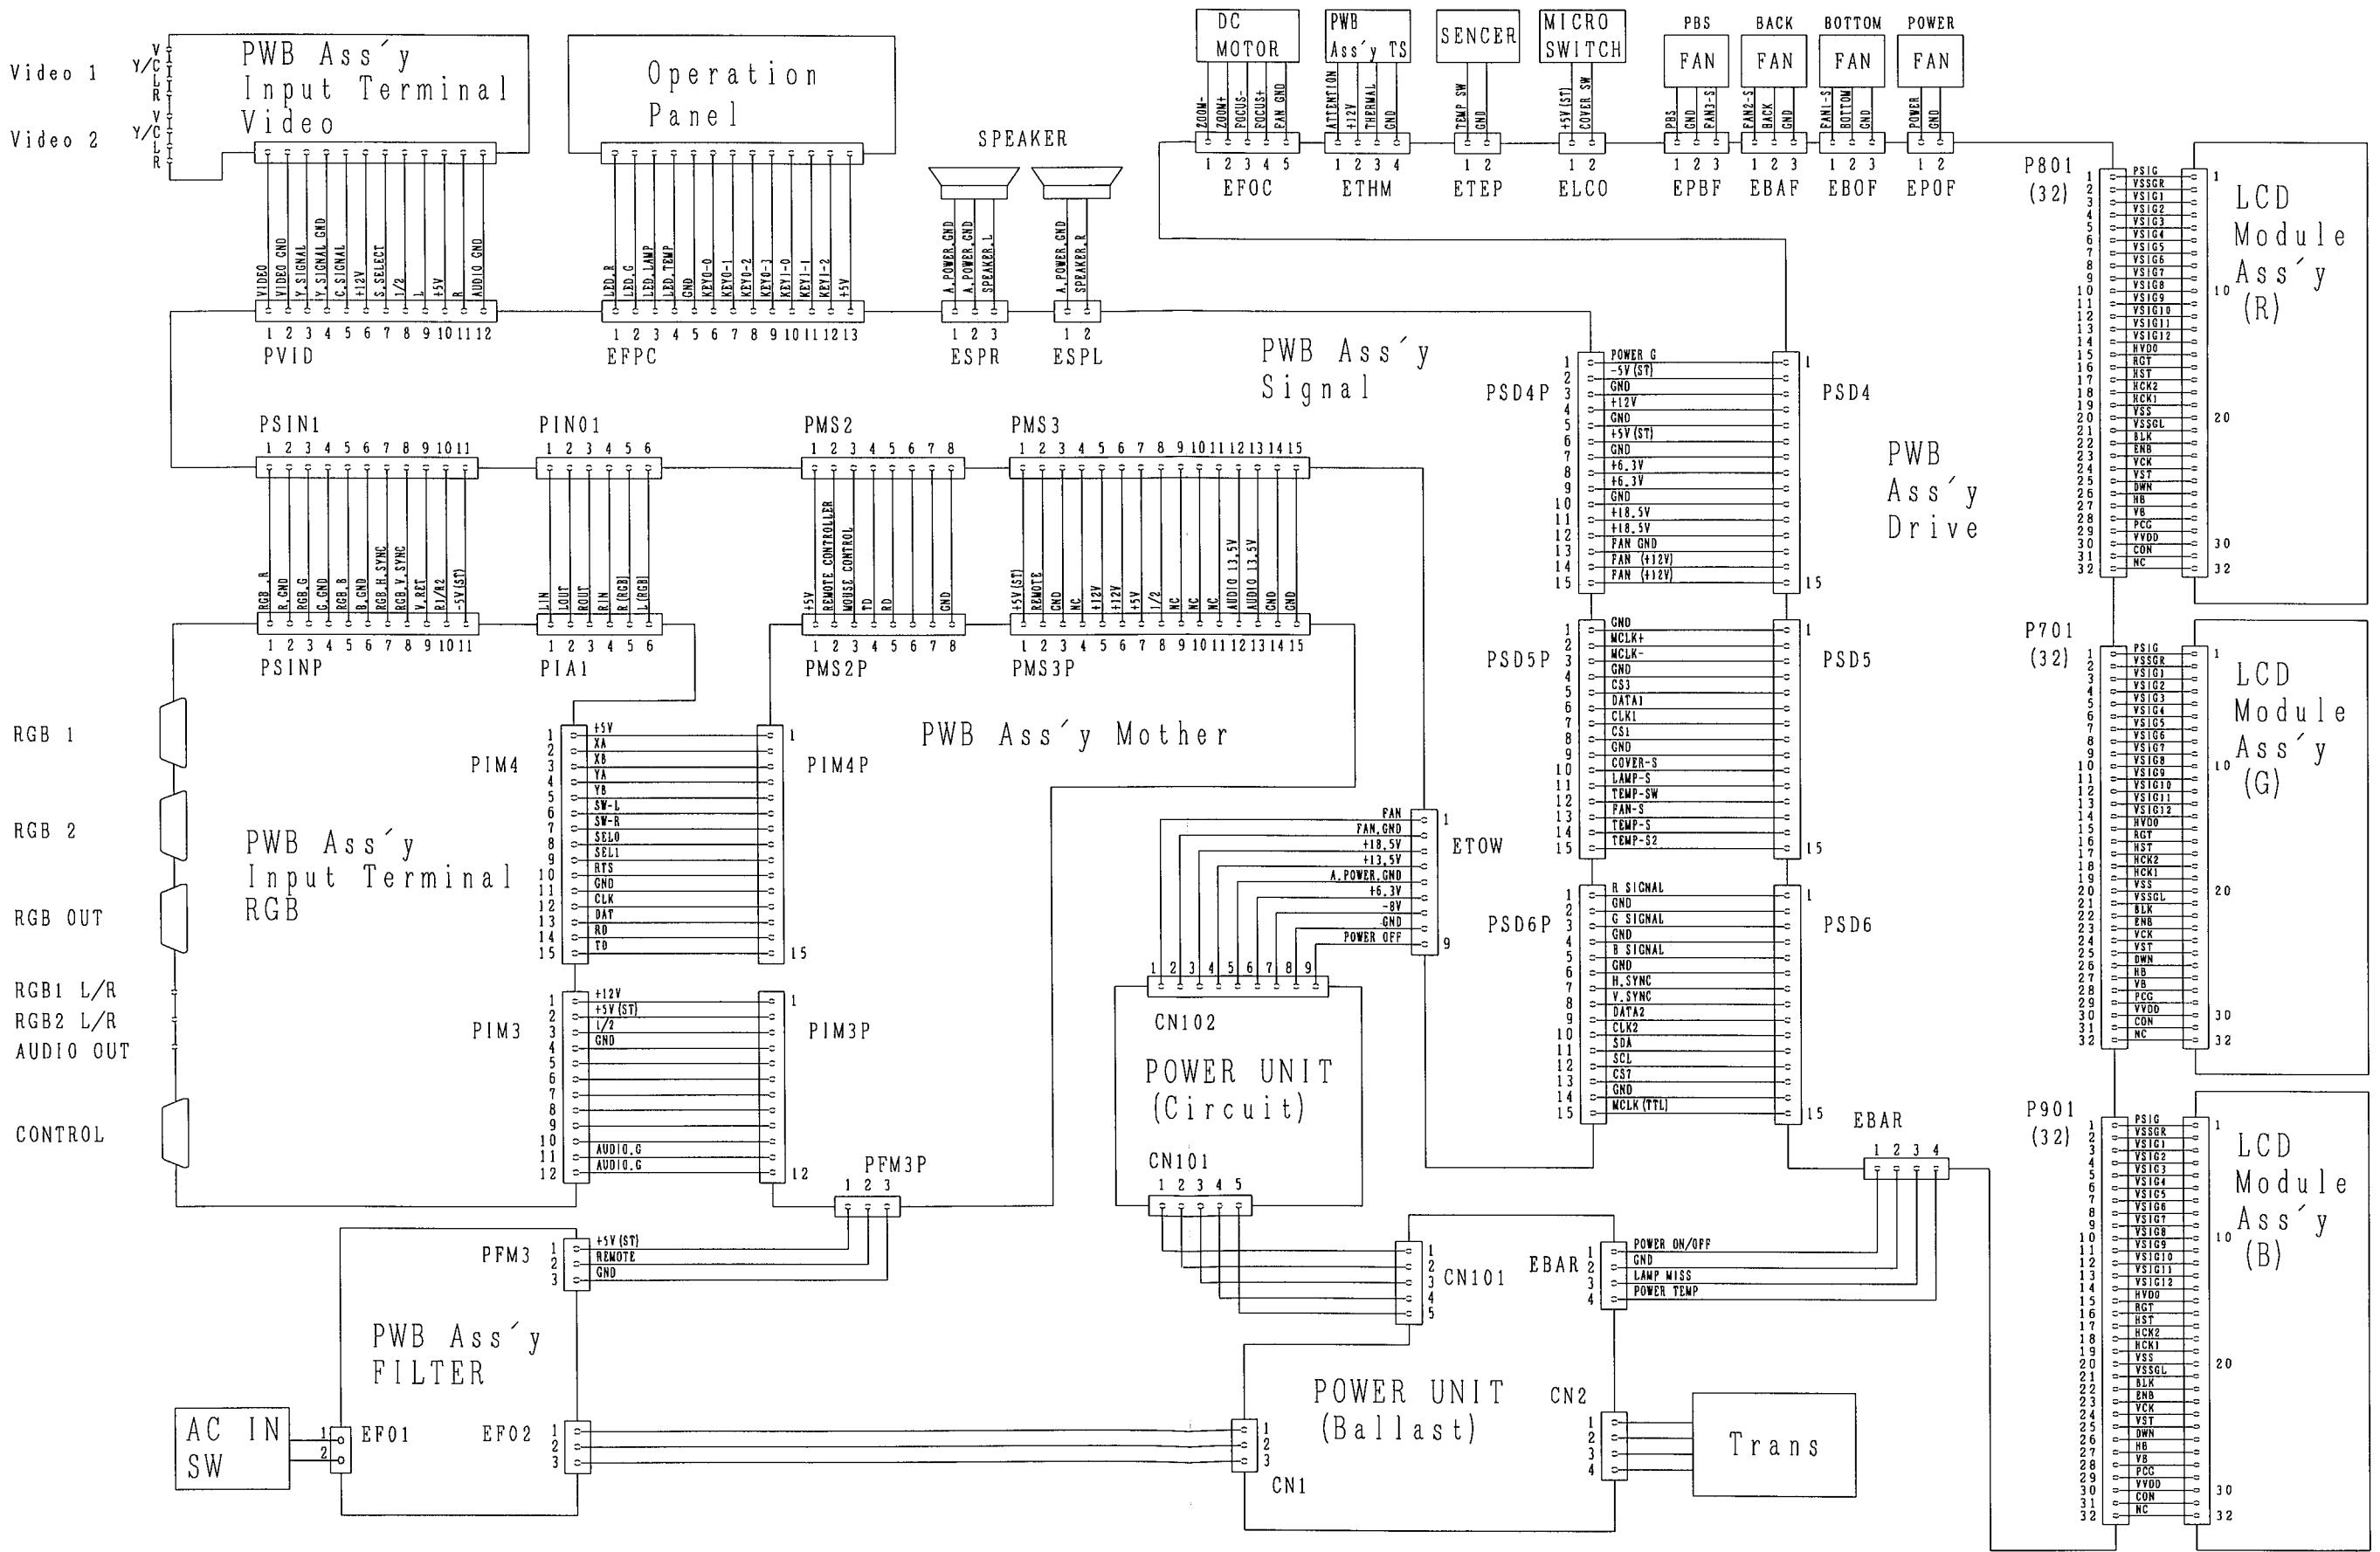

12. Disassembly diagram

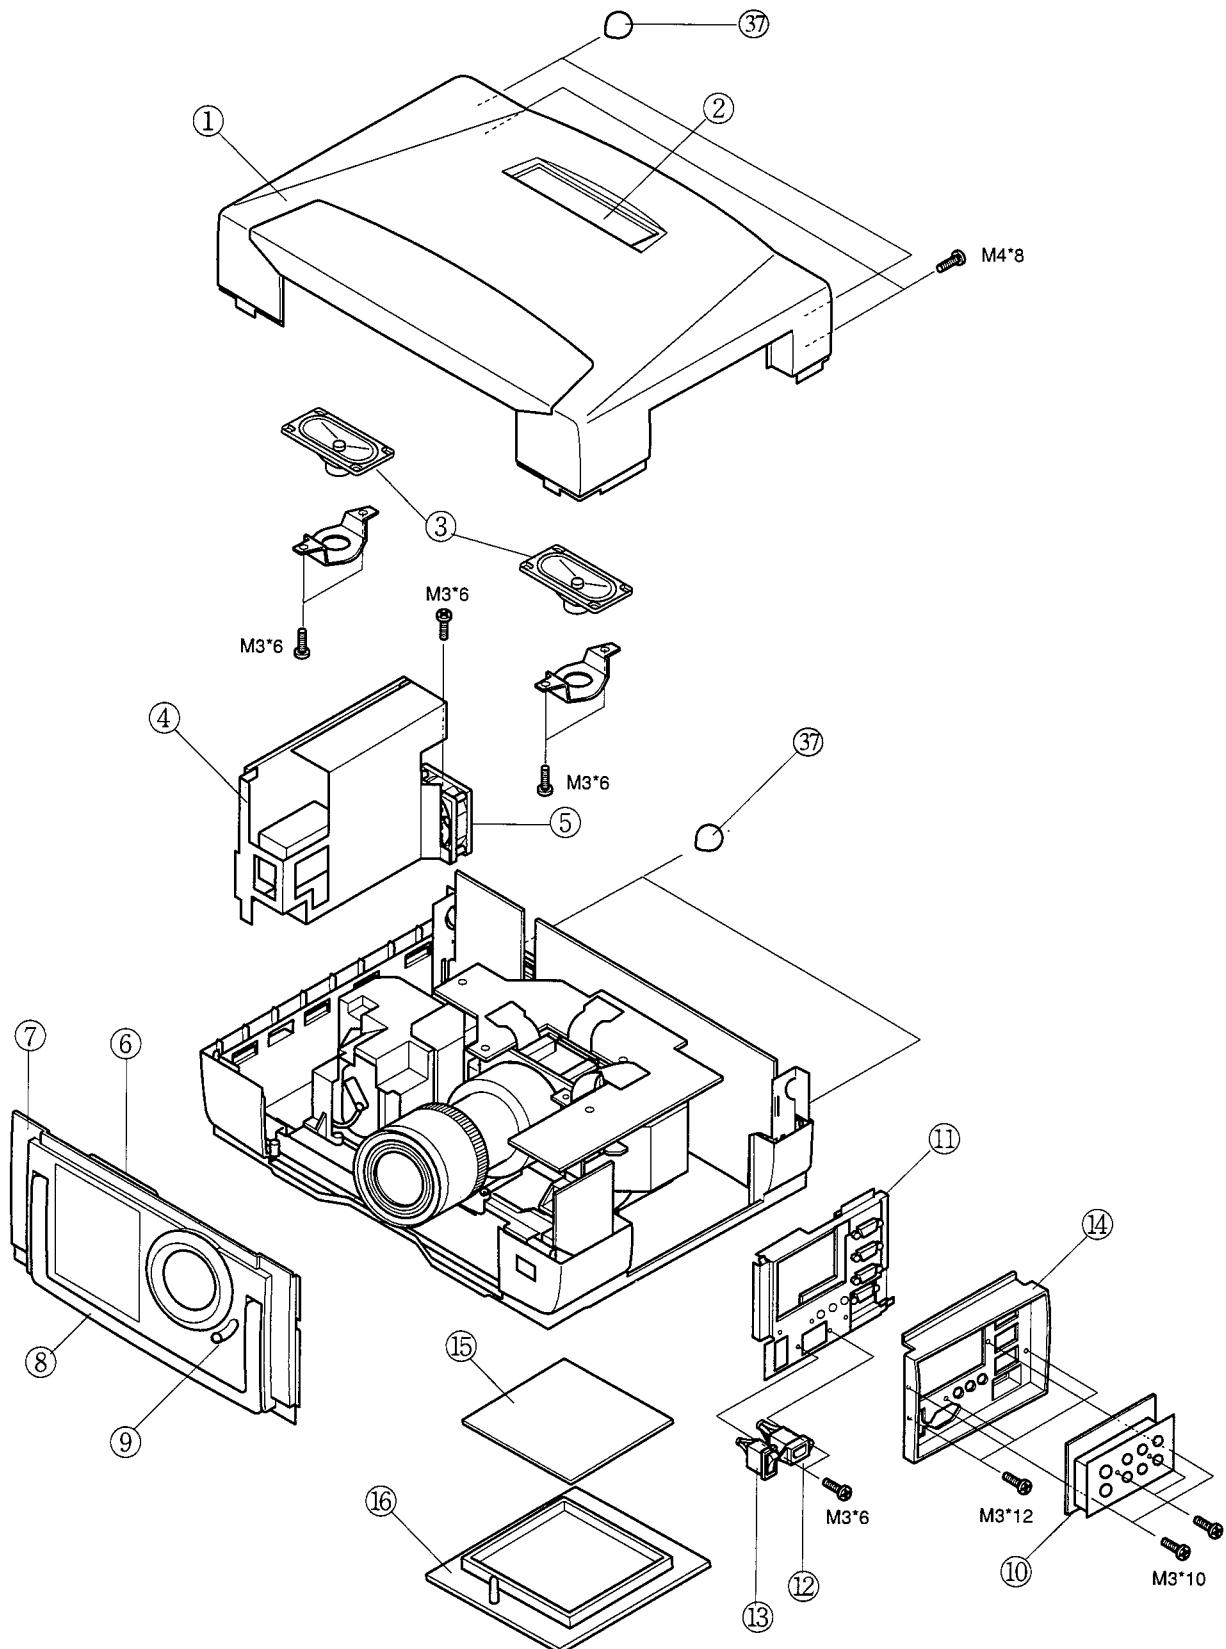

**CP-X955W
CP-X955E**

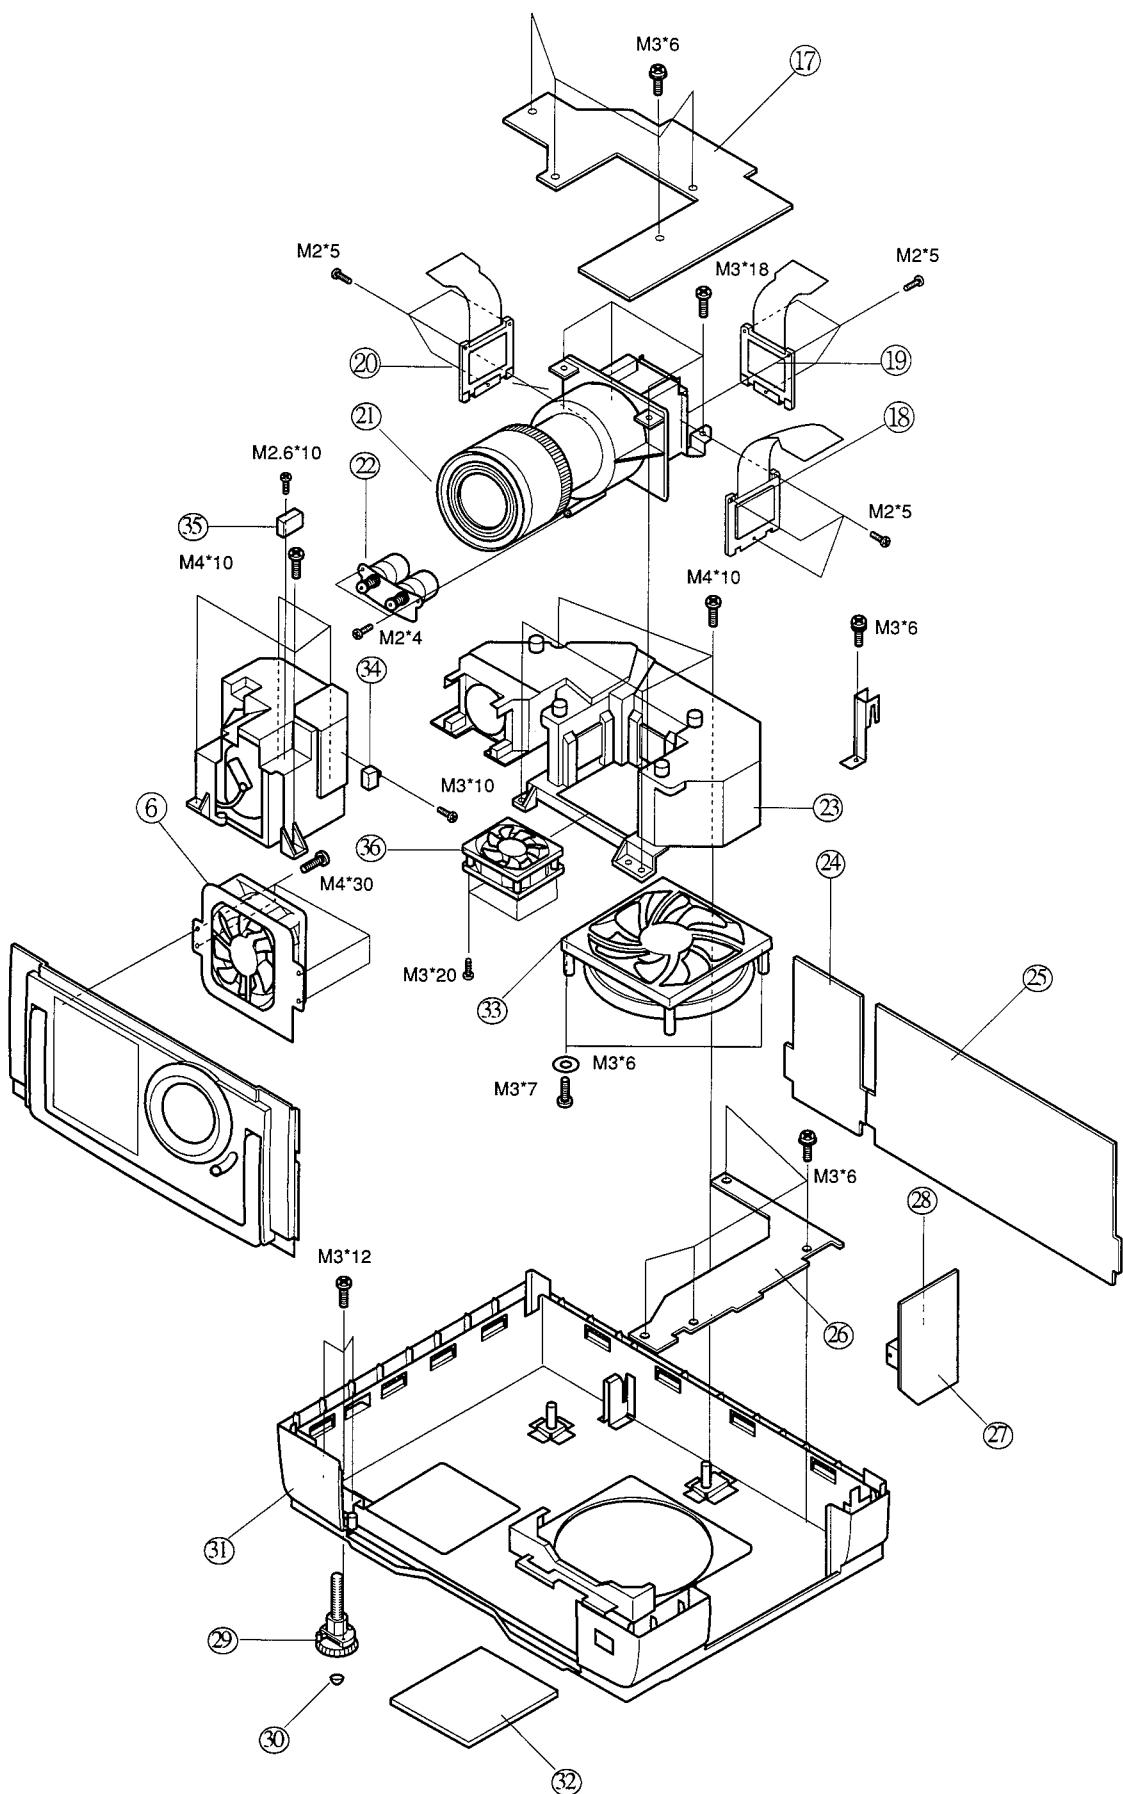

13. Replacement Parts list

REPLACEMENT PARTS LIST

PRODUCT SAFETY NOTE . Components marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
1	QD06971	UPPER CASE ASS'Y	31	QD06981	BOTTOM CASE ASS'Y
2	HP00434	OPERATION PANEL SWITCH UNIT	32	QD05843	LAMP COVER
3	GK00251	SPEAKER (4 x 7)	33	GS00211	DC FAN (INTAKE) (4.6W DC)
4 	HA00541	POWER UNIT (BALLAST)	34	FU00252	THERMAL SENSOR SWITCH
5	GS00261	DC FAN (POWER) (2.04W DC)	35	FH00041	LIMIT SWITCH (MICRO SWITCH)
6	GS00151	DC FAN (EXHAUSTION)	36	GS00231	DC FAN (PBS) (1.56W DC)
7	QD04871	FRONT BEZEL ASS'Y	37	PE00061	RUBBER FOOT R
8	PV00171	HANDLE			
9	MD02681	LENS BARRIER UNIT			
10	JP03215	PWB ASS'Y INPUT TERMINAL VIDEO			
11	JP03216	PWB ASS'Y INPUT TERMINAL RGB			
12 	EP00011	AC INLET WITH FILTER			
13 	FH00033	POWER SWITCH			
14	QD04921	I/O HOLDER			
15	MU00413	AIR FILTER B			
16	QD04738	FILTER COVER			
17	JP02384	PWB ASS'Y DRIVE			
18	UX05582	LCD MODULE ASS'Y R			
19	UX05581	LCD MODULE ASS'Y G			
20	UX05583	LCD MODULE ASS'Y B			
21	KS01871	LENS PRISM ASS'Y			
22	GP00172	DC MOTOR ASS'Y			
23	UE05421	DICHROIC OPTICS UNIT			
24 	HA00531	POWER UNIT (CIRCUIT)			
25	JP03213B	PWB ASS'Y SIGNAL			
26	JP03217	PWB ASS'Y MOTHER			
27	JP03214	PWB ASS'Y FILTER			
28 	FN00141	FUSE 10A 250V			
29	QJ00235	ADJUST FOOT			
30	PE00051	RUBBER FOOT B			
					< ONLY CP-X955W > POWER SUPPLY CORD (UL/CSA TYPE 125V) CABLE. AV

HITACHI

**CP-X955W YK No. 0490E
CP-X955E**

**Information & Image Systems Division
Yokohama Operation**