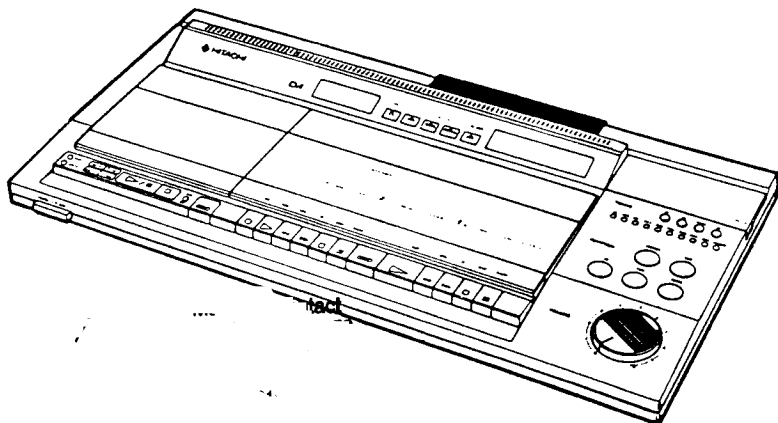


HITACHI SERVICE MANUAL

TY

No. 515 E

MX-W01 (US,CS,ES,VS,BK,SA,KS,ZS,EW)

TYPE : TN-21H-58 (PLAY)
TYPE2 : TN-21H-58C (RECI-PLAY)

CD Slimline System

CONTENTS

SPECIFICATIONS	2
DISASSEMBLY	2
GENERAL ADJUSTMENT INSTRUCTIONS	4
IC INTERNAL BLOCK DIAGRAM	12
BLOCK DIAGRAM	15
PRINTED WIRING BOARD	17, 18, 21, 22, 25, 26
CIRCUIT DIAGRAM	19, 20, 23, 24, 27, 28
DIFFERENCE FOR DESTINATION	29
WIRING DIAGRAM	31
EXPLODED VIEW	
(Cabinet)	33
(Cassette Chassis)	35
REPLACEMENT PARTS LIST	36

CAUTION

Invisible laser radiation when open interlocks failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.

VARNING

När apparaten öppnats och skyddsanordningen eller satts ur funktion förekommer osynlig laserstrålning. UNDVIK DIREKT BESTRÅLNING.

ADVARSEL

Når apparatet åbnes og beskyttelsesanordningen ikke virker eller sættes un af funktion, forekommer der usynlig laserstråling. UNDGÅ DIREKTE BESTRÅLING.

ADVARSEL

Når denne delen er åpen som følge av at låsen er utkoplet eller ikke fungerer, eksisterer det usynlig laserstråling. UNNGÅ Å BLI UTSATT FOR DIREKTE BESTRÅLING!

VAROITUS

Laite lähettää näkymätöntä lasersäteilyä, kun se avataan ja kun sisäiset turvalukot eivät toimi. VARO JOUTUMASTA ALTTIIKSI SÄTEILYLLE.

SAFETY PRECAUTIONS

The following precautions should be observed when servicing.

1. Since many parts in the unit have special safety related characteristics, always use genuine Hitachi's replacement parts. Especially critical parts in the power circuit block should not be replaced with other makers. Critical parts are marked with \triangle in the circuit diagram and printed wiring board.
2. Before returning a repaired unit to the customer, the service technician must thoroughly test the unit to ascertain that it is completely safe to operate without danger of electrical shock.

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT.

STEREO CASSETTE RECEIVER/COMPACT DISC PLAYER

July 1986

TOYOKAWA WORKS

SPECIFICATIONS

GENERAL

Power supply:	AC 120V, 60 Hz (CS) AC 220V, 50 Hz (ES, VS, KS, ZS) AC 240V, 50 Hz (BK, SA) AC 110 – 120V/200 – 220V /230 – 240V, 50/60 Hz (US, EW)	AM (MW): 522 – 1,611 kHz (9 kHz spacing) 530 – 1,620 kHz (10 kHz spacing) (for US, EW)
Power consumption:	150W	LW: 146 – 353 kHz (for ES, VS, BK)
Dimensions:	590(W) x 81(H) x 311(D) mm	FM: 1.6 μ V (75 ohms, S/N ratio 26 dB, 40 kHz Dev.)
Weight:	6.0 kg	AM (MW): 600 μ V/m (S/N ratio 20 dB, 400 Hz, 30% mod.)
Supplied accessories:	AM loop antenna (1) FM lead antenna (1) (except ZS) Auxiliary leg attachment (2)	LW: 2.5 mV/m (S/N ratio 20 dB, 400 Hz, 30% mod.) (for ES, VS, BK)

AMPLIFIER SECTION

Power output: 25 W/ch*, min. RMS, at 8 ohms from 70 Hz to 15 kHz, with less than 0.9% total harmonic distortion.

* Measured pursuant to the Federal Trade Commission's Trade Regulation Rule on Power output claims for Amplifiers.

30 W/ch + 30 W/ch (8 ohms, 1 kHz, T. H. D. 0.7% SINUS)

30 W/ch + 30 W/ch (8 ohms, 1 kHz, T. H. D. 0.7%)

Total harmonic distortion: 0.5% (at 1/2 power output)

Input sensitivity/impedance: PHONO: 6 mV/50 kohms
AUX: 400 mV/25 kohms

Load impedance: Speaker: 8 ~ 16 ohms
Headphones: more than 8 ohms

S/N ratio (IHF A network): PHONO: 73 dB
AUX: 87 dB

TUNER SECTION

Reception frequency: FM: 87.5 – 108.0 MHz (except US, EW)
87.9 – 107.9 MHz (for US, EW)

Sensitivity: FM: 1.6 μ V (75 ohms, S/N ratio 26 dB, 40 kHz Dev.)

S/N ratio: FM: 70 dB (mono),
68 dB (stereo)
AM (MW): 42 dB
LW: 40 dB (for ES, VS, BK)

FM selectivity: 28 dB (= 300 kHz)

Stereo separation: 40 dB (1 kHz)

Antennas: FM: Lead antenna or external antenna (75 ohms, unbalanced)

AM (MW/LW): Loop antenna or external antenna

TAPE DECK SECTION

Track system: 4 track 2 channel stereo

Recording system: AC bias

Tape: Normal, Chrome/Metal

Frequency response: Normal 40 to 13,000 Hz

CrO2 40 to 14,000 Hz

Metal 40 to 15,000 Hz

CD PLAYER SECTION

Player time: Approx. 60 minutes/one side

Diameter: 120 mm

Sampling frequency: 44.1 kHz

Quantization number: 16 bit linear/channel

Frequency response: 20 to 20,000 Hz

Specifications are subject to change without notice for performance improvement.

DISASSEMBLY

1. Top case (Fig. 1, 2)

Remove ten screws ① and seven screw ② of bottom side. (Fig. 1)

Remove Power button and Volume knob.

Open CD lid and Cassette lid by pushing CD door open button and C door open button. Then the Top case by lifting it upward. (Fig. 2)

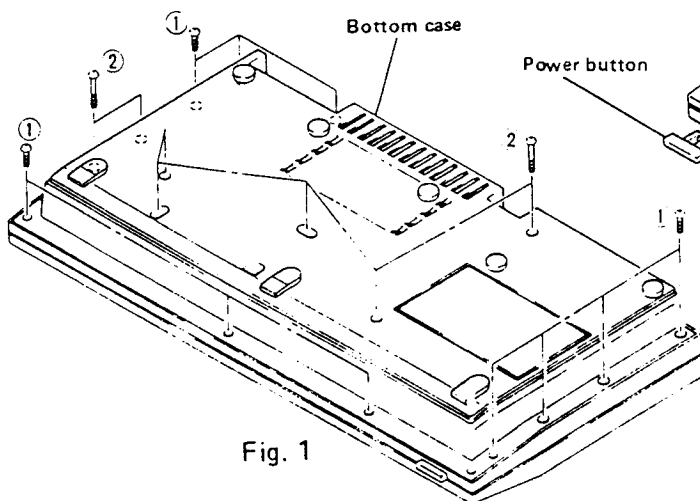


Fig. 1



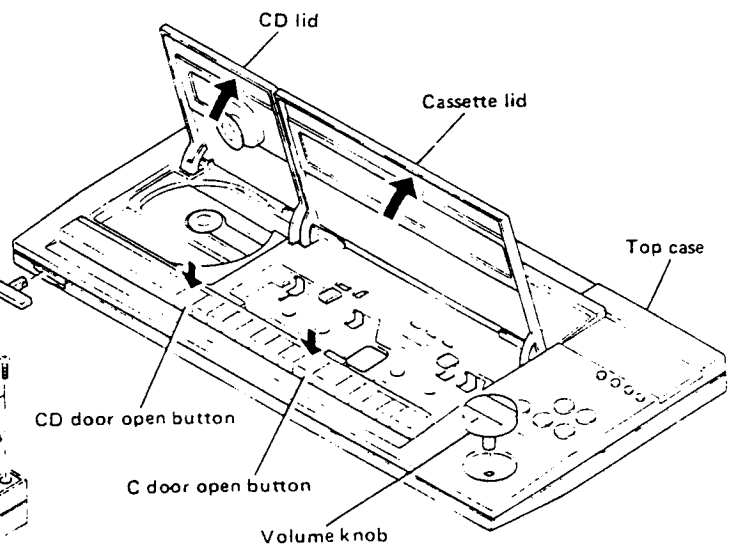


Fig. 2

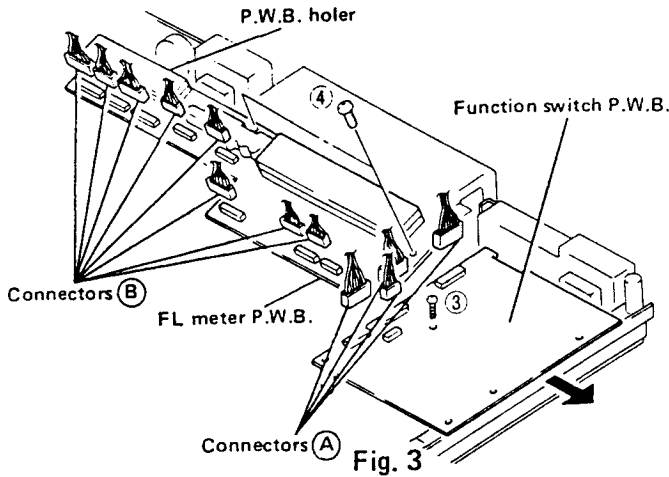
2. Function switch P.W.B. (Fig. 3)
Remove one screw (3) and four connectors (A), then pull the P.W.B. to the arrow direction and remove it.
3. FL meter P.W.B. (Fig. 3)
Remove two screws (4), and eight connectors (B).
Remove the P.W.B. together with P.W.B. holder.



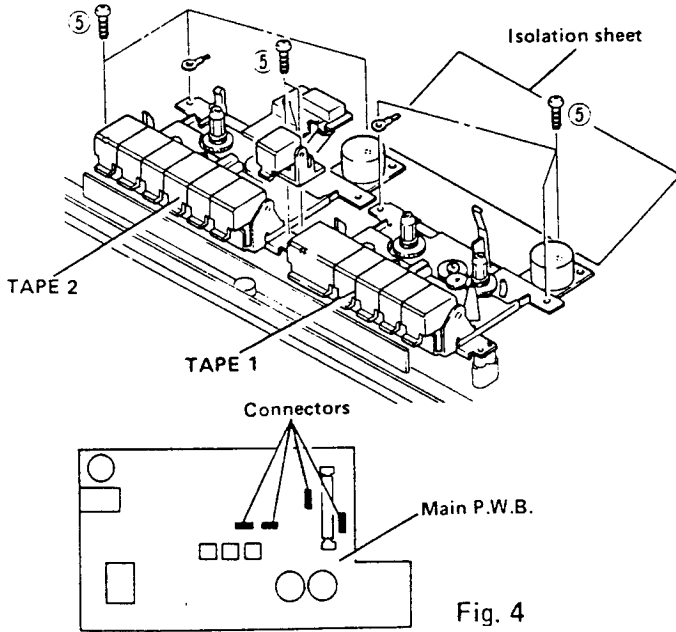
4. Cassette chassis (Fig. 4)
Remove eight screws (5) and four connectors.
Remove the Cassette chassis by lifting them upward.
(Isolation sheet is removed together with the Cassette chassis.)



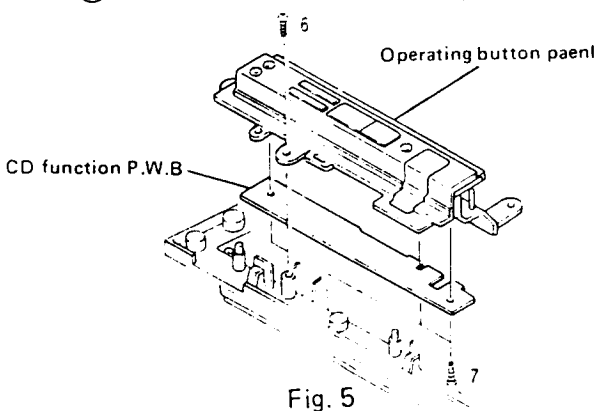
5. CD Function switch P.W.B. (Fig. 5)
Remove Operating button panel by removing one screw (6) and then remove three screws (7).



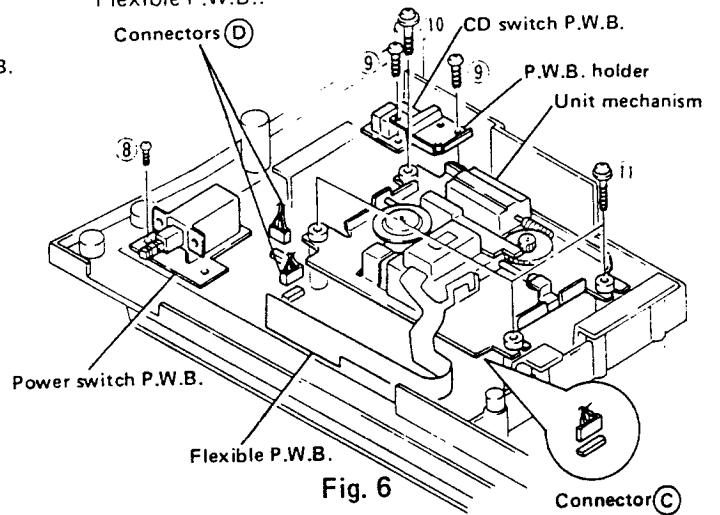
6. Power switch P.W.B. (Fig. 6)
Remove one screw (8).
7. CD switch P.W.B. (Fig. 6)
Remove two screws (9), one screw (10) and one connector (C).
8. Unit mechanism (Fig. 6)
Remove three screws (11), two connectors (D) and the Flexible P.W.B..



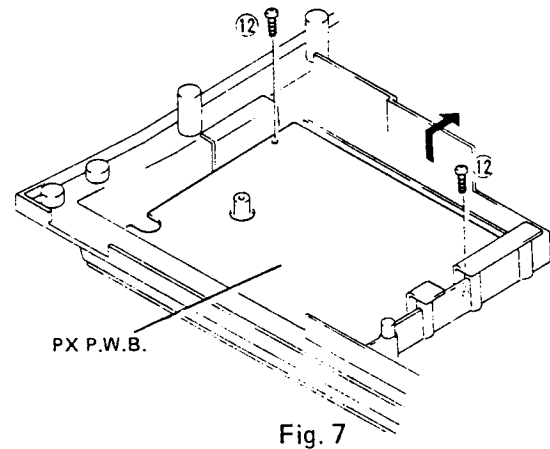9. PX P.W.B. (Fig. 7)
After removing the P.W.B. holder and CD switch P.W.B. remove two screws (12) and remove the P.W.B. by lifting it up to the arrow direction.



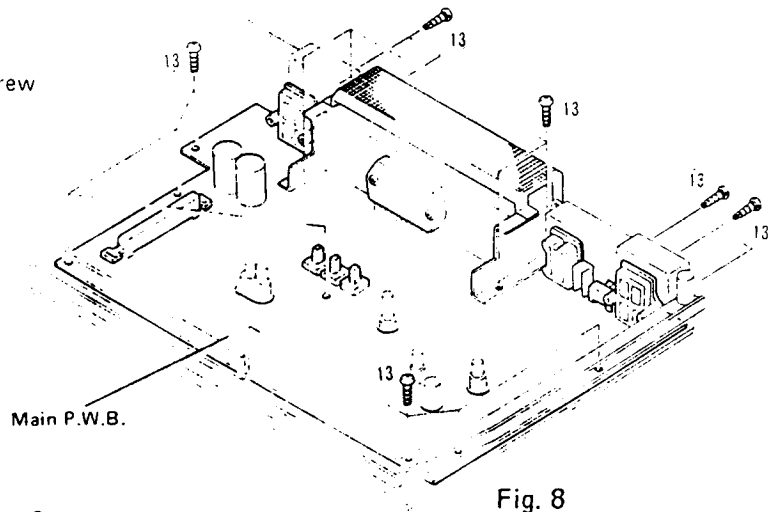10. Main P.W.B. (Fig. 8)
Remove seventeen screws (13) and then remove the P.W.B. by lifting it backward.



- Note 1: Apply low-input signals from a sweep generator (with a small amount of noise superimposed on IF waveform as in Fig. 10), and adjust the waveform until it becomes maximum and symmetrical.
- Note 2: Cause an S curve to appear on the screen by FM IFT as shown in Fig. 11, and adjust it until points A and B are positioned symmetrically, and the A-B line becomes linear.
- Note 3: Connect a DC null meter TP. 4 and TP. 5 then make adjustment until it reads $0 \pm 30mV$.

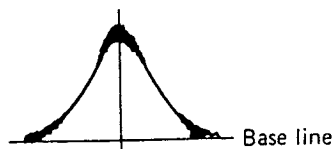


Fig. 10

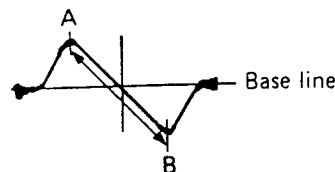


Fig. 11

AM TUNER ADJUSTMENT

FUNCTION : AM
 MODULATION : 400Hz 30% Mod.
 VOLUME : MIN

Sequence	Connection		Setting		Adjust for	
	Input	Output	Tuning	Signal	Adjust	Indication
1	IF AMP. TP.7 100k 0.1µ	TP.3 100k 0.1µ	—	450kHz	—	(Note 4)
2	Covering Loop antenna	TP.8 (MW) TP.9 (LW) 	(MW) 530kHz (for US, CS) 522kHz (except US, CS) (LW) 146kHz	—	(MW) T151 (LW) T152	$1.3V \pm 0.1V$ (for US, CS) $1.2V \pm 0.1V$ (except US, CS) (Note 5) $1.2V \pm 0.1V$ (Note 5)
		Audio output 	(MW) 603kHz or 600kHz (LW) 164kHz (MW) 1404kHz or 1400kHz (LW) 335kHz	(MW) 603kHz or 600kHz (LW) 164kHz (MW) 1404kHz or 1400kHz (LW) 335kHz	L151 L152 CT151 CT152	V max. (Note 5)
3	Tracking 400Hz 30% Mod. 					

- Note 4: Check the waveform shown in Fig. 12 is obtained.
- Note 5: At first, set the input level to 75 dB m. As the adjustment advances, reduce the input level to an allowable minimum level (approx. 60 dB), and repeat the adjustment until the maximum output is obtained at the specified frequency.

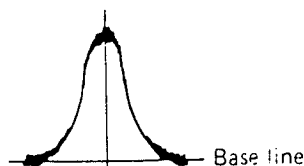


Fig. 12

GENERAL ADJUSTMENT INSTRUCTIONS

- Adjustment points Perform adjustment at least 3 minutes after the power has been switched on.

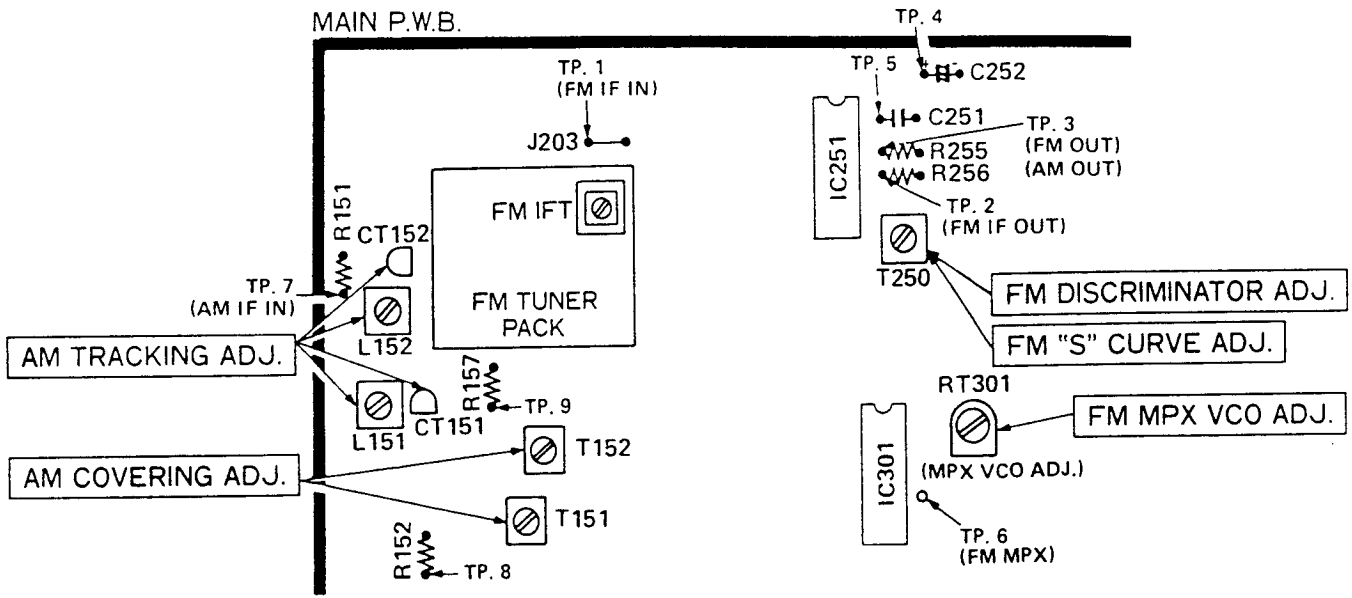








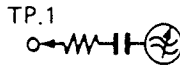
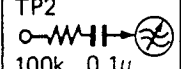
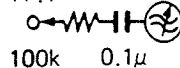
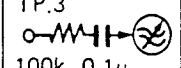
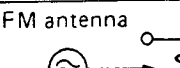
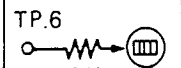


Fig. 9

FM TUNER ADJUSTMENT

- FUNCTION : FM VOLUME : MIN FM MODE : MONO
-  Sweep Generator
 -  Signal Generator
 -  Oscilloscope
 -  DC Null Meter
 -  VTVM
 -  Frequency Counter
 -  Dist.
 -  Distortion Meter

Sequence	Connection	Setting		Adjust for			
		Input	Output	Tuning	Signal	Adjust	Indication
1	IF Amp.	TP.1 	TP.2 	—	10.7 MHz	FM IFT	(Note 1)
2	"S" curve	TP.1 	TP.3 	—	10.7 MHz	T250	Straight line (Note 2)
3	Discriminator	FM antenna  60dB 400Hz, 22.5kHz Dev.	SPEAKERS terminal	98 MHz	98 MHz	T250	(Note 3)
4	MPX VCO	Antenna terminal (75 ohms) 60dB Non Mod.	TP.6 	—	—	RT301	19 kHz ± 100 Hz

TAPE DECK ADJUSTMENT

• Adjustment points

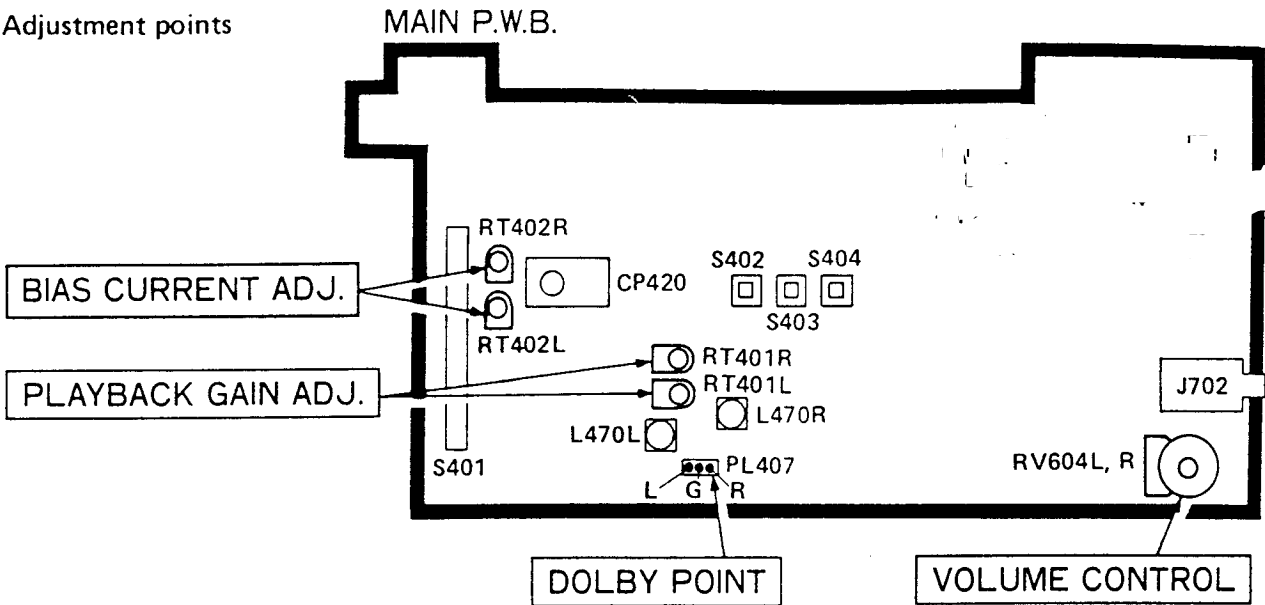


Fig. 13

• Measuring Instruments

1. Audio oscillator
2. Electronic Voltmeter
3. Attenuator
4. Frequency counter

• Jigs, Test and Check Tapes

1. Head mounting jig
2. 400Hz, Dolby alignment tape
3. 10kHz, azimuth alignment tape
4. 3,000Hz, tape speed alignment tape
5. Mirror tape (for tape running check)
6. NORMAL tape (MAXELL UDI 90)
METAL tape (MAXELL MX46)

• Positions of Knobs

Set the switches and knobs, etc. to the following positions shown in the next table unless otherwise specified.

REC level control (RV604L, R)	MAX
Tape select switch (S402)	(Note 1)
RIF switch (S403)	A
Dolby NR switch (S404)	OFF

Note 1: Change over the tape select switch as shown in the table on the right depending on the tape used.

Tape used	Tape select switches (S402)
No tape used	NOR
Test Tape	NOR
NORMAL tape	NOR
METAL tape	METAL

Perform adjustment by the following procedure after open the cassette lid and cleaning the heads, pressure rollers and capstans with alcohol.

1. Tape Speed Adjustment

Tape	Adjustment value	Adjustment point
Tape speed Alignment tape (3,000 Hz)	3,000 Hz ± 1%	Semi-fixed resistor inside of the motor

Adjustment procedure

Connect the frequency counter to the SPEAKERS terminals apply heat-run for 20 minutes or more. Then playback alignment tape for TAPE 1 and TAPE 2, and adjust the tape speed to the middle of the tape so that the speed of TAPE 1 and TAPE 2 are equal.

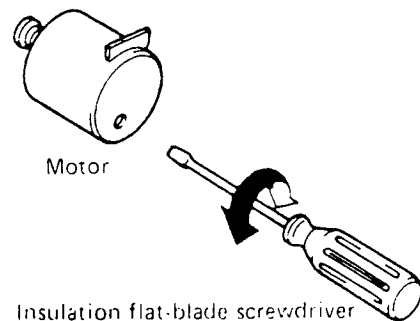


Fig. 14

2. Recording/Playback Head Azimuth Adjustment

Tape	Adjustment value	Adjustment point
Azimuth alignment tape (10 kHz)	Maximum output	Azimuth adjustment screw

Adjustment procedure

Connect the electronic voltmeter to the SPEAKERS terminals, playback the alignment tape to adjust the head azimuth.

When the maximum values differ between both channels, set to the maximum value of the left channel. Check that the difference between the values of both channels is less than 2 dB, and readjust when the difference is greater. After the adjustment, fix the screw with Screw Lock.

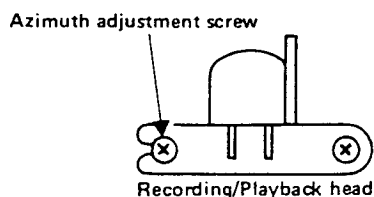


Fig. 15

3. Playback Gain Adjustment

Tape	Adjustment value	Adjustment point
400 Hz Dolby alignment tape	580 mV	RT401L, R

Adjustment procedure

Connect the electronic voltmeter to PL407, then playback the Dolby alignment tape in TAPE 1 and adjust RT401L, R so that the reading of the electronic voltmeter indicates the adjustment value.

Perform the adjustment in the same way for TAPE 2.

(The difference between the values of TAPE 1 and TAPE 2 is less than 2 dB.)

4. Bias current Adjustment and REC/PLAY Output level adjustment

Set RT402L,R in the center position and record at the recording level shown in the table below to adjust for each tape, then check the playback level.

Order	Tape	Tape select switch	Recording level			Playback level		Adjustment procedure
			Frequency (Hz)	Level	Adjustment point	Level	Adjustment point	
1	NORMAL tape	NOR	400/10k	580mV -25dB	ATT	Within ± 1.5 dB	RT402L, R	(1)
2	NORMAL tape	NOR	400	-10dB	ATT	580mV -10 \pm 2dB	To check	(2)
3	NORMAL tape	NOR	400/10k	580mV -25dB	ATT	Within ± 1.5 dB	To check	(1)
4	METAL tape	METAL	400/10k	580mV -25dB	ATT	Within ± 3 dB	To check	(1)

Adjustment procedure

(1) Bias Current Adjustment

- 1) Connect the audio oscillator to the AUX IN terminals via the attenuator and set the unit to the record mode. Adjust the output of the audio oscillator so that the meter indicates 0 dB. Then, adjust the attenuator to set it to 580 mV -25 dB. (Frequency: 400 Hz)
- 2) Record in this state, and then set the frequency of the audio oscillator to 10 kHz and record it.
- 3) Playback the recorded section, read the output and check that the output difference between the two frequencies is within ± 1.5 dB. In this case, make adjustment so that the output at 10 kHz is sure to be greater than that at 400 Hz.
- 4) When the output difference is out of within ± 1.5 dB range, adjust RT402L, R properly and repeat recording/playback so that the output difference is within ± 1.5 dB.

*Perform checking only for METAL tape, but when the output is not within the specified ± 3 dB, perform adjustment using NORMAL tape again.

(2) REC/PLAY Output Level Adjustment

- 1) Connect the audio oscillator to the AUX IN terminals to input 400 Hz signal and set the unit to the record mode. Adjust the output of the audio oscillator so that the reading of the electronic voltmeter connected to the SPEAKERS terminals, is -10 dB, and perform recording.
- 2) Playback the recorded section and check that the output is 580 mV -10 \pm 2 dB.

CD PLAYER ADJUSTMENT

1. Checking the object lens (Fig. 17)

Take care not to dirty the object lens of the lens actuator. When the unit is not used for a long time, the lens sometimes becomes dirty. Clean the lens with a cotton swab.

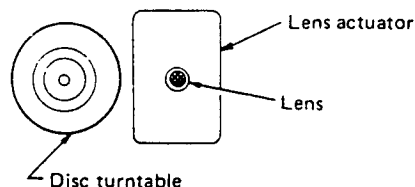


Fig. 17

2. Checking the laser

The laser unit operates on 40 – 80 mA current. If the laser operation current in the circuit exceeds 100 mA, the laser may be defective.

3. Precautions on repair service

(1) Semiconductor laser (Fig. 18)

The semiconductor laser requires more attention to electrostatic breakdown or surge current. Be very careful not to touch the terminals of the semiconductor laser and those of the flexible P.W.B. by hand or with a tool.

The current – light intensity characteristic became sharp abruptly after passing the threshold value as shown in Fig. 18. The threshold current value is a little different in each laser unit. Therefore, when setting the laser beam amount after replacing the unit mechanism, be sure to turn the control variable resistor R905 fully counterclockwise to set it off once, and then increase the level to the specified value.

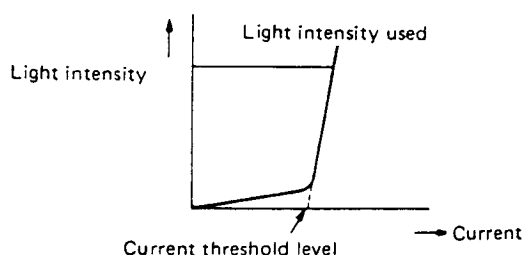


Fig. 18

(2) Notes on handling the unit mechanism (Fig. 19)

When handling the pick-up mechanism or unit mechanism, use the ground ring as shown in Fig. 19.

(The ground ring can be made using normal lead wire.)

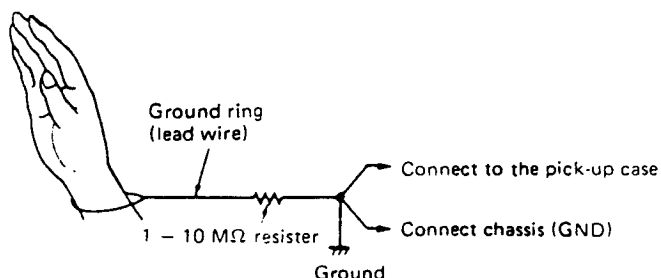


Fig. 19

(3) Precaution in replacing parts.

- [1] Protective sheets are stuck to the service parts of the unit mechanism. Never remove these sheets prior to the completion of assembly.
 - [2] If the lead terminals of the slide motor are overheated due to soldering etc., it may cause a fault in the slide motor. Therefore, be sure to unsolder the leads on the P.W.B. side during replacement.
 - [3] When installing the unit mechanism, apply one drop of alcohol to the grommets to facilitate unit mechanism installation.
- Fully tighten the screws. If the screws are loose, the disc tracking performance may be degraded. (Fig. 20)

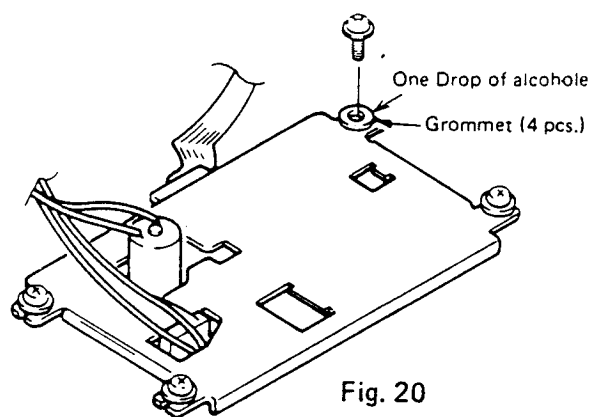


Fig. 20

- [4] When installing the DC motor assembly, take care not to damage the worm gear. After installation, check the play between the worm gear and send gear. If there is no play move the DC motor assembly outward. (Fig. 21)

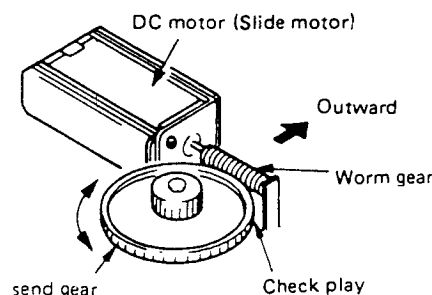


Fig. 21

- [5] When replacing the DC motor (disc motor), turntable, or center pin, proceed as follows.

- 1) Remove the turntable fixing screw (hex. hole screw). Apply the soldering iron to the turntable fixing screw hole for about 1 minute and pull out the center pin in the direction of arrow A (vertical to the unit plate).
- 2) When installing the turntable, adjust its height with the height adjusting jig. At this time, take care not to apply excessive force to the DC motor shaft.
- 3) When replacing the DC motor, take care not to apply excessive force in the direction of arrow B. Doing so may deform unit plate C, resulting in deteriorated eye pattern. (Fig. 22)

5. Cassette Chassis Checking and Adjustment

No.	Inspection Item	Reference Value	Remarks
1.	Pressure roller compression strength	300 – 500 g	(Note 1) Tension gage
2.	Playback torque	30 – 60 g	Cassettepack system Torque meter
3.	FF/REW torque	more than 50 g-cm	Cassettepack system Torque meter
4.	Take up back-tension	2.0 – 6.0 g-cm	Cassettepack system Torque meter
5.	Tape drive force	more than 120 g	
6.	Axial play of flywheel	0.05 – 0.5 mm	

Note 1: Pressure roller compression strength

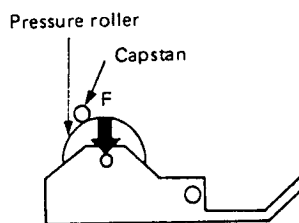


Fig. 16

LUBRICATION

Lubricate 1 or 2 drops of Pan-motor or sonic slider oil to the rotating parts and apply Hitasol or White grease to the rubbing parts.

Lubrication is performed once a year or once for every 1,000 hours under normal usage conditions.

Be careful so that oil does not adhere to the belt or Pressure roller, etc.


Rotating sections	Metal and metal	Pan-motor oil (10W-40)
	Mold and metal	Sonic Slide Oil (#1600)
Rubbing sections	Metal and metal	Hitasol (MO-138)
	Mold and mold, mold and metal	White grease (FL-LUBE-A)

Check that exposed parts are acceptably insulated from the supply circuit before returning the instrument repaired to the customer.

• Checking method

Power switch is set to ON.

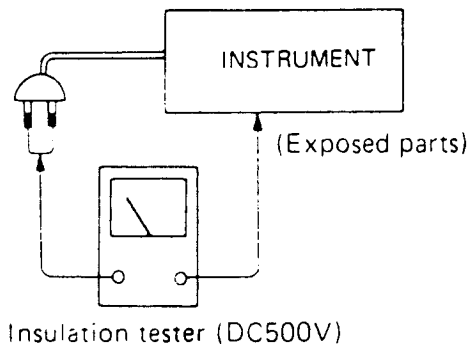Next, measure the resistance value between the both poles of attachment cup (Power supply plug) and the AUX IN JACK of rear plate and check that the resistance value is 500 kohms or more.



- 4) Press in the center pin into the DC motor shaft so that the shaft tip is aligned with the center pin tip. (Fig. 23)

Note: Once the center pin is removed, do not reuse it.

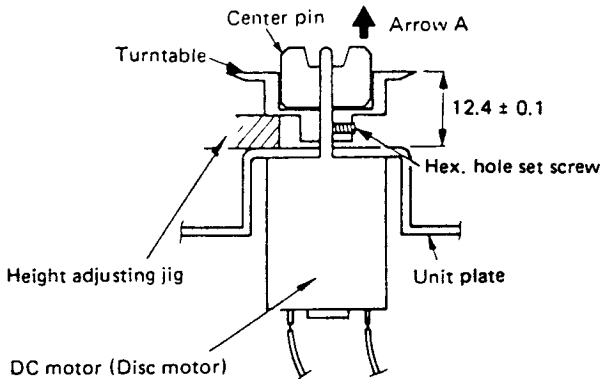


Fig. 22

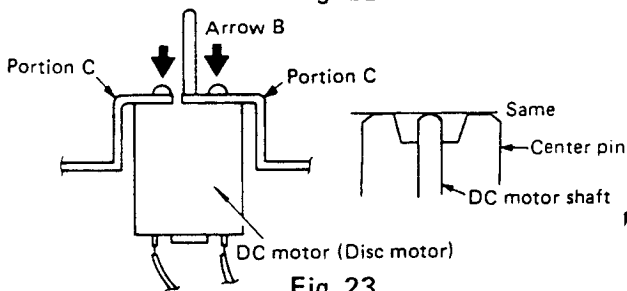


Fig. 23

4. Checking the actuator

Check the resistance values of the actuator coils. They are normal if the resistance values meet the following values.

Focus coil: 30 ohms

Tracking coil: 10 ohms

If any coil is open or short circuited, the actuator may be defective. Check that the lens moves with 1.5V battery (Fig. 24)

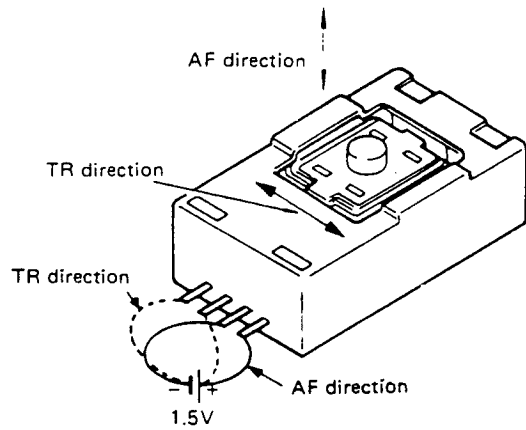


Fig. 24

CD PLAYER CIRCUIT ADJUSTMENT

When you have made the following work (1) or (2), be sure to perform adjustment 1 - 4.

- (1) Disassembly of the unit mechanism and replacement of parts.
- (2) Replacement of parts of the pickup part.

■ Adjustment of circuit

Preset each control before making adjustment.

● Presetting

Adjustment	Circuit No.	Preset position
Laser diode output	R905	Center
Focus servo offset	R908	Center
Tracking servo offset	R914	Center

Adjustment should be made in the following sequence.

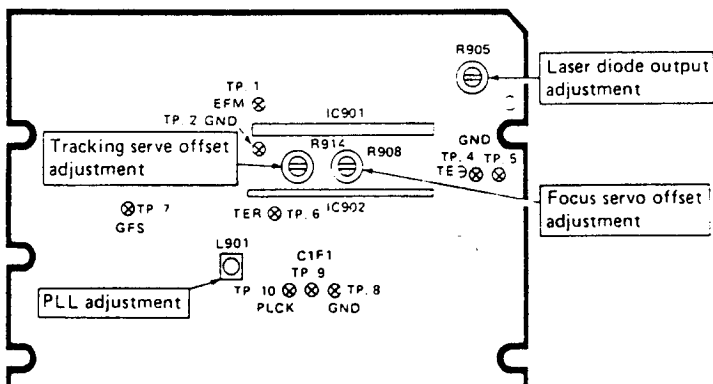


Fig. 25

1. Adjustment of laser diode output

Do not perform this adjustment except when the pickup mechanism or laser circuit is replaced.

(1) Instrument to be used

- Oscilloscope.

(2) Adjusting procedure

- [1] Connect the oscilloscope to TP.1 (EFM) and TP.2 (GND). (Fig. 26)
- [2] Load a disc in the player, and set the player to play mode.
- [3] Adjust R905 so that the EFM signal level becomes $1.3V \pm 40mV$.

Note: (Fig. 27)

However if the signal level is in range of 1.1V - 1.5V, it is normal and no adjustment is necessary.

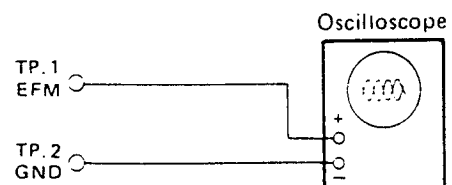


Fig. 26




Fig. 27

2. Adjustment of focus servo offset

(1) Instrument to be used

- Oscilloscope
- DC Voltmeter

(2) Adjusting procedure

- [1] Set the player to stop mode.
- [2] Connect the oscilloscope to TP.1 (EFM) and TP.2 (GND).
- [3] Connect the DC voltmeter as shown in Fig.28
- [4] Load a disc in the player, and set the player to play mode.
- [5] Adjust R908 so that the EFM signal amplitude becomes maximum.
- [6] After adjustment, check that the center voltage of the R908 is 2 - 3 V with a DC voltmeter.
- [7] If the center voltage is not within the specified value, readjust as follows.

Less than 2V: Set to 2V.
More than 3V: Set to 3V.

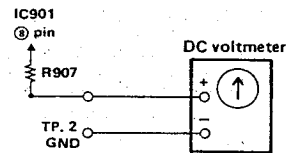


Fig. 28

3. Adjustment of tracking servo offset

(1) Instrument to be used

DC voltmeter

(2) Adjusting procedure

- [1] Connect the DC voltmeter to TP.6 (TER). (Fig. 29)
- [2] Put the set in stop mode.
- [3] Adjust R914 so that the DC voltmeter indicates +10 mV \pm 2 mV.

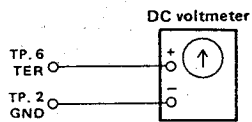


Fig. 29

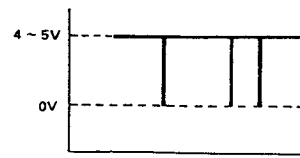


Fig. 30

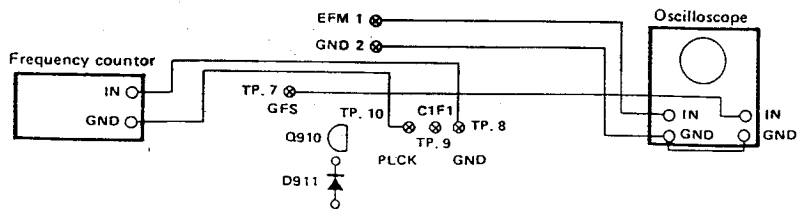


Fig. 31

4. Adjusting PLL

Do not make adjustment except when any parts in the PLL block has been replaced.

(1) Instrument to be used

- Frequency counter
- Oscilloscope

(2) Adjusting preparation

Connect the above instruments as shown in Fig. 31.

(3) Adjusting procedure

- [1] Preset L901 so that the frequency at TP.10 (PLCK) is $4,500 \pm 50$ kHz with the set stopped.
- [2] Put the set in play mode. Turn L901 clockwise (in the core entering direction) until the level of TP.7 (GFS) goes low. Then, turn L901 counterclockwise (in the core pulling direction) and find the position where the level goes high.
- [3] Put the set in stop mode and read the frequency (f1) of TP.10 (PLCK).
- [4] Put the set in play mode. Turn L901 counterclockwise until the level of TP.7 (GFS) goes low. Then, turn L901 clockwise and find the position where the level goes high.
- [5] Put the set in stop mode and read the frequency (f2) at TP.10 (PLCK).
- [6] Adjust L901 so that the frequency at TP.10 is $(f1 + f2) \times 1/2$.

(4) checking of operation

After making adjustments [1] through [6] above and put the set in play mode. Check that the frequency at TP. 10 (PLCK) is $4,321.8 \pm 400$ kHz. Ascertain that the waveform at TP. 7 (GFS) exactly as shown in Fig.30. The level at TP. 7 (GFS) may happen to be low.

WARNING LABEL

CAUTION INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.

AVOID EXPOSURE-LASER RADIATION IS EMITTED FROM THIS APERTURE

For Europe and Australia, etc.

DANGER Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.

For U.S.A.

CAUTION HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCKS FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.

For Canada

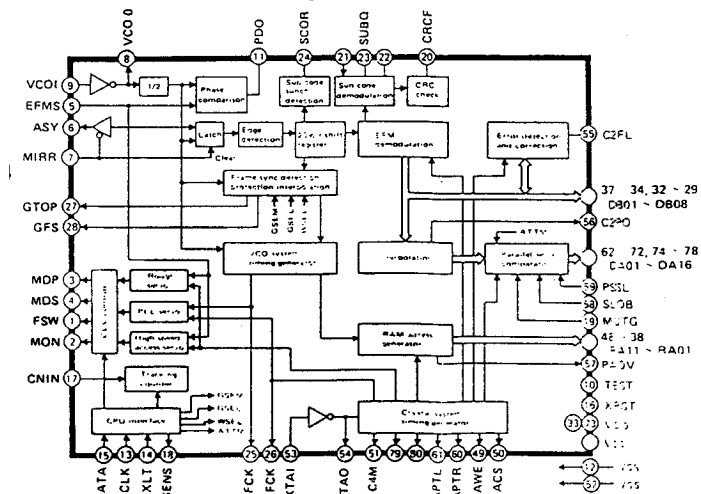
THIS LASER COMPACT DISC PLAYER FUNCTIONS BY HELP OF INVISIBLE LASER LIGHT AND IS EQUIPPED WITH SAFETY SWITCHES TO AVOID EXPOSURE WHEN LID IS OPEN AND SAFETY INTERLOCKS ARE DEFEATED. IT IS DANGEROUS TO SET SAFETY SWITCHES OUT OF FUNCTION. THERE ARE NO USER'S SERVICEABLE PARTS INSIDE THE UNIT. LEAVE ALL SERVICE TO QUALIFIED SERVICE PERSONNEL.

Inside of the set is a laser component emitting a laser radiation over the limit for laser class 1.


Inuti apparaten finns en laserkomponent som avger laserstrålning över gränsen för laser klass 1.

IC INTERNAL BLOCK DIAGRAM


IC906 CX23035 (PX P.W.B.)
DIGITAL SIGNAL IC




IC901 TM5050 (PX P.W.B.)
PRE-AMP MODULE

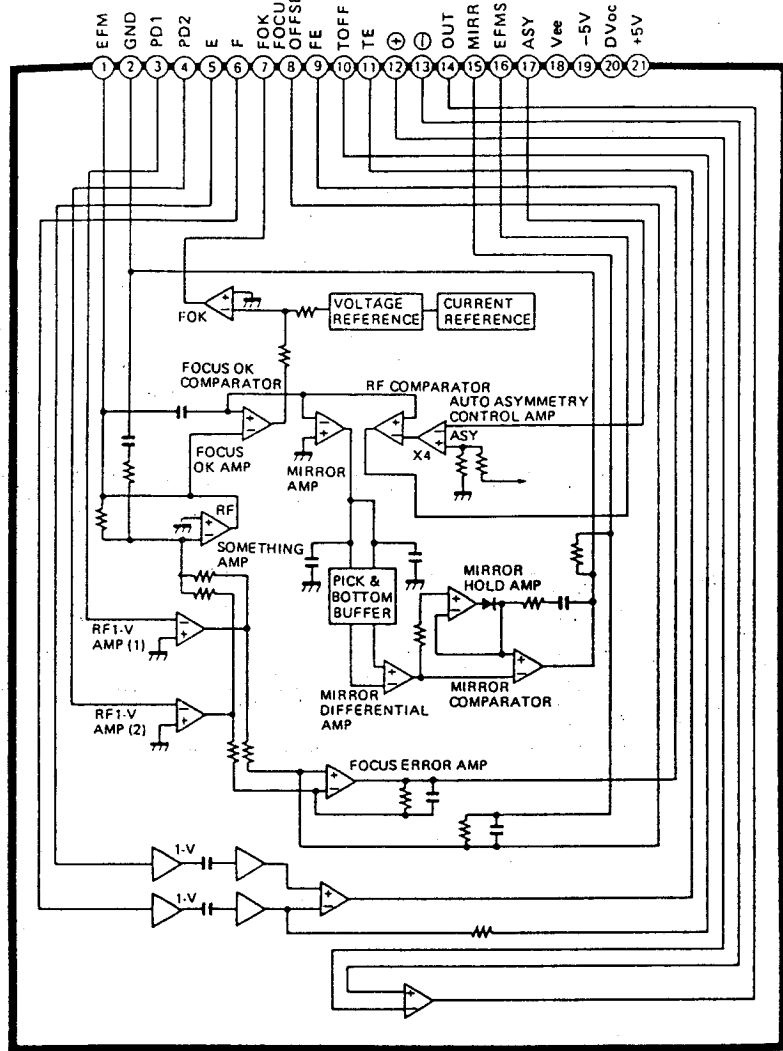

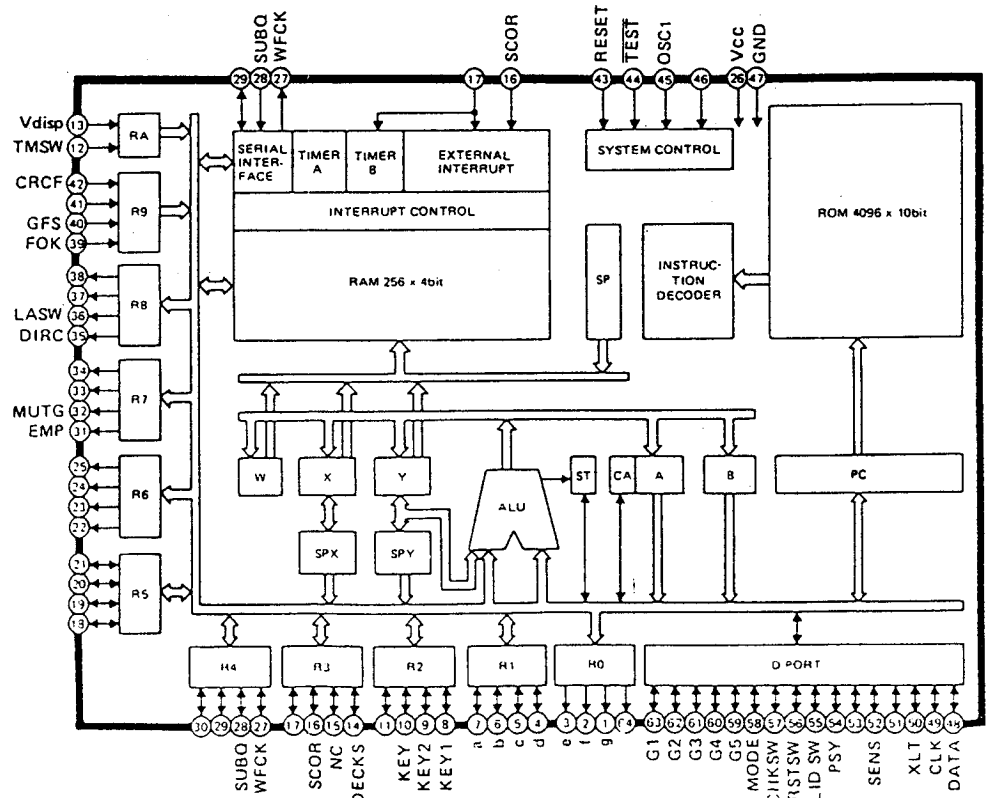
IC905 HD614042FD91 (PX P.W.B.)
MICROCOMPUTER




IC908 CX20133 (PX P.W.B.)
D/A CONVERTER

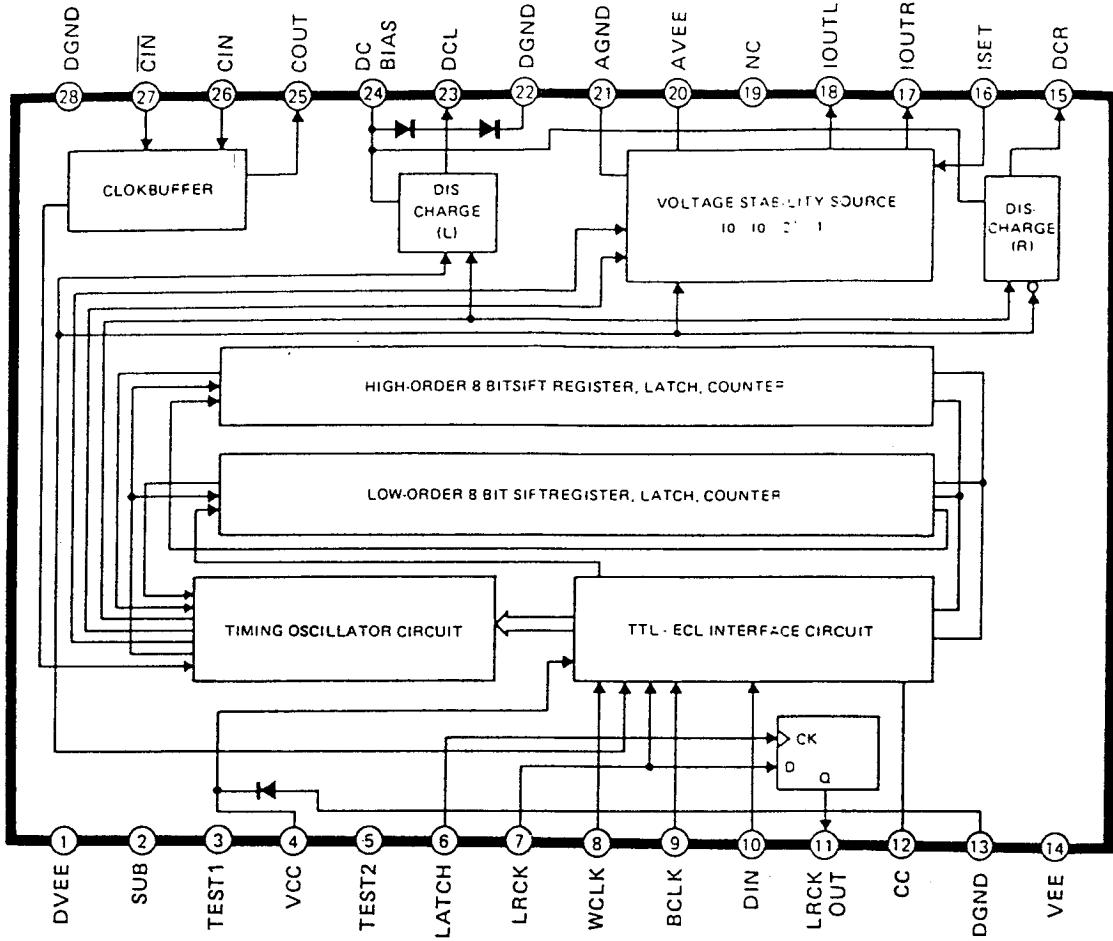



IC902 TM5060 (PX P.W.B.)
SERVO IC

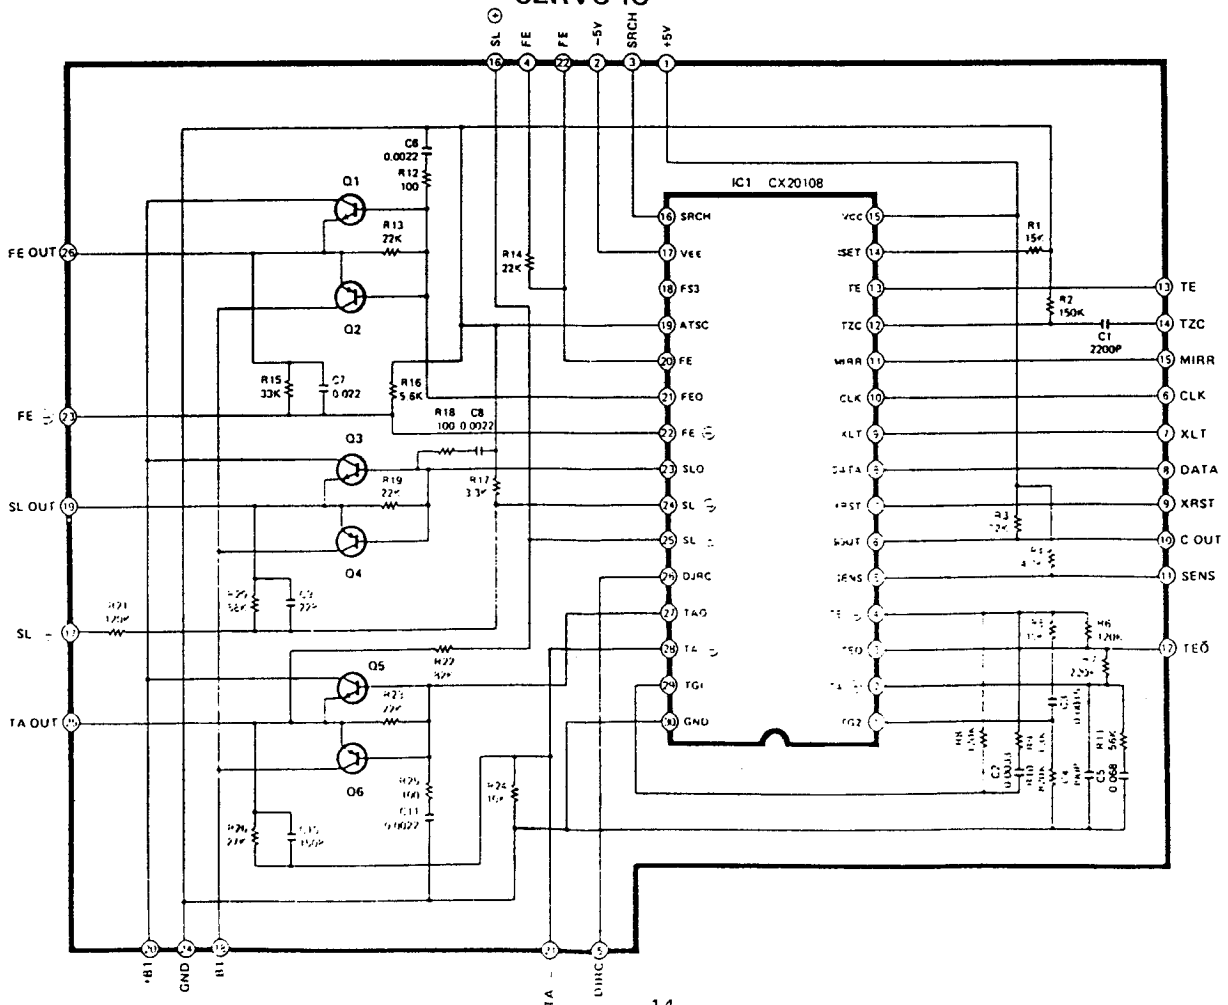

BLOCK DIAGRAM

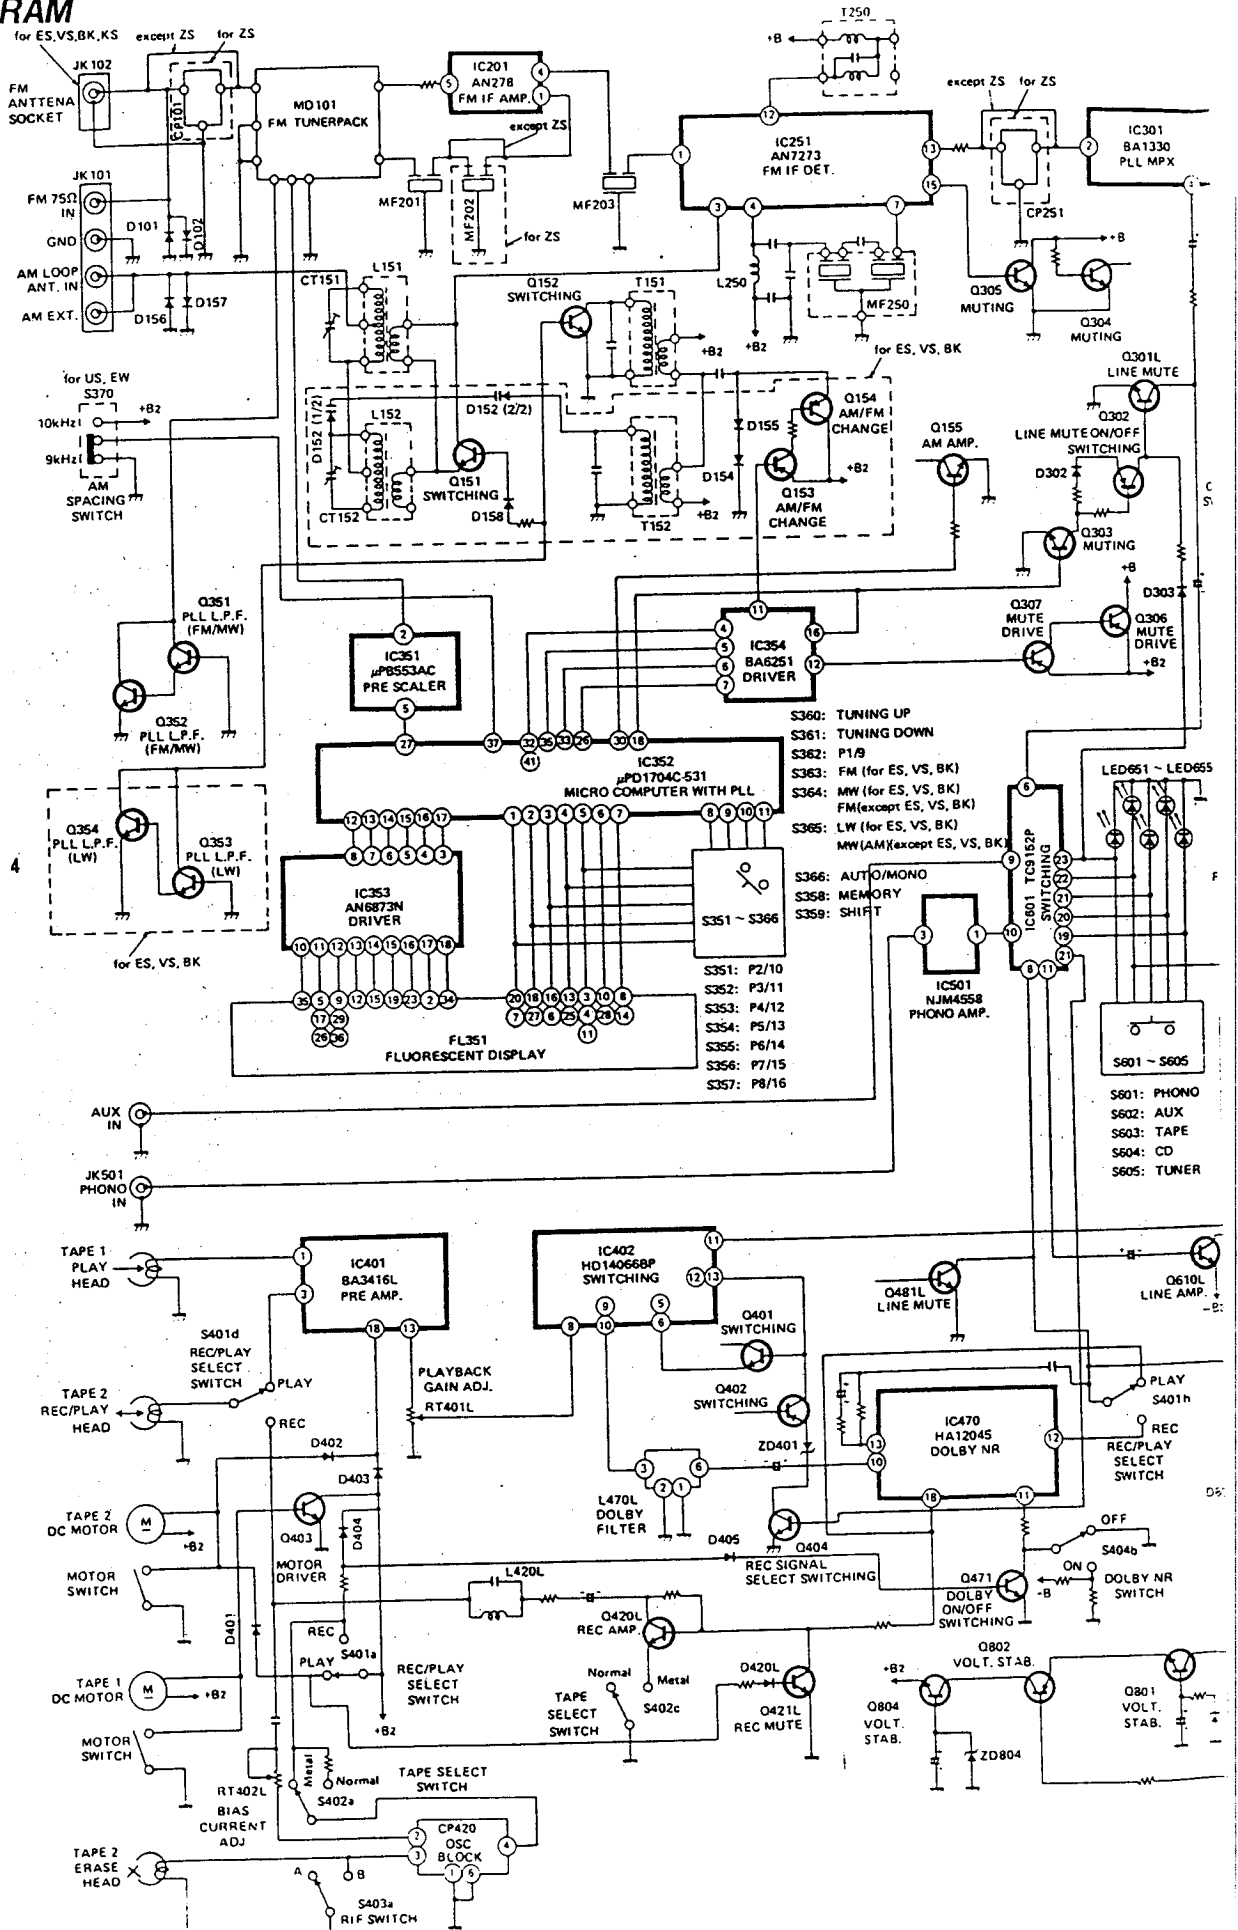

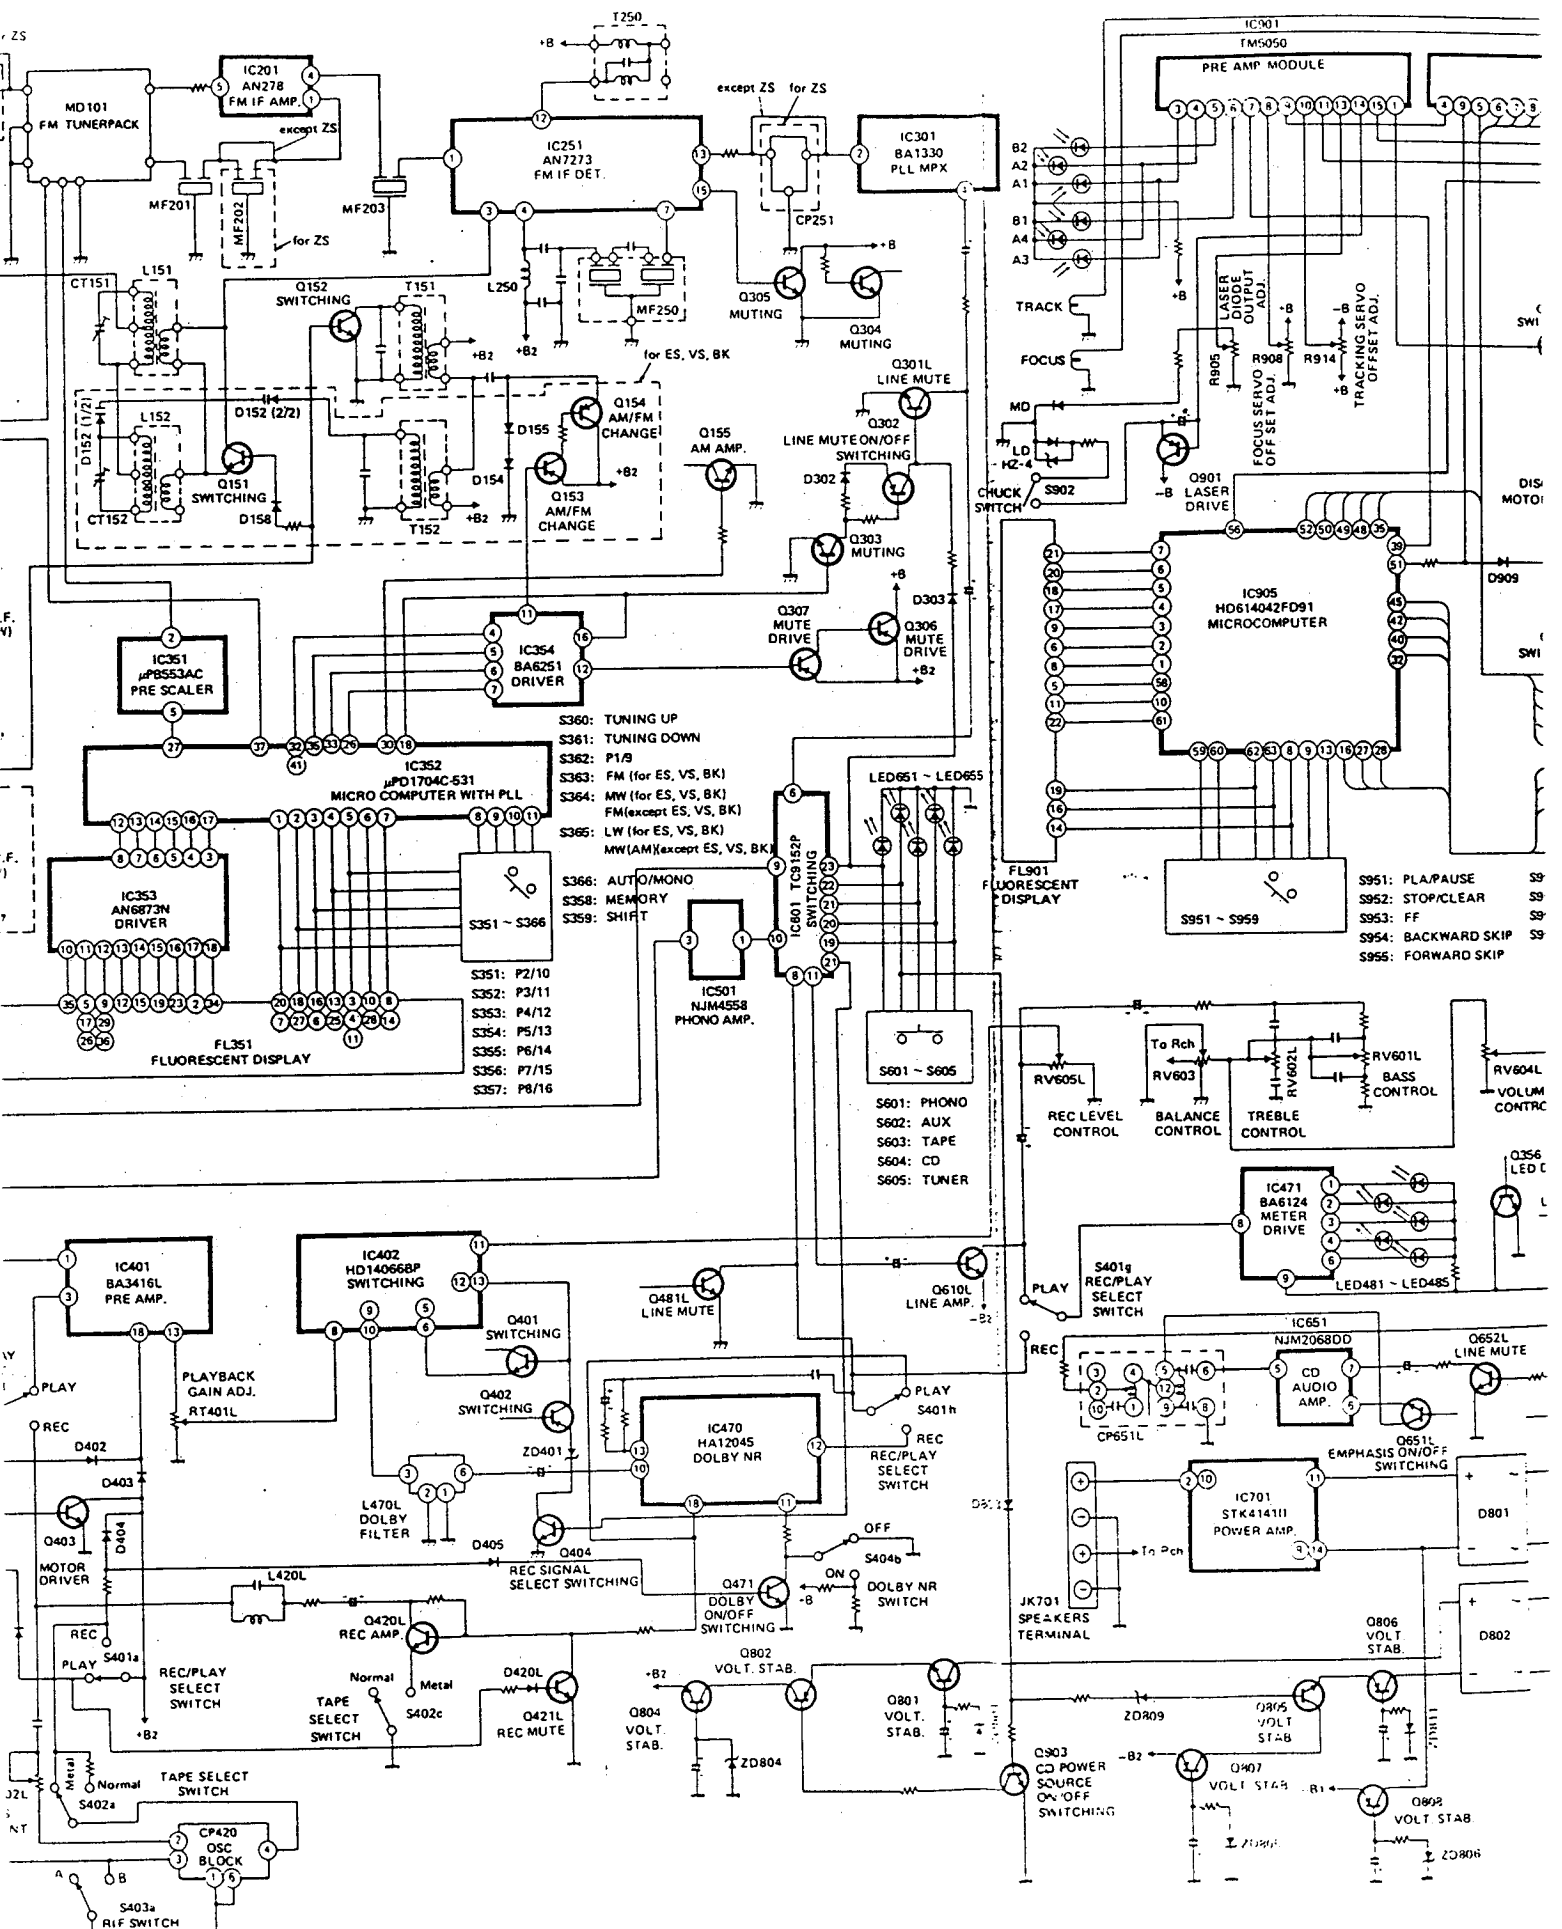

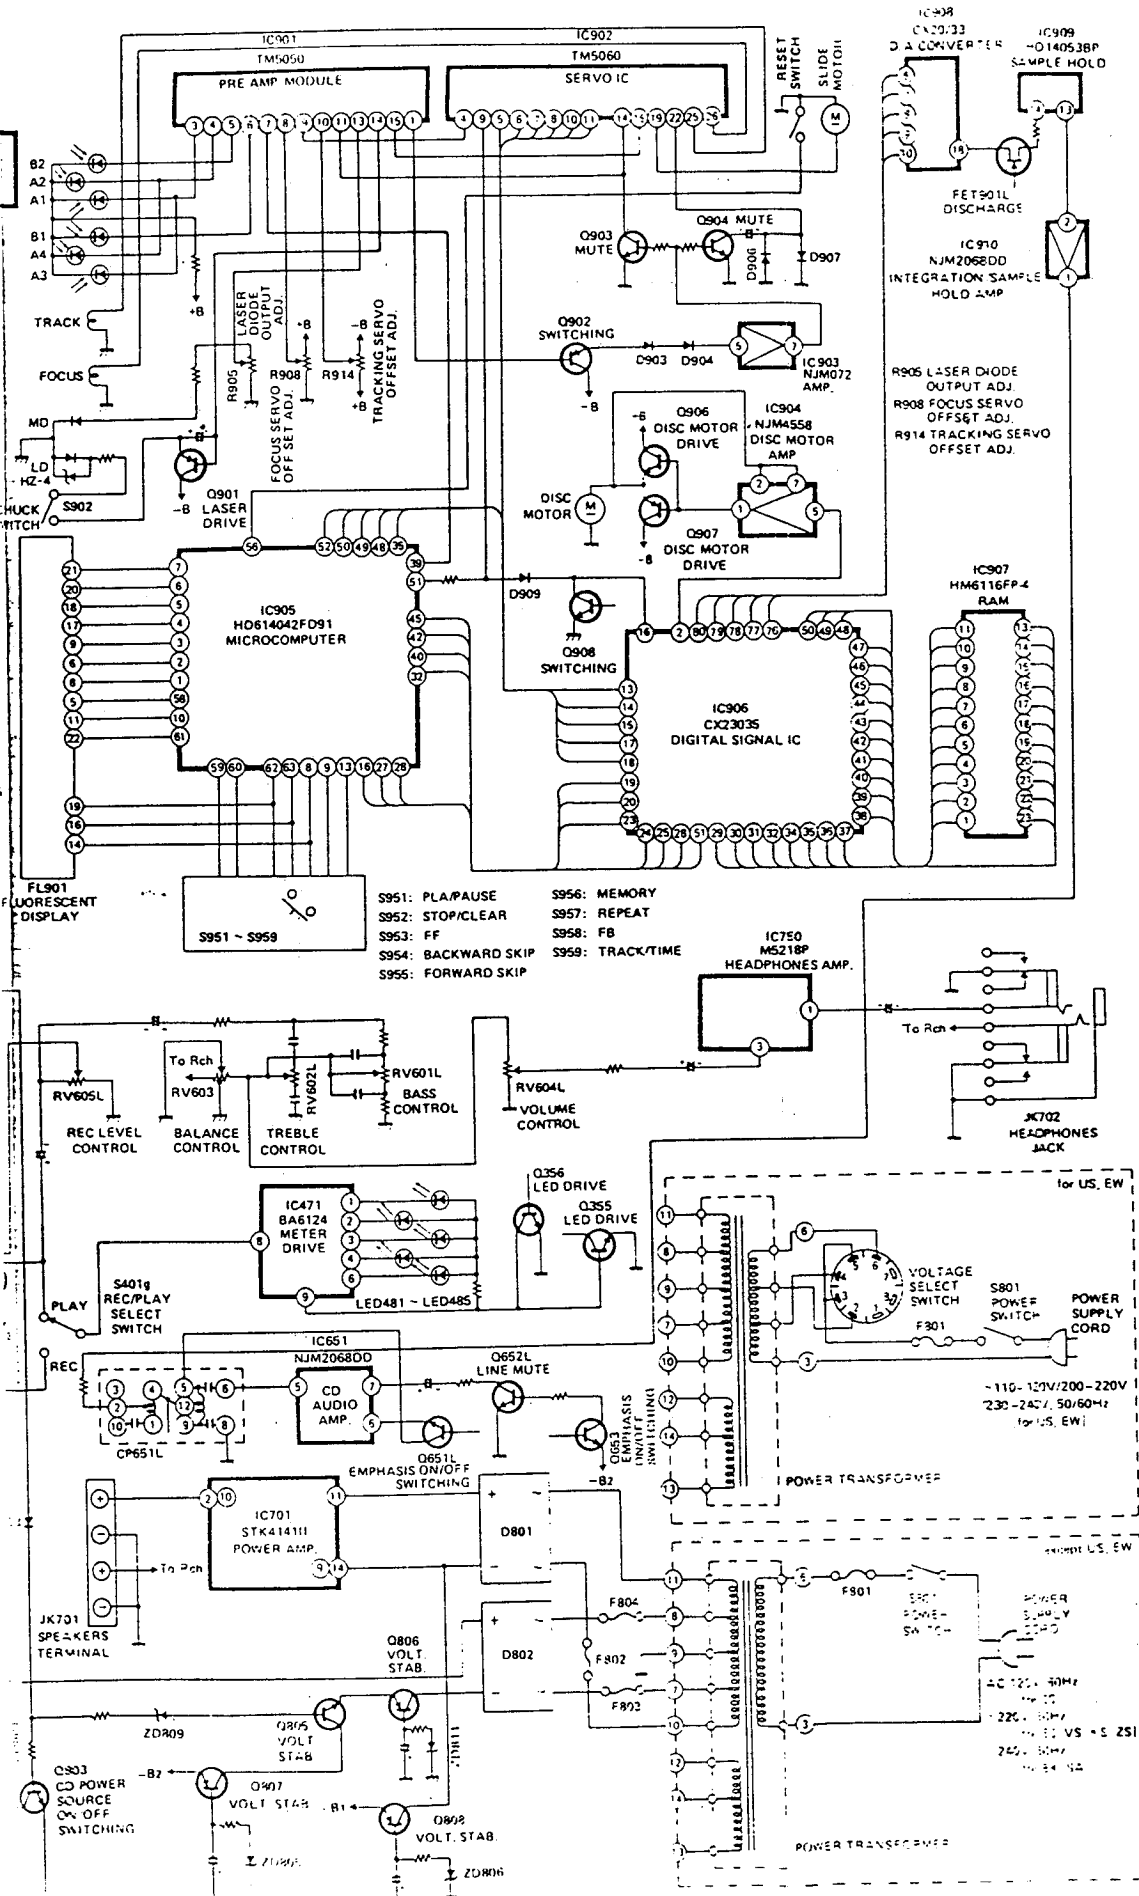


FM ANTENNA SOCKET
☆JK102

ANTENNA TERMINAL

S370
AM SPACING SWITCH

PHONO GND

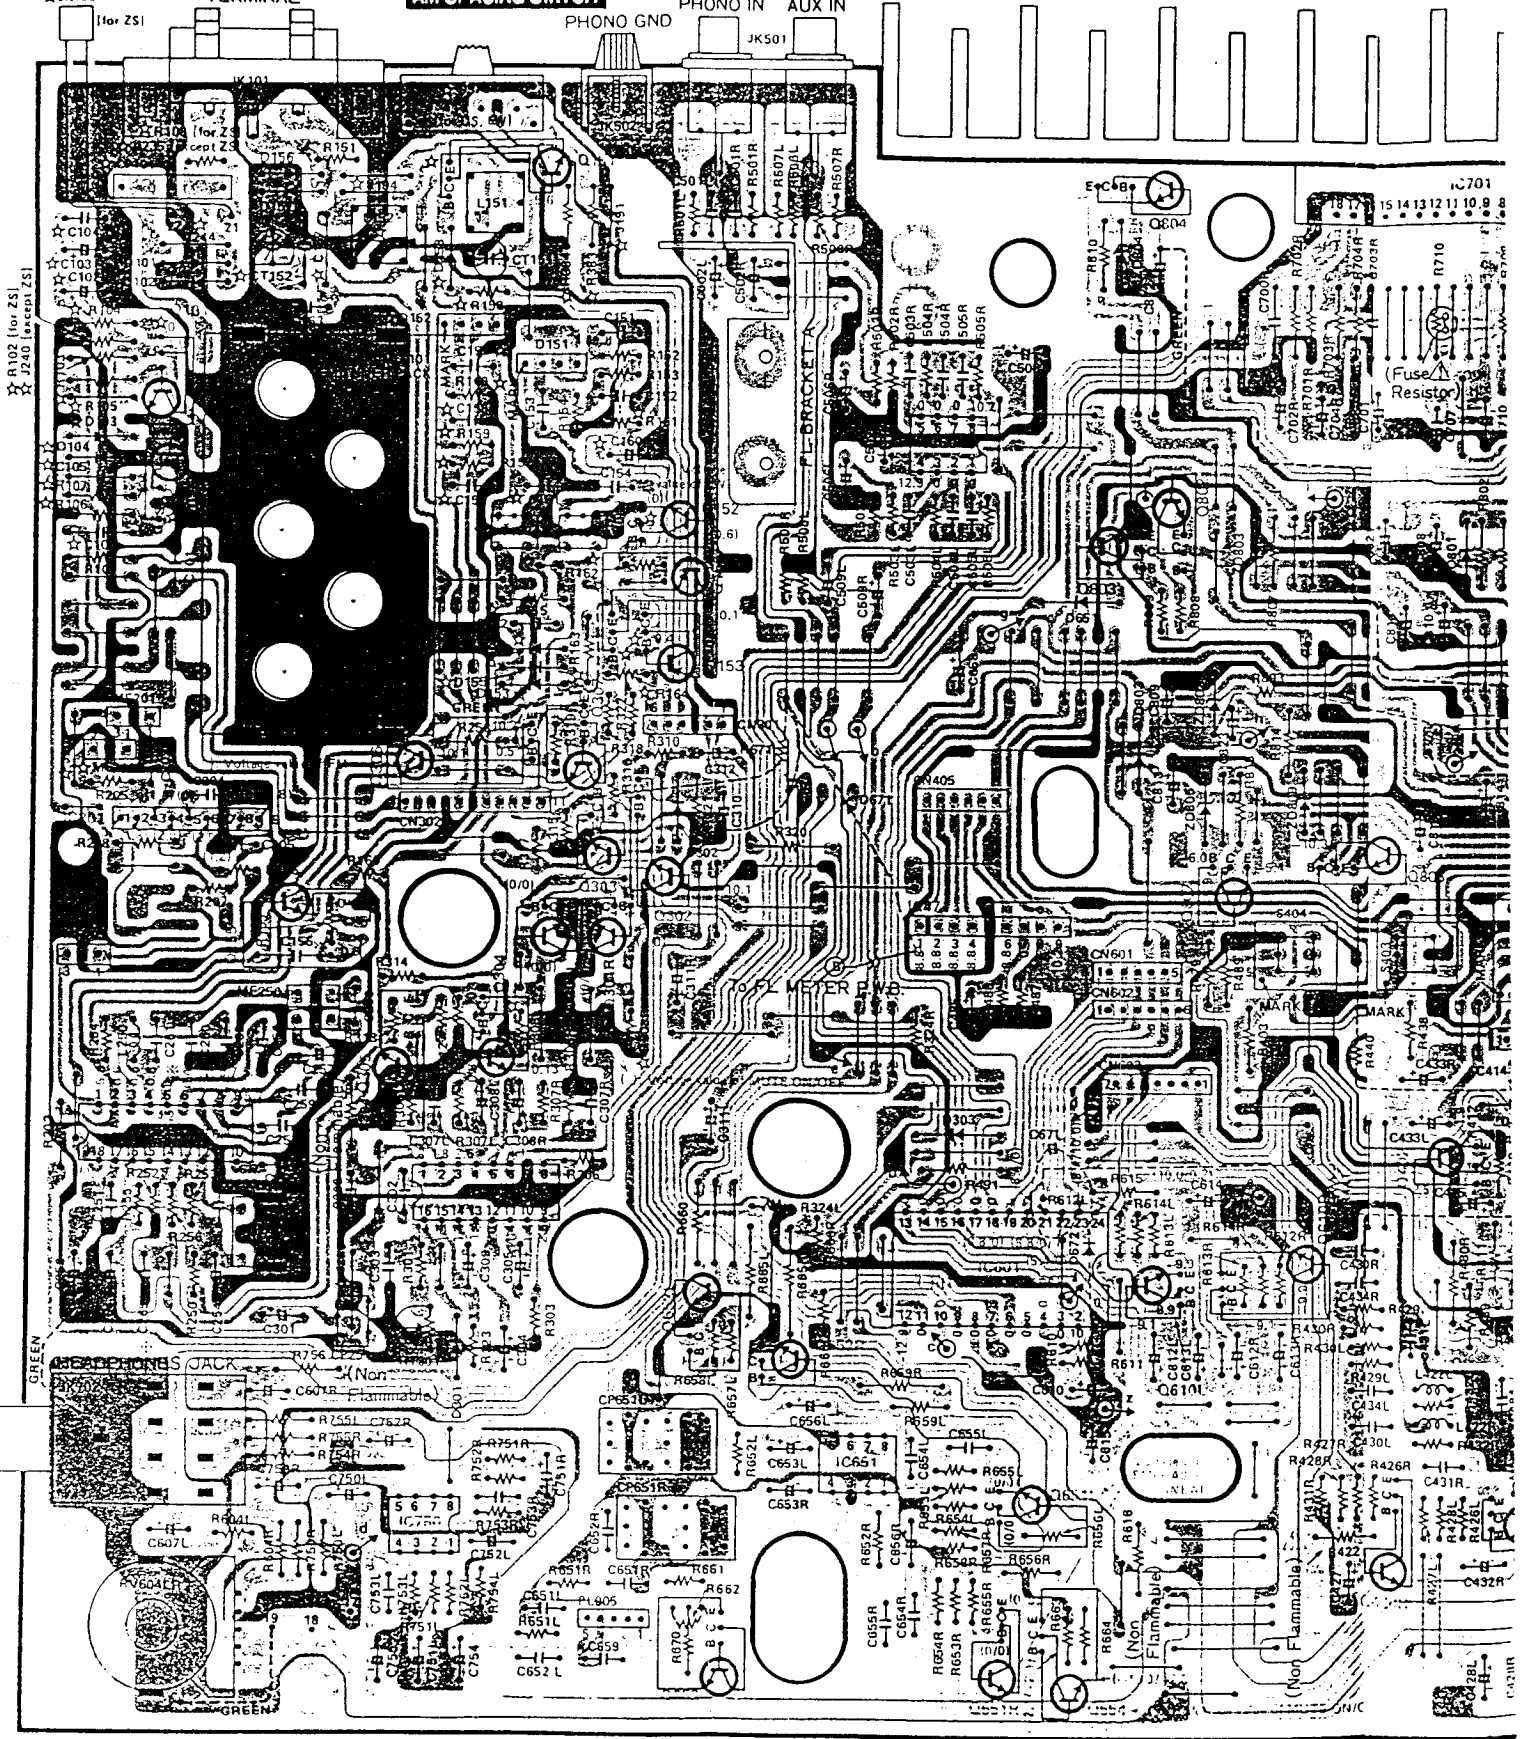PHONO IN
AUX IN
JK501




VOLUME CONTROL

RT301 FM MPX VCO ADJ.

S402 TAPE SELECT SWITCH

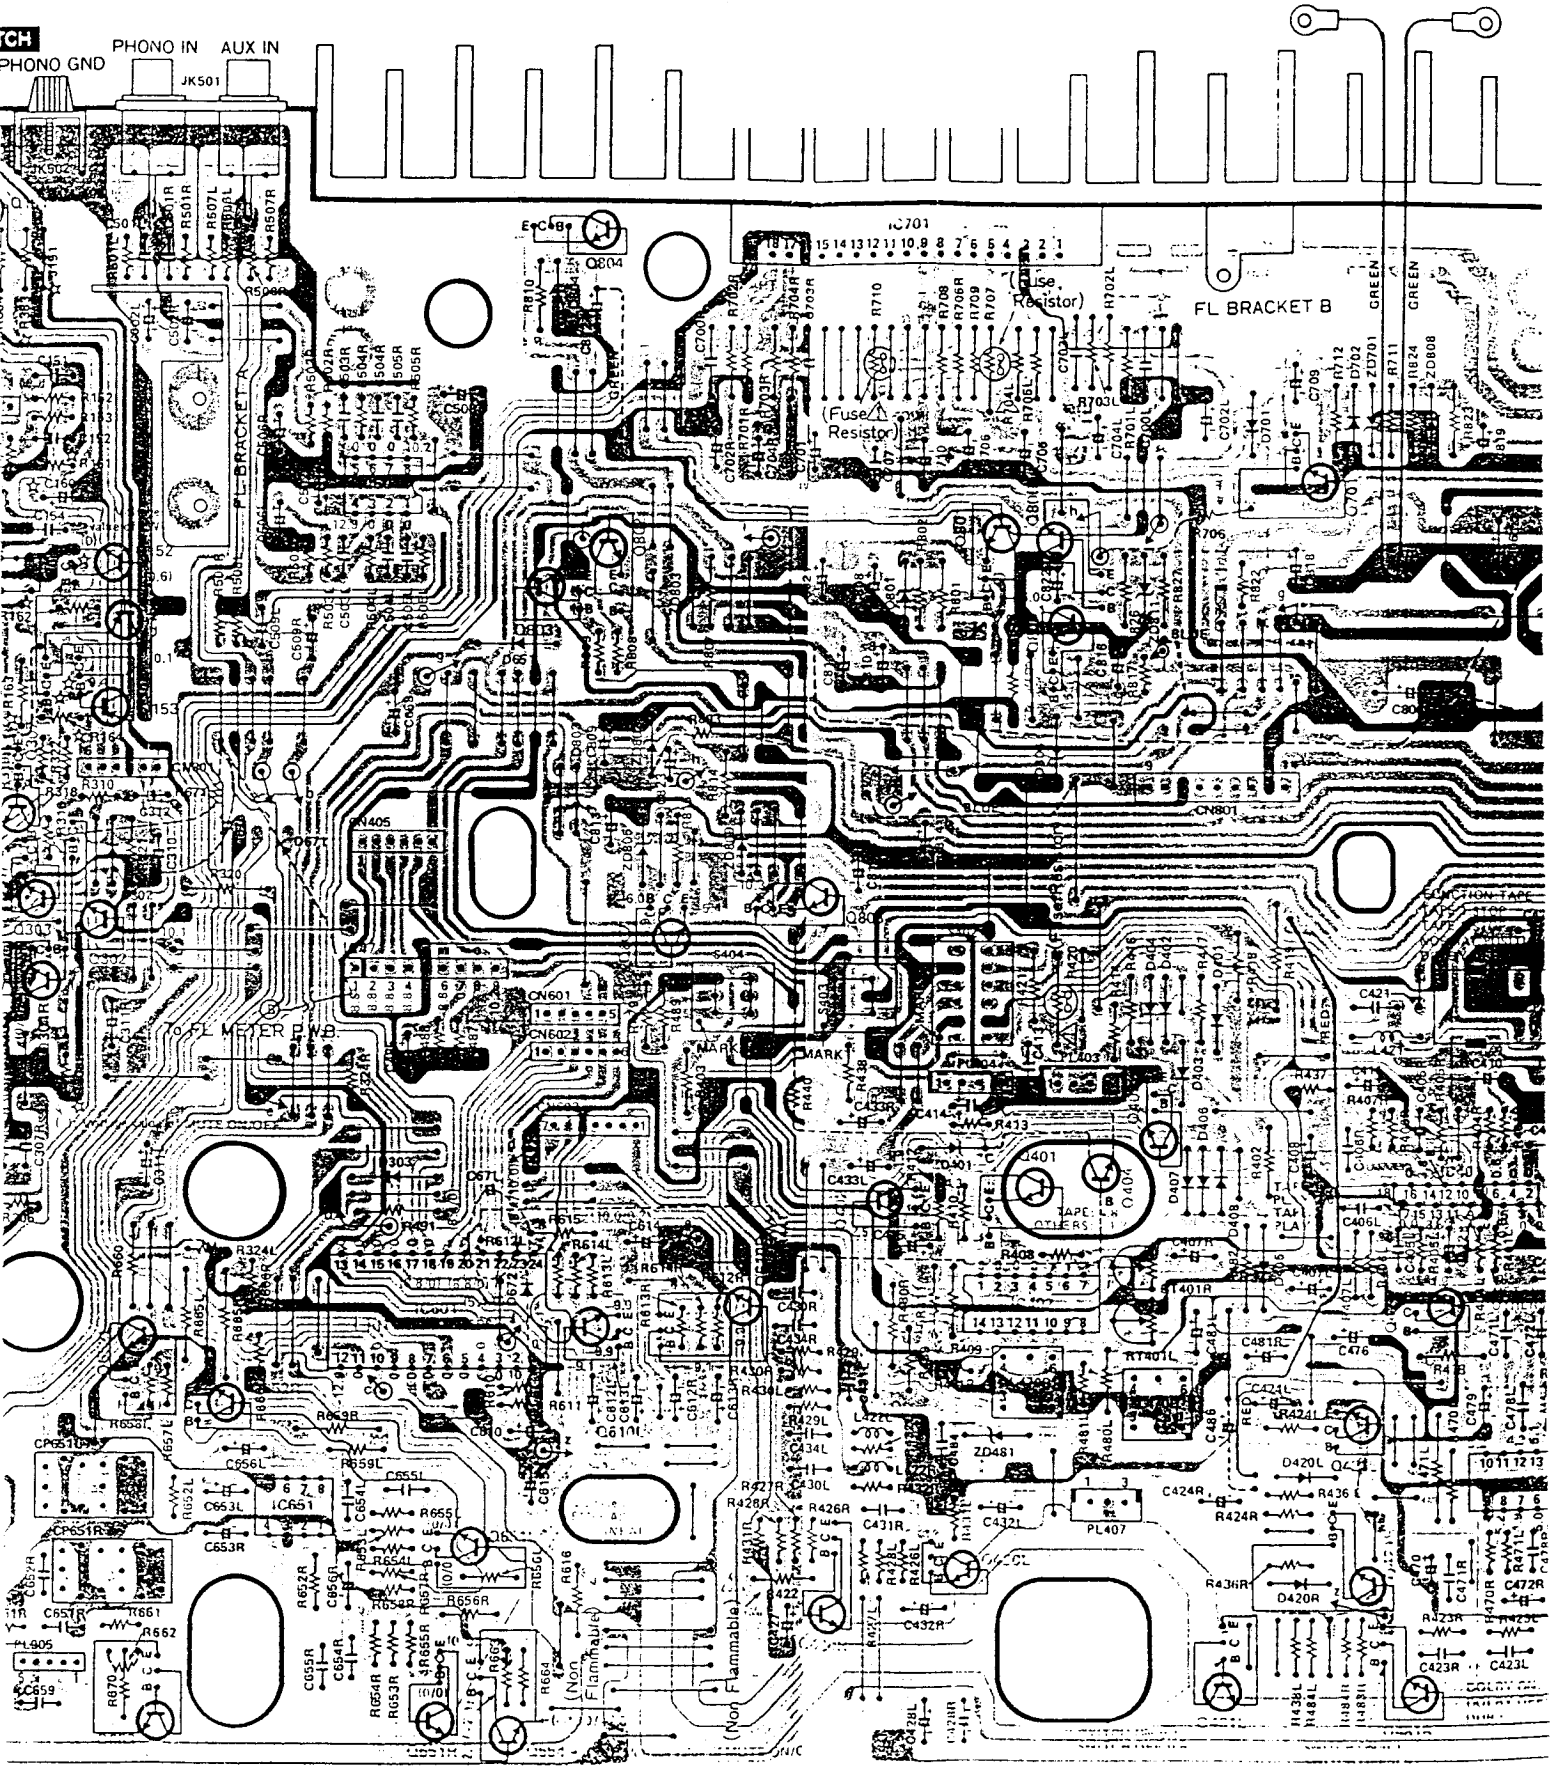S403 RIF SWITCH




S402 TAPE SELECT SWITCH

S403 RIF SWITCH

S404 DOLBY NR SWITCH

H1401R PLAYBACK GA

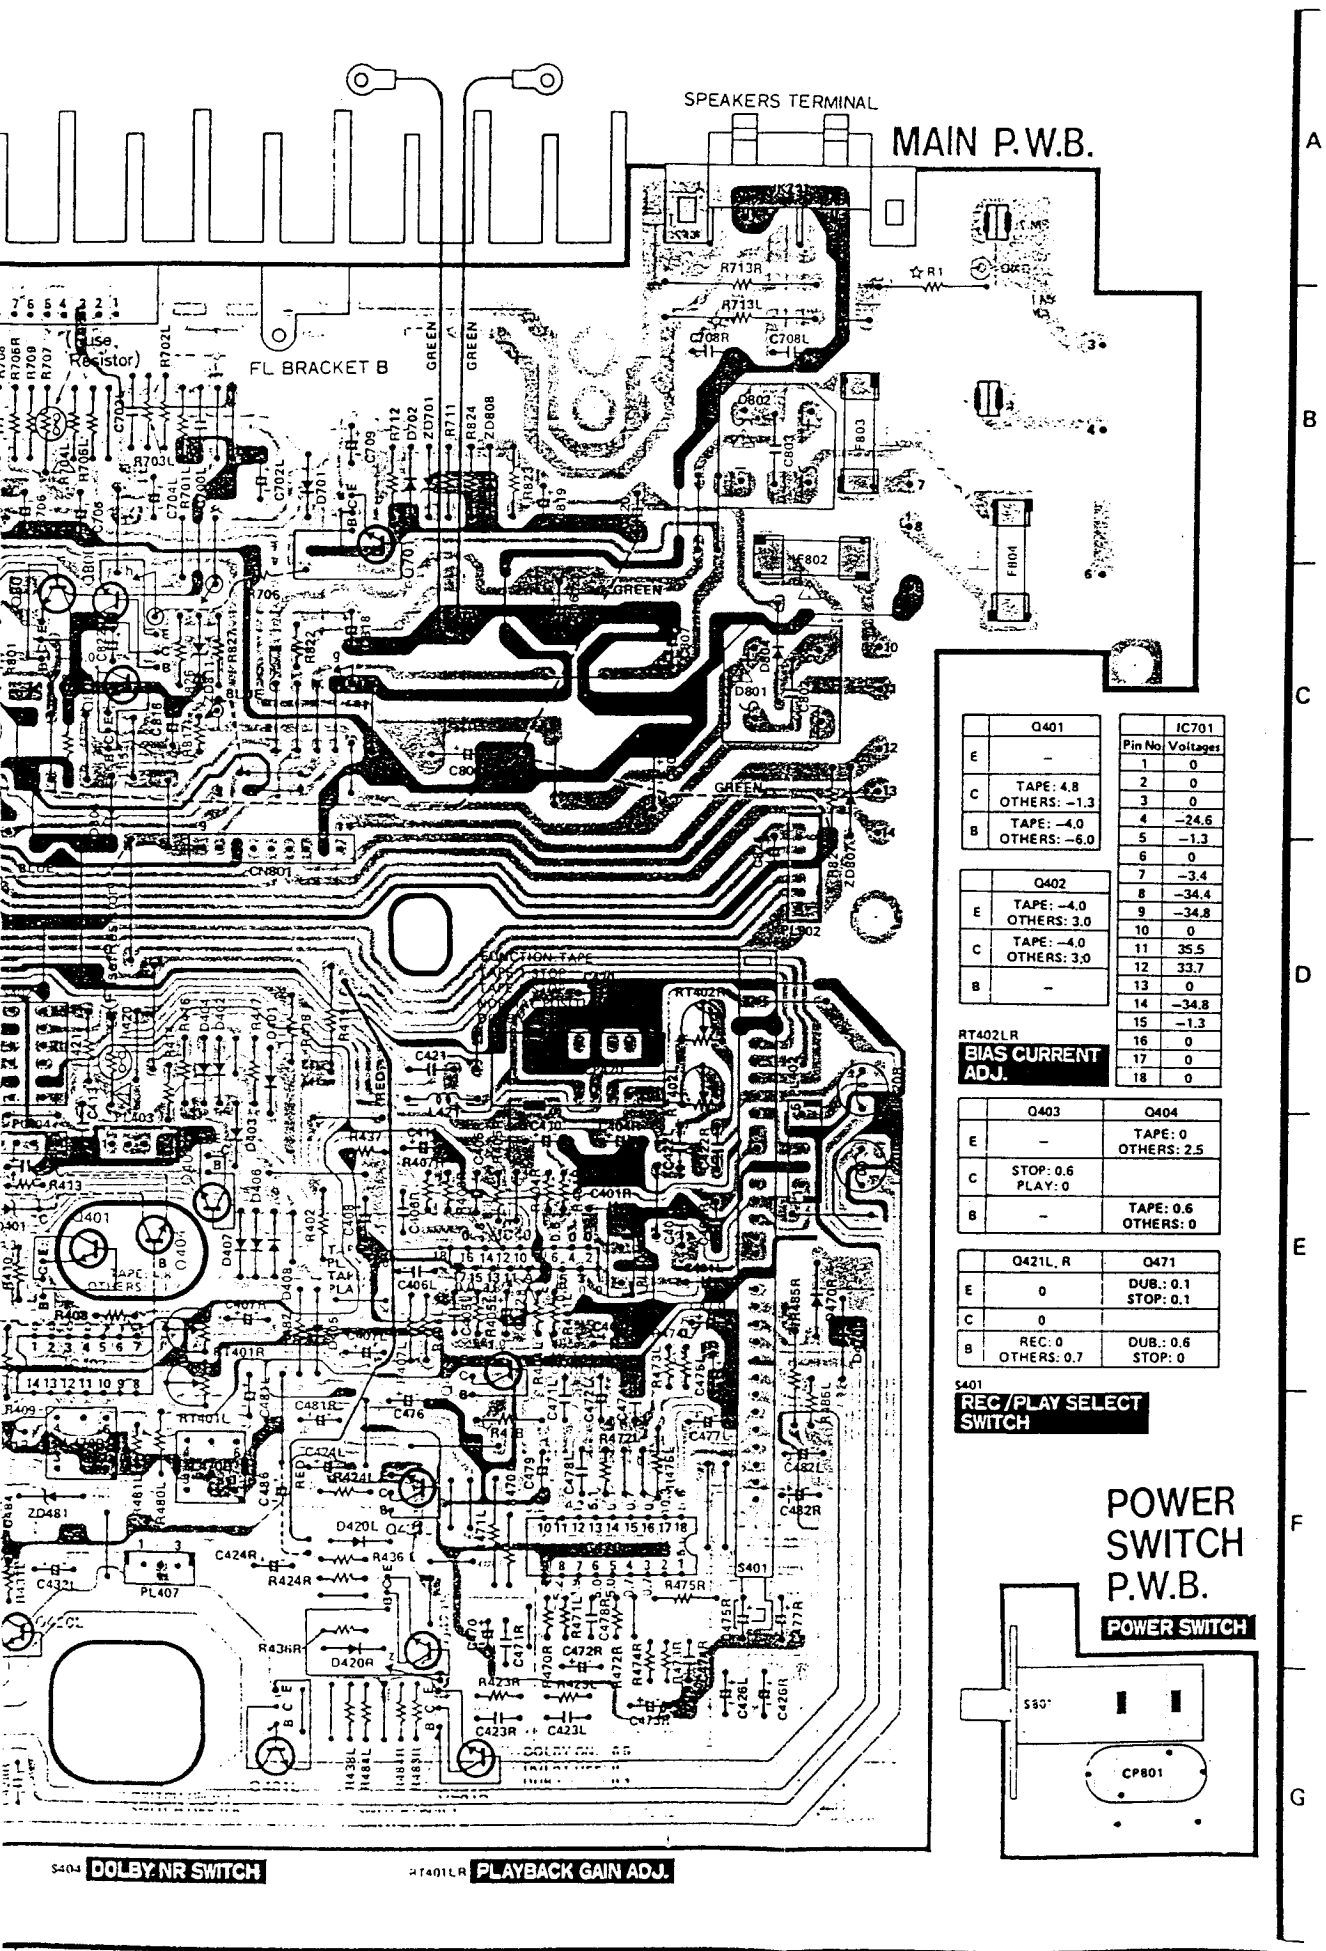citor. The circuit symbol (☆) means difference for destination. (Refer to the table in page 21, 22)



Q401		IC701	
		Pin No	Voltages
E	-	1	0
		2	0
C	TAPE: 4.8 OTHERS: -1.3	3	0
		4	-24.6
B	TAPE: -4.0 OTHERS: -6.0	5	-1.3
		6	0
		7	-3.4
		8	-34.4
E	TAPE: -4.0 OTHERS: 3.0	9	-34.8
		10	0
C	TAPE: -4.0 OTHERS: 3.0	11	35.5
		12	33.7
B	-	13	0
		14	-34.8
		15	-1.3
		16	0
		17	0
		18	0


RT402LR
BIAS CURRENT ADJ.

Q403		Q404	
E	-	TAPE: 0	OTHERS: 2.5
C	STOP: 0.6 PLAY: 0		
B	-	TAPE: 0.6	OTHERS: 0

Q421L, R		Q471	
E	0	DUB: 0.1	STOP: 0.1
C	0		
B	REC: 0 OTHERS: 0.7	DUB: 0.6	STOP: 0

S401
REC/PLAY SELECT SWITCH

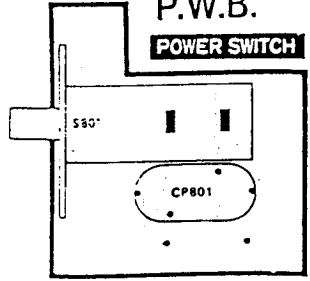
POWER SWITCH P.W.B.




S404 **DOLBY NR SWITCH**

RT401LR **PLAYBACK GAIN ADJ.**

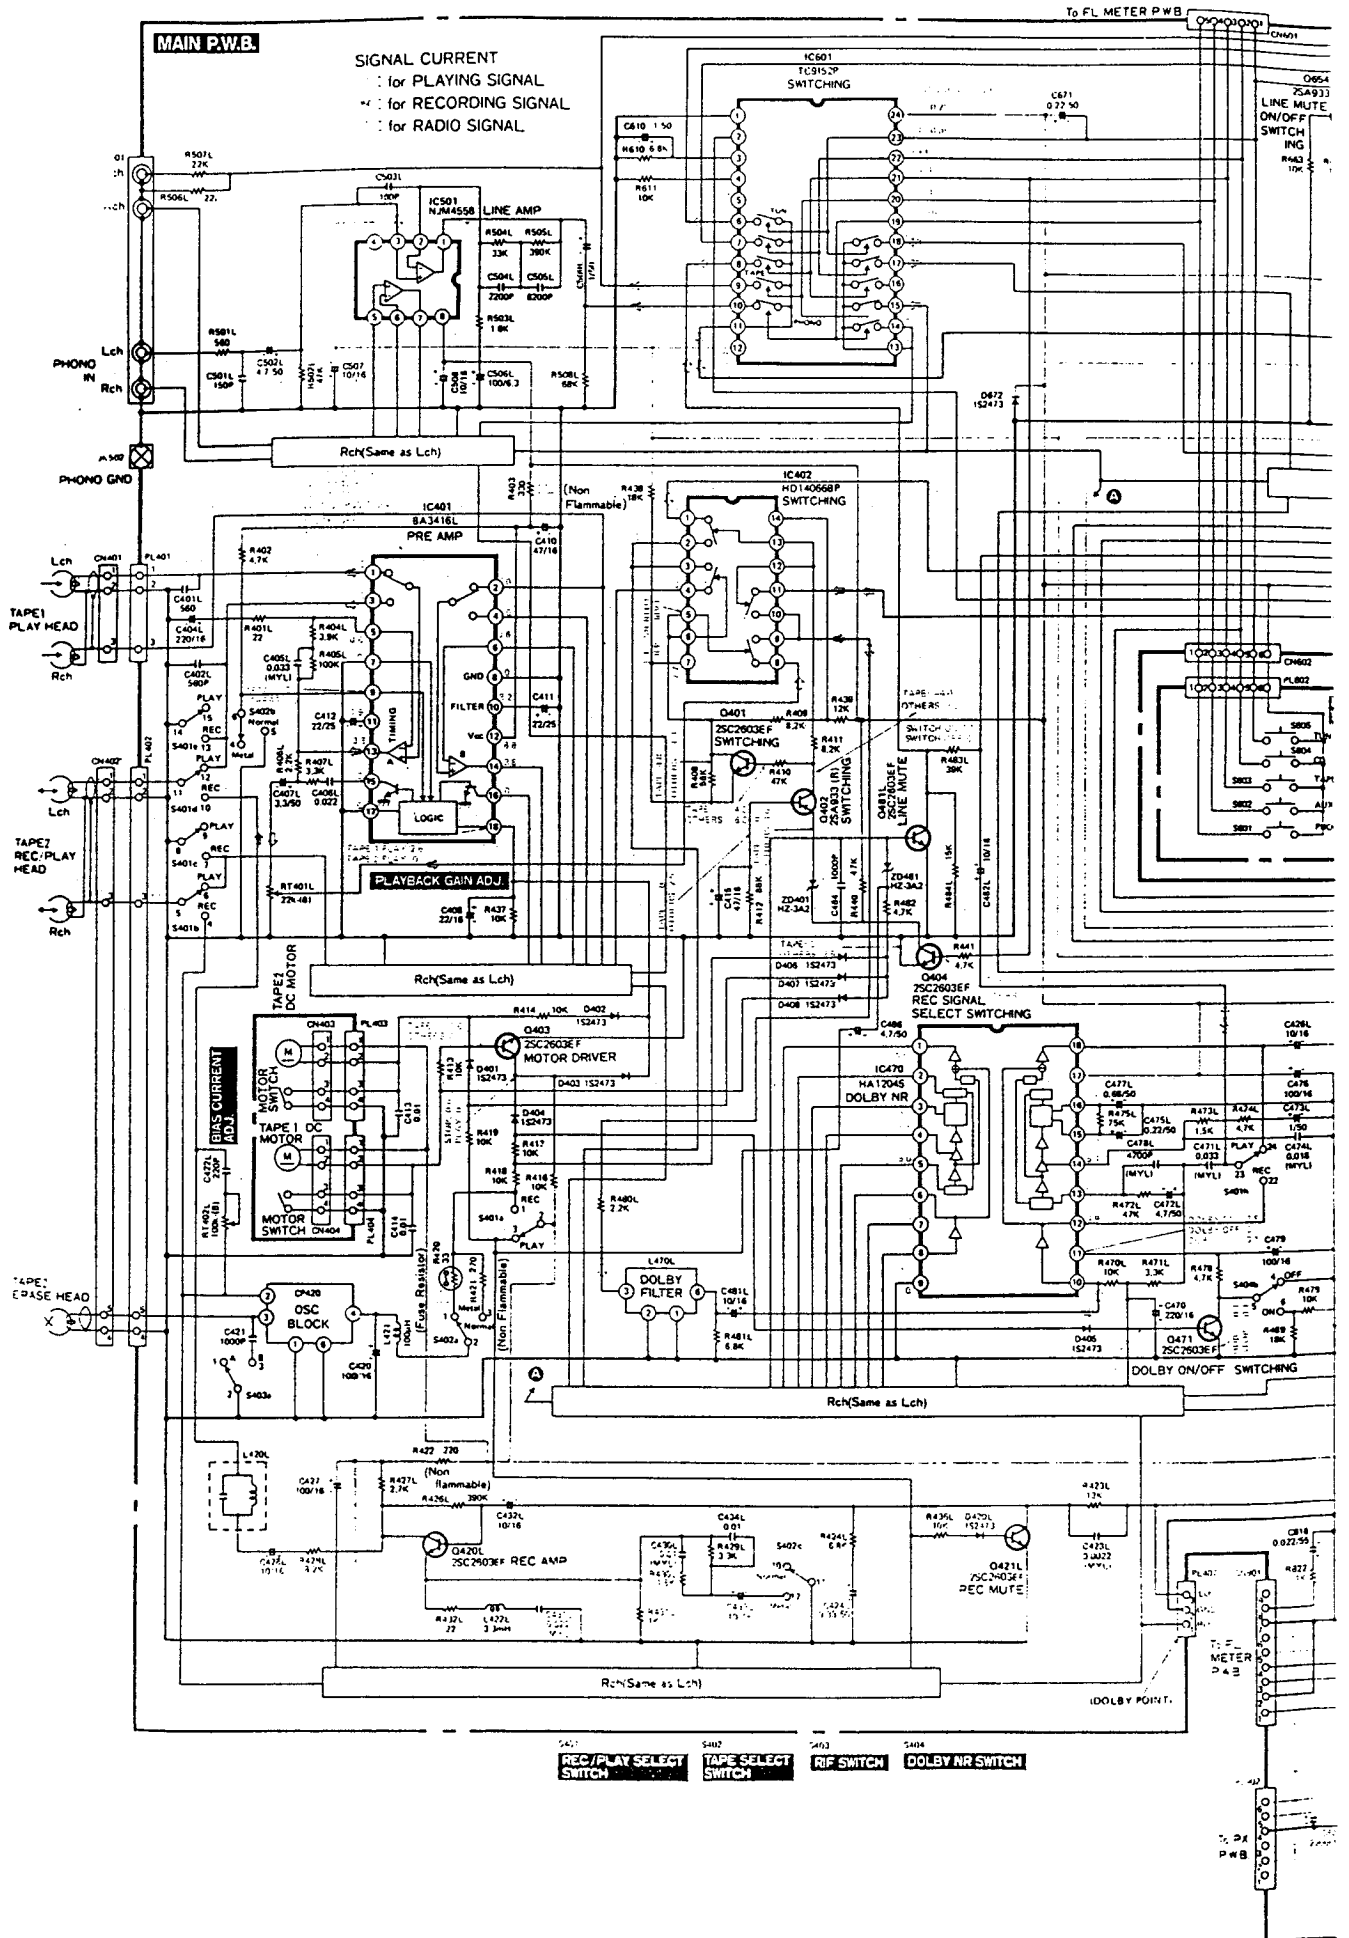JIT DIAGRAM [~~XXXX~~ :+B, ~~XXXX~~ : -B] * Axial lead cylindrical ceramic capacitor. The circ




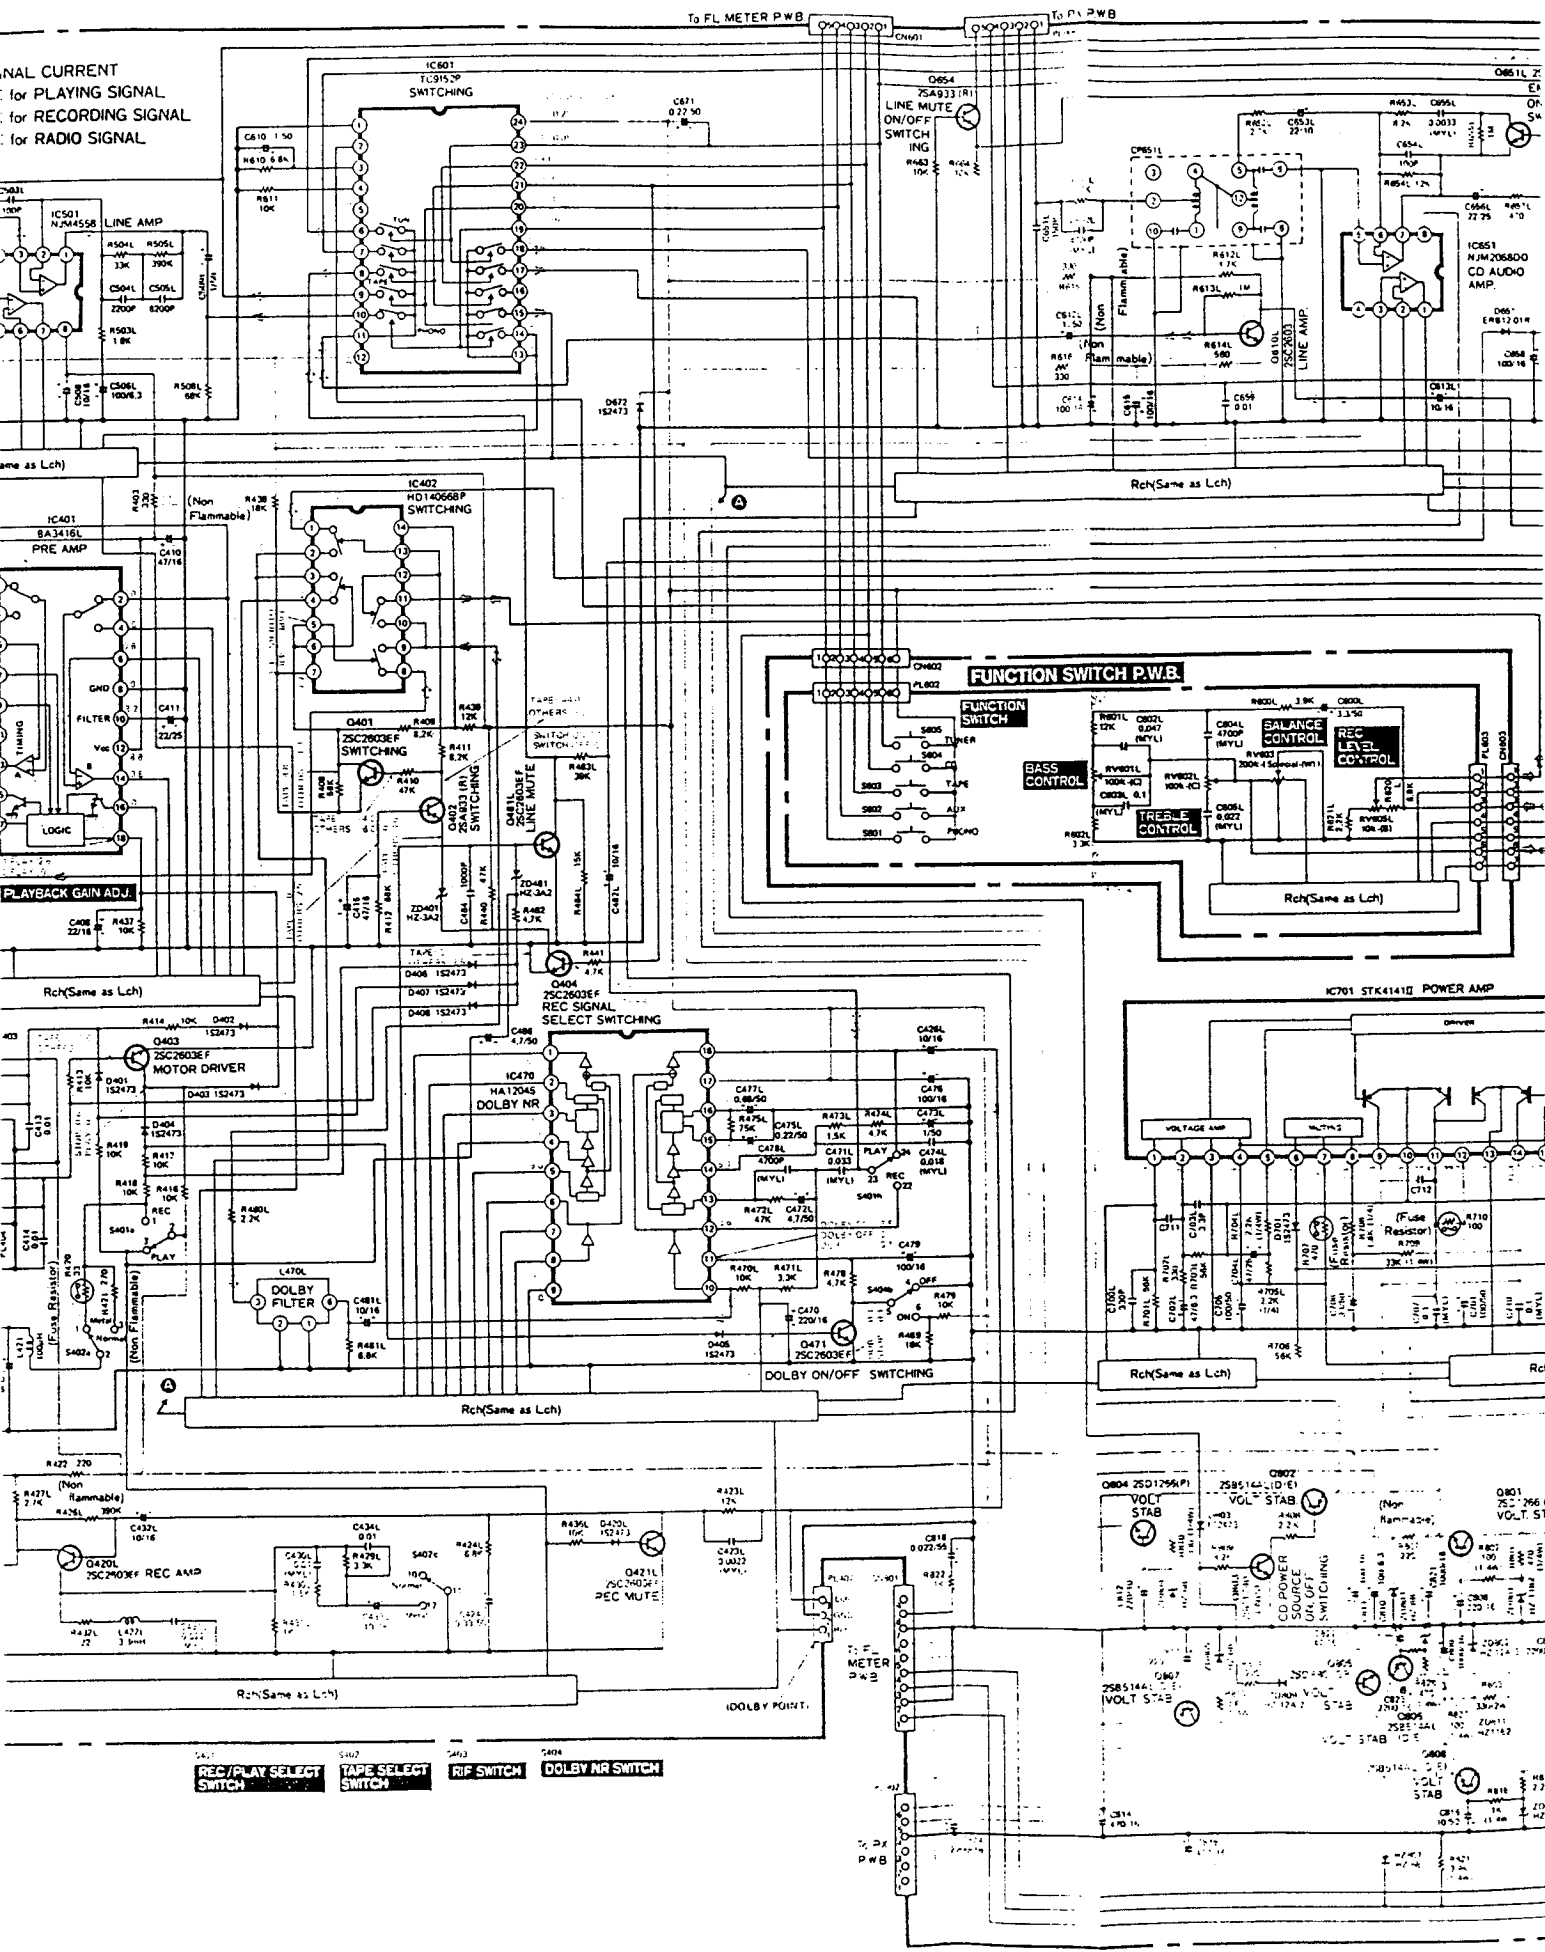:+B,
 : -B]
 * Axial lead cylindrical ceramic capacitor. The circuit symbol (☆) means difference for destination.




REC/PLAY SELECT SWITCH **TAPE SELECT SWITCH** **RF SWITCH** **DOLBY NR SWITCH**

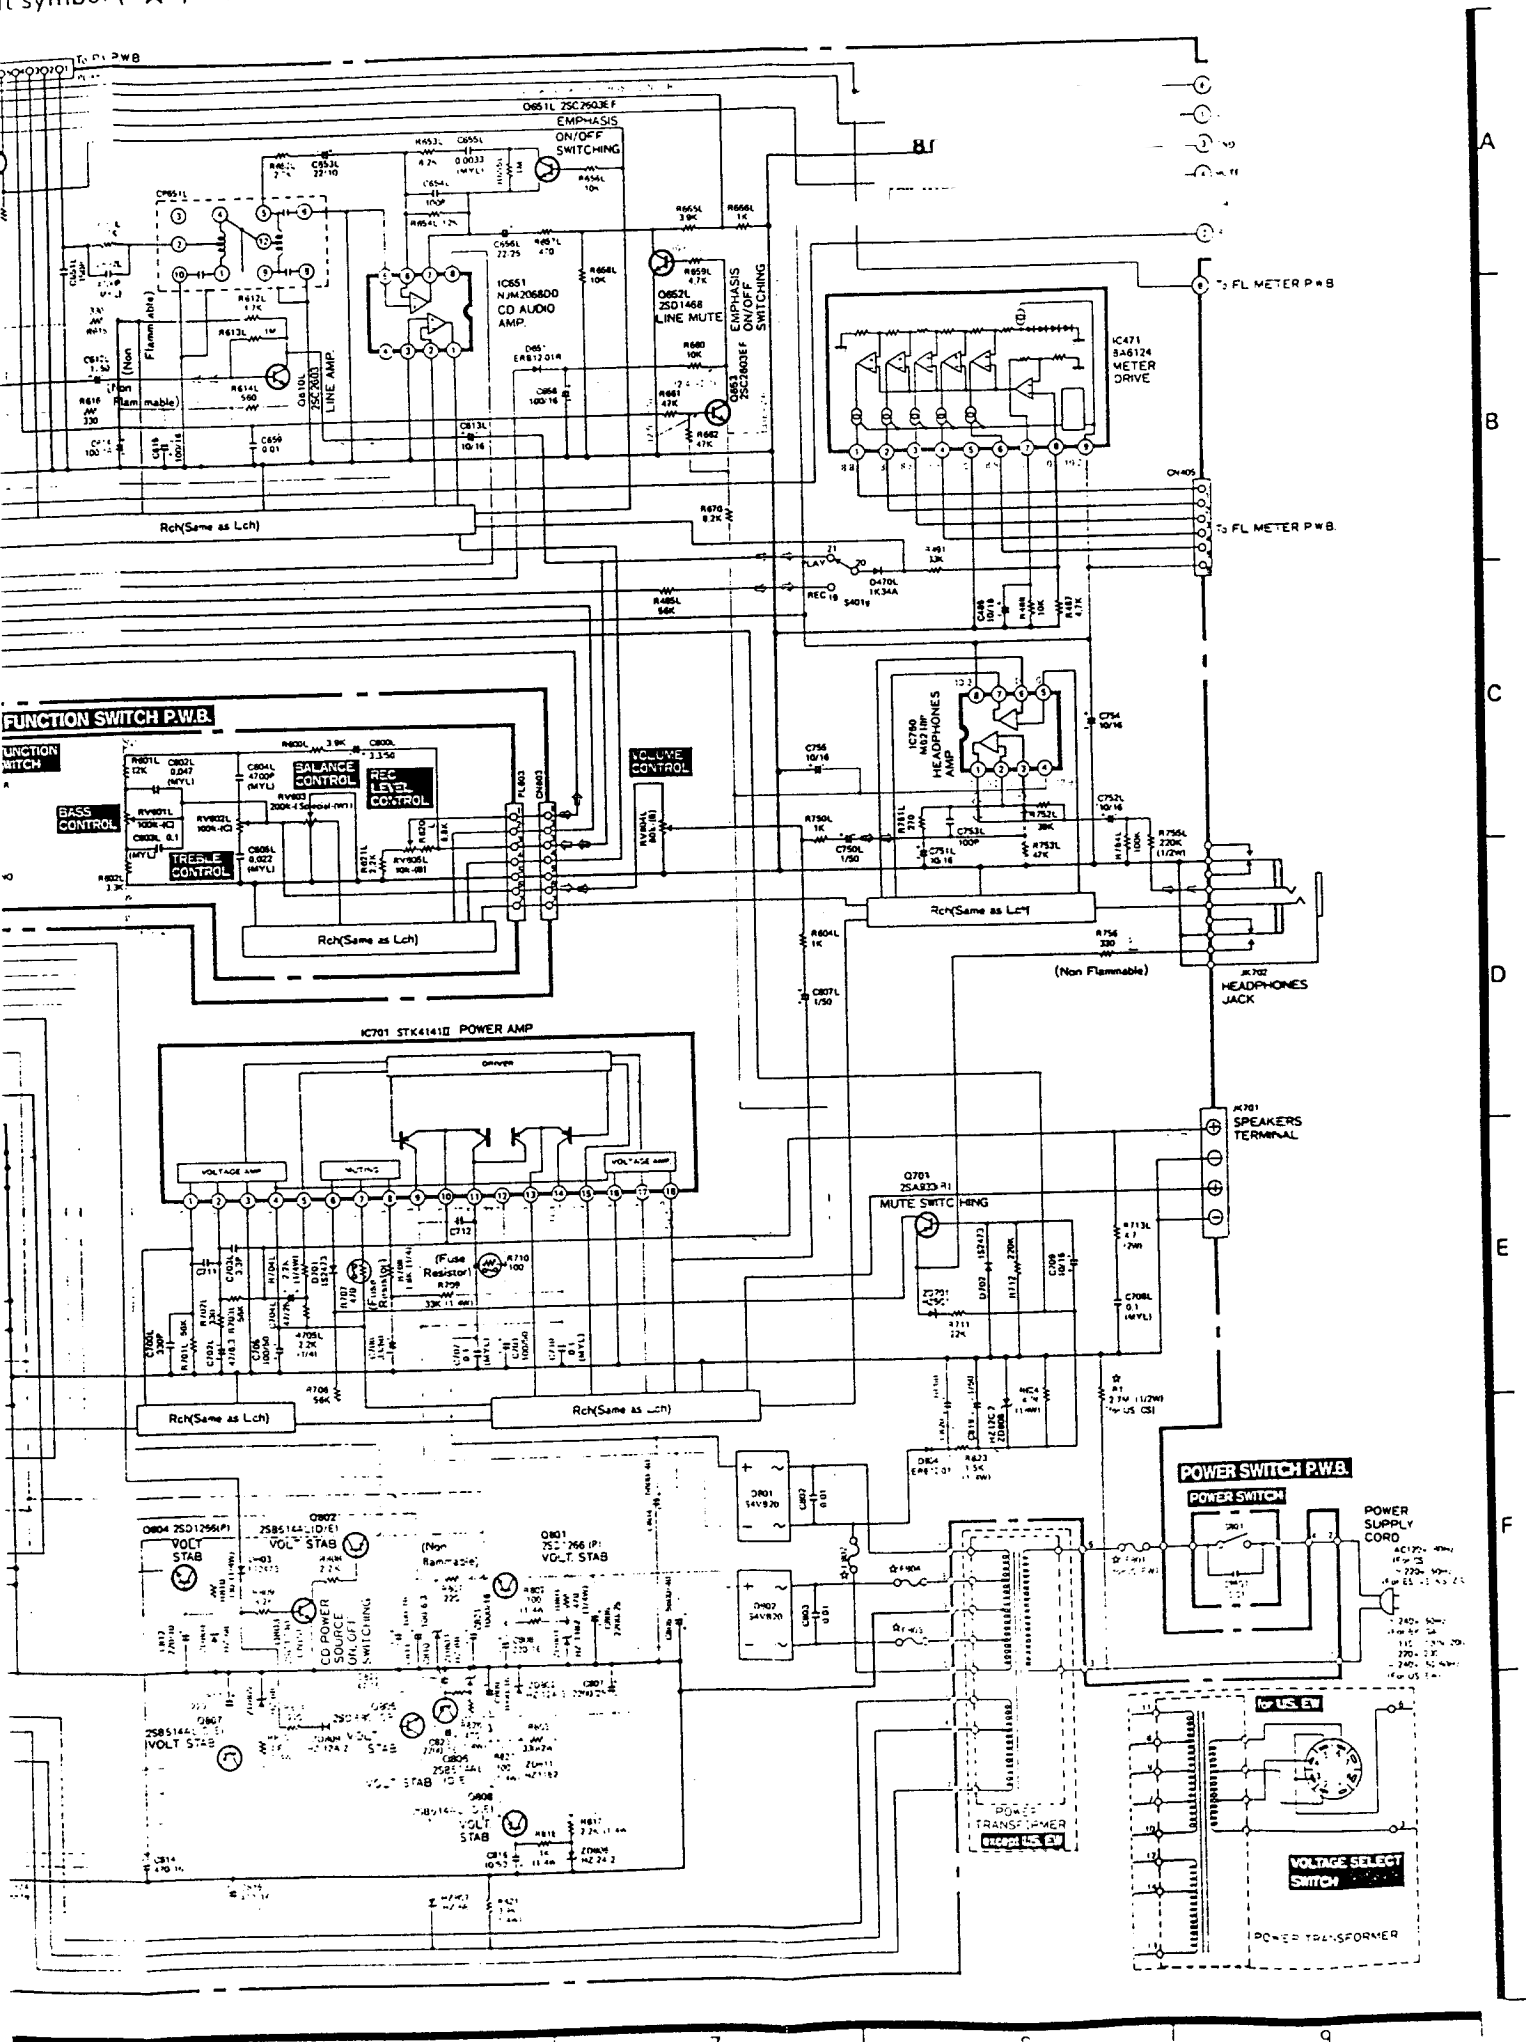☆ symbol (☆) means difference for destination. (Refer to the table in page 29, 30)



FUNCTION SWITCH P.W.B.

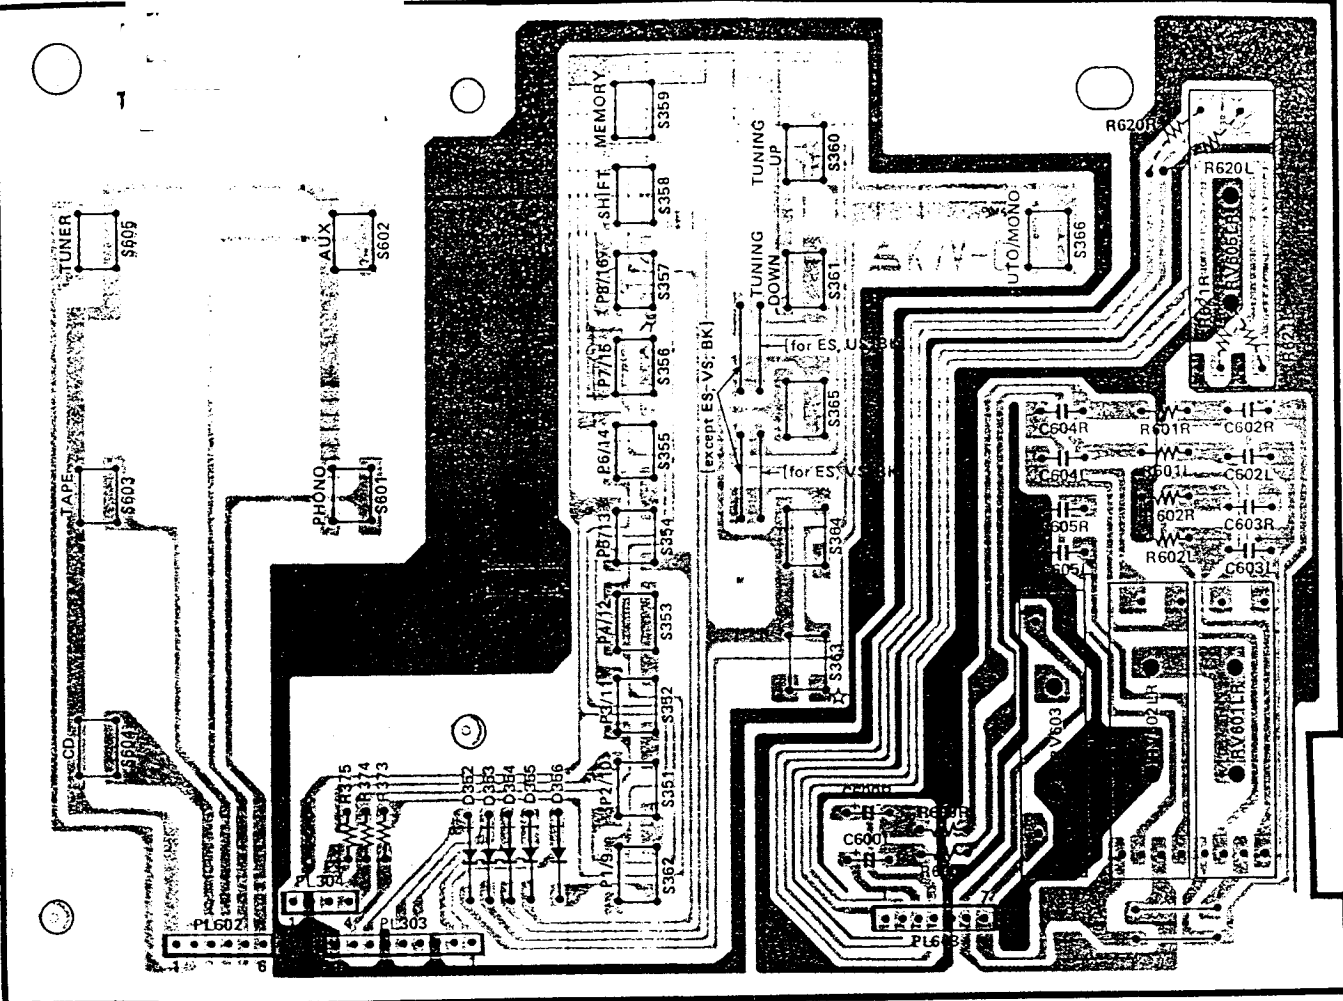


RV605LR
REC LEVEL CON

	S363	S36
for ES, VS, BK	FM	MY
except ES, VS, BK	-	FA

RV601LR
BASS CONTROL


RV602LR
TREBLE CONTR

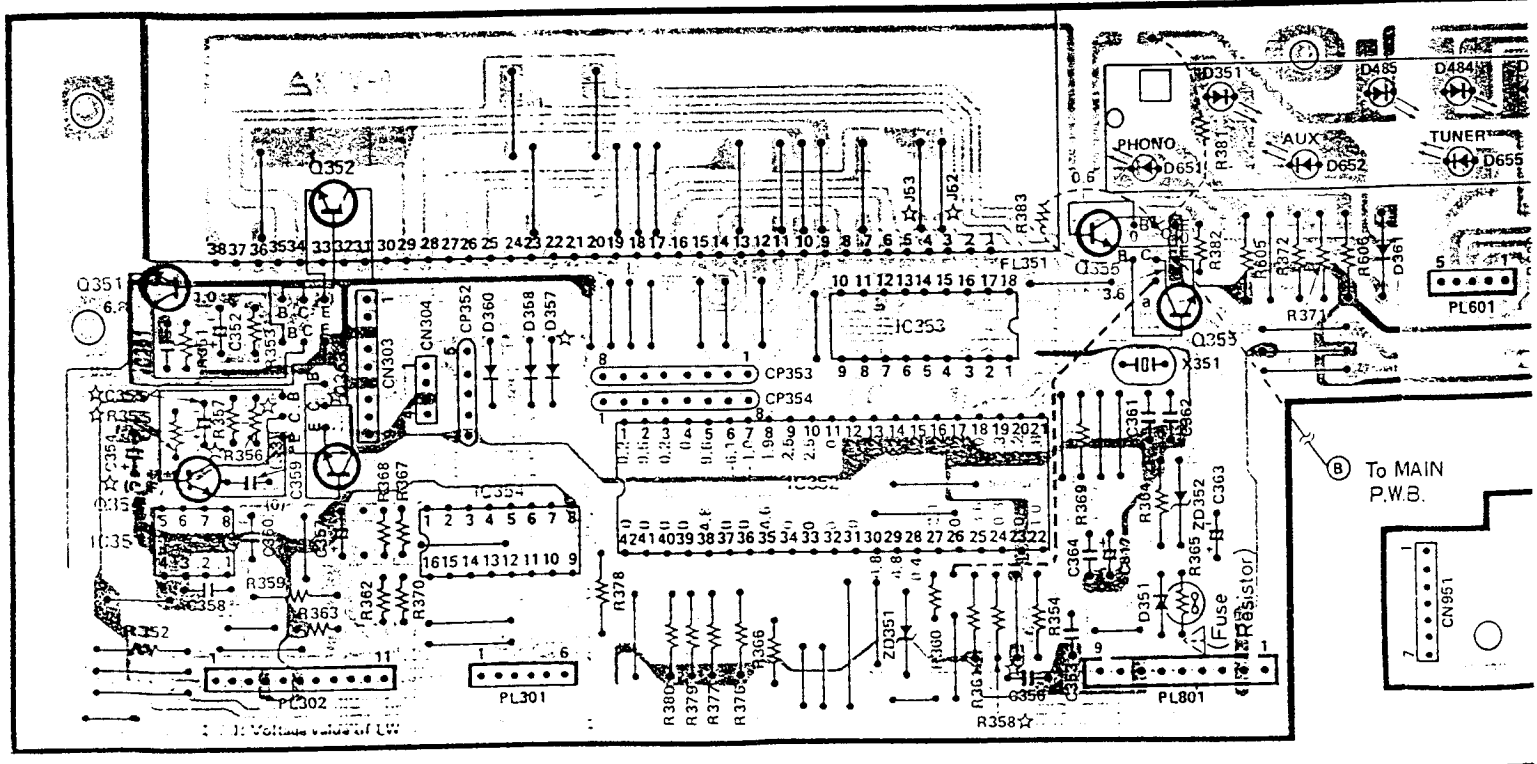RV603
BALANCE CONT



* : Voltage value of U

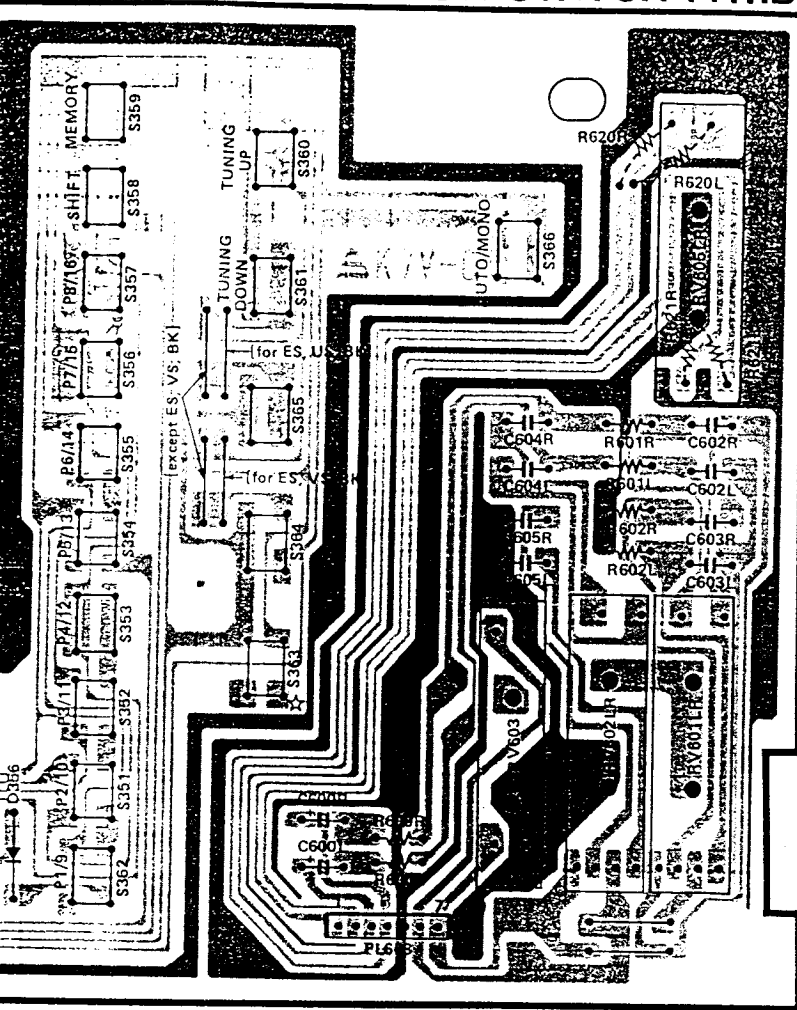FUNCTION SWITCH P.W.B.



RV605LR
REC LEVEL CONTROL

	S363	S364	S365
for ES, VS, BK	FM	MW	LW
except ES, VS, BK	-	FM	(MWAM)



RV601LR
BASS CONTROL

RV602LR
TREBLE CONTROL

RV603
BALANCE CONTROL

Pin No.	Voltages		
	IC351	IC353	IC354
1	4.9	4.2	9.5
2	4.2	4.6	0
3	0	4.2	0
4	0	4.2	0
5	5.6	4.2	4.6
6	0.5	4.2	0
7	0	4.2	0
8	8.0	4.2	0
9	-	-26.4	0
10	-	4.5	0
11	-	21.0	0
12	-	-21.1	0
13	-	-21.1	9.5
14	-	-21.1	0.7
15	-	-21.1	0.7
16	-	-21.1	0
17	-	-24.3	-
18	-	-24.3	-

☆ No.	US
C102 ~ C106	-
C156 ~ C162	-
C354 ~ C356	-
R1	USE
R102 ~ R108	-
R157 ~ R164	-
R308LR	USE
R355 ~ R358	-
R383, R384	USE
Q101, Q102	-
Q151, Q152	-
Q153, Q154	USE
Q353, Q354	-
D103, D104	-
D152 ~ D155	-
D158	-
D357	-
L152	-
T152	-
JK102	-
MF202	-
CT152	-
CP101	-
CP251	-
F801	USE
S363	-
S370	USE
J191	-
J229	USE
J244	USE
J240	USE
J235	USE
J52	-
J53	USE

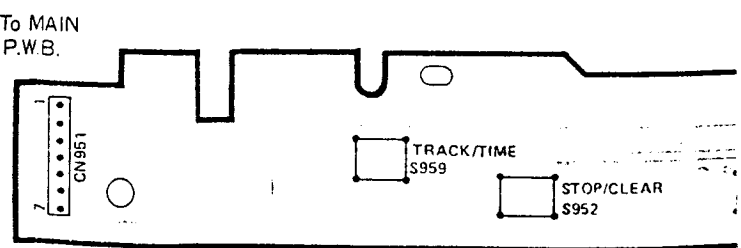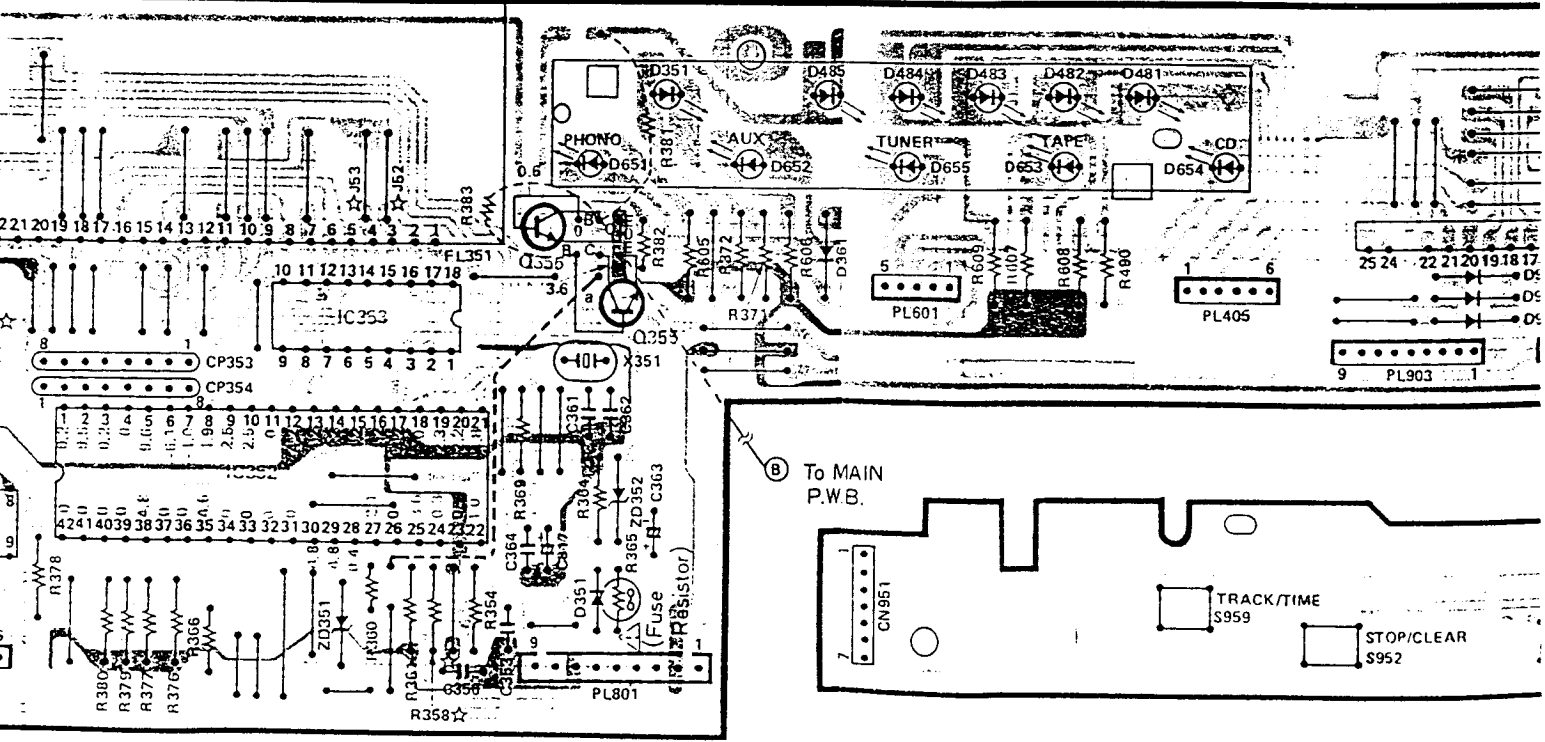


ator. The circuit symbol (☆) means difference for destination. (Refer to the table in the drawing)


☆ No.	US	CS	EW	KS	SA	ES, VS, BK	ZS
C102 ~ C106	-	-	-	-	-	-	USE
C156 ~ C162	-	-	-	-	-	USE	-
C354 ~ C356	-	-	-	-	-	USE	-
R1	USE	USE	-	-	-	-	-
R102 ~ R108	-	-	-	-	-	-	USE
R157 ~ R164	-	-	-	-	-	USE	-
R308LR	USE	USE	-	-	-	-	-
R355 ~ R358	-	-	-	-	-	USE	-
R383, R384	USE	-	USE	-	-	-	-
Q101, Q102	-	-	-	-	-	-	USE
Q151, Q152	-	-	-	-	-	USE	-
Q153, Q154	USE	USE	USE	-	USE	USE	-
Q353, Q354	-	-	-	-	-	USE	-
D103, D104	-	-	-	-	-	-	USE
D152 ~ D155	-	-	-	-	-	USE	-
D158	-	-	-	-	-	USE	-
D357	-	-	-	USE	-	USE	USE
L152	-	-	-	-	-	USE	-
T152	-	-	-	-	-	USE	-
JK102	-	-	-	USE	-	USE	USE
MF202	-	-	-	-	-	-	USE
CT152	-	-	-	-	-	USE	-
CP101	-	-	-	-	-	-	USE
CP251	-	-	-	-	-	-	USE
F801	USE	-	USE	-	-	-	-
S363	-	-	-	-	-	USE	-
S370	USE	-	USE	-	-	-	-
J 191	-	USE	-	USE	USE	USE	USE
J 229	USE	USE	USE	USE	USE	USE	-
J 244	USE	USE	USE	USE	USE	USE	-
J 240	USE	USE	USE	USE	USE	USE	-
J 235	USE	USE	USE	USE	USE	USE	-
J 52	-	-	-	-	-	USE	-
J 53	USE	USE	USE	USE	USE	-	USE

Pin No.	Voltages		
	IC351	IC353	IC354
1	4.9	4.2	9.5
2	4.2	4.6	0
3	0	4.2	0
4	0	4.2	0
5	5.6	4.2	4.6
6	0.5	4.2	0
7	0	4.2	0
8	8.0	4.2	0
9	-	-26.4	0
10	-	4.5	0
11	-	21.0	0
12	-	-21.1	0
13	-	-21.1	9.5
14	-	-21.1	0.7
15	-	-21.1	0.7
16	-	-21.1	0
17	-	-24.3	-
18	-	-24.3	-

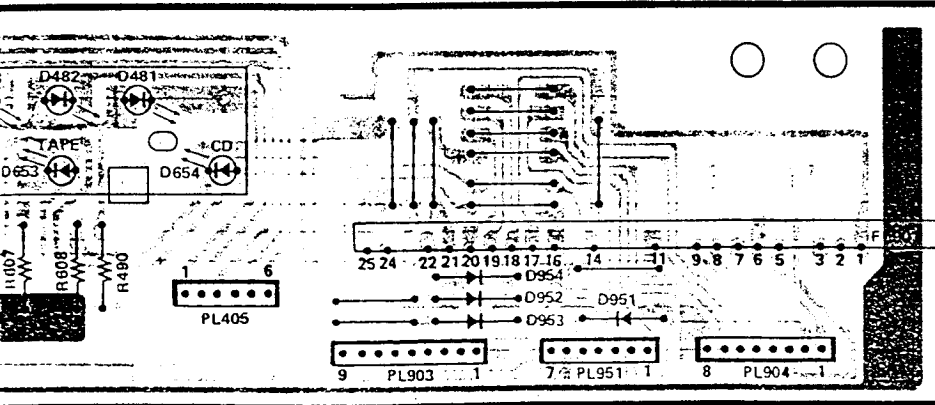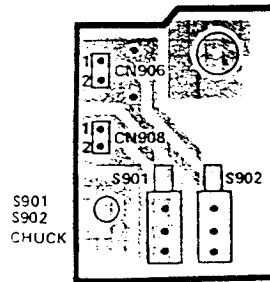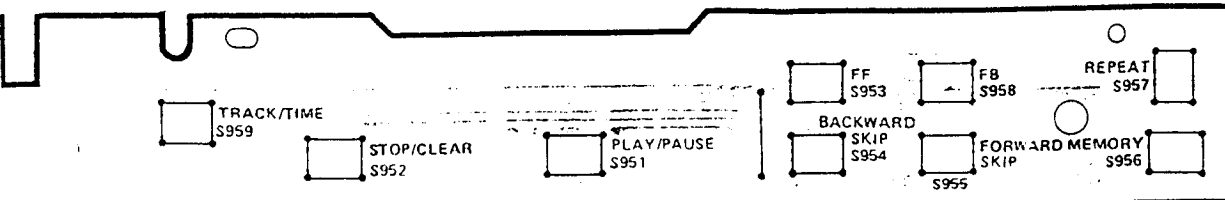
FL METER P.W.B.






CD SWITCH P.W.B.




CD FUNCTION P.W.B.




CIRCUIT DIAGRAM

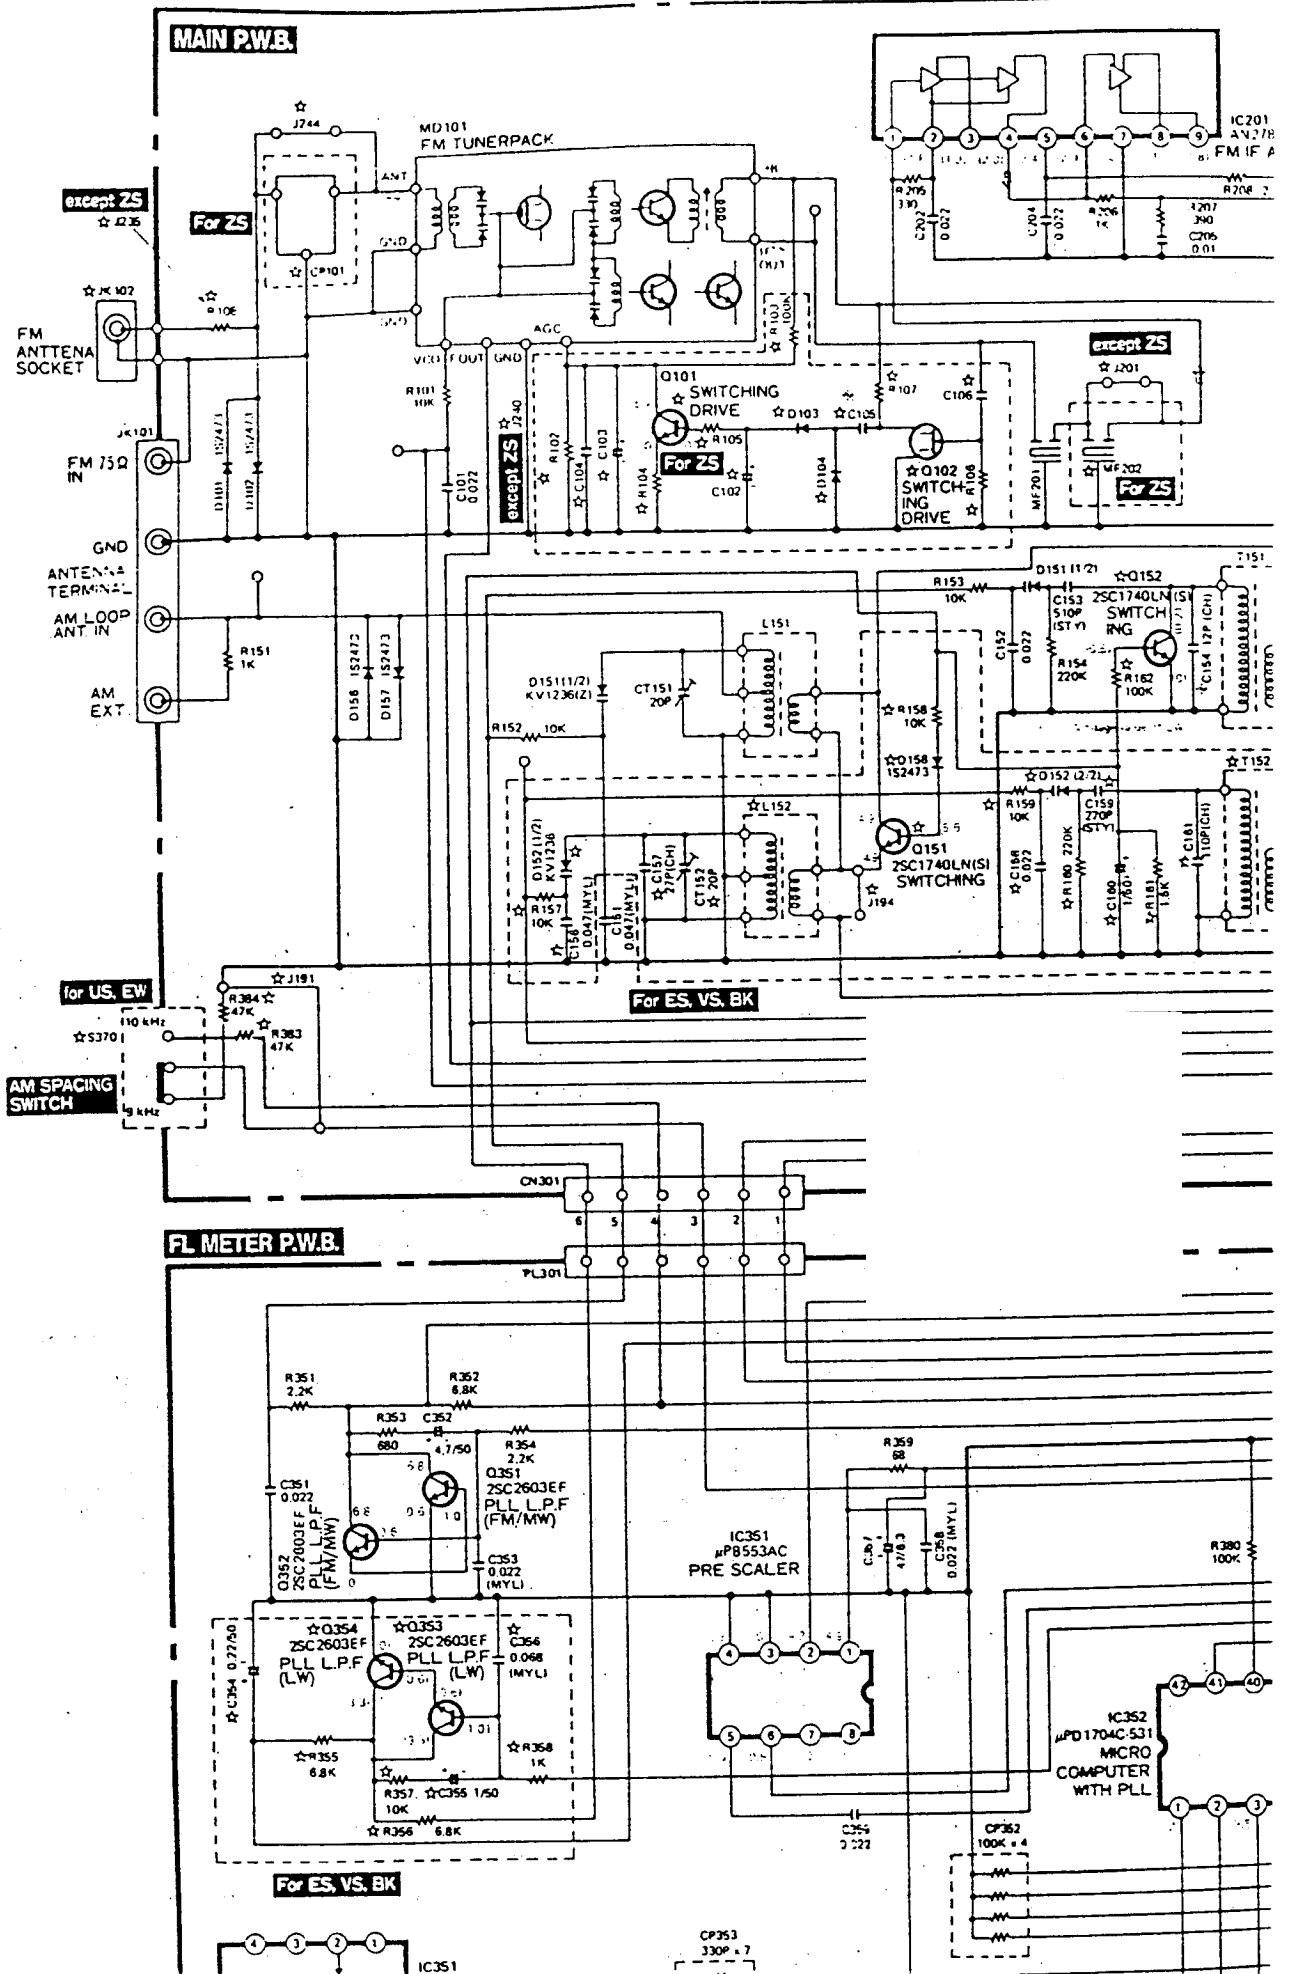
[ : +B,  : -B]  Axial lead cylindrical



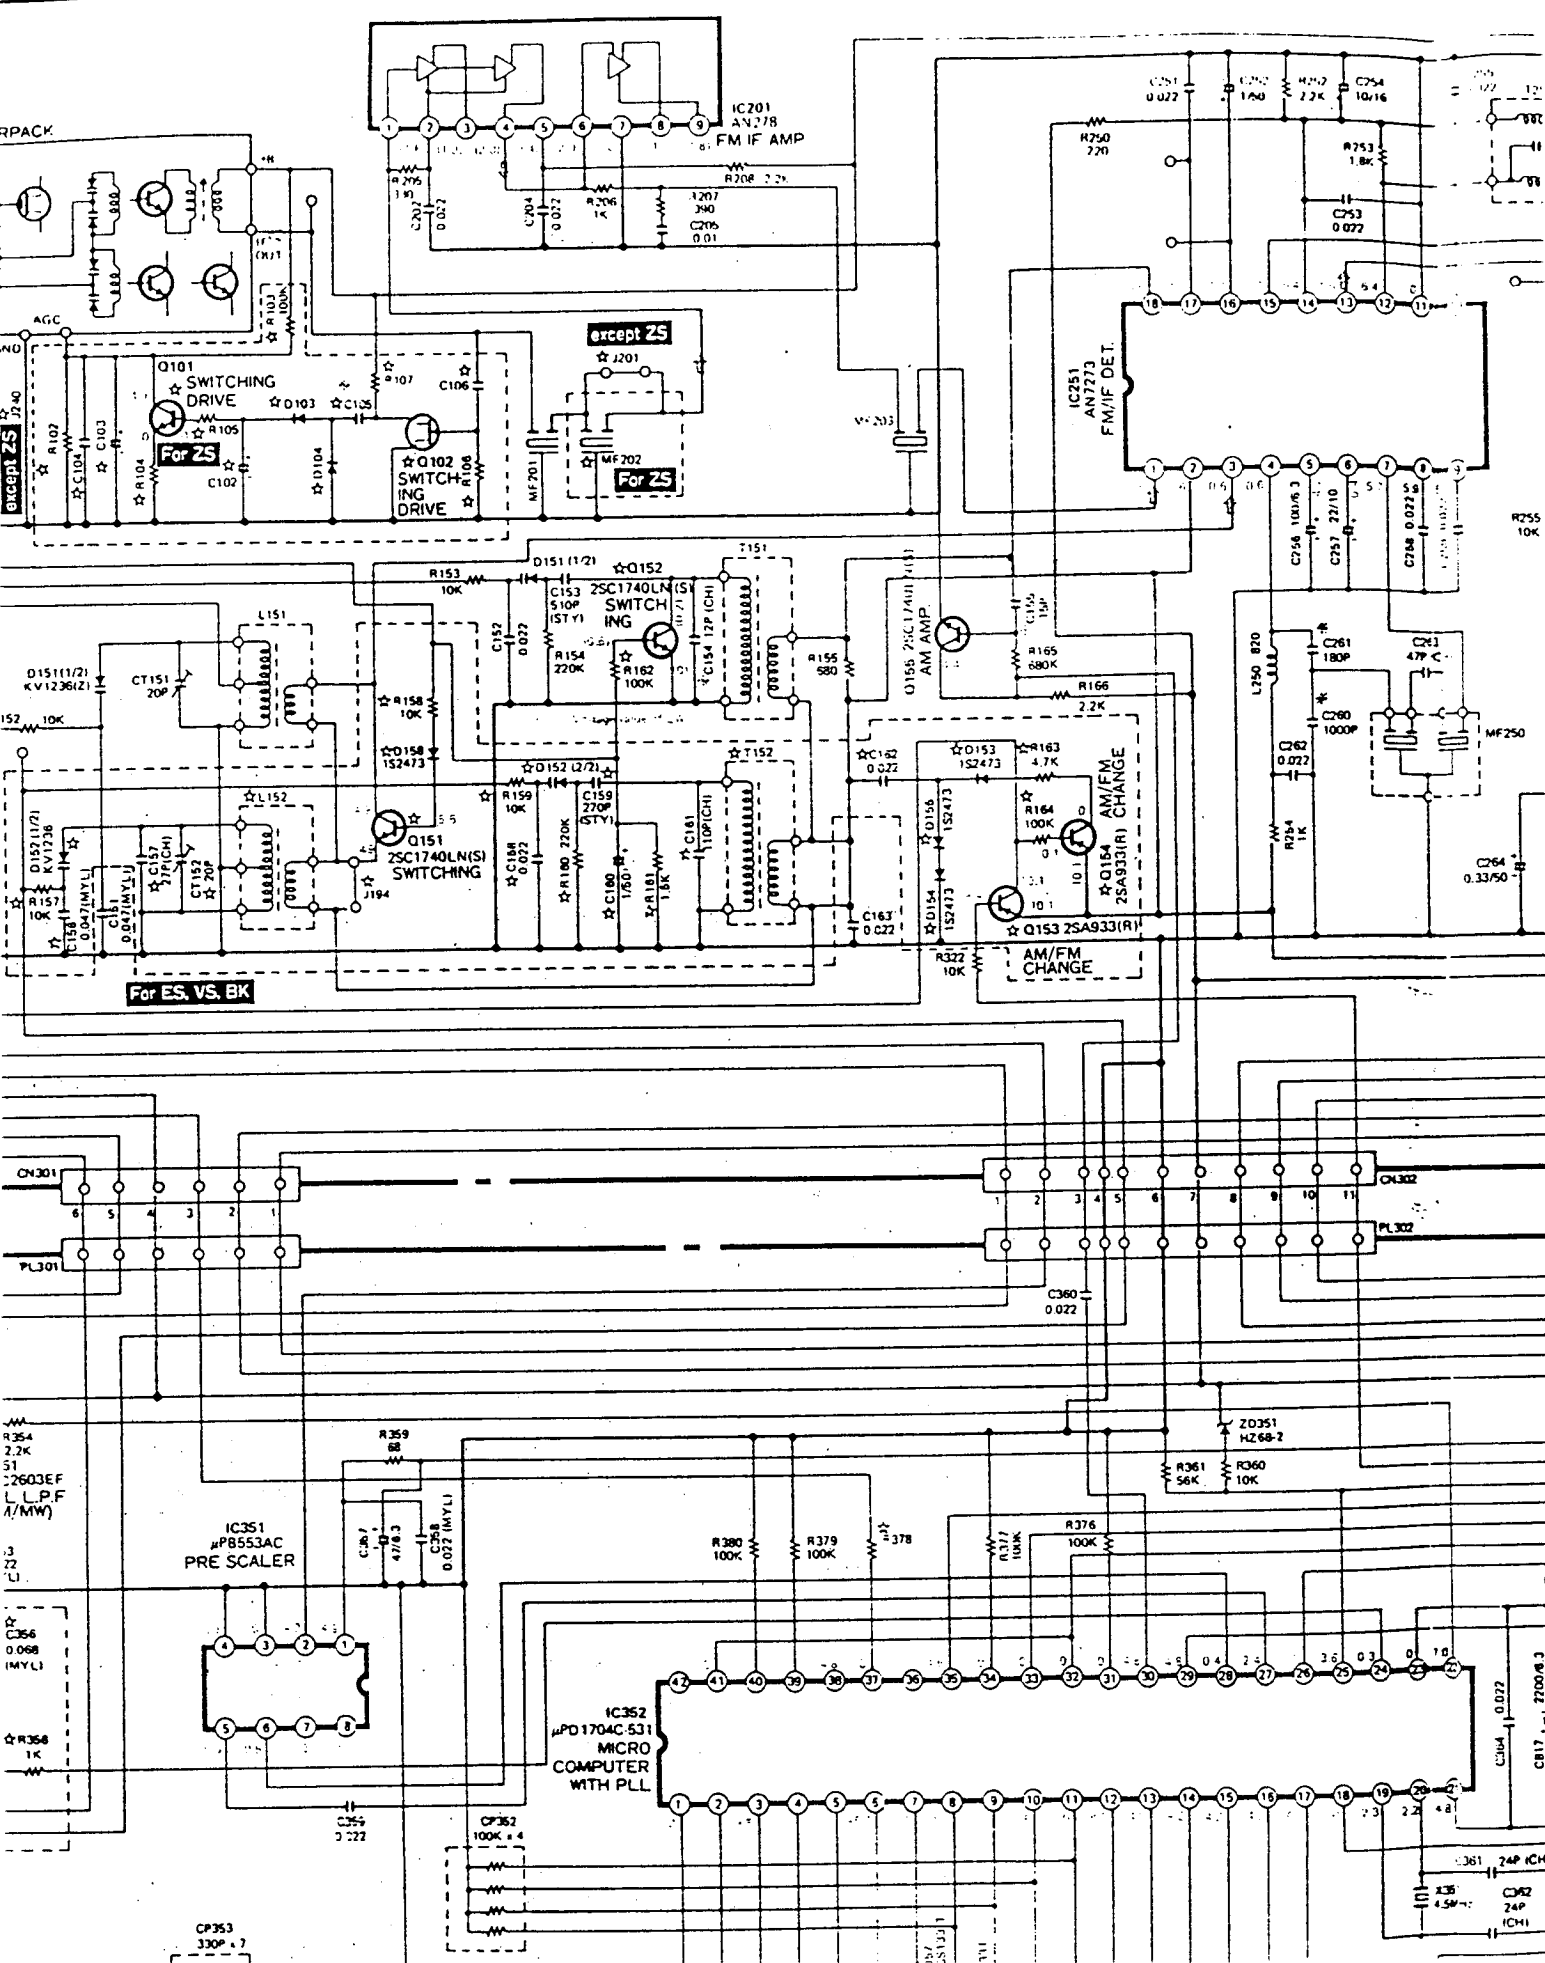
⊛ +B, ⊛ -B) ⊛ Axial lead cylindrical ceramic capacitor. The circuit symbol (☆)



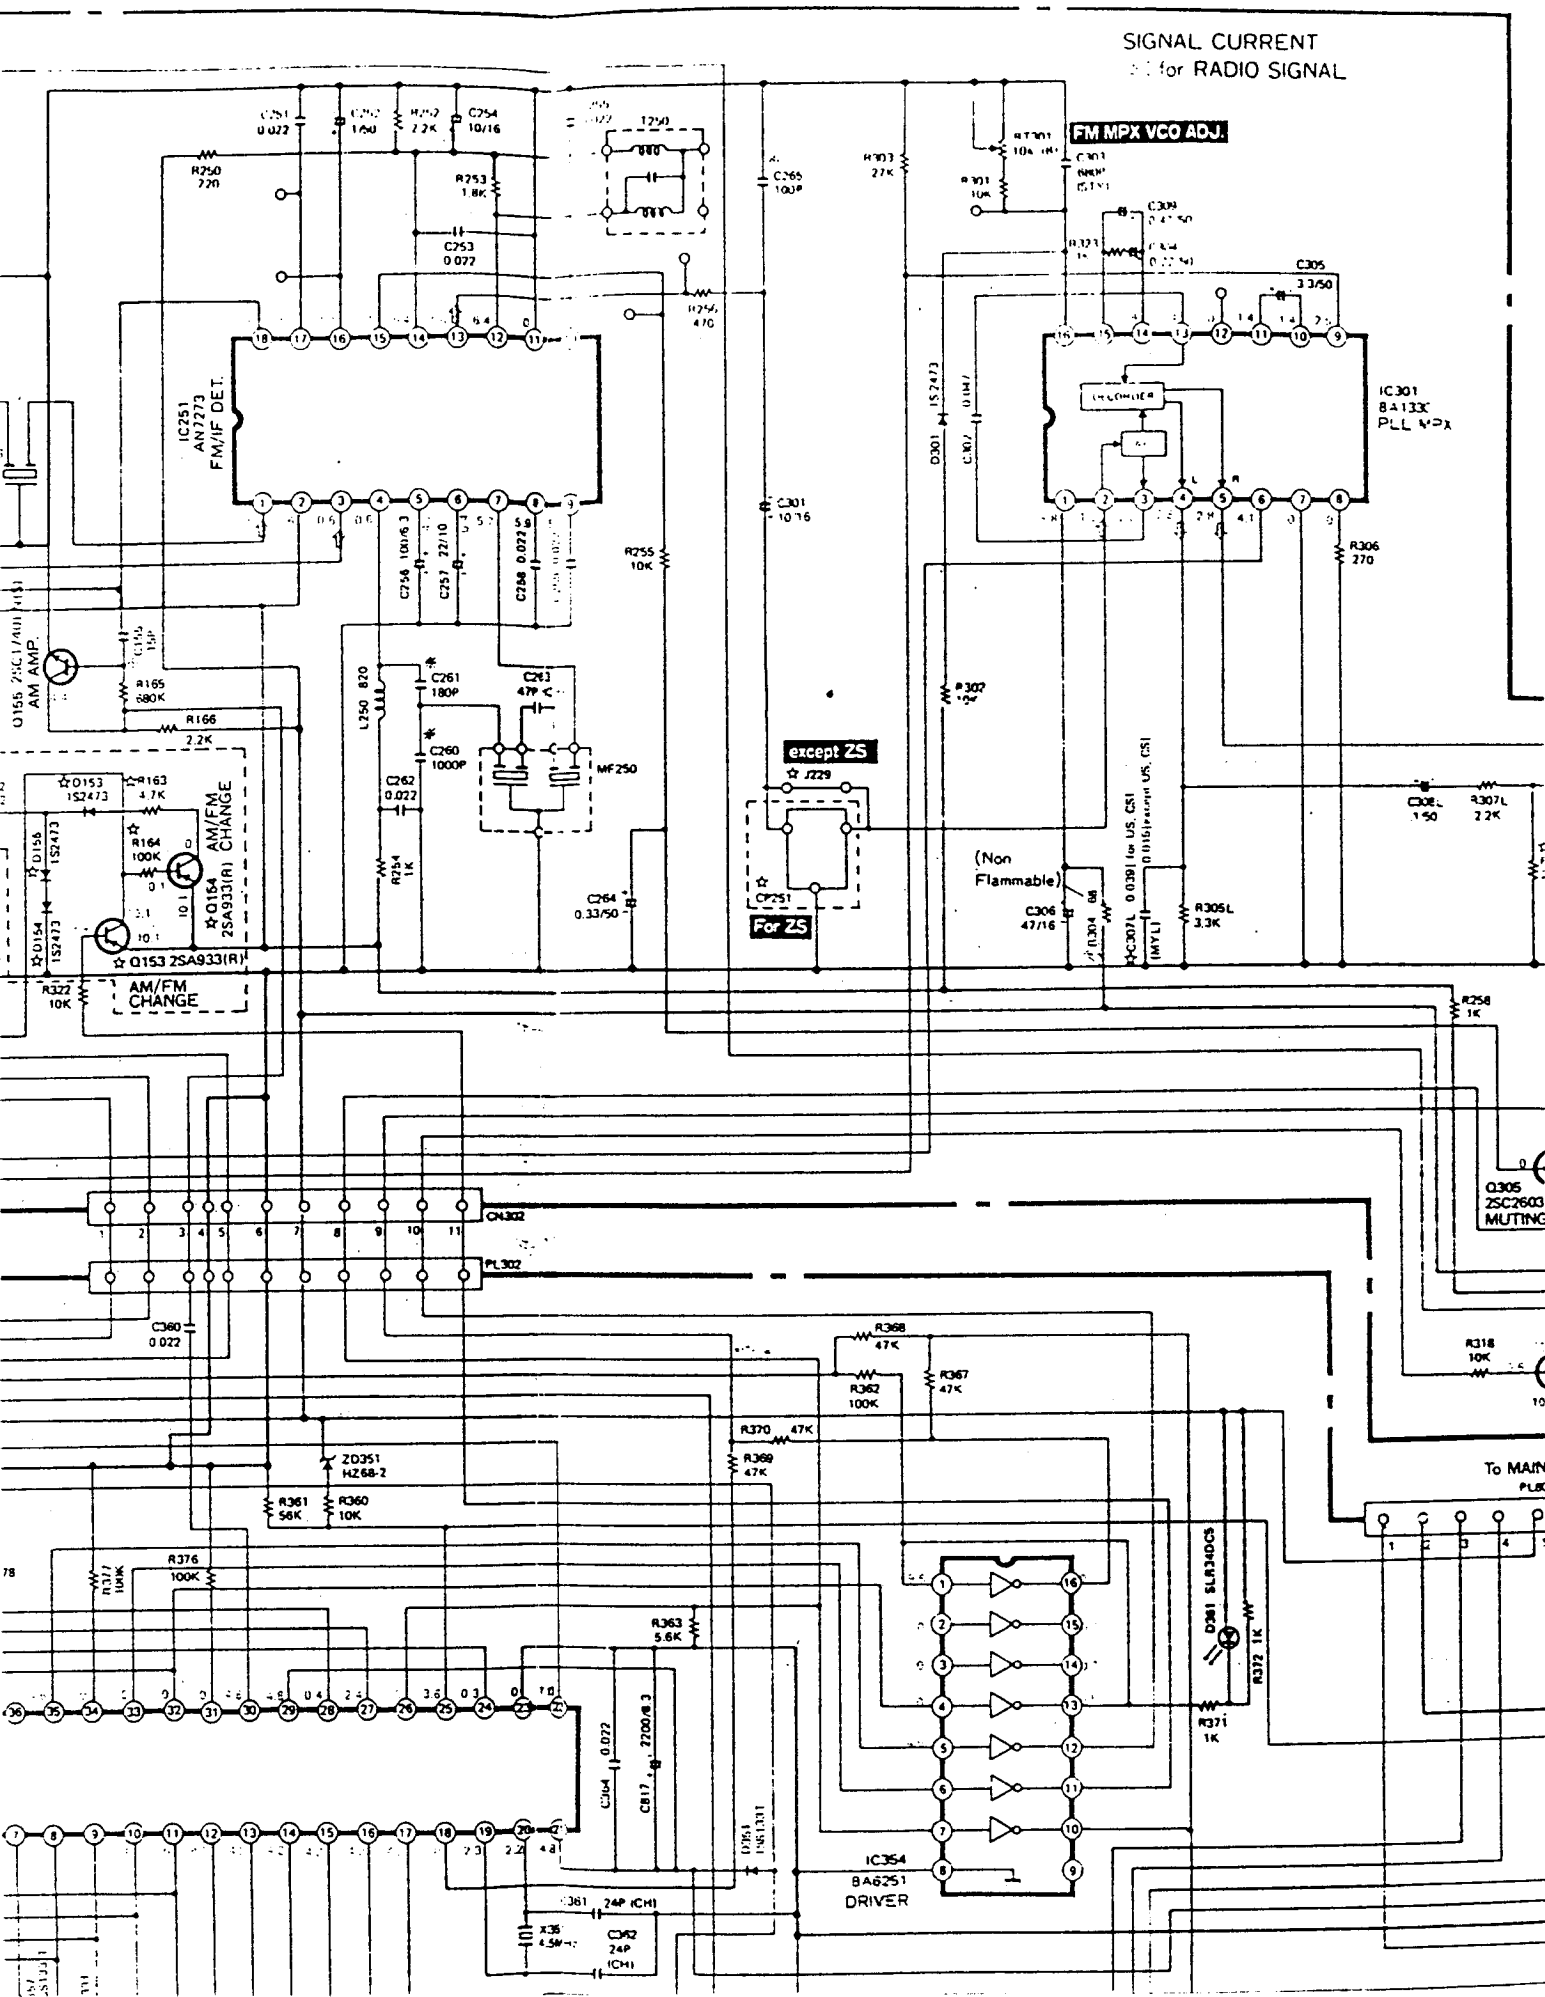
capacitor. The circuit symbol (☆) means difference for destination. (Refer to the




on. (Refer to the table in page 29, 30)

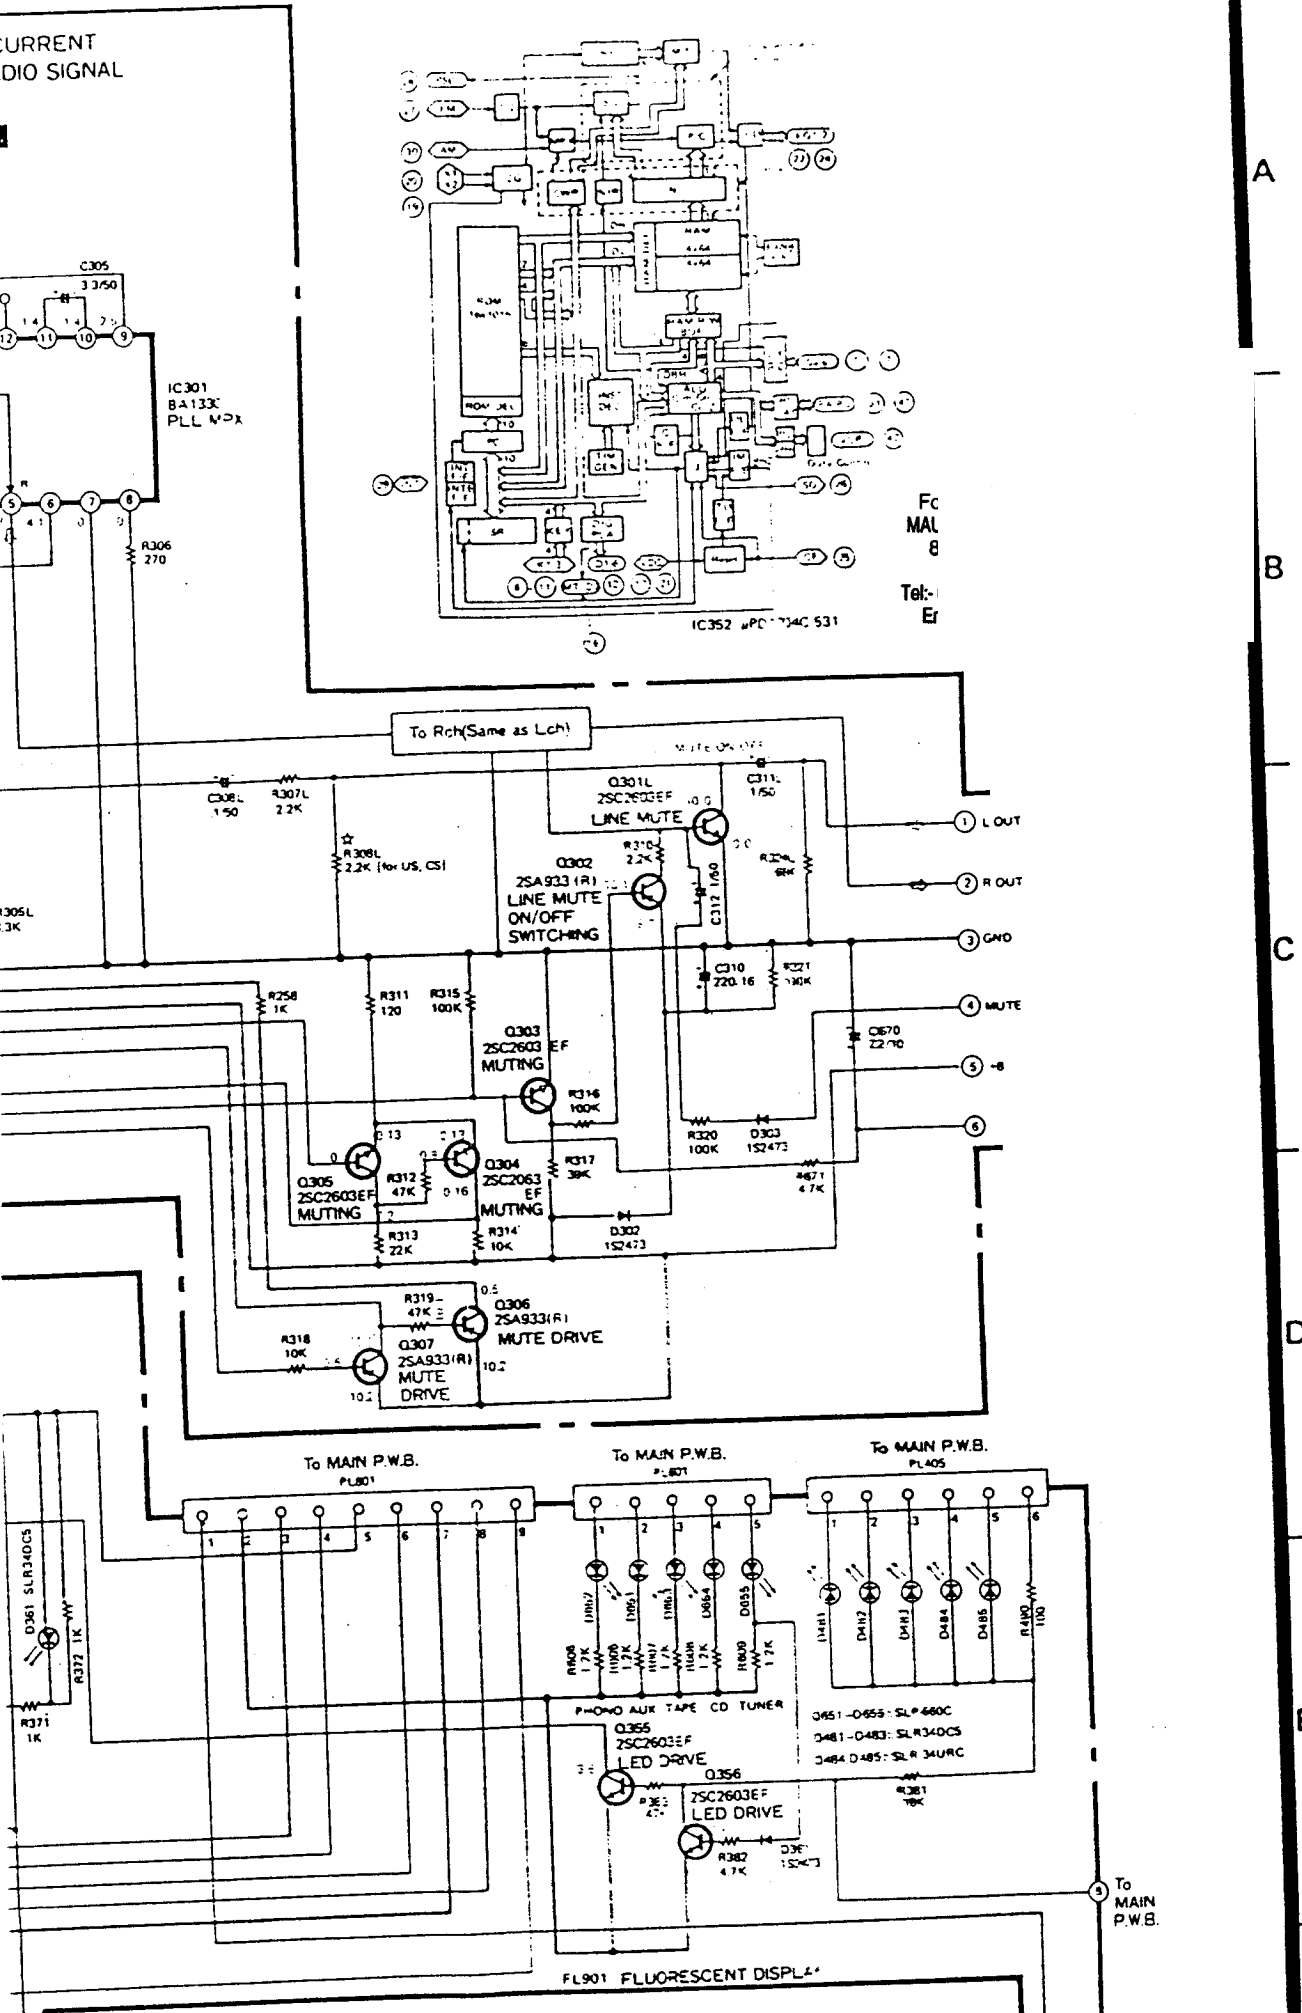




A
B
C
D
E

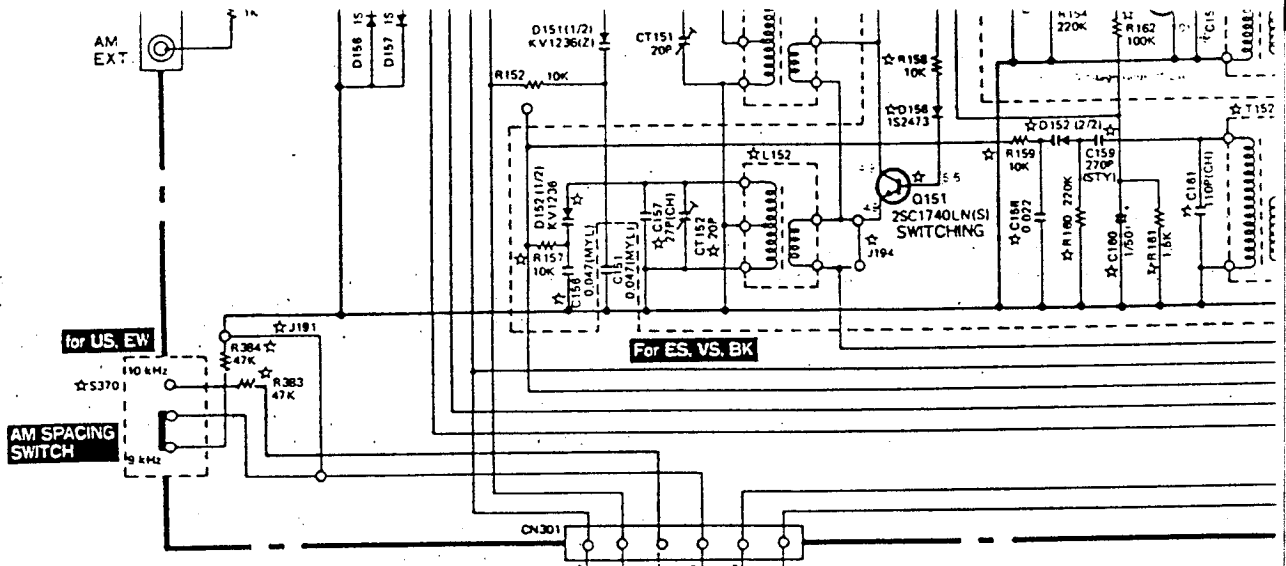


FL METER P.W.B.

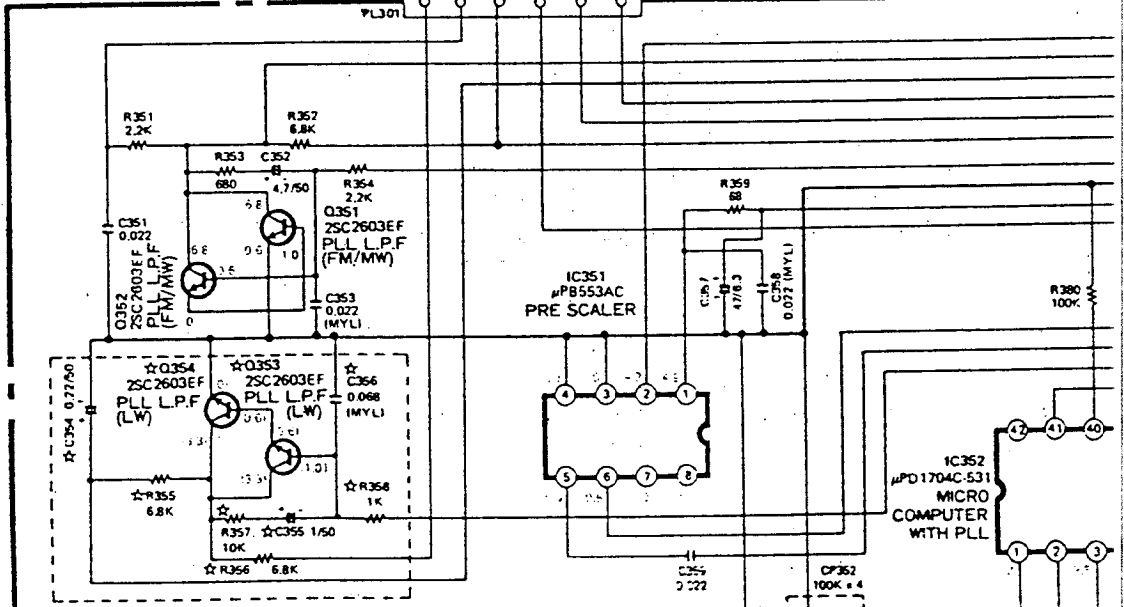

For ES, VS, BK

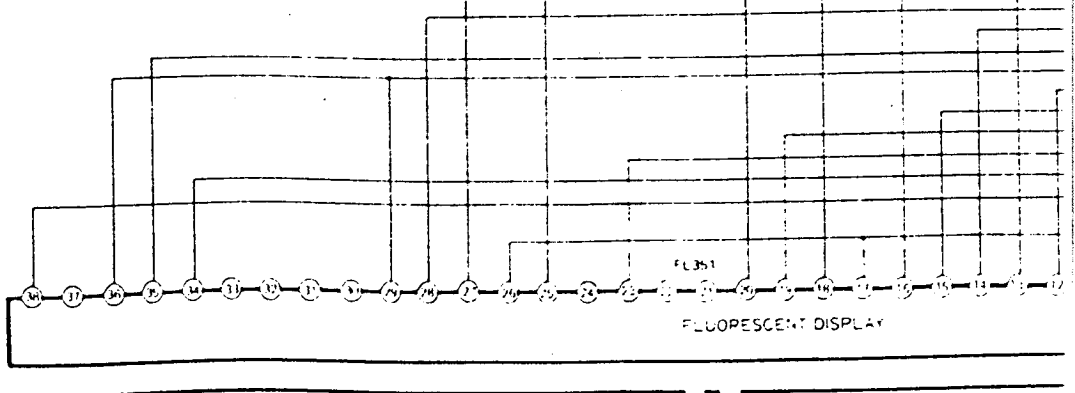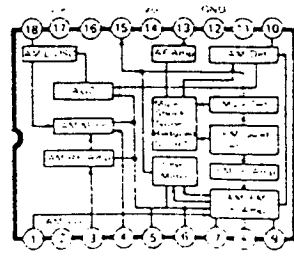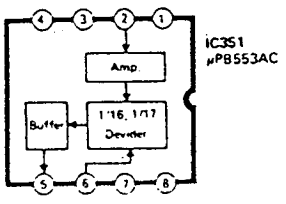

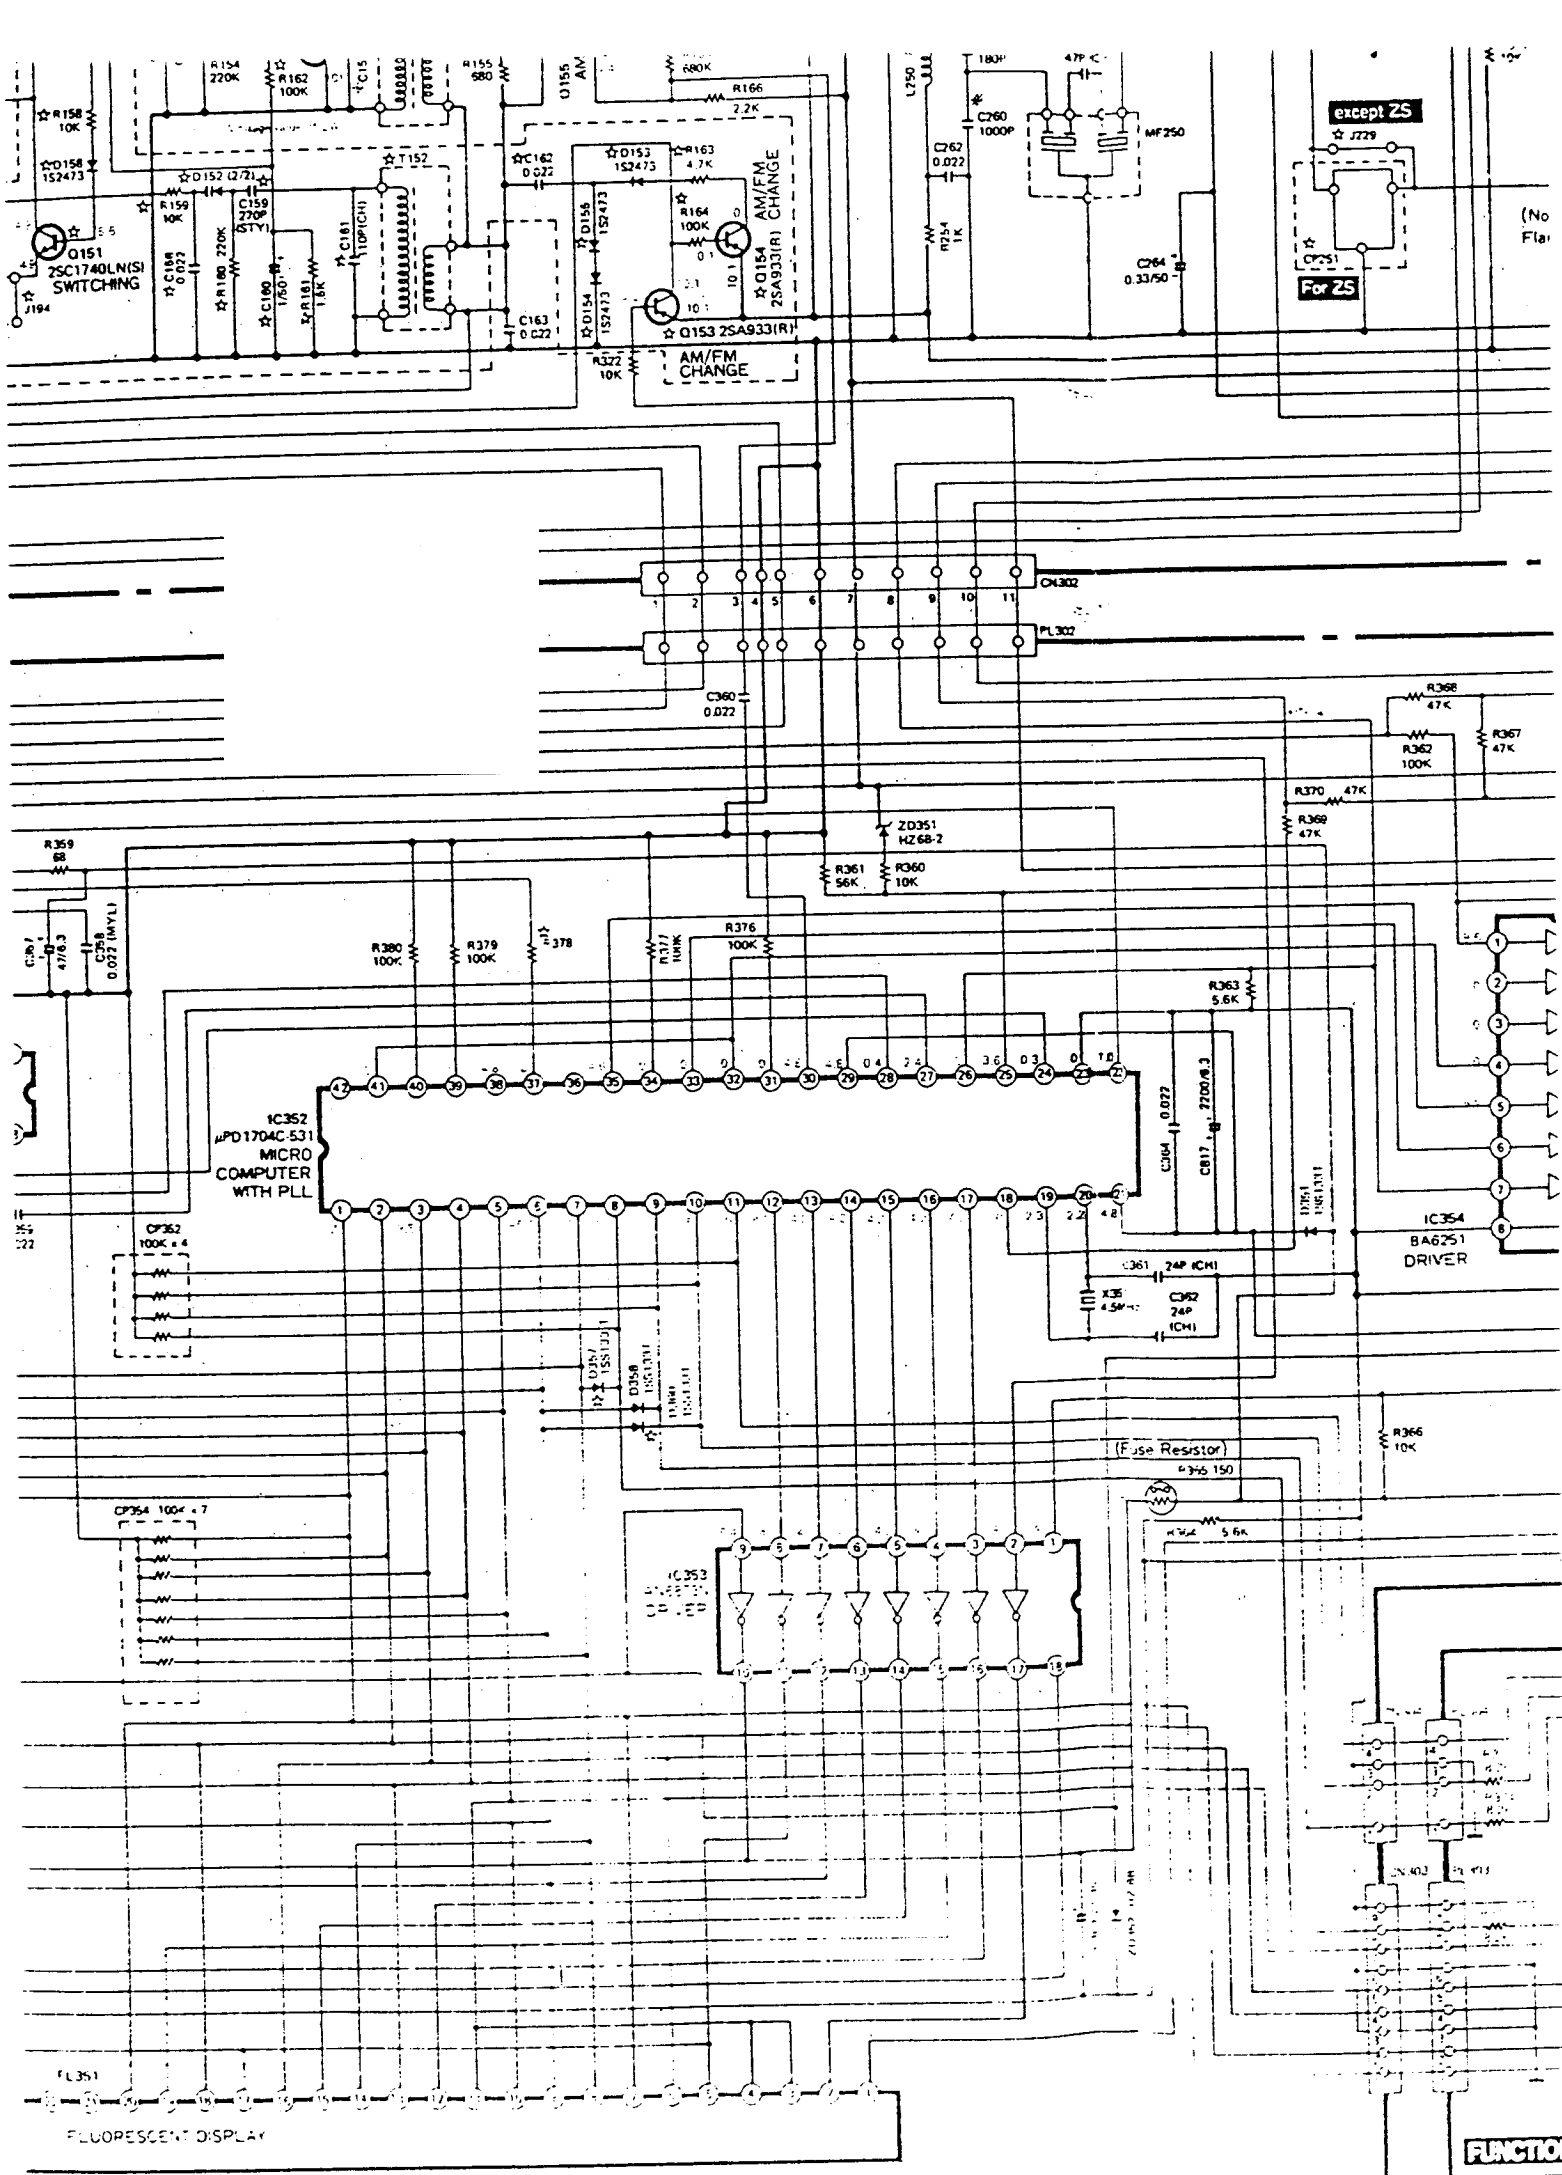

except ZS

For ZS

(No Fla)

IC352
MPD1704C-531
MICRO
COMPUTER
WITH PLL


IC354
BA6251
DRIVER

IC353
L353
L354
L355
L356
L357
L358
L359
L360
L361
L362
L363
L364
L365
L366
L367
L368
L369
L370
L371
L372
L373
L374
L375
L376
L377
L378
L379
L380
L381
L382
L383
L384
L385
L386
L387
L388
L389
L390
L391
L392
L393
L394
L395
L396
L397
L398
L399
L400

(Fuse Resistor)
F356 150

FLOURESCENT DISPLAY

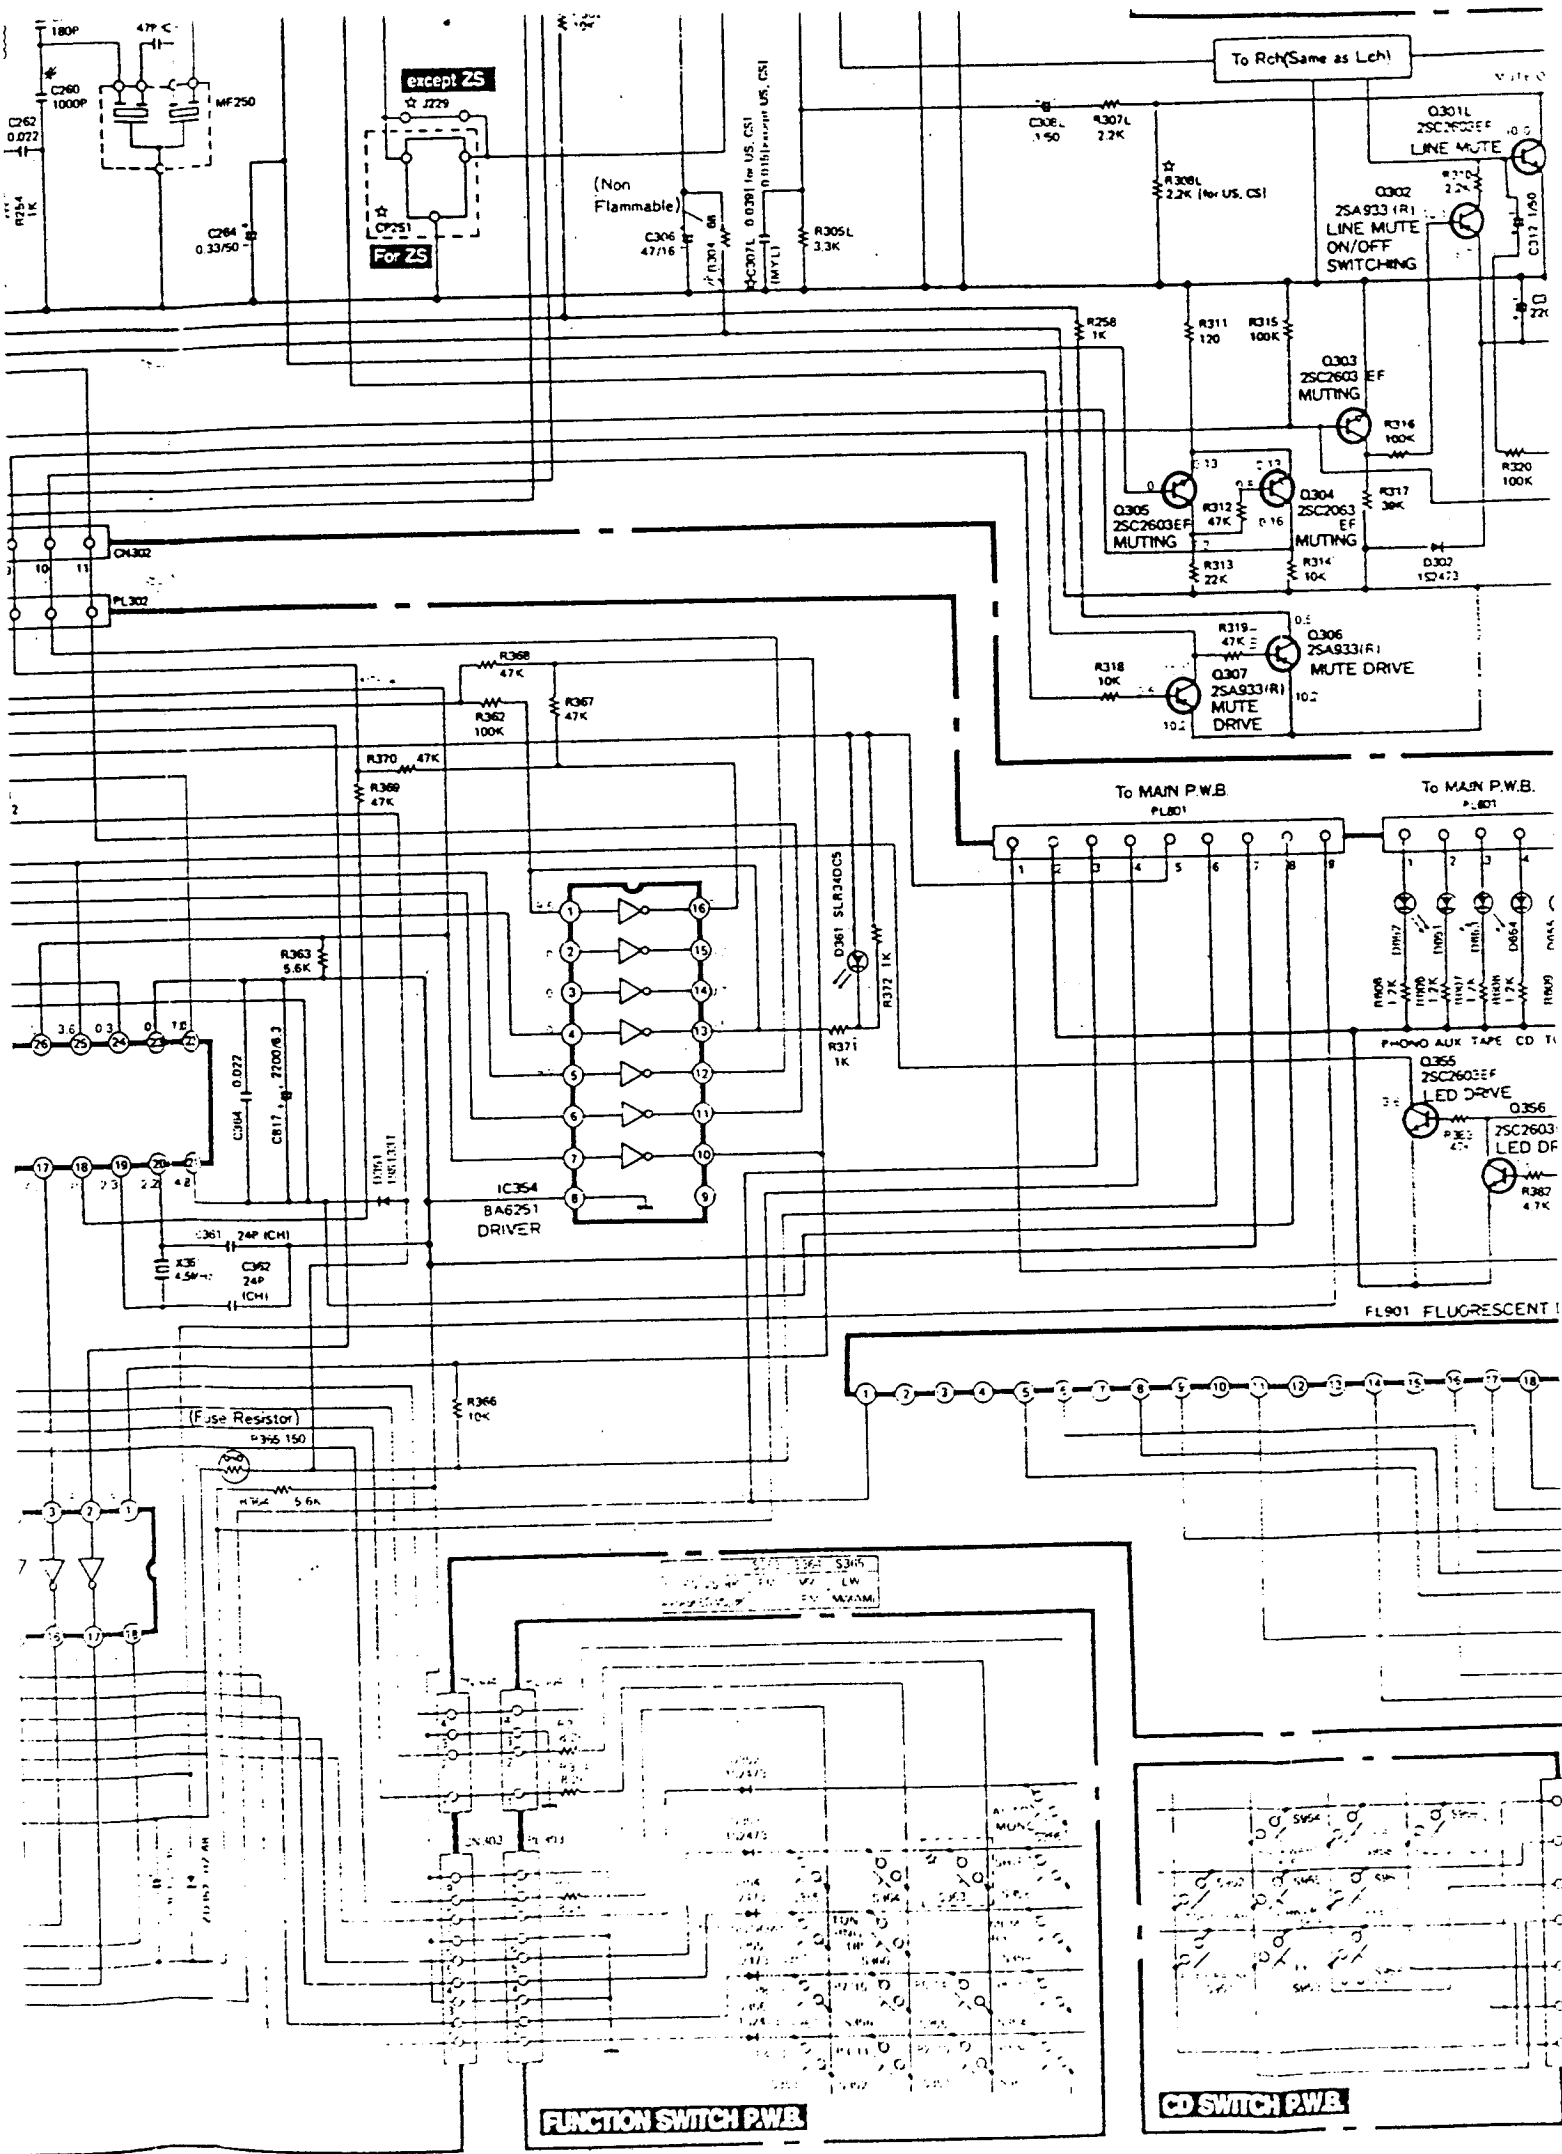FUNCTION



FUNCTION SWITCH P.W.B.

CD SWITCH P.W.B.

FL901 FLUORESCENT I

To MAIN P.W.B.
PL801

To MAIN P.W.B.
P.L801

PHONO AUX TAPE CD T1

Q355 ZSC2603EF LED DRIVE

Q356 ZSC2603 LED DF

R387 47K

R388 47K

R389 17K

R390 17K

R391 17K

R392 17K

R393 17K

R394 17K

R395 17K

R396 17K

R397 17K

R398 17K

R399 17K

R400 17K

R401 17K

R402 17K

R403 17K

R404 17K

R405 17K

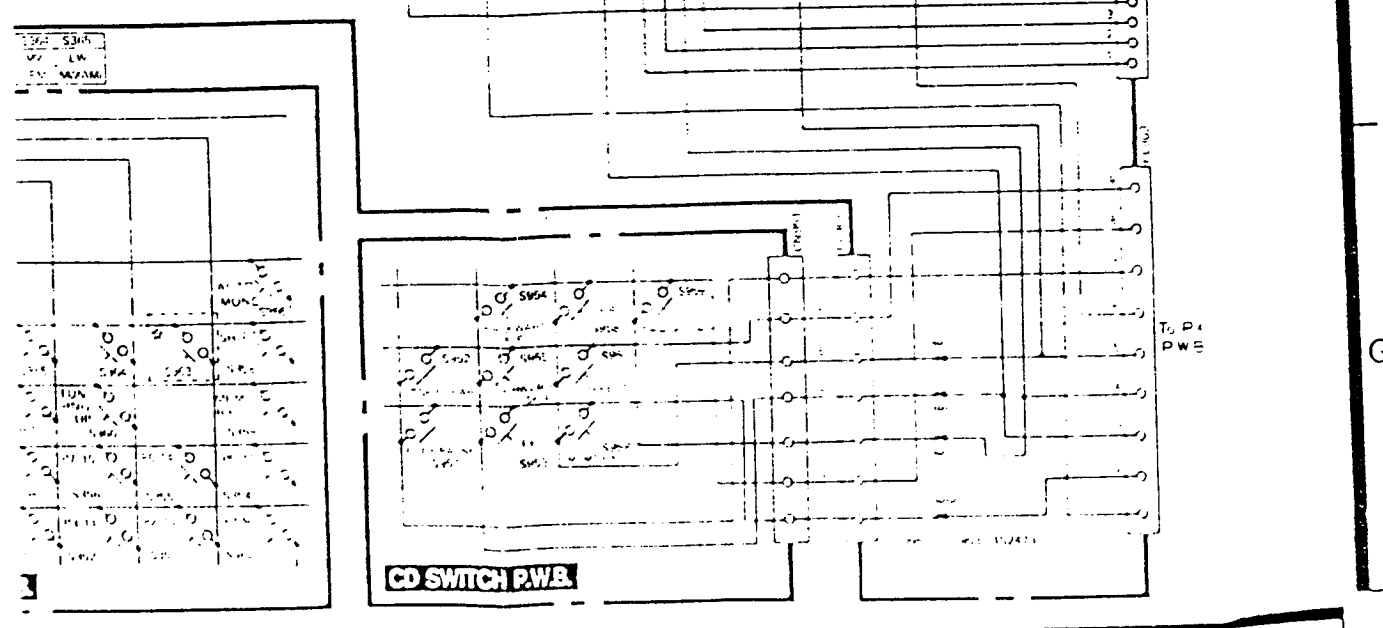
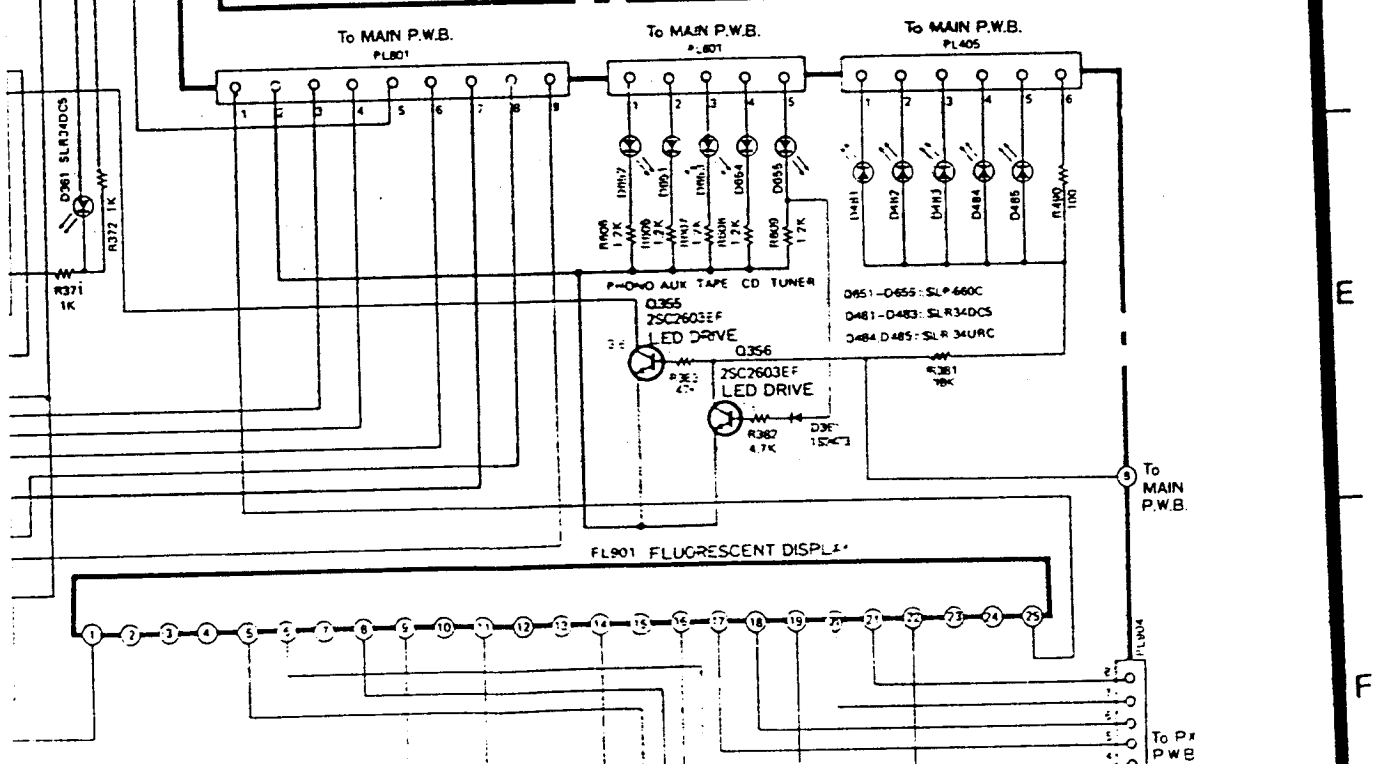
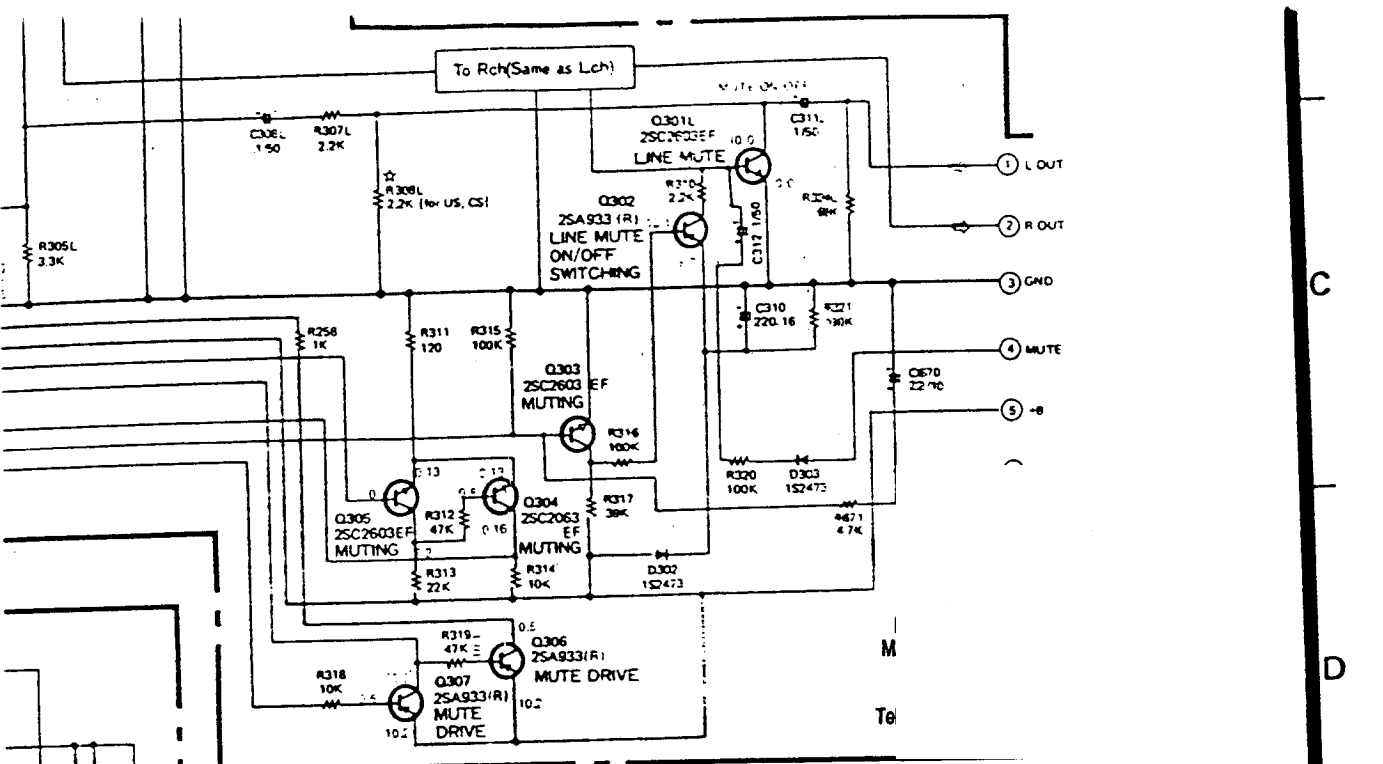
R406 17K

R407 17K

R408 17K

R409 17K


R410 17K



REV. 5/84
VJ
BY: WJAM

CD SWITCH P.W.B.

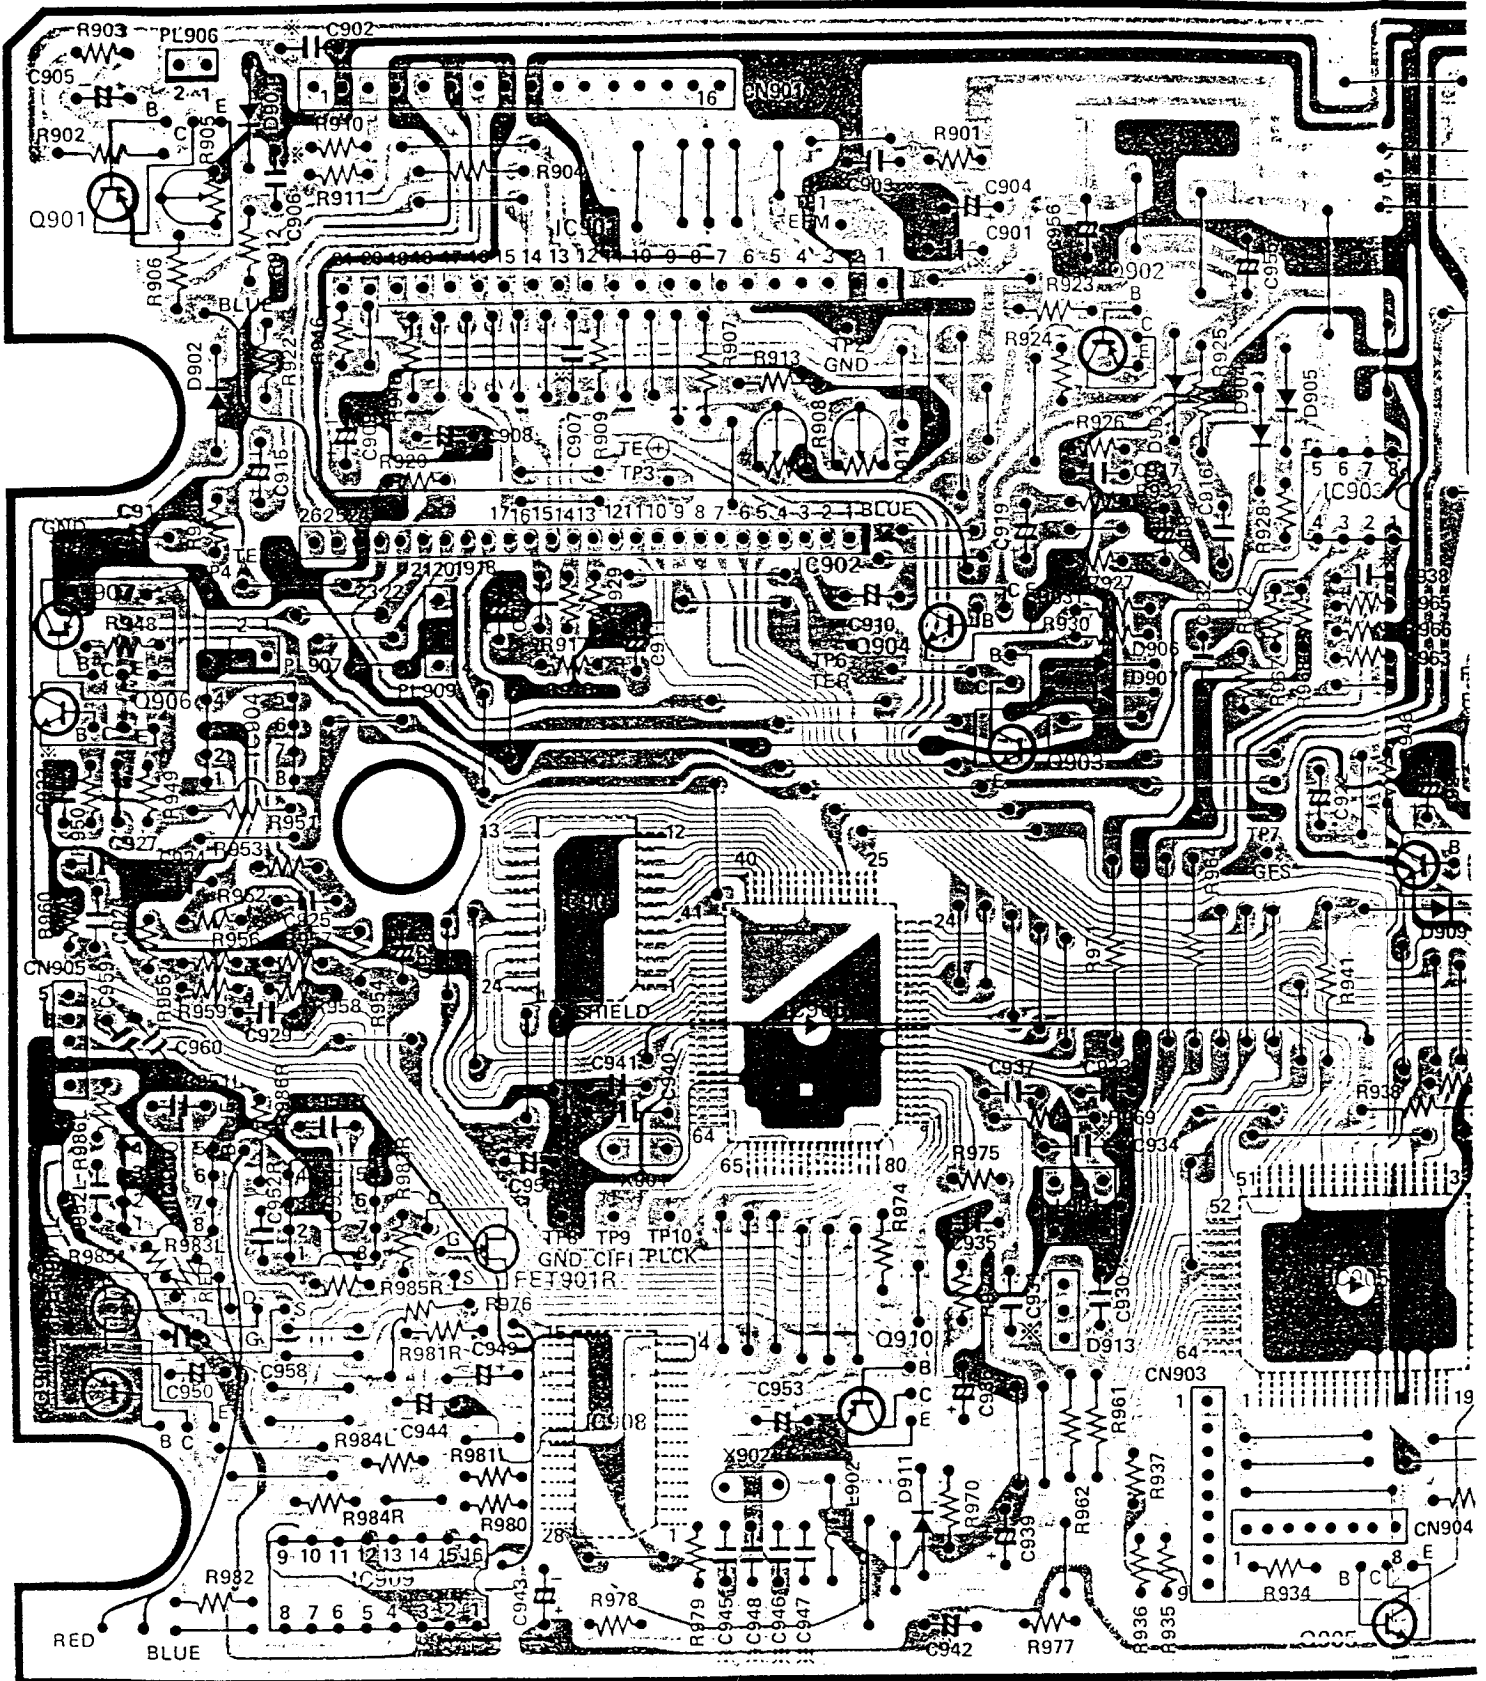PX P.W.B.




	Q901	Q902	Q903	Q904	Q906	Q907	Q908	Q909	Q910	Q911
E	0.5	0.6	0	0	0	0	0	0	4.6	-4.4
C	-10.0	-5.0	0	0	10.0	-10.0	5.0		4.6	-5.0
B	4.8	0			0	0	0	0.8	4.0	-5.0

	FET901L	FET901R
S	0	0
D	1.4	0
G	-3.3	-3.4

R905
**LASER DIODE
OUTPUT ADJ.**

R908
**FOCUS SERVO
OFFSET ADJ.**

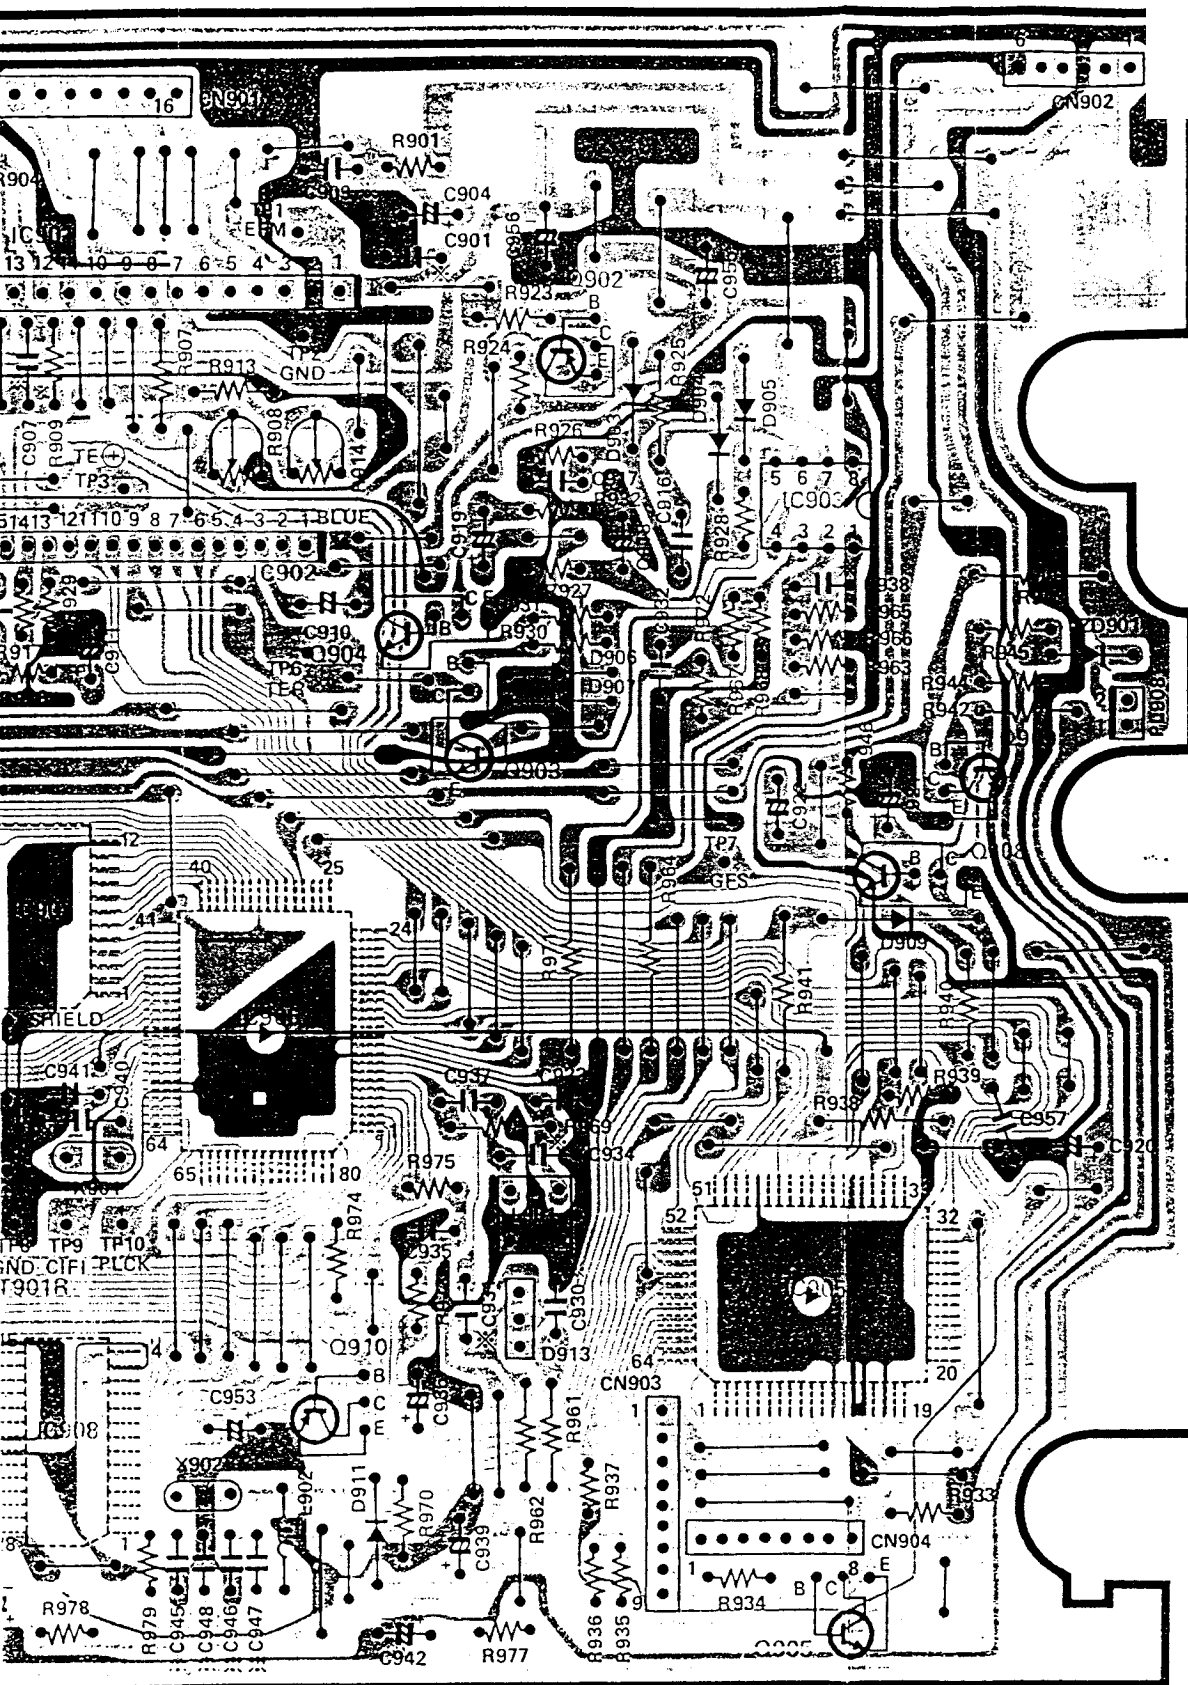BOARD [: Earth, :Others] * Axial lead cylindrical ceramic capacitor.



Pin No.	voltage	Pin No.	voltage
4	0.8	20	
5	0.8	21	
6	0.8	22	
7	0.8	23	
8	0	24	
9	0	25	
10	0	26	5.0
11		27	0
12	0	28	0
13	0	29	
14	0	30	
15	0	31	0
16	0	32	5.0

IC906

Pin No.	voltage	Pin No.	voltage
1	0	21	
2	0	22	
3	0	23	0
4	0	24	0
5	4.4	25	2.5
6		26	
7	4.6	27	
8	2.5	28	0
9	2.5	29	2.5
10	0	30	2.5
11	2.5	31	2.5
12	0	32	2.5
13	5.0	33	5.0
14	5.0	34	2.5
15	5.0	35	2.5
16	5.0	36	2.5
17	5.0	37	2.5
18	5.0	38	2.5
19	5.0	39	2.5
20	0	40	2.5

IC907

Pin No.	voltage	Pin No.	voltage
1	2.5	13	2.5
2	2.5	14	2.5
3	2.5	15	2.5
4	2.5	16	2.5
5	2.5	17	2.5
6	2.5	18	2.5
7	2.5	19	2.5
8	2.5	20	2.5
9	2.5	21	2.5
10	2.5	22	2.5
11	2.5	23	2.5
12	0	24	5.0

IC909

Pin No.	voltage	Pin No.	voltage
1	0	9	0
2	0	10	0
3	0	11	0
4	0	12	0
5	0	13	0
6	-5.0	14	0
7	-5.0	15	0
8	-5.0	16	5

Q909	Q910	Q911	FET901L FET901R	
0	4.6	-4.4	S	0
	4.6	-5.0	D	1.4
0.8	4.0	-5.0	G	-3.3

R905
**LASER DIODE
OUTPUT ADJ.**

R908
**FOCUS SERVO
OFFSET ADJ.**

R914
**TRACKING SERVO
OFFSET ADJ.**



IC905

Pin No.	voltage	Pin No.	voltage	Pin No.	voltage	Pin No.	voltage
1	0.8	17		33		49	5.0
2	0.8	18		34		50	5.0
3	0.8	19		35	5.0	51	5.0
4	0.8	20		36	5.0	52	5.0
5	0.8	21		37		53	-10.0
6	0.8	22		38		54	
7	0.8	23		39	0	55	5.0
8	0	24		40	0	56	5.0
9	0	25		41		57	5.0
10	0	26	5.0	42	0	58	
11		27	0	43	0	59	0.5
12	0	28	0	44	5.0	60	0.5
13	0	29		45	2.5	61	0.5
14	0	30		46		62	
15	0	31	0	47	0	63	
16	0	32	5.0	48	5.0	64	

IC901

Pin No.	voltage	Pin No.	voltage
1	0	12	0
2	0	13	0
3	0	14	4.8
4	0	15	0
5	0	16	4.4
6	0	17	0
7	0	18	-5.0
8	0	19	-5.0
9	0	20	5.0
10	0	21	5.0
11	0		

IC906

Pin No.	voltage	Pin No.	voltage	Pin No.	voltage	Pin No.	voltage
1	0	21		41	2.5	61	
2	0	22		42	2.5	62	4.0
3	0	23	0	43	2.5	63	
4	0	24	0	44	2.5	64	
5	4.4	25	2.5	45	2.5	65	
6		26		46	2.5	66	
7	4.6	27		47	2.5	67	
8	2.5	28	0	48	2.5	68	
9	2.5	29	2.5	49	2.5	69	
10	0	30	2.5	50	2.5	70	2.2
11	2.5	31	2.5	51	2.5	71	
12	0	32	2.5	52	0	72	
13	5.0	33	5.0	53		73	5.0
14	5.0	34	2.5	54		74	
15	5.0	35	2.5	55		75	
16	5.0	36	2.5	56		76	2.5
17	5.0	37	2.5	57		77	2.5
18	5.0	38	2.5	58	0	78	0
19	5.0	39	2.5	59	0	79	2.5
20	0	40	2.5	60		80	2.5

IC902

Pin No.	voltage	Pin No.	voltage
1	5.0	14	0
2	-5.0	15	0
3	0	16	0
4	0	17	0
5	5.0	18	-10.0
6	5.0	19	0
7	5.0	20	10.0
8	5.0	21	0
9	5.0	22	0
10	5.0	23	0
11	5.0	24	0
12	0	25	0
13	0	26	0

IC907

Pin No.	voltage	Pin No.	voltage
1	2.5	13	2.5
2	2.5	14	2.5
3	2.5	15	2.5
4	2.5	16	2.5
5	2.5	17	2.5
6	2.5	18	2.5
7	2.5	19	2.5
8	2.5	20	2.5
9	2.5	21	2.5
10	2.5	22	2.5
11	2.5	23	2.5
12	0	24	5.0

IC908

Pin No.	voltage	Pin No.	voltage
1	-5.0	15	-3.4
2	-5.0	16	-3.5
3	0	17	0
4	5.0	18	0
5	-5.0	19	
6	2.5	20	-5.0
7	2.5	21	0
8	2.5	22	0
9	2.5	23	-3.3
10	0	24	1.4
11	3.0	25	-1.0
12	2.5	26	-1.3
13	0	27	-1.3
14	-5.0	28	0

Pin No.	IC903	IC904
	voltage	
1	0	0
2	2.6	0
3	2.6	0
4	-5.0	-10.0
5	0	0
6	0.7	0
7	-4.0	0
8	5.0	10.0

IC909

Pin No.	voltage	Pin No.	voltage
1	0	9	0.7
2	0	10	-4.4
3	0	11	0.7
4	0	12	0
5	0	13	0
6	-5.0	14	0
7	-5.0	15	0
8	-5.0	16	5.0

Pin No.	IC910	IC911
	voltage	
1	0	0
2	0	0
3	0	0
4	-5.0	-5.0
5	0	0
6	0	0
7	1.4	0
8	5.0	5.0

ACKING SERVO
FSET ADJ.

A

B

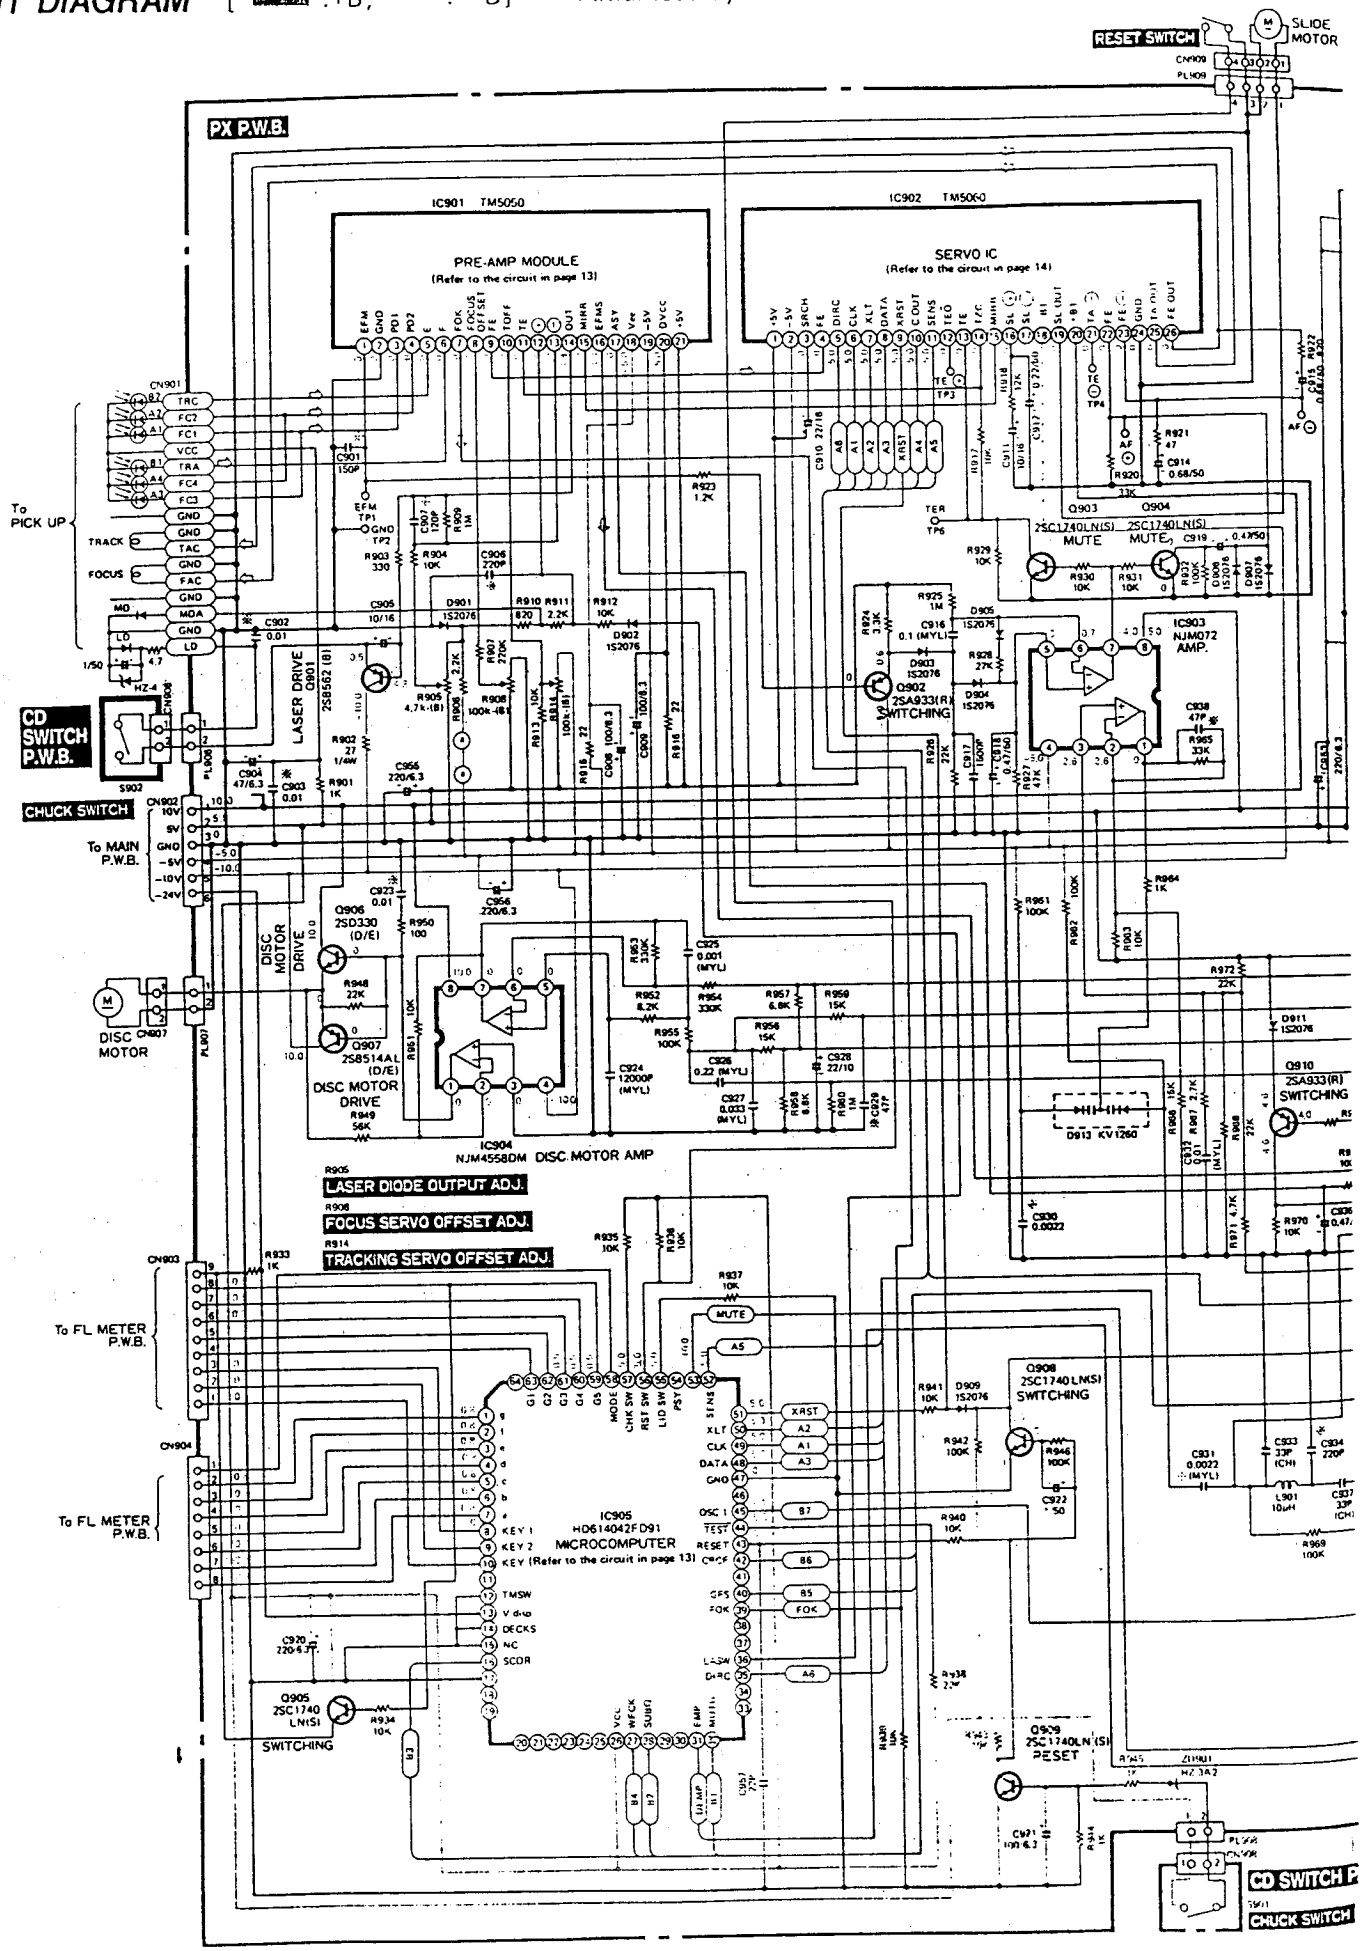
C

D


E


F

G



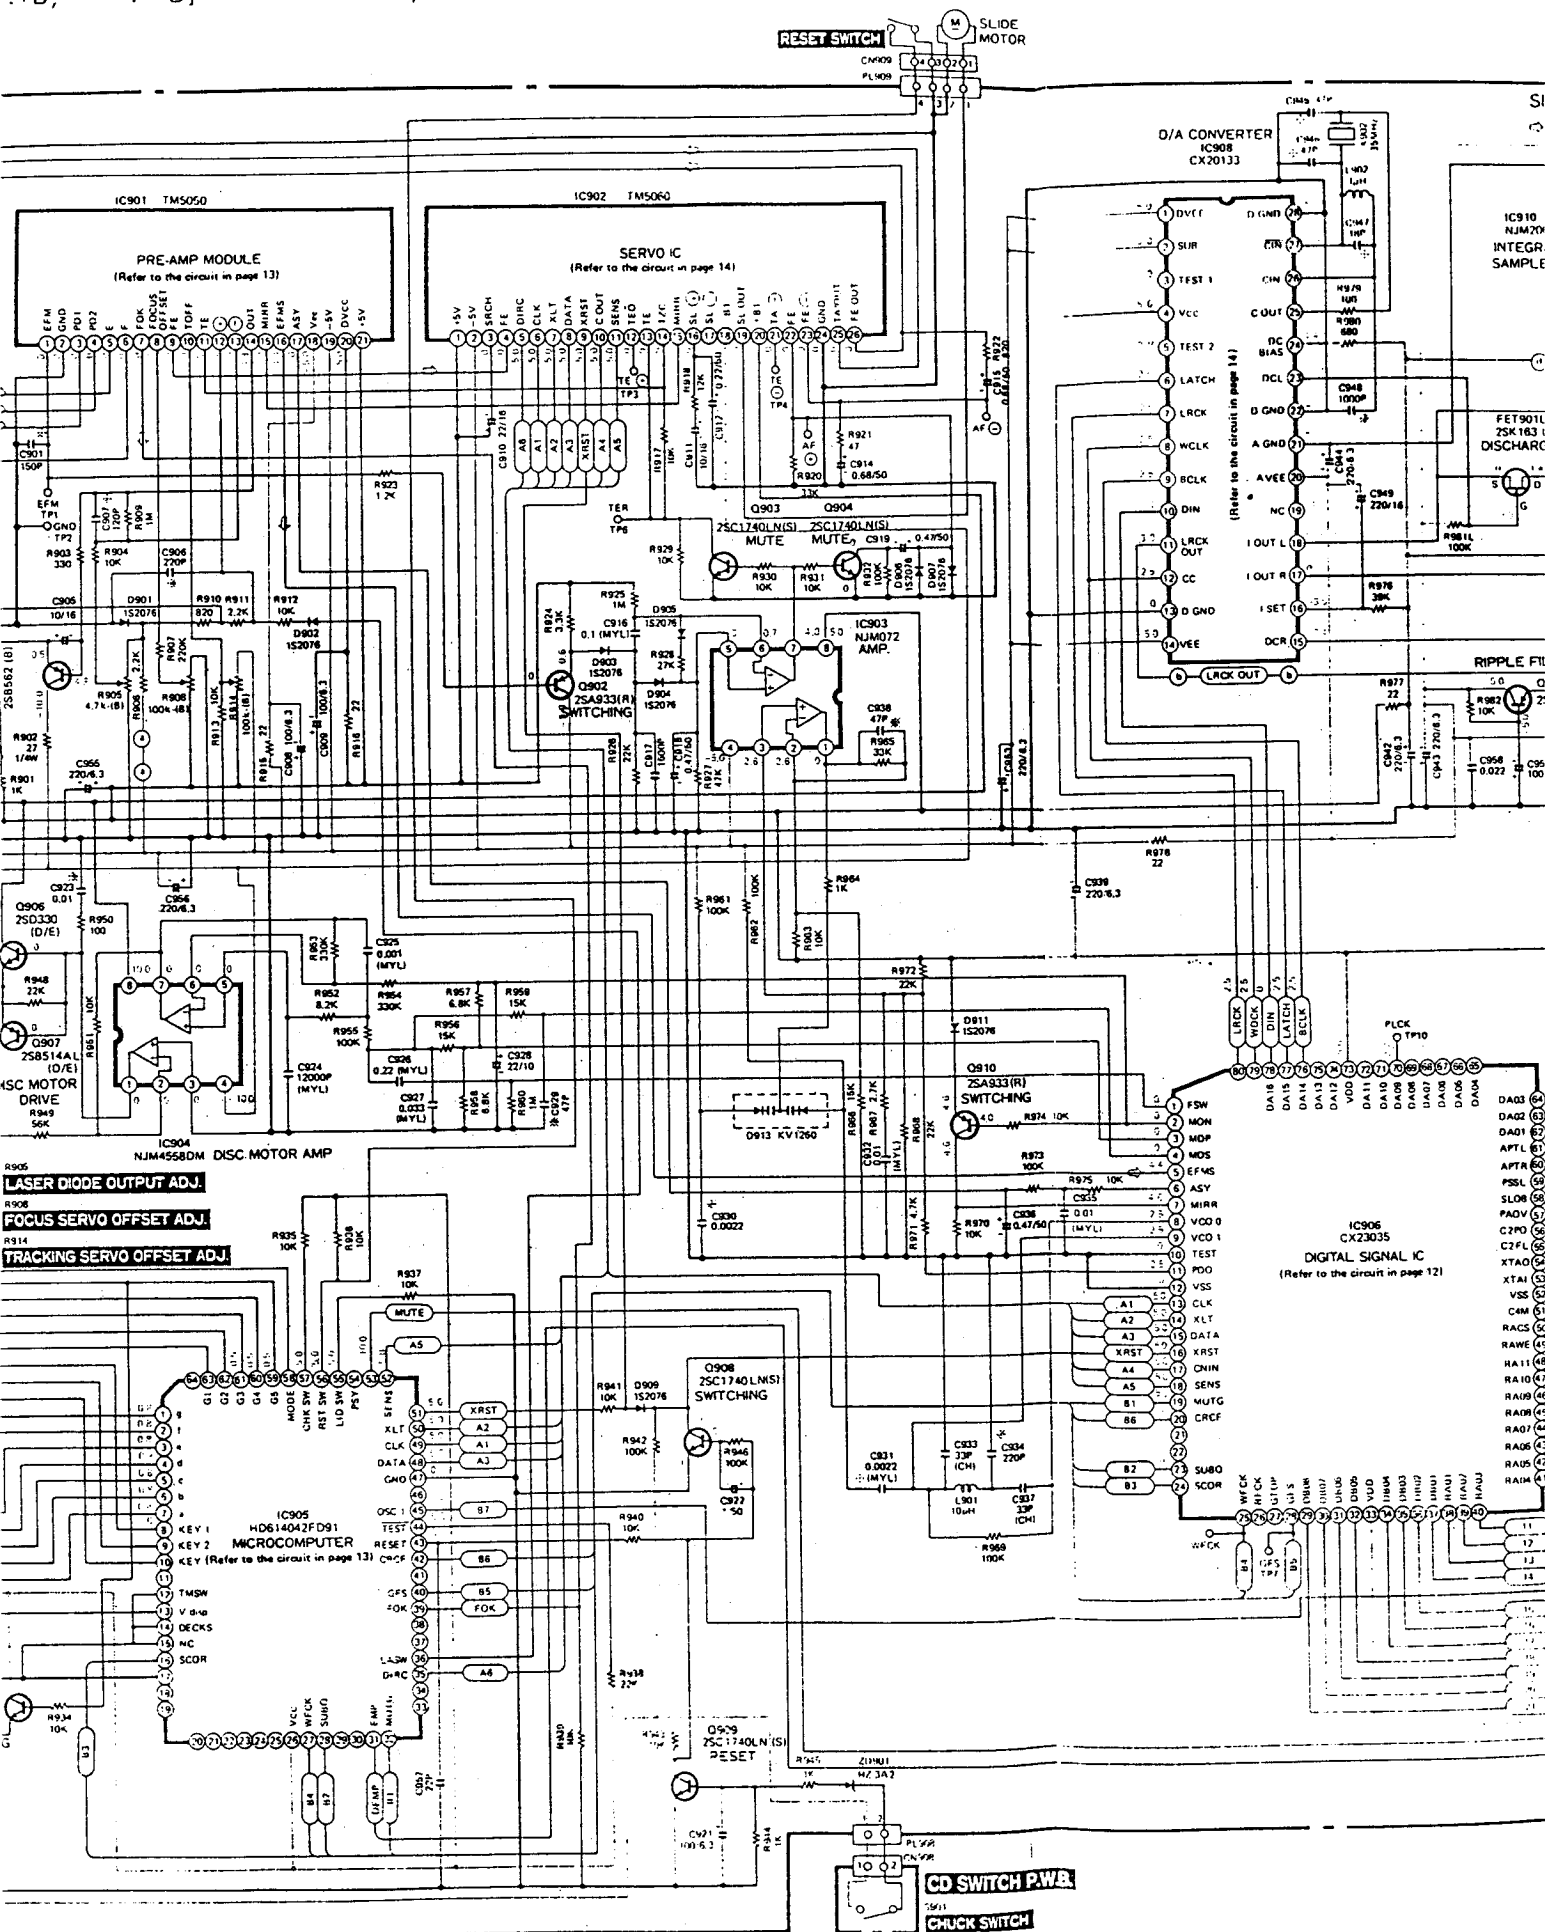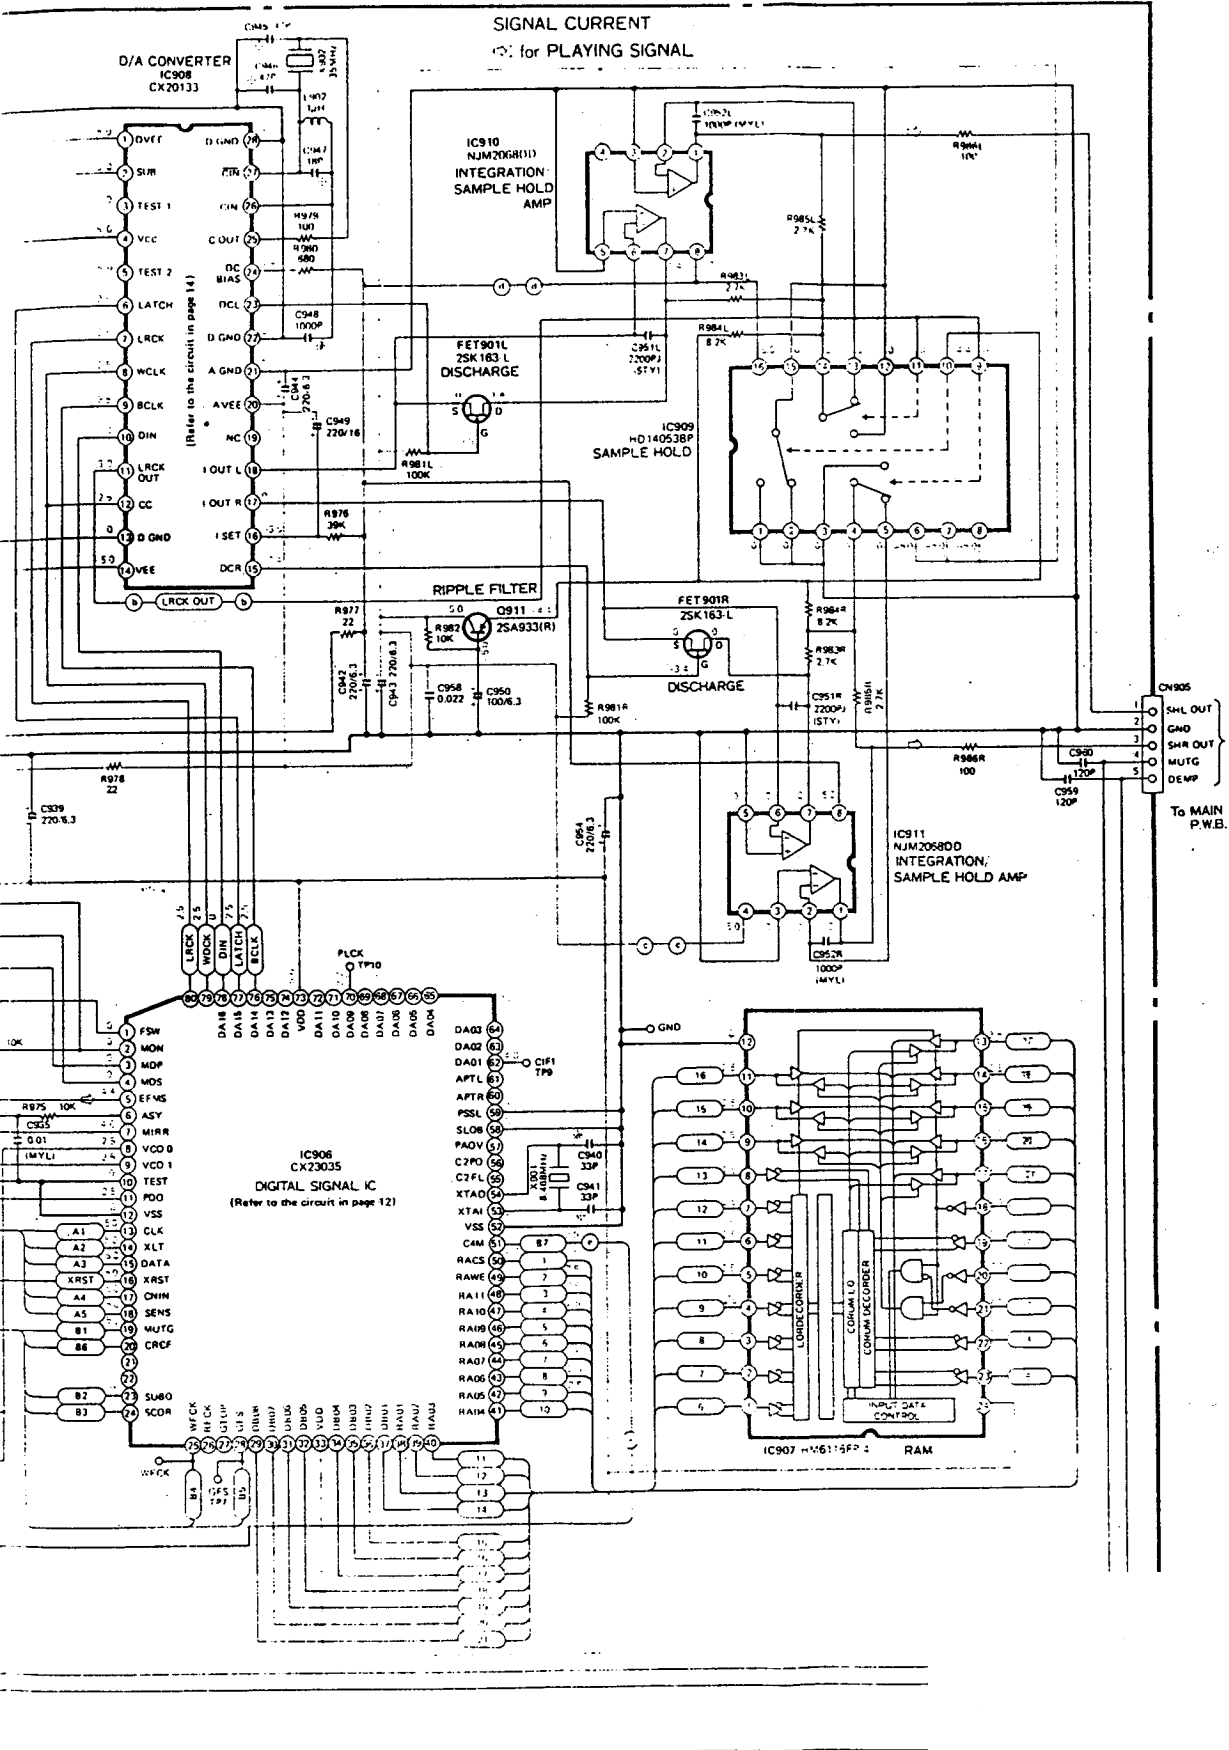±B, \pm -B] \oplus Axial lead cylindrical ceramic capacitor.





A

B

C

D

E

F

G

DIFFERENCE FOR DESTINATION


(for CIRCUIT DIAGRAM)

☆No.	US	CS	EW	KS	SA	ES, VS, BK	ZS
C102	-	-	-	-	-	-	0.22μF/50V
C103	-	-	-	-	-	-	1μF/50V
C104	-	-	-	-	-	-	0.022μF
C105	-	-	-	-	-	-	39PF
C106	-	-	-	-	-	-	39PF
C156	-	-	-	-	-	0.047μF	-
C157	-	-	-	-	-	27PF	-
C158	-	-	-	-	-	0.022μF	-
C159	-	-	-	-	-	270PF	-
C160	-	-	-	-	-	1μF	-
C161	-	-	-	-	-	110PF	-
C162	-	-	-	-	-	0.022μF	-
C307LR	0.039μF	0.039μF	0.015μF	0.015μF	0.015μF	0.015μF	0.015μF
C308LR	1μF	1μF	-	-	-	-	-
C354	-	-	-	-	-	0.22μF/50V	-
C355	-	-	-	-	-	1μF/50V	-
C356	-	-	-	-	-	0.068μF	-
R1	2.7MΩ	2.7MΩ	-	-	-	-	-
R102	-	-	-	-	-	-	100kΩ
R103	-	-	-	-	-	-	100kΩ
R104	-	-	-	-	-	-	100kΩ
R105	-	-	-	-	-	-	10kΩ
R106	-	-	-	-	-	-	2.7kΩ
R107	-	-	-	-	-	-	100kΩ
R108	-	-	-	-	-	-	68Ω
R157	-	-	-	-	-	10kΩ	-
R158	-	-	-	-	-	10kΩ	-
R159	-	-	-	-	-	10kΩ	-
R160	-	-	-	-	-	220kΩ	-
R161	-	-	-	-	-	1.5kΩ	-
R162	-	-	-	-	-	100kΩ	-
R163	-	-	-	-	-	4.7kΩ	-
R164	-	-	-	-	-	100kΩ	-
R308LR	2.2kΩ	2.2kΩ	-	-	-	-	-
R355	-	-	-	-	-	6.8kΩ	-
R356	-	-	-	-	-	6.8kΩ	-
R357	-	-	-	-	-	10kΩ	-
R358	-	-	-	-	-	1kΩ	-
R378	47kΩ	100kΩ	47kΩ	100kΩ	100kΩ	100kΩ	100kΩ
R383	47kΩ	-	47kΩ	-	-	-	-
R384	47kΩ	-	47kΩ	-	-	-	-
Q101	-	-	-	-	-	-	2SC1740LN(S)
Q102	-	-	-	-	-	-	2SK104F
Q151	-	-	-	-	-	2SC1740LN(S)	-
Q152	-	-	-	-	-	2SC1740LN(S)	-
Q153	2SA933(R)	2SA933(R)	2SA933(R)	-	2SA933(R)	2SA933(R)	-
Q154	2SA933(R)	2SA933(R)	2SA933(R)	-	2SA933(R)	2SA933(R)	-
Q353	-	-	-	-	-	2SC2603EF	-
Q354	-	-	-	-	-	2SC2603EF	-


☆No.	US	CS	EW	KS	SA	ES, VS, BK	ZS
D103	-	-	-	-	-	-	1K60R
D104	-	-	-	-	-	-	1K60R
D152	-	-	-	-	-	KV1236	-
D153	-	-	-	-	-	1S2473	-
D154	-	-	-	-	-	1S2473	-
D155	-	-	-	-	-	1S2473	-
D158	-	-	-	-	-	1S2473	-
D357	-	-	-	1SS133T	-	1SS133T	1SS133T
L152	-	-	-	-	-	USE	-
T152	-	-	-	-	-	USE	-
JK102	-	-	-	USE	-	USE	USE
MF202	-	-	-	-	-	-	USE
CT152	-	-	-	-	-	USE	-
CP101	-	-	-	-	-	-	USE
CP251	-	-	-	-	-	-	USE
F801	USE	-	USE	-	-	-	-
F802	4A	4A	4A	T4A	T4A	T4A	T4A
F803	1A	1A	1A	T800mA	T800mA	for ES, VS T800mA for BK 800mA	T800mA
F804	1A	1A	1A	T800mA	T800mA	for ES, VS T800mA for BK 800mA	T800mA
S363	-	-	-	-	-	USE	-
S370	USE	-	USE	-	-	-	-
J191	-	USE	-	USE	USE	USE	USE
J201	USE	USE	USE	USE	USE	USE	-
J229	USE	USE	USE	USE	USE	USE	-
J244	USE	USE	USE	USE	USE	USE	-
J235	USE	USE	USE	USE	USE	USE	-
J240	USE	USE	USE	USE	USE	USE	-

M5218P NJM072 NJM2068DD NJM4558D μPB553AC	HD140668P	BA6251 BA1330 HD140538P	AN6873N AN7273 HA12045	TC9152P	CX20133	μPD1704C-531	AN278 BA6124
STK4141II	TM5050	TM5060	BA3416AL	HD61404FD91	CX2303S	2SA933(R) 2SA1468 2SC1740LN(S)	1K34A 1K60R 1S2076 1S2473 1SS133T KV1260 HZ-3A2 HZ5C1 HZ-6B HZ-7A1 HZ11B2 HZ-12A-2 HZ-12A-3 HZ-12C2 HZ-24-2
2SC2603EF	2SB514AL(D/E) 2SD330(D/E) 2SD880(GR)	2SD1266(P)	2SB562B	2SK104F	2SK163-L	ERB12-01	
KV1236	S4V820						

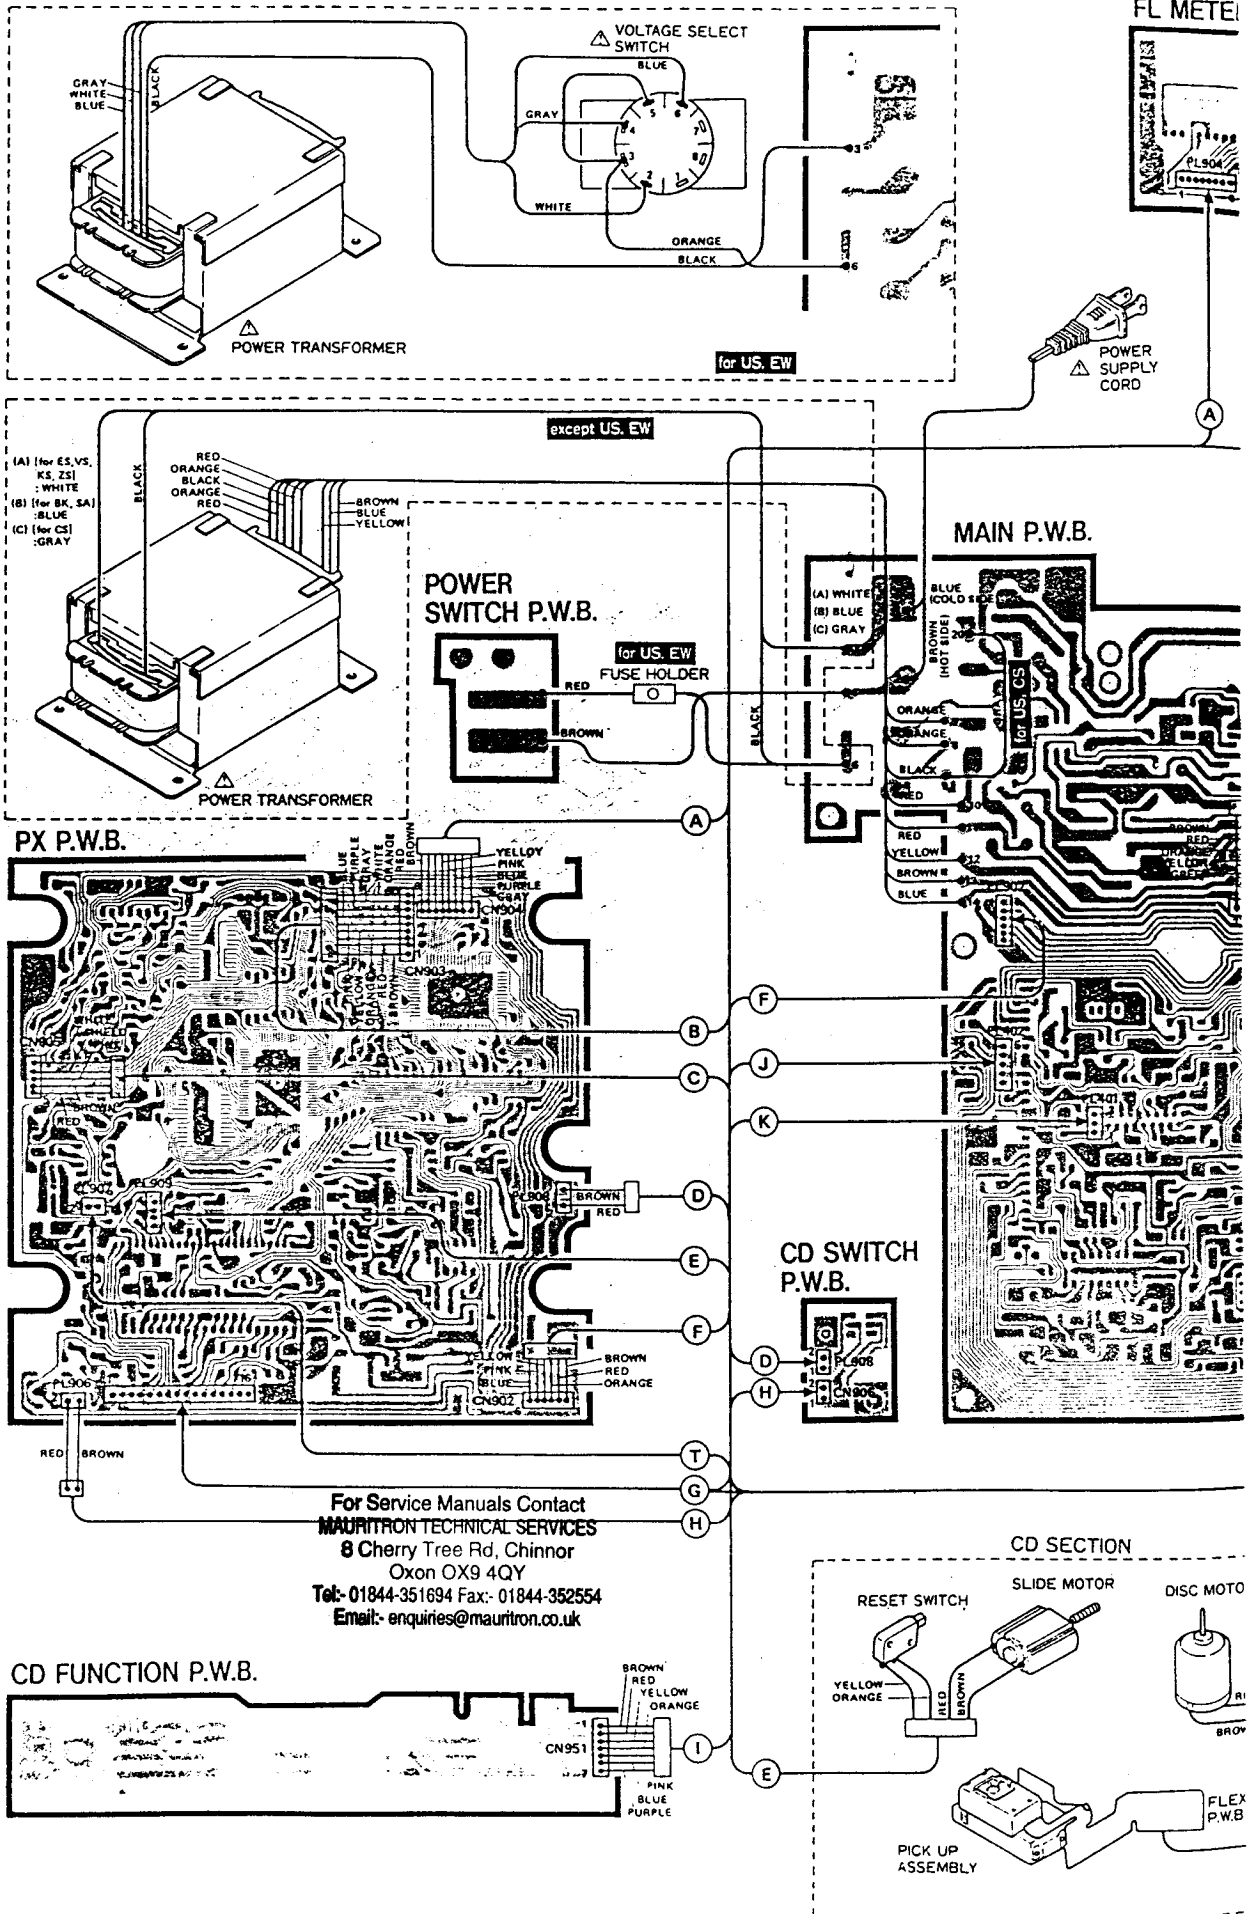WIRING DIAGRAM



M

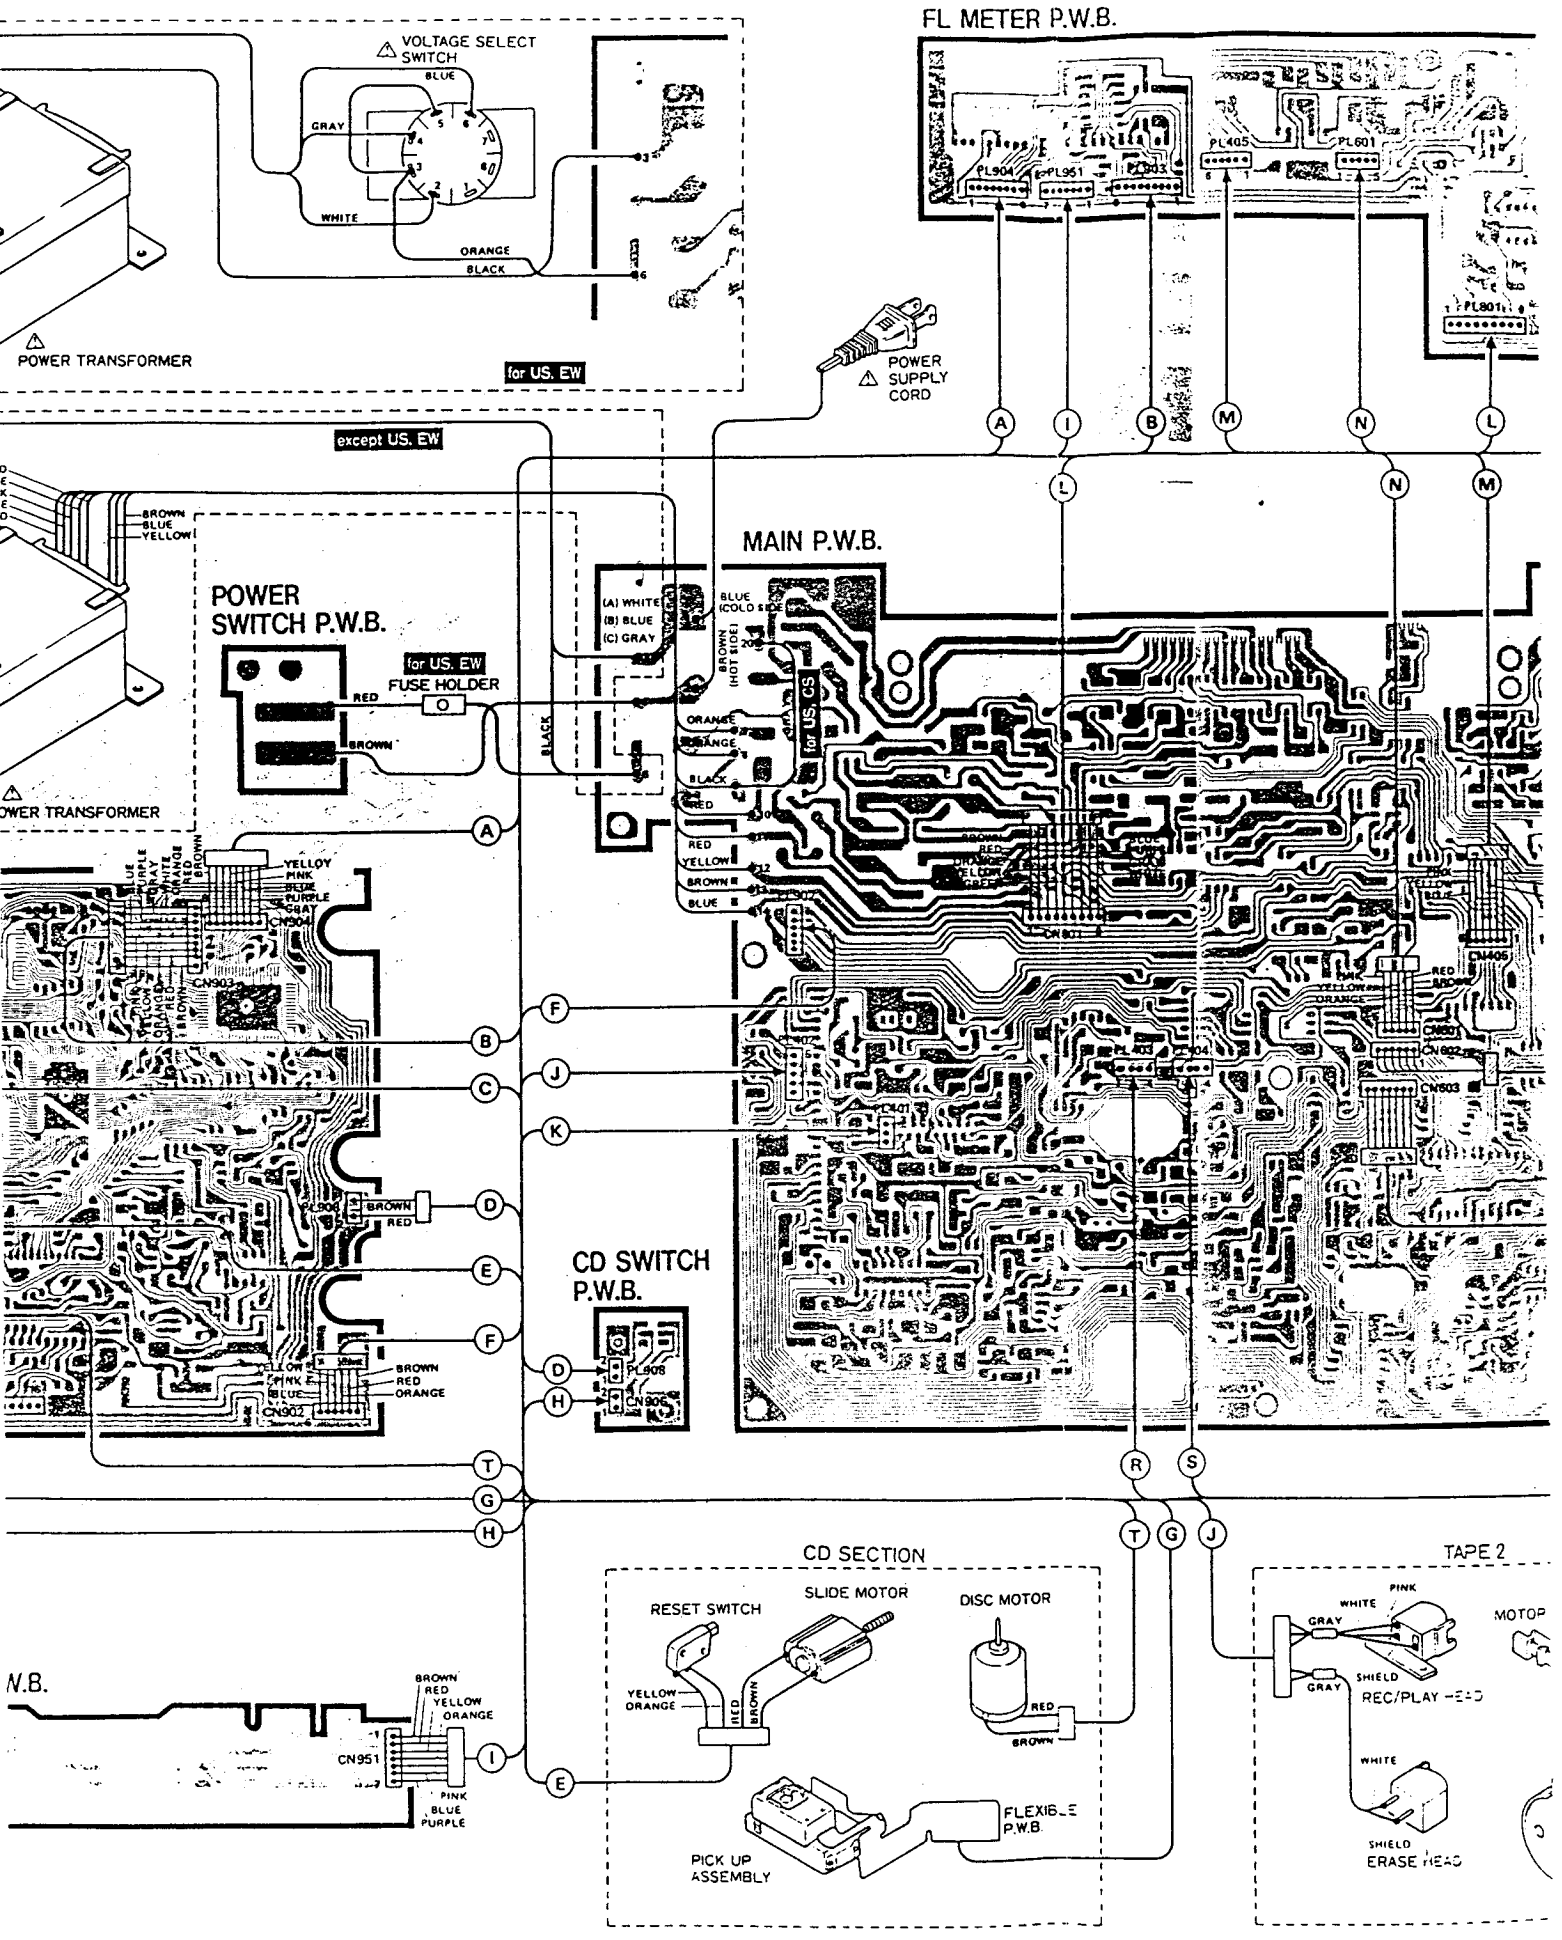

N.B.

2

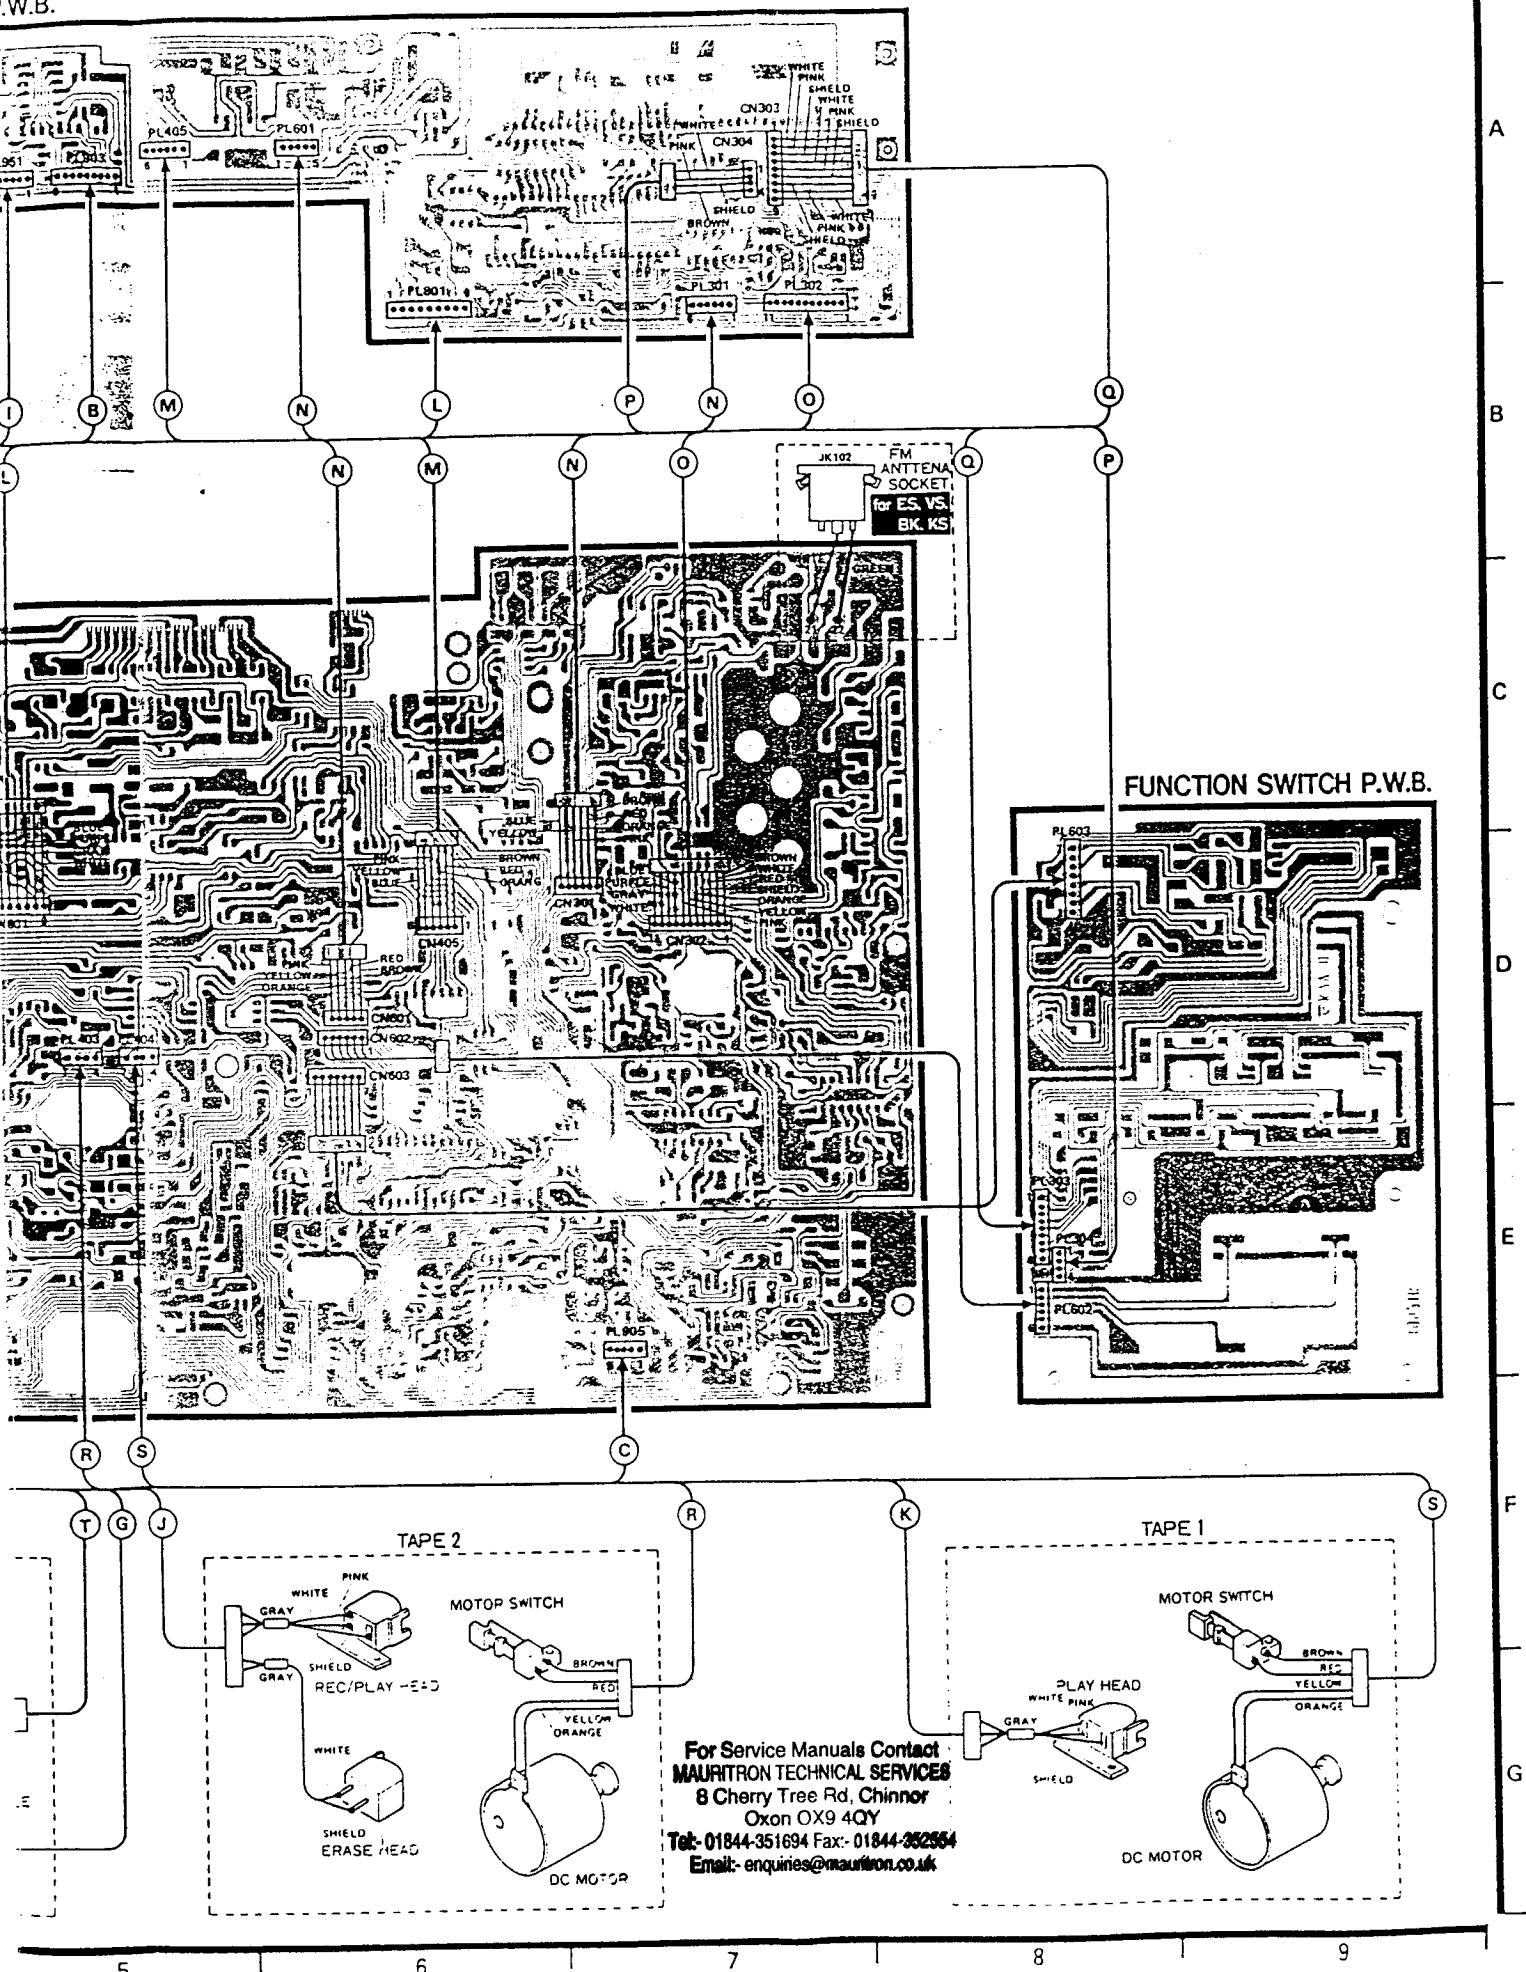
3

4

5

6

W.B.




For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

EXPLODED VIEW (Cabinet) • Nos. are reference Nos. of parts list

MX-W01



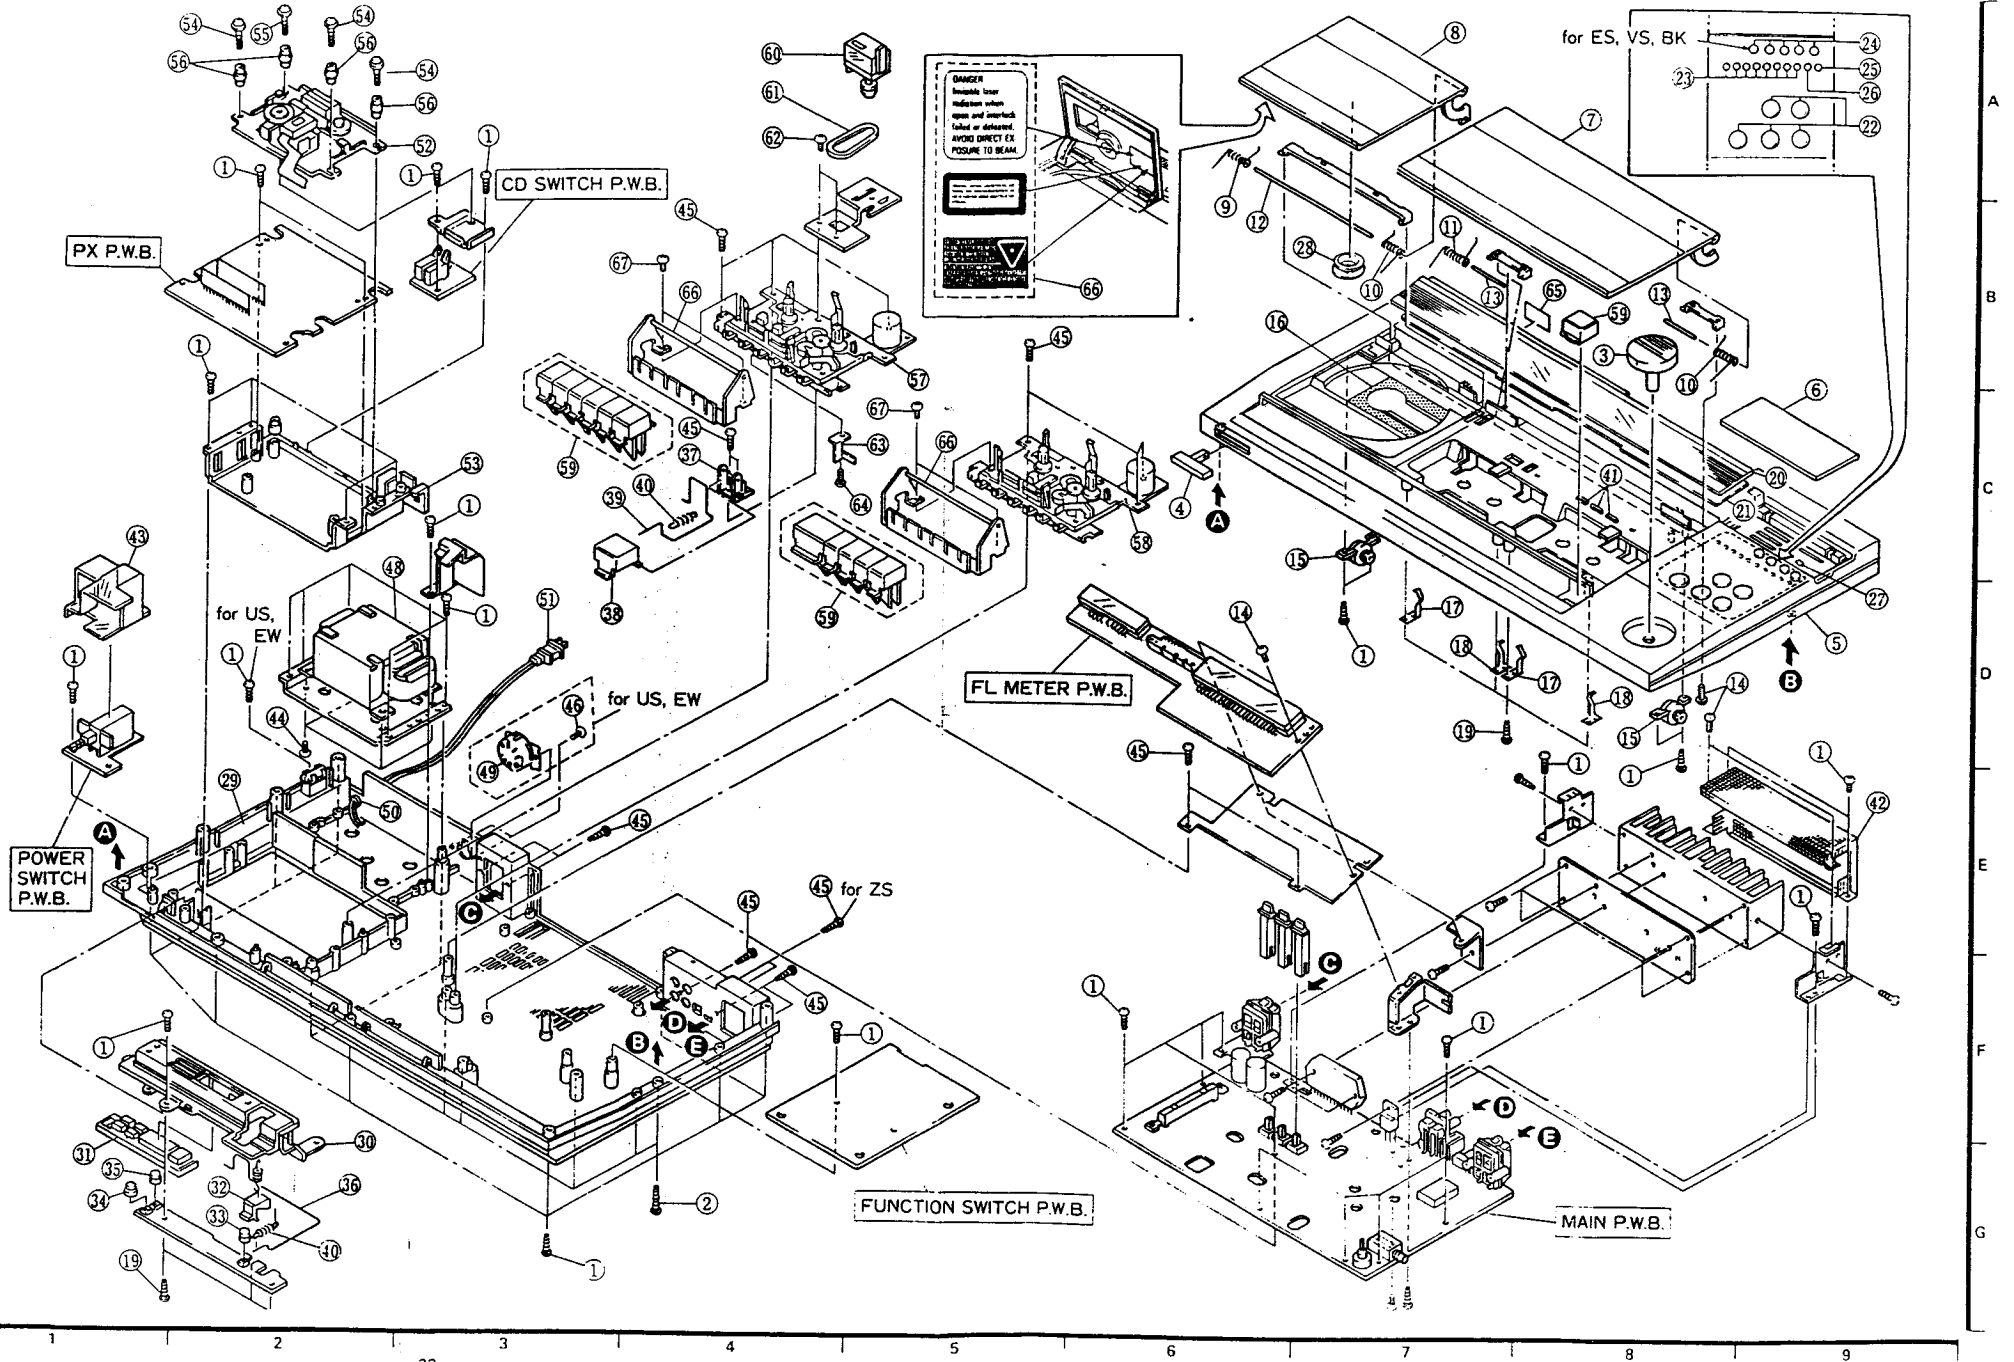
MX-W01



EXPLODED VIEW (Cassette Chassis) (Unit mechanism) • Nos. are reference Nos. of parts list

UNIT MECHANISM

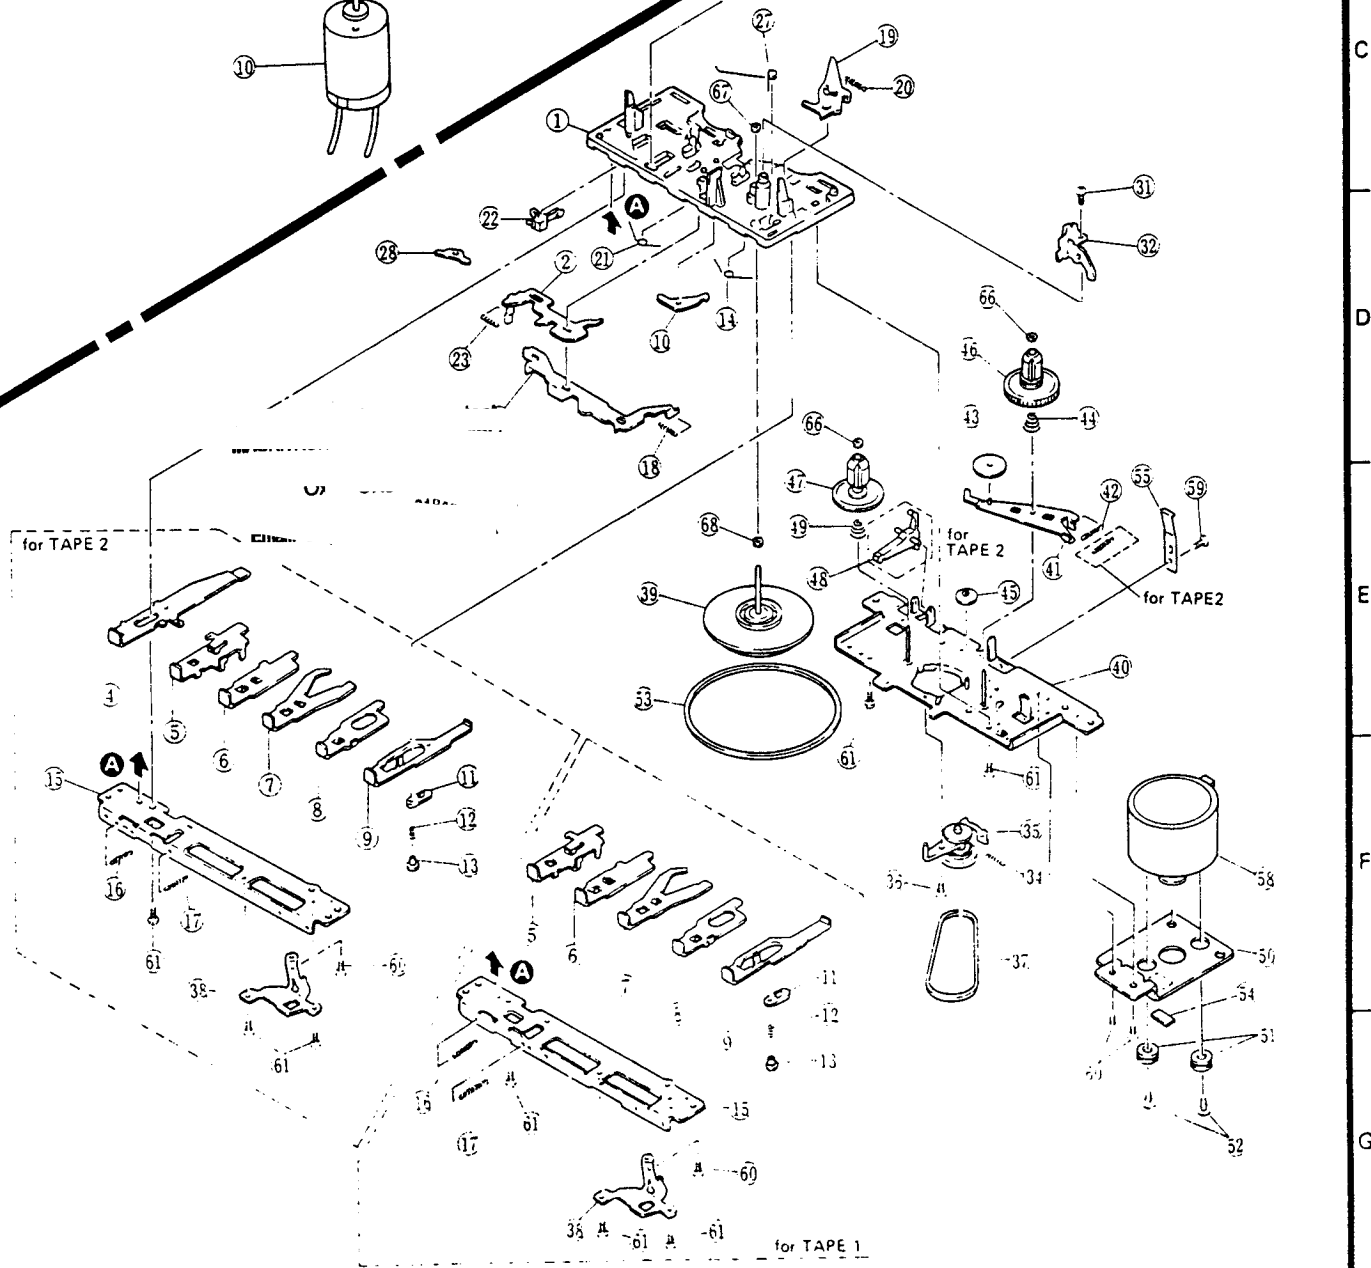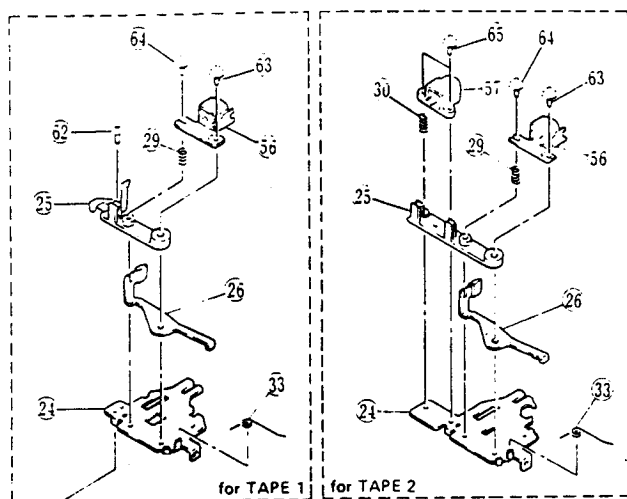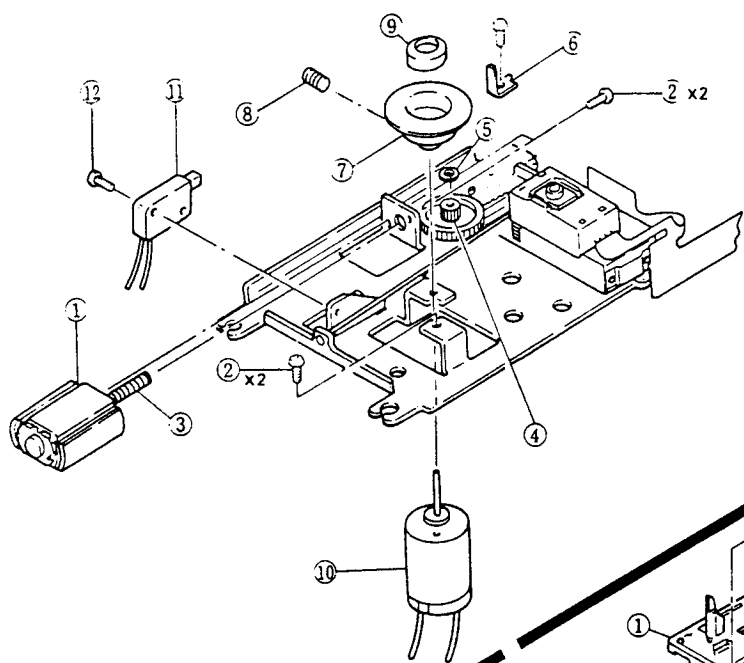CASSETTE CHASSIS



CC : Cylindrical ceramic	FR : Fuse resistor	ST : Styrol
CD : Ceramic discal	NF : Non flammable	1/4P : SRD 1/4P
CF : Carbon film	ME : Metal	1/6P : SRD 1/6P
CO : Composition	MF : Mylar film	
EL : Electrolytic	MO : Metal oxide	

REPLACEMENT PARTS LIST

P.W.B. Parts

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION
CAPACITORS								
C101	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C308R	0252811	EL 1 μ F $\pm 20\%$	C485	1252251	EL 10 μ F $\pm 20\%$
C102	0252802	EL 0.22 μ F $\pm 20\%$ (for ZS)	C309	0252805	EL 0.47 μ F $\pm 20\%$	C486	0252462	EL 4.7 μ F $\pm 20\%$
C103	0252811	EL 1 μ F $\pm 20\%$ (for ZS)	C310	1252427	EL 220 μ F $\pm 20\%$	C501LR	1248688	CD 150PF $\pm 5\%$
C104	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$ (for ZS)	C311LR	0252459	EL 1 μ F $\pm 20\%$	C502L	0252462	EL 4.7 μ F $\pm 20\%$
C105	0230626	CC 39PF $\pm 5\%$ (for ZS)	C312	0252811	EL 1 μ F $\pm 20\%$	C502R	1252462	EL 4.7 μ F $\pm 20\%$
C106	0230626	CC 39PF $\pm 5\%$ (for ZS)	C351	1244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C503LR	1248684	CD 100PF $\pm 5\%$
C151	0275015	MF 0.047 μ F $\pm 10\%$	C352	1252271	EL 4.7 μ F $\pm 20\%$	C504LR	0240053	CC 2200PF $\pm 20\%$
C152	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C353	1275013	MF 0.022 μ F $\pm 10\%$	C505LR	0240060	CC 8200PF $\pm 30\%$
C153	1279326	MF 510PF $\pm 2\%$	C354	1252269	EL 0.22 μ F $\pm 20\%$ (for ES, VS, BK)	C506LR	02522312	EL 100 μ F $\pm 20\%$
C154	1246442	CD 12PF $\pm 5\%$	C355	1252252	EL 1 μ F $\pm 20\%$ (for ES, VS, BK)	C507	0252521	EL 10 μ F $\pm 20\%$
C155	0230616	CC 15PF $\pm 5\%$	C356	1275016	MF 0.068 μ F $\pm 10\%$ (for ES, VS, BK)	C508	0252521	EL 10 μ F $\pm 20\%$
C156	0275015	MF 0.047 μ F $\pm 10\%$ (for ES, VS, BK)	C357	1252253	EL 47 μ F $\pm 20\%$	C509LR	0252811	EL 1 μ F $\pm 20\%$
C157	1246450	CD 27PF $\pm 5\%$ (for ES, VS, BK)	C358	1275013	MF 0.022 μ F $\pm 10\%$	C600LR	12528132	EL 3.3 μ F $\pm 20\%$
C158	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$ (for ES, VS, BK)	C359	1244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C602LR	1275015	MF 0.047 μ F $\pm 10\%$
C159	0228321	ST 270PF $\pm 5\%$ (for ES, VS, BK)	C360	1244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C603LR	02760112	MF 0.1 μ F $\pm 10\%$
C160	0252811	EL 1 μ F $\pm 20\%$ (for ES, VS, BK)	C361	1246449	CD 24PF $\pm 5\%$	C604LR	1274015	MF 4700PF $\pm 10\%$
C161	1246465	CD 110PF $\pm 5\%$ (for ES, VS, BK)	C362	1246449	CD 24PF $\pm 5\%$	C605LR	1275013	MF 0.022 μ F $\pm 10\%$
C162	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$ (for ES, VS, BK)	C363	1252722	EL 22 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C607LR	0252459	EL 1 μ F $\pm 20\%$
C163	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C364	1244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C610	1252252	EL 1 μ F $\pm 20\%$
C202	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C401LR	02097242	CD 560PF $\pm 10\%$	C612LR	0252811	EL 1 μ F $\pm 20\%$
C204	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C402LR	02097242	CD 560PF $\pm 10\%$	C613LR	1252251	EL 10 μ F $\pm 20\%$
C205	02441712	CD 0.01 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C404LR	1252427	EL 220 μ F $\pm 20\%$	C614	1252265	EL 100 μ F $\pm 20\%$
C251	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C405LR	02750142	MF 0.033 μ F $\pm 10\%$	C615	1252265	EL 100 μ F $\pm 20\%$
C252	1252459	EL 1 μ F $\pm 20\%$	C406LR	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C651LR	0240035	CC 150PF $\pm 10\%$
C253	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C407LR	0252461	EL 3.3 μ F $\pm 20\%$	C652LR	0274015	MF 4700PF $\pm 10\%$
C254	0252521	EL 10 μ F $\pm 20\%$	C408	0252423	EL 22 μ F $\pm 20\%$	C653LR	0252322	EL 22 μ F $\pm 20\%$
C255	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C410	1252255	EL 47 μ F $\pm 20\%$	C654LR	0240033	CC 100PF $\pm 10\%$
C256	0252231	EL 100 μ F $\pm 20\%$	C411	1252272	EL 22 μ F $\pm 20\%$	C655LR	02740142	MF 0.0033 μ F $\pm 10\%$
C257	0252322	EL 22 μ F $\pm 20\%$	C412	1252272	EL 22 μ F $\pm 20\%$	C656LR	1252272	EL 22 μ F $\pm 20\%$
C258	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C413	02441712	CD 0.01 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C658	0252426	EL 100 μ F $\pm 20\%$
C259	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C414	0240061	CD 0.01 μ F $\pm 30\%$	C659	0240061	CC 0.01 μ F $\pm 30\%$
C260	0240045	CC 1000PF $\pm 10\%$	C415	1252255	EL 47 μ F $\pm 20\%$	C670	0252411	EL 22 μ F $\pm 20\%$
C261	0240036	CC 180PF $\pm 10\%$	C420	0252531	EL 100 μ F $\pm 20\%$	C671	0252455	EL 0.22 μ F $\pm 20\%$
C262	0244173	CD 0.022 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C421	0209731	CD 1000PF $\pm 10\%$	C700LR	0240039	CC 330PF $\pm 10\%$
C263	1246456	CD 47PF $\pm 5\%$	C422LR	02086922	CD 220PF $\pm 5\%$	C701	0252467	EL 100 μ F $\pm 20\%$
C264	0252803	EL 0.33 μ F $\pm 20\%$	C423LR	02740132	MF 0.0022 μ F $\pm 10\%$	C702L	0252225	EL 47 μ F $\pm 20\%$
C265	0240033	CC 100PF $\pm 10\%$	C424LR	1252803	EL 0.33 μ F $\pm 20\%$	C702R	1252401	EL 47 μ F $\pm 20\%$
C301	0252521	EL 10 μ F $\pm 20\%$	C426LR	1252251	EL 10 μ F $\pm 20\%$	C703LR	0230606	CC 3.3PF $\pm 10\%$
C302	1244185	CD 0.047 μ F $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C427	1252265	EL 100 μ F $\pm 20\%$	C704LR	02526252	EL 47 μ F $\pm 20\%$
C303	0221525	ST 680PF $\pm 5\%$	C428LR	1252251	EL 10 μ F $\pm 20\%$	C705	1252467	EL 100 μ F $\pm 20\%$
C304	0252802	EL 0.22 μ F $\pm 20\%$	C430LR	02750112	MF 0.01F $\pm 10\%$	C706	1252465	EL 33 μ F $\pm 20\%$
C305	02528132	EL 3.3 μ F $\pm 20\%$	C431LR	02750132	MF 0.022 μ F $\pm 10\%$	C707	02760112	MF 0.1 μ F $\pm 10\%$
C306	0252525	EL 47 μ F $\pm 20\%$	C432LR	1252251	EL 10 μ F $\pm 20\%$	C708LR	02760112	MF 0.1 μ F $\pm 10\%$
C307LR	0275034	MF 0.039 μ F $\pm 10\%$ (for US, CS)	C433LR	1252251	EL 10 μ F $\pm 20\%$	C709	0252521	EL 10 μ F $\pm 20\%$
C307LR	02750122	MF 0.015 μ F $\pm 10\%$ (except US, CS)	C434LR	02750112	MF 0.01 μ F $\pm 10\%$	C710	02760112	MF 0.1 μ F $\pm 10\%$
C308L	1252459	EL 1 μ F $\pm 20\%$	C470	0252427	EL 220 μ F $\pm 20\%$	C750LR	0252811	EL 1 μ F $\pm 20\%$
			C471LR	02750142	MF 0.033 μ F $\pm 10\%$	C751L	1252422	EL 10 μ F $\pm 20\%$
			C472LR	0252815	EL 4.7 μ F $\pm 20\%$	C751R	0252521	EL 10 μ F $\pm 20\%$
			C473LR	1252252	EL 1 μ F $\pm 20\%$	C752LR	0252521	EL 10 μ F $\pm 20\%$
			C474LR	1275232	MF 0.018 μ F $\pm 5\%$	C753LR	1248684	CD 100PF $\pm 5\%$
			C475LR	0252802	EL 0.22 μ F $\pm 20\%$	C754	0252521	EL 10 μ F $\pm 20\%$
			C476	1252265	EL 100 μ F $\pm 20\%$	C755	1252422	EL 10 μ F $\pm 20\%$
			C477L	02528072	EL 0.68 μ F $\pm 20\%$	C802	0245408	CD 0.01 μ F $\pm 20\%$
			C477R	1252458	EL 0.68 μ F $\pm 20\%$	C803	0245408	CD 0.01 μ F $\pm 20\%$
			C478LR	1274215	MF 4700PF $\pm 5\%$	C804	0259933	EL 5600 μ F $\pm 20\%$
			C479	1252265	EL 100 μ F $\pm 20\%$	C805	0259933	EL 5600 μ F $\pm 20\%$
			C481LR	1252251	EL 10 μ F $\pm 20\%$	C806	0259840	EL 2200 μ F $\pm 20\%$
			C482LR	1252251	EL 10 μ F $\pm 20\%$	C807	0259840	EL 2200 μ F $\pm 20\%$
			C484	0209161	CD 1000PF $\begin{smallmatrix} +80\% \\ -20\% \end{smallmatrix}$	C808	0252427	EL 220 μ F $\pm 20\%$
						C809	0252541	EL 1000 μ F $\pm 20\%$
						C810	0252402	EL 100 μ F $\pm 20\%$
						C811	1252426	EL 100 μ F $\pm 20\%$

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	
C812	0252415	EL 220 μ F \pm 20%	C950	1252403	EL 100 μ F \pm 20%	R255	0113639	CF 10k Ω \pm 5%	
C813	0252415	EL 220 μ F \pm 20%	C951LR	0228343	ST 2200PF	R256	0113607	CF 470 Ω \pm 5%	
C814	1252429	EL 470 μ F \pm 20%	C952L	02740112	MF 1000PF \pm 10%	R258	0113615	CF 1k Ω \pm 5%	
C815	1252429	EL 470 μ F \pm 20%	C952R	1274011	MF 1000PF \pm 10%	R301	0113639	CF 10k Ω \pm 5%	
C816	02528212	EL 10 μ F \pm 20%	C953	0252403	EL 220 μ F \pm 20%	R302	0113639	CF 10k Ω \pm 5%	
C817	0252407	EL 2200 μ F \pm 20%	C954	1252403	EL 220 μ F \pm 20%	R303	0113649	CF 27k Ω \pm 5%	
C818	0259891	Super capacitor 0.022 μ F	C955	0252403	EL 220 μ F \pm 20%	R304	1123619	NF 68 Ω \pm 5%	
C819	0252811	EL 1 μ F \pm 20%	C956	0252403	EL 220 μ F \pm 20%	R305LR	0113627	CF 3.3k Ω \pm 5%	
C820	0252821	EL 10 μ F \pm 20%	C957	02486682	CD 22PF \pm 5%	R306	0113601	CF 270 Ω \pm 5%	
C821	1252430	EL 1000 μ F \pm 20%	C958	0244173	CD 0.022 μ F \pm 20%	R307LR	0113623	CF 2.2k Ω \pm 5%	
C822	0252525	EL 47 μ F \pm 20%	C959	02486862	CD 120PF \pm 5%	R308LR	0113623	CF 2.2k Ω \pm 5%	
C823	0252542	EL 2200 μ F \pm 20%	C960	02486862	CD 120PF \pm 5%	R310	0113623	CF 2.2k Ω \pm 5%	
C824	0252542	EL 2200 μ F \pm 20%				R311	0113593	CF 120 Ω \pm 5%	
C901	0240035	CC 150PF \pm 10%	RESISTORS				R312	0113655	CF 47k Ω \pm 5%
C902	0240061	CC 0.01 μ F \pm 30%	R1	0139005	CO 2.7M Ω \pm 10% (for US, CS)	R313	0113647	CF 22k Ω \pm 5%	
C903	0240061	CC 0.01 μ F \pm 30%	R101	0113639	CF 10k Ω \pm 5%	R314	0113639	CF 10k Ω \pm 5%	
C904	0252225	EL 47 μ F \pm 20%	R102	0113663	CF 100k Ω \pm 5%	R315	0113663	CF 100k Ω \pm 5%	
C905	1252521	EL 10 μ F \pm 20%	R103	0113663	CF 100k Ω \pm 5%	R316	0113663	CF 100k Ω \pm 5%	
C906	0240037	CC 220PF \pm 10%	R104	0113591	CF 100 Ω \pm 5%	R317	0113653	CF 39k Ω \pm 5%	
C907	0240034	CC 120PF \pm 10%	R105	0113639	CF 10k Ω \pm 5%	R318	0113639	CF 10k Ω \pm 5%	
C908	0252402	EL 100 μ F \pm 20%	R106	0113625	CF 2.7k Ω \pm 5%	R319	0113655	CF 47k Ω \pm 5%	
C909	0252402	EL 100 μ F \pm 20%	R107	0113663	CF 100k Ω \pm 5%	R320	0113663	CF 100k Ω \pm 5%	
C910	02525222	EL 22 μ F \pm 20%	R108	0113587	CF 68 Ω \pm 5%	R321	0113663	CF 100k Ω \pm 5%	
C911	0252521	EL 10 μ F \pm 20%	R151	0113615	CF 1k Ω \pm 5%	R322	0113639	CF 10k Ω \pm 5%	
C912	0252802	EL 0.22 μ F \pm 20%	R152	0113639	CF 10k Ω \pm 5%	R323	0113615	CF 1k Ω \pm 5%	
C914	02528072	EL 0.68 μ F \pm 20%	R153	0113639	CF 10k Ω \pm 5%	R324LR	0113659	CF 68k Ω \pm 5%	
C915	02528072	EL 0.68 μ F \pm 20%	R154	0113671	CF 220k Ω \pm 5%	R351	0113623	CF 2.2k Ω \pm 5%	
C916	02760112	MF 0.1 μ F \pm 10%	R155	0113611	CF 680 Ω \pm 5%	R352	0113635	CF 6.8k Ω \pm 5%	
C917	0240051	CC 1500PF \pm 20%	R157	0113639	CF 10k Ω \pm 5%	R353	0113611	CF 680 Ω \pm 5%	
C918	0252805	EL 0.47 μ F \pm 20%	R158	0113639	CF 10k Ω \pm 5%	R354	0113623	CF 2.2k Ω \pm 5%	
C919	0252805	EL 0.47 μ F \pm 20%	R159	0113639	CF 10k Ω \pm 5%	R355	0113635	CF 6.8k Ω \pm 5%	
C920	0252403	EL 220 μ F \pm 20%	R160	0113671	CF 220k Ω \pm 5%	R356	0113635	CF 6.8k Ω \pm 5%	
C921	0252402	EL 100 μ F \pm 20%	R161	0113619	CF 1.5k Ω \pm 5%	R357	0113635	CF 6.8k Ω \pm 5%	
C922	0252811	EL 1 μ F \pm 20%	R162	0113663	CF 100k Ω \pm 5%	R358	0113615	CF 1k Ω \pm 5%	
C923	0240061	CC 0.01 μ F \pm 30%	R163	0113631	CF 4.7k Ω \pm 5%	R359	0113587	CF 68 Ω \pm 5%	
C924	0275031	MF 12000PF \pm 10%	R164	0113663	CF 100k Ω \pm 5%	R360	0113639	CF 10k Ω \pm 5%	
C925	1275011	MF 0.001 μ F \pm 10%	R165	0113683	CF 580k Ω \pm 5%	R361	0113657	CF 56k Ω \pm 5%	
C926	1276013	MF 0.22 μ F \pm 10%	R166	0113623	CF 2.2k Ω \pm 5%	R362	0113663	CF 100k Ω \pm 5%	
C927	1275014	MF 0.033 μ F \pm 10%	R205	0113603	CF 230 Ω \pm 5%	R363	0113633	CF 5.6k Ω \pm 5%	
C928	0252322	EL 22 μ F \pm 20%	R206	0113615	CF 1k Ω \pm 5%	R364	0113633	CF 5.6k Ω \pm 5%	
C929	0230628	CC 47PF \pm 5%	R207	0113605	CF 390 Ω \pm 5%	R365	0110623	FR 150 Ω \pm 5%	
C930	0274013	CC 0.0022 μ F \pm 10%	R208	0113623	CF 2.2k Ω \pm 5%	R366	0113639	CF 10k Ω \pm 5%	
C931	0274013	CC 0.0022 μ F \pm 10%	R250	0113291	CF 220 Ω \pm 5%	R367	0113655	CF 47k Ω \pm 5%	
C932	02750112	MF 0.01 μ F \pm 10%	R252	0113623	CF 2.2k Ω \pm 5%	R368	0113655	CF 47k Ω \pm 5%	
C933	1246452	CD 33PF \pm 5%	R253	0113621	CF 1.8k Ω \pm 5%	R369	0113655	CF 47k Ω \pm 5%	
C934	0240037	CC 220PF \pm 10%	R254	0113615	CF 1k Ω \pm 5%	R370	0113655	CF 47k Ω \pm 5%	
C935	02750112	MF 0.01 μ F \pm 10%				R371	0113615	CF 1k Ω \pm 5%	
C936	0252805	EL 0.47 μ F \pm 20%				R372	0113615	CF 1k Ω \pm 5%	
C937	1246452	CD 33PF \pm 5%				R373	0113637	CF 3.2k Ω \pm 5%	
C938	0230628	CC 47PF \pm 5%				R374	0113637	CF 3.2k Ω \pm 5%	
C939	1252403	EL 220 μ F \pm 20%				R375	0113637	CF 3.2k Ω \pm 5%	
C940	0230624	CC 33PF \pm 5%				R376	0113663	CF 100k Ω \pm 5%	
C941	0230624	CC 33PF \pm 5%				R377	0113663	CF 100k Ω \pm 5%	
C942	1252403	EL 220 μ F \pm 20%				R378	0113655	CF 47k Ω \pm 5%	
C943	0252403	EL 220 μ F \pm 20%				R378	0113663	CF 100k Ω \pm 5%	
C944	0252403	EL 220 μ F \pm 20%							
C945	0230628	CC 47PF \pm 5%							
C946	0230628	CC 47PF \pm 5%							
C947	0230618	CC 18PF \pm 5%							
C948	0240045	CC 1000PF \pm 10%							
C949	1252427	EL 220 μ F \pm 20%							

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION
R379	0113663	CF 100k Ω \pm 5%	R491	0113651	CF 33k Ω \pm 5%	R753LR	0113655	CF 47k Ω \pm 5%
R380	0113663	CF 100k Ω \pm 5%	R501LR	0113609	CF 560 Ω \pm 5%	R754LR	0113663	CF 100k Ω \pm 5%
R381	0113645	CF 18k Ω \pm 5%	R502LR	0113655	CF 47k Ω \pm 5%	R755LR	01132912	CF 220k Ω \pm 5%
R382	0113631	CF 4.7k Ω \pm 5%	R503LR	0113621	CF 1.8k Ω \pm 5%	R756	1123627	NF 330 Ω \pm 5%
R383	0113655	CF 47k Ω \pm 5%	R504LR	0113651	CF 33k Ω \pm 5%	R801	0129577	CF 470 Ω \pm 5%
R384	0113655	CF 47k Ω \pm 5%	R505LR	0113677	CF 390k Ω \pm 5%	R802	0129561	CF 100 Ω \pm 5%
R401LR	0113575	CF 22 Ω \pm 5%	R506LR	0113647	CF 22k Ω \pm 5%	R803	1119527	MO 330 Ω \pm 10%
R402	0113631	CF 4.7k Ω \pm 5%	R507LR	0113647	CF 22k Ω \pm 5%	R807	1123625	NF 220 Ω \pm 5%
R403	1123627	CF 330 Ω \pm 5%	R508LR	0113659	CF 68k Ω \pm 5%	R808	0113623	CF 2.2k Ω \pm 5%
R404LR	0113629	CF 3.9k Ω \pm 5%	R600LR	0113629	CF 3.9k Ω \pm 5%	R809	0113637	CF 8.2k Ω \pm 5%
R405LR	0113663	CF 100k Ω \pm 5%	R601LR	0113641	CF 12k Ω \pm 5%	R810	0129573	CF 330 Ω \pm 5%
R406LR	0113623	CF 2.2k Ω \pm 5%	R602LR	0113627	CF 3.3k Ω \pm 5%	R814	0113599	CF 220 Ω \pm 5%
R407LR	0113627	CF 3.3k Ω \pm 5%	R604LR	0113615	CF 1k Ω \pm 5%	R815	0129573	CF 330 Ω \pm 5%
R408	0113657	CF 56k Ω \pm 5%	R605	0113617	CF 1.2k Ω \pm 5%	R817	0129609	CF 2.2k Ω \pm 5%
R409	0113637	CF 8.2k Ω \pm 5%	R606	0113617	CF 1.2k Ω \pm 5%	R818	1129601	CF 1k Ω \pm 5%
R410	0113655	CF 47k Ω \pm 5%	R607	0113617	CF 1.2k Ω \pm 5%	R821	1129615	CF 3.9k Ω \pm 5%
R411	0113637	CF 8.2k Ω \pm 5%	R608	0113617	CF 1.2k Ω \pm 5%	R822	0113615	CF 1k Ω \pm 5%
R412	0113659	CF 68k Ω \pm 5%	R609	0113617	CF 1.2k Ω \pm 5%	R823	1129605	CF 1.5k Ω \pm 5%
R413	0113639	CF 10k Ω \pm 5%	R610	0113635	CF 6.8k Ω \pm 5%	R824	1129617	CF 4.7k Ω \pm 5%
R414	0113639	CF 10k Ω \pm 5%	R611	0113639	CF 10k Ω \pm 5%	R826	0129577	CF 470 Ω \pm 5%
R416	0113639	CF 10k Ω \pm 5%	R612LR	0113631	CF 4.7k Ω \pm 5%	R827	0129561	CF 100 Ω \pm 5%
R417	0113639	CF 10k Ω \pm 5%	R613LR	0113687	CF 1M Ω \pm 5%	R901	0113615	CF 1k Ω \pm 5%
R418	0113639	CF 10k Ω \pm 5%	R614LR	0113609	CF 560 Ω \pm 5%	R902	01132222	CF 27 Ω \pm 5%
R419	0113639	CF 10k Ω \pm 5%	R615	1123627	NF 330 Ω \pm 5%	R903	0113603	CF 330 Ω \pm 5%
R420	1110607	FR 33 Ω \pm 5%	R616	1123627	NF 330 Ω \pm 5%	R904	0113639	CF 10k Ω \pm 5%
R421	0113292	CF 270 Ω \pm 5%	R620LR	0113635	CF 6.8k Ω \pm 5%	R906	0113623	CF 2.2k Ω \pm 5%
R422	1123625	NF 220 Ω \pm 5%	R621LR	0113623	CF 2.2k Ω \pm 5%	R907	0113671	CF 220k Ω \pm 5%
R423LR	0113641	CF 12k Ω \pm 5%	R625LR	0113625	CF 2.7k Ω \pm 5%	R909	0113687	CF 1M Ω \pm 5%
R424LR	0113635	CF 6.8k Ω \pm 5%	R651LR	0113625	CF 2.7k Ω \pm 5%	R910	0113613	CF 820 Ω \pm 5%
R426LR	0113677	CF 390k Ω \pm 5%	R652LR	0113625	CF 2.7k Ω \pm 5%	R911	0113623	CF 2.2k Ω \pm 5%
R427LR	0113625	CF 2.7k Ω \pm 5%	R653LR	0113637	CF 8.2k Ω \pm 5%	R912	0113639	CF 10k Ω \pm 5%
R428LR	0113637	CF 8.2k Ω \pm 5%	R654LR	0113641	CF 12k Ω \pm 5%	R913	0113639	CF 10k Ω \pm 5%
R429LR	0113627	CF 3.3k Ω \pm 5%	R655LR	0113687	CF 1M Ω \pm 5%	R915	0113575	CF 22 Ω \pm 5%
R430LR	0113619	CF 1.5k Ω \pm 5%	R656LR	0113639	CF 10k Ω \pm 5%	R916	0113575	CF 22 Ω \pm 5%
R431LR	0113615	CF 1k Ω \pm 5%	R657LR	0113607	CF 470 Ω \pm 5%	R917	0113639	CF 10k Ω \pm 5%
R432LR	0113575	CF 22 Ω \pm 5%	R658LR	0113639	CF 10k Ω \pm 5%	R918	0113641	CF 12k Ω \pm 5%
R436LR	0113639	CF 10k Ω \pm 5%	R659LR	0113631	CF 4.7k Ω \pm 5%	R920	0113651	CF 33k Ω \pm 5%
R437	0113639	CF 10k Ω \pm 5%	R660	0113639	CF 10k Ω \pm 5%	R921	0113573	CF 47 Ω \pm 5%
R438	0113645	CF 18k Ω \pm 5%	R661	0113655	CF 47k Ω \pm 5%	R922	0113613	CF 820 Ω \pm 5%
R439	0113641	CF 12k Ω \pm 5%	R662	0113655	CF 47k Ω \pm 5%	R923	0113617	CF 1.2k Ω \pm 5%
R440	0113655	CF 47k Ω \pm 5%	R663	0113639	CF 10k Ω \pm 5%	R924	0113627	CF 3.3k Ω \pm 5%
R441	0113631	CF 4.7k Ω \pm 5%	R664	0113639	CF 10k Ω \pm 5%	R925	0113687	CF 1M Ω \pm 5%
R470LR	0113639	CF 10k Ω \pm 5%	R665LR	0113629	CF 3.9k Ω \pm 5%	R926	0113647	CF 22k Ω \pm 5%
R471LR	0113627	CF 3.3k Ω \pm 5%	R666LR	0113615	CF 1k Ω \pm 5%	R927	0113655	CF 47k Ω \pm 5%
R472LR	0113655	CF 47k Ω \pm 5%	R670	0113637	CF 8.2k Ω \pm 5%	R928	0113649	CF 27k Ω \pm 5%
R473LR	0113619	CF 1.5k Ω \pm 5%	R671	0113631	CF 4.7k Ω \pm 5%	R929	0113639	CF 10k Ω \pm 5%
R474LR	0113631	CF 4.7k Ω \pm 5%	R701LR	0113657	CF 56k Ω \pm 5%	R930	0113639	CF 10k Ω \pm 5%
R475LR	0129652	CF 75k Ω \pm 5%	R702LR	0113603	CF 330 Ω \pm 5%	R931	0113639	CF 10k Ω \pm 5%
R478	0113631	CF 4.7k Ω \pm 5%	R703LR	0113657	CF 56k Ω \pm 5%	R932	0113663	CF 100k Ω \pm 5%
R479	0113639	CF 10k Ω \pm 5%	R704LR	0129609	CF 2.2k Ω \pm 5%	R933	0113615	CF 1k Ω \pm 5%
R480LR	0113623	CF 2.2k Ω \pm 5%	R705LR	0129609	CF 2.2k Ω \pm 5%	R934	0113639	CF 10k Ω \pm 5%
R481LR	0113635	CF 6.8k Ω \pm 5%	R706	0113657	CF 56k Ω \pm 5%	R935	0113639	CF 10k Ω \pm 5%
R482	0113631	CF 4.7k Ω \pm 5%	R707	1110629	FR 470 Ω \pm 5%	R936	0113639	CF 10k Ω \pm 5%
R483LR	0113653	CF 39k Ω \pm 5%	R708	1129607	CF 1.8k Ω \pm 5%	R937	0113639	CF 10k Ω \pm 5%
R484LR	0113643	CF 15k Ω \pm 5%	R709	1129643	CF 33k Ω \pm 5%	R938	0113647	CF 22k Ω \pm 5%
R485LR	0113657	CF 56k Ω \pm 5%	R710	1110621	FR 100 Ω \pm 5%	R939	0129894	CF 10k Ω \pm 5%
R487	0113637	CF 4.7k Ω \pm 5%	R711	0113647	CF 22k Ω \pm 5%	R940	0113639	CF 10k Ω \pm 5%
R488	0113639	CF 10k Ω \pm 5%	R712	0113671	CF 220k Ω \pm 5%	R941	0113639	CF 10k Ω \pm 5%
R489	0113645	CF 18k Ω \pm 5%	R713LR	1119139	ME 4.7 Ω \pm 10%	R942	0113663	CF 100k Ω \pm 5%
R490	0113591	CF 100 Ω \pm 5%	R750LR	0113615	CF 1k Ω \pm 5%	R943	0113639	CF 10k Ω \pm 5%
			R751LR	0113601	CF 270 Ω \pm 5%	R944	0113615	CF 1k Ω \pm 5%
			R752LR	0113653	CF 39k Ω \pm 5%	R945	0113615	CF 1k Ω \pm 5%

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION
R946	0113663	CF 100k Ω ± 5% 1/5P	ICs & TRANSISTORS			Q404	2329553	2SC2603EF
R948	0113647	CF 22k Ω ± 5% 1/6P				Q420LR	2329553	2SC2603EF
R949	0113657	CF 56k Ω ± 5% 1/6P	IC201	23684312	AN278	Q421LR	2329553	2SC2603EF
R950	0113591	CF 100 Ω ± 5% 1/6P	IC251	2387321	AN7273	Q471	2329553	2SC2603EF
R951	0113639	CF 10k Ω ± 5% 1/6P	IC301	2368354	BA1330	Q481LR	2329553	2SC2603EF
R952	0113637	CF 8.2k Ω ± 5% 1/6P	IC351	23687412	μ PB553AC	Q610LR	2329553	2SC2603EF
R953	0113675	CF 330k Ω ± 5% 1/6P	IC352	2369722	μ PD1704C-531	Q651LR	2329553	2SC2603EF
R954	0113675	CF 330k Ω ± 5% 1/6P	IC353	2387421	AN6873N	Q652LR	2317971	2SD1468
R955	0113663	CF 100k Ω ± 5% 1/6P	IC354	2387611	BA6251	Q653	2329553	2SC2603EF
R956	0113643	CF 15k Ω ± 5% 1/6P	IC401	2301051	BA3416AL	Q654	2329582	2SA933(R)
R957	0113635	CF 6.8k Ω ± 5% 1/6P	IC402	2369201	HD14066BP	Q701	2329582	2SA933(R)
R958	0113635	CF 6.8k Ω ± 5% 1/6P	IC470	2387402	HA12045	Q801	2317803	2SD1266(P)
R959	0113643	CF 15k Ω ± 5% 1/6P	IC471	23696112	BA6124	Q802	2328969	2SB514AL(D/E)
R960	0113687	CF 1M Ω ± 5% 1/6P	IC501	2367221	NJM4558D	Q803	2328652	2SC1740LN(S)
R961	0113663	CF 100k Ω ± 5% 1/6P	IC601	2387564	TC9152P	Q804	2317803	2SD1266(P)
R962	0113663	CF 100k Ω ± 5% 1/6P	IC651	2300761	NJM2068DD	Q805	2317823	2SD880(GR)
R963	0113639	CF 10k Ω ± 5% 1/6P	IC701	2387531	STK4141 □	Q806	2328969	2SB514AL(D/E)
R964	0113615	CF 1k Ω ± 5% 1/6P	IC750	2387301	M5218P	Q807	2328969	2SB514AL(D/E)
R965	0113651	CF 33k Ω ± 5% 1/6P	IC901	2377631	TM5050	Q808	2328969	2SB514AL(D/E)
R966	0113643	CF 15k Ω ± 5% 1/6P	IC902	2377671	TM5060	Q901	2327992	2SB562B
R967	0113625	CF 2.7k Ω ± 5% 1/6P	IC903	23002212	NJM072	Q902	2329582	2SA933(R)
R968	0113647	CF 22k Ω ± 5% 1/6P	IC904	2367222	NJM4558DM	Q903	2328652	2SC1740LN(S)
R969	0113663	CF 100k Ω ± 5% 1/6P	IC905	2389300	HD61404FD91	Q904	2328652	2SC1740LN(S)
R970	0113639	CF 10k Ω ± 5% 1/6P	IC906	23001912	CX23035	Q905	2328652	2SC1740LN(S)
R971	0113631	CF 4.7k Ω ± 5% 1/6P	IC907	2387441	HM6116FP-4	Q906	2317739	2SD330(D/E)
R972	0113647	CF 22k Ω ± 5% 1/6P	IC908	2300591	CX20133	Q907	2328969	2SB514AL(D/E)
R973	0113663	CF 100k Ω ± 5% 1/6P	IC909	2387481	HD14053BP	Q908	2328652	2SC1740LN(S)
R974	0113639	CF 10k Ω ± 5% 1/6P	IC910	2300761	NJM2068DD	Q909	2328652	2SC1740LN(S)
R975	0113639	CF 10k Ω ± 5% 1/6P	IC911	2300761	NJM2068DD	Q910	2329582	2SA933(R)
R976	0129908	CF 39k Ω ± 5% 1/4P	FET901LR	2329721	2SK163-L	Q911	2329582	2SA933(R)
R977	0113575	CF 22 Ω ± 5% 1/6P	Q101	2328652	2SC1740LN(S) (for ZS)	DIODES		
R978	0113575	CF 22 Ω ± 5% 1/6P	Q102	2328805	2SK104F (for ZS)	D101	2337601	1S2473
R979	0113591	CF 100 Ω ± 5% 1/6P	Q151	2328652	2SC1740LN(S) (for ES, VS, BK)	D102	2337601	1S2473
R980	0113611	CF 680 Ω ± 5% 1/6P	Q152	2328652	2SC1740LN(S) (for ES, VS, BK)	D103	2337931	1K60R (for ZS)
R981LR	0113663	CF 100k Ω ± 5% 1/6P	Q153	2329582	2SA933(R) (except KS, ZS)	D104	2337931	1K60R (for ZS)
R982	0113639	CF 10k Ω ± 5% 1/6P	Q154	2329582	2SA933(R) (except KS, ZS)	D151	2339921	KV1236
R983L	0129880	CF 2.7k Ω ± 5% 1/4P	Q155	2328652	2SC1740LN(S)	D152	2339921	KV1236 (for ES, VS, BK)
R983R	0113625	CF 2.7k Ω ± 5% 1/6P	Q301LR	2329553	2SC2603EF	D153	2337601	1S2473 (for ES, VS, BK)
R984LR	0113637	CF 8.2k Ω ± 5% 1/6P	Q302	2329582	2SA933(R)	D154	2337601	1S2473 (for ES, VS, BK)
R985L	0129880	CF 2.7k Ω ± 5% 1/4P	Q303	2329553	2SC2603EF	D155	2337601	1S2473 (for ES, VS, BK)
R985R	0113625	CF 2.7k Ω ± 5% 1/6P	Q304	2329553	2SC2603EF	D156	2337601	1S2473
R986LR	0129846	CF 100 Ω ± 5% 1/4P	Q305	2329553	2SC2602EF	D157	2337601	1S2473
			Q306	2329582	2SA933(R)	D158	2337601	1S2473 (for ES, VS, BK)
			Q307	2329582	2SA933(R)	D301	2337601	1S2473
			Q351	2329553	2SC2603EF	D302	2337601	1S2473
			Q352	2329553	2SC2603EF	D303	2337601	1S2473
			Q353	2329553	2SC2603EF (for ES, VS, KS)	D351	2397421	1SS133T
			Q354	2329553	2SC2603EF (for ES, VS, KS)	D352	2337601	1S2473
			Q355	2329553	2SC2603EF	D353	2337601	1S2473
			Q356	2329553	2SC2603EF	D354	2337601	1S2473
			Q401	2329553	2SC2603EF	D355	2337601	1S2473
			Q402	2329582	2SA933(R)	D356	2337601	1S2473
			Q403	2329553	2SC2603EF	D357	2397421	1SS133T (for ES, VS, BK, KS, ZS)

SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION
D358	2397421	1SS133T	D653	2339104	SLP-660C	MF202	2135002	Ceramic filter (for ZS)
D360	2397421	1SS133T	D654	2339104	SLP-660C	MF203	2135002	Ceramic filter
D361	2337601	1S2473	D655	2339104	SLP-660C	MF250	2155152	AM ceramic filter
D401	2337601	1S2473	VARIABLE RESISTORS			CT151	0283127	Trimmer capacitor 20PF
D402	2337601	1S2473	RT301	0158971	10k Ω -(B) (FM MPX VCO ADJ.)	CT152	0283127	Trimmer capacitor 20PF (for ES, VS, BK)
D403	2337601	1S2473	RT401LR	0158975	22k Ω -(B) (PLAYBACK GAIN ADJ.)	CP101	2136941	Band pass filter (for ZS)
D404	2337601	1S2473	RT402LR	0158973	100k Ω -(B) (BIAS CURRENT ADJ.)	CP251	2136312	Anti birdie filter (for ZS)
D405	2337601	1S2473	R905	0158977	4.7k Ω -(B) (LASER DIODE OUTPUT ADJ.)	CP352	0189032	Resistor array (100k Ω x 4)
D406	2337601	1S2473	R908	0158973	100k Ω -(B) (FOCUS SERVO OFFSET ADJ.)	CP353	0241892	Capacitor array (330PF x 7)
D407	2337601	1S2473	R914	0158973	100k Ω -(B) (TRACKING SERVO OFFSET ADJ.)	CP354	0189014	Resistor array (100k Ω x 7)
D408	2337601	1S2473	RV601LR	0189274	100k Ω -(C) (BASS CONTROL)	CP420	2137071	Coil
D420LR	2337601	1S2473	RV602LR	0189274	100k Ω -(C) (TREBLE CONTROL)	CP651LR	2137221	Low pass filter
D470LR	2337921	1K34A	RV603	0189263	200k Ω -(Special W) (BALANCE CONTROL)	CP801	1243901	CD 0.01 μ F \pm 100% 400V
D651	2337762	ERB12-01	RV604LR	0158673	50k Ω -(B) (VOLUME CONTROL)	MD101	2425561	Tuner pack (for ZS)
D671	2337601	1S2473	RV605LR	0189272	10k Ω -(B) (REC LEVEL CONTROL)	MD101	2425461	Tuner pack (except ZS)
D672	2337601	1S2473	COLIS & TRANSFORMERS			Δ F801	2727893	Fuse 2A 125V (for US, CS, EW)
D701	2337601	1S2473	L151	2136503	MW antenna coil	Δ F802	2727894	Fuse 4A 12.5V (for US, CS, EW)
D702	2337601	1S2473	L152	2136504	LW antenna coil (for ES, VS, BK)	Δ F802	2727582	Fuse T4A (for ES, VS, KS, ZS, SA)
Δ D801	2337461	S4VB20	L250	2227889	Peaking coil	Δ F802	2727748	Fuse T4A (for BK)
Δ D802	2337461	S4VB20	L420LR	2135626	Trap coil	Δ F803	2727895	Fuse 1A 125V (for US, CS, EW)
D803	2337601	1S2473	L421	2227353	Choke coil	Δ F803	2727198	Fuse T800mA (for ES, VS, KS, ZS, SA)
D804	2337762	ERB12-01	L422LR	2227991	Choke coil	Δ F804	2727895	Fuse 1A 125V (for US, CS, EW)
D901	2337011	1S2076	L470LR	2137593	Low pass filter	Δ F804	2727198	Fuse T800mA (for ES, VS, KS, ZS, SA)
D902	2337011	1S2076	L901	2137231	Choke coil	Δ F804	2727741	Fuse 800mA (for BK)
D903	2337011	1S2076	L902	2227907	Choke coil	Δ F804	2727895	Fuse 1A 125V (for US, CS, EW)
D904	2337011	1S2076	T151	2136493	MW OSC coil	Δ F804	2727741	Fuse 800mA (for BK)
D905	2337011	1S2076	T152	2136494	LW OSC coil (for ES, VS, BK.)	S351	2639682	Tact switch (P2/10)
D906	2337011	1S2076	T250	2155173	FM discriminator trans.	S352	2639682	Tact switch (P3/11)
D907	2337011	1S2076	MISCELLANEOUS			S353	2639682	Tact switch (P4/12)
D909	2337011	1S2076	JK101	2689382	4P terminal	S354	2639682	Tact switch (P5/13)
D911	2337011	1S2076	JK102	2658391	DIN ANT. socket (for ZS)	S355	2639682	Tact switch (P6/14)
D913	2397321	KV1260	JK102	2677911	FM antenna socket (for ES, VS, BK, KS)	S356	2639682	Tact switch (P7/15)
D951	2337601	1S2473	JK501	2678348	4P US pin jack	S357	2639682	Tact switch (P8/16)
D952	2337601	1S2473	JK701	2689381	Speakers terminal	S358	2639682	Tact switch (SHIFT)
D953	2337601	1S2473	JK702	2677593	Headphones jack	S359	2639682	Tact switch (MEMORY)
D954	2337601	1S2473	FL351	2789302	Fluorescent display tube	S360	2639682	Tact switch (TUNING UP)
Z0351	2337515	HZ6B-2	FL901	2789811	Fluorescent display tube	S361	2639682	Tact switch (TUNING DOWN)
Z0352	2337122	HZ-6B	X351	2789161	Crystal oscillator	S362	2639682	Tact switch (P1/9)
ZD401	2337612	HZ-3A2	X901	2780031	Crystal oscillator	S363	2639682	Tact switch (FM) (for ES, VS, BK)
ZD481	2337612	HZ-3A2	X902	2780041	Crystal oscillator	S364	2639682	Tact switch (MW/FM)
ZD701	2337587	HZ5C1	MF201	2135002	Ceramic filter	S365	2639682	Tact switch [LW/MW(AM)]
ZD801	2337555	HZ11B2				S366	2639682	Tact switch (AUTO/MONO)
ZD802	2337563	HZ-12A-3				S370	2627931	Slide switch (SPACING) (for US, EW)
ZD803	2337122	HZ-6B				S401	2628491	Slide switch (REC/PLAY SELECT)
ZD804	2337122	HZ-6B				S402	2600047	1 key push switch (TAPE SELECT)
ZD805	2337122	HZ-6B						
ZD806	23371882	HZ-24-2						
ZD807	2337122	HZ-6B						
ZD808	2337568	HZ12C-2						
ZD809	2337562	HZ-12A-2						
ZD811	2337555	HZ11B2						
ZD901	2337612	HZ-3A2						
D351	2398422	SLR34DC5						
D481	2398422	SLR34DC5						
D482	2398422	SLR34DC5						
D483	2398422	SLR34DC5						
D484	2339032	SLR-34URC						
D485	2339032	SLR-34URC						
D651	2339104	SLP-660C						
D652	2339104	SLP-660C						

SYMBOL No.	PART No.	DESCRIPTION
S403	2600049	1 key push switch (RIF)
S404	2600049	1 key push switch (DOLBY NR)
S601	2639682	Tact switch (PHONO)
S602	2639682	Tact switch (AUX)
S603	2639682	Tact switch (TAPE)
S604	2639682	Tact switch (CD)
S605	2639682	Tact switch (TUNER)
△S801	2600151	Push switch (POWER)
S901	2639152	Push switch (CHUCK)
S902	2639152	Push switch (CHUCK)
S951	2639682	Tact switch (PLAY/PAUSE)
S952	2639682	Tact switch (STOP/CLEAR)
S953	2639682	Tact switch (FF)
S954	2639682	Tact switch (BACKWARD SKIP)
S955	2639682	Tact switch (FORWARD SKIP)
S956	2639682	Tact switch (MEMORY)
S957	2639682	Tact switch (REPEAT)
S958	2639682	Tact switch (FB)
S959	2639682	Tact switch (TRACK/TIME)
	3802322	LED holder
	4573552	3 φ x 16 tapping bind head screw (radiation bracket)
	4567411	3 φ x 6 DT bind head screw (radiation plate)
	86914102	3 φ x 10 BT bind head screw (radiation plate)
	2727974	Fuse holder

Cabinet Chassis

SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION	
1	86914102	3 φ x 10 BT bind head screw (Main P.W.B., damper; CD mecha base, other)	27	3307361	Auto button	△	48	2249631	Power transformer (for ES, VS, KS, ZS)
2	86914252	3 φ x 25 BT bind head screw (bottom case)	28	4040452	Clumper ass'y	△		2249632	Power transformer (for BK, SA)
3	3307401	Volume knob (BLACK)	29	4041641	Bottom case ass'y (BLACK) (for ES)	△		2249633	Power transformer (for CS)
3	3307402	Volume knob (WHITE)		4041681	Bottom case ass'y (WHITE) (for ES)	△		2249634	Power transformer (for US, EW)
4	3307371	POWER button (BLACK)		4041642	Bottom case ass'y (BLACK) (for VS)	△	49	2618053	Voltage select switch (for US, EW)
4	3307372	POWER button (WHITE)		4041682	Bottom case ass'y (WHITE) (for VS)	△			
5	4041621	Top case ass'y (BLACK) (for ES, VS)		4041643	Bottom case ass'y (BLACK) (for BK, SA)	△	50	00437932	Bushing (for EW)
	4041661	Top case ass'y (WHITE) (for ES, VS)		4041683	Bottom case ass'y (WHITE) (for BK, SA)	△		3913006	Bushing (except EW)
	4041623	Top case ass'y (BLACK) (for BK)		4041644	Bottom case ass'y (BLACK) (for KS)	△	51	2748752	Power supply cord (for ES, VS, KS, ZS)
	4041663	Top case ass'y (WHITE) (for BK)		4041684	Bottom case ass'y (WHITE) (for KS)	△		2749582	Power supply cord (for BK)
	4041622	Top case ass'y (BLACK) (except ES, VS, BK)		4041684	Bottom case ass'y (WHITE) (for KS)	△		2749622	Power supply cord (for SA)
	4041662	Top case ass'y (WHITE) (except ES, VS, BK)		4041645	Bottom case ass'y (BLACK) (for ZS)	△		2700122	Power supply cord (for US, CS)
6	3802333	Lid (BLACK) (for BK)		4041685	Bottom case ass'y (WHITE) (for ZS)		52	4028149	Unit mechanism ass'y
	3802334	Lid (WHITE) (for BK)		4041646	Bottom case ass'y (BLACK) (for US)		53	3802221	CD mecha base
	3802331	Lid (BLACK) (except BK)		4041686	Bottom case ass'y (WHITE) (for US)		54	4594961	Frote screw (unit mecha)
	3802332	Lid (WHITE) (except BK)		4041647	Bottom case ass'y (BLACK) (for CS)		55	4584941	Screw (unit mecha)
7	3802353	Cassette lid ass'y (BLACK)		4041687	Bottom case ass'y (WHITE) (for CS)		56	4691991	Rubber
	3802354	Cassette lid ass'y (WHITE)		4041648	Bottom case ass'y (BLACK) (for EW)		57	2588951	TN-21H-580 mecha ass'y (TAPE 2)
8	3802363	CD lid ass'y (BLACK)		4041688	Bottom case ass'y (WHITE) (for EW)		58	2588952	TN-21H-581 mecha ass'y (TAPE 1)
	3802364	CD lid ass'y (WHITE)		30	3802261	Operating button panel (BLACK)	59	3307341	Deck button (BLACK)
9	3368882	Door open spring (L)		3802262	Operating button panel (WHITE)		59	3307342	Deck button (WHITE)
10	3368888	Door open spring (R)		31	3307431	Operation button (BLACK)	60	2789692	MH counter
11	3368887	Door open spring (L)		31	3307432	Operation button (WHITE)			
12	3368821	CD door wire		32	3307453	CD door open button (BLACK)	61	4686548	Counter belt
13	3368822	Cassette door wire		32	3307454	CD door open button (WHITE)	62	4582511	2 φ x 4 DT screw (MH counter)
14	4567411	3 φ x 6 DT bind head screw (FL, P.W.B., net)		33	3307411	Push button (SHIFT)	63	4469311	REC spring
15	3902912	Oil damper		34	3307412	Push button (MEMORY)	64	8741103	2 φ x 3 bind screw (REC spring)
16	4469182	Cover		35	3307413	Push button (REPEAT)	65	4950952	Laser caution label (except US, CS)
17	4469262	Spring L		36	3368891	CD open wire	66	4955682	Laser caution label (DEM) (for KS)
18	4469252	Spring R		37	3802281	Open button holder		4943884	Laser caution label (for CS)
19	8691308	2.6 φ x 8 BT bind head screw (spring L, spring R)		38	3307421	C door open button (BLACK)	66	4819232	Button lever shaft
20	3802291	Blind		38	3307422	C door open button (WHITE)	67	4819072	2 φ x 7 screw (button holder)
21	3802302	Sheet		39	3368901	Cassette open wire	Unit mechanism		
22	3307441	Function button (BLACK)		40	3368872	Spring	1	4028052	DC motor ass'y (slide motor)
22	3307442	Function button (WHITE)		41	3307381	Push button TAPE SELECT, DOLBY NR RIF)	2	8711103	2 φ x 3 pan head screw (DC motor)
23	3307391	Preset button		42	4469222	Net (BLACK)	3	3800341	Worm gear
24	3307351	Tuning button (BLACK) (for ES, VS, BK)		42	4469221	Net (WHITE)	4	3976432	Send gear
	3307352	Tuning button (WHITE) (for ES, VS, BK)		43	3907541	Switch cover	5	4418005	PS washer
	3307353	Tuning button (BLACK) (except ES, VS, BK)		44	4567422	2 φ x 8 DT bind head screw (power transformer)	6	4463701	Spring
	3307354	Tuning button (WHITE) (except ES, VS, BK)		45	86994102	2 φ x 10 BT bind head screw (deck mecha, SP terminal, US pin terminal, DIN socket)	7	4588991	Turntable
25	3307392	Memory button		46	4567432	2 φ x 8 DT bind head screw (for US EW) voltage select switch)	8	4561993	3 φ screw (turntable)
26	3307393	Shift button					9	4594912	Center pin (B)
							10	2523881	DC motor (disc motor)
							11	2638901	Switch (RESET SWITCH)

Cassette Chassis

SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION	SYMBOL No.	PART No.	DESCRIPTION
12	4578285	2.6 φ x 10 DT bind head screw (switch)	1	4818991	Main base ass'y	55	4820242	Pack spring
			2	4818992	Switch plate	56	4819587	P head (for TAPE 1)
			3	4832521	Push button actuator	56	4819050	R/P head (for TAPE 2)
			4	4823651	REC button lever (for TAPE 2)	57	4819541	Erase head (for TAPE 2)
			5	4823661	PLAY button lever	58	4832402	Motor ass'y
			6	4823671	RWD button lever	59	4819063	2 φ x 3 tapping screw (pack spring)
			7	4823681	FF button lever	60	4819068	2 φ x 4 tapping screw (metal guide, motor bracket)
			8	4823691	STOP button lever	61	4819607	2 φ x 5 bind tapping screw (metal guide, reel P.W.B. ass'y)
			9	4823701	PAUSE button lever			
			10	4818990	RWD lever	62	4819611	2 φ x 6 screw (for TAPE 1) (head base)
			11	4819131	PAUSE lever	63	4819060	2 φ x 7 screw (R/P head)
			12	4819132	PAUSE lever spring	64	4819600	Azimuth screw (R/P head)
			13	4819133	PAUSE stopper	65	4819544	2 φ x 8 cap screw (erase head) (for TAPE 2)
			14	4820214	Button lever spring	66	4819077	Washer (1.2 φ x 3 x 0.4)
			15	4820215	Sub chassis	67	4819078	Washer (1.55 φ x 3.8 x 0.5)
			16	4819007	Button lever spring	68	4832432	P washer cut (2.05 φ x 4 x 0.5)
			17	4819100	Button lever spring			
			18	4819008	Actuator spring			
			19	4819009	Auto lever			
			20	4819000	Auto lever spring			
			21	4820217	PLAY button lever spring			
			22	4826101	Leaf switch (Motor switch)			
			23	4820218	Switch actuator spring			
			24	4820219	Head panel (for TAPE 1)			
				4831614	Head panel (for TAPE 2)			
			25	4819014	Head base (for TAPE 1)			
				4819528	Head base (for TAPE 2)			
			26	4832412	Sensing plate ass'y			
			27	4820221	Head panel spring			
			28	4819006	PR stopper			
			29	4819017	Spring			
			30	4819529	E.H. spring (for TAPE 2)			
			31	4832522	Screw (pressure roller arm)			
			32	4820222	Pressure roller arm ass'y			
			33	4820223	Pressure roller arm spring			
			34	4820225	RF pulley arm spring			
			35	4832413	RF pulley arm			
			36	4832414	RF arm collar screw (RF pulley arm)			
			37	4820227	Belt			
			38	4831610	Metal guide			
			39	4820231	Flywheel ass'y			
			40	4819575	Reel P.W.B. ass'y			
			41	4832415	Take up gear plate ass'y			
			42	4819020	TG plate spring			
			43	4832416	Take up roller gear			
			44	4819037	Spring			
			45	4832417	FF gear			
			46	4819033	Supp. reel ass'y			
			47	4819034	Take up reel ass'y			
			48	4832421	Record safety lever (for TAPE 2)			
			49	4819032	Spring			
			50	4832531	Motor bracket			
			51	4819039	Motor rubber			
			52	4819533	Motor collar screw (motor)			
			53	4832532	Main belt			
			54	4820241	Mat			

for ACCESSORIES



2667922	Siemens plug (for EW)
2757528	FM antenna (except ZS)
4023261	AM loop antenna ass'y
3802462	Spacer ass'y