


JVC

SERVICE MANUAL

STEREO INTEGRATED AMPLIFIER

MODEL No. **AX-335TN**

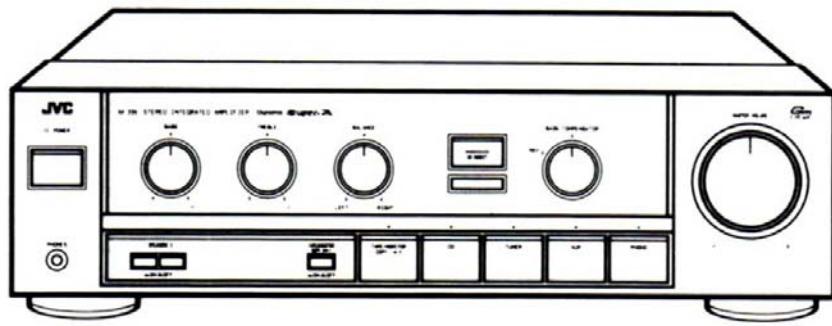

Contents

	Page		Page
Safety Precautions.....	1-2	Block Diagram	1-12
Instruction Book	1-3	Internal Block Diagrams of ICs.....	1-13
Specifications.....	1-9	Connection Diagram	1-14
Removal Procedures.....	1-11	Schematic Diagrams	Insertion
Idling adjustment	1-11	Printed Circuit Boards.....	Insertion
		Parts List.....	Separate Volume Insertion

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purpose. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (▲) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a $1,500 \Omega$ 10 W resistor paralleled by a $0.15 \mu\text{F}$ AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

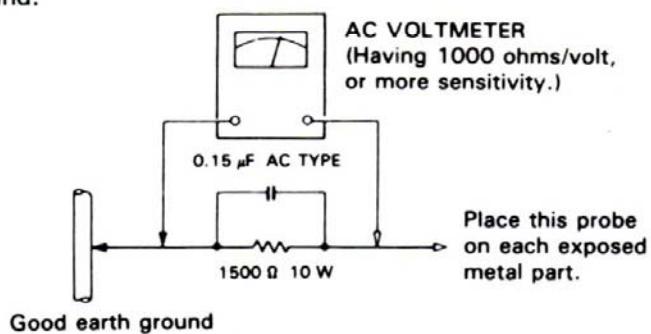

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

CONNECTION DIAGRAM


ANSCHLUSSDIAGRAMM

SCHEMA DE RACCORDEMENTS

AANSLUITINGSSCHEMA

DIAGRAMA DE CONEXIONES

ANSLUTNINGSSCHEMA

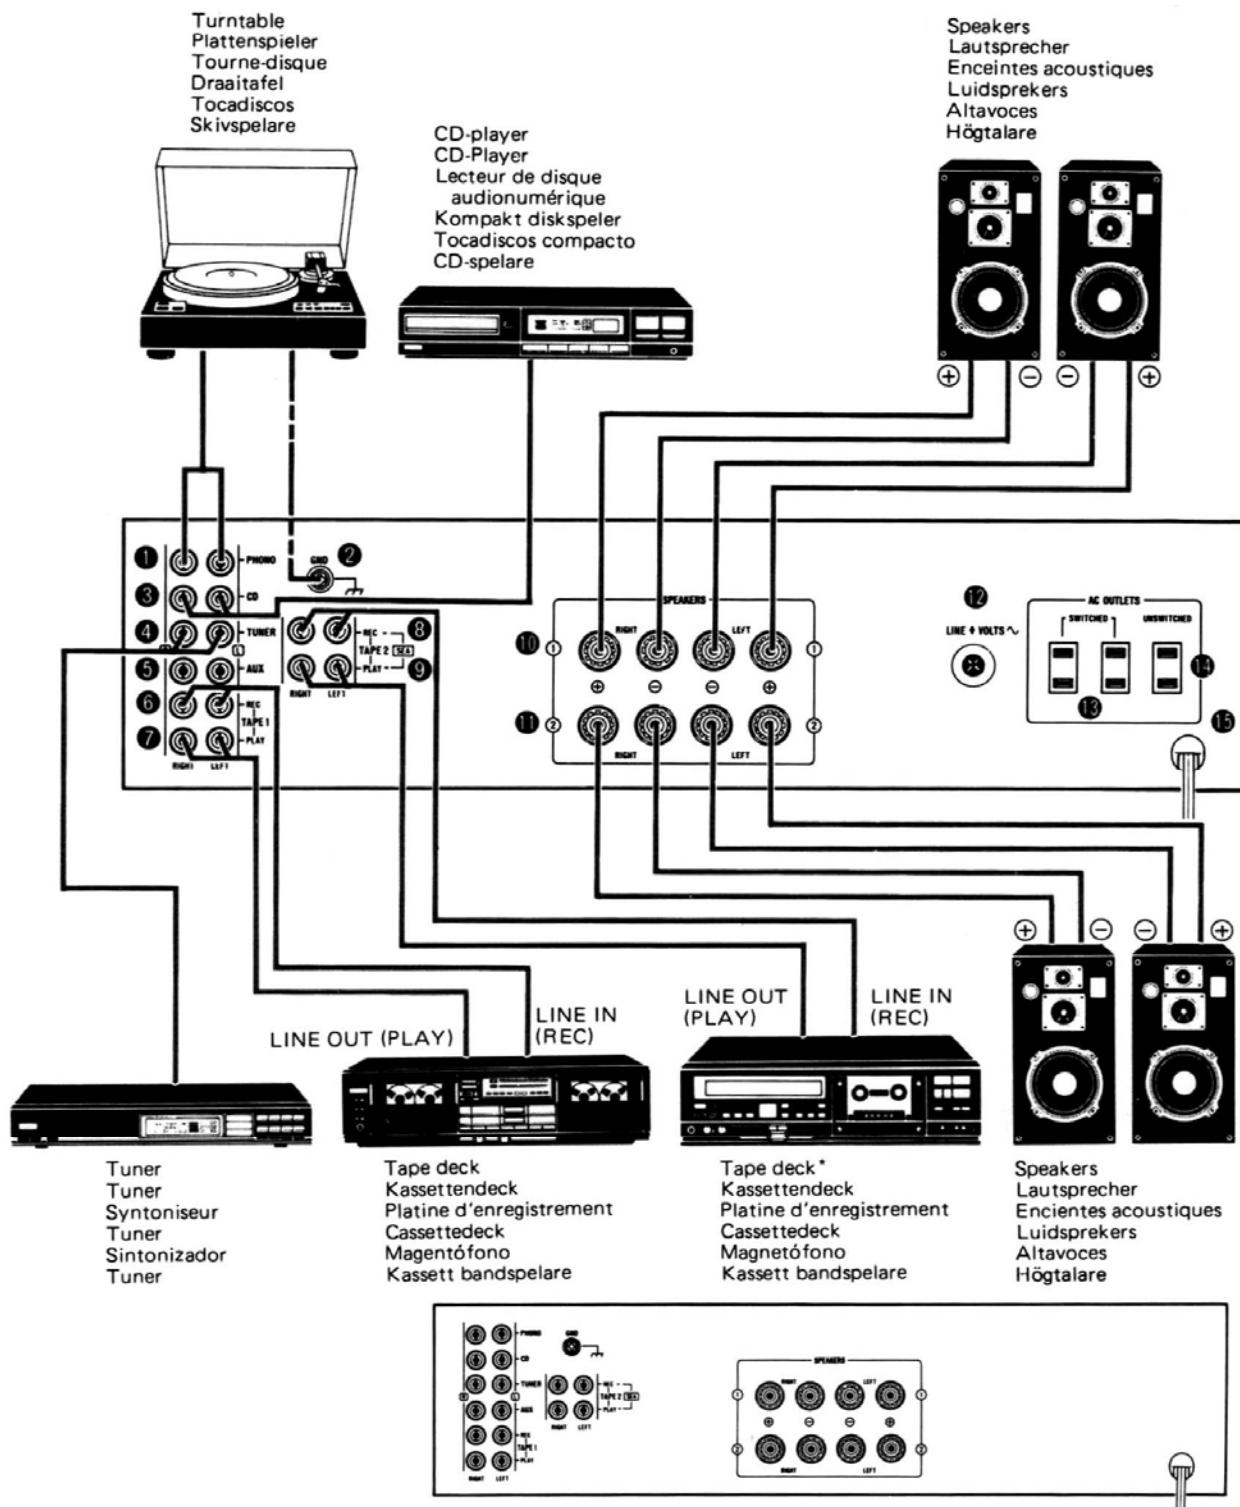

Provided on units for Continental Europe, the United Kingdom and Australia.
Vorhanden an Geräten für Kontinentaleuropa, Großbritannien und Australien.
Fourni sur les appareils pour l'Europe Continentale, le Royaume-Uni et l'Australie.
Aanwezig op apparaten voor het Europees Vasteland, Groot-Brittannië en Australië.
Se provee en las unidades para Europa Continental, el Reino Unido y Australia.
För kontinentala Europa, Storbritannien och Australien.

REAR PANEL

- ① PHONO terminals
- ② GND terminal
If your turntable has a ground lead, connect it to the GND terminal.
- ③ CD terminals
- ④ TUNER terminals
- ⑤ AUX terminals
- ⑥ TAPE 1 REC terminals
- ⑦ TAPE 1 PLAY terminals
- ⑧ TAPE 2 REC terminals*
- ⑨ TAPE 2 PLAY terminals*
- ⑩ SPEAKERS 1 terminals
- ⑪ SPEAKERS 2 terminals
- ⑫ AC line voltage selector
(LINE ↓ VOLTS ▲)**
- ⑬ SWITCHED AC OUTLETS**
- ⑭ UNSWITCHED AC OUTLET**
- ⑮ Power cord

- * The TAPE2 terminals of the AX-335TN or AX-435TN can be used for connecting the S.E.A. Graphic Equalizer.
- ** Not provided on units for Continental Europe, the United Kingdom and Australia.

Notes:


1. Switch the power off when connecting any component.
2. Connect source components with left and right channels connected correctly. Reversed channels may degrade the stereo effect.
3. Connect speakers with correct polarity; (+) to (+) and (-) to (-). Reversed polarity may degrade the stereo effect.
4. Connect plugs or wires firmly. Poor contact may result in hum.
5. Do not connect equipment requiring more than the rated power to the AC outlets on the rear panel.
6. Use speakers with the correct impedance. The correct impedance is indicated on the rear panel of the AX-335TN/AX-435TN.
7. The SWITCHED AC outlets are switched off when the front-panel POWER button is switched off.
8. The UNSWITCHED AC outlet is not switched off when the front-panel POWER button is switched off.
9. An MC or MM cartridge can be used for the turntable connected to the AX-435TN. However, only an MM cartridge can be used for the turntable connected to the AX-335TN.

RÜCKSEITE

- ① Plattenspieler-Anschlüsse (PHONO)
- ② Erdungsanschluß (GND)
Hier das Erdungskabel des Plattenspielers anschließen, falls vorhanden.
- ③ CD-Anschlüsse
- ④ Tuner-Anschlüsse (TUNER)
- ⑤ AUX-Anschlüsse
- ⑥ Tonband 1-Aufnahmeanschlüsse (TAPE 1 REC)
- ⑦ Tonband 1-Wiedergabeanschlüsse (TAPE 1 PLAY)
- ⑧ Tonband 2-Aufnahmeanschlüsse (TAPE 2 REC)*
- ⑨ Tonband 2-Wiedergabeanschlüsse (TAPE 2 PLAY)*
- ⑩ Lautsprecher-1-Anschlüsse (SPEAKER 1)
- ⑪ Lautsprecher 2-Anschlüsse (SPEAKERS 2)
- ⑫ Netzspannungswähler
(LINE ↓ VOLTS ▲)**
- ⑬ Beschaltete Netzausgänge (SWITCHED AC OUTLETS)**
- ⑭ Unbeschalteter Netzausgang (UNSWITCHED AC OUTLET)**
- ⑮ Netzkabel.

- * Die Kassette 2-Buchsen (TAPE 2) der Modelle AX-335TN oder AX-435TN können zum Anschließen des S.E.A. Graphic Equalizers verwendet werden.
- ** Nicht vorhanden an Geräten für Kontinental-Europa, Großbritannien und Australien.

FRONT PANEL
FRONTPLATTE
PANNEAU AVANT
VOORPANEEL
PANEL DELANTERO
FRAMPANEL

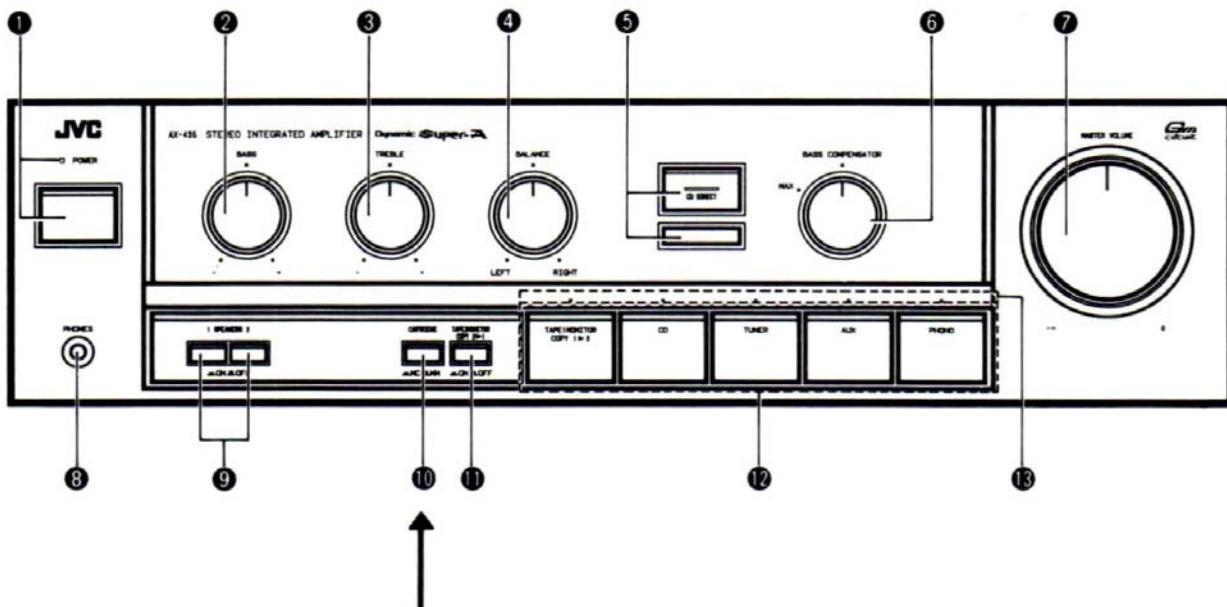

AX-435TN only
nur AX-435TN
AX-435TN seulement
alleen in AX-435TN
AX-435TN solamente
endast AX-435TN

FRONT PANEL

These instructions are prepared for two models: AX-335TN/AX-435TN.
Therefore, read the items below concerning each model.

① POWER and indicator

Press this button to turn the power on.
To turn the power off, press it again.
The indicator lights when the POWER button is pressed to on.

Notes:

- When power is not supplied to this amplifier for 2 — 3 days, the source select button pressed before the power was switched off may be lost when the power is switched on again. If this happens, set the buttons, etc. again.
- An electronic source selector is used in this unit. When the POWER button is first switched on, two or more sources or no source may be selected. Make sure to input the source select data by pressing one of the source selectors.
- If the POWER button is pressed repeatedly to switch on and off too quickly, the same phenomenon as the above will occur.

② BASS

Turn clockwise to boost bass response and counterclockwise to decrease it.

③ TREBLE

Turn clockwise to boost treble response and counterclockwise to decrease it.

④ BALANCE

Balances the volume between the left and right speakers. Usually set it to the center click position.

⑤ CD DIRECT and indicator

Press this button to enjoy listening to the CD with good sound quality. The indicator lights and the signal fed from the CD terminals is directly connected to the volume, bypassing the circuits on the way, thus allowing you to enjoy listening to an improved sound quality.

Note:

- While the CD DIRECT button is pressed, the reproduced sound does not change even if the source selector (including TAPE 2 MONITOR) and BALANCE volume are operated, press the CD DIRECT button again to turn the indicator off when using these.

⑥ BASS COMPENSATOR

When sound volume is turned down, the human ear tends to become less aware of bass sound. At low sound levels the BASS COMPENSATOR knob can be used to emphasize the bass sound. For ordinary use, the knob should be set to the normal position.

⑦ MASTER VOLUME

Controls the volume of the speakers and headphones.

⑧ PHONES (Headphones jack)

Plug stereo headphones into this jack for private listening.
If you want to listen to sound from the headphone only, press the SPEAKERS buttons to "OFF".

⑨ SPEAKERS

Press to switch the speakers connected to the SPEAKERS 1 or 2 terminals on () and off ().

● CARTRIDGE (AX-435TN only)

MC (): Press in when using an MC cartridge having an output of less than 0.5 mV.
MM (): Press again when using an MM or MC cartridge having an output of more than 0.5 mV.

● TAPE 2 MONITOR

ON (): Set to this position to listen to the tape deck connected to the TAPE 2 terminals of this unit. If your tape deck is of the 3-head type, you can monitor the recorded sound while recording by setting this button to ON.
OFF (): Keep this button set to this position, except when you want to listen to the tape deck connected to the TAPE 2 terminals of this unit.

● Source selector

TAPE 1 MONITOR

Press to listen to a tape deck connected to the TAPE 1 terminals.

CD

Press to listen to the source connected to the CD terminals.

TUNER

Press to listen to radio broadcasts by a tuner connected to the TUNER terminals.

AUX

Press to listen to the source connected to the AUX terminals.

PHONO

Press to listen to records played by a turntable connected to the PHONO terminals.

● Source indicator

The indicator corresponding to the source select button pressed lights.

OPERATION

Before operation, always be sure to set VOLUME at minimum.

When the volume is increased after selecting a source position with no equipment connected to the input terminal, other connected devices (such as speakers) may be adversely affected by external noise and inductive hum.

Listening to CD

1. Connect a CD to the CD terminals on the rear panel.
2. Press the POWER button on.
3. Press the CD button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
4. Select the speaker system with the SPEAKERS switches.
5. Operate the CD according to its instruction manual.
6. Adjust the VOLUME, BALANCE and BASS/TREBLE/BASS COMPENSATOR controls.

Listening to broadcasts

1. Connect a tuner to the TUNER terminals on the rear panel.
2. Press the POWER button on.
3. Press the TUNER button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
4. Select the speaker system with the SPEAKERS switches.
5. Operate the tuner according to its instruction manual.
6. Adjust the VOLUME, BALANCE and BASS/TREBLE/BASS COMPENSATOR controls.

Listening to records

1. Connect a turntable to the PHONO terminals on the rear panel.
2. Press the POWER button on.
3. Set the CARTRIDGE ● button of this unit according to the cartridge in use. (AX-435TN only)
4. Press the PHONO button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
5. Select the speaker system with the SPEAKERS switches.
6. Operate the turntable according to its instruction manual.
7. Adjust the VOLUME, BALANCE and BASS/TREBLE/BASS COMPENSATOR controls.

Listening to tapes

1. Connect a tape deck to the PLAY terminals of TAPE 1 or TAPE 2.
2. Press the POWER button on.
3. Press the TAPE 1 MONITOR button to play back the TAPE 1 deck. For playback of the TAPE 2 deck, press the TAPE 2 MONITOR button to ON (—).
4. Select the speaker system with the SPEAKERS switches.
5. Operate the tape deck for playback according to its instruction manual.
6. Adjust the playback sound controls as required.

Note:

- Do not place the tape deck directly on the amplifier, because it may cause the amplifier to malfunction.

Using stereo headphones

Stereo headphones can be plugged into the front panel jack. Plugging headphones into the PHONES jack does not switch off the speaker sound.

Recording tapes

1. Connect a tape deck to the REC terminals of the TAPE 1 or TAPE 2 terminals.
2. Press the POWER button on.
3. Select a speaker system if you wish to hear the sound while recording.
4. Press the SOURCE SELECTOR button for the source you want to play.
5. Play the source.
6. Operate the tape deck for recording.

Note:

- A CD can be played while recording another source .

The CD DIRECT feature allows you to play a CD while recording another source. If you want to listen to any source other than the CD, press the CD DIRECT button again to cancel the CD DIRECT feature.

Tape dubbing

Dubbing from the TAPE 1 to TAPE 2 is carried out as follows:

1. Press the TAPE 1 MONITOR button.
 2. Play back the TAPE 1 deck.
 3. Operate the TAPE 2 deck for recording.
- You can perform tape dubbing while listening to the CD by pressing the CD DIRECT button in addition to the above operations.

Notes:

- The sound you hear from the speakers or headphones is the source sound, not that being recorded on the tape.
- You can also perform tape dubbing from TAPE 2 to TAPE 1 by substituting TAPE 2 for TAPE 1 and TAPE 1 for TAPE 2 same as the above operation.
- The VOLUME control of this amplifier has no effect on the recording level. Adjust the recording level with the controls on the tape deck.

How to operate the monitor while recording on the tape deck

1. Connect a 3-head tape deck to the TAPE 1 or TAPE 2 terminals.
2. Make sure to connect the signal cords to the PLAY and REC terminals.
3. Select the source from which you want to record by depressing the source select button on this unit.
4. Operate the tape deck for recording as described in its operating manual.
5. By playing the source component, you can record on the tape deck.
6. While recording on the tape deck, the recorded sound can be heard by depressing the TAPE 1 MONITOR or TAPE 2 MONITOR button on this unit.

Use of S.E.A. Graphic Equalizer

By allowing you to independently boost or lower the response of finely divided sections of the frequency spectrum: the S.E.A. gives you much greater control over the sound quality of your stereo system. With an optionally available S.E.A. Graphic Equalizer, you can tailor the sound to your own taste for different types of music or to compensate for the particular acoustic characteristics of your audio components and listening room. The TAPE 2 terminals of the AX-335TN or AX-435TN can be used for connecting the S.E.A. Graphic Equalizer.

Note:

- Even if the S.E.A. Graphic Equalizer is operated while the CD DIRECT button is pressed, reproduced sound is neither adjusted nor compensated. When using the S.E.A. Graphic Equalizer, press the CD DIRECT button once again to turn the indicator off.

TROUBLESHOOTING

STÖRUNGSSUCHE

EN CAS DE DIFFICULTE

What appears to be a malfunction may not always be serious.
Make sure first

No sound and no light

Is the AC plug connected properly?
Are the connections made correctly?
Are the inter-component connections correct?

No sound from speakers

Are speaker cords connected?
Are the SPEAKERS buttons correctly set?
Is the VOLUME control properly set?
Is your source component correctly set?
Check that TAPE 2 MONITOR is not on.

Sound from one speaker only

Are speaker cords connected correctly?
Is BALANCE control set to one extreme or the other?

Loud hum during record playing

Is turntable grounded?
Try to change cord path.
Insert the plugs by interchanging their positions.

Howling noise during record playing

Is turntable too close to a speaker?

Die meisten Betriebsstörungen sind auf einfache Ursachen zurückzuführen.
Überprüfen Sie deshalb noch einmal

Kein Ton und keine Anzeige

Ist der Netzstecker richtig eingesteckt?
Wurden alle Anschlüsse richtig vorgenommen?
Sind die Verbindungen zwischen den Geräten richtig hergestellt?

Kein Ton von beiden Lautsprechern

Sind die Lautsprecherkabel angeschlossen?
Sind die Lautsprecher-Tasten (SPEAKERS) korrekt eingestellt?
Ist die Lautstärke (VOLUME) korrekt eingestellt?
Ist die Signalquelle richtig eingestellt?
Sicherstellen, daß die Taste TAPE 2 MONITOR nicht in Ein-Stellung steht.

Ton kommt nur von einem Lautsprecher

Sind die Lautsprecherkabel richtig angeschlossen?
Ist der Balanceregler (BALANCE) zu weit nach rechts oder zu weit nach links gedreht?

Lautes Brummgeräusch beim Abspielen einer Schallplatte

Ist der Plattenspieler geerdet?
Evtl. die Kabel anders verlegen.
Die Stecker vertauscht einstecken.
Rückkopplung beim Abspielen einer Schallplatte
Steht der Plattenspieler zu nahe am Lautsprecher?

Ce qui semble au départ être un mauvais fonctionnement n'est pas toujours très sérieux.

Assurez-vous d'abord que

Aucun son et pas d'éclairage

La prise CA est-elle correctement branchée?
Les raccordements sont-ils bien faits?
Les connexions entre les divers composants sont-elles correctes?

Pas de son des haut-parleurs

Les câbles des haut-parleurs sont-ils raccordés?
Les sélecteurs SPEAKERS sont-ils réglés correctement?
La commande VOLUME est-elle réglée correctement?
Vos appareils de source sont-ils correctement installés?

Vérifier que TAPE 2 MONITOR n'est pas réglé sur ON.

Le son ne provient que d'un seul haut-parleur
Les câbles de haut-parleurs sont-ils raccordés correctement?

La commande BALANCE est-elle tournée à fond dans un sens ou dans l'autre?

Bourdonnement sourd pendant la lecture de disques
La platine est-elle mise à la terre?
Essayer de changer l'emplacement du cordon.

Insérer les fiches en interchangeant leur position.
Hurlement pendant la lecture de disques
La platine tourne-disque est-elle trop près des haut-parleurs?

SPECIFICATIONS

AX-335TN OVERALL CHARACTERISTICS

Output power:

85 watts per channel into 4 ohms at 1 kHz (DIN).

65 watts per channel into 8 ohms at 1 kHz (DIN).

55 watts per channel, min. RMS, both channels driven, into 8 ohms from 30 Hz to 20 kHz, with no more than 0.007% total harmonic distortion.

55 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.003% total harmonic distortion. (measured by JVC Audio Analyzer System)

Total harmonic distortion : 0.007% (30Hz — 20 kHz, 8 ohms) at 55 watts

Intermodulation distortion : 0.007% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 55 watts

Power band width : 5 Hz — 50 kHz (IHF, 0.05%, 8 ohms both channels driven)

Frequency response : 5 Hz — 80 kHz +0, -3 dB (8 ohms)

Damping factor : 90 (1 kHz, 8 ohms)

Input terminals
Input sensitivity/
impedance (1 kHz)
PHONO : 2.5 mV/47 kohms
CD/AUX/ : 210 mV/35 kohms

TUNER/TAPE 1, 2

Signal-to-noise ratio
PHONO : 71 dB ('66 IHF)
CD/AUX/ : 104 dB ('66 IHF)

TUNER/TAPE 1, 2

PHONO : 67 dB (DIN)
CD/AUX/ : 68 dB (DIN)

TUNER/TAPE 1, 2

Tone controls : TREBLE: +8 ± 1 dB
-8 ± 1 dB
(at 10 kHz)
BASS: +8 ± 1 dB
-8 ± 1 dB
(at 100 Hz)

BASS COMPENSATOR : +5 dB (at 100 Hz)
(Volume control at
-30 dB position)

 +8 dB (at 60 Hz)

AX-435TN OVERALL CHARACTERISTICS

Output power:

105 watts per channel into 4 ohms at 1 kHz (DIN).

75 watts per channel into 8 ohms at 1 kHz (DIN).

65 watts per channel, min. RMS, both channels driven, into 8 ohms from 20 Hz to 20 kHz, with no more than 0.007% total harmonic distortion.

65 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.003% total harmonic distortion. (measured by JVC Audio Analyzer System)

Total harmonic distortion : 0.007% (20 Hz — 20 kHz, 8 ohms) at 65 watts

Intermodulation distortion : 0.007% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 65 watts

Power band width : 5 Hz — 50 kHz (IHF, 0.05%, 8 ohms both channels driven)

Frequency response : 5 Hz — 80 kHz +0, -3 dB (8 ohms)

Damping factor : 90 (1 kHz, 8 ohms)

Input terminals
Input sensitivity/
impedance (1 kHz)

PHONO (MM) : 2.5 mV/47 kohms
PHONO (MC) : 210 µV/100 ohms
CD/AUX/ : 210 mV/35 kohms

TUNER/TAPE 1, 2

Signal-to-noise ratio
PHONO (MM) : 85 dB ('66 IHF)
PHONO (MC) : 66 dB ('66 IHF)

CD/AUX/ : 104 dB ('66 IHF)

TUNER/TAPE 1, 2

PHONO (MM) : 67 dB (DIN)
CD/AUX/ : 68 dB (DIN)

TUNER/TAPE 1, 2

Tone controls : TREBLE: +8 ± 1 dB
-8 ± 1 dB
(at 10 kHz)
BASS: +8 ± 1 dB
-8 ± 1 dB
(at 100 Hz)

BASS COMPENSATOR : +5 dB (at 100 Hz)
(Volume control at
-30 dB position)

 +8 dB (at 60 Hz)

EQUALIZER

PHONO overload capacity	95 mV (0.02% THD)
PHONO RIAA deviation	± 0.5 dB (20 Hz — 20 kHz)
Recording output	
Output level/ impedance	

TAPE REC-1, 2 : 210 mV/Maximum

2 kohms

GENERAL

Dimensions	: 435 (W) x 127 (H) x 310 (D) mm (17-3/16" x 4-15/16" x 12-1/16")
Weight	: 7.2 kg (15.9 lbs.)

Design and specifications subject to change without notice.

EQUALIZER

PHONO overload capacity	100 mV (0.02% THD)
PHONO (MM)	: 8 mV (0.04% THD)
PHONO (MC)	
PHONO RIAA deviation	

PHONO (MM) : ± 0.3 dB (20 Hz — 20 kHz)

PHONO (MC) : ± 0.5 dB (20 Hz — 20 kHz)

Recording output

Output level/ impedance

TAPE REC-1, 2 : 210 mV/Maximum

2 kohms

GENERAL

Dimensions	: 435 (W) x 127 (H) x 310 (D) mm (17-3/16" x 4-15/16" x 12-1/16")
Weight	: 7.5 kg (16.5 lbs.)

Design and specifications subject to change without notice.

POWER SPECIFICATIONS

Areas	Line voltage & frequency	Power consumption	
		AX-335TN	AX-435TN
Continental Europe	AC 220 V~, 50 Hz	230 watts	250 watts
U.K.	AC 240 V~, 50 Hz	520 watts	610 watts
Australia			
Other areas	AC 110/127/220/240 V~ selectable, 50/60 Hz	240 watts	270 watts

**OPEN-AIR STEREO HEADPHONES HA-CD7**

The JVC HA-CD7 Open-Air high-quality Stereo Headphones (optionally available) are recommended for use with this unit.

Removal Procedures

■ Removing the metal cover

1. Remove the 4 screws on both sides.
2. Remove the 2 screws located on the top of rear panel.
3. Slightly open both sides of the metal cover, to the left and right, and raise the rear side. Then slowly lift it up and straight backward.

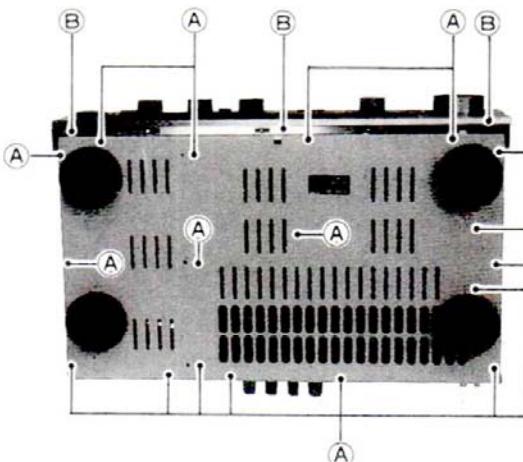


Fig. 1

■ Removing the bottom plate

1. Remove the metal cover.
2. Remove the 18 screws (Ⓐ). See Fig.1 .

* When installing the bottom plate, properly insert the protect cover between the power transformer and the AC primary PC board. See Fig. 3.

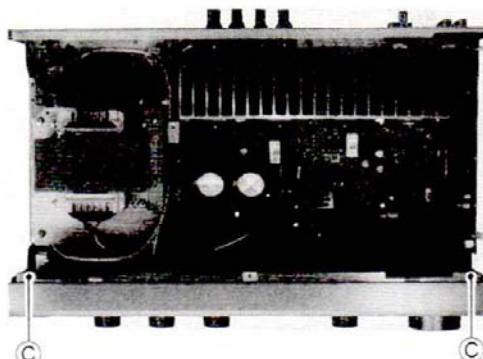


Fig. 2

■ Removing the front panel

1. Remove the metal cover.
2. Remove the 3 screws (Ⓑ) and 2 plastic rivets (Ⓒ).

See Fig-1 & Fig-2.

3. Pull out the main volume knob .

■ Removing the power transistors

1. Remove the metal cover and the bottom plate.
2. Unsolder the defective power transistor.
3. Remove the screw holding the power transistor using a pair of pliers, a wrench or a bent screwdriver.


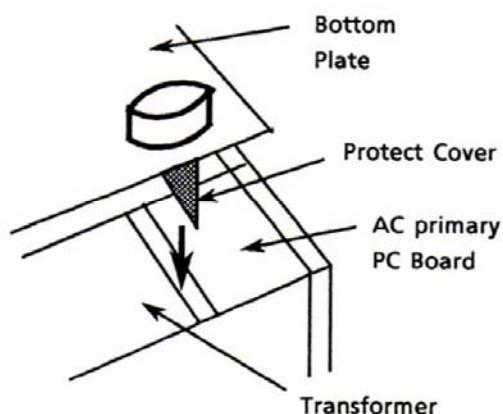



Fig. 3

Idling Adjustment

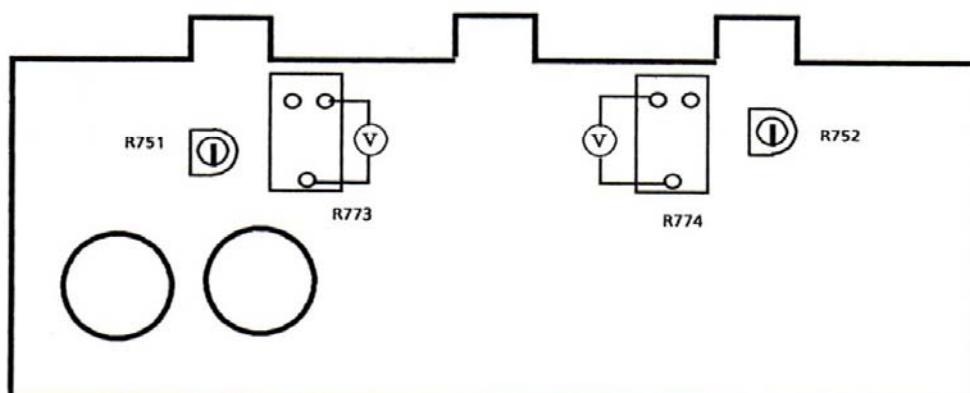


1. Turn R751 and R752 fully counterclockwise before the power switch on.
2. Warm up at least 5 minutes before adjustment.
3. Must keep the heatsink to prevent overheating before adjustment.
4. Set the volume control to minimum during this adjustment.
5. Connect a DC voltmeter to R773 resistor's leads for left channel, or to R774 for right channel.
6. Adjust R751 for left channel, or R752 for right channel, so that the DC voltmeter becomes 7mV ~ 13mV.

Block Diagram

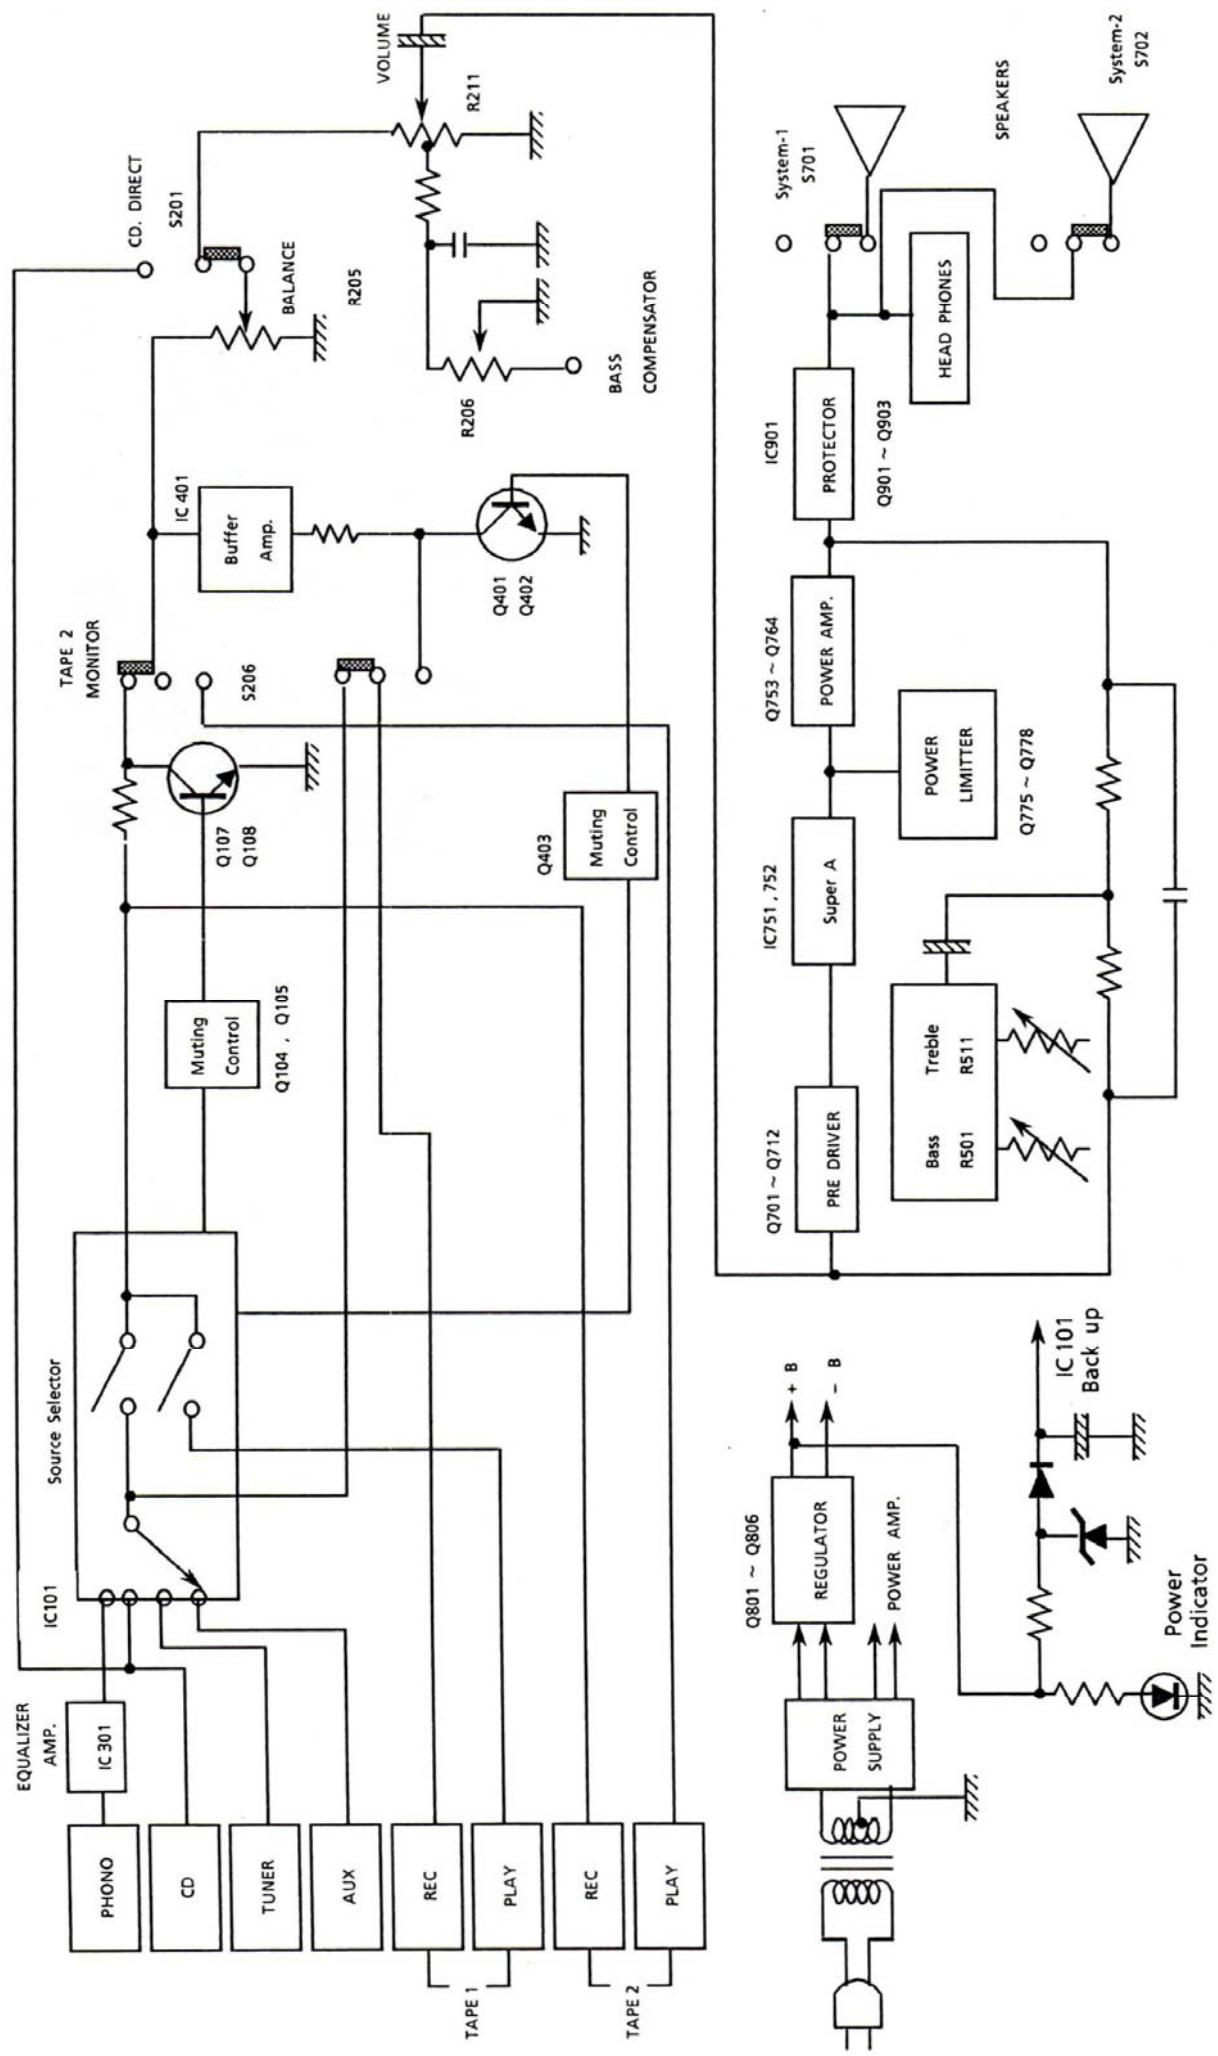


Internal Block Diagrams of ICs


■ LC7818 (IC101): Analog Switch

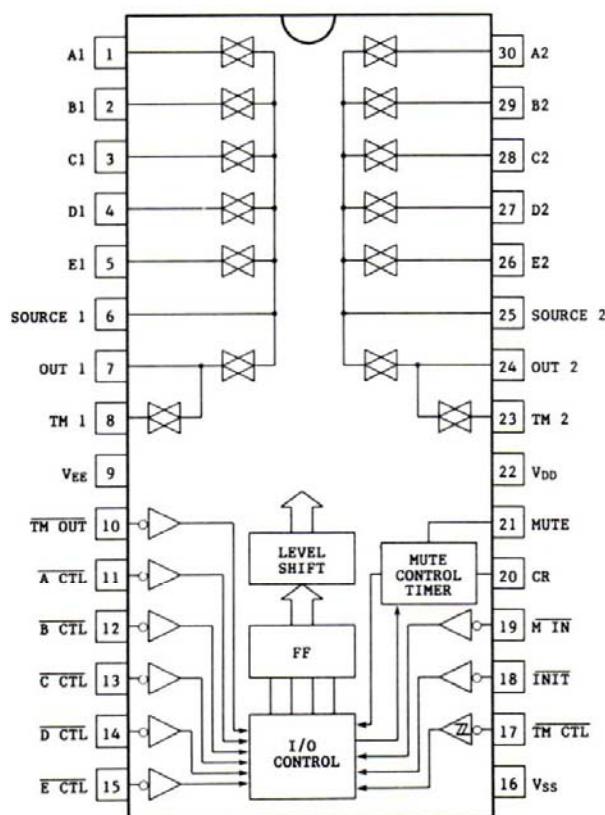


■ VC5022 [X, Y] (IC751, IC752): Super-A

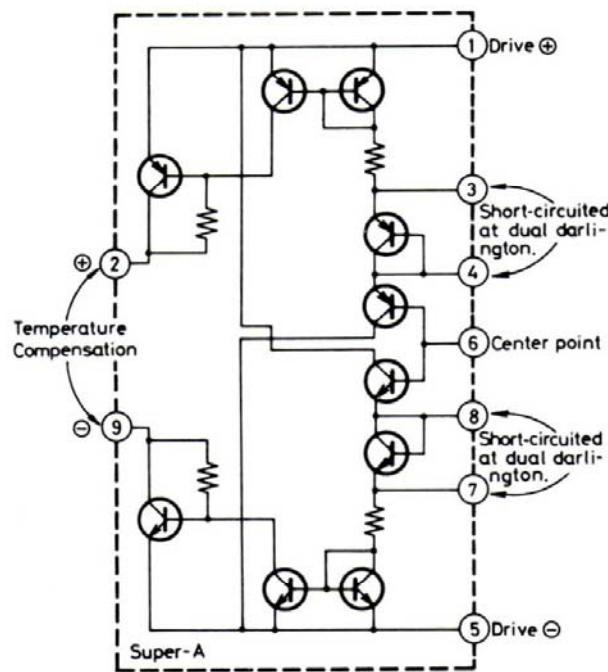


■ μPC1237HA (IC901): Relay Driver

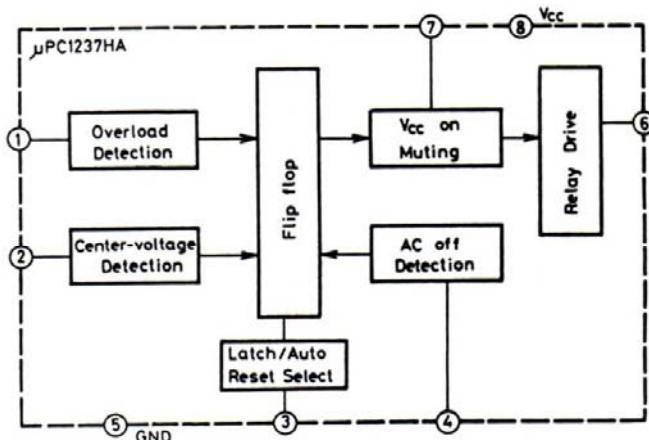

■ NJM4558D-D (IC301): Dual OP Amp.

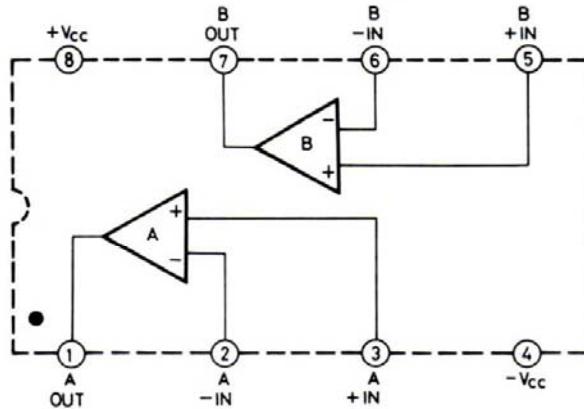

Connection Diagram

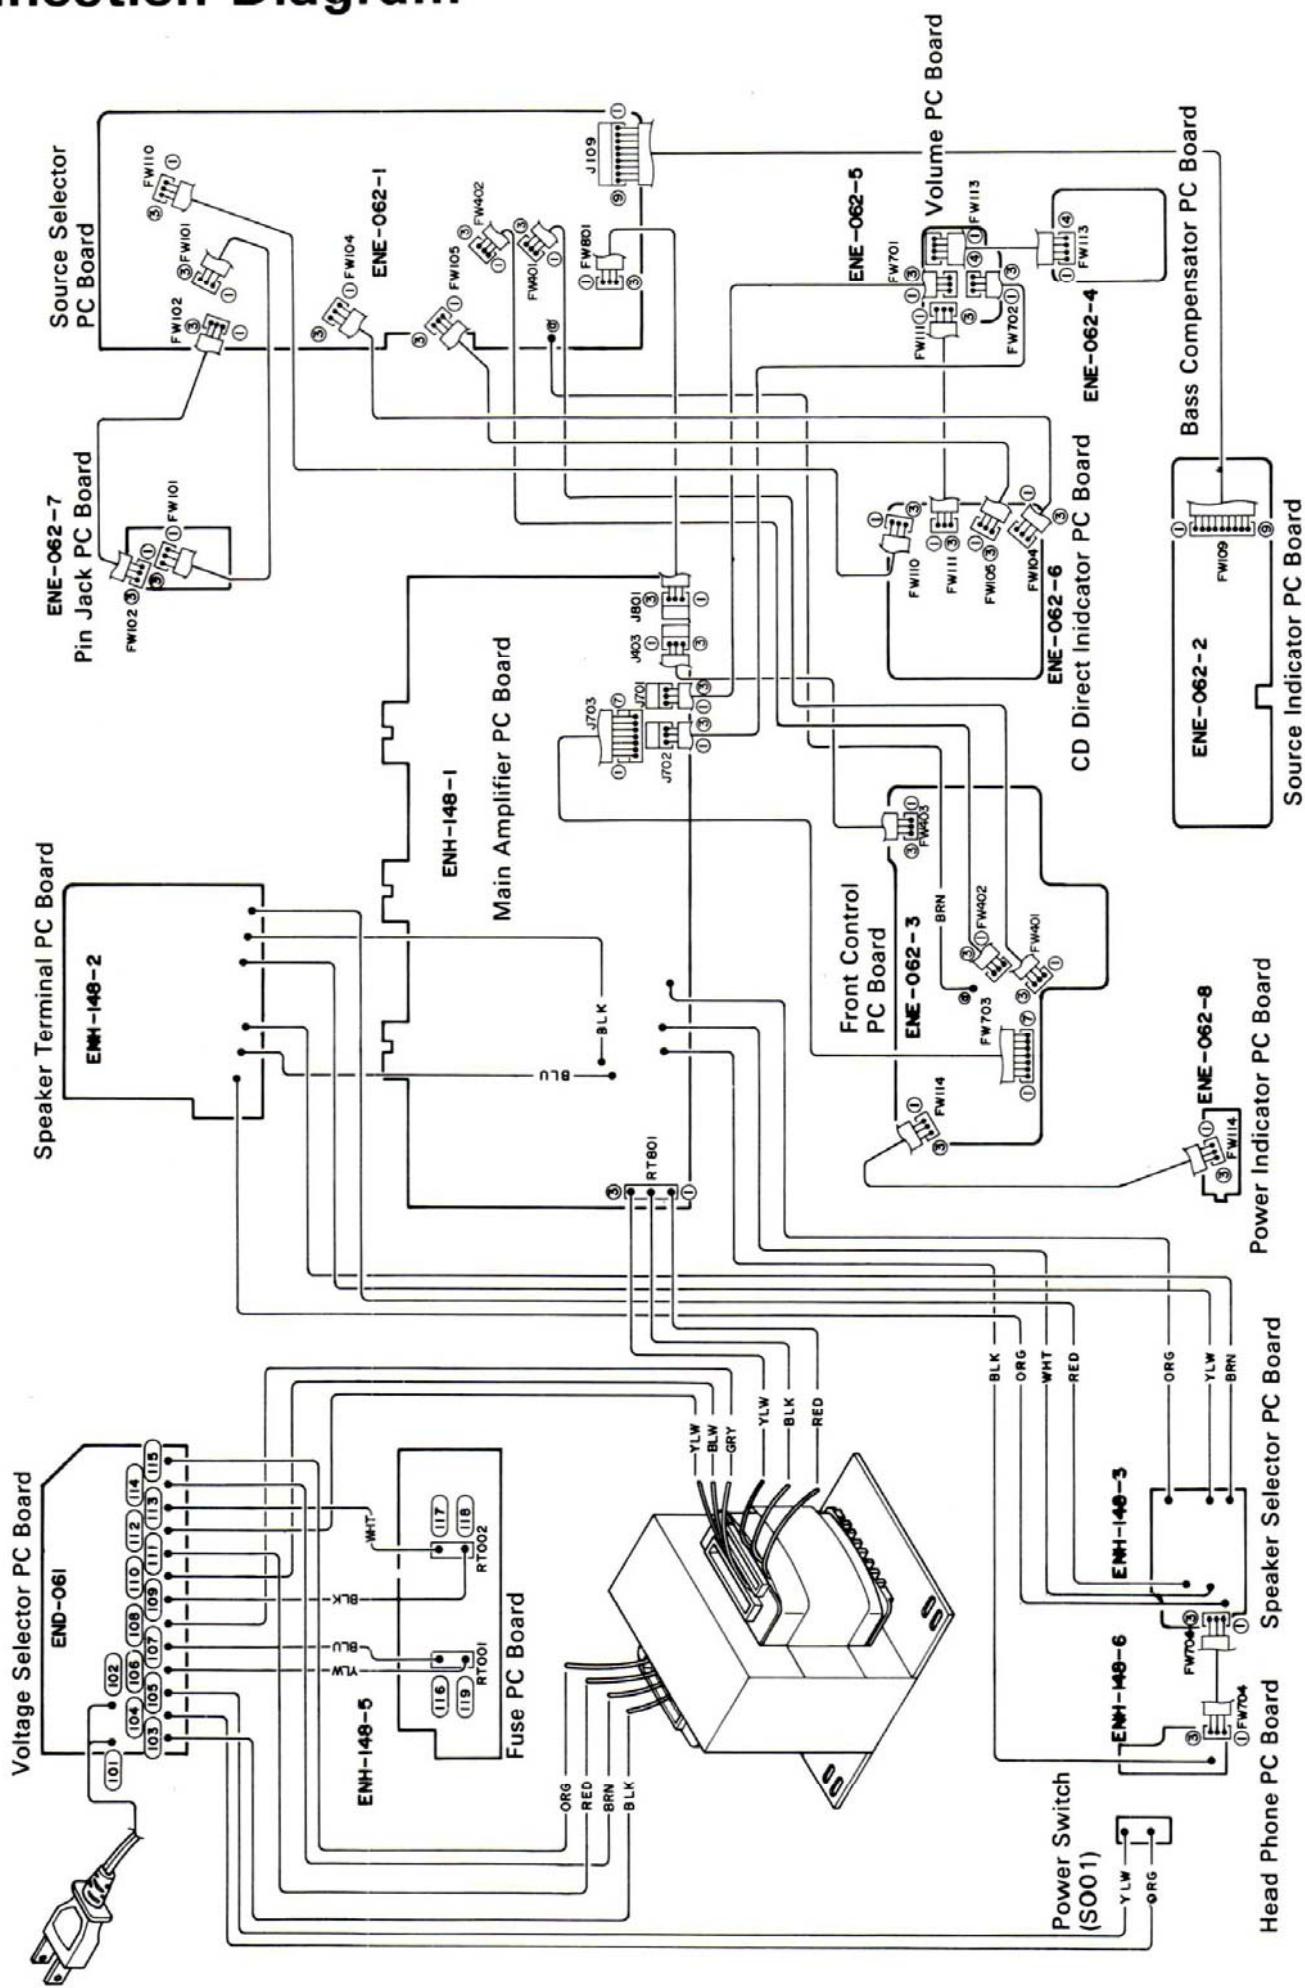


PARTS LIST

Contents

General Exploded View and Parts List	2- 2
Printed Circuit Board Ass'y and Parts List	2- 5
■ENH-148 <input type="checkbox"/> Main Amplifier PC Board Ass'y	2- 5
■ENE-062 <input type="checkbox"/> Source Select PC Board Ass'y	2- 8
■END-061 <input checked="" type="checkbox"/> Voltage Selector PC Board Ass'y	2-10
Accessories List	2-11
Packing Materials and Part Numbers	2-12

General Exploded View and Parts List

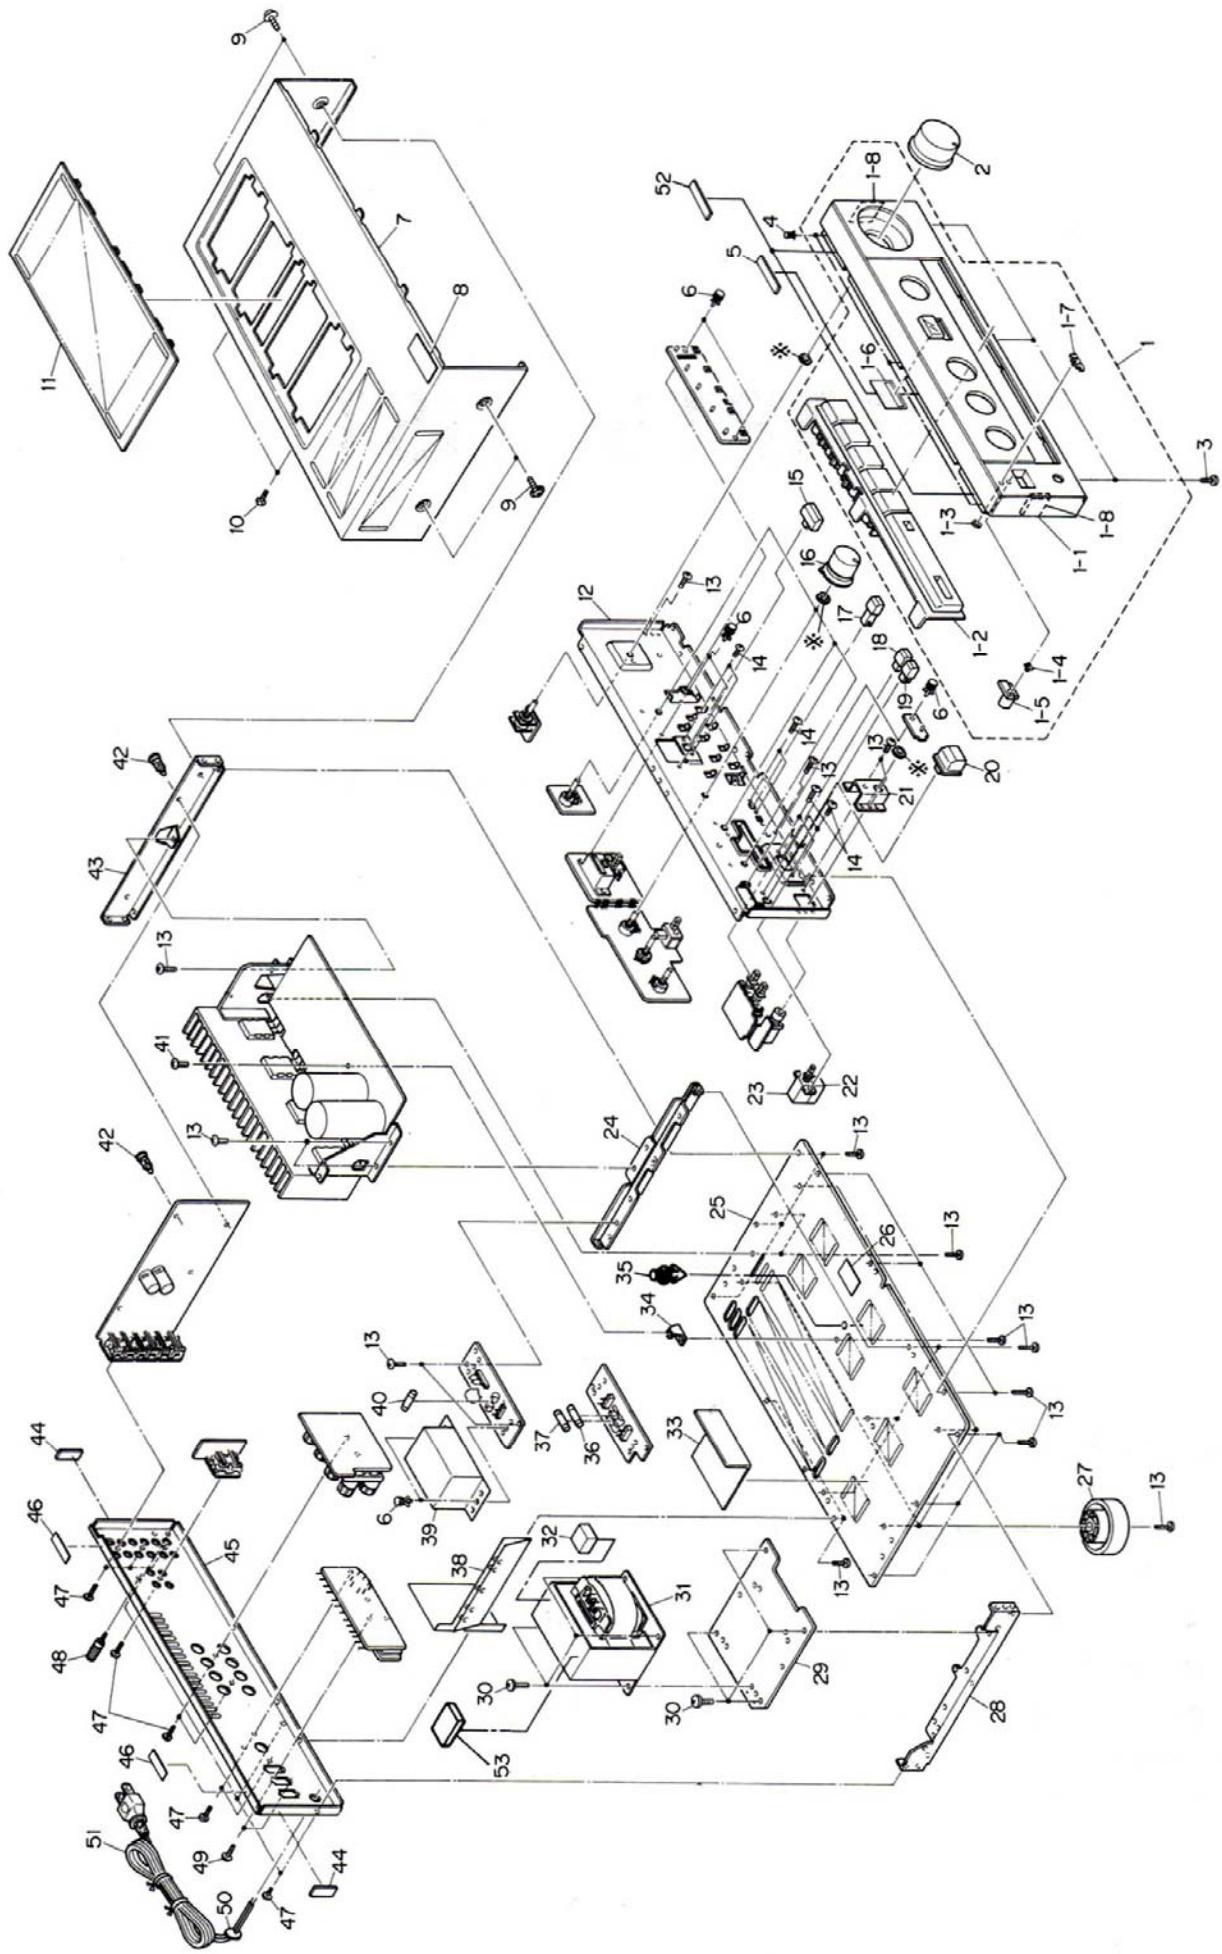

■ Parts List

⚠	Item	Part Number	Part Name	Q'ty	Description	Areas
	1 1-1 1-2 1-3 1-4	EFP-AX335TNE E26391-003 E26332-010 E60912-003 E73522-001	Front Panel Ass'y Front Panel Push Button Ass'y Speed Nut Indicator	1 1 1 1 1		
	1-5 1-6 1-7 1-8 2	E75286-001 E75327-001 E72968-001 EXO020010R15S13 E305980-002	Holder Indicator Sheet JVC Mark Spacer Volume Knob	1 1 1 2 1		
	3 4 5 6	SBSG3006M E48729-009 EXO060007N40S E48729-008 E48729-008	Screw Plastic Rivet Spacer Plastic Rivet Plastic Rivet	3 2 1 7 5		Except U U
	7 8 9 10	E26336-003 E26336-004 E67000-005 E61660-004 SBSG3008M	Metal Cover Metal Cover Caution Label Special Screw Screw	1 1 1 4 2		A,G E,EF,BS,U
	11 12 13 14 15	E24134-008 E11953-001 SBSG3008CC SBST3006CC E75117-002	Grill Front Bracket Screw Screw Push Button	1 1 33 8 1	CD DIRECT	E,EF,BS,U
	16 17 18 19 20	E305981-004 E75182-002 E75073-005 E75073-004 E75079-006	Tone Knob Push Button Push Button Push Button Power Button	4 1 1 1 1	TONE TAPE SPK-2 SPK-1 POWER	
⚠	21 22 23 24	E75183-001 QSP1106-004 QSP4C11-E03BS E71004-001 E305812-002	Headphone Bracket Push Switch Push Switch Switch Cover Center Bracket	1 1 1 1 1		Except BS BS
	25 26 27 28 29	E26273-002 E70115-002 E75088-015 E305810-001 E305803-002	Bottom Cover Caution Label Foot Ass'y Side Bracket Trans Bracket	1 1 4 1 1	Left	BS
⚠ ⚠ ⚠	30 31 32	E65389-004 ETP1100-32FA ETP1100-32EA ETP1100-32EABS E75413-001	Special Screw Power Transformer Power Transformer Power Transformer Spacer	8 1 1 1 1	T001 T001 T001	U Except U,BS BS G
⚠	33 34 35 36 —	E75353-001 E68587-008 E306816-001 QMF51A2-4ROS E67132-T4R0	Protect Cover Bracket Fastener Fuse Fuse Label	1 1 1 1 1	F002 F002	Except U U U
⚠	37 — 38 39 ⚠ 40	QMF51A2-2ROS E67132-T2R0 E305986-001 E306171-001 QMF51A2-2ROS	Fuse Fuse Label Protect Cover Protect Cover Fuse	1 1 1 1 1	F001 F001,F003 F003	U Except U Except U,BS
⚠	41 42 43 44	QMF51E2-2ROSBS GBSG3008CC E303216-006 E305811-001 EXO020010R10S10	Fuse Screw Fastener Side Bracket Felt Spacer	1 1 2 1 2	F003 Right	BS

△	Item	Part Number	Part Name	Q'ty	Description	Areas
	45	E26334-005 E26334-006 — E303260-209	Rear Panel Rear Panel Rating Label	1 1 1		U Except U E,EF,G
	46	EXO050010N20S	Felt Spacer	2		G
	47	E73273-003	Special Screw	9		Except U
△ △	48	E73273-003 E70078-001	Special Screw GND Terminal	11 1		U
△ △	49	SDSG3008CC	Screw	2		U
△ △	50	QHS3876-162 QHS3876-162BS	Cord Stopper Cord Stopper	1 1		Except BS BS
△ △ △ △	51	QMP2560-244 QMP3900-200 QMP7520-200 QMP9017-008BS	Power Cord Power Cord Power Cord Power Cord	1 1 1 1		A E,EF,G U BS
	52	EXO030007N50S	Spacer	2		
	53	EXO050050N30S02	Spacer	1		
—	E61029-005	Number Label	1			A,U,BS
—	E70028-001	Approval Label	1			E
—	E60965-001BS	Warning Label	1			BS
—	E74792-060	FTZ Label	1			G

The Marks for Designated Areas

△ Safety Parts


A.....Australia
E,EF.....Continental Europe
BS.....the U.K.

G.....West Germany
U.....Other Countries
No mark indicates all areas.

Printed Circuit Board Ass'y and Parts List

■ENH-148 □ Main Amplifier PC Board Ass'y

Note : ENH-148 □ varies according to the areas employed. See note (1) when placing an order.

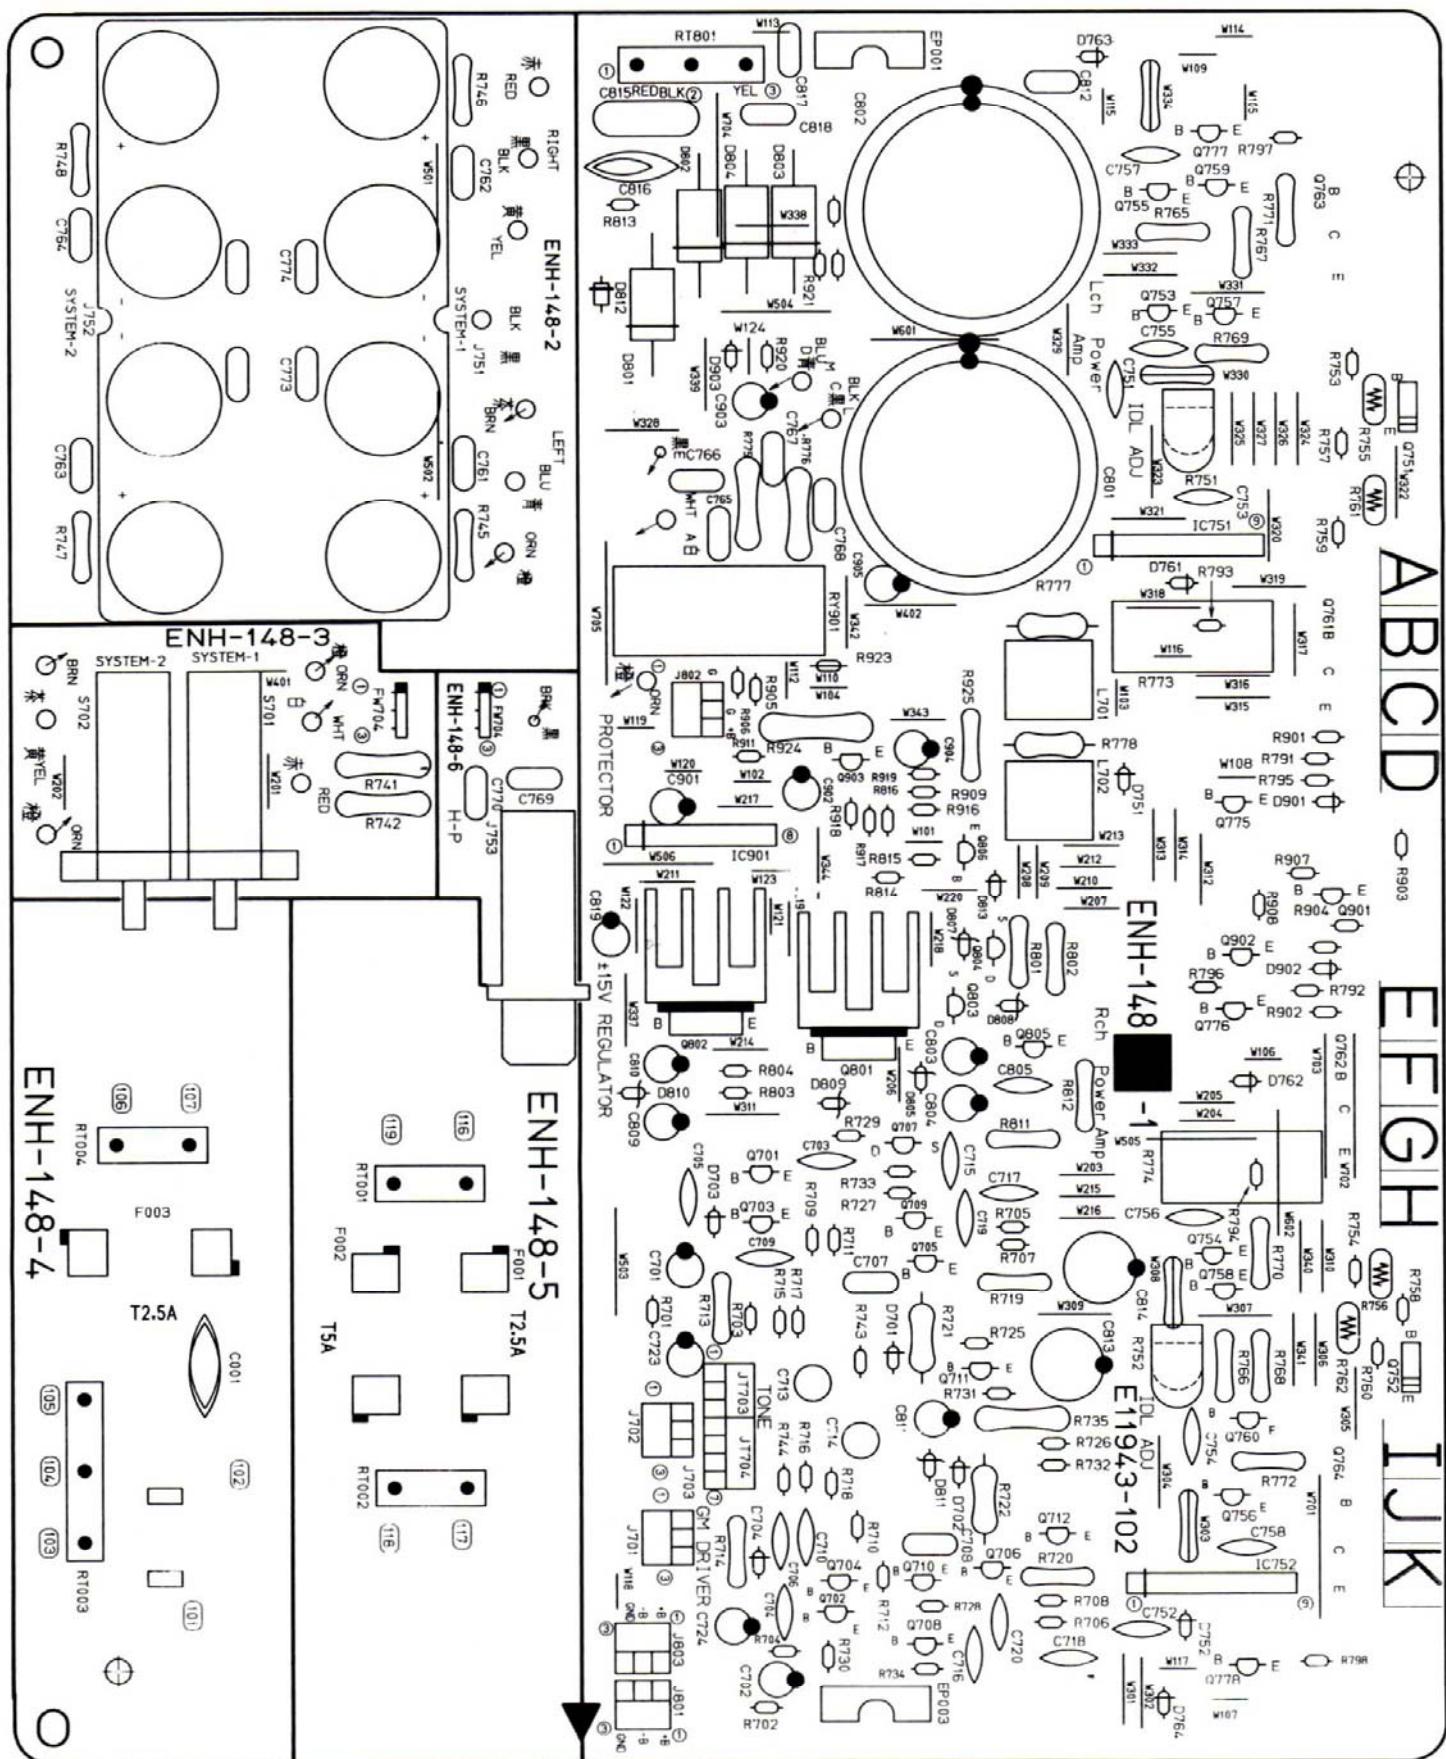

Note (1)

PC Board Ass'y	Designated Areas
ENH-148 A	Other Countries
ENH-148 B	Australia, Continental Europe
ENH-148 C	West Germany
ENH-148 D DBS	the U.K.

Transistors

△ ITEM	PART NUMBER	DE S C R I P T I O N	AREA
Q701	2SC2240(A,B)	SILICON TOSHIBA	
Q702	2SC2240(A,B)	SILICON TOSHIBA	
Q703	2SC2240(A,B)	SILICON TOSHIBA	
Q704	2SC2240(A,B)	SILICON TOSHIBA	
Q705	2SA970(GR,BL)	SILICON TOSHIBA	
Q706	2SA970(GR,BL)	SILICON TOSHIBA	
Q707	2SA970(GR,BL)	SILICON TOSHIBA	
Q708	2SA970(GR,BL)	SILICON TOSHIBA	
Q709	2SA933LN(R,S)	SILICON ROHM	
Q710	2SA933LN(R,S)	SILICON ROHM	
Q711	2SC2240(GR,BL)	SILICON TOSHIBA	
Q712	2SC2240(GR,BL)	SILICON TOSHIBA	
Q751	2SD636(Q,R)	SILICON MATSUSHITA	
Q752	2SD636(Q,R)	SILICON MATSUSHITA	
Q753	2SC2240(GR)	SILICON TOSHIBA	
Q754	2SC2240(GR)	SILICON TOSHIBA	
Q755	2SA970(GR)	SILICON TOSHIBA	
Q756	2SA970(GR)	SILICON TOSHIBA	
Q757	2SC2235(O,Y)	SILICON TOSHIBA	
Q758	2SC2235(O,Y)	SILICON TOSHIBA	
Q759	2SA965(O,Y)	SILICON TOSHIBA	
Q760	2SA965(O,Y)	SILICON TOSHIBA	
Q761	2SD2155LB(R,O)	SILICON TOSHIBA	
Q762	2SD2155LB(R,O)	SILICON TOSHIBA	
Q763	2SB1429LB(R,O)	SILICON TOSHIBA	
Q764	2SB1429LB(R,O)	SILICON TOSHIBA	
Q775	2SC1740S(R,S)	SILICON ROHM	
Q776	2SC1740S(R,S)	SILICON ROHM	
Q777	2SA933S(R,S)	SILICON ROHM	
Q778	2SA933S(R,S)	SILICON ROHM	
Q801	2SD2061(E,F)	SILICON ROHM	
Q802	2SB1187(E,F)	SILICON ROHM	
Q803	2SK246(GR)	F.E.T TOSHIBA	
Q804	2SK246(GR)	F.E.T TOSHIBA	
Q805	2SA933S(R,S)	SILICON ROHM	
Q806	2SC3068	SILICON SANYO	
Q901	2SC2389(S,E)	SILICON ROHM	
Q902	2SC2389(S,E)	SILICON ROHM	
Q903	2SA564A(R,S)	SILICON MATSUSHITA	

I. C. S.

△ ITEM	PART NUMBER	DE S C R I P T I O N	AREA
IC751	VC5022(X,Y)	I.C. ROHM	
IC752	VC5022(X,Y)	I.C. ROHM	
IC901	UPC1237HA	I.C. NEC	

Diodes

△ ITEM	PART NUMBER	DE S C R I P T I O N	AREA
D701	ISS133	SILICON ROHM	
D702	ISS133	SILICON ROHM	
D703	ISS133	SILICON ROHM	
D704	ISS133	SILICON ROHM	
D751	ISS133	SILICON ROHM	
D752	ISS133	SILICON ROHM	
D761	ISS133	SILICON ROHM	
D762	ISS133	SILICON ROHM	
D763	ISS133	SILICON ROHM	
D764	ISS133	SILICON ROHM	
△ D801	30D2FC	SILICON NIHONINTER	A
△ D801	30D2FC	SILICON NIHONINTER	B
△ D801	30DL2FC	SILICON NIHONINTER	C
△ D802	30D2FC	SILICON NIHONINTER	DBS
△ D802	30DL2FC	SILICON NIHONINTER	A
△ D802	30DL2FC	SILICON NIHONINTER	B
△ D803	30D2FC	SILICON NIHONINTER	C
△ D803	30D2FC	SILICON NIHONINTER	DBS
△ D803	30D2FC	SILICON NIHONINTER	B

Diodes

△ ITEM	PART NUMBER	DE S C R I P T I O N	AREA
△ D803	30DL2FC	SILICON NIHONINTER	C
△ D803	30D2FC	SILICON NIHONINTER	DBS
△ D804	30D2FC	SILICON NIHONINTER	A
△ D804	30D2FC	SILICON NIHONINTER	B
△ D804	30DL2FC	SILICON NIHONINTER	C
△ D805	MTZ15JC	ZENER ROHM	DBS
D807	MTZ13JC	ZENER ROHM	
D808	MTZ13JC	ZENER ROHM	
D809	MTZ18JC	ZENER ROHM	
D810	MTZ18JC	ZENER ROHM	
D811	MTZ18JC	ZENER ROHM	
D812	ERA15-02L19	SILICON KYODOU	
D813	ISS133	SILICON ROHM	
D901	ISS133	SILICON ROHM	
D902	ISS133	SILICON ROHM	
D903	ISS133	SILICON ROHM	

Capacitors

△ ITEM	PART NUMBER	DE S C R I P T I O N	AREA
△ C001	QCZ9019-472	4700PF CERAMIC	B
△ C001	QCZ9019-472	4700PF CERAMIC	C
△ C001	QCZ9019-472BS	4700PF CERAMIC	DBS
C701	EETB2AM-106	10MF 100V ELECTRO	
C702	EETB2AM-106	10MF 100V ELECTRO	
C703	QCS21HJ-101	100PF 50V CERAMIC	
C704	QCS21HJ-101	100PF 50V CERAMIC	
C705	QCS21HJ-101	100PF 50V CERAMIC	
C706	QCS21HJ-101	100PF 50V CERAMIC	
C707	QFN81HK-332	3300PF 50V MYLAR	
C708	QFN81HK-332	3300PF 50V MYLAR	
C709	QCS21HJ-100	10PF 50V CERAMIC	
C710	QCS21HJ-100	10PF 50V CERAMIC	
C713	QEN51HM-475	4.7MF 50V NON POLE	
C714	QEN51HM-475	4.7MF 50V NON POLE	
C715	QCS21HJ-330	33PF 50V CERAMIC	
C716	QCS21HJ-330	33PF 50V CERAMIC	
C717	QCS21HJ-330	33PF 50V CERAMIC	
C718	QCS21HJ-330	33PF 50V CERAMIC	
C719	QCS22HJ-220	22PF 500V CERAMIC	
C720	QCS22HJ-220	22PF 500V CERAMIC	
C723	QETB1CM-476	47MF 16V ELECTRO	
C724	QETB1CM-476	47MF 16V ELECTRO	
C751	QCF21HP-103	0.01MF 50V CERAMIC	
C752	QCF21HP-103	0.01MF 50V CERAMIC	
C753	QCF21HP-103	0.01MF 50V CERAMIC	
C754	QCF21HP-103	0.01MF 50V CERAMIC	
C755	QCS22HJ-680A	68PF 500V CERAMIC	
C756	QCS22HJ-680A	68PF 500V CERAMIC	
C757	QCS22HJ-680A	68PF 500V CERAMIC	
C758	QCS22HJ-680A	68PF 500V CERAMIC	
C761	QFN81HK-223	0.022MF 50V MYLAR	C
C762	QFN81HK-223	0.022MF 50V MYLAR	C
C763	QFN81HK-223	0.022MF 50V MYLAR	C
C764	QFN81HK-223	0.022MF 50V MYLAR	C
C765	QFN81HK-104	0.1MF 50V MYLAR	
C766	QFN81HK-104	0.1MF 50V MYLAR	
C767	QFN81HK-104	0.1MF 50V MYLAR	
C768	QFN81HK-104	0.1MF 50V MYLAR	
C769	QCF21HP-222	2200PF 5V CERAMIC	C
C770	QCF21HP-222	2200PF 5V CERAMIC	C
C773	QFN81HK-223	0.022MF 50V MYLAR	C
C774	QFN81HK-223	0.022MF 50V MYLAR	C
C801	EEW5608-878E	8700MF ELECTRO	
C802	EEW5608-878E	8700MF ELECTRO	
C803	QETB1HM-476	47MF 50V ELECTRO	
C804	QETB1HM-476	47MF 50V ELECTRO	
C805	QCS21HJ-101	100PF 50V CERAMIC	
C809	QETB1EM-476	47MF 25V ELECTRO	
C810	QETB1EM-476	47MF 25V ELECTRO	
C811	QETB1EM-106	10MF 25V ELECTRO	
C812	QFN82AK-472	4700PF 100V MYLAR	C
C813	QETB1JM-107	100MF 63V ELECTRO	
C814	QETB1JM-107	100MF 63V ELECTRO	
C815	QFH42EK-104	0.1MF 250V M.MYLAR	
C816	QCE22HP-103A	0.01MF 500V CERAMIC	
C817	QFN82AK-472	4700PF 100V MYLAR	C
C818	QFN82AK-104	0.1MF 100V MYLAR	C
C819	QETB1HM-105	1MF 50V ELECTRO	
C901	QETB1AM-227	220MF 10V ELECTRO	
C902	QETB1CM-226	22MF 16V ELECTRO	
C903	QETB1HM-475	4.7MF 50V ELECTRO	
C904	QETB1HM-226	22MF 50V ELECTRO	
C905	QETB1HM-105	1MF 50V ELECTRO	

△ : SAFETY PARTS

Resistors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R701	QRD167J-222	2.2K 1/6W CARBON	
	R702	QRD167J-222	2.2K 1/6W CARBON	
	R703	QRD167J-104	100K 1/6W CARBON	
	R704	QRD167J-104	100K 1/6W CARBON	
	R705	QRD167J-202	2K 1/6W CARBON	
	R706	QRD167J-202	2K 1/6W CARBON	
	R707	QRD167J-202	2K 1/6W CARBON	
	R708	QRD167J-202	2K 1/6W CARBON	
	R709	QRD167J-103	10K 1/6W CARBON	
	R710	QRD167J-103	10K 1/6W CARBON	
	R711	QRD167J-101	100 1/6W CARBON	
▲	R712	QRD167J-101	100 1/6W CARBON	
▲	R713	QRD14CJ-102S	1K 1/4W UNF.CARBON	
▲	R714	QRD14CJ-102S	1K 1/4W UNF.CARBON	
	R715	QRD167J-163	16K 1/6W CARBON	
	R716	QRD167J-163	16K 1/6W CARBON	
	R717	QRD167J-823	82K 1/6W CARBON	
	R718	QRD167J-823	82K 1/6W CARBON	
▲	R719	QRD14CJ-121S	120 1/4W UNF.CARBON	
▲	R720	QRD14CJ-121S	120 1/4W UNF.CARBON	
▲	R721	QRG012J-103AM	10K 1W O.M.FILM	
▲	R722	QRG012J-103AM	10K 1W O.M.FILM	
	R725	QRD167J-391	390 1/6W CARBON	
	R726	QRD167J-391	390 1/6W CARBON	
	R727	QRD167J-152	1.5K 1/6W CARBON	
	R728	QRD167J-152	1.5K 1/6W CARBON	
	R729	QRD167J-333	33K 1/6W CARBON	
	R730	QRD167J-333	33K 1/6W CARBON	
	R731	QRD167J-391	390 1/6W CARBON	
	R732	QRD167J-391	390 1/6W CARBON	
	R733	QRD167J-152	1.5K 1/6W CARBON	
	R734	QRD167J-152	1.5K 1/6W CARBON	
▲	R735	QRG01CJ-392A	3.9K 1W O.M.FILM	
▲	R741	QRG01CJ-331A	330 1W O.M.FILM	
▲	R742	QRG01CJ-331A	330 1W O.M.FILM	
	R743	QRD167J-104	100K 1/6W CARBON	
	R744	QRD167J-104	100K 1/6W CARBON	
▲	R745	QRZ0077-4R7	4.7 1/4W FUSIBLE	C
▲	R746	QRZ0077-4R7	4.7 1/4W FUSIBLE	C
▲	R747	QRZ0077-4R7	4.7 1/4W FUSIBLE	C
▲	R748	QRZ0077-4R7	4.7 1/4W FUSIBLE	C
	R751	QVPE601-501	500 0.15W VARIABLE	
	R752	QVPE601-501	500 0.15W VARIABLE	
	R753	QRD167J-101	100 1/6W CARBON	
	R754	QRD167J-101	100 1/6W CARBON	
	R755	ERT-D2WFL351S	350 1/4W THERMISTOR	
	R756	ERT-D2WFL351S	350 1/4W THERMISTOR	
	R757	QRD167J-471	470 1/6W CARBON	
	R758	QRD167J-471	470 1/6W CARBON	
	R759	QRD167J-391	390 1/6W CARBON	
	R760	QRD167J-391	390 1/6W CARBON	
	R761	ERT-D2WHL202S	2K 1/4W THERMISTOR	
	R762	ERT-D2WHL202S	2K 1/4W THERMISTOR	
▲	R765	QRZ0077-272	2.7K 1/4W FUSIBLE	
▲	R766	QRZ0077-272	2.7K 1/4W FUSIBLE	
▲	R767	QRZ0077-471	470 1/4W FUSIBLE	
▲	R768	QRZ0077-471	470 1/4W FUSIBLE	
▲	R769	QRZ0077-100	10 1/4W FUSIBLE	
▲	R770	QRZ0077-100	10 1/4W FUSIBLE	
▲	R771	QRZ0077-100	10 1/4W FUSIBLE	
▲	R772	QRZ0077-100	10 1/4W FUSIBLE	
▲	R773	ERF032K-R22	0.22 3W CEMENT	
▲	R774	ERF032K-R22	0.22 3W CEMENT	
▲	R775	QRG01CJ-100A	10 1W O.M.FILM	
▲	R776	QRG01CJ-100A	10 1W O.M.FILM	
▲	R777	QRD125J-330	33 1/2W UNF.CARBON	A
▲	R777	QRD125J-330	33 1/2W UNF.CARBON	B
▲	R777	QRD125J-101	100 1/2W UNF.CARBON	C
▲	R777	QRD125J-330	33 1/2W UNF.CARBON	DBS
▲	R778	QRD125J-330	33 1/2W UNF.CARBON	A
▲	R778	QRD125J-330	33 1/2W UNF.CARBON	B
▲	R778	QRD125J-101	100 1/2W UNF.CARBON	C
▲	R778	QRD125J-330	33 1/2W UNF.CARBON	DBS
	R791	QRD167J-621	620 1/6W CARBON	
	R792	QRD167J-621	620 1/6W CARBON	
	R793	QRD167J-621	620 1/6W CARBON	
	R794	QRD167J-621	620 1/6W CARBON	
	R795	QRD167J-181	180 1/6W CARBON	
	R796	QRD167J-181	180 1/6W CARBON	
	R797	QRD167J-181	180 1/6W CARBON	
▲	R798	QRD167J-181	180 1/6W CARBON	
▲	R801	QRZ0077-100	10 1/4W FUSIBLE	
▲	R802	QRZ0077-330	33 1/4W FUSIBLE	
	R803	QRD167J-223	22K 1/6W CARBON	
	R804	QRD167J-203	20K 1/6W CARBON	
▲	R811	QRZ0077-330	33 1/4W FUSIBLE	
▲	R812	QRZ0077-330	33 1/4W FUSIBLE	
	R813	QRD167J-123	12K 1/6W CARBON	
	R814	QRD167J-563	56K 1/6W CARBON	
	R815	QRD167J-221	220 1/6W CARBON	
	R816	QRD167J-393	39K 1/6W CARBON	
	R901	QRD167J-272	2.7K 1/6W CARBON	
	R902	QRD167J-272	2.7K 1/6W CARBON	
	R903	QRD167J-153	15K 1/6W CARBON	
	R904	QRD167J-153	15K 1/6W CARBON	

Resistors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R905	QRD167J-104	100K 1/6W CARBON	
	R906	QRD167J-823	82K 1/6W CARBON	
	R907	QRD167J-223	22K 1/6W CARBON	
	R908	QRD167J-223	22K 1/6W CARBON	
	R909	QRD167J-103	10K 1/6W CARBON	
	R911	QRD167J-473	47K 1/6W CARBON	
	R916	QRD167J-103	10K 1/6W CARBON	
	R917	QRD167J-103	10K 1/6W CARBON	
	R918	QRD167J-224	220K 1/6W CARBON	
	R919	QRD167J-332	3.3K 1/6W CARBON	
	R920	QRD167J-273	27K 1/6W CARBON	
	R921	QRD167J-153	15K 1/6W CARBON	
	R923	QRD167J-220	22 1/6W CARBON	
▲	R924	QRG02CJ-122A	1.2K 2W O.M.FILM	
▲	R925	QRZ0077-100	10 1/4W FUSIBLE	


Others

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		E300209-029	HEAT SINK	
		E305804-001	CIRCUIT BOARD HOLDER	
		E305805-001	CIRCUIT BOARD HOLDER	
		E33754-001	TIE BAND	
		E70945-H25	HEAT SINK	
		E73525-003	SCREW	
		SBSB3008CC	SCREW	
		EMG7331-002	FUSE CLIP	A
		EMG7331-002U	FUSE CLIP	A
		E11943-102	CIRCUIT BOARD	A
		E74266-002	SPECIAL SCREW	A
		E74266-002	SPECIAL SCREW	B
		EGBS3008CC	SCREW	B
		EMG7331-002	FUSE CLIP	B
		EMG7331-002U	FUSE CLIP	B
		E11943-102	CIRCUIT BOARD	B
		E65508-002	TAB	C
		E74266-002	SPECIAL SCREW	C
		E74266-002	SPECIAL SCREW	C
		GBSB3008CC	SCREW	C
		EMG7331-002	FUSE CLIP	DBS
		EMG7331-002U	FUSE CLIP	DBS
		E11943-102BS	CIRCUIT BOARD	DBS
		E65508-002	TAB	DBS
		E74266-002	SPECIAL SCREW	DBS
		E74266-002	SPECIAL SCREW	DBS
	F001	E67132-T2R0	FUSE LABEL	A
	F002	E67132-T4R0	FUSE LABEL	A
	F003	E67132-T2R0	FUSE LABEL	B
	F003	E67132-T2R0	FUSE LABEL	C
	J701	EMV7122-003	CONNECTOR	
	J702	EMV7122-003	CONNECTOR	
	J751	EMB00TP-801C	SPEAKER TERMINAL	
	J752	EMB00TP-801C	SPEAKER TERMINAL	
	J753	QMS64A0-021	HEADPHONE JACK	
	J801	EMV7122-003	CONNECTOR	
	J803	EMV7122-003	CONNECTOR	
	S701	QST4231-E04	PUSH SWITCH	
	S702	QST4231-E04	PUSH SWITCH	
	EP001	E70859-001	EARTH PLATE	C
	EP003	E70859-001	EARTH PLATE	
	FW704	EWR33B-08SST	FLAT WIRE	
	JT703	EMV7122-003	CONNECTOR	
	JT704	EMV7122-004	CONNECTOR	
	RT001	E67764-202	WRAPPING TERMINAL	A
	RT002	E67764-202	WRAPPING TERMINAL	A
	RT003	E67764-203	WRAPPING TERMINAL	B
	RT003	E67764-203	WRAPPING TERMINAL	C
	RT003	E67764-203	WRAPPING TERMINAL	DBS
	RT004	E67764-202	WRAPPING TERMINAL	B
	RT004	E67764-202	WRAPPING TERMINAL	C
	RT004	E67764-202	WRAPPING TERMINAL	DBS
	RT801	E67764-103	WRAPPING TERMINAL	
	RY901	ESK5D24-218	RELAY	

▲ IS A SAFETY PARTS

■ ENE-062 □ Source Select PC Board Ass'y

Note: ENE-062 □ varies according to the areas employed. See note (1) when placing an order.

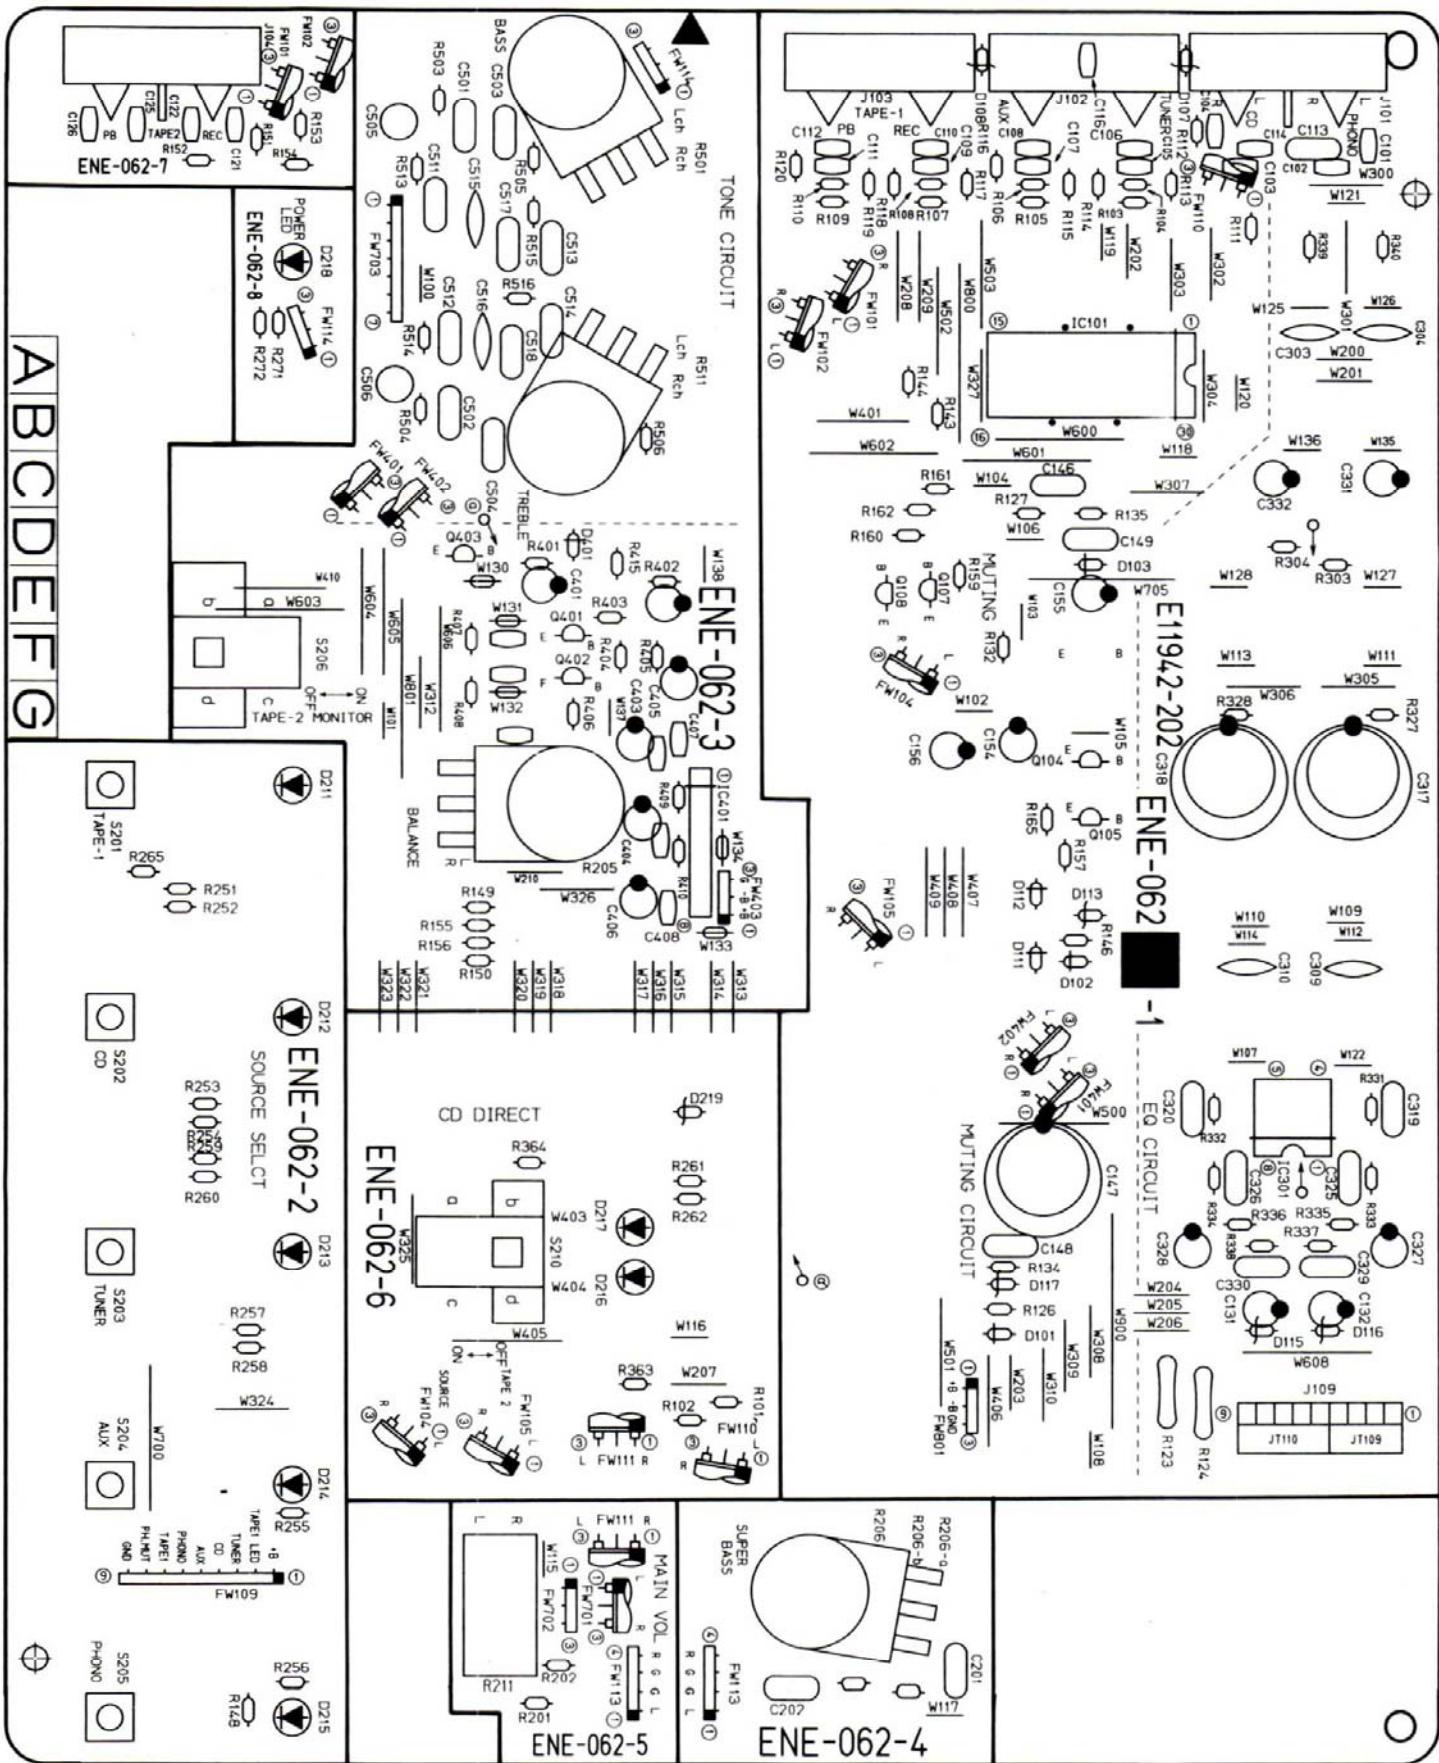

Note (1)

PC Board Ass'y	Designated Areas
ENE-062 A	Other Countries
ENE-062 B	Australia, the U.K. Continental Europe
ENE-062 C	West Germany

Transistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
Q104	DTC144ES	SILICON ROHM	
Q105	DTA144ES	SILICON ROHM	
Q107	2SC3792-AA	SILICON	
Q108	2SC3792-AA	SILICON	
Q401	2SC3792-AA	SILICON	
Q402	2SC3792-AA	SILICON	
Q403	DTA144ES	SILICON ROHM	

I. C. S.

△ ITEM	PART NUMBER	DESCRIPTION	AREA
IC101	LC7818	I.C. SANYO	
IC301	NJM4558D-D	I.C. DAINICHI	
IC401	BA15218N	I.C. ROHM	

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA
D101	ISS133	SILICON ROHM	
D102	ISS133	SILICON ROHM	
D103	ISS133	SILICON ROHM	
D107	MTZ3.3JB	ZENER ROHM	
D108	MTZ3.3JB	ZENER ROHM	
D111	ISS133	SILICON ROHM	
D112	ISS133	SILICON ROHM	
D113	MTZ5.6JC	ZENER ROHM	
D115	MTZ13JC	ZENER ROHM	
D116	MTZ13JC	ZENER ROHM	
D117	MTZ6.8JC	ZENER ROHM	
D211	SLR-331VR50F070L-E.D.	ROHM	
D212	SLR-331DU50F070L-E.D.	ROHM	
D213	SLR-331DU50F070L-E.D.	ROHM	
D214	SLR-331DU50F070L-E.D.	ROHM	
D215	SLR-331DU50F070L-E.D.	ROHM	
D216	SLR-34YC50F165 L.E.D.	ROHM	
D217	SLR-34YC50F165 L.E.D.	ROHM	
D218	SLR-331DU50F070L-E.D.	ROHM	
D219	MTZ5.1JC	ZENER ROHM	
D401	ISS133	SILICON ROHM	

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C101	QCB81HK-221	220PF 50V CERAMIC	
C102	QCB81HK-221	220PF 50V CERAMIC	
C103	QCB81HK-471	470PF 50V CERAMIC	C
C104	QCB81HK-471	470PF 50V CERAMIC	C
C105	QCB81HK-221	220PF 50V CERAMIC	C
C106	QCB81HK-221	220PF 50V CERAMIC	C
C107	QCB81HK-221	220PF 50V CERAMIC	C
C108	QCB81HK-221	220PF 50V CERAMIC	C
C109	QCB81HK-221	220PF 50V CERAMIC	C
C110	QCB81HK-221	220PF 50V CERAMIC	C
C111	QCB81HK-221	220PF 50V CERAMIC	C
C112	QCB81HK-221	220PF 50V CERAMIC	C
C113	QFN81HJ-103	0.01MF 50V MYLAR	
C114	QCBB1EZ-223	0.022MF 25V CERAMIC	
C121	QCB81HK-221	220PF 50V CERAMIC	C
C122	QCB81HK-221	220PF 50V CERAMIC	C
C125	QCB81HK-221	220PF 50V CERAMIC	C
C126	QCB81HK-221	220PF 50V CERAMIC	C
C131	QETB1EM-107	100MF 25V ELECTRO	
C132	QETB1EM-107	100MF 25V ELECTRO	

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C146	QFN81HJ-562	5600PF 50V MYLAR	
C147	QETB0JM-228	2200MF 6.3V ELECTRO	
C148	QFN81HJ-562	5600PF 50V MYLAR	
C149	QFN81HJ-473	0.047MF 50V MYLAR	
C154	QETB1CM-107	100MF 16V ELECTRO	
C155	QETB1HM-474	0.47MF 50V ELECTRO	
C156	QETB1HM-475	4.7MF 50V ELECTRO	
C201	QVF81HJ-104	0.1MF 50V T.FILM	
C202	QVF81HJ-104	0.1MF 50V T.FILM	
C303	QCS21HJ-560	56PF 50V CERAMIC	A
C303	QCS21HJ-560	56PF 50V CERAMIC	B
C303	QCS21HJ-331	330PF 50V CERAMIC	C
C304	QCS21HJ-560	56PF 50V CERAMIC	A
C304	QCS21HJ-560	56PF 50V CERAMIC	B
C304	QCS21HJ-331	330PF 50V CERAMIC	C
C309	QCS21HJ-101	100PF 50V CERAMIC	
C310	QCS21HJ-101	100PF 50V CERAMIC	
C317	QETB1AM-107	100MF 10V ELECTRO	
C318	QETB1AM-107	100MF 10V ELECTRO	
C319	QFN81HJ-182	1800PF 50V MYLAR	
C320	QFN81HJ-182	1800PF 50V MYLAR	
C325	QFN81HJ-682	6800PF 50V MYLAR	
C326	QFN81HJ-682	6800PF 50V MYLAR	
C327	EETB2AM-106	10MF 100V ELECTRO	
C328	EETB2AM-106	10MF 100V ELECTRO	
C329	QFN81HJ-222	2200PF 50V MYLAR	C
C330	QFN81HJ-222	2200PF 50V MYLAR	C
C331	EETB2AM-106	10MF 100V ELECTRO	
C332	EETB2AM-106	10MF 100V ELECTRO	
C401	QEK51HM-474	0.47MF 50V ELECTRO	
C403	QEKS1EM-475G	4.7MF 25V ELECTRO	
C404	QEKS1EM-475G	4.7MF 25V ELECTRO	
C405	QEKS1EM-475G	4.7MF 25V ELECTRO	
C406	QEKS1EM-475G	4.7MF 25V ELECTRO	
C407	QCB81HK-101	100PF 50V CERAMIC	
C408	QCB81HK-101	100PF 50V CERAMIC	
C501	QFN81HK-153	0.015MF 50V MYLAR	
C502	QFN81HK-153	0.015MF 50V MYLAR	
C503	QFN81HK-823	0.082MF 50V MYLAR	
C504	QFN81HK-823	0.082MF 50V MYLAR	
C505	QEN51HM-475	4.7MF 50V NON POLE	
C506	QEN51HM-475	4.7MF 50V NON POLE	
C511	QFN81HK-332	3300PF 50V MYLAR	
C512	QFN81HK-332	3300PF 50V MYLAR	
C513	QFN81HK-183	0.018MF 50V MYLAR	
C514	QFN81HK-183	0.018MF 50V MYLAR	
C515	QCS21HJ-221	220PF 50V CERAMIC	
C516	QCS21HJ-221	220PF 50V CERAMIC	
C517	QFN81HK-122	1200PF 50V MYLAR	
C518	QFN81HK-122	1200PF 50V MYLAR	

Resistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
R101	QRD167J-105	1M 1/6W CARBON	
R102	QRD167J-105	1M 1/6W CARBON	
R103	QRD167J-105	1M 1/6W CARBON	
R104	QRD167J-105	1M 1/6W CARBON	
R105	QRD167J-105	1M 1/6W CARBON	
R106	QRD167J-105	1M 1/6W CARBON	
R107	QRD167J-105	1M 1/6W CARBON	
R108	QRD167J-105	1M 1/6W CARBON	
R109	QRD167J-105	1M 1/6W CARBON	
R110	QRD167J-105	1M 1/6W CARBON	
R111	QRD167J-471	470 1/6W CARBON	
R112	QRD167J-471	470 1/6W CARBON	
R113	QRD167J-471	470 1/6W CARBON	
R114	QRD167J-471	470 1/6W CARBON	
R115	QRD167J-471	470 1/6W CARBON	
R116	QRD167J-471	470 1/6W CARBON	
R117	QRD167J-471	470 1/6W CARBON	
R118	QRD167J-471	470 1/6W CARBON	
R119	QRD167J-471	470 1/6W CARBON	
R120	QRD167J-471	470 1/6W CARBON	
R123	QRZ0077-101	100 1/4W FUSIBLE	
R124	QRZ0077-101	100 1/4W FUSIBLE	
R126	QRD167J-104	100K 1/6W CARBON	
R127	QRD167J-104	100K 1/6W CARBON	
R132	QRD167J-103	10K 1/6W CARBON	
R134	QRD167J-103	10K 1/6W CARBON	
R135	QRD167J-474	470K 1/6W CARBON	
R143	QRD167J-102	1K 1/6W CARBON	
R144	QRD167J-102	1K 1/6W CARBON	
R146	QRD167J-122	1.2K 1/6W CARBON	
R149	QRD167J-471	470 1/6W CARBON	
R150	QRD167J-471	470 1/6W CARBON	
R151	QRD167J-105	1M 1/6W CARBON	
R152	QRD167J-105	1M 1/6W CARBON	
R153	QRD167J-471	470 1/6W CARBON	
R154	QRD167J-471	470 1/6W CARBON	
R155	QRD167J-105	1M 1/6W CARBON	
R156	QRD167J-105	1M 1/6W CARBON	
R157	QRD167J-102	1K 1/6W CARBON	
R159	QRD167J-333	33K 1/6W CARBON	

△ : SAFETY PARTS

Resistors


▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R160	QRD167J-333	33K 1/6W CARBON	
	R161	QRD167J-105	1M 1/6W CARBON	
	R162	QRD167J-105	1M 1/6W CARBON	
	R201	QRD167J-103	10K 1/6W CARBON	
	R202	QRD167J-103	10K 1/6W CARBON	
	R205	QVDBB87M-EF5B	250K VARIABLE	
	R206	QVDBB87A-E15B	100K VARIABLE	
	R211	QVDBA78-AF5VA	250K VARIABLE	
	R251	QRD167J-122	1.2K 1/6W CARBON	
	R252	QRD167J-122	1.2K 1/6W CARBON	
	R253	QRD167J-122	1.2K 1/6W CARBON	
	R254	QRD167J-122	1.2K 1/6W CARBON	
	R255	QRD167J-122	1.2K 1/6W CARBON	
	R256	QRD167J-122	1.2K 1/6W CARBON	
	R257	QRD167J-122	1.2K 1/6W CARBON	
	R258	QRD167J-122	1.2K 1/6W CARBON	
	R259	QRD167J-122	1.2K 1/6W CARBON	
	R260	QRD167J-122	1.2K 1/6W CARBON	
	R261	QRD167J-122	1.2K 1/6W CARBON	
	R262	QRD167J-112	1.1K 1/6W CARBON	
	R265	QRD167J-104	100K 1/6W CARBON	
	R271	QRD167J-132	1.3K 1/6W CARBON	
	R272	QRD167J-152	1.5K 1/6W CARBON	
	R303	QRD167J-473	47K 1/6W CARBON	
	R304	QRD167J-473	47K 1/6W CARBON	
	R327	QRD167J-561	560 1/6W CARBON	
	R328	QRD167J-561	560 1/6W CARBON	
	R331	QRD167J-393	39K 1/6W CARBON	
	R332	QRD167J-393	39K 1/6W CARBON	
	R333	QRD167J-474	470K 1/6W CARBON	
	R334	QRD167J-474	470K 1/6W CARBON	
	R335	QRD167J-471	470 1/6W CARBON	
	R336	QRD167J-471	470 1/6W CARBON	
	R337	QRD167J-104	100K 1/6W CARBON	
	R338	QRD167J-104	100K 1/6W CARBON	
	R339	QRD167J-222	2.2K 1/6W CARBON	
	R340	QRD167J-222	2.2K 1/6W CARBON	
	R363	QRD167J-471	470 1/6W CARBON	
	R364	QRD167J-471	470 1/6W CARBON	
	R401	QRD167J-102	1K 1/6W CARBON	
	R402	QRD167J-474	470K 1/6W CARBON	
	R403	QRD167J-223	22K 1/6W CARBON	
	R404	QRD167J-223	22K 1/6W CARBON	
	R405	QRD167J-102	1K 1/6W CARBON	
	R406	QRD167J-102	1K 1/6W CARBON	
	R407	QRD167J-104	100K 1/6W CARBON	
	R408	QRD167J-104	100K 1/6W CARBON	
	R409	QRD167J-105	1M 1/6W CARBON	
	R410	QRD167J-105	1M 1/6W CARBON	
	R501	QVDBB87C-E15B	100K VARIABLE	
	R503	QRD167J-203	20K 1/6W CARBON	
	R504	QRD167J-203	20K 1/6W CARBON	
	R505	QRD167J-362	3.6K 1/6W CARBON	
	R506	QRD167J-362	3.6K 1/6W CARBON	
	R511	QVDBB87C-E15B	100K VARIABLE	
	R513	QRD167J-472	4.7K 1/6W CARBON	
	R514	QRD167J-472	4.7K 1/6W CARBON	
	R515	QRD167J-821	820 1/6W CARBON	
	R516	QRD167J-821	820 1/6W CARBON	

Others

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		E11942-202	CIRCUIT BOARD	
		E305983-002	LED HOLDER	
	J101	E33754-001	TIE BAND	
	J102	EMN00TV-405A	4P PIN JACK	
	J103	EMN00TV-402A	4P PIN JACK	
	J104	EMN00TV-402A	4P PIN JACK	
	S201	ESP0001-018	TACT SWITCH	
	S202	ESP0001-018	TACT SWITCH	
	S203	ESP0001-018	TACT SWITCH	
	S204	ESP0001-018	TACT SWITCH	
	S205	ESP0001-018	TACT SWITCH	
	S206	QSTL101-E03	PUSH SWITCH	
	S210	QSTL101-E05	PUSH SWITCH	
	FW101	EWR23C-20NN	FLAT WIRE	
	FW102	EWR23C-20NN	FLAT WIRE	
	FW104	EWR23C-30NN	FLAT WIRE	
	FW105	EWR23C-25NN	FLAT WIRE	
	FW109	EWR39B-20KST	FLAT WIRE	
	FW110	EWR23C-35NN	FLAT WIRE	
	FW111	EWR23C-16NN	FLAT WIRE	
	FW113	EWR34B-20SST	FLAT WIRE	
	FW114	EWR33B-13SST	FLAT WIRE	
	FW401	EWR23C-40NN	FLAT WIRE	
	FW402	EWR23C-40NN	FLAT WIRE	
	FW403	EWR33B-30LST	FLAT WIRE	
	FW701	EWR23C-10JN	FLAT WIRE	
	FW702	EWR33B-13KST	FLAT WIRE	
	FW703	EWR37B-35KST	FLAT WIRE	
	FW801	EWR33B-10KST	FLAT WIRE	
	JT109	EMV7122-004	CONNECTOR	
	JT110	EMV7122-005	CONNECTOR	

▲ IS SAFETY PARTS

■END-061 ■ Voltage Selector PC Board Ass'y (for Other Countries Only)

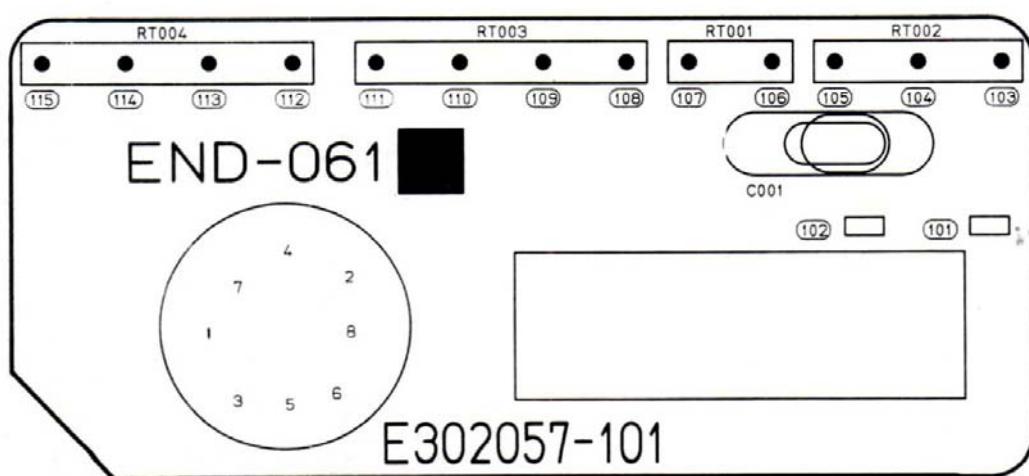

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION	AREA
△	C001	QCZ9018-103	0.01MF CERAMIC	

Others

△	ITEM	PART NUMBER	DESCRIPTION	AREA
		E302057-101 E65508-002 E67764-302 E67764-303 E67764-304	CIRCUIT BOARD TAB WRAPPING TERMINAL WRAPPING TERMINAL WRAPPING TERMINAL	
△		QMC0637-004 QSR0085-018	AC OUTLET VOLTAGE SELECTOR	

△ (S)AFETY PARTS

Accessories List


⚠	Part Number	Part Name	Q'ty	Description	Areas
	E30580-1601B E30580-1601BBS BT20029C BT-20117 BT20060	Instruction Book Instruction Book Warranty Card Warranty Card Warranty Card	1 1 1 1 1		Except BS BS A G BS
⚠	BT-20119 BT20066A E35497-019 E04056 QZL1008-001	Audio Warranty EEC Agency Caution Sheet Siemens Plug FTZ Information Sheet	1 1 1 1 1	for New Zealand 220V	A BS U U G
	E43486-340A E41202-2 E41202-2B	Safety Sheet Envelope Envelope	1 1 1		BS Except BS BS

The Marks for Designated Areas

A.....Australia G.....West Germany
 E,EF.....Continental Europe U.....Other Countries
 BS.....the U.K. No mark indicates all areas.

⚠ Safety Parts

Packing Materials and Part Numbers

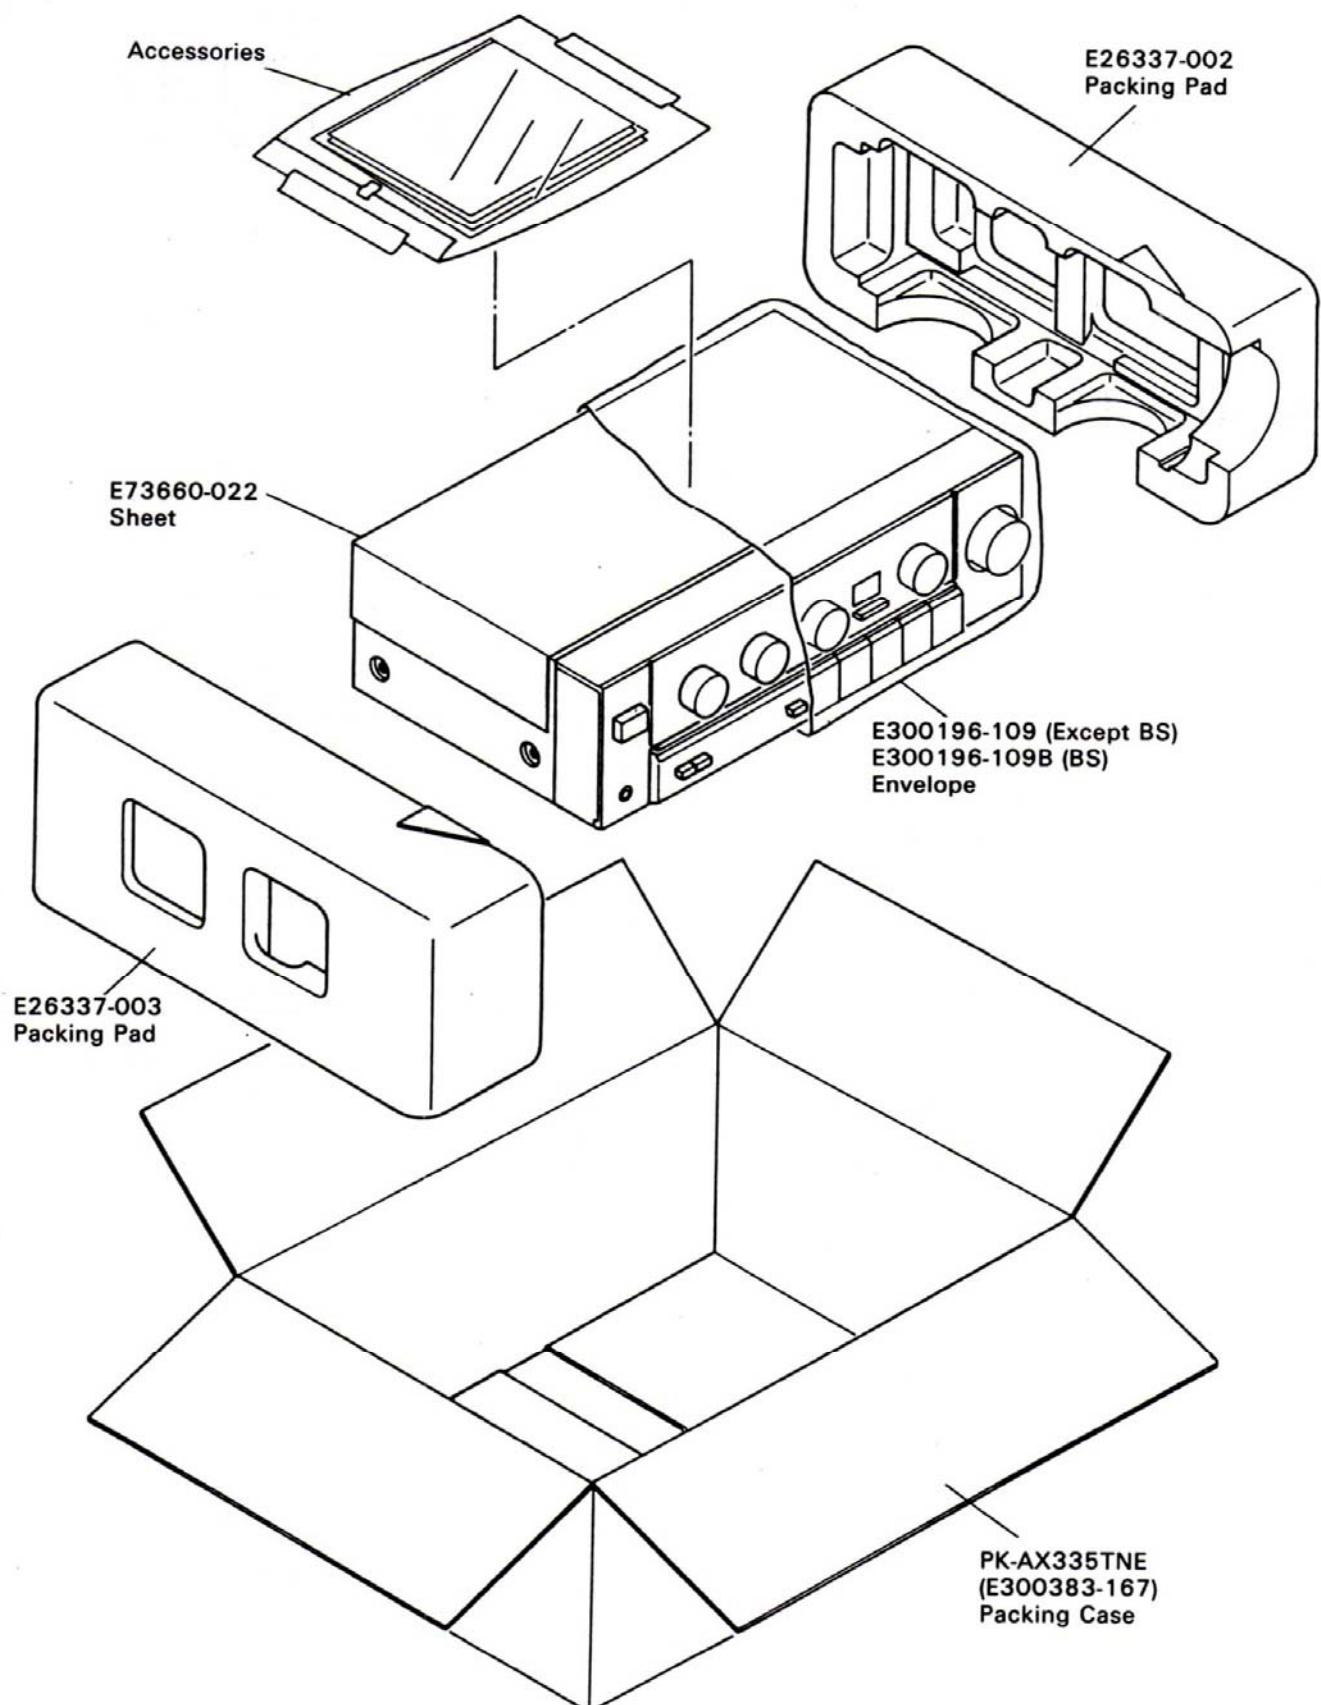


The Marks for Designated Areas

A.....Australia	G.....West Germany
E,EF.....Continental Europe	U.....Other Countries
BS.....the U.K.	No mark indicates all areas.

Schematic Diagrams

ENE-062-1

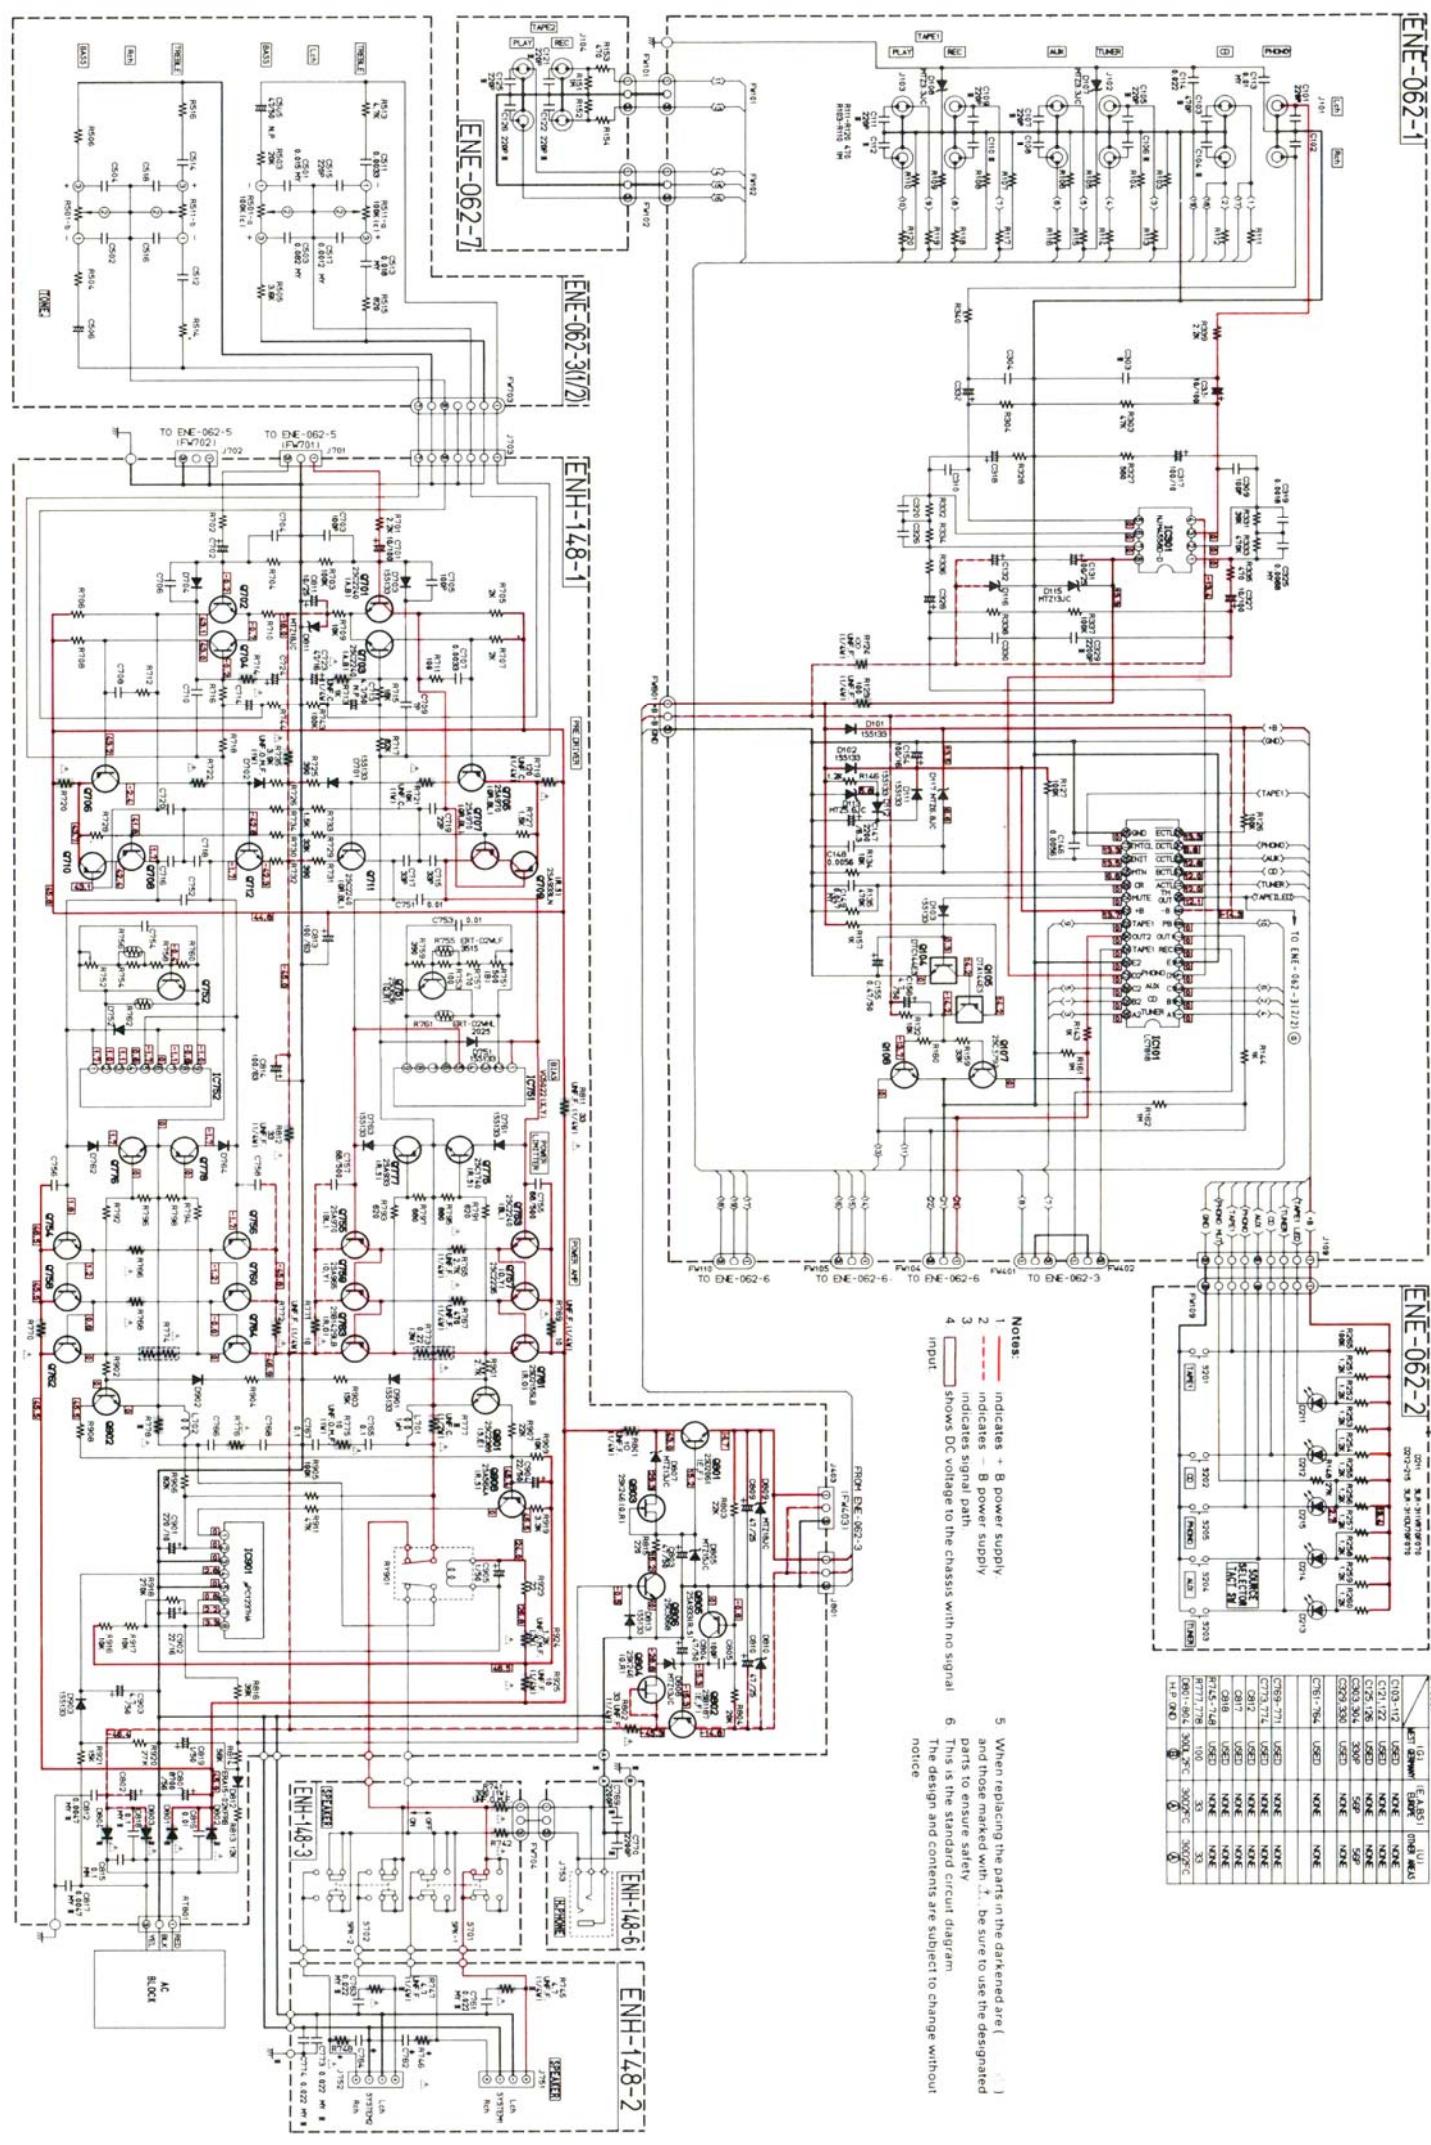

ENE-062-2

ENE-062-3

ENE-062-4

ENE-062-5

ENE-062-6

ENE-062-7

ENE-062-8

ENE-062-9

ENE-062-10

ENE-062-11

ENE-062-12

ENE-062-13

ENE-062-14

ENE-062-15

ENE-062-16

ENE-062-17

ENE-062-18

ENE-062-19

ENE-062-20

ENE-062-21

ENE-062-22

ENE-062-23

ENE-062-24

ENE-062-25

ENE-062-26

ENE-062-27

ENE-062-28

ENE-062-29

ENE-062-30

ENE-062-31

ENE-062-32

ENE-062-33

ENE-062-34

ENE-062-35

ENE-062-36

ENE-062-37

ENE-062-38

ENE-062-39

ENE-062-40

ENE-062-41

ENE-062-42

ENE-062-43

ENE-062-44

ENE-062-45

ENE-062-46

ENE-062-47

ENE-062-48

ENE-062-49

ENE-062-50

ENE-062-51

ENE-062-52

ENE-062-53

ENE-062-54

ENE-062-55

ENE-062-56

ENE-062-57

ENE-062-58

ENE-062-59

ENE-062-60

ENE-062-61

ENE-062-62

ENE-062-63

ENE-062-64

ENE-062-65

ENE-062-66

ENE-062-67

ENE-062-68

ENE-062-69

ENE-062-70

ENE-062-71

ENE-062-72

ENE-062-73

ENE-062-74

ENE-062-75

ENE-062-76

ENE-062-77

ENE-062-78

ENE-062-79

ENE-062-80

ENE-062-81

ENE-062-82

ENE-062-83

ENE-062-84

ENE-062-85

ENE-062-86

ENE-062-87

ENE-062-88

ENE-062-89

ENE-062-90

ENE-062-91

ENE-062-92

ENE-062-93

ENE-062-94

ENE-062-95

ENE-062-96

ENE-062-97

ENE-062-98

ENE-062-99

ENE-062-100

ENE-062-101

ENE-062-102

ENE-062-103

ENE-062-104

ENE-062-105

ENE-062-106

ENE-062-107

ENE-062-108

ENE-062-109

ENE-062-110

ENE-062-111

ENE-062-112

ENE-062-113

ENE-062-114

ENE-062-115

ENE-062-116

ENE-062-117

ENE-062-118

ENE-062-119

ENE-062-120

ENE-062-121

ENE-062-122

ENE-062-123

ENE-062-124

ENE-062-125

ENE-062-126

ENE-062-127

ENE-062-128

ENE-062-129

ENE-062-130

ENE-062-131

ENE-062-132

ENE-062-133

ENE-062-134

ENE-062-135

ENE-062-136

ENE-062-137

ENE-062-138

ENE-062-139

ENE-062-140

ENE-062-141

ENE-062-142

ENE-062-143

ENE-062-144

ENE-062-145

ENE-062-146

ENE-062-147

ENE-062-148

ENE-062-149

ENE-062-150

ENE-062-151

ENE-062-152

ENE-062-153

ENE-062-154

ENE-062-155

ENE-062-156

ENE-062-157

ENE-062-158

ENE-062-159

ENE-062-160

ENE-062-161

ENE-062-162

ENE-062-163

ENE-062-164

ENE-062-165

ENE-062-166

ENE-062-167

ENE-062-168

ENE-062-169

ENE-062-170

ENE-062-171

ENE-062-172

ENE-062-173

ENE-062-174

ENE-062-175

ENE-062-176

ENE-062-177

ENE-062-178

ENE-062-179

ENE-062-180

ENE-062-181

ENE-062-182

ENE-062-183

ENE-062-184

ENE-062-185

ENE-062-186

ENE-062-187

ENE-062-188

ENE-062-189

ENE-062-190

ENE-062-191

ENE-062-192

ENE-062-193

ENE-062-194

ENE-062-195

ENE-062-196

ENE-062-197

ENE-062-198

ENE-062-199

ENE-062-200

ENE-062-201

ENE-062-202

ENE-062-203

ENE-062-204

ENE-062-205

ENE-062-206

ENE-062-207

ENE-062-208

ENE-062-209

ENE-062-210

ENE-062-211

ENE-062-212

ENE-062-213

ENE-062-214

ENE-062-215

ENE-062-216

ENE-062-217

ENE-062-218

ENE-062-219

ENE-062-220

ENE-062-221

ENE-062-222

ENE-062-223

ENE-062-224

ENE-062-225

ENE-062-226

ENE-062-227

ENE-062-228

ENE-062-229

ENE-062-230

ENE-062-231

ENE-062-232

ENE-062-233

ENE-062-234

ENE-062-235

ENE-062-236

ENE-062-237

ENE-062-238



ENE-062-239

ENE-062-240

ENE-062-241

ENE-062-242

POWER SUPPLY BLOCK

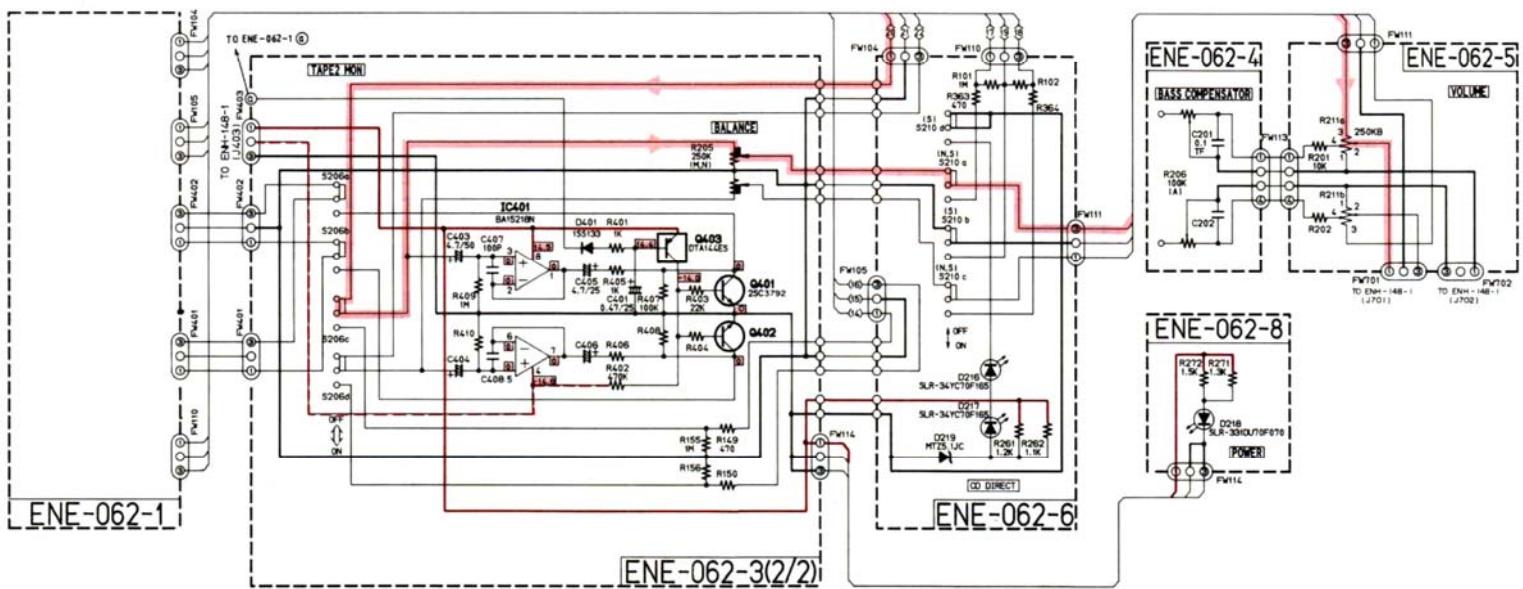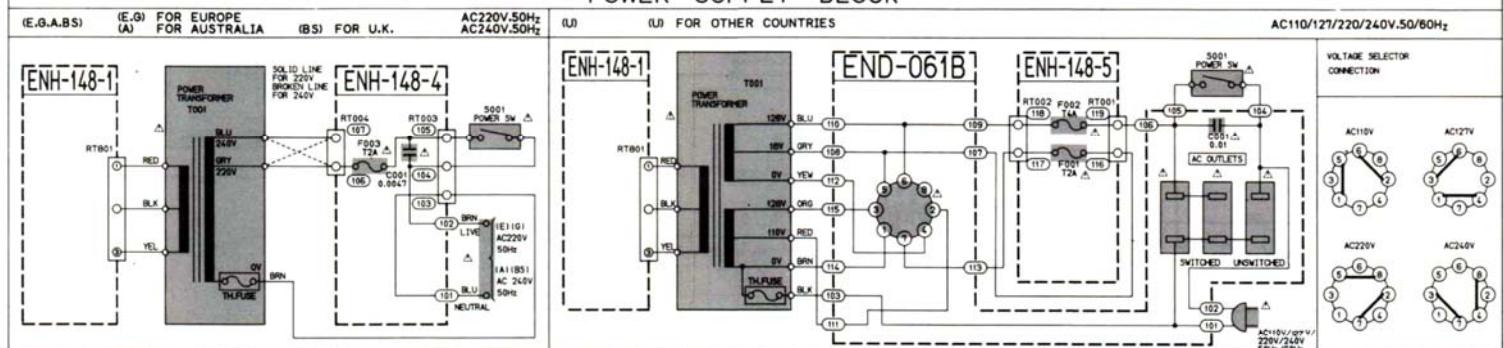


(No. 20166)


(No. 20166)

Printed Circuit Board

■ Main Amplifier P.C. Board (ENH-148)

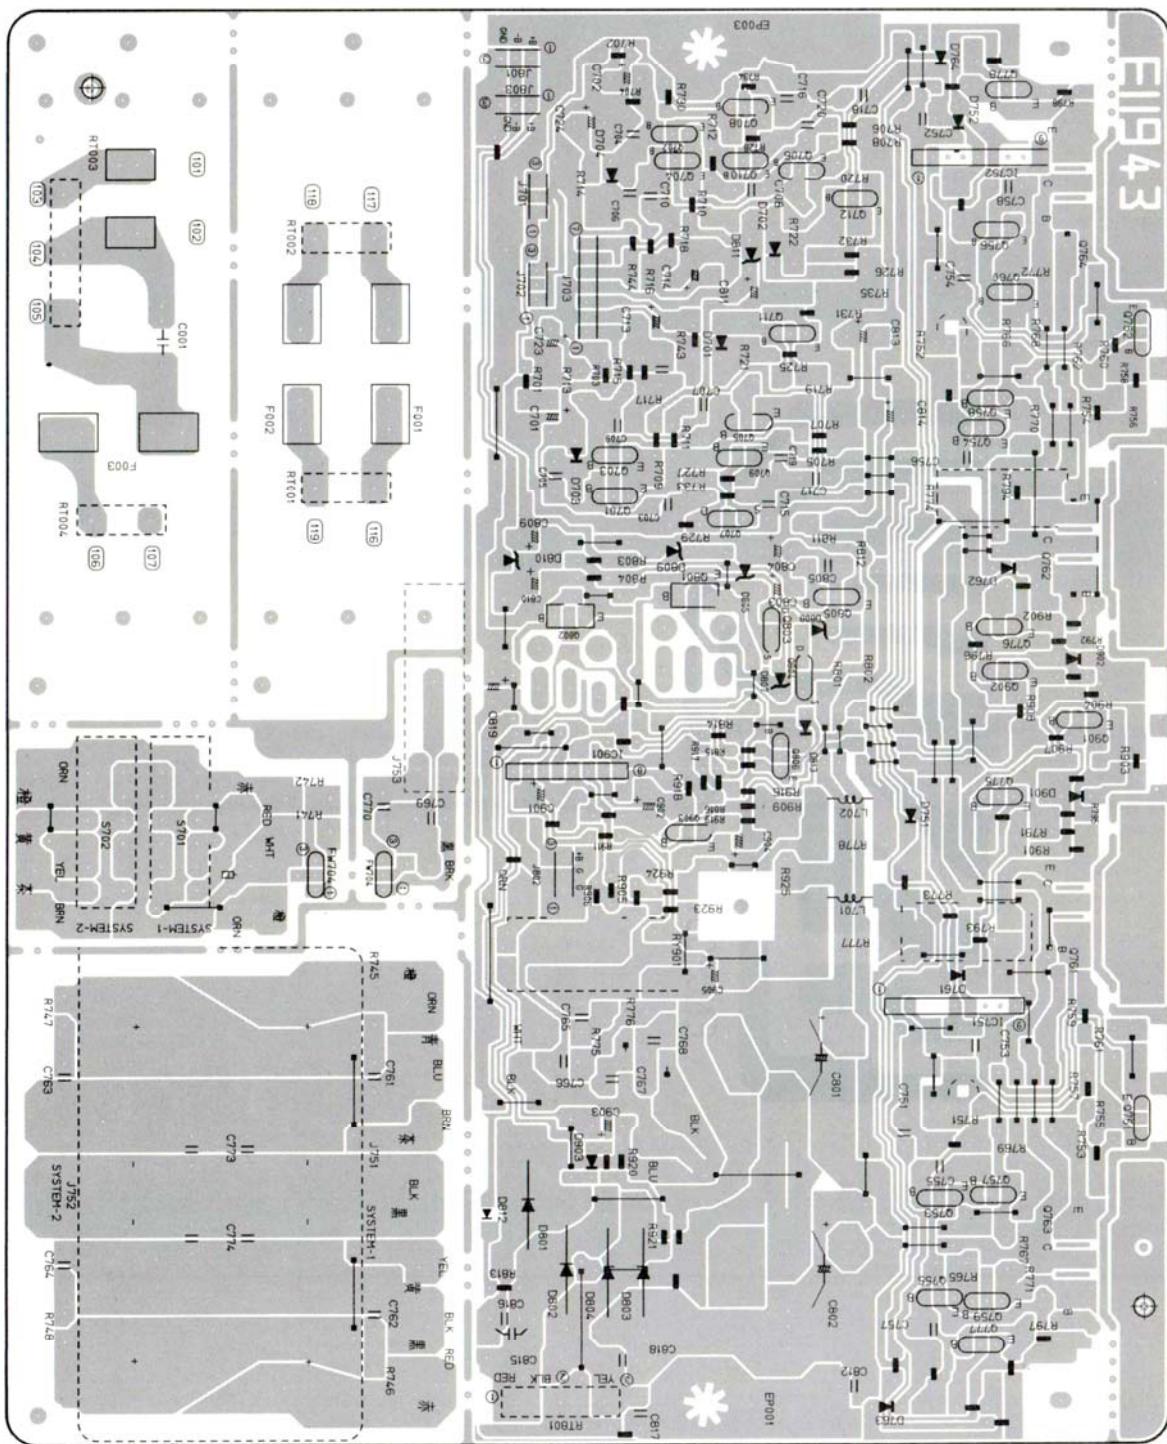


■ Voltage Selector P.C. Board (END-061)

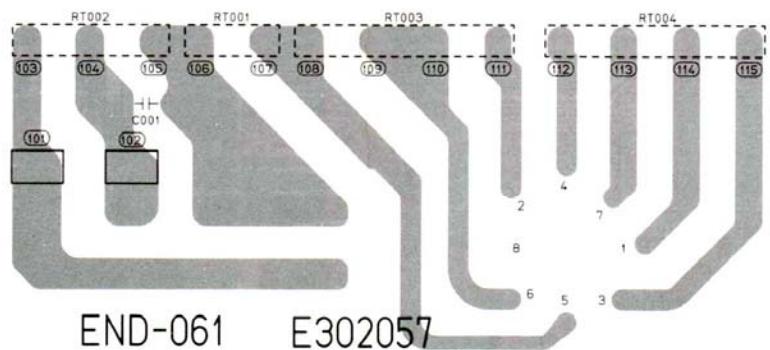

(No. 20166)

(No. 20166)

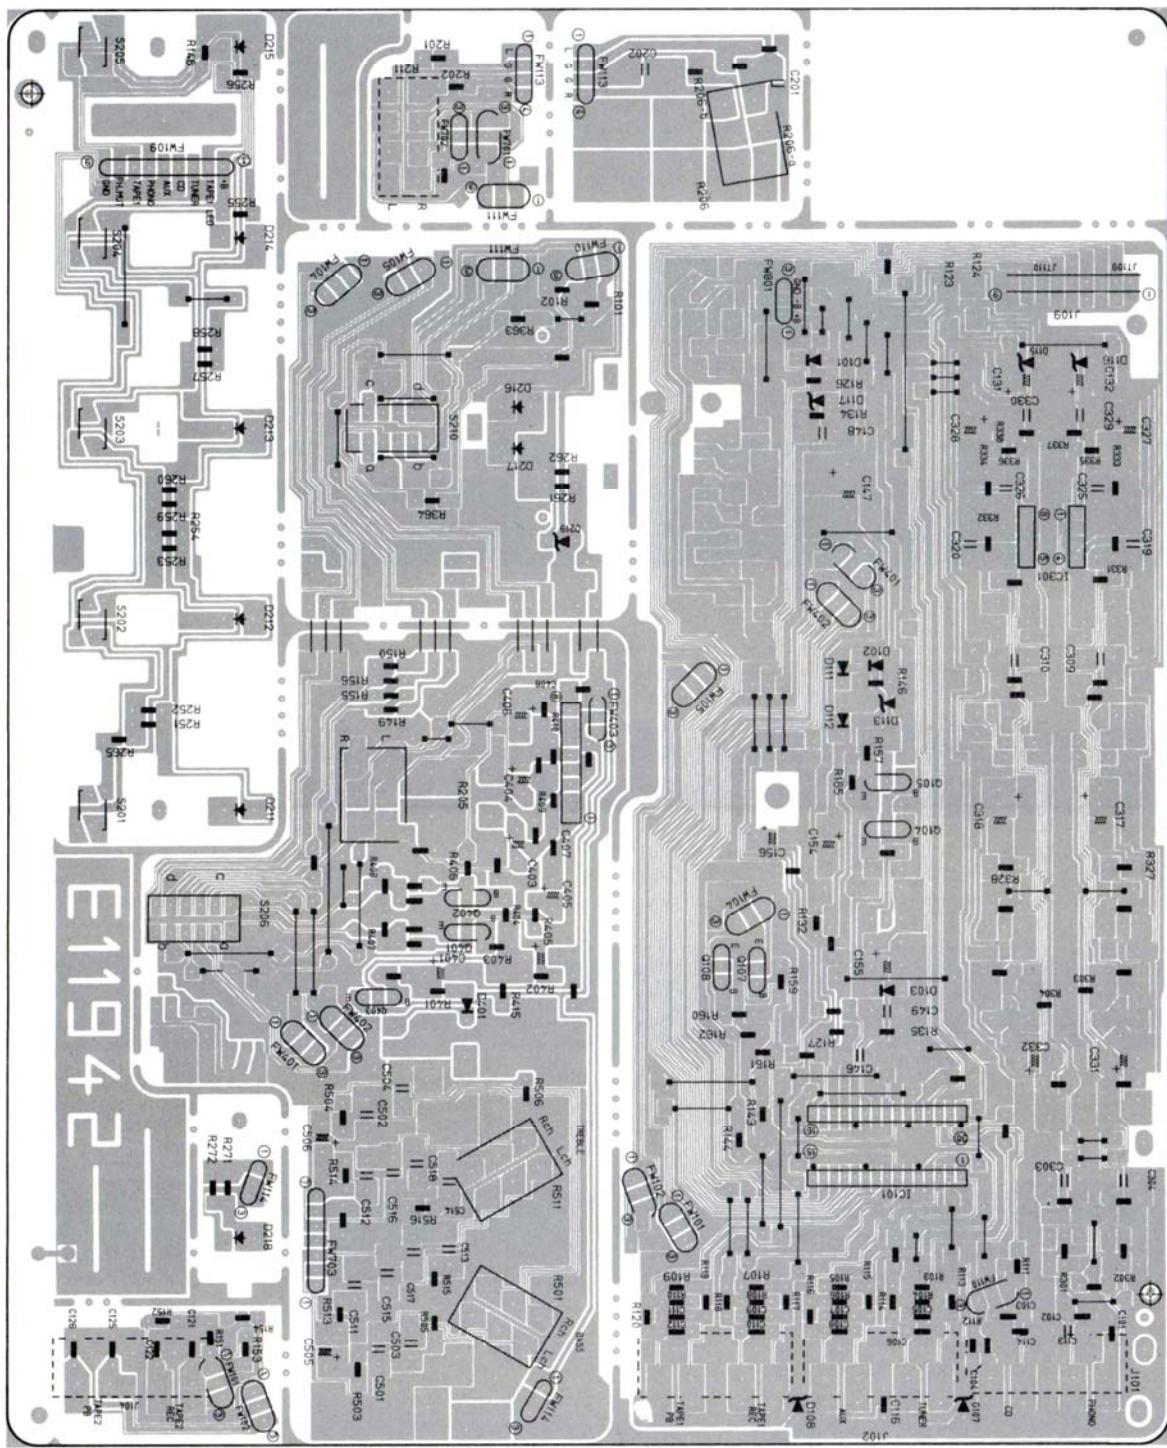

- MEMO -



JVC

VICTOR COMPANY OF JAPAN LIMITED
AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

(No. 20166)



Printed in Japan
9002 (G)