

# JVC

## SERVICE MANUAL

### COMPACT COMPONENT SYSTEM

#### FX-F3000/FX-F3000R : AX-F3000

FM/AM TUNER


INTEGRATED AMPLIFIER

#### XL-F3000

COMPACT DISC PLAYER

#### :TD-F3000

DOUBLE CASSETTE DECK

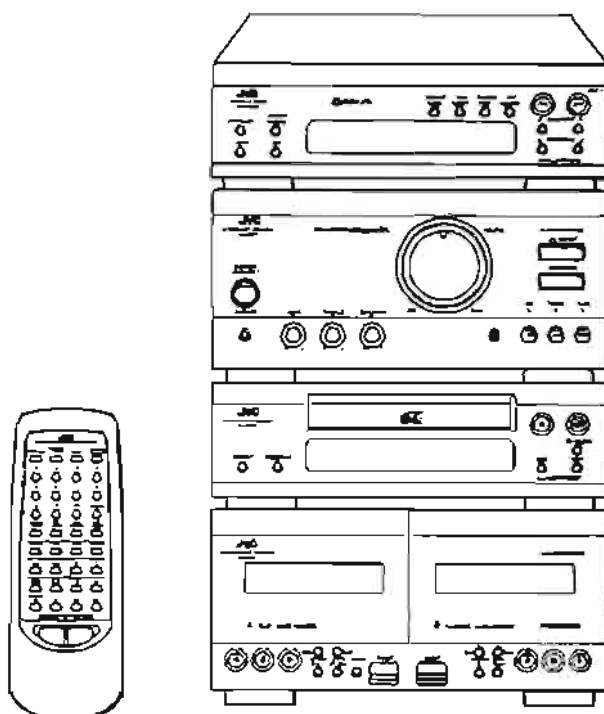

Pick up	OPTIMA-6
CD signal processor	MN66270RB

#### Area Suffix

BS	.....	the U.K.
C	.....	Canada
EF	.....	Continental Europe Except Germany & Italy
EN	.....	Nordic Countries
G	.....	Germany
J	.....	the U.S.A.
Ua	.....	Hong Kong
US	.....	Singapore
UT	.....	Taiwan
U	.....	Universal Except All of Above

COMPACT  
**disc**  
DIGITAL AUDIO

Note: Press S510 on ENH-296-1 for checking only AX-F3000 unit or units except FX-F3000/FX-F3000R.  
Discharge C404 after services.

### Contents

<i>Safety Precautions</i> .....	1-2	<i>Parts List</i>	
<i>Important for Laser Products</i> .....	1-3	<i>AX-F3000</i> .....	6-1
<i>Instruction Book</i> .....	1-4	<i>XL-F3000</i> .....	7-1
<i>AX-F3000</i> .....	2-1	<i>TD-F3000</i> .....	8-1
<i>XL-F3000</i> .....	3-1	<i>FX-F3000/FX-F3000R</i> .....	9-1
<i>TD-F3000</i> .....	4-1	<i>Accessories List</i> .....	10-1
<i>FX-F3000/FX-F3000R</i> .....	5-1	<i>Packing Materials</i> .....	10-2

### **Safety Precautions**

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorised in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits.
2. Any unauthorised design alterations or additions will void the manufacturer's guarantee ; furthermore the manufacturer cannot accept responsibility for personal injury or property damage resulting therefrom.
3. Essential safety critical components are identified by ( $\Delta$ ) on the Parts List and by shading on the schematics ,and must never be replaced by parts other than those listed in the manual. Please note however that many electrical and mechanical parts in the product have special safety related characteristics . These characteristics are often not evident from visual inspection . Parts other than specified by the manufacturer may not have the same safety characteristics as the recommended replacement parts shown in the Parts List of the service manual and may create shock , fire , or other hazards .
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

### **Warning**

1. Service should be performed by qualified personnel only.
2. This equipment has been designed and manufactured to meet international safety standards.
3. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
4. Repairs must be made in accordance with the relevant safety standards.
5. It is essential that safety critical components are replaced by approved parts.
6. If mains voltage selector is provided, check setting for local voltage .

## Important for Laser Products

1. **CLASS 1 LASER PRODUCT**
2. **DANGER** : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION** : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.
4. **CAUTION** : The compact disc player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.
5. **CAUTION** : If safety switches malfunction, the laser is able to function.
6. **CAUTION** : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
7. **CAUTION** : The compact disc player provides a laser diode of wavelength 780-790nm and optical output power typical 3mW at the laser diode.

**WARNING** : Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

**VARO** : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

**ADVARSEL** : Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

**ADVARSEL** : Usynlig laserstrålning ved åbning, når sikkerhedsbryteren er avslott. unngå utsettelse for stråling.

### REPRODUCTION AND POSITION OF LABELS

#### WARNING LABEL



(Except for the U. S. A.)

**DANGER**: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

**WARNING**: Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)

**ADVARSEL**: Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (d)

**VARO**: Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

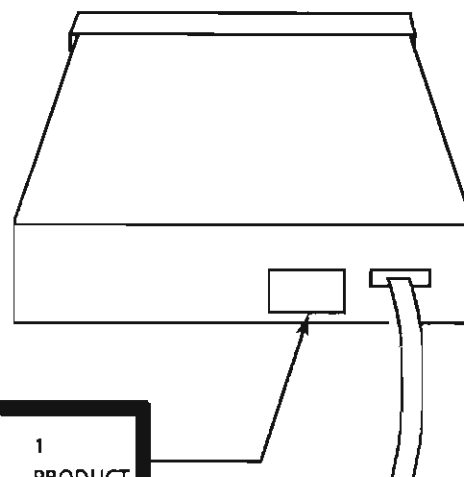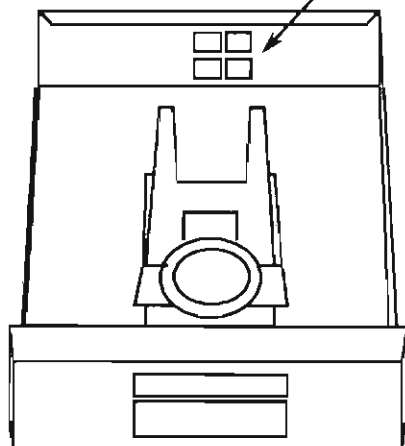

**CLASS 1  
LASER PRODUCT**

#### CLASSIFICATION LABEL

(Except for the U. S. A. and Canada)

## Table of Contents

Introduction .....	2	Using the Cassette Deck (Listening to a Tape) .....	21
How This Manual Is Organized .....	2	One Touch Play .....	21
Getting Started .....	3	Regular Play .....	21
Accessories .....	3	Fast Left and Fast Right .....	22
Plugging Batteries in the Remote Control .....	3	Music Scan .....	22
Connecting the External Wire .....	3	Finding the Beginning of the Next Song .....	22
Connecting the System Control Cords .....	4	Finding the Beginning of the Current Song .....	22
Connecting the Speakers .....	4	Other Useful Features of the Cassette Deck .....	23
Connecting the FM Antenna .....	5	Reverse Mode .....	23
Connecting the AM (M/W/LW) Antenna .....	5	Continuous Play (only available when Reverse mode is on) .....	23
Connecting the Minidisc Recorder and Other Equipment .....	6	Dolby Noise Reduction .....	23
Switches, Buttons and Controls .....	7	Dolby HX PRO .....	23
Front Panel .....	7	Listening to the Turntable or Other Equipment through Your System .....	24
Remote Control .....	9	Using JVC's Minidisc Recorder Connected to the COMPU LINK 3 - MD Terminal .....	24
Displays .....	10	Using the Cassette Deck (Recording) .....	25
Tuner Display .....	10	Things to Know before You Start Recording .....	25
CD Player Display .....	10	Standard Recording .....	26
Using the Amplifier .....	11	Recording any Sound Source to Tape .....	26
Turning the System On and Off .....	11	CD to Tape Recording .....	27
Turning the System Off .....	11	Tape to Tape Recording (Dubbing) .....	28
Controlling the Sound .....	11	Using the Timer .....	29
Volume Control .....	11	Setting the Clock .....	29
Speaker Balance Control .....	11	Setting the Recording (REC) Tuner .....	29
Bass Control .....	11	Setting the Daily Timer .....	30
Treble Control .....	11	Setting the Sleep Timer .....	32
Using the CD DIRECT Function .....	12	Tuner Priority .....	33
Using the PRESENCE Function .....	12	Care and Maintenance—General Notes .....	34
Listening with Headphones .....	12	Compact Discs .....	34
Using the Tuner .....	13	Moisture Condensation .....	34
One Touch Radio .....	13	Cassette Tapes .....	34
Tuning in Stations Manually .....	13	Cassette Deck .....	34
Receiving in Stereo or Monaural .....	13	Troubleshooting .....	35
Presetting Stations in Memory .....	13	Specifications .....	36
Tuning in Preset Stations .....	14		
Erasing the Preset Stations .....	14		
Receiving FM Stations with RDS (Radio Data System) .....	15		
What Information RDS Can Provide .....	15		
Searching for Programs by PTY Codes .....	16		
Setting EON Standby Reception .....	16		
ALARM Function .....	17		
Using the CD Player .....	18		
Basics of Using the CD Player .....	18		
Playing a CD .....	18		
Finding the Track or a Particular Point You Want .....	18		
Locating a Track with the Remote Control Directly .....	19		
Programming the Playing Order of the Tracks .....	19		
Repeating a Selection on the Entire Disc .....	20		

## Introduction

- Here are some of the things that make your components (hereafter, called "System") easy to use:
- The controls and operations have been redesigned to make them easy to use so you can spend your time listening to music.
  - With the One Touch Play feature of JVC's COMPU PLAY, you can turn on the System and start the tuner, the cassette deck, or the CD player with a single touch. If the System is not ready, such as no CD or tape in place, the System will turn on and then pauses so you can put in a CD or tape.
  - Three timers, Recording, Daily, and Sleep Timers, are extremely easy to set so you can really use them.
  - A home-use RDS tuner offers most of the RDS services. These services include the display of station names and program types, and scanning stations by using the program types.



### How This Manual Is Organized

- This manual explains how to use the following four components:
  - FM/MW/LW Tuner FX-F3008R
  - Integrated Amplifier AX-F3000
  - Compact Disc Player XL-F3000
  - Double Cassette Deck TD-F3000
- This manual mainly explains operations using the buttons and controls on the front panels. If operation using the Remote Control is different from that using the buttons on the front panels, it is then explained.

### IMPORTANT CAUTIONS

- 1 **Installation of the System**
  - Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C or 41°F and 95°F).
  - Leave sufficient distance between the System and your TV.
  - Keep the speakers away from TV to avoid interference with TV.
  - Do not use the System in a place subject to vibrations.
- 2 **Power cord**
  - Do not handle the power cord with wet hands!
  - The small amount of the power (11 watts) is always consumed as long as the power cord is connected to the wall outlet.
  - When unplugging from the wall outlet, always pull the plug, not the power cord.
- 3 **Malfunctions, etc.**
  - There are no user serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
  - Do not insert any metallic object into the cabinets.

## Getting Started

### Accessories

Check to be sure you have all of the following things, which are supplied with the System:

- FM/W/LW Tuner FX-F3000R
- AM (M/W/LW) Loop Antenna (1)
- Remote Control (1)
- Batteries (2)
- External Wire (1)

If any are missing, contact your dealer immediately.

### Putting Batteries in the Remote Control

Match the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.



RD (UM-45AAA (2x))


If the range or effectiveness of the Remote Control decreases, replace the batteries. Use two RD (UM-45AAA (2x)) type dry-cell batteries.

### CAUTION

- To avoid battery leakage or explosion.
- Remove batteries when the Remote Control is not used for a long time.
- When you need to replace the batteries, replace both batteries at the same time with new ones.
- Do not use an old battery together with a new one.
- Do not use different types of batteries together.
- Do not expose batteries to heat or flame.

### Connecting the External Wire

To prevent the function, contact the supplier when it is illustrated below.

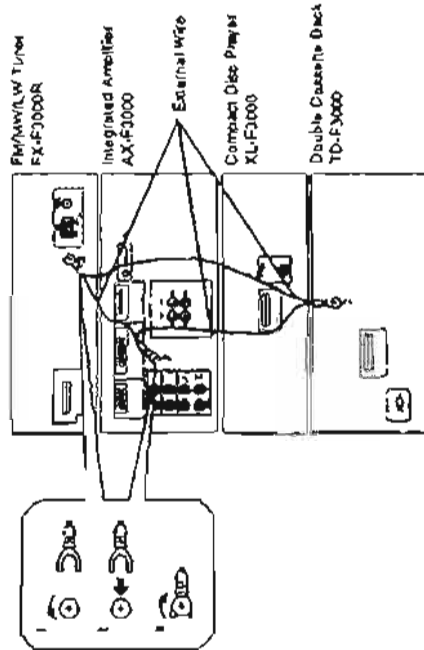


## CAUTION

First make all connections before plugging the System into the AC power outlet.

### Connecting the System Control Cords

Connect the components with the system control cords as illustrated below.

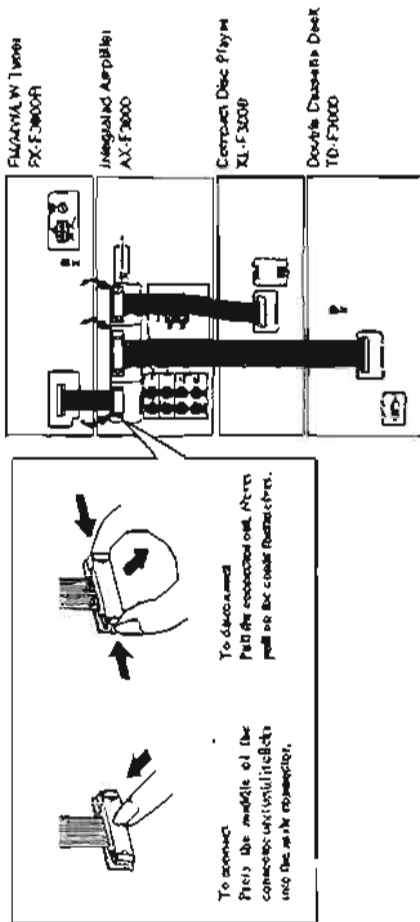

To connect: First the middle of the connector (indicated by the arrow) into the male connector.

To disconnect: Pull the connector out. After pull up the cover fasteners.

### Note


When connecting the components with the system control cords, make sure to connect the terminals having the same names like "CONNECTOR-A" or "CONNECTOR-B".

### Connecting the Speakers



To connect: Remove the insulation in the end of each speaker (right cable for L, and then, connect the speaker to the SPEAKERS terminals by using the tweezers.

For each speaker, connect the NEG (-) and POS (+) terminals on the new panel to the black (-) and red (+) terminal marked on the speaker.

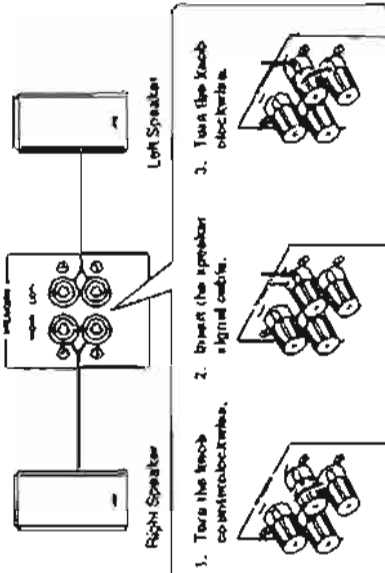

1. Turn the knob counter-clockwise.


2. Insert the speaker signal cable.

3. Turn the knob clockwise.

### CAUTIONS

- Use speakers with the same speaker impedance indicated by the speaker terminals.
- If the TV is connected near speakers, irregular cables may result in distortion, either TV may from the speakers.

### Connecting the FM Antenna

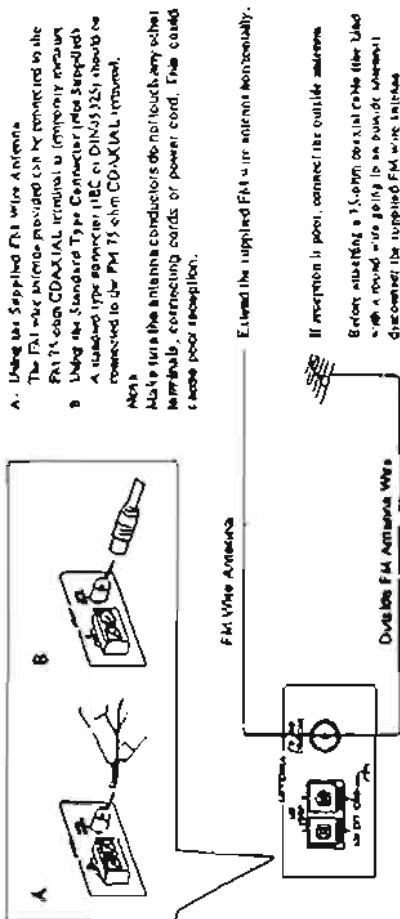

- A. Using the Supplied FM Wire Antenna  
The FM wire antenna provided can be connected to the FM ANTENNA terminal in (company name) using the Standard Type Connector (see Supplied).
  - B. Using the Standard Type Connector (see Supplied)  
A standard type connector (see CD-DIN4325) should be connected to the FM ANTENNA terminal.
- Notes:**  
Make sure the antenna conductor is not touching when terminal, connecting cord, or power cord. This could cause poor reception.


Elevate the supplied FM wire antenna horizontally.

If reception is poor, connect the outside antenna before attaching a 5 ohm coaxial cable (see User's Manual) as a ground terminal.

Disconnect the supplied FM wire antenna.

**CAUTION**  
To avoid shock, keep your hands away from metallic parts of the System, connecting cords, and the AC power cord.

### Connecting the AM (MW/LW) Antenna

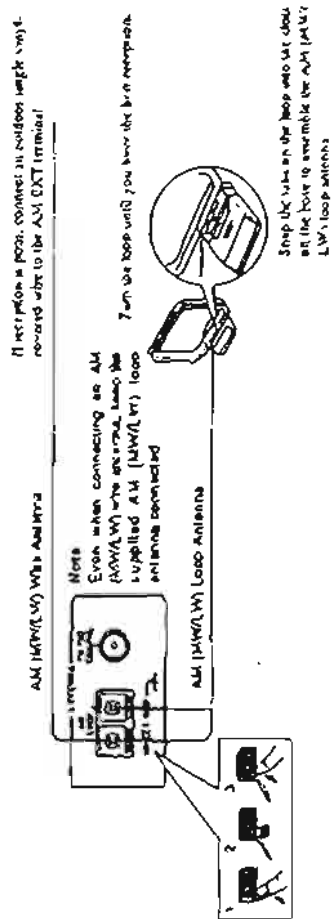


- If not from a poor, connect all cables with correct wires to the AM (MW/LW) terminal.
- Note:**  
Even when connecting an AM (MW/LW) wire antenna, make the supplied AM (MW/LW) loop antenna connected.
- Strip the wire on the loop antenna about 1 cm at the base to assemble the AM (MW/LW) loop antenna.

### CAUTION

First make all connections before plugging the System into the AC power outlet.


### Connecting the Minidisc Recorder and Other Equipment

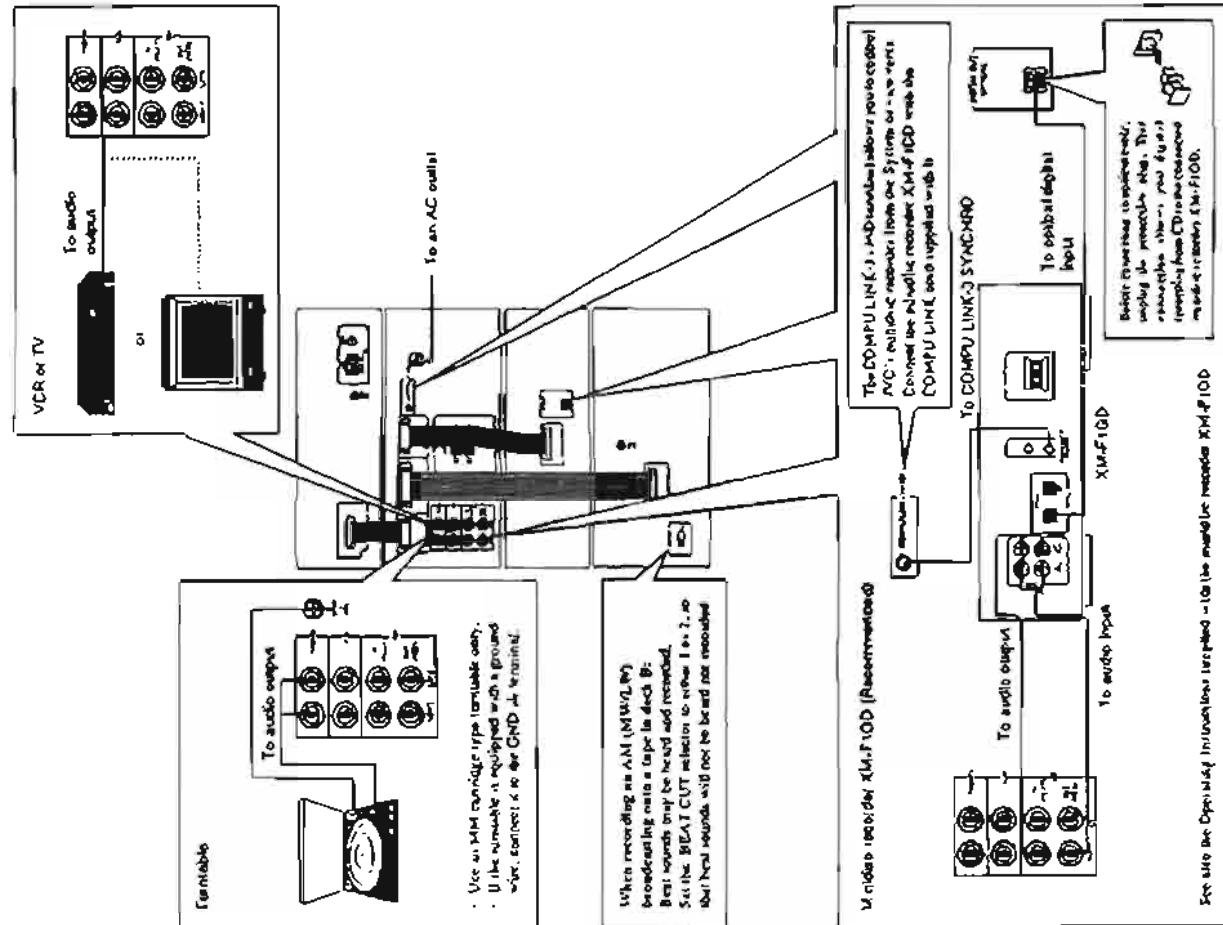


Switches, Buttons and Controls

Become familiar with the buttons and controls on the front panel before use.

Front Panel  
FM/MW/LW Tuner FX-F3000R

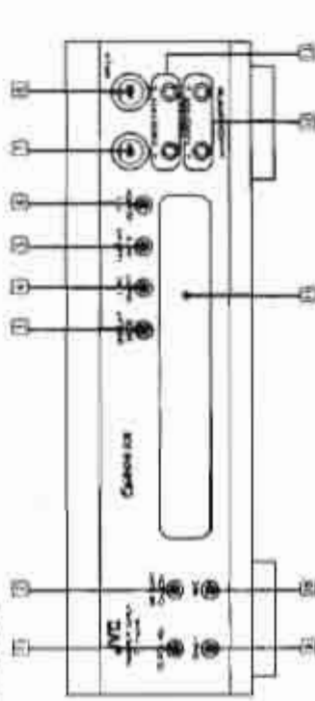

Integrated Amplifier AL-F3000

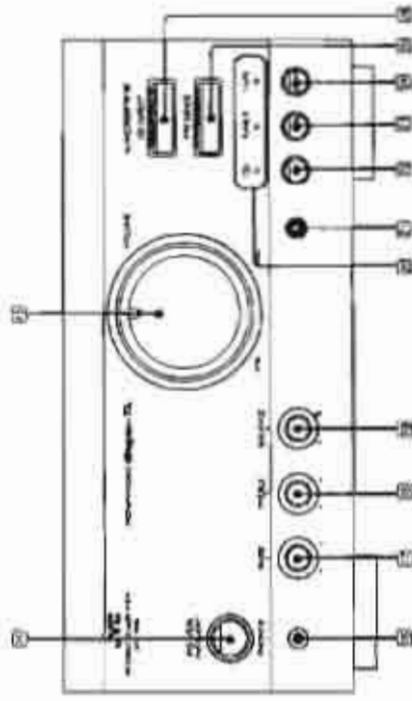

Refer to the page in parentheses for details.


FM/MW/LW Tuner FX-F3000R

- 1 CLOCK ADJ. button (29)
- 2 MEMORY/CANCEL button (13, 14)
- 3 DISPLAY MODE button (13)
- 4 EFM ON/OFF button (16)
- 5 TUNING/INFO button (16)
- 6 PTY SEARCH button (15)
- 7 FM button and indicator (13)
- 8 AM (MW/LW) button and indicator (13)
- 9 DIAL Y button (26)
- 10 REC button (26)
- 11 Display (10)
- 12 TUNING/TIMER  $\leftarrow / \rightarrow$  buttons (13, 24)
- 13 PRESET/PTY  $\leftarrow / \rightarrow$  buttons (14, 16)


Integrated Amplifier AL-F3000

- 1 POWER button and ON/STANDBY indicator (11)
- 2 VOLUME knob and indicator (11)
- 3 PHONES jack (12)
- 4 BASS control (11)
- 5 TREBLE control (11)
- 6 BALANCE control (11)
- 7 Source indicators (C/TUNE/TAPK)
- 8 Remote sensor
- 9 MD button and indicator (24)
- 10 AUX button and indicator (24)
- 11 PHONO button and indicator (24)
- 12 PRESENCE button and indicator (12)
- 13 CD CORRECT button and indicator (12)

Compact Disc Player X-F3000

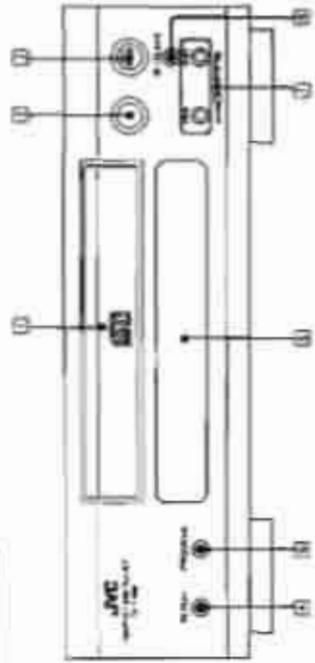

Double Cassette Deck TD-F3009

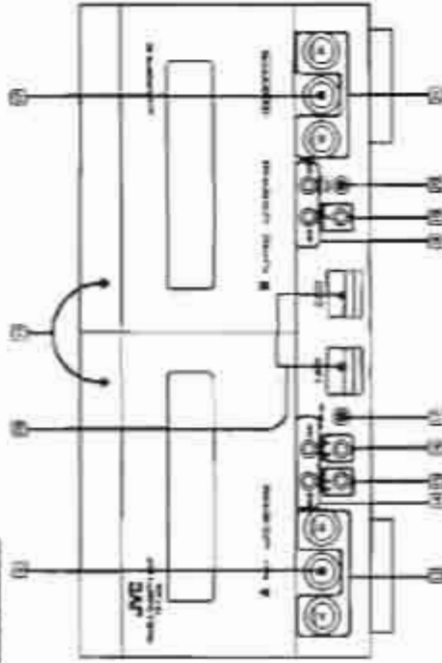

Refer to the page in parentheses for details.


Compact Disc Player X-F3000

- 1 CD tray (16)
- 2 EJECT button (16)
- 3 A (Clear/Close) button (16)
- 4 B (Play/Pause) button and indicator (16)
- 5 REPEAT button (20)
- 6 PROGRAM button (20)
- 7 Display (10)
- 8  $\leftarrow / \rightarrow$  (Skip Left/Skip Right or Fast Forward/Play Reverse) buttons (16)
- 9 (Play/CLEAR) button (16, 20)

Double Cassette Deck TD-F3009

- 1 EJECT button (for Deck A) (21)
- 2 EJECT buttons (21)
- 3 Cassette Holders
- 4 EJECT button (for Deck B) (21)
- 5  $\leftarrow / \rightarrow$  (Play Forward/Play Reverse) buttons and indicators (for Deck A) (21)
- 6  $\leftarrow / \rightarrow$  (Fast Left/Fast Right) buttons (for Deck A) (22)
- 7 REVERSE button and indicator (27)
- 8 DOLBY NR button and indicator (27)
- 9 DUBBING button (28)
- 10  $\leftarrow / \rightarrow$  (Fast Left/Fast Right) buttons (for Deck B) (20)
- 11 REC PAUSE button and indicator (26)
- 12 CD REC START button (27)
- 13  $\leftarrow / \rightarrow$  (Play Forward/Play Reverse) buttons and indicators (for Deck B) (21)

Remote Control

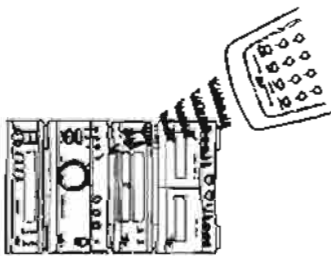

When using the Remote Control, aim it at the remote sensor on the front panel.

Refer to the pages in parentheses for details.

- 1 F1M MODE MUTE button (13)
- 2 PROGRAM button (19)
- 3 10 key pad (14, 19)
- 4 EON ON/OFF button (16)
- 5 DISPLAY MODE button (15)
- 6 CD player control section (18)
  - ▶ (Play) button (18)
  - (Stop) button (18)
  - ▶ (Play) button (for Deck A) (21)
  - ▶ (Play) button (for Deck B) (21)
  - ▶ (Play) buttons (21)
  - (Stop) button (21)
  - ▶ (Fast Left/Fast Right) buttons (22)
  - ▶ (Fast Left/Fast Right) buttons (22)
- 7 VOLUME button (+/-) (11)
- 8 SLEEP button (32)
- 9 POWER button (11)
- 10 CANCEL button (20)
- 11 PTY SEARCH button (16)
- 12 PTY SELECT button (16)
- 13 Source selecting buttons (TUNE/RPT/AUX/PHONO) (13, 20)
- 14 Cassette deck control section (21)
  - ▶ button (for Deck A) (21)
  - ▶ button (for Deck B) (21)
  - ▶ (Play) buttons (21)
  - (Stop) button (21)
  - ▶ (Fast Left/Fast Right) buttons (22)
  - ▶ (Fast Left/Fast Right) buttons (22)
- 15 REC PAUSE button (for Deck B only) (20)


Note

When you use the Remote Control, be sure which source the Remote Control is activated for.


- Before controlling the tuner and using the 10 key pad to select preset stations, press TUNER first on the Remote Control.
- Before controlling the CD player and using the 10 key pad to select CD tracks, press P. then M on the CD control section first.
- Before controlling the cassette deck, press E or C on the cassette deck control section first to select which deck to use.

Displays

Tuner Display

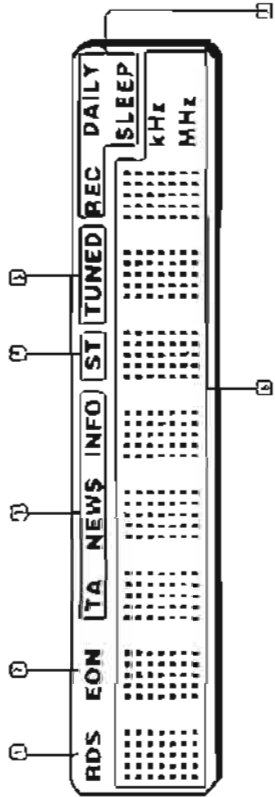

CD Player Display

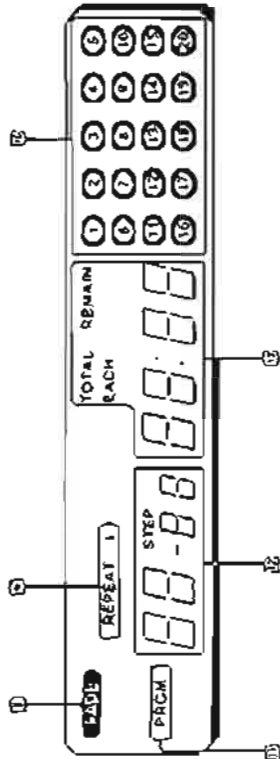

Refer to the pages in parentheses for details.

- Tuner Display**
  - 1 RDS indicator (16)
  - 2 EON indicator (16)
  - 3 EON Standby/reception indicator (TUNE/RPT/AUX/PHONO) (16)
  - 4 ST (Stereo) indicator (13)
  - 5 TUNED indicator (13)
  - 6 Clock frequency, tuner on line, timer-off line display (13, 20)
  - 7 Timer indicators (19, 30, 32)
- CD Player Display**
  - 1 FAD indicator (21)
  - 2 REPEAT indicator (20)
  - 3 Track number display
  - 4 PRGM (Program) indicator (19)
  - 5 Track and program step display
  - 6 Playing time, remaining time display



## Using the Amplifier

Here are some basic steps to set the System. If subscribing to a loan procedure, see later to you check back here.

### Turning the System On and Off

POWER  
indicator



#### Turning the System On

Press **POWER** on the **CONTRACTOR** subwoofer panel.

- The System comes on ready to do whatever is set during setup. The power up has done off.

#### Turning the System Off

Press **POWER** again so the **CONTRACTOR**'s indicator lights up and the display shows, except for the black indicator.

- The small window of the panel (11) will be lit by the indicator even in standby mode.
- To turn off the System completely, holding the **AC** power cord (into the **AC** socket) while you unplug the **AC** power cord, the power indicator of the panel will be stand in a few days.

### Controlling the Sound



BASS  
TREBLE



The same set of remote and hands control the remote on which which panel system is performing it.

#### Volume Control

Rotate the **VOLUME** knob clockwise to increase the volume, counter-clockwise to reduce it.

#### On the Remotes Control

Press **VOLUME +** to increase the volume, **VOLUME -** to reduce it.

#### CAUTION

Be sure to turn down the volume before using the System, at high volume ear damage may your hearing and your speaker.

#### Speaker Balance Control

If the sounds you hear from the right and left speakers are not well balanced, you can adjust the speaker output balance with the **BALANCE** control.

#### Bass Control

Rotate the **BASS** control knob via to increase bass reproduction, counter-clockwise to reduce bass reproduction.

#### Treble Control

Rotate the **TREBLE** control knob via to increase treble reproduction, counter-clockwise to reduce treble reproduction.

### Using the CD DIRECT Function



This function is useful when you want to listen to a CD with higher sound quality. The playback signal from the CD player is output directly without passing through the **BASS**, **TREBLE**, **BALANCE** control smoothly, and **PRESERVE** control.

To use this function, press **CD DIRECT** so that the indicator lights up.

To cancel this function, press **CD DIRECT** again so that the indicator goes off.

#### NOTE

- If you press **CD DIRECT** while this process is on, CD play starts with a CD loaded.
- The **CD DIRECT** function and the **PRESERVE** function cannot be used at the same time. If you press **CD DIRECT** while using the **PRESERVE** function, the **PRESERVE** function will be cancelled.

### Using the PRESENCE Function



This function is useful when you listen to music at low volume or with small speaker systems.

To use this function, press **PRESERVE** so that the indicator lights up.

To cancel this function, press **PRESERVE**'s again so that the indicator goes off.

#### NOTE

The **PRESERVE** function and the **CD DIRECT** function cannot be used at the same time. If you press **PRESERVE** while using the **CD DIRECT** function, the **CD DIRECT** function will be cancelled.

### Listening with Headphones

A standard pair of headphones can be connected to the **HEADPHONES** jack on the rear panel. The sound can be heard from the speakers.

#### CAUTION

Be sure to turn down the volume before connecting or putting on headphones, at high volume ear damage both the headphones and your hearing.

## Using the Tuner

You can listen in both FM and AM (5/100/W) modes. Stations can be tuned manually, automatically, or from preset memory. Before listening to the radio, check that both the FM and AM (MW/LW) antennas are fully extended. (See page 5.)


### One Touch Radio



Just press AM (MW/LW) to turn on the System and start playing the most recent AM (MW/LW) station tuned-in, or press FM to scan the most recent FM station playing. If you press TUNER on the Remote Control outlet, you can start playing the most recent station tuned-in.

Q You can switch from any other sound source to the tuner by pressing either AM (MW/LW) or FM.

### Tuning in Stations Manually

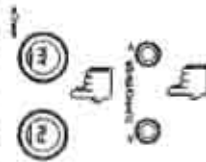

1. Press FM or AM (MW/LW) to turn on the System.
2. Press and release TUNING/TIMER < or > to move from station to station until you find the one you want.

OR

Hold down TUNING/TIMER < or > . The frequency starts changing on the display. As soon as a station is tuned in, the TUNED indicator lights up on the display and the frequency stops changing.

Repeat this procedure until a station you want is tuned in.

### Receiving in Stereo or Monaural



- When an FM stereo broadcast is heard by receiver or auto:
- Q Press FM MODE MUTE on the Remote Control so that "FM MONO" appears on the display and reception improves, although you lose the stereo effect. In this state, you will hear stereo when tuning into a station.
  - Q To restore the stereo effect, press FM MODE MUTE again so that the "FM AUTO" appears on the display. In this state, when a program is broadcast in stereo, the ST (Stereo) indicator lights up on the display and you will hear the stereo sound—when in monaural, the ST indicator goes off and you will hear the monaural sound. Furthermore, in this state you will see that some while tuning in stations.

### Presetting Stations in Memory

- Once stations are assigned to channel numbers, any of these stations can quickly be called up.
- Q You can preset a total of 40 stations, either FM or AM (MW/LW).
  - Q In order to use RDS (Radio Data System) functions, you need to preset stations in memory. Both PTY (Program Type) Search and EOH (End of Hour) functions (which will be explained later) are applicable only to the preset FM stations.
  - Q In some cases, the frequencies have been already programmed for the tuner since the factory examined the base preset functions before shipment. This is not a malfunction. You can preset the stations you want with memory by following the presetting method.

#### MEMORY/AMT

When you want to preset FM stations in memory, Press FM MODE MUTE on the Remote Control so that "FM AUTO" appears on the display before presetting stations.

1. Tune in the station you want to preset (see above).
2. Press MEMORY/CANCEL. "num. P..." appears on the display for about 3 seconds.



3. Press PRESETTY < or > to assign a channel number while "P..." is blinking on the display.
4. Press MEMORY/CANCEL. "num. P..." appears on the display. If you press < or > again on a valid number, the new station stores the previously entered one.
5. Repeat steps 1 to 4 for each station you want to store in memory.

#### CAUTION

If the System is unplugged or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

### Tuning in Preset Stations

This method is possible after presetting stations by yourself.

1. Press FM or AM (MW/LW).

2. Press once and release PRESETTY > (or <) to go to the next (or previous) preset station, or hold PRESETTY < or > to cycle through the preset station; release the button when the preset station you want appears on the display.

The stations you have not preset are skipped.

### You can use the Remote Control to tune in preset stations

1. Press TUNER so that you can receive the most recent station tuned in.
2. Select the station by entering the preset number you want using the 10 key pad.
  - Example: For number 5, press 5. For number 13, press + (0) then 5. For number 20, press + (0) then 10.
  - If you enter the station you have not preset, "skipped" appears on the display.

### Erasing the Preset Stations

You can also use the MEMORY/CANCEL button to erase the preset stations.

1. Hold down MEMORY/CANCEL for about 5 seconds. "num. P..." appears on the display.
2. Press PRESETTY < or > to assign a channel number while "P..." is blinking on the display.
3. Press MEMORY/CANCEL. "skipped" appears on the display.
4. Repeat steps 1 to 3 for each station you want to erase.





RDS is a broadcasting service a growing number of FM stations are now providing. It allows the FM station to send additional signals along with their regular program signals. For example, the station will identify station name and information about what type of program they broadcast, such as sports or music.

When used in an FM station providing the RDS service, the RDS indicator lights up on the display, the status frequency (and has the station name if also is displayed).

One additional RDS service is "Enhanced Other Networks (EON)". This allows the user to automatically switch to a program of your choice when one starts on your broadcast area.

D. Not all FM stations provide RDS service, so do all RDS related pre-sets the same services. If it doesn't, check with local radio stations for details on RDS services in your area.

**Note**  
RDS may not connect correctly if the station turned it not transmitting data properly or if the signal strength is weak.

**What Information RDS Can Provide**

The following RDS services are available and you can see the following RDS information by pressing DISPLAY MODE.

**RDS Service Available**  
Pi (Program Service name)  
Identifies each station by a name.

**Clock Time** (Non-RDS service)  
Displays the time.

**RT (Radio Text)**

Allows the RDS station to send text messages that appear on the lower display.

**PTY (Program Type)**

Identifies the type of RDS program.

D. When RDS information is being received from a station, "RDS", "RDS PTY", "RDS PTY", or "RDS PTY" may appear on the display.

The program type set M follows:


- TRAFFIC: Traffic announcements (usually under "TA")
- NEWS: News
- INFO: Program on actual service, weather forecast, etc.
- POP M: Pop music
- ROCK M: Rock music
- M.O.R. M: Musical channel music (usually called "happy listening")
- LIGHT M: Light music
- CLASSIC: Classic
- OTHER M: Other music
- AFFAIRS: Typical program reporting on current news or affairs
- SPORT: Sports event
- EDUCATE: Educational program
- DRAMA: Radio plays
- CULTURE: Programs on cultural or religious matters
- SCIENCE: Programs on natural sciences and technology
- VARIED: Other programs like comedies or cartoons
- NONE: Unlabeled

**ALARM:** Emergency broadcast

**Status Frequency** (Non-RDS service)  
Displays station frequencies.

**Preset Channel Number** (Non-RDS service)  
Displays preset channel numbers.

**Note**  
If you press DISPLAY MODE while receiving non-RDS FM stations or AM (MW/LW) stations, the display only shows the clock time, station frequency, and preset channel number in sequence.

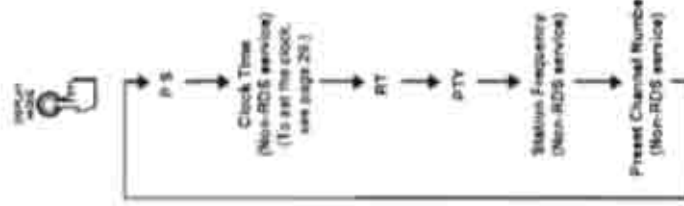

**Searching for Programs by PTY Codes**

One of the advantages of the RDS service is that you can locate a particular kind of program by specifying the PTY (Program Type) code.

D. PTY Search can be used even while receiving AM (MW/LW) broadcasts or while playing the other source.

D. PTY Search is applicable to preset FM stations only.

1. Press PTY SEARCH  
"PTY" and "search" alternate on the display.
2. Press FREQUENCY < or > (or PTY SELECT on the Remote Control) to select a PTY (Program Type) code.  
When you press FREQUENCY < or > on the lower panel, the PTY code changes in the frequency order (when using the Remote Control, they change only rightwards).  
TRAFFIC → NEWS → INFO → POP M → ROCK M → M.O.R. M → LIGHT M → CLASSIC → OTHER M → AFFAIRS → SPORT → EDUCATE → DRAMA → CULTURE → SCIENCE → VARIED → NONE → (back to the beginning)
3. Press PTY SEARCH again while the selected PTY code remains on the display.  
Searching starts.  
The selected PTY code blinks during PTY Search.

**Notes**

- Once the station broadcasting the selected PTY code is found, searching stops. Then the station is turned on and the preset channel number appears on the display. The preset channel number stays blinking for 10 seconds before switching auto.
- If you press PTY SEARCH again during this period, search for the same PTY code will repeat. PTY Search is only completed when the indicated preset channel number starts blinking and stops.
- If station broadcasting a program of the selected PTY code is not found, the RDS appears on the display after going through the preset channel.

**Setting EON Standby Reception**

With the EON (Scheduled Other Networks) code, the system can perform a standby reception when enable you to obtain desired PTY code's vehicle busy other station.

D. The EON indicator will light up only while receiving stations with an EON code.

D. You can set EON Standby reception with either kind (FM or AM (MW/LW)) received.

D. EON Standby reception is not applicable in the following cases.

- While playing the other source.
- While receiving the RDS FM source and AM (MW/LW) sources (EON indicator will not light up).

1. Press EON ON/OFF so that "EON MODE" appears on the display.  
Indicator of the PTY code(s) (TA/NEWS/INFO), previously stored lights up.


2. Select PTY code(s) you want by pressing TA/NEWS/INFO.  
TA: Traffic announcements at your site  
NEWS: News  
INFO: Programs on actual service, weather forecast, etc.

Each time you press TA/NEWS/INFO, the EON Standby reception (TA/NEWS/INFO) indicator changes as follows:

- TA NEWS INFO → TA INFO → NEWS
- TA NEWS INFO → TA INFO → NEWS INFO → TA NEWS

→ (back to the beginning)

As soon as your selection is entered, the preset goes into the EON Standby reception mode.

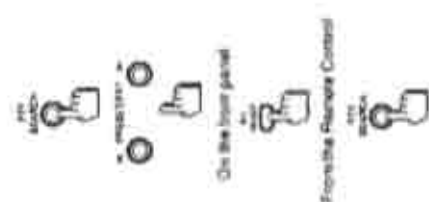

## Using the CD Player

Note: See the back of things you need to know to how to play a CD and locate the different sections on it. Each section is called a track, so when we are referring about locating a track, we are also talking about how you find a certain song or performance.

### Basics of Using the CD Player

- The quickest way to start a CD is with One Touch Play.
- Press **▶** (Play) on the CD player or **▶** on the CD player control section of the Remote Control.
- If a CD is already loaded, the System automatically starts playing the CD.
- If no CD is loaded, the CD tray starts out so you can put in a CD, which prompts take up. Then press **▶** (Play) on the CD player control section. The tray opens and the CD starts playing.
- If you press **▶** (Open), the System automatically turns on and the CD tray opens out.



**IMPORTANT**  
When you use the Remote Control, Remember you have to press **▶**, then **▶** on the CD player control section to activate the 10 Key pad for the CD player.


### Playing a CD



- Press **▶** (Open).
- Put a CD, with printed side up, into the tray.  
When using an 8 cm CD, place it on the inner circle of the tray.

#### CAUTION

Place the disc correctly on the circle of the tray.

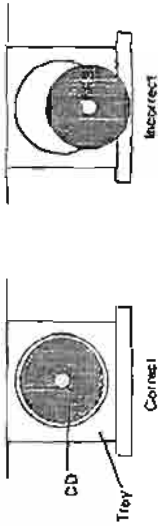

On the front panel



From the Remote Control

- Press **▶** (▶) on the CD player control section of the Remote Control.
  - The CD tray closes automatically.
  - The display shows the track being played and the length of time since it started.

To stop the CD, press **■** (CLEAR) or **■** on the CD player control section of the Remote Control.

To pause the play, press **⏸** (Pause) on the front panel while the CD is playing.  
To resume playing, press **▶** (Play) again. (The Pause function cannot be used while **▶** on the CD player control section of the Remote Control.)

To remove a CD, press **▶** (Open), take the CD out, and press **▶** (Close) again to close the tray. Keep the tray closed, except during loading and unloading, to protect the mechanism from dust and damage.

### Finding the Track or a Particular Point You Want

You can easily find the CD track and particular point you want by the following procedure:

- Each time you press briefly and release **◀** (Stop Left) or **▶** (Stop Right) the track changes by one.
- Press and release **▶** to go ahead one track at a time.
- Press and release **▶** to go back one track at a time.
- Hold down **▶** or **▶** (when the CD player is stopped) allows you to change tracks continuously.
- Hold down **▶** or **▶** (Fast Forward or Fast Reverse) on the front panel during play will fast forward or fast reverse the CD so you can quickly find the particular point of a track you want to listen to. (The Fast Forward and Fast Reverse functions cannot be used from the Remote Control.)



While the tuner is for EON Standby reception, the display changes as follows:

- While waiting for EON data of your selection.




#### Note

- If no EON data is received, the tuner remains in this mode.
  - If the information you are waiting for is available from the current station, the indicator of the received PTY code will blink.
- When the information of selected PTY data is received, the tuner tunes into the station sending the PTY data (found in memory).




- When the station is locked in, the indicator of received PTY code starts blinking.



If the reception is failed, the previous station will show "EON lock" (mark on the display), and then, the indicator of the PTY code starts to blink "EON lock" again. The tuner then goes back to the station on memory level.

- When broadcast of the selected PTY code ends, "EON end" appears and the tuner automatically goes back to the station previously tuned in.



To select the EON Standby reception, press **▶** (EON) or **▶** (EON) while receiving the station tuned by EON Standby reception.

#### Note

- EON broadcast of some stations may not be compatible with the System. In the case of an incompatible EON broadcast, the EON indicator on the display may not light up.
- While receiving a program of the selected PTY code(s) by EON Standby reception, the station will not change to other stations even if a program of the same type is available from them.
- When a Great Broadcasting on display starts, depending on the EON Standby reception is operating, the EON Standby reception will be cancelled, and the source selected by the tuner will be played.
- While a timer (recording or daily) is operating, the EON Standby reception will not function.

### ALARM Function

- When the ALARM (Emergency) broadcast is being received, the tuner will monitor broadcast of the ALARM signal. "ALARM" and the station frequency will alternate on the display. (1) Your vehicle's ALARM function cannot work in the following cases:
  - While playing the other station.
  - While receiving non-BBS FM station and AM (MW/MW) station.

**Programming the CD from the front panel by the following procedure:**

1. **Press PROGRAM.**  
The PRGM indicator lights up on the display.
2. **Press ◀▶ or ▶▶ (Skip Left or Skip Right) to select the track you want.**
3. **Press PROGRAM to store the selected track.**
4. **Repeat steps 2 and 3 until you enter all the tracks you want to play.**  
You can repeat the same tracks if you want.
5. **Press ▶ (Play) to start playing the tracks in the order you have programmed.**



To stop the CD during programmed play, press ■/CLEAR.

To erase the program, press ■/CLEAR after you stop playing.

Before you start playing, you can do the following:

- If you want to change the entire program, press ■/CLEAR on the front panel (or PROGRAM on the Remote Control). You can also erase the entire program by pressing ◀ (Open).
- If you want to erase the last track, press CANCEL on the Remote Control. Each time you press CANCEL, the last track in the program will be erased.
- To add a track to your program, just press the number you want to add using the Remote Control. (This is also possible during play.)

**Repeating a Selection or the Entire Disc**

You can have either all tracks or the individual track currently playing repeat as many times as you like by pressing REPEAT.

- Each time you press REPEAT, it cycles in the following order:


- REPEAT → REPEAT 1 → Off (The REPEAT indicator goes off.) → (go back to the beginning)
- REPEAT     Repeat all tracks in order or according to the program you have made.
- REPEAT 1     Repeat the currently playing track.
- Off             Repeat is canceled.



**Locating a Track with the Remote Control Directly**

Using the 10 key pad on the Remote Control allows you to go directly to the beginning of any track.

1. **Press ▶, then ■ on the CD player control section.**  
This activates the 10 key pad for controlling the CD player.
2. **Enter the number of the track you want using the 10 key pad.**  
Example: For track 5, press 5. For track 15, press +10 then 5. For track 20, press +10 then 10.
3. **As long as a CD is loaded and the System is on, the CD starts playing from the selected track.**

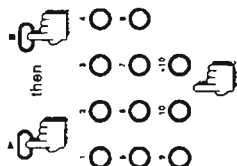


**Programming the Playing Order of the Tracks**

You can arrange the tracks to play in any order you like. The Remote Control is very useful for this because you can select tracks by number with the 10 key pad. You can also use the buttons on the front panel.

- You can program up to 32 tracks in any desired order.
- You can only make or change a program when the CD player is stopped.

**Programming the CD track order from the Remote Control by the following procedure:**

1. **Press ▶, then ■ on the CD player control section.**  
This activates the 10 key pad for controlling the CD player.
2. **Press PROGRAM.**  
The PRGM indicator lights up on the display.
3. **Press the number of the first track, then the number of the second track, and so on until you enter all the track numbers you want to play.**  
• Example: For track 5, press 5. For track 15, press +10 then 5. For track 20, press +10 then 10.  
• You can repeat the same tracks if you want.
4. **Press ▶ on the CD player control section to start playing the tracks in the order you have programmed.**

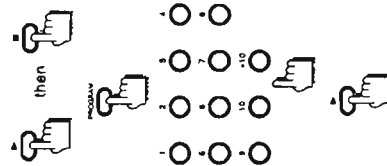

To stop the CD during programmed play, press ■.

To erase the program, press PROGRAM after you stop playing.

## Using the Cassette Deck (Listening to a Tape)

You can play, record and dub audio tapes by using the cassette deck.

- To record or dub, see Recording on page 25.
- With Automatic Tape Type Detection, you can listen to Type I, II and IV tapes without changing any settings.
- Most tapes are now mounted with the Dolby NR system (B or C), so first check which type of the Dolby NR system is used on the tape.

### WARNING

When you use the Remote Control,

Remember you have to press **▶** or **▶** on the cassette deck control section to select which deck to use.

### One Touch Play



### Regular Play




When power is already on, you can use these basic procedures:

1. Press EJECT for the deck you want to use.
2. When the cassette holder opens, put the cassette tape in, with the exposed part of the tape down toward the base of the holder.  
If the cassette holder does not open, turn the System off once and turn it on again, then press EJECT.
3. Close the cassette holder gently.
4. Press DOLBY NR repeatedly to set the same Dolby NR system as was used for recording the tape.



On the front panel



From the Remote Control

To stop playing, press **◻** on the cassette deck control section of the Remote Control.

The indicator on the buttons (▶ or ◻) stops flashing, showing which way the tape is running last.

To remove the tape, press EJECT.

### Fast Left and Fast Right


- While the tape is stopped, press **◀** and the tape will wind rapidly onto the left side of the cassette tape without playing.
- While the tape is stopped, press **▶** and the tape will wind rapidly onto the right side of the cassette tape without playing.

### CAUTION

The use of C-120 (120 minutes turn around) or MiniDisc tape is not recommended, since characteristic deteriorations may occur and these tapes easily jam in the pinch and the regular

### Music Scan

Shows the direction the tape runs.

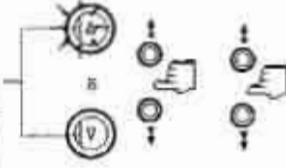

You can use Music Scan to locate the beginning of a song. Music Scan searches for blank portions and usually repairs remoted songs. One plays the next song.

### Finding the Beginning of the Next Song

During play, press **◀** or **▶** in the same direction as the tape play. Searching stops automatically at the beginning of the next song, and the next song starts automatically.

### Finding the Beginning of the Current Song

During play, press **◀** or **▶** in the opposite direction to the tape play. Searching stops automatically at the beginning of the current song, and the current song starts automatically.


### Notes

- Music Scan works by detecting a second long blank/between each song, so it will not work well in the following cases:
  - No blank at the beginning of a song.
  - Noise (often caused by much use or poor quality dubbing) which fills the frame with noise.
- Long, very soft passages or pauses in a song.
- Music Scan truly works on one tape at a time.
- If you use Music Scan on deck A during recording on deck B, deck B enters a recording pause mode (except during VCR to Tape Recording).
- If you start recording on deck B while Music Scan is used on deck A, Music Scan stops

# Listening to the Turntable or Other Equipment through Your System

By playing the sound from a minidisc recorder, a turntable or other connected equipment through the System, you can often dramatically improve the quality, and gain control over how the music or program sounds.


1. Connect the other equipment as shown on page 6.
2. Turn down the volume using the VOLUME control on the front panel (or VOLUME - on the Remote Control).
3. Press MD, AUX or PHONO. The System is turned on and MD, AUX or PHONO indicator lights up.
4. Switch on the connected equipment and start playing. See the manuals supplied with the other equipment.

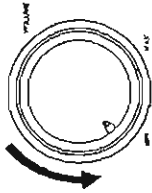

On the front panel



From the Remote Control



To cancel the MD, AUX or PHONO setting, change the source by starting any one of sound sources, such as the tuner or CD player.

## Using JVC's Minidisc Recorder Connected to the COMPU LINK-3, MD Terminal

When your minidisc recorder is JVC's X-M.FIGD, you can connect it to the COMPU LINK-3, MD terminal. You can control the minidisc recorder from the System or vice versa. About the connection, see page 6.

### What you can do:

- A automatic power on/off function.
- When you turn on or off the System, the minidisc recorder automatically turns on or off.
- Playing the minidisc recorder.
- When you press MD on the System or >|< (Play) on the minidisc recorder in standby mode, the System and minidisc recorder turn on and start playing if a minidisc is already loaded.

Recording from the minidisc recorder, see page 26.

### Recording onto the minidisc:

1. Prepare the CD or cassette tape you want to record from.
2. Prepare the minidisc in the minidisc recorder.
3. Press REC PAUSE on the minidisc recorder.
4. Press >|< (for the CD) or <- / > (for the cassette tape) on the front panel. As soon as the System starts playing, the minidisc recorder starts recording.



## Other Useful Features of the Cassette Deck

### Reverse Mode

Use Reverse Mode to make the tape automatically reverse at the end of a side and start playing the other side.  
Press REVERSE from on when the Indicator is BL to off and vice versa.



### Continuous Play (only available when Reverse Mode is on)

Use Continuous Play to play the tapes in both deck A and B.

### When Reverse Mode is set to on (the indicator is lit):

When the reverse side (C) of a tape finishes playing on one deck, the System always checks to see if a tape is in the other deck. If there is, it automatically starts playing. This happens regardless of which deck starts first.

### Dolby Noise Reduction

Press DOLBY NR to switch Dolby Noise Reduction (B or C) on (the selected one's indicator lights up) or off (both indicators go off). If a tape is recorded with the Dolby NR system, playing it back with the same Dolby NR on, it will reduce tape noise and improve the clarity of the sound.



### Dolby HX PRO

Dolby HX PRO provides linearity in high-range frequency response during recording. Tapes recorded with this System retain the same characteristics even played back with any other deck. With Dolby HX PRO, the effective bias current is controlled in response to fluctuations in high-range frequency of the input signal, ensuring dynamic sound recording with minimal distortion and noise.

Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Removing one cassette tape from any of the sound sources is why the System does most of the work. You have a tape in deck B. Have the source ready, make one or two settings, and you are ready to record.

For each source the procedure is a little different and now we explain just what to do for each one. If you forget, just come back to the each section. But first, here are a few things to make your recordings better:

### Things to Know before You Start Recording

- If you're unable to record or playback copyrighted material without the consent of the copyright owner.
- To reduce hiss noise, press **DOUBLY ME** to select either B or C. (See page 23.)
- The recording level, which is the volume at which the new tape is being made, is automatically set correctly, so it is not affected by the **VOLUME** control on the front panel or **VOLUME +/-** on the Remote Control. Thus, you can adjust the amount you are actually recording without changing the recording. If you do not want to listen to the sound, you can turn down the volume using the **VOLUME** control on the front panel or **VOLUME +/-** on the Remote Control.
- The **BANQUETABLE** control, and the **CD DIRECT/PRESENCE** function cannot be used for recording.
- Cassette tapes have a special feature as you will not intentionally record over a tape you wish to preserve. Two small tabs on the left, one for side A and one for side B, can be removed to prevent erasure of the recording. To record on a cassette with the tabs removed, you must cover the holes with tape first. However, when a Type B tape is used, only one pair of the holes as shown below, next to other pair (if the hole is used to denote the tape type).



- Type 1, II and IV tapes can be used for recording.

#### Caution

If recordings you make have excessive noise or static, the System may be too close to a TV during the recording. Either turn off the TV or increase the distance between the TV and the System.

This is the basic method for recording any source. The System also has special ways for recording CD to tape, and tape to tape, which save you time and effort, as well as give you some special effects. However, when you start to add a selection to a tape you have made, or are combining selections from several sources on one tape, the method we describe here. You can record from a transfer recorder, a suitable or other source with this procedure.

### Recording any Sound Source to Tape

Follow the procedure to record from any sound source into a tape in deck B.


#### IMPORTANT

When you use the Remote Control

Remember you have to press **OK** or **ENTER** on the cassette deck control section to select which deck to use. Press **OK** first before starting the following procedure.



On the front panel



From the Remote Control

1. Put the cassette tape to record onto into deck B.
2. Press **<** (or **>**) on the cassette deck control section of the Remote Control (or **<** or **>** on the cassette deck control section) to select the side for recording on deck B.
  - When you select record on the front side (A), press **>** (or **<**) on the cassette deck control section, then **OK** (or **ENTER**) on the cassette deck control section.
  - When you want to record on the reverse side (B), press **<** (or **>**) on the cassette deck control section, then **OK** (or **ENTER**) on the cassette deck control section.


### 3. Press REC PAUSE

The REC PAUSE indicator lights up.

When you want to record on both sides of a tape, press **REVERSE** on the cassette deck or on Remote Mode on and be sure to start recording from the front side (A). If you start recording from the reverse side (B), the deck stops when recording the reverse side (B) before going to the front side (A), even if Remote Mode is on.

4. Prepare the source, for example, tuning in a radio station, turning on the connected equipment and then, start playing the source.
  - When you want to record from a CD player or similar recorder, you need to do the next step.

• When you want to record from AVC, a satellite recorder, XM/FM CD connected with COMPU LINK, and, you do not want to do the next step when recording from a source.



On the front panel



From the Remote Control

5. To start recording, press either **<** (or **>**) on the cassette deck control section of the Remote Control or **>** (or **<**) on the cassette deck control section (the same button you have pressed in step 2).

To stop recording any time during the process, press **D** or **STOP** on the cassette deck control section.

To pause recording any time during the process, press **REC PAUSE** again.

To resume recording, press **<** (or **>**) (or **<** (or **>**) on the cassette deck control section of the Remote Control) (the same button you have pressed in step 2).




CD to Tape Recording

Everything on the CD goes onto the tape in the order it is on the CD or according to an order you have set in a program. To make a program, see page 19. During "CD to Tape Recording", you cannot change the sound sources.

IMPORTANT

When you use the Remote Control, Remember you have to press **REVERSE** or **STOP** on the cassette deck control section to select which deck to use. Press **REVERSE** first before starting the following procedure.

- Put the cassette tape in deck B. Press **REVERSE** so that the **REVERSE** indicator light is up if you want to record on both sides of the tape.
- Load the CD into the CD Player. If the CD is already loaded, be sure the System is on.

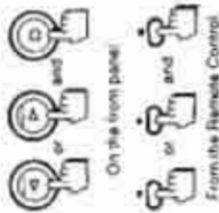

- Press **REVERSE** (or **STOP** on the cassette deck control section of the Remote Control) or **REVERSE** (or **STOP** on the cassette deck control section) and **CD** (or **REVERSE** on the cassette deck control section) to select the side for recording.
  - When you want to record on the front side (A), press **REVERSE** (or **STOP** on the cassette deck control section), **CD** (or **REVERSE** on the cassette deck control section).
  - When you want to record on the reverse side (B), press **REVERSE** (or **STOP** on the cassette deck control section), **STOP** (or **REVERSE** on the cassette deck control section).

- Press **CD REC START** on the cassette deck. The **FADE** indicator light is up on the CD display.
  - As soon as deck B starts recording, the CD starts playing. At the end of the tape, the System automatically goes back to the beginning of the last track and immediately starts again gradually fading out at the end. If you set **Reverse Mode** on, the reverse side (B) starts with the last track on the front side (A) and will be faded out at the end again (in 10 second blocks is created on the beginning of the reverse side (B)).
  - For "CD to Tape Recording" using more than one disc, use a blank tape. If you use a pre-recorded tape, pre-recorded material may not be erased between newly recorded tracks.

To stop recording any time during the process, press either **CLEAR** on the CD player (or **STOP** on the CD player control section of the Remote Control) or **STOP** on deck B. When you press **CLEAR** (or **STOP** on the cassette deck control section), you can make a 4 second blank at the end of recording.

CAUTION

(Skip Left or Right) and REPEAT will work during "CD to Tape Recording". If you press these buttons, recording will be interrupted.

Tape to Tape Recording (Dubbing)

Recording from one tape to another is called dubbing.

- Dolby NR is inactive in dubbing mode regardless of the setting of the DOLBY NR. The deleted tape automatically contains the same processing as the source tape. The DOLBY NR indicator goes off automatically.
- It is preferable that the tape type (Type I, II and IV) you record from be the same as the tape type you record onto.
- To dub both sides of a tape, start from the front side (A) for both deck A and B, and press **REVERSE** so that the **REVERSE** indicator light is up.

- Put the cassette tape you want to copy from into deck A for playback.

- Put the cassette tape you want to copy onto into deck B for recording.
  - The cassette tape in deck B will be erased as the new sound from the cassette tape in deck A is recorded.




- Press **DUBBING**. Deck A starts playing and deck B starts recording.
  - When dubbing, you can also listen to the original source (such as the radio or the CD player).

To stop dubbing, press **STOP** for deck B.

Recording selections from several different tapes

When you want to take advantage from several different tapes and combine them on one tape during dubbing, follow these steps:



- Press **STOP** on deck A. This causes deck A to stop, so you can change tapes, and deck B makes pauses.
- Change the cassette tape in deck A.
- Press **DUBBING** to start deck A playing and deck B recording again.

## Using the Timer

The timer lets you connect recording and playing sources automatically. Three types of timers are available:

- **Recording (REC) Timer**—Automatically records or plays radio broadcasts that work only once.
- **Daily Timer**—The System turns on and plays a source as a particular time every day.
- **Sleep Timer**—Full auto and have your System turn off automatically after a certain length of time.

### Setting the Clock

The timer depends on the clock. If the clock is right, the timer will work like you expect, but if the time is incorrect on the clock, then the timer will also be incorrect.

**Special Notice:** The clock must be set, or the timers cannot be set.

So let's set the clock first.

- You can set the clock whether the System is on or off.

#### 1. Press CLOCK ADJ.

- Pressing > increases the time, and pressing < decreases it.


#### 2. Press MEMORY/CANCEL.

- Set the minutes by pressing TUNING/TIMER < or >.

Pressing > increases the minute, and pressing < decreases it.

#### 3. Press MEMORY/CANCEL again.

The clock is set and starts from two second.



### Setting the Recording (REC) Timer

When the recording timer you can make a tape of a radio broadcast automatically even when you are not there to run the System. For the timer to work correctly, you need to make sure that the tape you want to record onto must be in deck B when you want to record.

- You can set the recording timer whether the System is on or off.
- When you want to record on both sides of the cassette tape, press REVERSE, with the power turned on, so that the REVERSE indicator lights up.

#### 1. Press REC.


The REC indicator blinks on the timer display.

#### 2. Set the time you want to start recording.

Use TUNING/TIMER < or > and MEMORY/CANCEL, just like setting the clock. See instructions above.

#### 3. Set the time you want to stop recording.

Use TUNING/TIMER < or > and MEMORY/CANCEL, just like setting the clock. See instructions above.

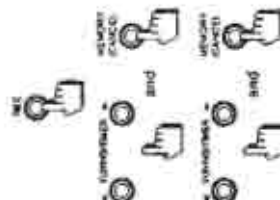

#### 4. Select a preset channel with PRESET/PTY < or > and MEMORY/CANCEL.

#### 5. Select the equipment (either deck B or minidisc recorder XM-F100) you want to use for recording with TUNING/TIMER < or > and MEMORY/CANCEL.

Each time you press TUNING/TIMER < or >, the System gives you one of the following:

**TAPE** Records onto a tape.

**MINI** Records onto a minidisc.

For connecting and operating the minidisc recorder, see page 6 of this manual and the manuals supplied with the minidisc recorder.

When you select TAPE as the equipment, you need to check that tape functions it connect. This is important especially when Reverse Mode is off.

Set Reverse Mode on and start recording from the front side (A) if you want to record on both sides of the tape.

#### 6. Press REC again.

The REC indicator stops blinking and remains lit. The display, then, shows the settings you have done in step 2 to 5.

- Notice that the REC indicator lights up on the display whenever the timer is set.

• A few seconds before the on time for the recording, the System automatically turns on D.I is off and the REC indicator blinks on the display. When the on-time comes, recording starts.

When the off-time comes, recording stops and the System automatically turns off.

- Clear the recording timer has worked, the REC indicator goes off. (The recording timer also turns off. However, the contents stored in the tape will not be erased.)

#### 7. Adjust the volume with the VOLUME control (or VOLUME - or + on the Remote Control).

To cancel the recording timer, press REC so that the REC indicator on the display goes off.

To change the timer settings, repeat the setting procedure from the beginning and change the contents as you wish.

To erase all the contents stored in the timer:

1. Press REC so that the timer for the timer blinks on the display.
2. Hold down MEMORY/CANCEL.
3. Press REC again.

#### Note

If you change the source while the recording timer is operating, the recording timer will be canceled but the recording continues.

#### CAUTION

If the System is unplugged or if a power failure occurs, the timer setting will be erased. If settings are erased, reset the timer settings.

### Setting the Daily Timer

With the timer you can play the sound source at the specified time without recording items. The daily timer executes the timer operation at the specified time every day.

- You can set the daily timer whether the System is on or off.

#### 1. Press DAILY.

The DAILY indicator blinks on the timer display.

#### 2. Set the time you want the sound source to turn on.

Use TUNING/TIMER < or > and MEMORY/CANCEL, just like setting the clock.

(continued)



3. Set the time you want the second source to start off.  
Use the TUNING/TIMER < or > and MEMORY/CANCEL for the setting the clock.

4. Select the second source to play with TUNING/TIMER < or > and MEMORY/CANCEL.  
Each time you press TUNING/TIMER < or >, the System gives you one of the following:

- FM... or Tuner also a preset source
- CD Plays a CD from the beginning
- TAPE Plays a tape
- MD Plays a recorded memory from the beginning

For connecting and operating the multi-disc recorder, see page 6 of this manual and the manual supplied with the recorder recorder.

- When you select the timer at the source, you need as designated preset station by pressing **RESET/TIME** < or >.
- When you select **TAPE** at the source:
  - You need to check the tape direction is correct. This is especially especially when Reverse mode is off.
  - Check if the program, as if tapes are in both decks, the type of deck B plays first.

5. Press **DAILY** again.

The **DAILY** indicator stays flashing and appears in the display. Then, shows the settings you have done in step 2 to 4.

- Press in the **DAILY** indicator lights up on the display whenever the timer is set.
- A line appears below the no timer for the timer. (The System automatically turns on if it is off with the **DAILY** indicator blinks on the display. When the no-timer comes, playback starts using the selected source. To turn the off-timer timer, playback stops and the System automatically turns off.



On the front panel

From the Remote Control

6. Adjust the volume with the **VOLUME** control (or **VOLUME** ← or → on the Remote Control).

To cancel the daily timer, press **DAILY** on the **DAILY** indicator on the display goes off.

To change the timer settings, repeat the setting procedure from the beginning and change the contents as you want.

To erase all the contents stored in the timer

1. Press **DAILY** so that the timer is on the timer (status) on the display.
2. Hold down **MEMORY/CANCEL**.
3. Press **DAILY** again.

Note

If you change the source while the daily timer is operating, the daily timer will be canceled.

CAUTION

If the System is engaged or a power failure occurs, the timer setting will be erased. If settings are erased, reset the timer settings.

## Setting the Sleep Timer



Using this timer, you can fall asleep to music and leave your System set-up and by itself without music after all night.


- You can only set the sleep timer when the System is on.

1. Press **SLEEP** on the Remote Control while playing a source.

The **SLEEP** indicator blinks on the main display.

2. Set the length of time you want the source to play before shutting off.

Each time you press **SLEEP** while the **SLEEP** indicator is blinking, it changes the number of minutes shown on the display in the following sequence:

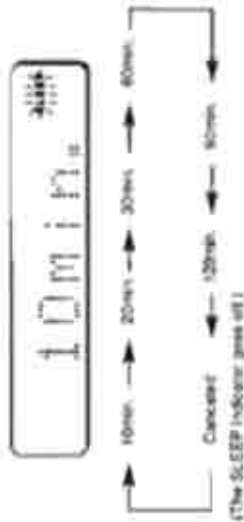

3. When the number of minutes you want is shown on the display, just wait about 5 seconds until the **SLEEP** indicator stops blinking, and remains lit.  
The System is now set to turn off after the number of minutes you set.

To cancel the sleep timer, press **SLEEP** until the **SLEEP** indicator goes off on the display. When the timer off the System, the sleep timer is also canceled.

To change the start-off time, press **SLEEP** until the System of minutes you want appears on the display.

To check the remaining time, after setting the sleep timer, you can check the time remaining until the System turns off.

Pressing **SLEEP** stores the set remaining time in memory on the display for about 5 seconds.

Care and Maintenance—General Notes

Cassette Tapes

Compact Discs

- If the tape is loose or stretched, take up the slack by moving a period in one of the reels and holding.
- If the tape is loose or stretched, cut it out of the cassette.



- Do not touch the tape surface.




- Do not store the tape
  - In direct sunlight
  - In direct sunlight or heat
  - In moist areas
  - On a TV or speaker
  - Near a magnet



Cassette Deck

- If the heads, capstans, and pinch-rollers of the cassette deck become dirty, the following will occur.
  - Impaired sound quality
  - Discontinuous sound
  - Fading
  - Incomplete erasure
  - Difficulty in recording

- Clean the heads, capstans, and pinch-rollers using a cotton cloth moistened with alcohol.

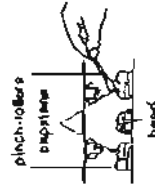

- If the heads become misaligned, they will produce noise or lose high frequencies.

- To demagnetize the heads, turn off the System, and use a head demagnetizer (available at electronics and record shops).

Handle your compact discs, cassette tapes, and cassette deck carefully, and they will last a long time.

Remove the CD from the case by holding it at the edges while pressing the center hole lightly. Do not touch the shiny surface of the CD, or bend the CD.



- Place the CD case the open end with the printed side up.



- Put the CD back in its case when you go through wrapping.
- Be sure to not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.



**CAUTION**  
Do not use any solvent for example, commercial alcohol, acetone, spirit, thinner, benzene, etc.) to clean a CD.

Moldure Condensation



Moldure may condense on the lens inside the CD player in the following cases:

- After waiting for hours in the room
  - In a damp room
  - If the System is brought directly from a cold to a warm place
- Should this occur, let System dry out naturally. In this case, leave the System turned on for a few hours until the condense evaporates, unplug the AC power cord, and then plug it in again.

In general, you will have the best performance by keeping your tapes, CDs, and the mechanism clean.


- Store tapes and CDs in their cases, and keep them in a place dry or an airtight.
- Keep the cassette holder and the CD tray closed when not in use.

Timer Priority

Since each timer can be set independently, you may have wondered what happens if the settings overlap. Here are the procedures for each timer.

Recording Timer > Sleep Timer > Daily Timer

- The recording timer always has priority. That means that:
  - If the recording and sleep timers are the same starting time, the recording timer will be activated.
  - If another timer is set to come on during a time when the recording timer is operating, the other timer just will not come on at all, even if you will get the timer program on a tape.
  - If the recording timer is set to come on while another timer is operating, the other timer will shut off about 10 seconds before the recording timer is set to come on, and the recording timer will then take over.

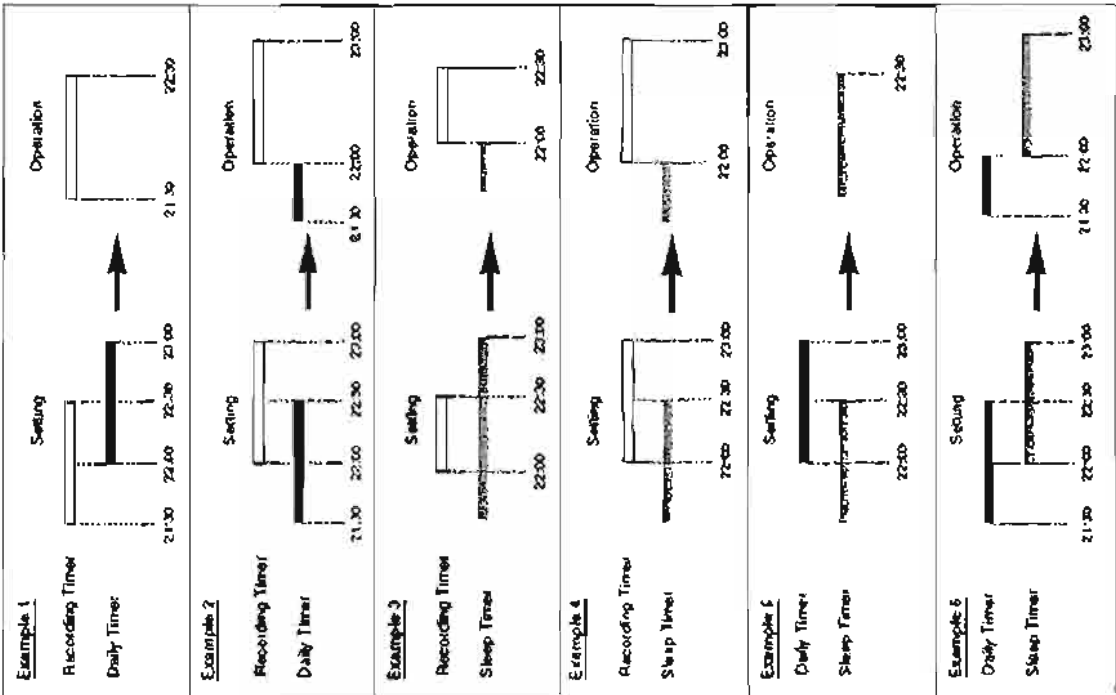

## Troubleshooting

- If you are having a problem with your System, check that for as a possible solution before calling for service.
- If you cannot solve a problem from the list given here, or if the System has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
The sound is faint.	Connections are incorrect, or loose.	Check all connections and make corrections. (See pages 4 to 6.)
Repeatability is poor.	Cartridge head/pencil tube too misaligned.	Correct tubes on back edge of cartridge with auge.
Head to tape or head-to-tape becomes of noise.	The spacing is discontinued. The loop antenna is too close to the system. The wire antenna is not properly extended and positioned.	Reconnect the antenna securely. Change the position and dimensions of the loop antenna. Extend wire antenna at the best reception position.
The CD cannot be discriminated. Unable to operate the Random Control.	The CD is scratched or dirty. The path between the Random Control and the sensor at the lower part is blocked. The batteries are discharged.	Clean or replace the CD. Remove the obstruction. Replace the batteries.
The CD tray cannot be operated. The CD does not play. Operations are disabled.	The AC power cord is not plugged in. The CD is upside down. The lock is engaged because may malfunction due to external electrical interference.	Plug in the AC power cord. Put the CD in with the printed side up. Unplug the System then plug or blank in.
The cassette holder cannot be opened.	The System was turned off because the timer was ignored while the tape was running.	Turn on the System.
The FM station sound disappears because the channel selected one and another when using the EQR. Squelch reception.	An incorrect EQR signal is being sent.	Press EQR (CH/INT) or cancel the EQR. Squelch reception.

## Specifications

### Integrated Amplifier, LX-F3000

Output Power (IEC ME STD) (1)  
Front Speakers

40 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.5% total harmonic distortion.

Input Sensitivity (Impedance) (1 kHz)  
MD  
AUX  
PHONO

Output Load Impedance (1 kHz)  
11D

Speaker Impedance  
Power Requirements  
Power Consumption

Dimensions (Approx.)  
Mass (Approx.)

610 mV/80 ohms  
300 mV/20 ohms  
3.0 mV/153 ohms  
250 mV/380 ohms  
4 - 16 ohms  
AC 230 V~, 50 Hz  
140 watts  
11 watts (in standby mode)  
245 x 170 x 728 mm (width)  
(9 11/16 x 6 3/4 x 12 13/16 in.)  
5.1 kg (11.1 lbs)

### FM/WLW Tuner, FX-E3000B

FM Tuner  
Tuning Range

AM (MWLW) Tuner  
Auto Tuning Range  
LW Tuning Range

Dimensions (Approx.)  
Mass (Approx.)

87.5 - 108.0 MHz  
521 - 1,629 kHz  
141 - 288 kHz  
245 x 81 x 303 mm (width)  
(9 11/16 x 3 1/4 x 11 15/16 in.)  
1.7 kg (3.8 lbs)

### Double Cassette Deck, TD-F3000

Frequency Response  
Aerial (Type N)  
C-Oh (Type D)  
Preout (Type I)

Wave and Filter  
Dimensions (Approx.)  
Mass (Approx.)

30 - 17,000 Hz  
30 - 18,000 Hz  
30 - 13,000 Hz  
0.05% (WRMS) 0.2% (DIN)  
245 x 110 x 397 mm (width)  
(9 11/16 x 4 3/8 x 11 1/2 in.)  
3.0 kg (6.7 lbs)

### Compact Disc Player, XL-F3000

Wave and Filter  
Digital output

Dimensions (Approx.)  
Mass (Approx.)

Unmeasurable  
OPTICAL DIGITAL OUT  
245 x 81 x 300 mm (width)  
(9 11/16 x 3 1/4 x 11 13/16 in.)  
2.2 kg (4.9 lbs)

### Supplied Accessories

FM Wire Antenna (1)  
Remote Control (1)  
Batteries (2)  
External Wire (1)

Design and specifications are subject to change without notice.

— MEMO —

# AX-F3000

**Note: Press S510 on ENH-296-1 for checking only AX-F3000 unit or units  
except FX-F3000/FX-F3000R.  
Discharge C404 after services.**

## Contents

<i>Description of Major ICs</i> .....	2-2
<i>Disassembly Procedures</i> .....	2-5
<i>Adjustment Procedures</i> .....	2-8
<i>Block Diagram</i> .....	2-9
<i>Printed Circuit Boards</i> .....	2-10
<i>Schematic Diagrams</i> .....	2-13

# Description of Major LSIs

## ■ MN171202J65 (IC501) : System controller

### Terminal Layout

VDD	1	64	OSC IN
CD IND	2	63	OSC OUT
TUNER IND	3	62	GND
TAPE IND	4	61	
MD IND	5	60	
PHONO IND	6	59	
AUX IND	7	58	POWER ON
POWER ON IND	8	57	SPK-RELAY
VOLUME IND	9	56	MUTE
DIRECT IND	10	55	DIRECT ON/OFF
PRESENCE IND	11	54	PRESENCE
	12	53	VOL.DOWN
	13	52	VOL.UP
	14	51	H.P.IN
	15	50	P.CONT.
	16	49	
	17	48	
GND	18	47	
	19	46	PROTECT IN
	20	45	INH
	21	44	RM IN
	22	43	RESET
	23	42	DATA
	24	41	STB
	25	40	SCLK
	26	39	AUX KEY
DCS IN	27	38	PHONO KEY
DCS OUT	28	37	MD KEY
	29	36	
AX PON	30	35	
DIRECT KEY IN	31	34	
POWER KEY IN	32	33	PRESENCE KEY

### KEY SW. INPUT

Symbol	Function
S501	PRESENCE
S502	CD DIRECT
S503	POWER
S507	MD
S508	PHONO
S509	AUX
S510	AX POWER

### Terminal Description

Pin No.	Symbol	I/O	Function	Pin NO.	Symbol	I/O	Function
1	VDD	--	Power supply	33	PRESENCE KEY	I	PRESENCE key input
2	CD IND	O	Indicator signal output	34		--	Pull up
3	TUNER.IND	O	Indicator signal output	35		--	Pull up
4	TAPE.IND	O	Indicator signal output	36		--	Pull up
5	MD.IND	O	Indicator signal output	37	MD KEY	I	MD key input
6	PHONO.IND	O	Indicator signal output	38	PHONO KEY	I	PHONO key input
7	AUX.IND	O	Indicator signal output	39	AUX	I	AUX key input
8	POWER ON.IND	O	Indicator signal output	40	SCLK	O	Switth clock signal input
9	VOLUME.IND	O	Indicator signal output	41	STB	O	Switth strobe signal input
10	DIRECT IND	O	Indicator signal output	42	DATA	O	Switth data signal input
11	PRESENCE IND	O	Indicator signal output	43	RESET	I	Reset signal input
12		--	Pull up	44	RM IN	I	Remort control signal input
13		--	Pull up	45	INH	I	Inhbit signal input
14		--	Pull up	46	PROTECT IN	I	PROTECT control signal input.
15		--	Pull up	47		--	GND
16		--	Pull up	48		--	GND
17		--	Pull up	49		--	GND
18	GND	--	GND	50	P.CONT	O	DECK power control signal
19		--	Pull up	51	H.P.IN	I	H.P. ON/OFF control signal
20		--	Pull up	52	VOL.UP	O	VOL. up control signal
21		--	Pull up	53	VOL.DOWN	O	VOL. down control signal
22		--	Pull up	54	PRESENCE	O	PRESENCE ON/OFF control signal
23		--	Pull up	55	DIRECT ON/OFF	O	CD DIRECT ON/OFF control signal
24		--	Pull up	56	MUTE	O	SOURCE MUTE control signal
25		--	Pull up	57	SPK-RELAY	O	SPK-RELAY control signal
26		--	Pull up	58	POWER ON	O	POWER ON/OFF control signal
27	DCS IN	I	Compulink input	59		--	GND
28	DCS OUT	O	Compulink output	60		--	GND
29		--	Pull up	61		--	Not used
30	AX PON	I	AX-F3000 Power on key input	62	GND	--	GND
31	DIRECT KEY IN	I	CD DIRECT key input	63	OSC OUT	O	Oscillation terminal
32	POWER KEY IN	I	POWER keyinput	64	OSC IN	I	Oscillation terminal




■ VC5022-2(IC751,752) :SUPER A

1. Terminal Layout




2. Block Diagram

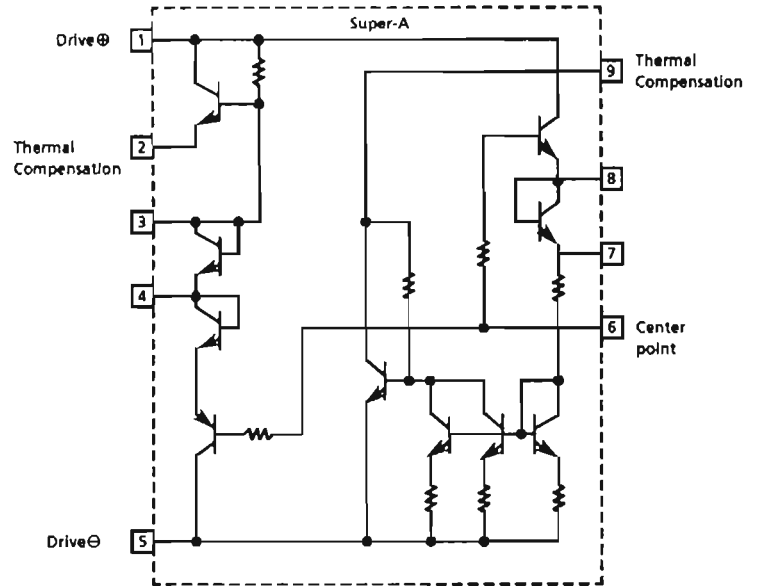


■ LB1639-CV (IC351) : DC Motor driver

1. Terminal Layout

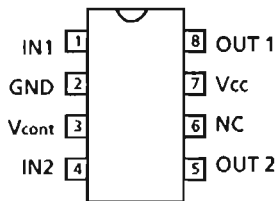

2. Block Diagram

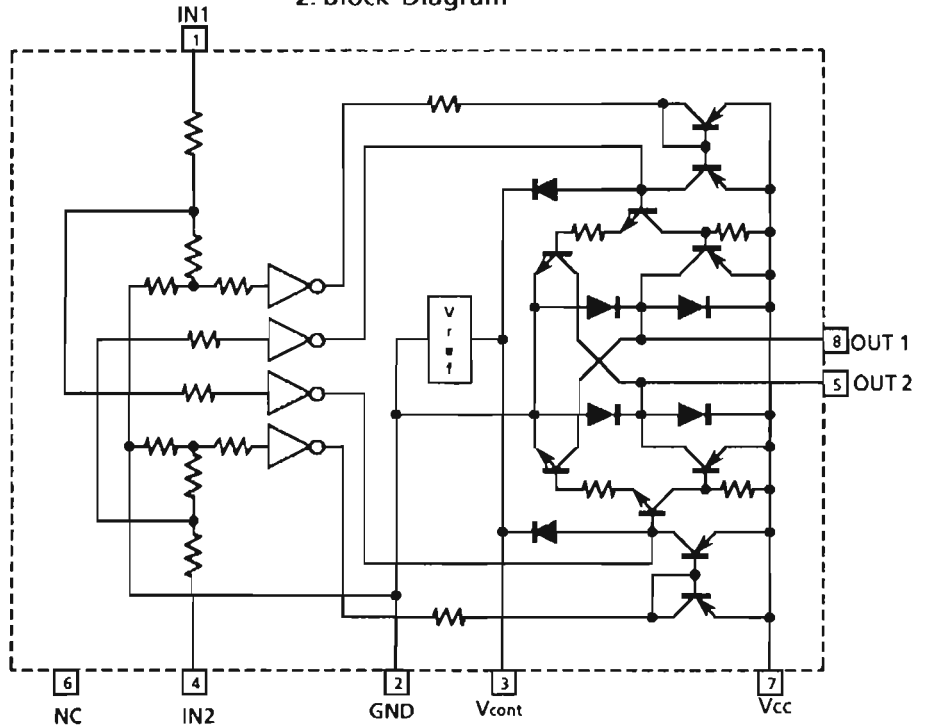


Pin Functions


IN 1	IN 2	OUT 1	OUT 2	MOTOR
H	L	H	L	CLOCKWISE
L	H	L	H	COUNTER-CLOCKWISE
H	H	OFF	OFF	WAITING
L	L	OFF	OFF	WAITING

# AX-F3000

## ■ NJH32H380A (IC502) : Remocon Module IC

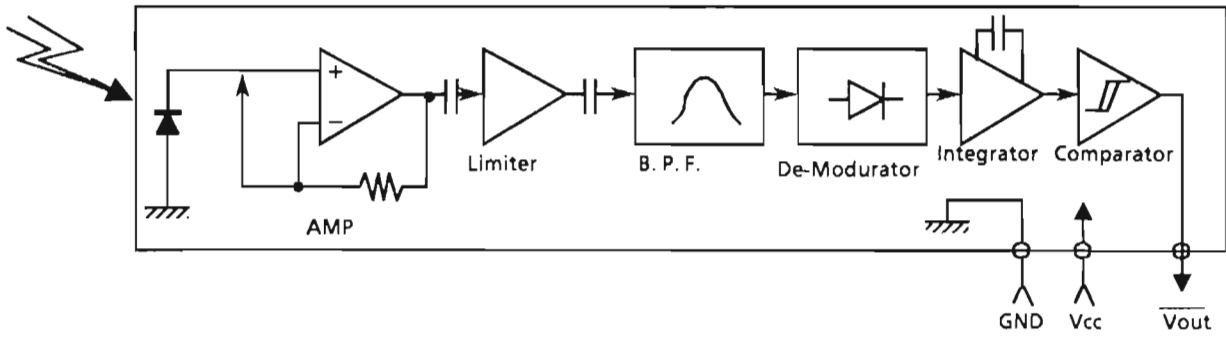


## ■ NJM4580DD (IC101), NJM4558 (IC363) VC4580DD (IC231,301,361) : Dual OP Amp.

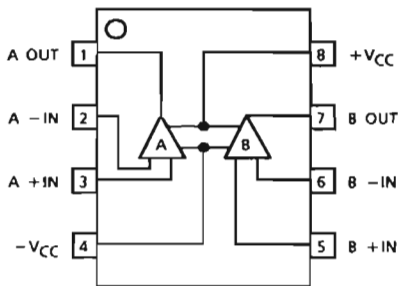

## Disassembly Procedures


### (1) Removing the top cover

1. Remove 2 screws **A** fastening both sides of top cover, and 4 screws **B** fastening the rear side.
2. Remove the top cover.

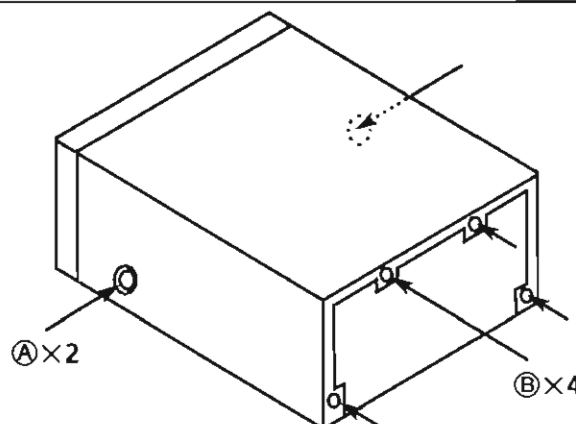


### (2) Removing the Front Panel Assembly

1. Remove the top cover.
2. Pull out the Master volume knob, and Remove the nut fastening the Master volume.
3. Cut the tie band, and Disconnect the connectors .(CN201,CN203)
4. Remove 2 screws **C** and 2 hooks **a** fastening bottom of the front panel assembly.

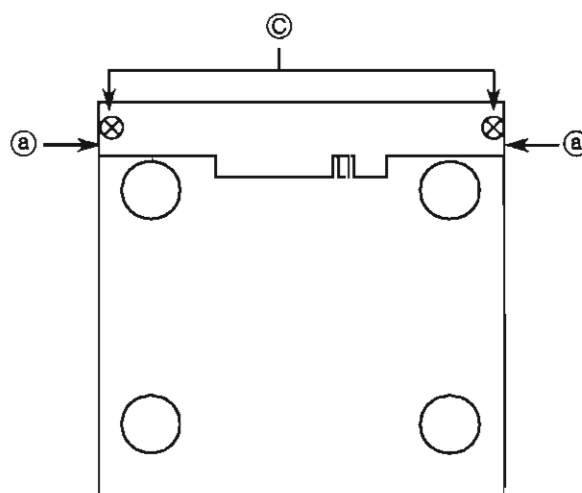

### (3) Removing the Control PCB (ENB-241-1)


1. Remove the top cover.
2. Remove the front panel assembly.
3. Pull out the Treble knob, Bass knob and Balance knob.
4. Remove 10 screws **D** fastening the control PCB to remove it.

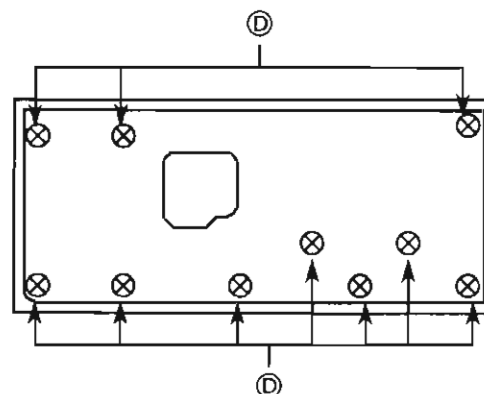

**A** .. SDSG3008N    **B** ... GBSG3008CC    **C** ... SDSG3008CC    **D** ... SDSF2608Z


(4) Removing the Rear panel

1. Remove the top cover.
2. Remove the 9 screws (E).  
(Universal type: Remove the 2 screws (E'))
3. Remove the rear panel.

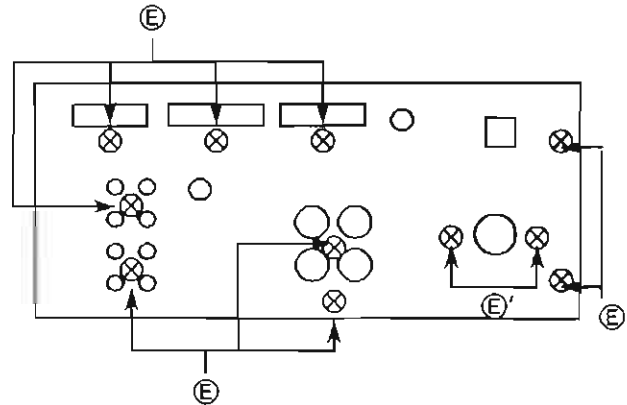


(5) Removing the Commutation & system connector P.C.B.(ENB-241-2)

1. Remove the top cover.
2. Remove the rear panel.
3. Disconnect the CN606, CN607, CN604.
4. Remove the Commutation & system connector P.C.B.

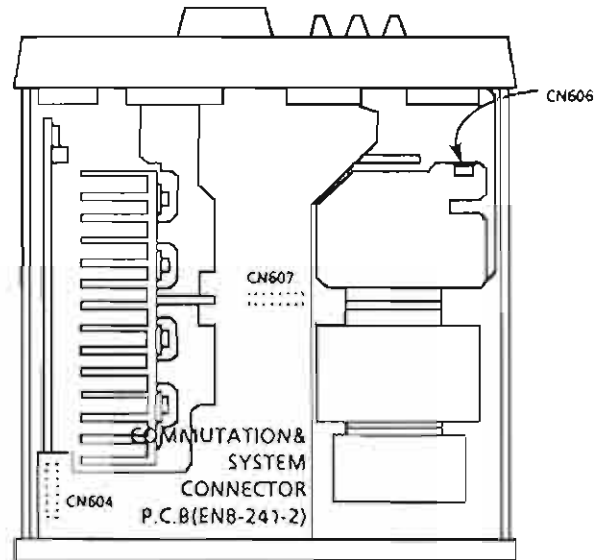


(6) Removing the Input & select P.C.B (ENH-296-2)

1. Remove the top cover and front panel ass'y.
2. Remove the rear panel.
3. Remove the Commutation & system connector P.C.B.
4. Remove the a screw (F).

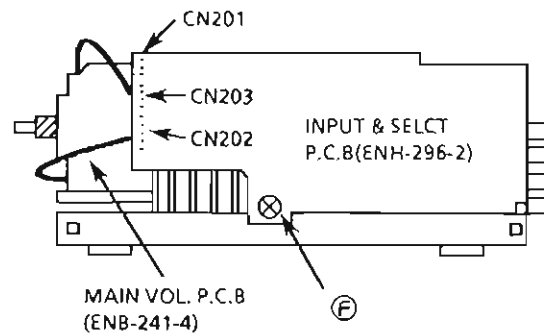

(7) Removing the Main P.C.B (ENH-296-1)

1. Remove the top cover and front panel ass'y.
2. Remove the rear panel.
3. Remove the Commutation & system connector P.C.B.
4. Remove the 2 screws (F) holding the main P.C.B, and the 4 screws (G) holding the heat sink bracket.
5. Remove the heat sink with the main P.C.B.

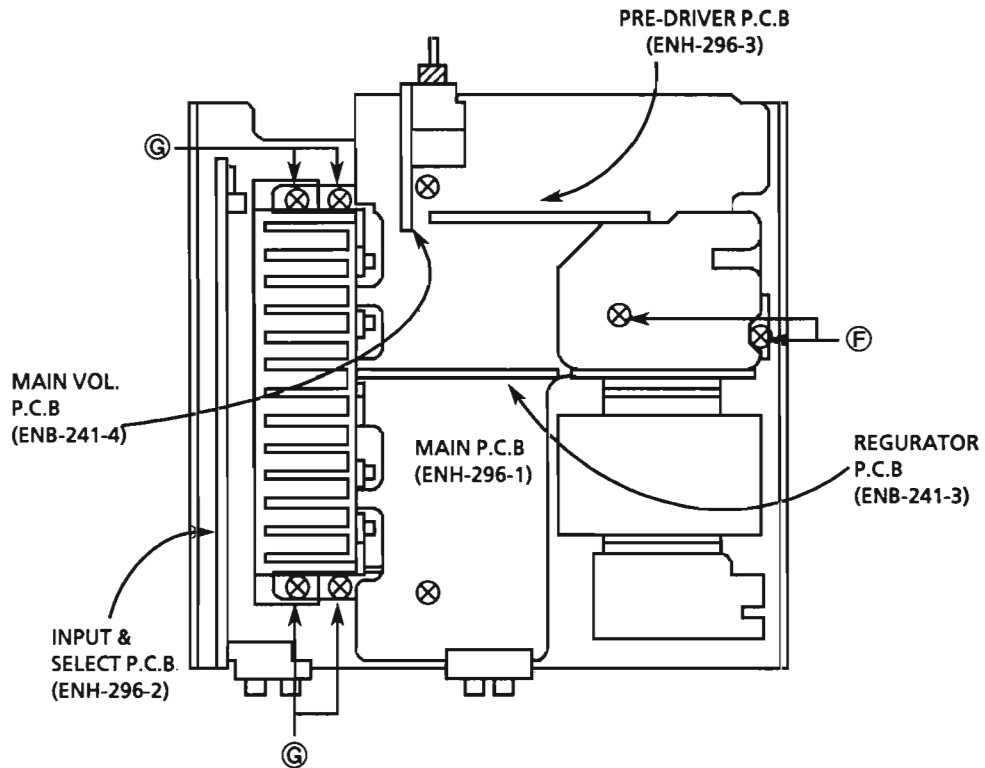


(F) .. SBSG3008CC    (G) ... SBST3006CC

## ADJUSTMENT PROCEDURES


### ■ Idling Current

- (1) Set the volume control to minimum during this adjustment.
- (2) Turn R751 and R752 fully counterclockwise before the power is switch on.
- (3) Always start from cold, and allow 5 minutes to warm up before adjustment.  
If the heatsink is already warm from previous use the correct adjustment can not be made.
- (4) Connect a DC voltmeter to R771 resistor's leads for left channel, or to R772 for right channel.
- (5) Adjust R751 for left channel, or R752 for right channel, so that the DC voltmeter becomes 2.2 mV ~ 22mV.

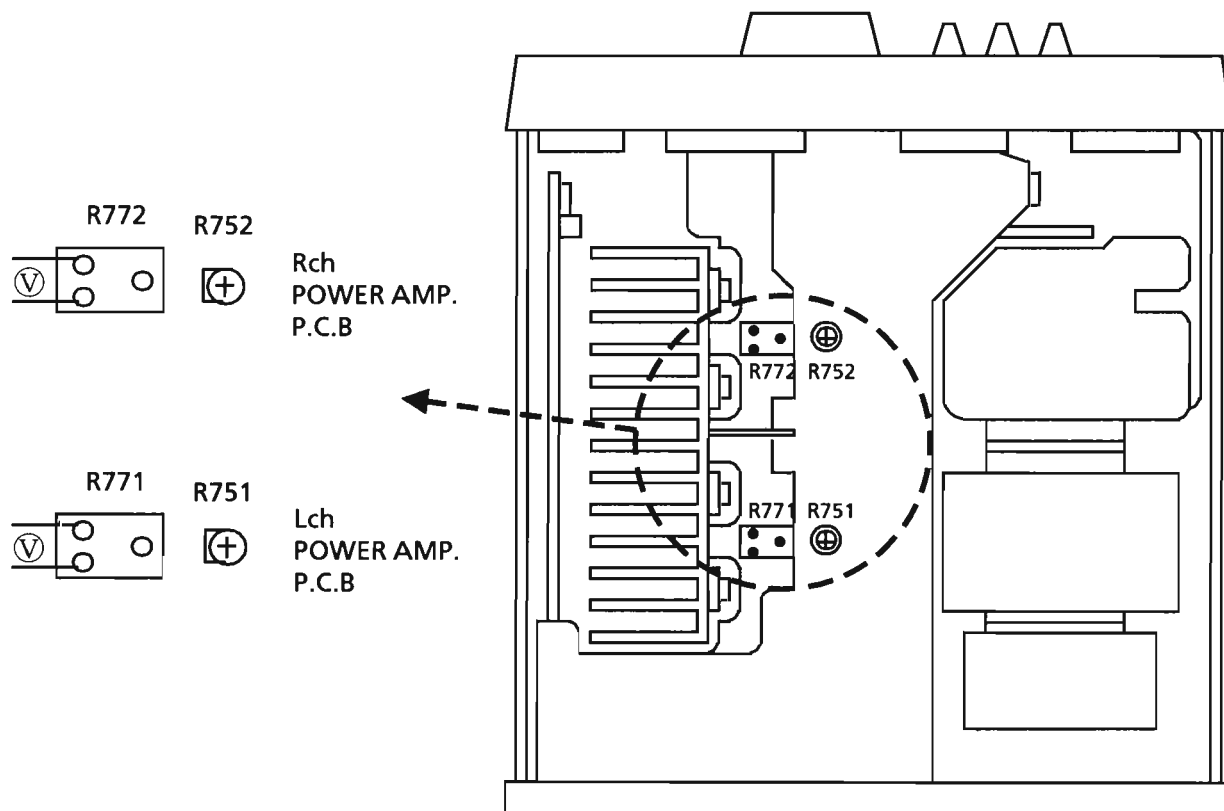




# Block Diagram

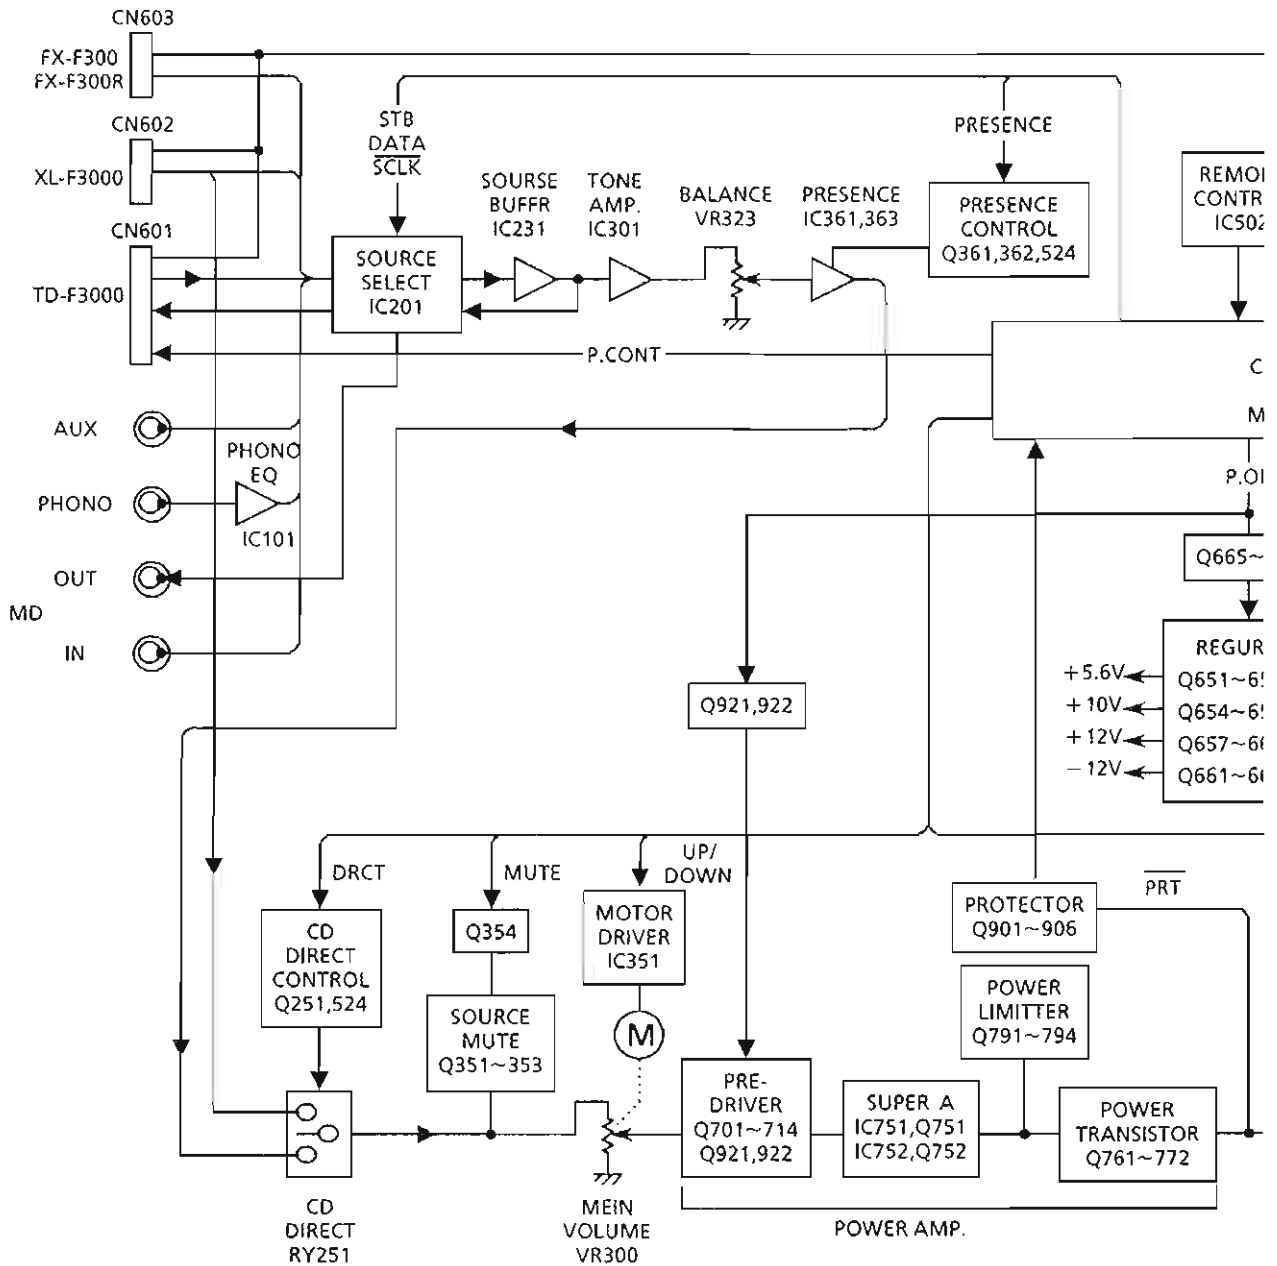





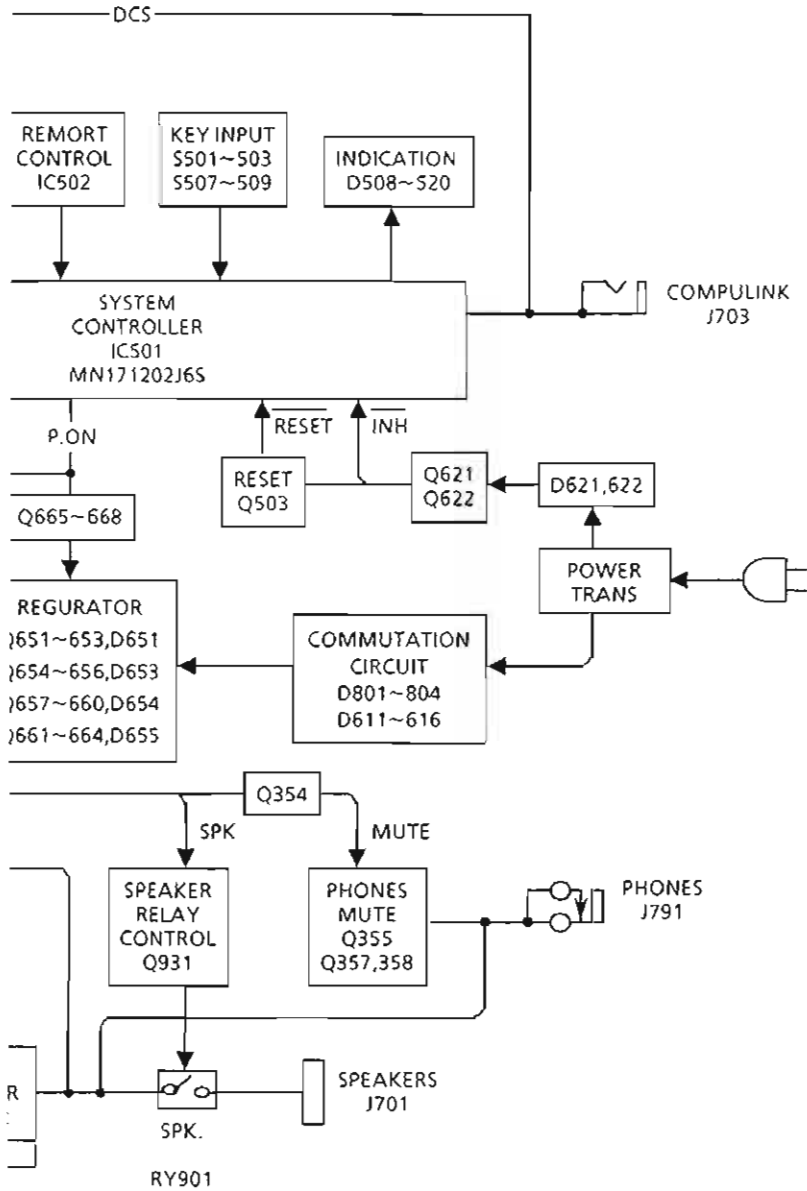

**Printed Circuit Boards**

- Power Supply P.C.B(END-104)

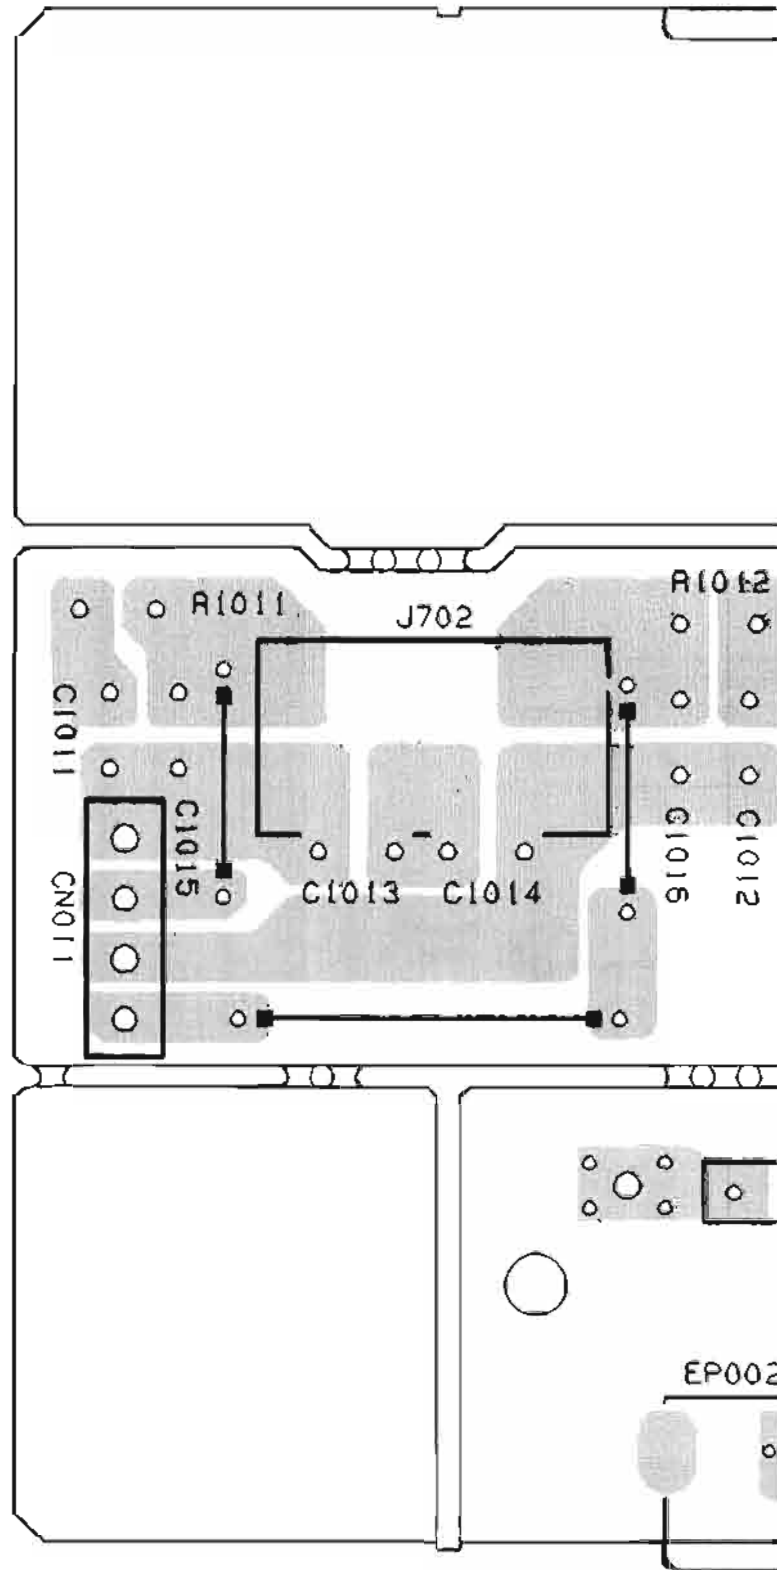


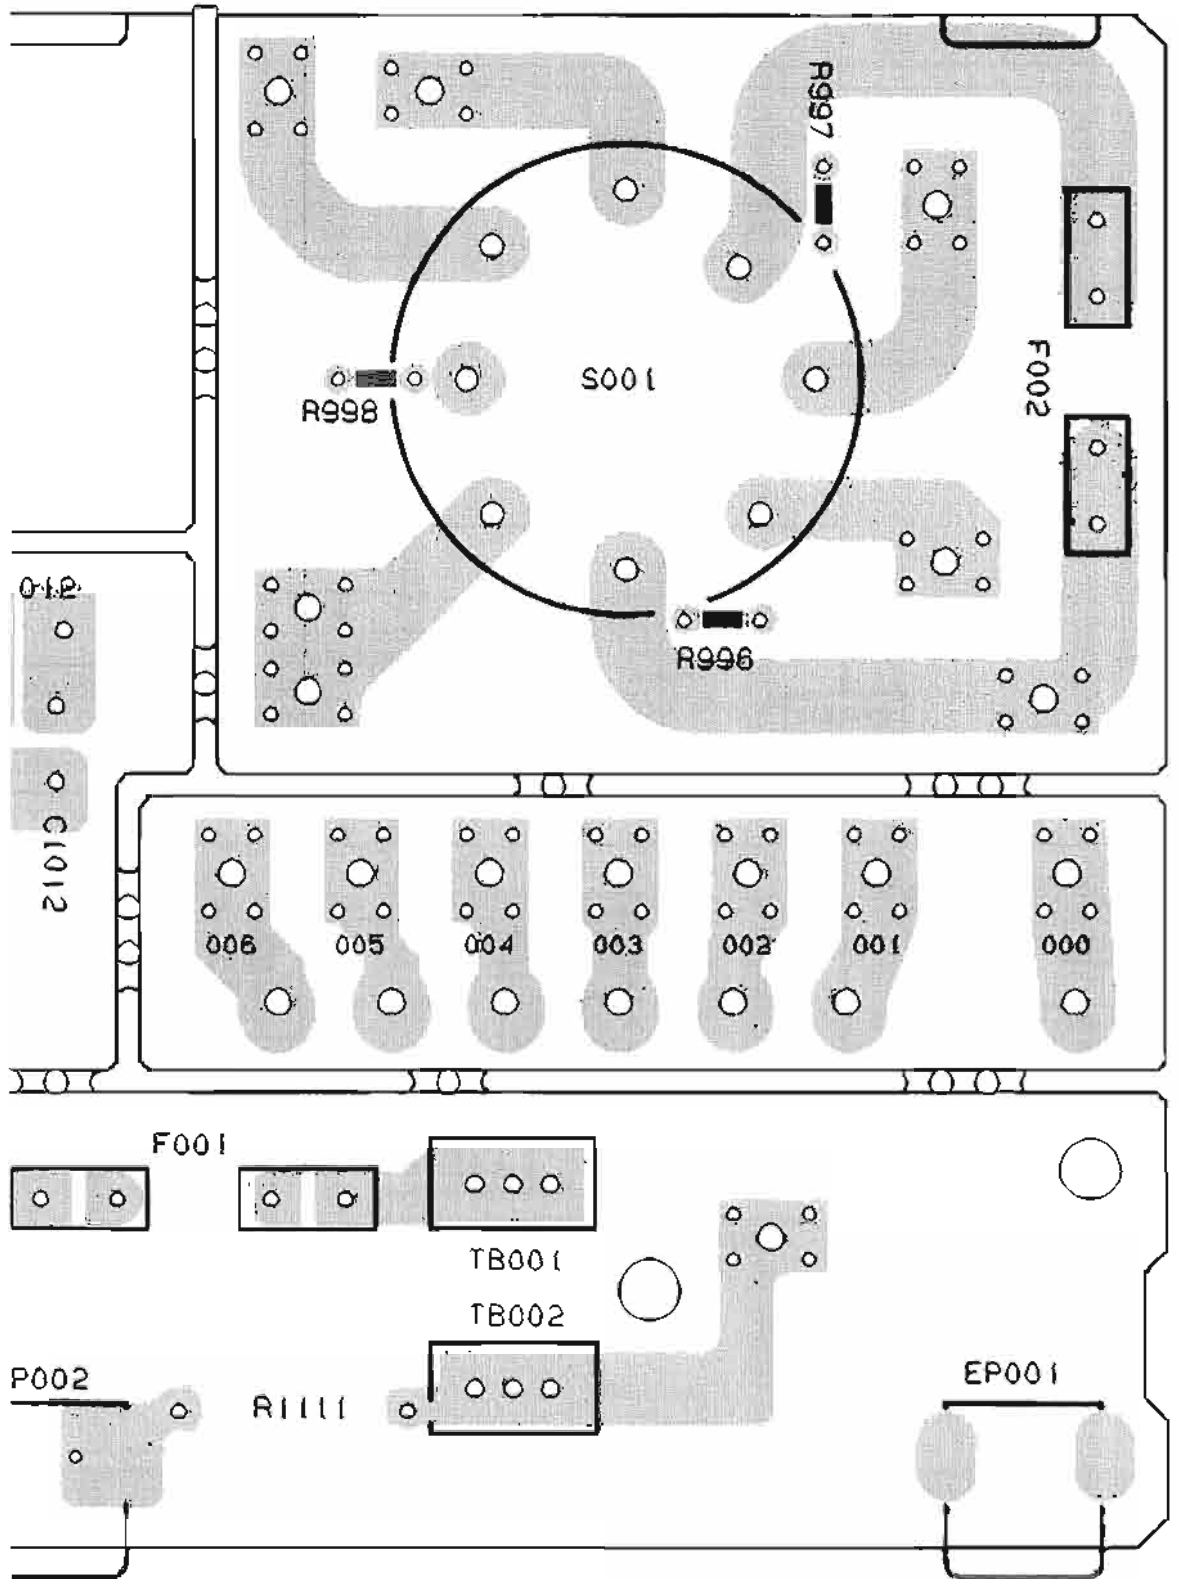




P2-11-a

P2-11-b

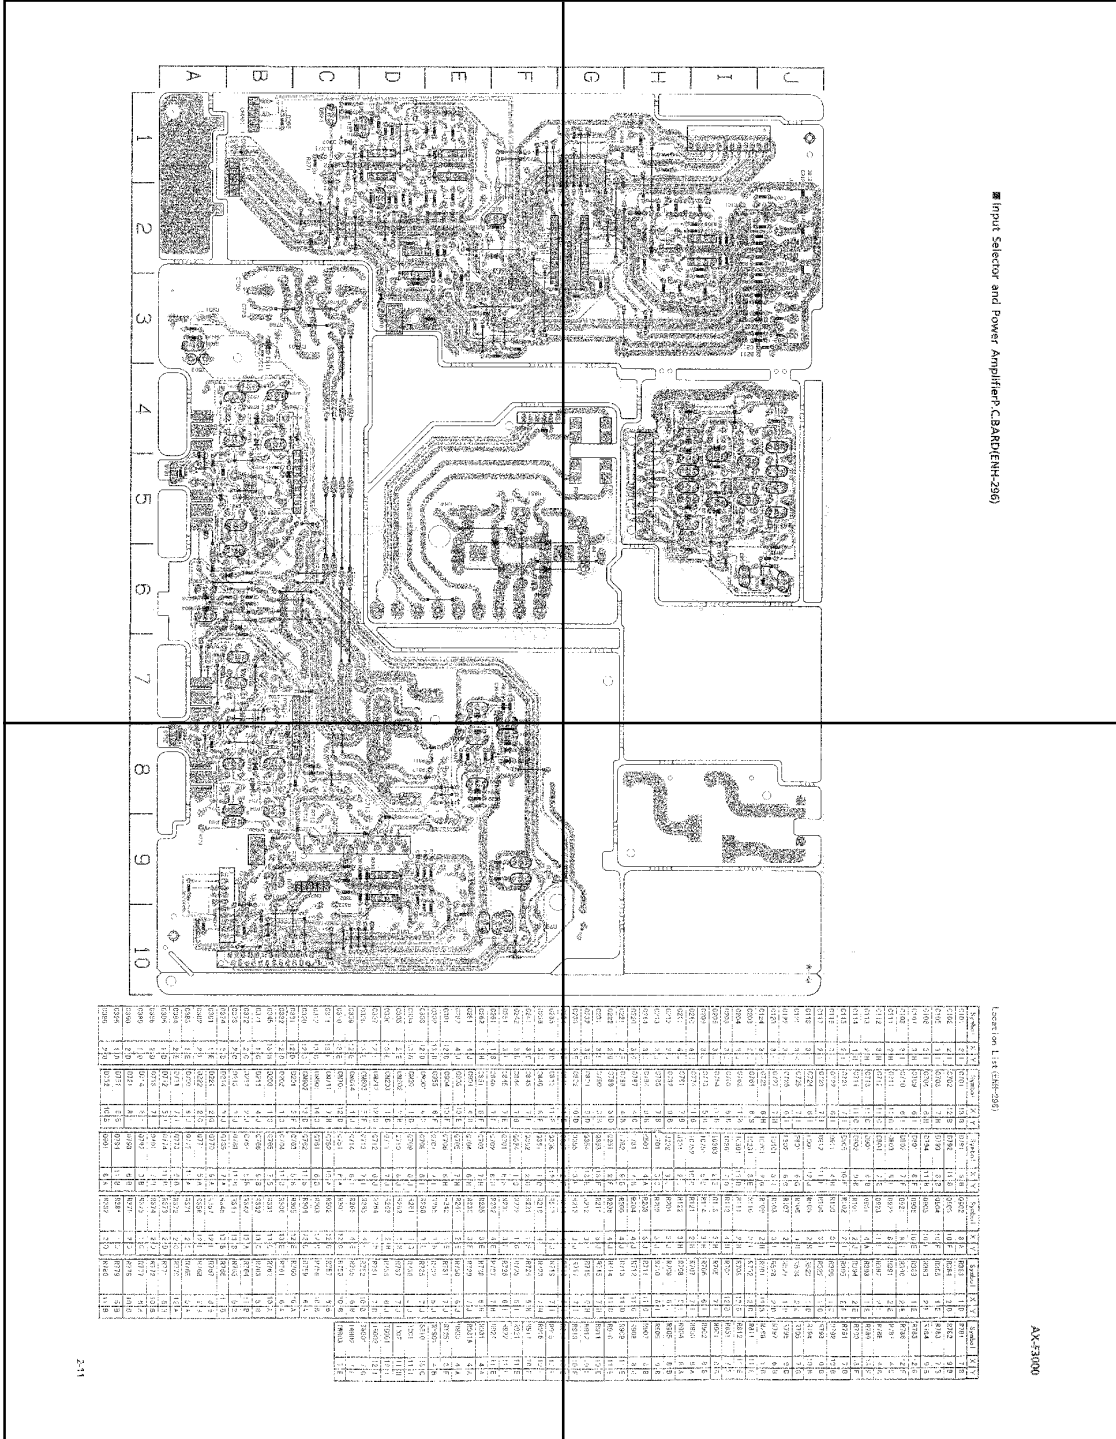



P2-11-c

P2-11-d

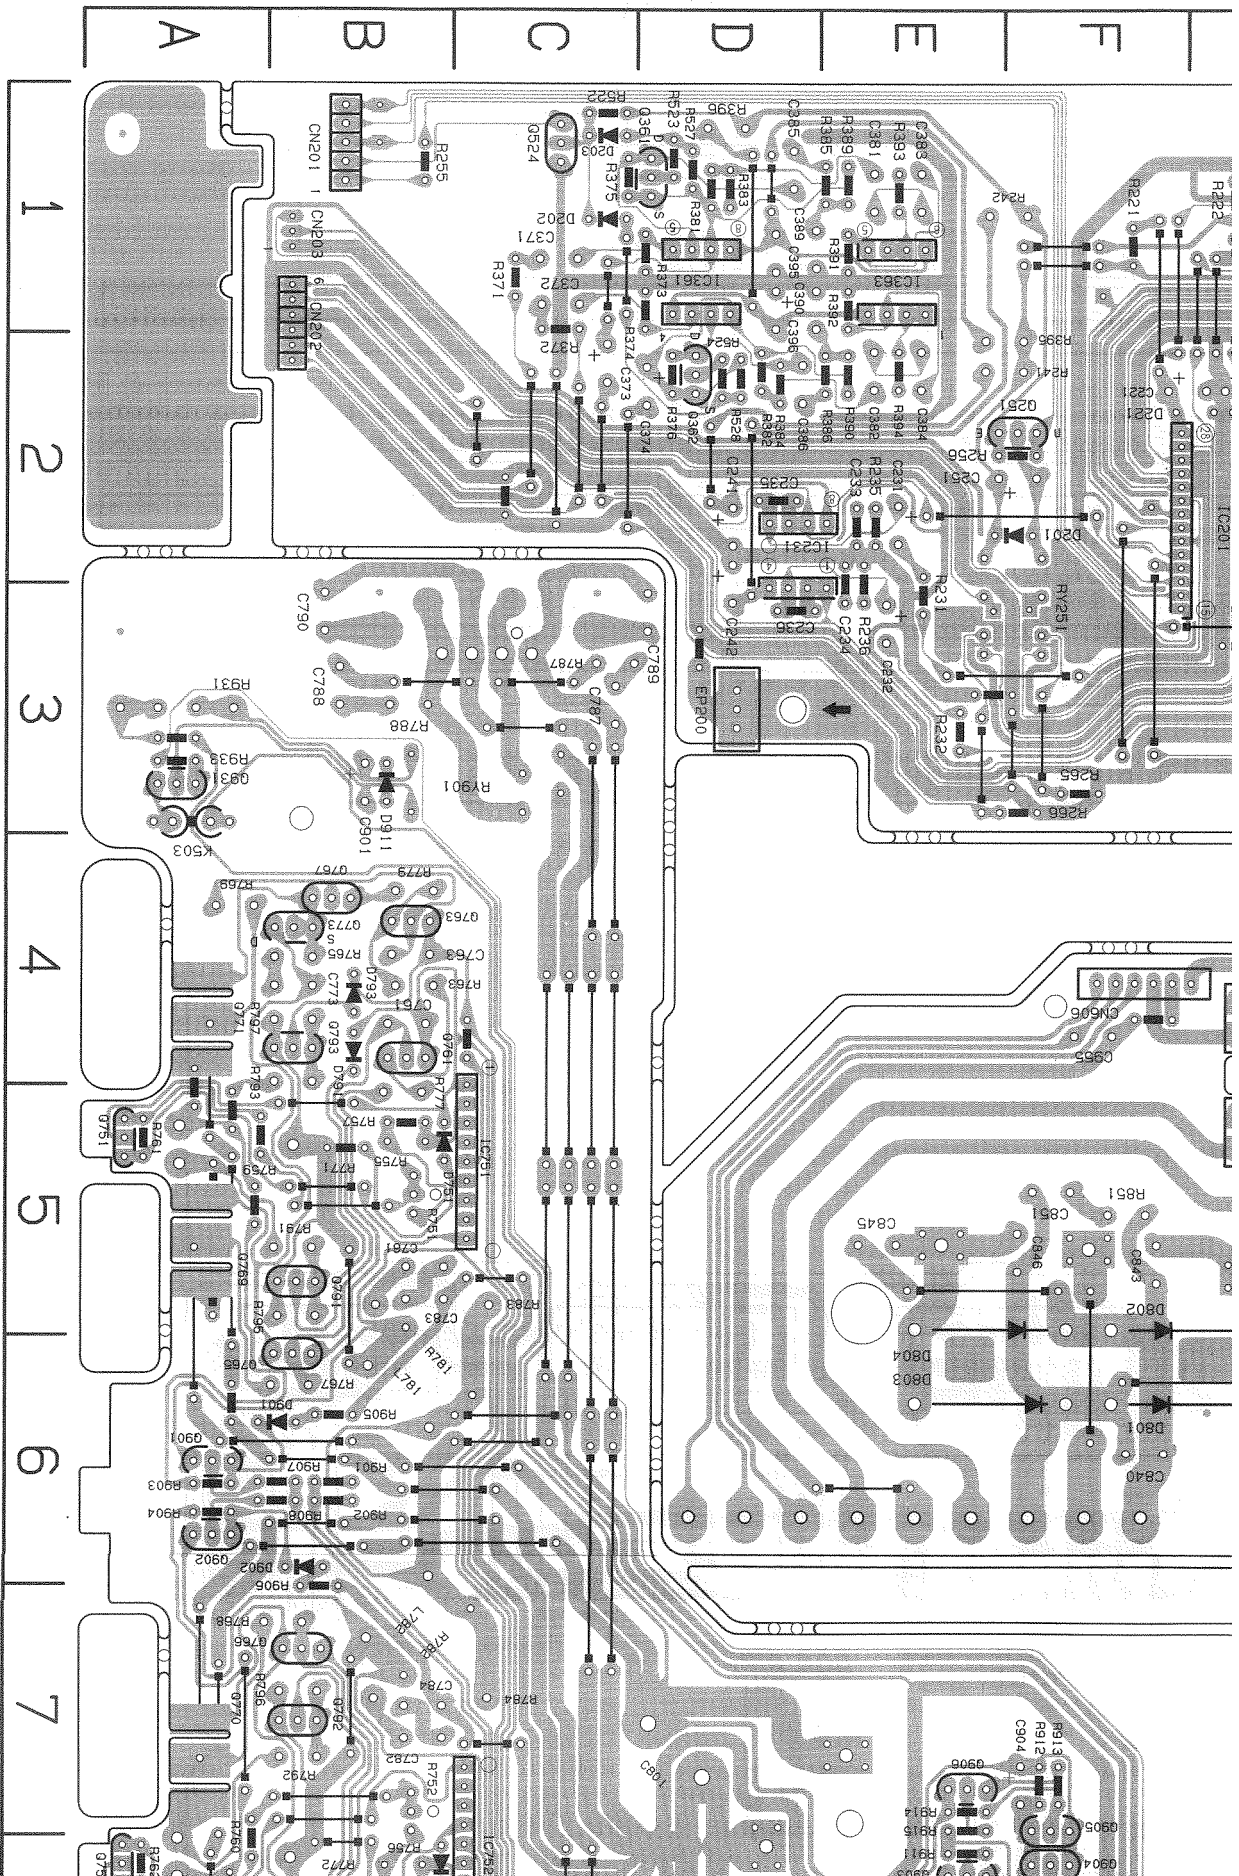

Input Selector and Power Amplifier P.C. BOARD (ENH-296)

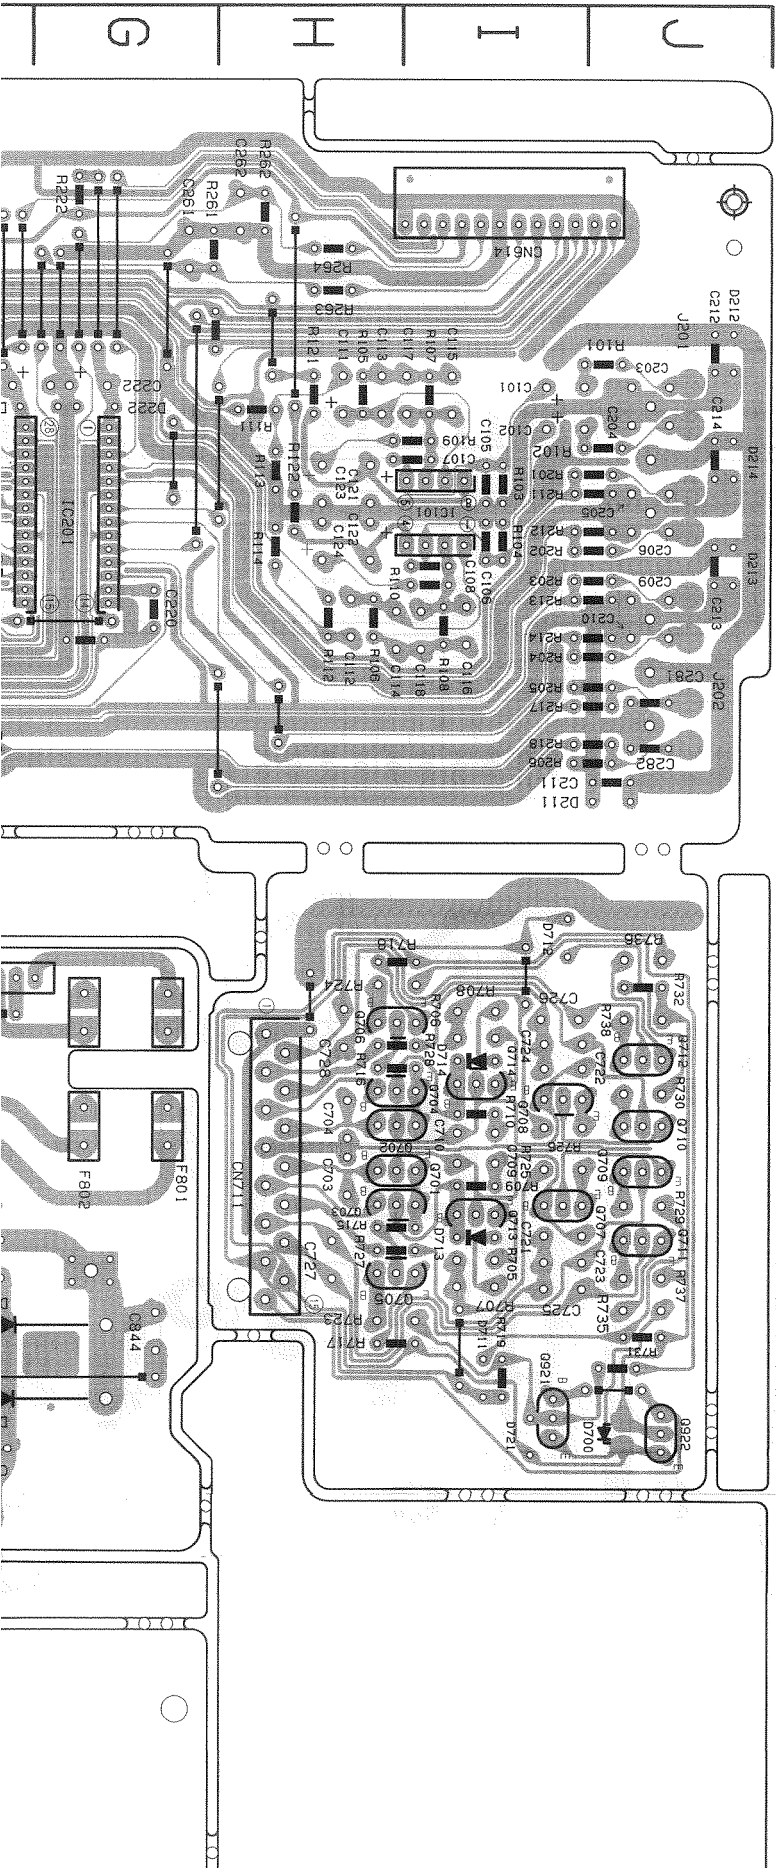


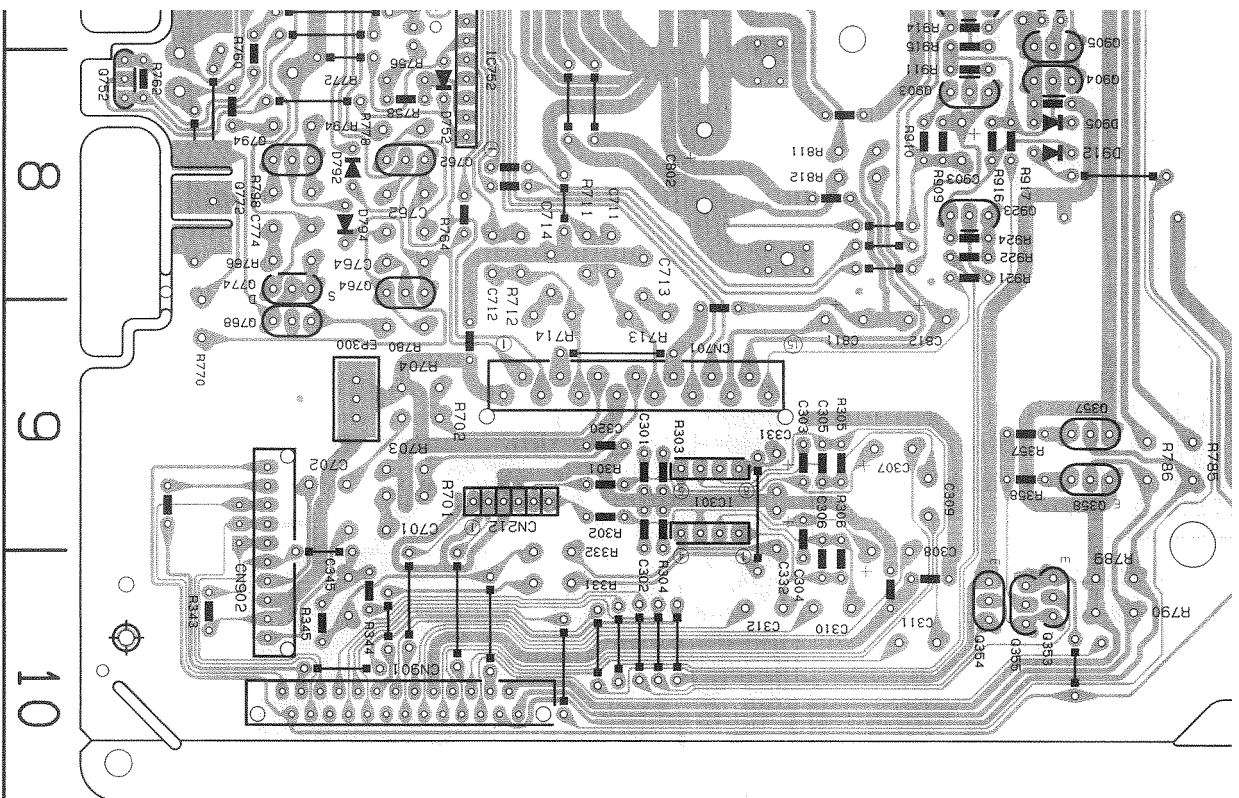

C234	3 E	C811	11 E	Q357	12 F	R214	4 I	R718	5 I	R914	10 E
C235	3 D	C812	11 E	Q358	12 F	R217	4 J	R719	7 I	R915	10 E
C236	3 D	C840	8 F	Q361	1 D	R218	4 I	R723	7 H	R916	10 E
C241	3 D	C843	7 F	Q362	2 D	R221	1 F	R724	5 H	R917	10 F
C242	3 D	C844	7 G	Q524	1 C	R222	1 G	R725	6 I	R921	11 E
C251	3 E	C845	7 E	Q701	6 H	R231	3 E	R726	6 I	R922	11 E
C261	1 G	C846	7 F	Q702	6 H	R232	4 E	R727	7 H	R924	11 E
C282	1 H	C851	6 F	Q703	7 H	R235	3 E	R728	6 H	R931	4 A
C281	4 J	C901	4 B	Q704	6 H	R236	3 E	R729	7 J	R931A	4 A
C301	12 D	C904	10 F	Q705	7 H	R241	2 E	R730	6 J	R933	4 A
C302	13 D	C955	6 F	Q707	7 I	R242	1 E	R731	7 J	RY251	3 F
C303	12 D	CN001	4 C	Q708	6 I	R255	1 B	R732	5 J	RY901	4 B
C304	13 D	CN201	1 B	Q709	6 J	R256	3 E	R735	7 J	S510	13 G
C305	12 E	CN202	2 B	Q710	6 J	R261	1 G	R736	5 J	T001	11 I
C306	13 E	CN203	1 B	Q711	7 J	R262	1 H	R737	7 J	T002	11 H
C307	12 E	CN212	12 C	Q712	6 J	R264	1 H	R738	6 J	TB001	12 I
C308	13 E	CN606	5 F	Q713	7 I	R265	4 F	R751	7 B	TB002	12 I
C309	12 E	CN614	1 J	Q714	6 I	R266	4 E	R752	10 B	TW801	7 G
C310	13 E	CN701	12 D	Q751	6 A	R301	12 C	R755	6 B	TW802	7 F
C311	13 E	CN711	7 H	Q752	10 A	R302	12 C	R756	10 B	TW803	7 E
C312	13 D	CN901	14 C	Q761	6 B	R303	12 D	R757	6 B		
C320	12 C	CN902	13 B	Q762	11 B	R304	12 D	R758	10 B		
C331	12 D	D201	3 F	Q763	5 B	R305	12 E	R759	6 A		
C332	12 D	D202	1 C	Q764	11 B	R306	13 E	R760	10 A		
C345	13 B	D203	1 C	Q765	7 B	R331	13 C	R761	6 A		
C371	1 C	D211	4 J	Q766	9 B	R332	13 C	R762	10 A		
C372	2 C	D212	2 J	Q767	5 B	R343	13 A	R763	5 B		
C373	2 C	D213	3 J	Q768	11 B	R344	13 B	R764	11 B		
C374	2 D	D214	3 J	Q769	7 A	R345	13 B	R765	5 B		
C381	1 E	D221	2 G	Q770	9 A	R357	12 F	R766	11 B		
C382	2 E	D222	2 G	Q771	5 A	R358	12 F	R767	8 B		
C383	1 E	D700	8 J	Q772	11 A	R371	2 C	R768	9 B		
C384	2 E	D711	7 I	Q773	5 B	R372	2 C	R769	5 A		
C385	1 D	D712	5 I	Q774	11 B	R373	2 D	R770	12 A		
C386	2 D	D713	7 I	Q791	7 B	R374	2 D	R771	6 B		
C389	1 D	D714	6 I	Q792	9 B	R375	1 C	R772	10 B		
C390	2 D	D721	8 I	Q793	6 B	R376	2 D	R777	6 B		
C395	1 D	D751	6 B	Q794	11 B	R381	1 D	R778	10 B		
C396	2 D	D752	10 B	Q901	8 A	R382	2 D	R779	5 B		
								R780	11 B		




Location List (ENH-296)

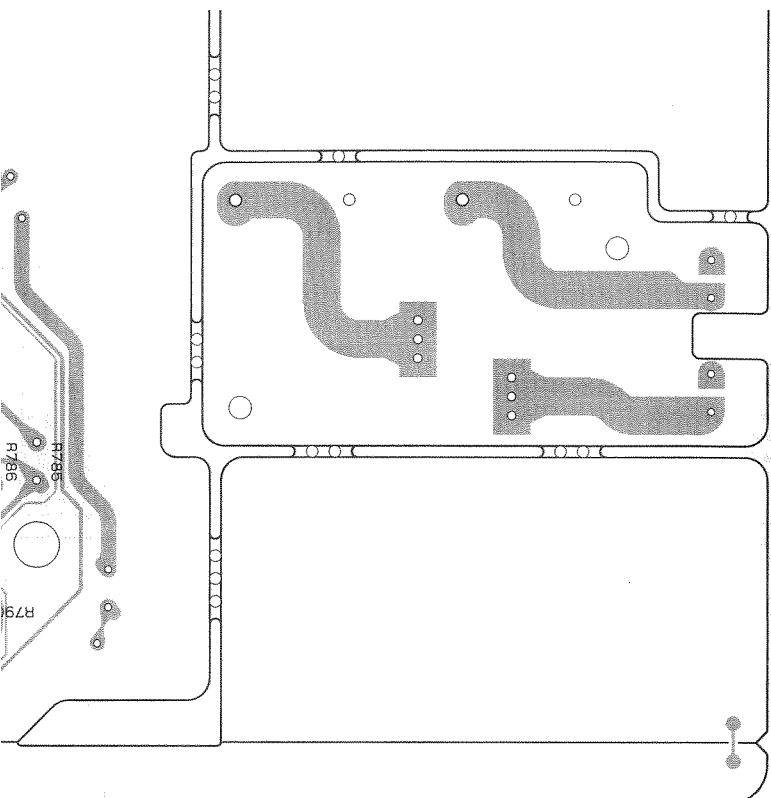

Symbol	X	Y	Symbol	X	Y	Symbol	X	Y	Symbol	X	Y	Symbol	X	Y	Symbol	X	Y
C101	2	I	C701	13	B	D791	6	B	0902	8	A	R383	1	D	R781	7	B
C102	2	I	C702	12	B	D792	11	B	0903	10	E	R384	2	D	R782	9	B
C105	3	I	C703	7	H	D793	6	B	0904	10	F	R385	1	E	R783	7	B
C106	3	I	C704	6	H	D794	11	B	0905	10	F	R386	2	E	R784	9	B
C107	3	H	C709	6	I	D801	8	F	0906	10	E	R389	1	E	R785	12	G
C108	3	I	C710	6	I	D802	7	F	0921	8	I	R390	2	E	R786	12	F
C111	2	H	C711	11	C	D803	8	E	0922	8	J	R391	2	E	R787	4	C
C112	3	H	C712	11	C	D804	7	E	0923	11	E	R392	2	E	R788	4	B
C113	2	H	C713	11	D	D901	8	B	0931	4	A	R393	1	E	R789	13	F
C114	4	H	C714	11	C	D902	9	B	R101	2	J	R394	2	E	R790	13	F
C115	2	I	C721	7	I	D905	10	F	R102	2	I	R395	2	F	R791	7	B
C116	3	I	C722	6	I	D911	4	B	R103	3	I	R396	1	D	R792	10	B
C117	2	I	C723	7	I	D912	11	F	R104	3	I	R522	1	C	R793	6	B
C118	3	I	C724	6	I	F001	12	J	R105	2	H	R523	1	D	R794	10	B
C121	3	H	C725	7	I	F801	6	G	R106	4	H	R524	2	D	R795	7	B
C122	3	H	C726	6	I	F802	6	G	R107	2	I	R527	1	D	R796	9	B
C123	3	H	C727	7	H	IC101	3	I	R108	3	I	R528	2	D	R797	6	B
C124	3	H	C728	6	H	IC201	2	G	R109	2	H	R701	12	B	R798	11	B
C203	2	J	C761	6	B	IC231	3	E	R110	3	I	R702	12	B	R811	11	E
C204	2	J	C762	11	B	IC301	13	D	R111	2	H	R703	12	B	R812	11	E
C205	3	J	C763	5	B	IC361	2	D	R112	4	H	R704	12	B	R851	7	F
C206	3	J	C764	11	B	IC363	2	E	R113	3	H	R705	7	I	R901	8	B
C209	3	J	C773	5	B	IC751	6	C	R114	3	H	R706	6	I	R902	8	B
C210	4	J	C774	11	B	IC752	10	C	R121	2	H	R707	7	I	R903	8	A
C211	4	J	C781	7	B	J201	2	J	R122	3	H	R708	6	I	R904	8	A
C212	2	J	C782	9	B	J202	3	J	R201	3	J	R709	6	I	R905	8	B
C213	3	J	C783	7	B	J701	3	C	R202	3	J	R710	6	I	R906	9	B
C214	3	J	C784	9	B	K503	4	A	R203	3	J	R711	11	C	R907	8	B
C220	3	G	C787	4	C	L781	7	B	R204	4	J	R712	11	C	R908	8	B
C221	2	F	C788	4	B	L782	9	B	R205	4	J	R713	11	D	R909	11	E
C222	2	G	C789	3	D	Q251	2	F	R206	4	J	R714	11	C	R910	11	E
C231	3	E	C790	3	B	Q353	13	F	R211	3	J	R715	7	H	R911	10	E
C232	3	E	C801	9	D	Q354	13	E	R212	3	I	R716	6	H	R912	10	F
C233	3	E	C802	10	D	Q355	13	F	R213	3	J	R717	7	I	R913	10	F
C234	3	E	C811	11	E	Q357	12	F	R214	4	I	R718	5	I	R914	10	E
C235	3	D	C812	11	E	Q358	12	F	R217	4	J	R719	7	I	R915	10	E




P2-12-a

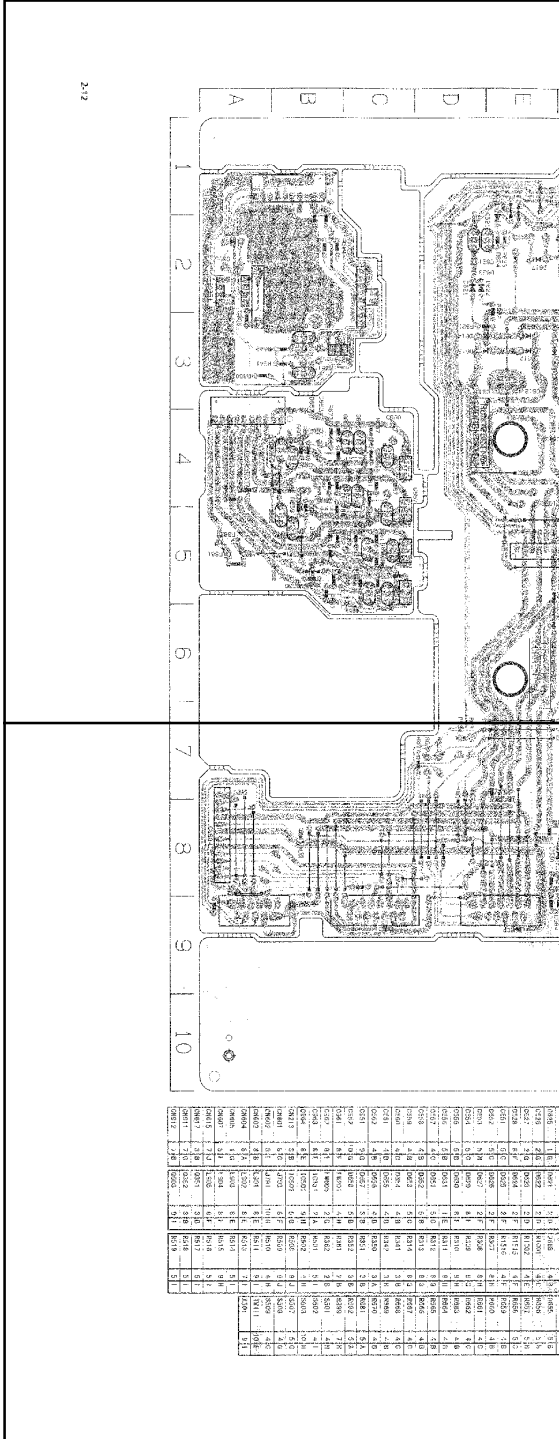

2-172

P2-12-b

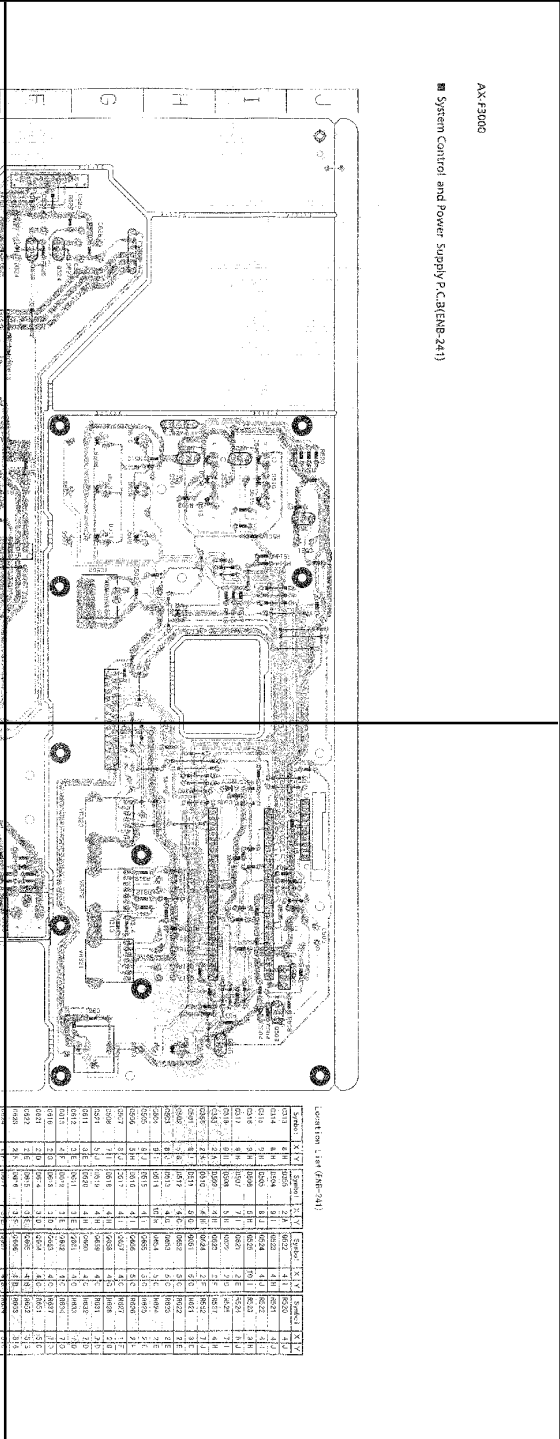


AX P3000  
System Control and Power Supply's (CIRCUIT 241)

P2-12-c


Location: 1-61 (441-104)


Component	Value	Component	Value	Component	Value
92071	100K	92072	100K	92073	100K
92074	100K	92075	100K	92076	100K
92077	100K	92078	100K	92079	100K
92080	100K	92081	100K	92082	100K
92083	100K	92084	100K	92085	100K
92086	100K	92087	100K	92088	100K
92089	100K	92090	100K	92091	100K
92092	100K	92093	100K	92094	100K
92095	100K	92096	100K	92097	100K
92098	100K	92099	100K	92100	100K
92101	100K	92102	100K	92103	100K
92104	100K	92105	100K	92106	100K
92107	100K	92108	100K	92109	100K
92110	100K	92111	100K	92112	100K
92113	100K	92114	100K	92115	100K
92116	100K	92117	100K	92118	100K
92119	100K	92120	100K	92121	100K
92122	100K	92123	100K	92124	100K
92125	100K	92126	100K	92127	100K
92128	100K	92129	100K	92130	100K
92131	100K	92132	100K	92133	100K
92134	100K	92135	100K	92136	100K
92137	100K	92138	100K	92139	100K
92140	100K	92141	100K	92142	100K
92143	100K	92144	100K	92145	100K
92146	100K	92147	100K	92148	100K
92149	100K	92150	100K	92151	100K
92152	100K	92153	100K	92154	100K
92155	100K	92156	100K	92157	100K
92158	100K	92159	100K	92160	100K
92161	100K	92162	100K	92163	100K
92164	100K	92165	100K	92166	100K
92167	100K	92168	100K	92169	100K
92170	100K	92171	100K	92172	100K
92173	100K	92174	100K	92175	100K
92176	100K	92177	100K	92178	100K
92179	100K	92180	100K	92181	100K
92182	100K	92183	100K	92184	100K
92185	100K	92186	100K	92187	100K
92188	100K	92189	100K	92190	100K
92191	100K	92192	100K	92193	100K
92194	100K	92195	100K	92196	100K
92197	100K	92198	100K	92199	100K
92200	100K	92201	100K	92202	100K
92203	100K	92204	100K	92205	100K
92206	100K	92207	100K	92208	100K
92209	100K	92210	100K	92211	100K
92212	100K	92213	100K	92214	100K
92215	100K	92216	100K	92217	100K
92218	100K	92219	100K	92220	100K
92221	100K	92222	100K	92223	100K
92224	100K	92225	100K	92226	100K
92227	100K	92228	100K	92229	100K
92230	100K	92231	100K	92232	100K
92233	100K	92234	100K	92235	100K
92236	100K	92237	100K	92238	100K
92239	100K	92240	100K	92241	100K
92242	100K	92243	100K	92244	100K
92245	100K	92246	100K	92247	100K
92248	100K	92249	100K	92250	100K
92251	100K	92252	100K	92253	100K
92254	100K	92255	100K	92256	100K
92257	100K	92258	100K	92259	100K
92260	100K	92261	100K	92262	100K
92263	100K	92264	100K	92265	100K
92266	100K	92267	100K	92268	100K
92269	100K	92270	100K	92271	100K
92272	100K	92273	100K	92274	100K
92275	100K	92276	100K	92277	100K
92278	100K	92279	100K	92280	100K
92281	100K	92282	100K	92283	100K
92284	100K	92285	100K	92286	100K
92287	100K	92288	100K	92289	100K
92290	100K	92291	100K	92292	100K
92293	100K	92294	100K	92295	100K
92296	100K	92297	100K	92298	100K
92299	100K	92300	100K	92301	100K
92302	100K	92303	100K	92304	100K
92305	100K	92306	100K	92307	100K
92308	100K	92309	100K	92310	100K
92311	100K	92312	100K	92313	100K
92314	100K	92315	100K	92316	100K
92317	100K	92318	100K	92319	100K
92320	100K	92321	100K	92322	100K
92323	100K	92324	100K	92325	100K
92326	100K	92327	100K	92328	100K
92329	100K	92330	100K	92331	100K
92332	100K	92333	100K	92334	100K
92335	100K	92336	100K	92337	100K
92338	100K	92339	100K	92340	100K
92341	100K	92342	100K	92343	100K
92344	100K	92345	100K	92346	100K
92347	100K	92348	100K	92349	100K
92350	100K	92351	100K	92352	100K
92353	100K	92354	100K	92355	100K
92356	100K	92357	100K	92358	100K
92359	100K	92360	100K	92361	100K
92362	100K	92363	100K	92364	100K
92365	100K	92366	100K	92367	100K
92368	100K	92369	100K	92370	100K
92371	100K	92372	100K	92373	100K
92374	100K	92375	100K	92376	100K
92377	100K	92378	100K	92379	100K
92380	100K	92381	100K	92382	100K
92383	100K	92384	100K	92385	100K
92386	100K	92387	100K	92388	100K
92389	100K	92390	100K	92391	100K
92392	100K	92393	100K	92394	100K
92395	100K	92396	100K	92397	100K
92398	100K	92399	100K	92400	100K

P2-12-d

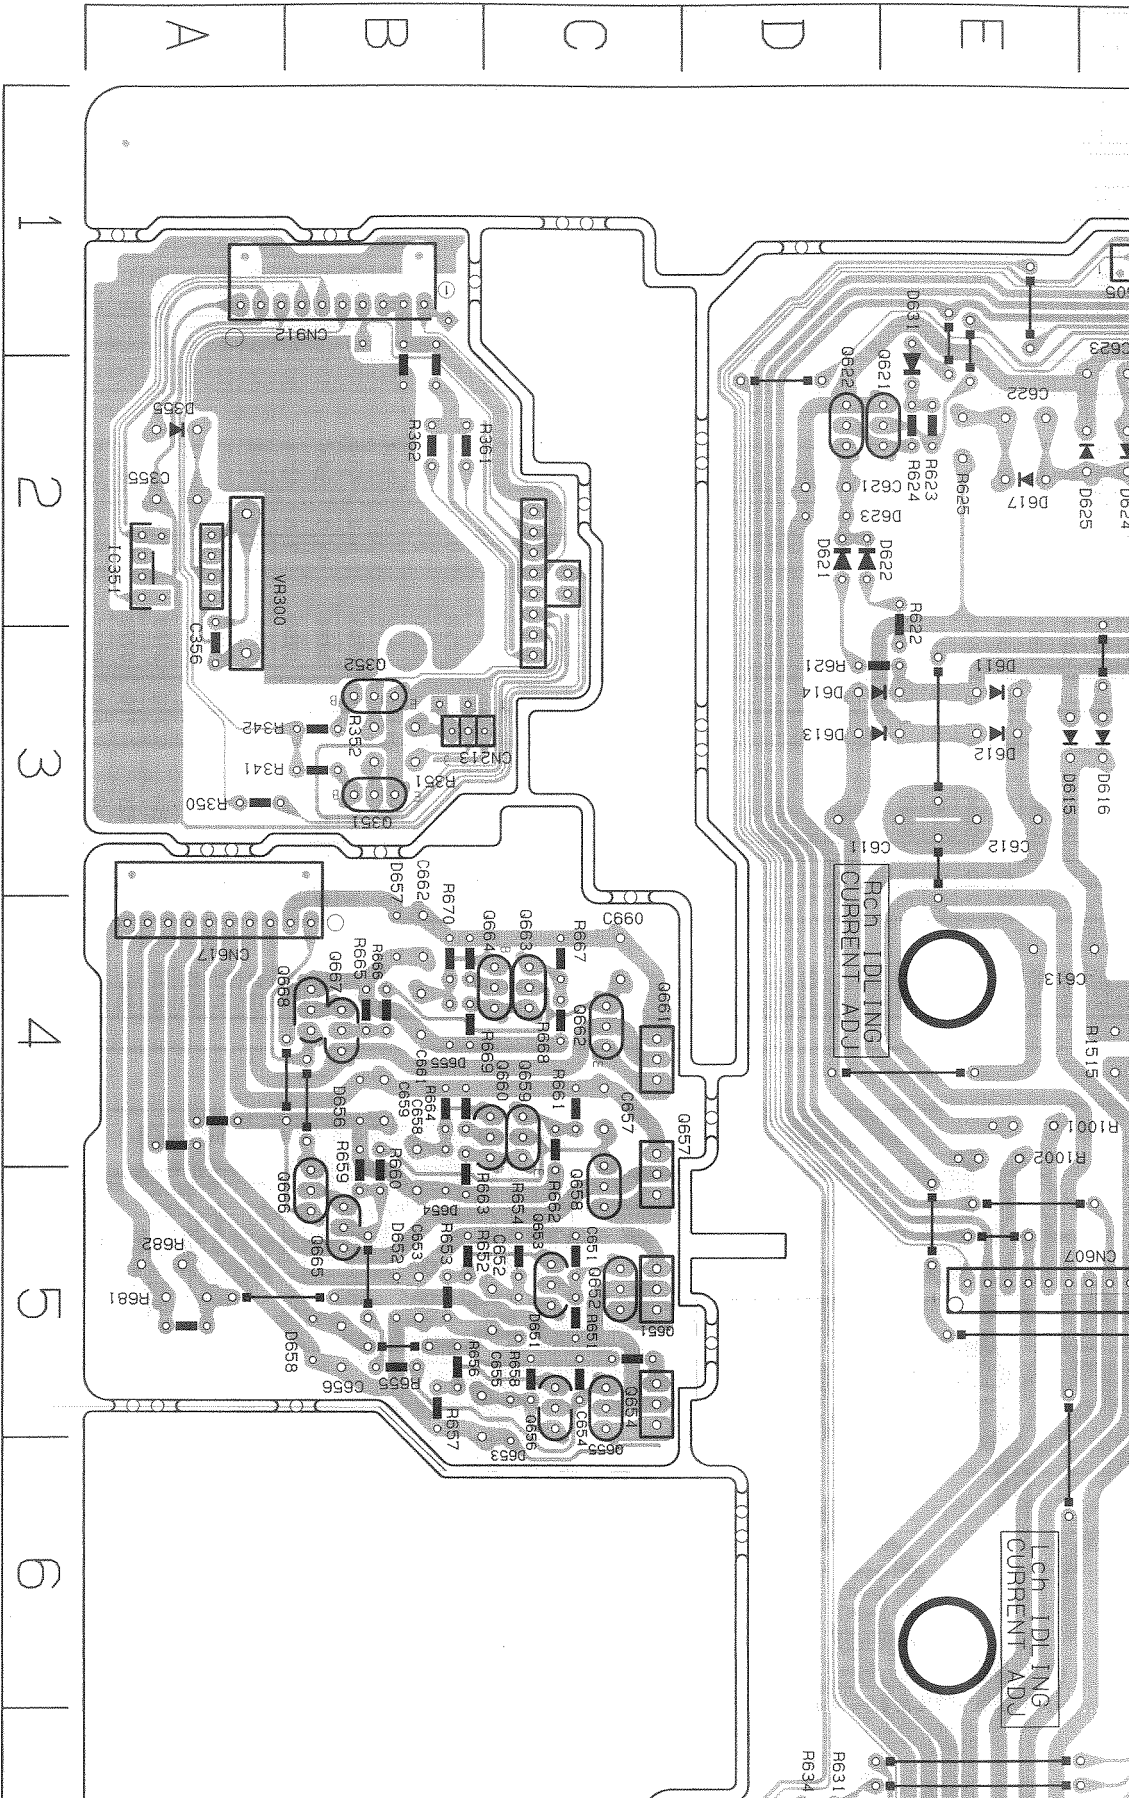


■ System Control and Power Supply P.C.B(ENB-241)

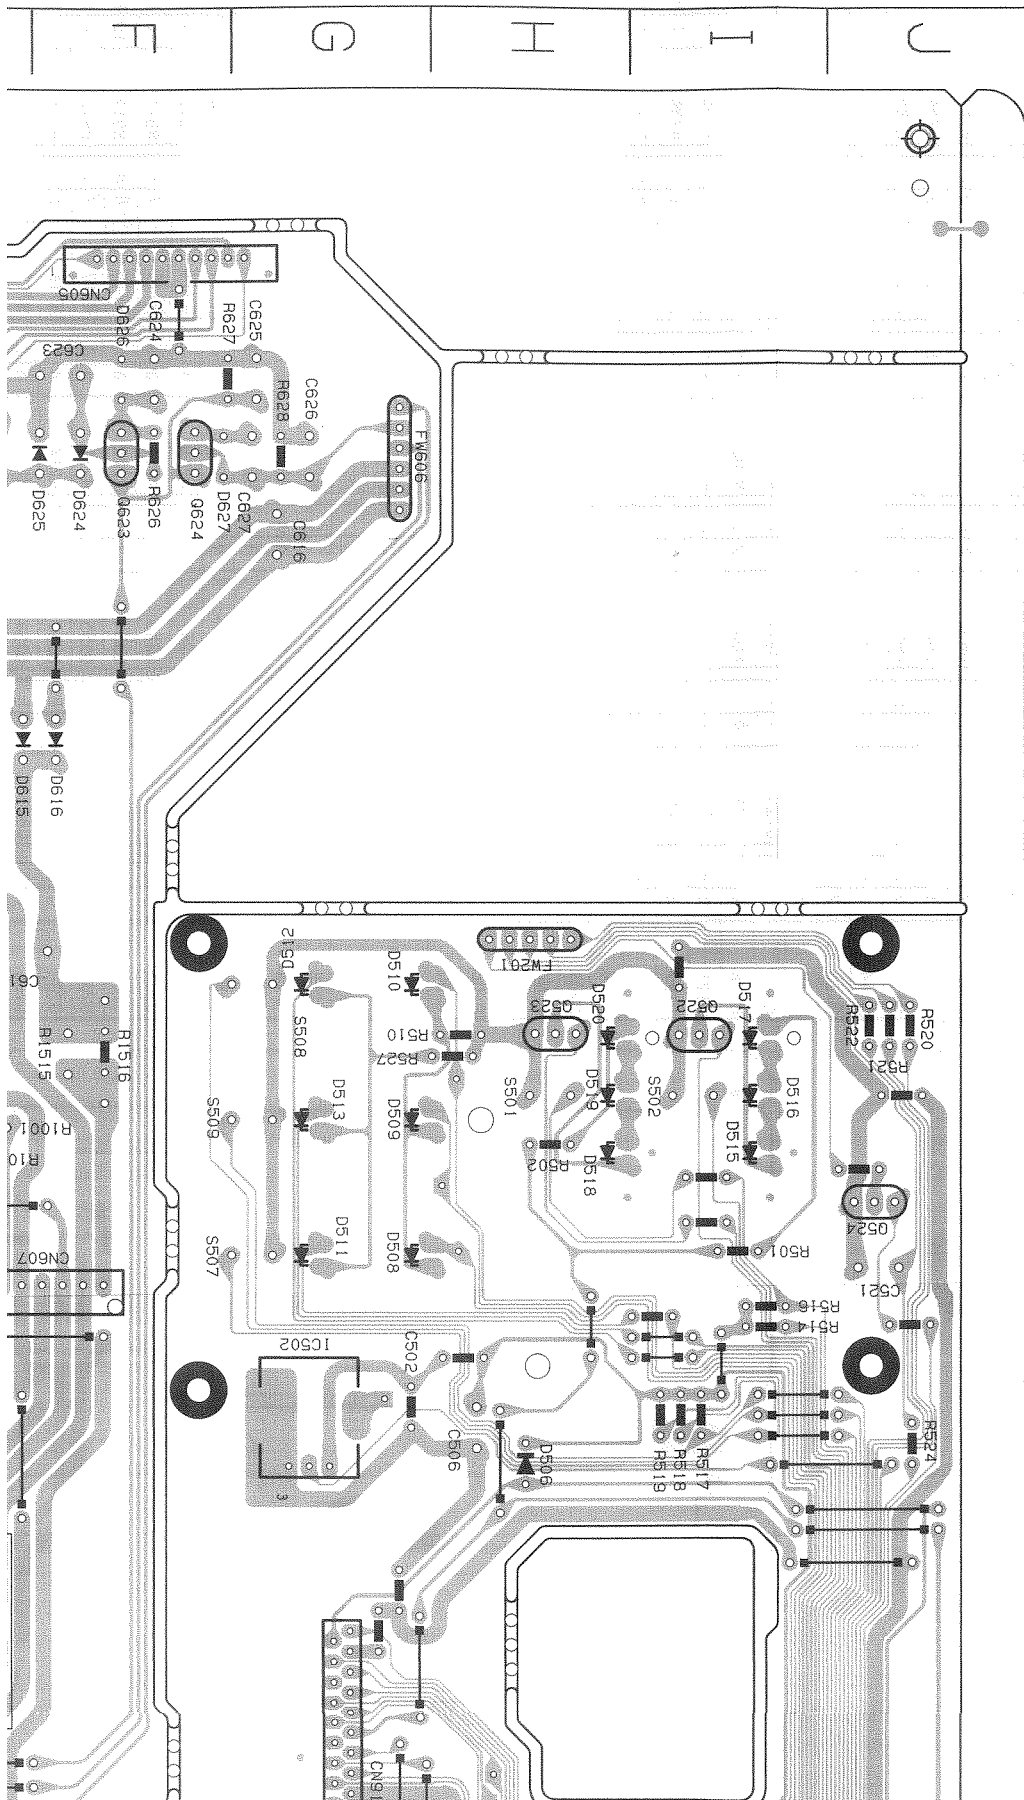

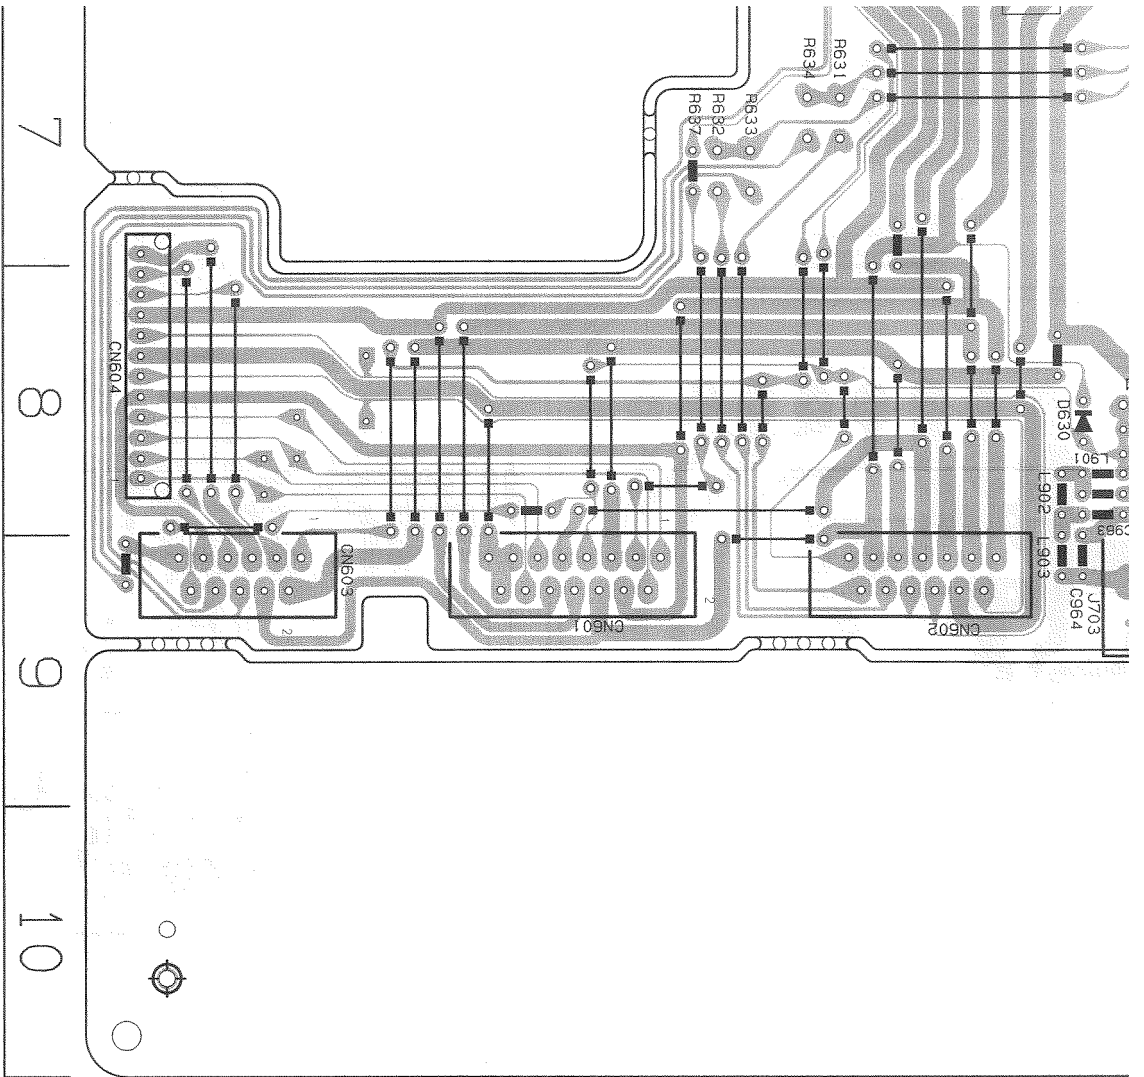

U623	2/F	D616	3/F	Q666	4/B	R653	5/B
U624	1/F	D617	2/E	Q667	4/B	R654	5/C
U625	1/G	D621	2/D	Q668	4/B	R655	5/B
U626	2/G	D622	2/D	R1001	4/E	R656	5/B
U627	2/G	D623	2/D	R1002	4/E	R657	5/B
U628	8/F	D624	2/F	R1515	4/F	R658	5/C
U661	5/C	D625	2/F	R1516	4/F	R659	4/B
U662	5/C	D626	2/F	R307	8/H	R660	4/B
U663	5/B	D627	2/F	R308	8/H	R661	4/C
U664	5/C	D629	8/F	R309	8/G	R662	4/C
U665	5/B	D630	8/F	R310	8/H	R663	4/B
U666	5/B	D631	1/E	R311	8/H	R664	4/B
U667	4/C	D651	5/C	R312	8/G	R665	4/B
U668	4/B	D652	5/B	R313	8/G	R666	4/B
U669	4/B	D653	5/C	R314	8/G	R667	4/C
U660	4/C	D654	4/B	R341	3/B	R668	4/C
U661	4/B	D655	4/B	R342	3/B	R669	4/B
U662	4/B	D656	4/B	R350	3/A	R670	4/B
U663	9/G	D657	3/B	R351	3/B	R681	5/A
U664	10/G	D658	5/B	R352	3/B	R682	5/A
U661	8/F	FW201	4/H	R361	2/B	R999	7/H
U662	8/E	FW606	2/G	R362	2/B	S501	4/H
U663	8/E	IC351	2/A	R501	5/1	S502	4/1
U664	8/E	IC501	9/H	R502	4/H	S503	10/H
U6213	3/B	IC502	5/G	R508	9/J	S507	5/G
U601	8/C	J703	8/F	R509	9/J	S508	4/G
U602	8/E	J791	10/G	R510	4/H	S509	4/G
U603	8/B	L901	8/E	R511	9/1	TW111	10/F
U604	8/A	L902	8/E	R513	7/1	X501	9/1
U605	1/G	L903	8/E	R514	5/1		
U607	5/E	L904	8/F	R515	9/H		
U615	7/J	L905	8/F	R516	5/1		
U617	3/B	Q351	3/B	R517	5/1		
U611	7/G	Q352	3/B	R518	5/1		
U612	1/B	Q503	9/1	R519	5/1		

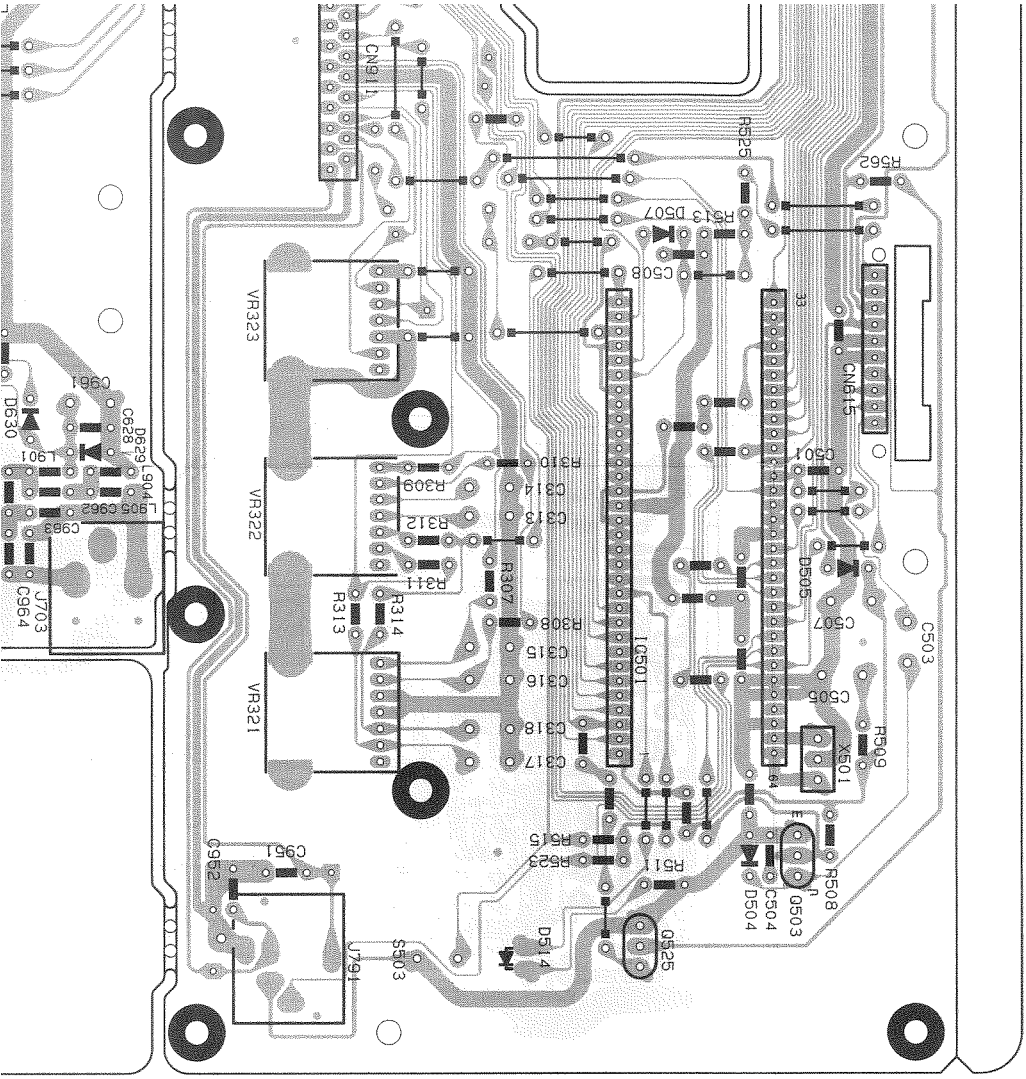


Location List (ENB-241)

Symbol	X	Y	Symbol	X	Y	Symbol	X	Y	Symbol	X	Y
C313	8 H	D355	2 A	0622	4 I	R520	4 J				
C314	8 H	D504	9 I	0523	4 H	R521	4 J				
C315	9 H	D505	8 J	0524	4 J	R522	4 J				
C316	9 H	D506	5 H	0525	10 I	R523	9 H				
C317	9 H	D507	7 I	0621	2 E	R524	5 J				
C318	9 H	D508	5 H	0622	2 D	R525	7 I				
C355	2 A	D509	4 H	0623	2 F	R527	4 H				
C356	2 A	D510	4 H	0624	2 F	R562	7 J				
C501	8 I	D511	5 G	0651	5 C	R621	3 D				
C502	5 G	D512	4 G	0652	5 C	R622	2 E				
C503	8 J	D513	4 G	0653	5 C	R623	2 E				
C504	9 I	D514	10 H	0654	5 C	R624	2 E				
C505	9 J	D515	4 I	0655	5 C	R625	2 E				
C506	5 H	D516	4 I	0656	5 C	R626	2 F				
C507	8 J	D517	4 I	0657	4 C	R627	1 F				
C508	7 I	D518	4 H	0658	4 C	R628	2 G				
C521	5 J	D519	4 H	0659	4 C	R631	7 D				
C611	3 E	D520	4 H	0660	4 C	R632	7 D				
C612	3 E	D611	3 E	0661	4 C	R633	7 D				
C613	4 F	D612	3 E	0662	4 C	R634	7 D				
C616	2 G	D613	3 D	0663	4 C	R637	7 D				
C621	2 D	D614	3 D	0664	4 C	R651	5 C				
C622	2 E	D615	3 E	0665	4 B	R652	5 B				
C623	2 F	D616	3 F	0666	4 B	R653	5 B				
C624	1 F	D617	2 E	0667	4 B	R654	5 C				
C625	1 G	D621	2 D	0668	4 B	R655	5 B				






P2-13-a

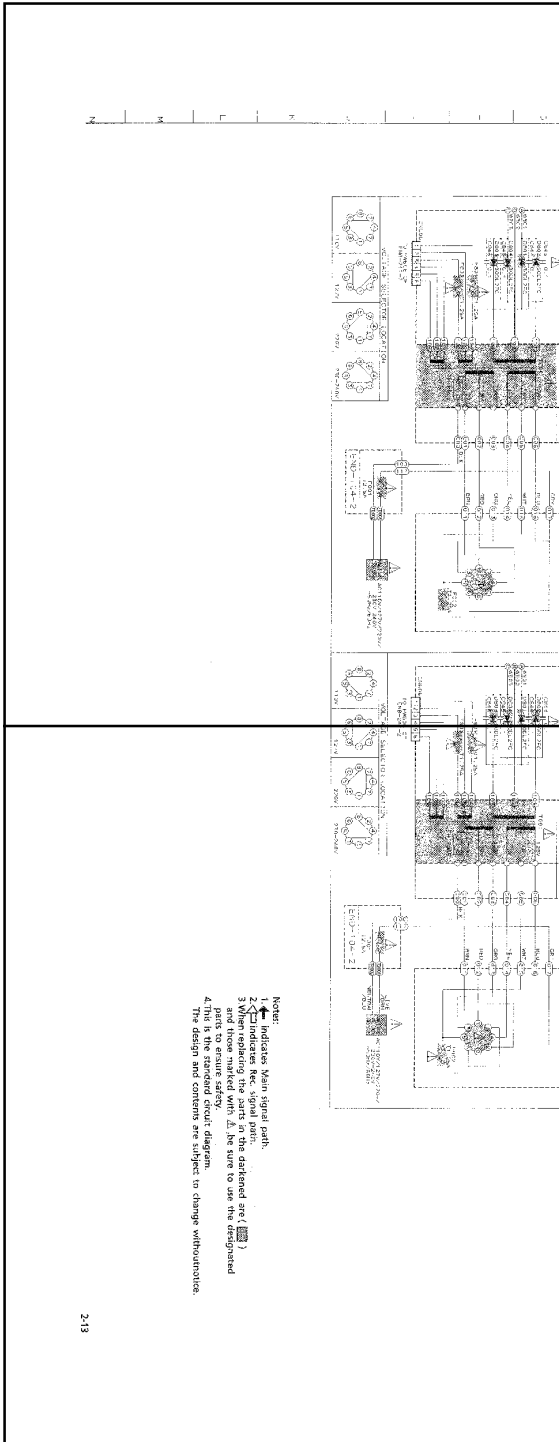


P2-13-b

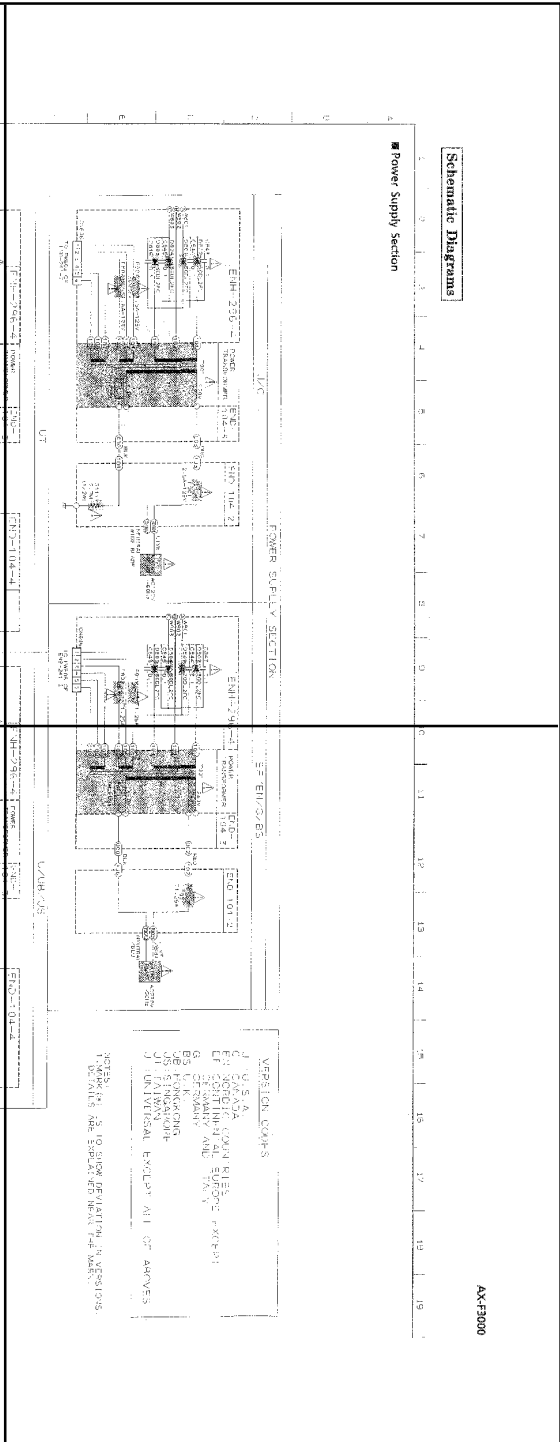

P2-13-c




P2-13-d

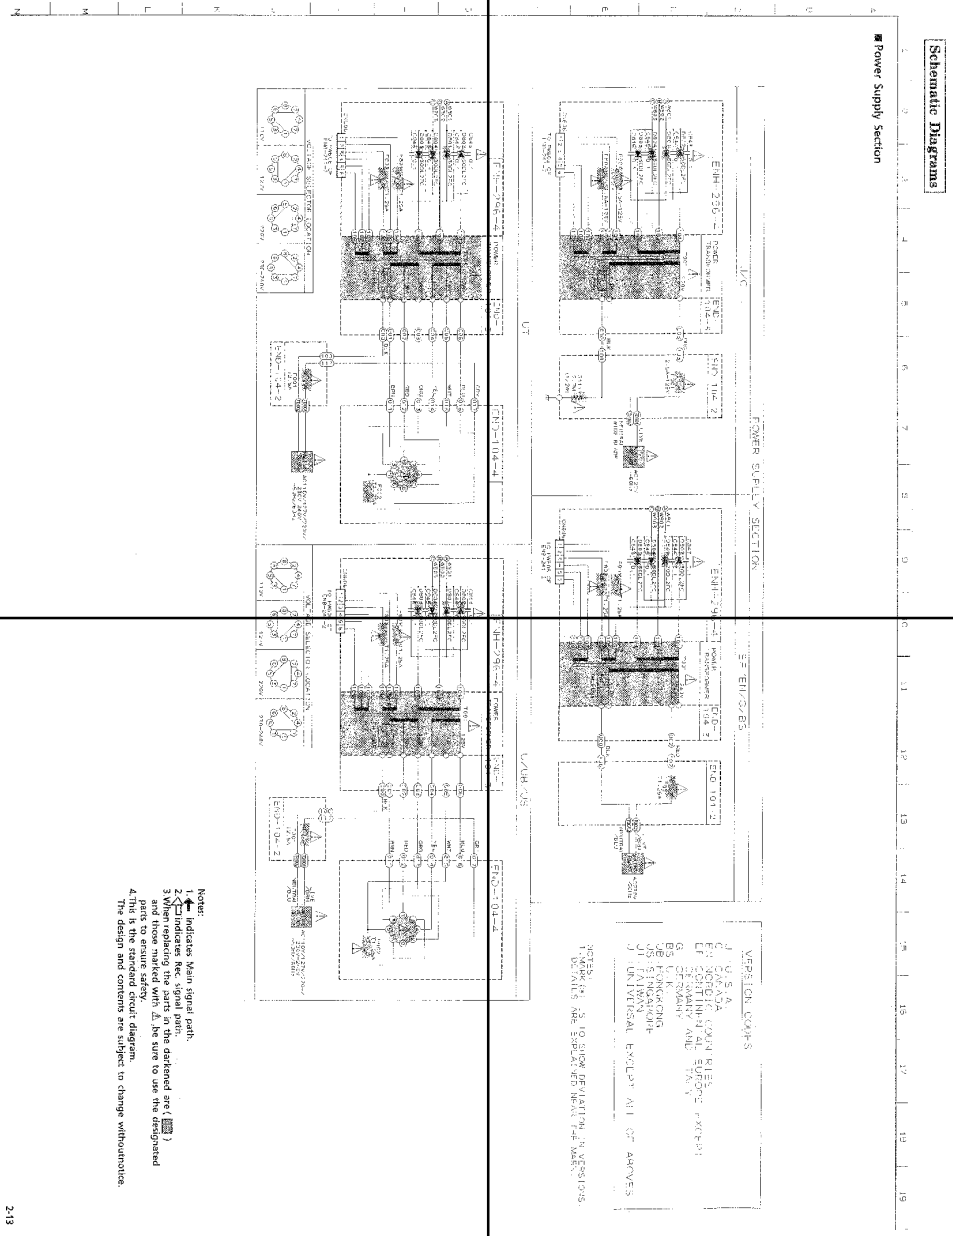








# Schematic Diagrams
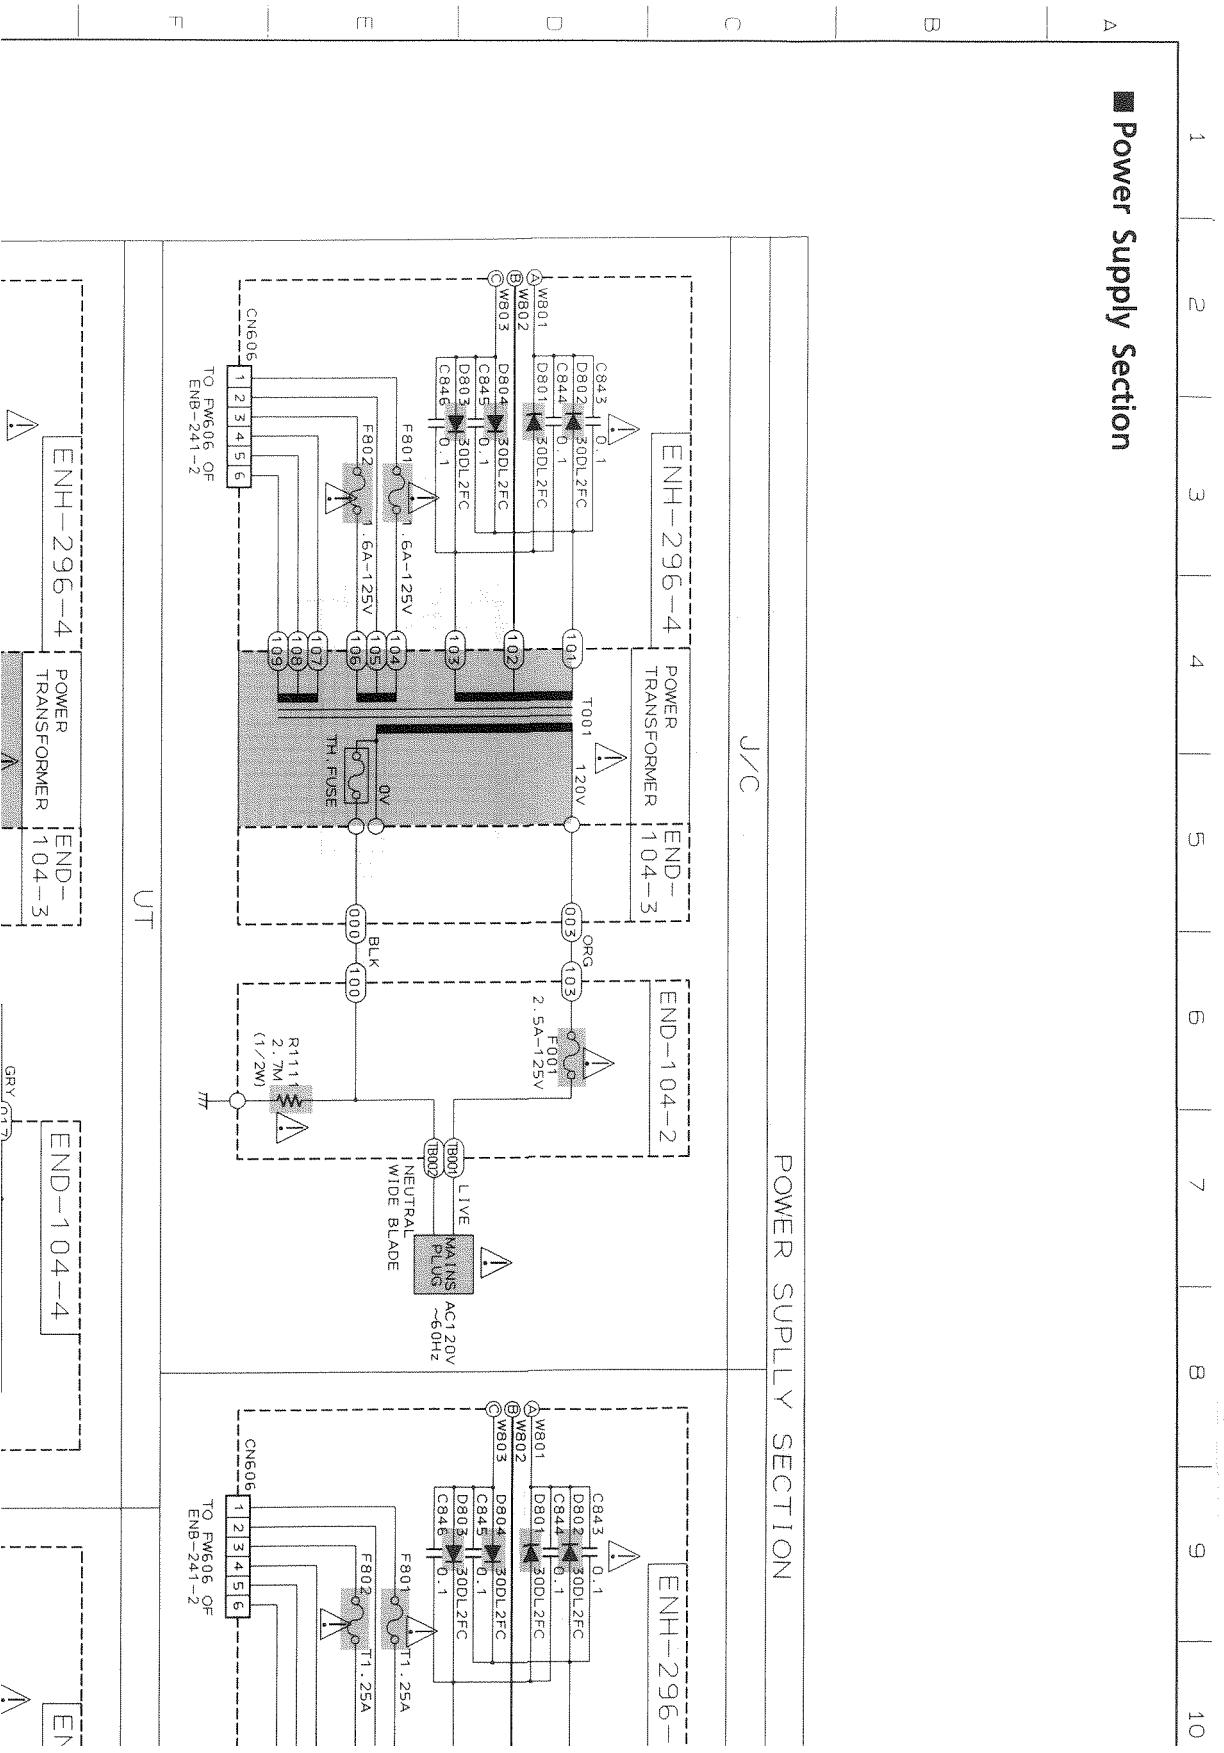
## Power Supply Section

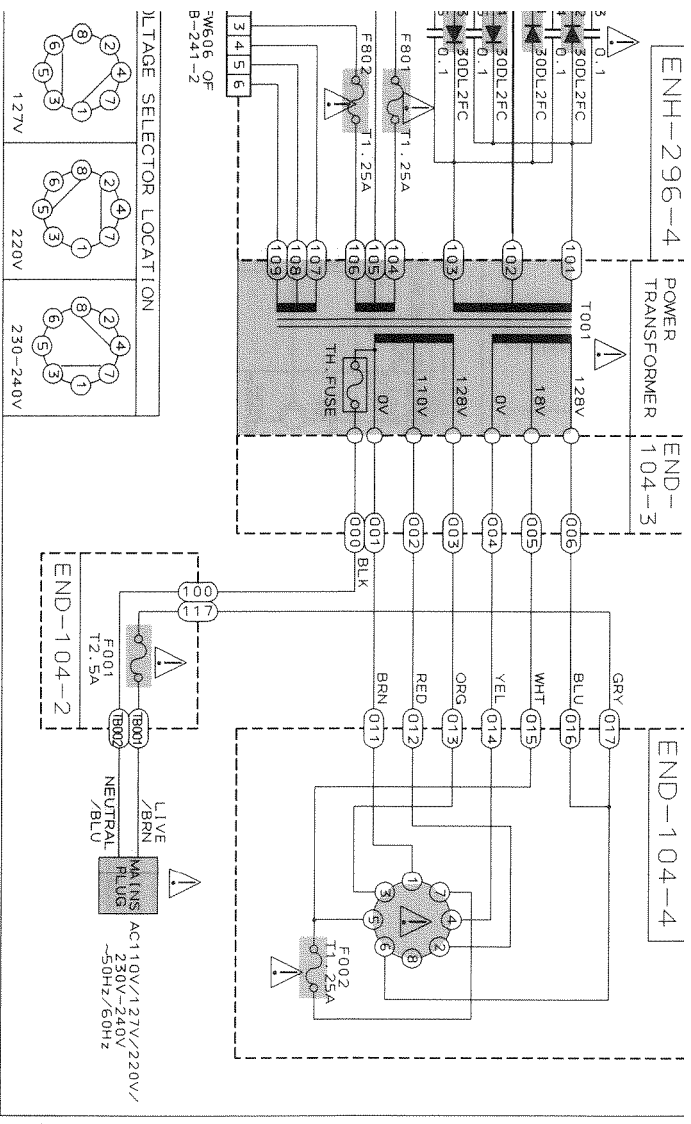




- Notes:
1.  indicates Main signal path.
  2.  indicates Rec. signal path.
  3. When replacing the parts in the darkened area (  ) and those marked with  , be sure to use the designated parts to ensure safety.
  4. This is the standard circuit diagram. The design and contents are subject to change without notice.

10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19

EF/EN/G/BS

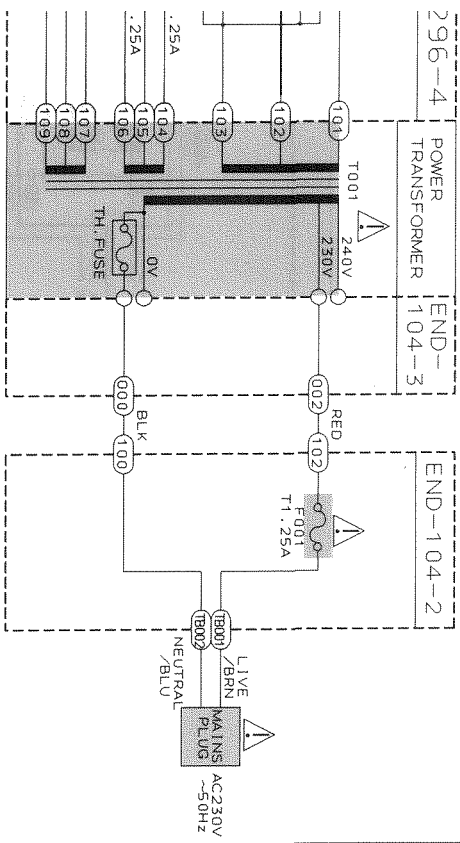

VERSION CODES

- J : U.S.A.
- C : CANADA
- EN : NORDIC COUNTRIES
- EF : CONTINENTAL EUROPE EXCEPT GERMANY AND ITALY
- G : GERMANY
- BS : U.K.
- UB : HONGKONG
- US : SINGAPORE
- UT : TAIWAN
- U : UNIVERSAL EXCEPT ALL OF ABOVE

NOTES:  
 1. MARK (\*) IS TO SHOW DEVIATION IN VERSIONS.  
 DETAILS ARE EXPLAINED NEAR THE MARK.

U/UB/US




GRY/NT



P2-14-a


P2-14-b

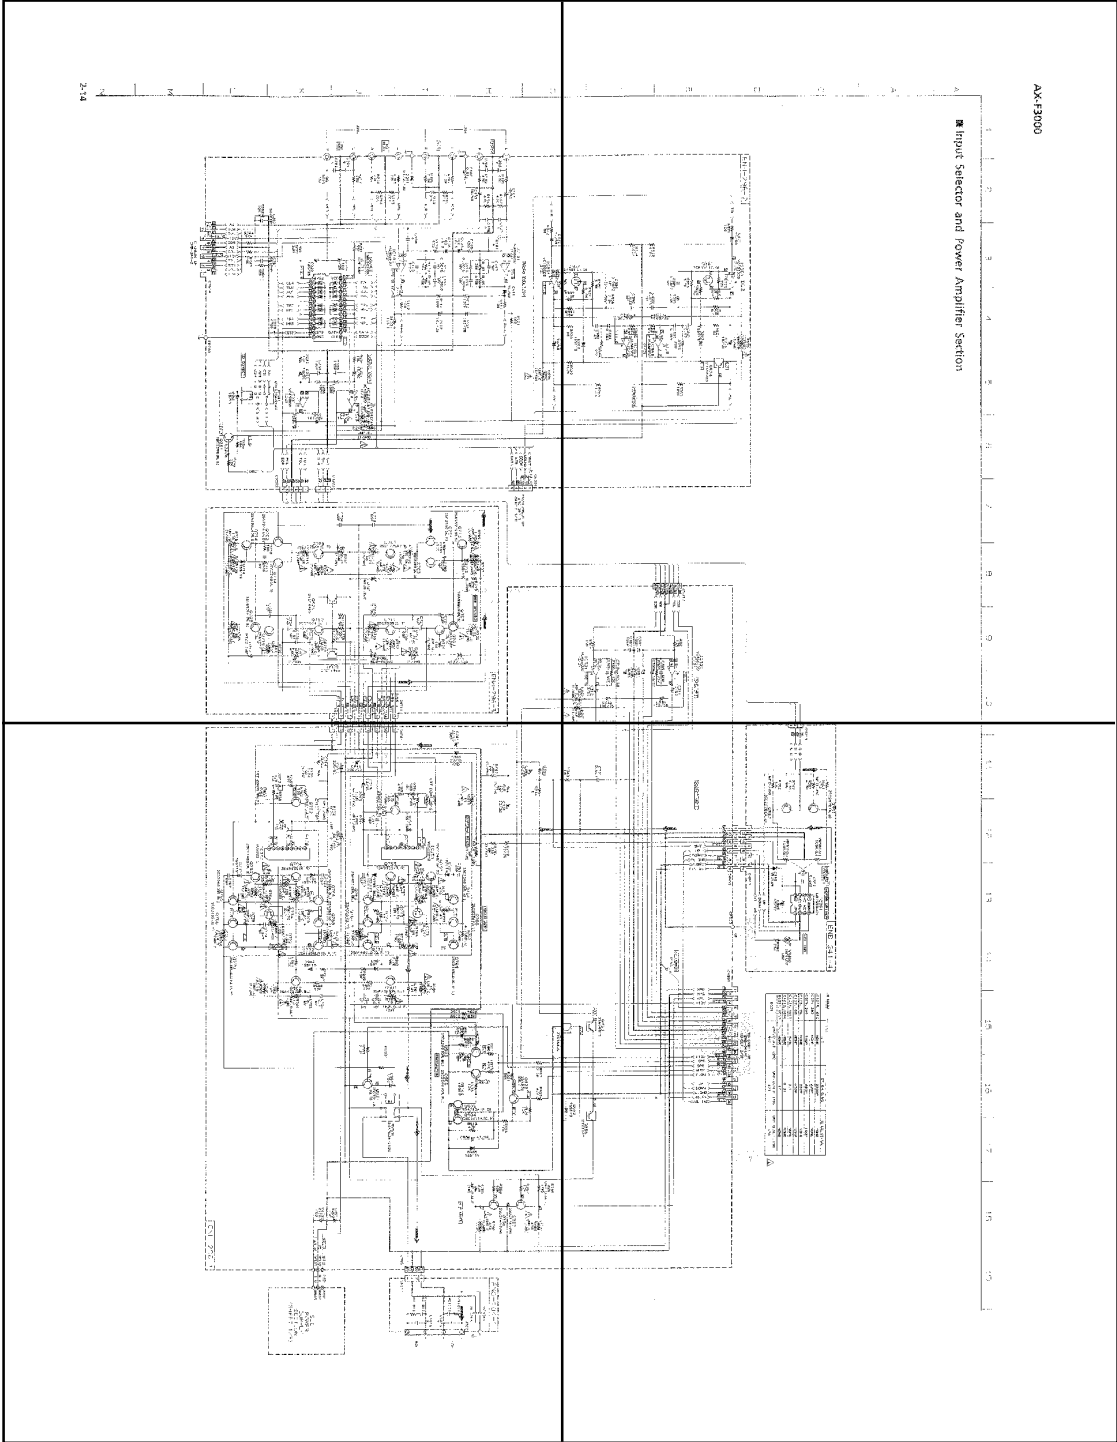

P2-14-c

P2-14-d



G I H I J K L M N

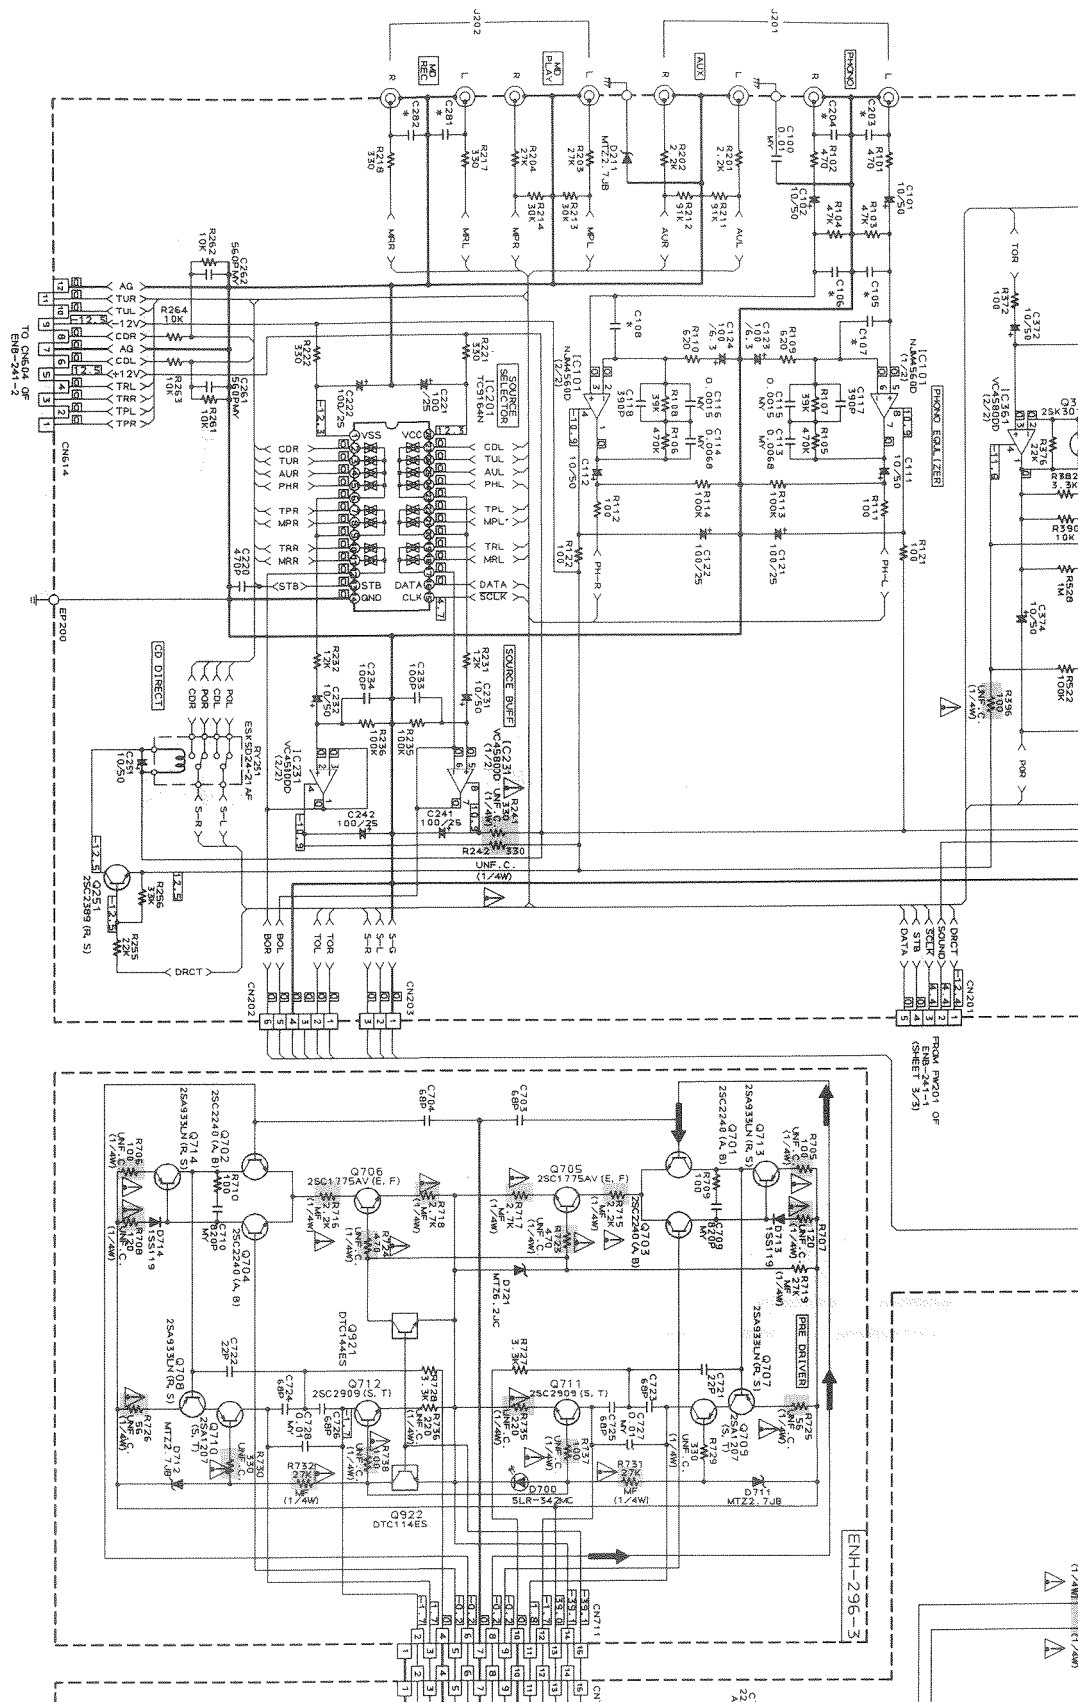





1 2 3 4 5 6 7 8 9 10

Input Selector and Power Amplifier Section

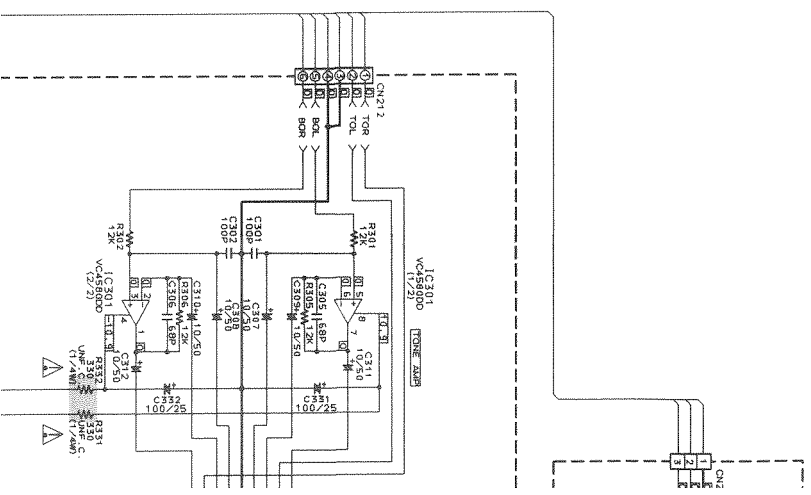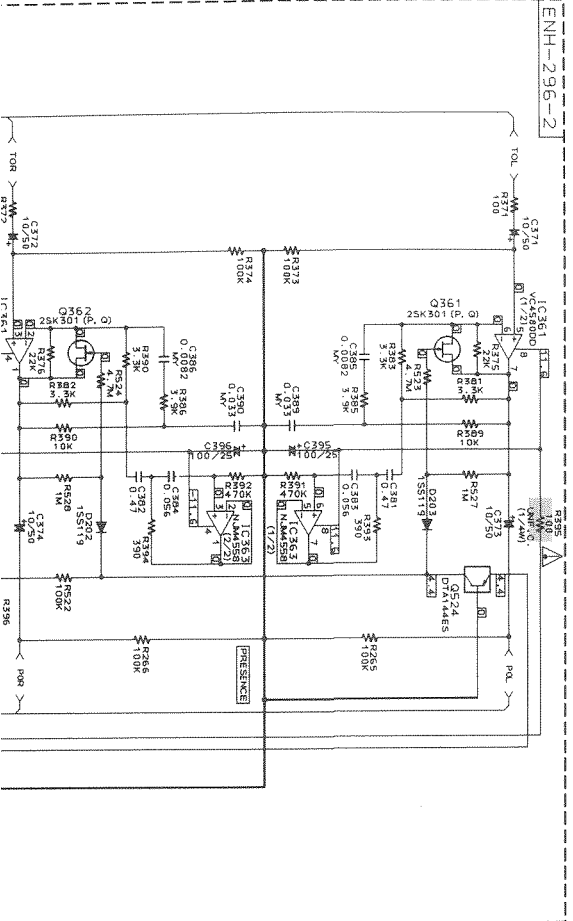

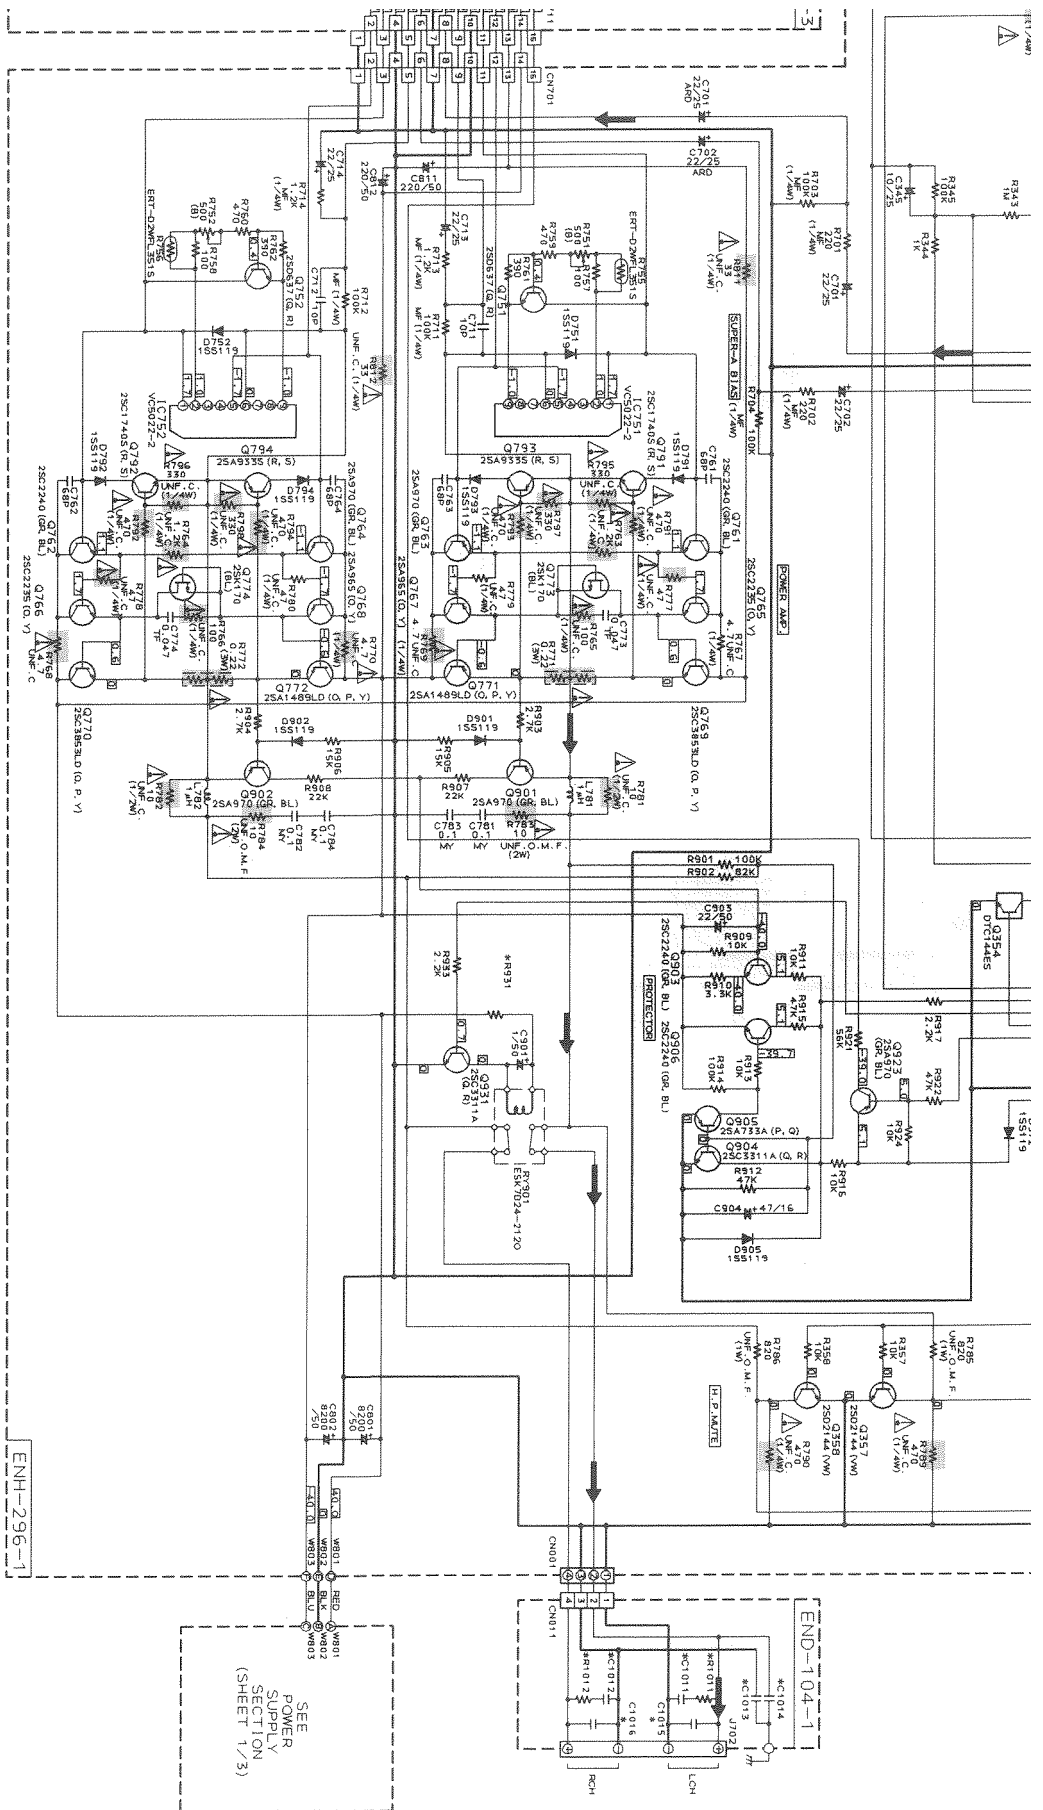

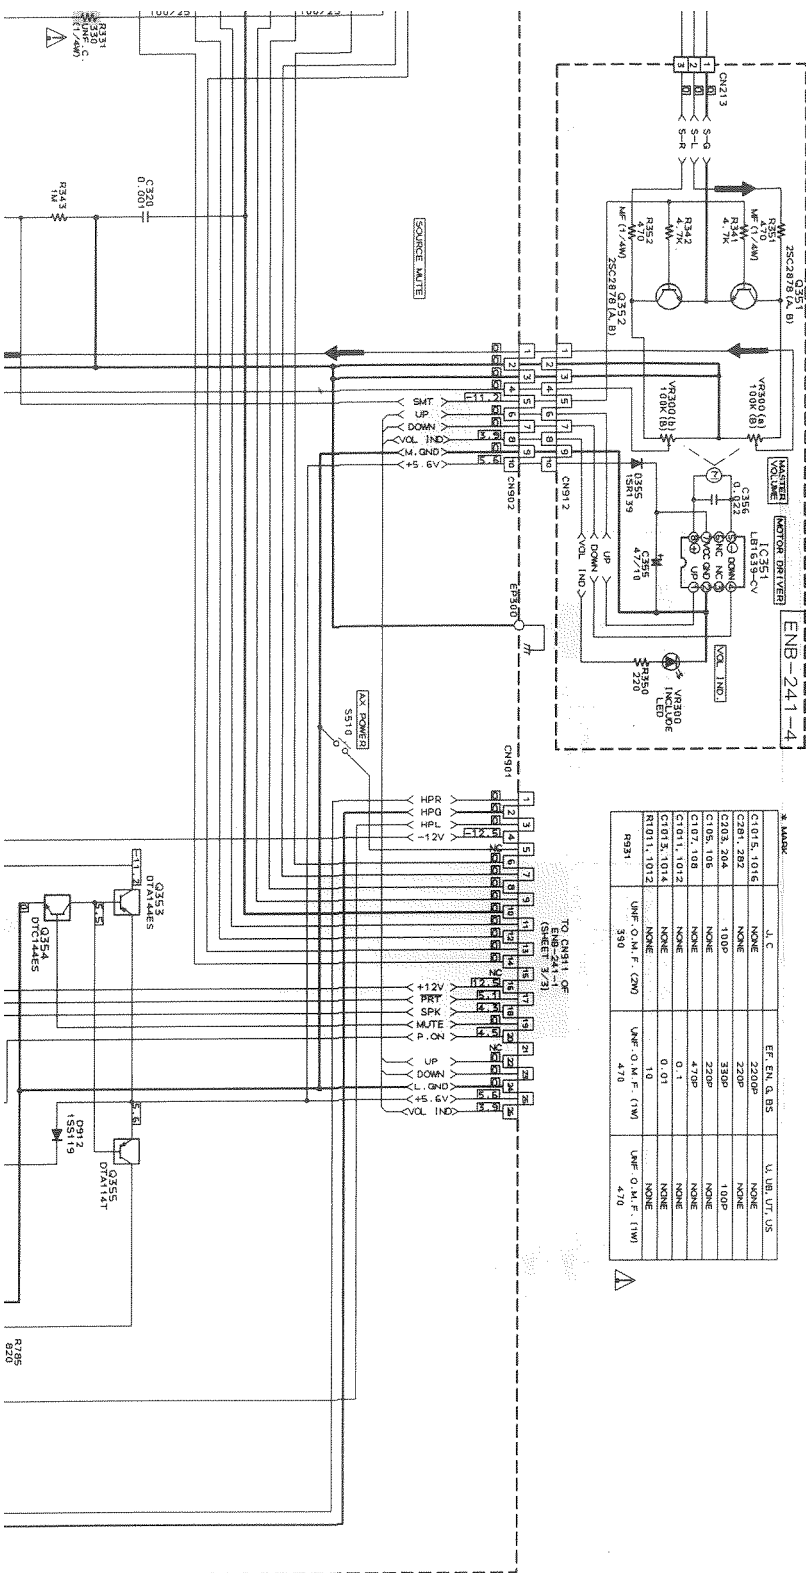


TO: CN911, OF: ENB-241-4

X Model	L.C.	EP, EN, G, BS	U, UB, UT, US
C1015, 1016	NONE	220p	NONE
C201, 202	NONE	220p	NONE
C203, 204	100p	330p	100p
C107, 108	NONE	220p	NONE
C1011, 1012	NONE	47p	NONE
C1013, 1014	NONE	0.01	NONE
R1011, 1012	NONE	10	NONE
R931	UNF. O.M.F. (2W)	UNF. O.M.F. (1W)	UNF. O.M.F. (1W)




P2-15-a

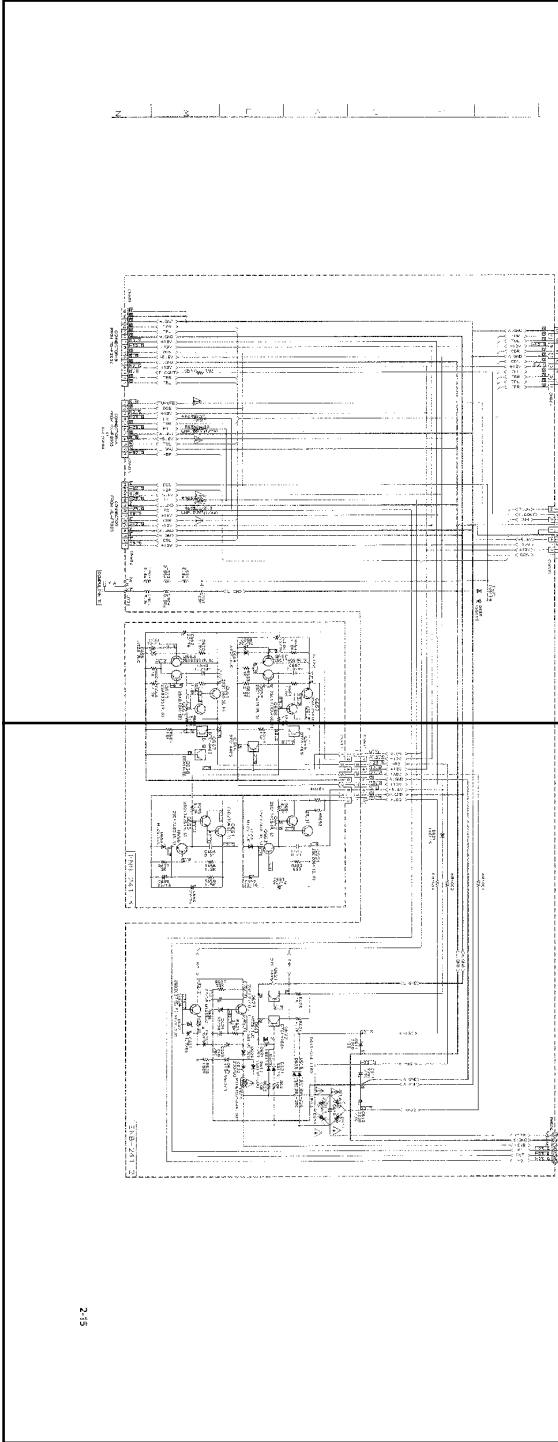

2/15


P2-15-c

P2-15-b

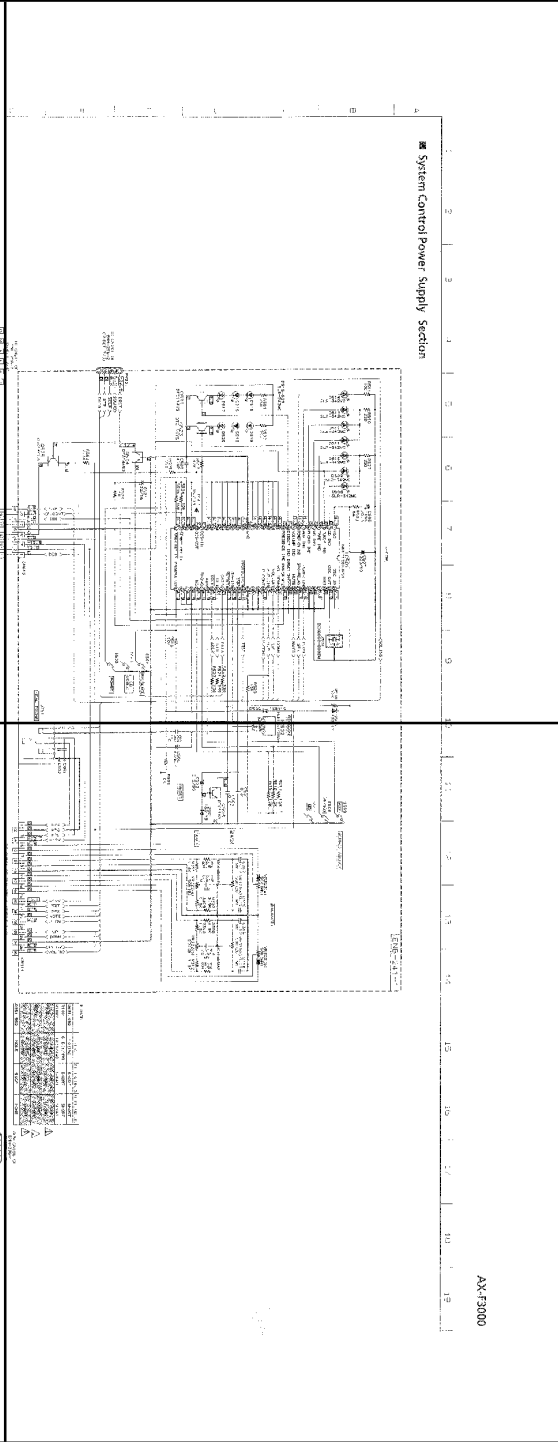



AX-F3000

P2-15-d

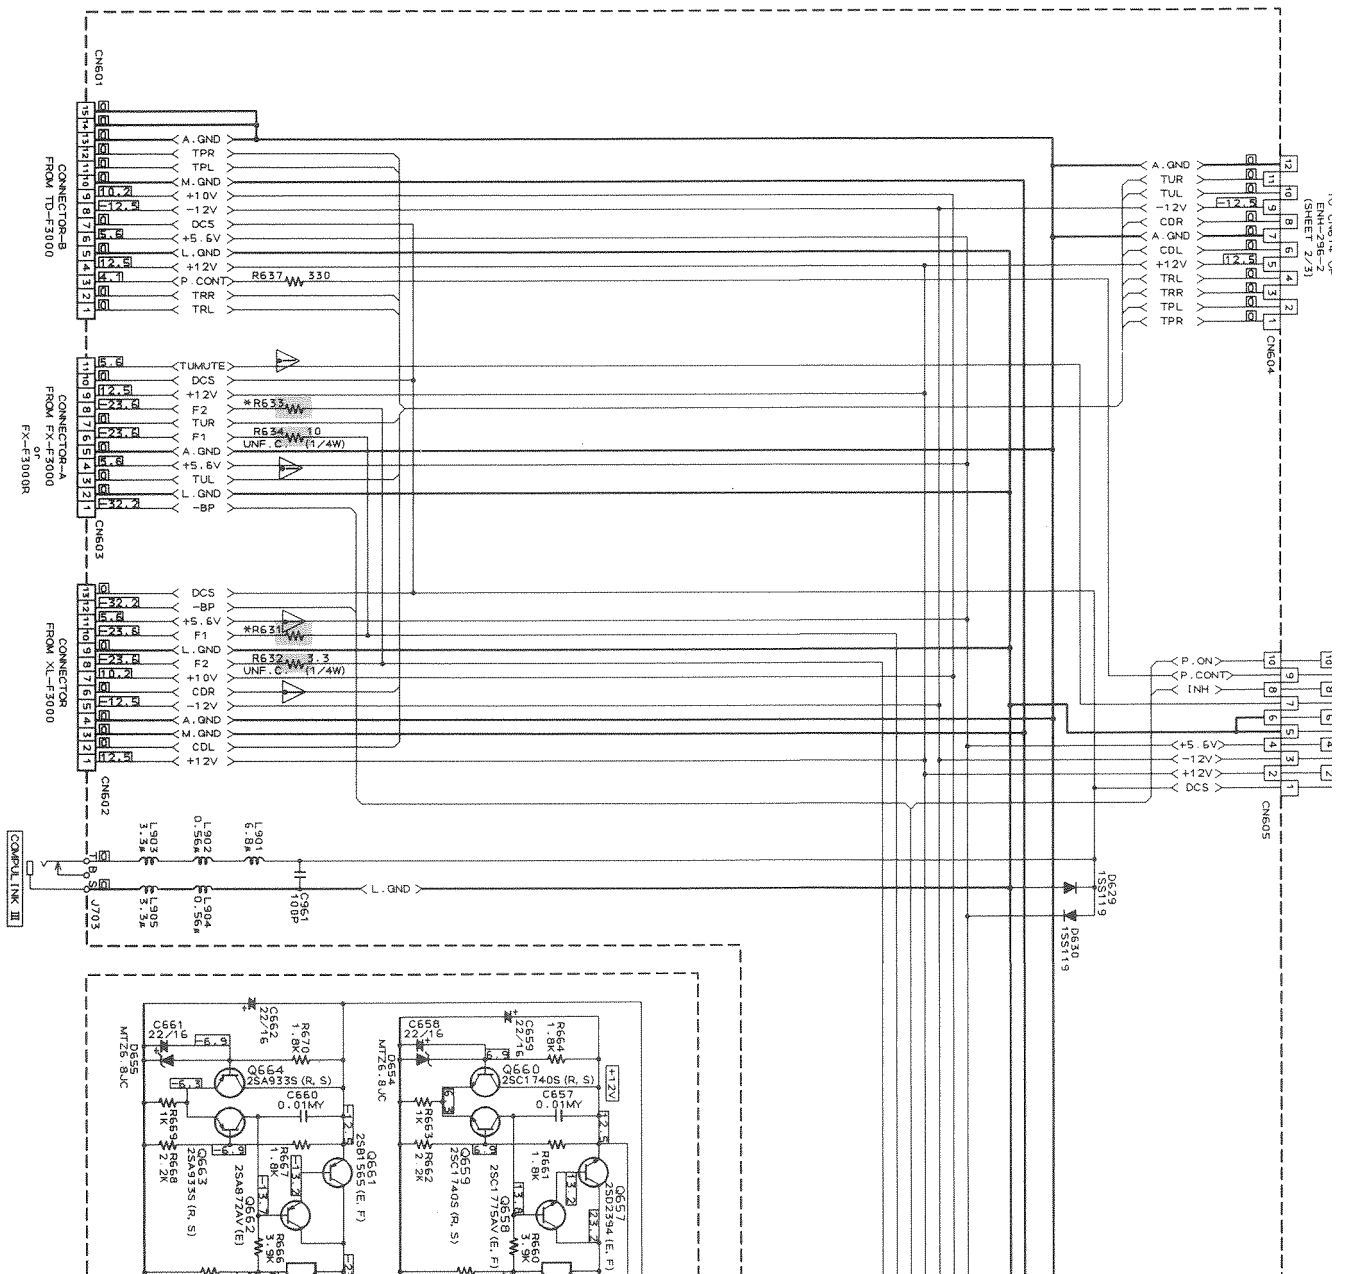

■ System Control Power Supply Section

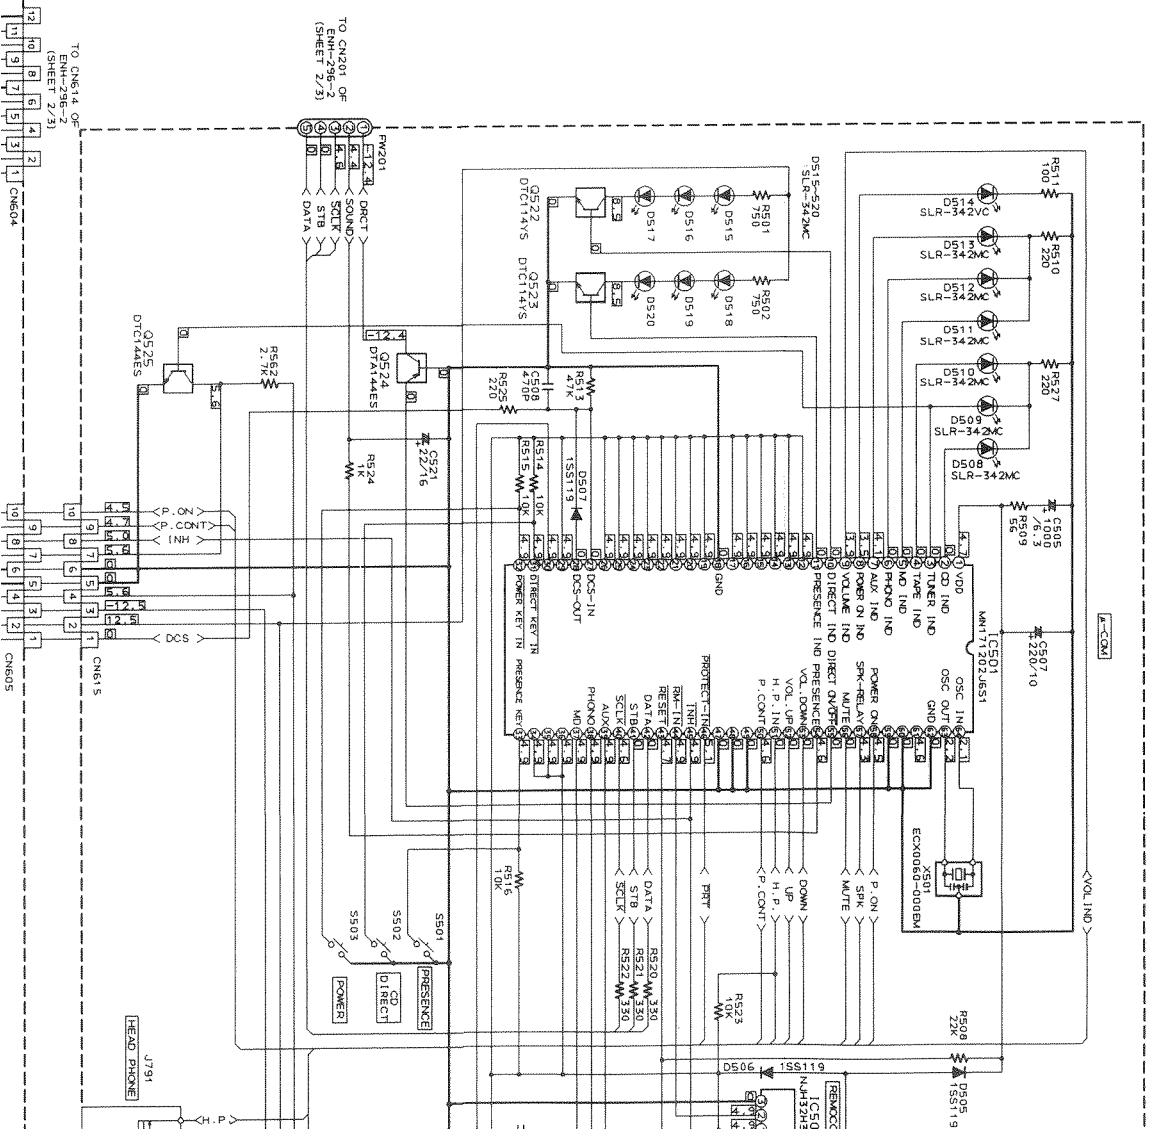


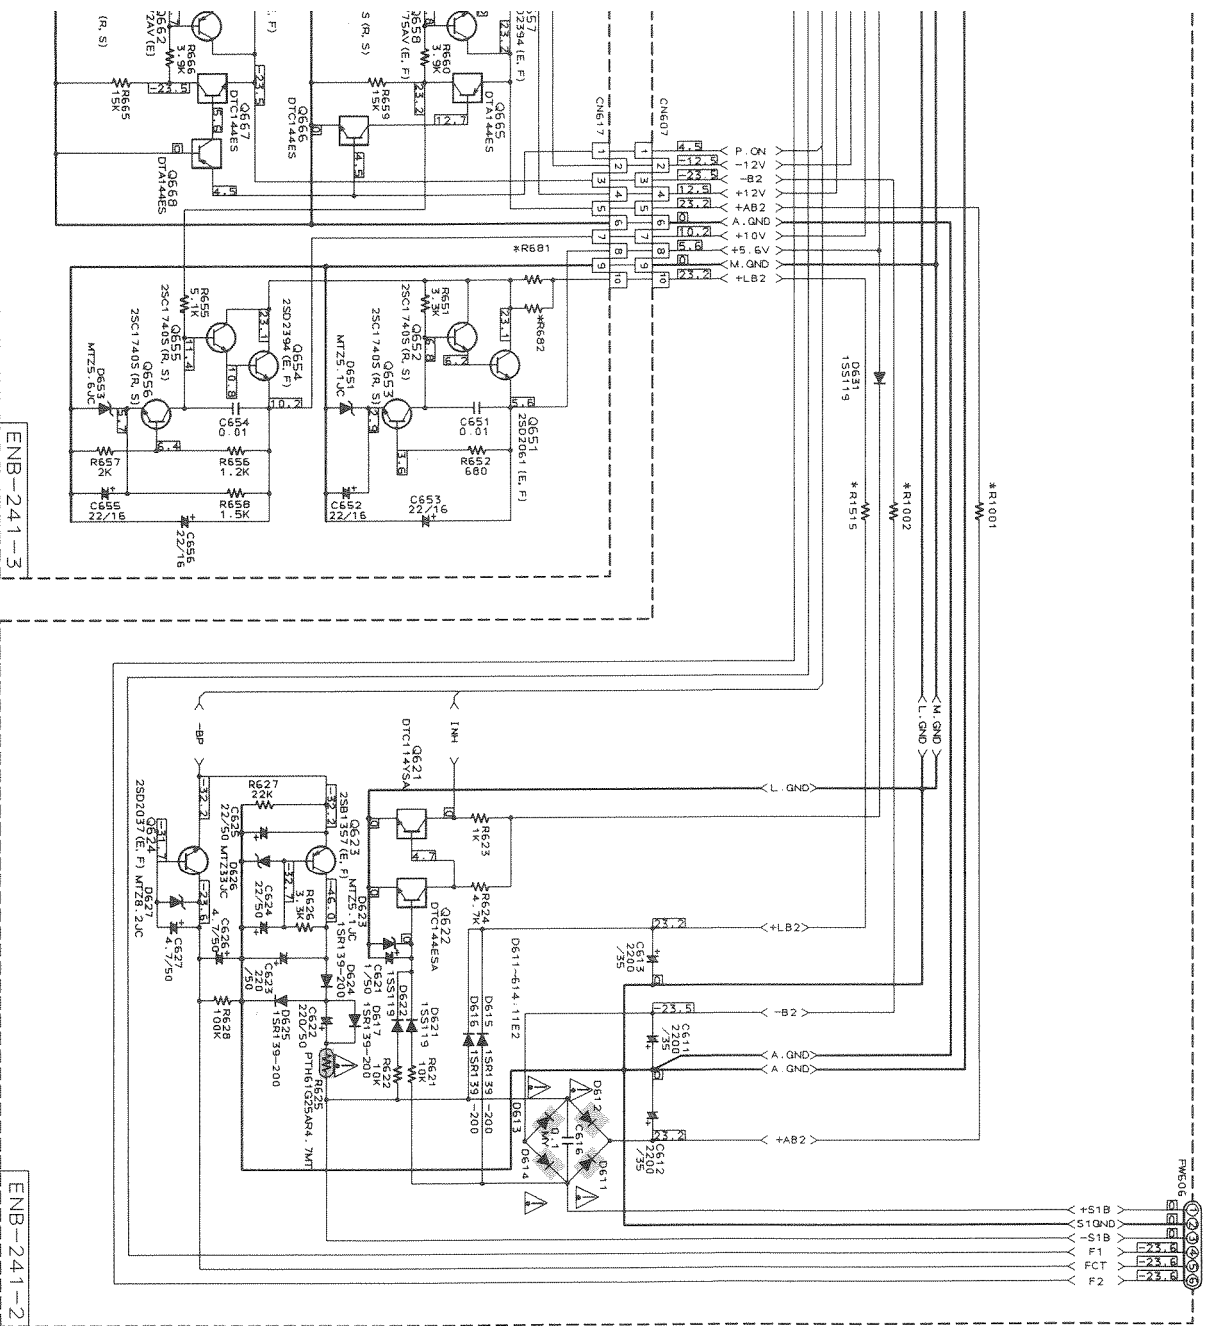

ENB-241-3

ENB-241-2



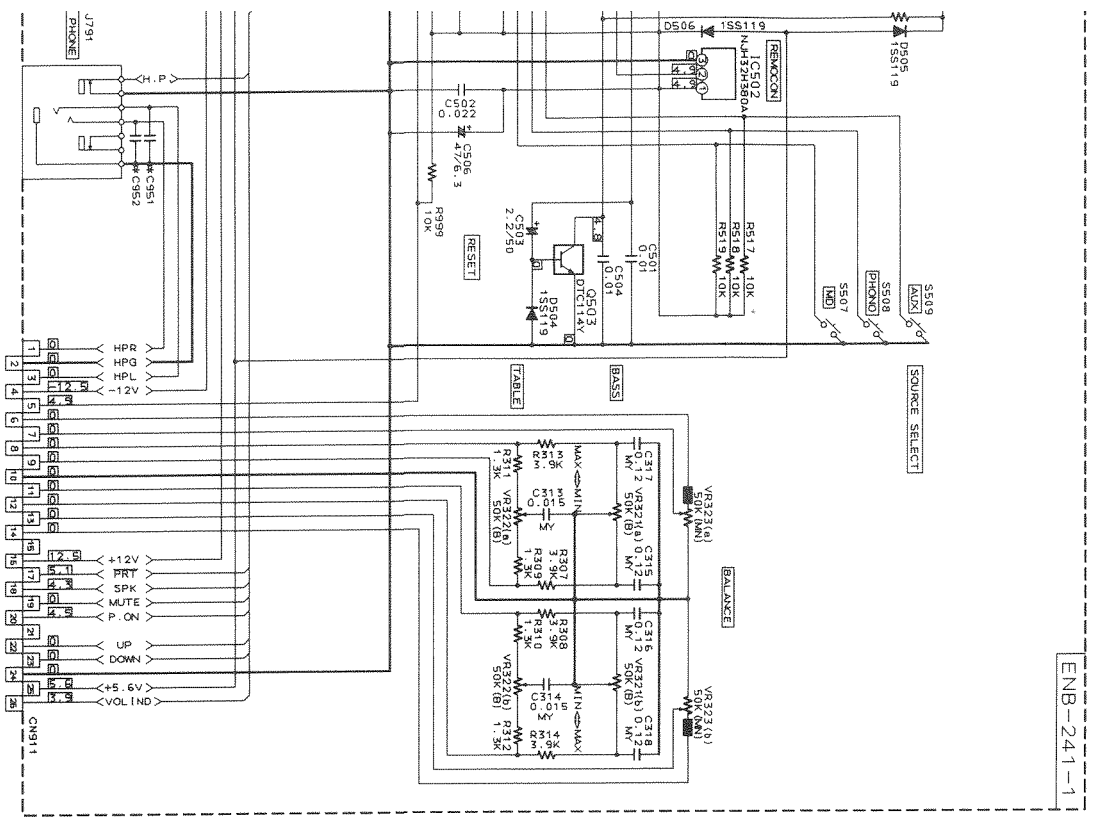

\* MARK

R6B1, 6B2	J.C	EF, EN, BS, G, U, UT, UB, US	SHORT
R1001	6.8 (1/4W)	SHORT	SHORT
R1002	10 (1/4W)	SHORT	SHORT
R6B3	2.7 (1/4W)	SHORT	SHORT
R6B4	2.7 (1/4W)	SHORT	SHORT
R6B5	2.7 (1/4W)	SHORT	SHORT
R6B6	2.7 (1/4W)	SHORT	SHORT
R6B7	2.7 (1/4W)	SHORT	SHORT
R6B8	2.7 (1/4W)	SHORT	SHORT
R6B9	2.7 (1/4W)	SHORT	SHORT
R6B10	2.7 (1/4W)	SHORT	SHORT
R6B11	2.7 (1/4W)	SHORT	SHORT
R6B12	2.7 (1/4W)	SHORT	SHORT
R6B13	2.7 (1/4W)	SHORT	SHORT
R6B14	2.7 (1/4W)	SHORT	SHORT
R6B15	2.7 (1/4W)	SHORT	SHORT
R6B16	2.7 (1/4W)	SHORT	SHORT
R6B17	2.7 (1/4W)	SHORT	SHORT
R6B18	2.7 (1/4W)	SHORT	SHORT
R6B19	2.7 (1/4W)	SHORT	SHORT
R6B20	2.7 (1/4W)	SHORT	SHORT
R6B21	2.7 (1/4W)	SHORT	SHORT
R6B22	2.7 (1/4W)	SHORT	SHORT
R6B23	2.7 (1/4W)	SHORT	SHORT
R6B24	2.7 (1/4W)	SHORT	SHORT
R6B25	2.7 (1/4W)	SHORT	SHORT
R6B26	2.7 (1/4W)	SHORT	SHORT
R6B27	2.7 (1/4W)	SHORT	SHORT
R6B28	2.7 (1/4W)	SHORT	SHORT
R6B29	2.7 (1/4W)	SHORT	SHORT
R6B30	2.7 (1/4W)	SHORT	SHORT
R6B31	2.7 (1/4W)	SHORT	SHORT
R6B32	2.7 (1/4W)	SHORT	SHORT
R6B33	2.7 (1/4W)	SHORT	SHORT
R6B34	2.7 (1/4W)	SHORT	SHORT
R6B35	2.7 (1/4W)	SHORT	SHORT
R6B36	2.7 (1/4W)	SHORT	SHORT
R6B37	2.7 (1/4W)	SHORT	SHORT
R6B38	2.7 (1/4W)	SHORT	SHORT
R6B39	2.7 (1/4W)	SHORT	SHORT
R6B40	2.7 (1/4W)	SHORT	SHORT
R6B41	2.7 (1/4W)	SHORT	SHORT
R6B42	2.7 (1/4W)	SHORT	SHORT
R6B43	2.7 (1/4W)	SHORT	SHORT
R6B44	2.7 (1/4W)	SHORT	SHORT
R6B45	2.7 (1/4W)	SHORT	SHORT
R6B46	2.7 (1/4W)	SHORT	SHORT
R6B47	2.7 (1/4W)	SHORT	SHORT
R6B48	2.7 (1/4W)	SHORT	SHORT
R6B49	2.7 (1/4W)	SHORT	SHORT
R6B50	2.7 (1/4W)	SHORT	SHORT
R6B51	2.7 (1/4W)	SHORT	SHORT
R6B52	2.7 (1/4W)	SHORT	SHORT
R6B53	2.7 (1/4W)	SHORT	SHORT
R6B54	2.7 (1/4W)	SHORT	SHORT
R6B55	2.7 (1/4W)	SHORT	SHORT
R6B56	2.7 (1/4W)	SHORT	SHORT
R6B57	2.7 (1/4W)	SHORT	SHORT
R6B58	2.7 (1/4W)	SHORT	SHORT
R6B59	2.7 (1/4W)	SHORT	SHORT
R6B60	2.7 (1/4W)	SHORT	SHORT
R6B61	2.7 (1/4W)	SHORT	SHORT
R6B62	2.7 (1/4W)	SHORT	SHORT
R6B63	2.7 (1/4W)	SHORT	SHORT
R6B64	2.7 (1/4W)	SHORT	SHORT
R6B65	2.7 (1/4W)	SHORT	SHORT
R6B66	2.7 (1/4W)	SHORT	SHORT
R6B67	2.7 (1/4W)	SHORT	SHORT
R6B68	2.7 (1/4W)	SHORT	SHORT
R6B69	2.7 (1/4W)	SHORT	SHORT
R6B70	2.7 (1/4W)	SHORT	SHORT
R6B71	2.7 (1/4W)	SHORT	SHORT
R6B72	2.7 (1/4W)	SHORT	SHORT
R6B73	2.7 (1/4W)	SHORT	SHORT
R6B74	2.7 (1/4W)	SHORT	SHORT
R6B75	2.7 (1/4W)	SHORT	SHORT
R6B76	2.7 (1/4W)	SHORT	SHORT
R6B77	2.7 (1/4W)	SHORT	SHORT
R6B78	2.7 (1/4W)	SHORT	SHORT
R6B79	2.7 (1/4W)	SHORT	SHORT
R6B80	2.7 (1/4W)	SHORT	SHORT
R6B81	2.7 (1/4W)	SHORT	SHORT
R6B82	2.7 (1/4W)	SHORT	SHORT
R6B83	2.7 (1/4W)	SHORT	SHORT
R6B84	2.7 (1/4W)	SHORT	SHORT
R6B85	2.7 (1/4W)	SHORT	SHORT
R6B86	2.7 (1/4W)	SHORT	SHORT
R6B87	2.7 (1/4W)	SHORT	SHORT
R6B88	2.7 (1/4W)	SHORT	SHORT
R6B89	2.7 (1/4W)	SHORT	SHORT
R6B90	2.7 (1/4W)	SHORT	SHORT
R6B91	2.7 (1/4W)	SHORT	SHORT
R6B92	2.7 (1/4W)	SHORT	SHORT
R6B93	2.7 (1/4W)	SHORT	SHORT
R6B94	2.7 (1/4W)	SHORT	SHORT
R6B95	2.7 (1/4W)	SHORT	SHORT
R6B96	2.7 (1/4W)	SHORT	SHORT
R6B97	2.7 (1/4W)	SHORT	SHORT
R6B98	2.7 (1/4W)	SHORT	SHORT
R6B99	2.7 (1/4W)	SHORT	SHORT
R6B100	2.7 (1/4W)	SHORT	SHORT

FROM CN505 OF ENH-295-4 (SHEET 1/3)

FW506



# XL-F3000

## Contents

<i>Description of Major ICs</i> .....	3-2
<i>Internal Connection of Display</i> .....	3-8
<i>Disassembly Procedures</i> .....	3-9
<i>Flow of Functional Operation Until TOC is Read</i> .....	3-12
<i>Self - diagnosis for pickup</i> .....	3-14
<i>Block Diagram</i> .....	3-16
<i>Printed Circuit Boards</i> .....	3-17
<i>Schematic Diagrams</i> .....	3-18

■ MN171602JJX1 (IC901) : CD SYSTEM CONTROLLER

1. Terminal Layout



2. Key Matrix

	KEY I 0	KEY I 1	KEY I 2	KEY I 3
G4	■/CLEAR (S904)	▶/   (908)	REPEAT (S912)	--
G6	--	▲ (S906)	--	Ⓜ (S914)
G7	--	PROGRAM (S905)	--	Ⓜ (S913)

Pin Functions


Pin NO.	Symbol	I/O	Function	Pin NO.	Symbol	I/O	Function
1	V <sub>DD</sub>	--	+ 5V	33	PLAY IND	O	*PLAY* Indicator control signal
2	KEY I0	I	Key input	34	TLOCK	I	Tracking Lock with "L"
3	KEY I1	I	Key input	35	FLOCK	I	Focus Lock with "L"
4	KEY I2	I	Key input	36	MCLK	O	Command Clock Signal
5	KEY I3	I	Key input	37	MLD	O	Command Load Signal
6	12G	O	FL Grid control signal	38	MDATA	O	Command Data Signal
7	11G	O	FL Grid control signal	39	NC	-	Not used
8	10G	O	FL Grid control signal	40	SOCK	O	External clock for Sub Code Q register
9	9G	O	FL Grid control signal	41	SUBQ	I	Sub code Q code input
10	8G	O	FL Grid control signal	42	P.OFF	O	Power off signal output (L:ON, H:OFF)
11	7G	O	FL Grid control signal(Key output)	43	RST	I	Reset signal input
12	6G	O	FL Grid control signal(Key output)	44	STATUS	I	Status signal input
13	5G	O	FL Grid control signal	45		-	GND
14	4G	O	FL Grid control signal(Key output)	46	GND	-	GND
15	3G	O	FL Grid control signal	47	SENSE	I	Sense signal input
16	2G	O	FL Grid control signal	48	NC	-	Not used
17	1G	O	FL Grid control signal	49	RESEY SW	I	RESET SW active: low
18	-BP	I	FL Power	50	OPEN SW	I	OPEN SW active: low
19	S1	O	FL anode control signal	51	CLOSE SW	I	CLOSE SW active: low
20	S2	O	FL anode control signal	52	CLOSE	O	CLOSE signal output
21	S3	O	FL anode control signal	53	OPEN	O	OPEN signal output
22	S4	O	FL anode control signal	54	LSIRST	O	CD reset signal output (L: RESET)
23	S5	O	FL anode control signal	55	NC	-	Not used
24	S6	O	FL anode control signal	56	NC	-	Not used
25	S7	O	FL anode control signal	57	NC	-	Not used
26	S8	O	FL anode control signal	58	DCS IN	I	CompuLink signal input
27	S9	O	FL anode control signal	59	DCS OUT	O	CompuLink signal output
28	NC	-	Not used	60	X1	-	Connected to Ground
29	NC	-	Not used	61	X2	-	Not connection
30	NC	-	Not used	62	V <sub>SS</sub>	-	GND
31	NC	-	Not used	63	OSC2	O	Dock oscillation output
32	NC	-	Not used	64	OSC1	I	Dock oscillation input

■ AN8806SB (IC501) : RF & SERVO AMP

1. Terminal Layout


PD	1	36	PDAC
LD	2	35	PDBD
LDON	3	34	PDE
LDP	4	33	PDF
VCC	5	32	PDER
RF-	6	31	PDFR
RF OUT	7	30	TBAL
RF IN	8	29	FBAL
C.AGC	9	28	FE-
ARF	10	27	FE OUT
C.ENV	11	26	TE-
C.EA	12	25	TE OUT
CS BDO	13	24	CROSS
BDO	14	23	TE BPF
CS BRT	15	22	VDET
OFTR	16	21	LD OFF
NRFDET	17	20	VREF
GND	18	19	ENV

2. Block Diagram

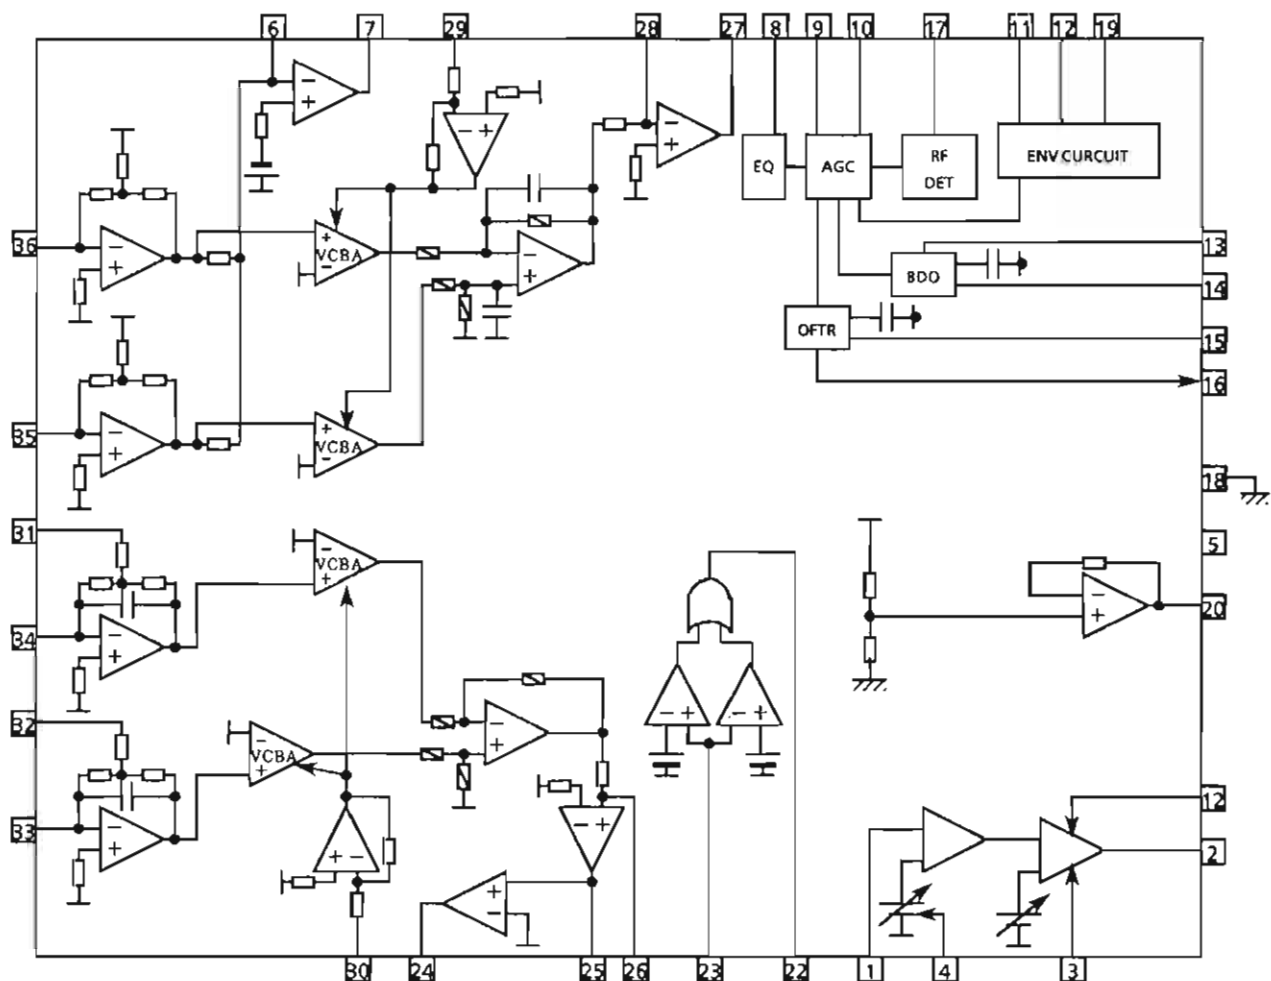


■ MN662720RB (IC401) : DIGITAL SERVO & DIGITAL SIGNAL PROCESSER

1. Terminal Layout

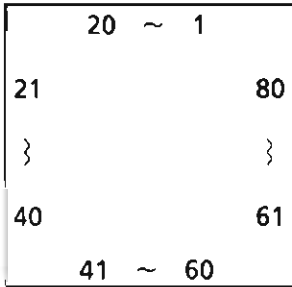

2. Block Diagram

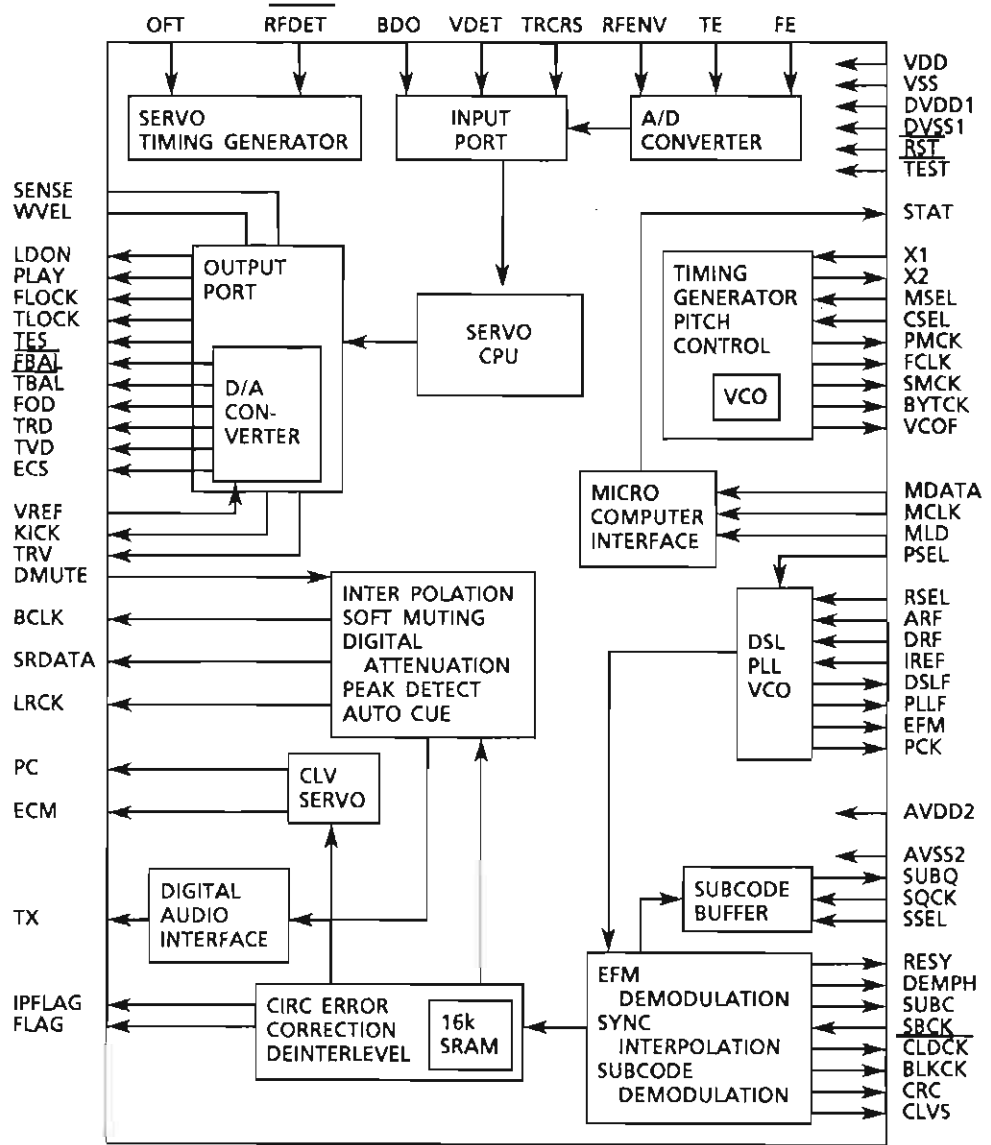


## 3. Description


Pin No.	symbol	I/O	Description	Pin No.	symbol	I/O	Description
1	BCLK	O	Bit clock output pin for SRDATA	41	TES	—	Not used
2	LRCK	O	L/R distinction signal output	42	PLAY	—	"
3	SRDATA	O	Serial data output	43	WVEL	—	"
4	DVDD1	—	Power supply(Digital)	44	ARF	I	RF signal input
5	DVSS1	—	Connected to GND(Digital)	45	IREF	I	Reference current input pin
6	TX	O	Digital audio interface signal	46	DRF	I	Bias pin for DSL
7	MCLK	I	μ-com command clock signal input (Data is latched at signal's rising point)	47	DSLIF	I/O	Loop filter pin for DSL
8	MDATA	I	μ-com command data input	48	PLLF	I/O	Loop filter pin for PLL
9	MLD	I	μ-com command load signal input	49	VCOF	—	Not used
10	SENSE	O	Sense signal output (OFT,FESL,NACEND,NAJEND,POSAD,SFG)	50	AVDD2	—	Power supply (Analog)
11	FLOCK	O	Lock signal for Focus L : pull	51	AVSS2	—	Connected to GND(Analog)
12	TLOCK	O	Lock signal for Tracking L : pull	52	EFM	—	Not used
13	BLKCK	O	Subcode · block · clock signal output	53	PCK	—	"
14	SQCK	I	Outside lock for sub-code Q resister input	54	PDO	—	"
15	SUBQ	O	Sub-code Q-code output	55	SUBC	O	Subcode serial output data output
16	DMUTE	I	Muting input (H : MUTE)	56	SBCK	—	Clock input for subcode serial output
17	STATUS	O	Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	57	VSS	—	Connected to GND(for X'tal cscillation circuit)
18	RST	I	Reset signal input (L :Reset)	58	X1	I	Input of 16.9344MHz X'tal oscillation circuit
19	SMCK	—	Not used	59	X2	—	Not used
20	PMCK	—	Not used	60	VDD	—	Power supply(for X'tal cscillation circuit)
21	TRV	O	Traverse enforced output	61	BYTCK	—	Not used
22	TVD	O	Traverse drive output	62	CLDCK	O	Subcode · Frame · Clock signal output
23	PC	—	Not used	63	FCLK	O	X'tal frame clock output
24	ECM	O	Spindle motor drive signal (Enforced mode output) 3-State	64	IPPLAG	O	Interpolation flag output H : Interpolation
25	ECS	O	Spindle motor drive signal (Servo error signal output)	65	FLAG	—	Flag output
26	KICK	O	Kick pulse output	66	CLVS	—	Not used
27	TRD	O	Tracking drive output	67	CRC	—	"
28	FOD	O	Focus drive output	68	DEMPH	O	De-emphasis ON signal (H : ON)
29	VREF	I	Reference voltage input pin for D/A output block(TVD,FOD,FBAL,TBAL)	69	RESY	—	Not used
30	FBAL	O	Focus Balance adjust signal output	70	NC1	—	"
31	TBAL	O	Tracking Balance adjust signal output	71	TEST	—	Pull up (+5V)
32	FE	I	Focus error signal input(Analog input)	72	AVDD1	—	Power supply (Digital)
33	TE	I	Tracking error signal input(Analog input)	73	NC2	—	Not used
34	RFENV	I	RF envelope signal input(Analog input)	74	AVSS1	—	Connected to GND
35	VDET	I	Vibration detect signal input(H : detect)	75	NC3	—	Not used
36	OFT	I	Off track signal input(H : off track)	76	RSEL	I	Rf signal polarity appointed pin Light level "H" → RSEL = H Light level "L" → RSEL = L
37	TRCRS	I	Track cross signal input	77	CSEL	I	X'tal oscillation frequency appointed pin L : 16.9344MHz H : 33.8688MHz
38	RFDET	I	RF detect signal input (L : detect)	78	PSEL	I	Terminal of Test
39	BDO	I	BDO input pin (H : drop out)	79	MSEL	I	SMCK pin output of frequency select terminal L : SMCK + 4.2336MHZ H : SMCK + 8.4672MHZ
40	LDON	O	Laser ON signal output (H : on)	80	SSEL	—	SUBQ terminal output mode select pin H : Mode for Q code buffer

■ MN35503 (IC750) : D / A CONVERTER

1. Terminal Layout

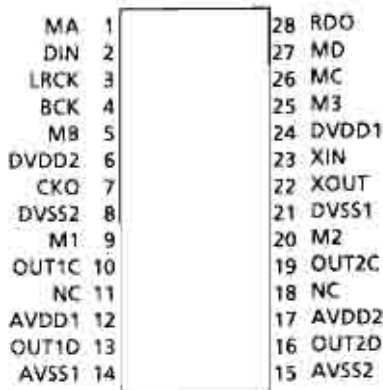

2. Block Diagram

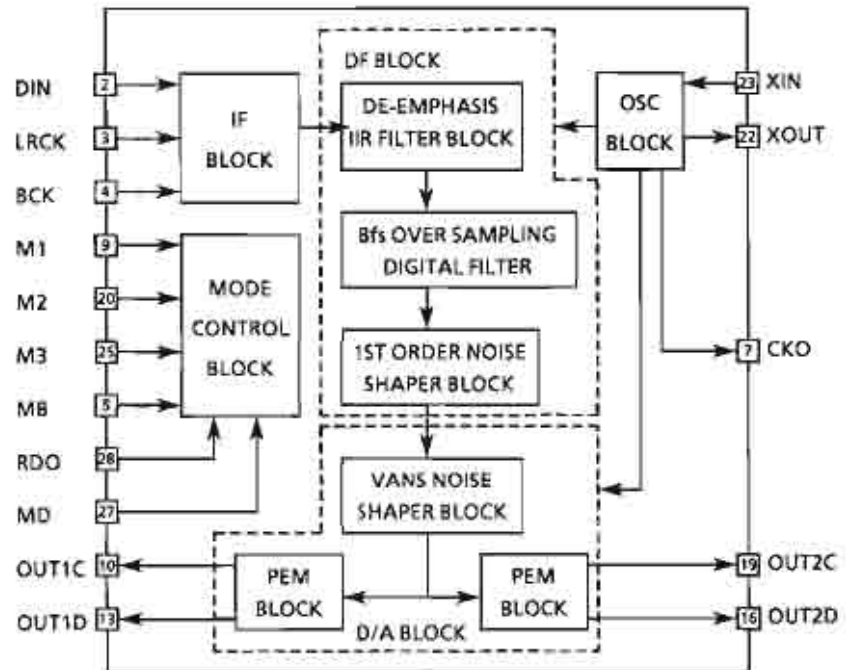


3. Description


Pin No	Symbol	I/O	Description	Pin No	Symbol	I/O	Description
1	MA	–	Connected to ground	15	AVSS2	–	Analog ground 2
2	DIN	I	Data input	16	OUT2D	O	2D PEM output
3	LRCK	I	LR clock input	17	AVDD2	–	Analog power supply 2
4	BCK	I	Bit clock input	18	NC	–	Non connection
5	MB	I	De-emphasis ON signal	19	OUT2C	O	2C PEM output
6	DVDD2	–	Digital power supply 2	20	M2	–	Connected to ground
7	CKO	I	Clock output	21	DVSS1	–	Digital ground pin 1
8	DVSS2	–	Digital ground 2	22	XOUT	O	Crystal oscillator output
9	M1	–	Connected to ground	23	XIN	I	Crystal oscillator input
10	OUT1C	O	1C PEM output	24	DVDD1	–	Digital power supply 1
11	NC	–	Non connection	25	M3	–	Connected to ground
12	AVDD1	–	Analog power supply 1	26	MC	–	Connected to ground
13	OUT1D	O	1D PEM output	27	MD	I	Reset signal / Digital Att. control signal input
14	AVSS1	–	Analog ground 1	28	RDO	–	Not used



■ VC4580D (IC751) : Dual OP Amp.

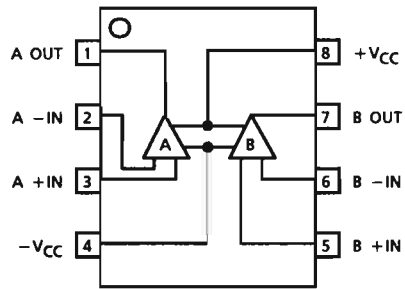

■ MN1281 (P.Q). : IC902 RESET IC


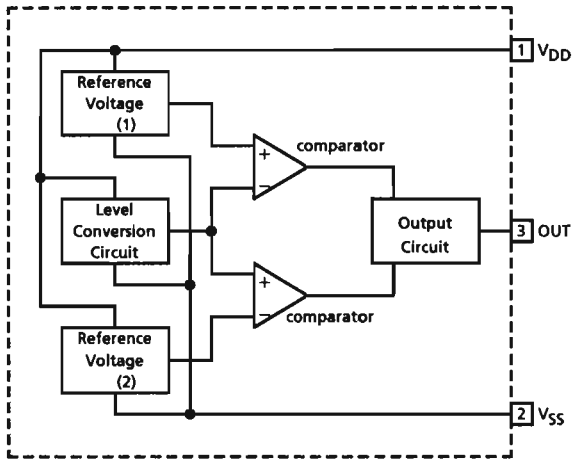


Pin No.	Pin Name	Functions
1	V <sub>DD</sub>	Power supply
2	V <sub>SS</sub>	Ground
3	OUT	Reset signal output : Low level is output when resetting : High level is output when cancelling the reset.

## Internal Connections of FL Display

### ■ ELU0001-178:(DI901)

#### 1. Grid Layout

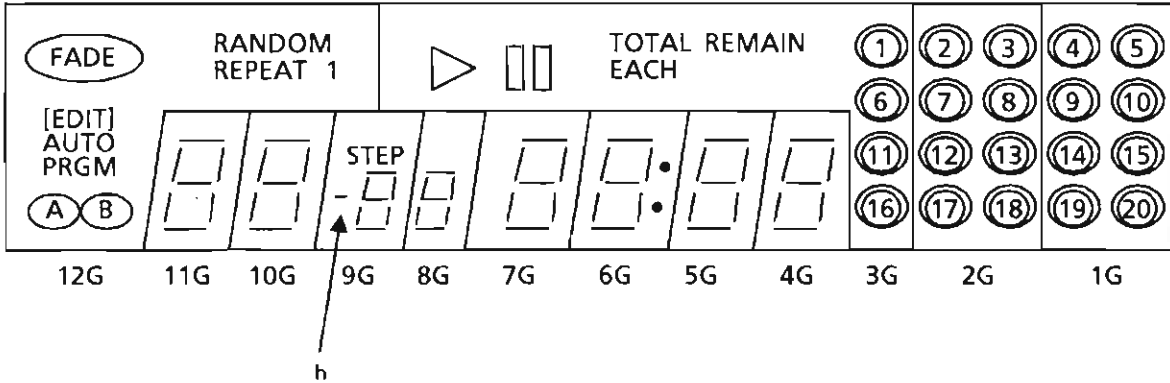

#### 2. Pin Connections

TERMINAL NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
ELECTRODE	F1	F1	NP	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	NP

TERMINAL NO.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
ELECTRODE	NP	NP	NP	NP	NP	NP	NP	S1	S2	S3	S4	S5	S6	S7	S8	S9	NP	F2	F2

(Note) F : Filament G : Grid NP : NoPin NC : No Connection P1~P9 : Anode

#### 3. Anode Designation

	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
S1	FADE	a	a	a	a	a	a	a	a	(1)	(2)	(4)
S2	[EDIT]	b	b	b	b	b	b	b	b	(6)	(7)	(9)
S3	AUTO	c	c	c	c	c	c	c	c	(11)	(12)	(14)
S4	PRGM	d	d	d	d	d	d	d	d	(16)	(17)	(19)
S5	(A)	e	e	e	e	e	e	e	e	▶	(3)	(5)
S6	(B)	f	f	f	f	f	f	f	f		(8)	(10)
S7	RANDOM	g	g	g	g	g	g	g	g	TOTAL	(13)	(15)
S8	REPEAT	----	----	STEP	----	----	••	----	----	EACH	(18)	(20)
S9	1	----	----	(-)	----	----	----	----	----	REMAIN	----	----

## Disassembly Procedures

### (1) Top cover removal

1. Remove the 4 screws **Ⓐ** on the rear side and 2 screws **Ⓐ** on both sides of the cover.
2. Remove the cover.

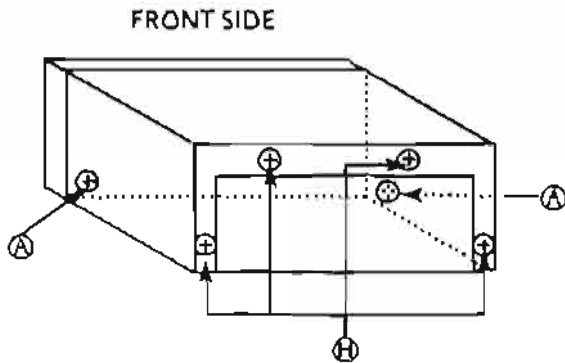


Fig. 1

### (2) Rear panel removal

1. Remove the top cover.
2. Remove the 2 screws **Ⓑ**. Disconnect the CN601. (Fig.3)
3. Remove the rear panel.

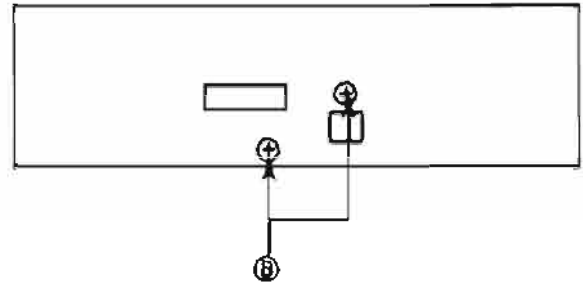


Fig. 2

### (3) Tray assembly removal

1. Remove the top cover.
2. Remove the a screw **Ⓒ**.
3. Turn the screw located under the mechanism to remove the tray out of the loading mechanism.
4. Remove the tray.

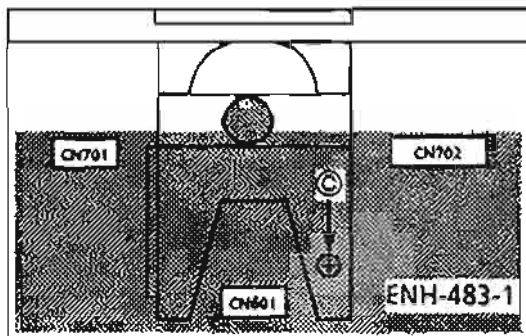


Fig. 3 UP SIDE

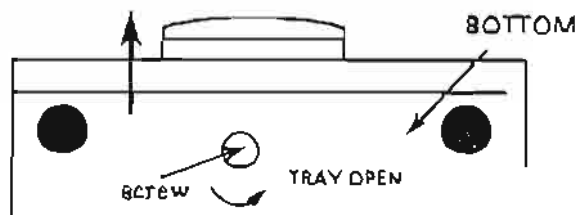


Fig. 4

### (4) Front panel assembly removal

1. Remove the top cover and tray assembly.
2. Disconnect the CN701 and CN702. (Fig.3)
3. Remove the 2 screws **Ⓓ**.
4. Release the hooks **Ⓓ** holding the front panel, and remove the front panel assembly.

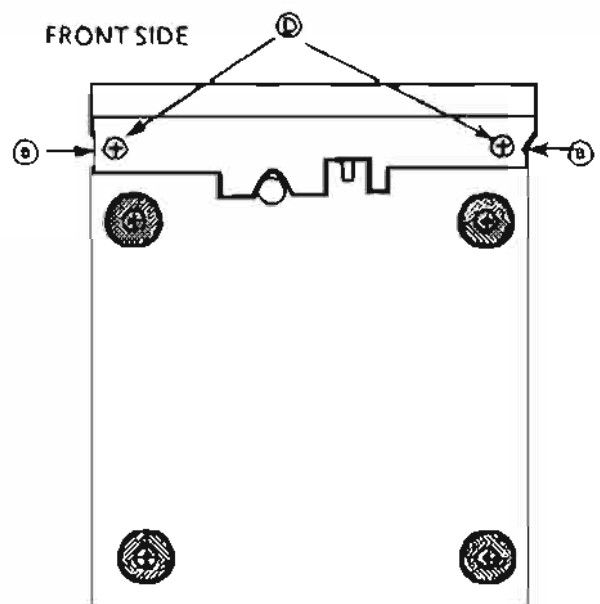


Fig. 5

- Ⓐ** .. SDSG3008N    **Ⓑ** ... E73273-003    **Ⓒ** ... S85F3008Z    **Ⓓ** ... SDSG3008CC  
**Ⓔ** .. GBSB3008CC

(5) CD mechanism assembly removal

1. Remove the top cover and tray assembly.
2. Remove the 2 screws (E) to remove the clamp assembly.
3. Remove the 3 screws (E) holding the CD mechanism assembly.
4. Disconnect the CN102, CN103 and CN104.
5. Remove it.

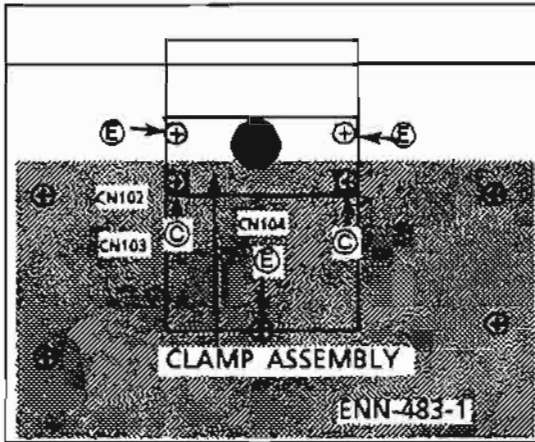


Fig.6

(6) Main PCB(ENN-483-1) removal

1. Remove the top cover, tray assembly, rear panel and CD mechanism assembly.
2. Remove the 4 screws (E) holding the Main PCB (ENN-483-1).
3. Remove it.

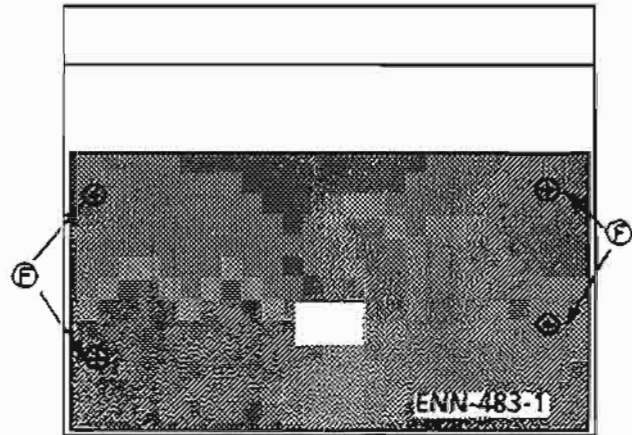


Fig.7

(7) Front PCB(ENN-483-2) removal

1. Remove the top cover, tray assembly and front panel assembly.
2. Remove the 5 screw (G).
3. Remove the Front PCB (ENN-483-2).

Front panel assembly

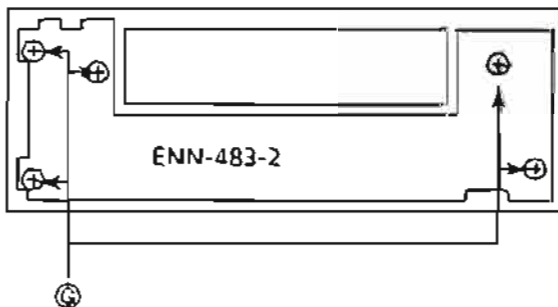


Fig. 8

(8) Installing the CD tray

1. Insert the CD tray after checking that traverse mechanism assembly is positioned slantingly.
2. If it is set horizontally, press the cam plate until it stops so that the traverse mechanism assembly slants. (See an arrow in the following figure.)


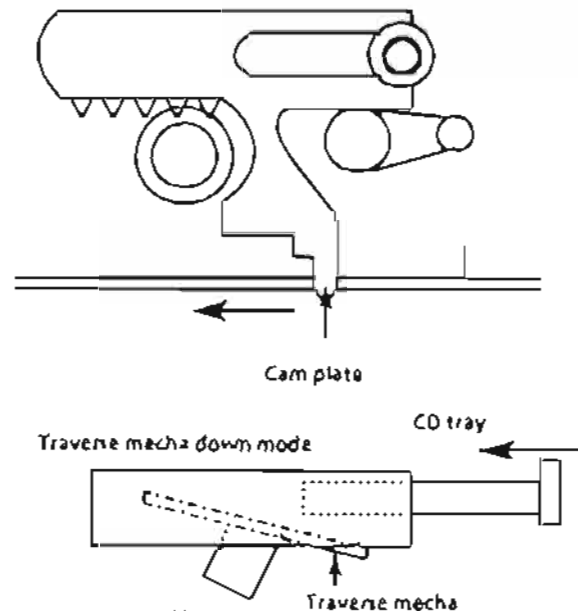


Fig. 9


(9) Pickup removal

1. Remove the CD mechanism assembly.
2. Release the shaft to remove the pickup. (Fig 10)

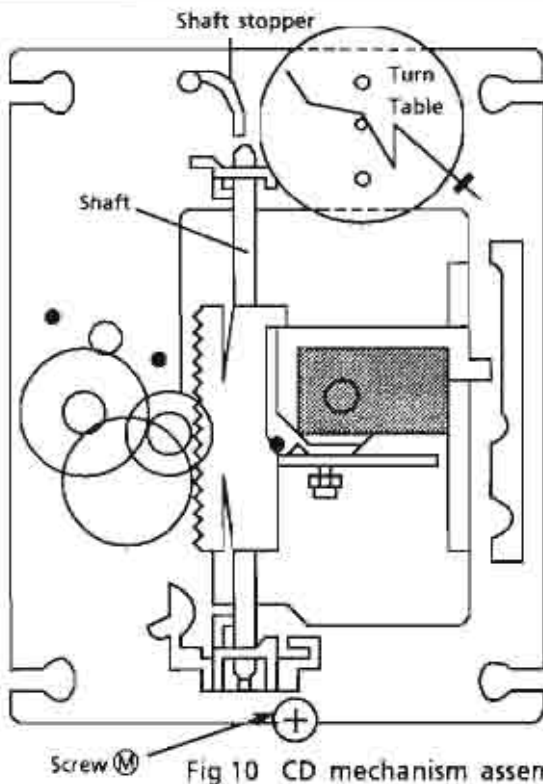

(11) Spindle motor installation

1. Tighten the 2 screws to the same torque.
2. Fasten the spindle and feed motor P.C. board with the screw and solder.
3. Install the turntable. When installing, press straight down at the center of the turntable until the distance from the surface of the mechanism base to the turntable is exactly  $19.4 \pm 0.1\text{mm}$ .

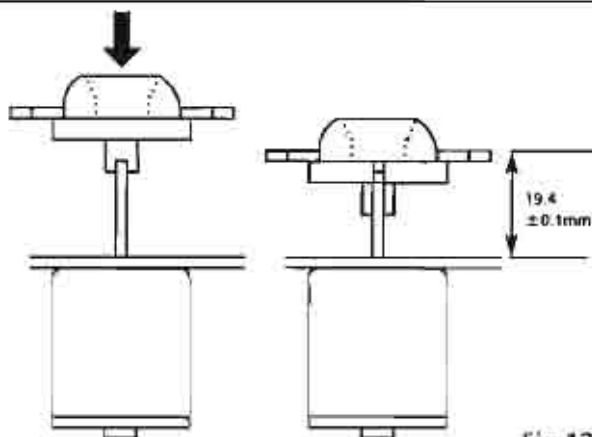

(10) Spindle motor removal

1. Remove the CD mechanism assembly.
2. Remove the turntable, and remove the two screws (N) retaining the spindle motor.
3. Remove the a screw retaining the spindle and feed motor P.C. Board and unsolder it.

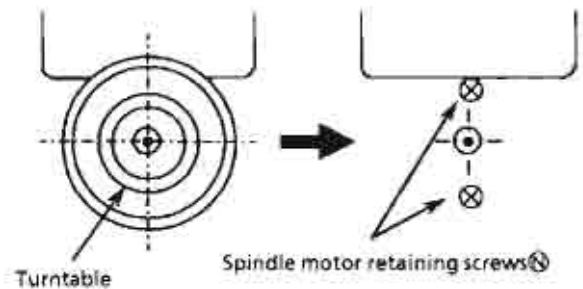


Fig 11

- (12) After inserting the turntable, bond the motor shaft and turntable together (at the section marked by an arrow in fig 13 on the left below).


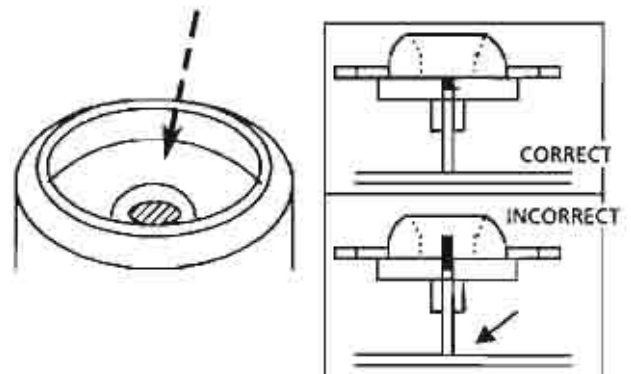


Fig 13

- (13) Use "LOCKTITE" #460 bonding agent, and apply as little as possible. Take care not to allow any excess bonding agent to get onto the turntable. Be extremely careful not to allow bonding agent to adhere to the motor bearing (the section marked by an allow in fig 13 on the right).

# Flow of Functional Operation Until TOC is Read

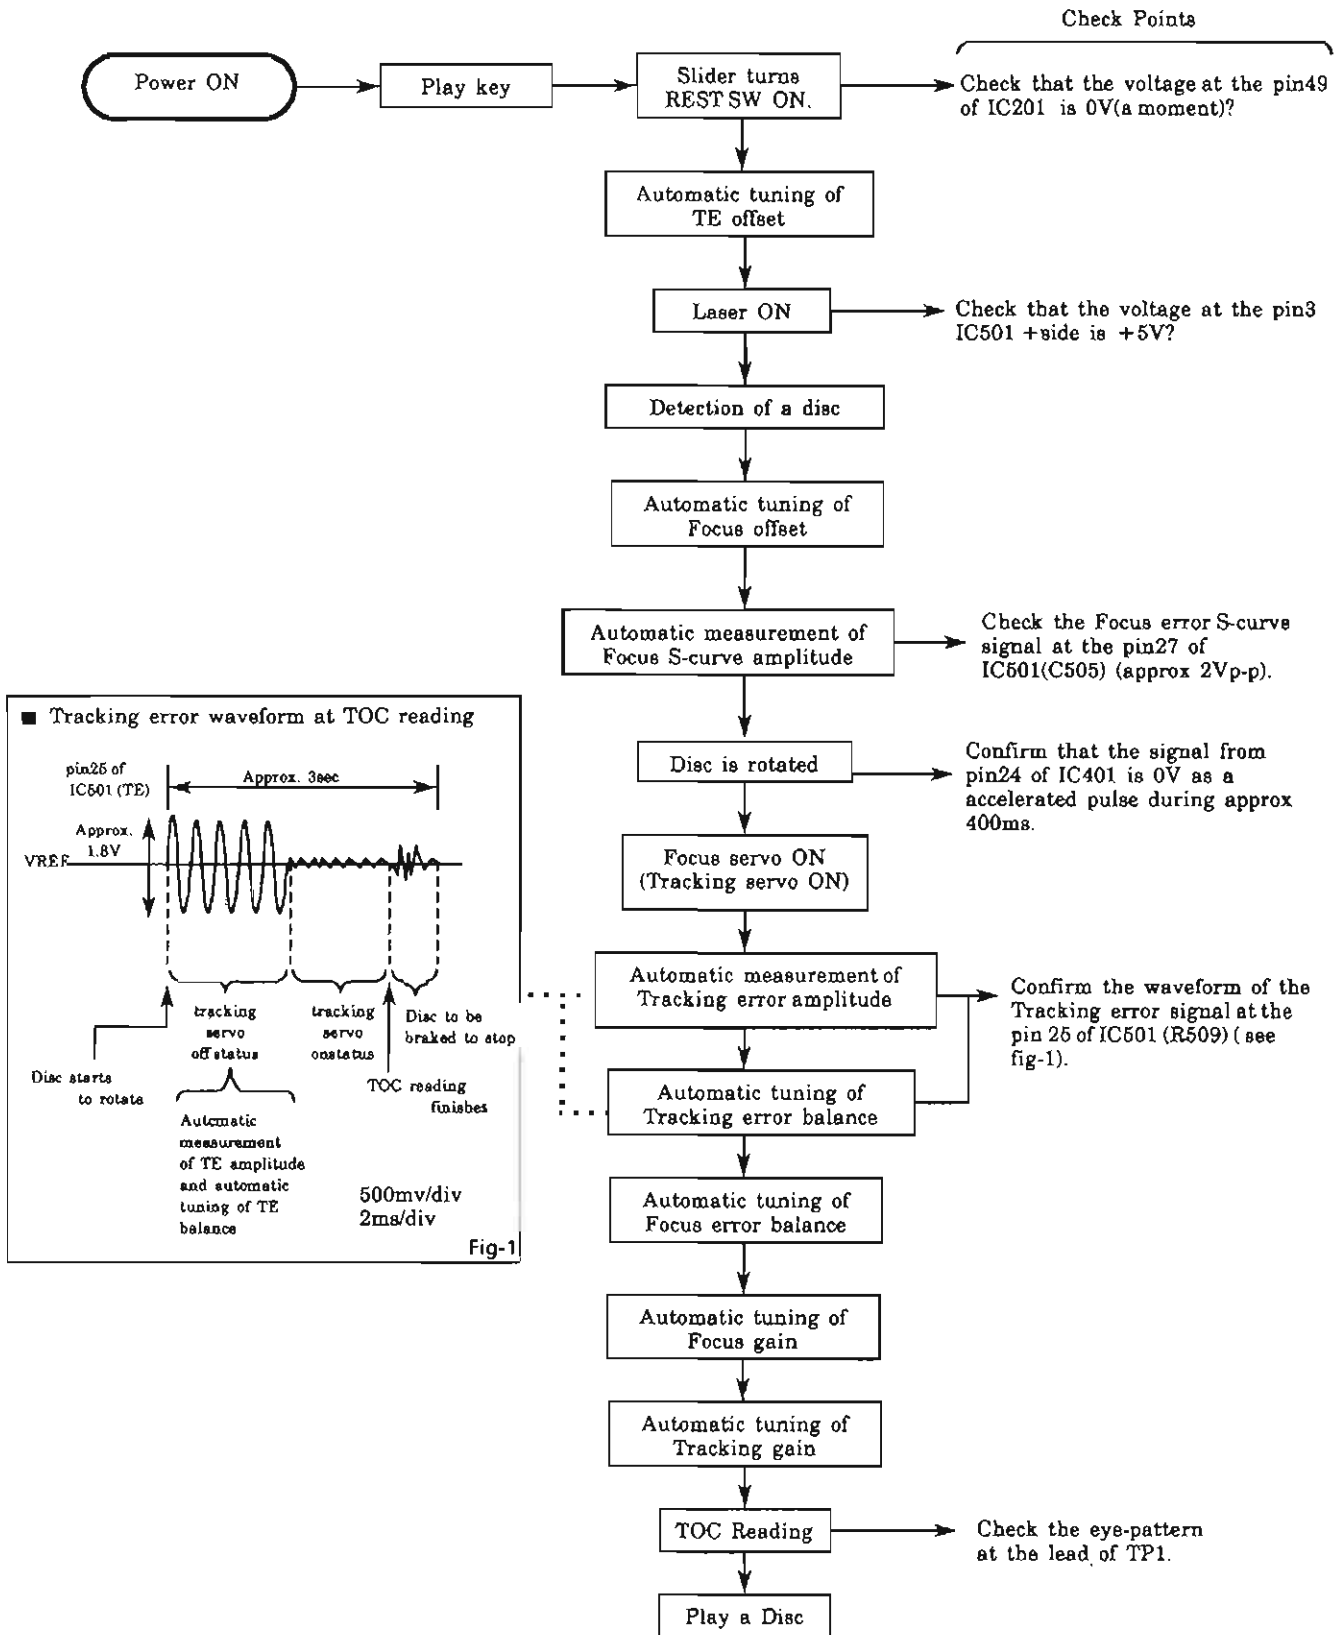

## Maintenance of Laser Pickup

### (1) Cleaning the pick up lens

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

### (2) Life of the laser diode (Fig.1)


When the life of the laser diode has expired, the following symptoms will appear.

- (1) The level of RF output (EFM output: amplitude of eye pattern) will be low.
- (2) The drive current required by the laser diode will be increased. In such a case, check the life of the laser diode following the flowchart below.

### (3) Measurement of laser diode drive current (Fig.2)



Cut the jump wire (B107) and add a 1Ω resistor. (See the following Fig.2)

Measure the voltage across the resistor (1Ω) with a milli-voltmeter. When the voltage is more than 120mV, it shows that the life of the laser diode has expired.

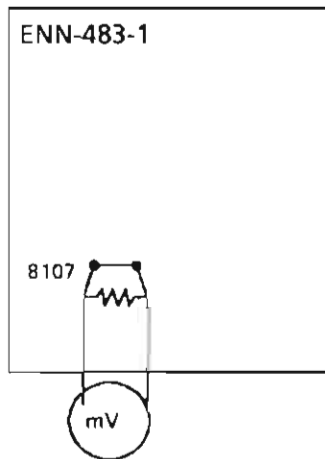

(Fig.2)

## Replacement of Laser Pickup

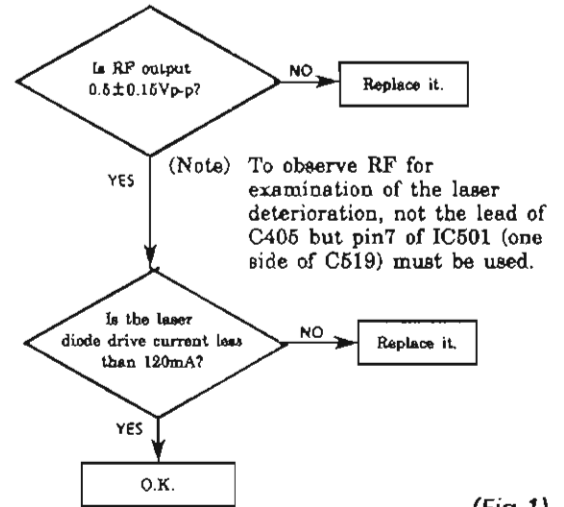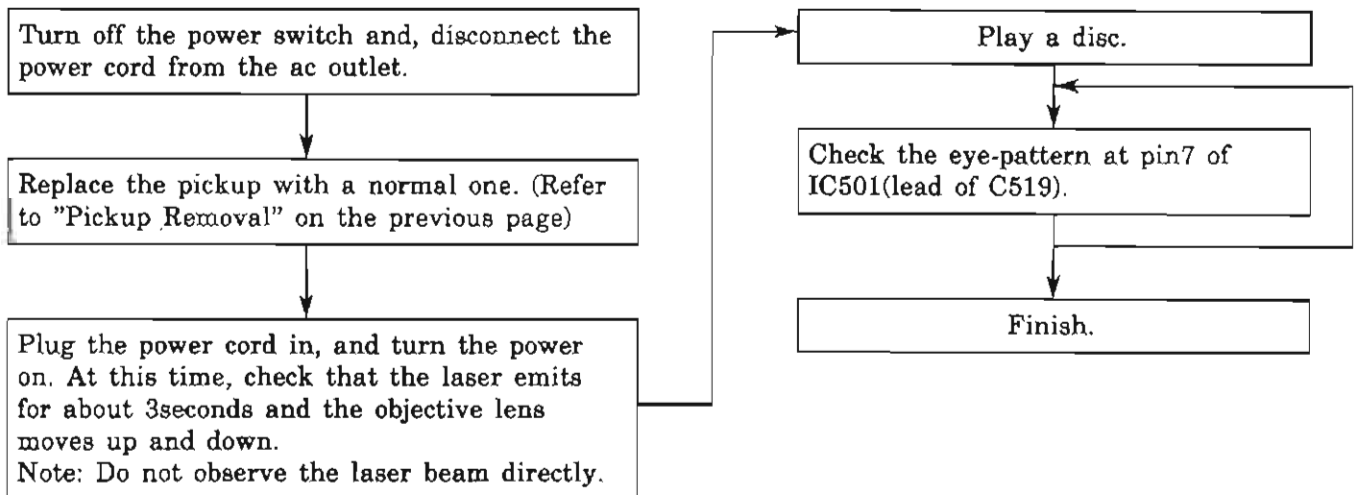

(Fig.1)

### (4) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.


## Self-diagnosis for pickup

From DCS output, this model reads automatically adjusted data for CD so that the pickup can be judged defective or not. Following shows its details.

### 1. Necessary items

- ① DCS → 232C Converting board (No.EBSJ1022)
- ② 232C cord (straight)
- ③ Floppy disc for self-diagnosis (No.EBSJ1022)
- ④ DCS cord
- ⑤ Cord of Power supply (E407992-001)
- ⑥ Power supply DC 6.3V (AA-SV11J--America/Canada) (AA-SV11Bs--the UK)  
(AA-SV11G--Germany) (AA-SV11EF--Continental Europe) (AA-SV11U--the  
Other aria)
- ⑦ CD (without scratches or damage)

### 2. Connection

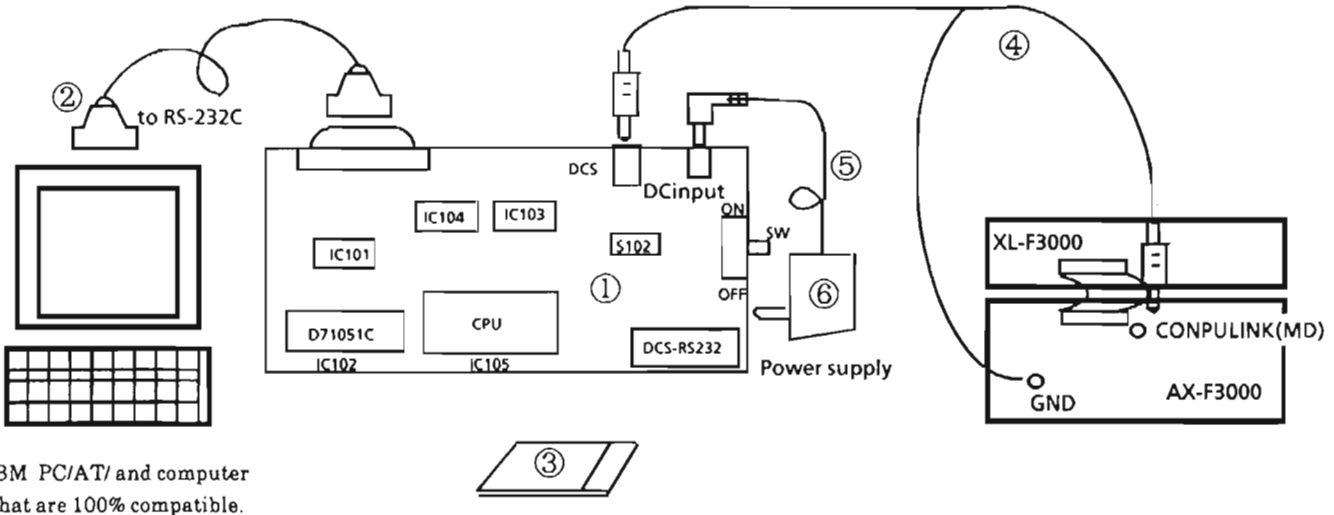

### 3. Procedure to use CD self-diagnosis jig by IBM PC

Two com pins are frequently adopted in recent IBM AT and its substitute RS232C port.

This jig can also use both COM1 and COM2.

DEFAULT is COM1. Indicate "2" to the option only for COM2.

When COM1 is used,...

I AUTO 01

When COM2 is used,...

I AUTO 02

[ NOTE ] Press ESC key to stop processing during the operation.

Contents of the attached floppy IBM self-diagnosis program VER.1.00 Execution file.

(Mistake the conection/Mistake the polarity)



#### 4. Judgment

To judge whether pickup is defective or not, firstly process of automatic adjustment is checked by automatic adjustment flag. And, the value(automatic adjustment value for focus gain) displayed on the screen is used for its final judgment.


It is supposed that the pickup is defective or the signal path is faulty if the Flag 1 or Flag 0 indicates not "F" but a figure.

(See the following example.)


Flag 1	Flag 0	Details	Supposed cause
0	0	Automatic adjustment for tracking offset is failed.	The automatic adjustment is not completed. (Trouble in circuit.)
0	1	Automatic adjustment for focus offset is failed. (Disc does not rotate.)	The lens does not move. (Power supply is not turned on. Wire is cut.)
0	3	Automatic rough adjustment for focus gain is failed.	
0	7	Automatic rough adjustment for tracking gain is failed. (The focus and tracking gain are not locked though the disc rotates.)	Laser deterioration (low RF signal output). Offset beam.
0	F	Disc rotates, focus and tracking gain are locked and automatic rough adjustment for tracking gain is also completed though automatic adjustment for tracking balance is failed.	Laser deterioration (low RF signal output). Offset beam.
1	F	Automatic adjustment for focus balance is failed. (TOC is not read though the disc rotates.)	RF signal output is low. Tracking loop is not turned on. RF jitter is too much.
3	F	Automatic rough adjustment for focus gain is failed.	
7	F	Automatic rough adjustment for tracking gain is failed.	
F	F	All automatic adjustments are completed.	

The pickup is judged defective though the Flag 0 and Flag 1 indicate "F" and those adjustments are completed if the adjustment value exceeds 19dB.


Block Diagram

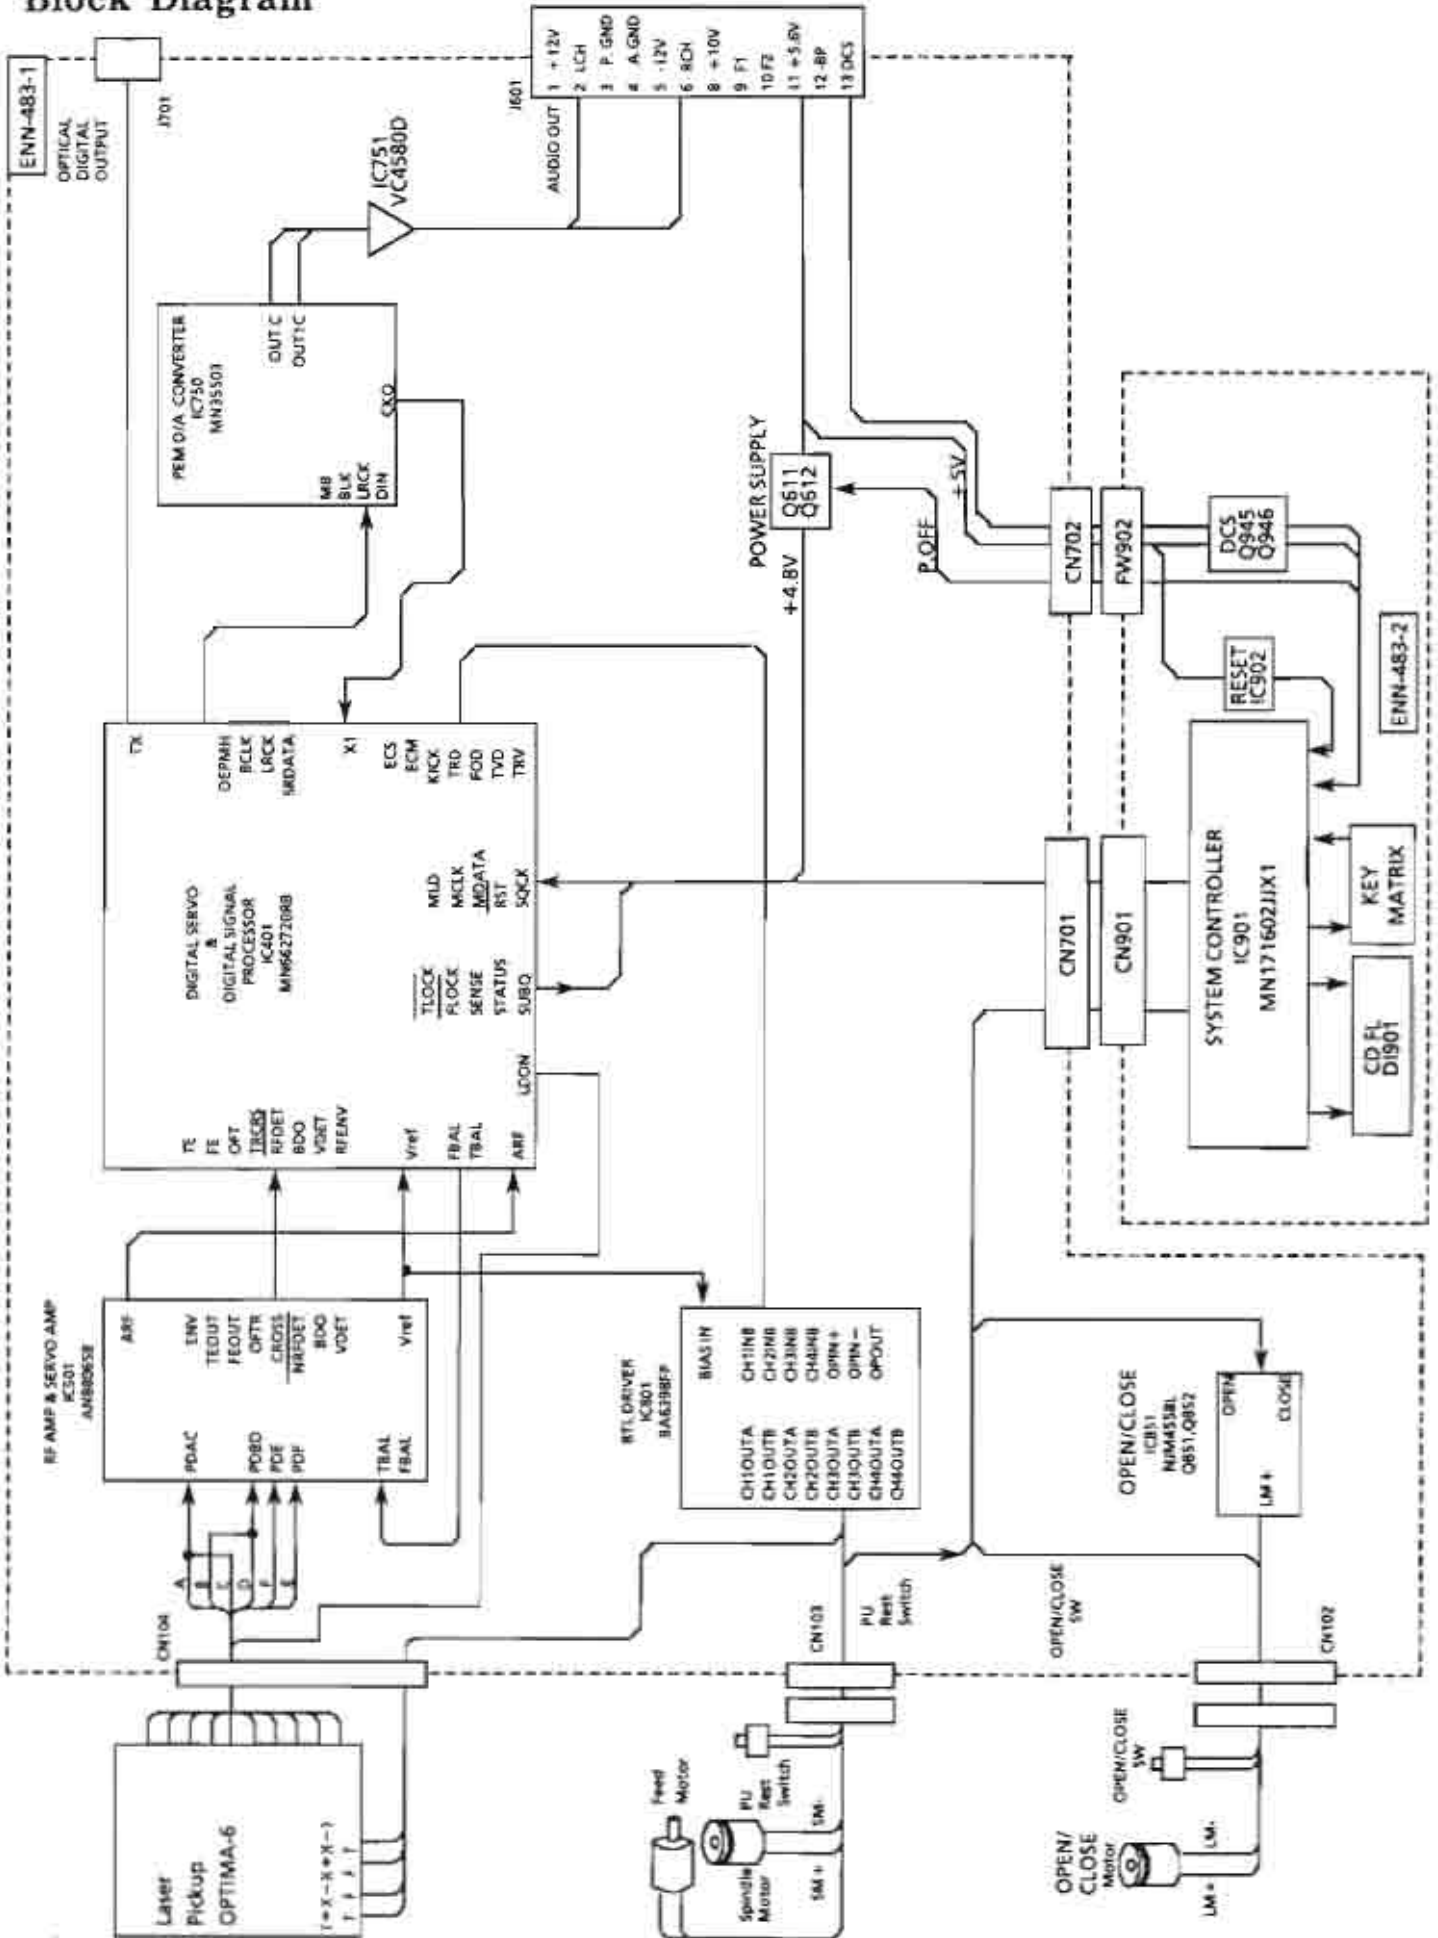

P3-17-a

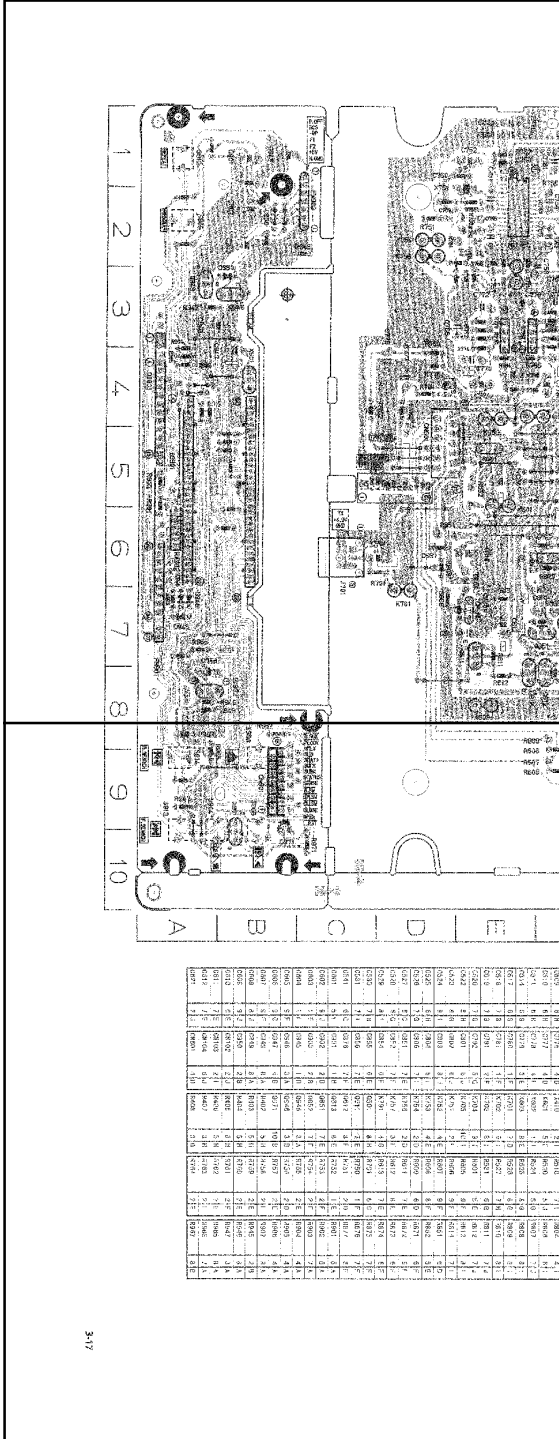

P3-17-b

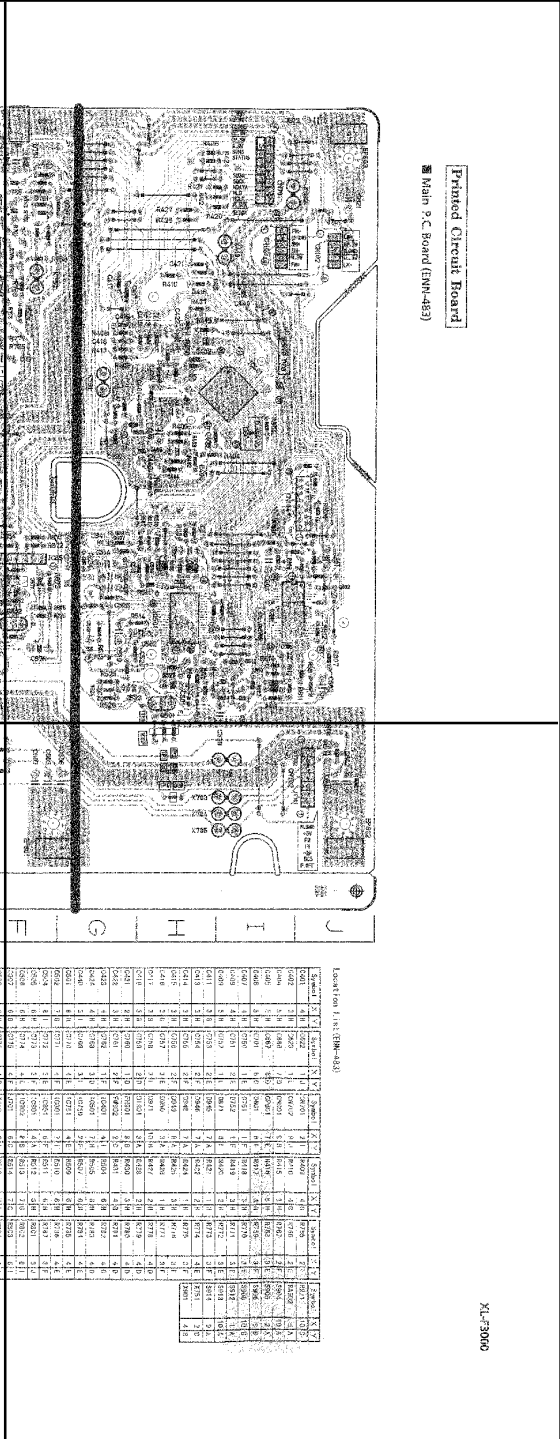


Printed Circuit Board  
Main P.C. Board (EMV-483)

Location: J.142 (EMV-483)

Part No.	QTY	Part Name	Part No.	QTY	Part Name	Part No.	QTY	Part Name	Part No.	QTY	Part Name
00001	1	RES	00002	1	RES	00003	1	RES	00004	1	RES
00005	1	RES	00006	1	RES	00007	1	RES	00008	1	RES
00009	1	RES	00010	1	RES	00011	1	RES	00012	1	RES
00013	1	RES	00014	1	RES	00015	1	RES	00016	1	RES
00017	1	RES	00018	1	RES	00019	1	RES	00020	1	RES
00021	1	RES	00022	1	RES	00023	1	RES	00024	1	RES
00025	1	RES	00026	1	RES	00027	1	RES	00028	1	RES
00029	1	RES	00030	1	RES	00031	1	RES	00032	1	RES
00033	1	RES	00034	1	RES	00035	1	RES	00036	1	RES
00037	1	RES	00038	1	RES	00039	1	RES	00040	1	RES
00041	1	RES	00042	1	RES	00043	1	RES	00044	1	RES
00045	1	RES	00046	1	RES	00047	1	RES	00048	1	RES
00049	1	RES	00050	1	RES	00051	1	RES	00052	1	RES
00053	1	RES	00054	1	RES	00055	1	RES	00056	1	RES
00057	1	RES	00058	1	RES	00059	1	RES	00060	1	RES
00061	1	RES	00062	1	RES	00063	1	RES	00064	1	RES
00065	1	RES	00066	1	RES	00067	1	RES	00068	1	RES
00069	1	RES	00070	1	RES	00071	1	RES	00072	1	RES
00073	1	RES	00074	1	RES	00075	1	RES	00076	1	RES
00077	1	RES	00078	1	RES	00079	1	RES	00080	1	RES
00081	1	RES	00082	1	RES	00083	1	RES	00084	1	RES
00085	1	RES	00086	1	RES	00087	1	RES	00088	1	RES
00089	1	RES	00090	1	RES	00091	1	RES	00092	1	RES
00093	1	RES	00094	1	RES	00095	1	RES	00096	1	RES
00097	1	RES	00098	1	RES	00099	1	RES	00100	1	RES
00101	1	RES	00102	1	RES	00103	1	RES	00104	1	RES
00105	1	RES	00106	1	RES	00107	1	RES	00108	1	RES
00109	1	RES	00110	1	RES	00111	1	RES	00112	1	RES
00113	1	RES	00114	1	RES	00115	1	RES	00116	1	RES
00117	1	RES	00118	1	RES	00119	1	RES	00120	1	RES
00121	1	RES	00122	1	RES	00123	1	RES	00124	1	RES
00125	1	RES	00126	1	RES	00127	1	RES	00128	1	RES
00129	1	RES	00130	1	RES	00131	1	RES	00132	1	RES
00133	1	RES	00134	1	RES	00135	1	RES	00136	1	RES
00137	1	RES	00138	1	RES	00139	1	RES	00140	1	RES
00141	1	RES	00142	1	RES	00143	1	RES	00144	1	RES
00145	1	RES	00146	1	RES	00147	1	RES	00148	1	RES
00149	1	RES	00150	1	RES	00151	1	RES	00152	1	RES
00153	1	RES	00154	1	RES	00155	1	RES	00156	1	RES
00157	1	RES	00158	1	RES	00159	1	RES	00160	1	RES
00161	1	RES	00162	1	RES	00163	1	RES	00164	1	RES
00165	1	RES	00166	1	RES	00167	1	RES	00168	1	RES
00169	1	RES	00170	1	RES	00171	1	RES	00172	1	RES
00173	1	RES	00174	1	RES	00175	1	RES	00176	1	RES
00177	1	RES	00178	1	RES	00179	1	RES	00180	1	RES
00181	1	RES	00182	1	RES	00183	1	RES	00184	1	RES
00185	1	RES	00186	1	RES	00187	1	RES	00188	1	RES
00189	1	RES	00190	1	RES	00191	1	RES	00192	1	RES
00193	1	RES	00194	1	RES	00195	1	RES	00196	1	RES
00197	1	RES	00198	1	RES	00199	1	RES	00200	1	RES


P3-17-c


P3-17-d

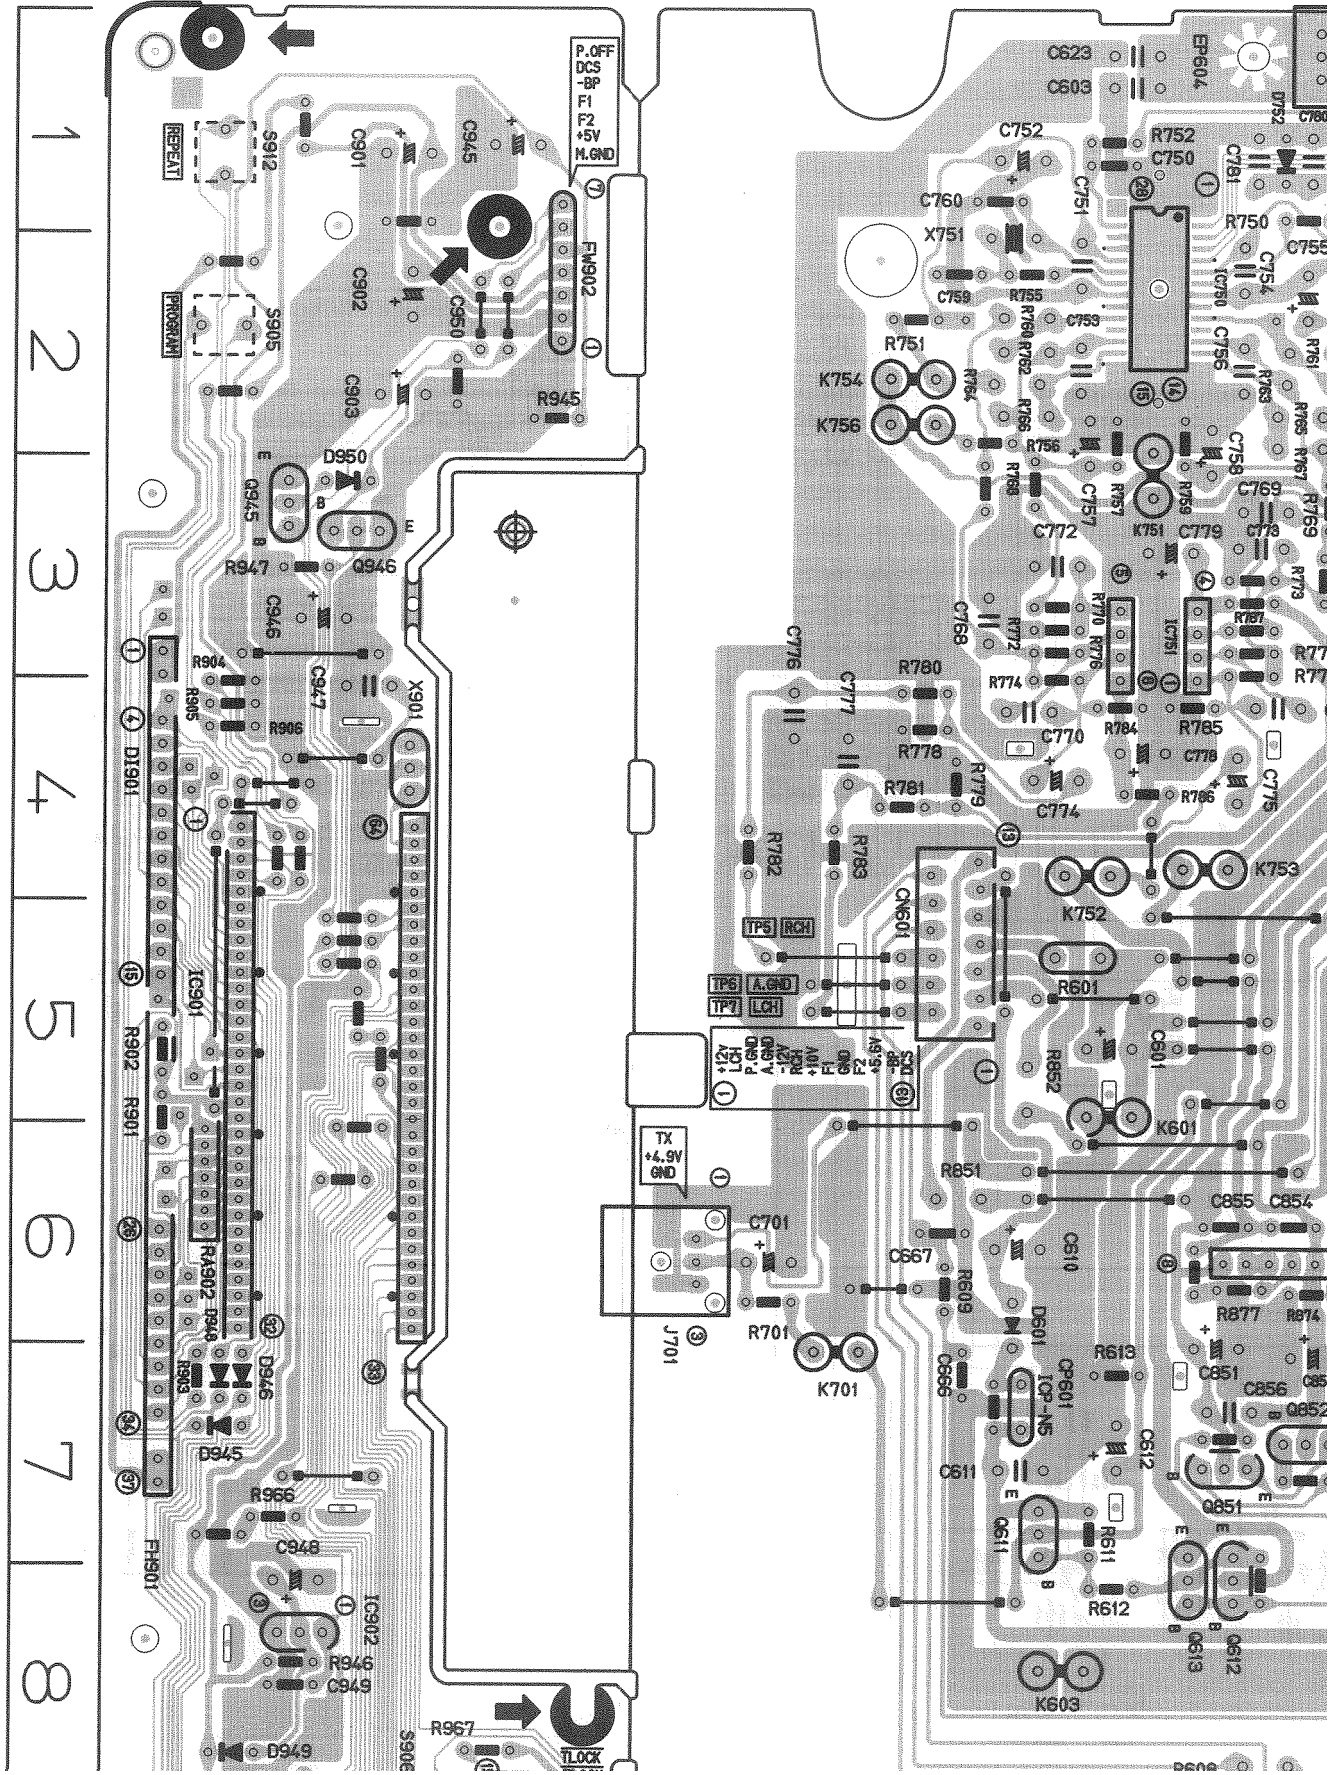

# Printed Circuit Board

■ Main P.C. Board (ENN-483)

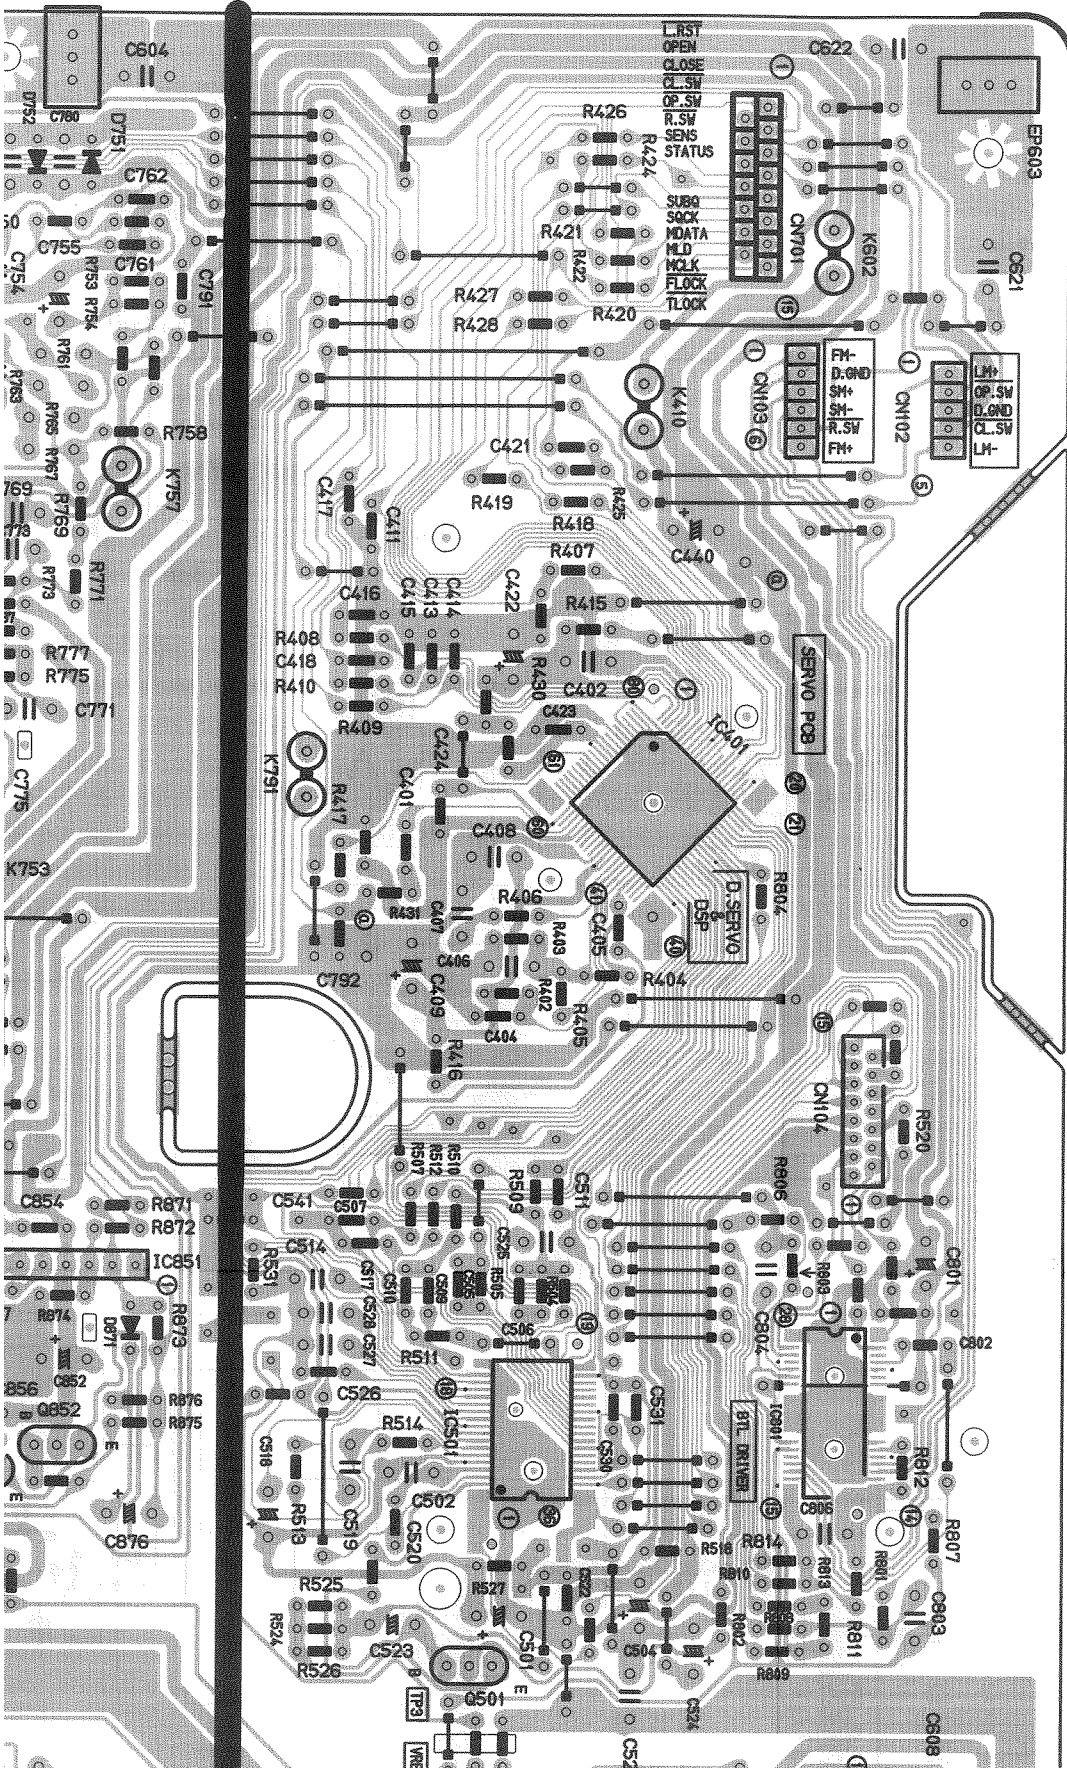

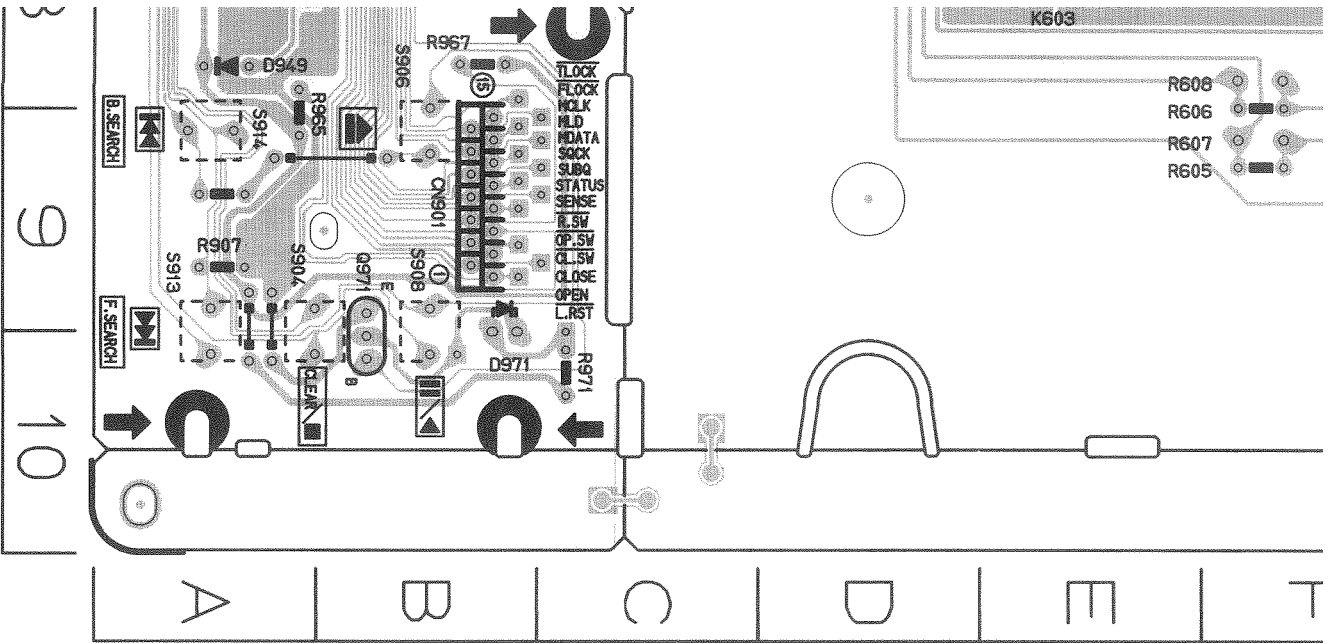


0607	6 G	C775	4 F	J701	6 C	R514	7 G	R803	6 I
0509	6 H	C776	4 D	K410	2 I	R518	7 I	R804	4 I
0510	6 H	C777	4 D	K601	5 E	R520	5 J	R806	6 I
0511	6 H	C778	4 E	K602	1 I	R524	8 G	R807	7 J
0514	6 G	C779	3 E	K603	8 E	R525	8 G	R808	8 I
0517	6 G	C780	1 F	K701	7 D	R526	8 G	R809	8 I
0518	7 G	C781	1 F	K702	9 I	R527	7 H	R810	8 I
0519	7 G	C791	2 F	K703	9 I	R531	6 G	R811	7 J
0520	7 G	C792	5 G	K704	9 I	R601	5 E	R812	7 J
0522	8 H	C801	6 J	K705	10 I	R605	9 F	R813	8 I
0523	8 G	C802	6 J	K751	2 E	R606	9 F	R814	7 I
0524	8 I	C803	8 J	K752	4 E	R607	9 F	R851	6 D
0525	6 H	C804	6 I	K753	4 E	R608	8 F	R852	5 E
0526	7 G	C806	7 I	K754	2 D	R609	6 D	R871	6 F
0527	6 G	C851	7 E	K756	2 D	R611	7 E	R872	6 F
0528	6 G	C852	7 F	K757	3 F	R612	8 E	R873	6 F
0529	8 I	C854	6 F	K791	4 G	R613	7 E	R874	6 F
0530	7 H	C855	6 E	Q501	8 H	R701	6 G	R875	7 F
0531	7 I	C856	7 E	Q611	7 E	R750	1 F	R876	7 F
0541	6 G	C876	7 F	Q612	8 F	R751	2 D	R877	6 F
0601	5 E	C901	1 B	Q613	8 E	R752	1 E	R901	5 A
0602	9 J	C902	2 B	Q851	7 E	R753	2 F	R902	5 A
0603	1 E	C903	2 B	Q852	7 F	R754	2 F	R903	7 A
0604	1 F	C945	1 B	Q945	3 A	R755	2 E	R904	4 A
0605	9 F	C946	3 A	Q946	3 B	R756	2 D	R905	4 A
0606	9 G	C947	4 B	Q971	10 B	R757	2 E	R906	4 A
0607	9 F	C948	8 A	R402	5 H	R758	2 F	R907	9 A
0608	8 J	C949	8 A	R403	5 H	R759	2 E	R945	2 B
0609	9 J	C950	2 B	R404	5 H	R760	2 E	R946	8 A
0610	6 E	CN102	2 J	R405	5 H	R761	2 F	R947	3 A
0611	7 E	CN103	2 I	R406	5 H	R762	2 E	R965	8 A
0612	7 E	CN104	6 J	R407	3 H	R763	2 F	R966	7 A
0621	2 J	CN601	4 D	R408	3 G	R764	2 E	R967	8 B








P3-18-a

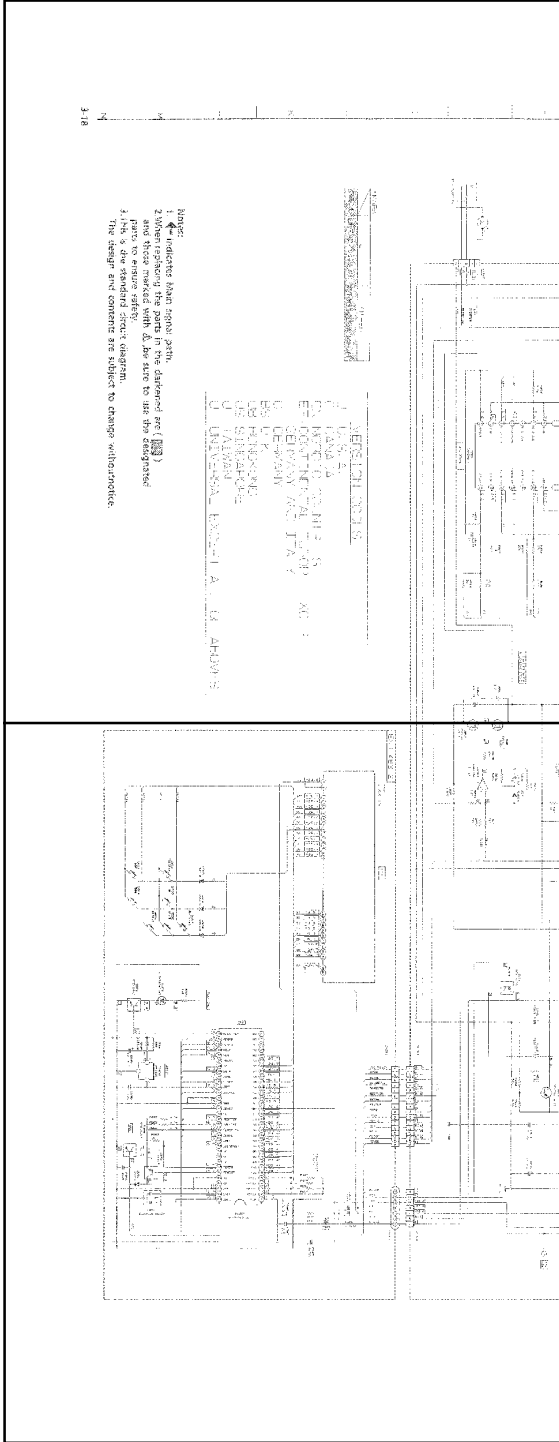


P3-18-b

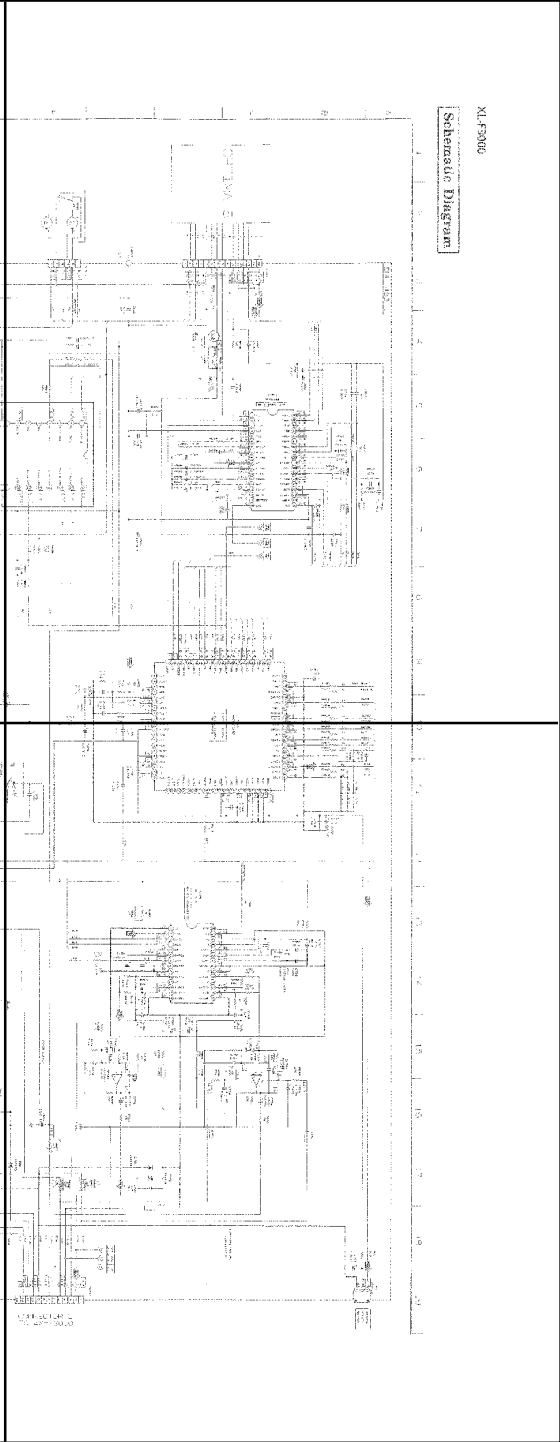

P3-18-c



P3-18-d

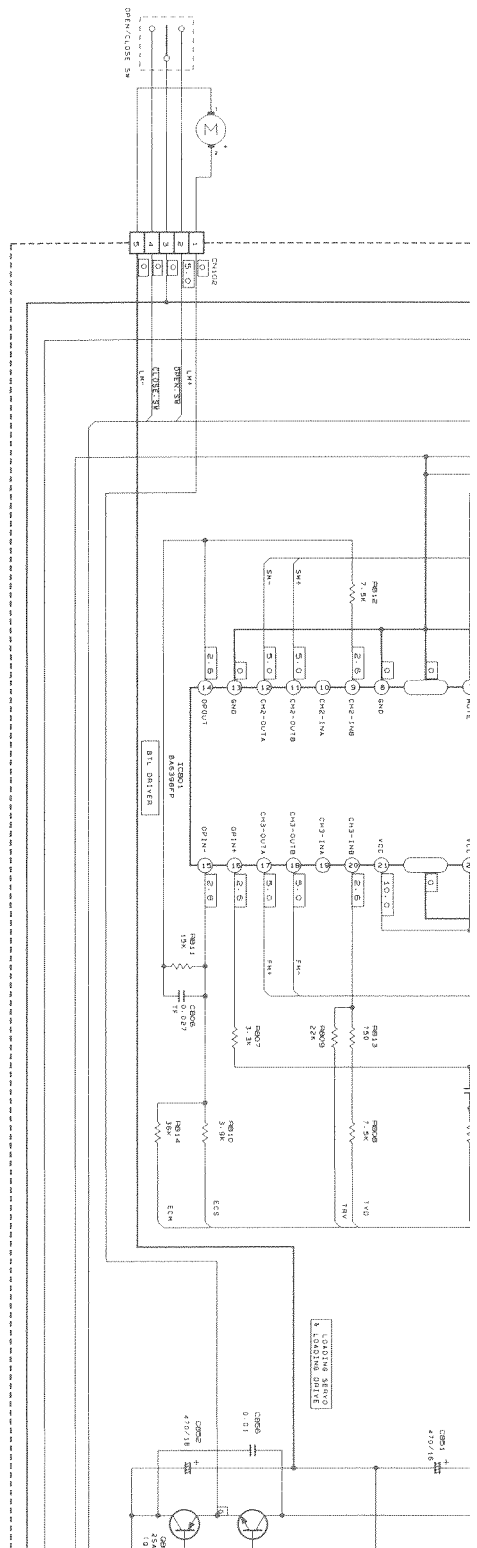


*MARK	J	OTHER
R601	UNF-C (1/2W)	PT-H61625AR4R7M


VERSION CODES	
J	: U.S.A.
C	: CANADA
EN	: NORDIC COUNTRIES
EF	: CONTINENTAL EUROPE EXCEPT GERMANY AND ITALY
G	: GERMANY
BS	: U.K.
UB	: HONGKONG
US	: SINGAPORE
UT	: TAIWAN
U	: UNIVERSAL EXCEPT ALL OF ABOVE

- Notes:
1. indicates Main signal path.
  2. When replacing the parts in the darkened are ( ) and those marked with , be sure to use the designated parts to ensure safety.
  3. This is the standard circuit diagram. The design and contents are subject to change without notice.

Schematic Diagram

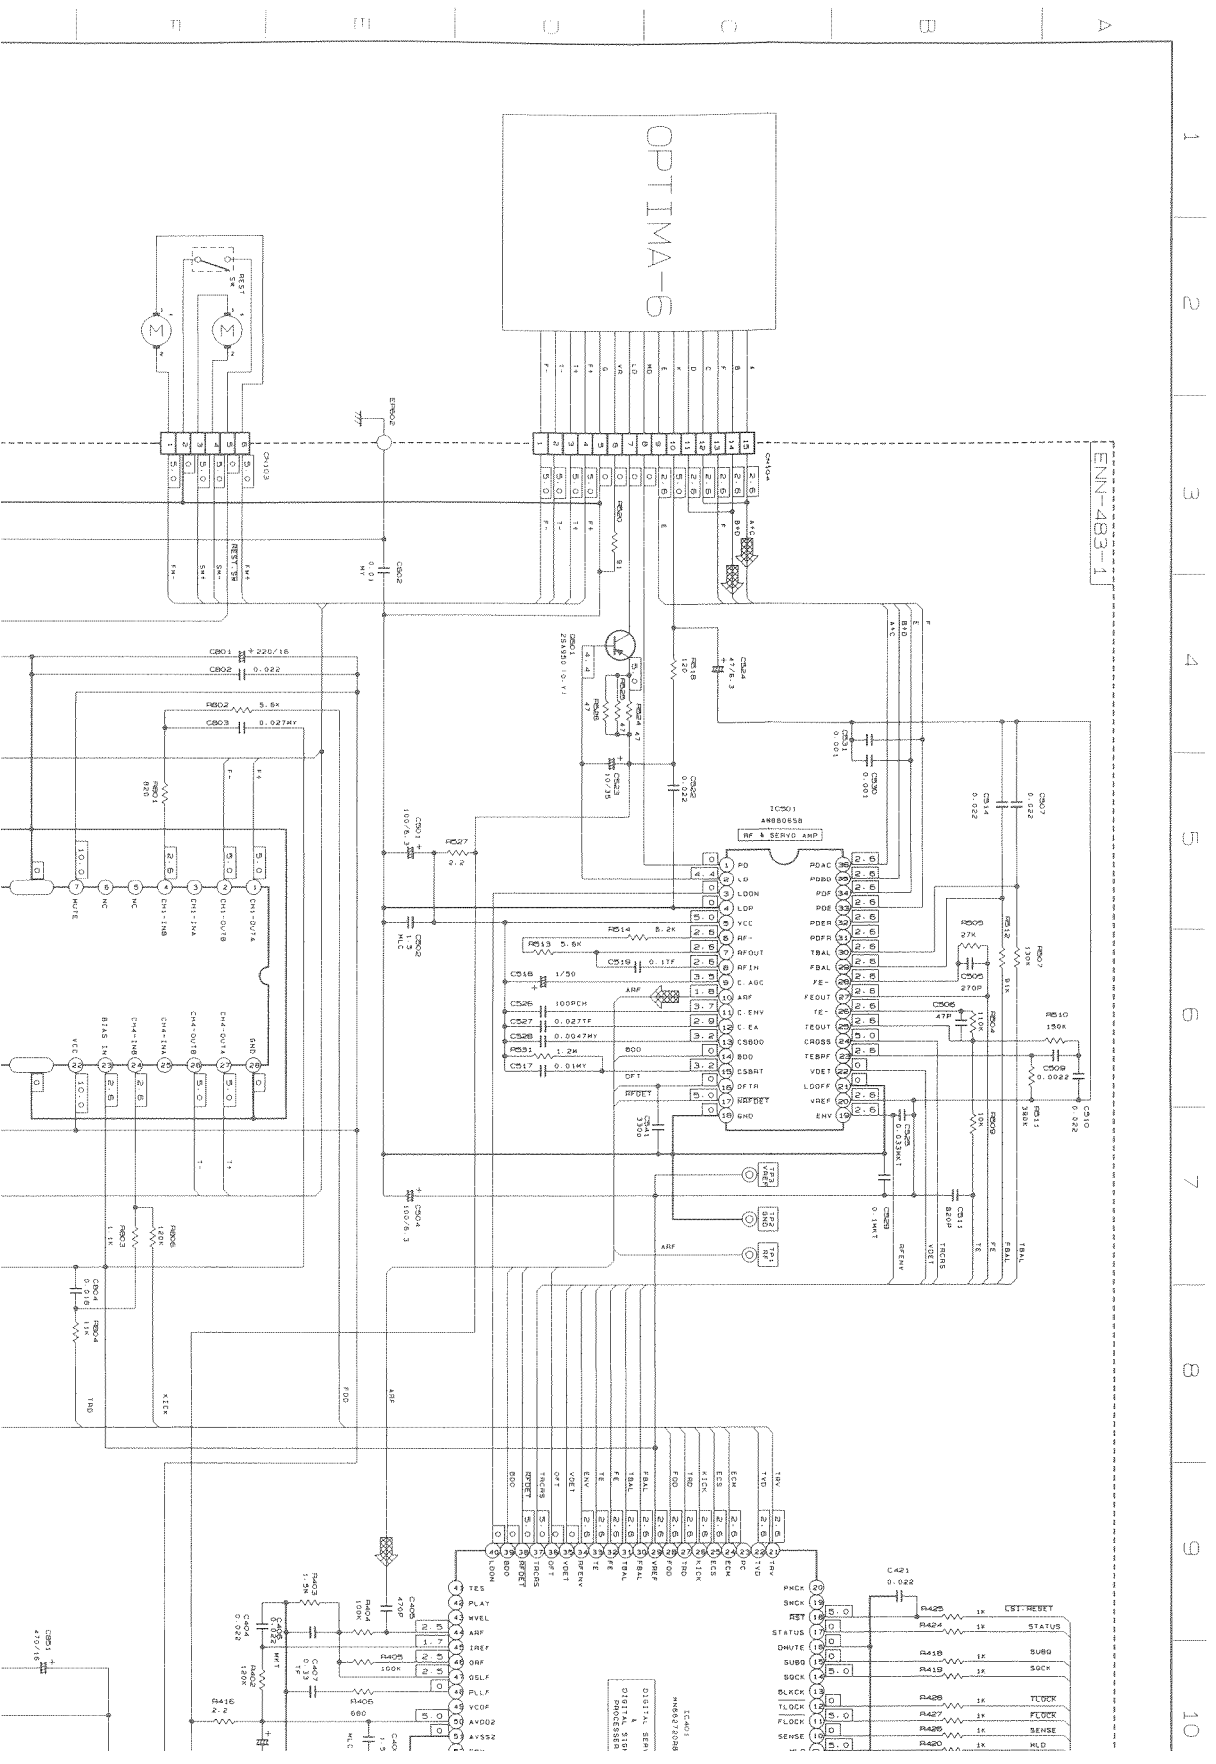



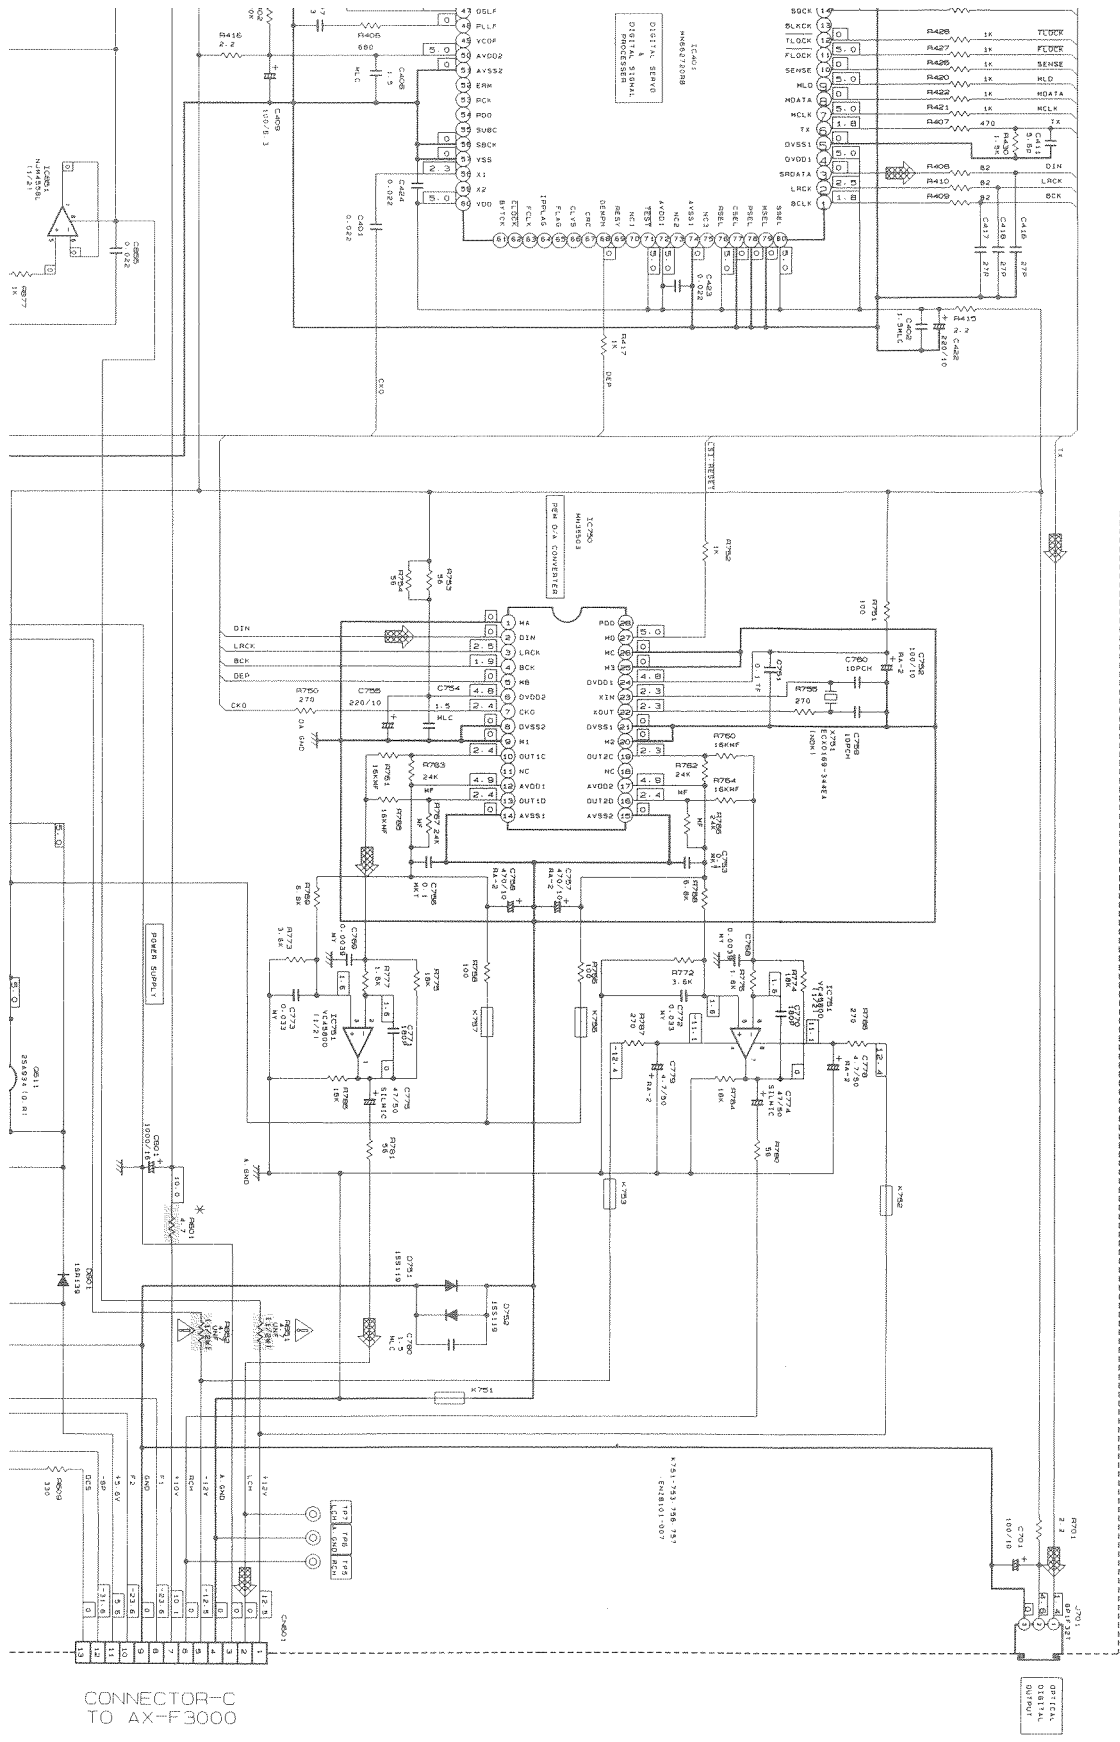

CONNECTOR-C  
TO AX-F3000

OPTICAL  
DISK UNIT



# TD-F3000

## Contents

<i>Description of Major ICs</i> .....	4-2
<i>Disassembly Procedures</i> .....	4-5
<i>Adjustment Procedures</i> .....	4-10
<i>Block Diagram</i> .....	4-13
<i>Printed Circuit Boards</i> .....	4-14
<i>Schematic Diagrams</i> .....	4-15

## Description of Major LSIs

■ HD614081SE39 (IC203) : Deck controller

### Terminal Layout

NR LED	1	64	A FWD LED
NR LED(C)	2	63	A REV LED
A SPEED UP	3	62	B FWD LED
B SPEED UP	4	61	B REV LED
MUSIC IN	5	60	REC LED
B FWD REEL MOTOR	6	59	REV MODE
B REV REEL MOTOR	7	58	BIAS
B REV CAM MOTOR	8	57	NR OFF
B FWD CAM MOTOR	9	56	REC MUTE
A CAM SW-2	10	55	DCS IN
A CAM SW-1	11	54	DCS OUT
A CAM SW-0	12	53	GND
A PULSE IN	13	52	4.19MHz OSC IN
B CAM SW-2	14	51	4.19MHz OSC IN
B CAM SW-1	15	50	TO VCC
B CAM SW-0	16	49	RESET IN
B PULSE IN	17	48	KEY&SW IN-4
POWER OFF IN	18	47	KEY&SW IN-3
GND	19	46	KEY&SW IN-2
A FWD REEL MOTOR	20	45	KEY&SW IN-1
A REV REEL MOTOR	21	44	KEY OUT-4
A REV CAM MOTOR	22	43	KEY OUT-3
A FWD CAM MOTOR	23	42	KEY OUT-2
NR REC	24	41	KEY OUT-1
A MUTE	25	40	SW OUT-2
B MUTE	26	39	SW OUT-1
PLAY MUTE	27	38	HI-SPEED DUBBING
CAP MOTOR ON	28	37	H.S CrO2
REC	29	36	H.S. ME
FADE CTRL	30	35	H.S. NORM.
BEQ	31	34	CrO2
+5V	32	33	METAL

### Key matrix

	KEY&SW-1 (PIN45)	KEY&SW-2 (PIN46)	KEY&SW-3 (PIN47)	KEY&SW-4 (PIN48)
KEY OUT 1 (PIN41)	A ◀ (S300)	A ◀◀ (S301)	A ▶▶ (S302)	A ▶ (S303)
KEY OUT 2 (PIN42)	B ◀ (S310)	B ◀◀ (S311)	B ▶▶ (S312)	B ▶ (S313)
KEY OUT 3 (PIN43)	A ■ (S320)	B ■ (S321)	REC PAUSE (S322)	—
KEY OUT 4 (PIN44)	▶▶▶ (S330)	DOLBY (S331)	REV. MODE (S332)	CD REC (S333)
SW OUT 1 (PIN39)	—	B CrO2	METAL	—
SW OUT 2 (PIN40)	B PACK	REV REC	FWD REC	A PACK


### Terminal Description

Pin NO.	Symbol	I/O	Function	Pin NO.	Symbol	I/O	Function
1	NR LED	O	Dolby B indicator signal output	33	METAL	O	Metal tape , normal speed record
2	NR LED(C)	O	Dolby C indicator signal output	34	CrO <sub>2</sub>	O	CrO <sub>2</sub> tape , normal speed record
3	A S UP	O	Reel speed up control (Deck A)	35	H5 NORM	O	Not used
4	B S UP	O	Reel speed up control (Deck B)	36	H5 METAL	O	Metal tape , high speed record
5	MUSIC IN	I	Music scan signal input	37	H5 CrO2	O	CrO2 tape , high speed record
6	B FRM	O	Reel control signal for forward (Deck B)	38	HI DUB	O	Not used
7	B RRM	O	Reel control signal for reverse (Deck B)	39	SW O1	O	Keypad output for leaf switch
8	B RCM	O	Cam control signal for reverse (Deck B)	40	SW O2	O	Keypad output for leaf switch
9	B FCM	O	Cam control signal for forward (Deck B)	41	KEY O1	O	Key matrix output
10	A CSW2	I	Cam data input	42	KEY O2	O	Key matrix output
11	A CSW1	I	Cam data input	43	KEY O3	O	Key matrix output
12	A CSW0	I	Cam data input	44	KEY O4	O	Key matrix output
13	A PULSE IN	I	Reel pulse input from deck A	45	KEY/SW 11	I	Key matrix input
14	B CSW2	I	Cam data input	46	KEY/SW 12	I	Key matrix input
15	B CSW1	I	Cam data input	47	KEY/SW 13	I	Key matrix input
16	B CSW0	I	Cam data input	48	KEY/SW 14	I	Key matrix input
17	B PULSE IN	I	Reel pulse input from deck B	49	RESET	I	Reset input
18	P.CONT	I	Inhibit input from system controller	50	TO VCC	—	Connected to VCC
19	GND	—	GND	51	OSC	—	Oscillation terminal
20	A FRM	O	Reel control signal for forward (Deck A)	52	OSC	—	Oscillation terminal
21	A RRM	O	Reel control signal for reverse (Deck A)	53	GND	—	GND
22	A RCM	O	Cam control signal for reverse (Deck A)	54	DCS OUT	O	CompuLink output
23	A FCM	O	Cam control signal for forward (Deck A)	55	DCS IN	I	CompuLink input
24	NR REC	O	It is "H" when recording with NR on	56	REC MUTE	O	Recording mute control
25	A MUTE	O	It is "H" when deck A is not playing	57	NR OFF	O	NR on/off control
26	B MUTE	O	It is "H" when deck B is not playing	58	BIAS	O	Bias on/off control
27	PLAY MU	O	Deck mute	59	REV MODE	O	Indication control for reverse mode
28	CAP CONT	O	Capstan on/off control	60	REC LED	O	Indication control for record
29	REC	O	It is "H" when recording	61	BREV LED	O	Indication control for reverse playback
30	FADE CON	O	It is "H" when recording with fade	62	BFWD LED	O	Indication control for forward playback
31	BEQ	O	It is "L" when CrO2 tape is in deck B	63	AREV LED	O	Indication control for reverse playback
32	+5V	—	Power supply	64	AFWD LED	O	Indication control for forward playback



## ■ AN7374K (IC201) : Dolby IC


### 1. Block Diagram

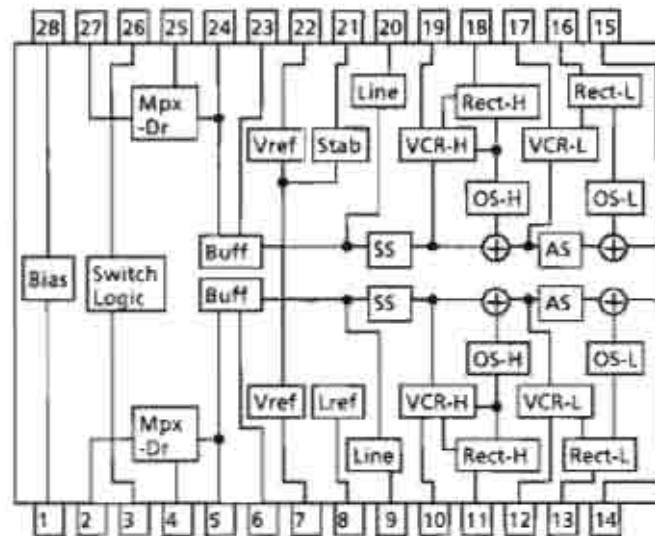


### 2. Pin function

Pin No	Symbol	Function	Pin No	Symbol	Function
1	GND	GND	15	REC OUT-L	Ch. B REC-OUT
2	REC IN-R	Ch. A REC-IN	16		Ch. B LLS control signal rectifier
3	OFF/B/C	C-type/B-type/OFF NR switch	17		Ch. B LLS control resistance
4	PB IN-R	Ch. A PB-IN	18		Ch. B HLS control signal rectifier
5		Ch. A MPX filter sriver output	19		Ch. B HLS control resistance
6		Ch. A Processor input	20	PB OUT-L	Ch. B LINE -OUT
7		Ch. A reference voltage output	21		Reference voltage input
8		Reference curent generator	22		Ch. B reference voltage output
9	PB OUT-R	Ch. A LINE -OUT	23		Ch. B Processor input
10		Ch. A HLS control resistance	24		Ch. B MPX filter sriver output
11		Ch. A HLS control signal rectifier	25	PB IN-L	Ch. B PB-IN
12		Ch. A LLS control resistance	26	PB/REC	PB/REC/PBmpx Mode switch
13		Ch. A LLS control signal rectifier	27	REC IN-L	Ch. B REC-IN
14	REC OUT-R	Ch. A REC-OUT	28	Vcc	Vcc

■  $\mu$ PC1297CA (IC341) : Dolby HX PRO System IC

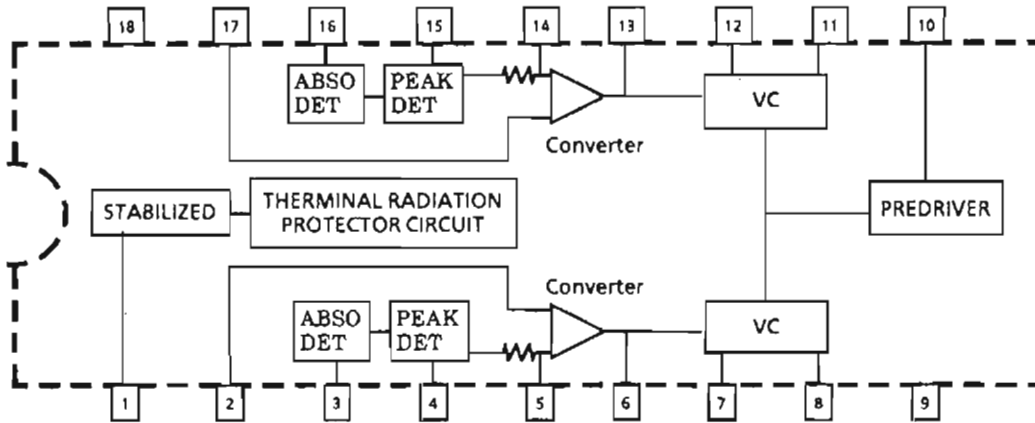


■ LB1641 (IC204~207) : DC Motor Driver

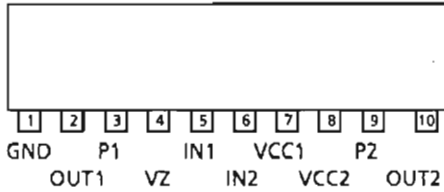

Input		Output		Mode
IN1	IN2	OUT1	OUT2	
0	0	0	0	Brake
1	0	1	0	CLOCKWISE
0	1	0	1	COUNTER-CLOCKWISE
1	1	0	0	Brake

∞ : Hi impedance

■  $\mu$ PC1330 HA (IC304) : HEAD SWITCH

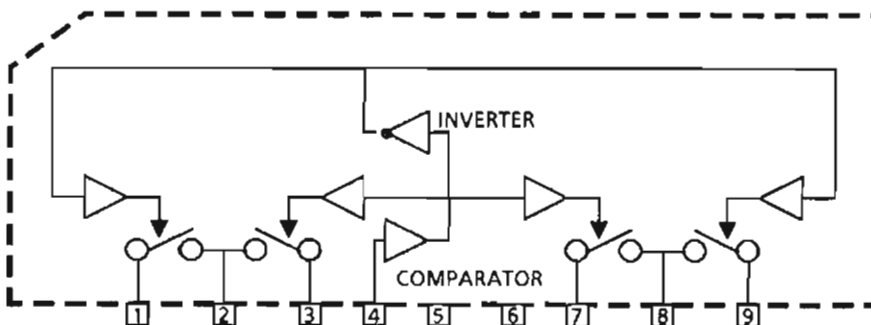


4pin	
PB	L
REC	H

## Disassembly Procedures


(1) Removing the top cover

1. Remove 6 screws (A) and (B) fastening the rear and sides of the top cover to remove the cover.

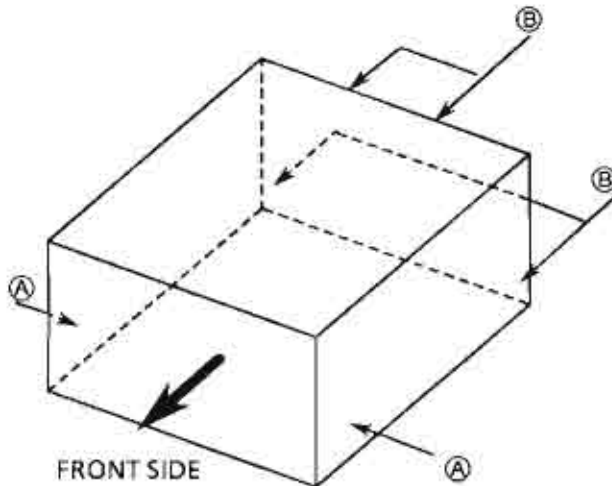


(2) Removing the Front panel assembly with same P.C.Bard

1. Remove the top cover.
3. Disconnect the connectors CN221.
4. Remove a screw (C) and 2 hooks fastening the assembly with chassis to remove the assembly.

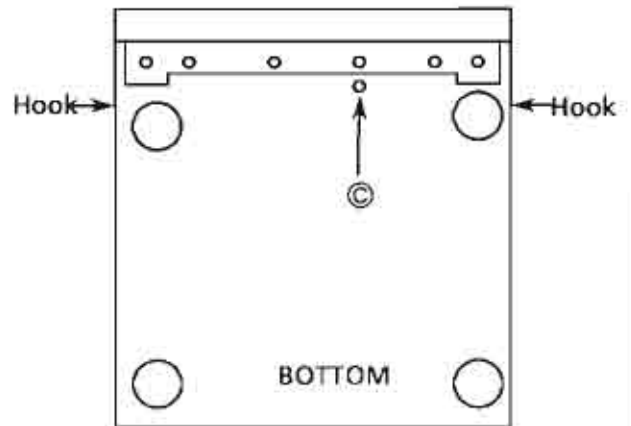


(3) Removing the Deck control circuit board (ENJ-097-2)

1. Remove the top cover .
2. Remove the 2 screws (E) fixing the circuit board.
3. Disconnect the connectors P292,293 and CN701.

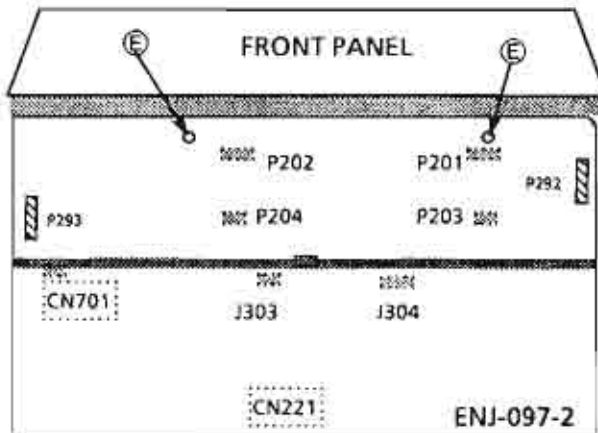


(4) Removing the mechanism assembly (ENJ-097-1)

1. Remove the top cover, frontpanel assembly and deck control circuit board.
2. Remove 8 screws (C) and (D) fastening mechanism assembly

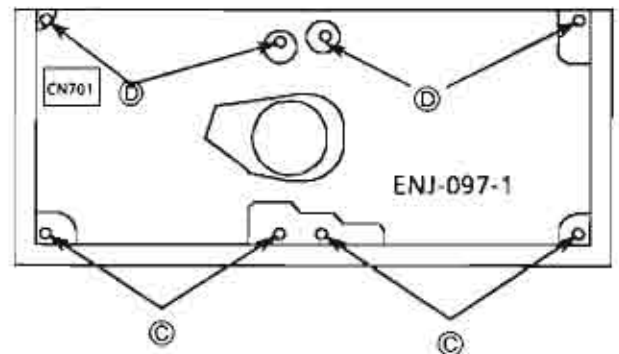


- (A) -- SDSG3008N    (B) ... GBSG3008CC    (C) ... SBST3006Z    (D) .... SBSF3008Z  
 (E) -- SDST2604Z


- (5) Removing the door lock plate assembly
1. Remove the mechanism assembly.
  2. Remove the 2 screws (F) fixing the assembly.
  3. Open the cassette doors to remove the assembly.

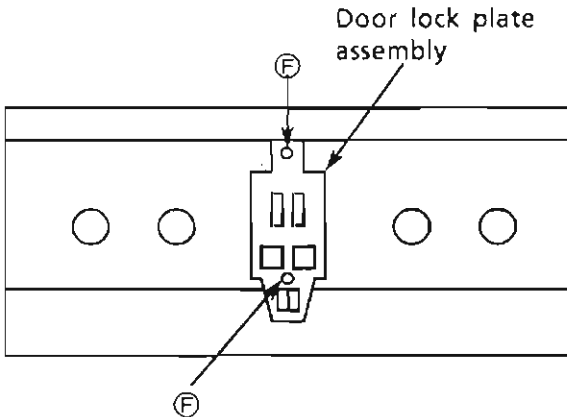


- (6) Removing the cassette lids
1. Push the eject button to open the cassette doors.
  2. Slide the lids up to remove them.

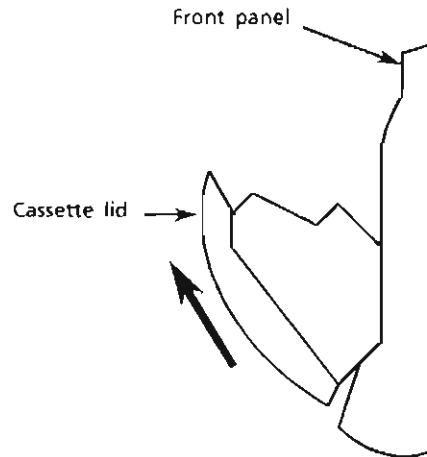

- (7) Removing the dumpers
1. Remove the mechanism assembly.
  2. Press the hook and release it to remove the dumper. (See an arrow)

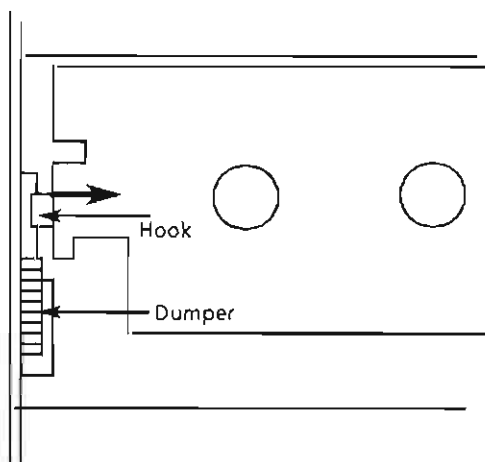


- (8) Removing the Cassette holder
1. Remove the mechanism assembly.
  2. Open the cassette door.
  3. Remove the spring.
  4. Remove the cassette holder.

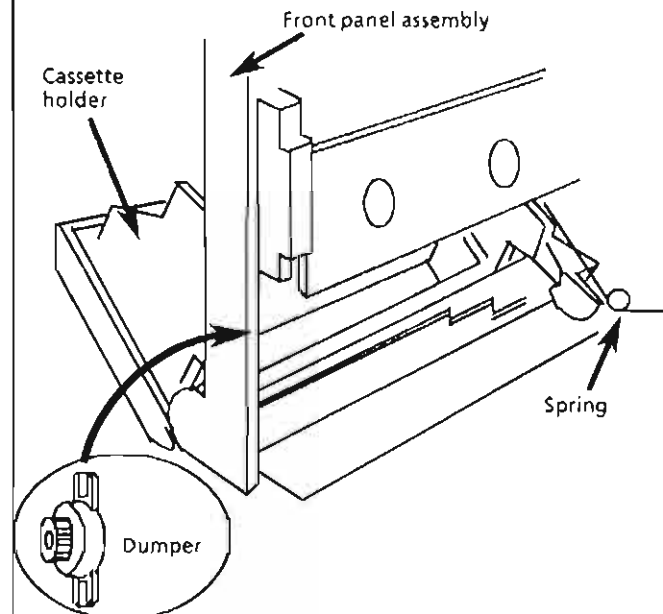

(F) ... SDSF2608Z


(9) Removing the Front SW circuit board (ENJ-097-3)

1. Remove the mechanism assembly and cassette holder.
2. Remove the 6 screws (M) to remove the holder bracket fixing the SW circuit board.
3. Remove 2 screws (E) to remove the circuit board.

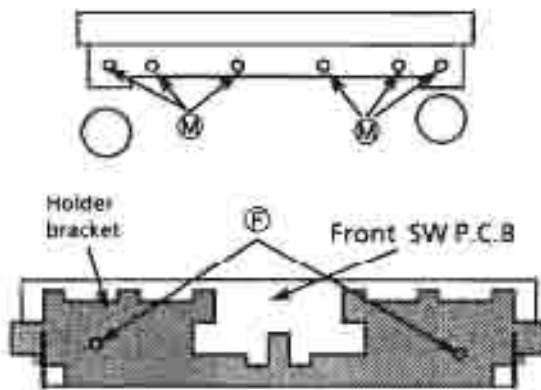


(10) Removing the deck audio circuit board (ENJ-097-1)

1. Remove the front panel assembly and Deck control circuit board (ENJ-097-2).
2. Disconnect CN331 and CN332.
3. Remove the 2 screws (C) to remove the circuit board. (Pay attention to the pawls.)

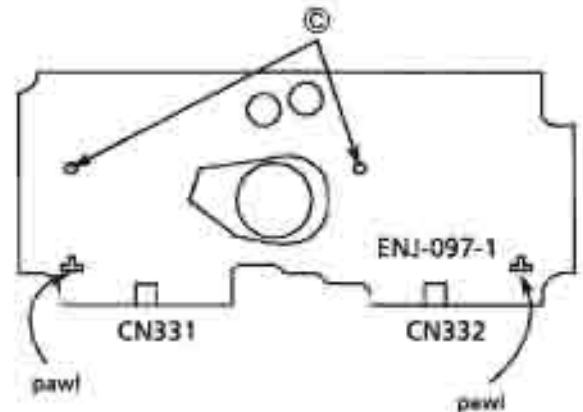

(11) Removing the capstan motor

1. Remove the deck audio circuit board.
2. Remove the 7 screws (E) fixing the bracket.
3. Release the hooks holding the bracket to remove the bracket with the capstan motor.
4. Remove the 2 screws fixing the motor to remove it.

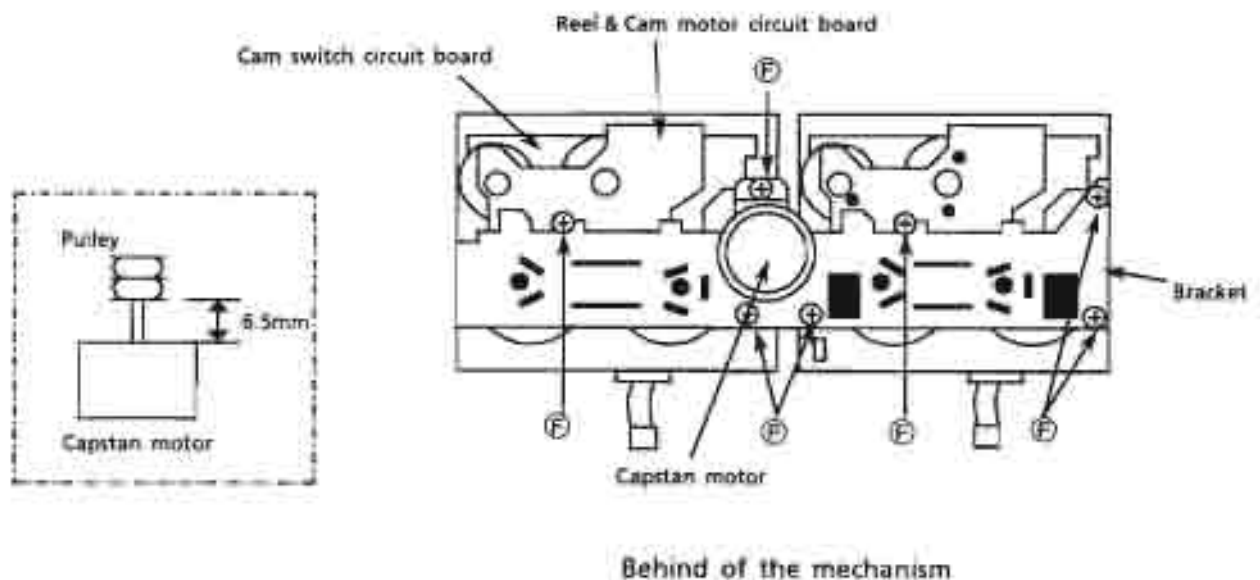

Behind of the mechanism


(C) ... 5B5T3006Z

(E) ... 5DSF2608Z

(M) ... 5OST3008CC


**(12) Installing the head assembly**

The direction of the head is changed with the head gear. When servicing, install the head gear according to the direction of the head.

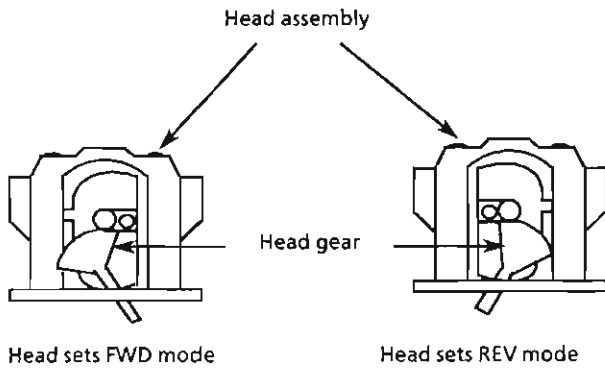

**(13) Removing the pinchroller arm assembly**


1. Remove the mechanism assembly.
2. Release the hook holding the assembly to remove it.

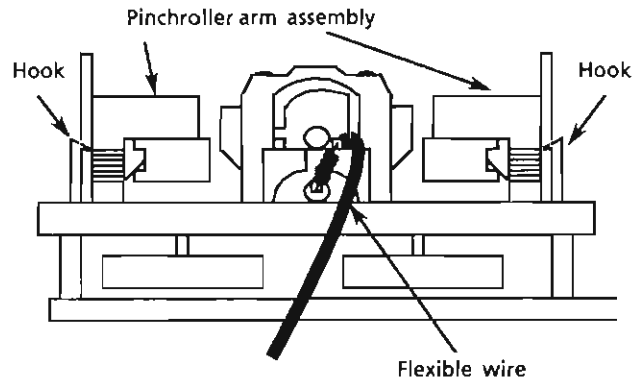

Bottom view of the mechanism

**(14) Removing the Flywheels**


1. Remove the deck audio circuit board.
2. Remove the 7 screws (E) and release the hooks holding the bracket to remove the bracket with the capstan motor.
3. Remove the flywheel.

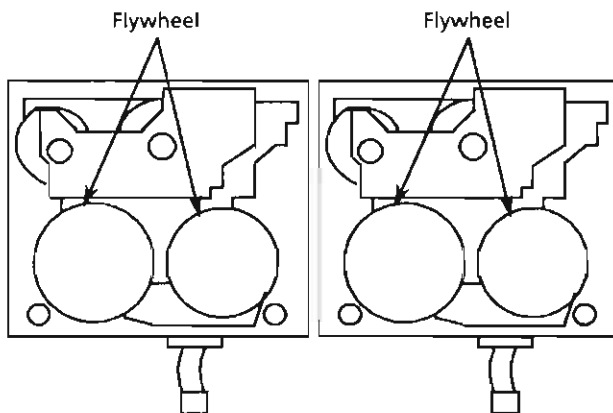

Behind of the mechanism

**(15) How to install the belts**

1. Install the belts as shown in the figure below.  
When putting the belts, put the belt B first.
2. Install the bracket with the capstan motor to put the belts on the pulleys.

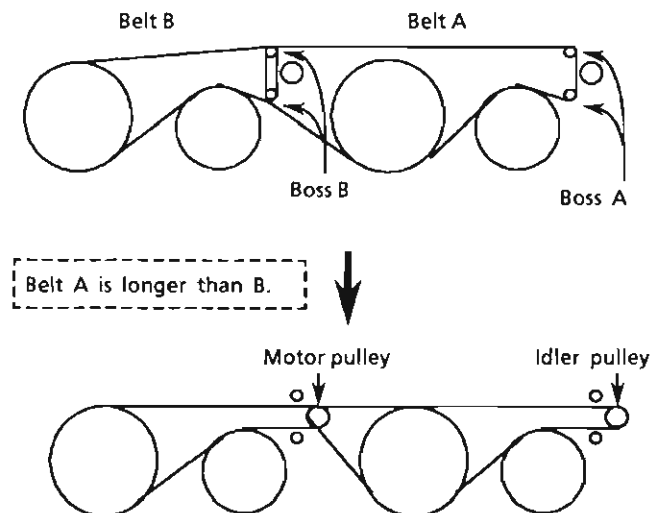


(16) Removing the reel & cam motor


1. Remove the flywheel.
2. Remove the screws ㊦ and ㊧ fixing the motors to remove the reel & cam motor circuit board.
3. Unsolder the motors to remove them.

(17) Removing the cam switch circuit board

1. Remove the flywheel.
  2. Remove the reel & cam motor circuit board.
  3. Release the hook holding the cam switch circuit board and remove the screw to remove it.
- ※ When installing the cam switch circuit board, assemble the circuit board so that the part ㊱ meets part ㊲.

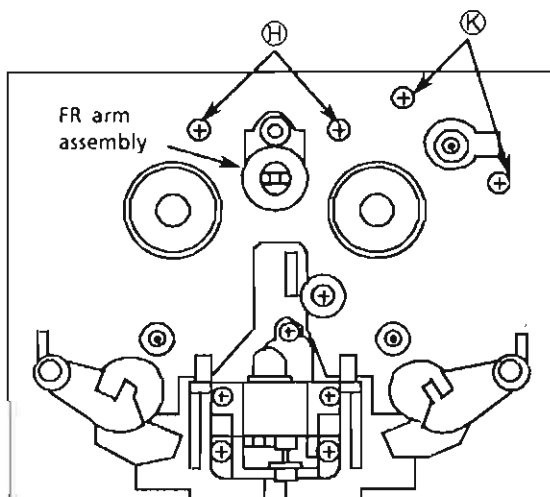


Front view of the mechanism

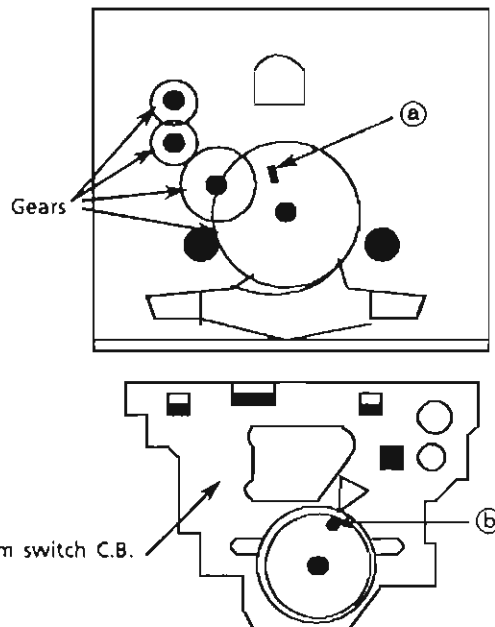

(18) Removing the head assembly

1. Remove the mechanism assembly. (Refer to Item 8)
2. Disconnect the connector CN331 or CN332 on the deck audio circuit board.
3. Remove the 3 screws ㊬ fixing the head assembly to remove it.

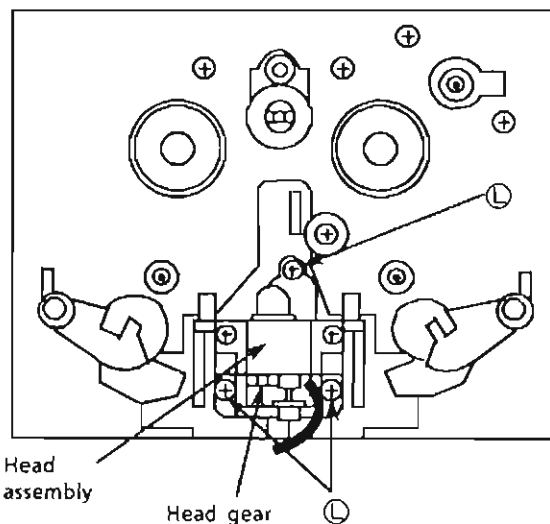

Front view of the mechanism

㊦ .... VKZ4705-001

㊧ .... VKZ4705-002

㊬ .... SDST2004Z

## Adjustment Procedures (Cassette Deck)

### 1. Measuring instruments

- Audio frequency signal generator ( 0dbS output at the 600 ohm output terminal from 50Hz to 20KHz)
- Electronic voltmeter
- Frequency counter
- Wow & Flutter meter
- Distortion Meter with band pass filter
- Attenuator (600 ohm impedance)
- A resistor with 600Ω


#### Standard Tape

0dbS = 0.775V


Tape No.	Frequency	Level (Wow & Fkutter)	Purpose
VTT-703L	10kHz	-10dbS	Head azimuth , Frequency Response
VTT-712	3000Hz	0dbS 0.025%WRMS	Tape Speed , Wow & Flutter
VTT-724	1kHz	-4dbS	Standard Level
TMT-6447	—	—	Blunk Skip
TMT-6247 , TMT-6237	—	—	Music Scan
TMT-7046	—	—	Recording standard Normal : UR
AC-712	—	—	Recording standard METAL : MA
AC-513	—	—	Recording standard CrO <sub>2</sub> : SA
TW-2111, TW-2121	—	—	Forward / reverse play torque measuring
TW-2231	—	—	Feed forward / rewind torque measuring
C-120 Tape	—	—	Comfirming the tape running

### 2. Adjustment and repairing the mechanism

Item	Adjustment method	Standard value	Remarks
Head azimuth	<p>Deck A</p> <ol style="list-style-type: none"> <li>1. Connect an electronic voltmeter to the DOLBY TP (figure 3) to playback VTT-703L.</li> <li>2. Adjust screw Ⓐ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed.</li> <li>3. Adjust screw Ⓑ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed.</li> </ol> <p>Deck B</p> <ol style="list-style-type: none"> <li>4. Adjust screw Ⓒ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed.</li> <li>5. Adjust screw Ⓓ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed.</li> <li>6. After making the adjustment, apply screw lock to prevent screws Ⓐ, Ⓑ, Ⓒ and Ⓓ coming loose.</li> </ol>	Maximum	<ol style="list-style-type: none"> <li>1. Refer to figure 1.</li> <li>2. When the specified characteristic cannot be obtained because of head wear, excessive magnetization, etc., replace the head assembly and adjust the head azimuth. Also, perform the electric adjustment.</li> <li>3. When there is the difference of more than 3 ~ 4 dB between left and right output levels, replace the head assembly to avoid complaints.</li> </ol>
Playback torque	1. Measure the torque in the playback mode by the torqu meter.	26 ~ 62 g-cm	When the standard torque cannot be obtained, replace the FR arm assembly or motor.
Fast forward torque	1. Measure the torque in the fast forward mode by the torqu meter.	80 ~ 170 g-cm	When the standard torque cannot be obtained, replace the FR arm assembly or motor.
Rewind torque	1. Measure the torque in the rewind mode by the torqu meter.	80 ~ 170 g-cm	When the standard torque cannot be obtained, replace the FR arm assembly or motor.
Wow & flutter	<ol style="list-style-type: none"> <li>1. Connect the wow &amp; flutter meter to the DOLBY TP (figure 3) and play back VTT-712.</li> <li>2. Its reading should be within 0.2% (WTD).</li> </ol>	—	As a complaint may occur if the wow & flutter fluctuates by 0.1% even though it is allowed in the standard, repairing is required.

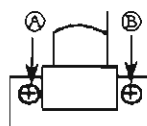

Deck A

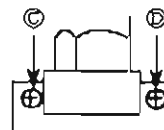

Deck B

Figure 1



### 3. Electrical Adjustments (Make the following adjustments after adjusting the head azimuth.)

In principle, the adjustments should be made in the following sequence.

Set the NR switch to OFF and the BEAT CUT switch to "1".

Adjustments marked with an asterisk (\*) should always be made after the head is replaced

0dBs=0.775V.

Item	Adjustment Method	Adjustment Location	Standard Value	Remarks
Tape Speed	1. Connect a frequency counter to the DOLBY TP (figure 3) and play back VTT-712. 2. Normal speed Adjustment 1) Mechanism B Play back deck B to adjust the semi-fixed resistor VR201 on ENJ-086-2. 2) Mechanism A Play back deck A to confirm that the difference between deck A and deck B is within $\pm 51\text{Hz}$ .	VR201  Check	3,000 Hz $\pm 10\text{Hz}$	1) Adjust the normal speed first, and perform the high speed adjustment.
* Standard level (Playback Level)	1. Connect an electronic voltmeter to the DOLBY TP (figure 3). Play back VTT-724 (1 kHz : -4dBs) to adjust the semi-fixed resistors.	Deck A L: VR301 R: VR302 Deck B L: VR303 R: VR304	-5.5dBs (411mV)  $\pm 1\text{dB}$	1) The playback level varies when the head is replaced so should be adjusted. Use an electronic voltmeter with an impedance of 100 k $\Omega$ or more.
* Playback Frequency Response	1. Connect an electronic voltmeter to the DOLBY TP (figure 3). 2. Play VTT-703L (10kHz : -10dBs) and adjust semi-fixed resistors to obtain the standard values.	Deck A L: VR305 R: VR306 Deck B L: VR307 R: VR308	-11.5dBs (206mV)  $\pm 3\text{dB}$	—
* Recording Bias Frequency	1. Connect a frequency counter to the BIAS TP (figure 3), and perform a recording to adjust bias frequency.	L301	100 kHz $\pm 6\text{ kHz}$	Set the BEAT CUT SWITCH to "1".
* Record / Play Frequency Response (Bias current)	1. Supply 1kHz and 12.5kHz with 30mV signals to AUX (AX-F3000) terminals respectively to record them. 2. Connect an electronic voltmeter to the DOLBY TP (figure 3) to confirm the recorded values. 3. If the values are not satisfied, adjust the semi-fixed resistors and record the signal again to confirm the recorded values.	L: VR513 R: VR514	0 $\pm$ 2 dB for 12.5 kHz with 1 kHz as the standard.	<b>Refer to figure 2 below.</b> 1) The recording and playback frequency response of a cassette deck are adjusted by adjusting the bias. 2) Perform the adjustment with normal tape and confirm that the values are within the range for metal tape.
* Adjustment HX PRO	1. Connect an electronic voltmeter to the R504(L), R503(R) at either end, and record the no signal Metal tape. 2. Adjust to the liast volues.	L501(L)  L502(R)		


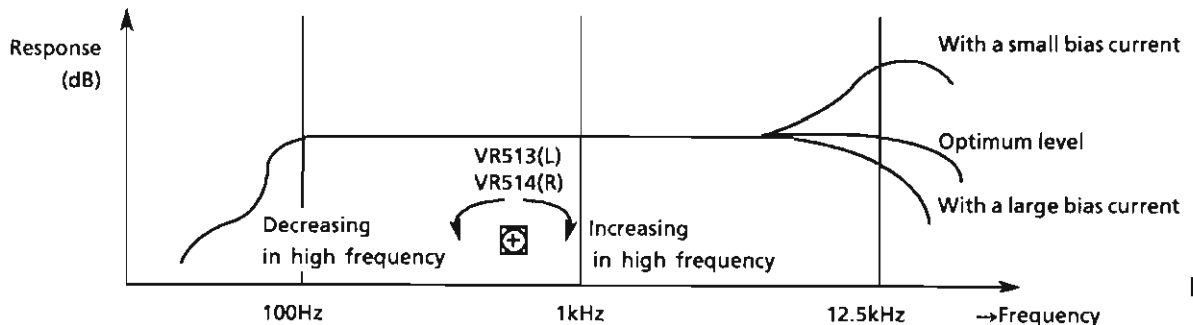


Figure 2


Item	Adjustment Method	Adjustment Location	Standard Value	Remarks
* Record / Playback Sensitivity	<ol style="list-style-type: none"> <li>1. Input a 1 kHz ( -8.2dBs: 300mV) signal to PHONO / VCR terminals and record it on the left and right channels .</li> <li>2. Connect an electronic voltmeter to the DOLBY TP (figure 3) to confirm the values .</li> <li>3. If the values are not satisfied , adjust the semi-fixed resistors and record the signals again to confirm the values.</li> </ol>	L : VR311 R : VR312	-5.5dBs (411mV)	Adjust with normal tape and make sure that the left / right level difference is 1.0dB or less
* Erase ratio check	<ol style="list-style-type: none"> <li>1. Record a music source using metal tape.</li> <li>2. Rewind and erase the recorded section.</li> <li>3. Comfirm nothing can be heard.</li> </ol>	-	-	-
Auto-stop check	Make sure to operate AUTO STOP at the end of tape running and not to operate on the way of the playing.	-	-	-
Music Scan	<ol style="list-style-type: none"> <li>1. Make sure not to work the music scanning operation at the start of tape wind using TMT-6237.</li> <li>2. Make sure to work the music scanning operation at the end of tape wind using TMT-6247.</li> </ol>	-	-	-

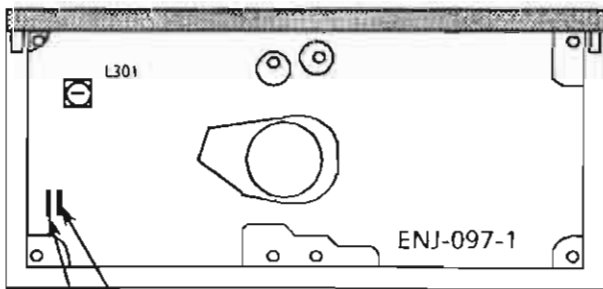

GND(B111)  
BIAS(B112)

BIAS TP.

FIG.3

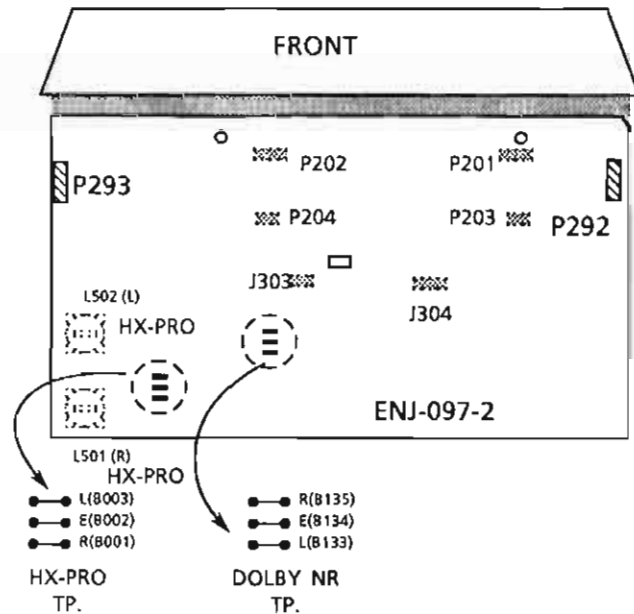

L(B003)  
E(B002)  
R(B001)

HX-PRO TP.

R(B135)  
E(B134)  
L(B133)

DOLBY NR TP.

FIG.4

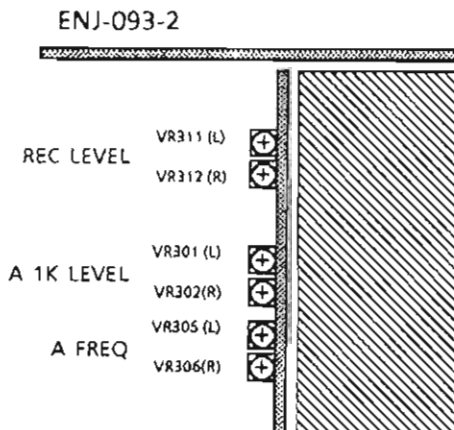


FIG.5 LEFT SIDE



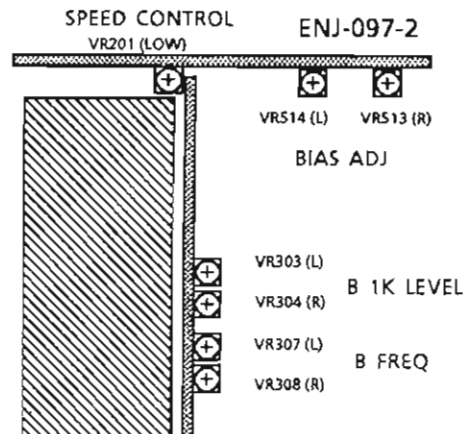



FIG.6 RIGHT SIDE




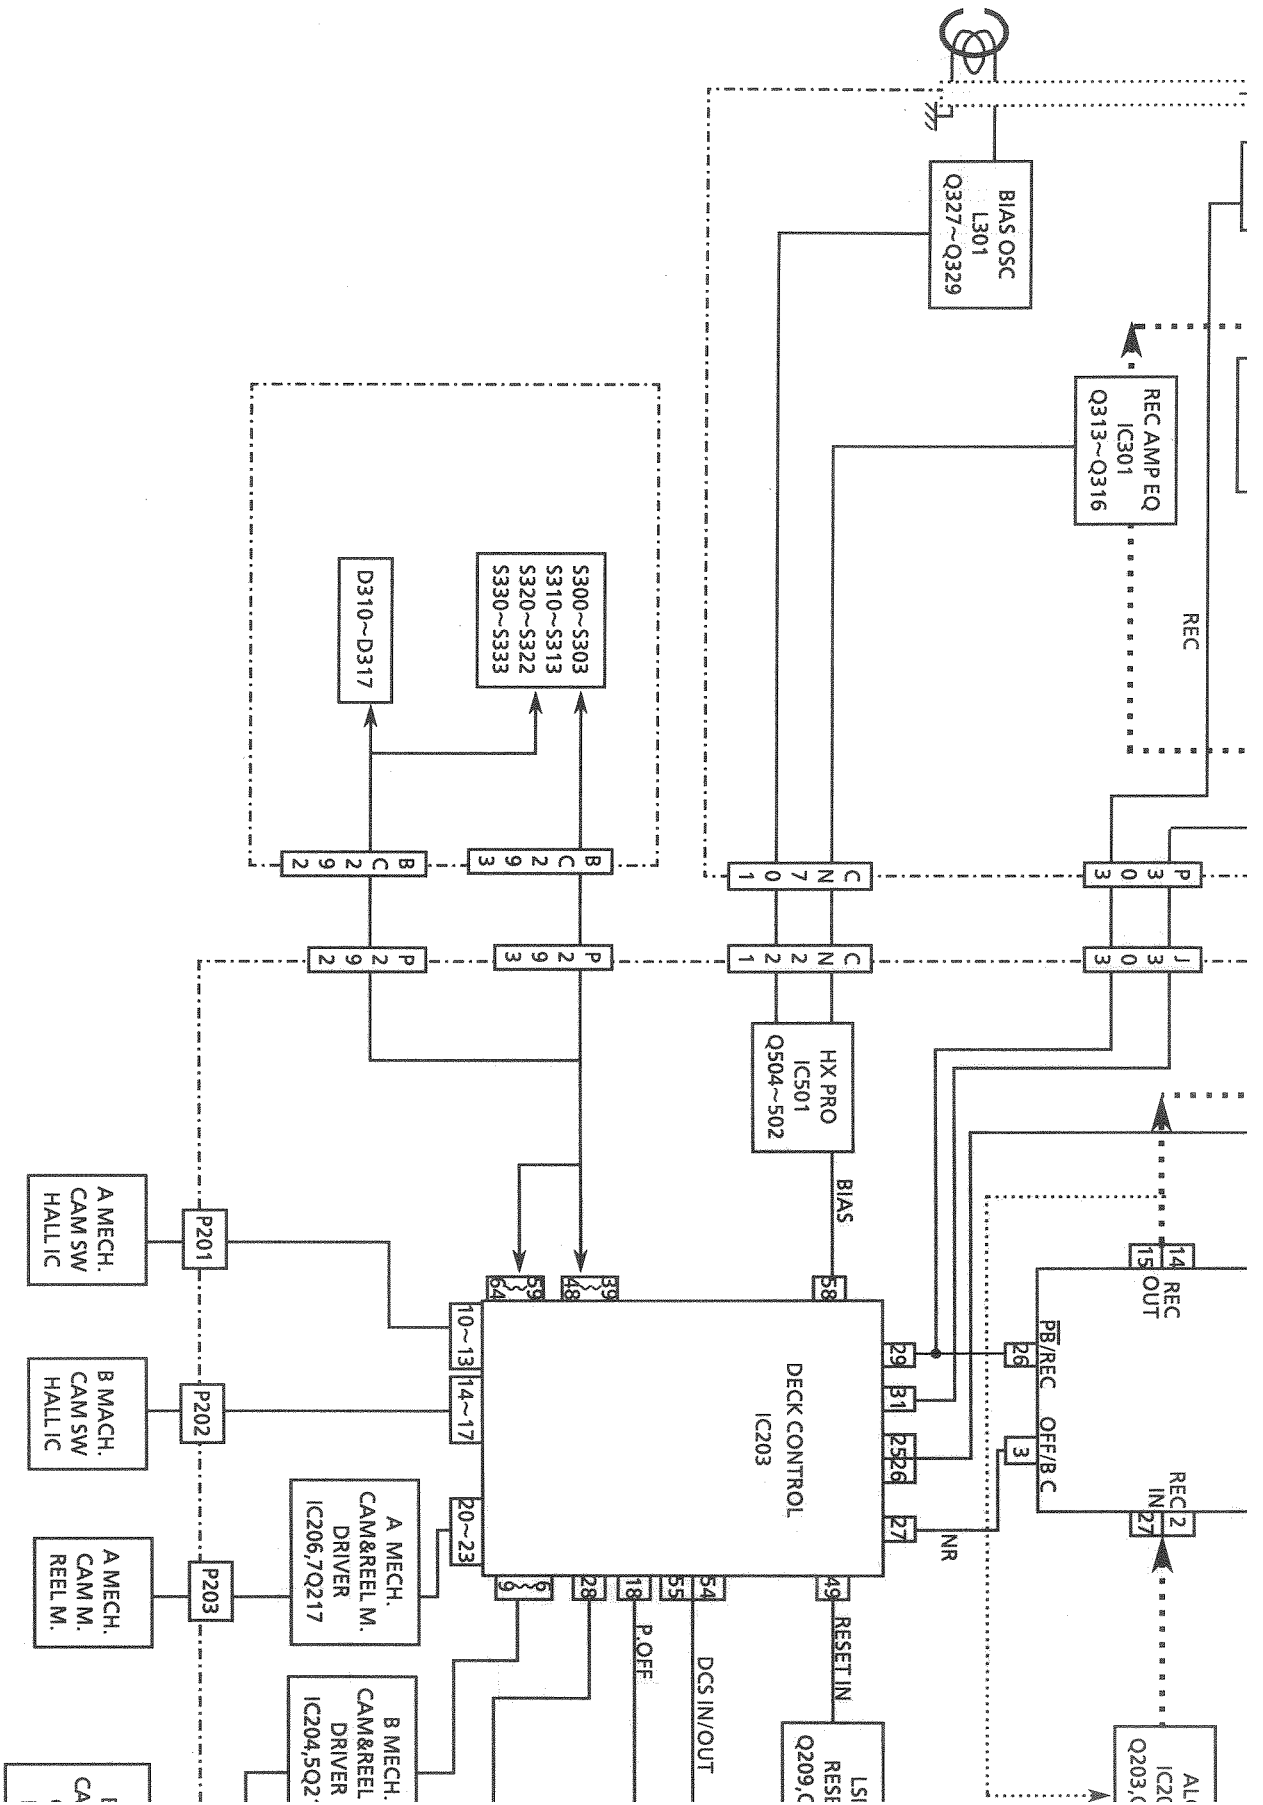

# Block Diagram

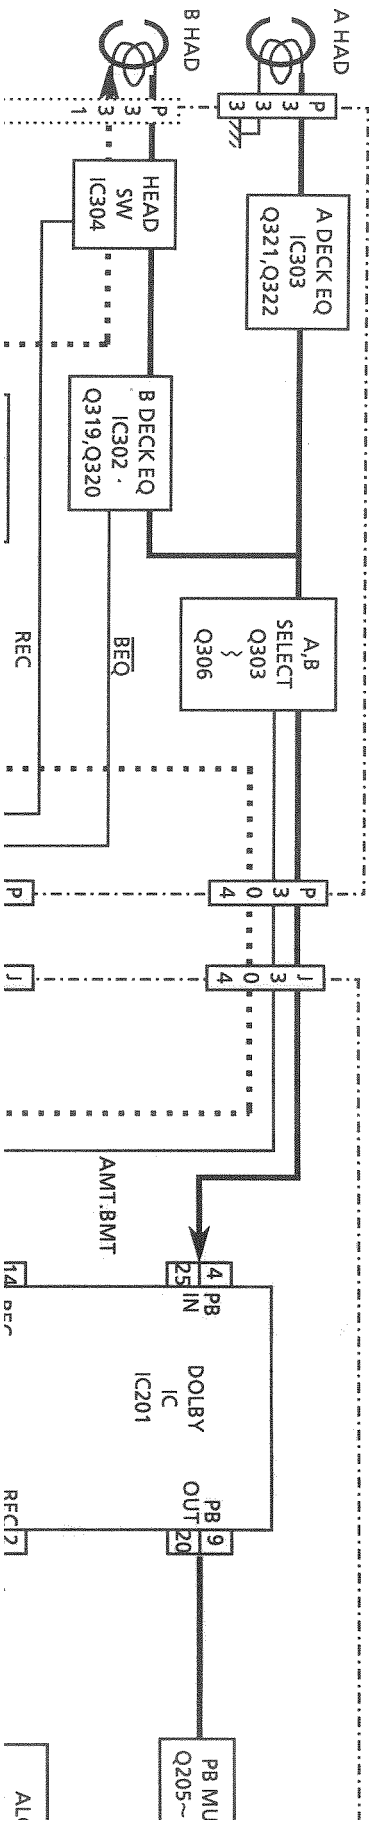

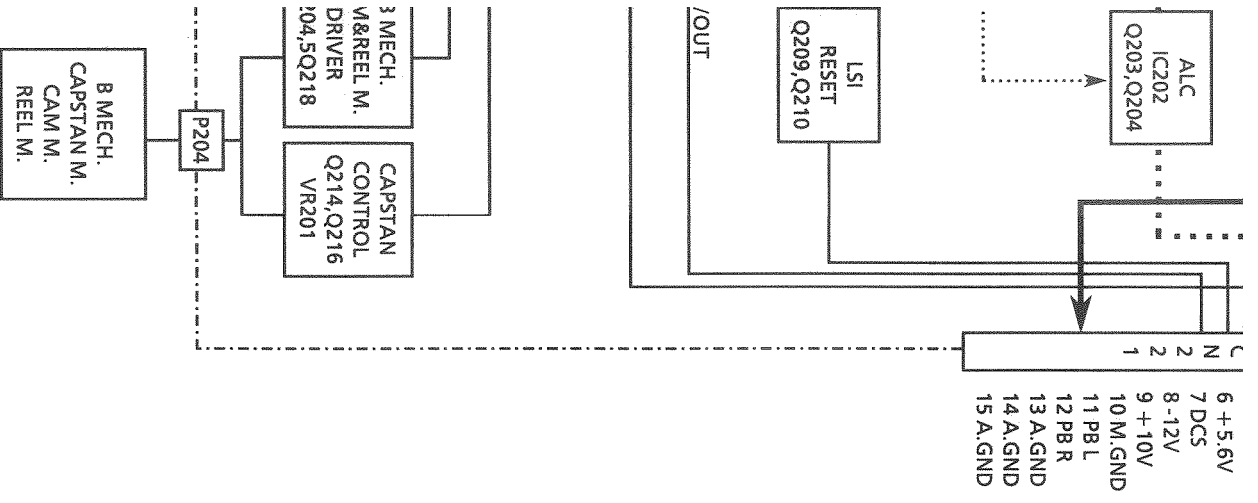


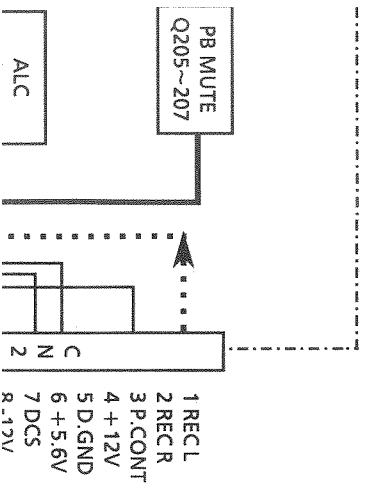








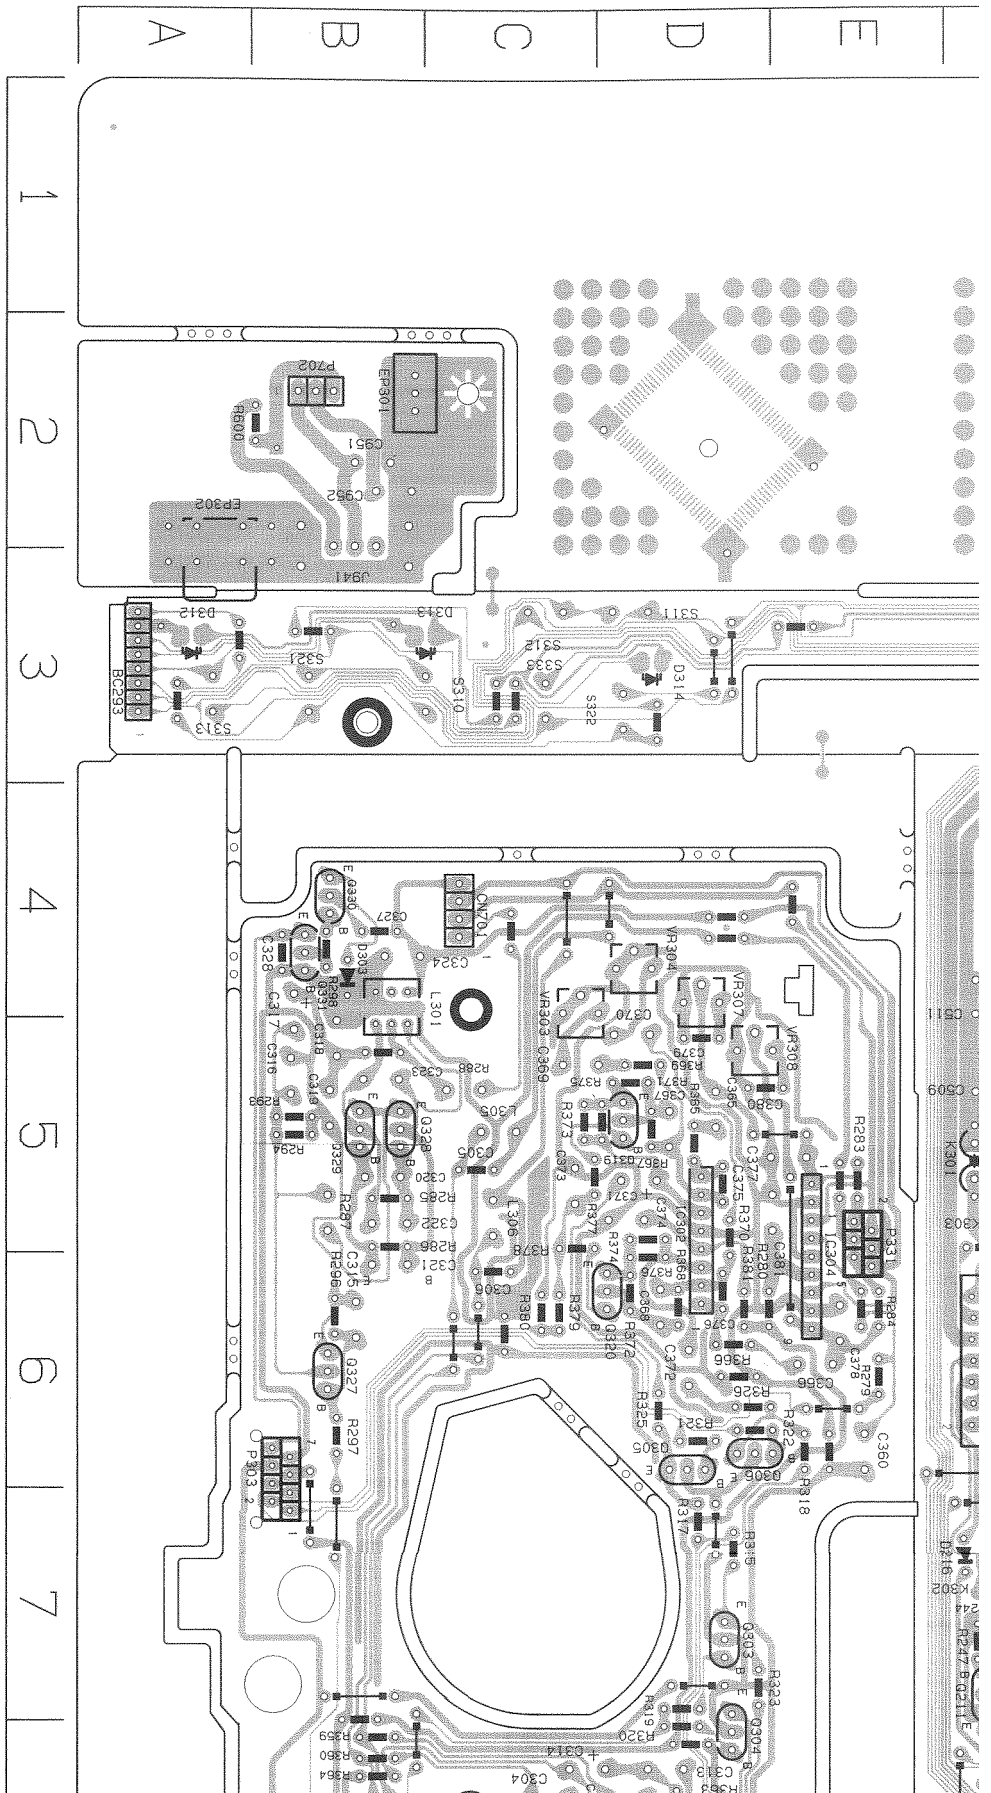





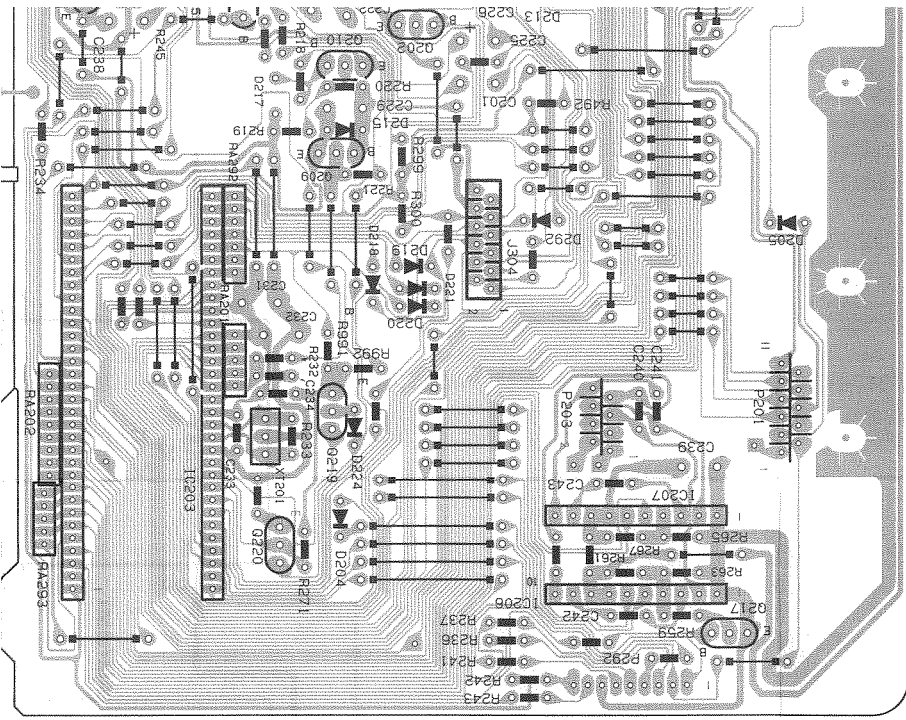


Location List (ENJ097)

C101	7 J	C161	7 I	C214	4 C	J201	3 E	R165	7 C	R217	4 C
C101	7 E	C161	7 E	C214	4 G	J201	3 I	R165	7 G	R217	4 G
C102	7 E	C162	7 H	C221	3 E	J202	3 C	R166	7 G	R218	4 C
C102	7 I	C162	7 D	C221	3 I	J202	3 H	R166	7 C	R218	4 G
C103	8 I	C163	7 C	C222	3 E	J203	3 B	R167	7 H	R221	4 E
C103	8 E	C163	7 G	C222	3 I	J203	3 G	R167	7 D	R221	4 J
C104	8 I	C171	9 H	C223	3 D	R101	8 I	R168	7 C	R222	4 E
C104	8 E	C171	9 C	C223	3 H	R101	8 E	R168	7 H	R222	4 I
C105	8 I	C172	9 C	C224	3 G	R102	8 I	R171	9 C	R223	4 E
C105	8 E	C172	9 G	C224	3 B	R102	8 E	R171	9 H	R223	4 I
C106	8 I	C173	10 H	C231	6 G	R105	8 I	R172	9 C	R224	4 D
C106	8 E	C173	10 C	C231	6 C	R105	8 E	R172	9 G	R224	4 I
C107	7 I	C174	10 G	C232	6 C	R106	8 I	R173	9 C	R225	4 D
C107	7 E	C174	10 C	C232	6 G	R106	8 E	R173	9 H	R225	4 H
C111	8 E	C175	9 H	C233	6 C	R121	8 I	R174	9 C	R226	4 H
C111	8 J	C175	9 D	C233	6 G	R121	8 E	R174	9 G	R226	4 C
C112	8 I	C176	9 G	C234	6 C	R122	8 I	R177	9 C	R227	4 B
C112	8 E	C176	9 C	C234	6 G	R122	8 E	R177	9 H	R227	4 G
C121	8 I	C177	9 I	C235	6 G	R131	9 I	R178	9 G	R228	4 F
C121	8 E	C177	9 D	C235	6 B	R131	9 E	R178	9 C	R228	4 B
C122	8 I	C178	10 D	C236	6 G	R132	9 I	R179	10 I	R231	6 C
C122	8 E	C178	10 I	C236	6 B	R132	9 E	R179	10 E	R231	6 H
C131	9 I	C179	10 I	C241	5 D	R133	9 E	R180	10 I	R232	6 H
C131	9 E	C179	10 D	C241	5 H	R133	9 I	R180	10 E	R232	6 C
C132	9 I	C180	10 D	C242	5 D	R134	9 E	R191	8 B	R233	6 C





G  
H  
I  
J  
K  
L  
M  
N  
O

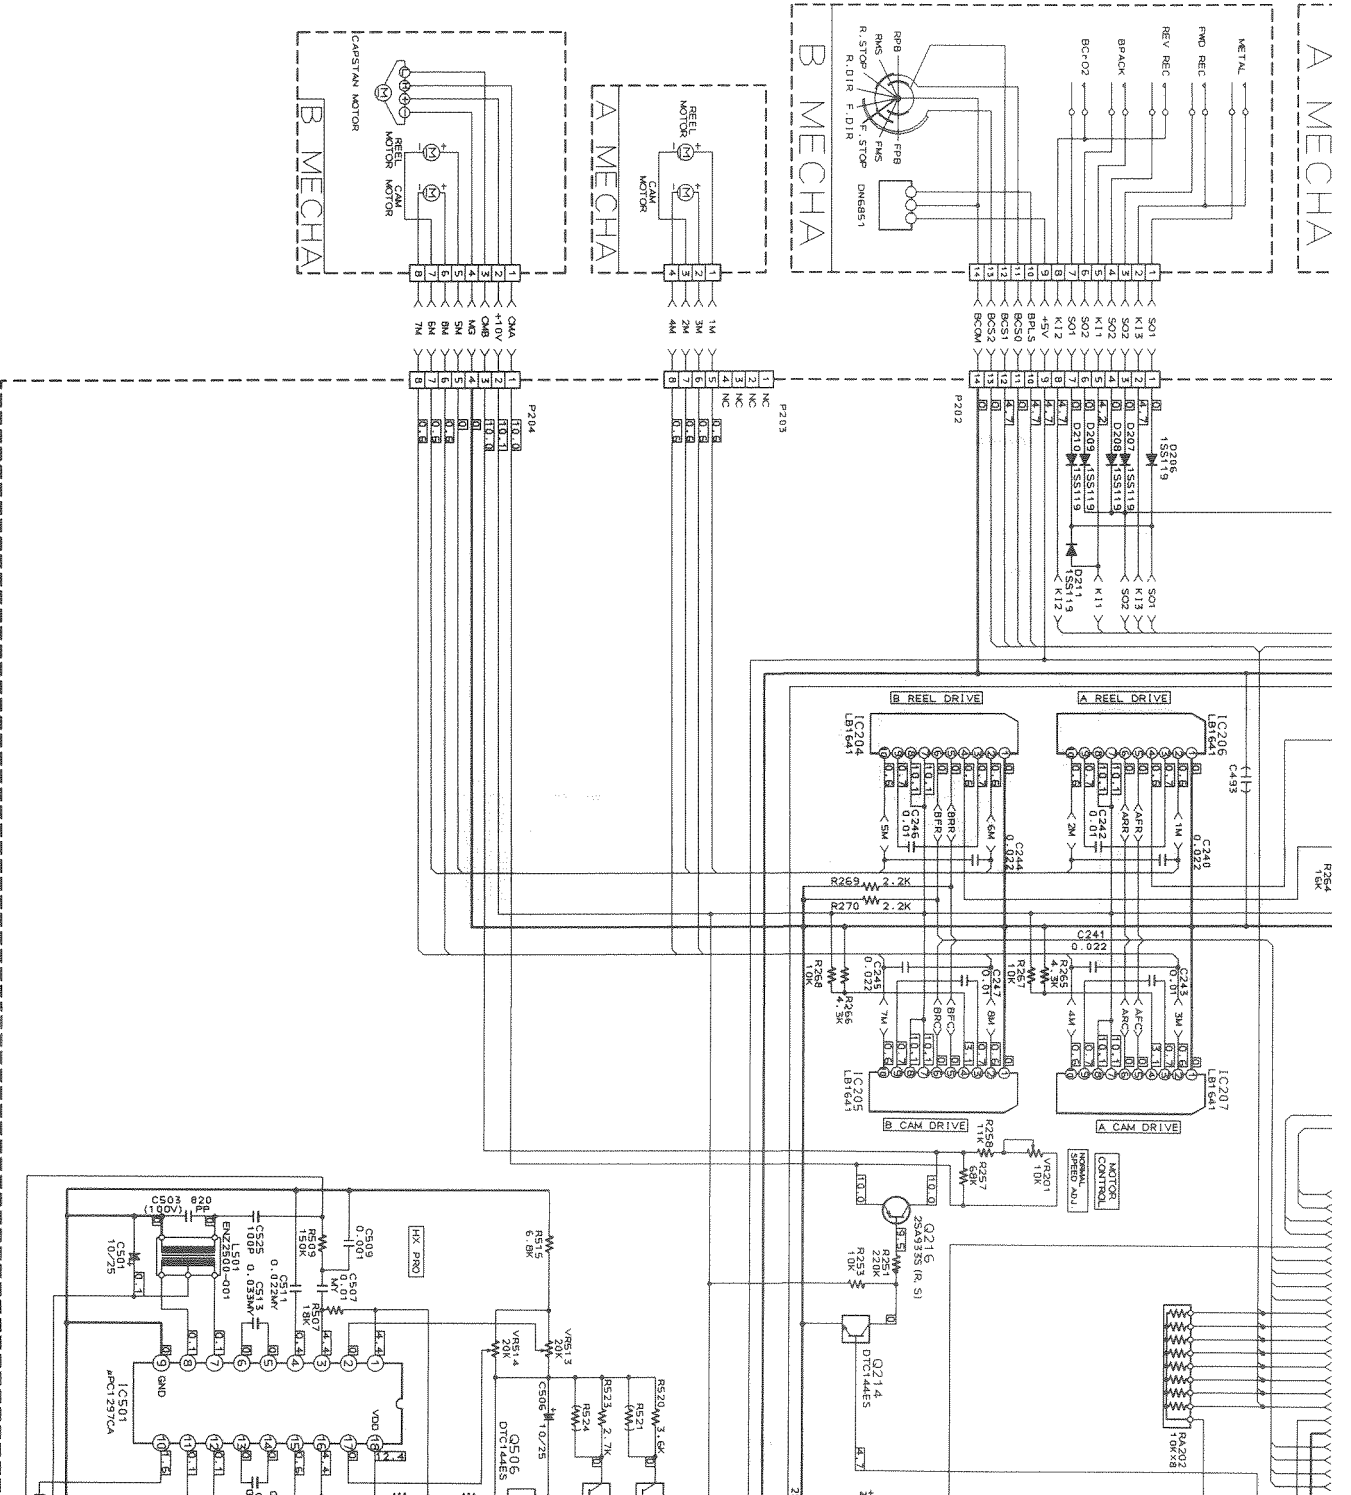




# Schematic Diagrams


## System Control Section

1 2 3 4 5 6 7 8 9 10

ENJ-097-3

ENJ-097-2

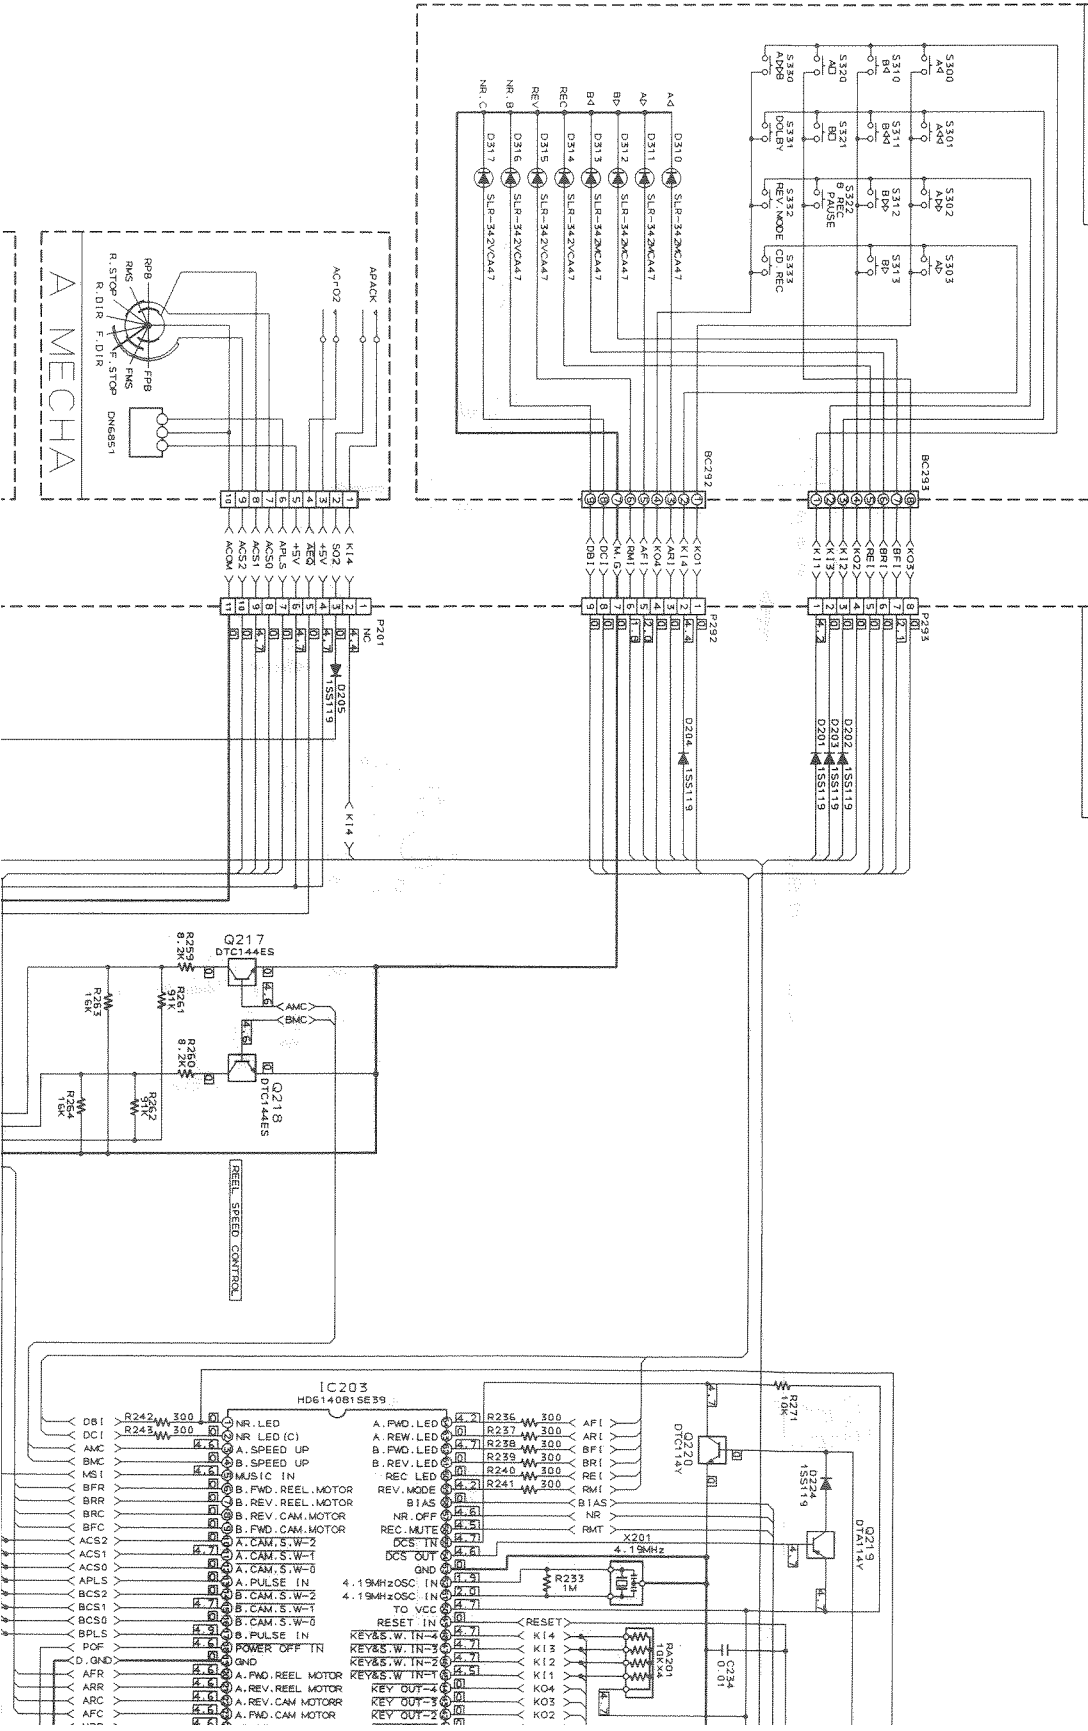

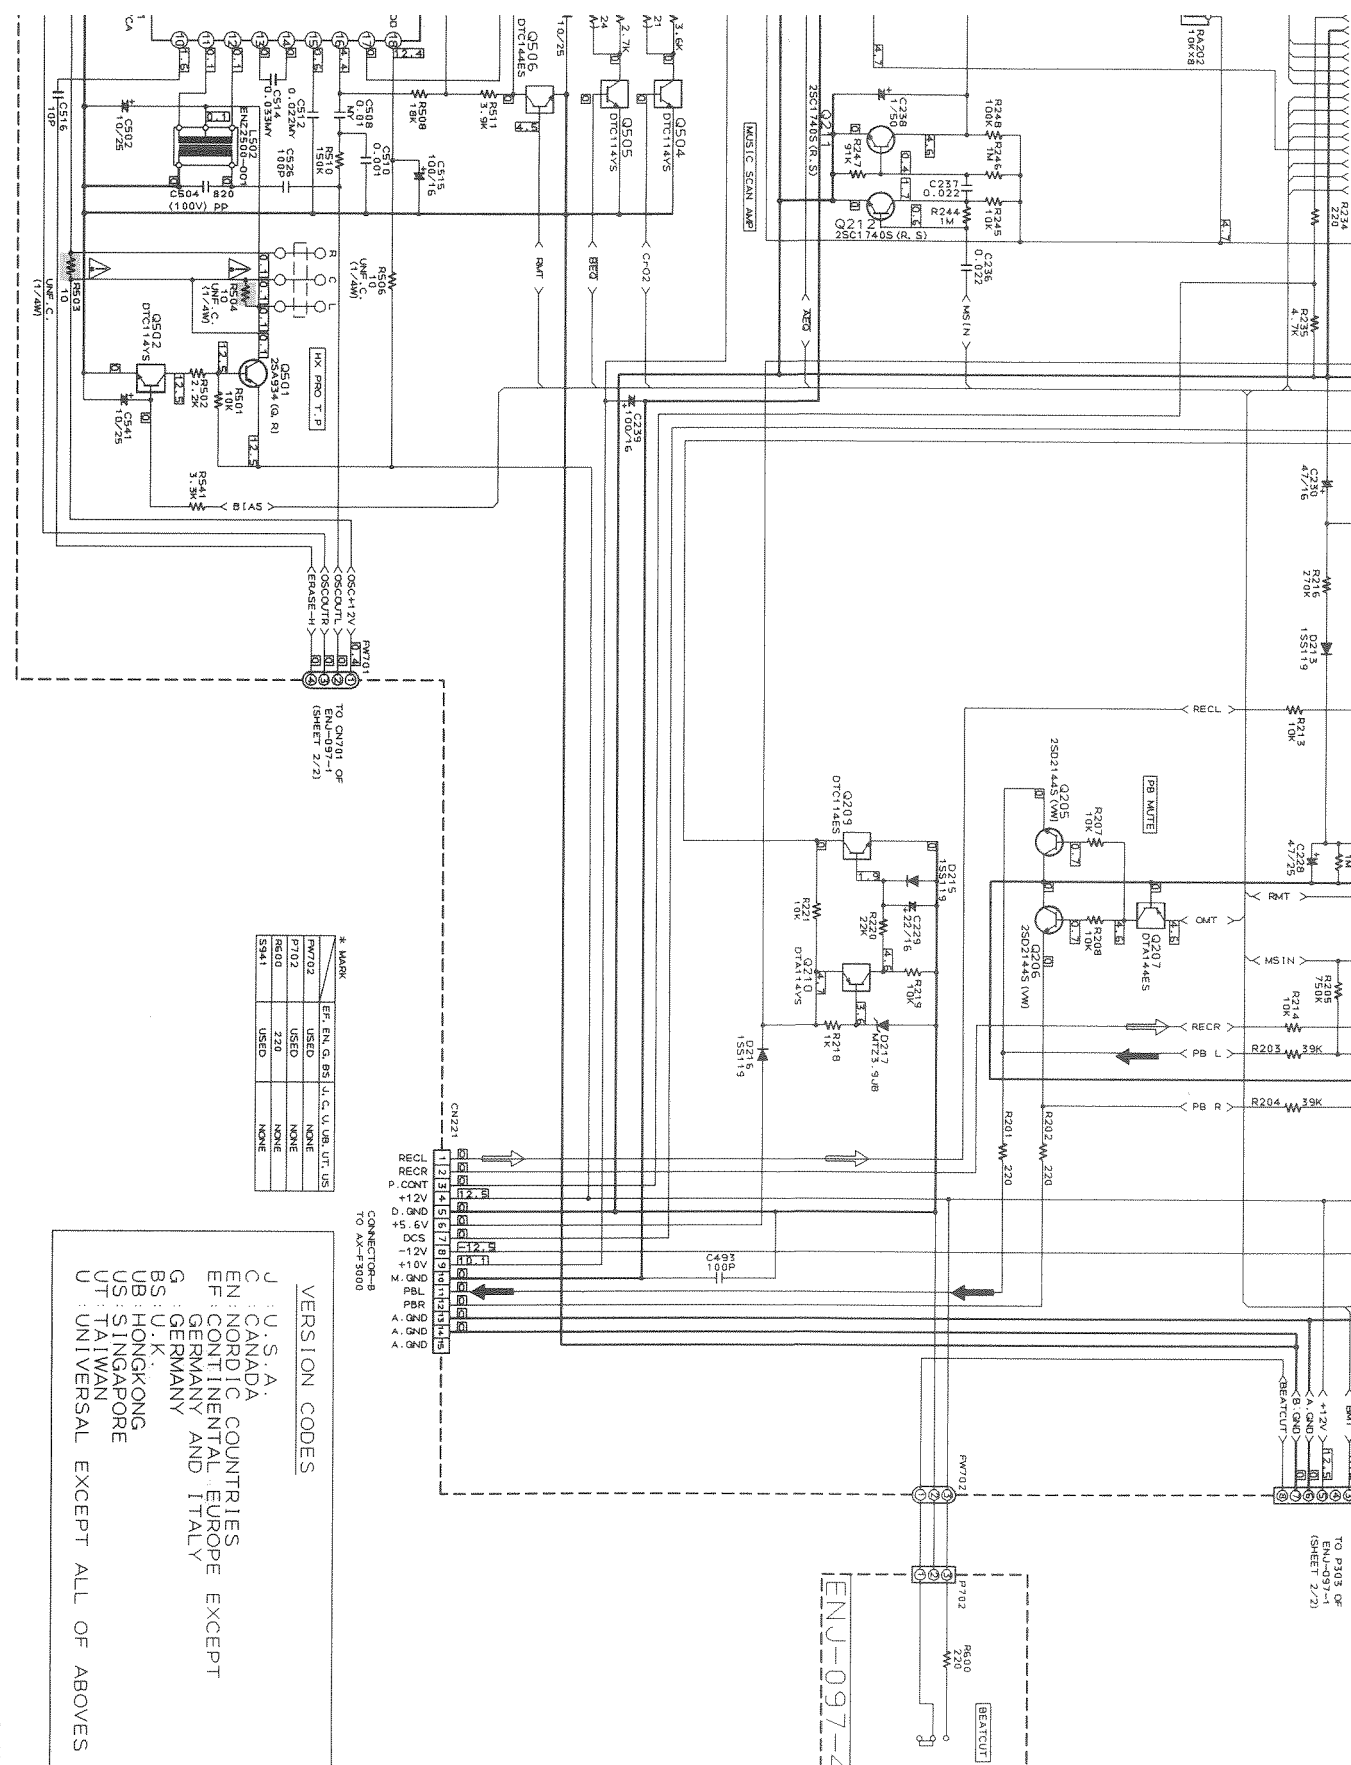


\* MARK

EF	EN	G	BS	J	C	U	UB	UT	US
USED	USED	USED	USED	NONE	NONE	NONE	NONE	NONE	NONE
P702	220								
RS41									


CONNECTOR-B  
TO AX-F3000

VERSION CODES

- J : U.S.A.
- C : CANADA
- EN : NORDIC COUNTRIES
- EF : CONTINENTAL EUROPE EXCEPT GERMANY AND ITALY
- G : GERMANY
- BS : U.K.
- UB : HONGKONG
- US : SINGAPORE
- UT : TAIWAN
- U : UNIVERSAL EXCEPT ALL OF ABOVE

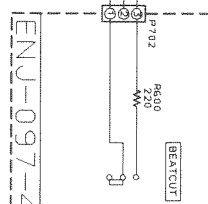


NR TEST POINT

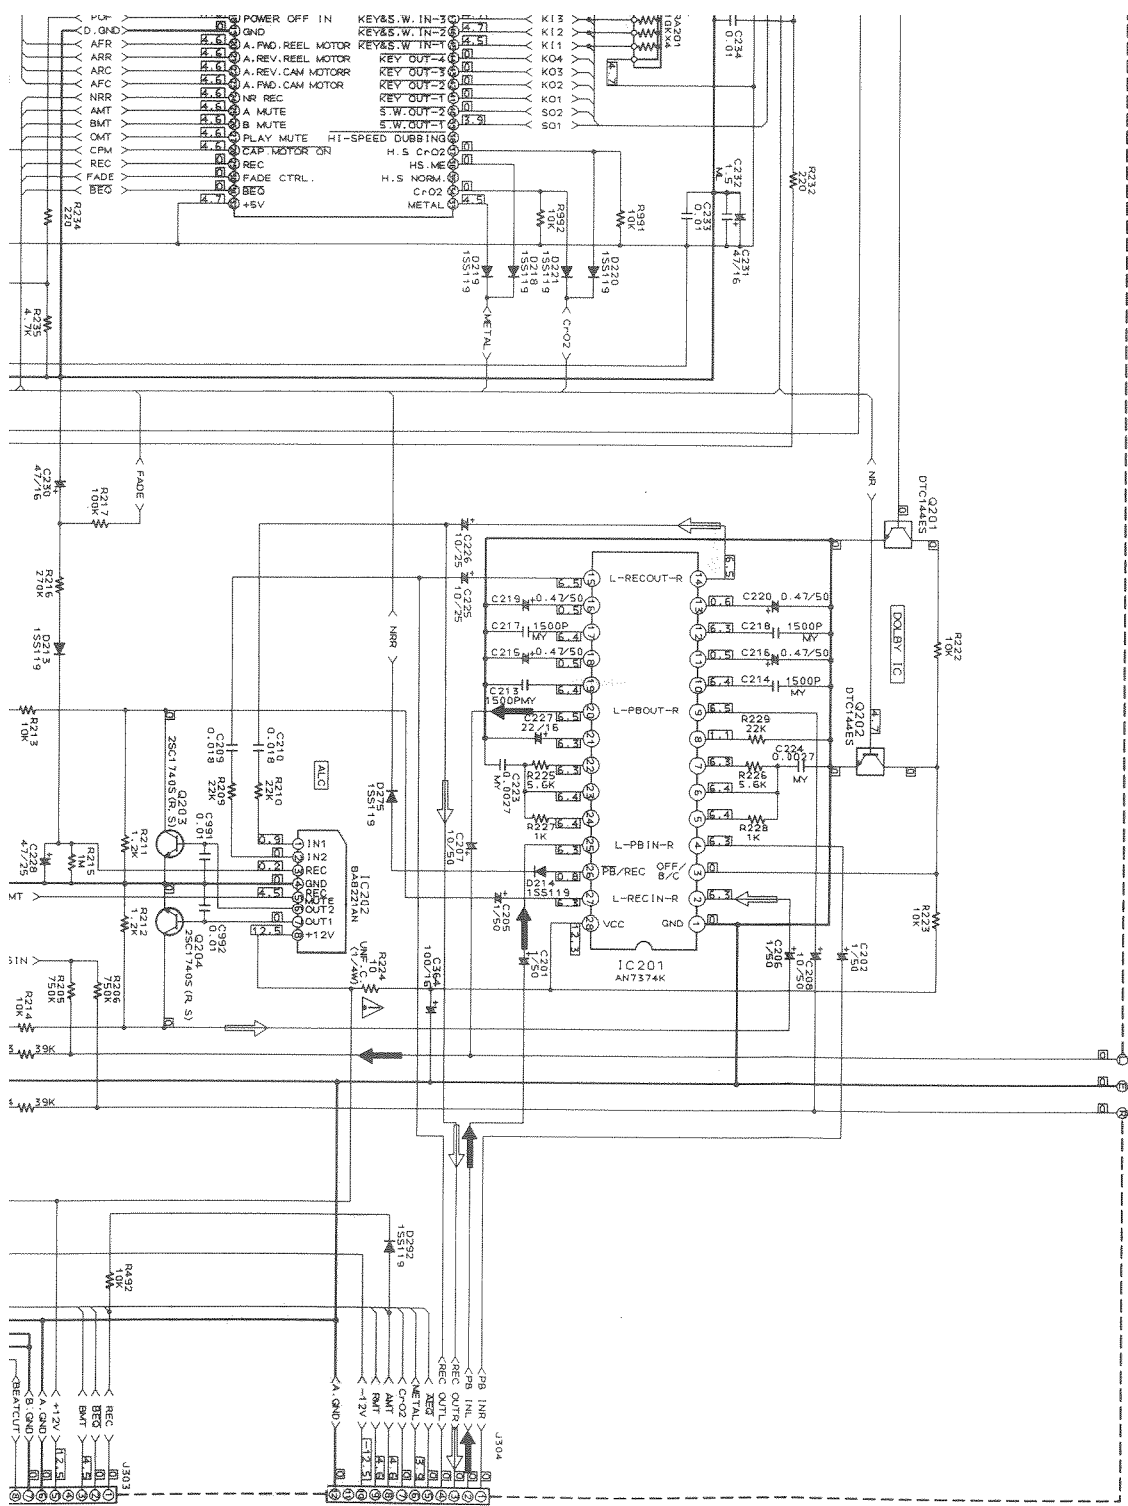


TO P304 OF ENJ-097-1 (SHEET 2/2)

TO P105 OF ENJ-097-1 (SHEET 2/2)



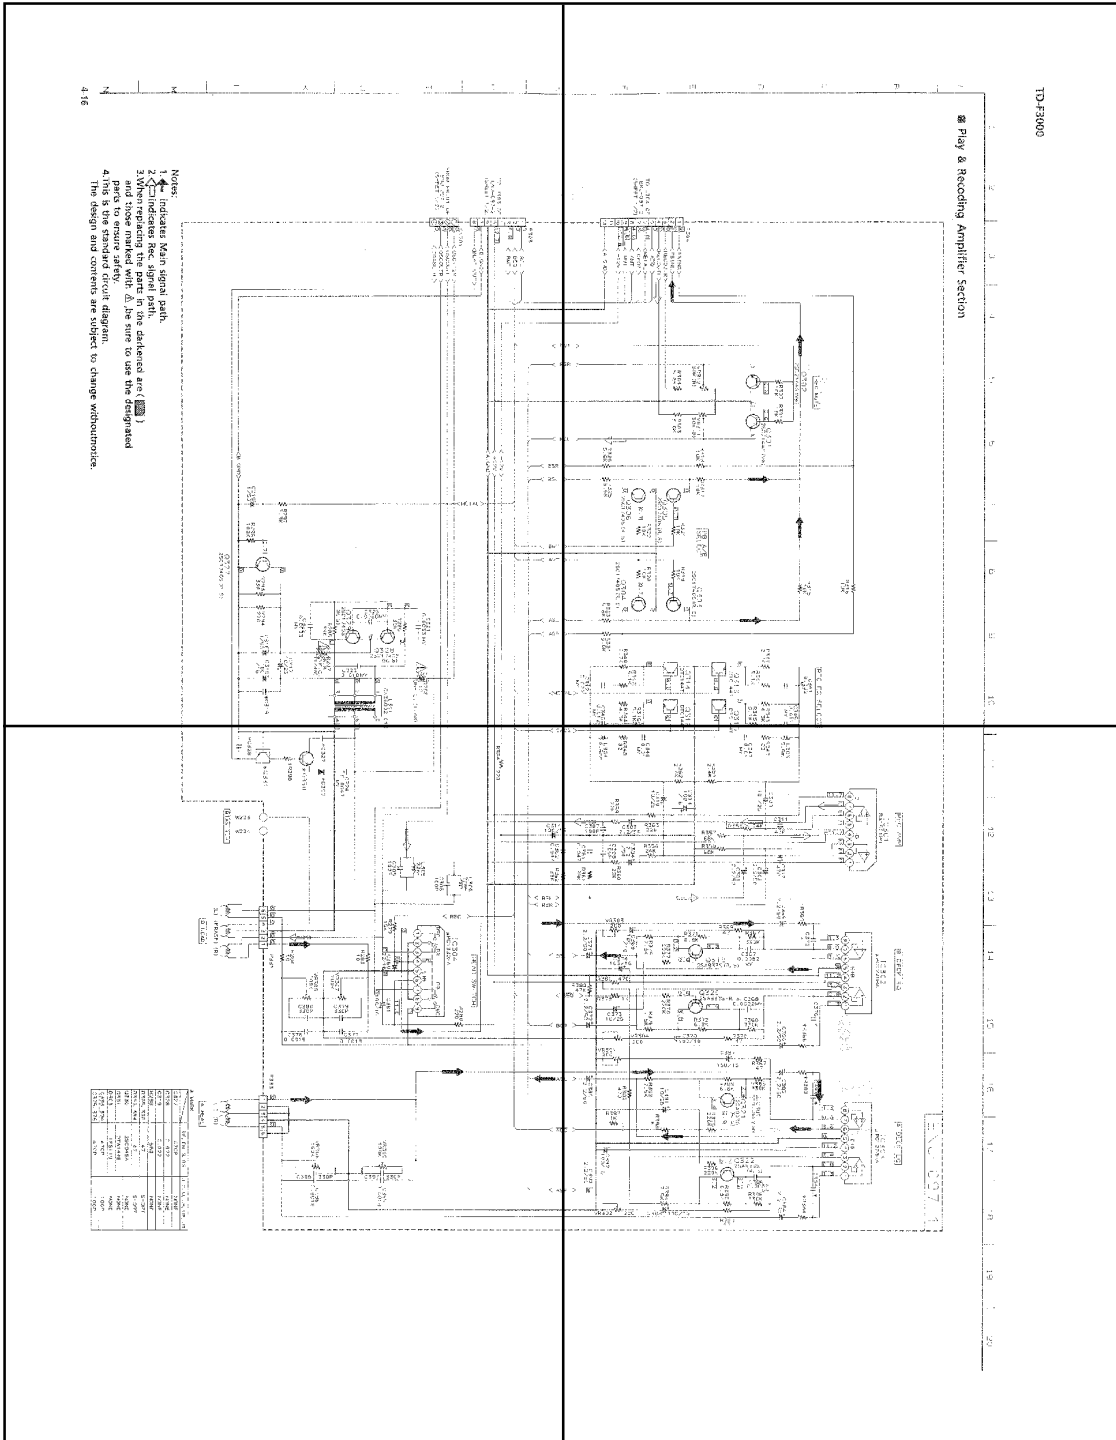


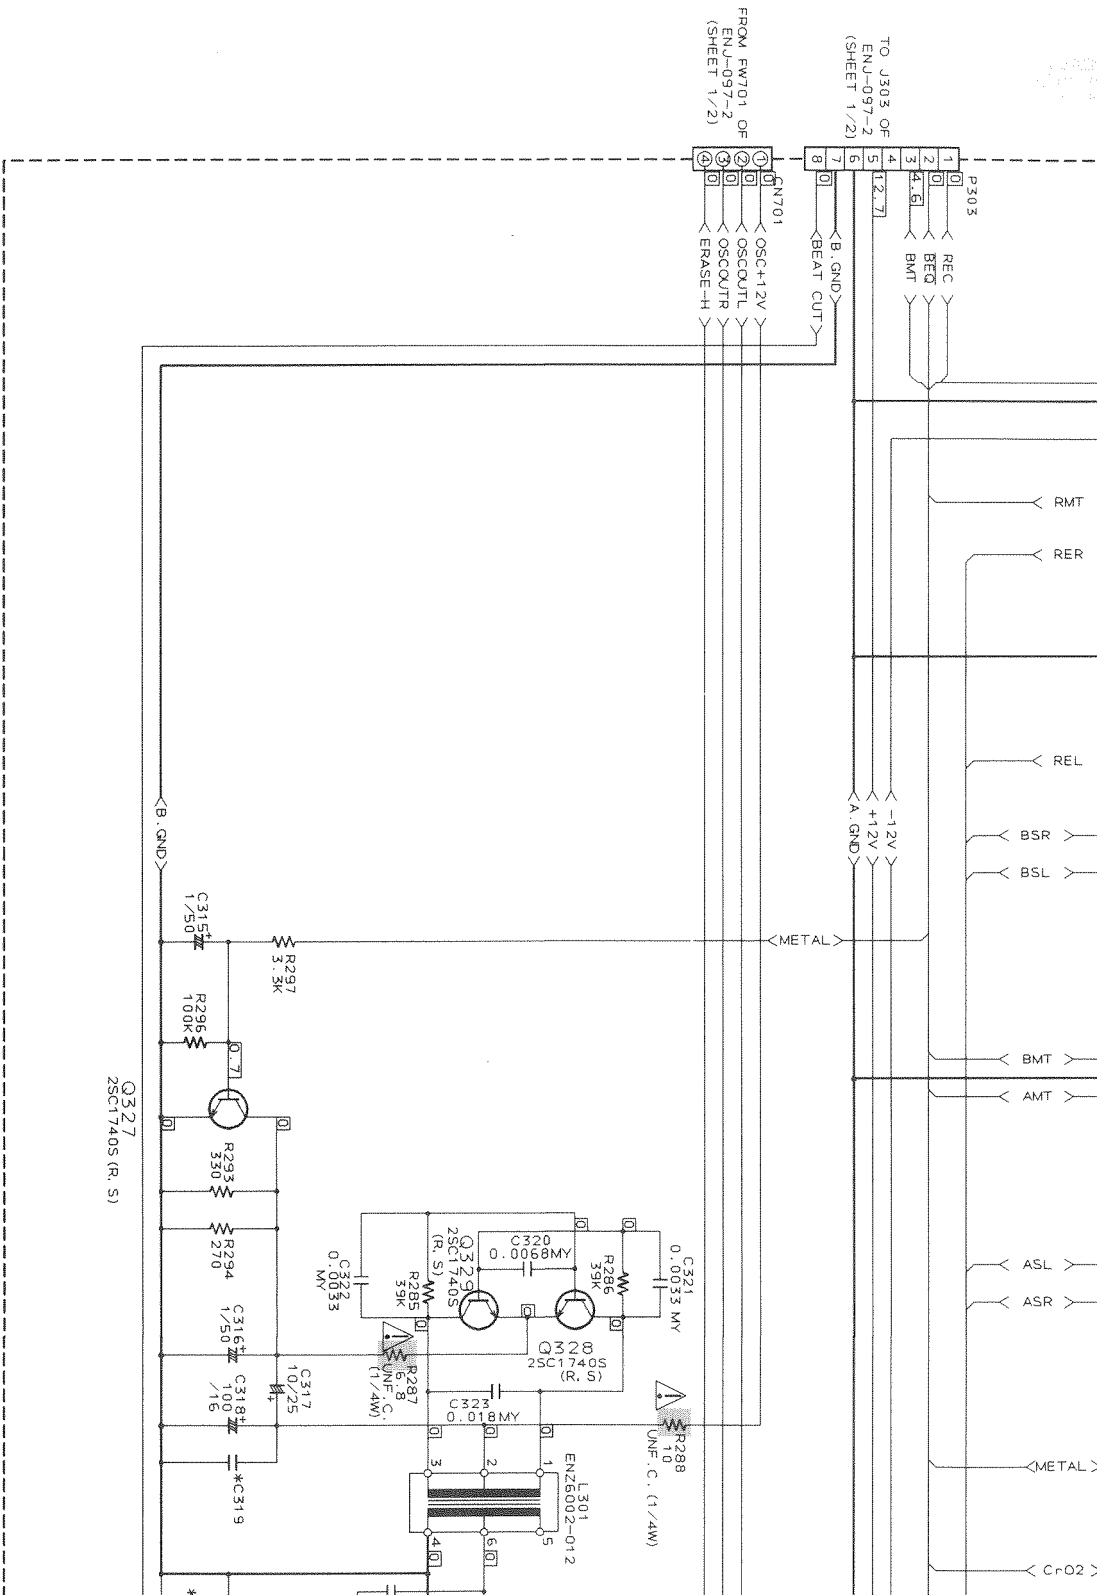


Notes:

1. indicates Main signal path.
2. indicates Rec. signal path.
3. When replacing the parts in the darkened are ( ) and those marked with , be sure to use the designated parts to ensure safety.
4. This is the standard circuit diagram. The design and contents are subject to change without notice.

■ Play & Recoding Amplifier Section

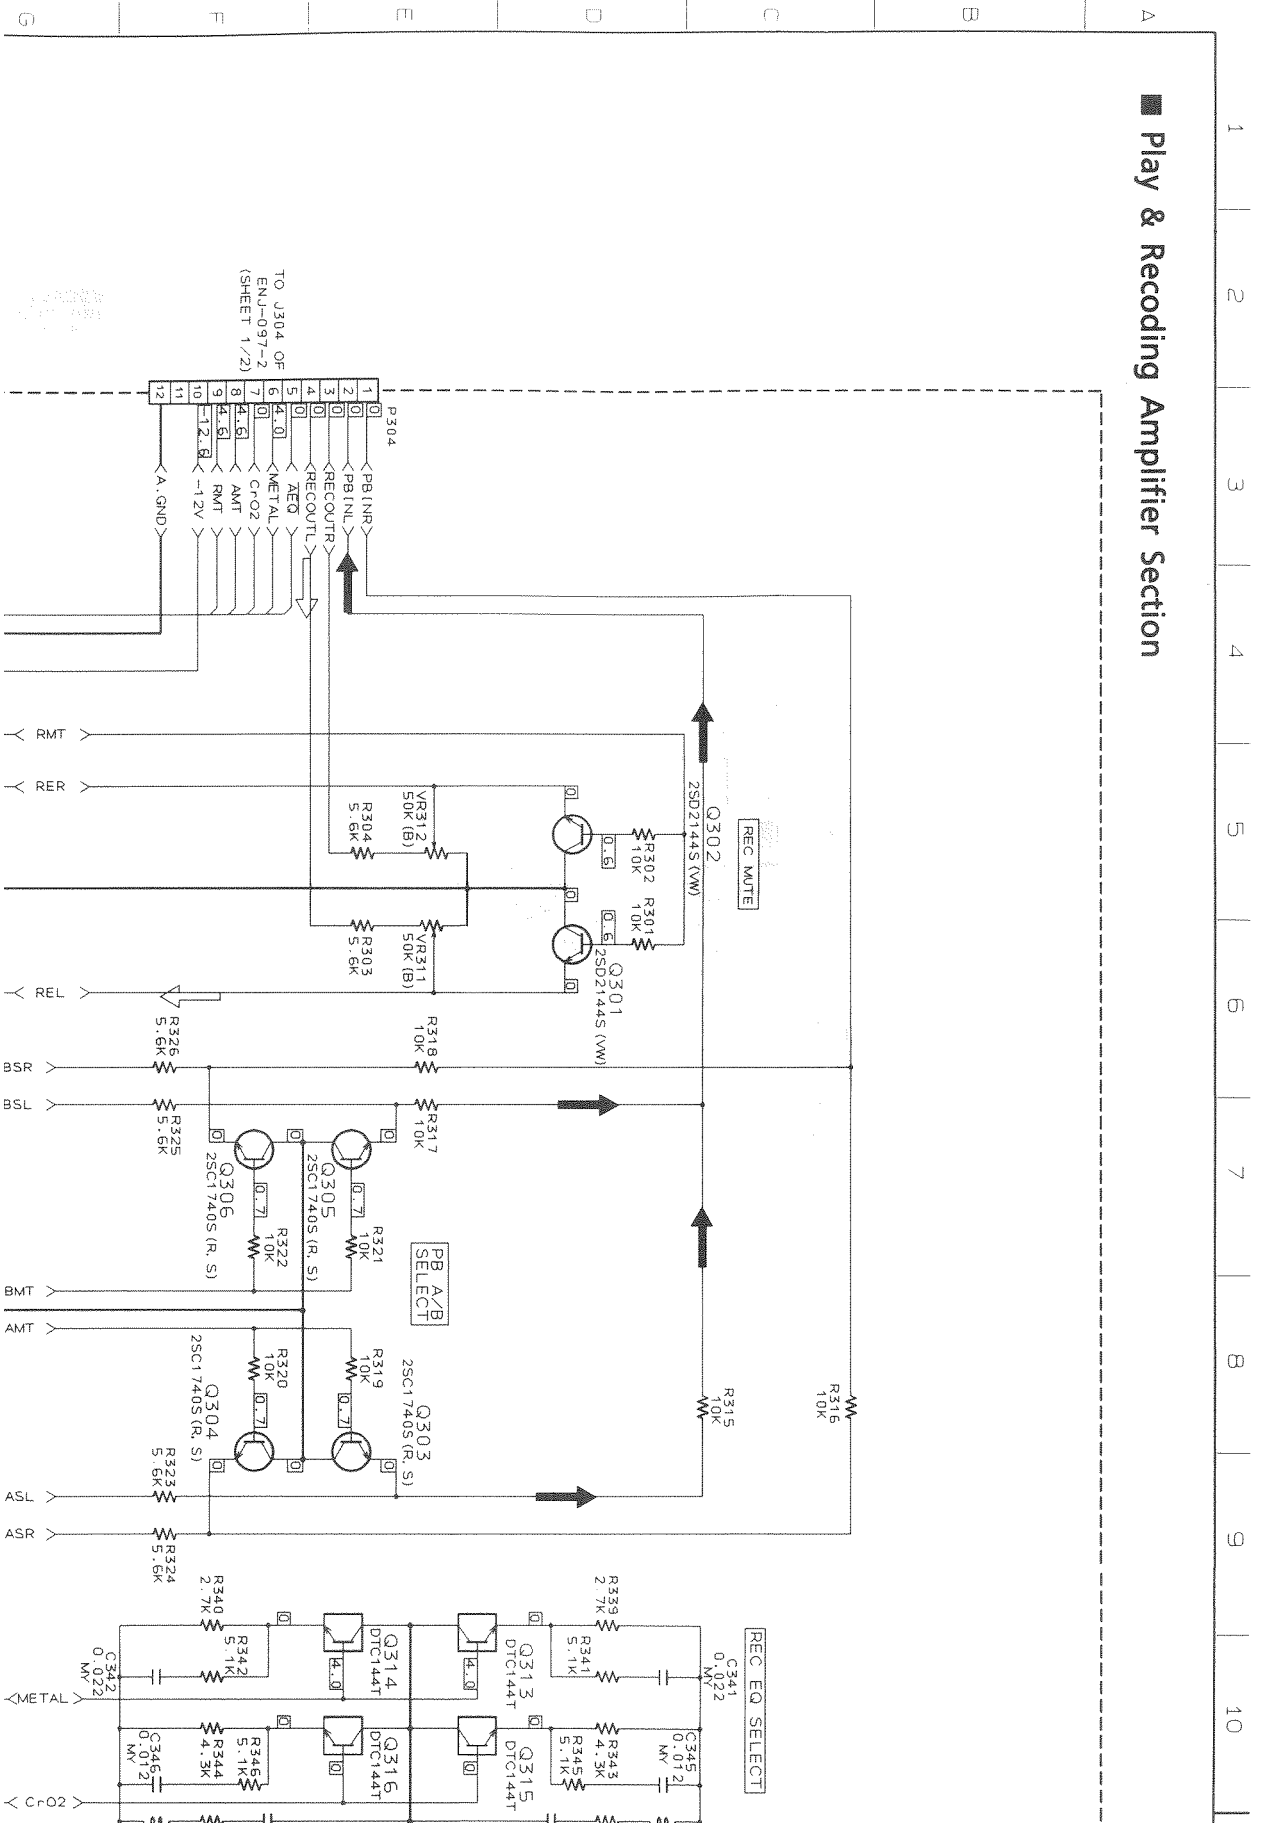

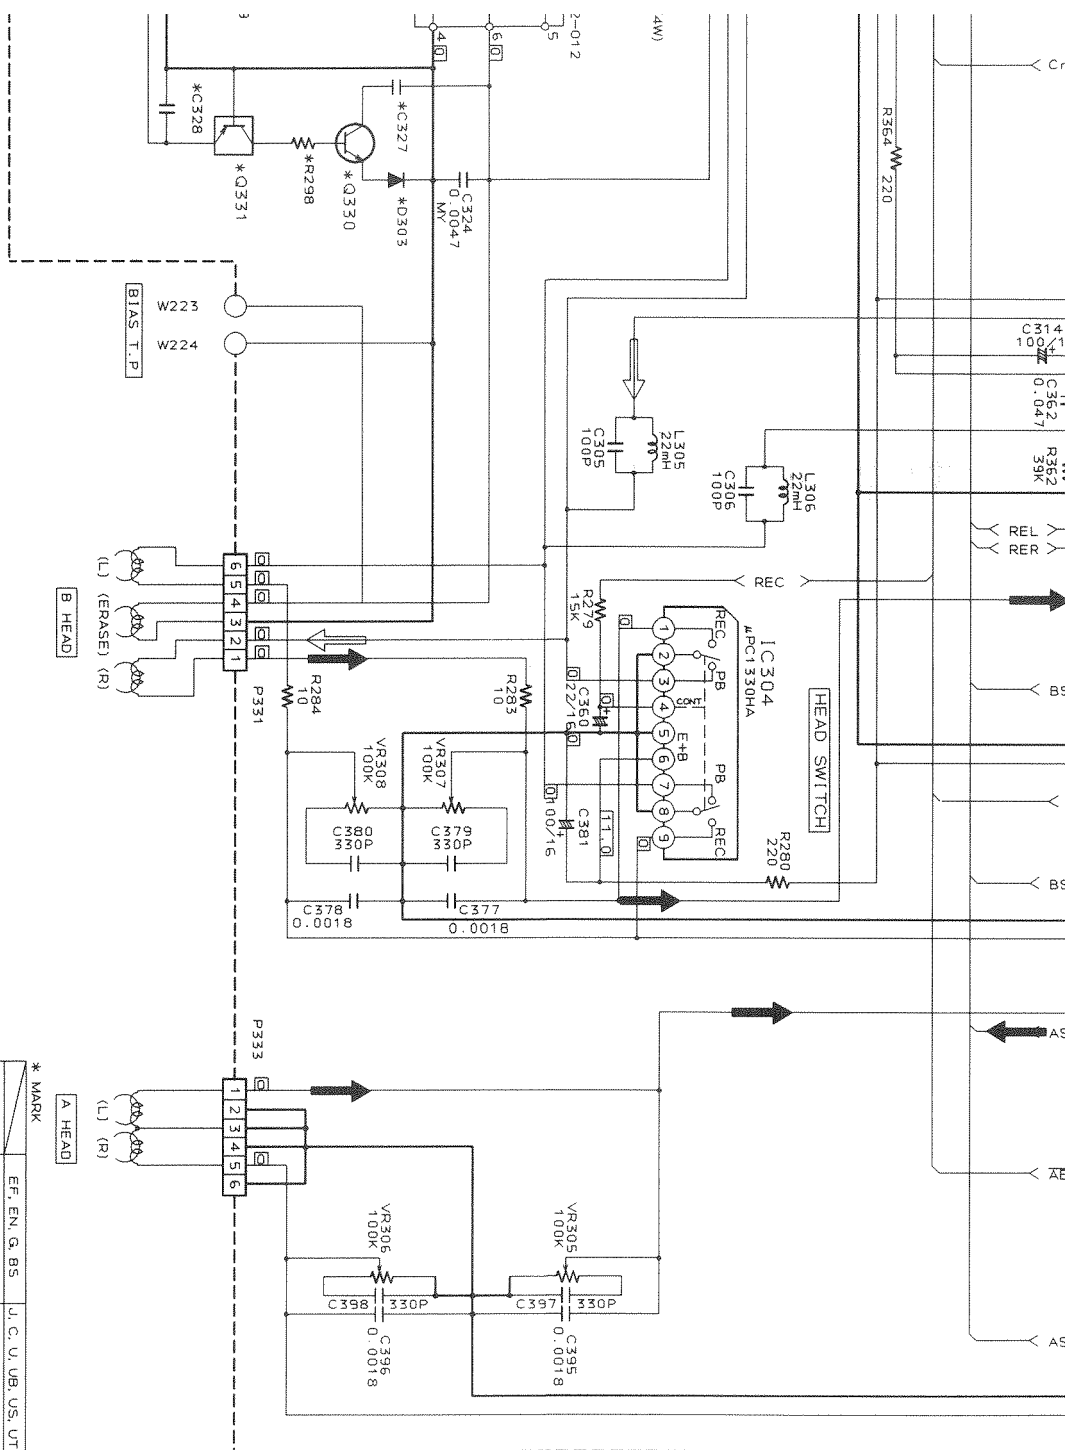


\* MARK

REF.	EN	G	BS	J	C	U	UB	US	UT
C327			4.70P						NONE
C328			0.022						NONE
C319			0.022						NONE
R298			560						NONE
R365, 366			4.7						SHORT
R383, 384			4.7						SHORT
Q330			2SC945A						NONE
Q331			DTA144E						NONE
D303			1SS119						NONE
C393, 394			4.70P						100P
C375, 376			4.70P						100P



ENU-097-1

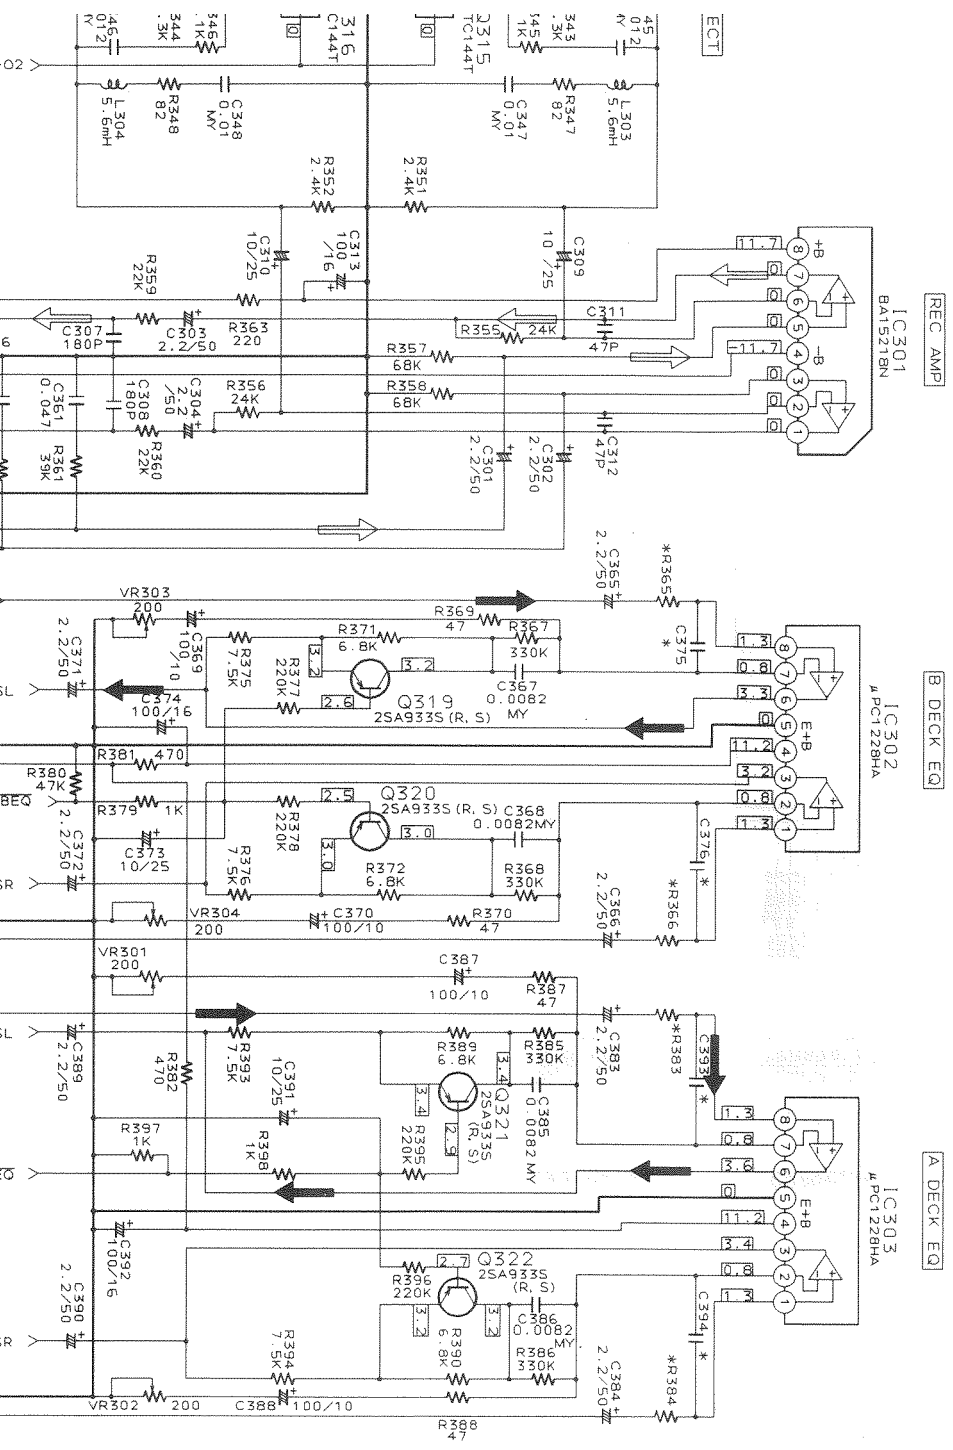



# FX-F3000 FX-F3000R

## Contents

<i>Description of Major ICs</i> .....	5-2
<i>Disassembly Procedures</i> .....	5-8
<i>Adjustment Procedures</i> .....	5-9
<i>Block Diagram</i> .....	5-10
<i>Printed Circuit Board</i> .....	5-11
<i>Schematic Diagrams</i> .....	5-12

## Description of Major LSIs

### ■ MN172124J6E (IC201) : SYSTEM CONTROLLER

#### 1. Terminal Layout

63 ~ 43	
64	42
}	}
84	22
1 ~ 21	

#### 2. Key Matrix

※ :FX-F3000R

	KEY IN 0 (PIN56)	KEY IN 1 (PIN57)	KEY IN2 (PIN58)	KEY IN3 (PIN59)
KEY OUT 0 (PIN60)	MEMORY (S201)	CLOCK ADJ (S202)	REC (S203)	DAILY (S204)
KEY OUT 1 (PIN61)	TUNING/TIMER DOWN (S205)	TUNING/TIMER UP (S206)	PRESET / PTY DOWN (S207)	PRESET / PTY UP (S208)
KEY OUT 2 (PIN62)			FM (S209)	AM (S210)
KEY OUT 3 (PIN63)	※ DISPLAY (S211)	※ EON ON/OFF (S212)	※ EON MODE (S213)	※ PTY SEARCH (S214)

#### 3. Description


Pin No.	Symbol	I/O	Description	Pin No.	Symbol	I/O	Description
1	7G	O	FL grid control	43	TUDATA	O	Data for PLL synthesizer
2	6G	O	FL grid control	44	fout	O	Clock frequency
3	5G	O	FL grid control	45	RDS CLK	I	Clock input from IC191
4	4G	O	FL grid control	46	RDS DATA	I	Data signal from IC191
5	3G	O	FL grid control	47	RDS RST	O	Reset signal for IC191
6	2G	O	FL grid control	48	INH	I	Inhibit signal input
7	1G	O	FL grid control	49	RDS D.ST	I	D Start signal from IC191
8	P1	O	FL anode control	50	TUNED	I	TUNED indication control
9	P2	O	FL anode control	51	STEREO	I	STEREO indication control
10	P3	O	FL anode control	52	MUTE	O	Muting tuner sound
11	P4	O	FL anode control	53		--	Not used
12	P5	O	FL anode control	54	DCS OUT	O	Compulink signal output
13	P6	O	FL anode control	55	DCS IN	I	Compulink signal input
14	P7	O	FL anode control	56	KI0	I	Key matrix input
15	P8	O	FL anode control	57	KI1	I	Key matrix input
16	P9	O	FL anode control	58	KI2	I	Key matrix input
17	P10	O	FL anode control	59	KI3	I	Key matrix input
18	P11	O	FL anode control	60	KO0	O	Key matrix output
19	P12	O	FL anode control	61	KO1	O	Key matrix output
20	P13	O	FL anode control	62	KO2	O	Key matrix output
21	P14	O	FL anode control	63	KO3	O	Key matrix output
22	P15	O	FL anode control	64	KO4	O	Key matrix output
23	VP	--	Power supply for FL display	65	KO5	O	Key matrix output
24	P16	O	FL anode control	66	KO6	O	Key matrix output
25	P17	O	FL anode control	67	KO7	O	Key matrix output
26	P18	O	FL anode control	68	RST	I	Reset signal input
27	P19	O	FL anode control	69		--	GND
28	P20	O	FL anode control	70		--	Not used
29	P21	O	FL anode control	71		--	GND
30	P22	O	FL anode control	72	OSC2	I/O	Clock oscillation terminal
31	P23	O	FL anode control	73	OSC1	I/O	Clock oscillation terminal
32	P24	O	FL anode control	74	VDD	--	Power supply
33	P25	O	FL anode control	75	TEST	I	TEST mode
34	P26	O	FL anode control	76	FM IND.	O	FM indication control
35	P27	O	FL anode control	77	AM IND.	O	AM indication control
36	P28	O	FL anode control	78	P35	O	FL anode control
37	P29	O	FL anode control	79	P34	O	FL anode control
38	P30	O	FL anode control	80	P33	O	FL anode control
39	P36	O	FL anode control	81	P32	O	FL anode control
40	CE	O	Chip enable signal for PLL synthesizer	82	P31	O	FL anode control
41	CLK	O	Clock for PLL synthesizer	83	9G	O	FL grid control
42	IFDATA	I	Data from PLL synthesizer	84	8G	O	FL grid control

■ LC72131M (IC121) : PLL Synthesizer

1. Terminal Layout

XIN	1	20	XOUT
CE	2	19	VSS
TDATA	3	18	LPF OUT
CK	4	17	LPF IN
IFDATA	5	16	PD
FM	6	15	VDD
MW	7	14	FM OSC
LW	8	13	AM OSC
AUTO/MONO	9	12	IF REQ
POWER	10	11	FM/AM IF

2. Block Diagram

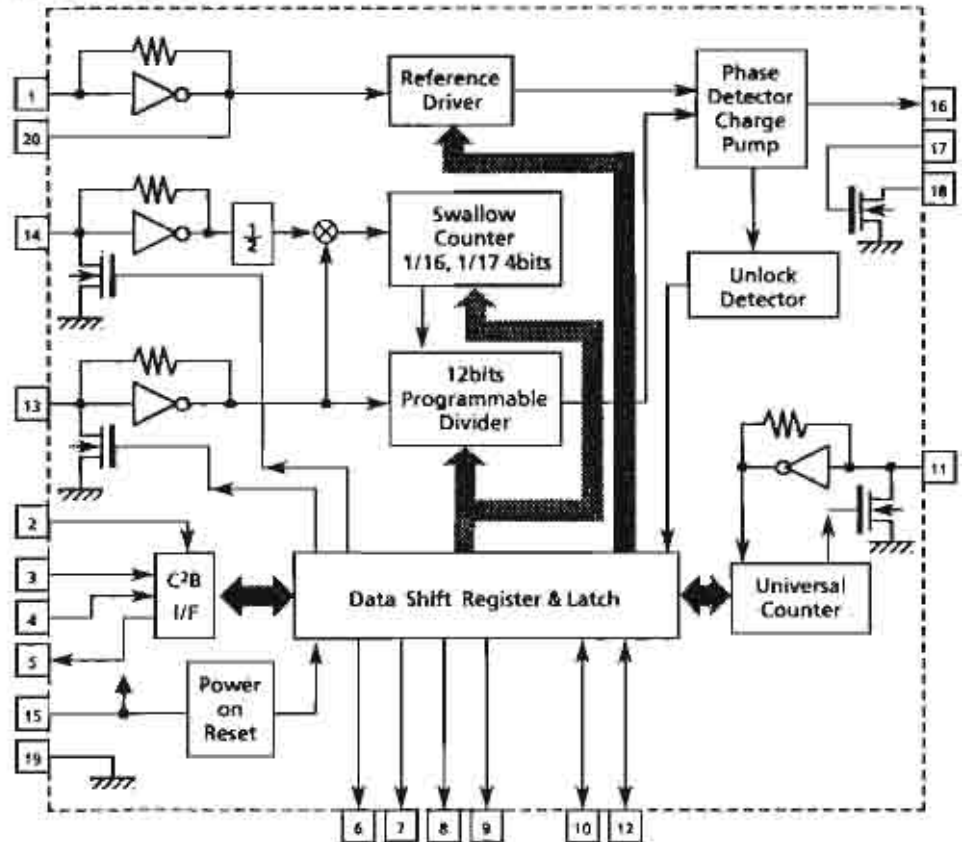

3. Pin Functions

Pin No.	Symbol	I/O	Functions	Pin No.	Symbol	I/O	Functions
1	Xin	I	Crystal oscillator (7.2MHz).	11	FM/AM IF	I	Universal counter input.
2	CE	I	Fix the chip enable to "H" when inputting (DI) and outputting (DO) the serial data.	12	IFREQ	O	Output the "IF-signal request" to IC102
3	TDATA	I	Receive the control data from the controller (IC201).	13	AMIN	I	Input the local oscillator signal of AM.
4	CK	I	This clock is used to synchronize data when transmitting the data of DI and DO.	14	FMIN	I	Input the local oscillator signal of FM.
5	IFDATA	O	Transmit the data from LC72131M to the controller which is synchronized with CK.	15	VDD	-	This is a terminal of power supply.
6	FM	O	It is "L" on FM mode.	16	PD	O	PLL charge pump output : When the local oscillator signal frequency is higher than the reference frequency high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating.
7	MW	O	It is "L" on MW mode.	17	LPFIN	I	Transistor used for the PLL active low-pass filter
8	LW	O	It is "L" on LW mode.	18	LPFOUT	O	Transistor used for the PLL active low-pass filter
9	AUTO/MONO	O	It is "L" on monaural, "H" on auto.	19	VSS	-	Connected to GND
10	POWER	O	Regulator control signal P ON "H", STANDBY "L"	20	Xout	O	Crystal oscillator (7.2MHz).

■ SAA6579T (IC192) : Radio data system demodulator (Used for FX-F3000R)


1. Terminal Layout

QUAL	1	16	RDCL
RDDA	2	15	T57
Vref	3	14	OSCO
MUX	4	13	OSCI
VDDA	5	12	VDD
GND	6	11	GND
CIN	7	10	GND
SCOUT	8	9	GND

2. Pin Function


Pin No.	Symbol	I/O	Function
1	QUAL	—	Non connection
2	RDDA	O	RDS data output
3	Vref	O	Reference voltage output
4	MUX	I	Multiplex signal input
5	VDDA	—	+5V supply voltage for analog part
6	GND	—	Ground for analog part (0V)
7	CIN	I	Subcarrier input to comparator
8	SCOUT	O	Subcarrier output of reconstruction filter
9	GND	—	Ground for digital part (0V)
10	GND	—	Ground for digital part (0V)
11	GND	—	Ground for digital part (0V)
12	VDD	—	+5V supply voltage for digital part
13	OSCI	I	Oscillator input
14	OSCO	O	Oscillator output
15	T57	—	Non connection
16	RDCL	O	RDS clock output

3. Block Diagram

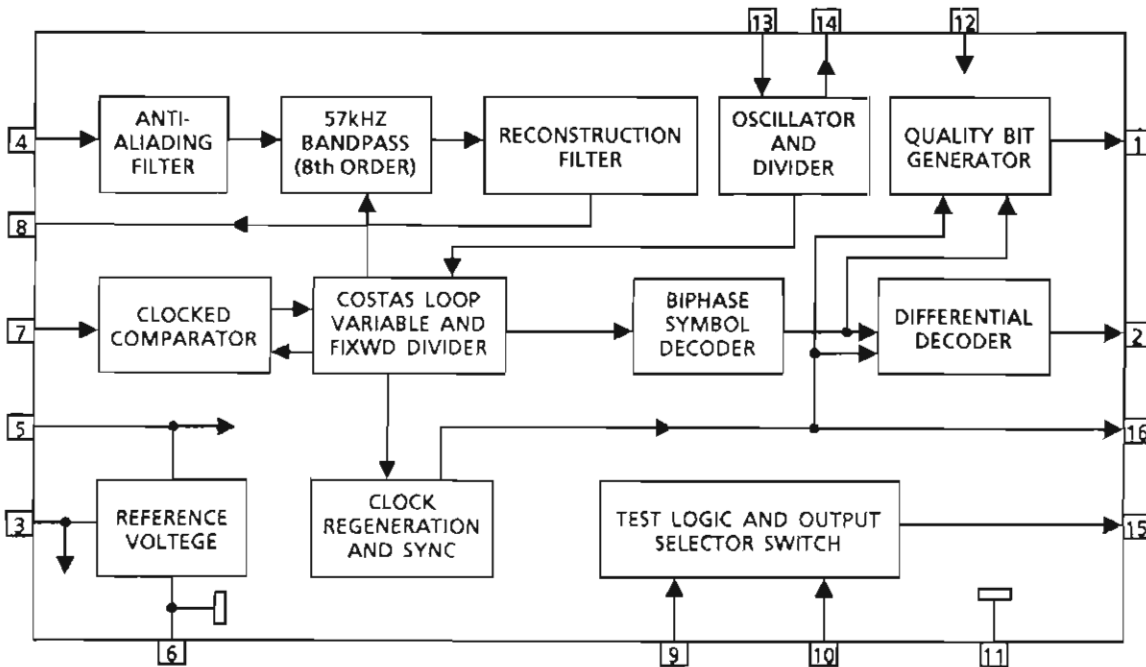

■ LA1836M (IC102) : FM AM IF AMP & detector, FM MPX Decoder


1. Terminal Layout

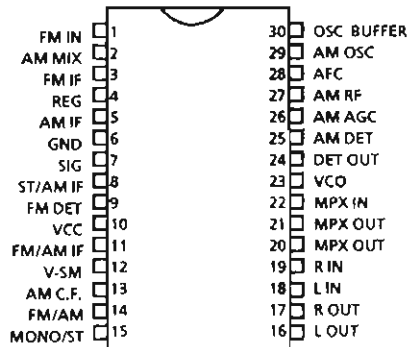

3. Pin Function


Pin No.	Symbol	I/O	Function
1	FM IN	I	This is an input terminal of FM IF Signal.
2	AM MIX	O	This is an output terminal for AM mixer.
3	FM IF	I	Bypass of FM IF
4	REG	—	Register value between pin4 and pin28 desides the frequency width of the input signal.
5	AM IF	I	Input of AM IF Signal.
6	GND	—	This is the device ground terminal.
7	SIG	O	When the set is tuning ,this terminal becomes "L".
8	ST/AM IF	O	Stereo indicator output. Stereo : "L", Mono : "H"
9	FM DET	—	FM detect transformer.
10	VCC	—	This is the power supply terminal.
11	FM/AM IF //MUTE	O/I	When the signal of IF REQ of IC121(LC72131M) appear, the signal of FM/AM IF output. //Muting control input.
12	VSM	O	S Meter output and adjust AM SD sensitivity.
13	AM C.F.	O	This is a terminal of AM ceramic filter.
14	FM/AM	I	Change over the FM/AM input. "H" : FM, "L" : AM
15	MONO/ST	O	Stereo : "H", Mono : "L"
16	L OUT	O	Left channel signal output.
17	R OUT	O	Right channel signal output
18	L IN	I	Input terminal of the Left channel post AMP.
19	R IN	I	Input terminal of the Right channel post AMP.
20	MPX L OUT	O	Mpx Left channel signal output.
21	MPX R OUT	O	Mpx Right channel signal output.
22	MPX IN	I	Mpx input terminal.
23	VCO	I	Voltage controlled oscillator terminal.
24	DET OUT	O	AM/FM detection output.
25	AM DET	—	AM low cut adjustment.
26	AM AGC	I	This is an AGC voltage input terminal for AM.
27	AM RF	I	This is an input terminal for AM RF signal.
28	AFC	—	This is an output terminal of voltage for FM-AFC.
29	AM OSC	—	This is a terminal of AM Local oscillation circuit.
30	OSC BUFFER	O	AM Local oscillation signal output.

2. Block Diagram

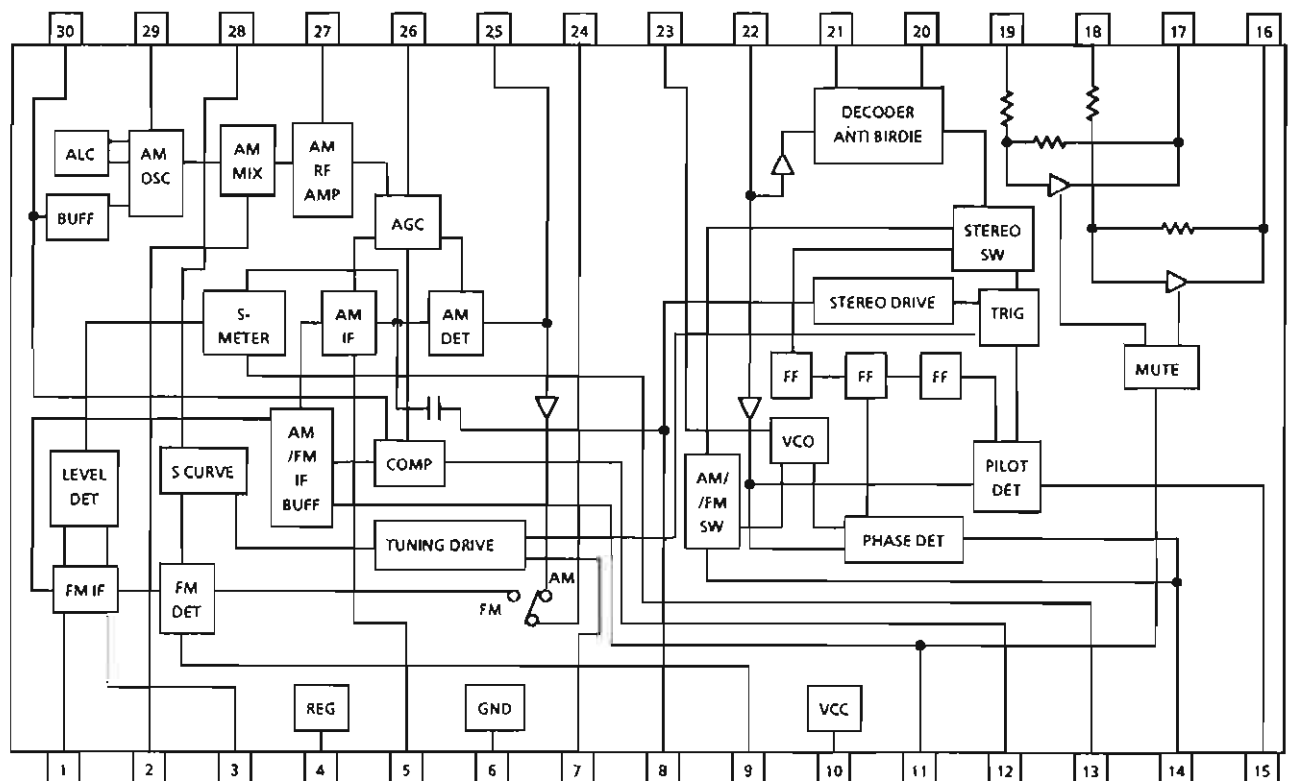


■ LC7073M (IC191) : Radio Data System (Used for FX-F3000R)

1. Terminal Layout

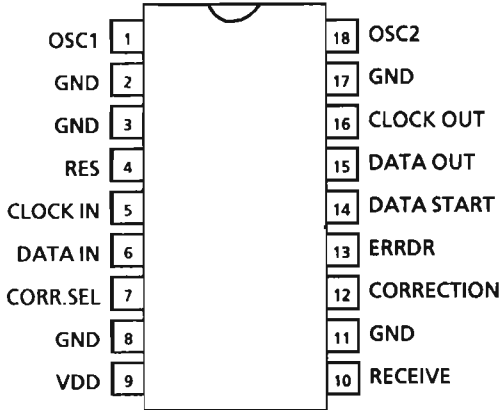

2. Block Diagram

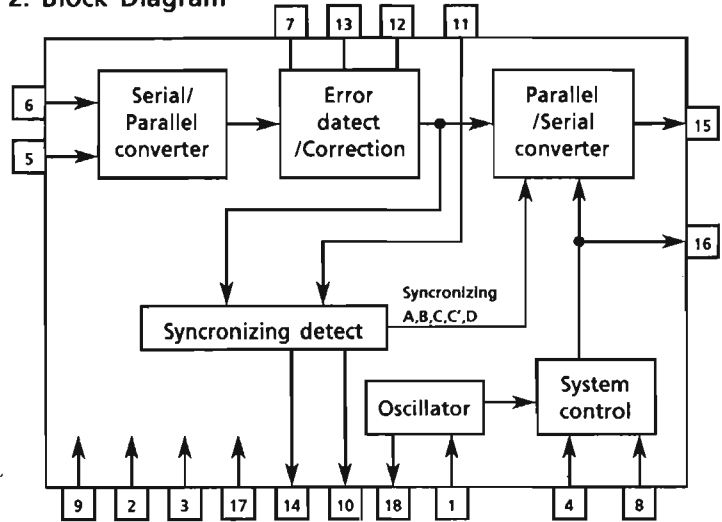

3. Pin Functions



Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	OSC1	I	Oscillation terminal	10	RECEIVE	—	Non connection
2	GND	—	GND	11	GND	—	GND
3	GND	—	GND	12	CORRECTION	—	Non connection
4	RES	I	Reset input	13	ERRDR	—	Non connection
5	CLOCK IN	I	RDS clock input	14	DATA START	O	Data start signal for block data to output serial data
6	DATA IN	I	RDS data input	15	DATA OUT	O	Serial data output
7	CORR.SEL	I	Non connection	16	CLOCK OUT	O	Data output of serial data output
8	GND	—	GND	17	GND	—	GND
9	VDD	—	Power supply	18	OSC2	O	Oscillation terminal



# Internal Connections of the FL Display

## ■ ELU0001-205 : (DI201)

### 1. Grid Assignment

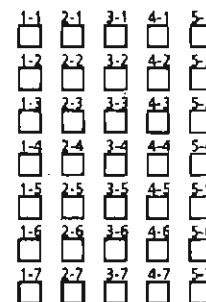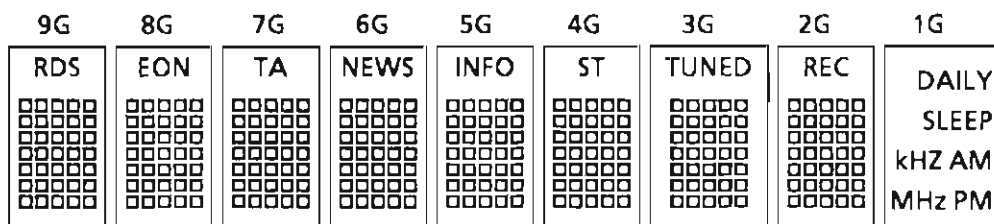

(9G~2G)

### 2. Pin Connection

Pin No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Connection	F1	F1	F1	NP	NP	NC	P31	P30	P29	P28	P27	P26	P25	P24	P23	P22	P21	P20	P19	P18	P17	P16	P15	P14
Pin No.	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
Connection	P13	P12	P11	P10	9P	P8	P7	NP	NP	F2	F2	F2	F2	F2	F2	NP	NP	IC	P6	P5	P4	P3	P2	P1
Pin No.	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72
Connection	NC	NC	NC	NC	NC	1G	2G	3G	4G	5G	6G	7G	8G	9G	P36	P35	P34	P33	P32	NP	NP	F1	F1	F1

(NOTE) F1,F2 : Filament, NP : No pin, NC : No connection, 1G~9G : Grid, P : Anode IC : Internal connection,

### 3. Anode Connection

	9G	8G	7G	6G	5G	4G	3G	2G	1G		9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	DAILY	P19	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	—
P2	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	SLEEP	P20	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	—
P3	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	AM	P21	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	—
P4	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	PM	P22	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	—
P5	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	MHz	P23	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	—
P6	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	kHz	P24	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	—
P7	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	—	P25	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	—
P8	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	—	P26	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	—
P9	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	—	P27	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	—
P10	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	—	P28	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	—
P11	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	—	P29	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	—
P12	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	—	P30	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	—
P13	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	—	P31	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	—
P14	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	—	P32	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	—
P15	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	—	P33	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	—
P16	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	—	P34	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	—
P17	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	—	P35	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	—
P18	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	—	P36	RDS	EON	TA	NEWS	INFO	ST	TUNED	REC	—

## Disassembly Procedures

- (1) Removing the top cover
1. Remove 2 screws ① fastening both sides of top cover, and 4 screws ② fastening the rear side.
  2. Remove the top cover.

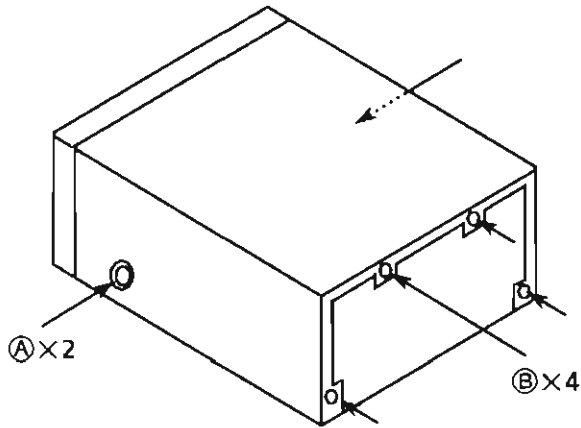


FIG. 1

- (3) Removing the Front Panel Assembly
1. Removing the top cover.
  2. Remove 2 screws ③ fastening bottom of the front panel.
  3. Remove 2 hooks ④ fastening the assembly with chassis to remove the assembly.

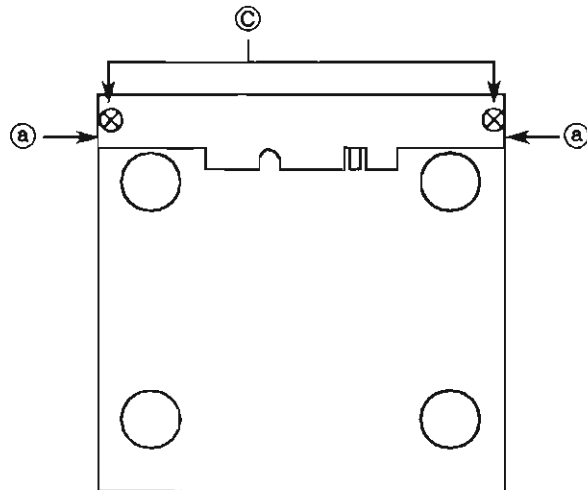


FIG. 2

- (3) Removing the front circuit board
1. Removing the front panel assembly.
  2. Remove 5 screws ⑤ to remove the front circuit board.(FX-F3000R : Remove a screw ⑤')
  3. Remove it.

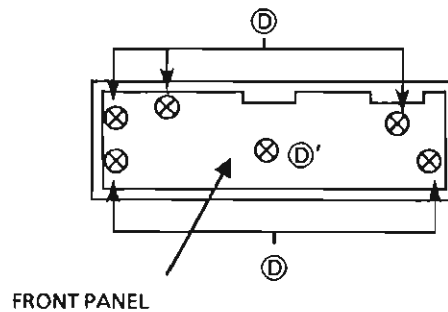


FIG. 3

① .. SD5G3008N    ② ... GBSG3008CC    ③ ... SD5G3008CC    ④ ... SDSF2608Z

# Adjustment Procedures

## Tuning range

Area	Range		
	LW ( kHz)	MW (kHz)	FM (MHz)
Continental Europe, the U.K	144~288	522~1629	87.5MHz~108MHz
Universal type ( AM Channel space 9kHz)	—	531~1602	
Universal type ( AM Channel space 10kHz)	—	530~1600	
U.S.A,CANADA	—	530~1710	

### (1) Tuning voltage

Confirm the voltages in the table below at TP101.

#### FM Tuning voltage (Unit : V)

Area	Frequency	
	87.5MHz	108MHz
the U.K. , Continental Europe, Universal U.S.A & CANADA	1.3 <	9.0 >

#### AM Tuning voltage (Unit : V)

Area	Frequency (MW)							Frequency (LW)	
	522KHz	530KHz	531KHz	1600KHz	1602KHz	1629KHz	1629KHz	144kHz	288kHz
the U.K. , Continental Europe	0.8 <	—	—	—	—	<9.0	—	0.8 <1.0	6.5 <9.0
Universal (Channel space 9kHz)	—	—	0.8 <	—	8.0 <	—	—	—	—
Universal (Channel space 10kHz)	—	0.8 <	—	8.0 <	—	—	—	—	—
U.S.A,CANADA	—	0.8 <	—	—	—	—	<9.0	—	—



### (2) FM center meter

Receive a broadcast by using the function of 'AUTO STOP'.


Adjust T141 (detector coil) so that the voltage at TP102 becomes  $0 \pm 1.5mV$ .

### (3) Clock Adjustment

1. After connecting B154 and B155 with some wire as shown in figure below, connect the AC power cord into an AC outlet.
2. Confirm that the display is off and remove the wire.
3. Connect a frequency counter to B165 and B269.
4. Adjust TC201 so that the frequency becomes  $50000.00 \pm 0.38Hz$ .

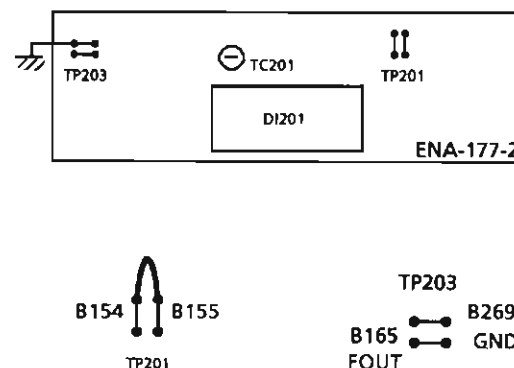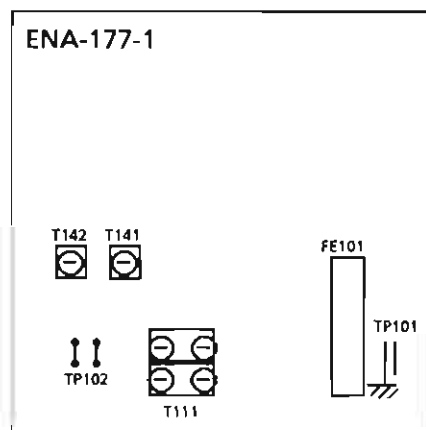


# Block Diagram

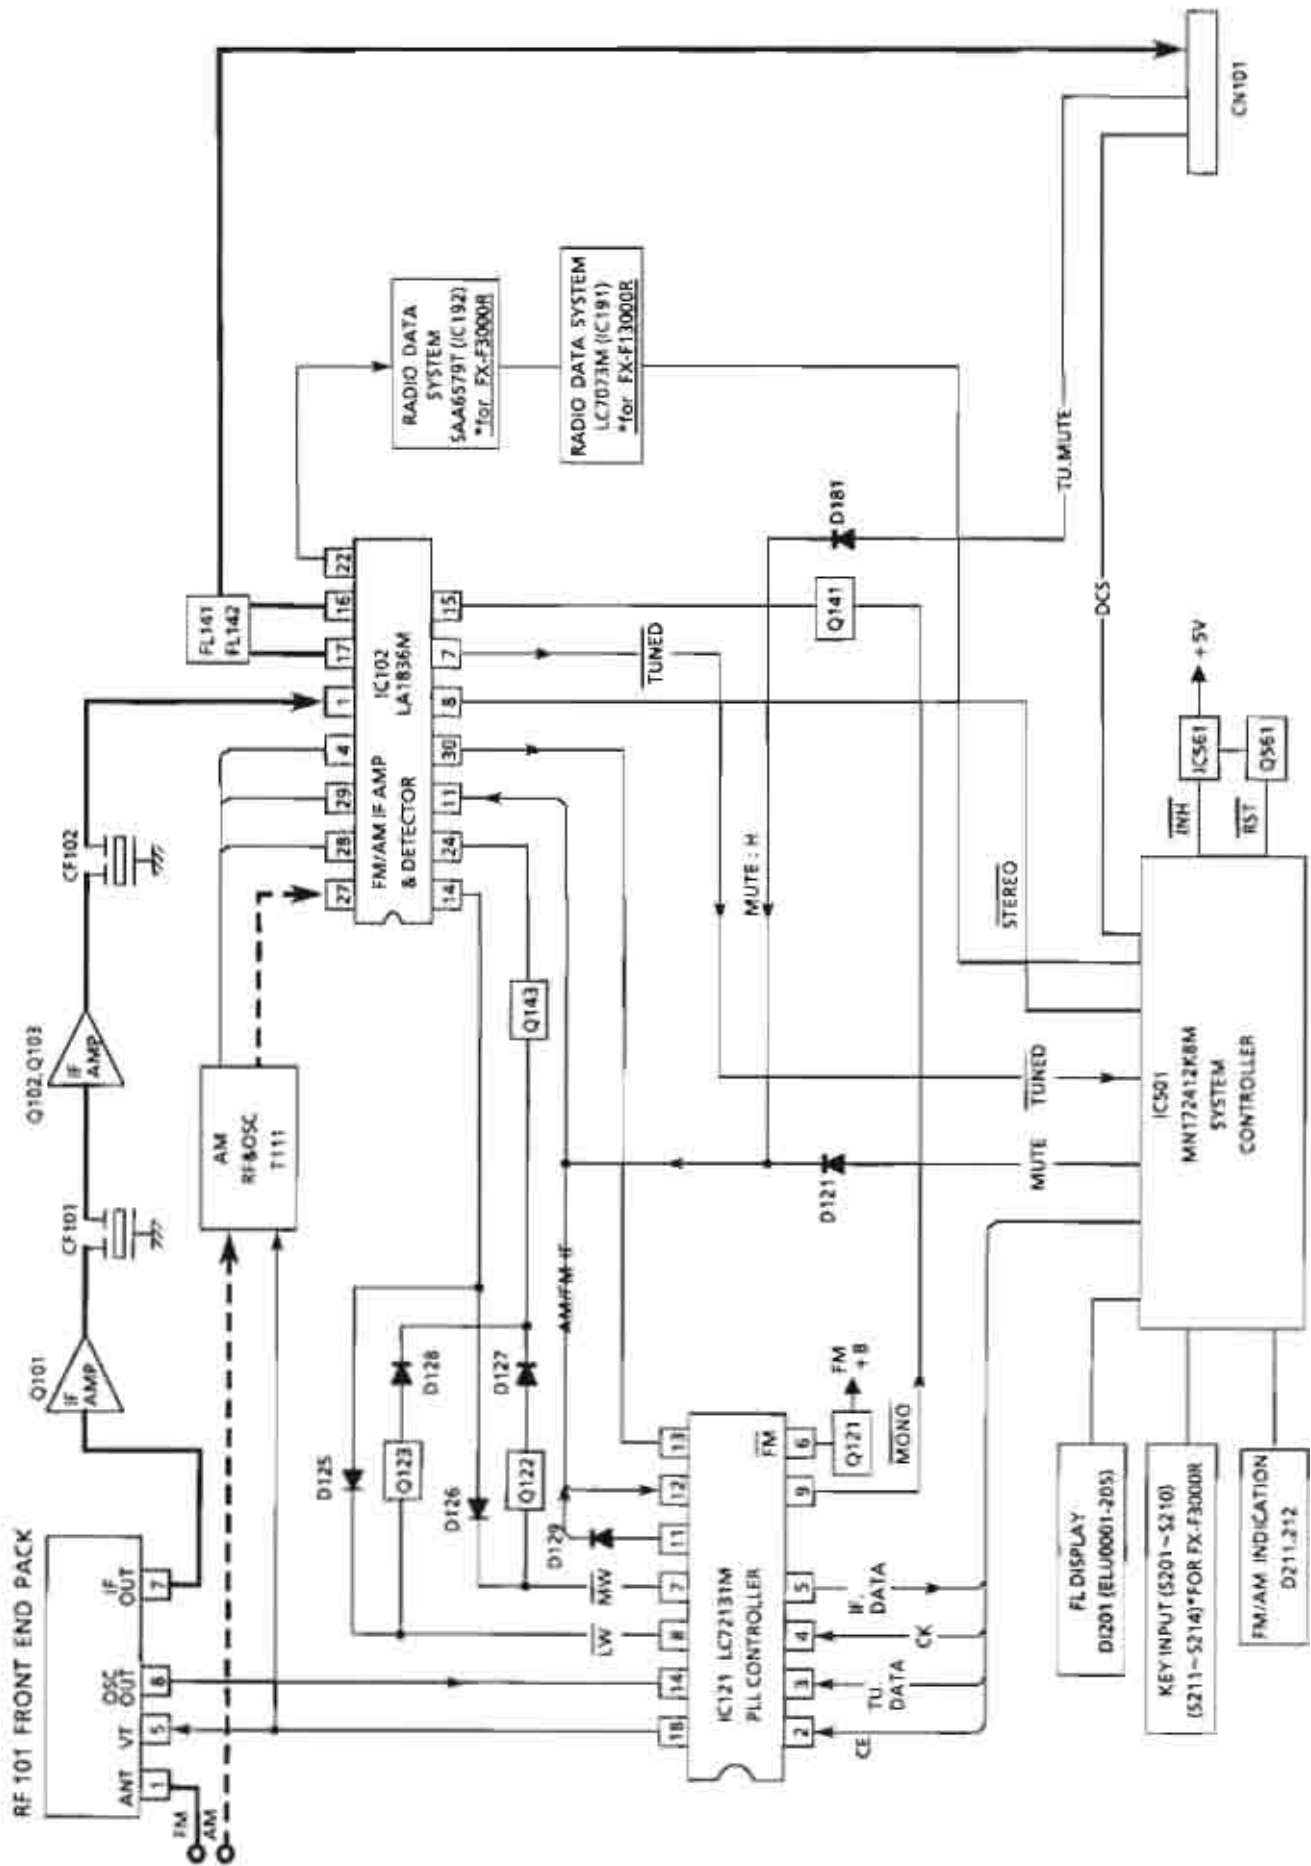


P5-11-a

P5-11-b

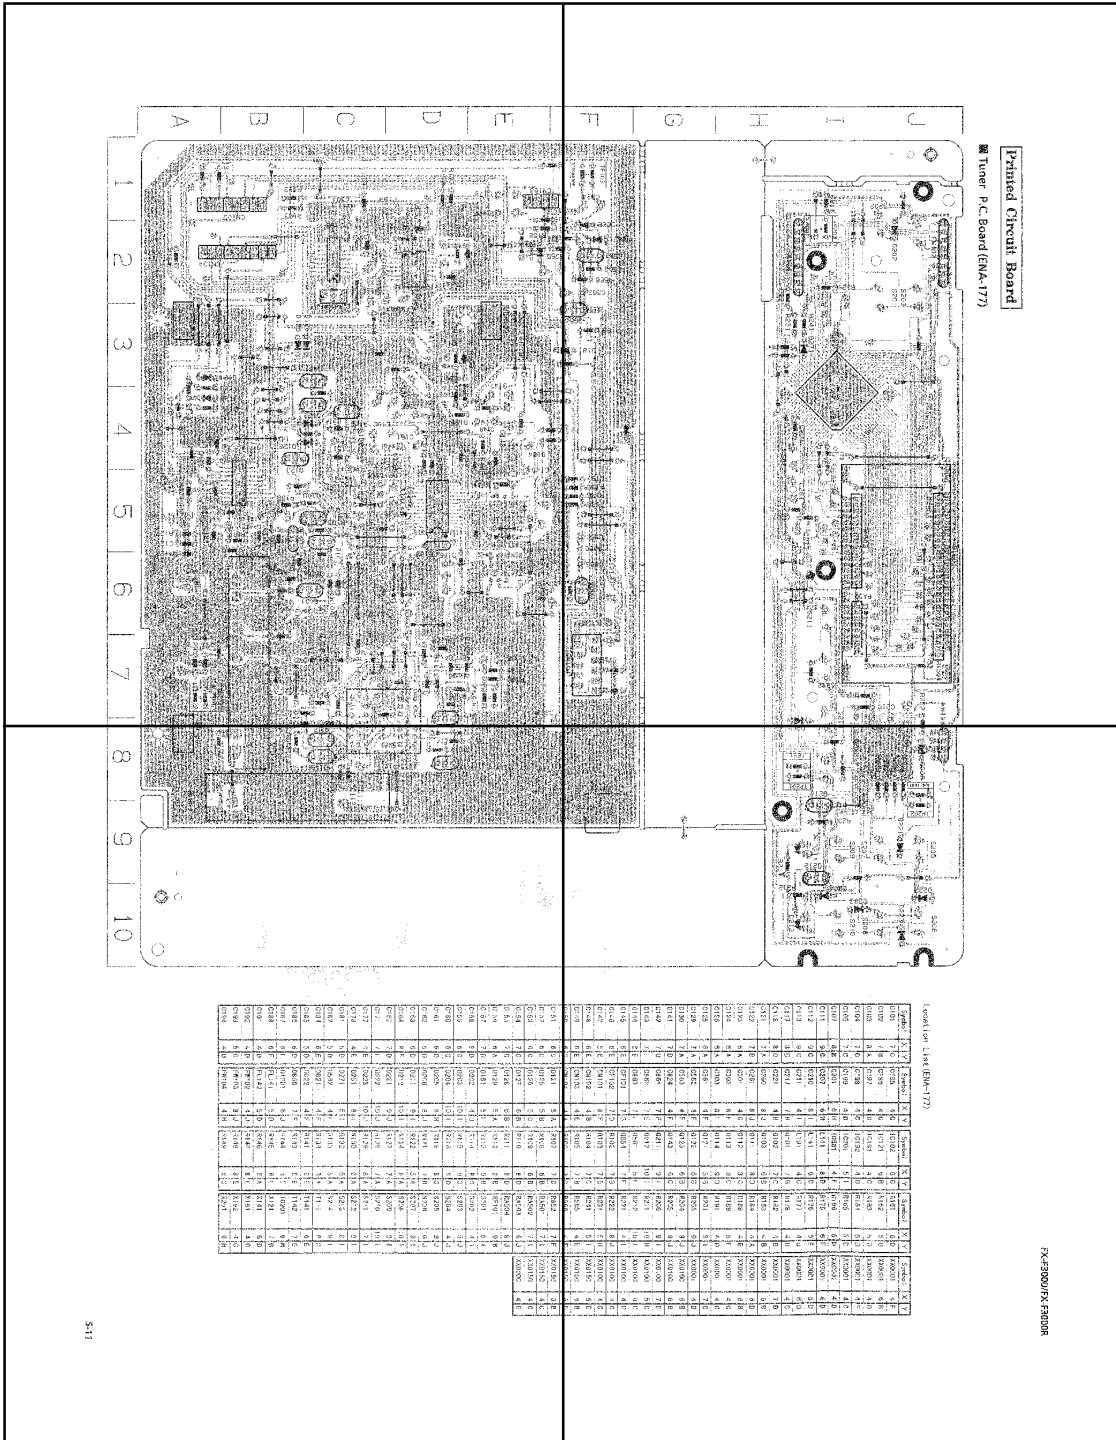


P5-11-c


P5-11-d

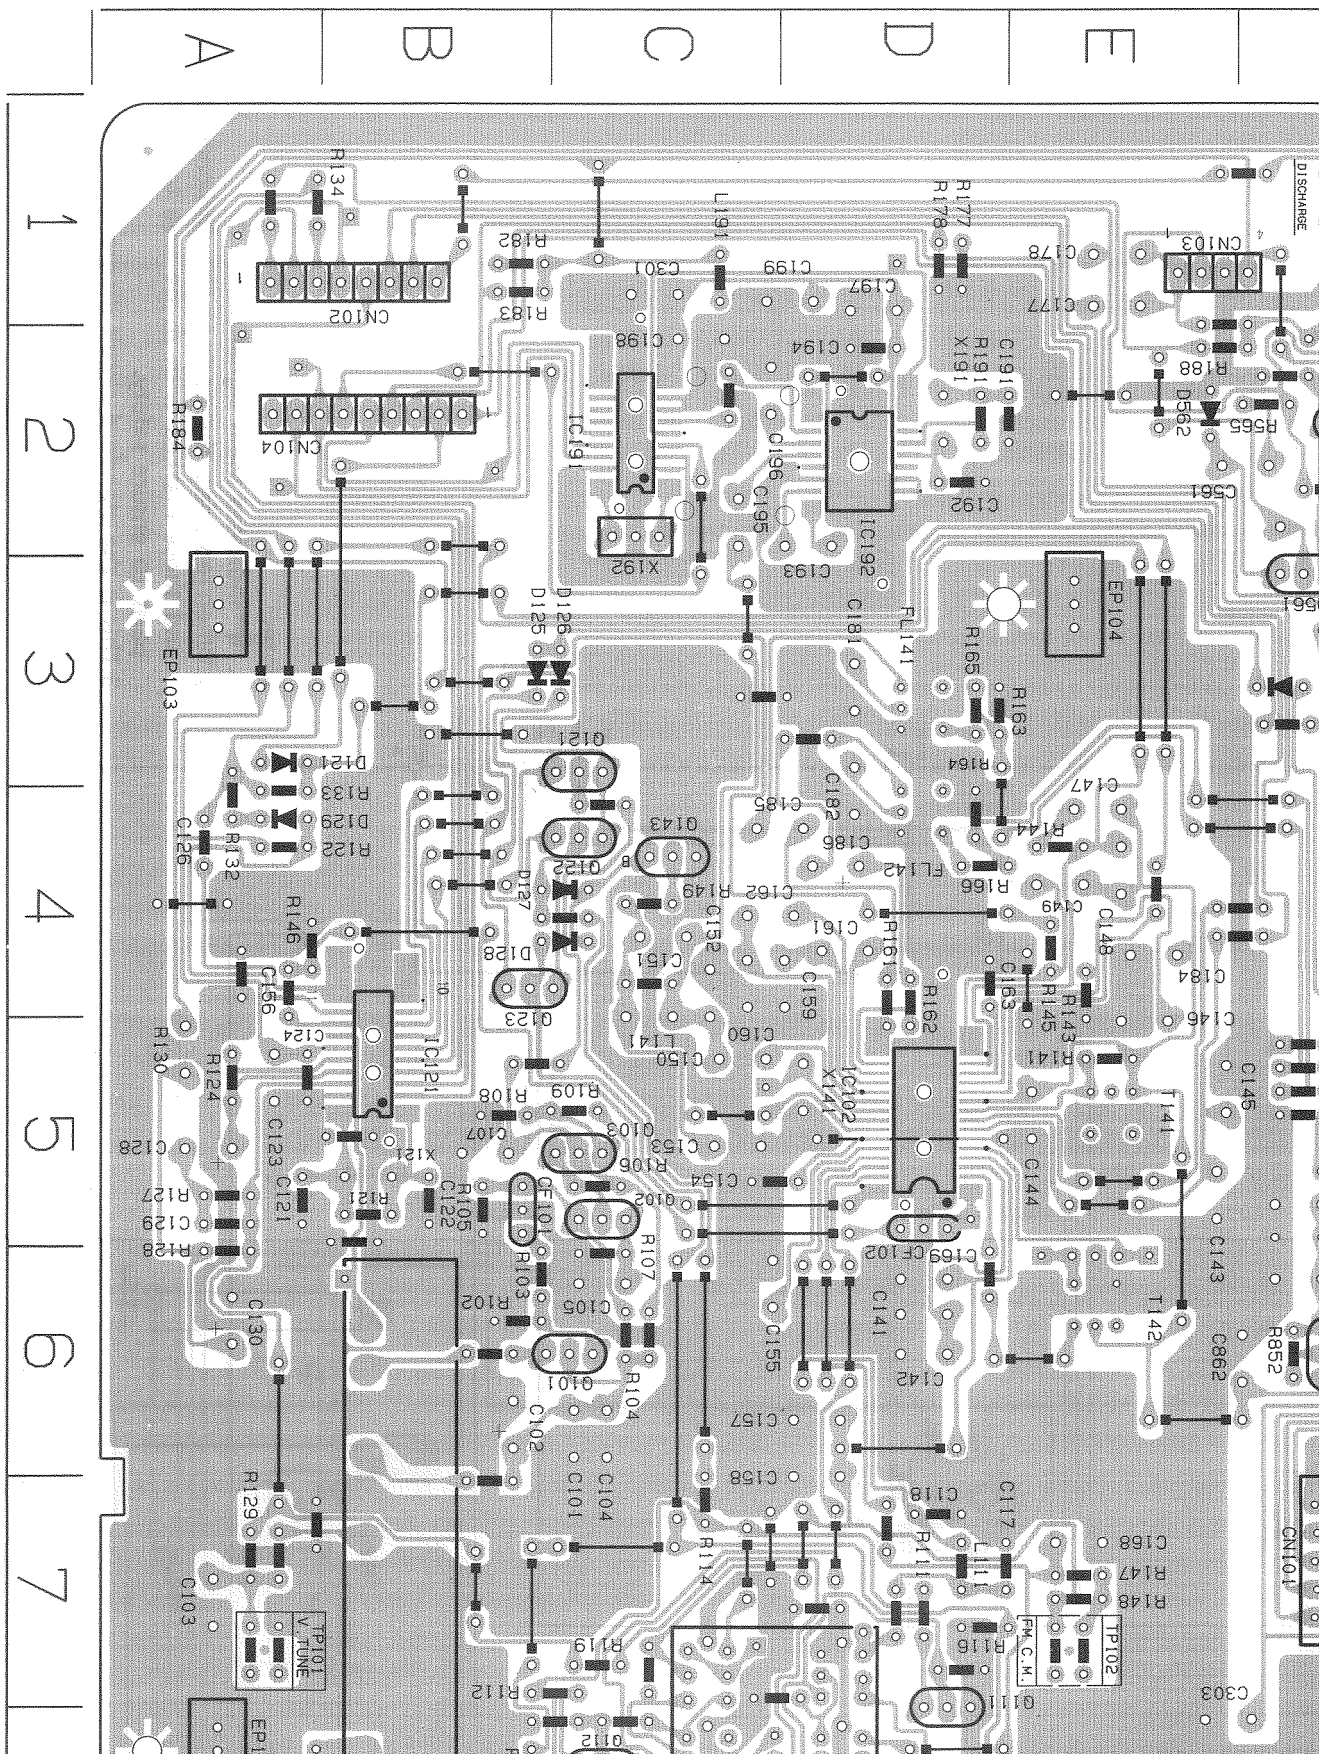

# Printed Circuit Board

■ Tuner P.C. Board (ENA-177)

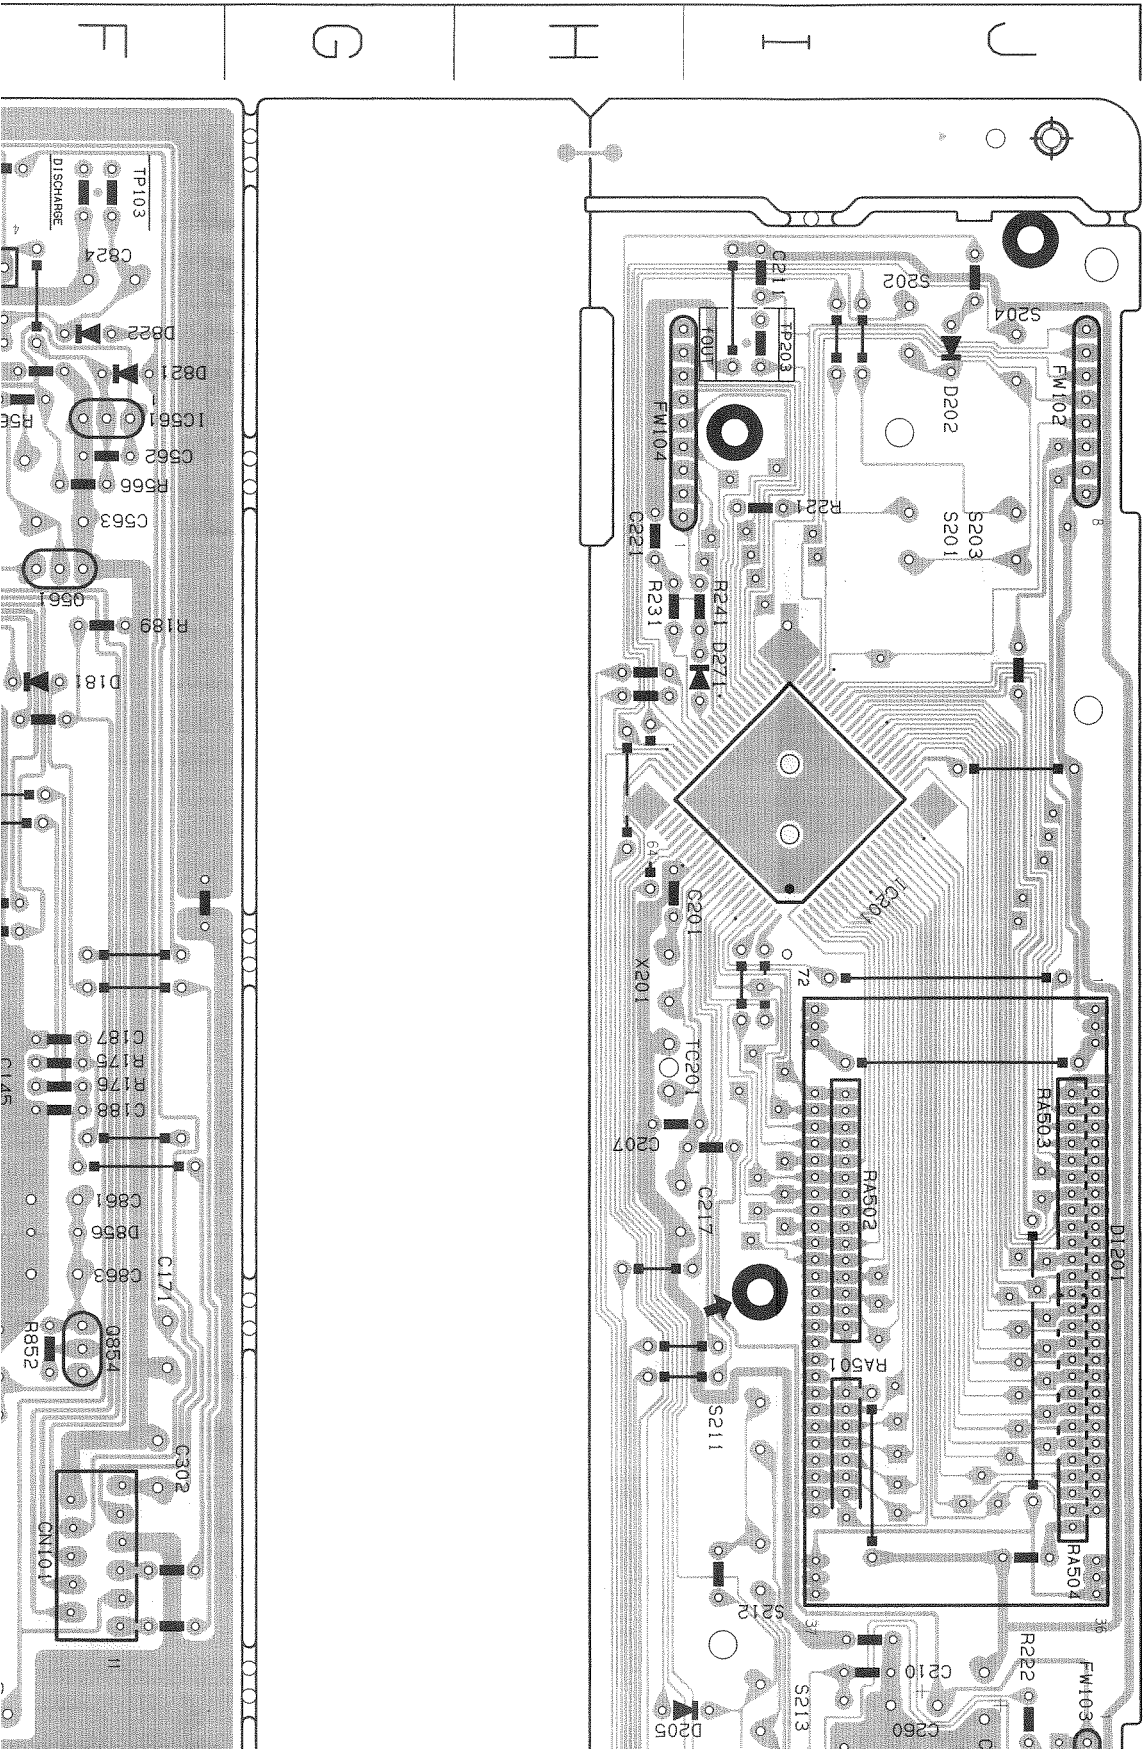

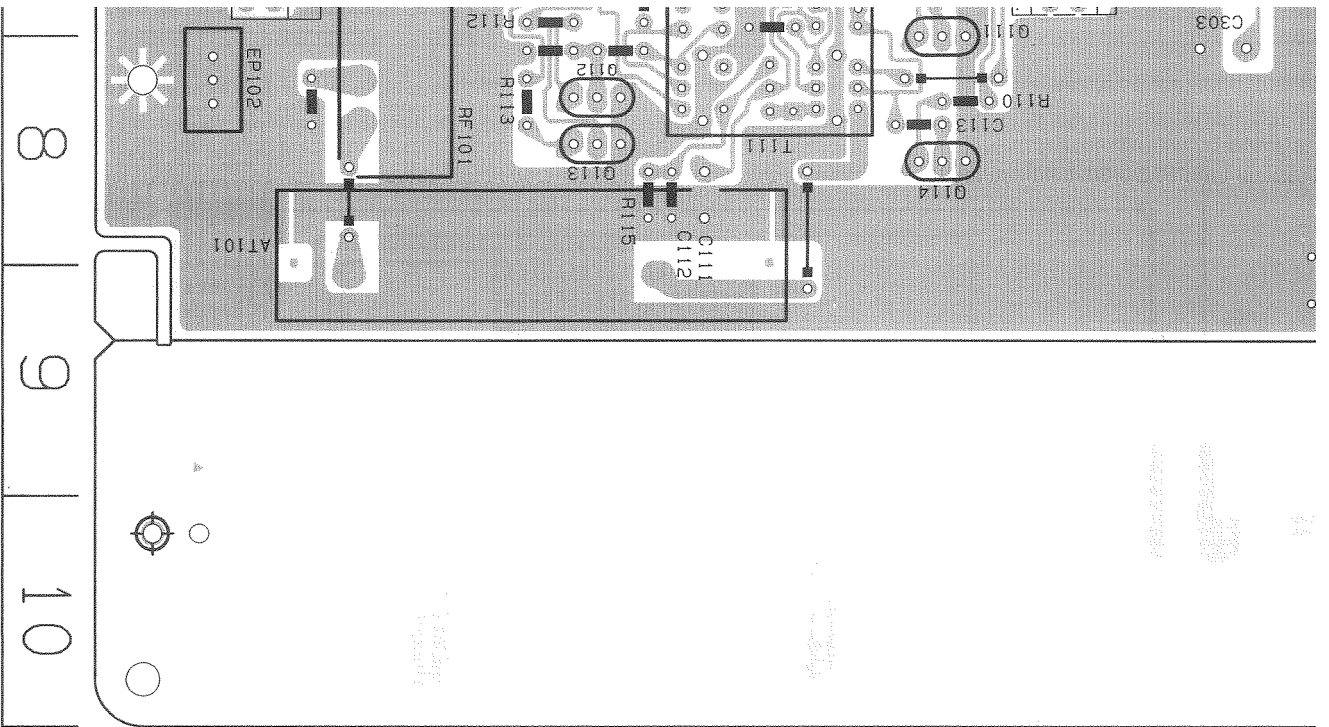


C149	6 E	CN103	4 E	R105	7 B	R565	4 E	XX0150	6 B
C150	6 C	CN104	4 A	R106	7 C	R566	4 F	XX0150	6 D
C151	6 C	D121	5 A	R107	7 C	R852	7 F	XX0150	6 B
C152	6 C	D125	5 B	R108	6 B	RA501	7 I	XX0150	4 C
C153	6 C	D126	5 C	R109	6 B	RA502	7 I	XX0150	4 C
C154	7 C	D127	6 B	R110	8 D	RA503	6 J	XX0200	4 D
C155	7 C	D128	6 B	R111	8 D	RA504	8 J		
C156	6 A	D129	5 A	R112	8 B	RF101	9 B		
C157	7 D	D181	5 F	R113	9 B	S201	5 I		
C158	8 D	D202	4 J	R114	8 C	S202	4 I		
C159	6 C	D203	10 I	R115	9 C	S203	5 J		
C160	6 C	D204	10 I	R116	8 D	S204	4 J		
C161	6 D	D205	8 H	R119	8 C	S205	9 J		
C162	6 D	D206	8 J	R121	7 B	S206	10 J		
C163	6 D	D211	9 I	R122	5 A	S207	9 I		
C168	8 E	D212	10 I	R124	6 A	S208	10 I		
C169	7 D	D221	9 J	R127	7 A	S209	9 I		
C171	7 F	D222	10 J	R128	7 A	S210	10 I		
C177	4 E	D223	10 J	R129	8 A	S211	7 I		
C178	4 E	D251	8 I	R130	6 A	S212	8 I		
C181	5 D	D271	5 I	R132	5 A	S213	8 I		
C182	5 D	D562	4 E	R133	5 A	S214	9 I		
C184	6 E	D821	4 F	R134	3 A	T111	8 C		
C185	5 D	D822	4 F	R141	6 E	T141	6 E		
C186	6 D	D856	7 F	R143	6 E	T142	7 E		
C187	6 F	D1201	6 J	R144	5 E	T0201	6 H		
C188	6 F	FL141	5 D	R145	6 E	X121	7 B		
C191	4 D	FL142	5 D	R146	6 A	X141	6 D		
C192	4 D	FW102	4 J	R147	8 E	X191	4 D		
C193	5 C	FW103	8 J	R148	8 E	X192	4 C		
C194	4 D	FW104	4 H	R149	6 C	X201	6 H		









P5-12-a

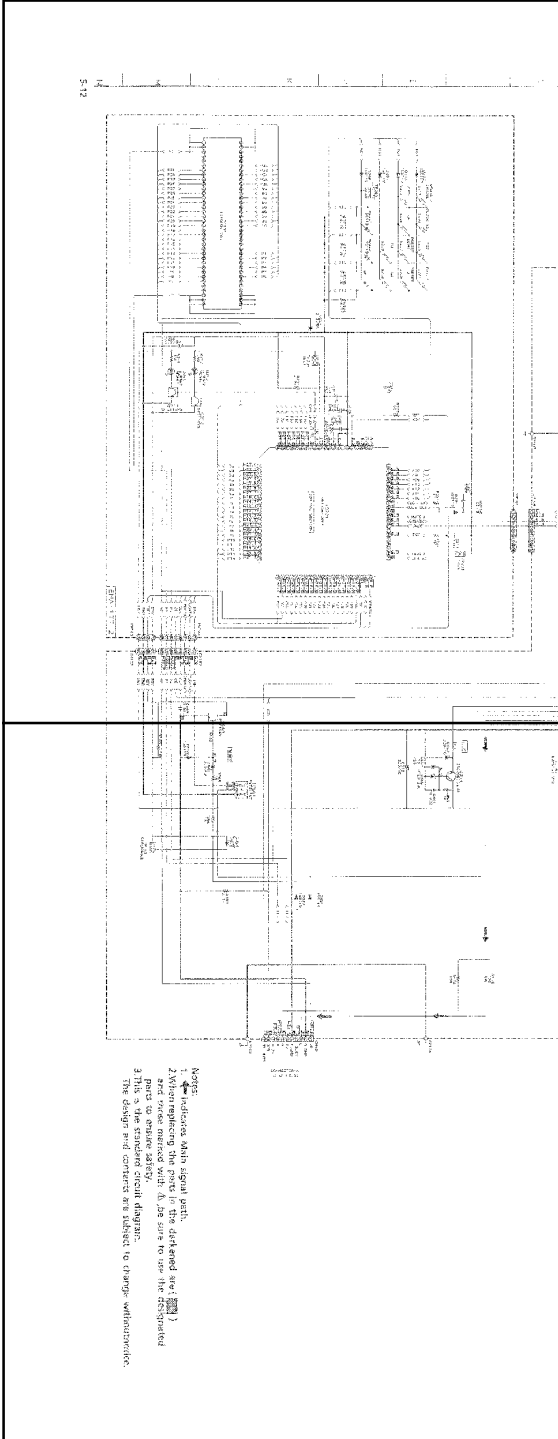

P5-12-b

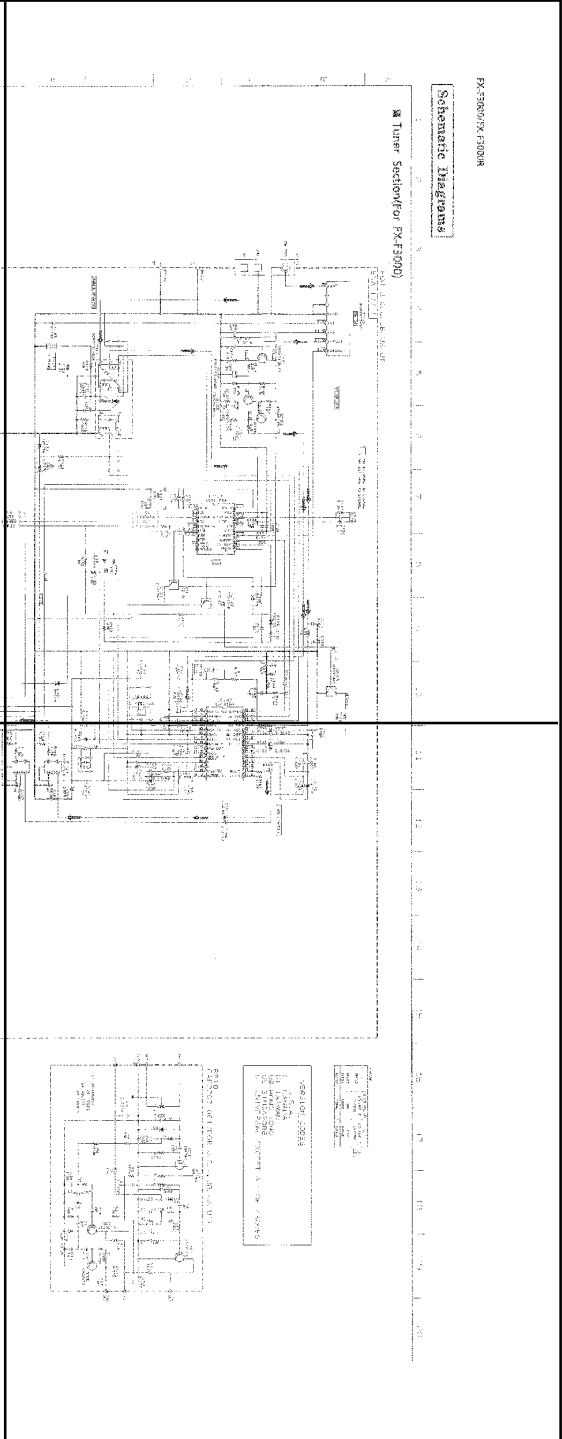

P5-12-c



P5-12-d



5-12

PK-F300/5X-F300R  
Schematic Diagrams


8 Tuner Section for PK-F300

Notes:  
1. Refer to the signal path.  
2. When using the left-hand side, the  
and screen entered with it, be sure to use the designated  
parts to ensure safety.  
3. The design and contents are subject to change without notice.

REVISION HISTORY

NO.	DATE	DESCRIPTION
1	2000.01.15	INITIAL DESIGN
2	2000.02.15	REVISED TO ADD COMPONENTS
3	2000.03.15	REVISED TO ADD COMPONENTS

FIGURE 10-10-10 (PARTIAL)

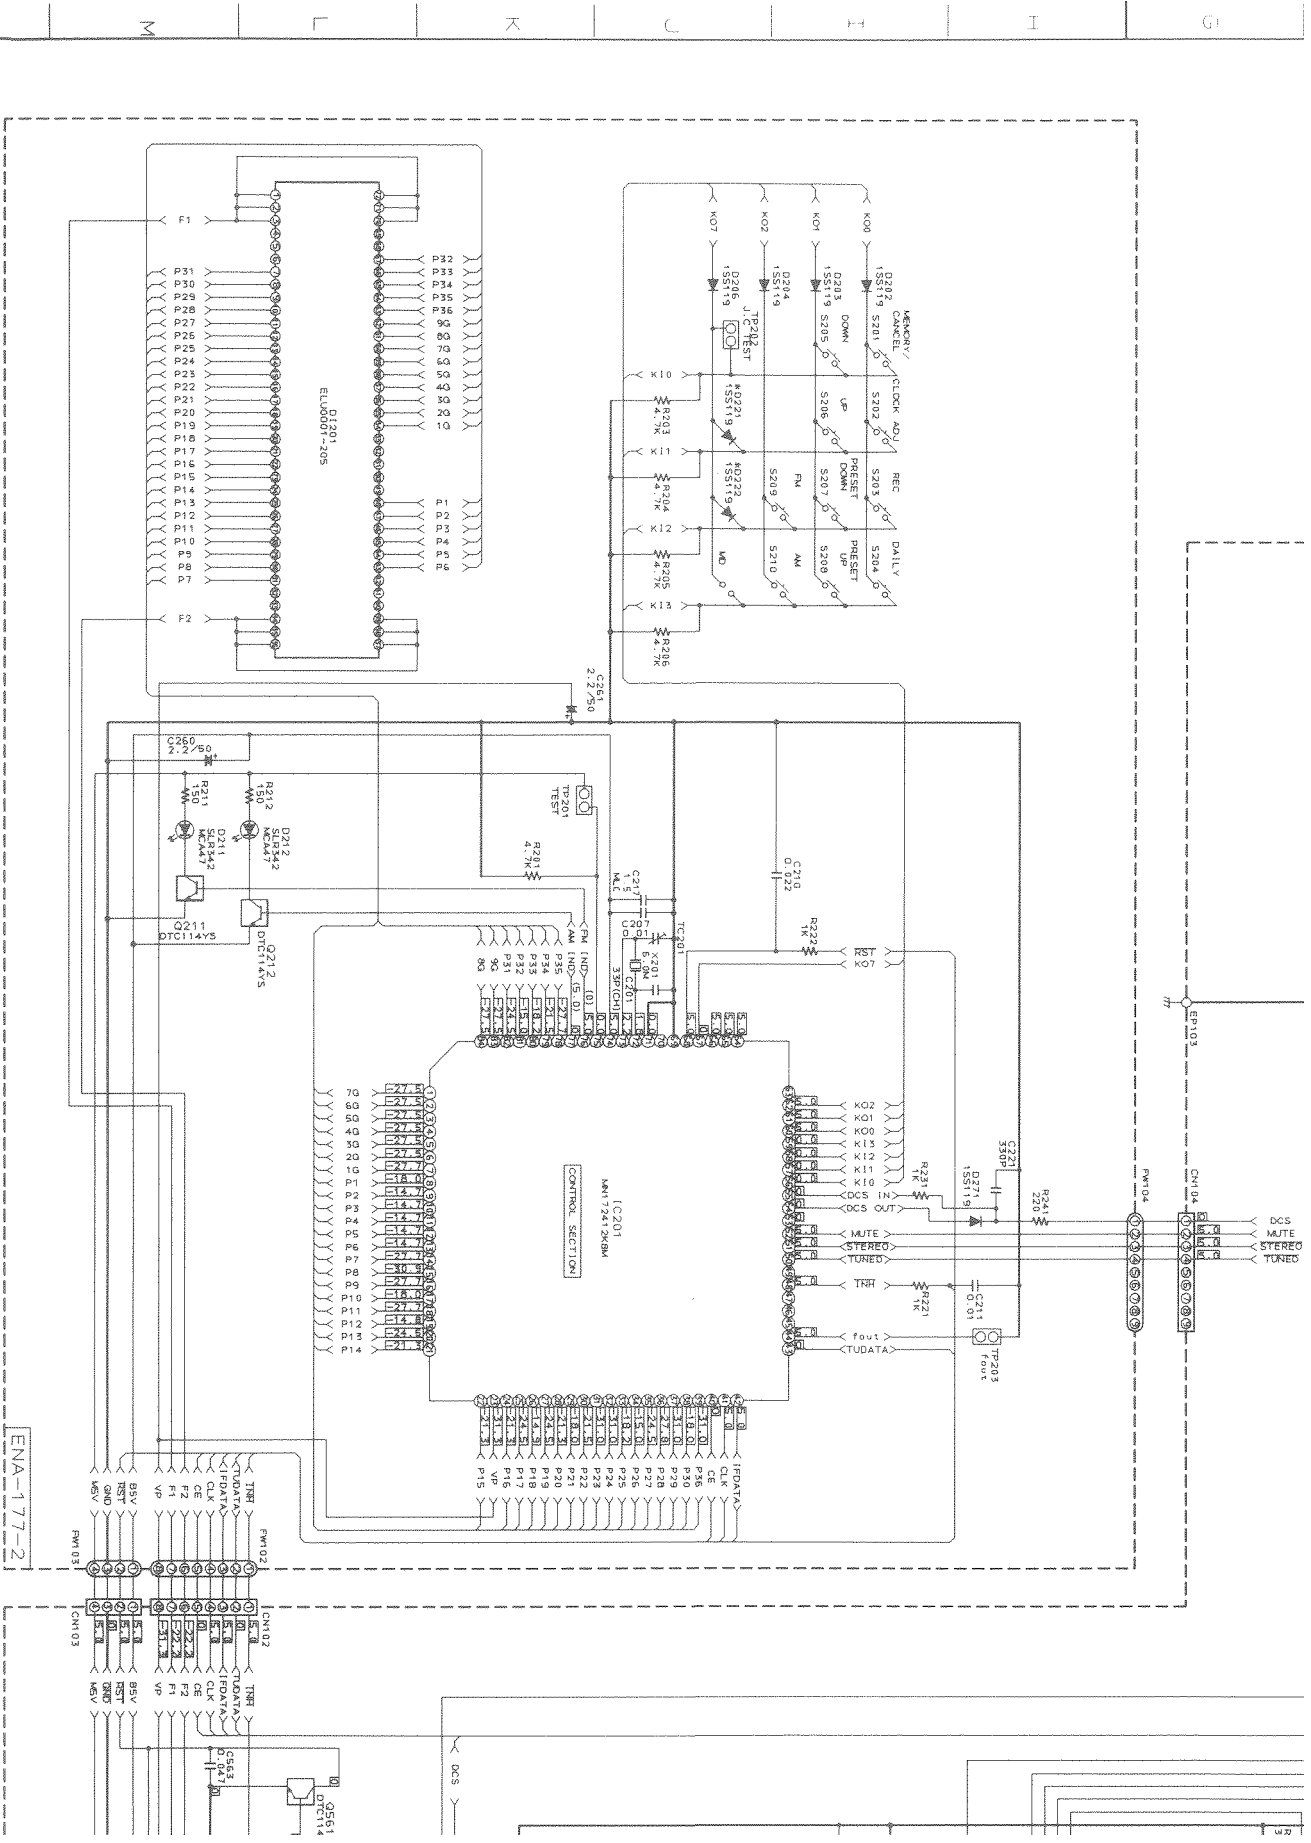



# Schematic Diagrams




1 2 3 4 5 6 7 8 9 10


## Tuner Section(For FX-F3000)

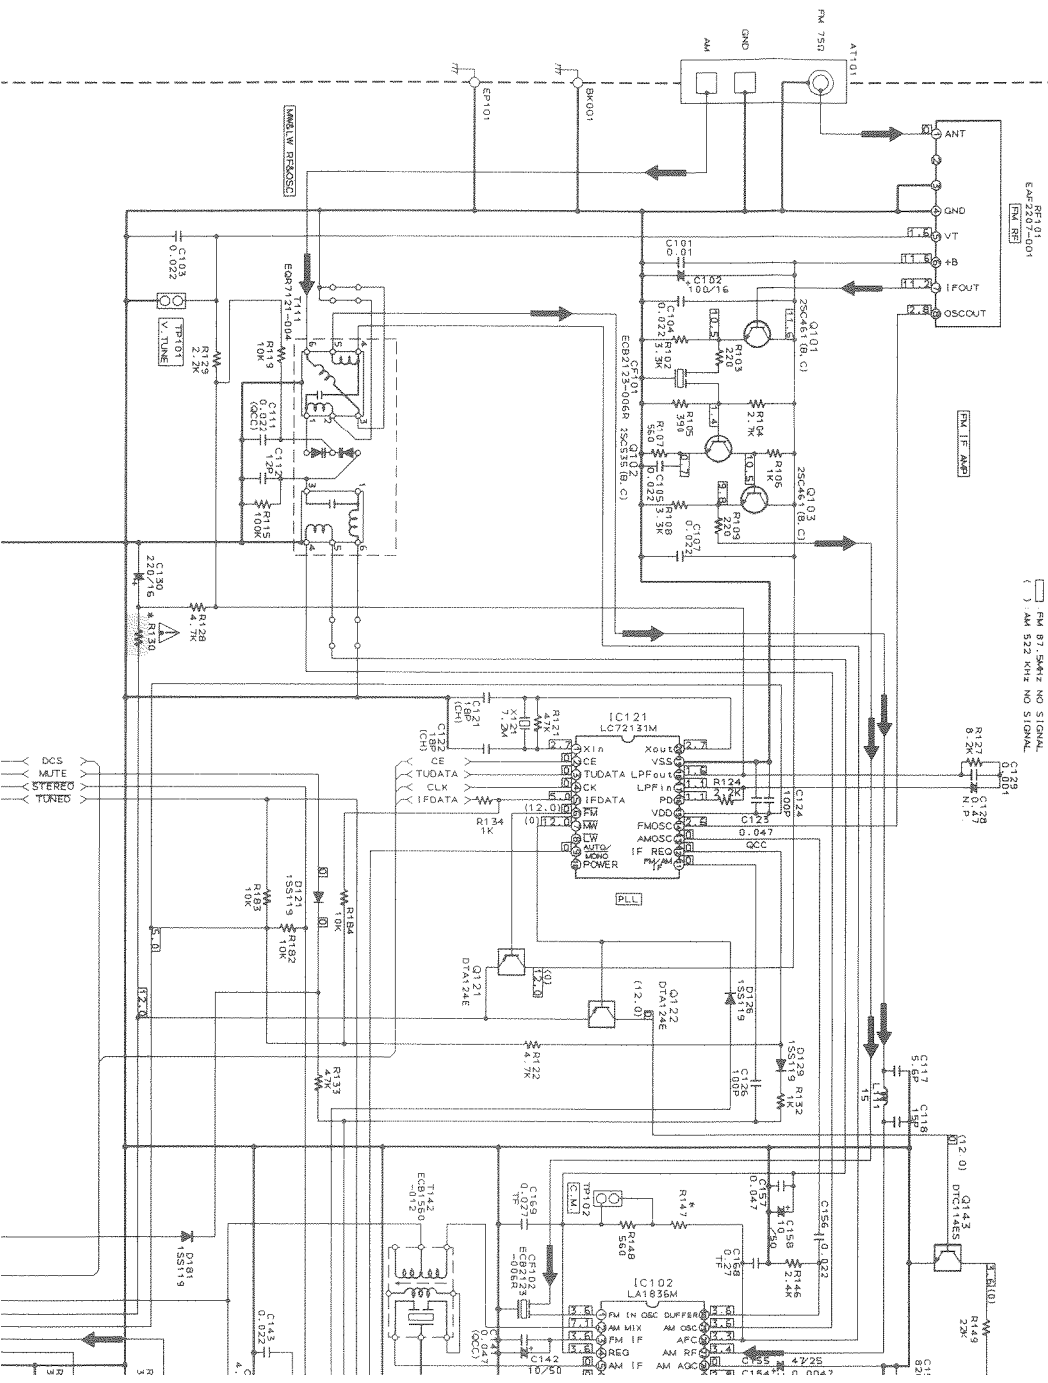FOR J, C, U, UB, US, UT  
ENA-177-1

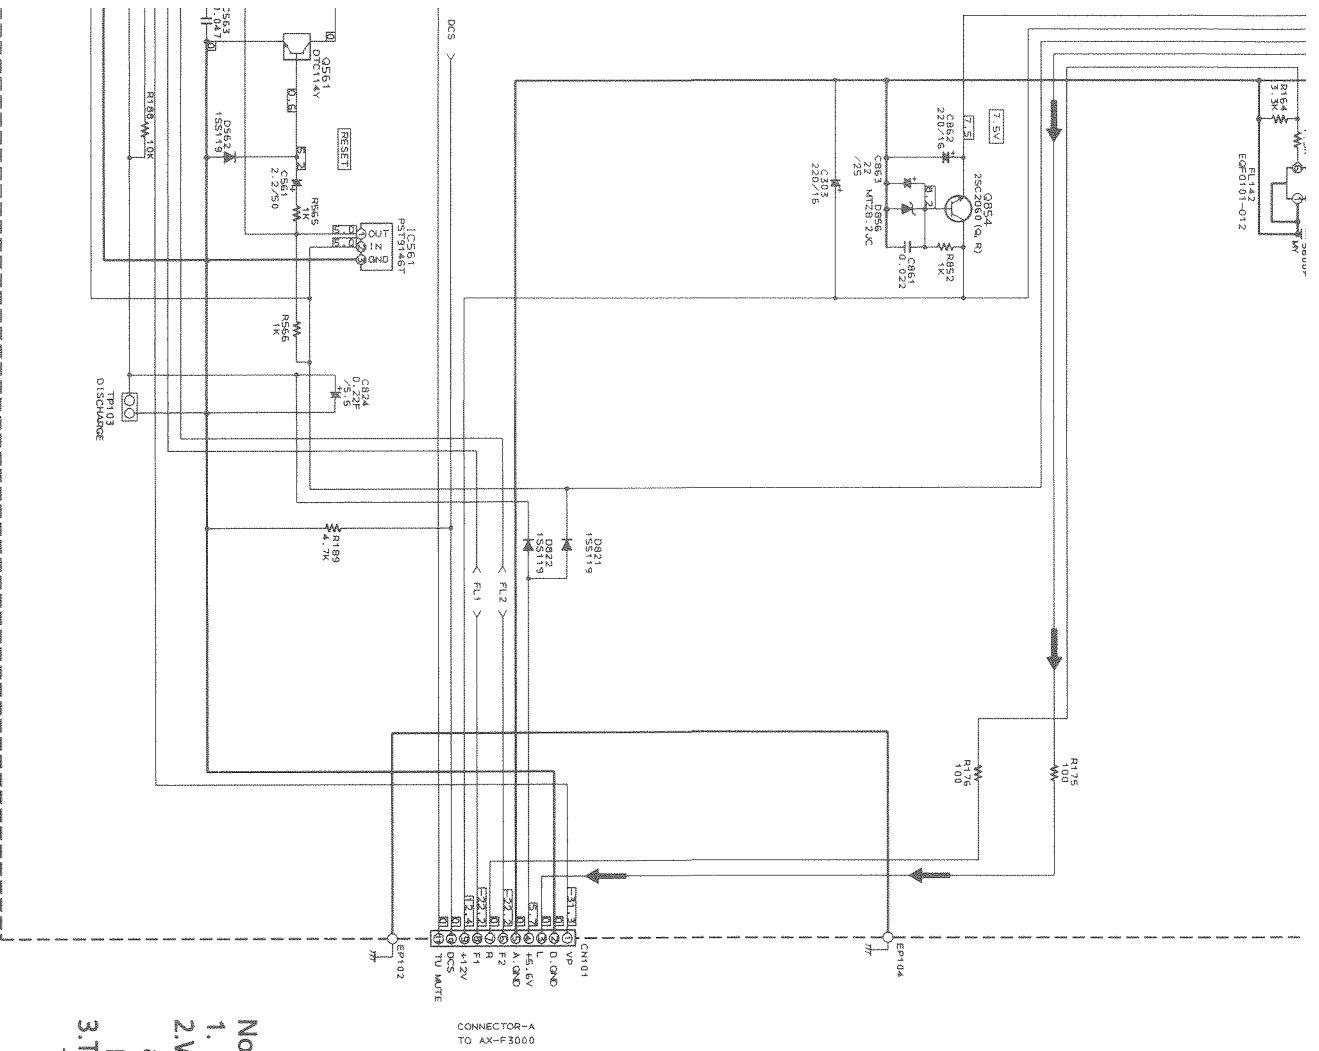



- Notes:
1.  indicates Main signal path.
  2. When replacing the parts in the darkened are (  ) and those marked with , be sure to use the designated parts to ensure safety.
  3. This is the standard circuit diagram. The design and contents are subject to change without notice.

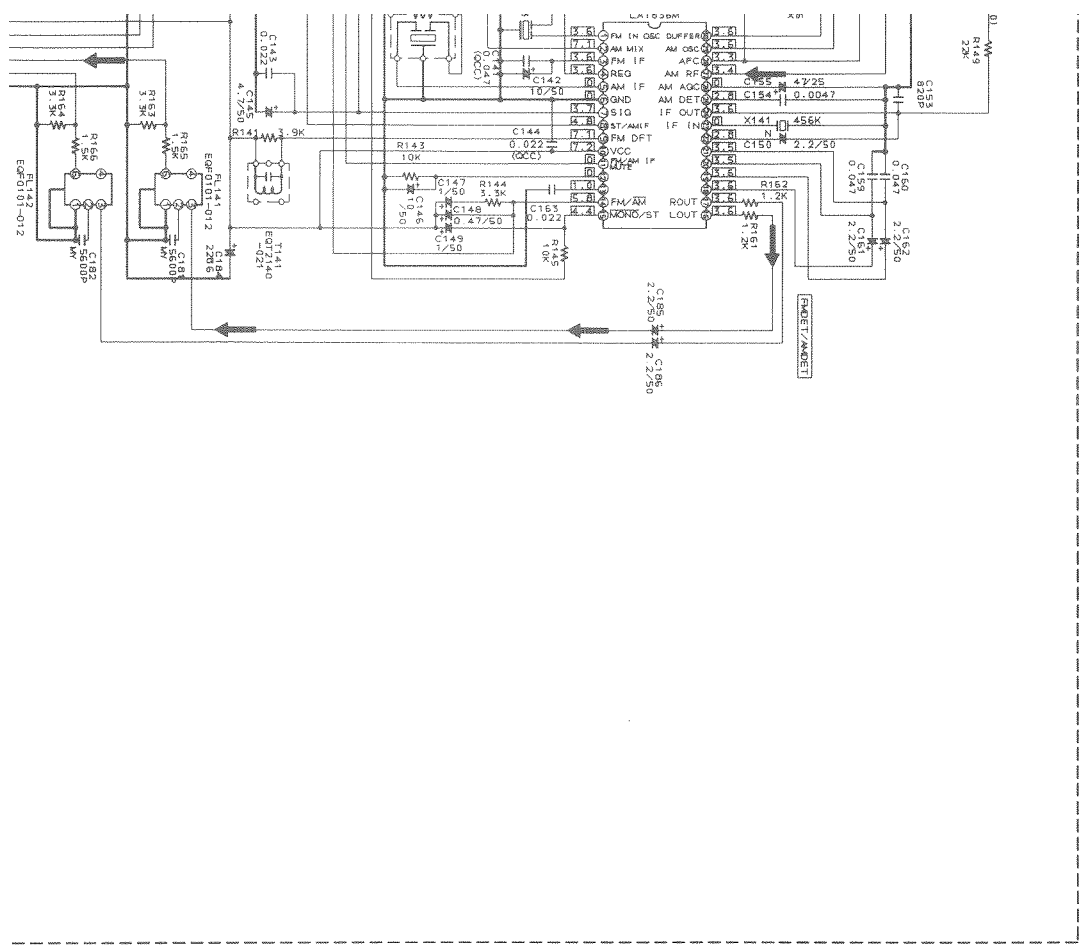


\* MARK

U	UB	US	UT	L-C
R130	6B	UNF	F	6B UNF C
R147	1	7AM	1	(1/4W)
D221	USED	NONE	USED	NONE
D222	USED	NONE	USED	NONE

VERSION CODES


J : U.S.A.  
 C : CANADA  
 UT : TAIWAN  
 UB : HONG KONG  
 US : SINGAPORE  
 U : UNIVERSAL EXCEPT ALL OF ABOVE

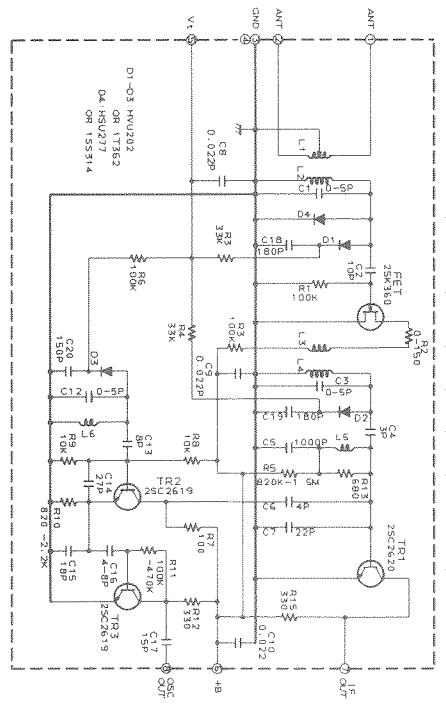






P5-13-a

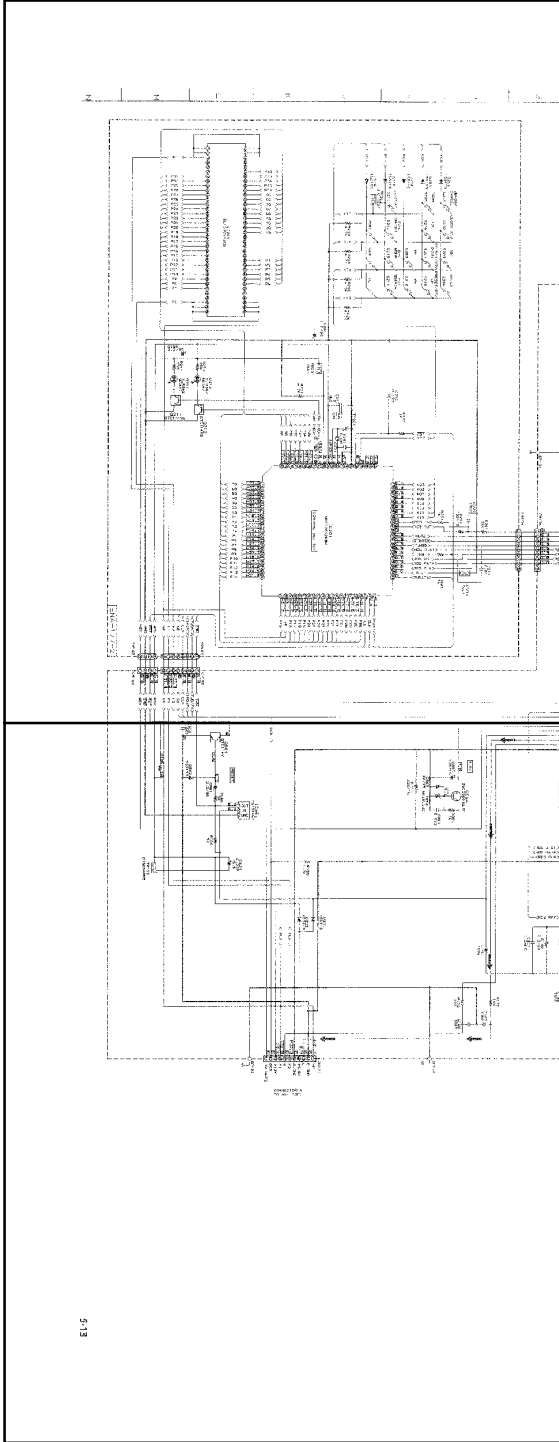

5-13


P5-13-c

P5-13-b

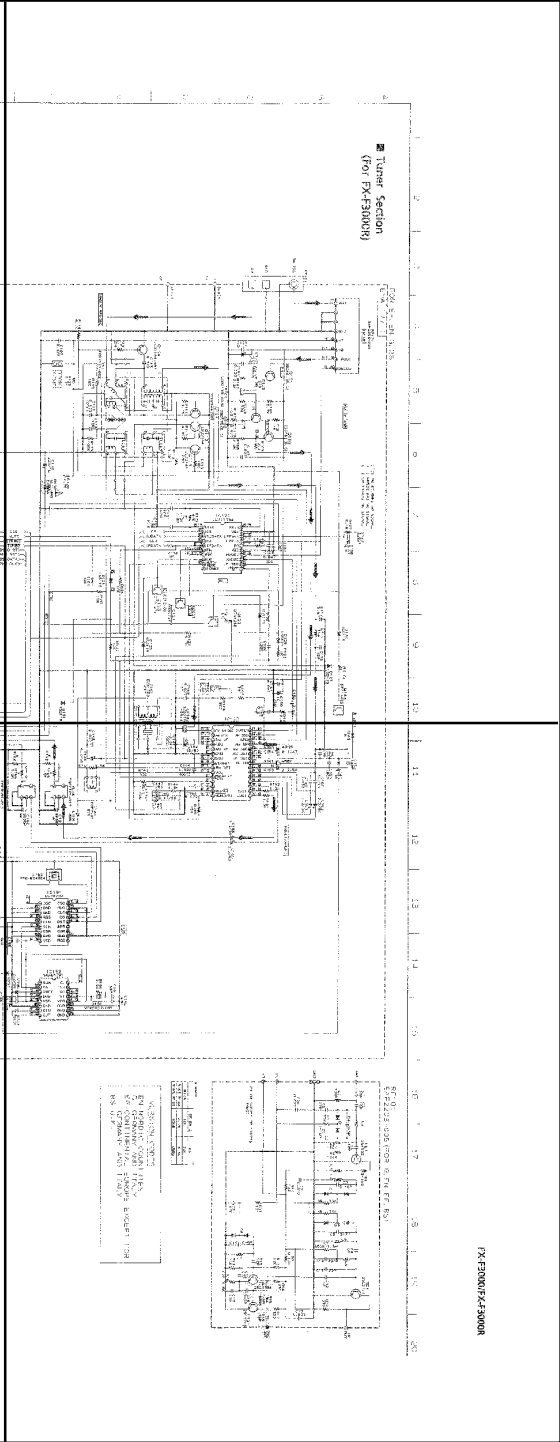




FX-30MR/30MR-B

P5-13-d

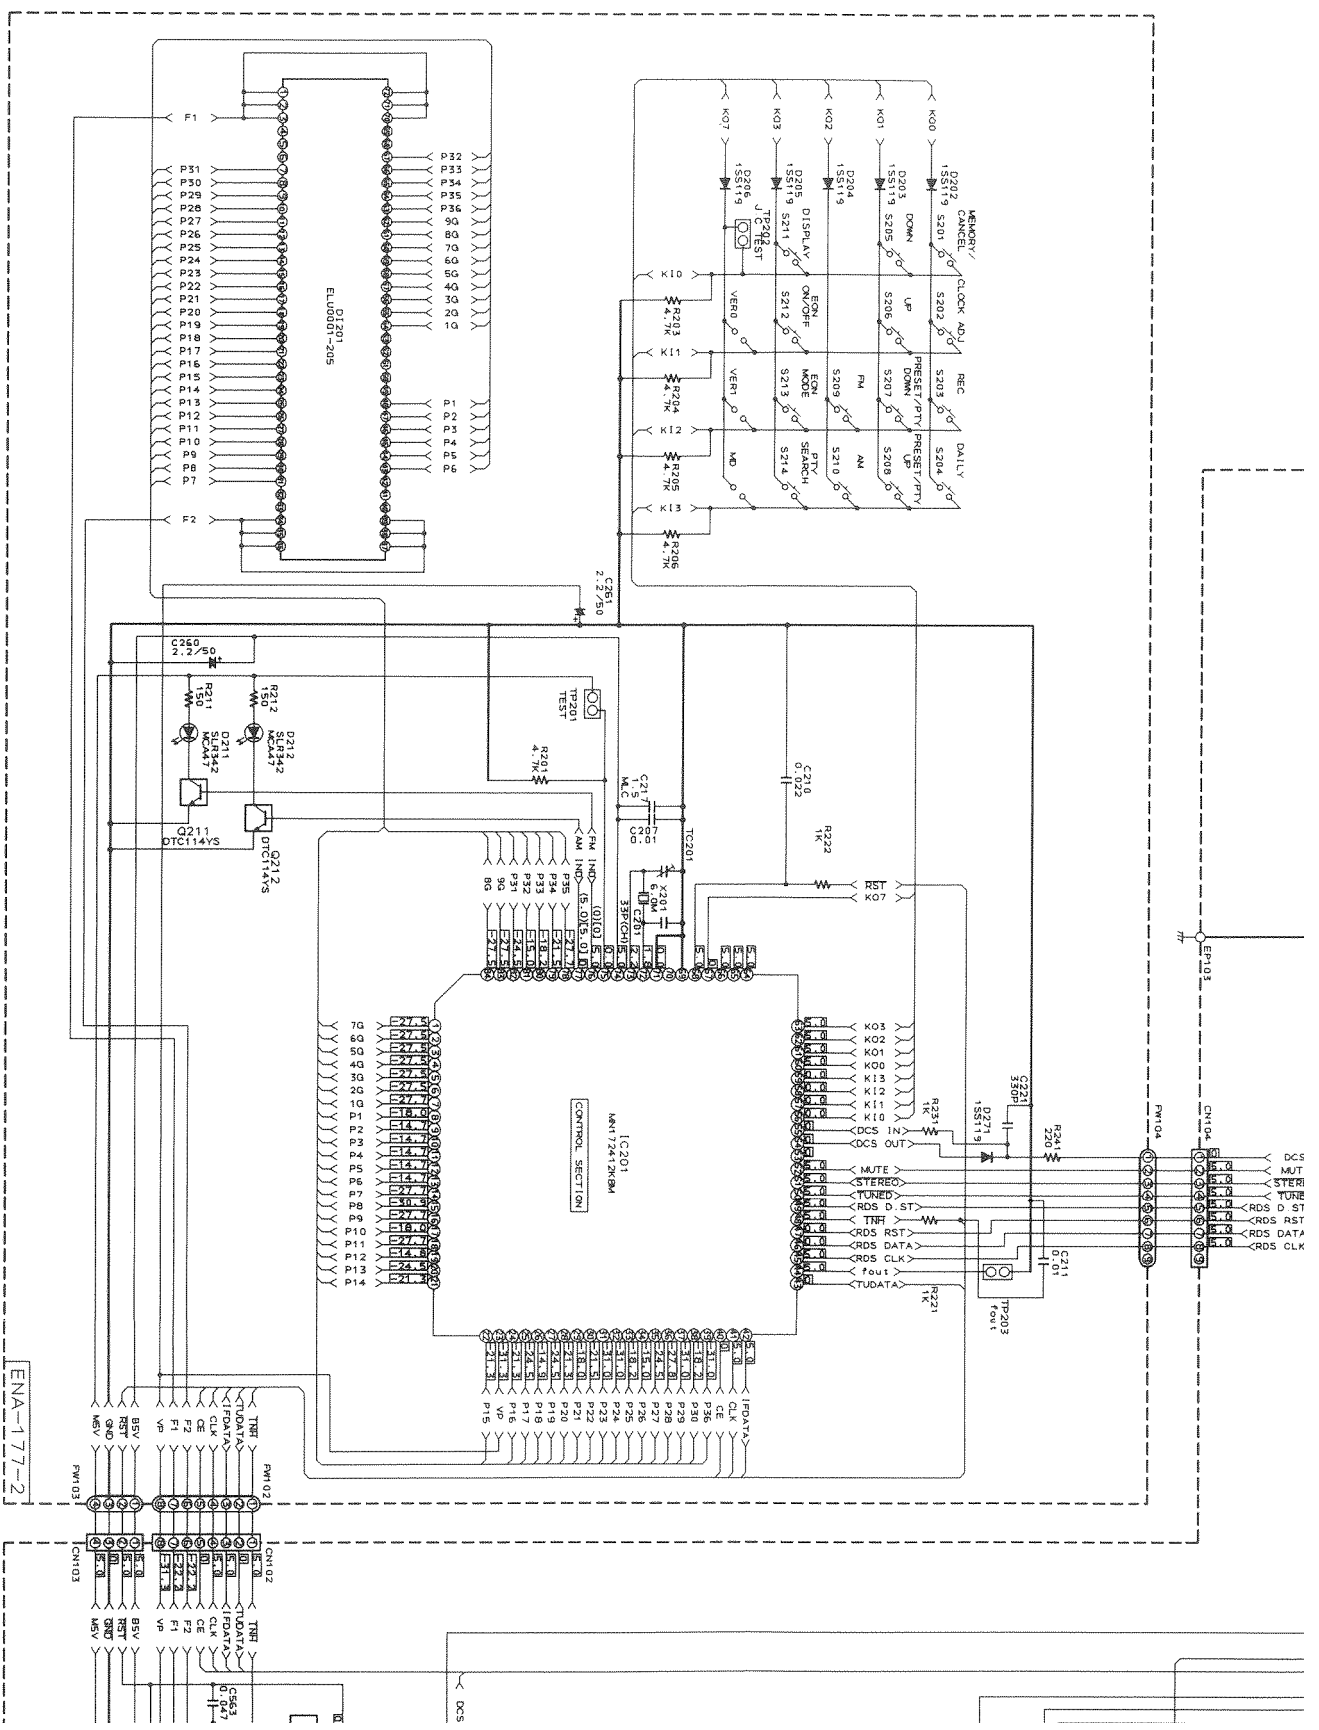



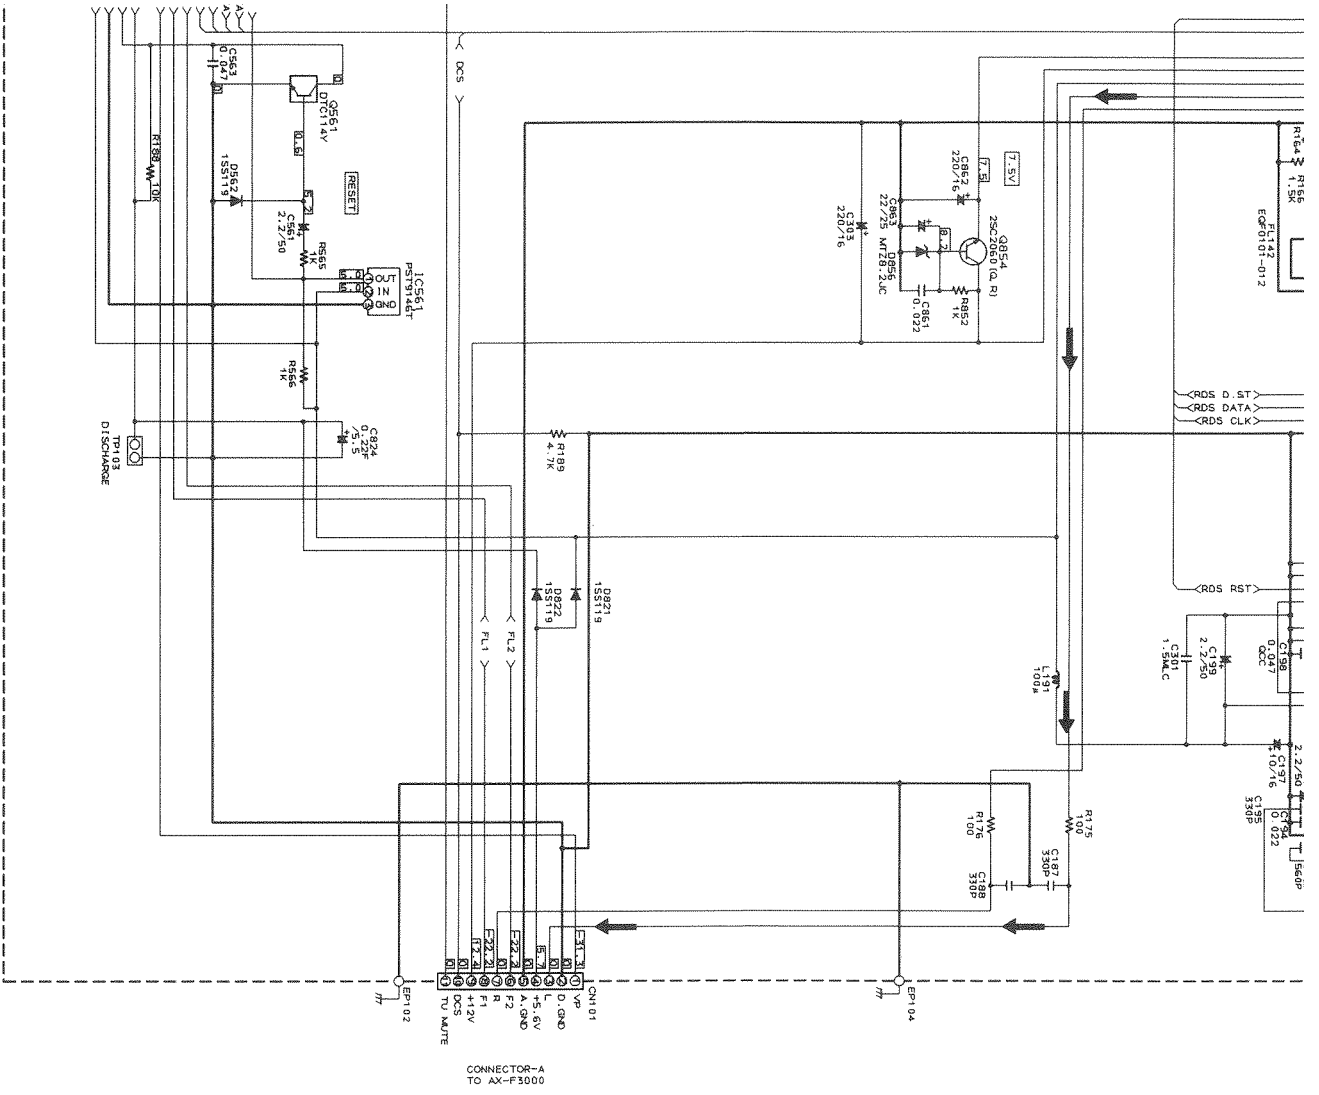

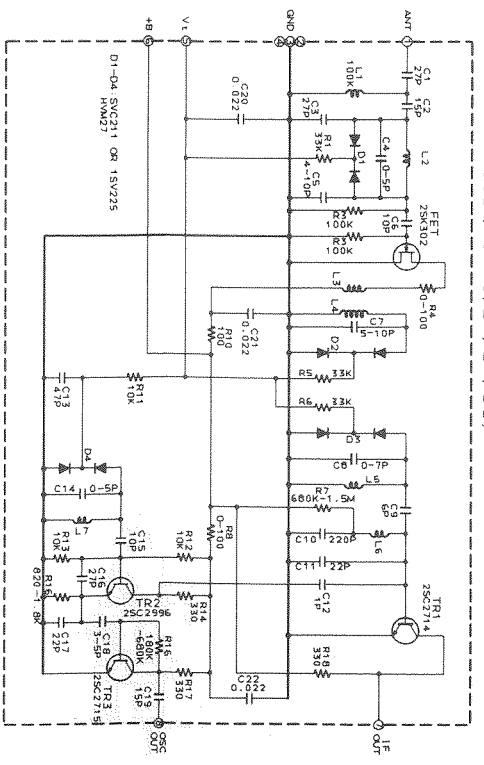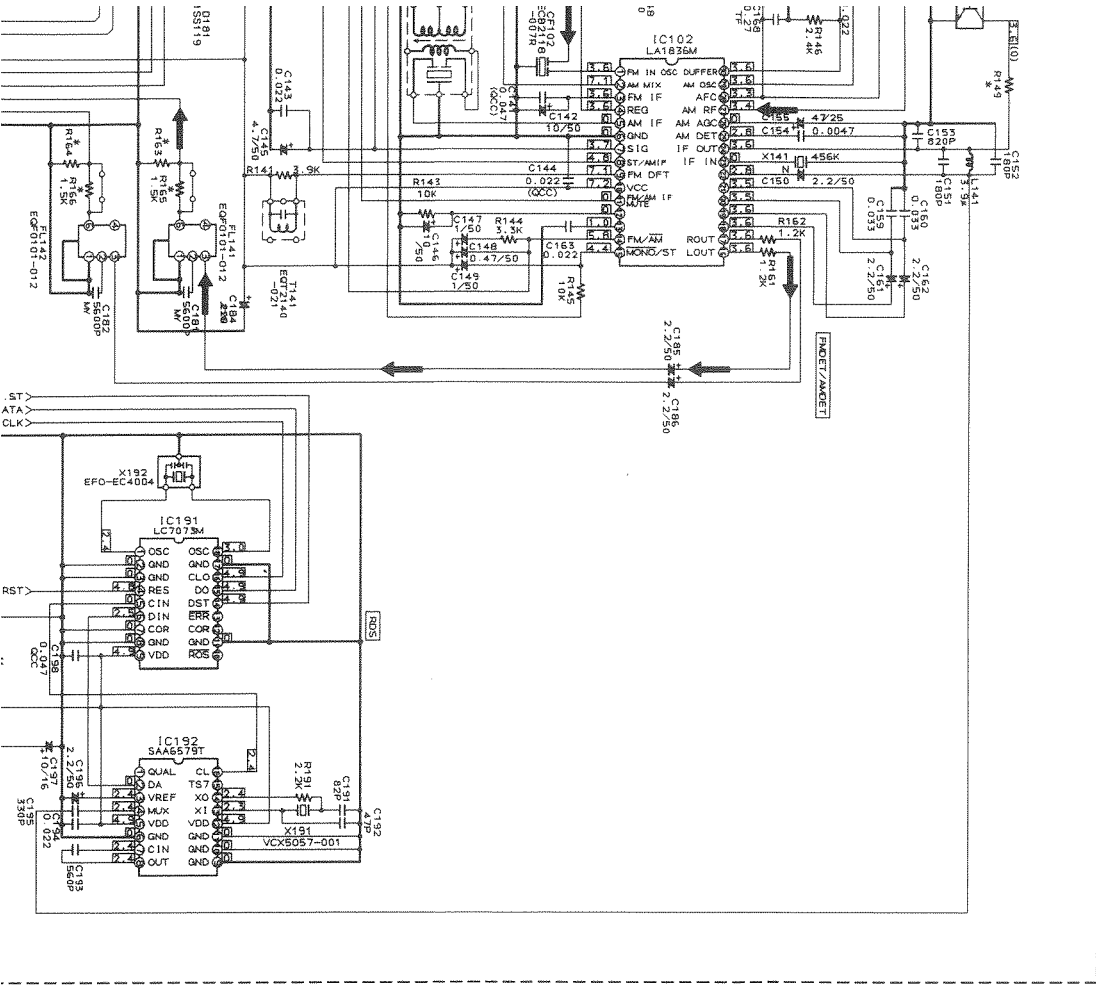

MARK	EF, EN, G	BS
R148	10K	22K
R153, R154	4.7K	3.3K
R155, R156	NONE	USED

VERSION CODES  
 EN: NORDIC COUNTRIES  
 G: GERMANY AND ITALY  
 EF: CONTINENTAL EUROPE EXCEPT FOR  
 GERMANY AND ITALY  
 BS: U.K.



# PARTS LIST

## < AX-F3000 >

\* All printed circuit boards and its assemblies are not available as service parts.


### The Marks for Designated Areas


BS . . . the U. K.	C . . . Canada	EF . . . Continental Europe	EN . . . Scandinavia
G . . . Germany	J . . . the U. S. A.	UB . . . Hong Kong	U . . . Universal Type
US . . . Singapore	UT . . . Taiwan	No marks indicates all areas.	

### - Contents -

General Exploded View and Parts List . . . . .	6-2
Electrical Parts List . . . . .	6-4
(ENH-296) . . . . .	6-4
(ENB-241) . . . . .	6-7
(END-104) . . . . .	6-9

General Exploded View and Parts List

Block No. 

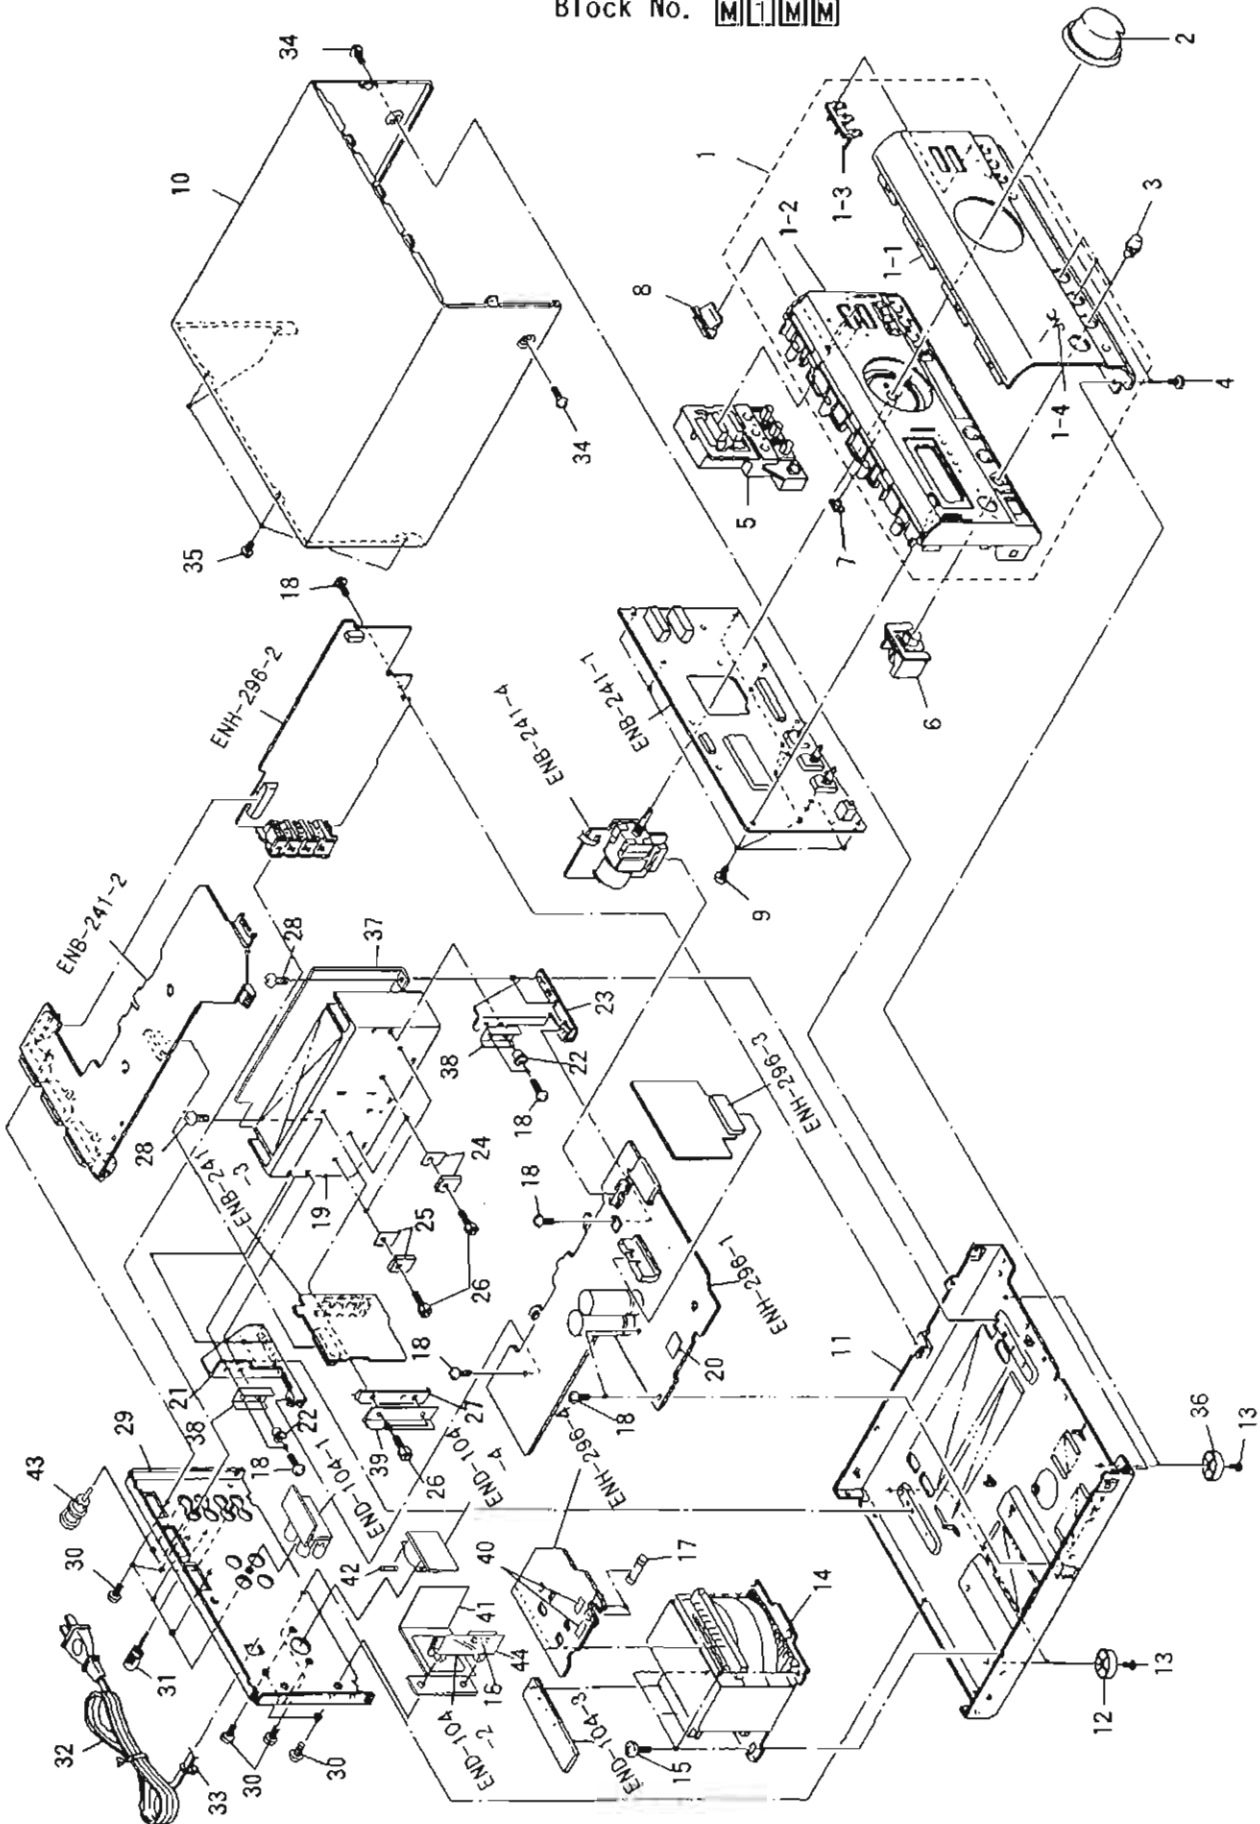



## ■ Parts List

Block No. NIMM

△	Item	Parts Number	Parts Name	Qty	Description	Area
	1	EFP-AJF3000E(S)	FRONT PANEL ASSY	1		
	1-1	E208727-000	FRONT PANEL	1		
	1-2	E100093-002ST	FRONT BASE	1		
	1-3	E408918-001	INDICATOR	1	FUNCTION	
	1-4	E406971-221	JVC MARK	1		
	2	E309630-004SS	VOLUME KNOB	1		
	3	E408127-008	KNOB	3	BASS TREBLE BALANCE	
	4	S05G3008CC	TAPPING SCREW	2		
	5	E208724-003SS	PUSH BUTTON ASSY	1	SOURCE	
	6	E309627-003SS	PUSH BUTTON ASSY	1	POWER	
	7	E408131-001	REMOON PLATE	1		
	8	E408915-001	INDICATOR	2	DIRECT	
	9	S05J2808Z	SCREW	10		
	10	E208174-009(S)	METAL COVER	1		
	11	E102864-001	CHASSIS BASE	1		
	12	E75281-010	FOOT	2		
	13	S8ST3010Z	TAPPING SCREW	4		
△	14	ETP1100-83EAJ	POWER TRANSFORMER	1		EF EM G BS
△		ETP1100-83FAJ	POWER TRANSFORMER	1		U UB US UT
△		ETP1100-83JAJ	POWER TRANSFORMER	1		C J
	15	E65389-004	SPECIAL SCREW	4		
△	16	OMF0007-2R5J1	FUSE	1	F001(T1.5A/125V)	C J
△		OMF51E2-1R2J1BS	FUSE	1	F001(T1.2A/250V)	BS
△		OMF51E2-1R25	FUSE	1	F001(T1.25A/250V)	EF EM G
△		OMF51E2-2R5J1	FUSE	1	F001(2.5A/250V)	U UB US UT
△	17	OMF0007-1R8J1	FUSE	2	F801 F802(T1.8A/125V)	C J
△		OMF51E2-1R2J1BS	FUSE	2	F801 F802(T1.2A/250V)	BS
△		OMF51E2-1R25	FUSE	2	F801 F802(T1.25A/250V)	EF EM G U UB US UT
	18	S8S03008CC	TAPPING SCREW	9		
	19	E309632-003SS	HEAT SINK	1		
	20	E3400-431	FELT SPACER	1		BS EF EM G
	21	E308971-001ST	HEAT SINK BRACKET	1		
	22	BUSH-PUL	BUSHING	2		
	23	E308971-002ST	HEAT SINK BRACKET	1		
	24	25C1653LD(O. Y)	SI. TRANSISTOR	2	0769 0770	
	25	25A1489LD(O. Y)	SI. TRANSISTOR	2	0771 0772	
	26	E7525-003	SCREW	6		
	27	E408989-221	LEAF SPRING	1		
	28	S8ST3006CC	TAPPING SCREW	4		
	29	E208727-002	REAR PANEL	1		J
		E208727-003	REAR PANEL	1		C
		E208727-004	REAR PANEL	1		BS EF EM G
		E208727-005	REAR PANEL	1		U UB US UT
	30	E72772-003	SPECIAL SCREW	11		U UB US UT
		E72773-003	SPECIAL SCREW	9		Except U UB US UT
	31	E409257-001	EARTH TERMINAL	1		
△	32	OMP148C-200L	POWER CORD	1		C J
△		OMP190C-200	POWER CORD	1		EF EM G US
△		OMP5530-0085BS	POWER CORD	1		BS UB
△		OMP7520-200	POWER CORD	1		U UT
△	33	DHS3771-108	CORD STOPPER	1		
	34	S05G3008H	TAPPING SCREW	2		
	35	G8S03008CC	TAPPING SCREW	4		
	36	E75281-009	FOOT	2		
	37	E310161-001	PROTECT SHEET	1		
	38	E70306-001	HEAT SINK	2		
	39	E408910-001SS	HEAT SINK	1		
	40	E61380-002	FUSE LABEL	2		C J
	41	E310128-001SS	PROTECT SHEET	1		U UB US UT
		E409464-001SS	PROTECT SHEET	1		BS C EF EM G J
△	42	OMF51E2-1R25	FUSE	1	F002(T1.25A/250V)	U UB US UT
	43	E03449-001	SHORT PLUG	2		
	44	E310177-001SS	PROTECT COVER	1		
	-	E81029-005	NUMBER LABEL	1		
		E75103-001	FUSE C LABEL	1		J
		E75804-001	FUSE C LABEL	1		G
		E75139-001	NAME SHEET	1		U
		E309384-027	RATING LABEL	1		UT

AX-F3000

■ Electrical Parts List (ENP-286)

△	Item	Parts Number	Description	Area
		I. C. S		
	1C101	NJM458000	I. C. (MONO-ANALOG)	
	1C201	TC6164AN	I. C. (D101-WSS)	
	1C231	NJM458000	I. C. (MONO-ANALOG)	
	1C301	NJM458000	I. C. (MONO-ANALOG)	
	1C361	NJM458000	I. C. (MONO-ANALOG)	
	1C303	NJM45540	I. C. (MONO-ANALOG)	
	1C351	VC6072-2	I. C. (MONO-ANALOG)	
	1C352	VC6072-2	I. C. (MONO-ANALOG)	
		DIODES		
	D202	1S5119	SI. DIODE	
	D263	1S5118	SI. DIODE	
	D211	MT22. 7JB	ZENER DIODE	
	D700	SLR-342NCA47	I. E. D.	
	D711	MT22. 7JB	ZENER DIODE	
	D712	MT22. 7JB	ZENER DIODE	
	D713	1S5119	SI. DIODE	
	D714	1S5119	SI. DIODE	
	D721	MT20. 7JC	ZENER DIODE	
	D751	1S5119	SI. DIODE	
	D752	1S5119	SI. DIODE	
	D791	1S5119	SI. DIODE	
	D792	1S5119	SI. DIODE	
	D793	1S5119	SI. DIODE	
	D794	1S5119	SI. DIODE	
△	D801	30DL2FC	SI. DIODE	
△	D802	30DL2FC	SI. DIODE	
△	D803	30DL2FC	SI. DIODE	
△	D804	30DL2FC	SI. DIODE	
	D901	1S5119	SI. DIODE	
	D902	1S5119	SI. DIODE	
	D905	1S5119	SI. DIODE	
	D912	1S5119	SI. DIODE	
		TRANSISTORS		
	Q251	2SC2389 (S. I.)	SI. TRANSISTOR	
	Q353	DTA144ES	DIGITAL TRANSISTOR	
	Q354	DTA144ES	DIGITAL TRANSISTOR	
	Q355	DTA144IS	DIGITAL TRANSISTOR	
	Q357	2SD2144S (VM)	SI. TRANSISTOR	
	Q358	2SD2144S (VM)	SI. TRANSISTOR	
	Q361	2SK301 (P. O)	F. E. T.	
	Q362	2SK301 (P. O)	F. E. T.	
	Q524	DTA144IS	DIGITAL TRANSISTOR	
	Q704	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q702	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q700	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q704	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q705	2SC1735V (F. I)	SI. TRANSISTOR	
	Q706	2SC1735V (F. I)	SI. TRANSISTOR	
	Q707	2SA933M (R. S)	SI. TRANSISTOR	
	Q708	2SA933M (R. S)	SI. TRANSISTOR	
	Q709	2SA1207 (S. I)	SI. TRANSISTOR	
	Q710	2SA1207 (S. I)	SI. TRANSISTOR	
	Q711	2SC2909 (S. I)	SI. TRANSISTOR	
	Q712	2SC2909 (S. I)	SI. TRANSISTOR	
	Q713	2SA933M (R. S)	SI. TRANSISTOR	
	Q714	2SA933M (R. S)	SI. TRANSISTOR	
	Q751	2SD637 (O. R)	SI. TRANSISTOR	
	Q752	2SD637 (O. R)	SI. TRANSISTOR	
	Q781	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q782	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q783	2SA970 (GR)	SI. TRANSISTOR	
	Q784	2SA970 (GR)	SI. TRANSISTOR	
	Q785	2SC2245 (O. Y)	SI. TRANSISTOR	
	Q786	2SC2245 (O. Y)	SI. TRANSISTOR	
	Q787	2SA985 (Y)	SI. TRANSISTOR	
	Q788	2SA985 (Y)	SI. TRANSISTOR	
	Q773	2SK170 (BL)	F. E. T.	
	Q774	2SK170 (BL)	F. E. T.	

△	Item	Parts Number	Description	Area
	Q791	2SC1740S (R. S)	SI. TRANSISTOR	
	Q792	2SC1740S (R. S)	SI. TRANSISTOR	
	Q793	2SA833S (RS)	SI. TRANSISTOR	
	Q794	2SA833S (RS)	SI. TRANSISTOR	
	Q901	2SA970 (GR)	SI. TRANSISTOR	
	Q902	2SA970 (GR)	SI. TRANSISTOR	
	Q903	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q904	2SC3311A (O. R)	SI. TRANSISTOR	
	Q905	2SA733A (P. O)	SI. TRANSISTOR	
	Q906	2SC2240 (GR. BL)	SI. TRANSISTOR	
	Q921	DTC144ES	DIGITAL TRANSISTOR	
	Q922	DTC144ES	DIGITAL TRANSISTOR	
	Q923	2SA970 (GR)	SI. TRANSISTOR	
	Q931	2SC3311A (O. R)	SI. TRANSISTOR	
		CAPACITORS		
	C101	OE181MK-104	10MF 50V E. CAP.	
	C102	OE181MK-104	10MF 50V E. CAP.	
	C105	OCBB1MK-221Y	220PF 50V CER. CAP.	BS EF EN G
	C106	OCBB1MK-221Y	220PF 50V CER. CAP.	BS EF EN G
	C107	OCBB1MK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C108	OCBB1MK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C111	OE181MK-104	10MF 50V E. CAP.	
	C112	OE181MK-104	10MF 50V E. CAP.	
	C113	OE181MK-682	6800PF 50V MYLAR CAP.	
	C114	OE181MK-682	6800PF 50V MYLAR CAP.	
	C115	OE181MK-152	1500PF 50V MYLAR CAP.	
	C116	OE181MK-152	1500PF 50V MYLAR CAP.	
	C117	OCSS31KJ-391Z	390PF 50V CER. CAP.	
	C118	OCSS31KJ-391Z	390PF 50V CER. CAP.	
	C121	OE181MK-107	100MF 25V AL. E. CAP.	
	C122	OE181MK-107	100MF 25V AL. E. CAP.	
	C123	OE180JM-107	100MF 6.3V AL. E. CAP.	
	C124	OE180JM-107	100MF 6.3V AL. E. CAP.	
	C203	OCSS31KJ-101A	100PF 50V CER. CAP.	G J U UR UR UT
	C205	OCSS31KJ-331Z	330PF 50V CER. CAP.	BS EF EN G
	C204	OE321KJ-101A	100PF 50V CER. CAP.	G J U UR UR UT
	C204	OCSS31KJ-331Z	330PF 50V CER. CAP.	BS EF EN G
	C220	OCBB1MK-471Y	470PF 50V CER. CAP.	
	C221	OE181MK-107	100MF 25V AL. E. CAP.	
	C222	OE181MK-107	100MF 25V AL. E. CAP.	
	C231	OE181MK-106	10MF 50V E. CAP.	
	C232	OE181MK-106	10MF 50V E. CAP.	
	C235	OCBB1MK-101Y	100PF 50V CER. CAP.	
	C234	OCBB1MK-101Y	100PF 50V CER. CAP.	
	C241	OE181MK-107	100MF 25V AL. E. CAP.	
	C242	OE181MK-107	100MF 25V AL. E. CAP.	
	C251	OE181MK-106	10MF 50V E. CAP.	
	C261	OE181MK-561Z	560PF 50V MYLAR CAP.	
	C262	OE181MK-561Z	560PF 50V MYLAR CAP.	
	C281	OCBB1MK-221Y	220PF 50V CER. CAP.	BS EF EN G
	C282	OCBB1MK-221Y	220PF 50V CER. CAP.	BS EF EN G
	C301	OCBB1MK-101Y	100PF 50V CER. CAP.	
	C302	OCBB1MK-101Y	100PF 50V CER. CAP.	
	C305	OCSS1KJ-880	88PF 50V CER. CAP.	
	C306	OCSS1KJ-880	88PF 50V CER. CAP.	
	C307	OE181MK-106	10MF 50V E. CAP.	
	C308	OE181MK-106	10MF 50V E. CAP.	
	C309	OE181MK-106	10MF 50V E. CAP.	
	C310	OE181MK-106	10MF 50V E. CAP.	
	C311	OE181MK-106	10MF 50V E. CAP.	
	C312	OE181MK-106	10MF 50V E. CAP.	
	C320	OCBB1MK-102	1000PF 50V CER. CAP.	
	C321	OE181MK-107	100MF 25V AL. E. CAP.	
	C322	OE181MK-107	100MF 25V AL. E. CAP.	
	C345	OE181MK-106	10MF 25V AL. E. CAP.	
	C371	OE181MK-106	10MF 50V E. CAP.	
	C372	OE181MK-106	10MF 50V E. CAP.	
	C373	OE181MK-106	10MF 50V E. CAP.	
	C374	OE181MK-106	10MF 50V E. CAP.	

■ Electrical Parts List (ENH-296)

A	Item	Parts Number	Description	Area
	C381	QFV81KJ-474M	0.47MF 50V THIN FILM CA	
	C382	QFV81KJ-474M	0.47MF 50V THIN FILM CA	
	C383	QFLB1KJ-563	0.056MF 50V WTLAR CAP.	
	C384	QFLB1KJ-563	0.056MF 50V WTLAR CAP.	
	C385	QFLB1KJ-822	8200PF 50V WTLAR CAP.	
	C386	QFLB1KJ-822	8200PF 50V WTLAR CAP.	
	C389	QFLB1KJ-333	0.033MF 50V WTLAR CAP.	
	C390	QFLB1KJ-333	0.033MF 50V WTLAR CAP.	
	C295	QETB1EM-107	100NF 25V AL E. CAP	
	C296	QETB1EM-107	100NF 25V AL E. CAP	
	C701	EETB1OM-226E	22NF 18V E. CAP.	
	C702	EETB1OM-226E	22NF 18V E. CAP.	
	C703	QCS21KJ-880A	88PF 50V CER. CAP	
	C704	QCS21KJ-880A	88PF 50V CER. CAP.	
	C705	QCS21KJ-101A	100PF 50V CER. CAP	BS EF EM 0
	C706	QCS21KJ-101A	100PF 50V CER. CAP	BS EF EM 0
	C708	QFN81KJ-821	820PF 50V WTLAR CAP.	
	C710	QFN81KJ-821	820PF 50V WTLAR CAP.	
	C711	QCS21KJ-100	10PF 50V CER. CAP.	
	C712	QCS21KJ-100	10PF 50V CER. CAP	
	C713	EETB1OM-225E	22NF 18V E. CAP.	
	C714	EETB1OM-225E	22NF 18V E. CAP.	
	C721	QCS21KJ-225A	22PF 50V CER. CAP.	
	C722	QCS21KJ-225A	22PF 50V CER. CAP.	
	C723	QCS21KJ-880A	88PF 50V CER. CAP.	
	C724	QCS21KJ-880A	88PF 50V CER. CAP.	
	C725	QCS21KJ-880A	88PF 50V CER. CAP.	
	C726	QCS21KJ-880A	88PF 50V CER. CAP.	
	C727	QFN31KJ-103Z	0.01MF 50V WTLAR CAP.	
	C728	QFN31KJ-103Z	0.01MF 50V WTLAR CAP.	
	C761	QFN81KJ-880	88PF 50V POLYPROP. F1	
	C762	QFN81KJ-880	88PF 50V POLYPROP. F1	
	C763	QFN81KJ-880	88PF 50V POLYPROP. F1	
	C764	QFN81KJ-880	88PF 50V POLYPROP. F1	
	C773	QFN31KJ-4732N	0.047MF 50V WTLAR CAP.	
	C774	QFN31KJ-4732N	0.047MF 50V WTLAR CAP.	
	C781	QFVC1KJ-1042N	0.1MF 50V METAL WTLAR	
	C782	QFVC1KJ-1042N	0.1MF 50V METAL WTLAR	
	C783	QFVC1KJ-1042N	0.1MF 50V METAL WTLAR	
	C784	QFVC1KJ-1042N	0.1MF 50V METAL WTLAR	
	C801	EEB5000-475E	4700NF E. CAP.	
	C802	EEB5000-475E	4700NF E. CAP.	
	C811	EETB1OM-227E	220NF 50V AL E. CAP	
	C812	EETB1OM-227E	220NF 50V AL E. CAP	
	C843	QFN82AJ-104	0.1MF 100V WTLAR CAP.	
	C844	QFN82AJ-104	0.1MF 100V WTLAR CAP.	
	C845	QFN82AJ-104	0.1MF 100V WTLAR CAP.	
	C846	QFN82AJ-104	0.1MF 100V WTLAR CAP.	
	C861	QETB1EM-105	18F 50V AL E. CAP.	
	C862	QETB1EM-225E	22NF 50V E. CAP.	
	C864	QETB1EM-478	47MF 18V AL E. CAP.	
	C865	QCS11KJ-471Z	470PF 50V CER. CAP.	BS EF EM 0
		RES1570R5		
	R101	GRD181J-471	470 1/8W CARBON RES.	
	R102	GRD181J-471	470 1/8W CARBON RES.	
	R103	GRD181J-473	47K 1/8W CARBON RES.	
	R104	GRD181J-473	47K 1/8W CARBON RES.	
	R105	GRD181J-474	470K 1/8W CARBON RES.	
	R106	GRD181J-474	470K 1/8W CARBON RES.	
	R107	GRD181J-350	35K 1/8W CARBON RES.	
	R108	GRD181J-350	35K 1/8W CARBON RES.	
	R109	GRD187J-511	510 1/8W CARBON RES.	
	R110	GRD187J-511	510 1/8W CARBON RES.	
	R111	GRD181J-101	100 1/8W CARBON RES.	
	R112	GRD181J-101	100 1/8W CARBON RES.	
	R113	GRD181J-104	100K 1/8W CARBON RES.	
	R114	GRD181J-104	100K 1/8W CARBON RES.	
	R121	GRD181J-103	10K 1/8W CARBON RES.	
	R122	GRD181J-103	10K 1/8W CARBON RES.	

B	Item	Parts Number	Description	Area
	R201	GRD181J-222	2.2K 1/8W CARBON RES.	
	R202	GRD181J-222	2.2K 1/8W CARBON RES.	
	R203	GRD181J-273	27K 1/8W CARBON RES.	
	R204	GRD181J-273	27K 1/8W CARBON RES.	
	R211	GRD181J-913	91K 1/8W CARBON RES.	
	R212	GRD181J-913	91K 1/8W CARBON RES.	
	R213	GRD181J-303T	30K 1/8W CARBON RES.	
	R214	GRD181J-303T	30K 1/8W CARBON RES.	
	R217	GRD181J-331	330 1/8W CARBON RES.	
	R218	GRD181J-331	330 1/8W CARBON RES.	
	R221	GRD181J-331	330 1/8W CARBON RES.	
	R222	GRD181J-331	330 1/8W CARBON RES.	
	R223	GRD181J-123	12K 1/8W CARBON RES.	
	R224	GRD181J-123	12K 1/8W CARBON RES.	
	R235	GRD181J-104	100K 1/8W CARBON RES.	
	R236	GRD181J-104	100K 1/8W CARBON RES.	
	R241	GRD14CJ-3315Z	330 1/4W UNF. CARBON R	
	R242	GRD14CJ-3315Z	330 1/4W UNF. CARBON R	
	R255	GRD187J-223	22K 1/8W CARBON RES.	
	R256	GRD181J-223	22K 1/8W CARBON RES.	
	R261	GRD181J-103	10K 1/8W CARBON RES.	
	R262	GRD181J-103	10K 1/8W CARBON RES.	
	R263	GRD181J-103	10K 1/8W CARBON RES.	
	R264	GRD181J-103	10K 1/8W CARBON RES.	
	R265	GRD181J-104	100K 1/8W CARBON RES.	
	R266	GRD181J-104	100K 1/8W CARBON RES.	
	R301	GRD181J-123	12K 1/8W CARBON RES.	
	R302	GRD181J-123	12K 1/8W CARBON RES.	
	R305	GRD181J-123	12K 1/8W CARBON RES.	
	R306	GRD181J-123	12K 1/8W CARBON RES.	
	R331	GRD14CJ-3315Z	330 1/4W UNF. CARBON R	
	R332	GRD14CJ-3315Z	330 1/4W UNF. CARBON R	
	R343	GRD181J-105	1K 1/8W CARBON RES.	
	R344	GRD181J-102	1K 1/8W CARBON RES.	
	R345	GRD181J-104	100K 1/8W CARBON RES.	
	R357	GRD181J-103	10K 1/8W CARBON RES.	
	R358	GRD181J-103	10K 1/8W CARBON RES.	
	R371	GRD181J-101	100 1/8W CARBON RES.	
	R372	GRD181J-101	100 1/8W CARBON RES.	
	R373	GRD181J-104	100K 1/8W CARBON RES.	
	R374	GRD181J-104	100K 1/8W CARBON RES.	
	R375	GRD187J-223	22K 1/8W CARBON RES.	
	R376	GRD187J-223	22K 1/8W CARBON RES.	
	R381	GRD187J-332	3.3K 1/8W CARBON RES.	
	R382	GRD187J-332	3.3K 1/8W CARBON RES.	
	R384	GRD187J-332	3.3K 1/8W CARBON RES.	
	R385	GRD181J-350	3.5K 1/8W CARBON RES.	
	R386	GRD181J-350	3.5K 1/8W CARBON RES.	
	R388	GRD181J-103	10K 1/8W CARBON RES.	
	R390	GRD181J-103	10K 1/8W CARBON RES.	
	R391	GRD181J-474	470K 1/8W CARBON RES.	
	R392	GRD181J-474	470K 1/8W CARBON RES.	
	R393	GRD181J-391	390 1/8W CARBON RES.	
	R394	GRD181J-391	390 1/8W CARBON RES.	
A	R395	GRD14CJ-1015	100 1/4W UNF. CARBON R	
Δ	R396	GRD14CJ-1015	100 1/4W UNF. CARBON R	
	R522	GRD181J-104	100K 1/8W CARBON RES.	
	R523	GRD181J-473	4.7K 1/8W CARBON RES.	
	R524	GRD181J-475	4.7K 1/8W CARBON RES.	
	R527	GRD181J-105	1K 1/8W CARBON RES.	
	R528	GRD181J-105	1K 1/8W CARBON RES.	
	R701	ER0004J-221Z	220 CARBON RES.	
	R702	ER0004J-221Z	220 CARBON RES.	
	R703	ER0004J-104	100K CARBON RES.	
	R704	ER0004J-104	100K CARBON RES.	
Δ	R705	GRD14CJ-1015	100 1/4W UNF. CARBON R	
Δ	R706	GRD14CJ-1015	100 1/4W UNF. CARBON R	
	R707	GRD14CJ-1215Z	120 1/4W UNF. CARBON R	

# AX-F3000

## ■ Electrical Parts List (ENH-298)

A	Item	Part Number	Description	Area
	R708	ORD14CJ-121SX	120 1/2W UNF. CARBON R	
	R709	ORD161J-101	100 1/8W CARBON RES.	
	R710	ORD161J-101	100 1/8W CARBON RES.	
	R711	ERD004J-104	100K CARBON RES.	
	R712	ERD004J-104	100K CARBON RES.	
	R713	ERD004J-182Z	1.8K CARBON RES.	
	R714	ERD004J-182Z	1.8K CARBON RES.	
Δ	R715	ORV144F-2201A	2.2K 1/4W CONST. METAL	
Δ	R716	ORV144F-2201A	2.2K 1/4W CONST. METAL	
Δ	R717	ORV144F-2701	2.7K 1/4W CONST. METAL	
Δ	R718	ORV144F-2701	2.7K 1/4W CONST. METAL	
Δ	R719	ORV144F-2702	2.7K 1/4W CONST. METAL	
Δ	R720	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R724	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R725	ORD14CJ-500S	50 1/4W UNF. CARBON R	
Δ	R726	ORD14CJ-500S	50 1/4W UNF. CARBON R	
	R727	ORD167J-33Z	3.3K 1/8W CARBON RES.	
	R728	ORD167J-33Z	3.3K 1/8W CARBON RES.	
	R729	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
	R730	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
Δ	R731	ORV144F-2702	2.7K 1/4W CONST. METAL	
Δ	R732	ORV144F-2702	2.7K 1/4W CONST. METAL	
Δ	R735	ORD14CJ-221S	220 1/4W UNF. CARBON R	
Δ	R736	ORD14CJ-221S	220 1/4W UNF. CARBON R	
Δ	R737	ORD14CJ-101S	100 1/4W UNF. CARBON R	
Δ	R738	ORD14CJ-101S	100 1/4W UNF. CARBON R	
	R751	OVPE601-501	500 0.15W TRIMMER RES.	
	R752	OVPE601-501	500 0.15W TRIMMER RES.	
	R755	ERT-D2WFL351S	350 1/4W NEGATIVE TME	
	R756	ERT-D2WFL351S	350 1/4W NEGATIVE TME	
	R757	ORD161J-101	100 1/8W CARBON RES.	
	R758	ORD161J-101	100 1/8W CARBON RES.	
	R759	ORD161J-471	470 1/8W CARBON RES.	
	R760	ORD161J-471	470 1/8W CARBON RES.	
	R761	ORD161J-391	390 1/8W CARBON RES.	
	R762	ORD161J-391	390 1/8W CARBON RES.	
Δ	R763	ORD14CJ-122SX	1.2K 1/4W UNF. CARBON R	
Δ	R764	ORD14CJ-122SX	1.2K 1/4W UNF. CARBON R	
Δ	R765	ORD14CJ-101S	100 1/4W UNF. CARBON R	
Δ	R766	ORD14CJ-101S	100 1/4W UNF. CARBON R	
	R767	ORD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	
	R768	ORD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	
	R769	ORD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	
	R770	ORD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	
Δ	R771	ERF032K-R7Z	0.22 3W CEM. RES.	
Δ	R772	ERF032K-R7Z	0.22 3W CEM. RES.	
Δ	R777	ORD14CJ-476SX	47 1/4W UNF. CARBON R	
Δ	R778	ORD14CJ-470SX	47 1/4W UNF. CARBON R	
Δ	R779	ORD14CJ-470SX	47 1/4W UNF. CARBON R	
Δ	R780	ORD14CJ-470SX	47 1/4W UNF. CARBON R	
Δ	R781	ORD125J-100	10 1/2W UNF. CARBON R	
Δ	R782	ORD125J-100	10 1/2W UNF. CARBON R	
Δ	R783	OR0022J-100A	10 2W OXIDE METAL	
Δ	R784	OR0022J-100A	10 2W OXIDE METAL	
	R785	OR0010J-R21X	820 1W OXIDE METAL	
	R786	OR0010J-R21X	820 1W OXIDE METAL	
Δ	R789	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R790	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R791	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R792	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R793	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
Δ	R794	ORD14CJ-471SX	470 1/4W UNF. CARBON R	
	R795	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
	R796	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
	R797	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
	R798	ORD14CJ-331SX	330 1/4W UNF. CARBON R	
Δ	R811	ORD14CJ-330SX	33 1/4W UNF. CARBON R	
Δ	R812	ORD14CJ-330SX	33 1/4W UNF. CARBON R	
	R901	ORD161J-104	100K 1/8W CARBON RES.	

A	Item	Part Number	Description	Area
	R902	ORD167J-R7Z	8.2K 1/8W CARBON RES.	
	R903	ORD167J-27Z	2.7K 1/8W CARBON RES.	
	R904	ORD167J-27Z	2.7K 1/8W CARBON RES.	
	R905	ORD167J-15Z	15K 1/8W CARBON RES.	
	R906	ORD167J-15Z	15K 1/8W CARBON RES.	
	R907	ORD167J-22Z	22K 1/8W CARBON RES.	
	R908	ORD167J-22Z	22K 1/8W CARBON RES.	
	R909	ORD161J-100	10K 1/8W CARBON RES.	
	R910	ORD167J-33Z	3.3K 1/8W CARBON RES.	
	R911	ORD161J-100	10K 1/8W CARBON RES.	
	R912	ORD161J-47Z	47K 1/8W CARBON RES.	
	R913	ORD161J-100	10K 1/8W CARBON RES.	
	R914	ORD161J-104	100K 1/8W CARBON RES.	
	R915	ORD161J-47Z	47K 1/8W CARBON RES.	
	R916	ORD161J-100	10K 1/8W CARBON RES.	
	R917	ORD161J-22Z	2.2K 1/8W CARBON RES.	
	R921	ORD161J-56Z	56K 1/8W CARBON RES.	
	R922	ORD161J-47Z	47K 1/8W CARBON RES.	
	R924	ORD161J-100	10K 1/8W CARBON RES.	
	R931	OR0010J-471X	470 1W OXIDE METAL	BS EF EM G UB US D1
Δ	R931	OR0022J-201A	200 2W OXIDE METAL	G J
	R933	ORD161J-22Z	2.2K 1/8W CARBON RES.	
		OTHERS		
		ENH10582-102	PRINTED BOARD	
		E61360-03Z	FUSE LABEL	G
		E61360-03Z	FUSE LABEL	J
	J201	EMH001V-406B	PIV JACK	
	J202	EMH001V-406A	JACK BOARD ASSY	
	L781	EL00001-1R0	INDUCTOR	
	L782	EL00001-1R0	INDUCTOR	
	S510	ESPD001-023M	TACT SWITCH	
	OW001	EW3284-004	SOCKET WIRE ASSY	
	OW201	EW7145-003Z	SOCKET ASSY	
	OW202	EW5109-006B	CONNECT TERMINAL	
	OW203	EW5109-003B	CONNECT TERMINAL	
	OW212	EW3296-1916	SOCKET WIRE ASSY	
	OW006	WMD0107-R06	WALL CONNECTOR	
	OW614	EW5163-012R	CONNECT TERMINAL	
	OW701	EW5140-015	CONNECT TERMINAL	
	OW711	EW7140-115R	CONNECT TERMINAL	
	OW901	EW7167-026R	CONNECT TERMINAL	
	OW902	EW7163-010	CONNECT TERMINAL	
	EP200	EW24002-002Z	EARTH PLATE	
	EP300	EW24002-003Z	EARTH PLATE	
	FS705	E3400-431	FELT SPACER	BS EF EM G
	FS706	E3400-431	FELT SPACER	BS EF EM G
	FS707	E3400-431	FELT SPACER	BS EF EM G
	FS708	E3400-431	FELT SPACER	BS EF EM G
	FT801	EW7331-003Z	FUSE CLIP	
	FT802	EW7331-003Z	FUSE CLIP	
	FT811	EW7331-003Z	FUSE CLIP	
	FT812	EW7331-003Z	FUSE CLIP	
	RY251	ESK3D24-21AF	RELAY	
	RY901	ESK7D24-21Z0	RELAY	

■ Electrical Parts List (ENB-241)

A	Item	Part Number	Description	Unit
		I C S		
	10351	LB1635-CV	I.C (DIO-OTHER)	
	10501	MM17120208H	I.C (MICRO-COMPUTER)	
	10502	MJHO29088A	I.C (O)	
		DIODES		
	0655	1SR139-200	SI. DIODE	
	0604	1SS119	SI. DIODE	
	0605	1SS119	SI. DIODE	
	0606	1SS119	SI. DIODE	
	0607	1SS119	SI. DIODE	
	0608	SLR-342MCA47	L.E.D.	
	0609	SLR-342MCA47	L.E.D.	
	0610	SLR-342MCA47	L.E.D.	
	0611	SLR-342MCA47	L.E.D.	
	0612	SLR-342MCA47	L.E.D.	
	0613	SLR-342MCA47	L.E.D.	
	0614	SLR-342MCA47	L.E.D.	BS
	0614	SLR-342MCA47	L.E.D.	C EF EN G J U MB US UT
	0615	SLR-342MCA47	L.E.D.	
	0616	SLR-342MCA47	L.E.D.	
	0617	SLR-342MCA47	L.E.D.	
	0618	SLR-342MCA47	L.E.D.	
	0619	SLR-342MCA47	L.E.D.	
	0620	SLR-342MCA47	L.E.D.	
▲	0611	11E2	SI. DIODE	
▲	0612	11E2	SI. DIODE	
▲	0613	11E2	SI. DIODE	
▲	0614	11E2	SI. DIODE	
	0615	1SR139-200	SI. DIODE	
	0616	1SR139-200	SI. DIODE	
	0617	1SR139-200	SI. DIODE	
	0621	1SS119	SI. DIODE	
	0622	1SS119	SI. DIODE	
	0623	WT25. 1J0	ZENER DIODE	
	0624	1SR139-200	SI. DIODE	
	0625	1SR139-200	SI. DIODE	
	0626	WT25.2JC	ZENER DIODE	
	0627	WT26. 2JC	ZENER DIODE	
	0629	1SS119	SI. DIODE	
	0630	1SS119	SI. DIODE	
	0631	1SS119	SI. DIODE	
	0631	WT25. 1JA1-77	ZENER DIODE	
	0633	WT25. 6JC	ZENER DIODE	
	0634	WT26. 8JC	ZENER DIODE	
	0635	WT26. 8JC	ZENER DIODE	
		TRANSISTORS		
	0351	2SC287B (B)	SI. TRANSISTOR	
	0352	2SC287A (B)	SI. TRANSISTOR	
	0503	D1C114Y5	DIGITAL TRANSISTOR	
	0522	D1C114Y5	DIGITAL TRANSISTOR	
	0523	D1C114Y5	DIGITAL TRANSISTOR	
	0524	D1A144E5	DIGITAL TRANSISTOR	
	0525	D1C114Y5	DIGITAL TRANSISTOR	
	0621	D1C114Y5	DIGITAL TRANSISTOR	
	0622	D1C114Y5	DIGITAL TRANSISTOR	
	0623	2SB1367 (E, F)	SI. TRANSISTOR	
	0624	2SD2637 (E, F)	SI. TRANSISTOR	
	0625	2SD2641 (E, F)	SI. TRANSISTOR	
	0626	2SC1740S (R, S)	SI. TRANSISTOR	
	0627	2SC1740S (R, S)	SI. TRANSISTOR	
▲	0654	2SD2394 (E, F)	SI. TRANSISTOR	
	0655	2SC1740S (R, S)	SI. TRANSISTOR	
	0656	2SC1740S (R, S)	SI. TRANSISTOR	
▲	0657	2SD2394 (E, F)	SI. TRANSISTOR	
	0658	2SC1775AV (F1)	SI. TRANSISTOR	
	0659	2SC1740S (R, S)	SI. TRANSISTOR	
	0660	2SC1740S (R, S)	SI. TRANSISTOR	
	0661	2SB1585 (L, F)	SI. TRANSISTOR	

A	Item	Part Number	Description	Unit
	0662	2SA872AV (E, F)	SI. TRANSISTOR	
	0663	2SA833LM (R, S)	SI. TRANSISTOR	
	0664	2SA833LM (R, S)	SI. TRANSISTOR	
	0665	D1A144E5	DIGITAL TRANSISTOR	
	0666	D1A144E5	DIGITAL TRANSISTOR	
	0667	D1C114E5	DIGITAL TRANSISTOR	
	0668	D1A144E5	DIGITAL TRANSISTOR	
		CAPACITORS		
	0310	0FV81HJ-153	0.015MF 50V NYLAR CAP.	
	0314	0FV81HJ-153	0.015MF 50V NYLAR CAP.	
	0315	0FV81HJ-124M	0.12MF 50V THIN FILM CA	
	0316	0FV81HJ-124M	0.12MF 50V THIN FILM CA	
	0317	0FV81HJ-124M	0.12MF 50V THIN FILM CA	
	0318	0FV81HJ-124M	0.12MF 50V THIN FILM CA	
	0355	0ETB1AM-47A	47NF 10V E. CAP.	
	0358	0CMB1E2-223	0.022MF 25V CER. CAP.	
	0501	0CVB1CM-103Y	0.01MF 16V CER. CAP.	
	0502	0CMB1E2-223	0.022MF 25V CER. CAP.	
	0503	0E181HM-225	2.2MF 50V AL. E. CAP.	
	0504	0CVB1CM-103Y	0.01MF 16V CER. CAP.	
	0505	EE20401-104	1000NF AL. E. CAP.	
	0506	0EX30JM-476	47NF 0.3V AL. E. CAP.	
	0507	0ETB1AM-227	220NF 10V E. CAP.	
	0508	0CMB1HM-471Y	470PF 50V CER. CAP.	
	0521	0ETB1CM-226	22MF 16V E. CAP.	
	0511	EE13513-228	2200NF ELECTRO	
	0512	EE13513-278	2700NF ELECTRO	
	0513	EE13513-278	2700NF ELECTRO	
	0816	0FV82AJ-104	0.1MF 100V NYLAR CAP.	
	0821	0ETB1HM-105	10MF 50V AL. E. CAP.	
	0822	0ETB1HM-227	220NF 50V E. CAP.	
	0823	0ETB1HM-227	220NF 50V E. CAP.	
	0824	0ETB1HM-226E	22MF 50V E. CAP.	
	0825	0ETB1HM-279E	27MF 50V E. CAP.	
	0826	0ETB1HM-475E	4.7MF 50V E. CAP.	
	0827	0ETB1HM-475E	4.7MF 50V E. CAP.	
	0851	0CVB1CM-103Y	0.01MF 16V CER. CAP.	
	0852	0ETB1CM-226	22MF 16V E. CAP.	
	0853	0ETB1CM-226	22MF 16V E. CAP.	
	0854	0CVB1CM-103Y	0.01MF 16V CER. CAP.	
	0855	0ETB1CM-226	22MF 16V E. CAP.	
	0856	0ETB1CM-226	22MF 16V E. CAP.	
	0857	0FV81HJ-103	0.01MF 50V NYLAR CAP.	
	0858	0ETB1CM-226	22MF 16V E. CAP.	
	0859	0ETB1CM-226	22MF 16V E. CAP.	
	0860	0FV81HJ-103	0.01MF 50V NYLAR CAP.	
	0861	0ETB1CM-226	22MF 16V E. CAP.	
	0862	0ETB1CM-226	22MF 16V E. CAP.	
	0863	0CMB1HM-561Y	560PF 50V CER. CAP.	BS EF EN G
	0864	0CMB1HM-561Y	560PF 50V CER. CAP.	BS EF EN G
	0865	0CS31KJ-4712	470PF 50V CER. CAP.	BS EF EN G
	0866	0CS21HJ-101A	100PF 50V CER. CAP.	
		RESISTORS		
	R067	0RD161J-392	3.9K 1/8W CARBON RES.	
	R068	0RD161J-392	3.9K 1/8W CARBON RES.	
	R069	0RD161J-132	1.3K 1/8W CARBON RES.	
	R070	0RD161J-132	1.3K 1/8W CARBON RES.	
	R071	0RD161J-132	1.3K 1/8W CARBON RES.	
	R072	0RD161J-132	1.3K 1/8W CARBON RES.	
	R073	0RD161J-392	3.9K 1/8W CARBON RES.	
	R074	0RD161J-392	3.9K 1/8W CARBON RES.	
	R075	0RD161J-472	4.7K 1/8W CARBON RES.	
	R076	0RD161J-472	4.7K 1/8W CARBON RES.	
	R077	0RD161J-472	4.7K 1/8W CARBON RES.	
	R078	0RD161J-221	226 1/8W CARBON RES.	
	R079	ER0004J-471	470 NETWORK RES.	
	R080	ER0004J-471	470 NETWORK RES.	
	R081	0RD161J-751	750 1/8W CARBON RES.	
	R082	0RD161J-751	750 1/8W CARBON RES.	
	R083	0RD161J-221	22K 1/8W CARBON RES.	

# AX-F3000

## ■ Electrical Parts List (ENB-241)

△	Item	Parts Number	Description	Area
	R509	QRD167J-580	58 1/8W CARBON RES.	
	R510	QRD161J-221	220 1/6W CARBON RES.	
	R511	QRD161J-101	100 1/6W CARBON RES.	
	R513	QRD161J-473	47K 1/6W CARBON RES.	
	R514	QRD161J-103	10K 1/6W CARBON RES.	
	R515	QRD161J-100	10K 1/6W CARBON RES.	
	R516	QRD161J-100	10K 1/6W CARBON RES.	
	R517	QRD161J-103	10K 1/6W CARBON RES.	
	R518	QRD161J-103	10K 1/6W CARBON RES.	
	R519	QRD161J-103	10K 1/6W CARBON RES.	
	R520	QRD161J-331	330 1/6W CARBON RES.	
	R521	QRD161J-331	330 1/6W CARBON RES.	
	R522	QRD161J-331	330 1/6W CARBON RES.	
	R523	QRD161J-103	10K 1/6W CARBON RES.	
	R524	QRD161J-102	1K 1/6W CARBON RES.	
	R525	QRD161J-221	220 1/6W CARBON RES.	
	R527	QRD161J-221	220 1/6W CARBON RES.	
	R582	QRD167J-272	2.7K 1/6W CARBON RES.	
	R621	QRD161J-103	10K 1/6W CARBON RES.	
	R622	QRD161J-103	10K 1/6W CARBON RES.	
	R623	QRD161J-102	1K 1/6W CARBON RES.	
	R624	QRD161J-472	4.7K 1/6W CARBON RES.	
△	R625	PTH61025A9487M	POSITIVE THE	
	R626	QRD167J-332	3.3K 1/6W CARBON RES.	
	R627	QRD167J-223	22K 1/6W CARBON RES.	
	R628	QRD161J-104	100K 1/6W CARBON RES.	
△	R631	QRD140J-2R75	2.7 1/4W UNF. CARBON R	C J
	R631	QRD140J-4R73X	4.7 1/4W UNF. CARBON R	BS EF EN G U UB US UT
△	R632	QRD140J-3R35	3.3 1/4W UNF. CARBON R	
	R633	QRD140J-1105X	11 1/4W CARBON RES.	BS EF EN G U UB US UT
△	R633	QRD140J-8R25	8.2 1/4W UNF. CARBON R	C J
△	R634	QRD140J-1005X	10 1/4W UNF. CARBON R	
	R657	QRD161J-331	330 1/6W CARBON RES.	
	R658	QRD167J-332	3.3K 1/6W CARBON RES.	
	R652	QRD161J-681	680 1/6W CARBON RES.	
	R653	QRD161J-120	12K 1/6W CARBON RES.	
	R655	QRD161J-512	5.1K 1/6W CARBON RES.	
	R656	QRD161J-122	1.2K 1/6W CARBON RES.	
	R657	QRD161J-202	2K 1/6W CARBON RES.	
	R658	QRD167J-152	1.5K 1/6W CARBON RES.	
	R659	QRD167J-153	15K 1/6W CARBON RES.	
	R660	QRD161J-392	3.9K 1/6W CARBON RES.	
	R661	QRD161J-182	1.8K 1/6W CARBON RES.	
	R662	QRD161J-222	2.2K 1/6W CARBON RES.	
	R663	QRD161J-102	1K 1/6W CARBON RES.	
	R664	QRD161J-182	1.8K 1/6W CARBON RES.	
	R665	QRD167J-153	15K 1/6W CARBON RES.	
	R666	QRD161J-392	3.9K 1/6W CARBON RES.	
	R667	QRD161J-182	1.8K 1/6W CARBON RES.	
	R668	QRD161J-222	2.2K 1/6W CARBON RES.	
	R669	QRD161J-102	1K 1/6W CARBON RES.	
	R670	QRD161J-182	1.8K 1/6W CARBON RES.	
	R681	QRD010J-100X	10 1W OXIDE METAL	C J
	R682	QRD010J-100X	10 1W OXIDE METAL	C J
	R999	QRD161J-100	10K 1/6W CARBON RES.	
	R1001	QRD140J-6R85X	6.8 1/4W UNF. CARBON R	C J
△	R1002	QRD140J-1005X	10 1/4W UNF. CARBON R	C J
	R1515	QRD120J-1R05X	1 1/2W UNF. CARBON R	C J
	VR000	QVDB94B-E15H	100K VARIABLE RE	
	VR021	QVJ881B-E54D	50K VARIABLE RE	
	VR022	QVJ881B-E54B	50K VARIABLE RE	
	VR023	QVJ881W-E54B	50K VARIABLE RE	
		OTHERS		
		ENW10581-102	PRINTED BOARD	
		E309629-001SS	LID HOLDER	
	J703	QMS3L10-04D	MICROPHONE JACK	
	J791	QMS3R80-EE05	HEADPHONE JACK	

△	Item	Parts Number	Description	Area
	L901	EOL4007-6R8T	INDUCTOR	
	L902	EOL4007-R56T	INDUCTOR	
	L903	EOL4007-3R3T	INDUCTOR	
	L904	EOL4007-R56T	INDUCTOR	
	L905	EOL4007-3R3T	INDUCTOR	
	L0001	EMV9519-001	LUG	BS EF EN G
	S501	ESPD001-023W	TACT SWITCH	
	S502	ESPD001-023W	TACT SWITCH	
	S503	ESPD001-023W	TACT SWITCH	
	S507	ESPD001-023W	TACT SWITCH	
	S508	ESPD001-023W	TACT SWITCH	
	S509	ESPD001-023W	TACT SWITCH	
	TW111	QRE350-1346HK	WIRE	BS EF EN G
	X501	ECX0060-000EM	CERAMIC RESONATOR	
	DN212	EMV293-0113	SOCKET WIRE ASSY	
	DN601	EMV7127-015	FEMALE CONNECTOR	
	DN602	EMV7123-013	CONNECT TERMINAL	
	DN603	EMV7127-011	JACK TERMINAL	
	DN604	EMV7163-012	CONNECT TERMINAL	
	DN605	EMV5159-010R	CONNECT TERMINAL	
	DN607	EMV7163-010	CONNECT TERMINAL	
	DN615	EMV7159-010	PIK PLUG	
	DN617	EMV5163-010R	CONNECT TERMINAL	
	DN911	EMV5167-128	CONNECT TERMINAL	
	DN912	EMV5163-010R	CONNECT TERMINAL	
	FW201	EWK350-16LS	CORD	
	FW006	EWK300-13LS	CORD	

## ■ Electrical Parts List (END-104)

△	Item	Parts Number	Description	Area
		CAPACITORS		
	C1011	QFYC1HJ-103ZM	0.01MF 50V METAL NYLAR	BS EF EM G
	C1012	QFYC1HJ-103ZM	0.01MF 50V METAL NYLAR	BS EF EM G
	C1015	QCS31HJ-471Z	470PF 50V CER. CAP.	BS EF EM G
	C1016	QCS31HJ-471Z	470PF 50V CER. CAP.	BS EF EM G
	C1017	QCS31HJ-471Z	470PF 50V CER. CAP.	BS EF EM G
		RESISTORS		
	R996	GRD181J-104	100K 1/8W CARBON RES.	U UB US UT
	R997	GRD181J-104	100K 1/8W CARBON RES.	U UB US UT
	R998	GRD181J-104	100K 1/8W CARBON RES.	U UB US UT
	R1011	GRD140J-4R75X	4.7 1/4W 1/4W UWF. CARBON R	BS EF EM G
	R1012	GRD140J-4R75X	4.7 1/4W 1/4W UWF. CARBON R	BS EF EM G
△	R1111	GRC128X-275EM	2.7M 1/2W COMPOSITION	C J
		OTHERS		
		EMW10600-002A	PRINTED BOARD	
		E8138G-024	FUSE LABEL	C J
		E67132-T2R5	FUSE LABEL	U UB US UT
		QWE882-19RR	VINYL WIRE	
		QWE883-19RR	VINYL WIRE	
		QWE888-19RR	VINYL WIRE	
	J702	EM800TV-408A	SPEAKER TERMINAL	
	S001	QSR8001-F01U	ROTARY SWITCH	U UB US UT
	CM011	EMV5138-004	PIN CONNECTOR	
	EP001	E70225-0035S	EARTH PLATE	
	EP002	E70225-0035S	EARTH PLATE	
	FS017	E3400-431	FELT SPACER	BS EF EM G
	FT001	EM67331-003Z	FUSE CLIP	
	F1002	EM67331-003Z	FUSE CLIP	U UB US UT
	F1011	EM67331-003Z	FUSE CLIP	
	F1022	EM67331-003Z	FUSE CLIP	U UB US UT
	T8001	EM24001-002Z	TAB	
	T8002	EM24001-002Z	TAB	





# PARTS LIST

## < XL-F3000 >

\* All printed circuit boards and its assemblies are not available as service parts.

### The Marks for Designated Areas


BS . . . the U. K.	C . . . Canada	EF . . . Continental Europe	EN . . . Scandinavia
G . . . Germany	J . . . the U. S. A.	UB . . . Hong Kong	U . . . Universal Type
US . . . Singapore	UT . . . Taiwan	No marks indicates all areas.	

- Contents -

General Exploded View and Parts List . . . . .	7-2
Loading Mechanism Ass'y and Parts List . . . . .	7-4
■ Grease Point . . . . .	7-4
CD Mechanism Ass'y and Parts List . . . . .	7-5
■ Grease Point . . . . .	7-5
Electrical Parts List . . . . .	7-6
(ENN-483) . . . . .	7-6

General Exploded View and Parts List

Block No. **M2M**

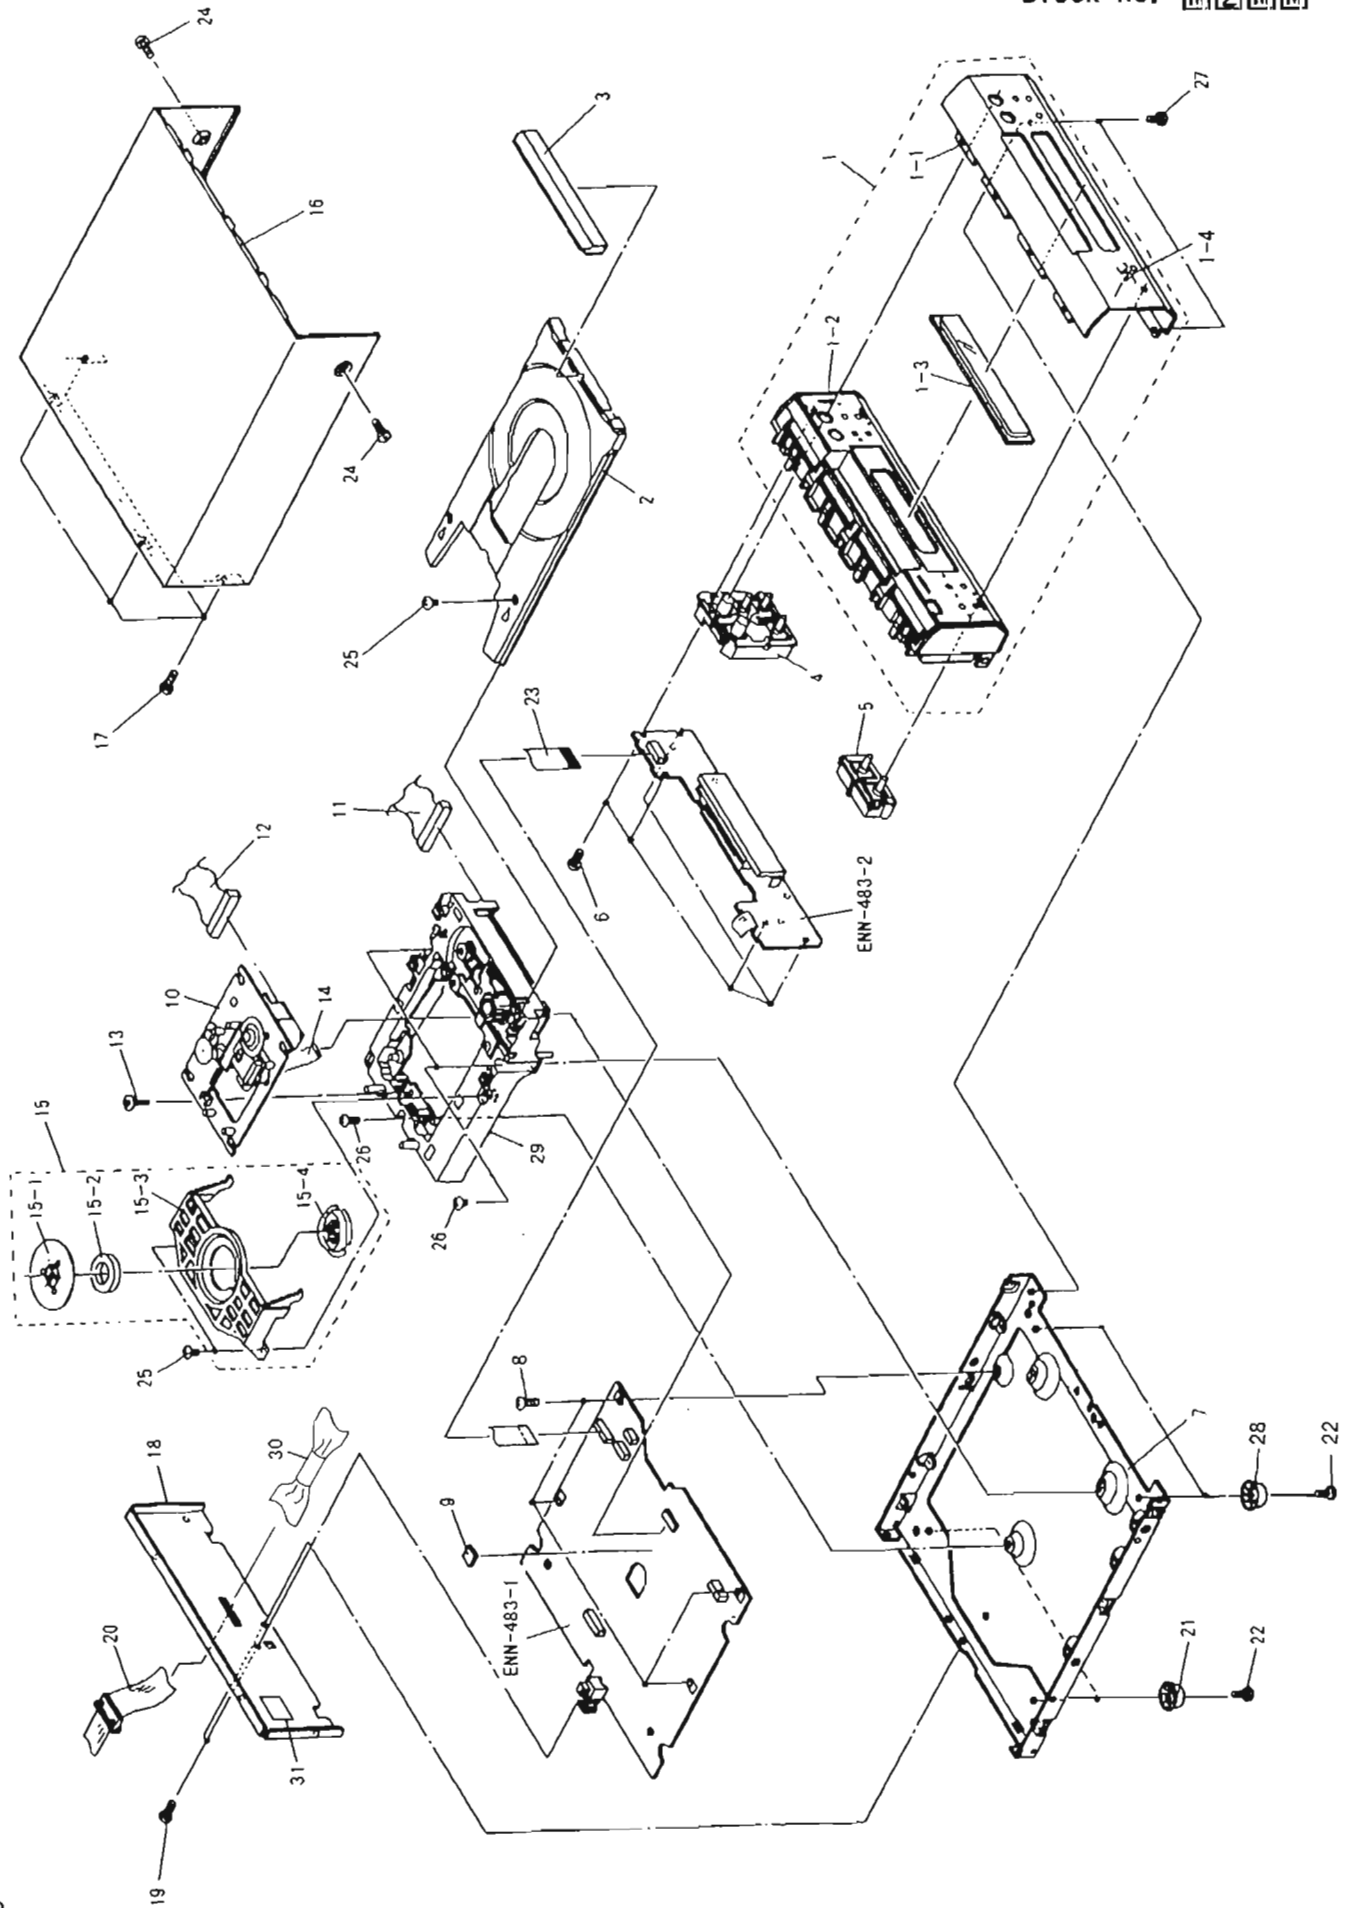

■ Parts List


Block No. **M2M**

△	Item	Parts Number	Parts Name	Qty	Description	Area
	1	EFP-XLF3000E(S)	FRONT PANEL ASSY	1		
	1-1	E208737-002	FRONT PANEL	1		
	1-2	E103087-003ST	FRONT BASE	1		
	1-3	E309614-002	WINDOW SCREEN	1		
	1-4	E408971-221	JVC MARK	1		
	2	E102358-332SS	CD TRAY	1		
	3	E309616-004SS	CD FITTING	1		
	4	E208703-003SS	PUSH BUTTON ASSY	1		
	5	E309613-003SS	PUSH BUTTON	1		
	6	SDSF2608Z	SCREW	5		
	7	E103088-001	CHASSIS BASE	1		
	8	SBST3006CC	TAPPING SCREW	4		
	9	E75898-001	SPACER	1		
	10	-----	CD MECHANISM ASSY	1	See Page 7-5	
	11	EWS265-8410	SOCKET WIRE	1		
	12	EWS266-8410	SOCKET WIRE	1		
	13	E406293-001	SPECIAL SCREW	1		
	14	VWF1015-09PPAV	FFC CABLE	1		
	15	E308837-005	CLAMPER ASSY	1		
	15-1	E308836-003	YDKE PLATE	1		
	15-2	E74897-002	MAGNET	1		
	15-3	E26756-002	CLAMPER BASE	1		
	15-4	E308835-001	CD CLAMPER	1		
	16	E208179-013(S)	METAL COVER	1		
	17	GBSG3008CC	TAPPING SCREW	4		
	18	E208705-003	REAR PANEL	1		J
		E208705-004	REAR PANEL	1		C
		E208705-005	REAR PANEL	1		BS EF EN G
		E208705-006	REAR PANEL	1		U UB US UT
	19	E73273-003	SPECIAL SCREW	2		
	20	EWP907-025	FLAT WIRE ASSY	1		
	21	E75281-010	FOOT	2		
	22	SBST3010Z	TAPPING SCREW	4		
	23	VWF1215-16TTB	FLAT WIRE ASSY	1		
	24	SDSG3008N	TAPPING SCREW	2		
	25	SBSF3008Z	TAPPING SCREW	3		
	26	SBST3008Z	TAPPING SCREW	3		
	27	SDSG3008CC	TAPPING SCREW	2		
	28	E75281-009	FOOT	2		
	29	-----	OD LOADING MECHANISM ASSY	1	See Page 7-4	
	30	ENZ8104-005	NOISE FILTER	1		
	31	E406507-001	CAUTION LABEL	1		Except J
	-	E75139-004	NAME LABEL	1		U
		E307570-001	NUMBER LABEL	1		J
		E81029-005	NUMBER LABEL	1		Except J

# Loading Mechanism Ass'y and Parts List

Block No. **M3M**

■ Grease Point

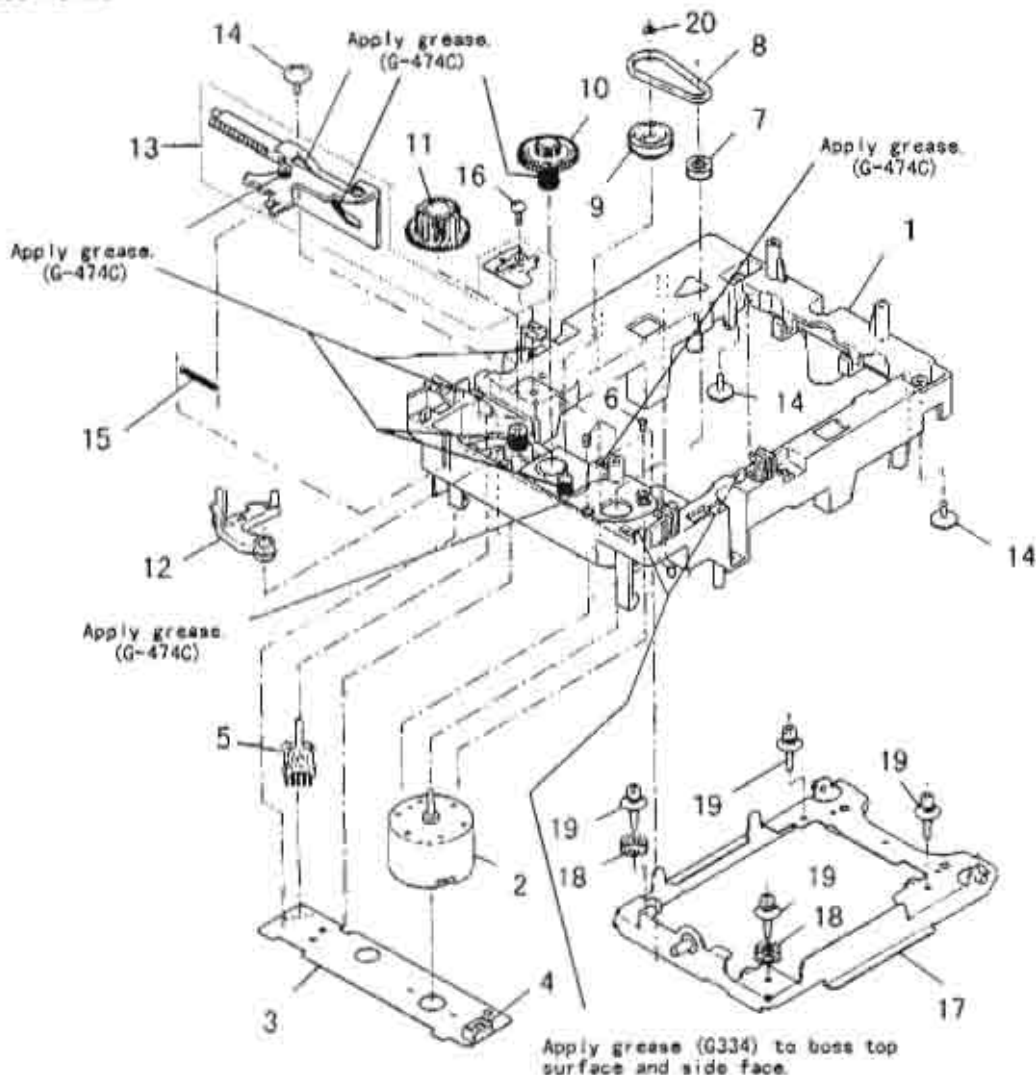

■ Parts List (Loading Mechanism Ass'y)


Block No. **M3M**

△	Item	Parts Number	Parts Name	Qty	Description	Area
	1	E102357-221	LOADING BASE	1		
	2	MWN-6F1LB8K	MOTOR	1		
	3	EMW10264-002	P. C. BOARD	1		
	4	EMV5109-005B	SP PLUG ASSY	1		
	5	ESS1200-002	SWITCH	1		
	6	SPSK26402	SCREW	2		
	7	E75984-221	MOTOR PULLEY	1		
	8	E75950-002	BELT	1		
	9	E75985-2215S	GEAR (1)	1		
	10	E75986-2215S	GEAR (2)	1		
	11	E75987-2215S	GEAR (3)	1		
	12	E307162-331	LEVER	1		
	13	E307252-331	CAM PLATE	1		
	14	E65923-003	SCREW	3		
	15	E75989-001	SPRING	1		
	16	S85F30082	SCREW	1		
	17	E307179-332	ELEVATOR BASE ASSY	1		
	18	E406871-001	SPRING	2		
	19	E406294-002	INSULATOR	4		
	20	E60912-0055S	SPEED NUT	1		

CD Mechanism Ass'y and Pars List

■ Grease Point

Block No. M4MM

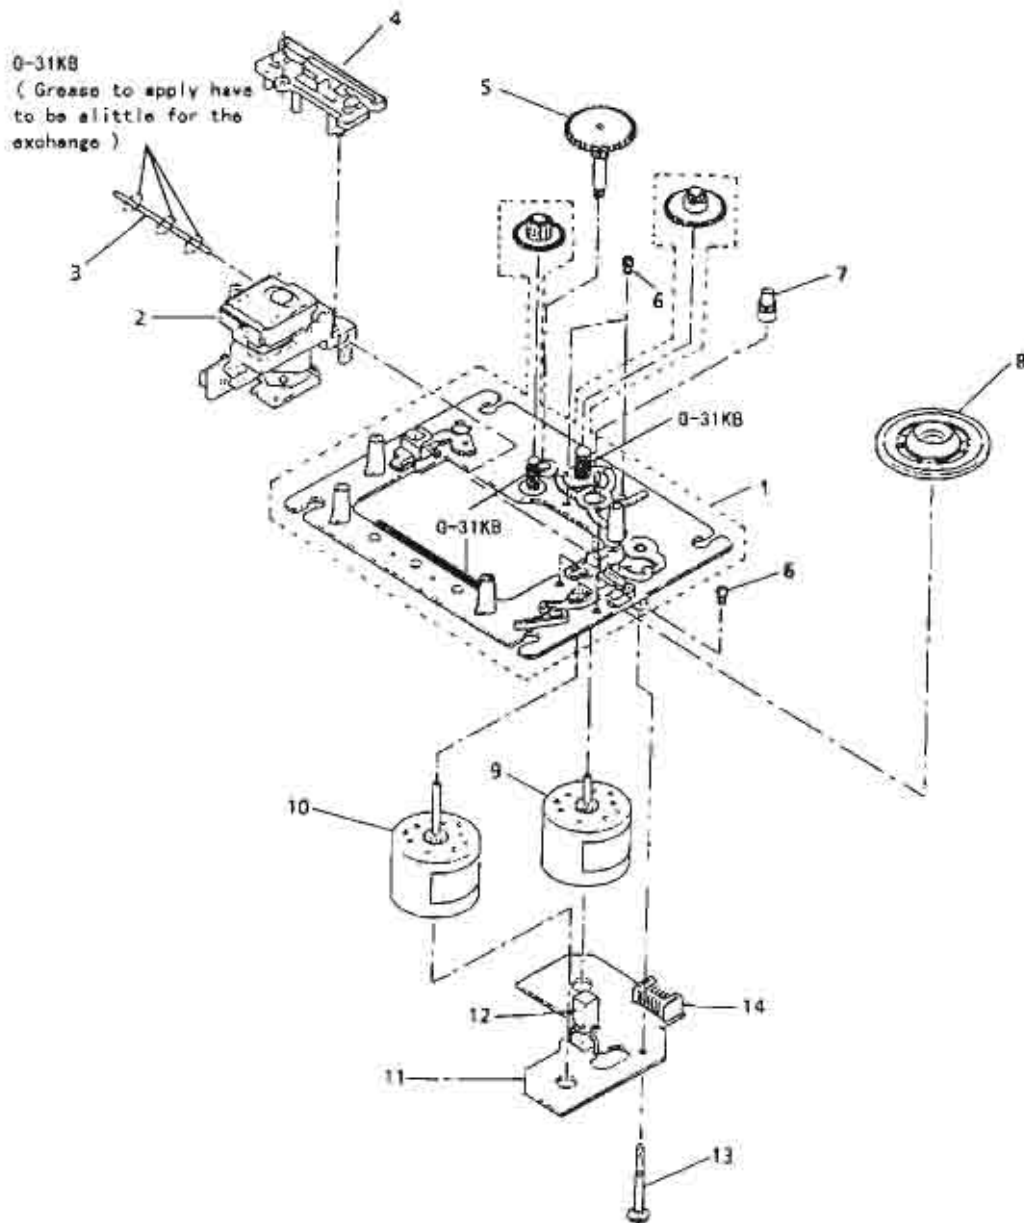

■ Parts List (CD Mechanism Ass'y)

Block No. M4MM

△	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	EP8-002A	MECHA. BASE ASSY	1		
	2	OPTIMA-6S	OPTICAL PICK UP	1		
	3	E407782-001	CD SHAFT	1		
	4	E307748-001	CD RACK	1		
	5	EP8-003A	MECHA GEAR	1		
	6	SDSP2003N	SCREW	3		
	7	E406750-001	PINION GEAR	1		
	8	E75807-302	TURN TABLE	1		
	9	E406784-001	FEED MOTOR	1		
	10	E406783-001	SPINDLE MOTOR	1		
	11	EMW10190-001 (S)	P. C. BOARD	1		
	12	ESB1100-005	LEAF SWITCH	1		
	13	E75832-001	SCREW	1		
	14	EMV5109-008B	CONN. TERMINAL	1	6PIN	

# XL-F3000

## Electrical Parts List (ENN-483)

Item	Part Number	Description	Area
	I. C. S		
IC401	MM71302B	I. C (DIGI-MOS)	
IC501	AM9503B	I. C (MONO-ANALOG)	
IC750	MM71303	I. C (DIGI-MOS)	
IC751	MM71303	I. C (MONO-ANALOG)	
IC801	BA6398FPX	I. C (MONO-ANALOG)	
IC851	MM71303	I. C (MONO-ANALOG)	
IC901	MM71302JX1	I. C (MICRO-COMPUTER)	
IC902	MM7281 (P. D)	I. C (DIGI-MOS)	
	DIODES		
D601	1SR139-200	SI. DIODE	
D751	1SS119	SI. DIODE	
D752	1SS119	SI. DIODE	
D871	1SS119	SI. DIODE	
D945	1SS119	SI. DIODE	
D946	1SS119	SI. DIODE	
D948	1SS119	SI. DIODE	
D949	1SS119	SI. DIODE	
D950	1SS119	SI. DIODE	
D971	SLR-342MCA47	L. E. O.	
	TRANSISTORS		
Q501	2SA930 (D. Y)	SI. TRANSISTOR	
Q611	2SA934 (D. R)	SI. TRANSISTOR	
Q612	DTA114TS	DIGITAL TRANSISTOR	
Q651	2SC2060 (D. R)	SI. TRANSISTOR	
Q852	2SA934 (D. R)	SI. TRANSISTOR	
Q945	DTA114YS	DIGITAL TRANSISTOR	
Q946	DTD114YS	DIGITAL TRANSISTOR	
Q971	DTG114YS	DIGITAL TRANSISTOR	
	CAPACITORS		
C401	OCMB1E2-223	0.022MF 25V CER. CAP.	
C402	OC20205-155	1.5MF 25V C. CAP.	
C404	OCMB1E2-223	0.022MF 25V CER. CAP.	
C405	OCBB1HK-471Y	470PF 50V CER. CAP.	
C406	EFH001J-223	METAL NYLAR	
C407	QFV81HJ-334	0.33MF 50V THIN FILM CA	
C408	OC20205-155	1.5MF 25V C. CAP.	
C409	QETB1AM-107Z	100NF 10V AL. E. CAP.	
C411	OC5B1HK-5R8Y	5.8PF 50V CER. CAP.	
C416	OC5B1HJ-270Y	27PF 50V CER. CAP.	
C417	OC5B1HJ-270Y	27PF 50V CER. CAP.	
C418	OC5B1HJ-270Y	27PF 50V CER. CAP.	
C421	OCMB1E2-223	0.022MF 25V CER. CAP.	
C422	QERS1AM-227	220NF 10V AL. E. CAP.	
C423	OCMB1E2-223	0.022MF 25V CER. CAP.	
C424	OCMB1E2-223	0.022MF 25V CER. CAP.	
C440	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C501	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C502	OC20205-155	1.5MF 25V C. CAP.	
C504	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C505	OCBB1HK-271Y	270PF 50V CER. CAP.	
C506	OC5B1HJ-470	47PF 50V CER. CAP.	
C507	OCMB1E2-223	0.022MF 25V CER. CAP.	
C509	OC3B1CM-222Y	2200PF 16V CER. CAP.	
C510	OCMB1E2-223	0.022MF 25V CER. CAP.	
C511	OCBB1HK-621	620PF 50V CER. CAP.	
C514	OCMB1E2-223	0.022MF 25V CER. CAP.	
C517	QFLB1HJ-103	0.01MF 50V NYLAR CAP.	
C518	QERS1HM-1050	1MF 50V AL. E. CAP.	
C519	QFV81HJ-104	0.1MF 50V THIN FILM CA	
C521	OCMB1E2-223	0.022MF 25V CER. CAP.	
C522	QERS1HM-104	10MF 35V AL. E. CAP.	
C524	QERS0JM-476	47NF 6.3V AL. E. CAP.	
C525	EFH001J-333	METAL NYLAR	
C526	OCBB1HK-101Y	100PF 50V CER. CAP.	
C527	QFV81HJ-273	0.027MF 50V THIN FILM CA	
C528	QFLB1HJ-472	4700PF 50V NYLAR CAP.	
C529	QFV81HJ-104	0.1MF 50V THIN FILM CA	
C530	OCBB1HK-102Y	1000PF 50V CER. CAP.	

Item	Part Number	Description	Area
C531	OCBB1HK-102Y	1000PF 50V CER. CAP.	
C541	OCBB1HK-331Y	330PF 50V CER. CAP.	
C601	QETB1CM-108	1000MF 16V AL. E. CAP.	
C602	QFLB1HJ-103	0.01MF 50V NYLAR CAP.	
C603	OC20205-155	1.5MF 25V C. CAP.	
C610	QETB1AM-477	470NF 10V E. CAP.	
C611	OCF21HP-223A	0.022MF 50V CER. CAP.	
C612	QETB0JM-338M	3300MF 6.3V AL. E. CAP.	
C621	OC20205-155	1.5MF 25V C. CAP.	
C701	QETB1AM-107	100NF 10V AL. E. CAP.	
C751	QFV81HJ-104	0.1MF 50V THIN FILM CA	
C752	QETB1AM-107E	100NF 10V E. CAP.	
C753	EFH001J-104	METAL NYLAR	
C754	OC20205-155	1.5MF 25V C. CAP.	
C755	QETB1AM-227E	220NF 10V E. CAP.	
C756	EFH001J-104	METAL NYLAR	
C757	QETB1AM-477E	470NF 10V E. CAP.	
C758	QETB1AM-477E	470NF 10V E. CAP.	
C759	OC300CN-100Y	10PF 50V CER. CAP.	
C760	OC300CN-100Y	10PF 50V CER. CAP.	
C768	QFN31HJ-392Z	3900PF 50V NYLAR CAP.	
C769	QFN31HJ-392Z	3900PF 50V NYLAR CAP.	
C770	OC521HJ-181A	180PF 50V CER. CAP.	
C771	OC521HJ-181A	180PF 50V CER. CAP.	
C772	QFN31HJ-333Z	0.033MF 50V NYLAR CAP.	
C773	QFN31HJ-333Z	0.033MF 50V NYLAR CAP.	
C774	EE25011-476E	47MF E. CAP.	
C775	EE25011-476E	47MF E. CAP.	
C776	QETB1HM-475E	4.7MF 50V E. CAP.	
C777	QETB1HM-475E	4.7MF 50V E. CAP.	
C780	OC20205-155	1.5MF 25V C. CAP.	
C801	QETB1CM-227	220NF 16V AL. E. CAP.	
C802	OCMB1E2-223	0.022MF 25V CER. CAP.	
C803	QFLB1HJ-273	0.027MF 50V NYLAR CAP.	
C804	QFLB1HJ-183	0.018MF 50V NYLAR CAP.	
C806	QFV81HJ-273	0.027MF 50V THIN FILM CA	
C851	QETB1CM-477M	470NF 16V E. CAP.	
C852	QETB1CM-477M	470NF 16V E. CAP.	
C854	OCMB1E2-223	0.022MF 25V CER. CAP.	
C855	OCMB1E2-223	0.022MF 25V CER. CAP.	
C856	OCF21HP-103A	0.01MF 50V CER. CAP.	
C876	QERS1HM-475	4.7MF 50V AL. E. CAP.	
C901	QERS1HM-475	4.7MF 50V AL. E. CAP.	
C902	QERS1HM-475	4.7MF 50V AL. E. CAP.	
C903	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C945	QERS1HM-226	22MF 50V AL. E. CAP.	
C946	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C947	OC20205-155	1.5MF 25V C. CAP.	
C948	QERS0JM-107	100NF 6.3V AL. E. CAP.	
C949	OCMB1E2-223	0.022MF 25V CER. CAP.	
C950	OCBB1HK-331Y	330PF 50V CER. CAP.	
	RESISTORS		
R402	GRD181J-124	120K 1/8W CARBON RES.	
R403	GRD181J-155	1.5K 1/8W CARBON RES.	
R404	GRD181J-104	100K 1/8W CARBON RES.	
R405	GRD181J-104	100K 1/8W CARBON RES.	
R406	GRD181J-681	680 1/8W CARBON RES.	
R407	GRD181J-471	470 1/8W CARBON RES.	
R408	GRD181J-820	82 1/8W CARBON RES.	
R409	GRD181J-820	82 1/8W CARBON RES.	
R410	GRD181J-820	82 1/8W CARBON RES.	
R415	GRD181J-202	2.0 1/8W CARBON RES.	
R416	GRD181J-202	2.0 1/8W CARBON RES.	
R417	GRD181J-102	1K 1/8W CARBON RES.	
R418	GRD181J-101	100 1/8W CARBON RES.	
R419	GRD181J-102	1K 1/8W CARBON RES.	
R420	GRD181J-102	1K 1/8W CARBON RES.	
R421	GRD181J-102	1K 1/8W CARBON RES.	
R422	GRD181J-102	1K 1/8W CARBON RES.	

■ Electrical Parts List (ENN-483)

△	Item	Parts Number	Description	Area
	R424	QRD181J-182	1K 1/8W CARBON RES.	
	R425	QRD181J-182	1K 1/8W CARBON RES.	
	R426	QRD181J-182	1K 1/8W CARBON RES.	
	R427	QRD181J-182	1K 1/8W CARBON RES.	
	R428	QRD181J-182	1K 1/8W CARBON RES.	
	R430	QRD167J-152	1.5K 1/8W CARBON RES.	
	R504	QRD181J-114	110K 1/8W CARBON RES.	
	R505	QRD181J-272	27K 1/8W CARBON RES.	
	R507	QRD181J-104	100K 1/8W CARBON RES.	
	R509	QRD181J-103	10K 1/8W CARBON RES.	
	R510	QRD167J-154	150K 1/8W CARBON RES.	
	R511	QRD181J-394	390K 1/8W CARBON RES.	
	R512	QRD181J-913	91K 1/8W CARBON RES.	
	R513	QRD181J-562	5.6K 1/8W CARBON RES.	
	R514	QRD181J-822	8.2K 1/8W CARBON RES.	
	R518	QRD181J-121	120 1/8W CARBON RES.	
	R520	QRD181J-810Y	91 1/8W CARBON RES.	
	R524	QRD161J-470	47 1/8W CARBON RES.	
	R525	QRD181J-470	47 1/8W CARBON RES.	
	R526	QRD181J-470	47 1/8W CARBON RES.	
	R527	QRD181J-992	2.2 1/8W CARBON RES.	
	R521	QRD151J-125	1.2W 1/8W CARBON RES.	
△	R601	PTN1025AR4R7M	POSITIVE TRE	Except J
△	R601	QRD12CJ-4R75	4.7 1/2W UNF. CARBON R	J
	R609	QRD181J-331	330 1/8W CARBON RES.	
	R611	QRD181J-472	4.7K 1/8W CARBON RES.	
	R612	QRD181J-821	820 1/8W CARBON RES.	
	R612	QRD181J-472	4.7K 1/8W CARBON RES.	
	R701	QRD181J-2R2	2.2 1/8W CARBON RES.	
	R750	QRD181J-221	220 1/8W CARBON RES.	
	R751	QRD181J-101	100 1/8W CARBON RES.	
	R752	QRD181J-102	1K 1/8W CARBON RES.	
	R753	QRD181J-500	50 1/8W CARBON RES.	
	R754	QRD167J-560	56 1/8W CARBON RES.	
	R755	QRD181J-271	270 1/8W CARBON RES.	
	R756	QRD181J-101	100 1/8W CARBON RES.	
	R758	QRD181J-101	100 1/8W CARBON RES.	
	R760	ERD004J-1832	18K CARBON RES.	
	R761	ERD004J-1832	18K CARBON RES.	
	R762	ERD004J-2432	24K CARBON RES.	
	R763	ERD004J-2432	24K CARBON RES.	
	R764	ERD004J-1832	18K CARBON RES.	
	R765	ERD004J-1832	18K CARBON RES.	
	R766	ERD004J-2432	24K CARBON RES.	
	R767	ERD004J-2432	24K CARBON RES.	
	R768	QRD167J-882	8.8K 1/8W CARBON RES.	
	R769	QRD167J-882	8.8K 1/8W CARBON RES.	
	R772	QRD181J-262	2.6K 1/8W CARBON RES.	
	R773	QRD181J-382	3.8K 1/8W CARBON RES.	
	R774	QRD181J-183	18K 1/8W CARBON RES.	
	R775	QRD181J-183	18K 1/8W CARBON RES.	
	R776	QRD181J-182	1.8K 1/8W CARBON RES.	
	R777	QRD181J-182	1.8K 1/8W CARBON RES.	
	R780	QRD181J-560	56 1/8W CARBON RES.	
	R781	QRD181J-560	56 1/8W CARBON RES.	
	R784	QRD181J-182	18K 1/8W CARBON RES.	
	R785	QRD181J-183	18K 1/8W CARBON RES.	
	R786	QRD181J-271	270 1/8W CARBON RES.	
	R787	QRD181J-271	270 1/8W CARBON RES.	
	R801	QRD181J-821	820 1/8W CARBON RES.	
	R802	QRD167J-562	5.6K 1/8W CARBON RES.	
	R803	QRD181J-112	1.1K 1/8W CARBON RES.	
	R804	QRD167J-112	11K 1/8W CARBON RES.	
	R805	QRD181J-124	120W 1/8W CARBON RES.	
	R807	QRD167J-532	3.3K 1/8W CARBON RES.	
	R808	QRD181J-752	7.5K 1/8W CARBON RES.	
	R809	QRD181J-222	22K 1/8W CARBON RES.	
	R810	QRD181J-332	3.3K 1/8W CARBON RES.	
	R811	QRD167J-152	15K 1/8W CARBON RES.	

△	Item	Parts Number	Description	Area
	R812	QRD181J-752	7.5K 1/8W CARBON RES.	
	R813	QRD167J-751	750 1/8W CARBON RES.	
	R814	QRD181J-382	38K 1/8W CARBON RES.	
△	R851	QRD12CJ-4R75	4.7 1/2W UNF. CARBON R	
△	R852	QRD12CJ-4R75	4.7 1/2W UNF. CARBON R	
	R871	QRD181J-512	51K 1/8W CARBON RES.	
	R872	QRD181J-512	51K 1/8W CARBON RES.	
	R873	QRD181J-753	75K 1/8W CARBON RES.	
	R874	QRD181J-823	82K 1/8W CARBON RES.	
	R875	QRD181J-221	220 1/8W CARBON RES.	
	R876	QRD181J-884	880K 1/8W CARBON RES.	
	R877	QRD181J-182	18K 1/8W CARBON RES.	
	R904	QRD181J-472	4.7K 1/8W CARBON RES.	
	R905	QRD181J-472	4.7K 1/8W CARBON RES.	
	R906	QRD181J-472	4.7K 1/8W CARBON RES.	
	R907	QRD181J-472	4.7K 1/8W CARBON RES.	
	R945	QRD181J-473	47K 1/8W CARBON RES.	
	R946	QRD181J-821	820 1/8W CARBON RES.	
	R947	QRD181J-103	10K 1/8W CARBON RES.	
	R985	QRD181J-472	4.7K 1/8W CARBON RES.	
	R986	QRD181J-472	4.7K 1/8W CARBON RES.	
	R987	QRD181J-472	4.7K 1/8W CARBON RES.	
	R971	QRD181J-151	150 1/8W CARBON RES.	
		OTHERS		
		EMW10583-102	PRINTED BOARD	
	J701	SP1F32T	SP1ICAL JACK	
	K751	EN28101-002	F. BEADS	
	K752	EN28101-007	F. BEADS	
	K753	EN28101-007	F. BEADS	
	K756	EN28101-007	F. BEADS	
	K757	EN28101-001	F. BEADS	
	K910	EN28101-007	F. BEADS	
	K911	EN28101-007	F. BEADS	
	K912	EN28101-007	F. BEADS	
	K913	EN28101-007	F. BEADS	
	S904	ESPO001-023M	TACT SWITCH	
	S905	ESPO001-023M	TACT SWITCH	
	S906	ESPO001-023M	TACT SWITCH	
	S908	ESPO001-023M	TACT SWITCH	
	S912	ESPO001-023M	TACT SWITCH	
	S913	ESPO001-023M	TACT SWITCH	
	S914	ESPO001-023M	TACT SWITCH	
	K751	ECX0169-344EA	CRYSTAL	
	E901	EC30060-000EM	CERAMIC RESONATOR	
	DN102	EMV5109-008A	MALE CONNECTOR	
	DN103	EMV5109-008A	CONNECT TERMINAL	
	DN104	EMV7144-015R	CONNECT TERMINAL	
	DN601	EMV7541-013	CONNECT TERMINAL	
	DN701	EMV7123-015	MALE CONNECTOR	
	DN901	EMV7123-015R	MALE CONNECTOR	
	D1901	ELU0001-17K	FLUORESCENT DISPLAY TUBE	
	EP601	EM24002-0022	EARTH PLATE	
	EP602	EM24002-0022	EARTH PLATE	
	EP604	EM24002-0022	EARTH PLATE	
	FN901	F300692-0013T	FL HOLDER	
	FS901	E306805-075	FELT SPACER	
	FW900	EMR370-18LS	FLAT WIRE ASSY	
	J1701	EMV7145-0032	SOCKET ASSY	
	J1702	EMV7145-0042	SOCKET ASSY	
	SP401	VYH7853-002	I. C. SOCKET	
	SP501	VYH7853-008	P. W. BOARD HOLDER	
	SP750	VYH7853-002	I. C. SOCKET	
	SP901	VYH7853-002	I. C. SOCKET	





# PARTS LIST

## < TD-F3000 >

\* All printed circuit boards and its assemblies are not available as service parts.

### The Marks for Designated Areas


BS . . . the U. K.	C . . . Canada	EF . . . Continental Europe	EN . . . Scandinavia
G . . . Germany	J . . . the U. S. A.	UB . . . Hong Kong	U . . . Universal Type
US . . . Singapore	UT . . . Taiwan	No marks indicates all areas.	

### - Contents -

General Exploded View and Parts List . . . . .	8-2
Cassette Mechanism Ass'y and Parts List . . . . .	8-4
■ Grease Point . . . . .	8-4
Electrical Parts List . . . . .	8-6
(ENJ-097) . . . . .	8-6

General Exploded View and Parts List

Block No. **M5MM**

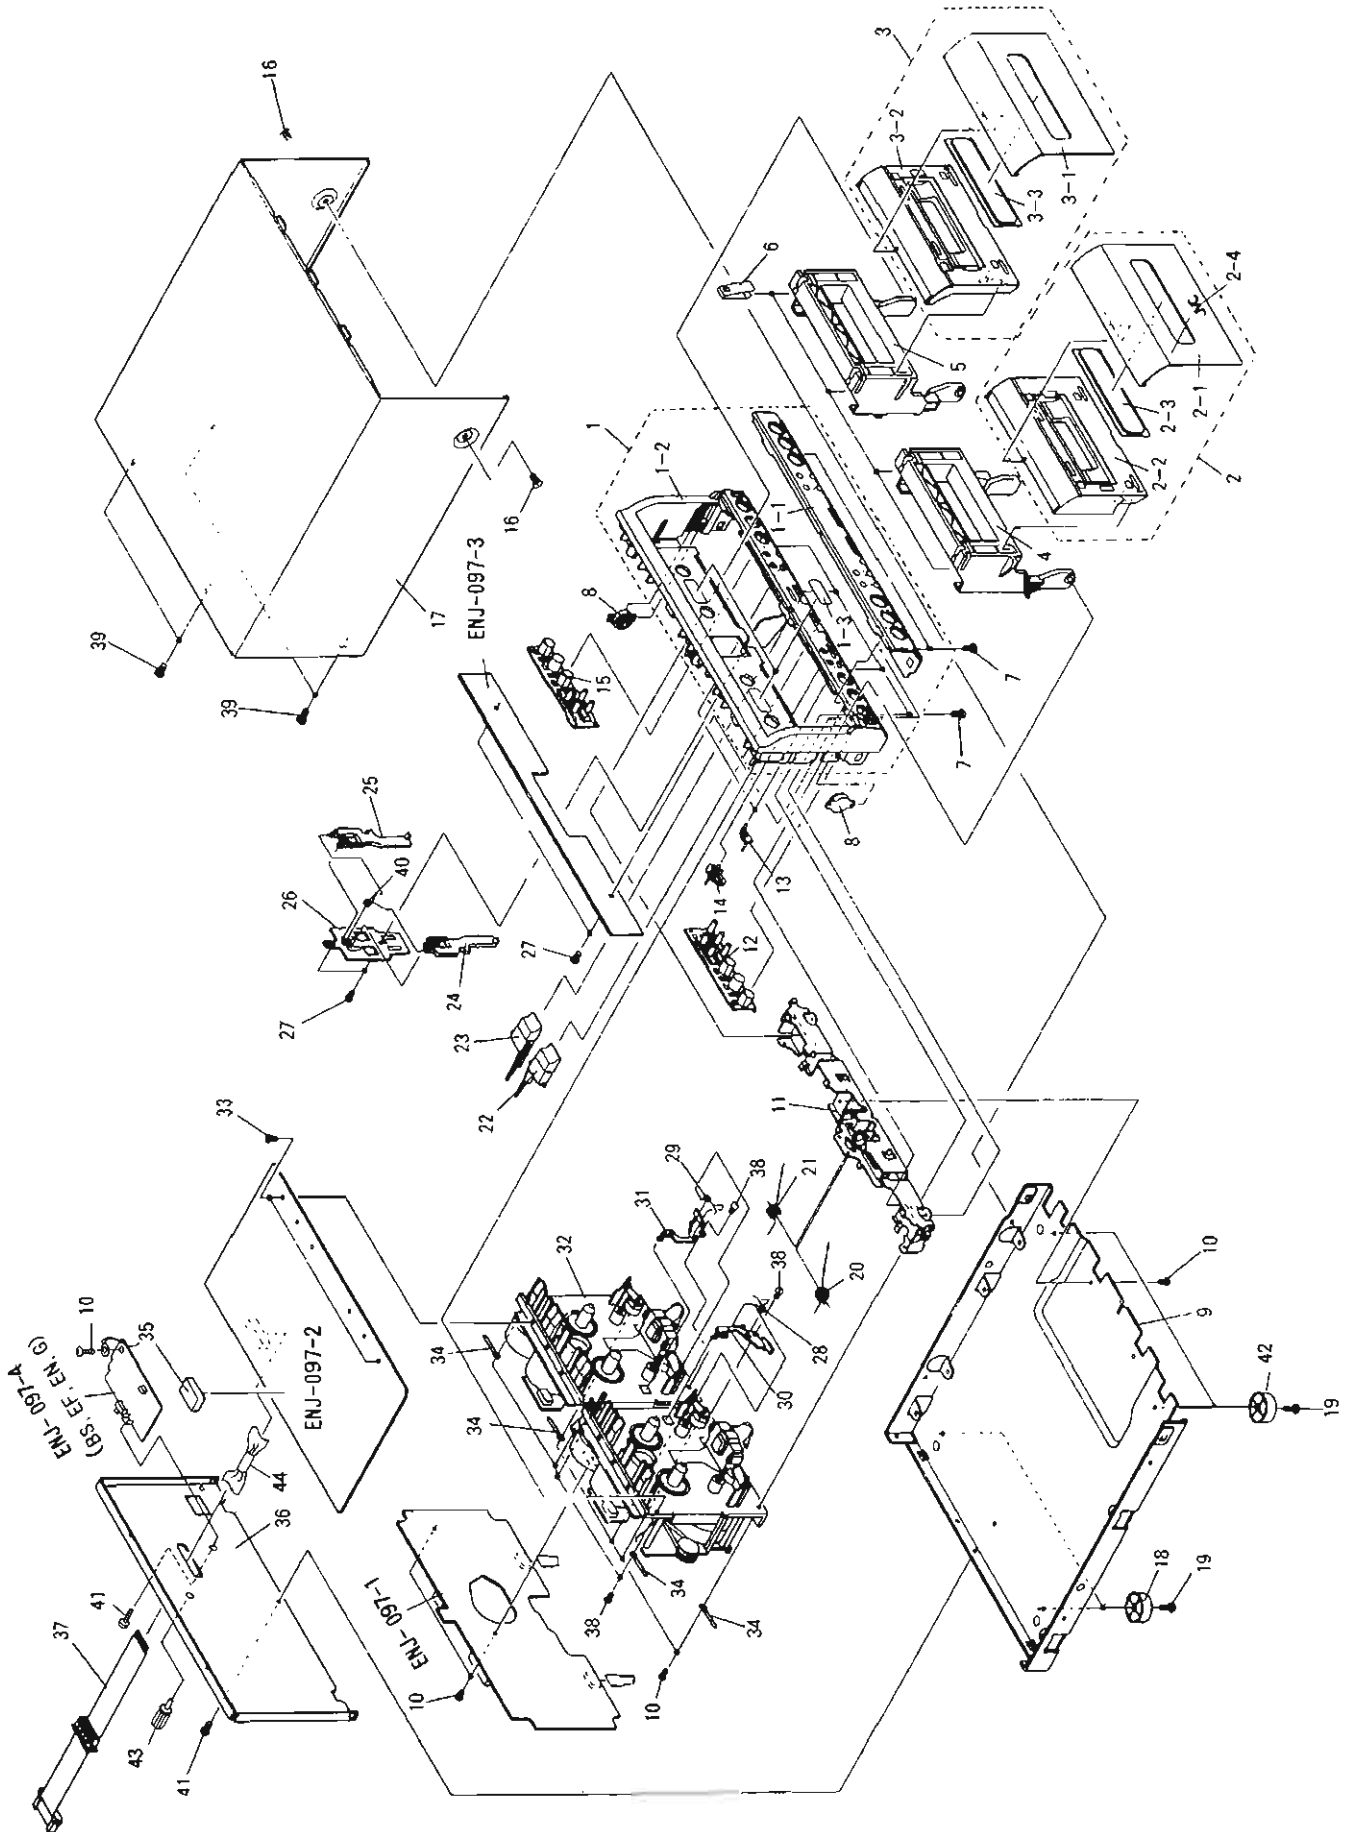

## ■ Parts List


Block No. **M5M4**

A	Item	Parts Number	Parts Name	Qty	Description	Area
	1	EFP-TDF3000E (S)	FRONT PANEL ASSY	1		
	1-1	E208709-003	FRONT PANEL	1		
	1-2	E103091-002ST	FRONT BASE	1		
	1-3	E69777-003	REFLECTION PLATE	2		
	2	E309621-002SA	CASSETTE LID ASSY	1		
	2-1	E309621-002	CASSETTE LID	1		
	2-2	E208720-002ST	LID BASE	1		
	2-3	E309625-001	CASSETTE LENS	1		
	2-4	E408971-221	JVC MARK	1		
	3	E309623-002SA	CASSETTE LID ASSY	1		
	3-1	E309623-002	CASSETTE LID	1		
	3-2	E208721-002ST	LID BASE	1		
	3-3	E309625-001	CASSETTE LENS	1		
	4	E207972-005SS	CASSETTE HOLDER	1		
	5	E207973-005SS	CASSETTE HOLDER	1		
	6	E408713-001	CASSETTE SPRING	4		
	7	SDST3008CC	SCREW	6		
	8	E304434-005	DAMPER ASSY	2		
	9	E103092-002	CHASSIS BASE	1		
	10	SBS13006Z	TAPPING SCREW	8		
	11	E208717-001	HOLDER BKT	1		
	12	E208711-003SS	PUSH BUTTON ASSY	1		
	13	E408911-001	INDICATOR	2	REC	
	14	E408910-001	INDICATOR	1	REV	
	15	E208714-003SS	PUSH BUTTON ASSY	1		
	16	SDSG3008M	TAPPING SCREW	2		
	17	E208174-010 (S)	METAL COVER	1		
	18	E75281-010	FOOT	2		
	19	SBS13010Z	TAPPING SCREW	4		
	20	FSKW4002-001	HOLDER SPRING	1		
	21	FSKW4003-001	HOLDER SPRING	1		
	22	E309619-003SS	EJECT BUTTON	1		
	23	E309620-003SS	EJECT BUTTON	1		
	24	E308681-002SS	EJECT LEVER	1		
	25	E308682-002SS	EJECT LEVER	1		
	26	E308683-002	EJECT GUIDE	1		
	27	S05F2608Z	SCREW	4		
	28	E407801-002	SPRING	1		
	29	E407802-002	SPRING	1		
	30	E407799-001	EJECT BRACKET	1		
	31	E407800-001	EJECT BRACKET	1		
	32	-----	CASSETTE MECHANISM ASSY	1	See page 8-4	
	33	S0512604Z	SCREW	2		
	34	PU49485-3	CORD CLAMP	4		
	35	E306805-058	SPACER	1		
	36	E208718-002	REAR PANEL	1		J
		E208718-003	REAR PANEL	1		G
		E208718-005	REAR PANEL	1		U UB US UT
		E208718-006	REAR PANEL	1		BS EF EN G
	37	EWP907-020	FLAT WIRE ASSY	1		
	38	SBSF3008Z	TAPPING SCREW	6		
	39	G8503008CC	TAPPING SCREW	4		
	40	E407798-002	SPRING	1		
	41	E73273-003	SPECIAL SCREW	1		BS EF EN G
	42	E75281-009	FOOT	2		
	43	E409257-001	EARTH TERMINAL	1		BS EF EN G
	44	EN28104-005	NOISE FILTER	1		BS EF EN G
	-	E61029-005	NUMBER LABEL	1		

Cassette Mechanism Ass'y and Parts List

Block No. **M6MM**

■ Grease Point

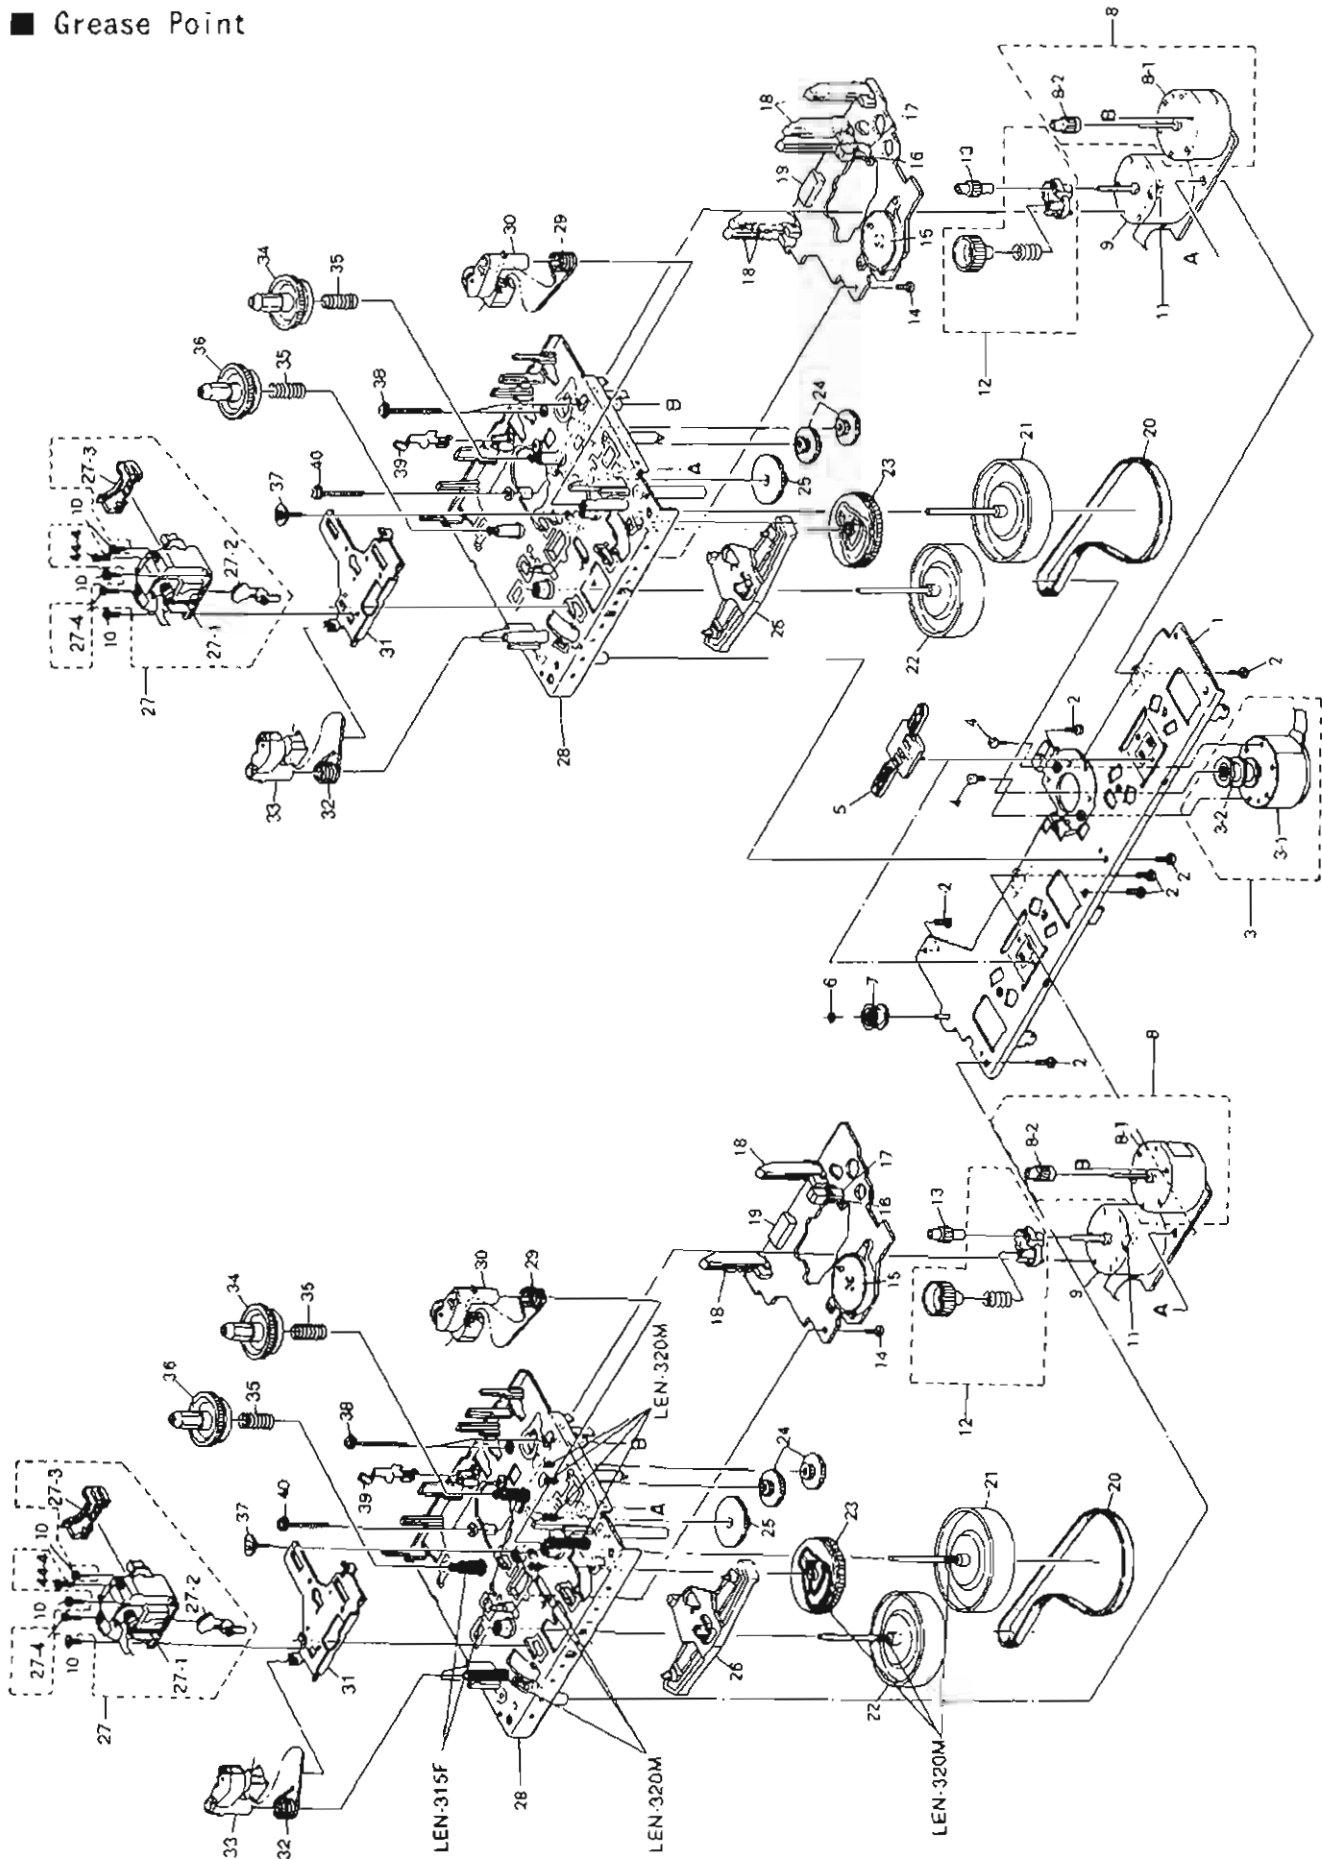

## ■ Parts List (Cassette Mechanism Ass'y)

Block No. **MGM**

△	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	VKM3775-00A	FM. BXT. ASS'Y	1		
	2	SPSP2603Z	WOOD SCREW	2		
	3	MS15U2LWA-SA1	DC MOTOR	1	CAPSTAN MOTOR ASSY	
	3-1	MS1-5U2LWA	DC MOTOR	1	CAPSTAN MOTOR	
	3-2	VXR4632-003MM	MOTOR PULLEY	1		
	4	SBSF2608Z	TAPPING SCREW	7		
	5	VKS5327-005MM	LOCK PLATE	2		
	6	WDL163525-4	WASHER	1		
	7	VXR4631-005MM	IDLER PULLEY	1		
	8	MSH5D257A-SA1	DC MOTOR	2	CAM MOTOR ASSY	
	8-1	MSH-5D257A	DC MOTOR	2	CAM MOTOR	
	8-2	VKS5433-001	ACTUATOR MOTOR GEAR	2		
	9	MMH-6F4RA3B	DC MOTOR	2	REEL MOTOR	
	10	SDSR2004Z	SCREW	6		
	11	VMC0234-R08	CONNECT TERMINAL	2	8PIN	
	12	VKS5430-000MM	F. F./REW. ARM	2		
	13	VKS5432-001	REEL MOTOR GEAR	2		
	14	SDS12612Z	SCREW	2		
	15	VKS3616-00A	CAM SWITCH	2		
	16	DN6851-H1	I.C(M)	2		
	17	VKS3630-001MM	I.C. PROTECTOR	2		
	18	MXS00220MVL0	CASSETTE SWITCH	7		
	19	VMC0234-R11	CONNECT TERMINAL	1	A MECHA. 11PIN	
		VMC0234-R14	CONNECT TERMINAL	1	B MECHA. 14PIN	
	20	VKB3001-064	DRIVE BELT	1	A MECHA.	
		VKB3001-065	DRIVE BELT	1	B MECHA.	
	21	VXF3184-00H	FLYWHEEL ASS'Y	2	RIGHT	
	22	VXF3186-00H	FLYWHEEL ASS'Y	2	LEFT	
	23	VKS2224-002	CONTROL CAM	2		
	24	VKS5454-001	ACTUATOR GEAR	4		
	25	VKS5455-001	ACTUATOR GEAR	2		
	26	VKS3627-002	PINCH ROLLER LEVER	2		
	27	VKS3628-00F	H. MOUNT ASS'Y	1	A MECHA.	
		VKS3629-00F	H. MOUNT ASS'Y	1	B MECHA.	
	27-1	VKW5128-001	HEAD SPRING	2		
	27-2	VKS3614-001	TURN OVER GEAR	2		
	27-3	VKS3654-001	HEAD MT. COVER	2		
	27-4	VKZ4629-003	SCREW	4		
	28	VKS1134-00B	CHASSIS BASE	2		
	29	VKW5045-003	PINCH ROLLER SPRING	2	RIGHT	
	30	VKP4227-00B	PINCH ROLLER	2	RIGHT	
	31	VKM3632-001	HEAD BASE	2		
	32	VKW5046-003	PINCH ROLLER SPRING	2	LEFT	
	33	VKP4229-00B	PINCH ROLLER	2	LEFT	
	34	VKS5428-00B	REEL DISK	2		
	35	VKW5043-001	TENSION SPRING	4		
	36	VKS3617-002	REEL DISK	2		
	37	VKZ4708-001	SPECIAL SCREW	2		
	38	VKZ4705-002	SCREW	4		
	39	VKY4670-001	CASSETTE SPRING	2		
	40	VKZ4705-001	SCREW	4		

■ Electrical Parts List (ENJ-097)

Δ	Item	Part Number	Description	Area
		I. C. S		
IC201	AM73346		I. C (MONO-ANALOG)	
IC202	BA8221X		I. C (MONO-ANALOG)	
IC203	MD614081SE39		I. C (MICRO-COMPUTER)	
IC204	LB1441		I. C (DIGI-OTHER)	
IC205	LB1441		I. C (DIGI-OTHER)	
IC206	LB1441		I. C (DIGI-OTHER)	
IC207	LB1441		I. C (DIGI-OTHER)	
IC208	BA1521BM		I. C (MONO-ANALOG)	
IC307	UPC1228MA		I. C (MONO-ANALOG)	
IC308	UPC1228MA		I. C (MONO-ANALOG)	
IC309	UPC1330MA		I. C (MONO-ANALOG)	
IC501	UPC1297CA		I. C (MONO-ANALOG)	
		DIODES		
0201	1SS119		SI. DIODE	
0202	1SS119		SI. DIODE	
0203	1SS119		SI. DIODE	
0204	1SS119		SI. DIODE	
0205	1SS119		SI. DIODE	
0206	1SS119		SI. DIODE	
0207	1SS119		SI. DIODE	
0208	1SS119		SI. DIODE	
0209	1SS119		SI. DIODE	
0210	1SS119		SI. DIODE	
0211	1SS119		SI. DIODE	
0212	1SS119		SI. DIODE	
0213	1SS119		SI. DIODE	
0214	1SS119		SI. DIODE	
0215	1SS119		SI. DIODE	
0216	1SS119		SI. DIODE	
0217	1N733-9AB		ZENER DIODE	
0218	1SS119		SI. DIODE	
0219	1SS119		SI. DIODE	
0220	1SS119		SI. DIODE	
0221	1SS119		SI. DIODE	
0222	1SS119		SI. DIODE	
0223	1SS119		SI. DIODE	
0224	1SS119		SI. DIODE	
0225	1SS119		SI. DIODE	
0226	1SS119		SI. DIODE	
0227	1SS119		SI. DIODE	
0228	1SS119		SI. DIODE	
0229	1SS119		SI. DIODE	BS EF EM G
0310	SLR-342MCA47		L. E. D.	
0311	SLR-342MCA47		L. E. D.	
0312	SLR-342MCA47		L. E. D.	
0313	SLR-342MCA47		L. E. D.	
0314	SLR-342VCF		L. E. D.	
0315	SLR-342VCF		L. E. D.	
0316	SLR-342VCF		L. E. D.	
0317	SLR-342VCF		L. E. D.	
		TRANSISTORS		
0301	D1C144ES		DIGITAL TRANSISTOR	
0302	D1C144ES		DIGITAL TRANSISTOR	
0303	2SC1740S (R, S)		SI. TRANSISTOR	
0304	2SC1740S (R, S)		SI. TRANSISTOR	
0305	2SD2144S (VM)		SI. TRANSISTOR	
0306	2SD2144S (VM)		SI. TRANSISTOR	
0307	D1A144ES		DIGITAL TRANSISTOR	
0308	D1C144ES		DIGITAL TRANSISTOR	
0309	D1C144ES		DIGITAL TRANSISTOR	
0310	D1A144ES		DIGITAL TRANSISTOR	
0311	2SC1740S (R, S)		SI. TRANSISTOR	
0312	2SC1740S (R, S)		SI. TRANSISTOR	
0313	D1C144ES		DIGITAL TRANSISTOR	
0314	2SA833AS		SI. TRANSISTOR	
0315	D1C144ES		DIGITAL TRANSISTOR	
0316	D1C144ES		DIGITAL TRANSISTOR	
0317	D1A144ES		DIGITAL TRANSISTOR	
0318	D1C144ES		DIGITAL TRANSISTOR	
0319	D1C144ES		DIGITAL TRANSISTOR	
0320	D1C144ES		DIGITAL TRANSISTOR	
0301	2SD2144S (VM)		SI. TRANSISTOR	
0302	2SD2144S (VM)		SI. TRANSISTOR	
0303	2SC1740S (R, S)		SI. TRANSISTOR	

Δ	Item	Part Number	Description	Area
0304		2SC1740S (R, S)	SI. TRANSISTOR	
0305		2SC1740S (R, S)	SI. TRANSISTOR	
0306		2SC1740S (R, S)	SI. TRANSISTOR	
0317		D1C144ES	DIGITAL TRANSISTOR	
0314		D1C144ES	DIGITAL TRANSISTOR	
0316		D1C144ES	DIGITAL TRANSISTOR	
0318		D1C144ES	DIGITAL TRANSISTOR	
0319		2SA833AS	SI. TRANSISTOR	
0320		2SA833AS	SI. TRANSISTOR	
0321		2SA933AS	SI. TRANSISTOR	
0322		2SA933AS	SI. TRANSISTOR	
0323		2SC1740S (R, S)	SI. TRANSISTOR	
0324		2SC1740S (R, S)	SI. TRANSISTOR	
0325		2SC1740S (R, S)	SI. TRANSISTOR	
0326		2SC1740S (R, S)	SI. TRANSISTOR	
0327		2SC1740S (R, S)	SI. TRANSISTOR	
0328		2SC945A	SI. TRANSISTOR	BS EF EM G
0329		D1A144ES	DIGITAL TRANSISTOR	BS EF EM G
0301		2SA934 (R, S)	SI. TRANSISTOR	
0302		D1C144ES	DIGITAL TRANSISTOR	
0304		D1C144ES	DIGITAL TRANSISTOR	
0305		D1C144ES	DIGITAL TRANSISTOR	
0306		D1C144ES	DIGITAL TRANSISTOR	
		CAPACITORS		
C201		OEK51HM-1050	1MF 50V AL. E. CAP.	
C202		OEK51HM-1050	1MF 50V AL. E. CAP.	
C203		OCB81CM-101Y	100PF 50V CER. CAP.	BS EF EM G
C204		OCB81CM-101Y	100PF 50V CER. CAP.	BS EF EM G
C205		OEK51HM-1050	1MF 50V AL. E. CAP.	
C206		OEK51HM-1050	1MF 50V AL. E. CAP.	
C207		OE181HM-108	10MF 50V E. CAP.	
C208		OE181HM-108	10MF 50V E. CAP.	
C209		OF181HJ-183	0.018MF 50V MYLAR CAP.	
C210		OF181HJ-183	0.018MF 50V MYLAR CAP.	
C211		OF181HJ-152	1500PF 50V MYLAR CAP.	
C212		OF181HJ-152	1500PF 50V MYLAR CAP.	
C213		OEK51HM-4740	0.47MF 50V AL. E. CAP.	
C214		OEK51HM-4740	0.47MF 50V AL. E. CAP.	
C215		OF181HJ-152	1500PF 50V MYLAR CAP.	
C216		OF181HJ-152	1500PF 50V MYLAR CAP.	
C217		OEK51HM-4740	0.47MF 50V AL. E. CAP.	
C218		OEK51HM-4740	0.47MF 50V AL. E. CAP.	
C219		OCB81CM-101Y	100PF 50V CER. CAP.	BS EF EM G
C220		OCB81CM-101Y	100PF 50V CER. CAP.	BS EF EM G
C221		OF181HJ-272	2700PF 50V MYLAR CAP.	
C222		OF181HJ-272	2700PF 50V MYLAR CAP.	
C223		OE181EM-108	10MF 25V AL. E. CAP.	
C224		OE181EM-108	10MF 25V AL. E. CAP.	
C225		OE181EM-108	10MF 25V AL. E. CAP.	
C226		OCB81CM-223	22MF 18V E. CAP.	
C227		OCB81CM-223	22MF 18V E. CAP.	
C228		OCB81CM-223	22MF 18V E. CAP.	
C229		OCB81CM-223	22MF 18V E. CAP.	
C230		OCB81CM-223	22MF 18V E. CAP.	
C231		OCB81CM-223	22MF 18V E. CAP.	
C232		OCB81CM-223	22MF 18V E. CAP.	
C233		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C234		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C235		OCB81EM-223	0.022MF 25V CER. CAP.	
C236		OCB81EM-223	0.022MF 25V CER. CAP.	
C237		OCB81EM-223	0.022MF 25V CER. CAP.	
C238		OE181EM-108	10MF 50V AL. E. CAP.	
C239		OE181EM-107	100MF 18V AL. E. CAP.	
C240		OCB81EM-223	0.022MF 25V CER. CAP.	
C241		OCB81EM-223	0.022MF 25V CER. CAP.	
C242		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C243		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C244		OCB81EM-223	0.022MF 25V CER. CAP.	
C245		OCB81EM-223	0.022MF 25V CER. CAP.	
C246		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C247		OCB81CM-103Y	0.01MF 18V CER. CAP.	
C248		OE181EM-223	2.2MF 50V AL. E. CAP.	
C249		OE181EM-223	2.2MF 50V AL. E. CAP.	

■ Electrical Parts List (ENJ-097)

△	Item	Parts Number	Description	Area
	C303	06XS1HM-225G	2.2NF 50V AL E. CAP.	
	C304	06XS1HM-2250	2.2NF 50V AL E. CAP.	
	C305	0CBB1HK-101Y	100PF 50V CER. CAP.	
	C306	0CBB1HK-101Y	100PF 50V CER. CAP.	
	C307	0CBB1HK-181Y	180PF 50V CER. CAP.	
	C308	0CBB1HK-181Y	180PF 50V CER. CAP.	
	C309	0ETB1EM-106	10NF 25V AL E. CAP.	
	C310	0ETB1EM-106	10NF 25V AL E. CAP.	
	C311	0CSB1HK-470	47PF 60V CER. CAP.	
	C312	0CSB1HK-470	47PF 60V CER. CAP.	
	C313	0ETB1CM-107	100NF 18V AL E. CAP.	
	C314	0ETB1CM-107	100NF 18V AL E. CAP.	
	C315	06XS1HM-1060	1NF 50V AL E. CAP.	
	C316	06XS1HM-1060	1NF 50V AL E. CAP.	
	C317	06XS1EM-106	10NF 25V AL E. CAP.	
	C318	0ETB1CM-107	100NF 18V AL E. CAP.	
	C319	0CF21HP-223A	0.022NF 50V CER. CAP.	BS EF EN G
	C320	0FLB1HK-582	6800PF 60V NYLAR CAP.	
	C321	0FLB1HK-322	3300PF 50V NYLAR CAP.	
	C322	0FLB1HK-322	3300PF 50V NYLAR CAP.	
	C323	0FLB1HK-183	0.018NF 50V NYLAR CAP.	
	C324	0FP31HM-472	4700PF 50V POLYPROP. F1	
	C327	0CBB1HK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C328	0CBB1EM-223	0.022NF 25V CER. CAP.	BS EF EN G
	C341	0FLB1HK-223	0.022NF 50V NYLAR CAP.	
	C342	0FLB1HK-223	0.022NF 50V NYLAR CAP.	
	C345	0FLB1HK-123	0.012NF 50V NYLAR CAP.	
	C346	0FLB1HK-123	0.012NF 50V NYLAR CAP.	
	C347	0FLB1HK-103	0.01NF 50V NYLAR CAP.	
	C348	0FLB1HK-103	0.01NF 50V NYLAR CAP.	
	C350	0ETB1CM-226	22NF 18V E. CAP.	
	C351	0CF21HP-473A	0.047NF 50V CER. CAP.	
	C352	0CF21HP-473A	0.047NF 50V CER. CAP.	
	C354	0ETB1CM-107	100NF 18V AL E. CAP.	
	C355	0ETB1HK-225	2.2NF 30V AL E. CAP.	
	C356	0ETB1HK-225	2.2NF 30V AL E. CAP.	
	C357	0FLB1HK-822	8200PF 50V NYLAR CAP.	
	C358	0FLB1HK-822	8200PF 50V NYLAR CAP.	
	C359	0ETB1AM-107	100NF 10V AL E. CAP.	
	C370	0ETB1AM-107	100NF 10V AL E. CAP.	
	C371	06XS1HM-2250	2.2NF 50V AL E. CAP.	
	C372	06XS1HM-2250	2.2NF 50V AL E. CAP.	
	C373	0ETB1EM-106	10NF 25V AL E. CAP.	
	C374	0ETB1CM-107	100NF 18V AL E. CAP.	
	C375	0CBB1HK-101Y	100PF 60V CER. CAP.	C J U UB US UT
		0CBB1HK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C376	0CBB1HK-101Y	100PF 50V CER. CAP.	C J U UB US UT
		0CBB1HK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C377	0CY31HK-1822	1800PF 60V CER. CAP.	
	C378	0CY31HK-1822	1800PF 60V CER. CAP.	
	C379	0CBB1HK-331Y	330PF 50V CER. CAP.	
	C380	0CBB1HK-331Y	330PF 50V CER. CAP.	
	C381	0ETB1CM-107	100NF 18V AL E. CAP.	
	C383	0ETB1HM-225	2.2NF 50V AL E. CAP.	
	C384	0ETB1HM-225	2.2NF 50V AL E. CAP.	
	C385	0FLB1HK-822	8200PF 50V NYLAR CAP.	
	C386	0FLB1HK-822	8200PF 50V NYLAR CAP.	
	C387	0ETB1AM-107	100NF 10V AL E. CAP.	
	C388	0ETB1AM-107	100NF 10V AL E. CAP.	
	C389	0ETB1HM-225	2.2NF 50V AL E. CAP.	
	C390	0ETB1HM-225	2.2NF 50V AL E. CAP.	
	C391	0ETB1EM-106	10NF 25V AL E. CAP.	
	C392	0ETB1CM-107	100NF 18V AL E. CAP.	
	C393	0CBB1HK-101Y	100PF 50V CER. CAP.	C J U UB US UT
		0CBB1HK-471Y	470PF 50V CER. CAP.	BS EF EN G
	C394	0CBB1HK-101Y	100PF 50V CER. CAP.	C J U UB US UT
		0CBB1HK-471Y	470PF 50V CER. CAP.	BS EF EN G

△	Item	Parts Number	Description	Area
	C395	0CXB1CM-182Y	1800PF 18V CER. CAP.	
	C396	0CXB1CM-182Y	1800PF 18V CER. CAP.	
	C397	0CBB1HK-331Y	330PF 50V CER. CAP.	
	C398	0CBB1HK-331Y	330PF 50V CER. CAP.	
	C501	0ETB1EM-106	10NF 25V AL E. CAP.	
	C502	0ETB1EM-106	10NF 25V AL E. CAP.	
	C503	0FPB1HM-821	820PF 50V POLYPROP. F1	
	C504	0FPB1HM-821	820PF 50V POLYPROP. F1	
	C506	0ETB1EM-106	10NF 25V AL E. CAP.	
	C507	0FLB1HK-103	0.01NF 50V NYLAR CAP.	
	C508	0FLB1HK-103	0.01NF 50V NYLAR CAP.	
	C509	0CF31HP-102Z	1000PF 50V CER. CAP.	
	C510	0CF31HP-102Z	1000PF 50V CER. CAP.	
	C511	0FLB1HK-223	0.022NF 50V NYLAR CAP.	
	C512	0FLB1HK-223	0.022NF 50V NYLAR CAP.	
	C513	0FLB1HK-323	0.032NF 50V NYLAR CAP.	
	C514	0FLB1HK-323	0.032NF 50V NYLAR CAP.	
	C515	0ETB1CM-107	100NF 18V AL E. CAP.	
	C516	0CS21HK-100	10PF 30V CER. CAP.	
	C525	0CBB1HK-101Y	100PF 50V CER. CAP.	
	C526	0CBB1HK-101Y	100PF 50V CER. CAP.	
	C541	0ETB1EM-106	10NF 25V AL E. CAP.	
	C991	0CYB1CM-103Y	0.01NF 18V CER. CAP.	
	C992	0CYB1CM-103Y	0.01NF 18V CER. CAP.	
		RESISTORS		
	R201	0RD161J-221	220 1/8W CARBON RES.	
	R202	0RD161J-221	220 1/8W CARBON RES.	
	R203	0RD161J-382	38K 1/8W CARBON RES.	
	R204	0RD161J-383	38K 1/8W CARBON RES.	
	R205	0RD161J-754	750K 1/8W CARBON RES.	
	R206	0RD161J-754	750K 1/8W CARBON RES.	
	R207	0RD161J-103	10K 1/8W CARBON RES.	
	R208	0RD161J-103	10K 1/8W CARBON RES.	
	R209	0RD167J-223	22K 1/8W CARBON RES.	
	R210	0RD167J-223	22K 1/8W CARBON RES.	
	R211	0RD161J-122	1.2K 1/8W CARBON RES.	
	R212	0RD161J-122	1.2K 1/8W CARBON RES.	
	R213	0RD161J-103	10K 1/8W CARBON RES.	
	R214	0RD161J-103	10K 1/8W CARBON RES.	
	R215	0RD161J-105	1M 1/8W CARBON RES.	
	R216	0RD161J-274	270K 1/8W CARBON RES.	
	R217	0RD161J-104	100K 1/8W CARBON RES.	
	R218	0RD161J-102	1K 1/8W CARBON RES.	
	R219	0RD161J-103	10K 1/8W CARBON RES.	
	R220	0RD167J-223	22K 1/8W CARBON RES.	
	R221	0RD161J-103	10K 1/8W CARBON RES.	
	R222	0RD161J-103	10K 1/8W CARBON RES.	
	R223	0RD161J-103	10K 1/8W CARBON RES.	
△	R224	0RD161J-1000X	10 1/4W UNF. CARBON R	
	R225	0RD167J-582	5.8K 1/8W CARBON RES.	
	R226	0RD167J-582	5.8K 1/8W CARBON RES.	
	R227	0RD161J-102	1K 1/8W CARBON RES.	
	R228	0RD161J-102	1K 1/8W CARBON RES.	
	R229	0RD167J-223	22K 1/8W CARBON RES.	
	R232	0RD161J-221	220 1/8W CARBON RES.	
	R233	0RD161J-105	1M 1/8W CARBON RES.	
	R234	0RD161J-221	220 1/8W CARBON RES.	
	R235	0RD161J-472	4.7K 1/8W CARBON RES.	
	R236	0RD161J-301	300 1/8W CARBON RES.	
	R237	0RD161J-301	300 1/8W CARBON RES.	
	R238	0RD161J-301	300 1/8W CARBON RES.	
	R239	0RD161J-301	300 1/8W CARBON RES.	
	R240	0RD161J-301	300 1/8W CARBON RES.	
	R241	0RD161J-301	300 1/8W CARBON RES.	
	R242	0RD161J-301	300 1/8W CARBON RES.	
	R243	0RD161J-301	300 1/8W CARBON RES.	
	R244	0RD161J-105	1M 1/8W CARBON RES.	





## ■ Electrical Parts List (ENJ-097)

△	Item	Parts Number	Description	Area
	VR514	QVP4803-003M	20K TRIMMER RES.	
		OTHERS		
		ENR10384-102	PRINTED BOARD	
	J303	VM00314-508	CONNECT TERMINAL	
	J304	VM00314-512	CONNECT TERMINAL	
	K303	EM28101-007	INDUCTOR	BS EF EN G
	L301	EX28002-012	OSCILLATOR COIL	
	L303	EOL2106-582	INDUCTOR	
	L304	EOL2106-552	INDUCTOR	
	L305	EOL2106-222	INDUCTOR	
	L308	EOL2106-222	INDUCTOR	
	L501	EN22500-001	OSCILLATOR COIL	
	L502	EN22500-001	OSCILLATOR COIL	
	P201	VM00234-F11	CONNECT TERMINAL	
	P202	VM00234-F14	CONNECT TERMINAL	
	P203	VM00234-F08	CONNECT TERMINAL	
	P204	VM00234-F08	CONNECT TERMINAL	
	P292	EW5142-908	CONNECT TERMINAL	
	P293	EW5142-908	CONNECT TERMINAL	
	P301	EW5132-008H	CONNECT TERMINAL	
	P304	EW5123-012H	CONNECT TERMINAL	
	P331	EW7155-108R	CONNECT TERMINAL	
	P333	EW7155-108R	CONNECT TERMINAL	
	P702	EW7145-0031	SOCKET ASSY	BS EF EN G
	S300	ESP0001-023M	TACT SWITCH	
	S301	ESP0001-023M	TACT SWITCH	
	S302	ESP0001-023M	TACT SWITCH	
	S303	ESP0001-023M	TACT SWITCH	
	S310	ESP0001-023M	TACT SWITCH	
	S311	ESP0001-023M	TACT SWITCH	
	S312	ESP0001-023M	TACT SWITCH	
	S313	ESP0001-023M	TACT SWITCH	
	S320	ESP0001-023M	TACT SWITCH	
	S321	ESP0001-023M	TACT SWITCH	
	S322	ESP0001-023M	TACT SWITCH	
	S330	ESP0001-023M	TACT SWITCH	
	S331	ESP0001-023M	TACT SWITCH	
	S332	ESP0001-023M	TACT SWITCH	
	S333	ESP0001-023M	TACT SWITCH	
	S941	QSS7A12-E01	SLIDE SWITCH	BS EF EN G
	BC292	EW329-A820	SOCKET WIRE ASSY	
	BC293	EW329-A820	SOCKET WIRE ASSY	
	CK221	EW7141-015	PIN CONNECTOR	
	CK701	EW7145-0042	SOCKET ASSY	
	EP302	E70225-002SS	EARTH PLATE	BS EF EN G
	FW701	ENR240-08L5	FLAT WIRE ASSY	
	FW702	ENR330-20L5	FLAT WIRE ASSY	BS EF EN G
	TR010	ENT015-002	TERMINAL WIRE	
	KT201	ECX0004-194RW	CERAMIC RESONATOR	



# PARTS LIST

## < FX-F3000 >

\* All printed circuit boards and its assemblies are not available as service parts.

### The Marks for Designated Areas

BS . . . the U. K.	C . . . Canada	EF . . . Continental Europe	EN . . . Scandinavia
G . . . Germany	J . . . the U. S. A.	UB . . . Hong Kong	U . . . Universal Type
US . . . Singapore	UT . . . Taiwan	No marks indicates all areas.	

- Contents -


General Exploded View and Parts List . . . . . 9-2

Electrical Parts List . . . . . 9-4

(ENA-177) . . . . . 9-4

# General Exploded View and Parts List

Block No. **M7M**

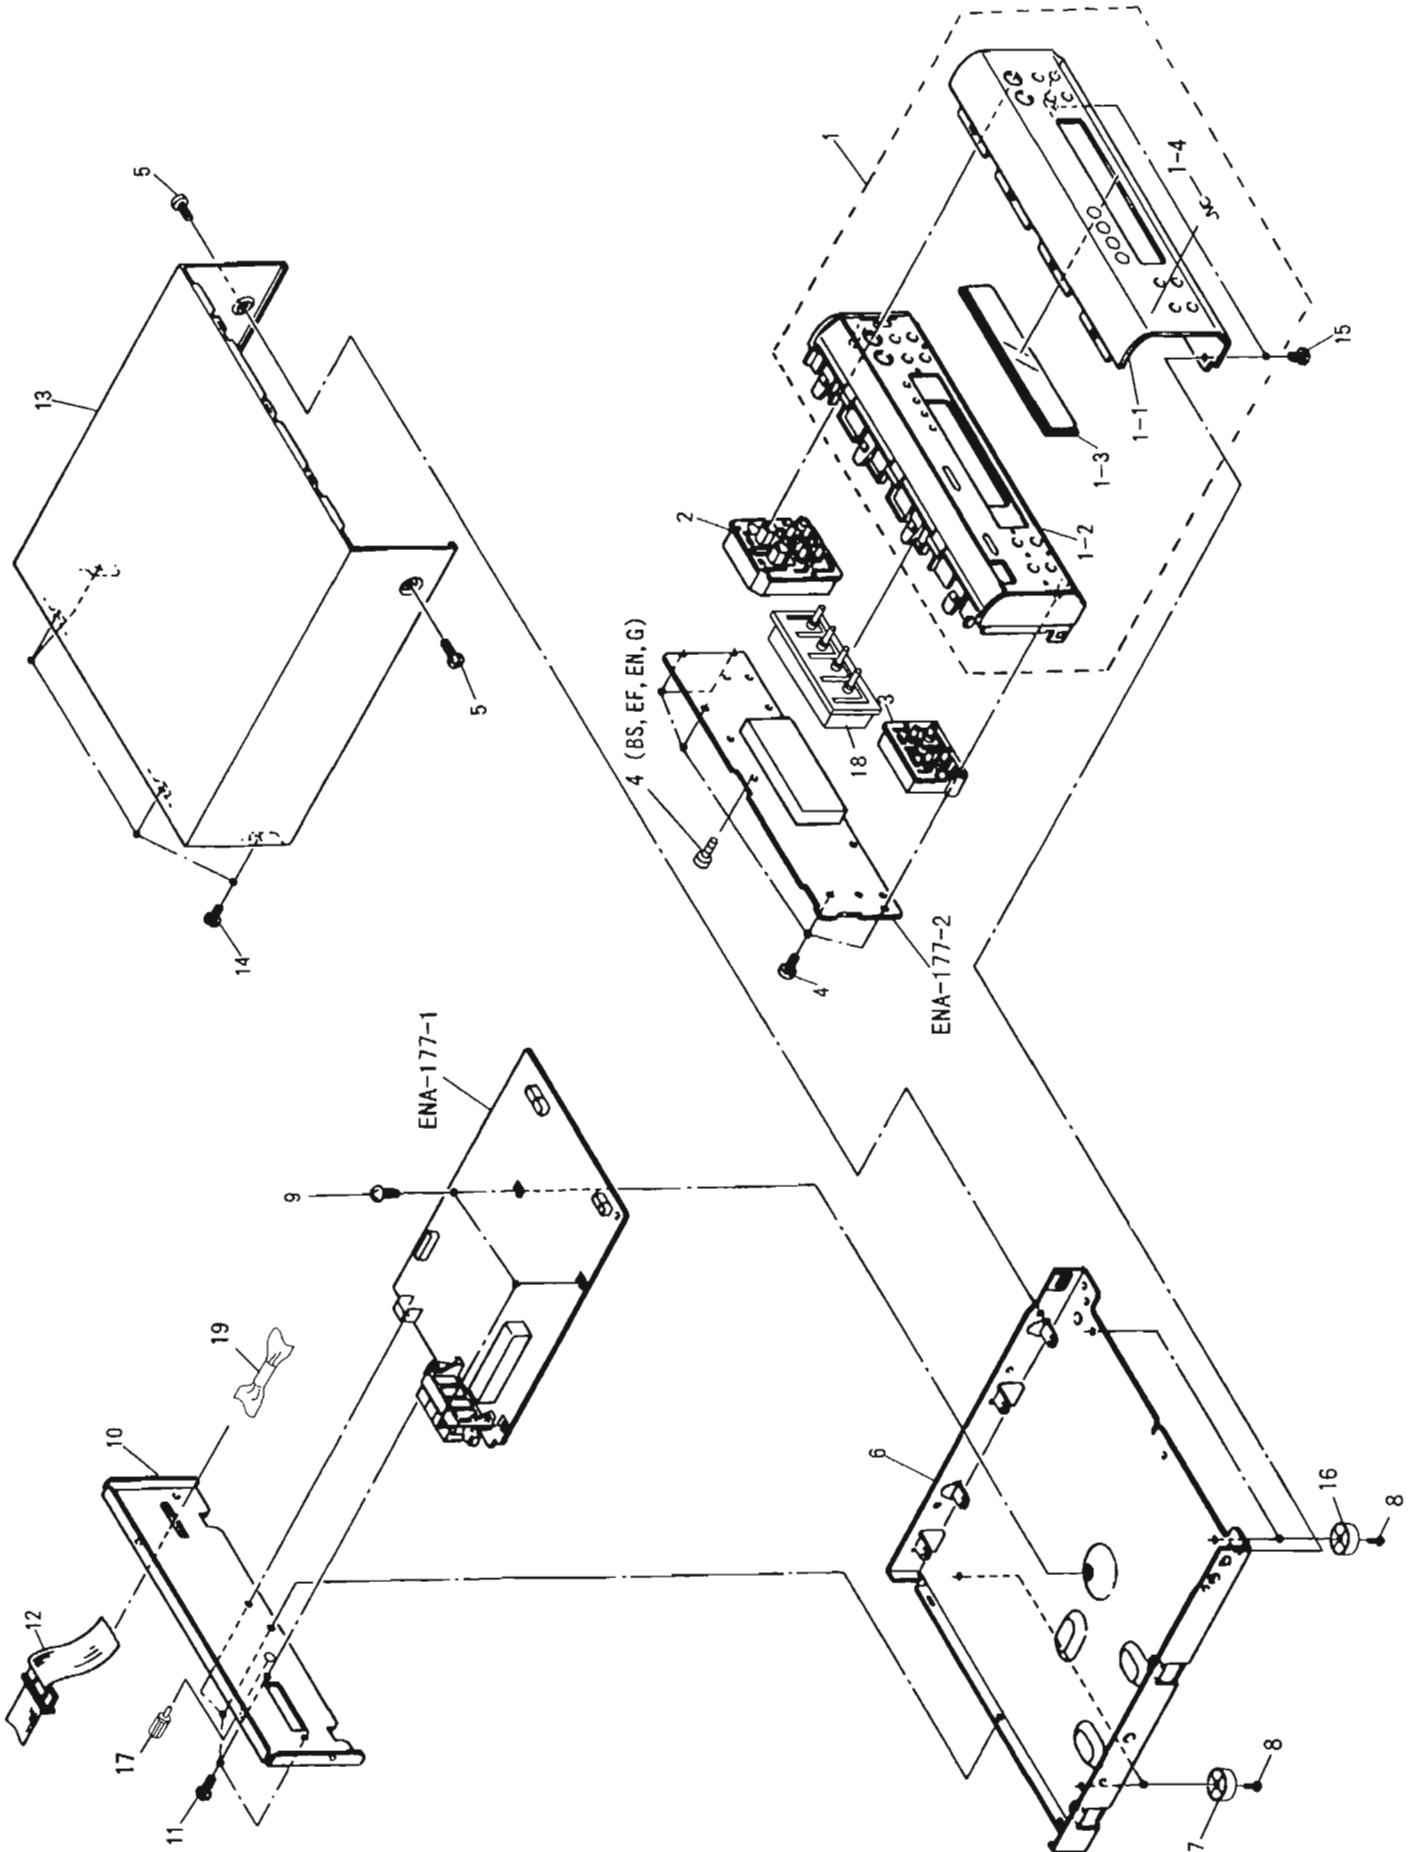

## ■ Parts List (FX-F3000)

Block No. **M****Z****M****M**

△	Item	Parts Number	Parts Name	Qty	Description	Area
	1	EFP-FXF3000U(S)	FRONT PANEL ASSY	1		
	1-1	E208739-002	FRONT PANEL	1		
	1-2	E103087-004ST	FRONT BASE	1		
	1-3	E309614-002	WINDOW SCREEN	1		
	1-4	E406971-221	JVC MARK	1		
	2	E208707-003SS	PUSH BUTTON ASSY	1		
	3	E309618-003SS	PUSH BUTTON	1		
	4	SDFS2608Z	SCREW	5		
	5	SDSG3008N	TAPPING SCREW	2		
	6	E102878-005	CHASSIS BASE	1		
	7	E75281-010	FOOT	2		
	8	SBST3010Z	TAPPING SCREW	4		
	9	SBST3006CC	TAPPING SCREW	3		
	10	E208705-007	REAR PANEL	1		J
		E208705-008	REAR PANEL	1		C
		E208705-010	REAR PANEL	1		U UB US UT
	11	E73273-003	SPECIAL SCREW	4		
	12	BWP907-018	FLAT WIRE ASSY	1		
	13	E208179-013(S)	METAL COVER	1		
	14	GBSG3008CC	TAPPING SCREW	4		
	15	SDSG3008CC	TAPPING SCREW	2		
	16	E75281-009	FOOT	2		
	17	E409257-001	EARTH TERMINAL	1		
	-	E61029-005	NUMBER LABEL	1		
		E75139-004	NAME LABEL	1		U

## ■ Parts List (FX-F3000R)

\* Please see the parts list for FX-F3000 for parts which are not described.

△	Item	Parts Number	Parts Name	Qty	Description	Area
	1	EFP-FXF3000RE(S)	FRONT PANEL ASSY	1		
	1-1	E208739-003	FRONT PANEL	1		
	4	SDFS2608Z	SCREW	6		
	10	E208705-009	REAR PANEL	1		
	18	E310023-001SS	PUSH BUTTON	1	RDS	
	19	EN28104-005	NOISE FILTER	1		

■ Electrical Parts List (ENA-177)

△	Item	Parts Number	Description	Area	△	Item	Parts Number	Description	Area
		I.C.S							
	IC102	LA1836M	I.C.(CMO-ANALOG)			C148	DE181M-108	10MF 50V E.CAP.	
	IC121	LO12131M	I.C.(M)			C147	DE181M-105	10MF 50V AL E.CAP.	
	IC191	LC1073M	I.C.(D101-MOS)	BS EF EN G		C148	DE181M-174	0.47MF 50V E.CAP.	
	IC192	3AAB5797	I.C.(M)	BS EF EN G		C149	DE181M-105	1MF 60V AL E.CAP.	
	IC201	MMF72412K8M	I.C.(MICRO-COMPUTER)			C150	DE181M-225ZX	2.2MF 50V AL E.CAP.	
	IC241	PS791487	I.C.(MHO-ANALOG)			C151	GCS21M-181A	180PF 50V CER.CAP.	BS EF EN G
		DIODES				C152	GCS21M-181A	180PF 50V CER.CAP.	BS EF EN G
	D121	1S5119	SI.DIODE			C153	GCS31M-821Z	820PF 50V CER.CAP.	
	D123	1S5119	SI.DIODE	BS EF EN G		C154	OC3B1CM-47Y	4700PF 18V CER.CAP.	
	D128	1S5119	SI.DIODE			C156	DE181M-474	47MF 25V AL E.CAP.	
	D127	1S5119	SI.DIODE	BS EF EN G		C158	OCMB1E1-22J	0.022MF 25V CER.CAP.	
	D129	1S5119	SI.DIODE			C157	OC271E-47J	0.047MF 25V CER.CAP.	
	D181	1S5119	SI.DIODE			C158	DE181M-106	10MF 50V E.CAP.	
	D202	1S5119	SI.DIODE			C159	OC181M-22J	0.022MF 50V NYLAR CAP.	BS EF EN G
	D203	1S5119	SI.DIODE				OC181M-47J	0.047MF 50V NYLAR CAP.	C J U US US UT
	D204	1S5119	SI.DIODE			C160	OC181M-33J	0.033MF 50V NYLAR CAP.	BS EF EN G
	D205	1S5119	SI.DIODE	BS EF EN G			OC181M-47J	0.047MF 50V NYLAR CAP.	C J U US US UT
	D206	1S5119	SI.DIODE			C161	DE181M-225	2.2MF 50V AL E.CAP.	
	D211	5LR-342MCA47	L.E.D			C162	DE181M-225	2.2MF 50V AL E.CAP.	
	D212	5LR-342MCA47	L.E.D			C163	OCMB1E2-22J	0.022MF 25V CER.CAP.	
	D221	1S5119	SI.DIODE	M UB US UT		C166	OCY81M-274	0.27MF 50V THIN FILM	
	D222	1S5119	SI.DIODE	C J		C169	OCY81M-27J	0.027MF 50V THIN FILM	
	D223	1S5119	SI.DIODE			C181	OCY81M-56J	5600PF 50V METAL NYLA	
	D224	1S5119	SI.DIODE			C182	OCY81M-56J	5600PF 50V METAL NYLA	
	D225	1S5119	SI.DIODE			C184	DE181M-227	220MF 18V AL E.CAP.	
	D226	1S5119	SI.DIODE			C185	DE181M-225	2.2MF 50V AL E.CAP.	
	D227	1S5119	SI.DIODE			C188	DE181M-225	2.2MF 50V AL E.CAP.	
	D256	MF28.2JC	ZENER DIODE			C187	OCBB1M-331Y	330PF 50V CER.CAP.	BS EF EN G
		TRANSISTORS				C188	OCBB1M-331Y	330PF 50V CER.CAP.	BS EF EN G
	Q101	2SC481	SI.TRANSISTOR			C191	OCBB1M-820Y	82PF 50V CER.CAP.	BS EF EN G
	Q102	2SC535	SI.TRANSISTOR			C192	OCBB1M-470	47PF 50V CER.CAP.	BS EF EN G
	Q103	2SC481	SI.TRANSISTOR			C193	OCBB1M-381Z	380PF 50V CER.CAP.	BS EF EN G
	Q111	2SD2144S (VM)	SI.TRANSISTOR	BS EF EN G		C194	OCMB1E2-22J	0.022MF 25V CER.CAP.	BS EF EN G
	Q112	2SD2144S (VM)	SI.TRANSISTOR	BS EF EN G		C195	GCS31M-331Z	330PF 50V CER.CAP.	BS EF EN G
	Q113	2SD2144S (VM)	SI.TRANSISTOR	BS EF EN G		C196	DE181M-225	2.2MF 50V AL E.CAP.	BS EF EN G
	Q114	2SD2144S (VM)	SI.TRANSISTOR	BS EF EN G		Q157	DE181M-108Z	10MF 18V AL E.CAP.	BS EF EN G
	Q121	D1A124ES	DIGITAL TRANSISTOR			Q198	OC271E-47J	0.047MF 25V CER.CAP.	BS EF EN G
	Q122	D1A124ES	DIGITAL TRANSISTOR			C199	DE181M-225	2.2MF 50V AL E.CAP.	BS EF EN G
	Q123	D1A124ES	DIGITAL TRANSISTOR	BS EF EN G		Q207	OCY81M-103Y	0.01MF 18V CER.CAP.	
	Q143	DTC114ES	DIGITAL TRANSISTOR			C210	OCY81M-103Y	0.01MF 18V CER.CAP.	
	Q241	DTC114YS	DIGITAL TRANSISTOR			Q211	OCY81M-103Y	0.01MF 18V CER.CAP.	
	Q212	DTC114YS	DIGITAL TRANSISTOR			Q212	OC20285-155	1.5MF 25V O.CAP.	
	Q261	DTC114YS	DIGITAL TRANSISTOR			Q221	OCBB1M-331Y	330PF 50V CER.CAP.	
	Q254	2SC2050 (G.R)	SI.TRANSISTOR			Q260	DE181M-225	2.2MF 50V AL E.CAP.	
		CAPACITORS				Q261	DE181M-225	2.2MF 50V AL E.CAP.	
	C101	OC271M-108A	0.01MF 50V CER.CAP.			C301	OC10205-166	1.3MF 25V C.CAP.	BS EF EN G
	C102	DE181M-107	100MF 18V AL E.CAP.			C300	DE181M-227	220MF 18V AL E.CAP.	
	C103	OC271M-223A	0.022MF 50V CER.CAP.			C581	DE181M-225	2.2MF 50V AL E.CAP.	
	C104	OC271M-223A	0.022MF 50V CER.CAP.			C582	OC271M-472A	0.047MF 50V CER.CAP.	
	C105	OC271M-223A	0.022MF 50V CER.CAP.			C824	OCAD0M2-22AZM	E.CAP.	
	C107	OC271M-223A	0.022MF 50V CER.CAP.			C861	OC271M-223A	0.022MF 50V CER.CAP.	
	C114	OC271E-22J	0.022MF 25V CER.CAP.			C862	DE181M-227	220MF 18V AL E.CAP.	
	C112	OC130M-120Y	12PF 50V CER.CAP.			C863	DE181M-226M	22MF 25V E.CAP.	
	C113	OCMB1E1-22J	0.022MF 25V CER.CAP.	BS EF EN G		IC201	EX21003-015	0.1MF TRIMMER CA	
	C117	OCBB1M-331Y	330PF 50V CER.CAP.				RESISTORS		
	C118	OCY81M-150Y	15PF 50V CER.CAP.			R102	ORD181J-332	3.3K 1/8W CARBON RE	
	C121	OC130M-180Y	18PF 50V CER.CAP.			R103	ORD181J-221	220 1/8W CARBON RE	
	C122	OC130M-180Y	18PF 50V CER.CAP.			R104	ORD181J-222	2.2K 1/8W CARBON RE	
	C123	OC271E-47J	0.047MF 25V CER.CAP.			R105	ORD181J-225	220 1/8W CARBON RE	
	C124	OCBB1M-101Y	100PF 50V CER.CAP.			R106	ORD181J-102	1K 1/8W CARBON RE	
	C126	OCBB1M-101Y	100PF 50V CER.CAP.			R107	ORD181J-561	560 1/8W CARBON RE	
	C128	DE181M-474	0.47MF 25V AL E.CAP.			R108	ORD181J-332	3.3K 1/8W CARBON RE	
	C129	OCY81M-102	1000PF 50V CER.CAP.			R109	ORD181J-221	220 1/8W CARBON RE	
	C130	DE181M-227	220MF 18V AL E.CAP.			R110	ORD181J-472	4.7K 1/8W CARBON RE	BS EF EN G
	C141	OC271E-47J	0.047MF 25V CER.CAP.			R111	ORD181J-472	4.7K 1/8W CARBON RE	BS EF EN G
	C142	DE181M-106	10MF 50V E.CAP.			R112	ORD181J-472	4.7K 1/8W CARBON RE	BS EF EN G
	C143	OC271M-223A	0.022MF 50V CER.CAP.			R113	ORD181J-103	10K 1/8W CARBON RE	BS EF EN G
	C144	OC271E-22J	0.022MF 25V CER.CAP.			R114	ORD181J-122	1.2K 1/8W CARBON RE	BS EF EN G
	C145	DE181M-475C	4.7MF 25V E.CAP.			R115	ORD181J-104	100K 1/8W CARBON RE	

## ■ Electrical Parts List (ENA-177)

△	Item	Parts Number	Description	Area
	R116	ORD161J-472	4.7K 1/8W CARBON RE	BS EF EM G
	R119	ORD161J-100	10K 1/8W CARBON RE	
	R121	ORD161J-473	47K 1/8W CARBON RE	
	R122	ORD161J-472	4.7K 1/8W CARBON RE	
	R124	ORD161J-222	2.2K 1/8W CARBON RE	
	R127	ORD167J-822	8.2K 1/8W CARBON RE	
	R128	ORD161J-472	4.7K 1/8W CARBON RE	
	R129	ORD161J-222	2.2K 1/8W CARBON RE	
△	R130	ORD140J-6805X	68 1/4W 5WV CARBON	C J
△		GR20077-680	68 1/4W FUSIBLE RE	BS EF EM G U MD US UT
	R132	ORD161J-102	1K 1/8W CARBON RE	
	R133	ORD161J-473	47K 1/8W CARBON RE	
	R134	ORD161J-102	1K 1/8W CARBON RE	
	R141	ORD161J-392	3.9K 1/8W CARBON RE	
	R143	ORD161J-103	10K 1/8W CARBON RE	
	R144	ORD167J-332	3.3K 1/8W CARBON RE	
	R145	ORD161J-100	10K 1/8W CARBON RE	
	R146	ORD161J-222	2.2K 1/8W CARBON RE	
	R147	ORD161J-393	39K 1/8W CARBON RE	BS EF EM G U UB US UT
		ORD167J-223	22K 1/8W CARBON RE	C J
	R148	ORD161J-561	500 1/8W CARBON RE	
	R149	ORD161J-100	10K 1/8W CARBON RE	EF EM G
		ORD167J-223	22K 1/8W CARBON RE	BS C J U UB US UT
	R161	ORD161J-122	1.2K 1/8W CARBON RE	
	R162	ORD161J-122	1.2K 1/8W CARBON RE	
	R163	ORD161J-472	4.7K 1/8W CARBON RE	EF EM G
		ORD167J-332	3.3K 1/8W CARBON RE	BS C J U UB US UT
	R164	ORD161J-472	4.7K 1/8W CARBON RE	EF EM G
		ORD167J-332	3.3K 1/8W CARBON RE	BS C J U UB US UT
	R165	ORD167J-152	1.5K 1/8W CARBON RE	BS C J U UB US UT
	R166	ORD167J-152	1.5K 1/8W CARBON RE	BS C J U UB US UT
	R175	ORD161J-101	100 1/8W CARBON RE	
	R176	ORD161J-105	100 1/8W CARBON RE	
	R182	ORD161J-100	10K 1/8W CARBON RE	
	R183	ORD161J-100	10K 1/8W CARBON RE	
	R184	ORD161J-100	10K 1/8W CARBON RE	
	R188	ORD161J-100	10K 1/8W CARBON RE	
	R189	ORD161J-472	4.7K 1/8W CARBON RE	
	R191	ORD161J-222	2.2K 1/8W CARBON RE	BS EF EM G
	R201	ORD161J-472	4.7K 1/8W CARBON RE	
	R203	ORD161J-472	4.7K 1/8W CARBON RE	
	R204	ORD161J-472	4.7K 1/8W CARBON RE	
	R205	ORD161J-472	4.7K 1/8W CARBON RE	
	R206	ORD161J-472	4.7K 1/8W CARBON RE	
	R211	ORD167J-151	150 1/8W CARBON RE	
	R212	ORD167J-151	150 1/8W CARBON RE	
	R221	ORD161J-102	1K 1/8W CARBON RE	
	R222	ORD161J-102	1K 1/8W CARBON RE	
	R231	ORD161J-102	1K 1/8W CARBON RE	
	R231	ORD161J-221	220 1/8W CARBON RE	
	R265	ORD161J-102	1K 1/8W CARBON RE	
	R266	ORD161J-102	1K 1/8W CARBON RE	
	R267	ORD161J-102	1K 1/8W CARBON RE	
	OTHERS			
		EM110653-002	PRINTED BOARD	
	L111	EGL4007-150F	INDUCTOR	
	L141	EGL2106-392	INDUCTOR	BS EF EM G
	L191	EGL4081-101	INDUCTOR	BS EF EM G
	S201	ESPO001-023M	TACT SWITCH	
	S202	ESPO001-023M	TACT SWITCH	
	S203	ESPO001-023M	TACT SWITCH	
	S204	ESPO001-023M	TACT SWITCH	
	S205	ESPO001-023M	TACT SWITCH	
	S206	ESPO001-023M	TACT SWITCH	
	S207	ESPO001-023M	TACT SWITCH	
	S208	ESPO001-023M	TACT SWITCH	
	S209	ESPO001-023M	TACT SWITCH	
	S210	ESPO001-023M	TACT SWITCH	
	S211	ESPO001-023M	TACT SWITCH	BS EF EM G
	S212	ESPO001-023M	TACT SWITCH	BS EF EM G
△	S213	ESPO001-023M	TACT SWITCH	
	S214	ESPO001-023M	TACT SWITCH	BS EF EM G
	T111	EQF2121-002	RF COIL	BS EF EM G
		EQF2121-004	RF COIL	C J U UB US UT
	T141	EQF2140-021	I.F. TRANSFORMER	
	T142	EQS1500-013	CERAMIC FILTER	
	X121	ECT0007-2000XJ1	CRYSTAL	
	X145	EQ3PR16-001A	CRYSTAL	
	X191	YCS057-001	CRYSTAL	BS EF EM G
	X192	EFO-EC400414	CERAMIC RESONATOR	BS EF EM G
	X201	EQ30006-0000XJ	CRYSTAL	
	X1101	EMB417M-302K	ANTENNA TERMINAL	
	BR001	ES08963-002	SHIELD BRACKET	
	CF101	ECB2118-007R	CERAMIC FILTER	BS EF EM G
		ECB2123-006R	CERAMIC FILTER	C J U UB US UT
	CF102	ECB2118-007R	CERAMIC FILTER	BS EF EM G
		ECB2123-006R	CERAMIC FILTER	C J U UB US UT
	CH101	EMV7141-011	CONNECT TERMINAL	
	D1201	EL08081-205	FLUORESCENT DISPLAY TUB	
	EP101	EZ0275-003S	EARTH PLATE	
	EP102	EM24002-002Z	EARTH PLATE	
	EP103	EM24002-002Z	EARTH PLATE	
	EP104	EM24002-002Z	EARTH PLATE	
	FL141	EQF0101-012	LOWPASS FILTER	
	FL142	EQF0101-012	LOWPASS FILTER	
	FS101	E306005-191	SPACER	
	FS102	E306005-191	SPACER	
	FR102	EMR34B-16LS	FLAT WIRE ASSY	
	FR103	EMR34B-16LS	FLAT WIRE ASSY	
	FR104	EMR350-16LS	FLAT WIRE ASSY	
	J1101	EMV7145-004Z	SOCKET ASSY	
	J1102	EMV7145-004Z	SOCKET ASSY	
	J1103	EMV7145-004Z	SOCKET ASSY	
	J1104	EMV7145-004Z	SOCKET ASSY	
	J1105	EMV7145-004Z	SOCKET ASSY	
	RF101	EAF2203-005	FRONT END	BS EF EM G
		EAF2207-001	FRONT END	C J U UB US UT
	SP102	VYH7853-002	I.C. SOCKET	
	SP121	VYH7853-004	I.C. PROTECTOR	
	SP191	VYH7853-004	I.C. PROTECTOR	BS EF EM G
	SP192	VYH7853-009	I.C. HOLDER	BS EF EM G
	SP201	VYH7853-001	SPRING	





## Accessories List


Block No. **M S M M**

△	Item	Parts Number	Parts Name	Q'ty	Description	Area
△	1	E30580-2516A	INSTRUCTION BOOK	1		J
△		E30580-2517A	INSTRUCTION BOOK	1		C
△		E30580-2518A	INSTRUCTION BOOK	1		EF G
△		E30580-2519A	INSTRUCTION BOOK	1		EN
△		E30580-2520A	INSTRUCTION BOOK	1		U UB US UT
△		E30580-2521ABS	INSTRUCTION BOOK	1		BS
	2	E43486-696A	CAUTION SHEET	1		
	3	E309758-003	ENVELOPE	1		
	4	BT-51006-1	REGISTER CARD	1		J
	5	BT-20134	WARRANTY CARD	1		G
		BT-52002-1	WARRANTY CARD	1		C
		BT-54003-1	WARRANTY CARD	1		BS
	6	BT-20071B	SERVICE NETWORK	1		C
	7	BT-20068A	DISTRIBUTOR LIST	1		BS
	8	BT-20044G	SAFETY SHEET	1		J
		E43486-340A	SAFETY SHEET	1		BS
	9	RM-SEF3000RU	WIRE-LESS REMOTE CONTROL	1		BS EF EN G
		RM-SEF3000U	WIRE-LESS REMOTE CONTROL	1		C J U UB US UT
	10	R03BPA-2ST5A	BATTERY	1		
	11	E0B4001-015	LOOP ANTENNA	1		
	12	EWP503-001	ANTENNA WIRE	1		BS EF EN G
	13	E03614-004	FM FEEDER ANTENNA	1		C J U UB US UT
	14	EM22001-014	ADAPTOR	1		C J U UB US UT
	15	EWP201-012	EARTH WIRE	1		BS EF EN G
		EWP201-015	EARTH WIRE	1		C J U UB US UT
	16	ENZ2202-001	SIEMENS PLUG	1		US
		ENZ2203-001	SIEMENS PLUG	1		U UT


Packing Materials and Part Numbers

Block No. **M****9****M****M**


- For U, UB, US, UT, J and C -

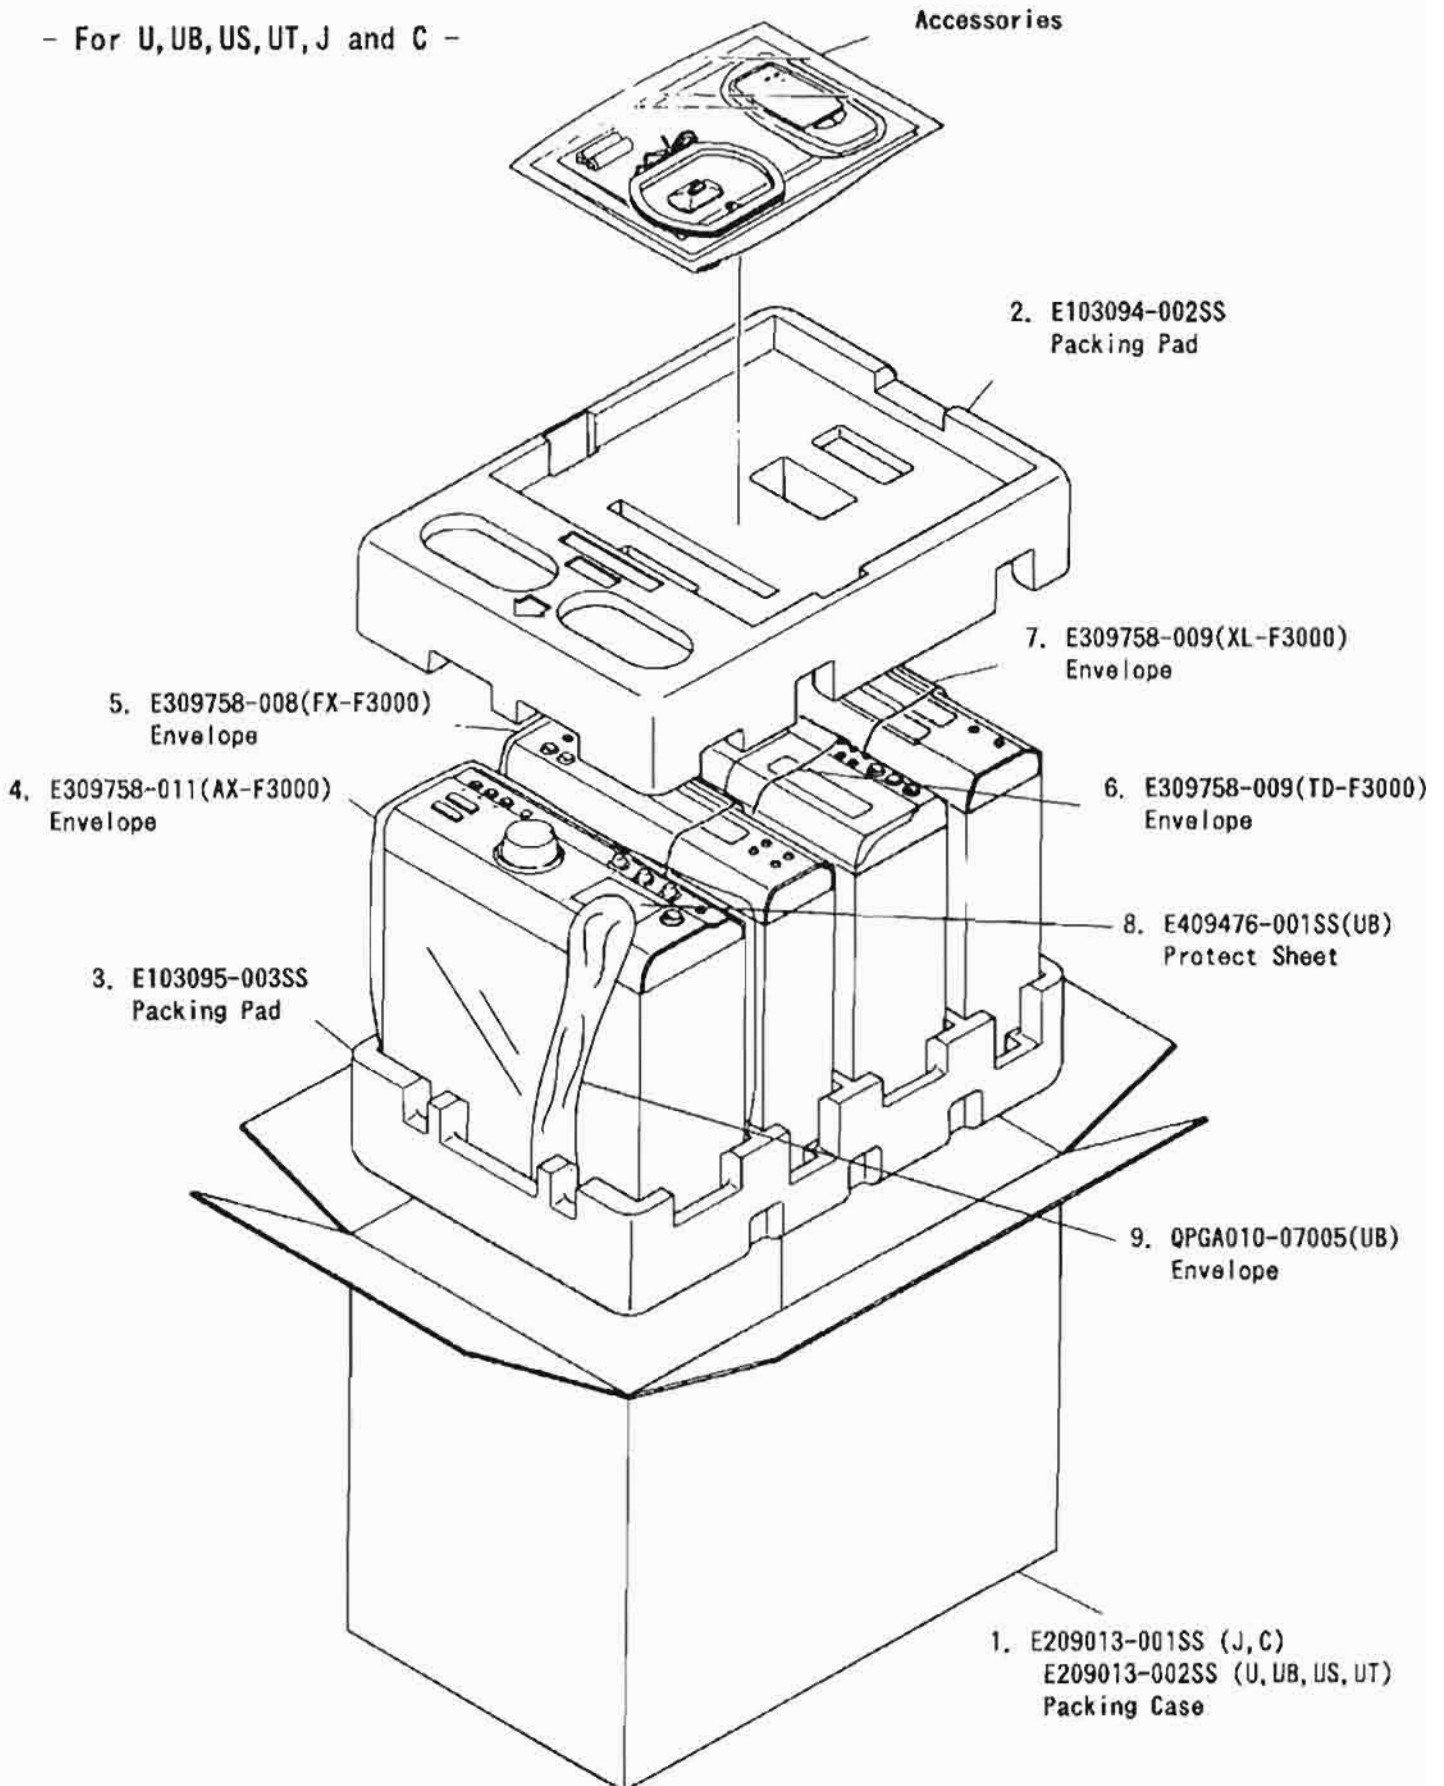

Packing Materials and Part Numbers

Block No. 

- For BS, EF, EN and G -

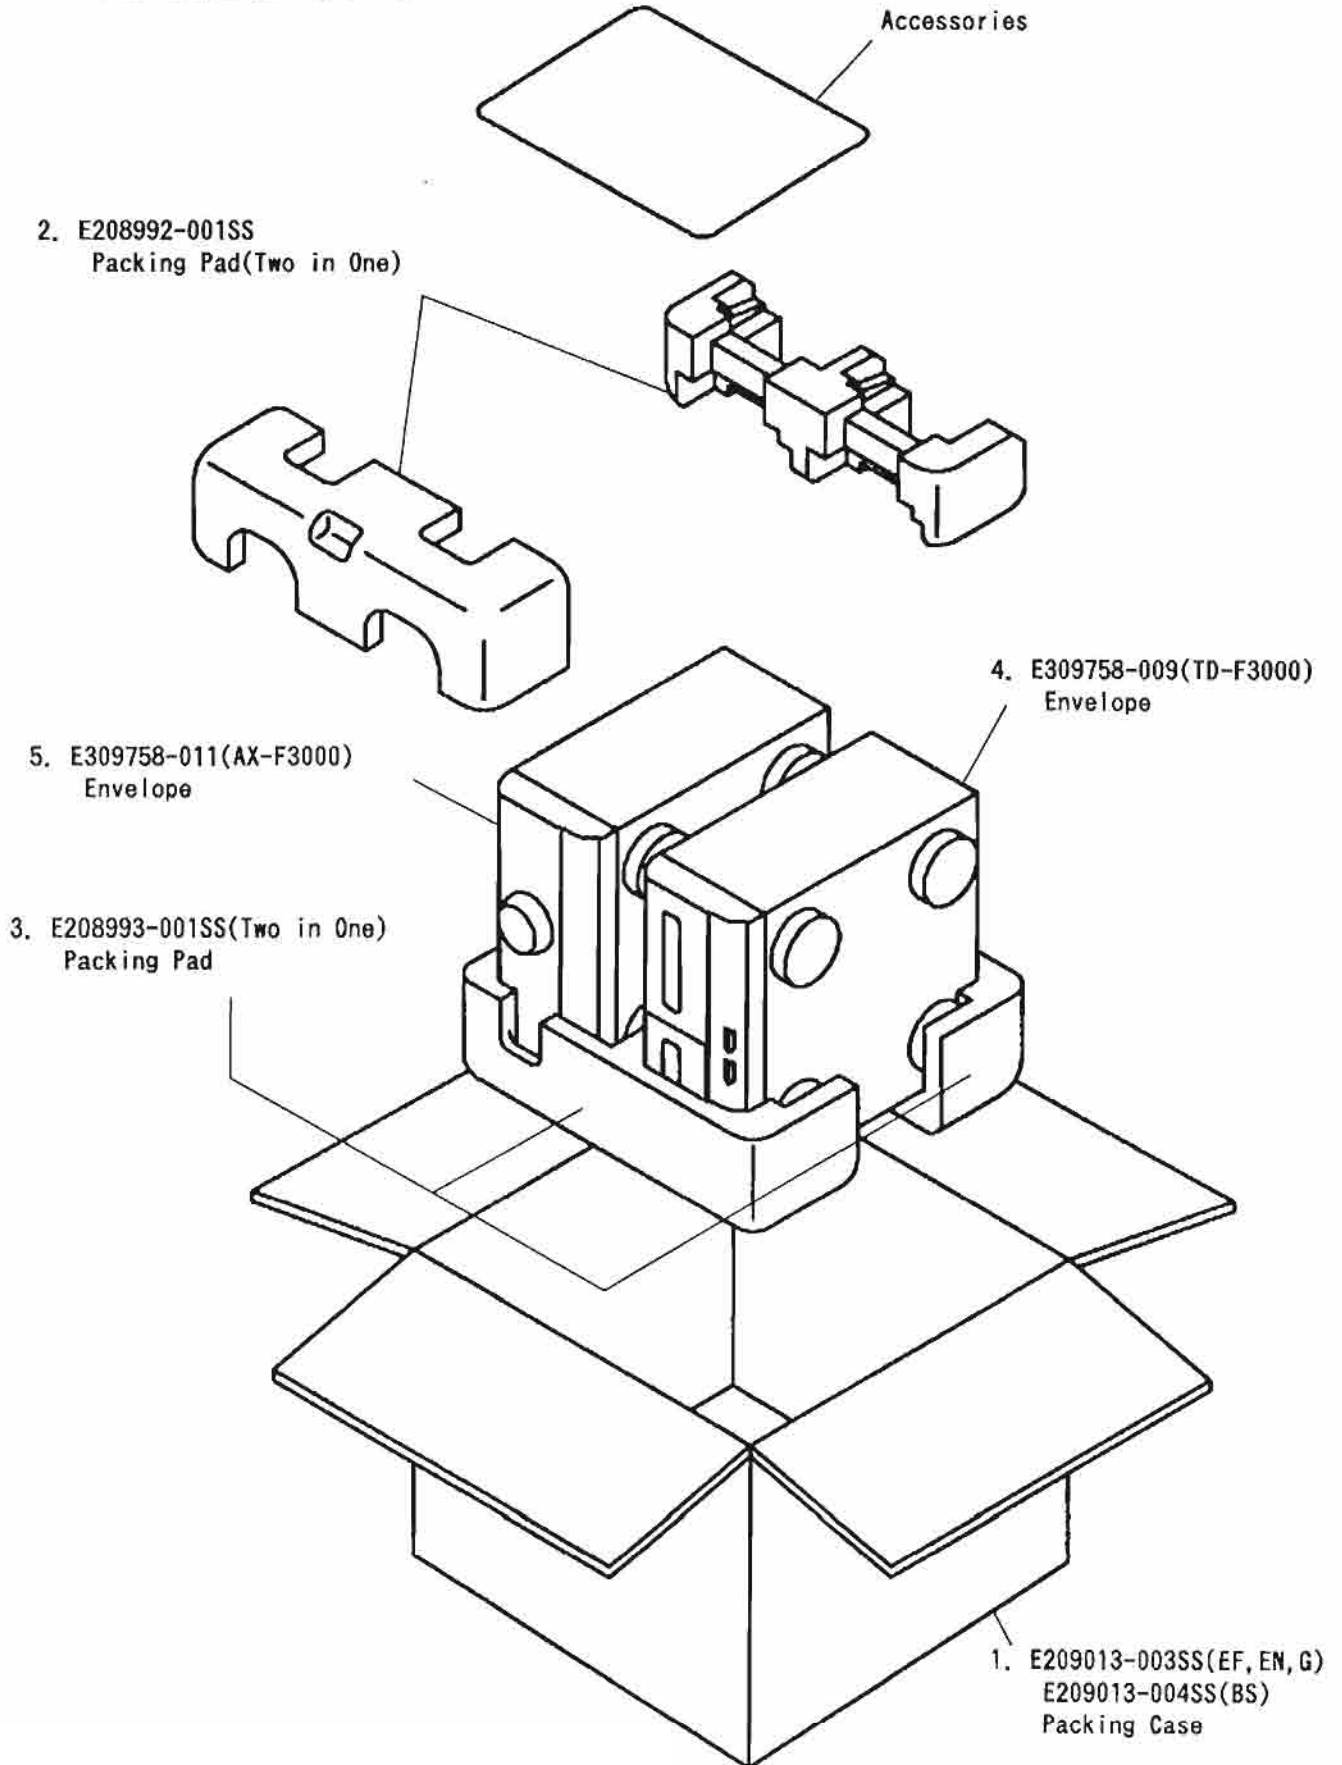

## Description of Major LSIs

■ HD614081SE39 (IC203) : Deck controller

### Terminal Layout

NR LED	1	64	A FWD LED
NR LED(C)	2	63	A REV LED
A SPEED UP	3	62	B FWD LED
B SPEED UP	4	61	B REV LED
MUSIC IN	5	60	REC LED
B FWD REEL MOTOR	6	59	REV MODE
B REV REEL MOTOR	7	58	BIAS
B REV CAM MOTOR	8	57	NR OFF
B FWD CAM MOTOR	9	56	REC MUTE
A CAM SW-2	10	55	DCS IN
A CAM SW-1	11	54	DCS OUT
A CAM SW-0	12	53	GND
A PULSE IN	13	52	4.19MHz OSC IN
B CAM SW-2	14	51	4.19MHz OSC IN
B CAM SW-1	15	50	TO VCC
B CAM SW-0	16	49	RESET IN
B PULSE IN	17	48	KEY&SW IN-4
POWER OFF IN	18	47	KEY&SW IN-3
GND	19	46	KEY&SW IN-2
A FWD REEL MOTOR	20	45	KEY&SW IN-1
A REV REEL MOTOR	21	44	KEY OUT-4
A REV CAM MOTOR	22	43	KEY OUT-3
A FWD CAM MOTOR	23	42	KEY OUT-2
NR REC	24	41	KEY OUT-1
A MUTE	25	40	SW OUT-2
B MUTE	26	39	SW OUT-1
PLAY MUTE	27	38	HI-SPEED DUBBING
CAP MOTOR ON	28	37	H.S CrO2
REC	29	36	H.S ME
FADE CTRL	30	35	H.S NORM
BEQ	31	34	CrO2
+5V	32	33	METAL

### Key matrix

	KEY&SW-1 (PIN45)	KEY&SW-2 (PIN46)	KEY&SW-3 (PIN47)	KEY&SW-4 (PIN48)
KEY OUT 1 (PIN41)	A ◀ (S300)	A ◀◀ (S301)	A ▶▶ (S302)	A ▶ (S303)
KEY OUT 2 (PIN42)	B ◀ (S310)	B ◀◀ (S311)	B ▶▶ (S312)	B ▶ (S313)
KEY OUT 3 (PIN43)	A ■ (S320)	B ■ (S321)	REC PAUSE (S322)	—
KEY OUT 4 (PIN44)	▶▶▶ (S330)	DOLBY (S331)	REV. MODE (S332)	CD REC (S333)
SW OUT 1 (PIN39)	—	B CrO2	METAL	—
SW OUT 2 (PIN40)	B PACK	REV REC	FWD REC	A PACK

### Terminal Description

Pin NO.	Symbol	I/O	Function	Pin NO.	Symbol	I/O	Function
1	NR LED	O	Dolby B indicator signal output	33	METAL	O	Metal tape , normal speed record
2	NR LED(C)	O	Dolby C indicator signal output	34	CrO <sub>2</sub>	O	CrO <sub>2</sub> tape , normal speed record
3	A S UP	O	Reel speed up control (Deck A)	35	H5 NORM	O	Not used
4	B S UP	O	Reel speed up control (Deck B)	36	H5 METAL	O	Metal tape , high speed record
5	MUSIC IN	I	Music scan signal input	37	H5 CrO2	O	CrO2 tape , high speed record
6	B F R M	O	Reel control signal for forward (Deck B)	38	HI DUB	O	Not used
7	B R R M	O	Reel control signal for reverse (Deck B)	39	SW O1	O	Keypad output for leaf switch
8	B R C M	O	Cam control signal for reverse (Deck B)	40	SW O2	O	Keypad output for leaf switch
9	B F C M	O	Cam control signal for forward (Deck B)	41	KEY O1	O	Key matrix output
10	A C SW2	I	Cam data input	42	KEY O2	O	Key matrix output
11	A C SW1	I	Cam data input	43	KEY O3	O	Key matrix output
12	A C SW0	I	Cam data input	44	KEY O4	O	Key matrix output
13	A.PULSE IN	I	Reel pulse input from deck A	45	KEY/SW 11	I	Key matrix input
14	B C SW2	I	Cam data input	46	KEY/SW 12	I	Key matrix input
15	B C SW1	I	Cam data input	47	KEY/SW 13	I	Key matrix input
16	B C SW0	I	Cam data input	48	KEY/SW 14	I	Key matrix input
17	B.PULSE IN	I	Reel pulse input from deck B	49	RESET	I	Reset input
18	P.CONT	I	Inhibit input from system controller	50	TO VCC	—	Connected to VCC
19	GND	—	GND	51	OSC	—	Oscillation terminal
20	A F R M	O	Reel control signal for forward (Deck A)	52	OSC	—	Oscillation terminal
21	A R R M	O	Reel control signal for reverse (Deck A)	53	GND	—	GND
22	A R C M	O	Cam control signal for reverse (Deck A)	54	DCS OUT	O	Compulink output
23	A F C M	O	Cam control signal for forward (Deck A)	55	DCS IN	I	Compulink input
24	NR REC	O	It is "H" when recording with NR on	56	REC MUTE	O	Recording mute control
25	A MUTE	O	It is "H" when deck A is not playing	57	NR OFF	O	NR on/off control
26	B MUTE	O	It is "H" when deck B is not playing	58	BIAS	O	Bias on/off control
27	PLAY MU	O	Deck mute	59	REV MODE	O	Indication control for reverse mode
28	CAP CONT	O	Capstan on/off control	60	REC LED	O	Indication control for record
29	REC	O	It is "H" when recording	61	BREV LED	O	Indication control for reverse playback
30	FADE CON	O	It is "H" when recording with fade	62	BFWD LED	O	Indication control for forward playback
31	BEQ	O	It is "L" when CrO2 tape is in deck B	63	AREV LED	O	Indication control for reverse playback
32	+5V	—	Power supply	64	AFWD LED	O	Indication control for forward playback



CA-F3000

**JVC**

VICTOR COMPANY OF JAPAN, LIMITED

AUDIO PRODUCT DIVISION, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

(No. 20590U)



Printed in Japan  
9607(5)