

JVC


SERVICE MANUAL

COMPACT COMPONENT SYSTEM

MX-JD5

Area suffix

US ----- Singapore
UW ----- Brazil, Mexico, Peru
UX ----- Saudi Arabia
UE ----- Turkey
UN ----- Asean

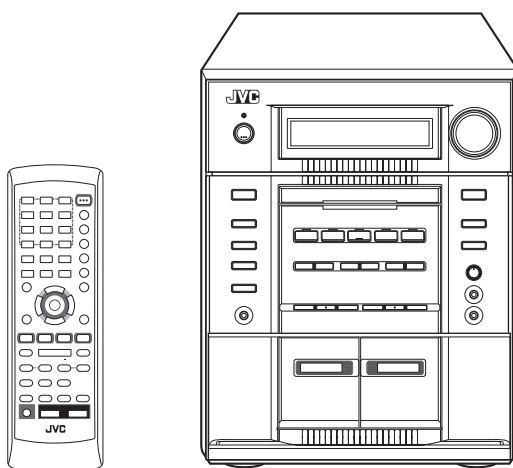

CA-MXJD5



AV COMPU LINK EXTENDED SUPER BASS

TABLE OF CONTENTS

1	PRECAUTION	1-3
2	SPECIFIC SERVICE INSTRUCTIONS	1-6
3	DISASSEMBLY	1-7
4	ADJUSTMENT	1-33
5	TROUBLESHOOTING	1-40

SPECIFICATION

Amplifier section	Output Power	FRONT MAIN SPEAKERS	40 W per channel, min. RMS, driven into 6 Ω at 1 kHz with no more than 10% total harmonic distortion.	
		FRONT SUBWOOFERS	80 W per channel, min. RMS, driven into 6 Ω at 63 Hz with no more than 10% total harmonic distortion.	
		CENTER SPEAKER	40 W, min. RMS, driven into 8 Ω at 1 kHz with no more than 10% total harmonic distortion.	
		SURROUND SPEAKERS	25 W per channel, min. RMS, driven into 16 Ω at 1 kHz with no more than 10% total harmonic distortion.	
	Digital output	OPTICAL DIGITAL OUTPUT	-21 dBm to -15 dBm (660 nm ±30 nm)	
	Audio input sensitivity/ Impedance (Measured at 1 kHz, with tape recording signal 300 mV)	AUX IN	300 mV/47 kΩ	
		MIC 1/2	3.0 mV/50 kΩ	
	VIDEO OUT	Color system	NTSC/PAL selectable	
		VIDEO (composite)	1 V(p-p)/75 Ω	
		S-VIDEO	Y (luminance):	1 V(p-p)/75 Ω
			C (chrominance, burst):	0.286 V(p-p)/75 Ω
	COMPONENT (Interlace/ Progressive)	(Y):	1 V(p-p)/75 Ω	
		(PB/PR):	0.7 V(p-p)/75 Ω	
	Speaker Terminals	Front main speakers	6 Ω - 16 Ω	
Center speakers		8 Ω - 16 Ω		
Surround speakers		16 Ω - 32 Ω		
6 Ω - 16 Ω (Front subwoofers)		6 Ω - 16 Ω		
Others		AV COMPU LINK × 2 (Ø 3.5)		
Tuner section	FM tuning range	87.50 MHz - 108.00 MHz		
	AM (MW) tuning range	531 kHz - 1 710 kHz (at 9 kHz)		
		530 kHz - 1 710 kHz (at 10 kHz)		
Disc player section	Playable disc	DVD Video/DVD Audio/CD/VCD/SVCD CD-R/CD-RW (recorded in Audio CD/ Video CD/ Super Video CD/ MP3/ WMA/ JPEG/MPEG-4 format) DVD-R/DVD-RW (recorded in video format)		
	Dynamic range	90 dB		
	Horizontal resolution	500 lines		
	Wow and flutter	Immeasurable		
Cassette deck section	Frequency response Normal (type I)	50 Hz - 14 000 Hz		
	Wow and flutter	0.15% (WRMS)		
General	Power requirement	AC 110 V / AC 127 V / AC 220 V / AC 230 V - AC 240 V , (adjustable with the voltage selector), 50 Hz / 60 Hz		
	Power consumption	220 W (at operation) 20 W (on standby)		
	Dimensions (approx.)	265 mm × 335 mm × 352 mm (W/H/D)		
	Mass (approx.)	8.7 kg		

Design and specifications are subject to change without notice.

SECTION 1 PRECAUTION

1.1 Safety Precautions


- (1) This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
- (2) Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
- (3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
- (4) The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after reassembling.
- (5) Leakage shock hazard testing

After reassembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock. Do not use a line isolation transformer during this check.

 - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
 - Alternate check method
Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 Ω per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC

voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

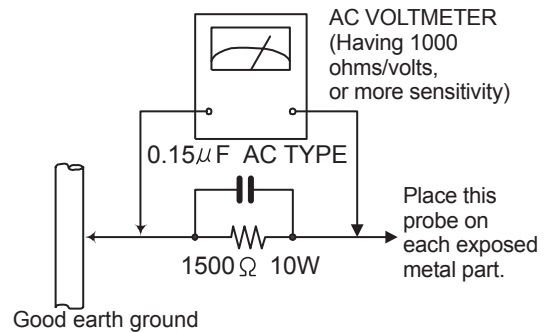

1.2 Warning

- (1) This equipment has been designed and manufactured to meet international safety standards.
- (2) It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
- (3) Repairs must be made in accordance with the relevant safety standards.
- (4) It is essential that safety critical components are replaced by approved parts.
- (5) If mains voltage selector is provided, check setting for local voltage.

1.3 Caution

Burrs formed during molding may be left over on some parts of the chassis.

Therefore, pay attention to such burrs in the case of pre-forming repair of this system.

1.4 Critical parts for safety

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (▣) and ICP (●) or identified by the " Δ " mark nearby are critical for safety. When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer. (This regulation does not Except the J and C version)

1.5 Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

1.5.1 Grounding to prevent damage by static electricity


Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as laser products. Be careful to use proper grounding in the area where repairs are being performed.

(1) Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

(2) Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

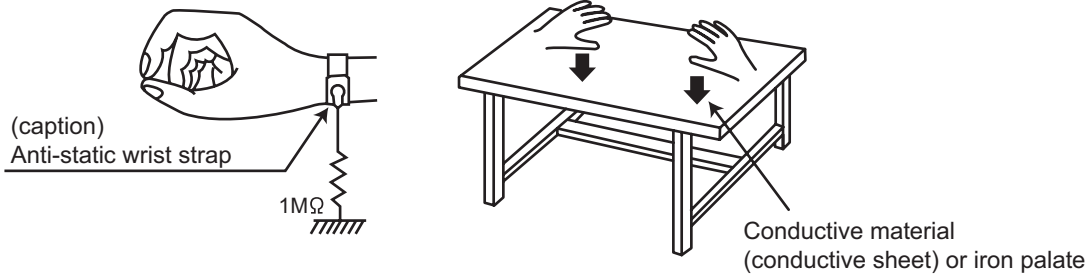

(3) Handling the optical pickup

- In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
- Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.


1.6 Handling the traverse unit (optical pickup)

- (1) Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
- (2) Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
- (3) Handle the flexible cable carefully as it may break when subjected to strong force.
- (4) It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it.

1.7 Attention when traverse unit is decomposed

***Please refer to "Disassembly method" in the text for the pickup unit.**

- Apply solder to the short land sections before the flexible wire is disconnected from the connector on the servo board. (If the flexible wire is disconnected without applying solder, the pickup may be destroyed by static electricity.)
- In the assembly, be sure to remove solder from the short land sections after connecting the flexible wire.

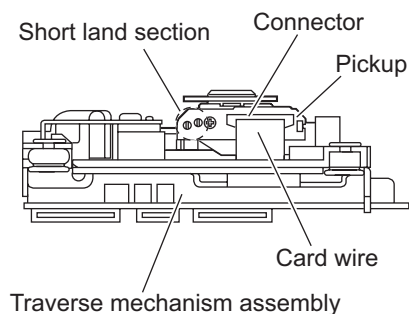

1.8 Important for laser products

1.CLASS 1 LASER PRODUCT


2.DANGER : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

3.CAUTION : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.

4.CAUTION : The CD,MD and DVD player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

5.CAUTION : If safety switches malfunction, the laser is able to function.

6.CAUTION : Use of controls, adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.

 **CAUTION** Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated.

AVOID DIRECT EXPOSURE TO BEAM.

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.

VARNING : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen.

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alltiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi.

REPRODUCTION AND POSITION OF LABELS

WARNING LABEL

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)	VARNING : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alltiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
---	--	---	---

CLASS 1
LASER PRODUCT

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alltiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
VARNING : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

SECTION 2 SPECIFIC SERVICE INSTRUCTIONS

This service manual does not describe SPECIFIC SERVICE INSTRUCTIONS.




SECTION 3 DISASSEMBLY

3.1 Main body section

3.1.1 Removing the metal cover

(See Figs.1 to 3)

- (1) From the both sides of the main body, remove the two screws **A** attaching the metal cover. (See Figs.1 and 2.)
- (2) From the back side of the main body, remove the six screws **B** attaching the metal cover. (See Fig.3.)
- (3) Remove the metal cover from the main body while lifting the rear section of the metal cover in the direction of the arrow. (See Figs.1 and 2.)

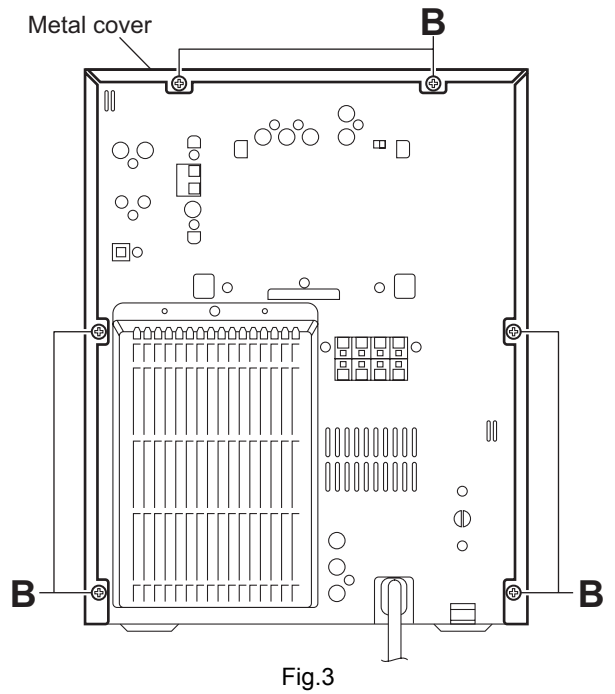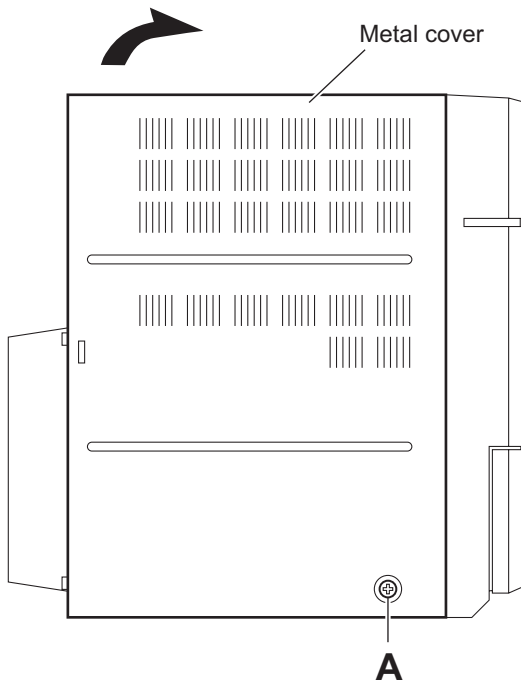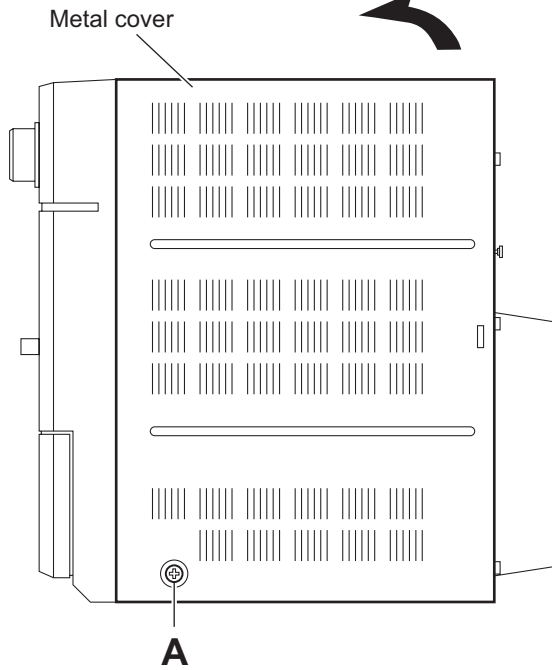

3.1.2 Removing the front panel assembly (See Figs.4 to 7)

- Prior to performing the following procedures, remove the metal cover.

(1) From the right side of the main body, remove the screw **C** attaching the earth wires on the reverse side of the main board. (See Fig.4.)

Reference:

After attaching the earth wires, fix them with a spacer as before. (See Fig.4.)

(2) Remove the plastic rivet attaching the main board. (See Fig.4.)

(3) From the inside of the main body, disconnect the card wires from the connectors (CN303, CN860, CN880) on the forward side of the main board. (See Fig.4.)

(4) Remove the wire clamp fixing the wires and disconnect the wires from the connectors (CN301, CN302) on the forward side of the main board. (See Fig.5.)

Reference:

After connecting the wires to the connectors, fix the wires with the wire clamp as before. (See Fig.5.)

(5) Disconnect the wire from the connector CN454 on the forward side of the main board. (See Fig.5.) **[UW/UE version only]**

(6) From the left side of the main body, disconnect the parallel wire from the connector CN101 on the transformer board. (See Fig.5.)

(7) Disconnect the wire from the connector CN119 on the transformer board. (See Fig.5.)

Reference:

After connecting the wire, pass the wire through the slot **a** of the holder board as before. (See Fig.5.)

(8) Remove the tie band fixing the wire and disconnect the wire from the connector CN106 on the speaker terminal board. (See Fig.5.)



Reference:

- After connecting the wire, fix the wire with a new tie band as before. (See Fig.5.)
- After connecting the wire, pass the wire through the slot **a** of the holder board as before. (See Fig.5.)

(9) From the top side of the main body, remove the two screws **D** attach the front panel assembly to the main body. (See Fig.6.)

(10) From the bottom side of the main body, remove the three screws **E** and two screws **F** attaching the front panel assembly. (See Fig.7.)

(11) Release the claws **b**, remove the front panel assembly from the main body in the direction of the arrow. (See Fig.7.)

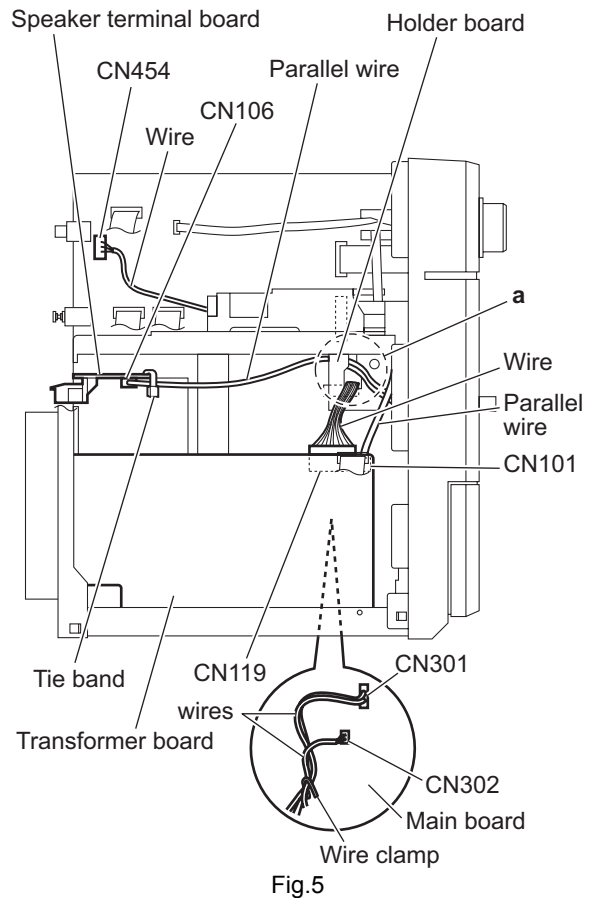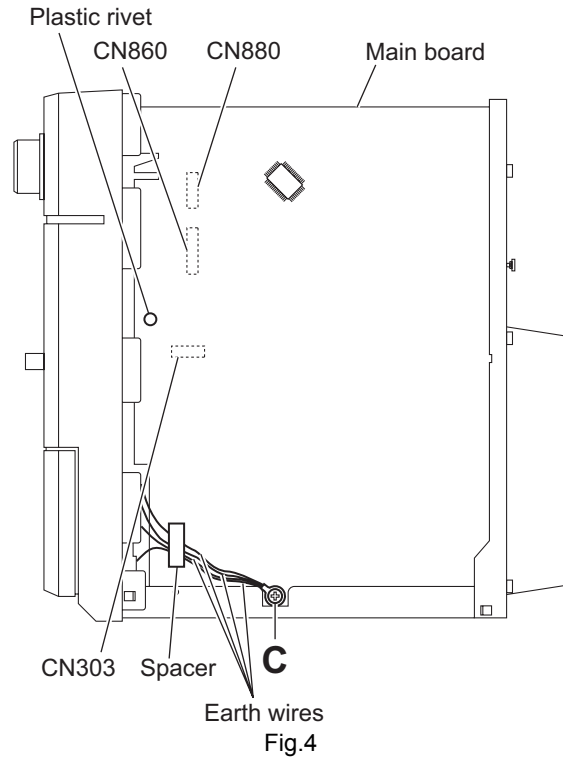

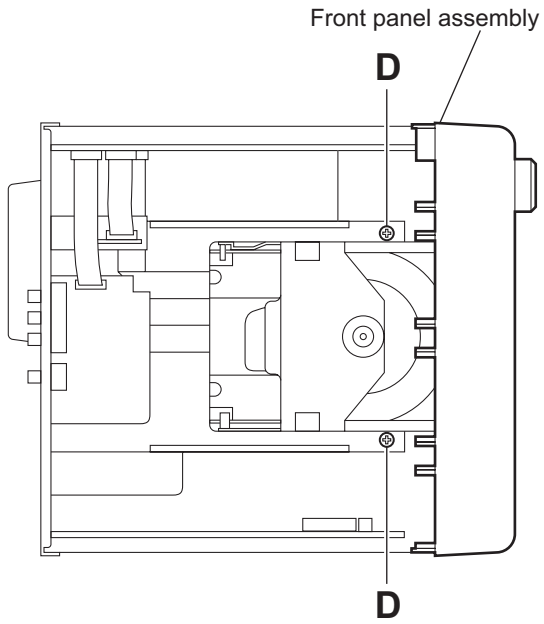


Fig.6


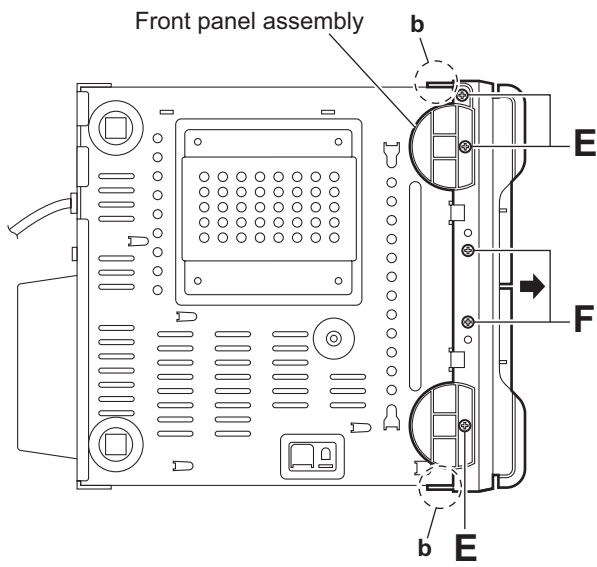


Fig.7


3.1.3 Removing the tuner (See Figs.8 and 9.)

- Prior to performing the following procedures, remove the metal cover.
 - (1) From the top side of the main body, disconnect the card wire from the connector [CN21](#) on the main board. (See Fig.8.)
 - (2) From the back side of the main body, remove the two screws **G** attaching the tuner to the rear panel. (See Fig.9.)

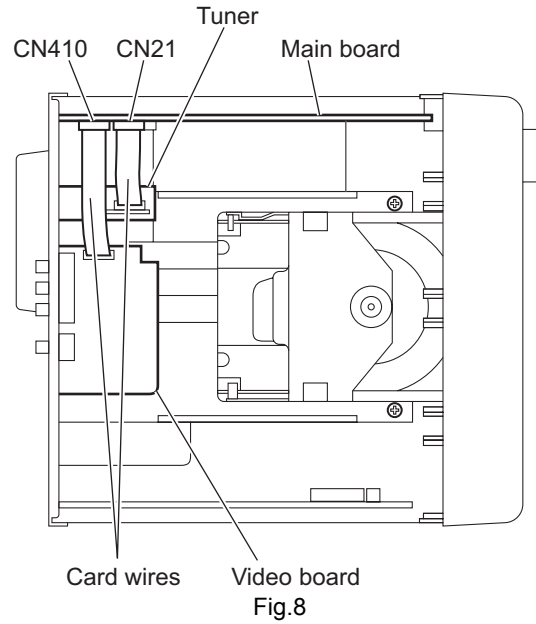

3.1.4 Removing the video board (See Figs.8 and 9.)

- Prior to performing the following procedures, remove the metal cover.
 - (1) From the top side of the main body, disconnect the card wire from the connector [CN410](#) on the main board. (See Fig.8.)
 - (2) From the back side of the main body, remove the three screws **H** attaching the video board to the rear panel. (See Fig.9.)

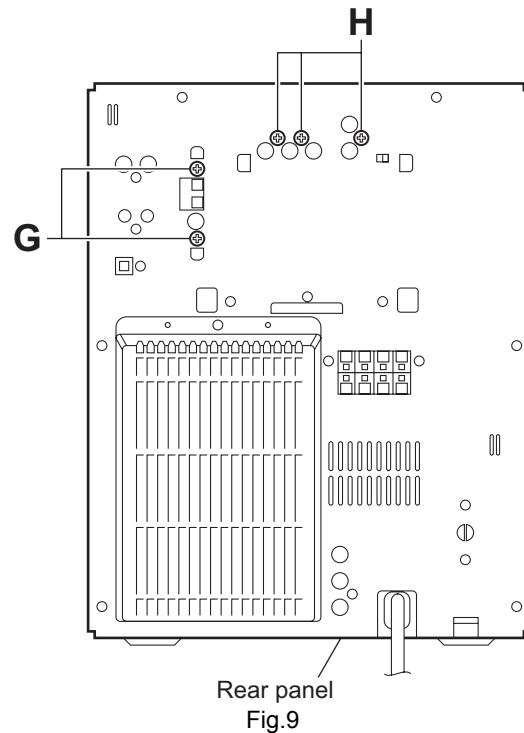

3.1.5 Removing the rear panel (See Figs.8 to 11)

- Prior to performing the following procedures, remove the metal cover.

- (1) From the back side of the main body, remove the screw **J** attaching the rear cover. (See Fig.10.)
- (2) Release the sections **c** and remove the rear cover from the rear panel. (See Fig.10.)
- (3) Remove the two screws **K** and eighteen screws **L** attaching the rear panel. (See Fig.11.)
- (4) Remove the screw **L'** attaching the rear panel.(See Fig.11.) **[US/UX/UN version only]**

Reference:

Remove the tuner and video board as required. (See Figs.8 and 9.)

- (5) From the both sides of the main body, release the sections **d** of the center chassis in the direction of the arrow and release the joints **e** attaching the rear panel to the bottom chassis. (See Fig. 11.)

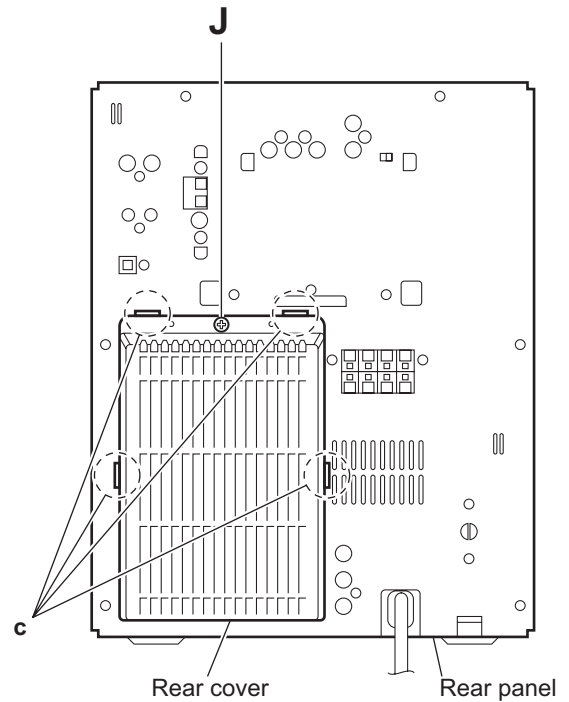


Fig.10

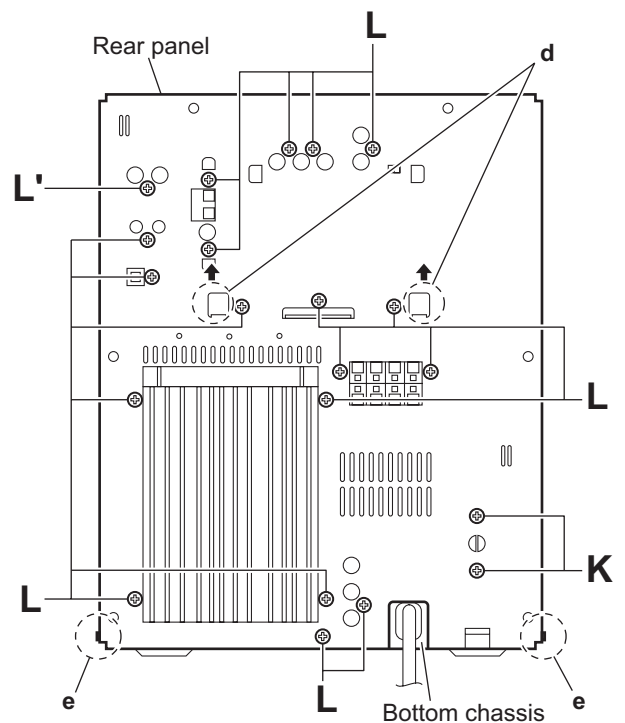


Fig.11

3.1.6 Removing the DVD mechanism assembly (See Figs.12 and 13)

- Prior to performing the following procedures, remove the metal cover, tuner and video board.

- (1) From the top side of the main body, remove the three screws **M** attaching the DVD mechanism assembly on the center chassis. (See Fig.12.)
- (2) From the forward side of the main board, disconnect the card wires from the connectors ([CN11](#), [CN522](#), [CN523](#), [CN524](#), [CN531](#)). (See Fig.12.)

Reference:

When reassembling, pass the card wire through the section **f** of the main board before connecting the card wire to the connector [CN11](#). (See Fig.12.)

- (3) Remove the spacer fixing the card wires. (See Fig.12.)

Reference:

After connecting the card wires, fix them with the spacer as before. (See Fig.12.)

- (4) From the inside of the main body, take out the DVD mechanism assembly.
- (5) Remove the tray fitting from the DVD mechanism assembly in the direction of the arrow. (See Fig.13.)

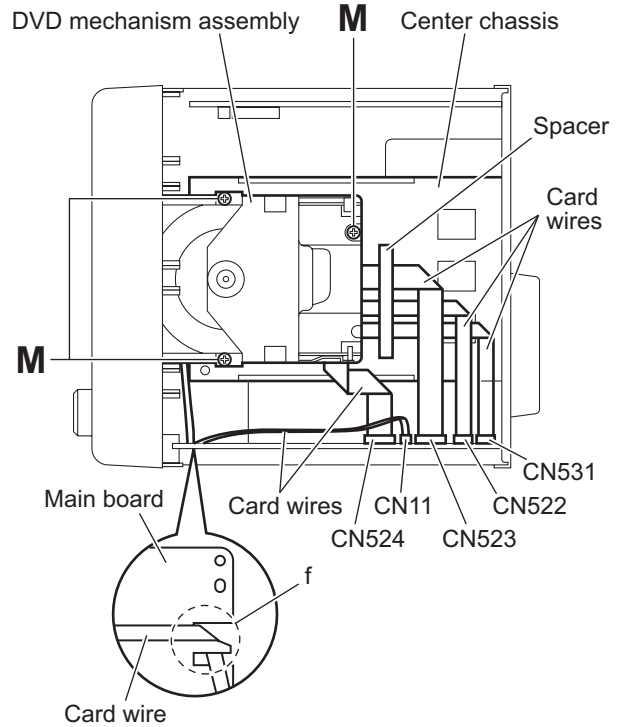


Fig.12

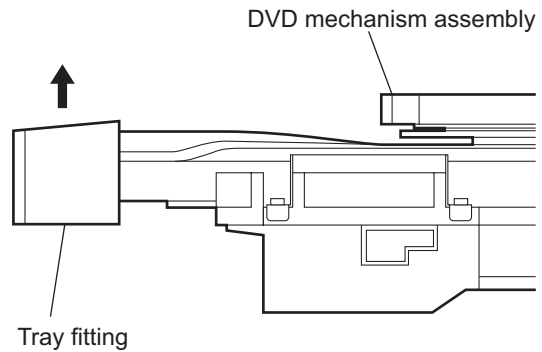


Fig.13

3.1.7 Removing the main board (See Figs.14 and 15)

- Prior to performing the following procedures, remove the metal cover, tuner, video board and rear panel.

(1) From the right side of the main body, remove the screw **N** attaching the earth wires on the reverse side of the main board. (See Fig.14.)

Reference:

After attaching the earth wires, fix them with a spacer as before. (See Fig.14.)

(2) Remove the plastic rivet attaching the main board. (See Fig.14.)

(3) From the inside of the main body, disconnect the card wires from the connectors (CN11, CN303, CN522, CN523, CN524, CN860, CN880) on the forward side of the main board. (See Figs.14 and 15.)

Reference:

When reassembly, pass the card wire through the section **f** of the main board before connecting the card wire to the connector **CN11**. (See Figs.14 and 15.)

(4) Disconnect the wire from the connector **CN454** on the forward side of the main board. (See Figs.14 and 15.) **[UW/UE version only]**

(5) Remove the wire clamp fixing the wires and disconnect the wires from the connector (CN301, CN302) on the forward side of the main board. (See Fig.15.)

Reference:

After connecting the wires to the connectors, fix the wires with the wire clamp as before. (See Fig.15.)

(6) Disconnect the parallel wire from the connectors (CN217, CN218, CN219) on the main board. (See Fig.15.)

(7) Release the lock **g** of the connector **CN216** on the main board in the direction of the arrow 1 and disconnect the main board from the connector **CN206** on the speaker terminal board toward this side. (See Fig.14.)



Note:

When releasing the lock **g** of the connector **CN216**, take care not to break the lock. (See Fig.14.)

(8) Release the lock **h** of the connector **CN201** on the primary board in the direction of the arrow 2 and disconnect the connector **CN211** on the main board from the connector **CN201** in the direction of the arrow 3. (See Fig.14.)

Note:

When releasing the lock **h** of the connector **CN201**, take care not to break the lock. (See Fig.14.)

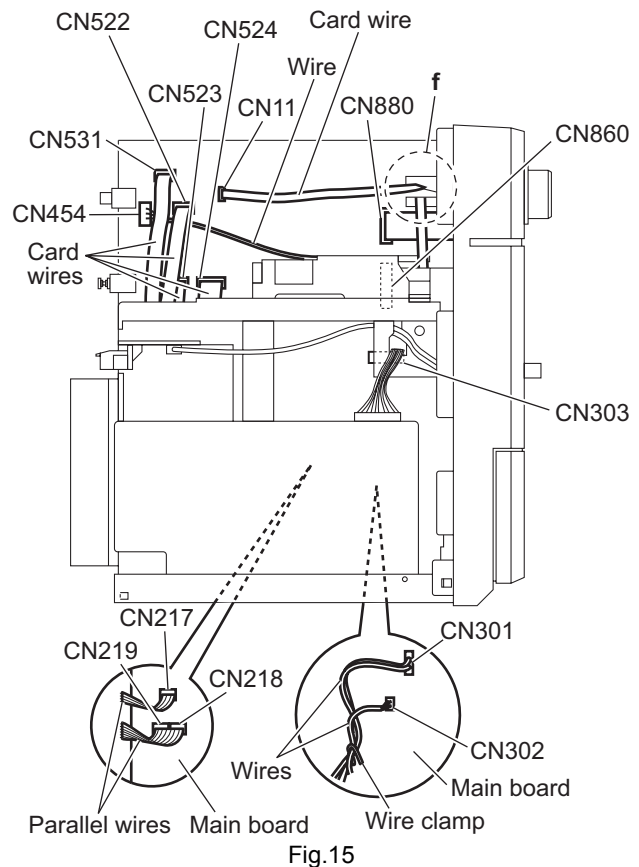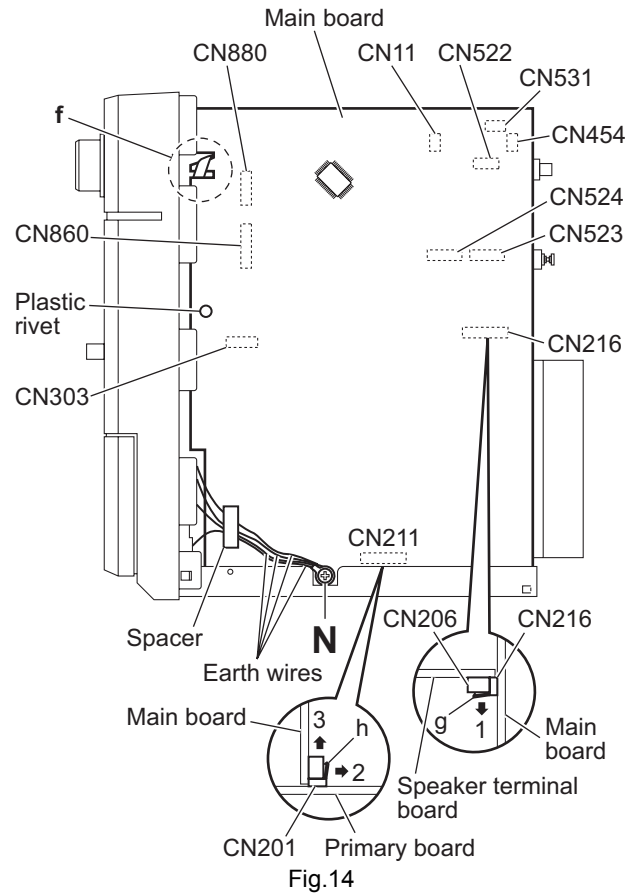

3.1.8 Removing the center chassis assembly (See Fig.16)

- Prior to performing the following procedures, remove the metal cover, tuner, video board and rear panel.

(1) From the top side of the main body, disconnect the card wires from the connectors (CN11, CN522, CN523, CN524) on the main board.

Reference:

When reassembling, pass the card wire through the section **f** of the main board before connecting the card wire to the connector CN11.

- (2) Disconnect the wire from the connector CN105 on the speaker terminal board.
- (3) Remove the two screws **P** attaching the center chassis assembly.
- (4) Take out the center chassis assembly from the main body.

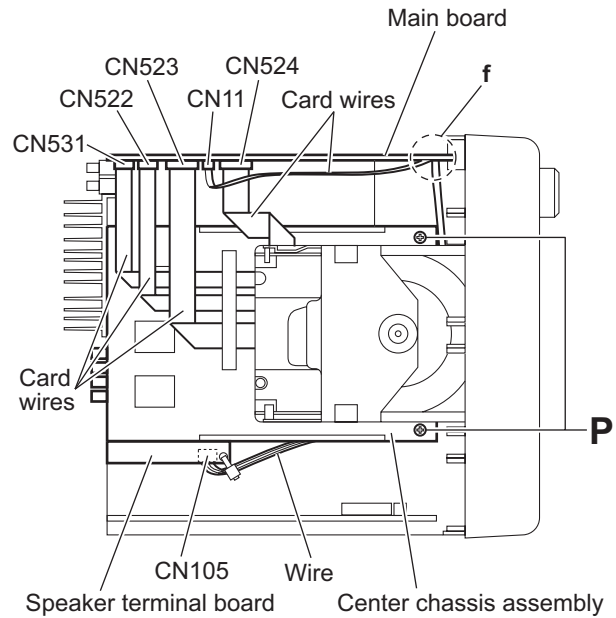


Fig.16

3.1.9 Removing the fan (See Fig.17)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel and center chassis assembly.

From the bottom side of the center chassis assembly, remove the two screws **Q** attaching the fan.


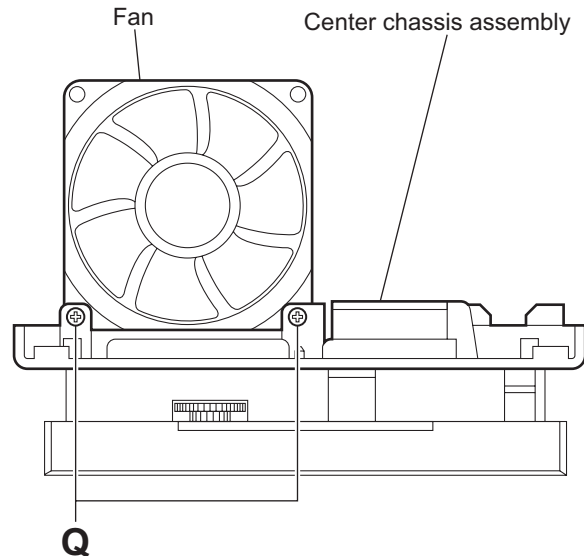


Fig.17

3.1.10 Removing the transformer board

(See Fig.18)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel and center chassis assembly.
 - (1) From the top side of the main body, disconnect the wire and power cord from the connectors (CN119, CN250) on the transformer board.
 - (2) Disconnect the parallel wire from the connector CN101 on the transformer board.
 - (3) Remove the four screws **R** attaching the transformer board and take out the transformer board from the main body.

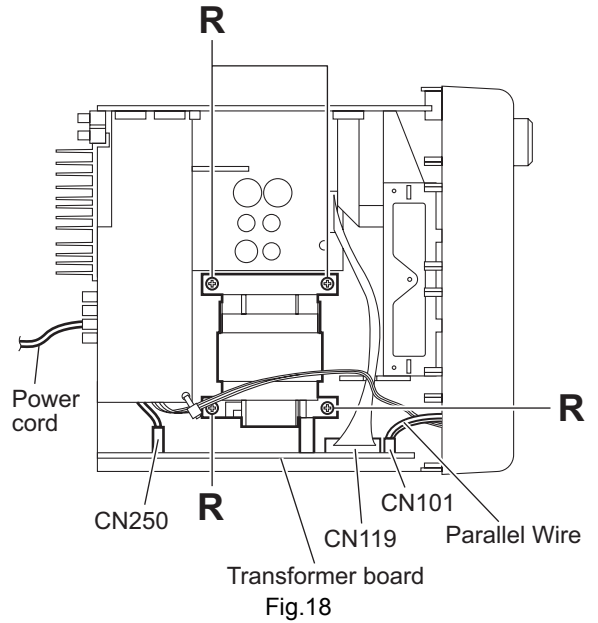

3.1.11 Removing the speaker terminal board


(See Fig.19.)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board and center chassis assembly.
 - (1) From the top side of the main body, remove the tie band fixing the parallel wire.

Reference:



After connecting the parallel wire, fix it with the new tie band.

- (2) Disconnect the parallel wire from the connector CN106 on the speaker terminal board.
- (3) Release the locks (i, j) of the connectors (CN205, CN214) and disconnect the speaker terminal board in an upward direction.

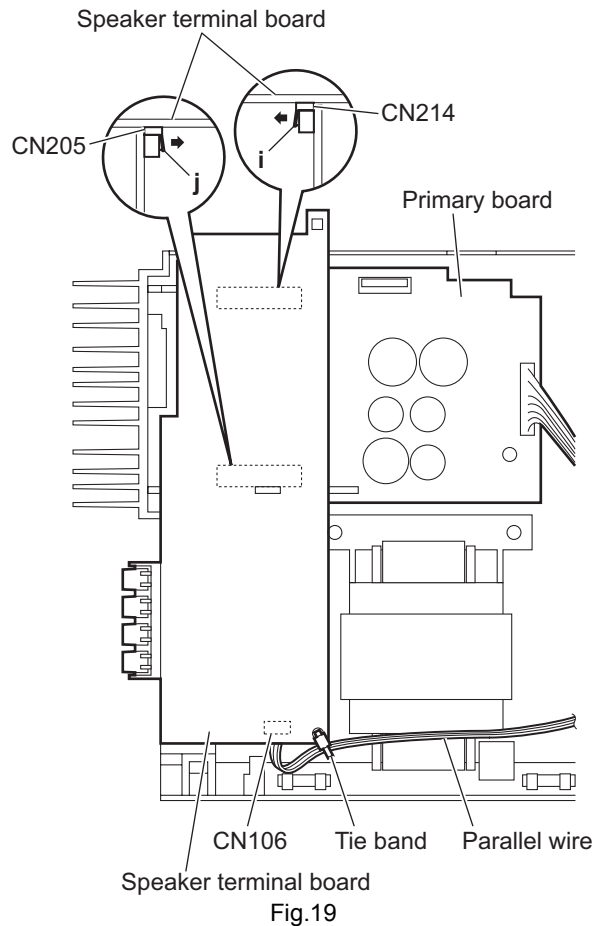

3.1.12 Removing the regulator & surround amplifier board and main & subwoofer amplifier board (See Figs.20 and 21)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board, center chassis assembly and speaker terminal board.
 - (1) From the top side of the main body, disconnect the regulator & surround amplifier and main & subwoofer amplifier boards in an upward direction while releasing the locks (**k**, **m**) of the connectors ([CN202](#), [CN203](#)) on the primary board. (See Fig.20.)
 - (2) Take out the regulator & surround amplifier and main & subwoofer amplifier boards at the same time from the main body.
 - (3) Remove the two screws **S** attaching the leaf spring to the heat sink.
 - (4) Remove the two screws **T** attaching the regulator & surround amplifier board and remove the regulator & surround amplifier board from the heat sink. (See Fig.21.)
 - (5) Remove the four screws **U** attaching the main & subwoofer amplifier board to the heat sink. (See Fig.21.)

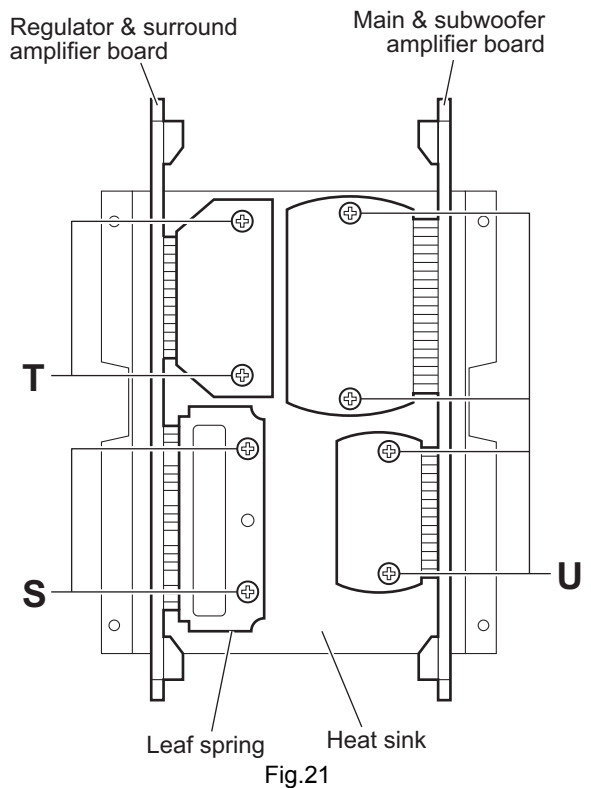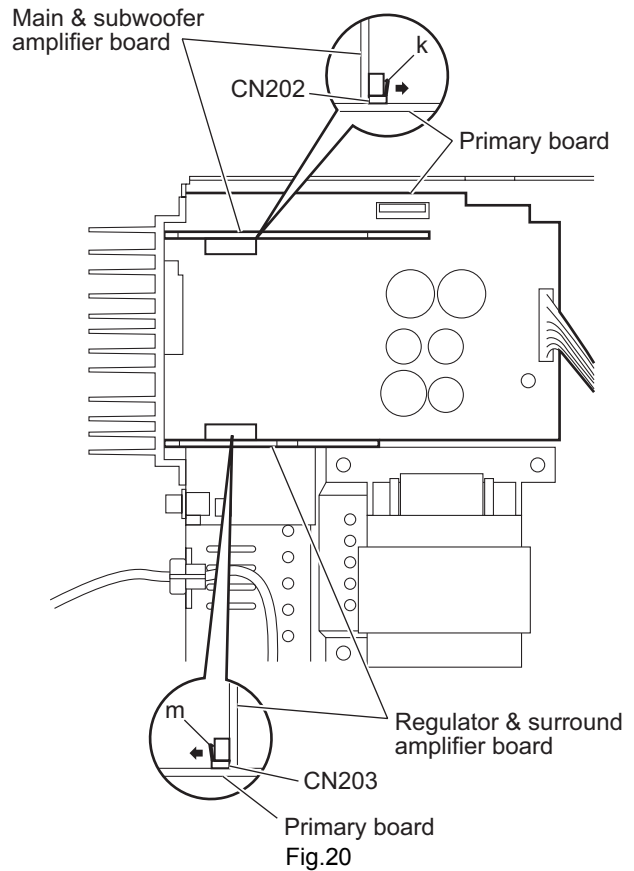


3.1.13 Removing the primary board (See Fig.22)

- Prior to performing the following procedure, remove the metal cover, tuner, video board, rear panel, main board, center chassis assembly, speaker terminal board and regulator & surround amplifier board and main & subwoofer amplifier board.
 - (1) From the top side of the main body, disconnect the wire from the connector [CN119](#) on the transformer board.

Reference:

Pass the wire through the slot **n** of the holder board before connecting the wire to the connector [CN119](#).

- (2) Remove the screw **V** attaching the primary board on the bottom chassis.
- (3) Remove the section **p** of the primary board and take out the primary board from the main body.

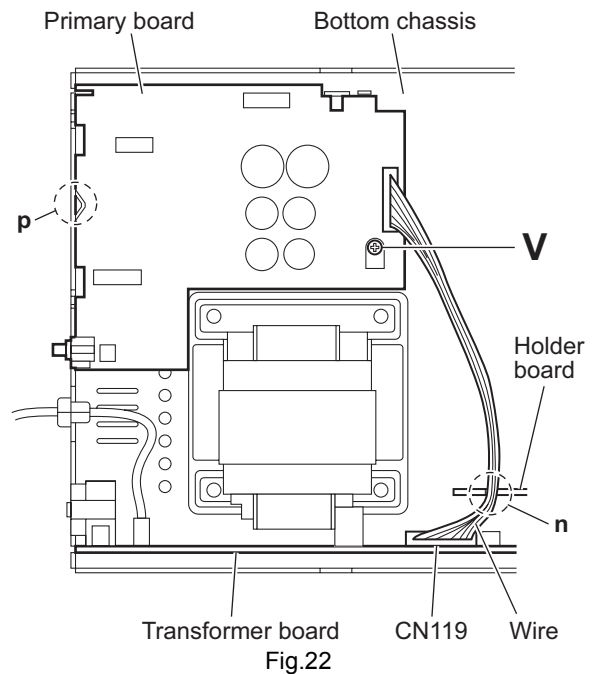

3.1.14 Removing the FL board (See Figs.23 and 24)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
 - (1) From the front side of the front panel assembly, pull the volume knob out of the front panel assembly. (See Fig.23.)
 - (2) From the inside of the front panel assembly, remove the six screws **W** attaching the FL board. (See Fig.24.)
 - (3) Release the claws **q** in the direction of the arrow and take out the FL board from the front panel assembly. (See Fig.24.)


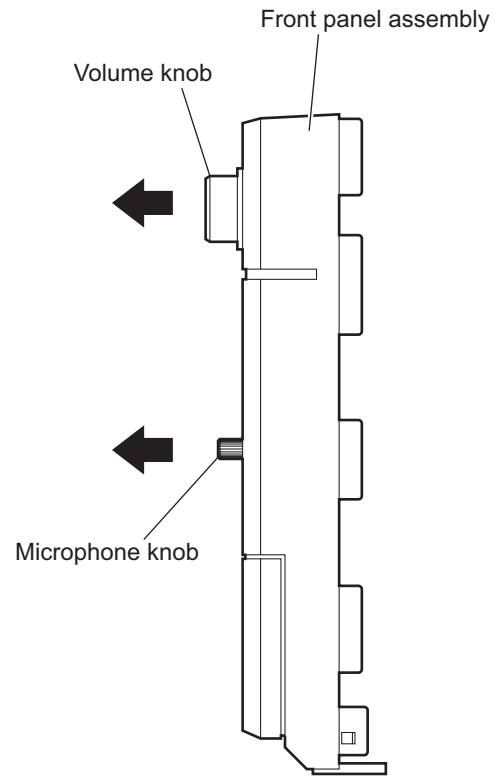


Fig.23

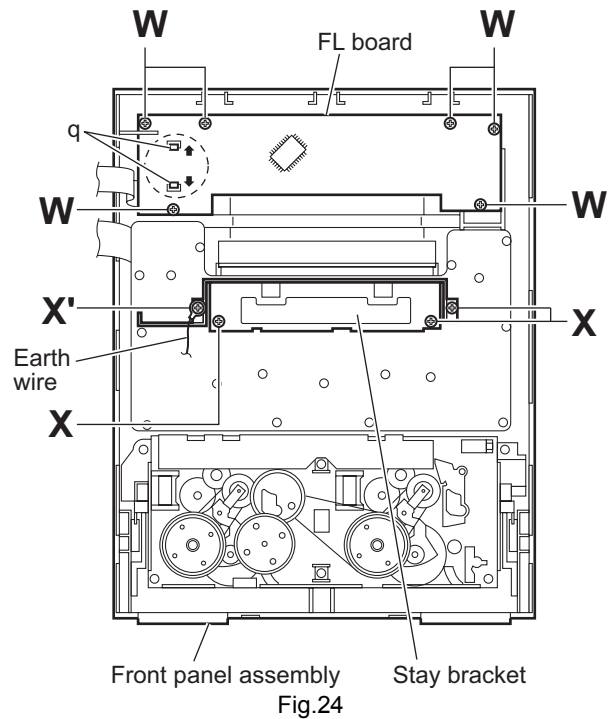

3.1.15 Removing the switch board
(See Figs.23 to 25)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
 - (1) From the front side of the front panel assembly, pull the microphone knob out of the front panel assembly. (See Fig.23.) **[US/UX/UN version only]**
 - (2) From the inside of the front panel assembly, remove the three screws **X** and screw **X'** attaching the stay bracket. (See Fig.24.)

Reference:

When attaching the screw **X'**, attach the earth wire with it.

- (3) Remove the ten screws **Y** and screw **Y'** attaching the switch board. (See Fig.25.)

Reference:

When attaching the screw **Y'**, attach the wire holder with it.

- (4) Take out the switch board from the front panel assembly.

3.1.16 Removing the cassette mechanism assembly
(See Fig.25)

- Prior to performing the following procedures, remove the metal cover and front panel assembly.
 - (1) From the inside of the front panel assembly, remove the five screws **Z**, screw **Z'** attaching the cassette mechanism assembly.
 - (2) Take out the cassette mechanism assembly from the front panel assembly.

Reference:

- When attaching the screw **Y'**, attach the earth wire with it.
- When attaching the screws **Z**, attach the swing cam (L)/(R) with them.

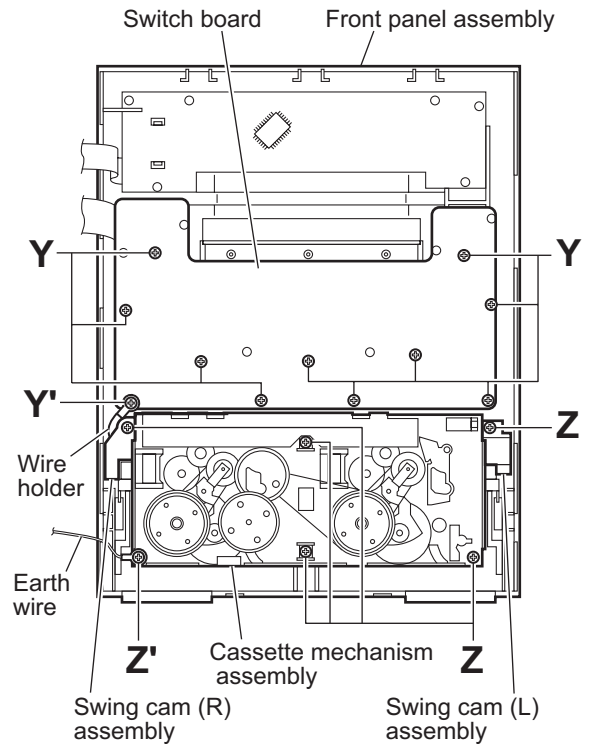





Fig.25

3.2 DVD mechanism section

- Remove the DVD mechanism assembly from the main body.
(See "3.1.6 Removing the DVD mechanism assembly".)


3.2.1 Removing the tray assembly (See Figs.1 to 3)

- (1) From the right side of the DVD mechanism assembly, push the slide cam and pull the tray assembly out of the DVD mechanism assembly in the direction of the arrow. (See Fig.1.)
- (2) From the top side of the DVD mechanism assembly, remove the two screws **A** attaching the leaf spring to the bushing and remove the leaf spring. (See Fig.2.)
- (3) Remove the bushing of the tray assembly from the projection **a** on the DVD mechanism assembly and move the tray assembly in the direction of the arrow. (See Fig.3.)
- (4) Remove the claw **b** of the tray assembly from the DVD mechanism assembly and take out the tray assembly. (See Fig.3.)

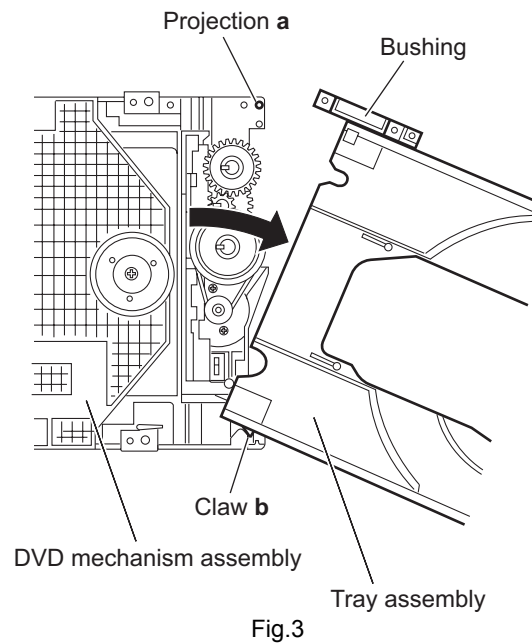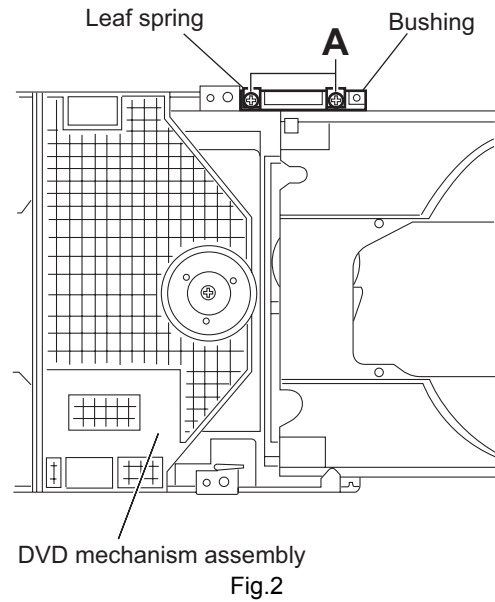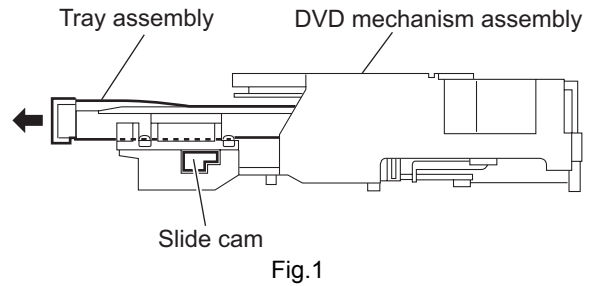

3.2.2 Removing the traverse mechanism assembly (See Figs.4)

- (1) From the bottom side of the DVD mechanism assembly, remove the four screws **B** attaching the traverse mechanism assembly and take out the DVD traverse mechanism assembly with the DVD servo board.


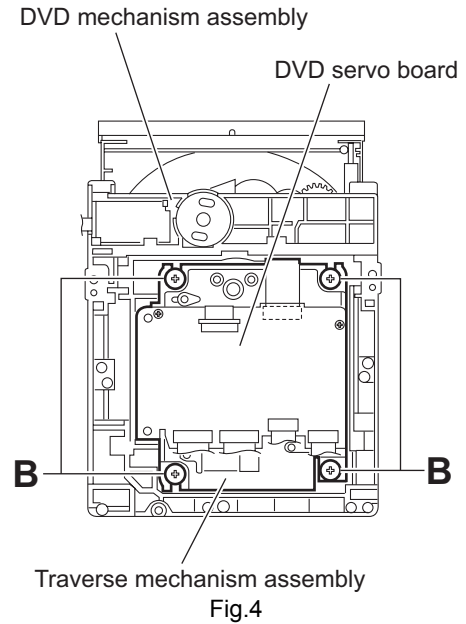


3.2.3 Removing the DVD servo board (See Figs.5 and 6)

- Remove the traverse mechanism assembly.
 - (1) From the side of the traverse mechanism assembly, solder the short land sections **c** on the pickup. (See Fig.5.)
 - (2) From the bottom side of the traverse mechanism assembly, release the lock of the connector **CN101** on the DVD servo board in the direction of the arrow 1 and disconnect the card wire. (See Fig.6.)

Caution:

- Solder the short land sections **c** on the pickup before disconnecting the card wire from the connector **CN101** on the DVD servo board. If the card wire is disconnected without attaching solder, the pickup may be destroyed by static electricity. (See Figs.5 and 6.)
 - When attaching the DVD servo board, be sure to remove solders from the short land sections **c** after connecting the card wire to the connector **CN101** on the DVD servo board. (See Figs.5 and 6.)
- (3) Disconnect the card wire from the connector **CN201** on the DVD servo board. (See Fig.6.)
 - (4) Remove the two screws **C** attaching the DVD servo board. (See Fig.6.)
 - (5) Remove the DVD servo board from the engagement section **d** in an upward and remove the engagement section **f** in the direction 3 while removing the engagement section **e** in the direction of the arrow 2. (See Fig.6.)

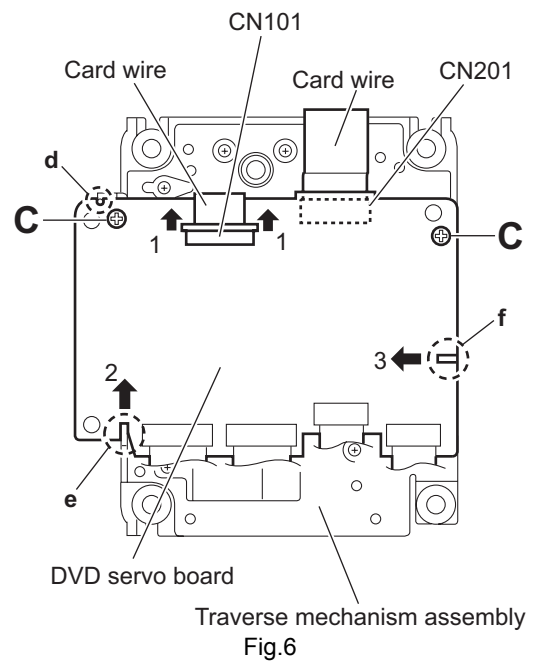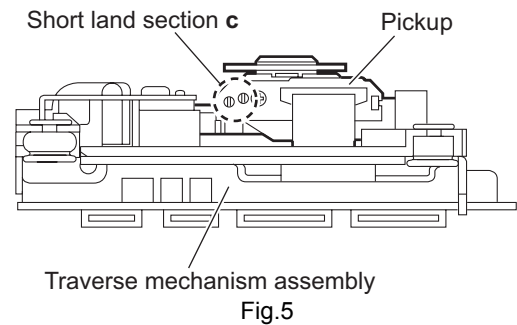

3.2.4 Removing the pickup (See Figs.5,7 to 9)

- Remove the traverse mechanism assembly.

- (1) From the side of the traverse mechanism assembly, solder the short land sections **c** on the pickup. (See Fig.5.)
- (2) Release the lock of the connector on the pickup in the direction of the arrow and disconnect the card wire. (See Fig.7.)

Caution:

- Solder the short land sections **c** on the pickup before disconnecting the card wire from the connector on the pickup. If the card wire is disconnected without attaching solder, the pickup may be destroyed by static electricity. (See Figs.5 and 7.)
- When attaching the pickup, be sure to remove solders from the short land sections **c** after connecting the card wire to the connector on the pickup. (See Figs.5 and 7.)

- (3) Remove the screw **D** attaching the plate and thrust spring. (See Fig.7.)
- (4) Remove the engagement section **g** attaching the plate to the feed holder and remove the plate with the thrust spring. (See Fig.7.)
- (5) Remove the shaft of the pickup from the section **h** on the traverse mechanism assembly and remove the shaft from the section **i** while moving it in the direction of the arrow. (See Fig.8.)
- (6) Remove the pickup from the section **j** of the traverse mechanism assembly and take out the pickup with the shaft. (See fig.8.)
- (7) From the bottom side of the pickup, remove the two screws **E** attaching the SW actuator and LEAD spring. (See Fig.9.)
- (8) Pull the shaft out of the pickup. (See Fig.9.)

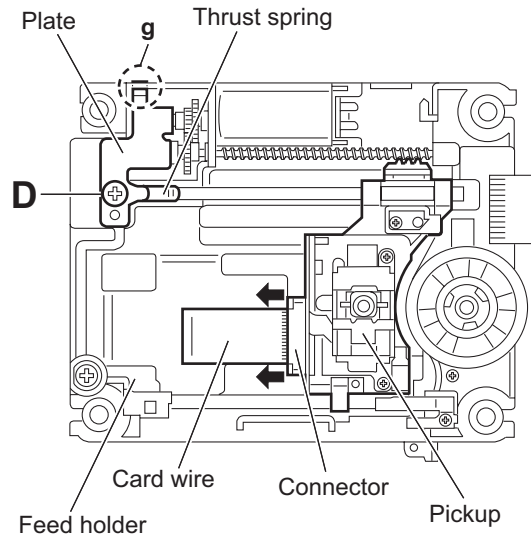


Fig.7

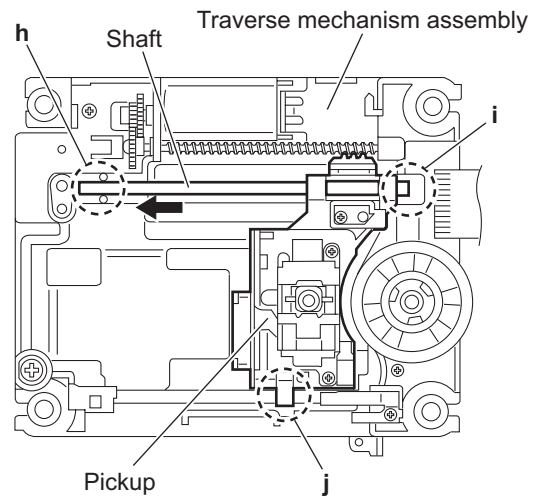


Fig.8

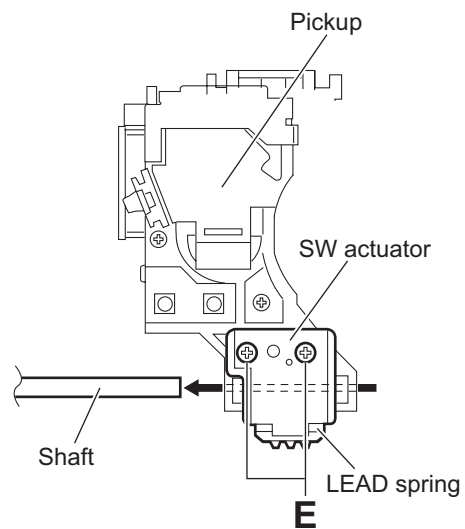


Fig.9

3.2.5 Attaching the pickup (See Figs.5,7 to 10)

- See "3.3.4 Removing the pickup".
 - (1) Attach the shaft, SW actuator and LEAD spring to the pickup. (See Fig.9.)
 - (2) Align the pickup to the section *j* of the traverse mechanism assembly first, and set the both ends of the shaft of the pickup in the sections *g* and *i* of the traverse mechanism assembly. (See Fig.8.)
 - (3) Attach the plate and thrust spring. (See Fig.7.)
 - (4) Remove solders from the short land sections *c* after connecting the card wire to the connector on the pickup. (See Figs.5 and 7.)
 - (5) Turn the feed gear M in the direction of the arrow 1 to move the pickup in the direction of the arrow 2. (See Fig.10.)

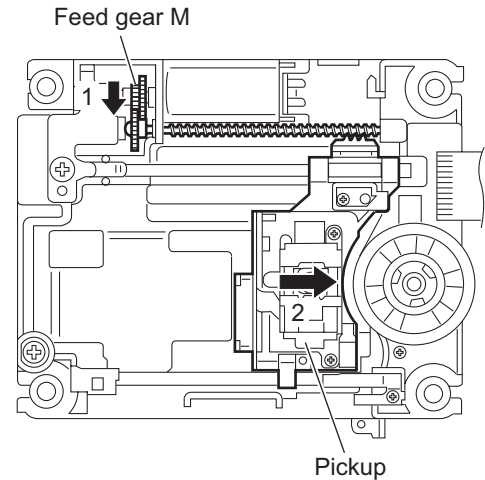


Fig.10

3.2.6 Removing the feed motor (See Figs.7,11 and 12)

- Remove the traverse mechanism assembly.
 - (1) From the top side of the traverse mechanism assembly, remove the screw *D* attaching the plate and thrust spring. (See Fig.7.)
 - (2) Remove the engagement section *g* attaching the plate to the feed holder and remove the plate with the thrust spring. (See Fig.7.)
 - (3) Remove the wires from the soldered section *k* on the spindle motor board. (See Fig.11.)

Reference:

When attaching the feed motor, pass the wire through the section *m* on the spindle base. (See Fig.11.)

- (4) Remove the feed holder, feed motor, lead screw, feed gear E and feed gear M at the same time after removing the two screws *F* attaching the feed holder. (See Fig.11.)
- (5) From the side of the feed holder, remove the two screws *G* attaching the feed motor. (See Fig.12.)

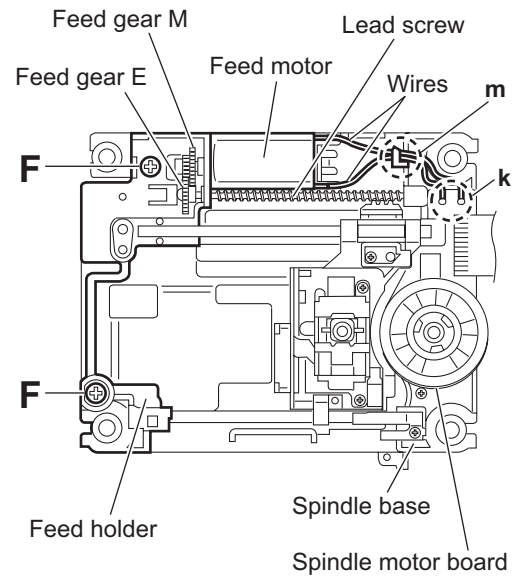


Fig.11

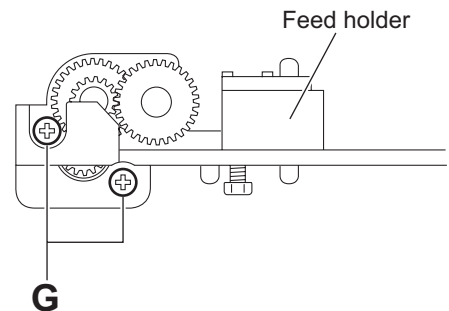


Fig.12

3.2.7 Removing the spindle motor board (See Figs.11 and 13)

- Remove the traverse mechanism assembly.
- Remove the DVD servo board.
 - From the top side of the traverse mechanism assembly, remove the wires from the soldered section **k** on the spindle motor board. (See Fig.11.)
 - From the bottom side of the traverse mechanism assembly, remove the three screws **H** attaching the spindle motor board. (See Fig.13.)

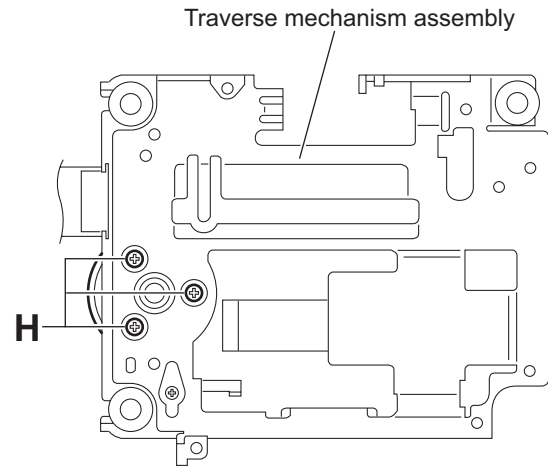


Fig.13

3.2.8 Removing the switch board (See Fig.14.)

- From the bottom side of the DVD mechanism assembly, remove the wires from the soldered section **n** on the switch board.
- Lift the switch board while pressing the claw **p** of the DVD mechanism assembly in the direction of the arrow and remove it from the section **q**.

Reference:

- Put the wires on the section **r** after attaching the switch board to the DVD mechanism assembly.
- Fix the claw **p** on the DVD mechanism assembly with bonds after attaching the switch board.

3.2.9 Removing the motor (See Figs.14 and 15)

- Remove the tray assembly.
 - From the bottom side of the DVD mechanism assembly, remove the wires from the soldered section **n** on the switch board. (See Fig.14.)
 - From the top side of the DVD mechanism assembly, remove the belt from the motor pulley. (See Fig.15.)

Note:

Take care not to attach grease on the belt.

- Remove the two screws **J** attaching the motor to the DVD mechanism assembly and take out the motor from the bottom side of the DVD mechanism assembly. (See Fig.15.)

Reference:

Put the wires on the section **r** after attaching the motor to the DVD mechanism assembly. (See Fig.14.)

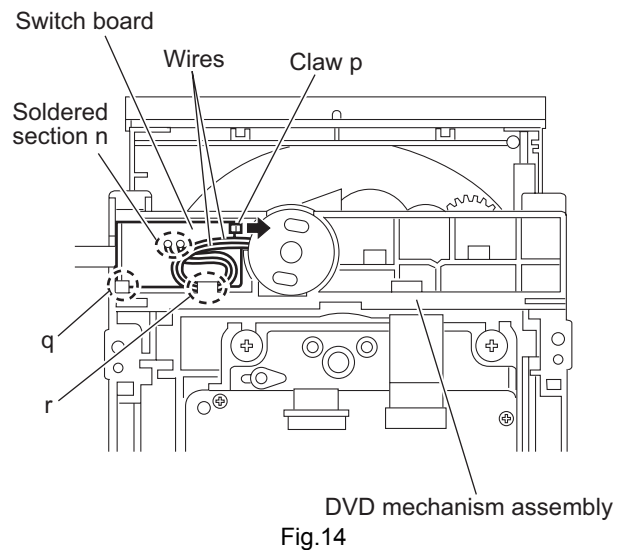


Fig.14

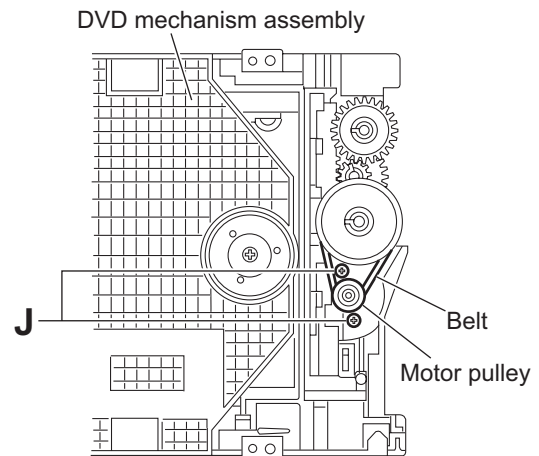


Fig.15

3.3 Cassette mechanism assembly section

- Prior to performing the following procedures, remove the cassette mechanism assembly.
(See "3.1.16 Removing the cassette mechanism assembly".)

3.3.1 Removing the main motor and replacing the main belts (See Figs.1 and 2)

- (1) From the front side of the cassette mechanism assembly, remove the two screws **A** attaching the main motor. (See Fig.1.)
- (2) From the back side of the cassette mechanism assembly, remove the wires from the soldered sections **a** on the switch board. (See Fig.2.)

Caution:

After reassembling, check the direction of the main motor and polarity of the wires. (See Fig.2.)

- (3) Remove the main motor and main belts. (See Fig.2.)

Note:

When attaching the main belts, take care not to attach grease on the main belts.

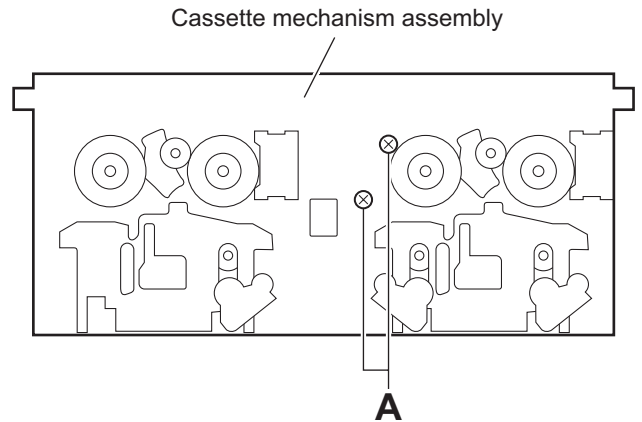


Fig.1

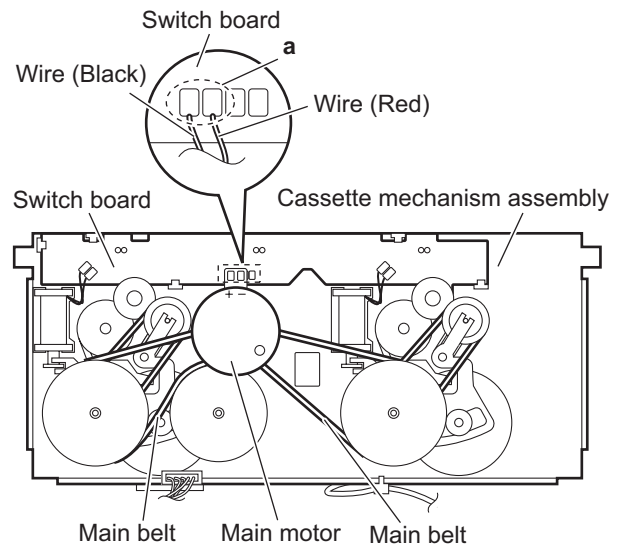


Fig.2

3.3.2 Replacing the F/R belts (See Fig.3)

- Prior to performing the following procedures, remove the main motor and main belts.
- Remove the wires of the main motor as required.
From the back side of the cassette mechanism assembly, remove the F/R belts from the flywheel 1 and flywheel 2.

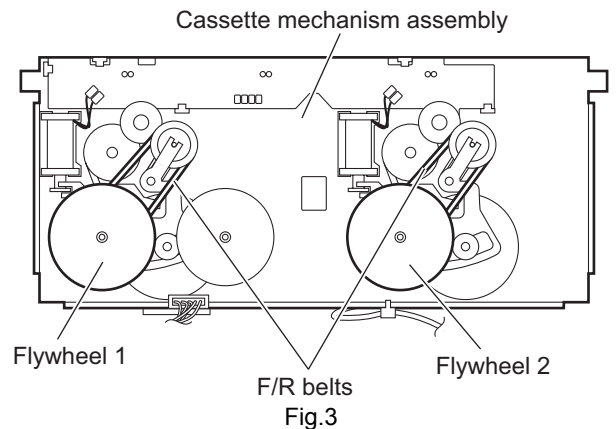


Fig.3

3.3.3 Removing the clutch assemblies (See Figs.4 to 7)

- Prior to performing the following procedures, remove the main motor, main belts and F/R belts.
- Remove the wires of the main motor as required.
- (1) From the front side of the cassette mechanism assembly, remove the three slit washers attaching the flywheel 1, flywheel 2 and flywheel 3. (See Fig.4.)
- (2) From the back side of the cassette mechanism assembly, pull out the flywheel 1, flywheel 2 and flywheel 3. (See Fig.5.)
- (3) Remove the stoppers in an upward direction. (See Fig.5.)
- (4) Remove the springs from the sections **b**. (See Fig.6.)
- (5) Release the claws **c** in the direction of the arrow, remove the plates and pulleys. (See Fig.6.)
- (6) Release the claws **d** in the direction of the arrow, remove the guide arms. (See Fig.7.)

Note:

When attaching the guide arms, attach the springs with them as before. (See Fig.7.)

- (7) Remove the cam gears in an upward direction. (See Fig.7.)
- (8) Take out the clutch assemblies from the cassette mechanism assembly. (See Fig.7.)

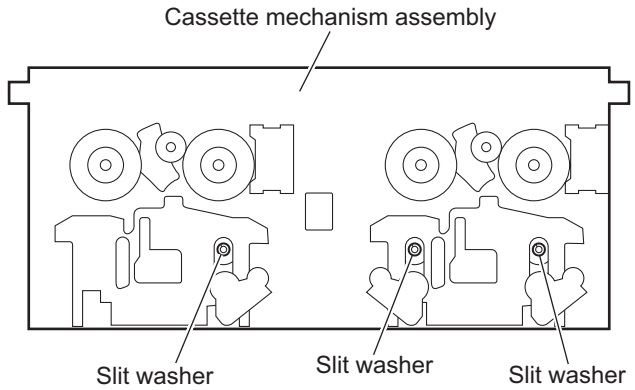


Fig.4

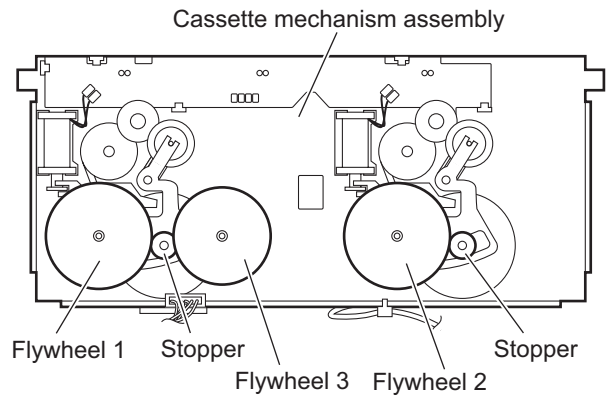


Fig.5

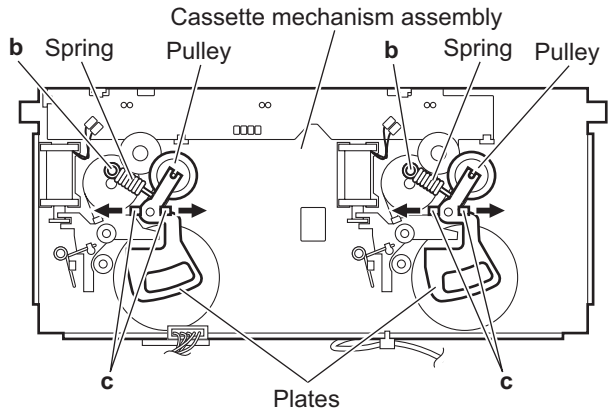


Fig.6

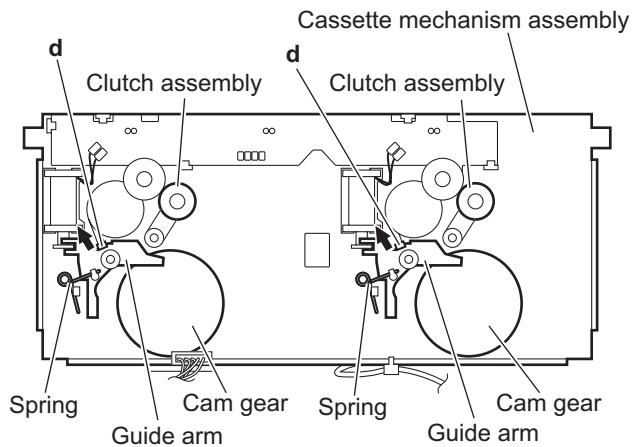


Fig.7

3.3.4 Removing the leaf switches

(See Fig.8)

- (1) From the back side of the cassette mechanism assembly, remove the solders from the soldered sections **e** attaching the leaf switches on the switch board.
- (2) From the front side of the cassette mechanism assembly, pull out the leaf switches.

3.3.5 Removing the switch board

(See Fig.8)

- (1) From the back side of the cassette mechanism assembly, remove the solders from the soldered sections (**f, g**) connecting the wires.

Note:

After reassembling, check the polarity of the wires.

- (2) Release the claws **h** in the direction of the arrow and remove the switch board from the cassette mechanism assembly.

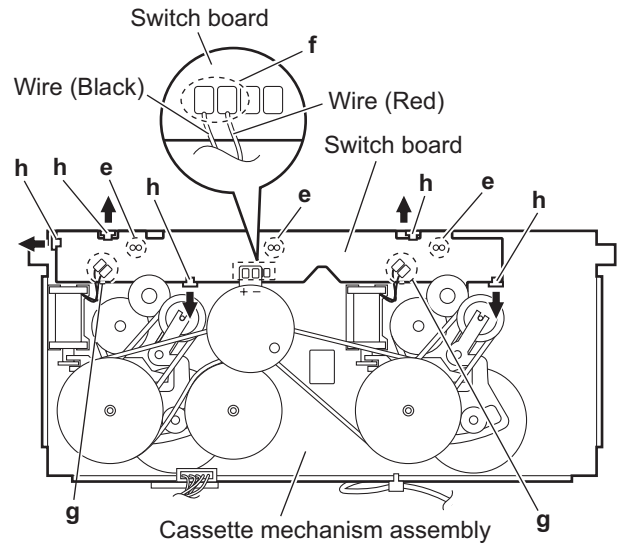


Fig.8

3.3.6 Removing the PB head block

(See Fig.9)

- (1) From the bottom side of the cassette mechanism assembly, remove the tie band fixing the wire.

Reference:

After reassembling, fix the wire with a new tie band as before.

- (2) From the front side of the cassette mechanism assembly, release the claw **i** in the direction of the arrow **1** and pull out the pinch roller in an upward direction.
- (3) Remove the screw **B** attaching the PB head.
- (4) Remove the spring from the section **j**.
- (5) Move the PB head block in the direction of the arrow **2** and remove the hooks **k** from the PB head block.
- (6) Take out the PB head block from the cassette mechanism assembly.

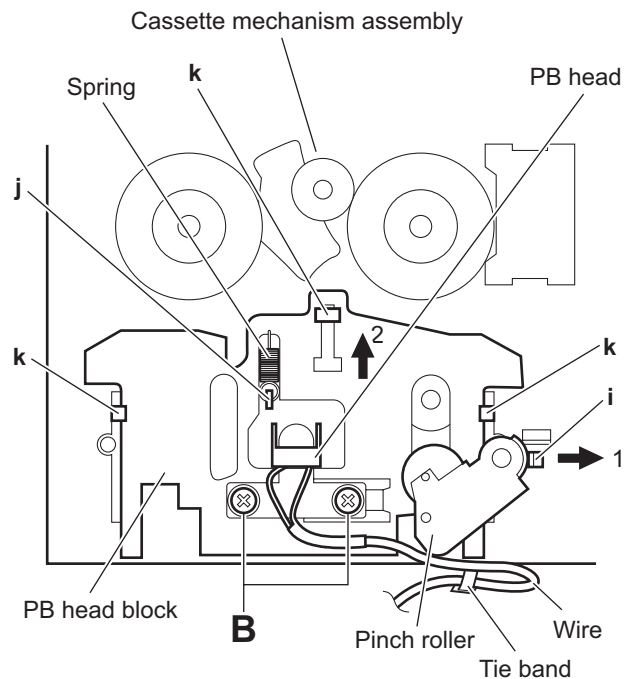


Fig.9

3.3.7 Removing the R/P head block (See Fig.10)

- (1) From the front side of the cassette mechanism assembly, release the claw **m** in the direction of the arrow **1** and pull out the pinch roller **L** in an upward direction.
- (2) Release the claw **n** in the direction of the arrow **2** and pull out the pinch roller **R** in an upward direction.
- (3) From the bottom side of the cassette mechanism assembly, remove the screw **C** attaching the R/P head board.
- (4) From the front side of the cassette mechanism assembly, remove the two screws **D** attaching the R/P head.
- (5) Take out the R/P head block (R/P head and R/P head board) from the cassette mechanism assembly.

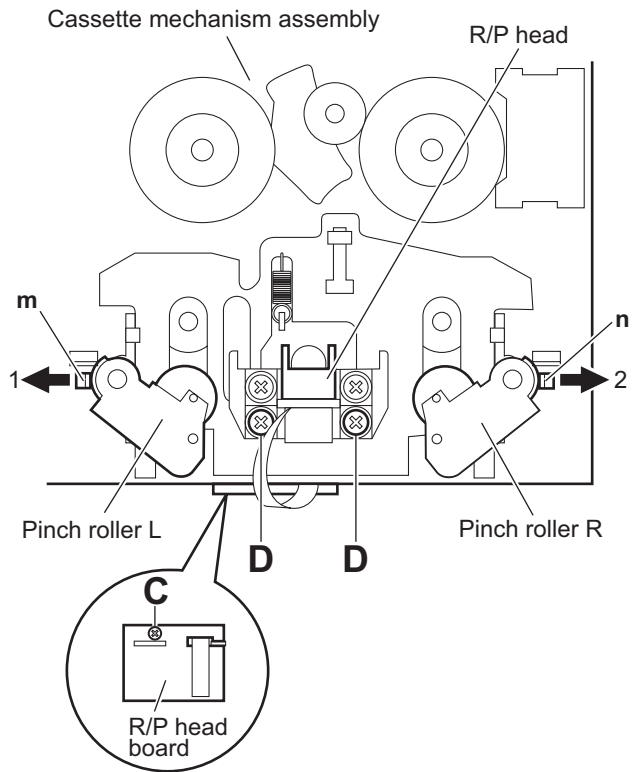


Fig.10

3.4 Subwoofer section

3.4.1 Removing the net assembly (See Fig.1)

- (1) From the front side of the subwoofer main body, remove the sections **a** of the net assembly toward this side.

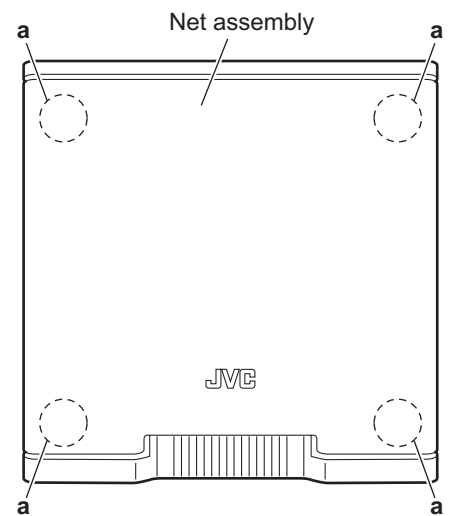


Fig.1

3.4.2 Removing the front panel assembly (See Figs.2 and 3)

- Remove the net assembly as required.
- (1) Insert the tip of a flat-bladed screwdriver or similar tool into the sections **b** between the subwoofer main body and front panel assembly, and lift the front panel assembly little by little to remove the sections **c**. (See Figs.2 and 3.)

Note:

To prevent damaging the front panel assembly and subwoofer main body, insert cushioning plates etc. into the space between the subwoofer main body and front panel assembly. (See Fig.3.)

- (2) Remove the front panel assembly from the subwoofer main body.

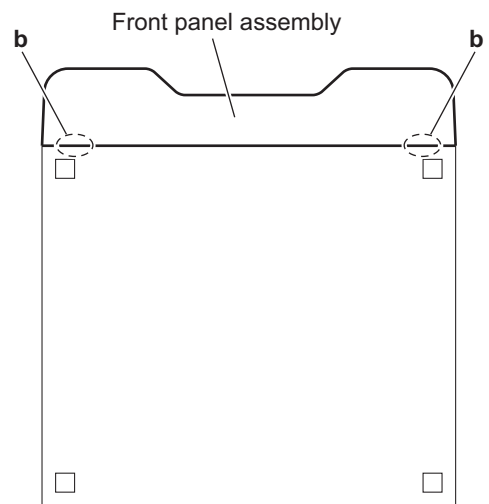


Fig.2

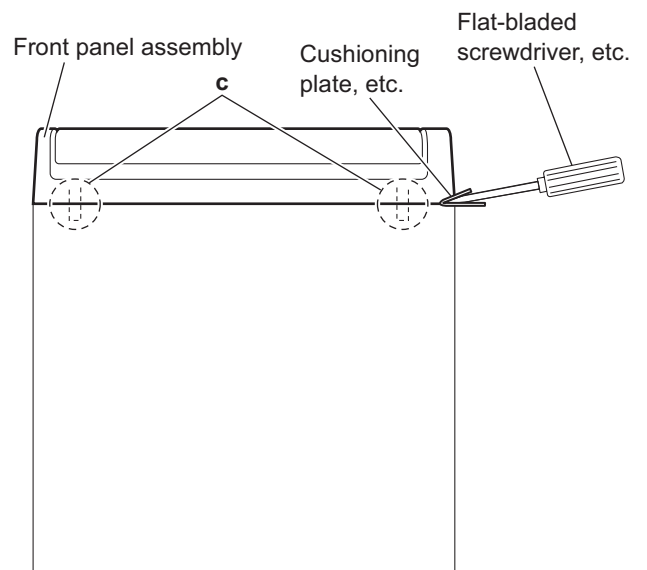


Fig.3

3.4.3 Removing the woofer (See Figs.4 and 5)

- Prior to performing the following procedures, remove the front panel assembly.
 - (1) From the front side of the subwoofer main body, remove the four screws **A** attaching the woofer. (See Fig.4.)
 - (2) Take out the woofer from the subwoofer main body and disconnect the wires (red and black wires) from the terminals of the woofer. (See Fig.5.)

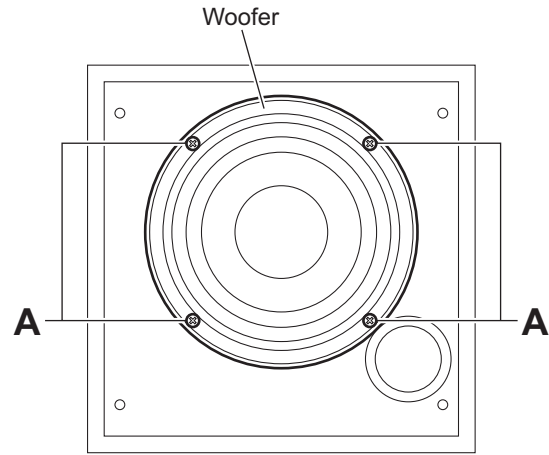


Fig.4


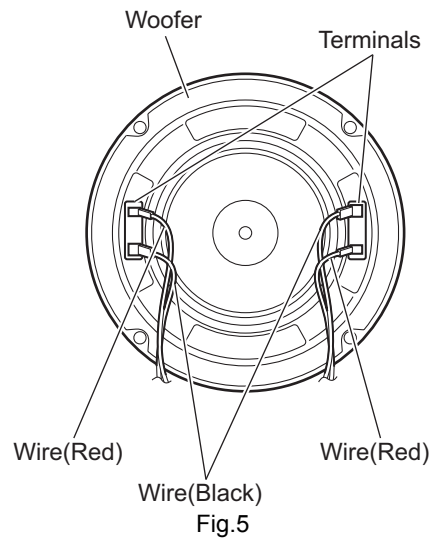


Fig.5

3.5 Speaker section

3.5.1 Removing the net assembly (See Fig.1)

From the front side of the speaker main body, remove the sections **a** of the net assembly toward this side.

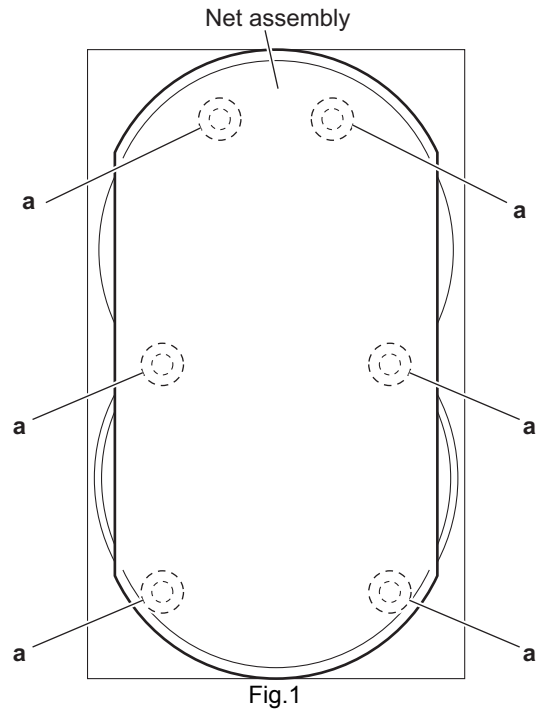


3.5.2 Removing the front panel assembly (See Figs.2 and 3)

- Remove the net assembly as required.
 - Insert the tip of a flat-bladed screwdriver or similar tool into the space between the speaker main body and front panel assembly, and lift the front panel assembly little by little to remove the sections **b**. (See Fig.2.)

Note:


To prevent damaging the front panel assembly and speaker main body, insert cushioning plates etc. into the space between the speaker main body and front panel assembly. (See Fig.2.)

- From the inside of the front panel assembly, disconnect the wires (red and black wires) from the terminals of the tweeter. (See Fig.3.)

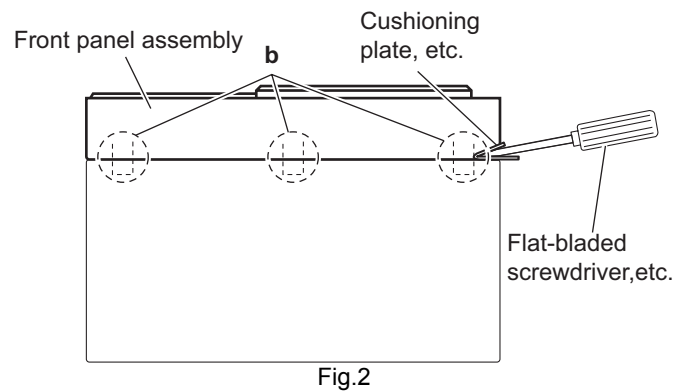

3.5.3 Removing the tweeter (See Fig.3)

- Prior to performing the following procedures, remove the front panel assembly.
 - Disconnect the wires (blue and white wires) from the terminals of the tweeter.
 - Remove the two screws **A** attaching the tweeter.
 - Take out the tweeter from the front panel assembly.

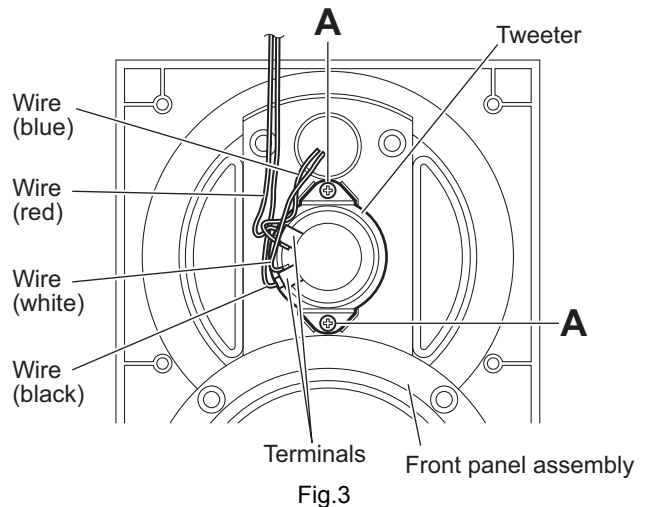

3.5.4 Removing the speaker (See Figs.4 and 5)

- Prior to performing the following procedures, remove the front panel assembly.
 - (1) From the front side of the speaker main body, remove the four screws **B** attaching the speaker. (See Fig.4.)
 - (2) Take out the speaker from the speaker main body and disconnect the wires (red/black and blue/black wires) from the terminal of the speaker. (See Fig.5.)

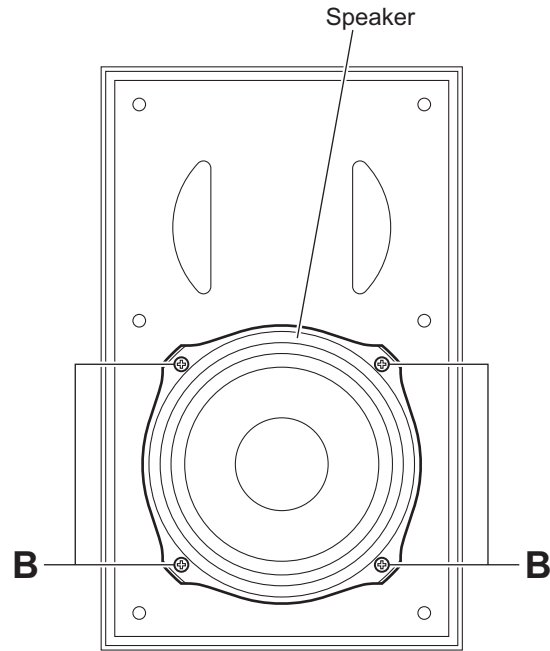


Fig.4

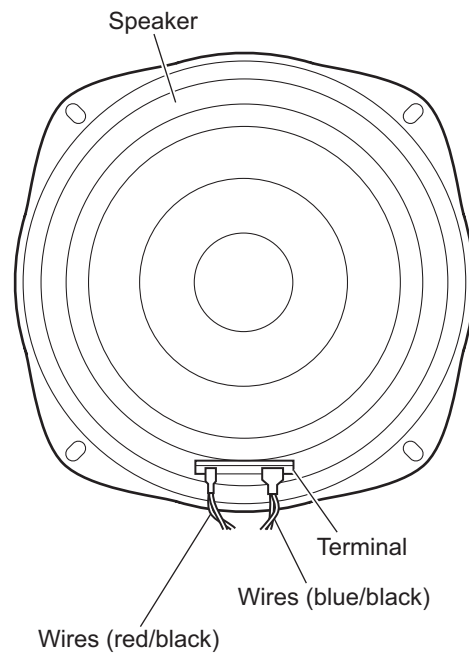


Fig.5

SECTION 4 ADJUSTMENT

4.1 Adjustment method

4.1.1 Measurement Instruments Required for Adjustment

- (1) Low frequency oscillator
This oscillator should have a capacity to output 0dBs to 600Ω at an oscillation frequency of 50Hz-20kHz.
- (2) Attenuator impedance : 600Ω
- (3) Electronic voltmeter
- (4) Distortion meter
- (5) Frequency counter
- (6) Wow & flutter meter
- (7) Test tape
VTT703 : Head azimuth
- (8) Blank tape
TYPE I : AC-514
- (9) Test disc: VT-501, CTS-1000

4.1.2 Measurement conditons

Power supply voltage	AC110V / AC127V / AC220V / AC230V to AC240V 50Hz / 60Hz (Adjustable with the voltage selector)
Reference output	Speaker : 0.775V/4Ω Headphone : 0.077V/32Ω
Reference frequency and input level	1kHz, AUX : -8dBs
Measurement output terminal	at Speaker J200
Load resistance	4Ω

4.1.3 Radio Input signal

AM frequency	400Hz
AM modulation	30%
FM frequency	400Hz
FM frequency deviation	22.5kHz

4.1.4 Tuner section

FM Band cover	87.5~108.0MHz
AM Band cover	531~1,602kHz (at 9kHz) 530~1,600kHz (at 10kHz)
Voltage applied to tuner	+B : DC5.7V VT : DC 12V
Reference measurement output	26.1mV(0.28V)/3Ω
Input positions	AM : Standard loop antenna FM : TP1 (hot) and TP2 (GND)


4.1.5 Standard measurement position of volume

Function switch to Tape
Beat cut switch to Cut
Super Bass/Active hyper Bass to OFF
Bass Treble to Center
Adjustment of main volume to reference output VOL : 28

Precautions for measurement

- (1) Apply 30pF and 33kΩ to the IF sweeper output side and 0.082μ F and 100kΩ in series to the sweeper input side.
- (2) The IF sweeper output level should be made as low as possible within the adjustable range.
- (3) Since the IF sweeper is a fixed device, there is no need to adjust this sweeper.
- (4) Since a ceramic oscillator is used, there is no need to perform any MIX adjustment.
- (5) Since a fixed coil is used, there is no need to adjust the FM tracking.
- (6) The input and output earth systems are separated. In case of simultaneously measuring the voltage in both of the input and output systems with an electronic voltmeter for two channels, therefore, the earth should be connected particularly carefully.
- (7) In the case of BTL connection amp., the minus terminal of speaker is not for earthing. Therefore, be sure not to connect any other earth terminal to this terminal. This system is of an BTL system.
- (8) For connecting a dummy resistor when measuring the output, use the wire with a greater code size.
- (9) Whenever any mixed tape is used, use the band pass filter (DV-12).

4.2 Arrangement of adjusting positions

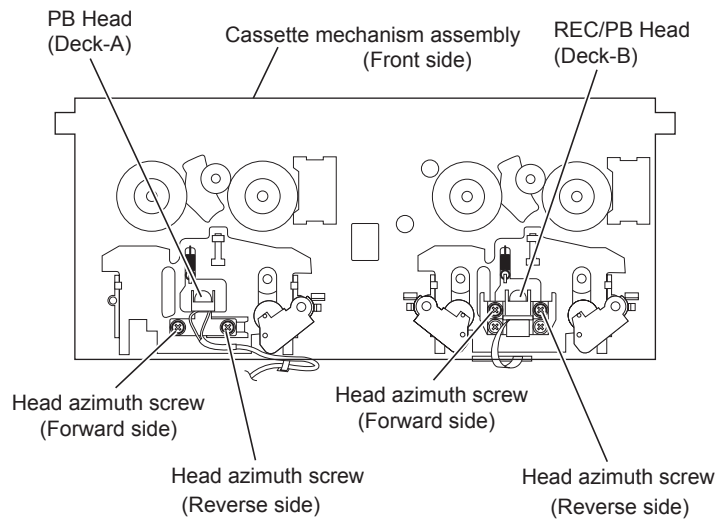

4.2.1 Tape recorder section

Item	Measurement conditions	Measurement method	Ref. value	Adjustment position
Cassette Head Azimuth Alignments	Test tape :VT703 (10kHz) Measurement output terminal :Left and Right speaker output (6Ω loaded) or Headphone Output (32Ω loaded)	(1) Playback the test tape VT703 (10kHz) or equivalent. (2) Adjust the head azimuth screw to obtain maximum output and both output of L / R is in 3dB. (3) Put on the screw lock paint after alignments.	Maximum output	Adjust the head azimuth screw only when the head has been changed.
Recording Bias Frequency Alignment	Test tape :TYPE I AC-514 Measurement output terminal :Erase head terminal (CN308 8-Pin)	(1) Insert the recording tape in deck-B. (2) Starting the recording. (3) Adjust the oscillation frequency to 80kHz±3kHz by core of Oscillation coil of L301.	80kHz±3kHz	Use the High Impedance Probe or Frequency counter input.

4.3 Service mode


4.3.1 Confirming contents

- (1) System micon reset
- (2) System micon cold start
- (3) FL display check
- (4) Micon version check
- (5) DVD region check
- (6) DVD test mode

4.3.2 Confirming methods

1. System micon reset


When DVD mechanism stuck, this may solve the problem without removing/inserting power cord.

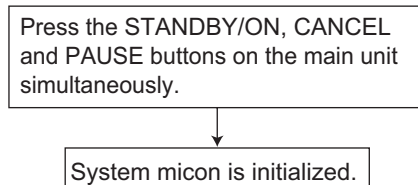

2. System micon cold start


This function clears all user setting, and return to initial setting.

- Daily timer, REC timer
- Tuner preset
- SEA preset
- Last condition (Source, Volume)

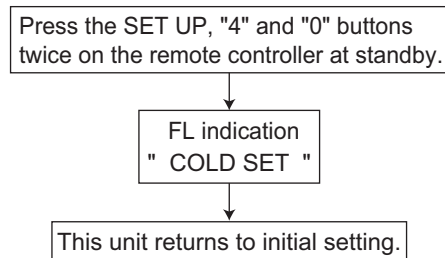


3. FL display check

This enables all FL segment light up.

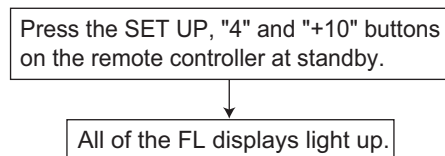


4. Micon version check

You can confirm Micon version and destination.

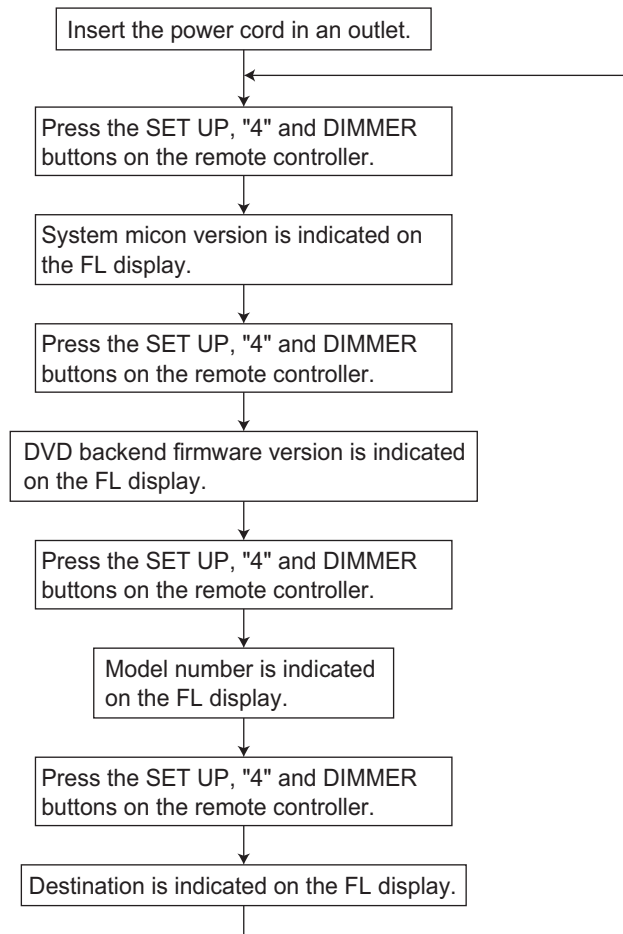



5. DVD region check

You can confirm DVD region number.

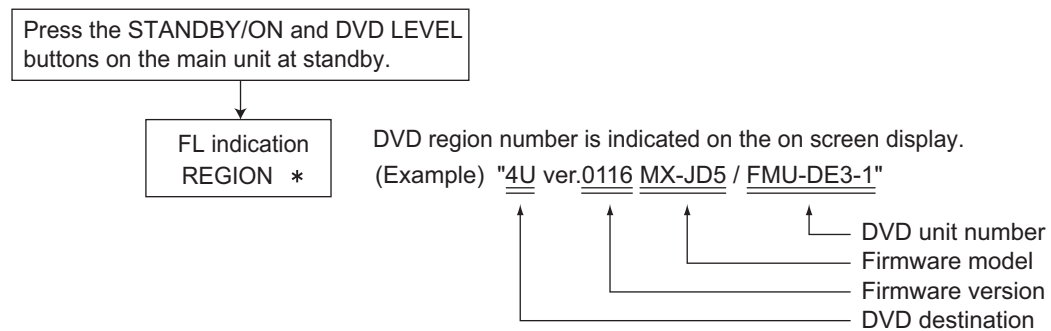

6. DVD test mode

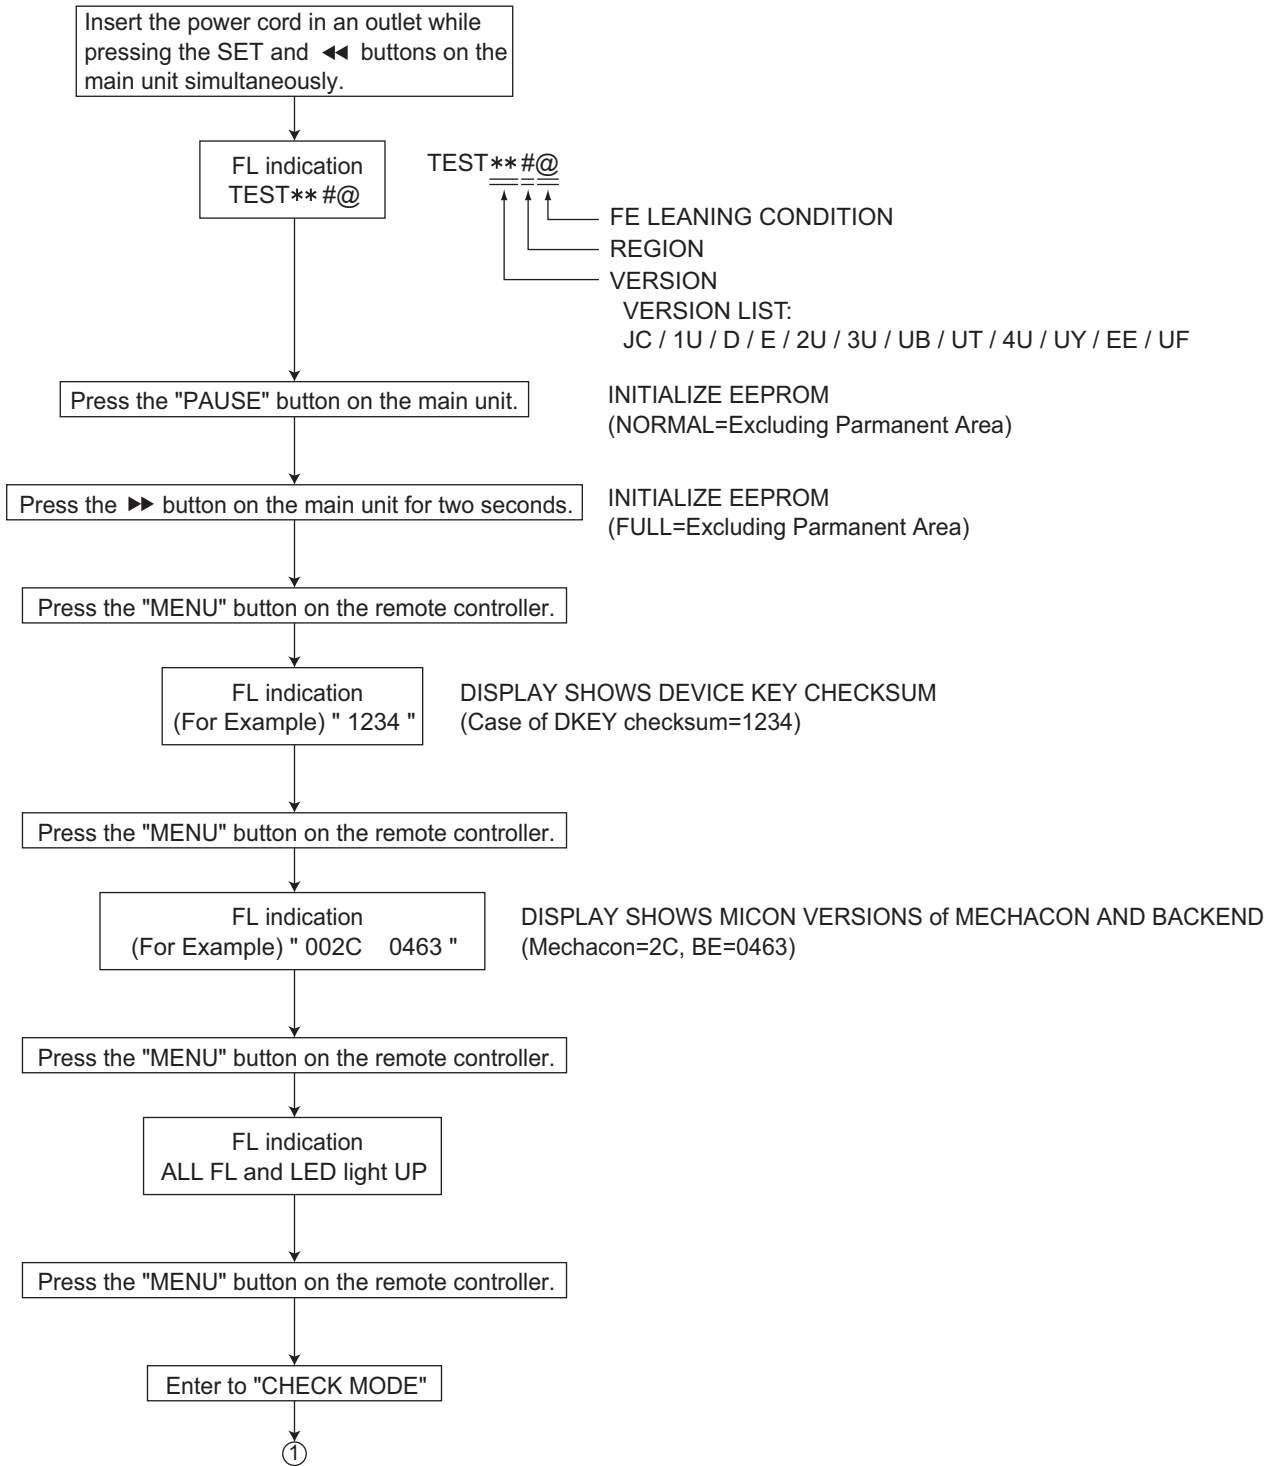

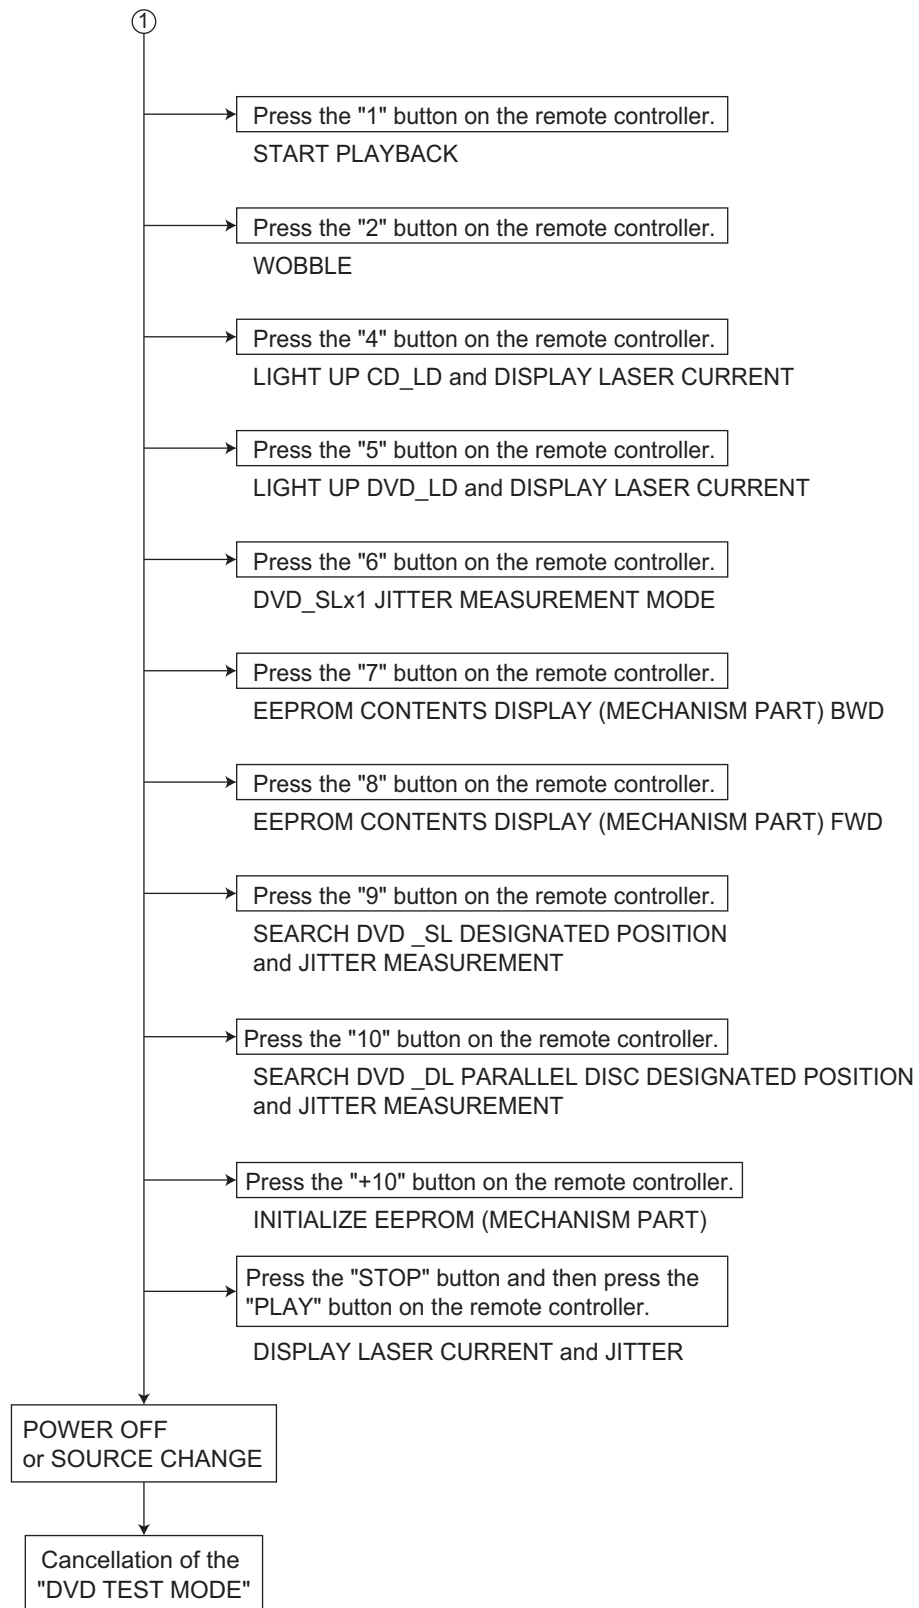

4.3.3 Indicating check for FL display

Function	FL display								Note
DVD TEST MODE TEST START (Version info)	T	E	S	T	*	*	#	@	By AC cord on with holding SET and ◀◀ ** : VERSION @ : FE learning condition # : REGION
A. EEPROM INITIALIZE (NORMAL)	T	E	S	T	*	*	#	@ 0	By pressing PAUSE (Front)
B. EEPROM INITIALIZE (FULL)	T	E	S	T	*	*	#	@ 3 3	By pressing and holding ▶▶ (Front) for 2-sec
① DEVICE KEY DISPLAY				*	*	*	*		By pressing MENU (Remote)
② VERSION DISPLAY	a	a	a	a		c	c	c c	By pressing MENU (Remote) aaaa: Syscon, cccc: Backend
③ FL ALL ON	■	■	■	■	■	■	■	■	By pressing MENU (Remote)
④ CHECK MODE				C	H	E	C	K	By pressing MENU (Remote)
START PLAY				C	H	E	C	K	By pressing 1 (Remote)
WOBBLE	*	*	*	*	*	*	*	*	By pressing 2 (Remote)
CD LASER current	*	*	*	*	*	*	*	*	By pressing 4 (Remote)
DVD LASER current	*	*	*	*	*	*	*	*	By pressing 5 (Remote)
DVD-SL jitter	*	*	*	*	*	*	*	*	By pressing 6 (Remote)
EEPROM (BWD)	*	*	*	*	*	*	*	*	By pressing 7 (Remote)
EEPROM (FWD)	*	*	*	*	*	*	*	*	By pressing 8 (Remote)
Temperature	*	*	*	*	*	*	*	*	By pressing 9 (Remote)
DVD-DL/SL jitter	*	*	*	*	*	*	*	*	By pressing 10 (Remote)
EEPROM initialize	*	*	*	*	*	*	*	*	By pressing +10 (Remote)
Monitor change	*	*	*	*	*	*	*	*	By pressing 0 (Remote)
STOP				C	H	E	C	K	By pressing STOP (Front or Remote)
OPEN/CLOSE	-	-	-	-	-	-	-	-	By pressing OPEN/CLOSE (Front)
PLAY	*	*	*	*	*	*	*	*	By pressing PLAY (Front or Remote)

SECTION 5 TROUBLESHOOTING

This service manual does not describe TROUBLESHOOTING.



JVC

Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.MB263)

JVC

SCHEMATIC DIAGRAMS


COMPACT COMPONENT SYSTEM

MX-JD5

CD-ROM No.SML200406

Area suffix

US ----- Singapore
UW ----- Brazil, Mexico, Peru
UX ----- Saudi Arabia
UE ----- Turkey
UN ----- Asean

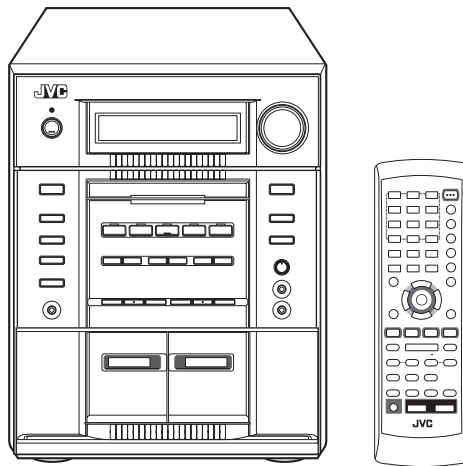

CA-MXJD5



AV COMPULINK EXTENDED SUPER BASS


Contents

Block diagram	2-1
Standard schematic diagrams	2-2
Printed circuit boards	2-9 to 12

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (⬤) and ICP (●) or identified by the "▲" mark nearby are critical for safety.


(This regulation does not correspond to J and C version.)

Block diagram

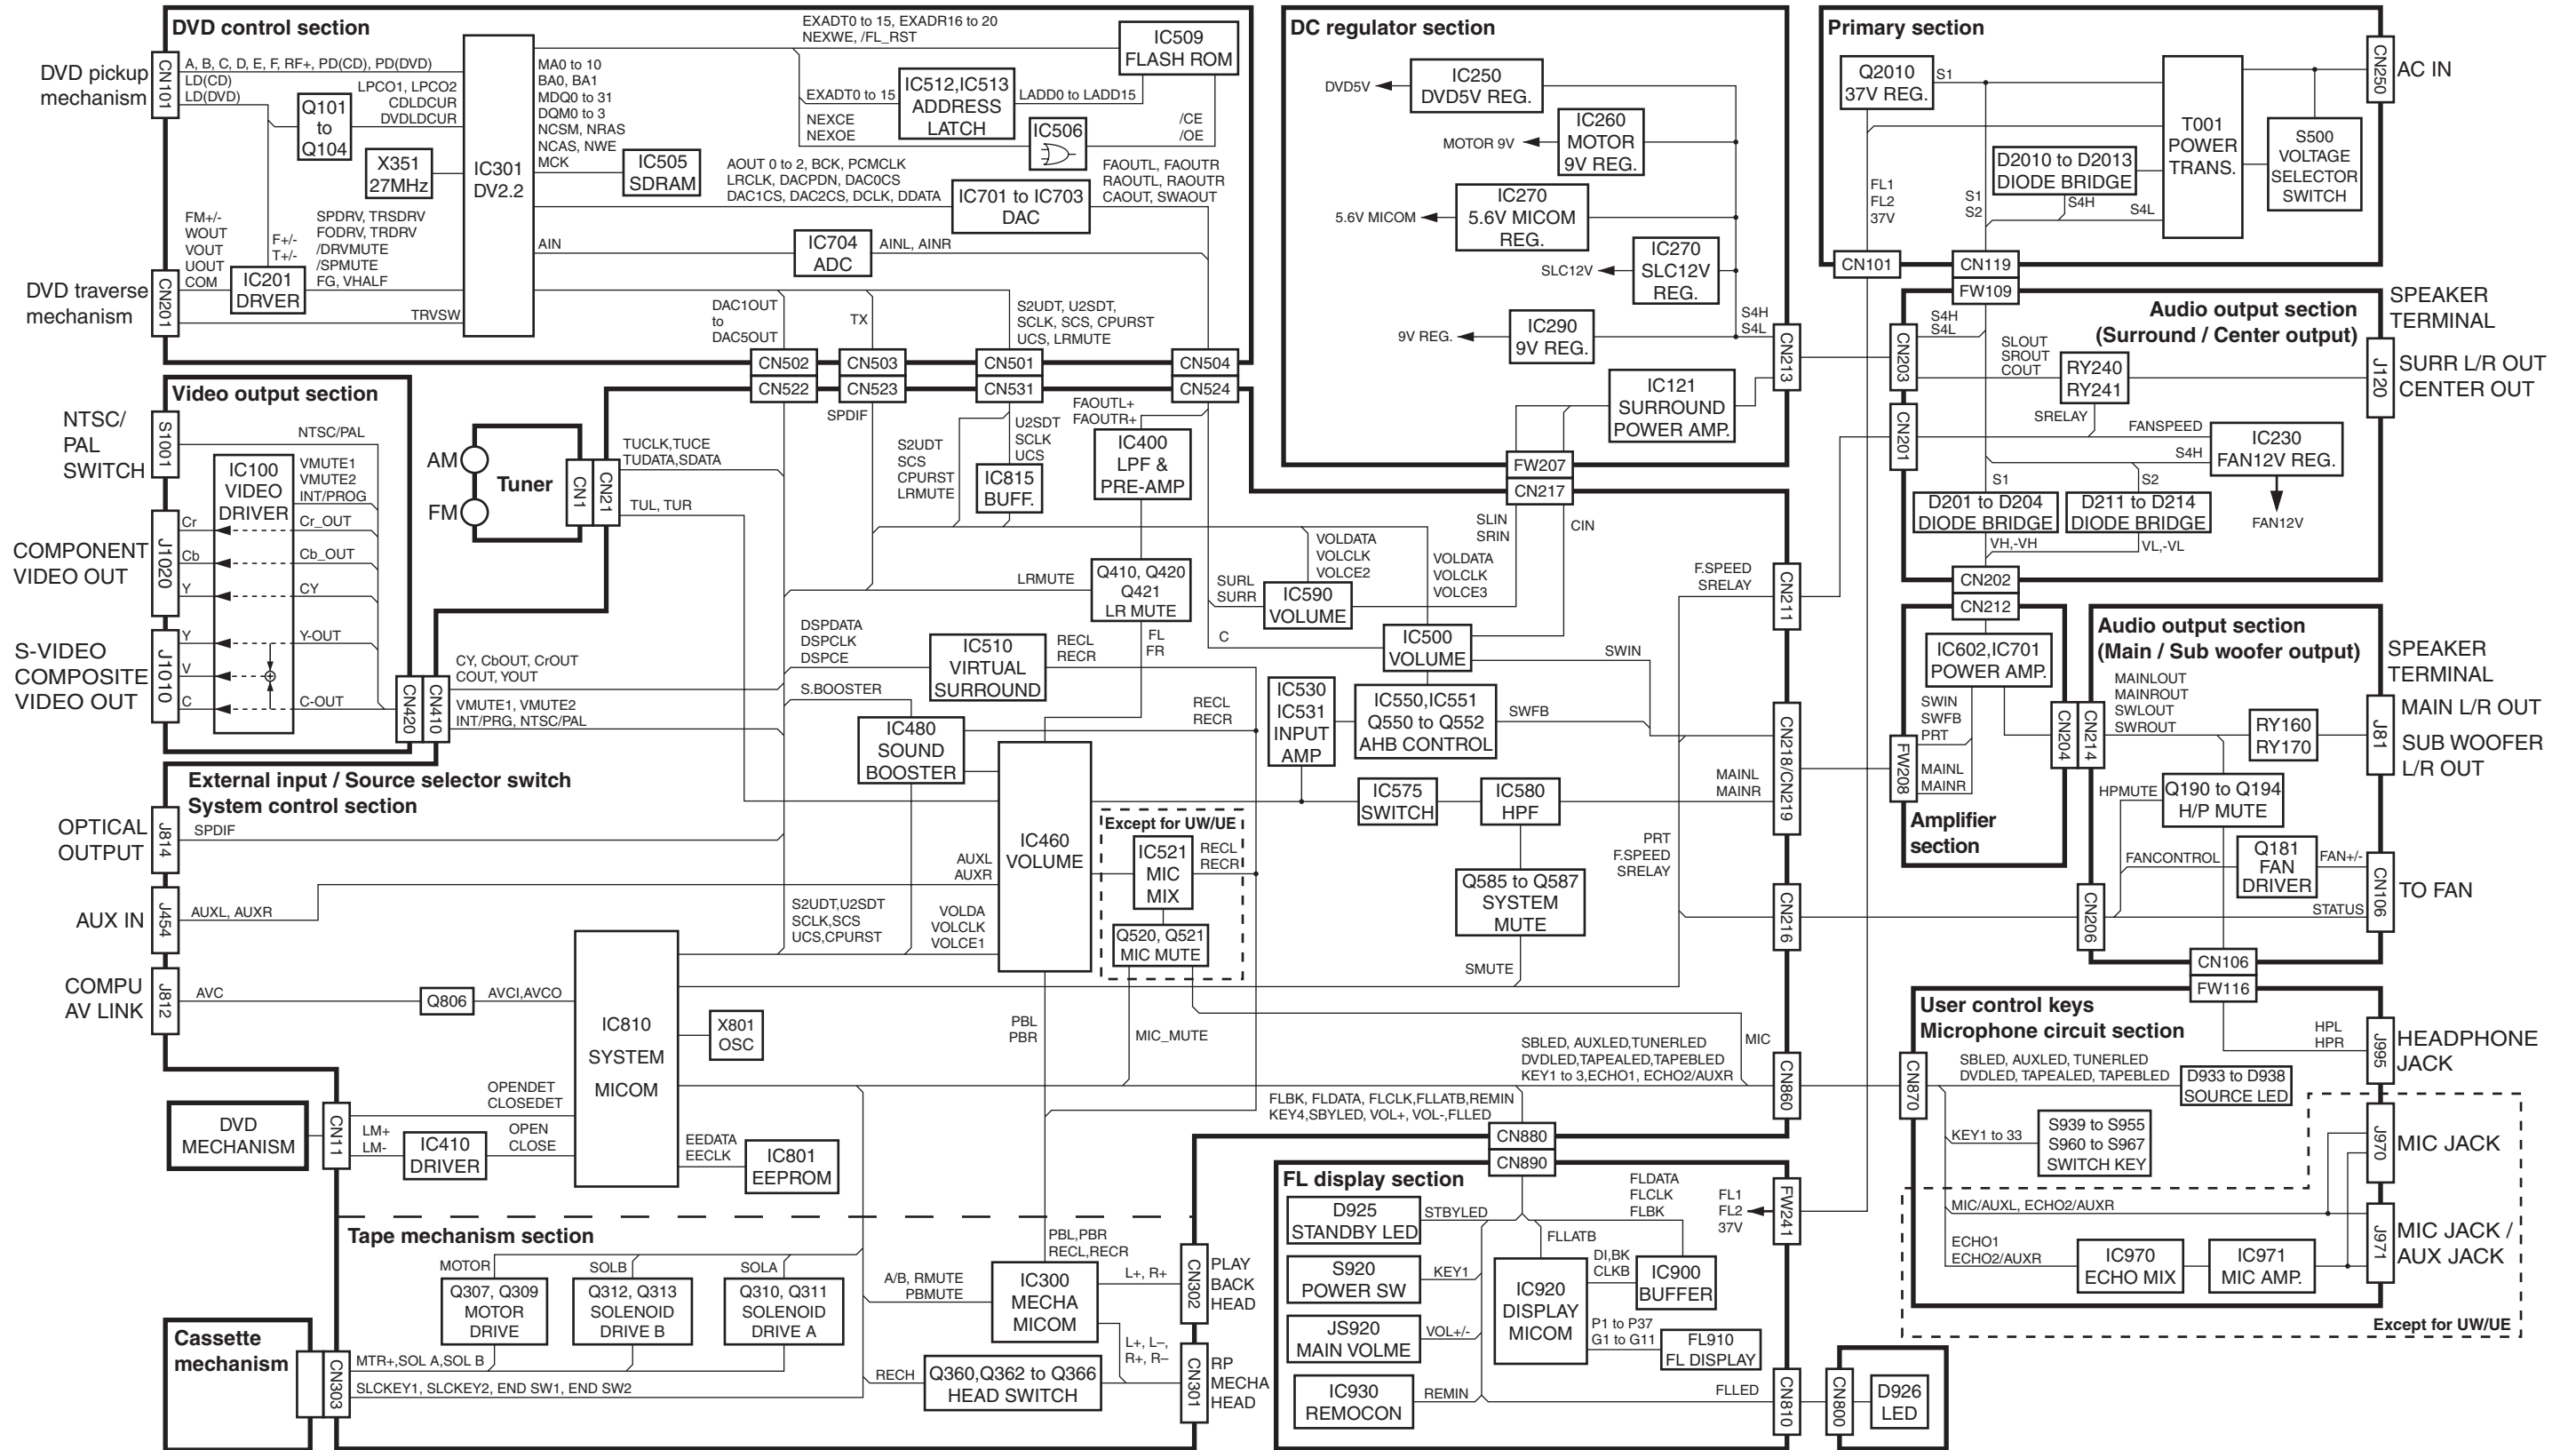

Standard schematic diagrams

Primary board with main transformer section

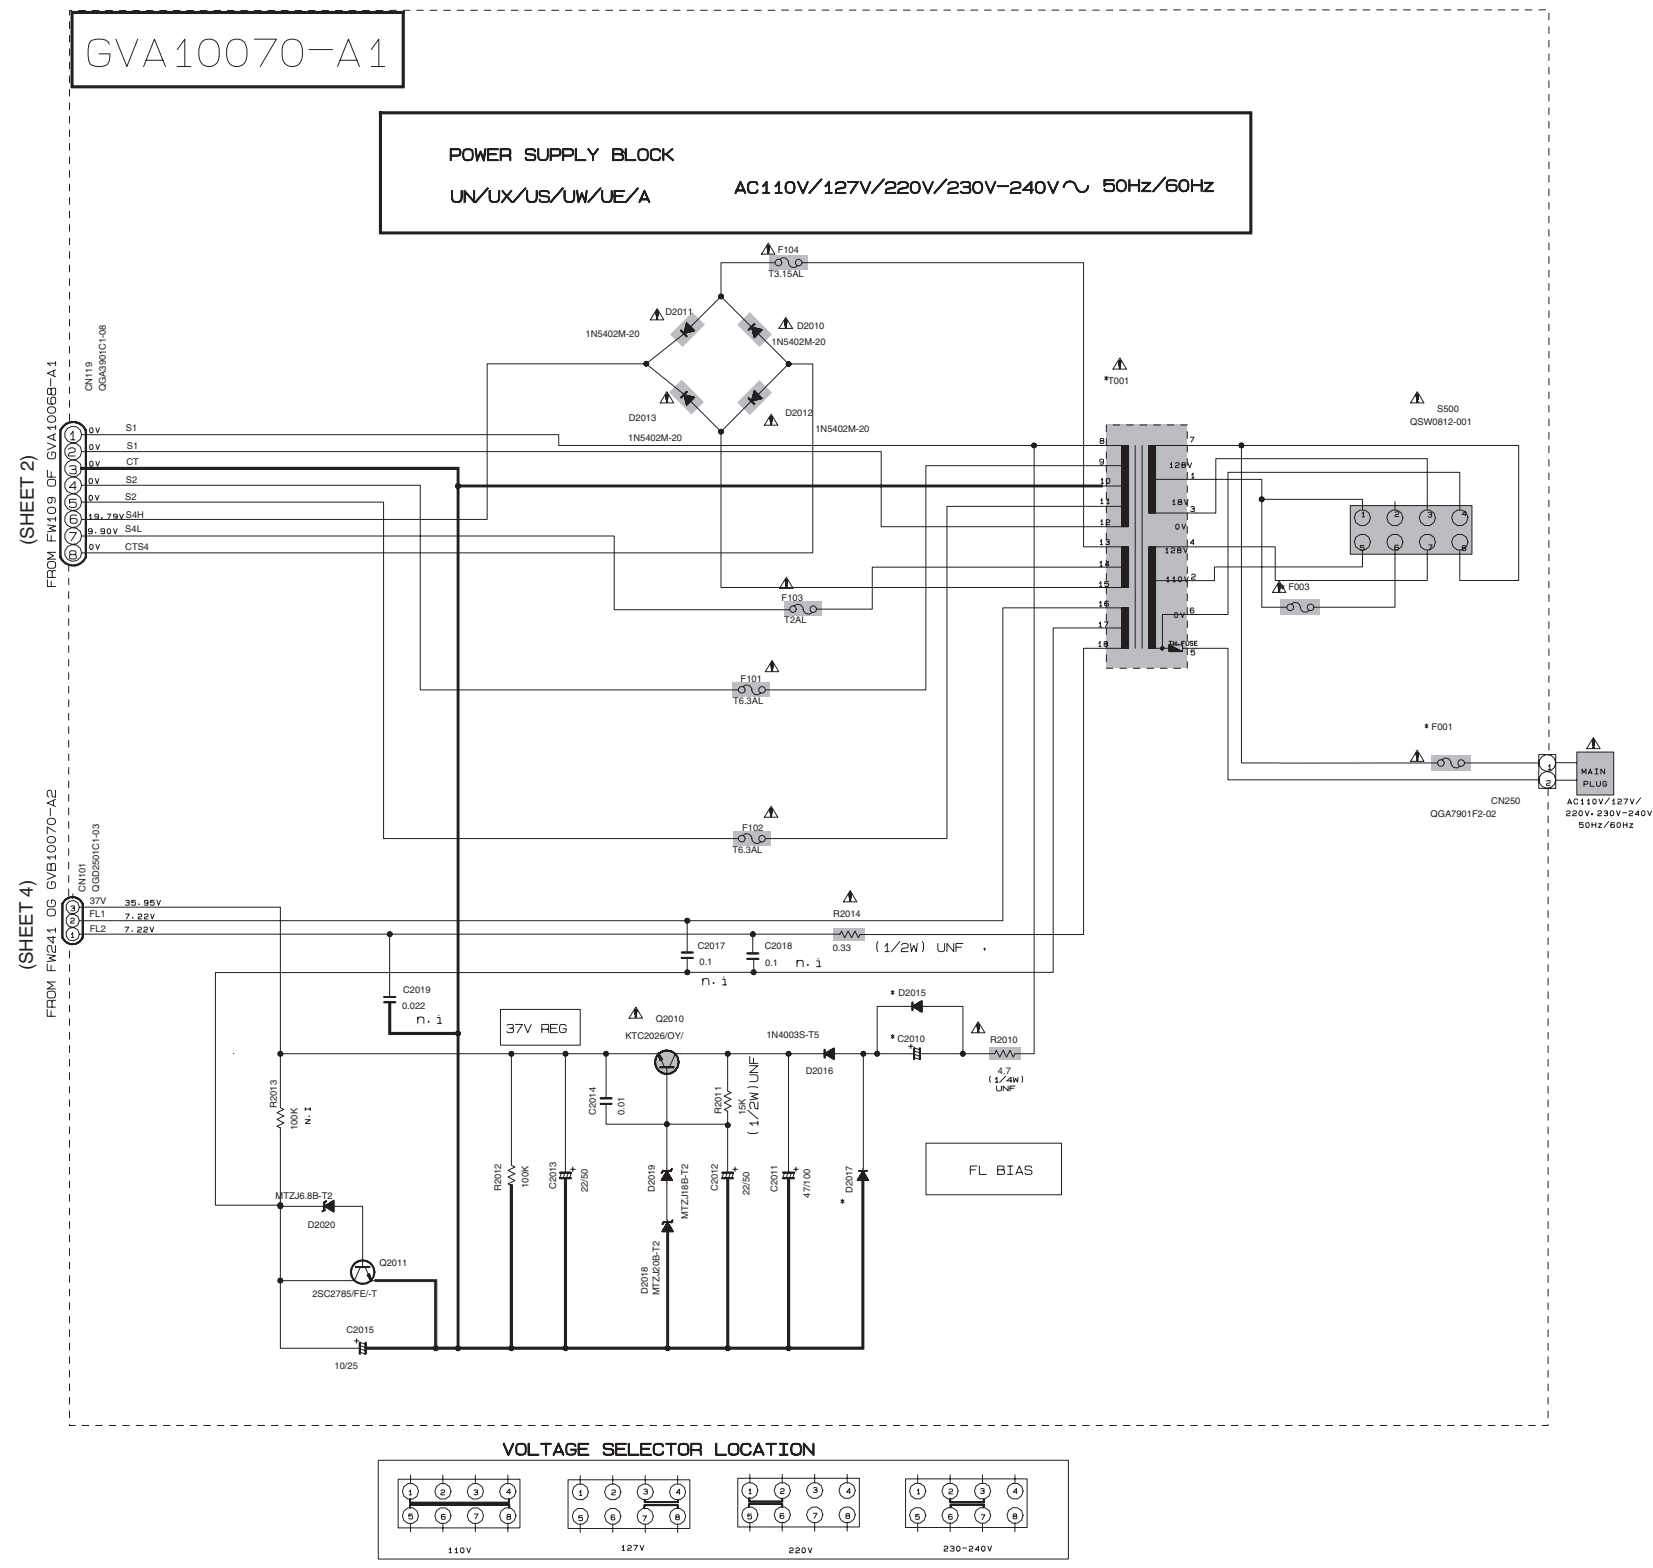

EXPLANATION OF OVERALL SCHEMATIC

SHEET NUMBER	
1	PRIMARY BOARD WITH MAIN TRANSFORMER
2	DC REGULATOR/AUDIO OUTPUT
3	EXTERNAL INPUT, SOURCE SELECTOR SWITCH+ SYSTEM CONTROL
4	FL DISPLAY, USER CONTROL KEYS VIDEO OUTPUT, MIC CIRCUIT
5	TAPE CIRCUIT, MECHANISM CONTROL
6	DVD CONTROL SYSTEM (1/2)
7	DVD CONTROL SYSTEM (2/2)


VERSION CODE

UW	: SOUTH AMERICA
UN	: ASEAN
UX	: SAUDI ARABIA
UE	: TURKEY
US	: SINGAPORE AND UNIVERSAL EXCEPT ALL ABOVE
A	: AUSTRALIA


	MX-JD5	MX-JDB
F001	T4AL	T5AL
F003	T2AL	T2.5AL
T001	GGT0438-001	GGT0439-001
D2015	1N40035-T5	QUY150-050Y
C2010	100/63	n.i
D2017	1N40035-T5	n.i

Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

DC regulator / Audio output section

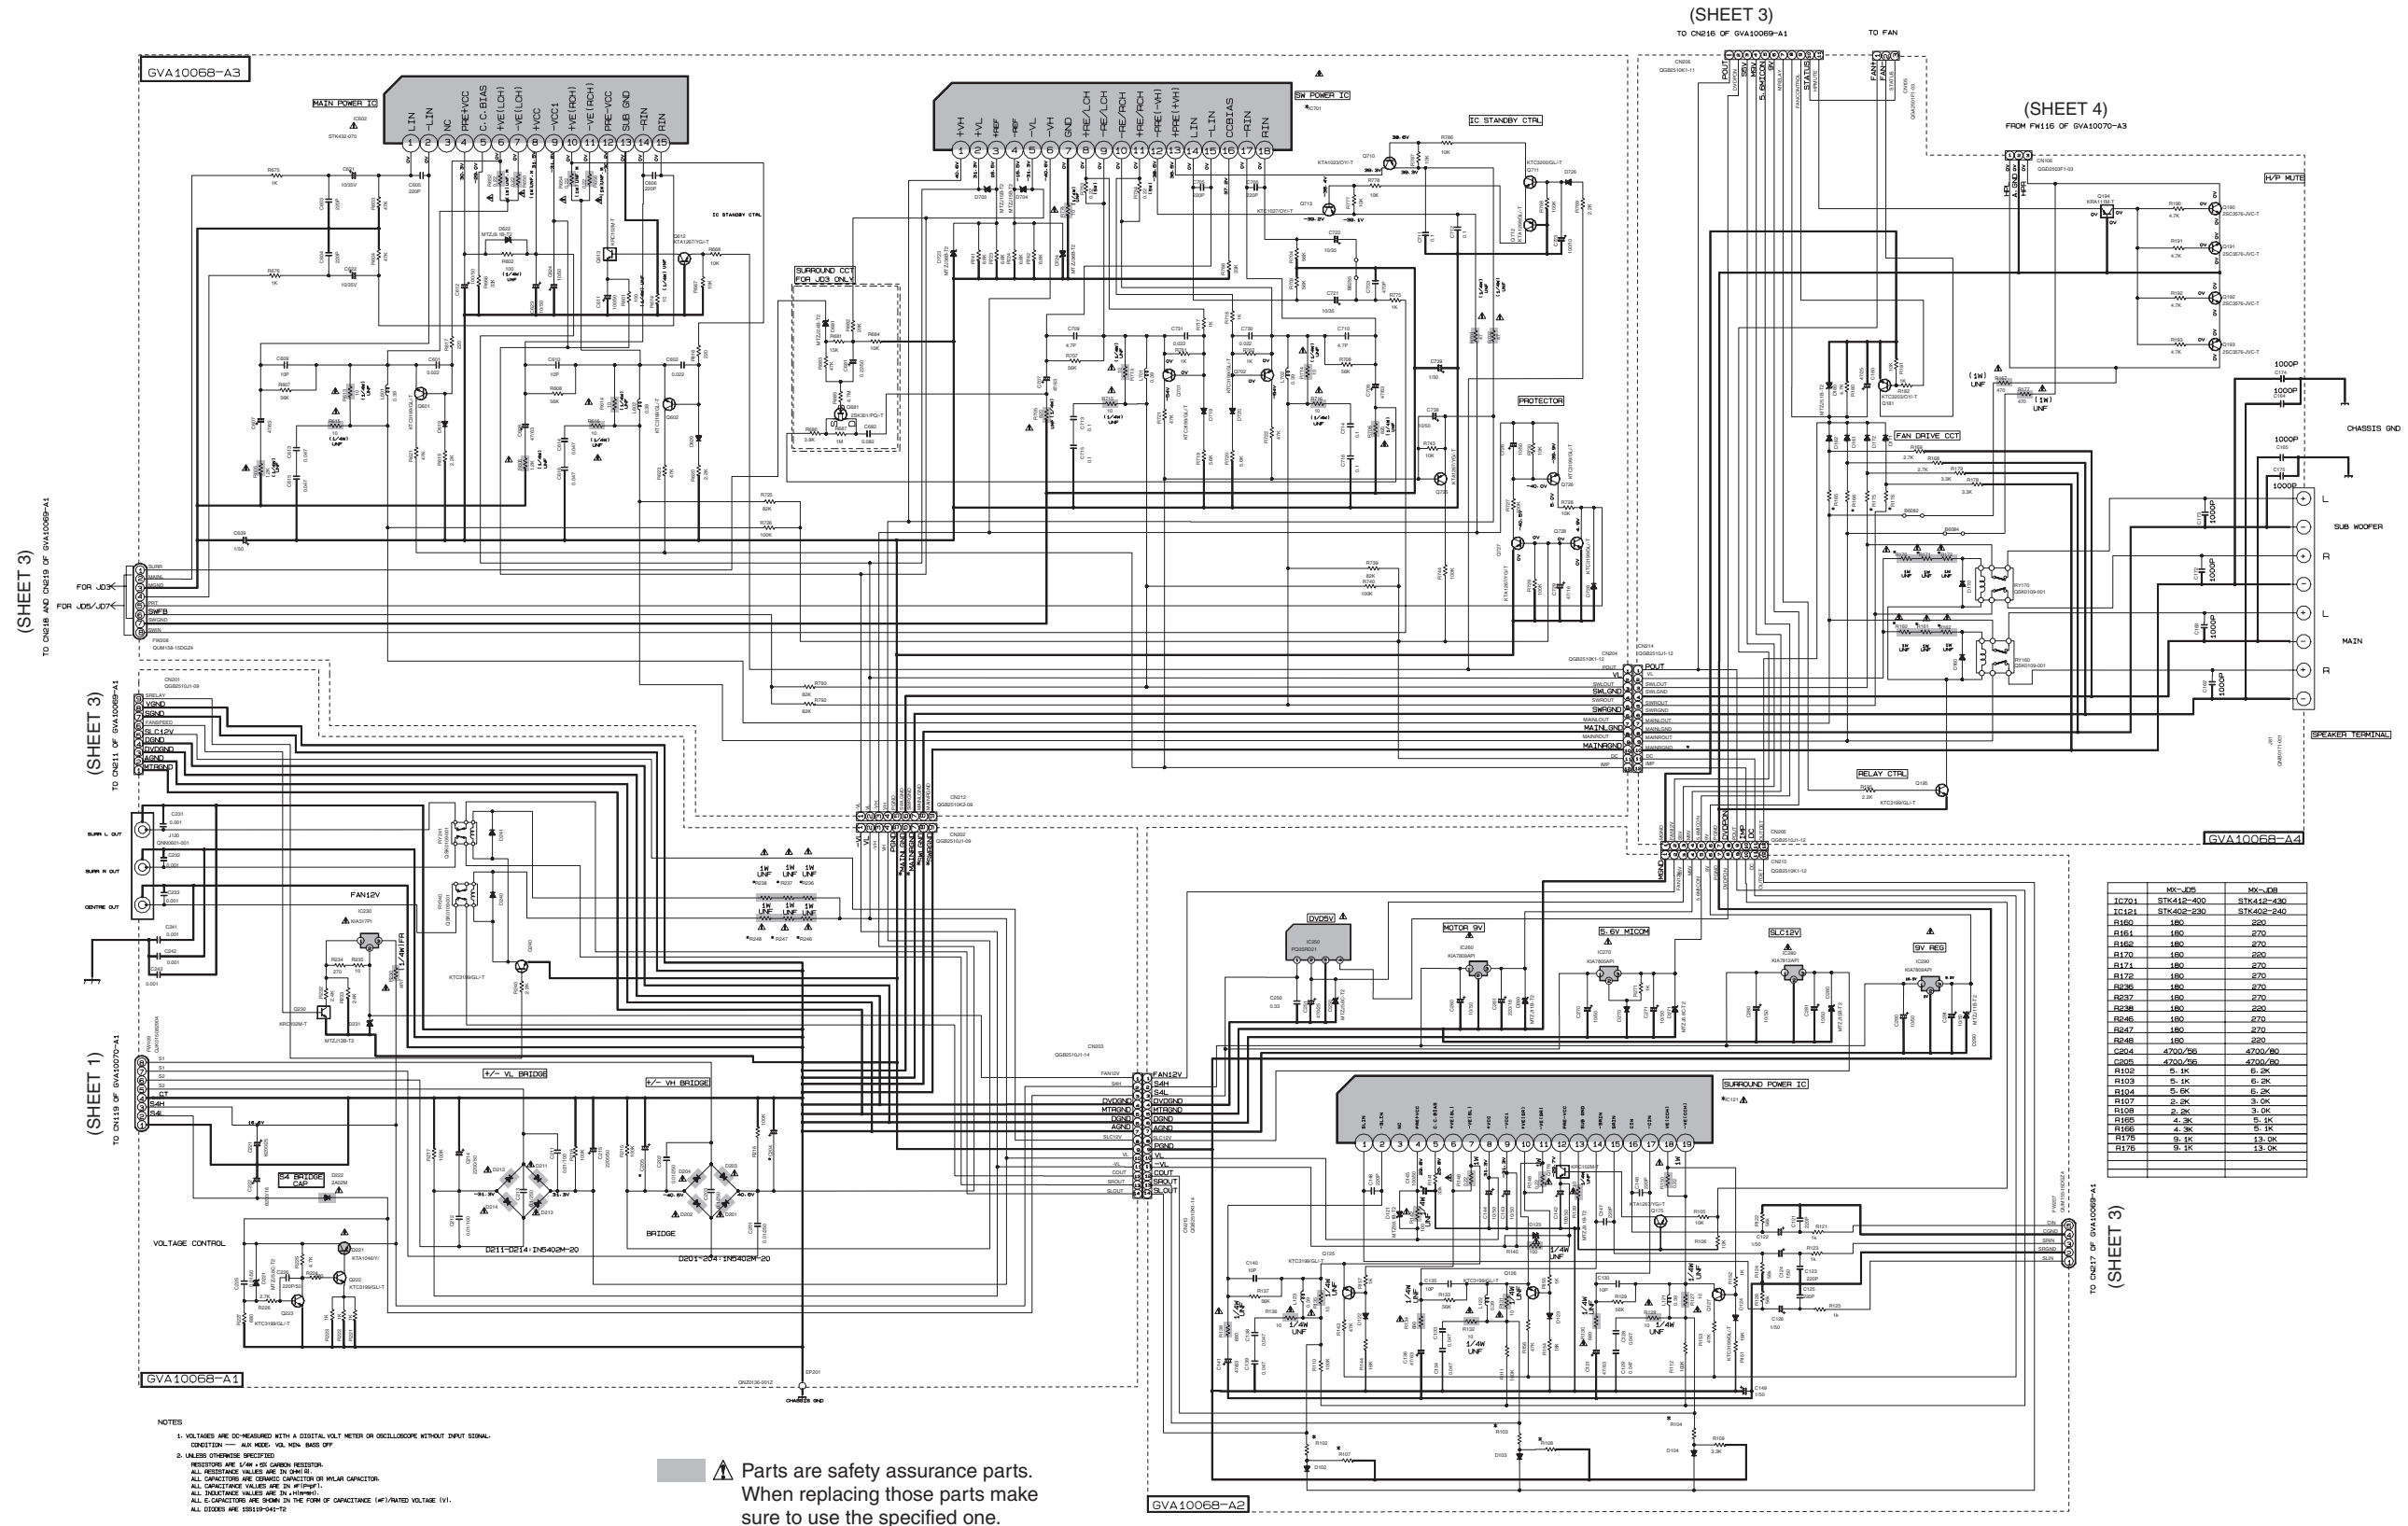

External input / Source selector switch / System control section

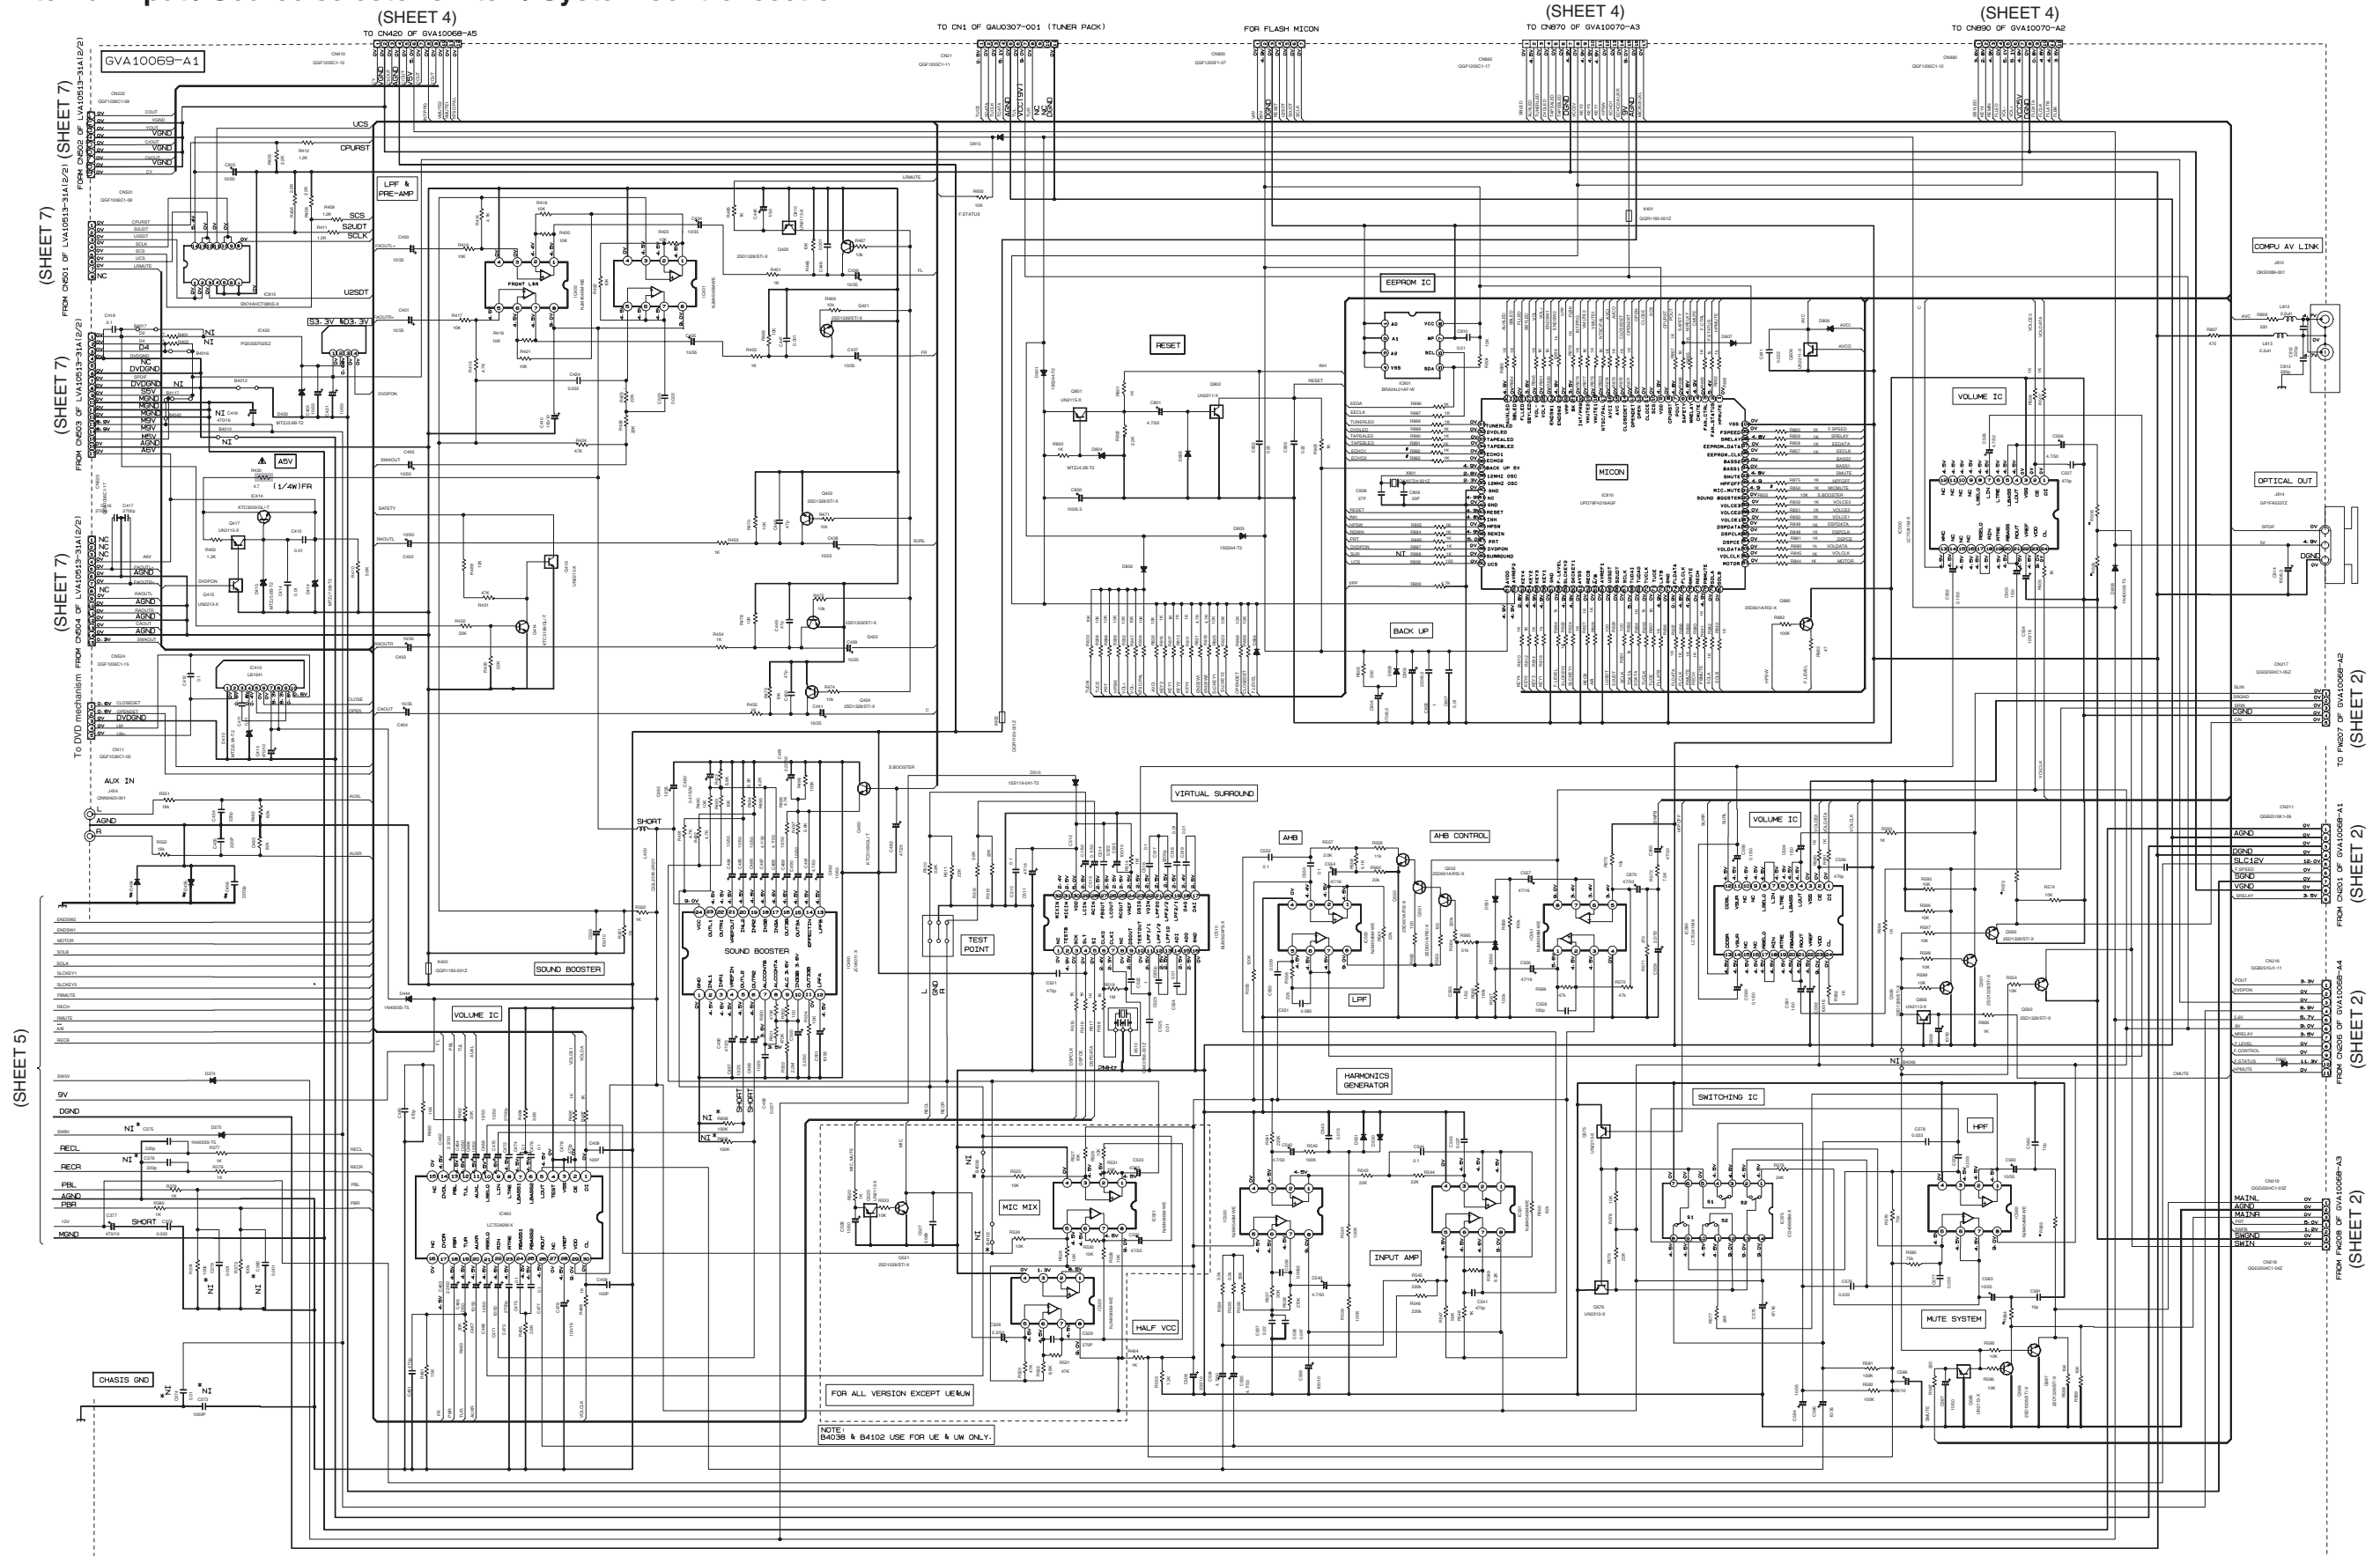





REF. NO.	HW-CDB	HW-CDB
R508	NRS463J-203K	NRS463J-912K
R509	NRS463J-332K	NRS463J-332K
R573	NRS463J-332K	NRS463J-102K
R583	QRE141J-512Y	QRE141J-102Y
R584	QRE141J-512Y	QRE141J-102Y
R579	QRE141J-753Y	QRE141J-753Y
R580	QRE141J-753Y	QRE141J-753Y

⚠ Parts are safety assurance parts.
When replacing those parts make sure to use the specified one.

NOTE: # ----> NOT INSERT FOR UE & UW VERSION

NOTES:
1. VOLTAGES ARE DC-HEADLED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CHARTER: * AN RES: VOL: N/A: BASS: OFF
2. UNLESS OTHERWISE SPECIFIED:
RESISTORS ARE 1/4W, 5% CARBON RESISTOR.
CAPACITORS ARE TANTALUM CAPACITOR OR MILAR CAPACITOR.
ALL CAPACITORS ARE TANTALUM CAPACITOR OR MILAR CAPACITOR.
ALL INDUCTANCE VALUES ARE IN mH(MPH).
ALL CAPACITANCE VALUES ARE IN nF(NPH).
ALL CAPACITORS ARE BIPOLAR IN THE FORM OF CAPACITANCE (nF/PARTS VOLTAGE (V)).
ALL DIODES ARE 1N4148.
NE: NO COMPONENT NOT SHOWN
SHORT: REPLACE BY BUS WIRE


FL display / User control keys / Video output / Microphone circuit section

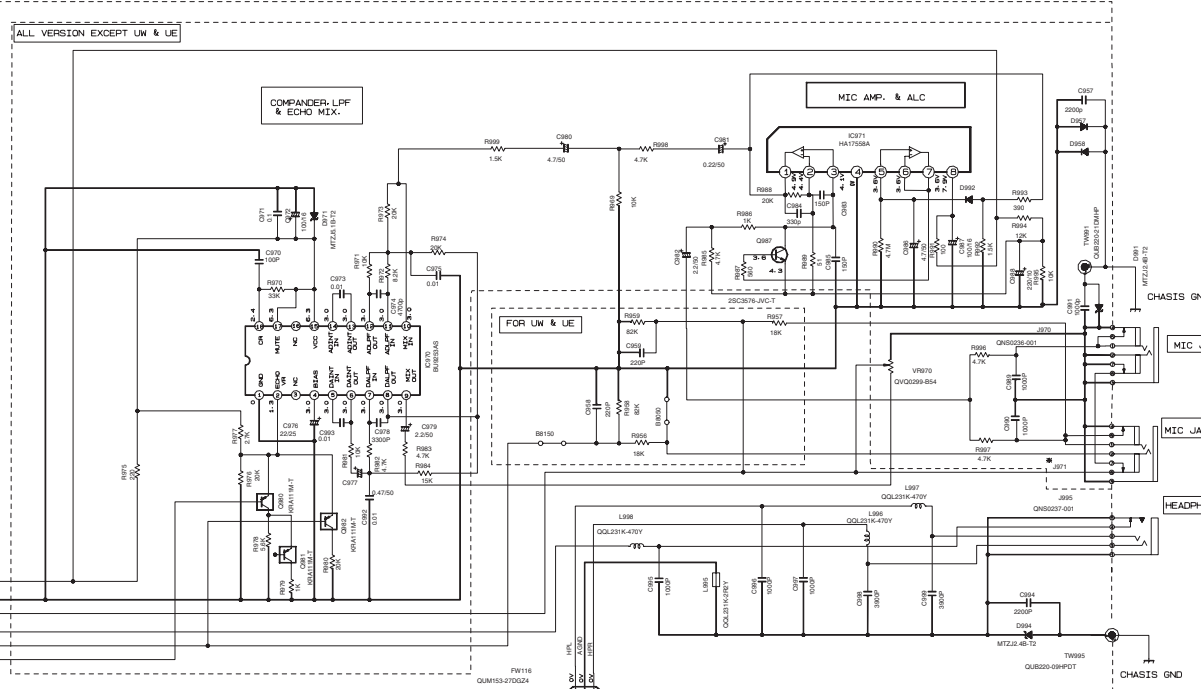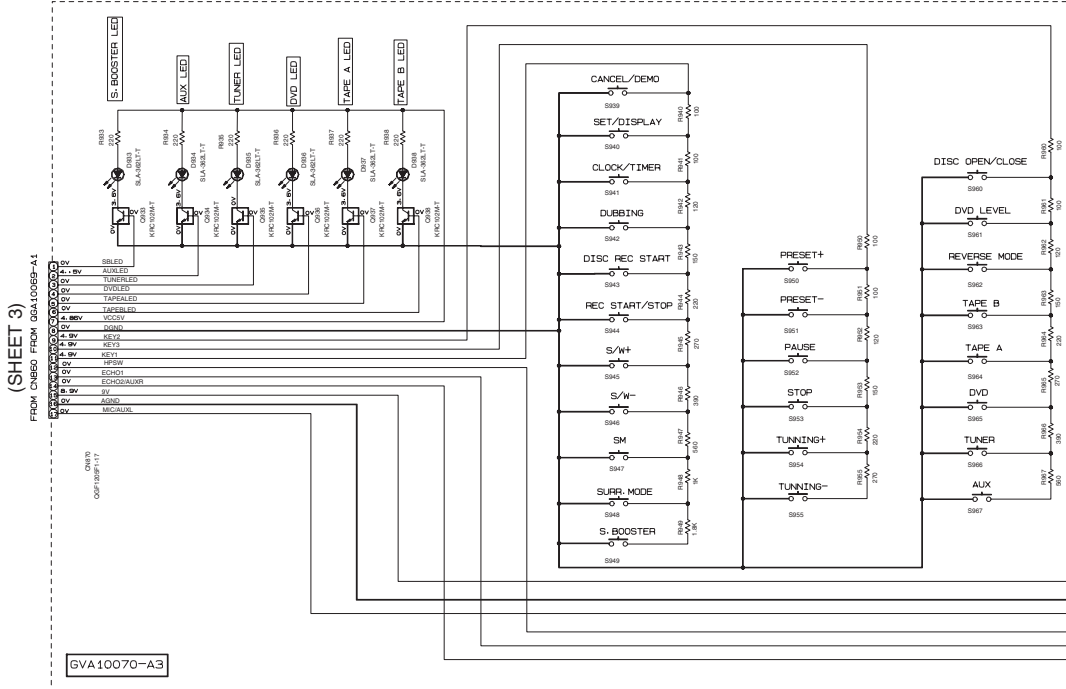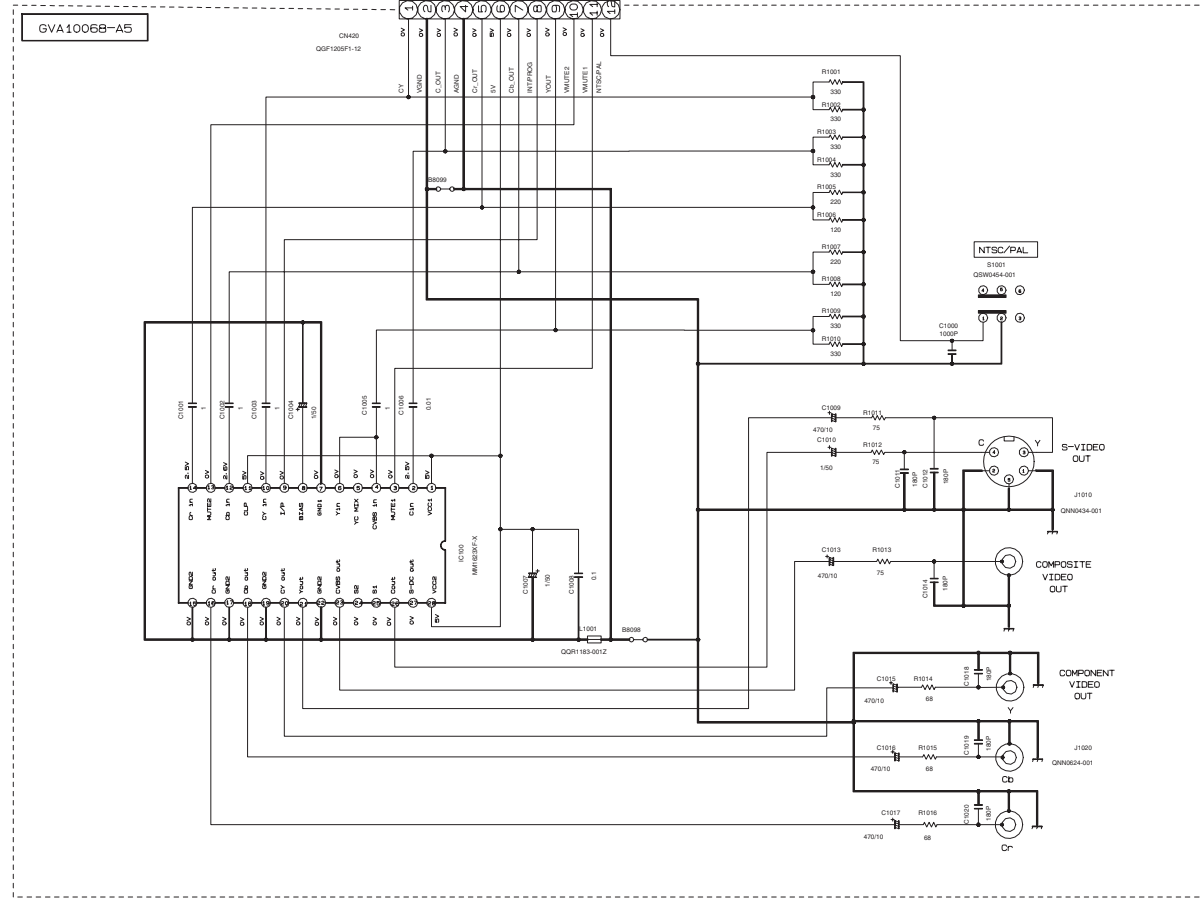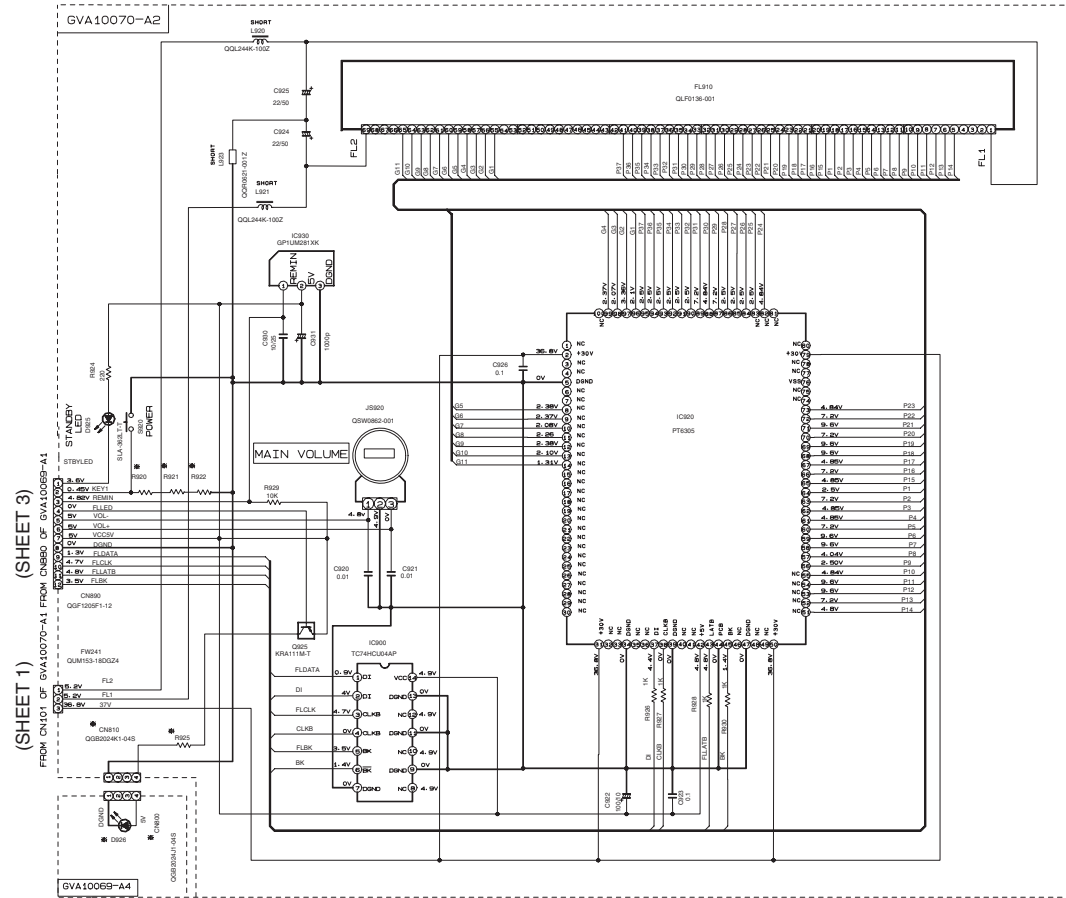

VERSION REF NO.	MX-JD3			MX-JD5				MX-JD8			REMARK	
	UN/US/EE	UX	UE	UN/US	UX	UE	UW	A	UN/US	UX		UW
R820 (B8003)	100	200	200	470	470	2K	470	9.1K	1.2K	1.2K	2K	VER. SETTING FOR KEY1
R821 (B8005)	SHORT	SHORT	120	SHORT	220	910	270	150	510	910	150	VER. SETTING FOR KEY2
R822 (B8006)	SHORT	SHORT	SHORT	SHORT	SHORT	1.6K	270	300	SHORT	200	SHORT	VER. SETTING FOR KEY3
CN810	NONE	NONE	NONE	USE	USE	USE	USE	USE	USE	USE	USE	
CN820	NONE	NONE	NONE	USE	USE	USE	USE	USE	USE	USE	USE	
D926	NONE	NONE	NONE	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SLI-343URC3F	SELL210C-P	SELL210C-P	SELL210C-P	
J971	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	QNS0236-001	
R826	NONE	NONE	NONE	200	200	200	200	200	150	150	150	

NOTES
 1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
 2. UNLESS OTHERWISE SPECIFIED
 RESISTORS ARE 1/4W ±5% CARBON RESISTOR.
 ALL RESISTANCE VALUES ARE IN OHM (Ω).
 ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
 ALL CAPACITANCE VALUES ARE IN PF (pF).
 ALL INDUCTANCE VALUES ARE IN MH (mH).
 ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF)/RATED VOLTAGE (V).
 ALL DIODES ARE 1N5138-T2.
 ALL TACT SWITCHES ARE GEM0674-0012

■ Tape circuit / Mechanism control section

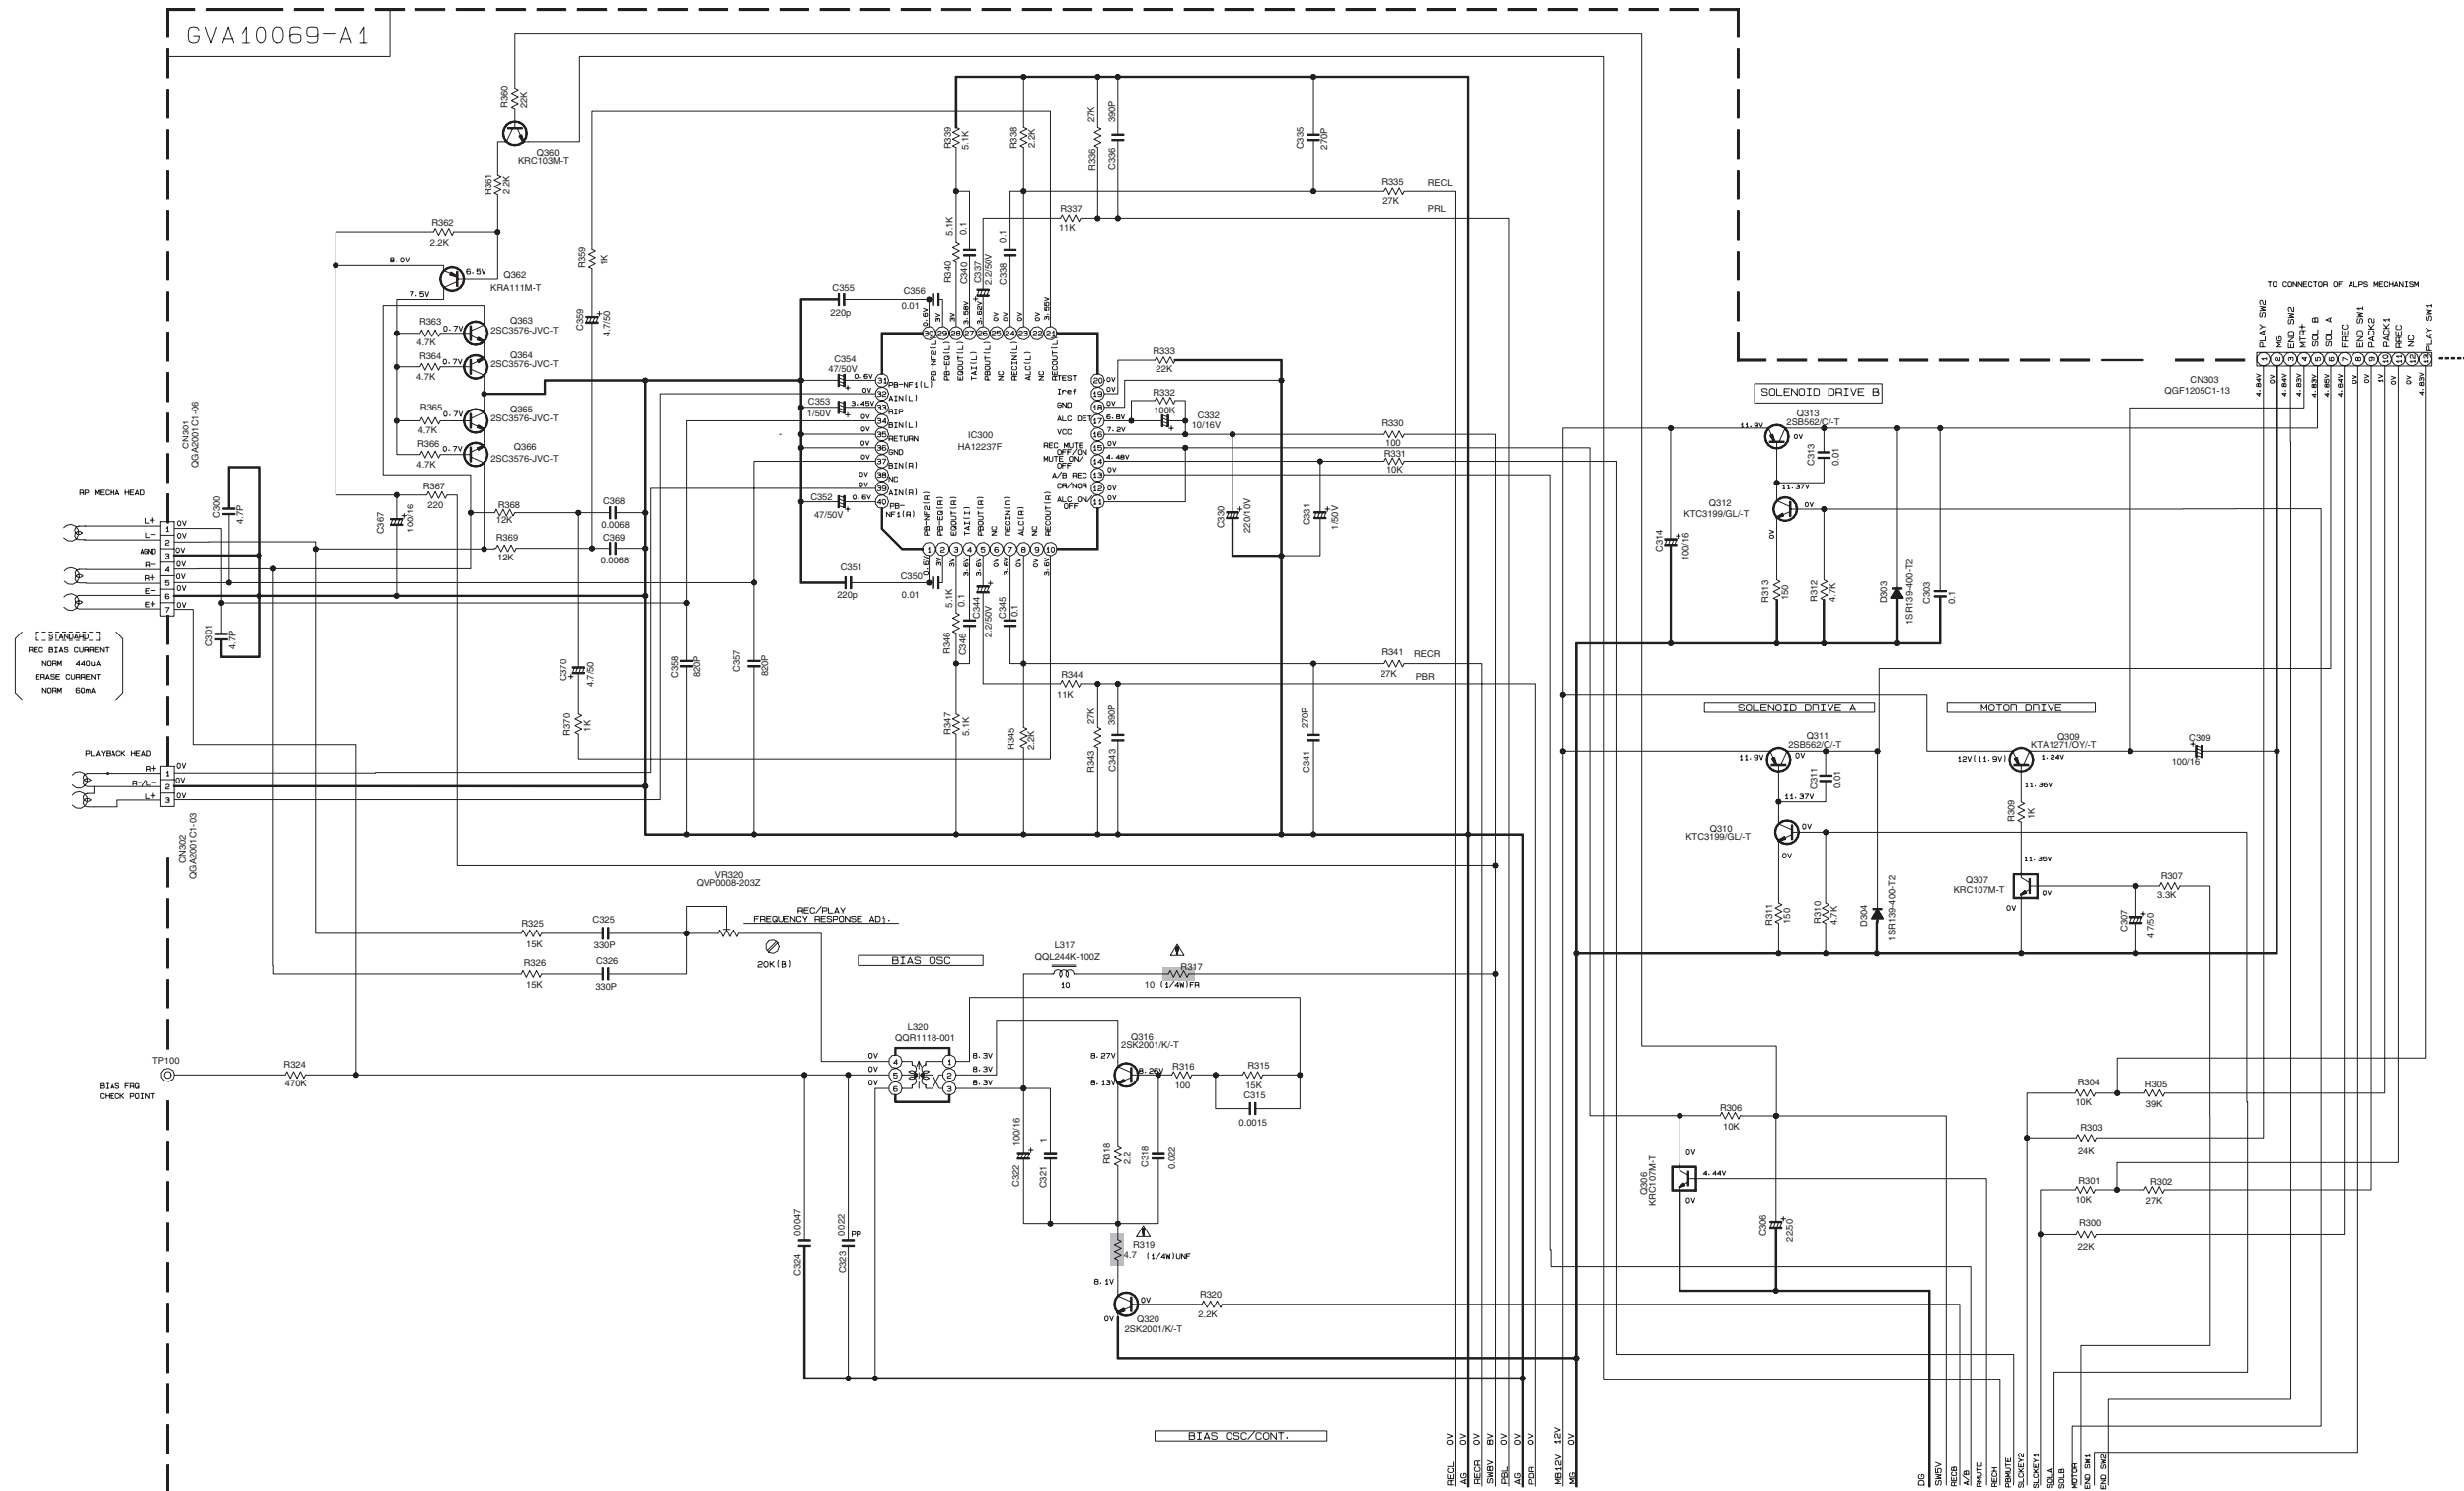

(SHEET 3)

(SHEET 3)

NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL. CONDITION : MECHA STOP MODE

2. UNLESS OTHERWISE SPECIFIED, RESISTORS ARE 1/10W ±5% METAL GLAZE RESISTOR. ALL RESISTANCE VALUES ARE IN Ω(M)Ω. ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR. ALL CAPACITANCE VALUES ARE IN # (P=PF). ALL INDUCTANCE VALUES ARE IN #H(M=MH). ALL E. CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (#F)/RATED VOLTAGE (V). ▯ POLYPROPYLENE CAPACITOR



GROUND END NOT CONNECT TO MET

▲ Parts are safety assurance parts. When replacing those parts make sure to use the specified one.


DVD control system section (1/2)



LVA10513-31A(1/2)

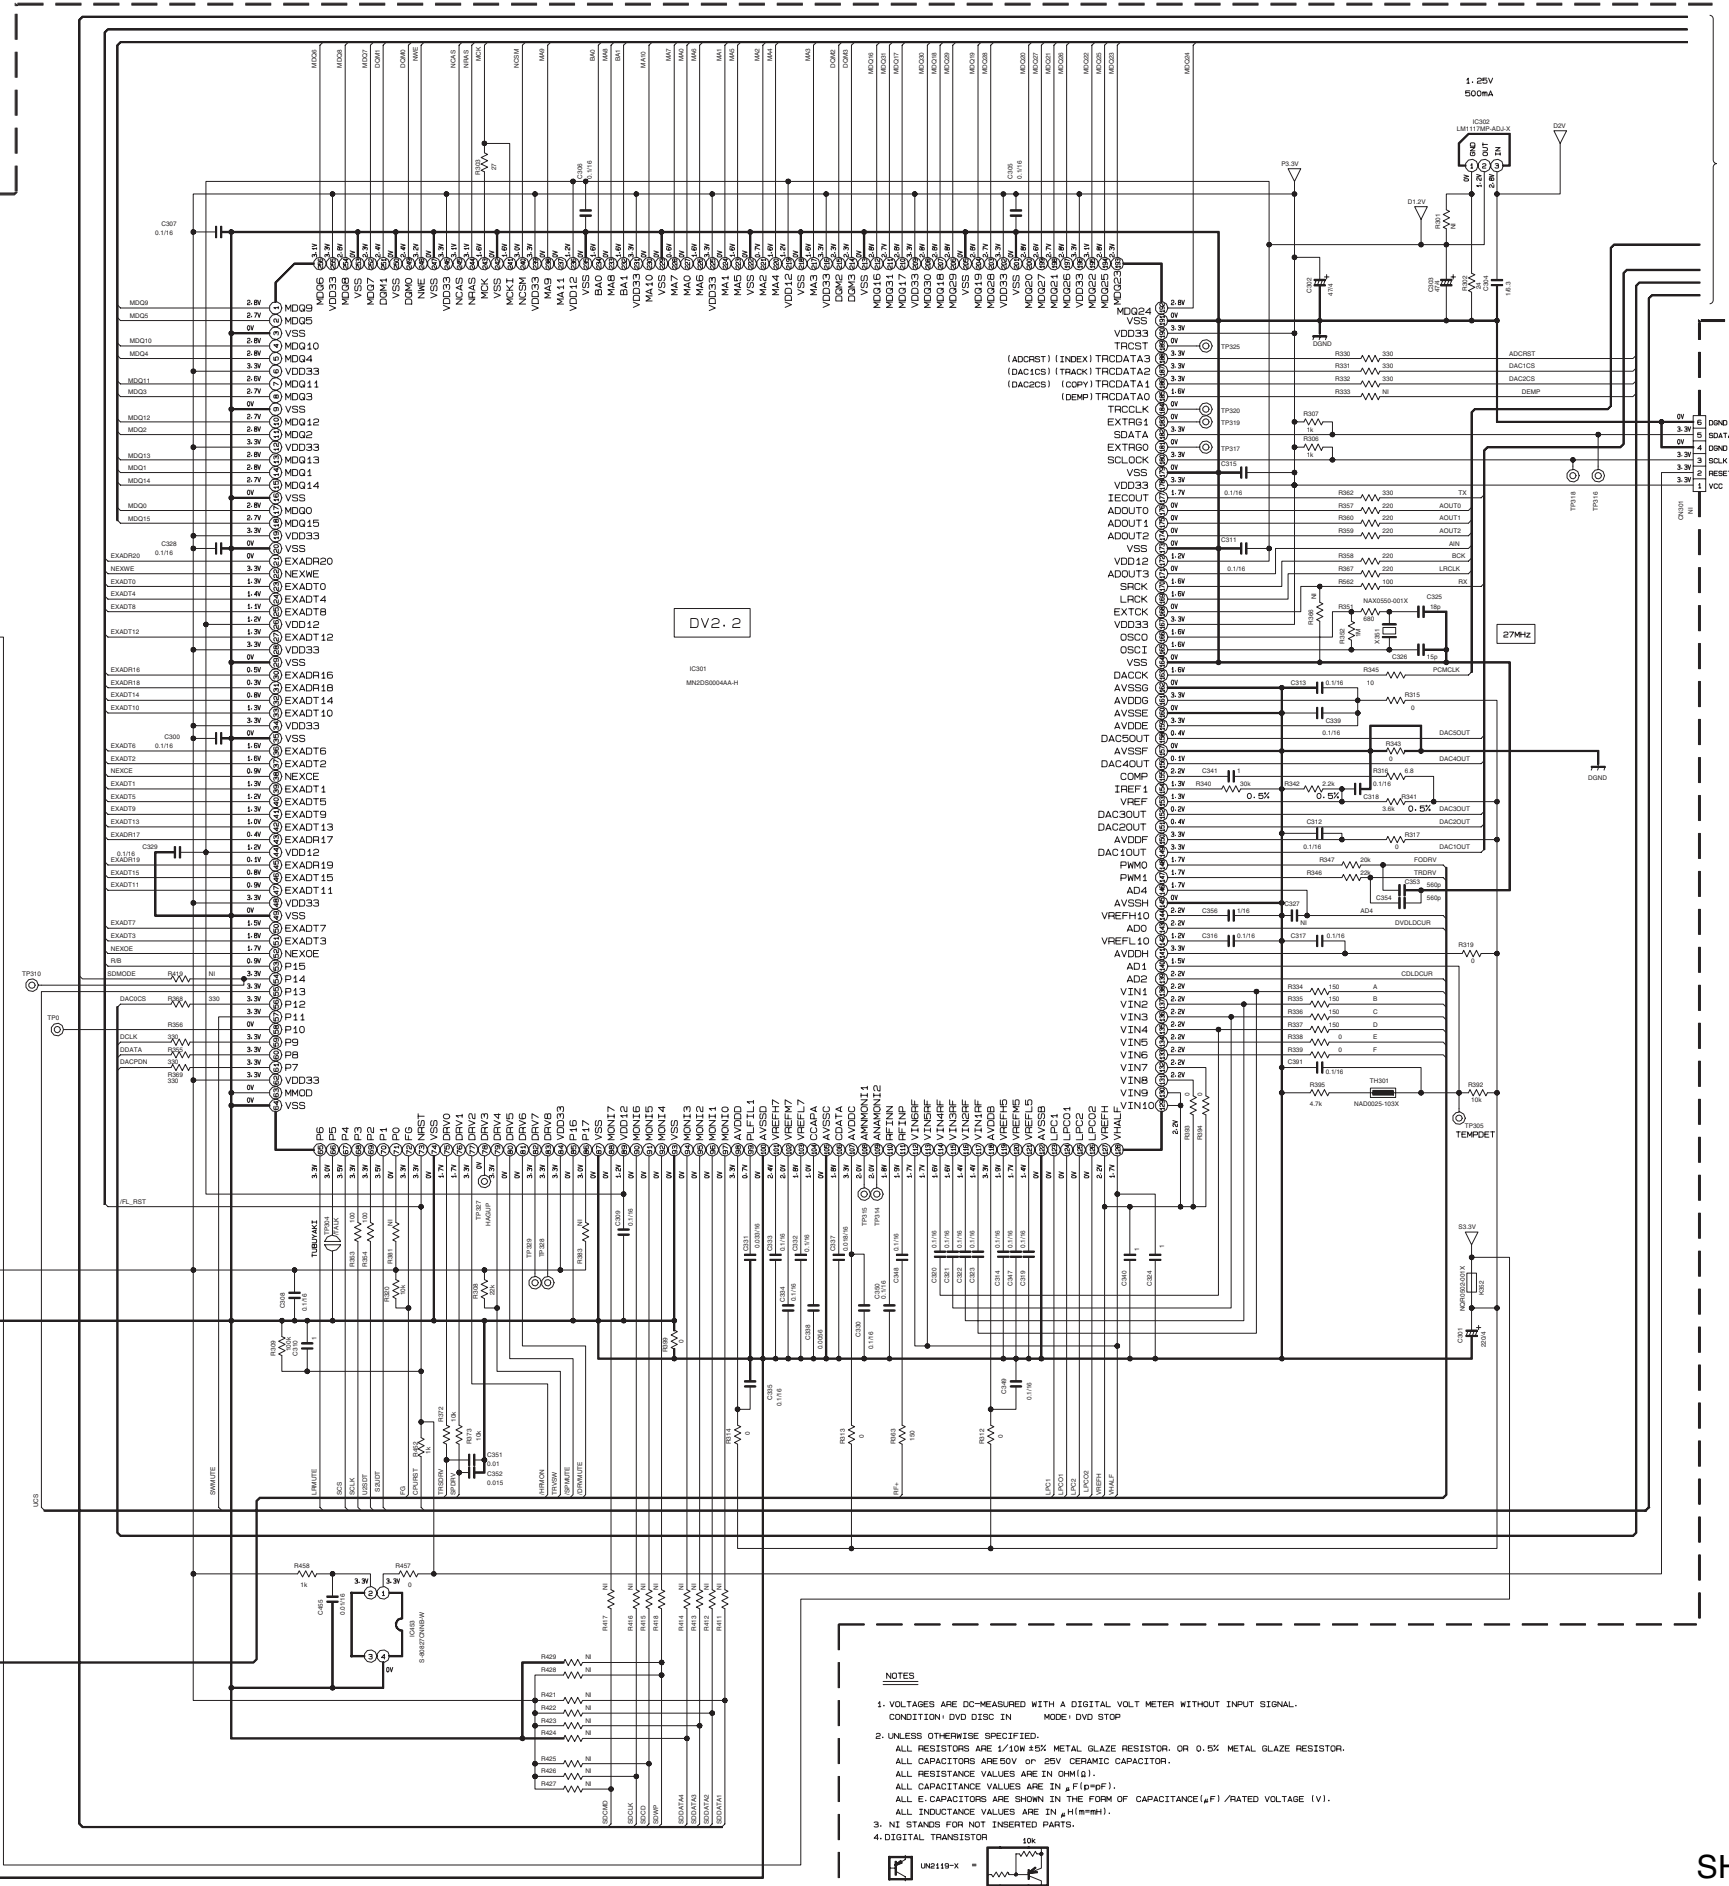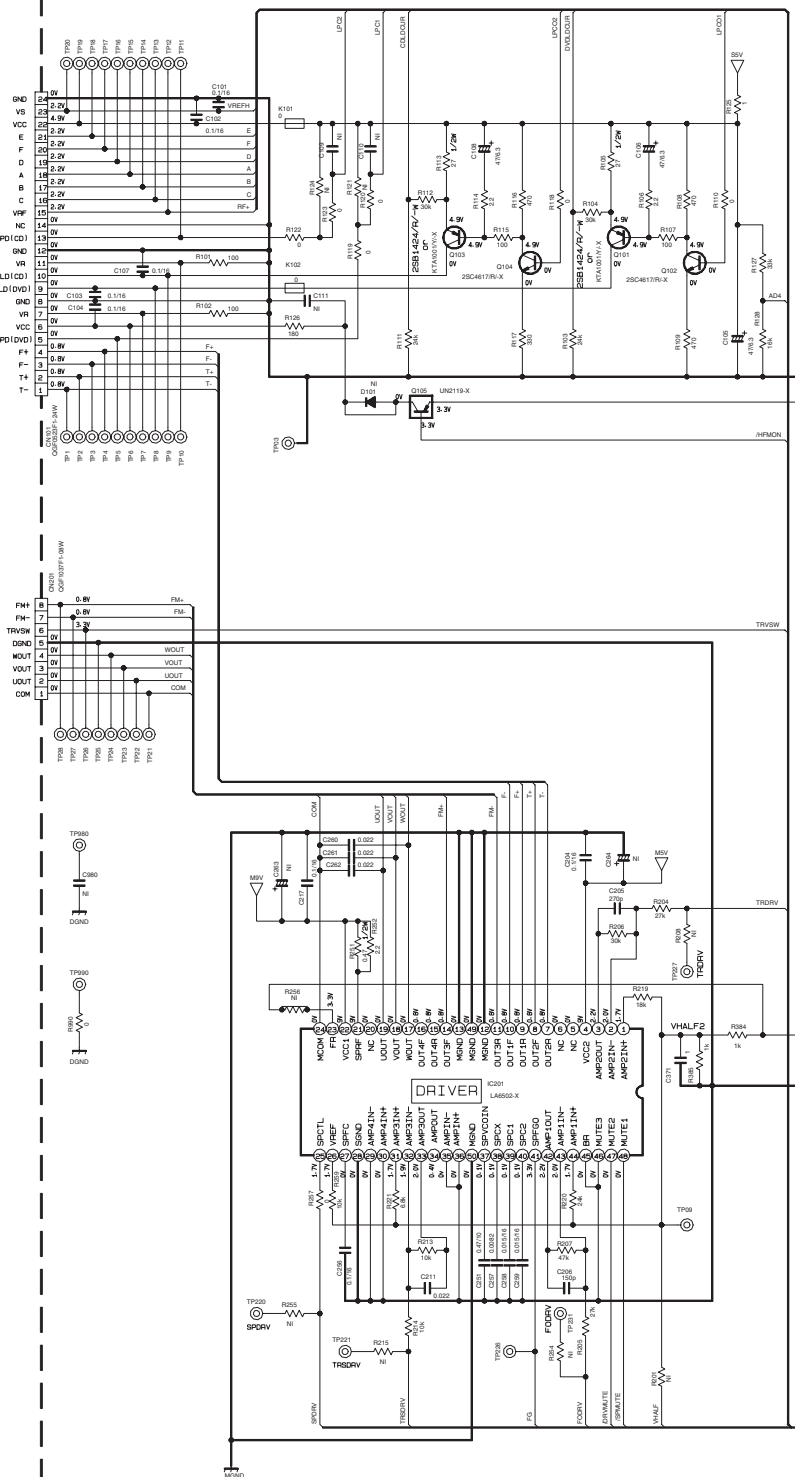


- NOTES**
- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL. CONDITION: DVD DISC IN MODE: DVD STOP
 - UNLESS OTHERWISE SPECIFIED:
ALL RESISTORS ARE 1/16W ±5% METAL GLAZE RESISTOR OR 0.5% METAL GLAZE RESISTOR.
ALL CAPACITORS ARE 50V OR 25V CERAMIC CAPACITOR.
ALL RESISTANCE VALUES ARE IN Ω(k)Ω(M).
ALL CAPACITANCE VALUES ARE IN pF(nF)μF.
ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF)/RATED VOLTAGE (V).
ALL INDUCTANCE VALUES ARE IN μH(mH).
 - NI STANDS FOR NOT INSERTED PARTS.
 - DIGITAL TRANSISTOR




(SHEET 7)

SHEET 6

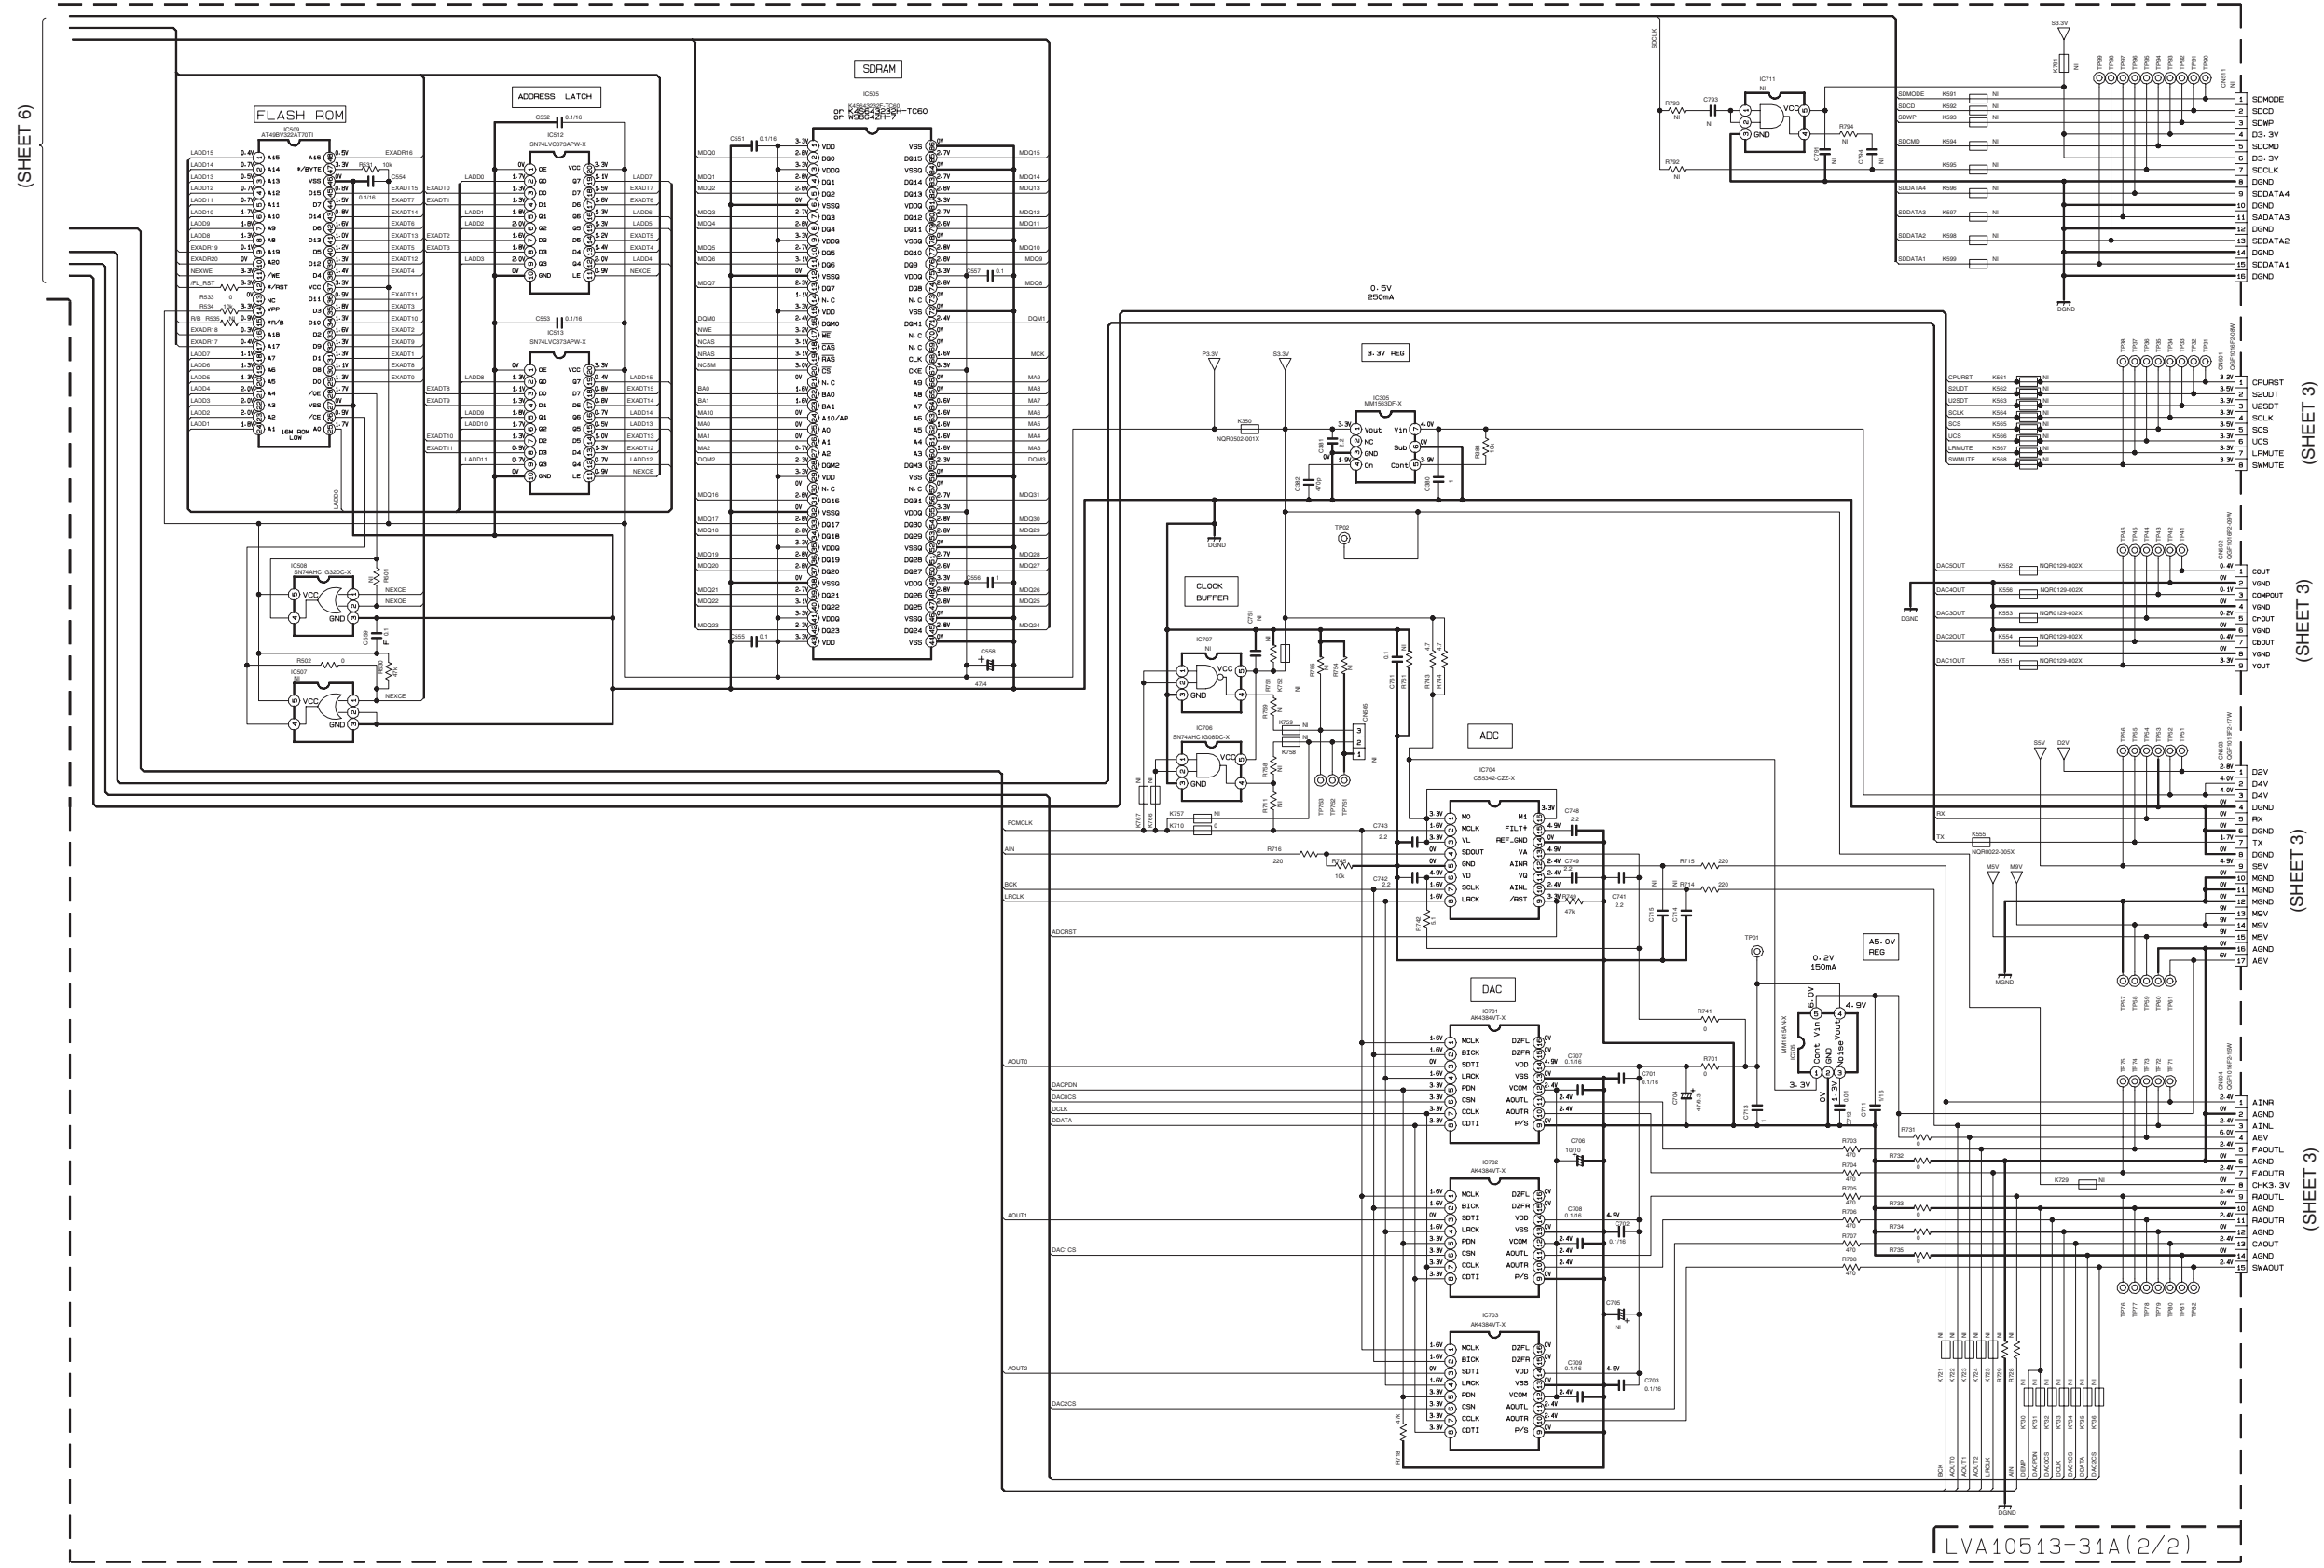

NOTES


- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL. CONDITION: DVD DISC IN MODE: DVD STOP
- UNLESS OTHERWISE SPECIFIED:
 ALL RESISTORS ARE 1/10W ±5% METAL GLAZE RESISTOR, OR 0.5X METAL GLAZE RESISTOR.
 ALL CAPACITORS ARE 50V, ±20V OR ±5V CERAMIC CAPACITOR.
 ALL RESISTANCE VALUES ARE IN Ω(MH).
 ALL CAPACITANCE VALUES ARE IN μ(F)(PF).
 ALL E. CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF) / RATED VOLTAGE (V).
 ALL INDUCTANCE VALUES ARE IN μ(H)(MH).
- NI STANDS FOR NOT INSERTED PARTS.




Printed circuit boards

■ Power board


(Regulator & Surround amplifier board)

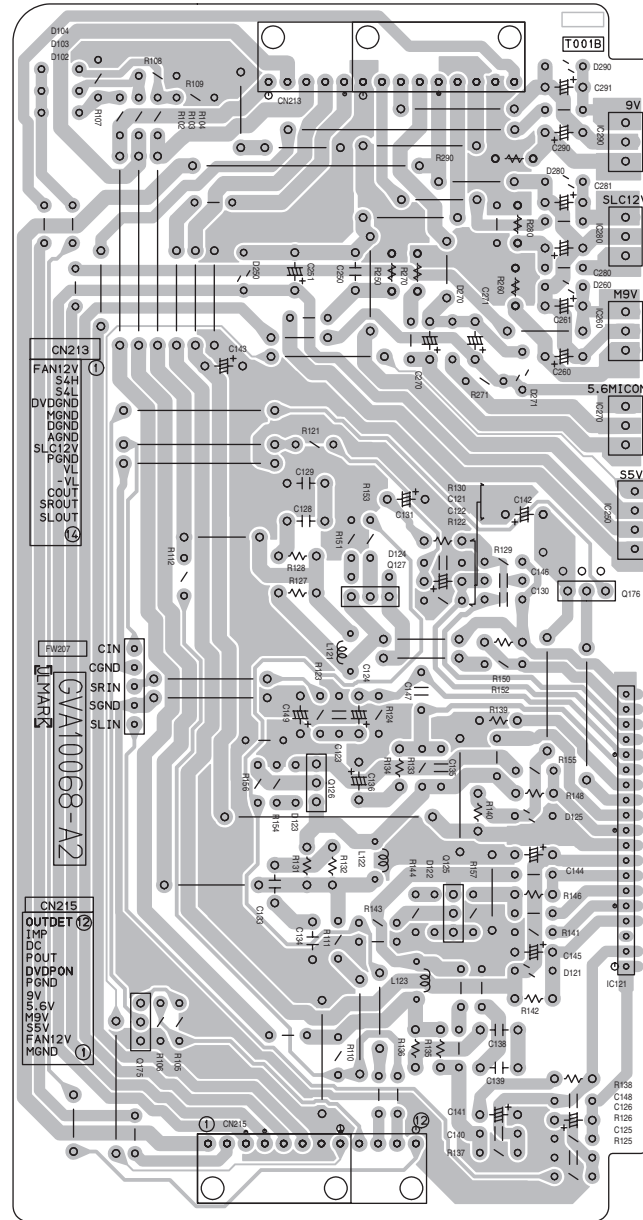


(Main & Subwoofer amplifier board)

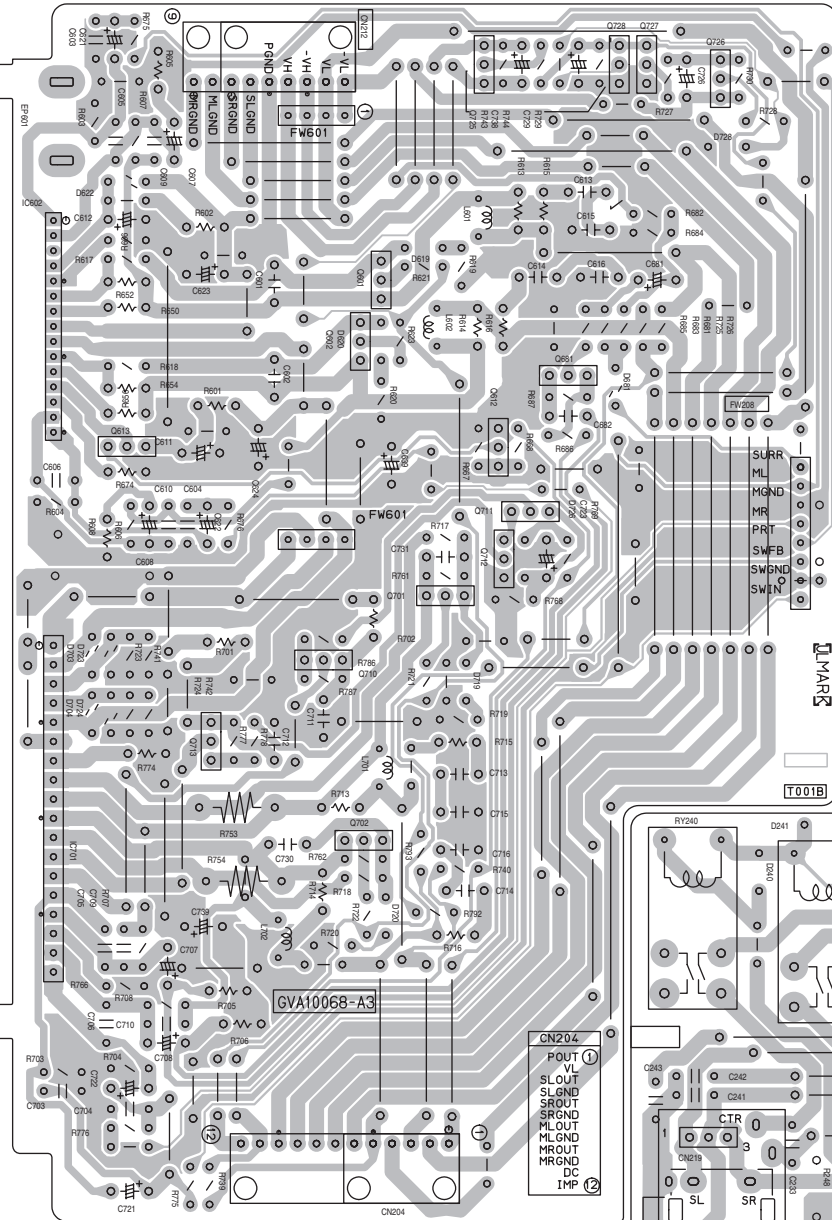


(Primary board)

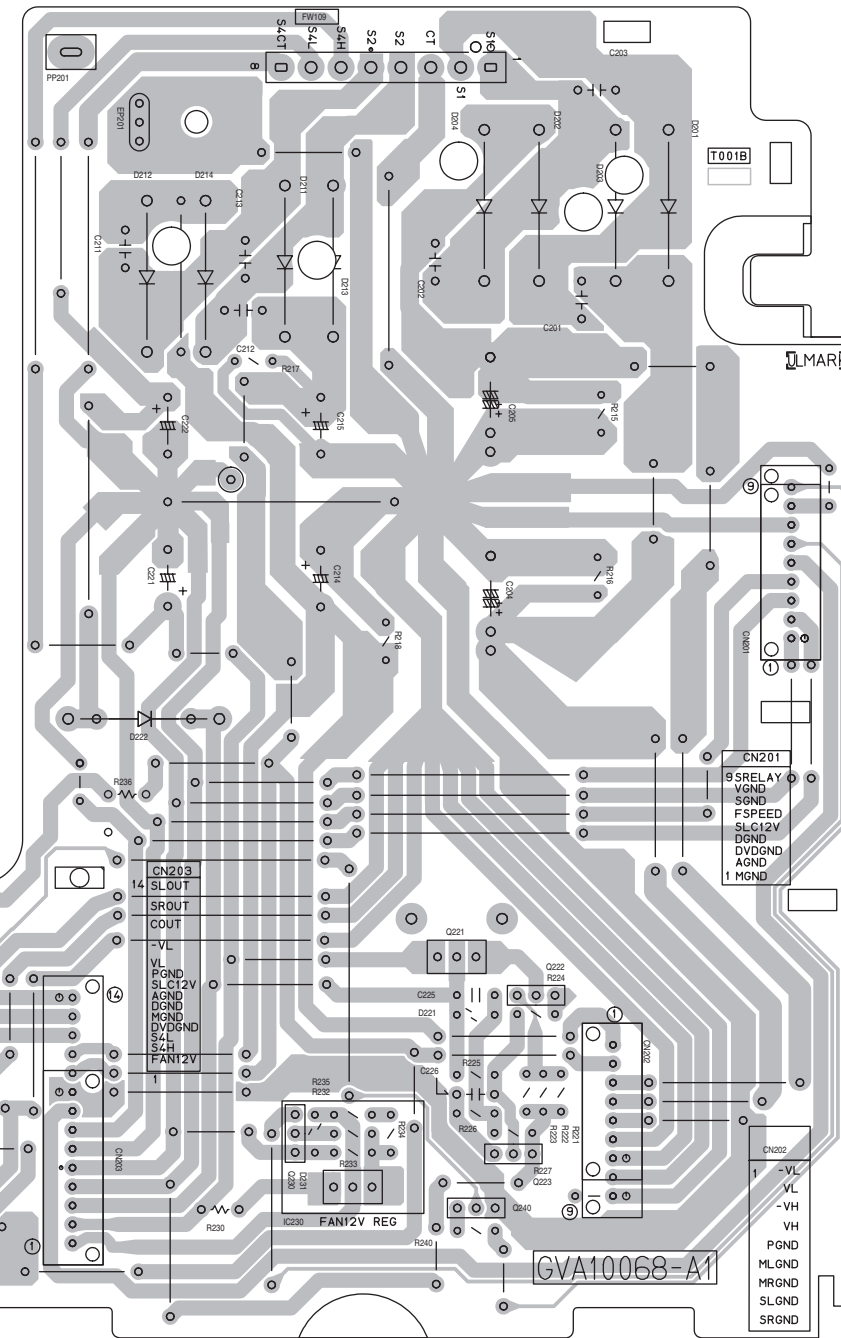


(Speaker terminal board)

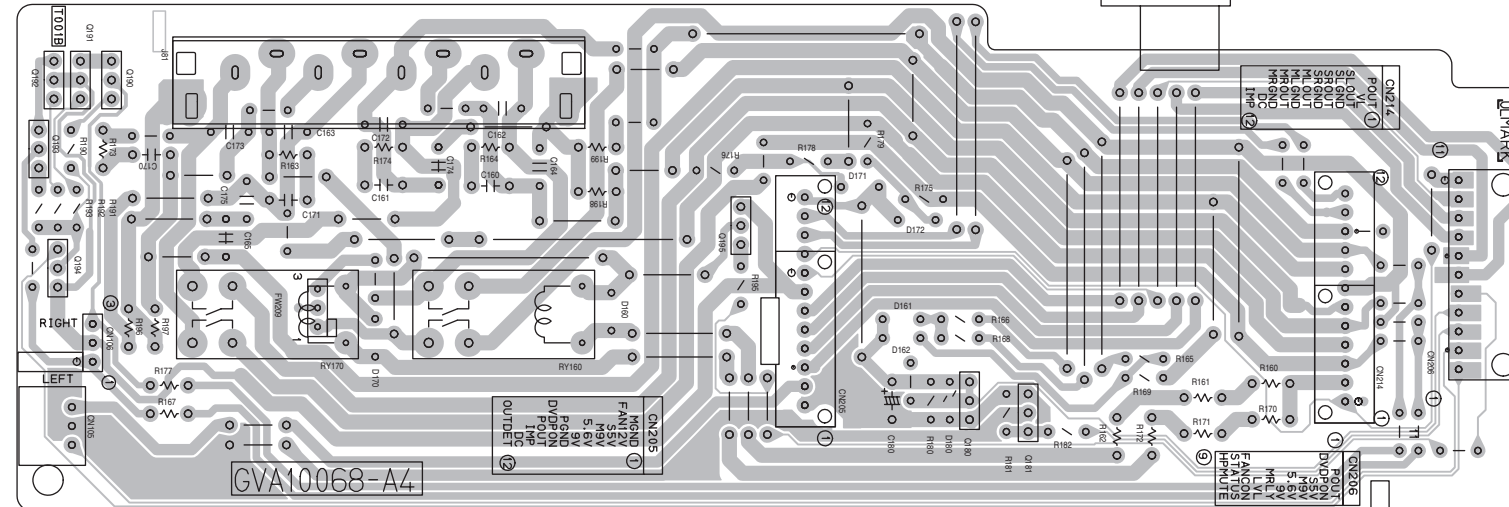


(Video board)

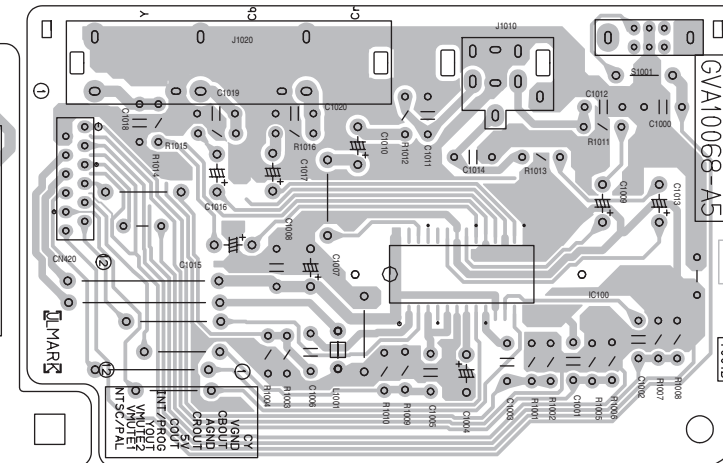

(Main board)

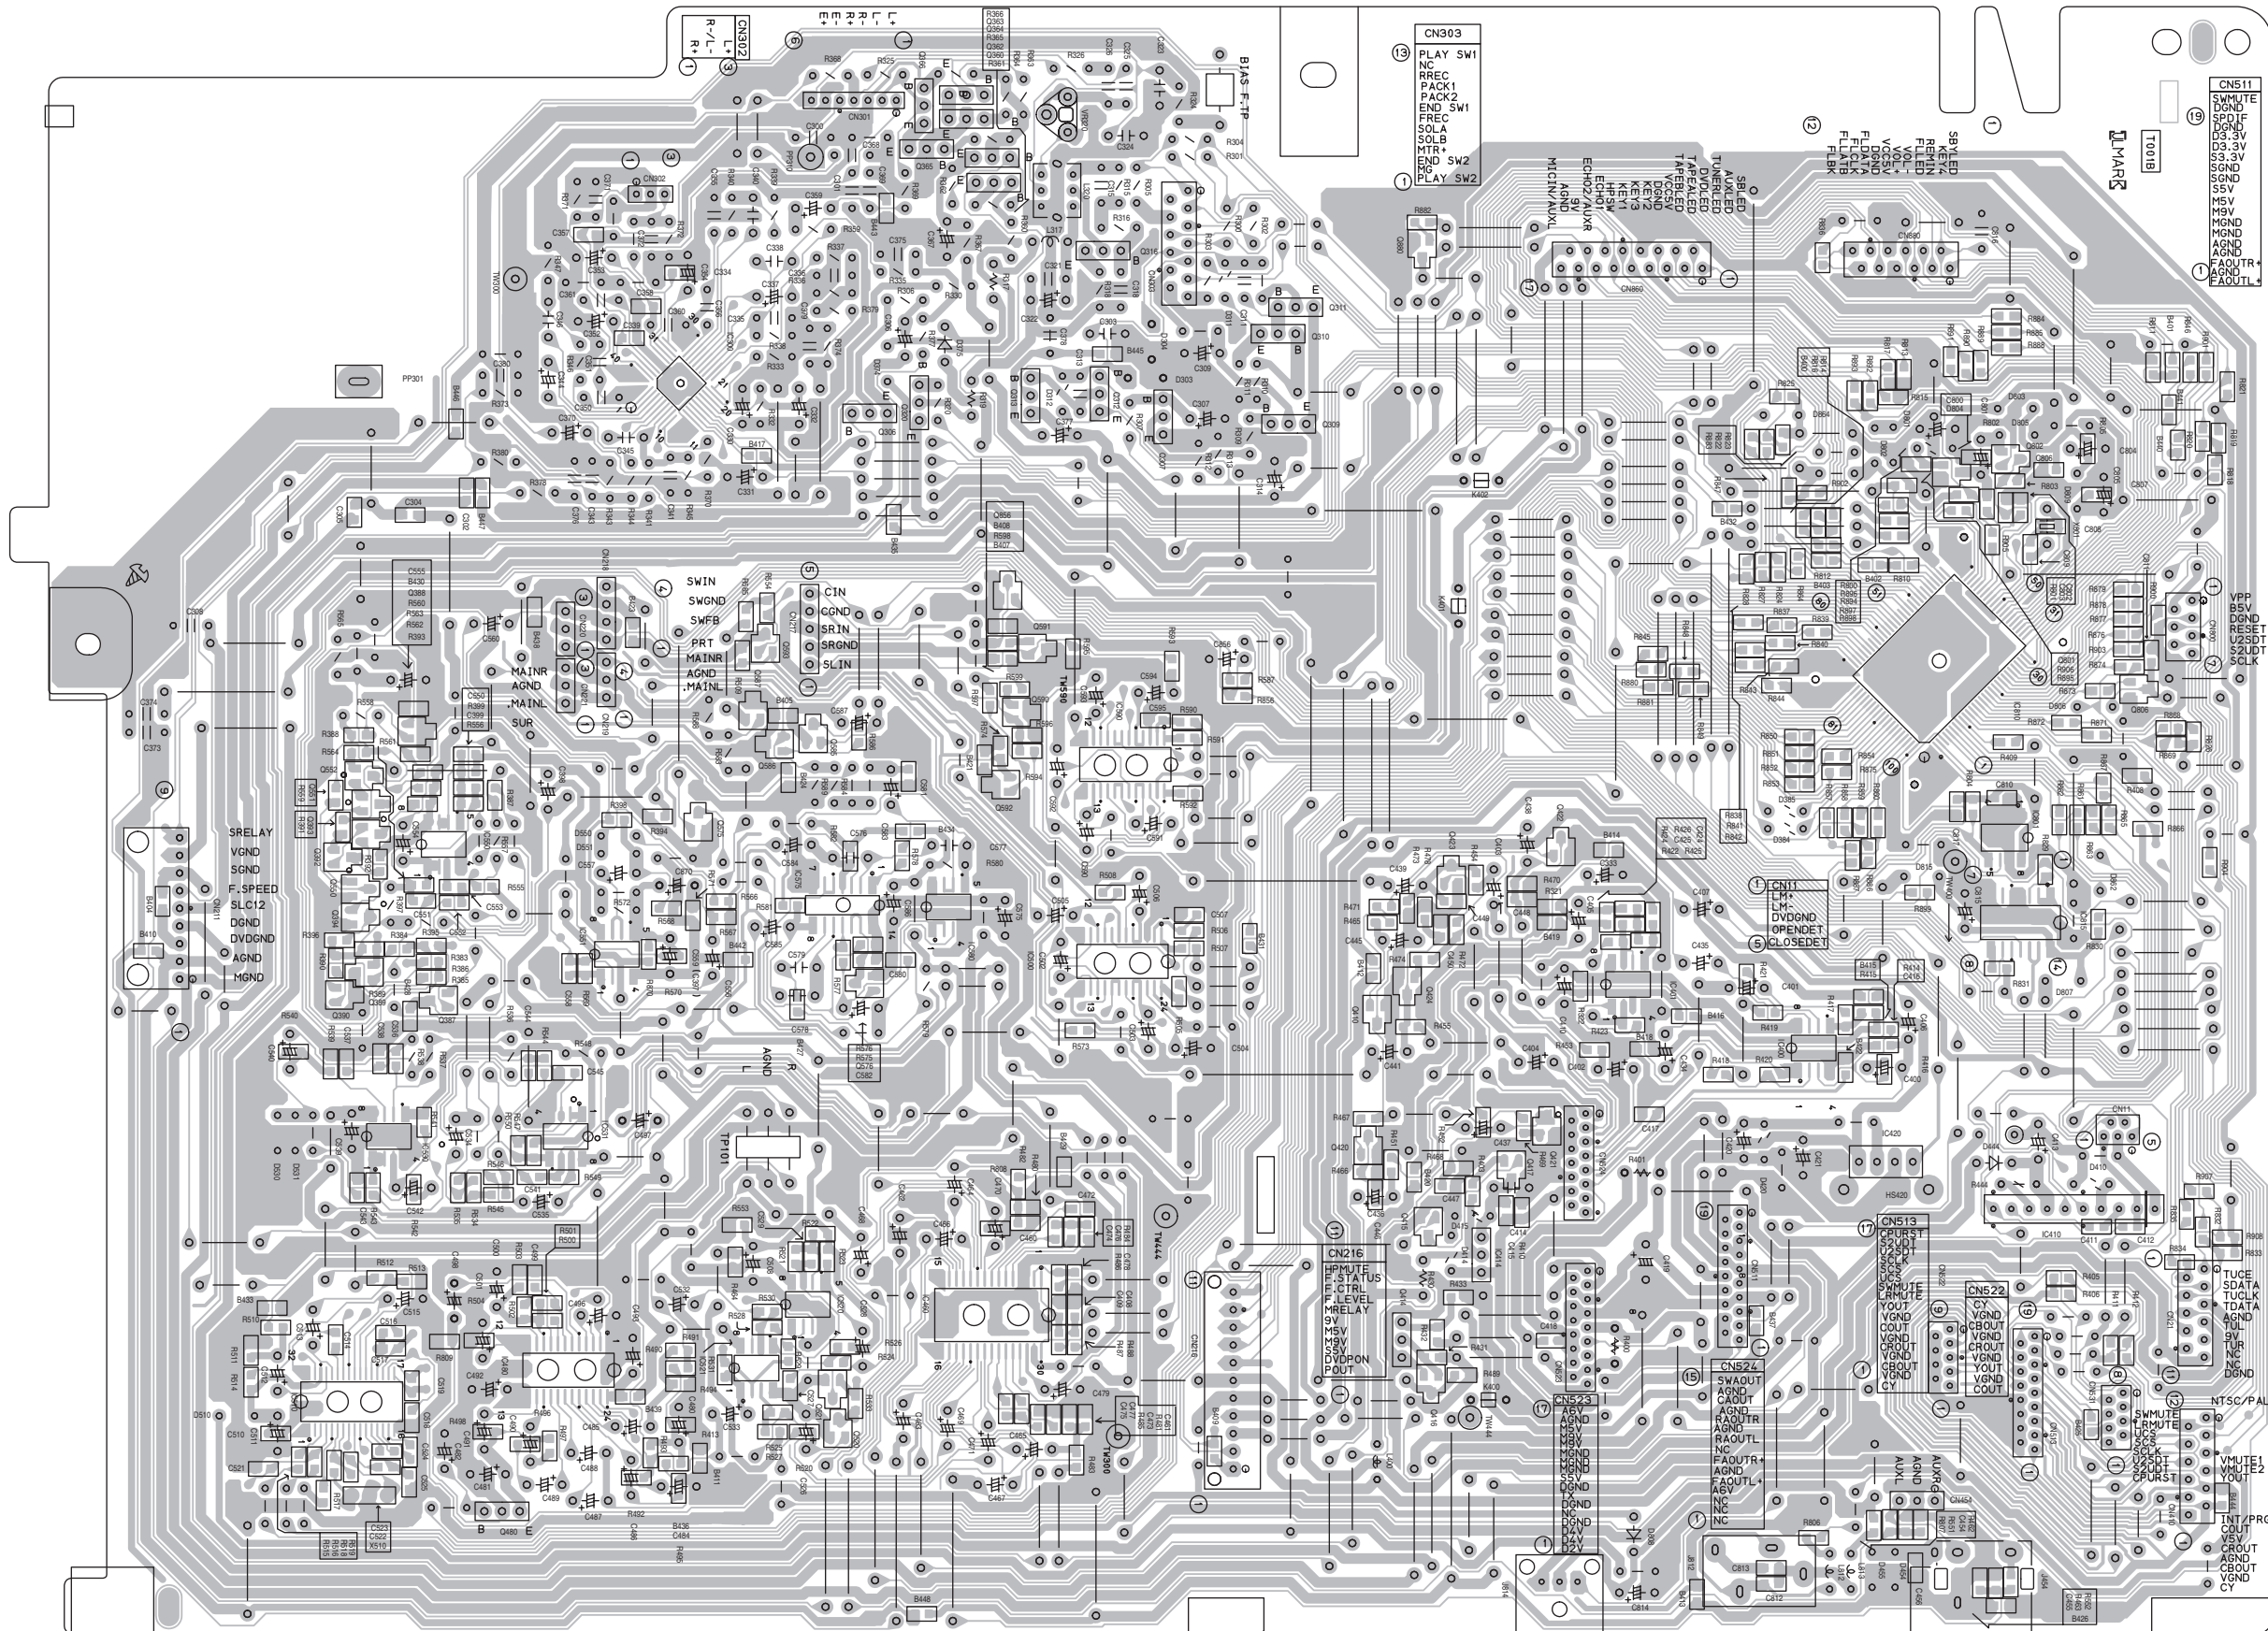

■ Front board

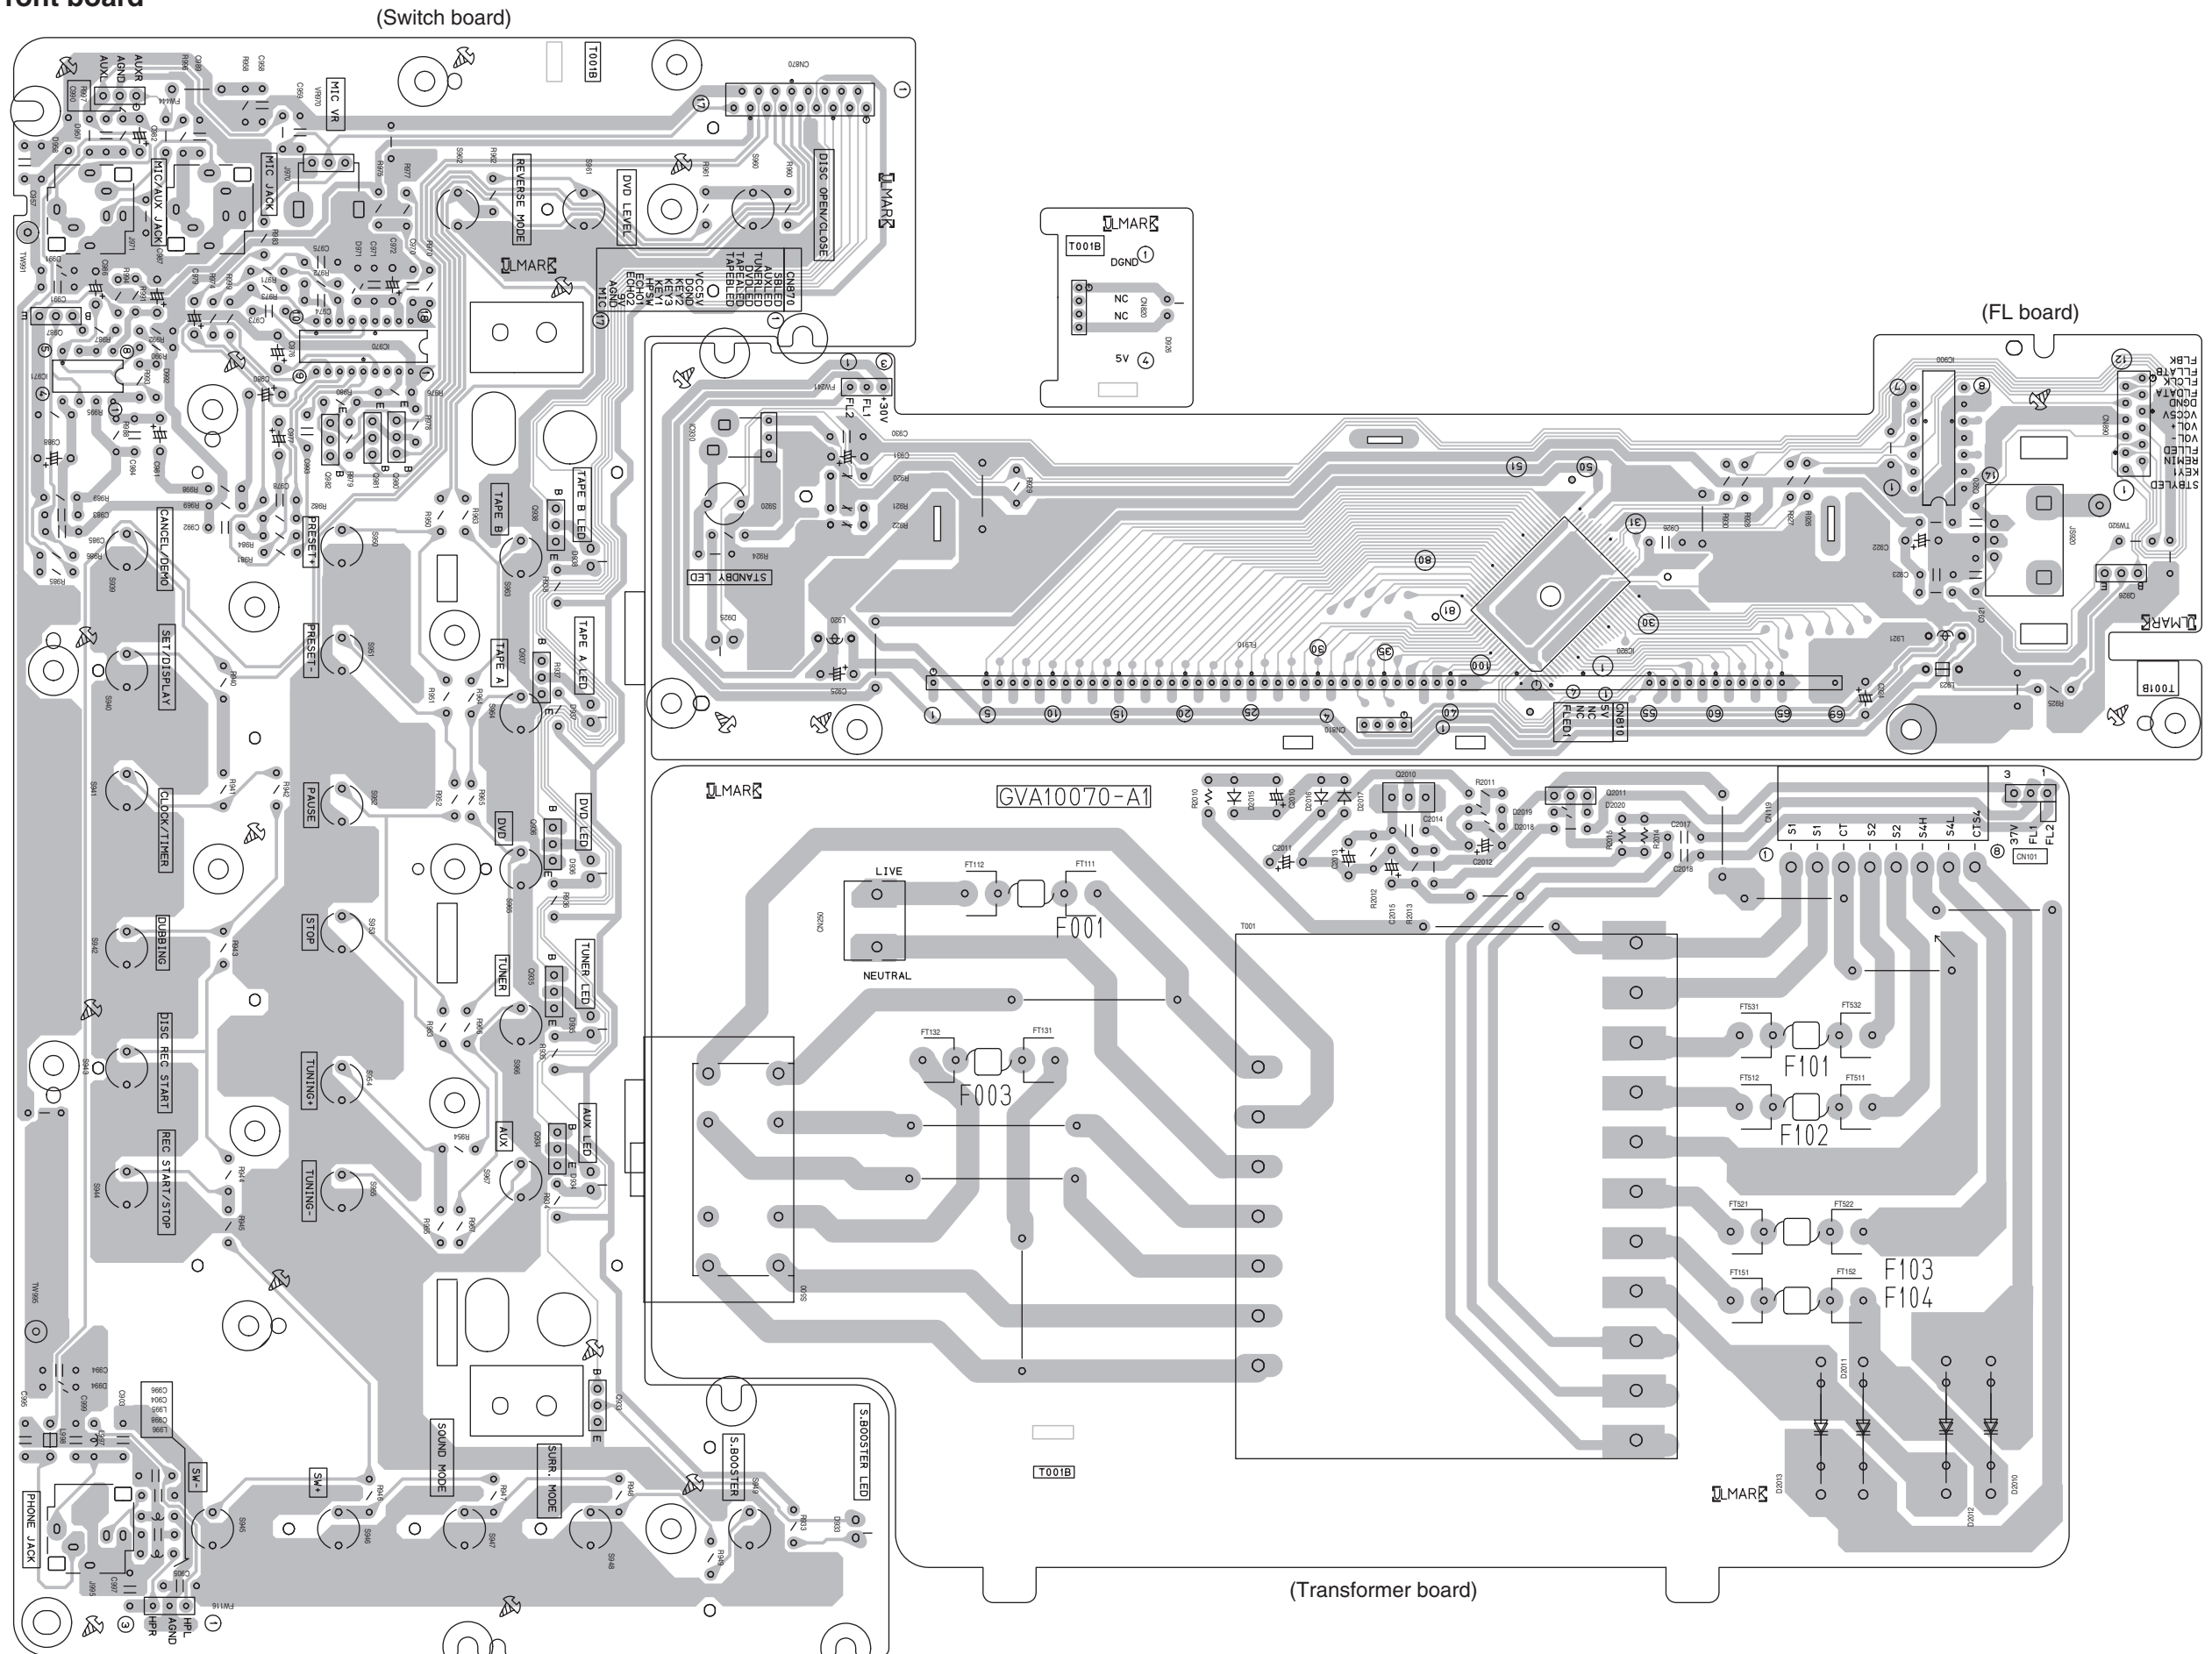


(Switch board)

(FL board)


(Transformer board)

■ DVD servo board


Forward side

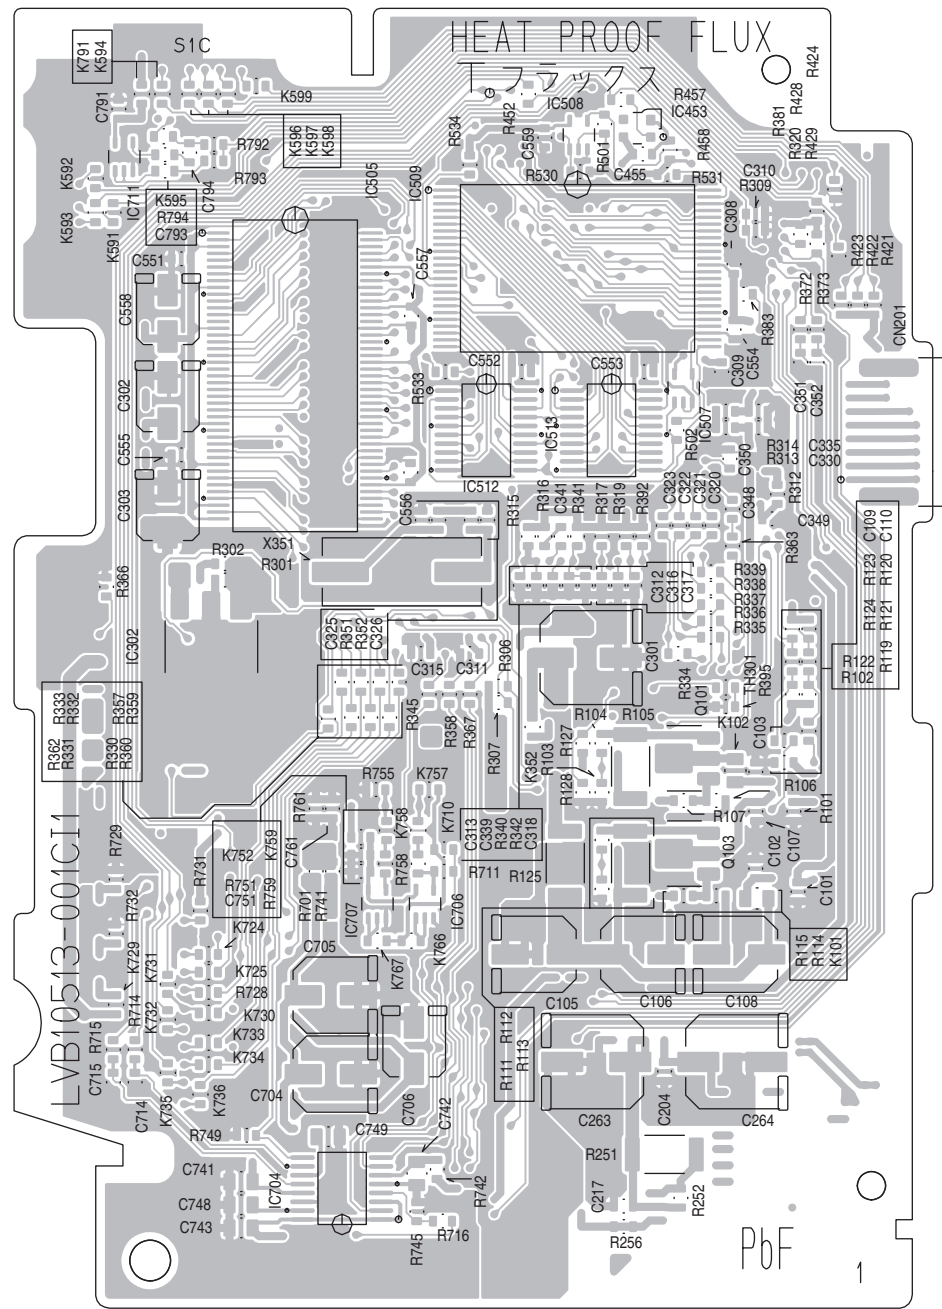

Reverse side

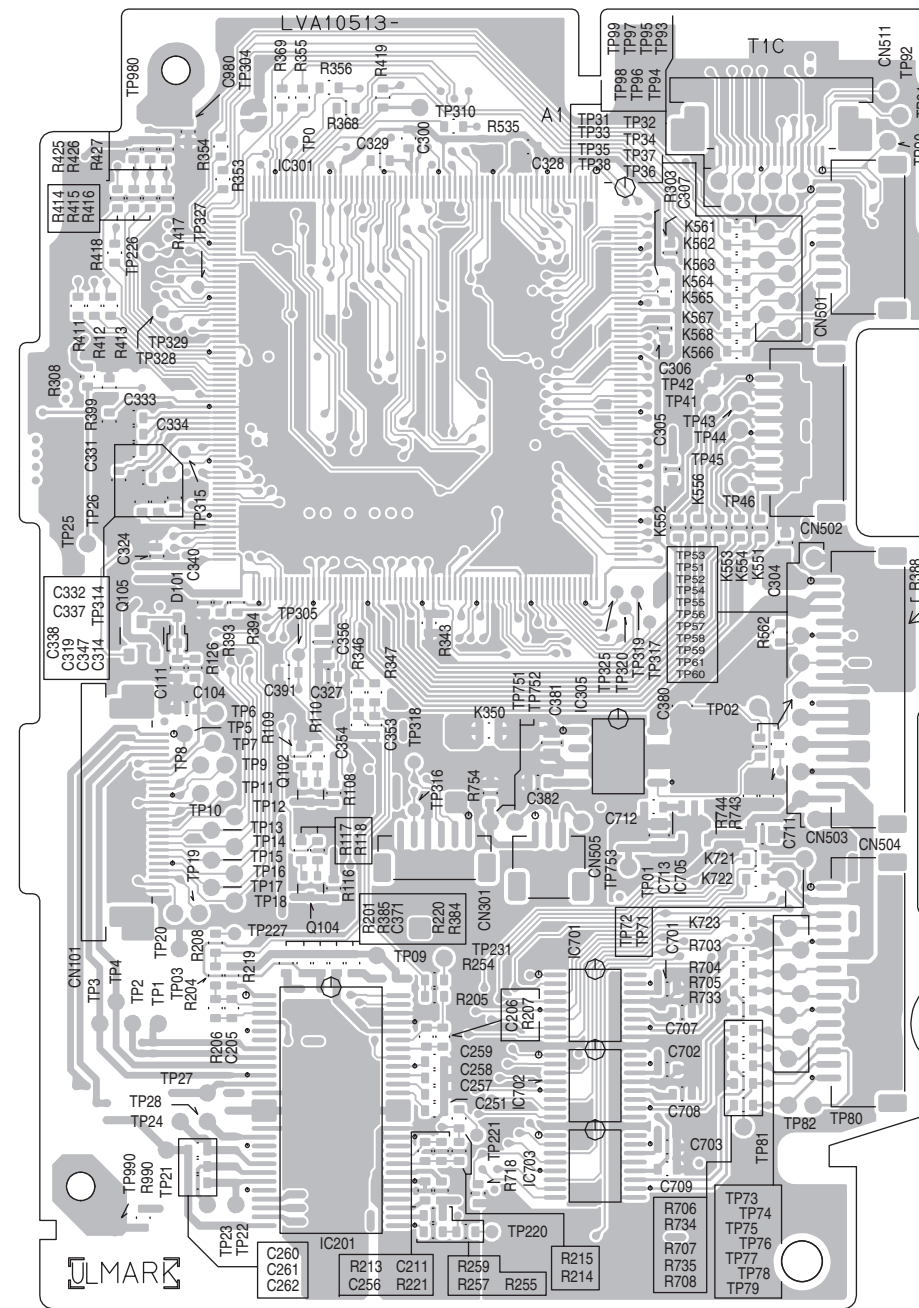

■ DVD loading switch board

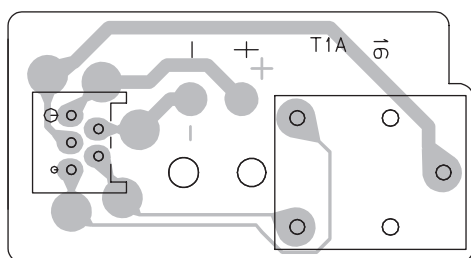

< MEMO >

JVC

Victor Company of Japan, Limited

AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.MB263SCH)



Printed in Japan
WPC

PARTS LIST

[MX-JD5]

* All printed circuit boards and its assemblies are not available as service parts.


Area suffix	
US	Singapore
UW	Brazil, Mexico, Peru
UX	Saudi Arabia
UE	Turkey
UN	Asean


- Contents -

Exploded view of general assembly and parts list (Block No.M1)	3- 2
DVD mechanism assembly and parts list (Block No.MJ)	3- 6
DVD loading base assembly and parts list (Block No.MN)	3- 8
Electrical parts list (Block No.01~05)	3-10
Packing materials and accessories parts list (Block No.M3)	3-24

Exploded view of general assembly and parts list

Block No. **M 1 M M**

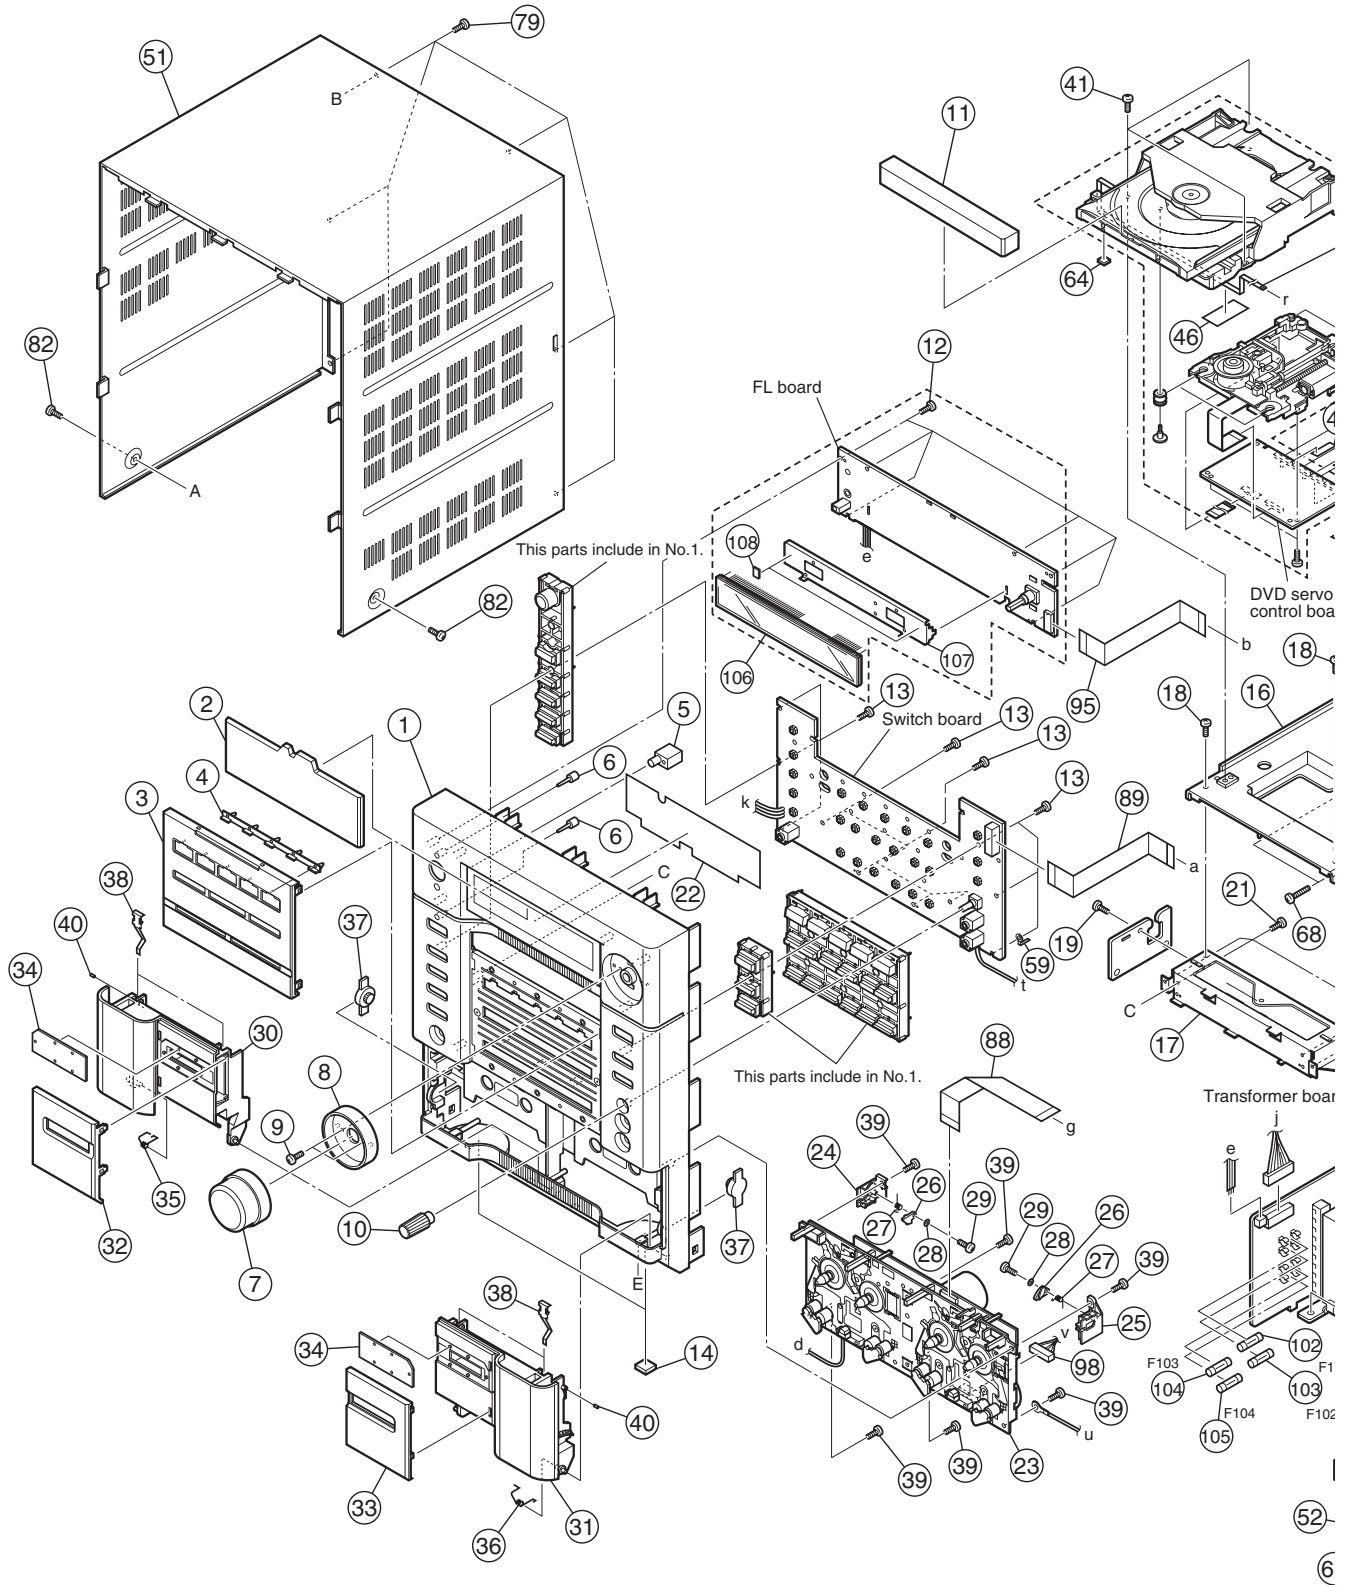

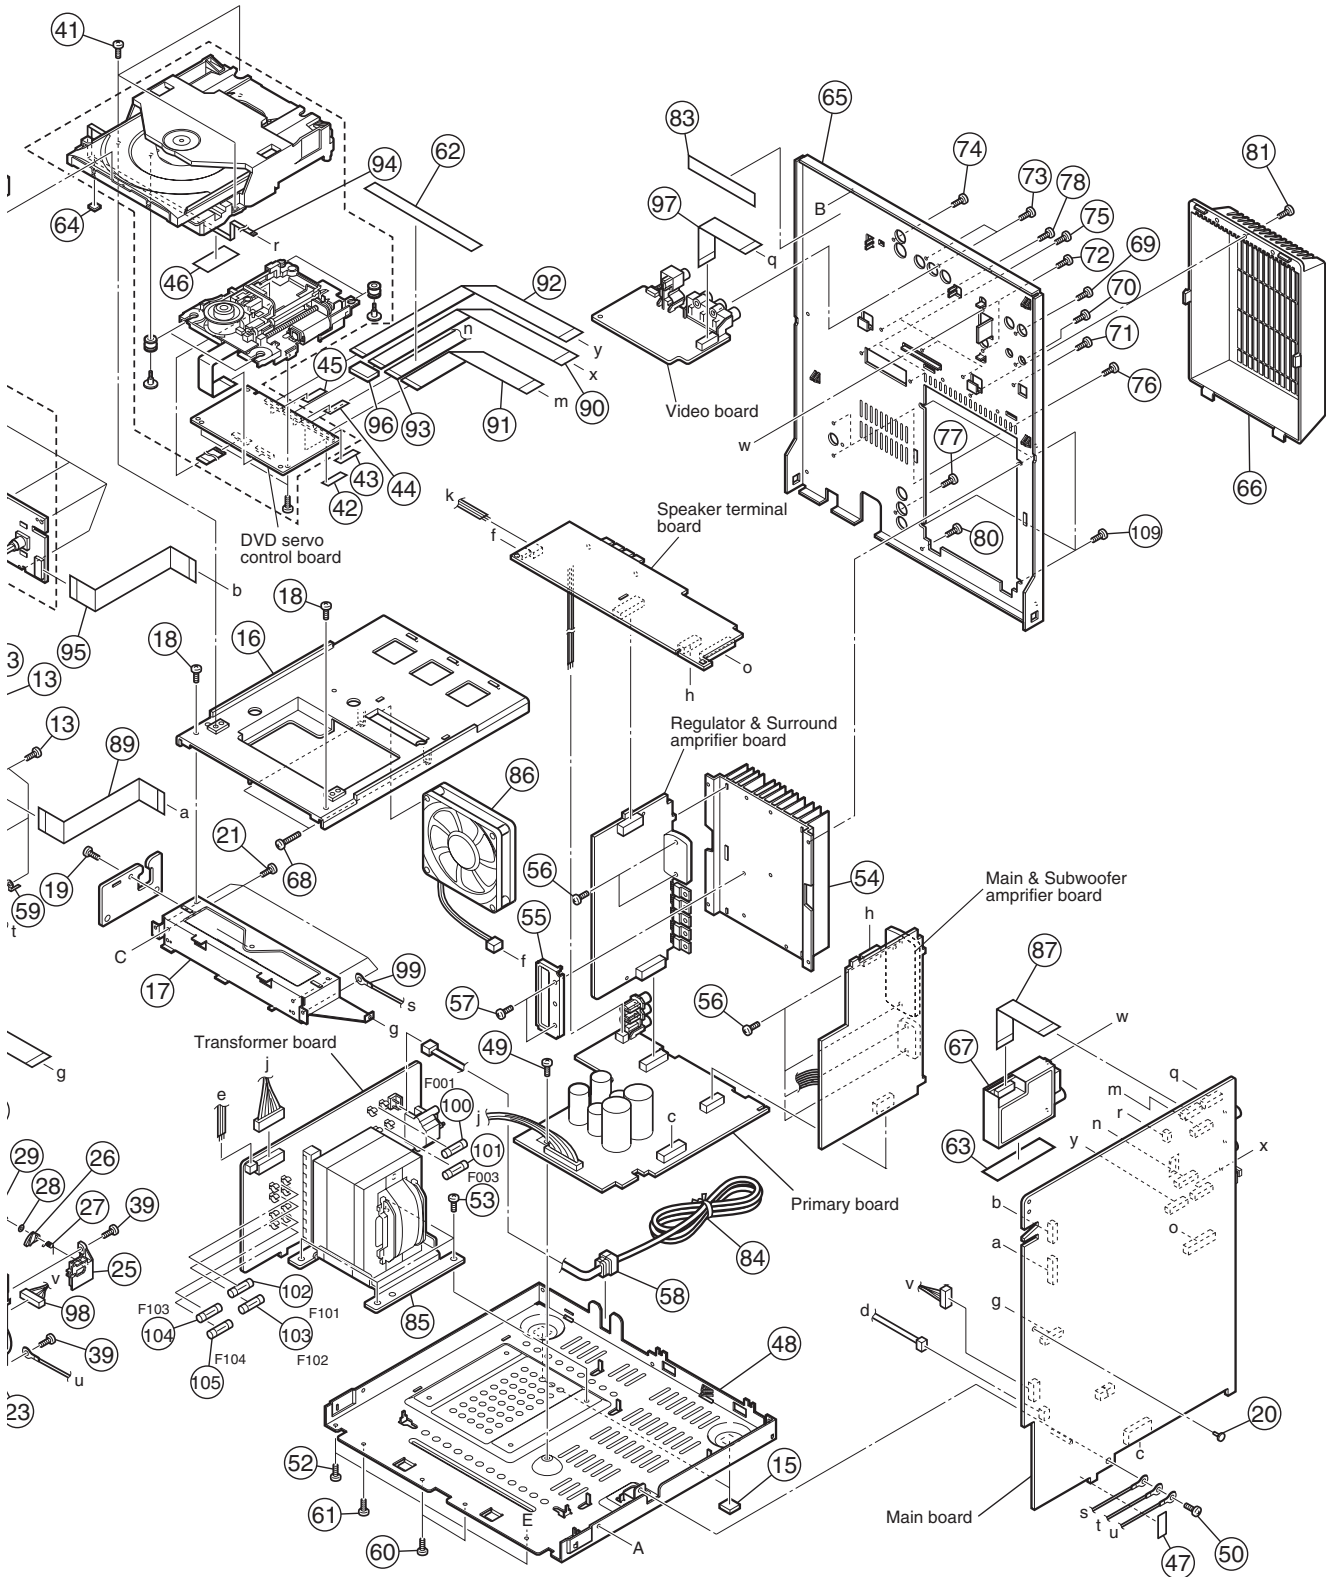

General Assembly

Block No. [M][1][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	1	GV10220-004A	FRONT PANEL ASSY		JD5UE,JD5UW
	1	GV10220-002A	FRONT PANEL ASSY		JD5UN,JD5US,JD5UX
	2	GV30576-002A	FL LENS		
	3	GV20277-004A	FRONT COVER		
	4	GV30577-001A	FUNC.INDICATOR		
	5	GV40485-002A	REMOTE LENS		
	6	GV40486-002A	INDICATOR LENS	(x2)	
	7	GV30580-001A	VOLUME KNOB		
	8	LV42979-003A	VOLUME RING		
	9	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x2)	
	10	GV40083-004A	MIC.KNOB		JD5UN,JD5US,JD5UX
	11	GV30583-001A	TRAY FITTING		
	12	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x6)	
	13	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x11)	
	14	GV40246-001A	FOOT SPACER	(x2)	
	15	GV40246-002A	FOOT SPACER	(x2)	
	16	GV10206-002A	CENTER CHASSIS		
	17	GV20275-001A	STAY BRACKET		
	18	QYSBSG3008Z	TAP SCREW	M3 x 8mm(x2)	
	19	QYSBSG3008Z	TAP SCREW	M3 x 8mm	
	20	E310243-002	PLASTIC RIVET		
	21	QYSDSF2608Z	TAP SCREW	M2.6 x 8mm(x4)	
	22	GV40512-002A	FL FILTER		
	23	CMAT5Z226	ALPS CASS.MECHA		
	24	GV40496-001A	SWING CAM(L)		
	25	GV40497-001A	SWING CAM(R)		
	26	GV40501-001A	SWING CAM	(x2)	
	27	GV40502-002A	SPRING	(x2)	
	28	GV40503-001A	WASHER	(x2)	
	29	GV40504-001A	SCREW	(x2)	
	30	GV10204-001A	CASS.HOLDER(L)		
	31	GV10205-001A	CASS.HOLDER(R)		
	32	GV20278-003A	CASS.COVER (L)		
	33	GV20279-003A	CASS.COVER (R)		
	34	GV40487-001A	CASS.LENS	(x2)	
	35	GV40489-001A	DOOR SPRING		
	36	GV40490-001A	DOOR SPRING(R)		
	37	GV40034-001A	DAMPER ASSY.	(x2)	
	38	VKY4180-401	CASSETTE SPRING	(x4)	
	39	QYSBSF3010Z	TAP SCREW	M3 x 10mm(x6)	
	40	GV40515-001A	METAL PIN	(x2)	
	41	QYSBSF3012Z	TAP SCREW	M3 x 12mm(x3)	
	42	LV30225-011A	SPACER		
	43	LV30225-011A	SPACER		
	44	LV30225-011A	SPACER		
	45	LV30225-011A	SPACER		
	46	LV30225-011A	SPACER		
	47	GV30349-003A	SPACER		
	48	GV10209-001A	BOTTOM CHASSIS		
	49	QYSBSGG3008E	TAP SCREW	M3 x 8mm	
	50	QYSBSGG3008E	TAP SCREW	M3 x 8mm	
	51	GV10217-003A/S/	METAL COVER		
	52	QYSBSG3010Z	TAP SCREW	M3 x 10mm(x2)	
	53	QYSDSTL4008Z	TAP SCREW	M4 x 8mm(x4)	
	54	GV30581-002A	HEAT SINK		
	55	GV40488-001A	LEAF SPRING		
	56	QYSBSG3014E	TAP SCREW	M3 x 14mm(x6)	
	57	QYSBSG3014E	TAP SCREW	M3 x 14mm(x2)	
	58	QZW0033-001	STRAIN RELIEF		
	59	VKZ4001-110S	WIRE HOLDER		
	60	QYSSST3006Z	TAP SCREW	M3 x 6mm(x2)	
	61	QYSBSG3010Z	TAP SCREW	M3 x 10mm	
	62	GV30349-003A	SPACER		
	63	GV30349-005A	SPACER		
	64	E3400-431	SPECER		
	65	GV10207-017A	REAR PANEL		JD5UE
	65	GV10207-016A	REAR PANEL		JD5UN,JD5US
	65	GV10207-018A	REAR PANEL		JD5UW
	65	GV10207-015A	REAR PANEL		JD5UX
	66	GV10208-001A	REAR COVER		
	67	QAU0347-001	TUNER		JD5UE
	67	QAU0346-001	TUNER	TU 1	JD5UN,JD5US,JD5UW,JD5UX
	68	QYSBSF3035Z	TAP SCREW	M3 x 35mm(x2)	
	69	QYSBSGY3008E	TAP SCREW	M3 x 8mm	JD5UN,JD5US,JD5UX

△	Symbol No.	Part No.	Part Name	Description	Local
	70	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	71	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	72	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	73	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	74	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	75	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x2)	
	76	QYSBSF3012E	TAP SCREW	M3 x 12mm(x2)	
	77	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	78	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x3)	
	79	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x6)	
	80	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	81	QYSBSGY3008E	TAP SCREW	M3 x 8mm	
	82	QYSDSG3006N	TAP SCREW	M3 x 6mm(x2)	
	83	LV41843-002A	LASER CAUTION		
△	84	QMPK210-205-JN	POWER CORD(EU)	2.05m BLACK	JD5UE,JD5UN,JD5US,JD5UW
△	84	QMPR290-200-JN	POWER CORD(EU)	2m BLACK	JD5UX
△	85	QQT0438-001	POWER TRANSF		
	86	QAR0317-001	FAN		
	87	QUQH12-1108AJ	CARD WIRE	FC 21	
	88	QUQH12-1314AJ	FFC WIRE	FC 303	
	89	QUQH12-1714BJ	CARD WIRE	FC 860	
	90	QUQH10-1721BJ	CARD WIRE	FC 523	
	91	QUQH10-0825BJ	CARD WIRE	FC 531	
	92	QUQH10-1522BJ	CARD WIRE	FC 524	
	93	QUQH10-0922BJ	CARD WIRE	FC 522	
	94	QUQH10-0541BJ	CARD WIRE	FC 11	
	95	QUQH12-1211AJ	CARD WIRE	FC 880	
	96	QQR1259-002	FERRITE CORE	FB 651	
	97	QUQH12-1210AJ	CARD WIRE	FC 410	
	98	WJN0074-003A	SIGNAL WIRE	FW 301	
	99	WJZ0137-001A	S.WIRE	TW 992	
△	100	QMF51W2-4R0-J8	FUSE	F001 4A AC250V	
△	101	QMF51W2-2R0-J8	FUSE	F003 2A AC250V	
△	102	QMF51W2-6R3-J8	FUSE	F101 6.3A AC250V	
△	103	QMF51W2-6R3-J8	FUSE	F102 6.3A AC250V	
△	104	QMF51W2-2R0-J8	FUSE	F103 2A AC250V	
△	105	QMF51W2-3R15-J8	FUSE	F104 3.15A AC250V	
	106	QLF0136-001	FL TUBE	FL 910	
	107	GV30507-001A	FL HOLDER		
	108	GV30349-021A	SPACER	(x2)	
	109	QYSBSGY3008E	TAP SCREW	M3 x 8mm(x4)	

DVD mechanism assembly and parts list



Block No. M J M M

FTU-DE3-2M

Grease

- ★ =JVG-31N
- =CFD-4007ZY2
- ▲ =PG-641
- =1401C

< Back side >

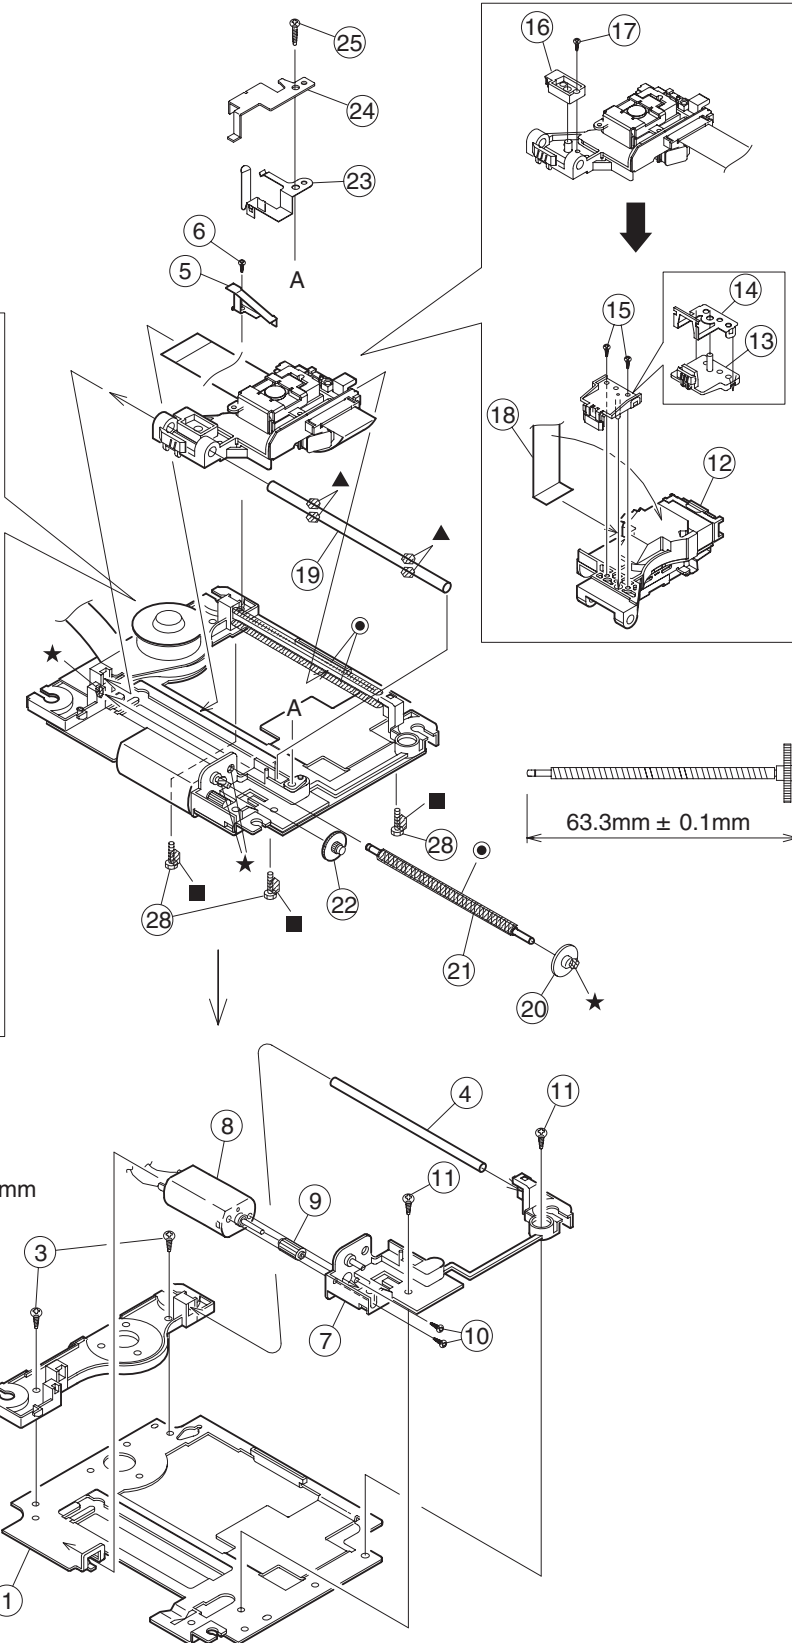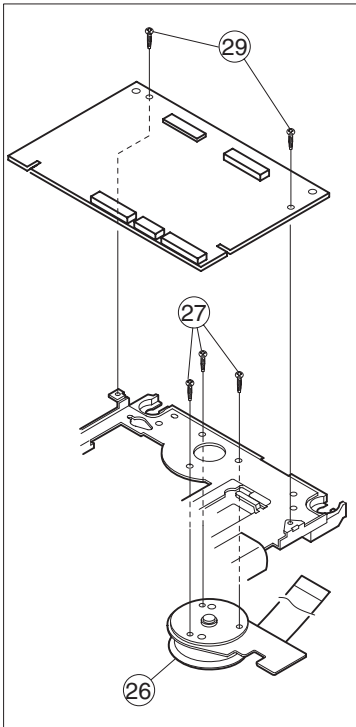

DVD mechanism

Block No. [M][J][M][M]


△	Symbol No.	Part No.	Part Name	Description	Local
	1	LE20725-001A	MECHA BASE		
	2	LE20699-002A	SPINDLE BASE		
	3	QYSDST2605M	TAP SCREW	M2.6 x 5mm(x2)	
	4	LE40931-001A	SHAFT		
	5	LV33991-001A	ADJUST SPRING		
	6	QYSPSFU2040M	TAP SCREW	M2 x 4mm	
	7	LE20698-004A	FEED HOLDER		
	8	QAR0215-001	FEED MOTOR		
	9	LV41510-201A	FEED GEAR T		
	10	QYSPSPU2040M	SCREW	M2 x 4mm(x2)	
	11	QYSDST2605M	TAP SCREW	M2.6 x 5mm(x2)	
	12	QAL0507-001	PICK UP		
	13	LE20700-001A	SW ACTUATOR		
	14	LE31067-002A	LEAD SPRING		
	15	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm(x2)	
	16	LE40929-001A	SW.LEVER		
	17	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm	
	18	QUQ105-2411AC	FFC		
	19	LE40931-001A	SHAFT		
	20	LE40855-002A	FEED GEAR E		
	21	LV41517-003A	LEAD SCREW		
	22	LE40930-001A	FEED GEAR M		
	23	LE40928-002A	THURUST SPRING		
	24	LE40927-002A	PLATE		
	25	QYSDST2614Z	TAP SCREW	M2.6 x 14mm	
	26	QAR0316-001	SPINDLE MOTOR		
	27	QYSPSPU1740Z	SCREW	M1.7 x 4mm(x3)	
	28	LE40858-002A	SPECIAL SCREW	(x3)	
	29	QYSDST2004Z	TAP SCREW	M2 x 4mm(x2)	

DVD loading base assembly and parts list

Block No. M N M M

FMU-DE3-2M

Grease
 ★ JVG-31N
 ● JVS-1003

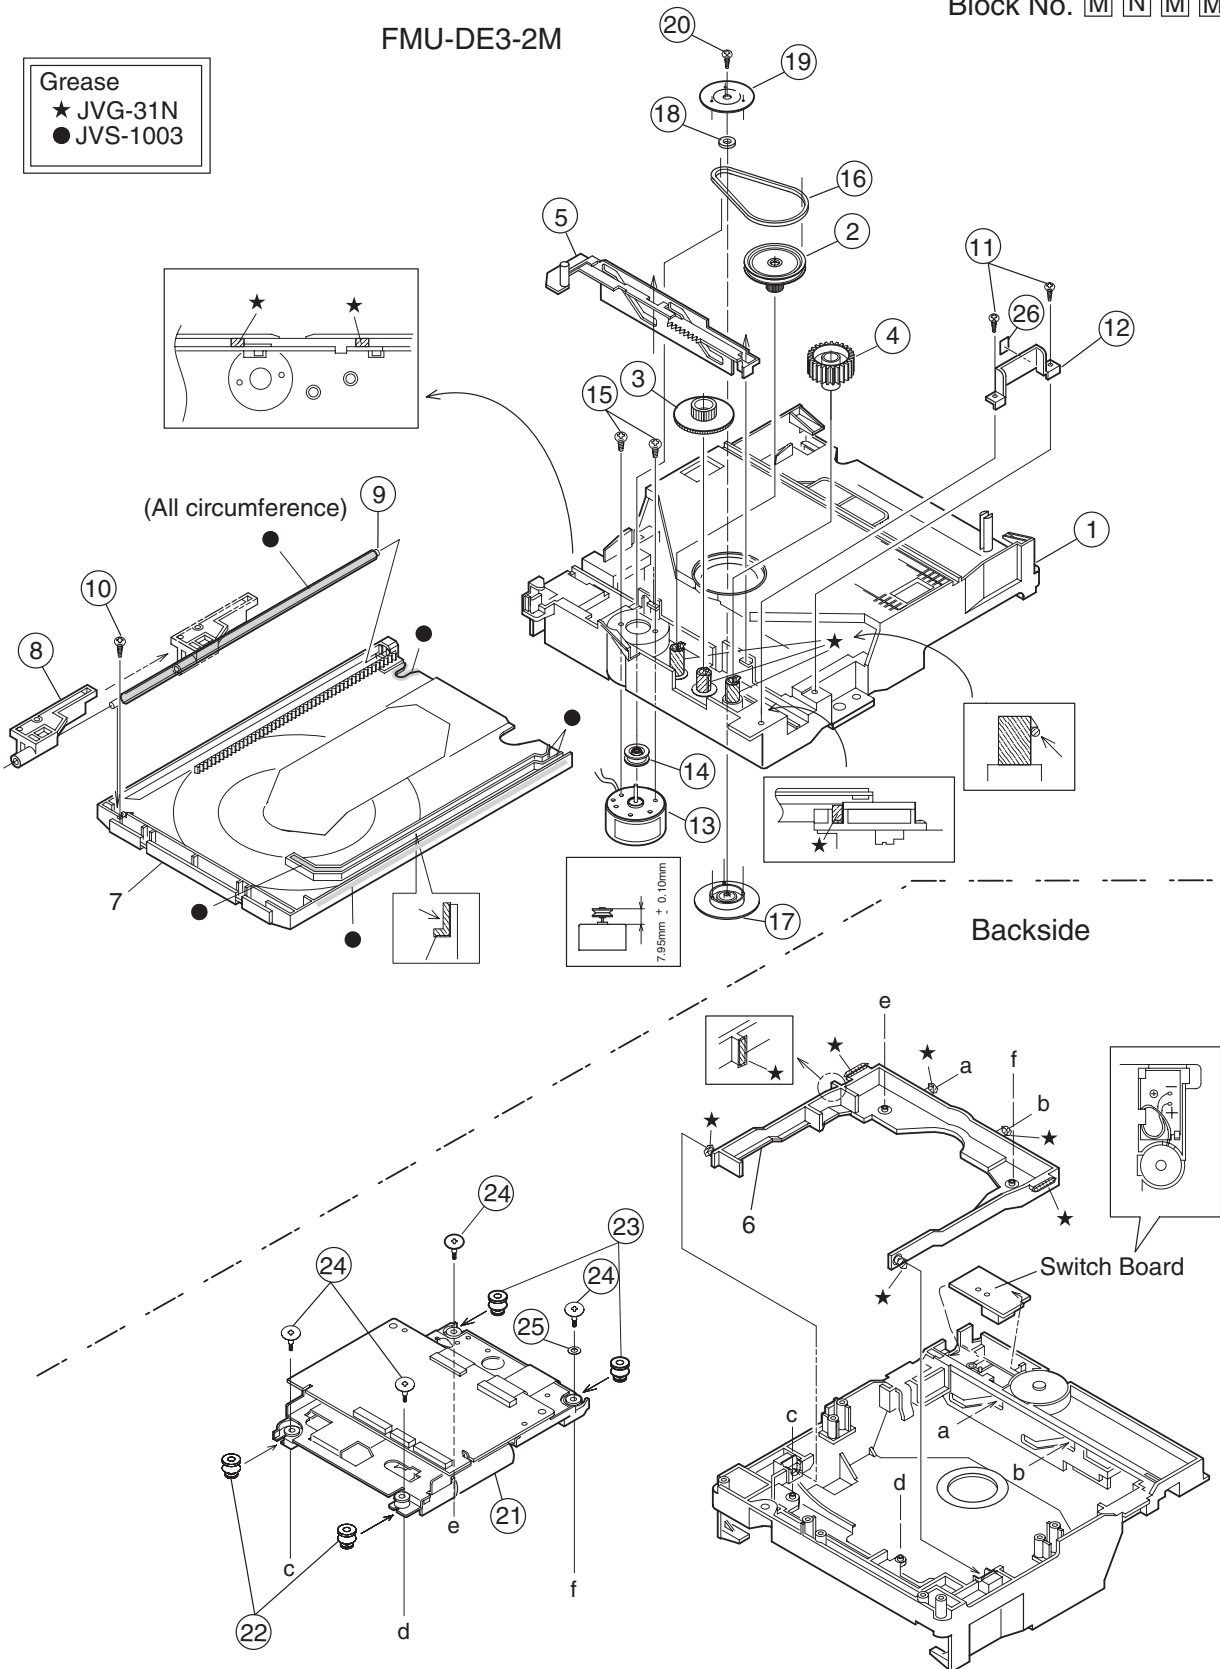

DVD loading base

Block No. [M][N][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	1	LE10275-006A	LOADING BASE		
	2	LE31043-001A	PULLEY GEAR		
	3	LE31042-001A	MIDDLE GEAR		
	4	LE31044-001A	IDLE GEAR		
	5	LE20665-005A	SLIDE CAM		
	6	LE20666-003A	ELEVATOR		
	7	LE10276-002A	TRAY		
	8	LE31045-001A	BUSHING		
	9	LE40898-001A	SHAFT		
	10	QYSSSF2008Z	TAP SCREW	M2 x 8mm	
	11	QYSDSF2008Z	TAP SCREW	M2 x 8mm(x2)	
	12	LE40937-002A	LEAF SPRING		
	13	QAR0197-001	MOTOR		
	14	LV42087-002A	MOTOR PULLEY		
	15	QYSPSPU1730Z	SCREW	M1.7 x 3mm(x2)	
	16	LE40897-001A	BELT		
	17	LE31046-003A	CLAMPER		
	18	LV42930-003A	P.C.MAGNET		
	19	LE40899-001A	YOKE		
	20	LE40906-001A	SPECIAL SCREW		
	21	-----	DVD TRAMECHA		
	22	LE40900-003A	INSULATOR	(x2)	
	23	LE40900-005A	INSULATOR	(x2)	
	24	LE40901-001A	SPECIAL SCREW	(x4)	
	25	QYWFM419025	WASHER	9mm/4.1mm x 0.25mm	
	26	LV43828-001A	SPACER		

Electrical parts list

Power board

Block No. [0][1]

△ Symbol No.	Part No.	Part Name	Description	Local
	IC100	MM1623XF-X	IC	
△	IC121	STK402-230	IC	
△	IC230	KIA317PI	IC	
△	IC250	PQ05RD21	IC	
△	IC260	KIA7809API	IC	
△	IC270	KIA7805API	IC	
△	IC280	KIA7812API	IC	
△	IC290	KIA7809API	IC	
△	IC602	STK432-070	IC	
△	IC701	STK412-400	IC	
	Q125	KTC3199/GLJ-T	TRANSISTOR	
	Q126	KTC3199/GLJ-T	TRANSISTOR	
	Q127	KTC3199/GLJ-T	TRANSISTOR	
	Q175	KTA1267/YG/-T	TRANSISTOR	
	Q176	KRC102M-T	DIGI TRANSISTOR	
	Q181	KTC3203/OY/-T	TRANSISTOR	
	Q190	2SC3576-JVC-T	TRANSISTOR	
	Q191	2SC3576-JVC-T	TRANSISTOR	
	Q192	2SC3576-JVC-T	TRANSISTOR	
	Q193	2SC3576-JVC-T	TRANSISTOR	
	Q194	KRA111M-T	DIGI TRANSISTOR	
	Q195	KTC3199/GLJ-T	TRANSISTOR	
△	Q221	KTA1046/YI	TRANSISTOR	
	Q222	KTC3199/GLJ-T	TRANSISTOR	
	Q223	KTC3199/GLJ-T	TRANSISTOR	
	Q230	KRC102M-T	DIGI TRANSISTOR	
	Q240	KTC3199/GLJ-T	TRANSISTOR	
	Q601	KTC3199/GLJ-T	TRANSISTOR	
	Q602	KTC3199/GLJ-T	TRANSISTOR	
	Q612	KTA1267/YG/-T	TRANSISTOR	
	Q613	KRC102M-T	DIGI TRANSISTOR	
	Q701	KTC3199/GLJ-T	TRANSISTOR	
	Q702	KTC3199/GLJ-T	TRANSISTOR	
	Q710	KTA1023/OY/-T	TRANSISTOR	
	Q711	KTC3200/GLJ-T	TRANSISTOR	
	Q712	KTA1268/GLJ-T	TRANSISTOR	
	Q713	KTC1027/OY/-T	TRANSISTOR	
	Q725	KTA1267/YG/-T	TRANSISTOR	
	Q726	KTC3199/GLJ-T	TRANSISTOR	
	Q727	KTA1267/YG/-T	TRANSISTOR	
	Q728	KTC3199/GLJ-T	TRANSISTOR	
	D102	1SS133-T2	DIODE	
	D103	1SS133-T2	DIODE	
	D104	1SS133-T2	DIODE	
	D121	MTZJ9.1B-T2	Z DIODE	
	D122	1SS133-T2	DIODE	
	D123	1SS133-T2	DIODE	
	D124	1SS133-T2	DIODE	
	D125	MTZJ9.1B-T2	Z DIODE	
	D160	1SS133-T2	DIODE	
	D161	1SS133-T2	DIODE	
	D162	1SS133-T2	DIODE	
	D170	1SS133-T2	DIODE	
	D171	1SS133-T2	DIODE	
	D172	1SS133-T2	DIODE	
	D180	MTZJ5.1B-T2	Z DIODE	
△	D201	1N5402M-20	DIODE	
△	D202	1N5402M-20	DIODE	
△	D203	1N5402M-20	DIODE	
△	D204	1N5402M-20	DIODE	
△	D211	1N5402M-20	DIODE	
△	D212	1N5402M-20	DIODE	
△	D213	1N5402M-20	DIODE	
△	D214	1N5402M-20	DIODE	
	D221	MTZJ5.6C-T2	Z DIODE	
△	D222	2A02-M	DIODE	
	D231	MTZJ13B-T2	Z DIODE	
	D240	1SS133-T2	DIODE	
	D241	1SS133-T2	DIODE	
	D250	MTZJ5.6C-T2	Z DIODE	

△ Symbol No.	Part No.	Part Name	Description	Local
	D260	MTZJ11B-T2	Z DIODE	
	D270	1SS133-T2	DIODE	
	D271	MTZJ6.8C-T2	Z DIODE	
	D280	MTZJ15B-T2	Z DIODE	
	D290	MTZJ11B-T2	Z DIODE	
	D619	1SS133-T2	DIODE	
	D620	1SS133-T2	DIODE	
	D622	MTZJ9.1B-T2	Z DIODE	
	D703	MTZJ15B-T2	Z DIODE	
	D704	MTZJ15B-T2	Z DIODE	
	D719	1SS133-T2	DIODE	
	D720	1SS133-T2	DIODE	
	D723	MTZJ36B-T2	Z DIODE	
	D724	MTZJ36B-T2	Z DIODE	
	D726	1SS133-T2	DIODE	
	D728	1SS133-T2	DIODE	
	C121	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C122	QETN1HM-105Z	E CAPACITOR	1uF 50V M
	C123	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C124	QETN1HM-105Z	E CAPACITOR	1uF 50V M
	C125	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C126	QETN1HM-105Z	E CAPACITOR	1uF 50V M
	C128	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C129	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C130	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J
	C131	QETN1JM-476Z	E CAPACITOR	47uF 63V M
	C133	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C134	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C135	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J
	C136	QETN1JM-476Z	E CAPACITOR	47uF 63V M
	C138	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C139	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J
	C140	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J
	C141	QETN1JM-476Z	E CAPACITOR	47uF 63V M
	C142	QETN1HM-107Z	E CAPACITOR	100uF 50V M
	C143	QETN1HM-106Z	E CAPACITOR	10uF 50V M
	C144	QETN1HM-106Z	E CAPACITOR	10uF 50V M
	C145	QETN1HM-107Z	E CAPACITOR	100uF 50V M
	C146	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C147	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C148	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C149	QETN1HM-105Z	E CAPACITOR	1uF 50V M
	C162	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C163	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C164	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C165	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C172	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C173	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C174	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C175	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C180	QETN1EM-476Z	E CAPACITOR	47uF 25V M
	C201	QFKC2EK-103Z	MM CAPACITOR	0.01uF 250V K
	C202	QFKC2EK-103Z	MM CAPACITOR	0.01uF 250V K
	C203	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K
	C204	QE20510-478	E CAPACITOR	4700uF
	C205	QE20510-478	E CAPACITOR	4700uF
	C211	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J
	C212	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J
	C213	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K
	C214	EETB1HM-228JC	E CAPACITOR	
	C215	EETB1HM-228JC	E CAPACITOR	
	C221	QETM1EM-828	E CAPACITOR	8200uF 25V M
	C222	EETB1CM-828JC	E CAPACITOR	
	C225	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K
	C226	QCBB1HK-221Y	C CAPACITOR	220pF 50V K
	C231	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C232	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C233	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C241	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C242	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C243	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K
	C250	QFVF1HJ-334Z	MF CAPACITOR	0.33uF 50V J
	C251	QETN1EM-477Z	E CAPACITOR	470uF 25V M
	C260	QETN1HM-106Z	E CAPACITOR	10uF 50V M
	C261	QETN1CM-227Z	E CAPACITOR	220uF 16V M

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C270	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R109	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
C271	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R110	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C280	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R111	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C281	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R112	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C290	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R121	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C291	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R122	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C601	FQCF31HZ-223Z	D.CAPACITOR			R123	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C602	FQCF31HZ-223Z	D.CAPACITOR			R124	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C603	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		R125	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C604	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		R126	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C605	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		△R127	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C606	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		△R128	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C607	QETN1JM-476Z	E CAPACITOR	47uF 63V M		R129	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C608	QETN1JM-476Z	E CAPACITOR	47uF 63V M		△R130	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
C609	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J		△R131	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C610	QCSB1HJ-100Y	C CAPACITOR	10pF 50V J		△R132	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C611	QETN1HM-107Z	E CAPACITOR	100uF 50V M		R133	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C612	QETN1HM-107Z	E CAPACITOR	100uF 50V M		△R134	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
C613	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J		△R135	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C614	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J		△R136	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C615	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J		R137	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J	
C616	QFLC1HJ-473Z	M CAPACITOR	0.047uF 50V J		△R138	QRJ146J-681X	UNF C RESISTOR	680Ω 1/4W J	
C621	QTE1V06-106Z	E CAPACITOR	10uF 35V		△R139	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
C622	QTE1V06-106Z	E CAPACITOR	10uF 35V		△R140	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
C623	QTE1H28-106Z	E CAPACITOR	10uF 50V		R141	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	
C624	QTE1H28-106Z	E CAPACITOR	10uF 50V		△R142	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J	
C639	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R143	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
C703	QCBB1HK-471Y	C CAPACITOR	470pF 50V K		R144	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
C705	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		△R146	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
C706	QCBB1HK-221Y	C CAPACITOR	220pF 50V K		△R148	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
C707	QETN1JM-476Z	E CAPACITOR	47uF 63V M		△R150	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J	
C708	QETN1JM-476Z	E CAPACITOR	47uF 63V M		R151	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
C709	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K		R152	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C710	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K		R153	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
C711	QFZ0212-104Z	M CAPACITOR	0.1uF		R154	QRE141J-183Y	C RESISTOR	18kΩ 1/4W J	
C712	QFZ0212-104Z	M CAPACITOR	0.1uF		R155	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C713	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J		R156	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J	
C714	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J		R157	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C715	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J		△R160	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C716	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J		△R161	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C721	QTE1V06-106Z	E CAPACITOR	10uF 35V		△R162	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C722	QTE1V06-106Z	E CAPACITOR	10uF 35V		R165	QRE141J-432Y	C RESISTOR	4.3kΩ 1/4W J	
C723	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R166	QRE141J-432Y	C RESISTOR	4.3kΩ 1/4W J	
C726	QETN1HM-106Z	E CAPACITOR	10uF 50V M		△R167	QRL01DJ-471X	OMF RESISTOR	470Ω 1W J	
C729	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R168	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
C730	FQCF31HZ-223Z	D.CAPACITOR			R169	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
C731	FQCF31HZ-223Z	D.CAPACITOR			△R170	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C738	QETN1HM-106Z	E CAPACITOR	10uF 50V M		△R171	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C739	QETN1HM-105Z	E CAPACITOR	1uF 50V M		△R172	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J	
C1000	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K		R175	QRE141J-912Y	C RESISTOR	9.1kΩ 1/4W J	
C1001	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z		R176	QRE141J-912Y	C RESISTOR	9.1kΩ 1/4W J	
C1002	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z		△R177	QRL01DJ-471X	OMF RESISTOR	470Ω 1W J	
C1003	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z		R178	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
C1004	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R179	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
C1005	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z		R180	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C1006	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M		R181	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
C1007	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R182	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C1008	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z		R190	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C1009	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R191	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C1010	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R192	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C1011	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R193	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C1012	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R195	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
C1013	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R215	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C1014	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R216	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C1015	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R217	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C1016	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R218	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C1017	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R221	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C1018	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R222	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C1019	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R223	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C1020	QCBB1HK-181Y	C CAPACITOR	180pF 50V K		R224	QRE141J-681Y	C RESISTOR	680Ω 1/4W J	
					R225	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R102	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J		R226	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	
R103	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J		R227	QRE141J-681Y	C RESISTOR	680Ω 1/4W J	
R104	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J		△R230	QRZ9006-4R7X	F RESISTOR	4.7Ω 1/4W J	
R105	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		R232	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J	
R106	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		R233	QRE141J-242Y	C RESISTOR	2.4kΩ 1/4W J	
R107	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		R234	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
R108	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		R235	QRE141J-100Y	C RESISTOR	10Ω 1/4W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
△ R236	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R778	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
△ R237	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R786	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
△ R238	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R787	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R240	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		R792	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
△ R246	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R793	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J	
△ R247	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R1001	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
△ R248	QRL01DJ-181X	OMF RESISTOR	180Ω 1W J		R1002	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R271	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R1003	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R601	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J		R1004	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R602	QRJ146J-101X	UNF C RESISTOR	100Ω 1/4W J		R1005	QRE141J-201Y	C RESISTOR	200Ω 1/4W J	
R603	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		R1006	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
R604	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		R1007	QRE141J-201Y	C RESISTOR	200Ω 1/4W J	
△ R605	QRJ146J-122X	UNF C RESISTOR	1.2kΩ 1/4W J		R1008	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
△ R606	QRJ146J-122X	UNF C RESISTOR	1.2kΩ 1/4W J		R1009	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R607	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		R1010	QRE141J-331Y	C RESISTOR	330Ω 1/4W J	
R608	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		R1011	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
△ R613	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		R1012	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
△ R614	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		R1013	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
△ R615	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		R1014	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
△ R616	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		R1015	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R617	QRE141J-221Y	C RESISTOR	220Ω 1/4W J		R1016	QRE141J-750Y	C RESISTOR	75Ω 1/4W J	
R618	QRE141J-221Y	C RESISTOR	220Ω 1/4W J		L121	QQLZ035-R39	COIL	0.39uH	
R619	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		L122	QQLZ035-R39	COIL	0.39uH	
R620	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		L123	QQLZ035-R39	COIL	0.39uH	
R621	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		L601	QQLZ035-R39	COIL	0.39uH	
R623	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		L602	QQLZ035-R39	COIL	0.39uH	
△ R650	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J		L701	QQLZ035-R39	COIL	0.39uH	
△ R652	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J		L702	QQLZ035-R39	COIL	0.39uH	
△ R654	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J		CN105	QGA2501F1-03	CONNECTOR	W-B (1-3)	
△ R656	QRT01DJ-R22X	MF RESISTOR	0.22Ω 1W J		CN106	QGD2503F1-03	CONNECTOR	(1-3)	
R666	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J		CN201	QGB2510J1-09	CONNECTOR	B-B (1-9)	
R667	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		CN202	QGB2510J1-09	CONNECTOR	B-B (1-9)	
R668	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		CN203	QGB2510J1-14	CONNECTOR	B-B (1-14)	
R674	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		CN204	QGB2510K1-12	CONNECTOR	B-B (1-12)	
R675	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		CN205	QGB2510J1-12	CONNECTOR	B-B (1-12)	
R676	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		CN206	QGB2510K1-11	CONNECTOR	B-B (1-11)	
△ R701	QRJ146J-470X	UNF C RESISTOR	47Ω 1/4W J		CN212	QGB2510K1-09	CONNECTOR	B-B (1-9)	
△ R702	QRJ146J-470X	UNF C RESISTOR	47Ω 1/4W J		CN213	QGB2510K1-14	CONNECTOR	B-B (1-14)	
R703	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		CN214	QGB2510J1-12	CONNECTOR	B-B (1-12)	
R704	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		CN215	QGB2510K1-12	CONNECTOR	B-B (1-12)	
△ R705	QRJ146J-821X	UNF C RESISTOR	820Ω 1/4W J		CN420	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
△ R706	QRJ146J-821X	UNF C RESISTOR	820Ω 1/4W J		EP201	QNZ0136-001Z	EARTH PLATE		
R707	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		FW109	QJK015-082924	WIRE SOCKET		
R708	QRE141J-563Y	C RESISTOR	56kΩ 1/4W J		FW207	QUM155-15DGZ4	FLAT WIRE		
△ R713	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		FW208	QUM157-08DGZ4	FLAT WIRE		
△ R714	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		FW601	QUM154-10Z4Z4	FLAT WIRE		
△ R715	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		J81	QNB0171-001	SPK TERMINAL		
△ R716	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		J120	QNN0621-001	SPK TERMINAL		
R717	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		J1010	QNN0434-001	PIN JACK		
R718	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		J1020	QNN0624-001	PIN JACK		
R719	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J		RY160	QSK0109-001	RELAY		
R720	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J		RY170	QSK0109-001	RELAY		
R721	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		RY240	QSK0109-001	RELAY		
R722	QRE141J-473Y	C RESISTOR	47kΩ 1/4W J		RY241	QSK0109-001	RELAY		
R723	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J		S1001	QSW0454-001	SW		
R724	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J		SP100	GV40205-001A	IC HOLDER		
R725	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J						
R726	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R727	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R728	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J						
R729	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R730	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J						
R739	QRE141J-823Y	C RESISTOR	82kΩ 1/4W J						
R740	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R741	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J						
R742	QRE141J-682Y	C RESISTOR	6.8kΩ 1/4W J						
R743	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J						
R744	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R753	QRZ0224-R22	EMIT RESISTOR	0.22Ω						
R754	QRZ0224-R22	EMIT RESISTOR	0.22Ω						
R761	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J						
R762	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J						
R766	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J						
R768	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J						
R769	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J						
△ R774	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J						
R775	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J						
R777	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J						

Input board

△ Symbol No.	Part No.	Part Name	Description	Local
IC300	HA12237F	IC		
IC400	NJM4565M-WE	IC		
IC401	NJM4565M-WE	IC		
IC410	LB1641	IC		
IC414	KTC3200/GL/-T	TRANSISTOR		
IC420	PQ033EF02SZ	REGULATOR IC		
IC460	LC75342M-X	IC		
IC480	JCV8011-X	IC		
IC500	LC75341M-X	IC		
IC510	BU9262AFS-X	IC		

Block No. [0][2]

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
IC520	NJM4565M-WE	IC		JD5U N,JD5 US,JD 5UX	D454	1SS133-T2	DIODE		JD5U N,JD5 US,JD 5UX
IC521	NJM4565M-WE	IC		JD5U N,JD5 US,JD 5UX	D455	1SS133-T2	DIODE		JD5U N,JD5 US,JD 5UX
IC530	NJM4565M-WE	IC			D510	1SS133-T2	DIODE		
IC531	NJM4565M-WE	IC			D530	1SS133-T2	DIODE		
IC550	NJM4565M-WE	IC			D531	1SS133-T2	DIODE		
IC551	NJM4565M-WE	IC			D550	1SS133-T2	DIODE		
IC575	CD4066BM-X	IC			D551	1SS133-T2	DIODE		
IC580	NJM4565M-WE	IC			D801	1SS244-T2	SI DIODE		
IC590	LC75341M-X	IC			D802	1SS133-T2	DIODE		
IC801	BR24L01AF-W-X	IC			D803	1SS244-T2	SI DIODE		
IC810	UPD784217AGF534	IC			D804	MTZJ4.3B-T2	Z DIODE		
IC815	SN74AHCT08NS-X	IC			D805	1SS133-T2	DIODE		
Q306	KRC107M-T	DIGI TRANSISTOR			D806	1SS133-T2	DIODE		
Q307	KRC107M-T	DIGI TRANSISTOR			D807	1SS133-T2	DIODE		
Q309	KTA1271/OY/-T	TRANSISTOR			D808	1N4003S-T5	SI DIODE		
Q310	KTC3199/GL/-T	TRANSISTOR			D809	1SS133-T2	DIODE		
Q311	2SB562/C/-T	TRANSISTOR			D815	1SS133-T2	DIODE		
Q312	KTC3199/GL/-T	TRANSISTOR			D862	1SS133-T2	DIODE		
Q313	2SB562/C/-T	TRANSISTOR			D864	1SS133-T2	DIODE		
Q316	2SC2001/K/-T	TRANSISTOR			C300	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
Q320	2SC2001/K/-T	TRANSISTOR			C301	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	
Q360	KRC103M-T	TRANSISTOR			C302	NCB31HK-102X	C CAPACITOR	1000pF 50V K	JD5U E
Q362	KRA111M-T	DIGI TRANSISTOR			C303	QFLC1HJ-104Z	M CAPACITOR	0.1uF 50V J	
Q363	2SC3576-JVC-T	TRANSISTOR			C306	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
Q364	2SC3576-JVC-T	TRANSISTOR			C307	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
Q365	2SC3576-JVC-T	TRANSISTOR			C308	QDGB1HK-103Y	C CAPACITOR	0.01uF 50V K	JD5U E
Q366	2SC3576-JVC-T	TRANSISTOR			C309	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
Q410	UN2113-X	TRANSISTOR			C311	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
Q414	KTC3199/GL/-T	TRANSISTOR			C313	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
Q415	UN2213-X	DIGI TRANSISTOR			C314	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
Q416	UN2213-X	DIGI TRANSISTOR			C315	QDXB1CM-152Y	C CAPACITOR	1500pF 16V M	
Q417	UN2115-X	D. TRANSISTOR			C318	QCBB1HK-223Y	C CAPACITOR	0.022uF 50V K	
Q420	2SD1328/ST/-X	TRANSISTOR			C321	QCFB1HZ-105Y	C CAPACITOR	1uF 50V Z	
Q421	2SD1328/ST/-X	TRANSISTOR			C322	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
Q422	2SD1328/ST/-X	TRANSISTOR			C323	QFVJ1HJ-223Z	MF CAPACITOR	0.022uF 50V J	
Q423	2SD1328/ST/-X	TRANSISTOR			C324	QFLC1HJ-472Z	M CAPACITOR	4700pF 50V J	
Q424	2SD1328/ST/-X	TRANSISTOR			C325	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	
Q480	KTC3199/GL/-T	TRANSISTOR			C326	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	
Q520	UN2113-X	TRANSISTOR		JD5U N,JD5 US,JD 5UX	C330	QETN1AM-227Z	E CAPACITOR	220uF 10V M	
Q521	2SD1328/ST/-X	TRANSISTOR		JD5U N,JD5 US,JD 5UX	C331	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
Q550	2SD601A/RS/-X	TRANSISTOR			C332	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
Q551	2SD601A/RS/-X	TRANSISTOR			C333	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
Q552	2SD601A/RS/-X	TRANSISTOR			C334	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
Q575	UN2213-X	DIGI TRANSISTOR			C335	QCBB1HK-271Y	C CAPACITOR	270pF 50V K	
Q576	UN2213-X	DIGI TRANSISTOR			C336	QCBB1HK-391Y	C CAPACITOR	390pF 50V K	
Q585	UN2113-X	TRANSISTOR			C337	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
Q586	2SD1328/ST/-X	TRANSISTOR			C338	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
Q587	2SD1328/ST/-X	TRANSISTOR			C339	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
Q588	2SD1328/ST/-X	TRANSISTOR			C340	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
Q589	2SD1328/ST/-X	TRANSISTOR			C341	QCBB1HK-271Y	C CAPACITOR	270pF 50V K	
Q590	2SD1328/ST/-X	TRANSISTOR			C343	QCBB1HK-391Y	C CAPACITOR	390pF 50V K	
Q591	2SD1328/ST/-X	TRANSISTOR			C344	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
Q592	2SD1328/ST/-X	TRANSISTOR			C345	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
Q593	2SD1328/ST/-X	TRANSISTOR			C346	QFLA1HJ-104Z	M CAPACITOR	0.1uF 50V J	
Q801	UN2115-X	D. TRANSISTOR			C350	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
Q802	UN2211-X	TRANSISTOR			C351	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	JD5U N,JD5 US,JD 5UW,J D5UX
Q806	UN2211-X	TRANSISTOR			C352	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
Q856	UN2113-X	TRANSISTOR			C353	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
Q880	2SD601A/RS/-X	TRANSISTOR			C354	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
D303	1SR139-400-T2	SI DIODE			C355	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	JD5U N,JD5 US,JD 5UW,J D5UX
D304	1SR139-400-T2	SI DIODE			C356	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
D374	1SS133-T2	DIODE			C357	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
D375	1N4003S-T5	SI DIODE			C358	NCS21HJ-821X	C CAPACITOR	820pF 50V J	
D410	MTZJ5.6A-T2	Z DIODE							
D414	MTZJ7.5B-T2	Z DIODE							
D415	MTZJ6.2B-T2	Z DIODE							
D420	MTZJ3.9B-T2	Z DIODE							
D444	1N4003S-T5	SI DIODE							

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C359	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		C473	NCB31HK-272X	C CAPACITOR	2700pF 50V K	
C360	QCBB1HK-151Y	C CAPACITOR	150pF 50V K	JD5U E	C474	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C367	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C475	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C368	QDYB1CM-682Y	C CAPACITOR	6800pF 16V M		C476	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C369	QDYB1CM-682Y	C CAPACITOR	6800pF 16V M		C477	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C370	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		C478	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C371	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	JD5U E	C479	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C372	QCSB1HK-4R7Y	C CAPACITOR	4.7pF 50V K	JD5U E	C480	QETN1HM-474Z	E CAPACITOR	0.47uF 50V M	
C373	QDGB1HK-103Y	C CAPACITOR	0.01uF 50V K	JD5U E	C481	QETN1HM-224Z	E CAPACITOR	0.22uF 50V M	
C374	QDGB1HK-103Y	C CAPACITOR	0.01uF 50V K	JD5U E	C482	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C375	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	JD5U E	C484	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C376	QCBB1HK-221Y	C CAPACITOR	220pF 50V K	JD5U E	C485	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C377	QETN1AM-477Z	E CAPACITOR	470uF 10V M		C486	QTE1H28-106Z	E CAPACITOR	10uF 50V	
C378	QCBB1HK-223Y	C CAPACITOR	0.022uF 50V K	JD5U E	C487	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C379	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U E	C488	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C380	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U E	C489	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C400	QTE1V06-106Z	E CAPACITOR	10uF 35V		C490	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C401	QTE1V06-106Z	E CAPACITOR	10uF 35V		C491	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C402	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C492	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C403	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C493	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C404	QTE1V06-106Z	E CAPACITOR	10uF 35V		C496	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C405	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C499	NCB31EK-273X	C CAPACITOR	0.027uF 25V K	
C408	NDC31HJ-101X	C CAPACITOR	100pF 50V J		C500	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C409	NDC31HJ-101X	C CAPACITOR	100pF 50V J		C501	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C410	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C502	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C411	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		C503	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C412	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z		C504	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C413	QETN1AM-477Z	E CAPACITOR	470uF 10V M		C505	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C414	QFLC1HJ-103Z	M CAPACITOR	0.01uF 50V J		C506	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C415	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		C507	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C416	NCB31HK-272X	C CAPACITOR	2700pF 50V K		C508	QETN1AM-337Z	E CAPACITOR	330uF 10V M	
C417	NCB31HK-272X	C CAPACITOR	2700pF 50V K		C510	NCB31EK-104X	C CAPACITOR	0.1uF 25V K	
C418	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z		C511	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C419	QETN1CM-477Z	E CAPACITOR	470uF 16V M		C512	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C420	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C513	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M	
C421	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C514	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C424	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C515	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C425	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C516	NCB31EK-104X	C CAPACITOR	0.1uF 25V K	
C434	QTE1V06-106Z	E CAPACITOR	10uF 35V		C517	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C435	QTE1V06-106Z	E CAPACITOR	10uF 35V		C518	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C436	QTE1V06-106Z	E CAPACITOR	10uF 35V		C519	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C437	QTE1V06-106Z	E CAPACITOR	10uF 35V		C521	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C438	QETN1HM-105Z	E CAPACITOR	1uF 50V M		C522	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C439	QETN1HM-105Z	E CAPACITOR	1uF 50V M		C523	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C441	QETN1HM-105Z	E CAPACITOR	1uF 50V M		C524	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C444	QETN1HM-105Z	E CAPACITOR	1uF 50V M		C525	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C446	NDC31HJ-470X	C CAPACITOR	47pF 50V J		C526	QETN1HM-106Z	E CAPACITOR	10uF 50V M	JD5U N,JD5 US,JD 5UX
C447	NDC31HJ-470X	C CAPACITOR	47pF 50V J		C527	NCB21EK-683X	C CAPACITOR	0.068uF 25V K	JD5U N,JD5 US,JD 5UX
C448	NDC31HJ-470X	C CAPACITOR	47pF 50V J		C528	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	JD5U N,JD5 US,JD 5UX
C449	NDC31HJ-470X	C CAPACITOR	47pF 50V J		C529	NCB31HK-271X	C CAPACITOR	270pF 50V K	JD5U N,JD5 US,JD 5UX
C450	NDC31HJ-470X	C CAPACITOR	47pF 50V J		C532	QETN1EM-476Z	E CAPACITOR	47uF 25V M	JD5U N,JD5 US,JD 5UX
C454	NCB31HK-221X	C CAPACITOR	220pF 50V K		C533	QETN1EM-476Z	E CAPACITOR	47uF 25V M	JD5U N,JD5 US,JD 5UX
C455	NCB31HK-221X	C CAPACITOR	220pF 50V K		C534	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C456	NCB31HK-102X	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	C535	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C460	NCB31HK-471X	C CAPACITOR	470pF 50V K		C536	NCB31HK-822X	C CAPACITOR	8200pF 50V K	
C461	NCB31HK-471X	C CAPACITOR	470pF 50V K		C537	NCB31AK-224X	C CAPACITOR	0.22uF 10V K	
C462	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M		C538	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C463	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M		C539	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C464	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C540	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C465	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C541	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C466	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C542	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C467	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C543	NCB31CK-153X	C CAPACITOR	0.015uF 16V K	
C468	QTE1H28-106Z	E CAPACITOR	10uF 50V						
C469	QTE1H28-106Z	E CAPACITOR	10uF 50V						
C470	QTE1H28-106Z	E CAPACITOR	10uF 50V						
C471	QTE1H28-106Z	E CAPACITOR	10uF 50V						
C472	NCB31HK-272X	C CAPACITOR	2700pF 50V K						

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C544	NCB31CK-224X	C CAPACITOR	0.22uF 16V K		R333	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J	
C545	NCB31CK-273X	C CAPACITOR	0.027uF 16V K		R335	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
C550	NCB31CK-393X	C CAPACITOR	0.039uF 16V K		R336	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
C551	NCB31CK-823X	C CAPACITOR	0.082uF 16V K		R337	QRE141J-113Y	C RESISTOR	11kΩ 1/4W J	
C552	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R338	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
C553	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R339	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
C554	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R340	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
C555	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R341	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
C556	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R343	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J	
C557	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R344	QRE141J-113Y	C RESISTOR	11kΩ 1/4W J	
C558	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R345	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
C559	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M		R346	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
C560	QETN1HM-476Z	E CAPACITOR	47uF 50V M		R347	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
C575	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R359	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C576	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J		R360	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J	
C577	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J		R361	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
C578	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J		R362	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
C579	QFLC1HJ-333Z	M CAPACITOR	0.033uF 50V J		R363	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C580	NDC31HJ-100X	C CAPACITOR	10pF 50V J		R364	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C581	NDC31HJ-100X	C CAPACITOR	10pF 50V J		R365	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C582	QTE1V06-106Z	E CAPACITOR	10uF 35V		R366	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
C583	QTE1V06-106Z	E CAPACITOR	10uF 35V		R367	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
C584	QTE1V06-106Z	E CAPACITOR	10uF 35V		R368	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	
C585	QTE1V06-106Z	E CAPACITOR	10uF 35V		R369	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	
C586	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R370	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C587	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R373	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C590	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M		R374	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J	
C591	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R377	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C592	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R378	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C593	QETN1HM-104Z	E CAPACITOR	0.1uF 50V M		R379	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C594	QETN1HM-105Z	E CAPACITOR	1uF 50V M		R380	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C595	NCB31HK-471X	C CAPACITOR	470pF 50V K		R403	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
C800	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R405	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C801	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R406	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C802	NCB31CK-224X	C CAPACITOR	0.22uF 16V K		R408	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C803	NCB31CK-224X	C CAPACITOR	0.22uF 16V K		R409	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
C804	QETN1AM-477Z	E CAPACITOR	470uF 10V M		R410	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
C805	QETN1AM-227Z	E CAPACITOR	220uF 10V M		R411	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
C806	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R412	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
C807	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		R413	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
C808	NDC31HJ-270X	C CAPACITOR	27pF 50V J		R414	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
C809	NDC31HJ-300X	C CAPACITOR	30pF 50V J		R415	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
C810	NCB31CK-103X	C CAPACITOR	0.01uF 16V K		R416	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C811	NCB31CK-223X	C CAPACITOR	0.022uF 16V K		R417	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C812	NCB31HK-221X	C CAPACITOR	220pF 50V K		R418	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C813	NCB31HK-221X	C CAPACITOR	220pF 50V K		R419	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C814	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R420	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C815	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R421	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C816	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M		R422	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C856	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R423	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C870	QETN1HM-476Z	E CAPACITOR	47uF 50V M		R424	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
					R425	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R300	QRE141J-223Y	C RESISTOR	22kΩ 1/4W J		R426	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R301	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		△ R430	QRZ9006-4R7X	F.RESISTOR	4.7Ω 1/4W J	
R302	QRE141J-273Y	C RESISTOR	27kΩ 1/4W J		R431	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R303	QRE141J-243Y	C RESISTOR	24kΩ 1/4W J		R432	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R304	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		R433	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R305	QRE141J-393Y	C RESISTOR	39kΩ 1/4W J		R451	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R306	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		R452	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R307	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J		R453	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R309	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R454	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R310	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J		R455	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R311	QRE141J-151Y	C RESISTOR	150Ω 1/4W J		R462	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R312	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J		R463	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R313	QRE141J-151Y	C RESISTOR	150Ω 1/4W J		R464	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R315	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J		R465	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R316	QRE141J-101Y	C RESISTOR	100Ω 1/4W J		R466	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
△ R317	QRZ9005-100X	FUSI RESISTOR	10Ω		R467	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R318	QRE141J-2R2Y	C RESISTOR	2.2Ω 1/4W J		R468	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
△ R319	QRJ146J-4R7X	UNF C RESISTOR	4.7Ω 1/4W J		R469	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R320	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J		R470	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R321	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R471	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R322	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R472	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R324	QRE141J-474Y	C RESISTOR	470kΩ 1/4W J		R473	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R325	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J		R474	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R326	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J		R478	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R330	QRE141J-101Y	C RESISTOR	100Ω 1/4W J		R480	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R332	QRE141J-104Y	C RESISTOR	100kΩ 1/4W J		R481	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R482	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J						JD5U
R483	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J						N,JD5
R484	NRSA63J-362X	MG RESISTOR	3.6kΩ 1/16W J		R531	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	US,JD
R485	NRSA63J-362X	MG RESISTOR	3.6kΩ 1/16W J						5UX
R486	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						JD5U
R487	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R533	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5
R488	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						US,JD
R489	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						5UX
R490	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R534	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R491	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R535	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R492	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R536	QRE141J-303Y	C RESISTOR	30kΩ 1/4W J	
R493	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R537	QRE141J-303Y	C RESISTOR	30kΩ 1/4W J	
R494	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J		R538	QRE141J-274Y	C RESISTOR	270kΩ 1/4W J	
R495	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J		R539	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R496	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R540	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R497	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J		R541	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R498	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R542	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R500	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J		R543	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R501	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J		R544	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R502	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R545	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R503	NRSA63J-225X	MG RESISTOR	2.2MΩ 1/16W J		R546	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R504	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R547	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R505	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R548	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R506	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R549	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R507	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R550	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R508	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J		R551	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R509	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R552	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R510	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R553	NRSA63J-132X	MG RESISTOR	1.3kΩ 1/16W J	
R511	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R554	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R512	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R555	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	
R513	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R556	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R514	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J		R557	QRE141J-202Y	C RESISTOR	2kΩ 1/4W J	
R515	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R558	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R516	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R559	NRSA63J-113X	MG RESISTOR	11kΩ 1/16W J	
R517	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R560	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R518	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R561	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R519	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J		R562	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
				JD5U	R563	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R520	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	N,JD5	R564	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
				US,JD	R565	QRE141J-513Y	C RESISTOR	51kΩ 1/4W J	
				5UX	R566	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J	
				JD5U	R567	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R521	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	N,JD5	R568	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
				US,JD	R569	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
				5UX	R570	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
				JD5U	R571	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J	
R522	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	N,JD5	R572	QRE141J-752Y	C RESISTOR	7.5kΩ 1/4W J	
				US,JD	R573	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
				5UX	R574	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				JD5U	R575	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R523	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	N,JD5	R576	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				US,JD	R577	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
				5UX	R578	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
				JD5U	R579	QRE141J-753Y	C RESISTOR	75kΩ 1/4W J	
R524	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R580	QRE141J-753Y	C RESISTOR	75kΩ 1/4W J	
				US,JD	R581	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
				5UX	R582	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
				JD5U	R583	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
R525	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R584	QRE141J-512Y	C RESISTOR	5.1kΩ 1/4W J	
				US,JD	R585	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				5UX	R586	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				JD5U	R587	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R526	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R588	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
				US,JD	R589	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	
				5UX	R590	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				JD5U	R591	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R527	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R592	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				US,JD	R593	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				5UX	R594	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				JD5U	R595	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R528	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R596	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				US,JD	R597	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				5UX	R598	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				JD5U	R599	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R529	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R800	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				US,JD	R801	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
				5UX	R802	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
				JD5U	R803	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R530	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	N,JD5	R804	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
				US,JD					
				5UX					

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R805	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R884	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R806	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R885	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R807	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R886	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R810	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R887	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R811	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R888	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R812	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R889	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R813	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R890	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R814	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R891	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R815	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						JD5U
R816	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R892	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	N,JD5
R817	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						US,JD
R818	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						5UX
R819	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J						JD5U
R820	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R893	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	N,JD5
R821	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J						US,JD
R822	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						5UX
R823	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R894	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R824	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R895	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R825	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R896	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R826	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R897	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R827	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R898	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R828	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R899	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R829	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R900	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R830	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R901	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R831	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R902	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R832	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R903	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R833	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R904	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R834	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R905	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R835	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R906	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R836	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R907	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R837	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R908	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R838	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		VR320	QVP0004-203Z	TRIM RESISTOR	20kΩ	
R839	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R840	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L317	QLL244K-100Z	COIL	10uH K	
R841	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		L320	QQR1118-002	OSC COIL(BIAS)		
R842	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L812	QLL231K-2R2Y	COIL	2.2uH K	
R843	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L813	QLL231K-2R2Y	COIL	2.2uH K	
R844	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R845	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN11	QGF1036C1-05	CONNECTOR	FFC/FPC (1-5)	
R846	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN21	QGF1205C1-11	CONNECTOR	FFC/FPC (1-11)	
R847	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		CN211	QGB2510K1-09	CONNECTOR	B-B (1-9)	
R848	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN216	QGB2510J1-11	CONNECTOR	B-B (1-11)	
R849	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN217	QGD2504C1-05Z	CONNECTOR	(1-5)	
R850	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN218	QGD2504C1-04Z	CONNECTOR	(1-4)	
R851	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN219	QGD2504C1-03Z	CONNECTOR	(1-3)	
R852	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN301	QGA2001C1-07	CONNECTOR	W-B (1-7)	
R853	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		CN302	QGA2001C1-03	CONNECTOR	W-B (1-3)	
				JD5U	CN303	QGF1205C1-13	CONNECTOR	FFC/FPC (1-13)	
				N,JD5	CN410	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
				US,JD					
				5UX	CN454	QGA2501C1-03	CONNECTOR	W-B (1-3)	JD5U
R854	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						E,JD5
									UW
R856	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN522	QGF1036C1-09	CONNECTOR	FFC/FPC (1-9)	
R857	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN523	QGF1036C1-15	CONNECTOR	FFC/FPC (1-15)	
R858	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN524	QGF1036C1-15	CONNECTOR	FFC/FPC (1-15)	
R859	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN531	QGF1036C1-08	CONNECTOR	FFC/FPC (1-8)	
R860	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN860	QGF1205C1-17	CONNECTOR	FFC/FPC (1-17)	
R861	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN880	QGF1205C1-12	CONNECTOR	FFC/FPC (1-12)	
R862	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		HS420	LE40505-001A	HEAT SINK		
R863	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R864	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						JD5U
R865	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		J454	QNN0420-001	SURROUND JACK		N,JD5
R866	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						US,JD
R867	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						5UX
R868	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		J812	QNS0089-001	3.5 JACK		
R869	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		J814	GP1FA553TZ	OPT TRANSMITTER		
R870	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		PP301	QZW0038-001	WIRE CLAMP		
R871	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		PP310	QNZ0104-001	POST PIN		JD5U
R872	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						E
R873	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						JD5U
R874	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		SP300	LV30225-011A	SPACER		N,JD5
R875	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						US,JD
R876	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						5UW,J
R877	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		SP400	LV30225-011A	SPACER		D5UX
R878	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		SP444	LV30225-011A	SPACER		
R879	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		SP810	VYH7653-001	IC HOLDER		
R880	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R881	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		TW300	QUB230-06A4A4	WIRE		JD5U
R882	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J						N,JD5
R883	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J						US,JD
									5UW,J
									D5UX

Symbol No.	Part No.	Part Name	Description	Local
TW400	QUB230-06A4A4	WIRE		
TW444	QUB230-12HPPH	S.WIRE		
X510	QAX0768-001Z	C OSCILLATOR		
X801	QAX0724-001Z	CRYSTAL	12.000000MHz	

Front board

Block No. [0][3]

Symbol No.	Part No.	Part Name	Description	Local
IC900	SN74HCU04N	FL DRIVER		
IC920	PT6305	FL DRIVER		
IC930	GP1UM281XK	IR DETECT UNIT	38kHz	
IC970	BU9253AS	IC		JD5U N,JD5 US,JD 5UX
IC971	RC4580IP	IC		JD5U N,JD5 US,JD 5UX
Q926	KRA102M-T	DIGI TRANSISTOR		
Q933	KRC102M-T	DIGI TRANSISTOR		
Q934	KRC102M-T	DIGI TRANSISTOR		
Q935	KRC102M-T	DIGI TRANSISTOR		
Q936	KRC102M-T	DIGI TRANSISTOR		
Q937	KRC102M-T	DIGI TRANSISTOR		
Q938	KRC102M-T	DIGI TRANSISTOR		
Q980	KRA111M-T	DIGI TRANSISTOR		JD5U N,JD5 US,JD 5UX
Q981	KRA111M-T	DIGI TRANSISTOR		JD5U N,JD5 US,JD 5UX
Q982	KRA111M-T	DIGI TRANSISTOR		JD5U N,JD5 US,JD 5UX
Q987	2SC3576-JVC-T	TRANSISTOR		JD5U N,JD5 US,JD 5UX
△ Q2010	KTC2026/OY/	TRANSISTOR		
Q2011	KTC3199/GLJ-T	TRANSISTOR		
D925	SLA-362LT-T	LED		
D926	SLI-343URC3F	LED		
D933	SLA-362LT-T	LED		
D934	SLA-362LT-T	LED		
D935	SLA-362LT-T	LED		
D936	SLA-362LT-T	LED		
D937	SLA-362LT-T	LED		
D938	SLA-362LT-T	LED		
D957	1SS133-T2	DIODE		JD5U E,JD5 UW
D958	1SS133-T2	DIODE		JD5U E,JD5 UW
D971	MTZJ5.1B-T2	Z DIODE		JD5U N,JD5 US,JD 5UX
D991	MTZJ2.4B-T2	Z DIODE		JD5U N,JD5 US,JD 5UX
D992	1SS133-T2	DIODE		JD5U N,JD5 US,JD 5UX
△ D2010	1N5402M-20	DIODE		
△ D2011	1N5402M-20	DIODE		
△ D2012	1N5402M-20	DIODE		
△ D2013	1N5402M-20	DIODE		

Symbol No.	Part No.	Part Name	Description	Local
D2015	1N4003S-T5	SI DIODE		
D2016	1N4003S-T5	SI DIODE		
D2017	1N4003S-T5	SI DIODE		
D2018	MTZJ20B-T2	Z DIODE		
D2019	MTZJ18B-T2	Z DIODE		
D2020	MTZJ6.8B-T2	Z DIODE		
C903	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C904	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C905	QCBB1HK-103Y	C CAPACITOR	0.01uF 50V K	
C920	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C921	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	
C922	QEKC1AM-107Z	E CAPACITOR	100uF 10V M	
C923	QCBB1HK-104Y	C CAPACITOR	0.1uF 50V K	
C924	QEKC1HM-226Z	E CAPACITOR	22uF 50V M	
C925	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C926	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	
C930	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C931	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	
C957	QCBB1HK-222Y	C CAPACITOR	2200pF 50V K	JD5U E,JD5 UW
C970	QCBB1HK-101Y	C CAPACITOR	100pF 50V K	JD5U N,JD5 US,JD 5UX
C971	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	JD5U N,JD5 US,JD 5UX
C972	QETN1CM-107Z	E CAPACITOR	100uF 16V M	JD5U N,JD5 US,JD 5UX
C973	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	JD5U N,JD5 US,JD 5UX
C974	QDXB1CM-472Y	C CAPACITOR	4700pF 16V M	JD5U N,JD5 US,JD 5UX
C975	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	JD5U N,JD5 US,JD 5UX
C976	QEKC1CM-226Z	E CAPACITOR	22uF 16V M	JD5U N,JD5 US,JD 5UX
C977	QEKC1HM-474Z	E CAPACITOR	0.47uF 50V M	JD5U N,JD5 US,JD 5UX
C978	QDXB1CM-332Y	C CAPACITOR	3300pF 16V M	JD5U N,JD5 US,JD 5UX
C979	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	JD5U N,JD5 US,JD 5UX
C980	QEKC1HM-475Z	E CAPACITOR	4.7uF 50V M	JD5U N,JD5 US,JD 5UX
C981	QEKC1HM-224Z	E CAPACITOR	0.22uF 50V M	JD5U N,JD5 US,JD 5UX
C982	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	JD5U N,JD5 US,JD 5UX
C983	QCBB1HK-151Y	C CAPACITOR	150pF 50V K	JD5U N,JD5 US,JD 5UX
C984	QCBB1HK-331Y	C CAPACITOR	330pF 50V K	JD5U N,JD5 US,JD 5UX

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C985	QCBB1HK-151Y	C CAPACITOR	150pF 50V K	JD5U N,JD5 US,JD 5UX	R943	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
C986	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	JD5U N,JD5 US,JD 5UX	R944	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
C987	QETN1CM-107Z	E CAPACITOR	100uF 16V M	JD5U N,JD5 US,JD 5UX	R945	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
C988	QEK1AM-227Z	E CAPACITOR	220uF 10V M	JD5U N,JD5 US,JD 5UX	R946	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	
C989	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R947	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	
C990	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R948	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
C991	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R949	QRE141J-182Y	C RESISTOR	1.8kΩ 1/4W J	
C992	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	JD5U N,JD5 US,JD 5UX	R950	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
C993	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	JD5U N,JD5 US,JD 5UX	R951	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
C994	QDXB1CM-222Y	C CAPACITOR	2200pF 16V M	JD5U N,JD5 US,JD 5UX	R952	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
C995	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R953	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
C996	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R954	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
C997	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	JD5U N,JD5 US,JD 5UX	R955	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
C998	QDXB1CM-392Y	C CAPACITOR	3900pF 16V M	JD5U N,JD5 US,JD 5UX	R956	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
C999	QDXB1CM-392Y	C CAPACITOR	3900pF 16V M	JD5U N,JD5 US,JD 5UX	R960	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
C2010	QETN1JM-107Z	E CAPACITOR	100uF 63V M	JD5U N,JD5 US,JD 5UX	R961	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
C2011	QETN2AM-476Z	E CAPACITOR	47uF 100V M	JD5U N,JD5 US,JD 5UX	R962	QRE141J-121Y	C RESISTOR	120Ω 1/4W J	
C2012	QETN1HM-226Z	E CAPACITOR	22uF 50V M	JD5U N,JD5 US,JD 5UX	R963	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
C2013	QETN1HM-226Z	E CAPACITOR	22uF 50V M	JD5U N,JD5 US,JD 5UX	R964	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
C2014	QDYB1CM-103Y	C CAPACITOR	0.01uF 16V M	JD5U N,JD5 US,JD 5UX	R965	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
C2015	QETN1HM-106Z	E CAPACITOR	10uF 50V M	JD5U N,JD5 US,JD 5UX	R966	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	
C2017	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	JD5U N,JD5 US,JD 5UX	R967	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	
C2018	QCFB1HZ-104Y	C CAPACITOR	0.1uF 50V Z	JD5U N,JD5 US,JD 5UX	R969	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R920	QRE141J-202Y	C RESISTOR	2kΩ 1/4W J	JD5U E	R970	QRE141J-333Y	C RESISTOR	33kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R920	QRE141J-471Y	C RESISTOR	470Ω 1/4W J	JD5U N,JD5 US,JD 5UW,J D5UX	R971	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R921	QRE141J-911Y	C RESISTOR	910Ω 1/4W J	JD5U E	R972	QRE141J-822Y	C RESISTOR	8.2kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R921	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	JD5U W,JD5 UX	R973	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R922	QRE141J-182Y	C RESISTOR	1.8kΩ 1/4W J	JD5U E	R974	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R922	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	JD5U W	R975	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	JD5U N,JD5 US,JD 5UX
R924	QRE141J-221Y	C RESISTOR	220Ω 1/4W J		R976	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R925	QRE141J-221Y	C RESISTOR	220Ω 1/4W J		R977	QRE141J-272Y	C RESISTOR	2.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R926	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R978	QRE141J-562Y	C RESISTOR	5.6kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R927	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R979	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R928	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R980	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R929	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J		R981	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R930	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J		R982	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R933	QRE141J-221Y	C RESISTOR	220Ω 1/4W J		R983	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R934	QRE141J-221Y	C RESISTOR	220Ω 1/4W J						
R935	QRE141J-221Y	C RESISTOR	220Ω 1/4W J						
R936	QRE141J-221Y	C RESISTOR	220Ω 1/4W J						
R937	QRE141J-221Y	C RESISTOR	220Ω 1/4W J						
R938	QRE141J-221Y	C RESISTOR	220Ω 1/4W J						
R940	QRE141J-101Y	C RESISTOR	100Ω 1/4W J						
R941	QRE141J-101Y	C RESISTOR	100Ω 1/4W J						
R942	QRE141J-121Y	C RESISTOR	120Ω 1/4W J						

△ Symbol No.	Part No.	Part Name	Description	Local
R984	QRE141J-153Y	C RESISTOR	15kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R985	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R986	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R987	QRE141J-561Y	C RESISTOR	560Ω 1/4W J	JD5U N,JD5 US,JD 5UX
R988	QRE141J-203Y	C RESISTOR	20kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R989	QRE141J-510Y	C RESISTOR	51Ω 1/4W J	JD5U N,JD5 US,JD 5UX
R990	QRE141J-475Y	C RESISTOR	4.7MΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R991	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	JD5U N,JD5 US,JD 5UX
R992	QRE141J-152Y	C RESISTOR	1.5kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R993	QRE141J-391Y	C RESISTOR	390Ω 1/4W J	JD5U N,JD5 US,JD 5UX
R994	QRE141J-123Y	C RESISTOR	12kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R995	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R996	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R997	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R998	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
R999	QRE141J-152Y	C RESISTOR	1.5kΩ 1/4W J	JD5U N,JD5 US,JD 5UX
△ R2010	QRJ146J-4R7X	UNF C RESISTOR	4.7Ω 1/4W J	
R2011	FQRK123J-153X	C RESISTOR		
R2012	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
△ R2014	ERX12SJR33E	UNF C RESISTOR		
VR970	QVQ0299-B54	V RESISTOR		JD5U N,JD5 US,JD 5UX
L996	QQL231K-470Y	COIL	47uH K	
L997	QQL231K-470Y	COIL	47uH K	
L998	QQR1183-001Z	FERRITE BEADS		
CN101	QGD2504C1-03Z	CONNECTOR	(1-3)	
CN119	QGA3901F1-08	CONNECTOR	W-B (1-8)	
CN250	QGA7901C1-02	CONNECTOR	W-B (1-2)	
CN810	QGB2024K1-04S	CONNECTOR	B-B (1-4)	
CN820	QGB2024J1-04S	CONNECTOR	B-B (1-4)	
CN870	QGF1205C1-17	CONNECTOR	FFC/FPC (1-17)	
CN890	QGF1205F1-12	CONNECTOR	FFC/FPC (1-12)	

△ Symbol No.	Part No.	Part Name	Description	Local
FT111	QNG0003-001Z	FUSE CLIP		
FT112	QNG0003-001Z	FUSE CLIP		
FT131	QNG0003-001Z	FUSE CLIP		
FT132	QNG0003-001Z	FUSE CLIP		
FT151	QNG0003-001Z	FUSE CLIP		
FT152	QNG0003-001Z	FUSE CLIP		
FT511	QNG0003-001Z	FUSE CLIP		
FT512	QNG0003-001Z	FUSE CLIP		
FT521	QNG0003-001Z	FUSE CLIP		
FT522	QNG0003-001Z	FUSE CLIP		
FT531	QNG0003-001Z	FUSE CLIP		
FT532	QNG0003-001Z	FUSE CLIP		
FW116	QUM153-29DGZ4	FLAT WIRE		
FW241	QUM153-18DGZ4	FLAT WIRE		
FW444	QJP001-033600	SINGLE WIRE		JD5U E,JD5 UW
J970	QNS0236-001	PHONE JACK		JD5U N,JD5 US,JD 5UX
J971	QNS0235-001	PHONE JACK		JD5U E,JD5 UW
J971	QNS0236-001	PHONE JACK		JD5U N,JD5 US,JD 5UX
J995	QNS0237-001	PHONE JACK		
JS920	QSW0857-001	ROTARY SW		
△ S500	QSW0812-001	VOLTAGE SWITCH		
S920	QSW0825-001Z	TACT SW		
S939	QSW0825-001Z	TACT SW		
S940	QSW0825-001Z	TACT SW		
S941	QSW0825-001Z	TACT SW		
S942	QSW0825-001Z	TACT SW		
S943	QSW0825-001Z	TACT SW		
S944	QSW0825-001Z	TACT SW		
S945	QSW0825-001Z	TACT SW		
S946	QSW0825-001Z	TACT SW		
S947	QSW0825-001Z	TACT SW		
S948	QSW0825-001Z	TACT SW		
S949	QSW0825-001Z	TACT SW		
S950	QSW0825-001Z	TACT SW		
S951	QSW0825-001Z	TACT SW		
S952	QSW0825-001Z	TACT SW		
S953	QSW0825-001Z	TACT SW		
S954	QSW0825-001Z	TACT SW		
S955	QSW0825-001Z	TACT SW		
S960	QSW0825-001Z	TACT SW		
S961	QSW0825-001Z	TACT SW		
S962	QSW0825-001Z	TACT SW		
S963	QSW0825-001Z	TACT SW		
S964	QSW0825-001Z	TACT SW		
S965	QSW0825-001Z	TACT SW		
S966	QSW0825-001Z	TACT SW		
S967	QSW0825-001Z	TACT SW		
SP920	GV40205-004A	IC HOLDER		
TW920	QUB220-32HPDM	WIRE		
TW991	QUB220-18HPDM	S.WIRE		

DVD loading switch board

Block No. [0][4]

△ Symbol No.	Part No.	Part Name	Description	Local
CN1	QGF1016F3-05	CONNECTOR	FFC/FPC (1-5)	
S1	QSW1007-001	DETECT SWITCH		


DVD servo board

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R205	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J		R703	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R206	NRSA63J-303X	MG RESISTOR	30kΩ 1/16W J		R704	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R207	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R705	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R213	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R706	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R214	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R707	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R219	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R708	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R220	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J		R714	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R221	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R715	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R251	NRS125J-R47X	MG RESISTOR	0.47Ω 1/2W J		R716	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R252	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J		R718	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R257	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R731	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R259	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R732	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R302	NRSA63J-240X	MG RESISTOR	24Ω 1/16W J		R733	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R303	NRSA63J-270X	MG RESISTOR	27Ω 1/16W J		R734	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R306	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R735	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R307	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R741	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R308	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R742	NRSA63J-5R1X	MG RESISTOR	5.1Ω 1/16W J	
R309	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R743	NRSA63J-4R7X	MG RESISTOR	4.7Ω 1/16W J	
R312	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R744	NRSA63J-4R7X	MG RESISTOR	4.7Ω 1/16W J	
R313	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R745	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R314	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R749	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R315	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R990	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R316	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J		CN101	QGF0523F1-24W	CONNECTOR	FFC/FPC (1-24)	
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		CN201	QGF1037F1-08W	CONNECTOR	FFC/FPC (1-8)	
R319	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		CN501	QGF1016F2-08W	CONNECTOR	FFC/FPC (1-8)	
R320	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		CN502	QGF1016F2-09W	CONNECTOR	FFC/FPC (1-9)	
R330	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		CN503	QGF1016F2-17W	CONNECTOR	FFC/FPC (1-17)	
R331	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		CN504	QGF1016F2-15W	CONNECTOR	FFC/FPC (1-15)	
R332	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		K101	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R334	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		K102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R335	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		K350	NQR0502-001X	FERRITE BEADS		
R336	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		K352	NQR0502-001X	FERRITE BEADS		
R337	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		K551	NQR0129-002X	FERRITE BEADS		
R338	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		K552	NQR0129-002X	FERRITE BEADS		
R339	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		K553	NQR0129-002X	FERRITE BEADS		
R340	NRSA63D-303X	MG RESISTOR	30kΩ 1/16W D		K554	NQR0129-002X	FERRITE BEADS		
R341	NRSA63D-362X	MG RESISTOR	3.6kΩ 1/16W D		K555	NQR0022-005X	FERRITE BEADS		
R342	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D		K556	NQR0129-002X	FERRITE BEADS		
R343	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		K710	NQR0129-002X	FERRITE BEADS		
R345	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		TH301	NAD0025-103X	N THERMISTOR	10kΩ	
R346	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		X351	NAX0550-001X	CRYSTAL	27.000MHz	
R347	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J						
R351	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J						
R352	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J						
R353	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J						
R354	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J						
R355	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J						
R356	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J						
R357	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J						
R358	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J						
R359	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J						
R360	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J						
R362	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J						
R363	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J						
R367	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J						
R368	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J						
R369	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J						
R372	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R373	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R384	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R385	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R388	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R392	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R393	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R394	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R395	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J						
R399	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R452	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R457	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R458	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J						
R501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R530	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R531	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						
R534	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J						
R562	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J						
R701	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J						

<MEMO>

Packing materials and accessories parts list

Block No. **M 3 M M**

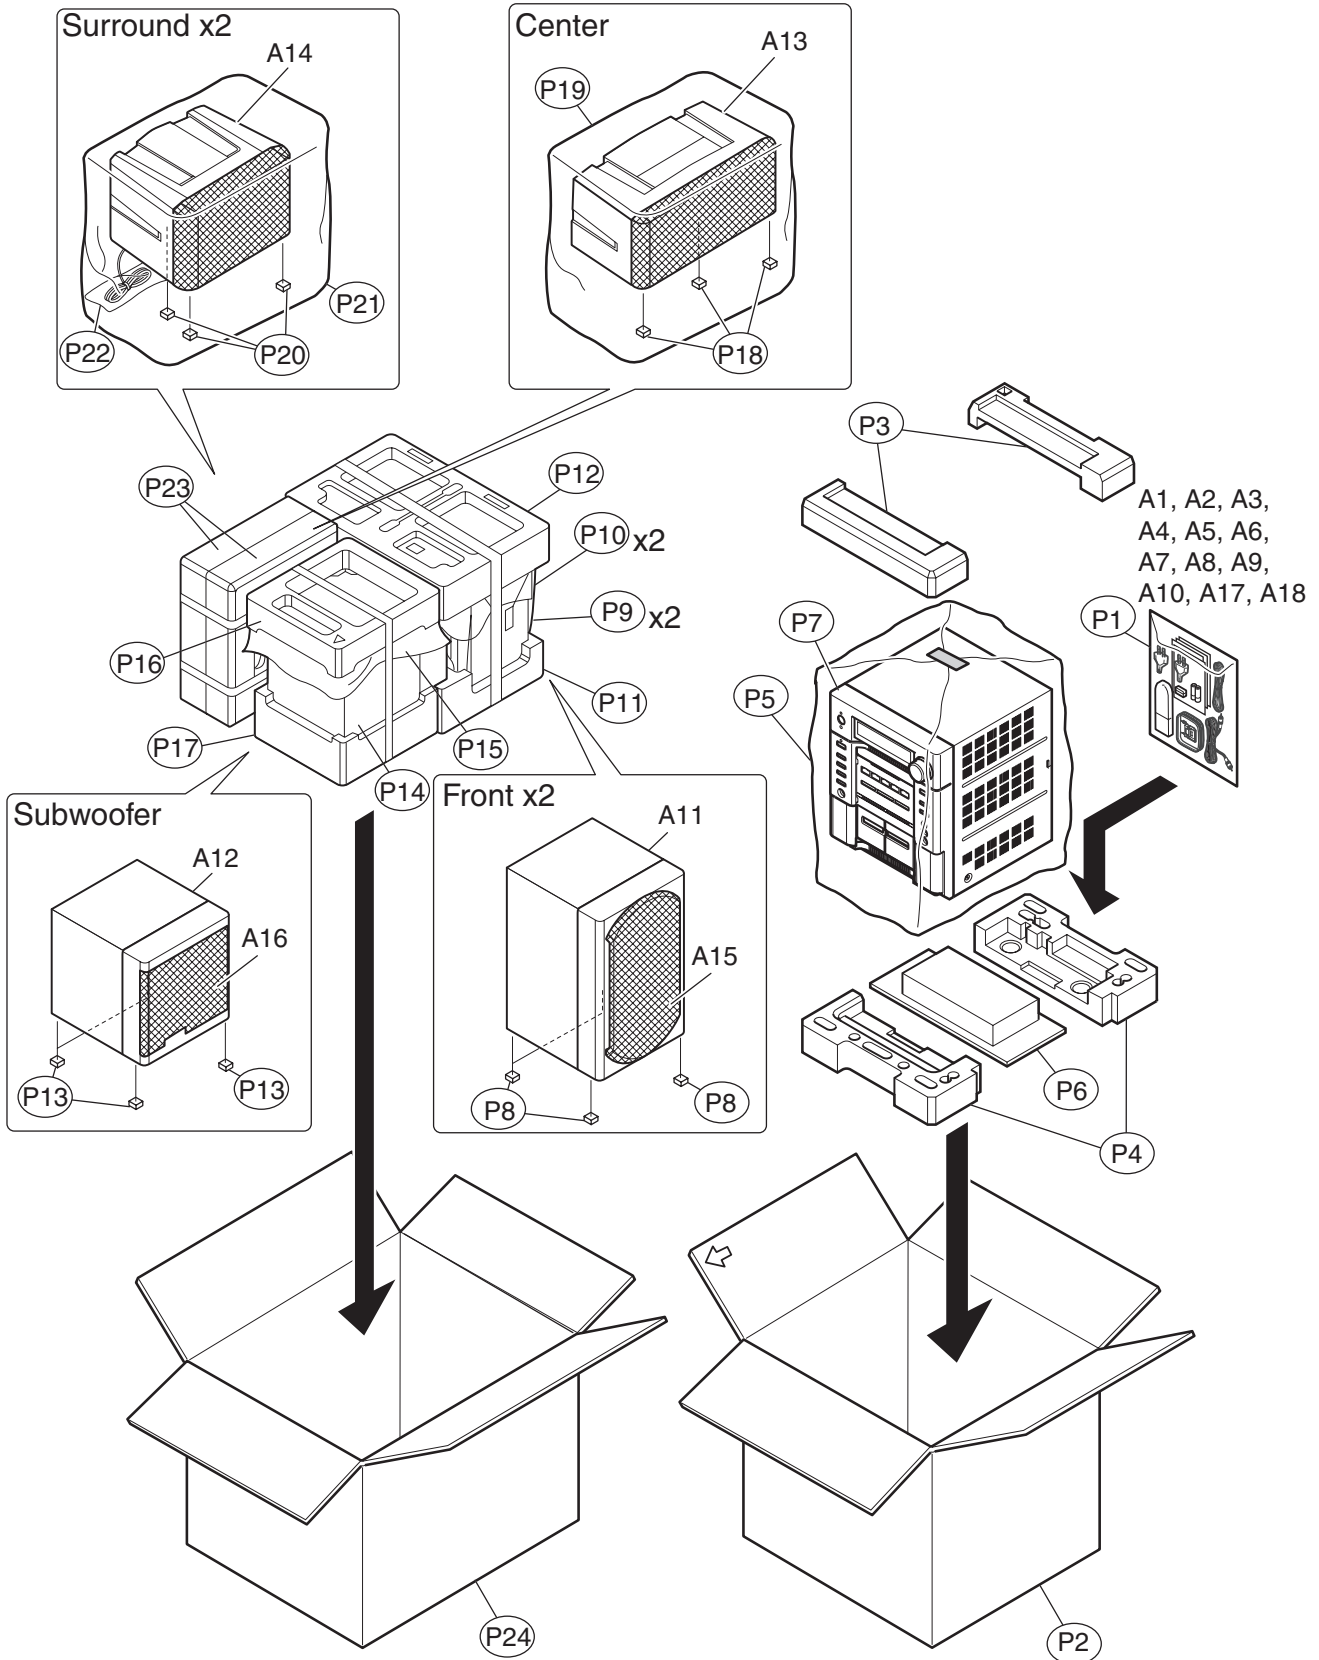

Packing and Accessories

Block No. [M][3][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	A 1	QAL0014-001	AM LOOP ANT		
	A 2	QAL0457-001	ANT.WIRE		
△	A 3	QAM0112-002	PLUG ADAPTOR		JD5UE,JD5UN,JD5US,JD5UW
	A 4	QAM0216-001	SIGNAL CORD		
	A 5	RM-SMXJD5A	REMOCON		JD5UE,JD5UW
	A 5	RM-SMXJD5U	REMOCON		JD5UN,JD5US,JD5UX
	A 6	-----	BATTERY	(x2)	
	A 7	GV40538-001A	INFO. SHEET		
	A 7	GV40548-001A	INFO. SHEET		JD5UN,JD5US,JD5UX
	A 8	GVT0127-003A	INST.	ENG TUR	JD5UE
	A 8	GVT0127-001A	INST.	ENG CHI(PEKIN)	JD5UN,JD5US
	A 8	GVT0127-004A	INST.	ENG SPA POR	JD5UW
	A 8	GVT0127-002A	INST.	ENG ARA PER	JD5UX
	A 9	GV40524-002A	NOTICE SHEET		JD5UW
	A 9	GV40524-001B	NOTICE SHEET		JD5UE,JD5UN,JD5US,JD5UX
	A 10	QQR0919-001	FERRITE CORE		
	A 11	SPMXJD5FK-SPBOX	SPK WITH BOX-F	(x2)	
	A 12	SPMXJD5WK-SPBOX	SPK WITH BOX-W		
	A 13	SPMXJD5CK-SPBOX	SPK WITH BOX-C		
	A 14	SPMXJD5SK-SPBOX	SPK WITH BOX-S	(x2)	
	A 15	J201-XJD301G-10	NET ASSY	(x2)	
	A 16	J201-XJD501G-10	NET ASSY		
△	A 17	VMZ0139-001	CONTHI PLUG		JD5UX
	A 18	GVT0127-006A	INST.	ARA PER	JD5UX
	P 1	QPA02503503P	POLY BAG	25cm x 35cm	
	P 2	GV20289-003A	CARTON ASSY.		JD5UE
	P 2	GV20289-001A	CARTON ASSY.		JD5UN,JD5US
	P 2	GV20289-004A	CARTON ASSY.		JD5UW
	P 2	GV20289-005A	CARTON ASSY.		JD5UX
	P 3	GV10210-001A	CUSHION (TOP)		
	P 4	GV10211-001A	CUSHION (BOTTOM)		
	P 5	QPC06507030P	POLY BAG	65cm x 70cm	
	P 6	GV30209-008A	CARTON SPACER		
	P 7	GV40437-003A	CLOTH		
	P 8	441-802104-00	LEG CUSHION	(x8)	
	P 9	700-120034-20	HDPE BAG	(x2)	
	P 10	715-250031-00	MIRAMAT SHEET	(x2)	
	P 11	720-XJD5FB-00	BOTTOM CUSHION		
	P 12	720-XJD5FT-00	TOP CUSHION		
	P 13	441-802104-00	LEG CUSHION	(x4)	
	P 14	700-120093-20	POLY BAG		
	P 15	715-140015-01	MIRAMAT SHEET		
	P 16	720-XJD5WT-00	TOP CUSHION		
	P 17	720-XJD5WB-00	BOTTOM CUSHION		
	P 18	441-802104-00	LEG CUSHION	(x3)	
	P 19	700-120082-10	POLY BAG		
	P 20	441-901102-01	LEG CUSHION	(x6)	
	P 21	700-120042-11	HDPE BAG	(x2)	
	P 22	700-110016-00	POLY BAG	(x2)	
	P 23	720-XJD5CS-00	CUSHION	(x2)	
	P 24	730-0XJD5U-10	CARTON BOX		JD5UN,JD5US
	P 24	730-XJD5UX-10	CARTON BOX		JD5UE,JD5UX,JD5UW