


KC-X1

SERVICE MANUAL

KENWOOD

©1993-3 PRINTED IN JAPAN
B51-4703-00 (MC) 2088








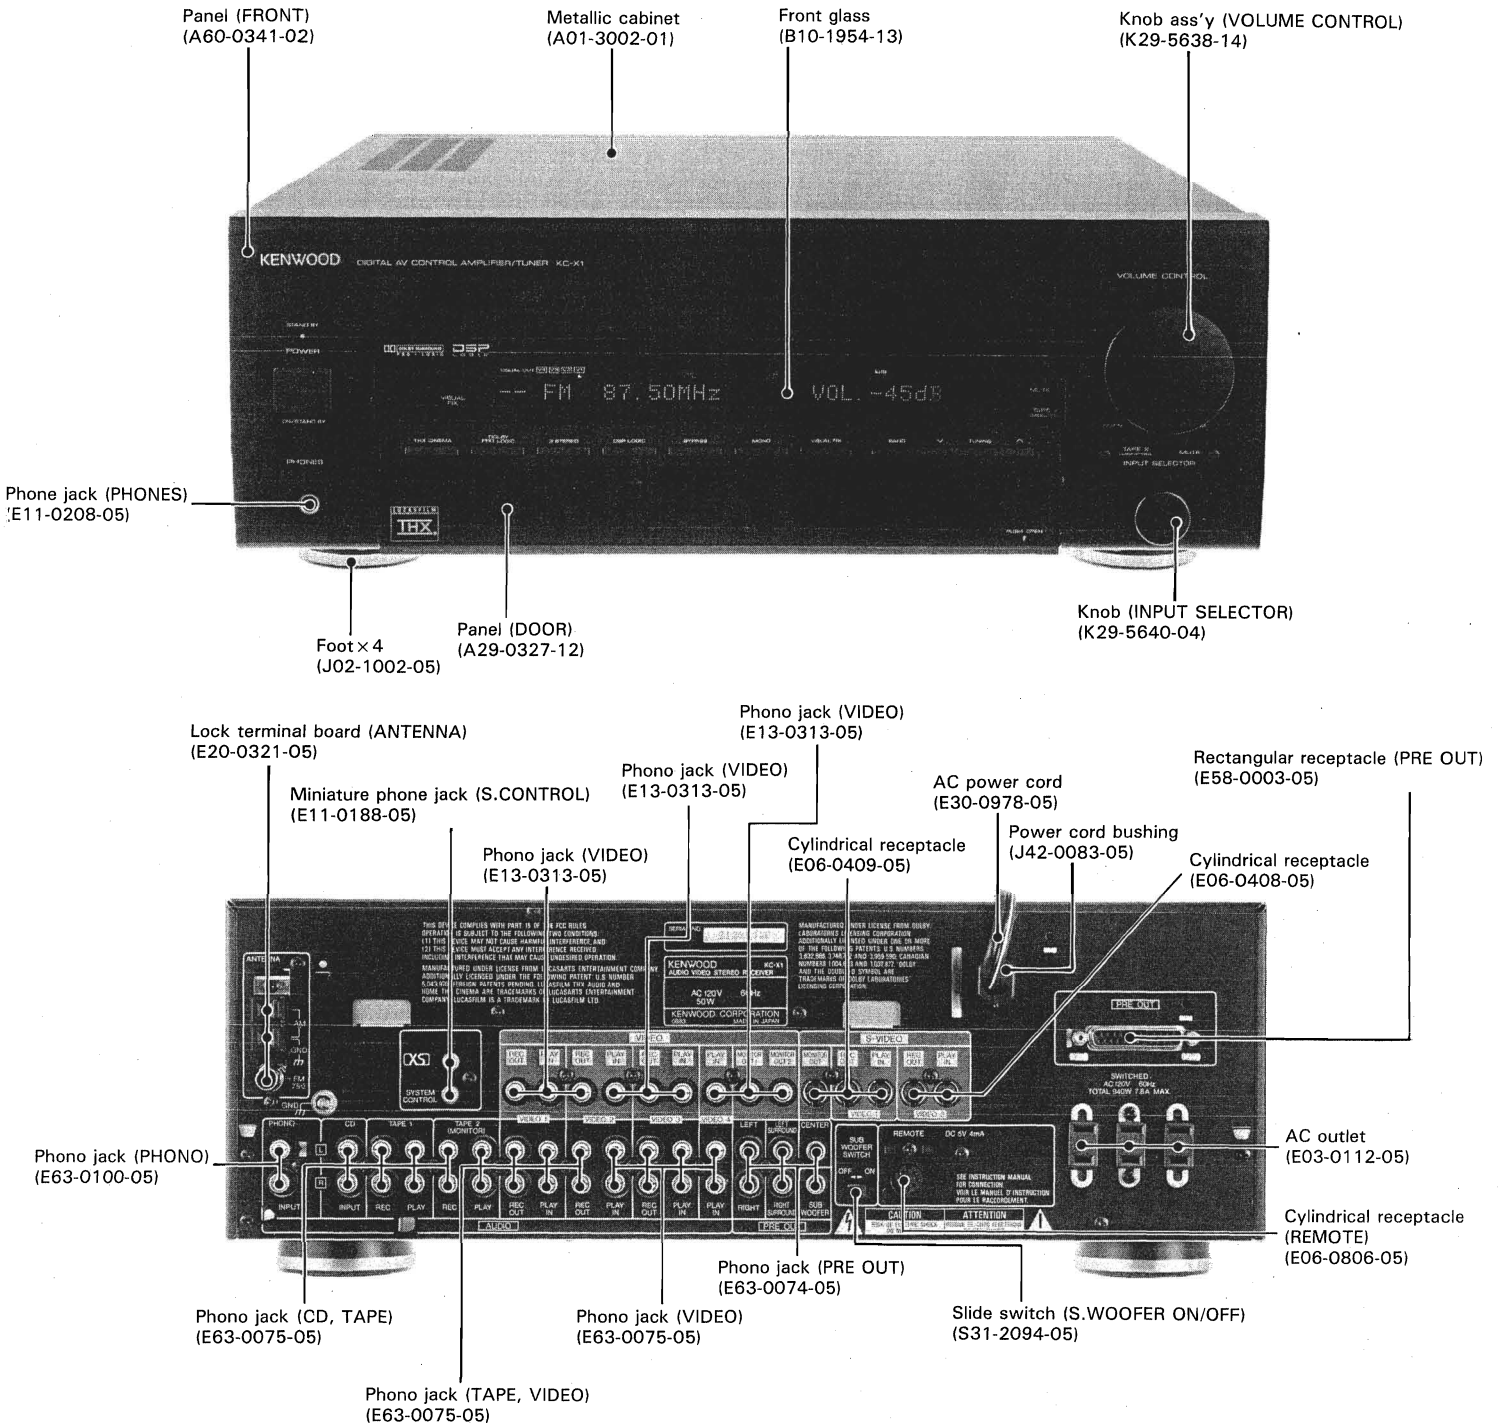



KC-X1


CONTENTS

ACCESSORIES	2	4. Display control driver: LC75711E (X14: IC15, 16) ...	23
CONTROLS AND INDICATORS	3	5. Control of selector IC and speaker relay	26
DISASSEMBLY FOR REPAIR	7	ADJUSTMENT	27
BLOCK DIAGRAM	11	P.C. BOARD (Component side view)	29
CIRCUIT DESCRIPTION		SCHEMATIC DIAGRAM	39
1. Outline of THX system	13	EXPLODED VIEW	67
2. Main microprocessor μ PD78044GF-024 (X14: IC14) ...	14	PARTS LIST	69
3. Control microprocessor μ PD78043GF-020 (X14: IC18) ..	20	SPECIFICATIONS	75

ACCESSORIES

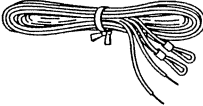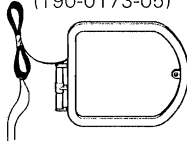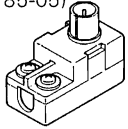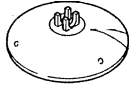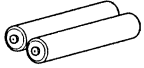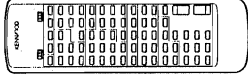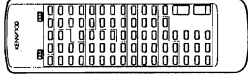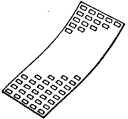FM indoor antenna	1	AM loop antenna	1
(T90-0176-05)		(T90-0173-05)	
			
75 Ω /300 Ω antenna adaptor	1	Loop antenna stand	1
(T90-0185-05)		(J19-2815-04)	
			
Batteries ("R03" or "AAA")	2	Remote control unit	1
		(X94-1030-21)	
		Battery cover (A09-0140-03)	
Overlay sheet	1		
(G16-0804-04)			
		Audio cord	3
		(E30-2293-05)	
			

CONTROLS AND INDICATORS

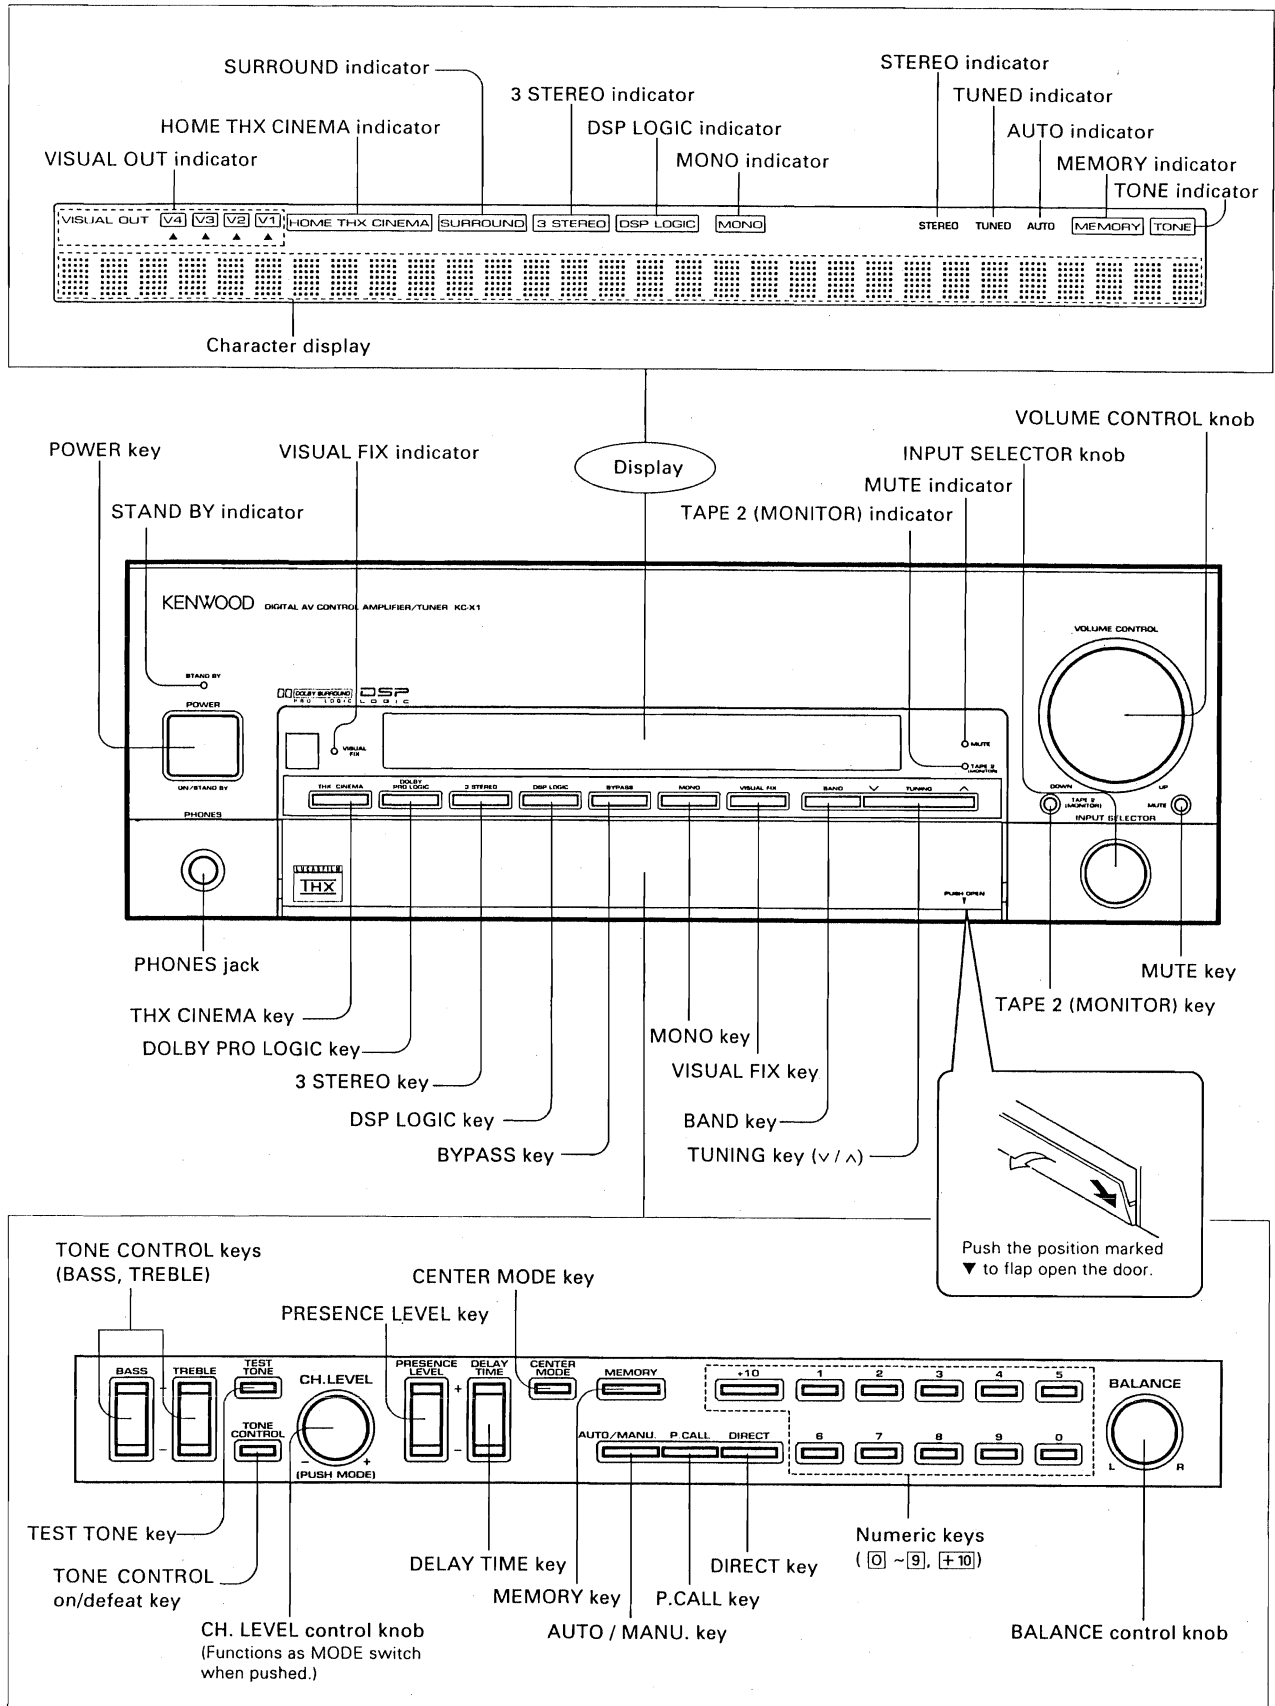

KC-X1

CONTROLS AND INDICATORS

Names and functions of remote control keys (AUDIO mode)

To remote control KENWOOD components connected to this unit via the system control cords, set the LEARN/USE switch and AUDIO/AUX switch as shown in the illustrations below.

LEARN/USE switch LEARN TRANSMIT

LEARN USE

Set to "USE".

AUDIO/AUX switch AUDIO AUX

Set to "AUDIO".

LEARN/TRANSMIT indicator

The LED lights when a remote control signal is transmitted by pressing a key and during programming a remote control signal from another remote control unit.

POWER key

Press to turn the power of the main unit ON / OFF.

Cassette deck operation keys

With double cassette deck:
The TAPE A keys control deck A and TAPE B keys control deck B.

With single cassette deck:
Use the TAPE B keys to control the deck. (The TAPE A keys do not function.)

- * When this remote control unit is used to operate the cassette deck, connect a system control cord between it and the main unit, and its output to the TAPE 1 jacks of the main unit.

Numeric keys

When listening to CD:
These function as the numeric keys of the CD player.

When listening to radio:
These function as the numeric keys of the tuner.

LD player operation keys

These keys can control the playback, pause, stop and search of the LD player.

- * Only when operating these keys, point the remote control unit toward the LD player.
- * Do not connect the LD player using a system control cord.

Surround operation keys

THX CINEMA key
DOLBY PRO LOGIC key
DOLBY 3 STEREO key
MONO key
DSP LOGIC key
BYPASS key: Press to cancel the surround effect.

Select the surround mode.

Tuner operation keys

- BAND** key: Press to select the frequency band.
- P.CALL** keys: Press to recall the preset stations in sequence.
- DIRECT** key: Use together with the numeric keys to specify a station to be recalled.

Graphic equalizer operation keys

- EFFECT** key: Press to turn the graphic equalizer ON/OFF.
- M.CALL** key: Press to recall preset equalizer patterns in sequence.

CD player operation keys

These keys can control the playback, pause, stop, search and skip of the CD player.

When a multi-disc player is used, the kind of disc can be selected with the **DISC** key.


Input selector keys

Press one of these keys to select a desired input source.

When the **VISUAL FIX** key is pressed, the current video input is fixed, so that only the audio input can be selected from other input sources.

Volume and other control keys


- MUTE** key: Mutes the playback sound temporarily.
 - VOLUME CONTROL** keys; Adjusts the overall volume of the played sound.
 - DISPLAY** key: Press to switch the content of the display on the main unit. (Input source display/surround mode display)
 - MENU** key: Press to display the menu on the TV monitor screen.
 - TEST TONE ON/OFF** key
 - TEST TONE MODE** key
 - CHANNEL LEVEL** keys
 - PRESENCE LEVEL** keys
- Use during surround play for various setting operations.

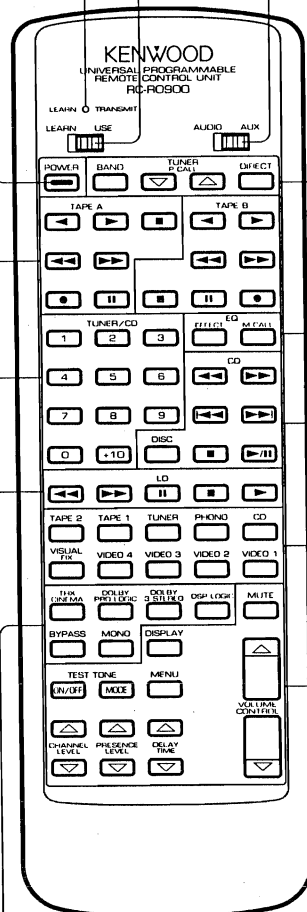

DISASSEMBLY FOR REPAIR


Removing the panel and panel escutcheon

1. Remove the eight screws (1), then detach the front panel.
2. Remove the two screws (2), then detach the lower door panel.
3. Detach the panel escutcheon by disengaging the seven hooks (3).

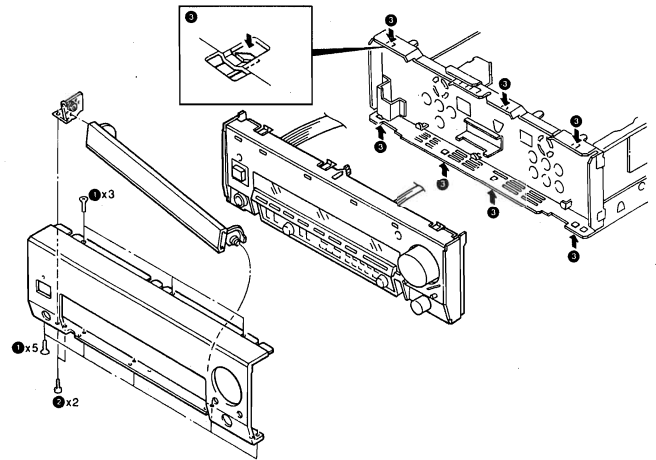

Removing the (X14) (A/3) and (X14) (B/3) boards

1. Remove the four knobs (4).
2. Remove the six screws (5).
3. Detach the FL display board (X14) (A/3) by disengaging the seven hooks (6).
4. Detach the Volume selector board (X14) (B/3) by disengaging the five hooks in order of (7), (8), (9) then (10).

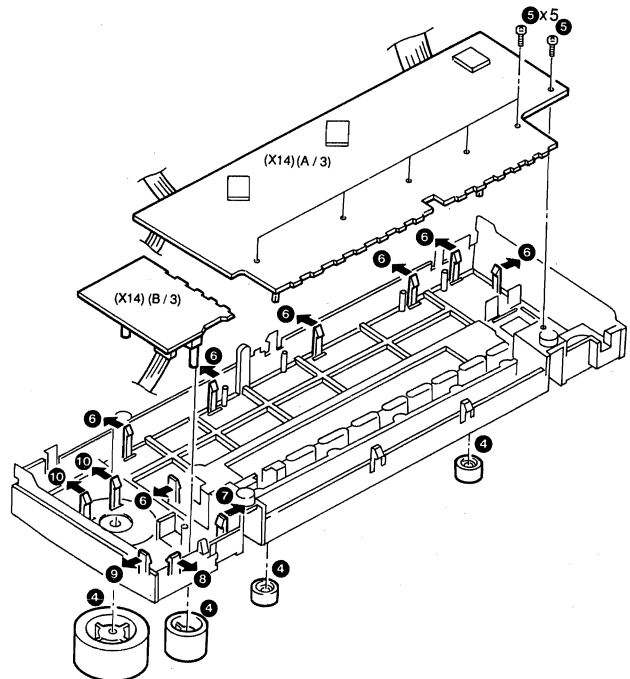


KC-X1

DISASSEMBLY FOR REPAIR


Removing the (X08) board

1. Remove the two screws (11).
2. Remove the six screws (12), then lift the shield plate.
3. Remove the four screws (13), then detach the shield plate reinforcing hardware and upper shield plate.
4. Remove the four screws (14).
5. Remove the unit holder (15), then detach the board (X08).

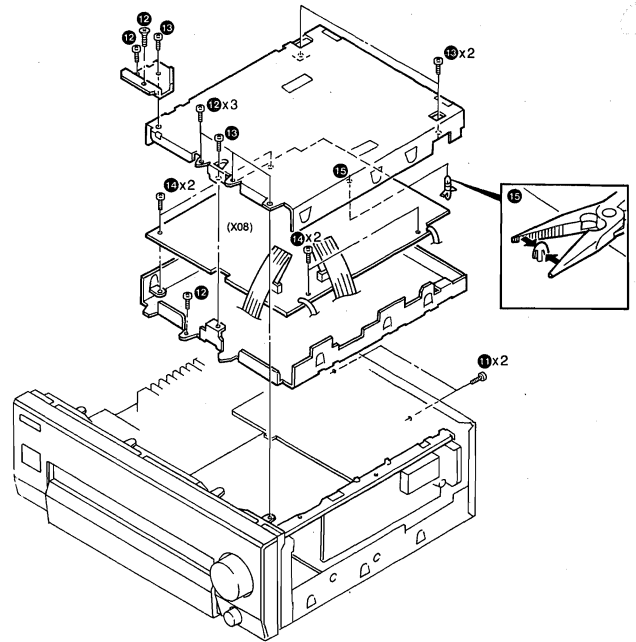

Removing the (X14) (C/3) and (X00) (B/3) boards

1. Remove the six screws (16).
2. Unplug the two connectors (17).
3. Remove the two unit holders (18), then detach the Video board (X14) (C/3).
4. Remove the two hex-head screws (19) using a box driver (5 mm (0.2 in.)), then detach the DB25 terminal board (X00) (B/3).

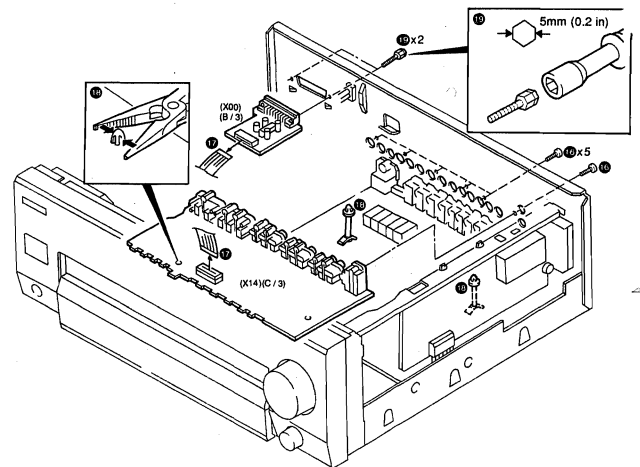


KC-X1

DISASSEMBLY FOR REPAIR


Removing the (X00) (A/3) and (X05) boards

1. Attach the clips of cord to TP1 and the chassis (20).
2. Remove the four screws (21), then detach the frame.
3. Unplug the connector (22), then detach the Tuner board (X05).
4. Unplug the three connectors (23).
5. Remove the six screws (24), then detach the Power board (X00) (A/3).

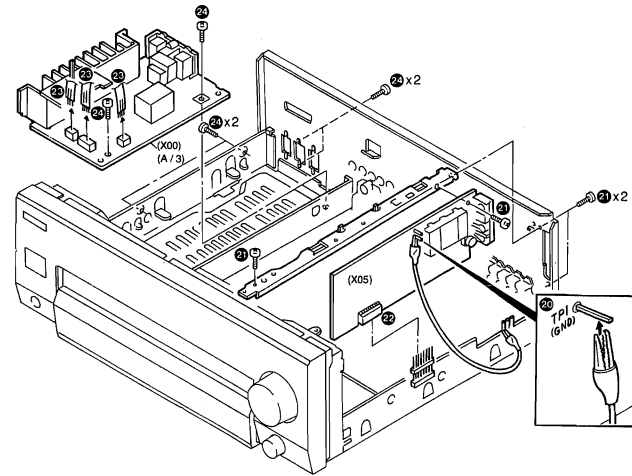

Removing the bottom panel

1. Loosen the six screws (25).
2. Remove the twelve screws (26), and slide the bottom panel slightly toward the front panel side.

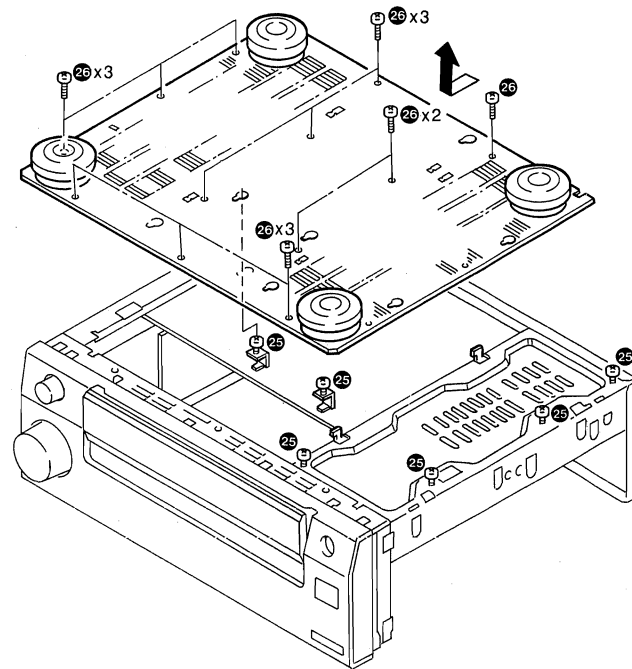


KC-X1


DISASSEMBLY FOR REPAIR

Removing the bottom right frame


1. Remove the four screws (27).
2. Stand up the claw (28) on the bottom right of the rear panel.

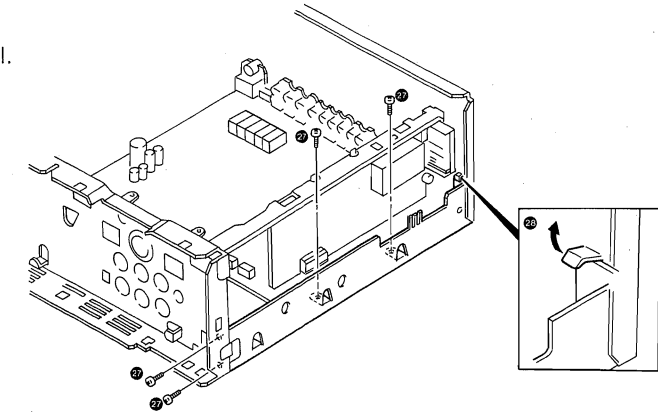

3. Place the set with the right side panel facing up, and remove the six screws (29).
4. Detach the right frame by pushing the rear panel toward the outer direction (30).

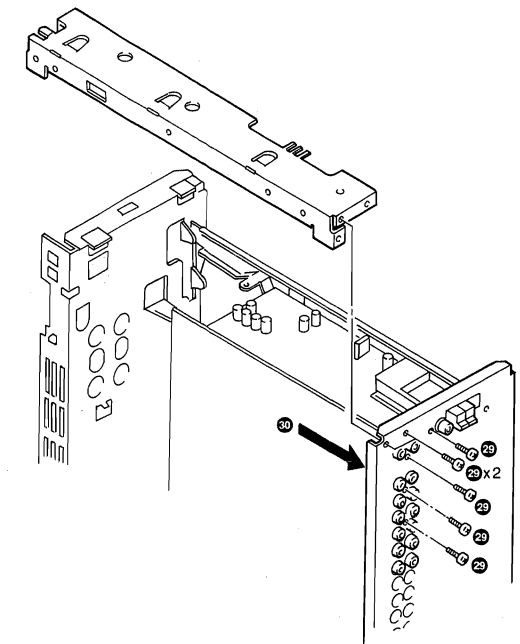

KC-X1 KC-X1 BLOCK DIAGRAM

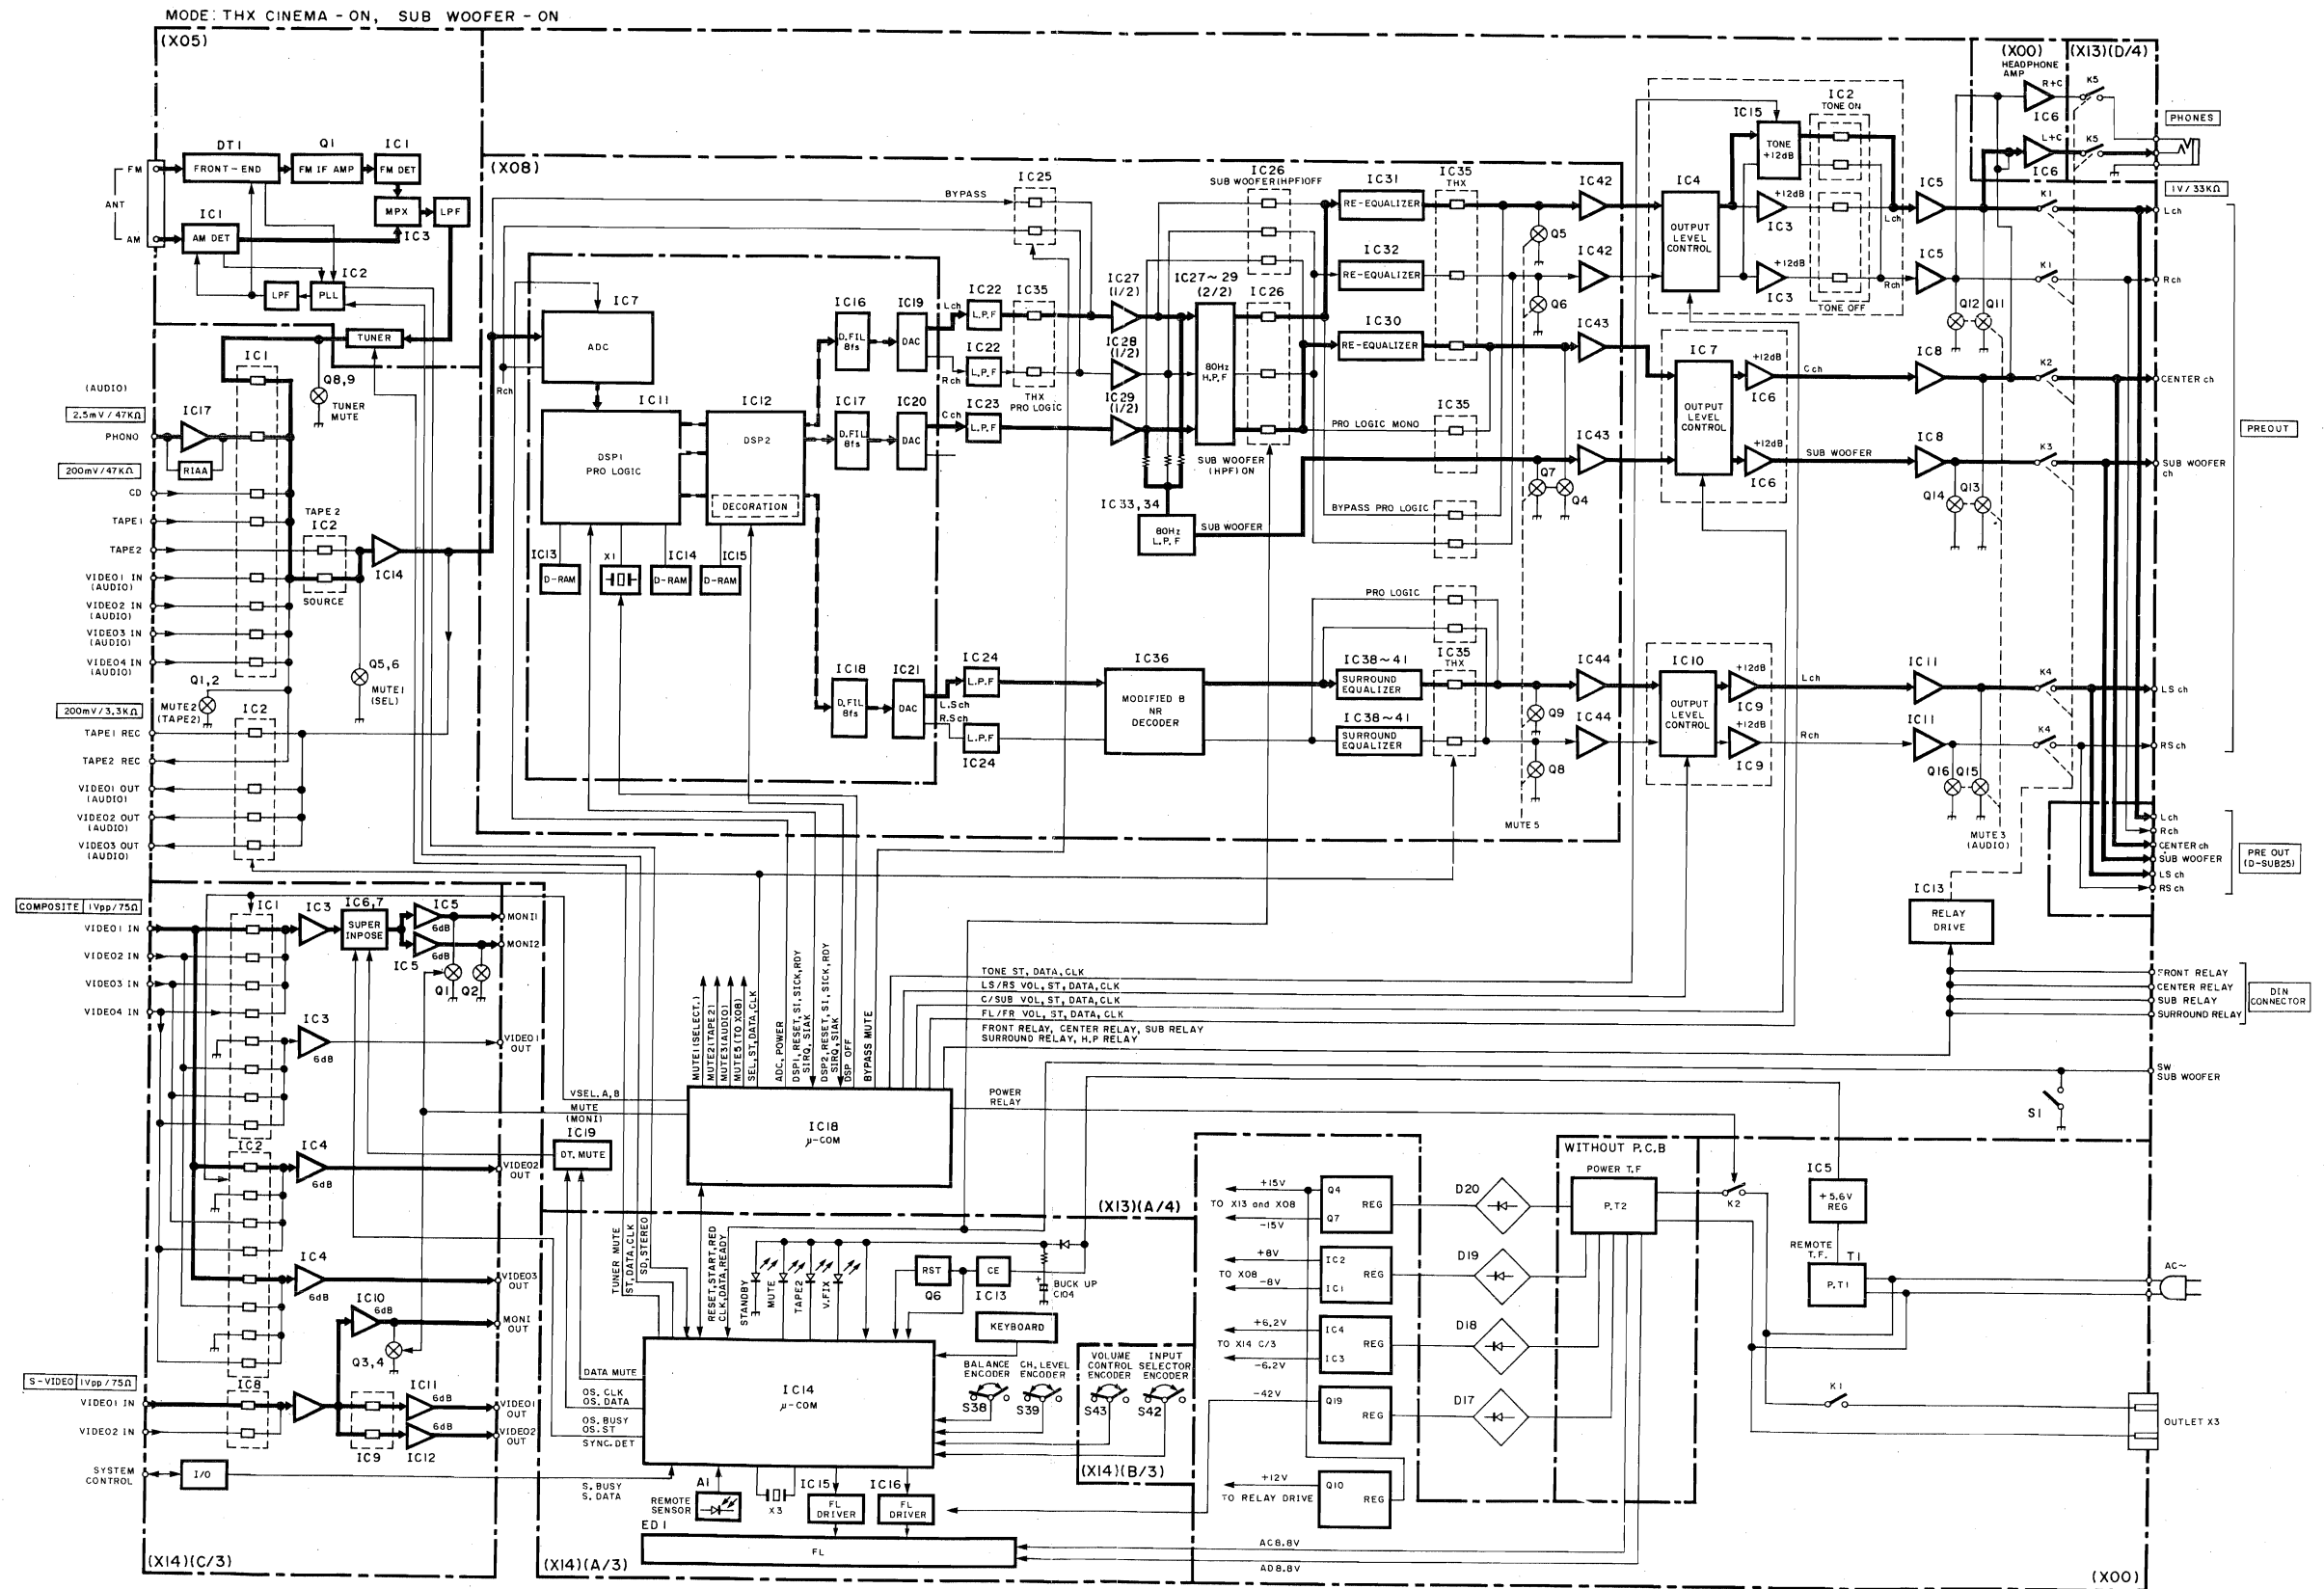


CIRCUIT DESCRIPTION

1. Outline of THX system


The THX system reproduces a similar Dolby Surround acoustic effect to movie theaters from a video software program carrying the **DD** DOLBY SURROUND mark.

The differences between the THX and the Dolby Surround function are as follows:

- (1) In the video software carrying the **DD** DOLBY SURROUND mark, the high frequencies are enhanced assuming reproduction in a large place such as movie theaters (because high frequencies tend to be attenuated in a large place due to the distance between the speakers and audience).
In consequence, the THX applies re-equalization to the signal to prevent excessive high frequencies when the program is played in home.
- (2) The rear component of the Dolby Surround signal is monaural but, to obtain more feeling of presence, the THX reproduces the rear component in simulated stereo by decelerating the rear left and right pitches by 1/100.
- (3) To obtain an equivalent feeling of presence to movie theaters, the THX uses the same quality of speakers for the front and center channels. The rear (surround) speakers are located directly to the left and right of the listeners and their sounds are radiated so that the listener does not sense the source of surround sound.

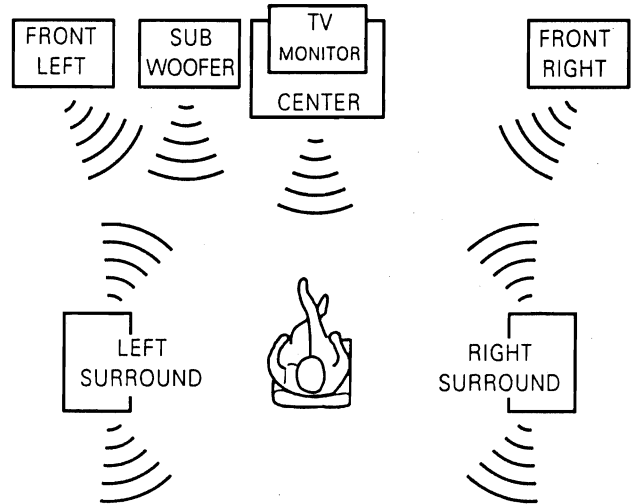

THX system

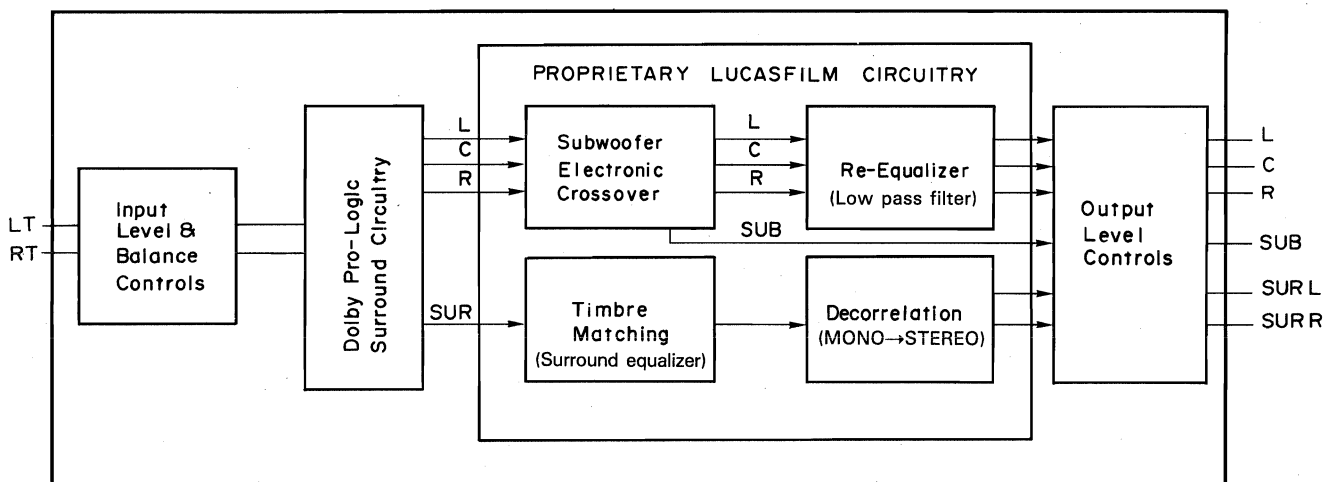

KC-X1

CIRCUIT DESCRIPTION

2. Main microprocessor: μ PD78044GF-024 (X14: IC14)

2-1. Function description

(1) Feature

Audio input (9 channels)	CD, PHONO, TUNER, TAPE1, TAPE2, VIDEO1, VIDEO2, VIDEO3, VIDEO4
Video input (4 channels)	VIDEO1 (PLAY/REC), VIDEO2 (PLAY/REC), VIDEO3 (PLAY/REC), VIDEO4 (PLAY)
Surround mode	DOLBY PRO•LOGIC, 3 STEREO, THX CINEMA, DSP LOGIC, MONO
Center mode	NORMAL, WIDEBAND, PHANTOM (PRO•LOGIC, THX) NORMAL, WIDEBAND (3 STEREO)
User memory	Tuner random 40 station preset

(2) Control object

FL display (X14; EDI: FIP30XM1AA)	
LED (X14: D60~63)	
IC LM7001 (X05: IC2) LC75711E (X14: IC15, 16) μ PD6450CX-514 (X14: IC6) μ PD78043GF-020 (X13: IC18)	PLL FL driver (FL: FIP30XM1AA) OSD Control microprocessor

2-2. Destination setting

Setting switch		Destination	Band	Received frequency range	Channel space	Reference frequency
Channel space 50kHz/100kHz (Pin 56)	AM SHORT/ LONG selection 1610kHz/1700kHz (Pin 55)					
High	Low	K1	FM	87.5 ~ 108.0 MHz	100 kHz	50 kHz
			AM	530 ~ 1610 kHz	10 kHz	10 kHz
High	High	K2	FM	87.5 ~ 108.0 MHz	100 kHz	50 kHz
			AM	530 ~ 1700 kHz	10 kHz	10 kHz
Low	—	E	FM	87.5 ~ 108.0 MHz	50 kHz	50 kHz
			AM	531 ~ 1602 kHz	9 kHz	9 kHz

CIRCUIT DESCRIPTION

2-3. Initial setting

(1) Setting method

While pressing the POWER key, plug the power cord to the AC wall outlet.

POWER	OFF
AUDIO selector	TUNER
TAPE 2	OFF
VIDEO selector	VIDEO 1
BAND	FM
Frequency	Lower limit of FM
AUTO/MONO	AUTO
Preset channel display	“...”
Preset channel frequency	Refer to figure 1.
Surround	BYPASS
Front (Left, Right)	0 dB
Center	0 dB
Rear (Left, Right)	0 dB
Sub woofer	0 dB
Center mode	
PRO LOGIC	NORMAL
3-STEREO	NORMAL
THX CINEMA	WIDEBAND
MASTER VOLUME	-45 dB

(Figure 1)

Destina- tion CH	K1		K2		E	
	BAND	Frequency	BAND	Frequency	BAND	Frequency
1	FM	98.00	FM	98.00	FM	98.00
2	FM	108.00	FM	108.00	FM	108.00
3	AM	630	AM	630	AM	630
4	AM	990	AM	990	AM	990
5	AM	1440	AM	1440	AM	1440
6	AM	1610	AM	1700	AM	1602
7	FM	87.50	FM	87.50	FM	87.50
8	FM	98.50	FM	98.50	FM	98.50
9	AM	530	AM	530	AM	531
10	FM	89.10	FM	89.10	FM	89.10
11~40	FM	87.50	FM	87.50	FM	87.50

Frequency unit FM : MHz
AM : kHz

CIRCUIT DESCRIPTION

2-4. Test mode

(1) Setting method

While pressing the TUNING DOWN key, plug the power cord to the AC wall outlet.

When the test mode is entered, the FL tube display all lights.

(2) Key and functions valid in test mode.


Input key	Function
V. FIX	Each time the key is pressed, the FL test mode alternates. → FLL all lights mode → Grid test mode → Segment test mode
When the following key is pressed, the FL tube display turn off.	
TAPE 2	Each time the key is pressed, the MASTER VOLUME level alternates. → + 18 dB → 0 dB → - 12 dB → - 52 dB → - 61 dB
0	Recall preset channel No. 10.
DELAY TIME $\Delta \nabla$	The delay time alternates. THX, PROLOGIC : 15 ms ↔ 30 ms DSP LOGIC : 1 ms ↔ 40 ms ↔ 80 ms
PRESENCE LEVEL $\Delta \nabla$	The presence level alternates. 0 dB ↔ - 10 dB ↔ - 20 dB
CHANNEL LEVEL $\Delta \nabla$	Each channel level alternates. - 12 dB ↔ 0 dB ↔ + 12 dB
Other keys	Normal State

(3) Method of cancelling the test mode

While pressing the POEWR key, plug the power cord to the AC wall outlet.

CIRCUIT DESCRIPTION

2-5. Pin connection

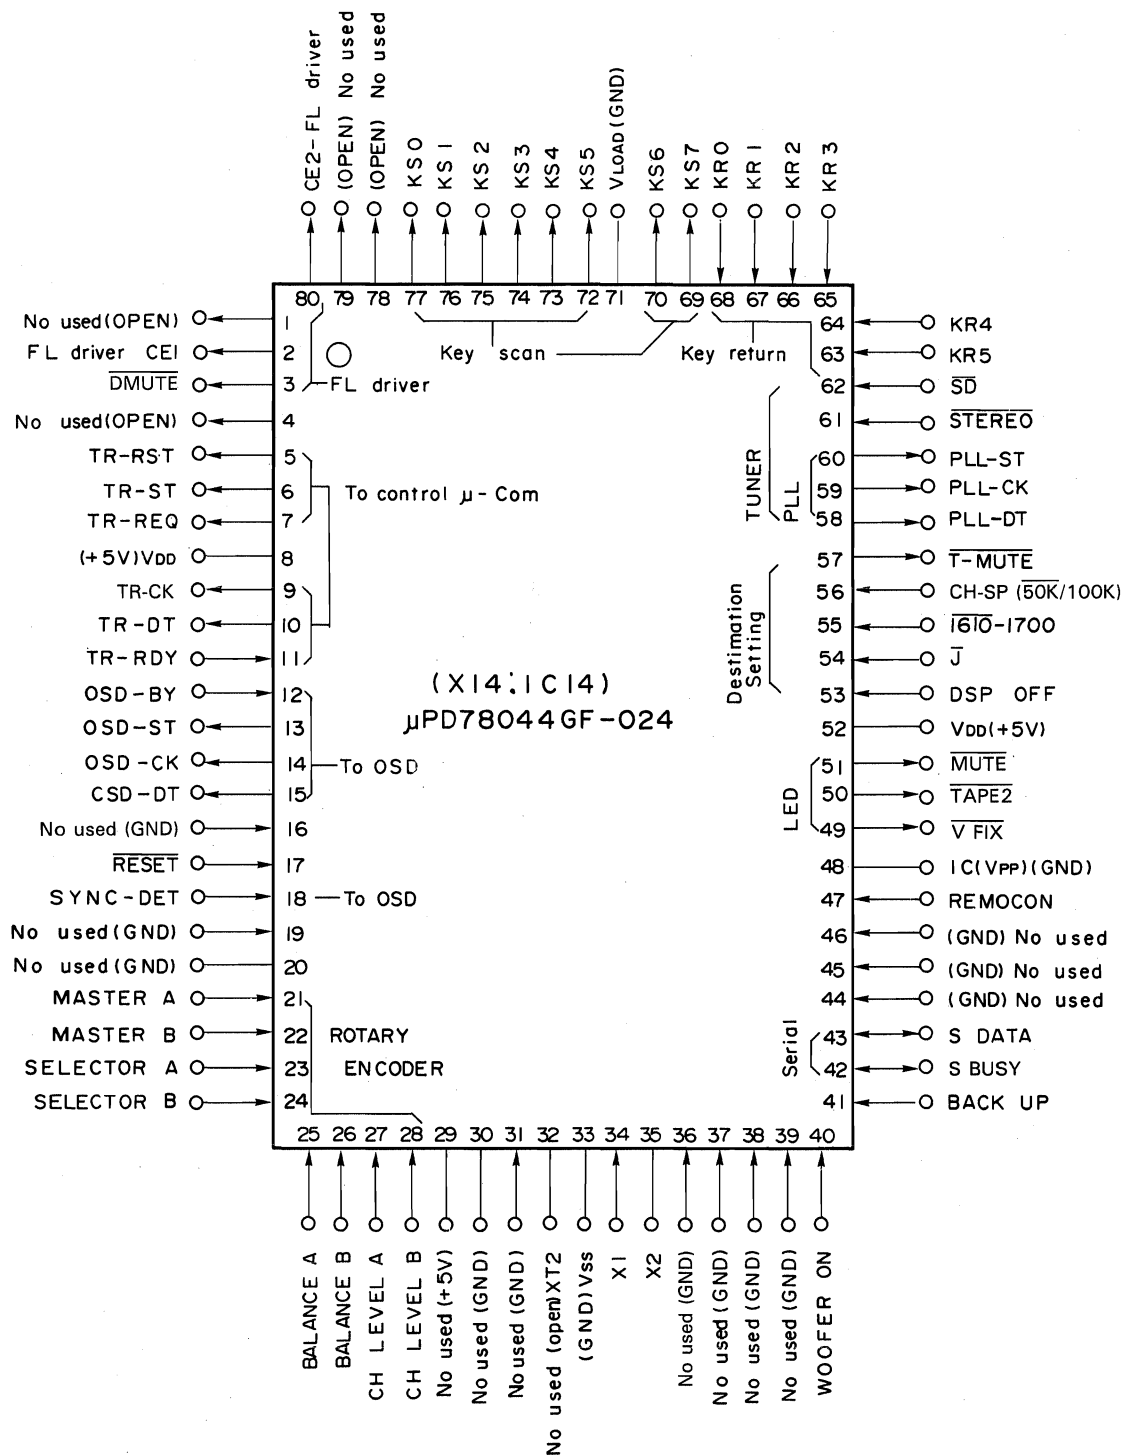

KC-X1

CIRCUIT DESCRIPTION

2-6. Pin description

Pin No.	Name	I/O	Description
1	—	O	(OPEN)
2	CE1	O	FL driver output CE1
3	DMUTE	O	DATA MUTE
4	—	O	(OPEN)
5	TR RST	O	Control microprocessor communication RESET
6	TR ST	O	Control microprocessor communication START
7	TR REQ	O	Control microprocessor communication REQ
8	VDD	—	(+5 V)
9	TR CK	O	Control microprocessor communication CLOCK
10	TR DT	O	Control microprocessor communication DATA
11	TR RDY	I	Control microprocessor communication READY
12	OSD BY	I	OSD IC input BUSY
13	OSD ST	O	OSD IC output STROBE
14	OSD CK	O	FL driver IC and OSD IC output CLOCK
15	OSD DT	O	FL driver IC and OSD IC output DATA
16	—	I	(GND)
17	RESET	I	Reset pin
18	SYNC DET	I	OSD video selection input. Internal/External
19	—	I	(GND)
20	—	—	(GND)
21	MASTER A	I	Encoder input MASTER A
22	MASTER B	I	Encoder input MASTER B
23	SELECTOR A	I	Encoder input SELECTOR A
24	SELECTOR B	I	Encoder input SELECTOR B
25	BALANCE A	I	Encoder input BALANCE A
26	BALANCE B	I	Encoder input BALANCE B
27	CH LEVEL A	I	Encoder input CH LEVEL A
28	CH LEVEL B	I	Encoder input CH LEVEL B
29	—	—	A/D analog power supply (+5 V)
30	—	—	A/D constant voltage input (GND)
31	—	I	(GND)
32	—	—	(Open)
33	VSS	—	(GND)
34	X1	I	Oscillator pin
35	X2	—	Oscillator pin
36~39	—	I	(GND)

CIRCUIT DESCRIPTION


Pin No.	Name	I/O	Description
40	WOOFER ON	I	Sub woofer ON/OFF
41	BACKUP	I	Back up input
42	SBUSY	I/O	Serial BUSY
43	SDATA	I/O	Serial DATA
44~46	—	I	(GND)
47	REMOCON	I	Remote control signal input
48	—	—	(GND)
49	$\overline{V. FIX}$	O	V. FIX (LED)
50	$\overline{TAPE 2}$	O	TAPE 2 (LED)
51	\overline{MUTE}	O	MUTE (LED)
52	VDD	—	+5 V
53	DSPOFF	I	$\overline{DSP ON MODE/DSP OFF MODE}$
54	\overline{J}	I	Destination J selection
55	$\overline{1610/1700}$	I	AM SHORT/LONG selection
56	CH SP	I	CH. SPACE 50 kHz/100 kHz
57	$\overline{T MUTE}$	O	TUNER MUTE
58	PLL DT	O	PLL IC DATA
59	PLL CK	O	PLL IC CLOCK
60	PLL ST	O	PLL IC STROBE
61	\overline{STEREO}	I	STEREO detection signal input
62	\overline{SD}	I	SD input
63~68	KR5~0	I	Key return 5~Key return 0
69, 70	KS7, 6	O	Key scan 7, 6
71	VLOAD	—	(GND)
72~77	KS5~0	O	Key scan 5~Key scan 0
78, 79	—	O	(OPEN)
80	CE2	O	FL driver CE2

KC-X1

CIRCUIT DESCRIPTION

3. Control microprocessor: μ PD78043GF-020 (X14: IC18)

3-1. Pin connection

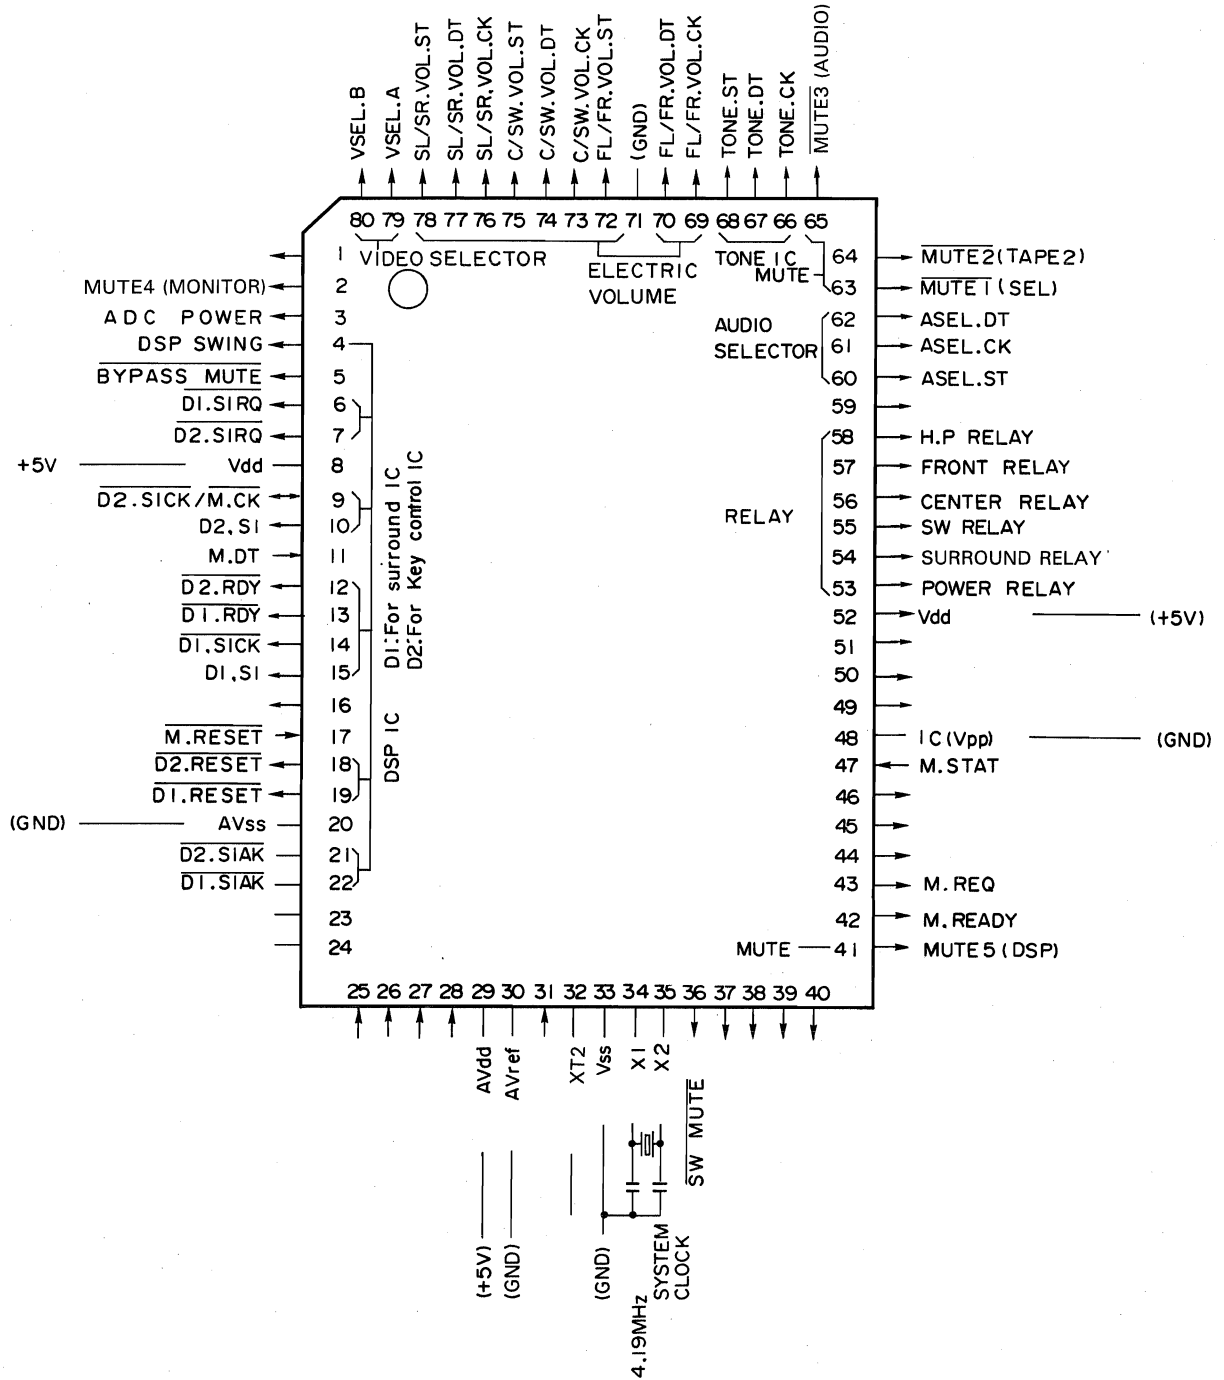

CIRCUIT DESCRIPTION

3-2. Pin description

Pin No.	Name	I/O	Description
1	—	O (I)	No used
2	MUTE 4 (MONITOR)	O	MUTE 4 (Monitor (VIDEO) mute) Low: MUTE OFF, High: MUTE ON
3	ADC POWER	O	Power supply to A/D convertor IC (CS5339-KP) Low: Power OFF, High: Power ON
4	DSP SWING	O	Oscillation to DSP IC (LC83016E) Low: Oscillation, High: No oscillation
5	BYPASS MUTE	O	Surround bypass mute Low: BYPASS, High: SURROUND
6	$\overline{D1. SIRQ}$	O	DSP1 (LC83016E) → SIRQ (Request pin)
7	$\overline{D2. SIRQ}$	O	DSP2 (LC83016E) → SIRQ (Request pin)
8	Vdd		+5 V
9	$\overline{D2. SICK}$	I	DSP2 (LC83016E) → SICK (Clock pin)
	M. CK	O	Main μ -com (μ PD78044) → Communication clock pin
10	D2. SI	O	DSP2 (LC83016E) → SI (Data pin)
11	M. DT	I	Main μ -com (μ PD78044) → Communication data pin
12	$\overline{D2. RDY}$	O	DSP2 (LC83016E) → READY (Ready pin)
13	$\overline{D1. RDY}$	O	DSP1 (LC83016E) → READY (Ready pin)
14	$\overline{D1. SICK}$	O	DSP1 (LC83016E) → SICK (Clock pin)
15	D1. SI	O	DSP1 (LC83016E) → SI (Data pin)
16	—	O (I)	No used
17	$\overline{M. RESET}$	I	Main μ -com (μ PD78044) → Communication reset pin
18	$\overline{D2. RESET}$	O	DSP2 (LC83016E) → RES (Reset pin)
19	$\overline{D1. RESET}$	O	DSP1 (LC83016E) → RES (Reset pin)
20	AVss		GND
21	$\overline{D2. SIAK}$	I	DSP2 (LC83016E) → SIAK (Acknowledge pin)
22	$\overline{D1. SIAK}$	I	DSP1 (LC83016E) → SIAK (Acknowledge pin)
23~28	—	I	No used
29	AVdd		+5 V
30	AVref		GND
31	—	I	No used
32	XT2		No used
33	Vss		GND
34	X1	I	Oscillator 4.19 MHz
35	X2		Oscillator 4.19 MHz
36~40	—	O	No used
41	MUTE 5 (DSP)	O	MUTE 5 (DSP mute) Low: MUTE OFF, High: MUTE ON
42	M. READY	O	Main μ -com (μ PD78044) → Communication READY pin
43	M. REQ	I	Main μ -com (μ PD78044) → Communication REQUEST pin
44~46	—	O (I)	No used
47	M. START	I	Main μ -com (μ PD78044) → Communication START pin

KC-X1


CIRCUIT DESCRIPTION

Pin No.	Name	I/O	Description
48	IC (Vpp)		GND
49~51	—	O (I)	No used
52	Vdd		+ 5 V
53	POWER RELAY	O	Power relay
54	SURROUND RELAY	O	Surround (Rear L/R ch) speaker relay
55	SW RELAY	O	Sub woofer speaker relay
56	CENTER RELAY	O	Center speaker relay
57	FRONT RELAY	O	Front (L/R ch) speaker relay
58	H.P. RELAY	O	Headphone relay
59	—	O (I)	No used
60	ASEL. ST	O	Audio selector IC (NJU7311L/TC9163N/TC9164N) → ST (Strobe pin)
61	ASEL. CK	O	Audio selector IC (NJU7311L/TC9163N/TC9164N) → CK (Clock pin)
62	ASEL. DT	O	Audio selector IC (NJU7311L/TC9163N/TC9164N) → DATA (Data pin)
63	MUTE 1 (SELECTOR)	O	MUTE 1 (Selector selection mute) Low: MUTE ON, High: MUTE OFF
64	MUTE 2 (TAPE 2)	O	MUTE 2 (TAPE 2 selection mute) Low: MUTE ON, High: MUTE OFF
65	MUTE 3 (AUDIO)	O	MUTE 3 (Output mute) Low: MUTE ON, High, MUTE OFF
66	TONE. CK	O	Electric tone IC (TC9184P) → CK (Clock pin)
67	TONE. DT	O	Electric tone IC (TC9184P) → DATA (Data pin)
68	TONE. ST	O	Electric tone IC (TC9184P) → STB (Strobe pin)
69	FL/FR VOL. CK	O	FL/FR ch Electric volume IC (TC9213P) → CK (Clock pin)
70	FL/FR VOL. DT	O	FL/FR ch Electric volume IC (TC9213P) → DATA (Data pin)
71	Vload		GND
72	FL/FR VOL. ST	O	FL/FR ch Electric volume IC (TC9213P) → STB (Strobe pin)
73	C/SW VOL. CK	O	CENTER/SUBWOOFER ch Electric volume IC (TC9213P) → CK
74	C/SW VOL. DT	O	CENTER/SUBWOOFER ch Electric volume IC (TC9213P) → DATA
75	C/SW VOL. ST	O	CENTER/SUBWOOFER ch Electric volume IC (TC9213P) → STB
76	SL/SR VOL. CK	O	LS/RS ch Electric volume IC (TC9213P) → CK (Clock pin)
77	SL/SR VOL. DT	O	LS/RS ch Electric volume IC (TC9213P) → DATA (Data pin)
78	SL/SR VOL. ST	O	LS/RS ch Electric volume IC (TC9213P) → STB (Strobe pin)
79	VSEL. A	O	Video selector IC (MC74HC4052N/MC74HC4053N) → A
80	VSEL. B	O	Video selector IC (MC74HC4052N/MC74HC4053N) → B


CIRCUIT DESCRIPTION

4. Display control driver: LC75711E (X14: IC15, 16)

4-1. Pin connection

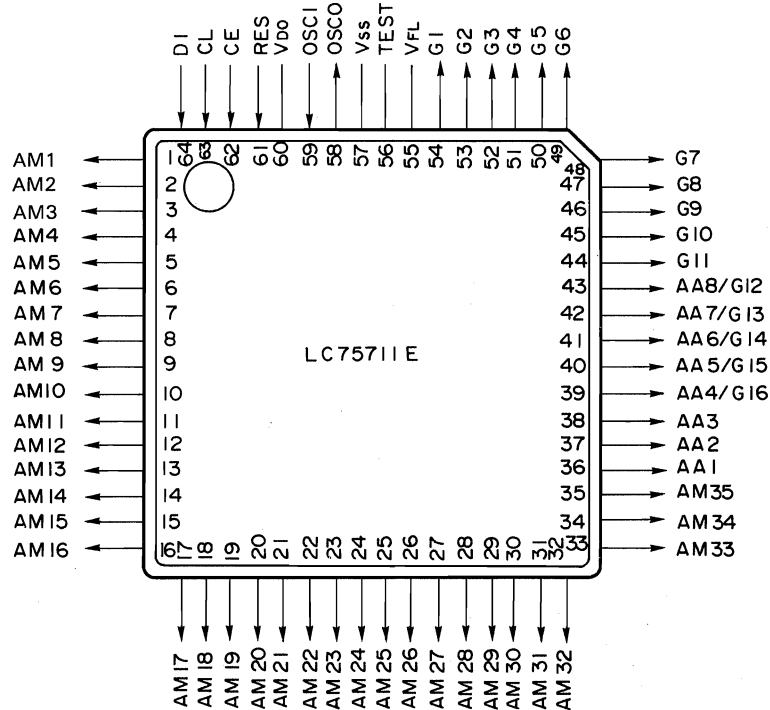

4-2. Block diagram

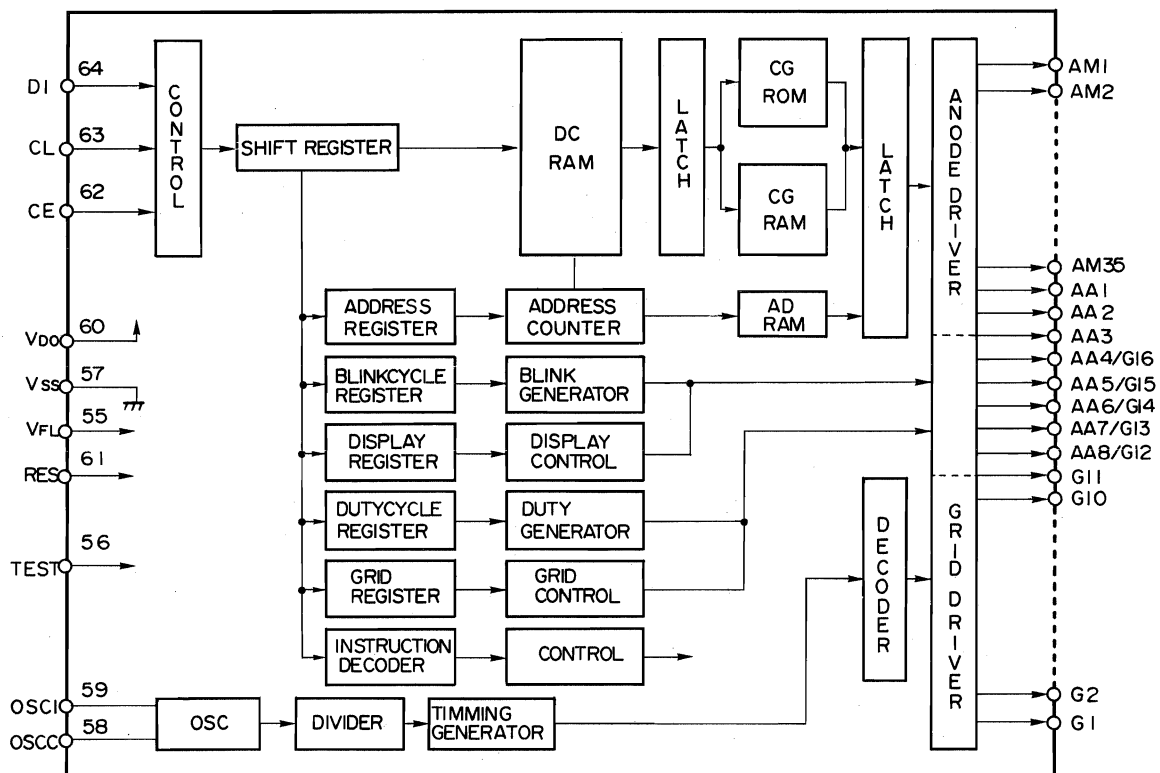


KC-X1

CIRCUIT DESCRIPTION

4-3. Pin function

Pin No.	Pin name	Circuit design	Function
1 ~ 35 36 ~ 38	AM1 ~ AM35 AA1 ~ AA3		Anode output terminals With built-in pull-down resistors.
39 ~ 43	AA4/G16 AA5/G15 AA6/G14 AA7/G13 AA8/G12		Anode/grid output terminals These terminals become the grid output terminals when the number of display columns selected with the "display column specification" instruction is between 12 and 16 columns. With built-in pull-down resistors.
44 ~ 54	G1 ~ G11		Grid output terminals With built-in pull-down resistors.
55	VFL		Driver circuitry power terminal
56	TEST		LSI test terminal Always connect to Vss for use.
57	Vss		Logic circuitry power terminal, GND
58, 59	OSC1 OSC0		External C and R connection terminals for oscillator
60	VDD		Logic circuitry power terminal, +5 V typ
61	$\overline{\text{RES}}$		System reset input terminal
62 ~ 64	DI CL CE		Serial data transfer terminals DI : Transfer data CL : Sync clock CE : Chip enable

4-4. Grid timing chart

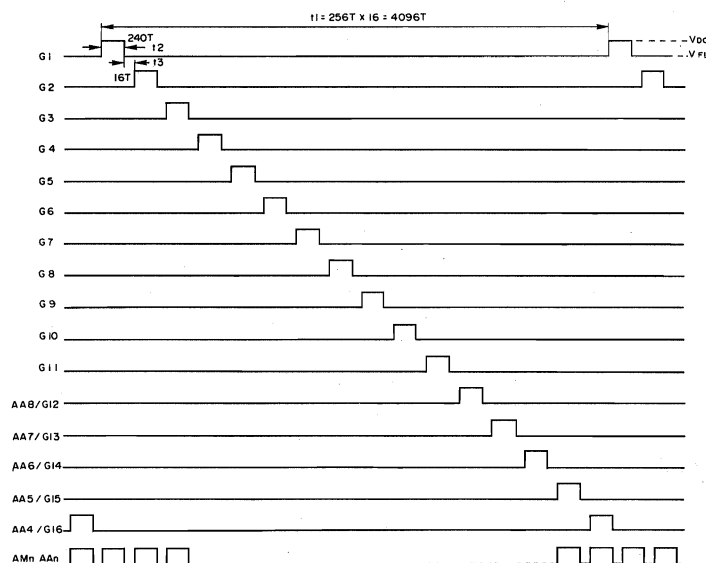

t1 : Frame cycle
t2 : Display timing
t3 : Blanking time

$T = \frac{3}{f_{osc}}$
(fosc: Generating frequency)

CIRCUIT DESCRIPTION


4-5. Data input ADDRESS

- The serial control data consists of 8 address bits and 24 bits of instruction code. The address code is used as the chip select data when the device is connected to the common bus line, and the code configuration is as shown below.

Address							
A0	A1	A2	A3	A4	A5	A6	A7
1	1	1	0	0	1	1	0

Note) Instruction "CGRAM data write" requires 56 bits.

- DI, CL and CE timing

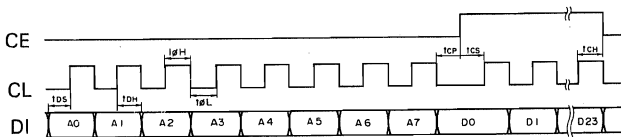

The data is input internally at the positive-going edge of CL, and latched at the negative-going edge of CE. When an instruction is sent from the microprocessor, the period after having sent an instruction until the start of the next instruction shall be longer than the instruction execution time.

CIRCUIT DESCRIPTION

5. Control of selector IC and speaker relay

5-1. Audio selector

Selector IC name	(X08: IC35) NJU7311L							(X13: IC2) TC9164N①	
	2	3	5	6	8	9	11	10	11
Pin No.	27	26	24	23	20	21	18	19	18
Selector pin name	THX	THX	THX	THX	THX	THX	SURROUND	TONE	TONE
Surround mode	ON	OFF	ON	OFF	ON	OFF	UND	OFF	ON
BYPASS		○		○		○		▲	△
PROLOGIC		○		○		○		○	○
3 STEREO		○		○		○		○	○
THX CINEMA	○		○		○			○	○
DSP LOGIC		○		○		○		○	○
MONO		○		○		○		○	○

Selector IC name	(X13: IC1) TC9163N								
	Lch	27	26	25	23	22	21	19	18
Pin No.	Rch	2	3	4	6	7	8	10	11
Selector pin name		TUNER	PHONO	CINEMA	TAPE 1	VIDEO 1	VIDEO 2	VIDEO 3	VIDEO 4
Selector position		R	O		1	0	0	0	0
TUNER		○			○				
TAPE 1						○			
VIDEO 1							○		
VIDEO 2								○	
VIDEO 3									○
VIDEO 4									
CD				○					
PHONO			○						

Selector IC name	(X13: IC2) TC9164N ②						
	Lch	2	3	4	5	7	8
Pin No.	Rch	27	26	25	24	22	21
Selector pin name		VIDEO 3	VIDEO 2	VIDEO 1	TAPE 1	SURROUND	TAPE 2
Selector position		0	0	0	1	C	2
TUNER		○	○	○	○	◆	◇
TAPE 1		○	○	○		◆	◇
VIDEO 1		○	○		○	◆	◇
VIDEO 2		○		○	○	◆	◇
VIDEO 3			○	○	○	◆	◇
VIDEO 4		○	○	○	○	◆	◇
CD		○	○	○	○	◆	◇
PHONO		○	○	○	○	◆	◇

○: ON ◇: With TAPE 2 ON △: With TONE CONTROL ON
 Blank; OFF ◆: With TAPE 2 OFF ▲: With TONE CONTROL OFF

5-2. Video selector

Selector IC name	(X14: IC1, IC2) MC74HC4052N			(X14: IC8, IC9) MC74HC4053N				
	Control pin	INHIBIT (6pin)	B (9pin)	A (10pin)	INHIBIT (6pin)	C (9pin)	B (10pin)	A (11pin)
VIDEO 1		L	L	L	L	L	L	L
VIDEO 2		L	L	H	L	H	H	H
VIDEO 3		L	H	L	X			
VIDEO 4		L	H	H				

H: High L: Low

5-3. Line out relay

Line out relay	Surround mode	THX		PROLOGIC		3 STEREO		DSPLOGIC	MONO		
		N	W	P	N	W	P	N	W	Normally	PP
Front (L/Rch) relay (X13: K1)		○	○	○	○	○	○	○		×	○
Center (Cch) relay (X13: K2)		○	○	×	○	○	×	○		○	×
Rear (LS/RSch) relay (X13: K4)		○	○	○	○	○	×	×	○	×	×
Headphone relay (X13: K5)		○	○	○	○	○	○	○	○	○	○

○: ON ×: OFF


N ; "NORMAL" mode
 W ; "WIDEBAND" mode
 P ; "PHANTOM" mode
 PP ; "PHANTOM" mode (THX and PROLOGIC mode ON).

ADJUSTMENT



ADJUSTMENT

No.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	TUNER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION (X05-) SELECTOR: FM							
1	DISCRIMINATOR	(A) 98.0MHz 1kHz, ±175kHz dev 60dBμ(ANT input)	Connect a DC voltmeter between TP3 and TP4. (X05-)	AUTO or MONO 98.0MHz	L4 (X05-)	0V	(a)
2	DISTORTION (MONO)	(C) 98.0MHz 1kHz, ±68.25kHz dev Selector:L or R Pilot:±6.75kHz dev 60dBμ(ANT input)	(B)	98.0MHz	L5 (X05-)	Minimum distortion	
3	VCO	(A) 98.0MHz 0 dev 100dBμ(ANT input)	Connect a frequency counter between TP5 and GND. (X05-)	AUTO 98.0MHz	VR3 (X05-)	19.00kHz	(b)
4	DISTORTION (STEREO)	(C) 98.0MHz 1kHz, ±68.25kHz dev Selector:L or R Pilot:±6.75kHz dev 60dBμ(ANT input)	(B)	98.0MHz	T1 (W02-)	Minimum distortion.(L or R)	
5	SEPARATION	(C) 98.0MHz Stereo signal 60dBμ(ANT input)	(B)	AUTO 98.0MHz	VR4 (X05-)	Minimum crosstalk	
6	TUNING LEVEL	(A) 98.0MHz 0dev 14dBμ(ANT input) 750	(B)	AUTO or MONO 98.0MHz	VR1 (X05-)	Adjust VR1 and stop at the point where ED1(TUNED) goes on.	
AM SECTION (X05-) SELECTOR: AM							
(1)	BAND EDGE (Low)	-	Connect a DC voltmeter between TP1(GND) and TP2. (X05-)	-	L9 (X05-)	1.5V	(c)
(2)	BAND EDGE (High)	-	Connect a DC voltmeter between TP1(GND) and TP2. (X05-)	-	TC2 (X05-)	8.0V	(c)
Repeat alignments (1) and (2) several times.							
(3)	RF ALIGNMENT (1)	(D) 600kHz 20dBμ(ANT input)	(B)	-	L8 (X05-)	Maximum amplitude and symmetry of the oscilloscope display.	
(4)	RF ALIGNMENT (2)	(D) 1400kHz 20dBμ(ANT input)	(B)	-	TC1 (X05-)	Maximum amplitude and symmetry of the oscilloscope display.	
Repeat alignments (3) and (4) several times.							
(5)	IF TRANSFORMER	(D) 1000kHz 20dBμ(ANT input)	(B)	-	L10 (X05-)	Maximum amplitude and symmetry of the oscilloscope display.	
(6)	TUNING LEVEL	(D) 1000kHz 36dBμ(ANT input)	(B)	-	VR2 (X05-)	Adjust VR2 and stop at the point where ED1(TUNED) goes on.	

System connections

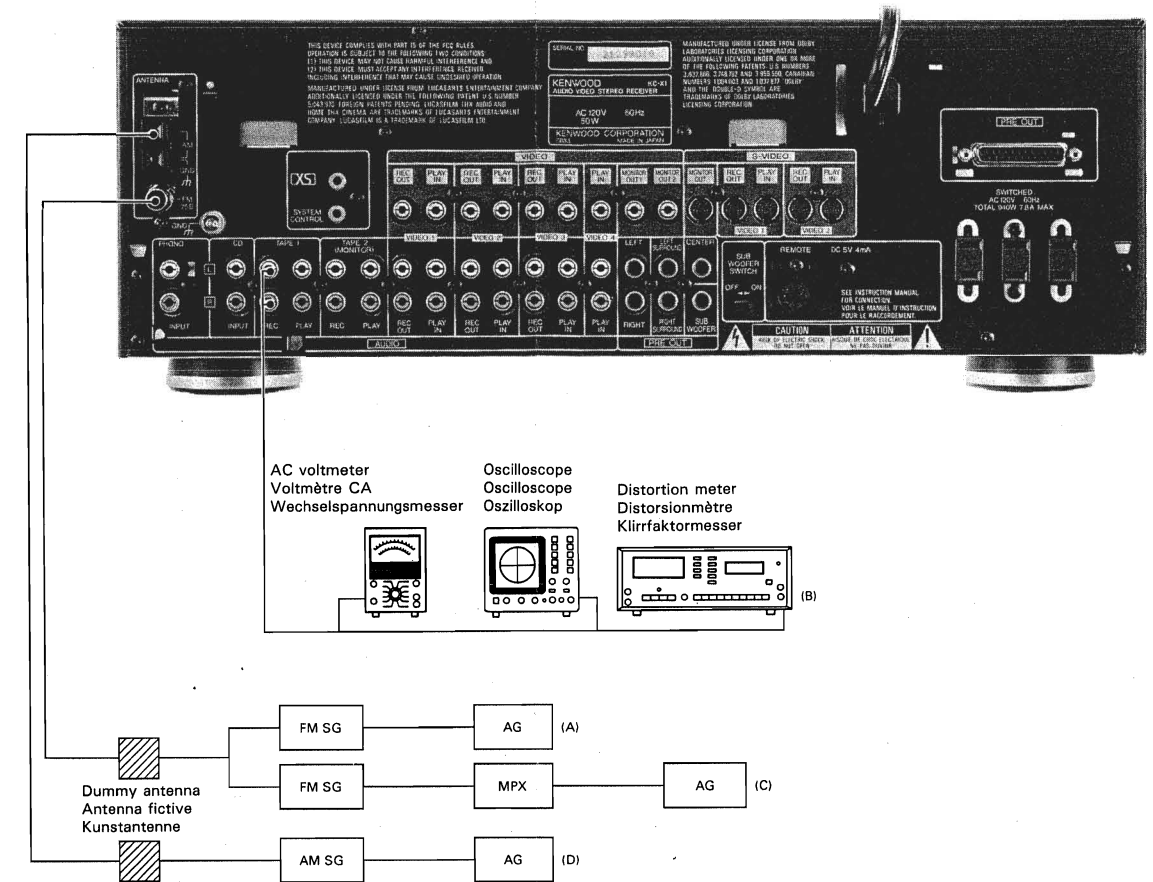



P.C. BOARD (Component side view)

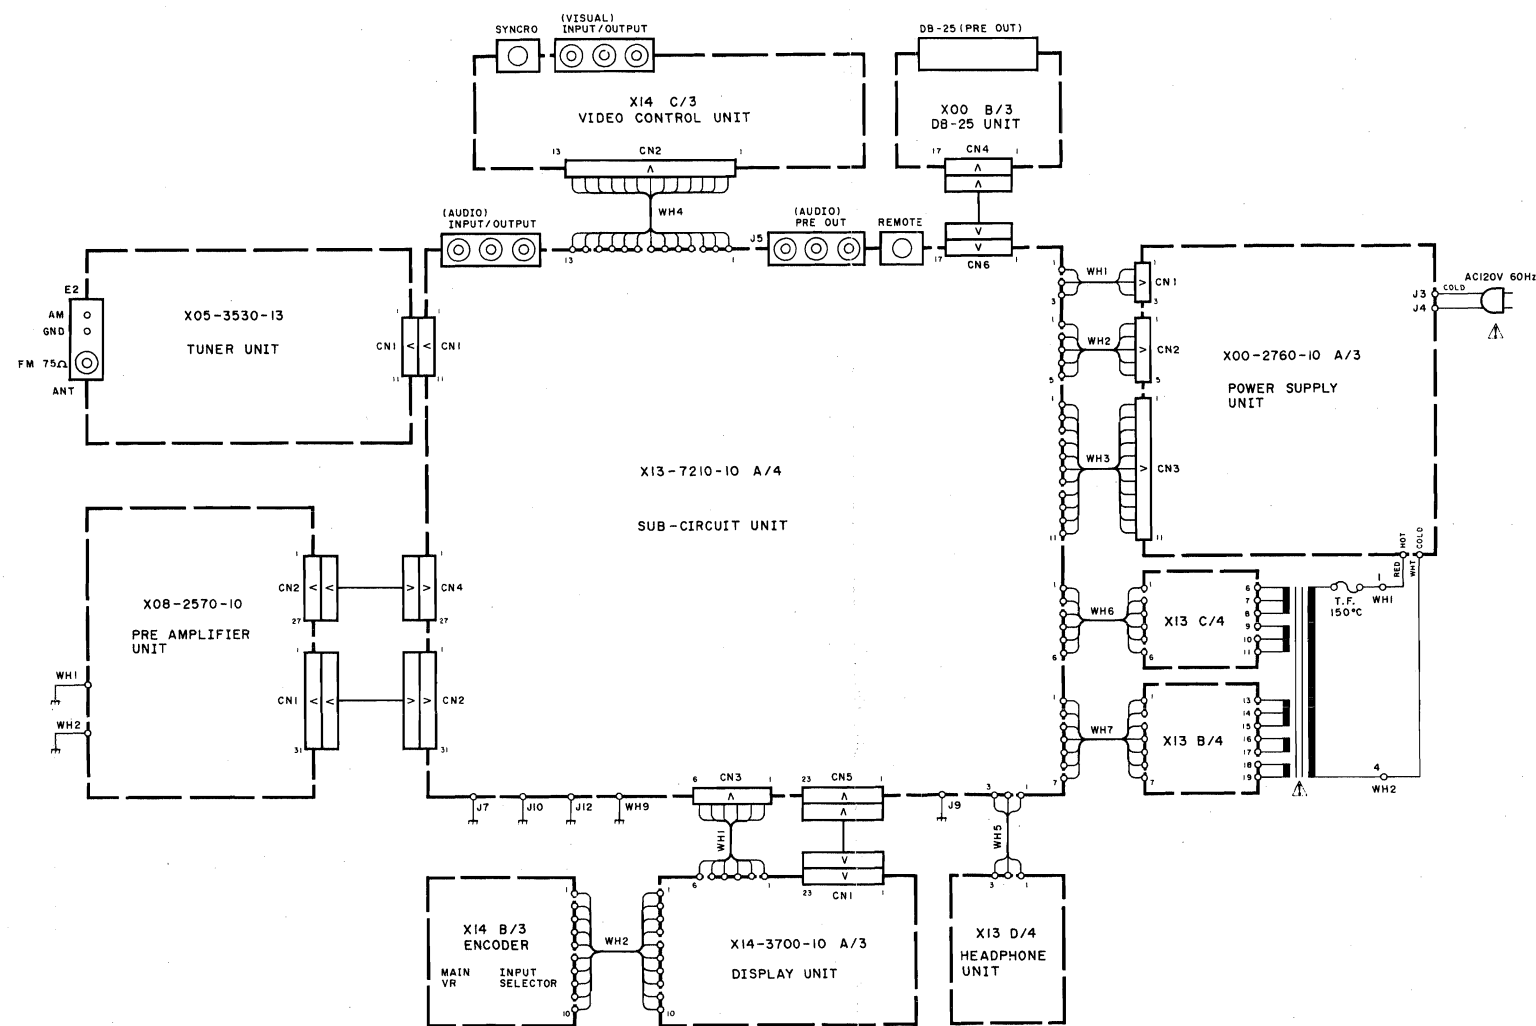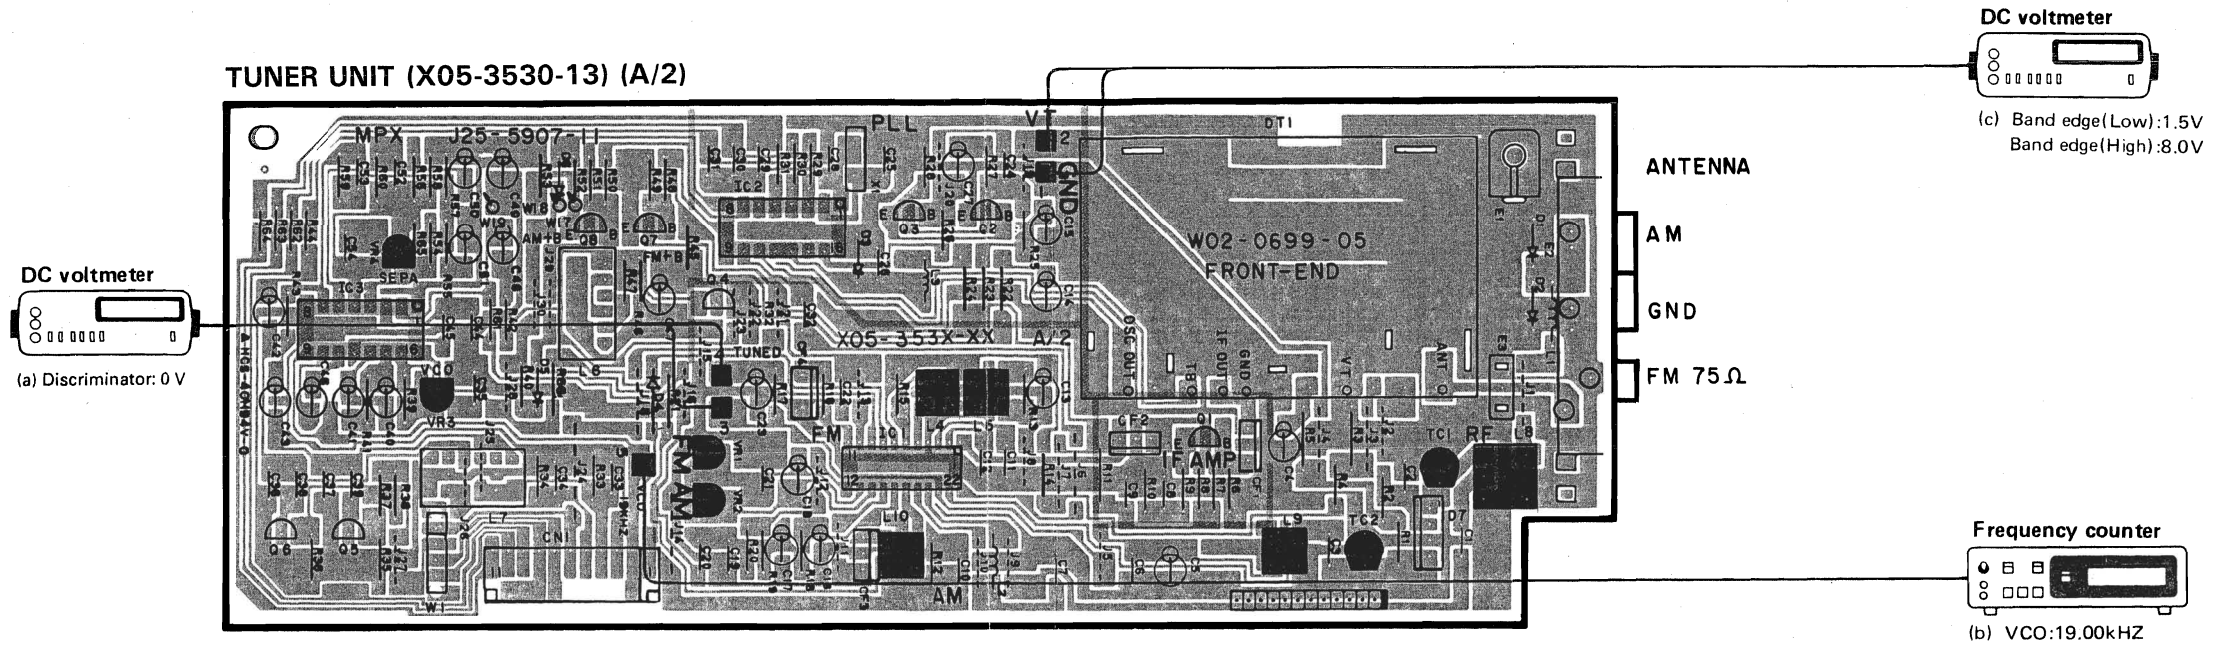

Refer to the schematic diagram for the values of resistors and capacitors.

P.C. BOARD (Component side view)

SUB-CIRCUIT UNIT (X13-7210-10) (A/4)

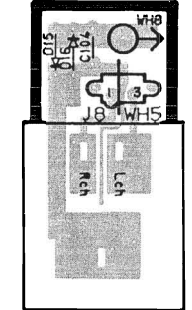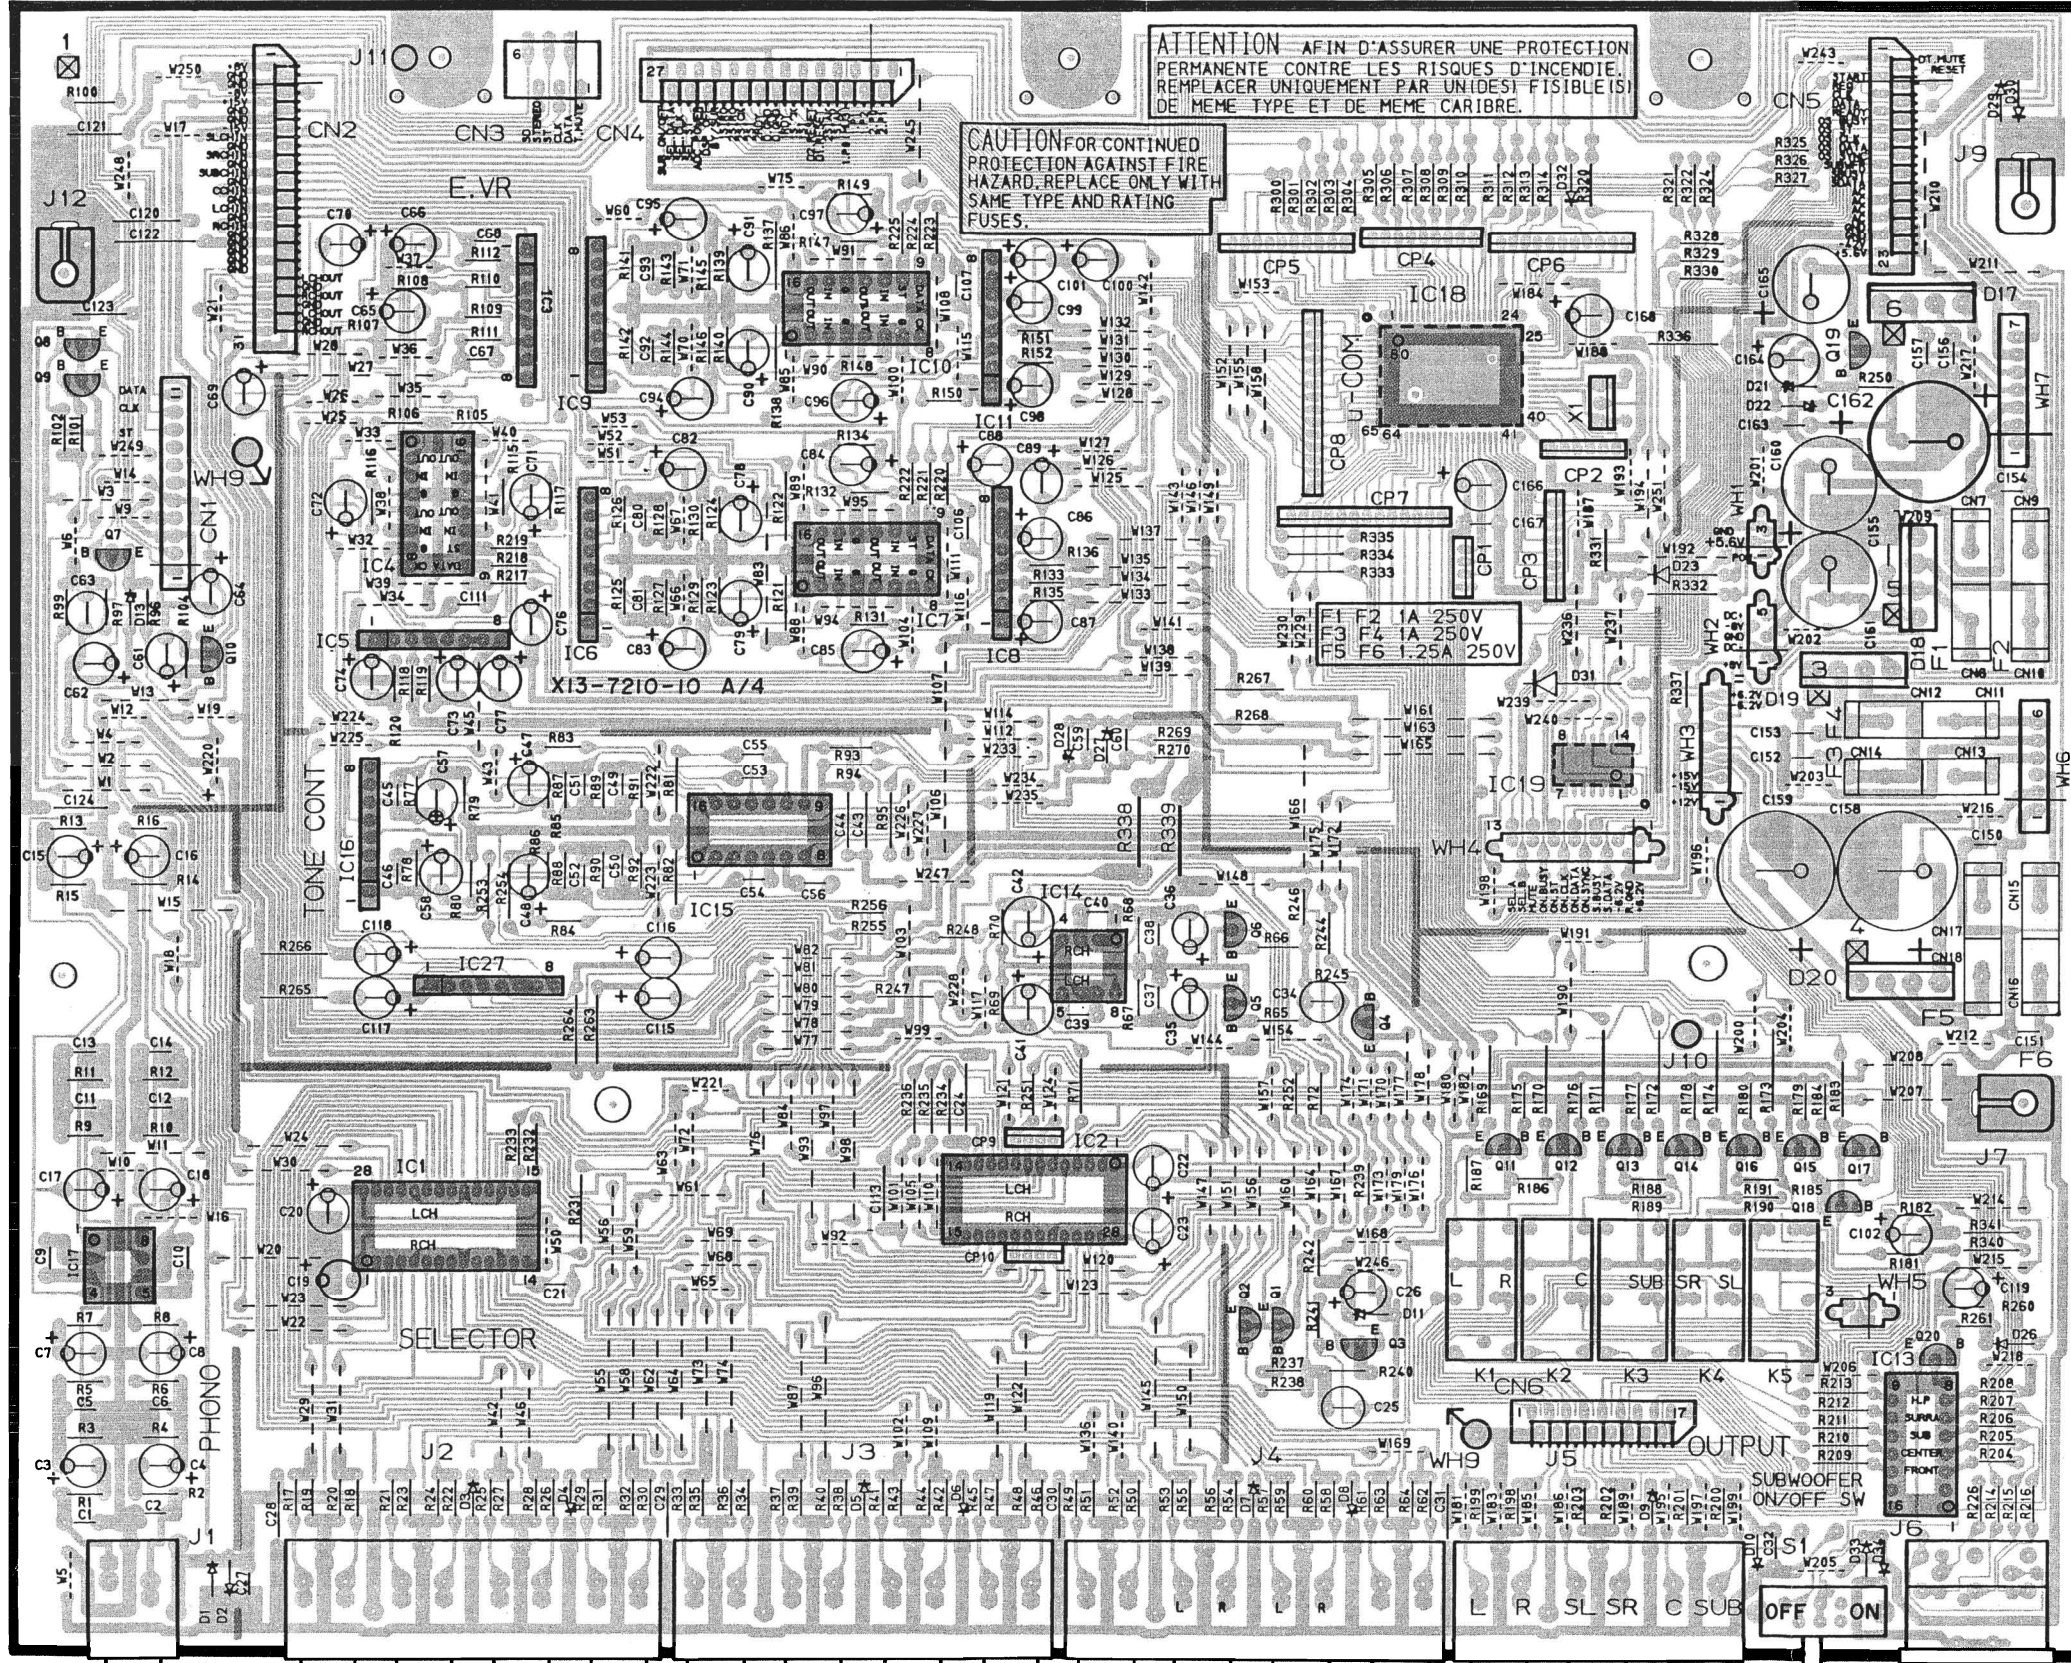


PHONES
SUB-CIRCUIT UNIT
(X13-7210-10) (D/4)

PHONO CD REC TAPE1 REC TAPE2 OUT IN VIDEO1 VIDEO2 VIDEO3 VIDEO 4 LEFT SURROUND CENTER SUB WOOFER SUBWOOFER ON/OFF SW OFF ON REMOTE

Refer to the schematic diagram for the values of resistors and capacitors.

P.C. BOARD (Component side view)

PREAMPLIFIER UNIT (X08-2570-10)

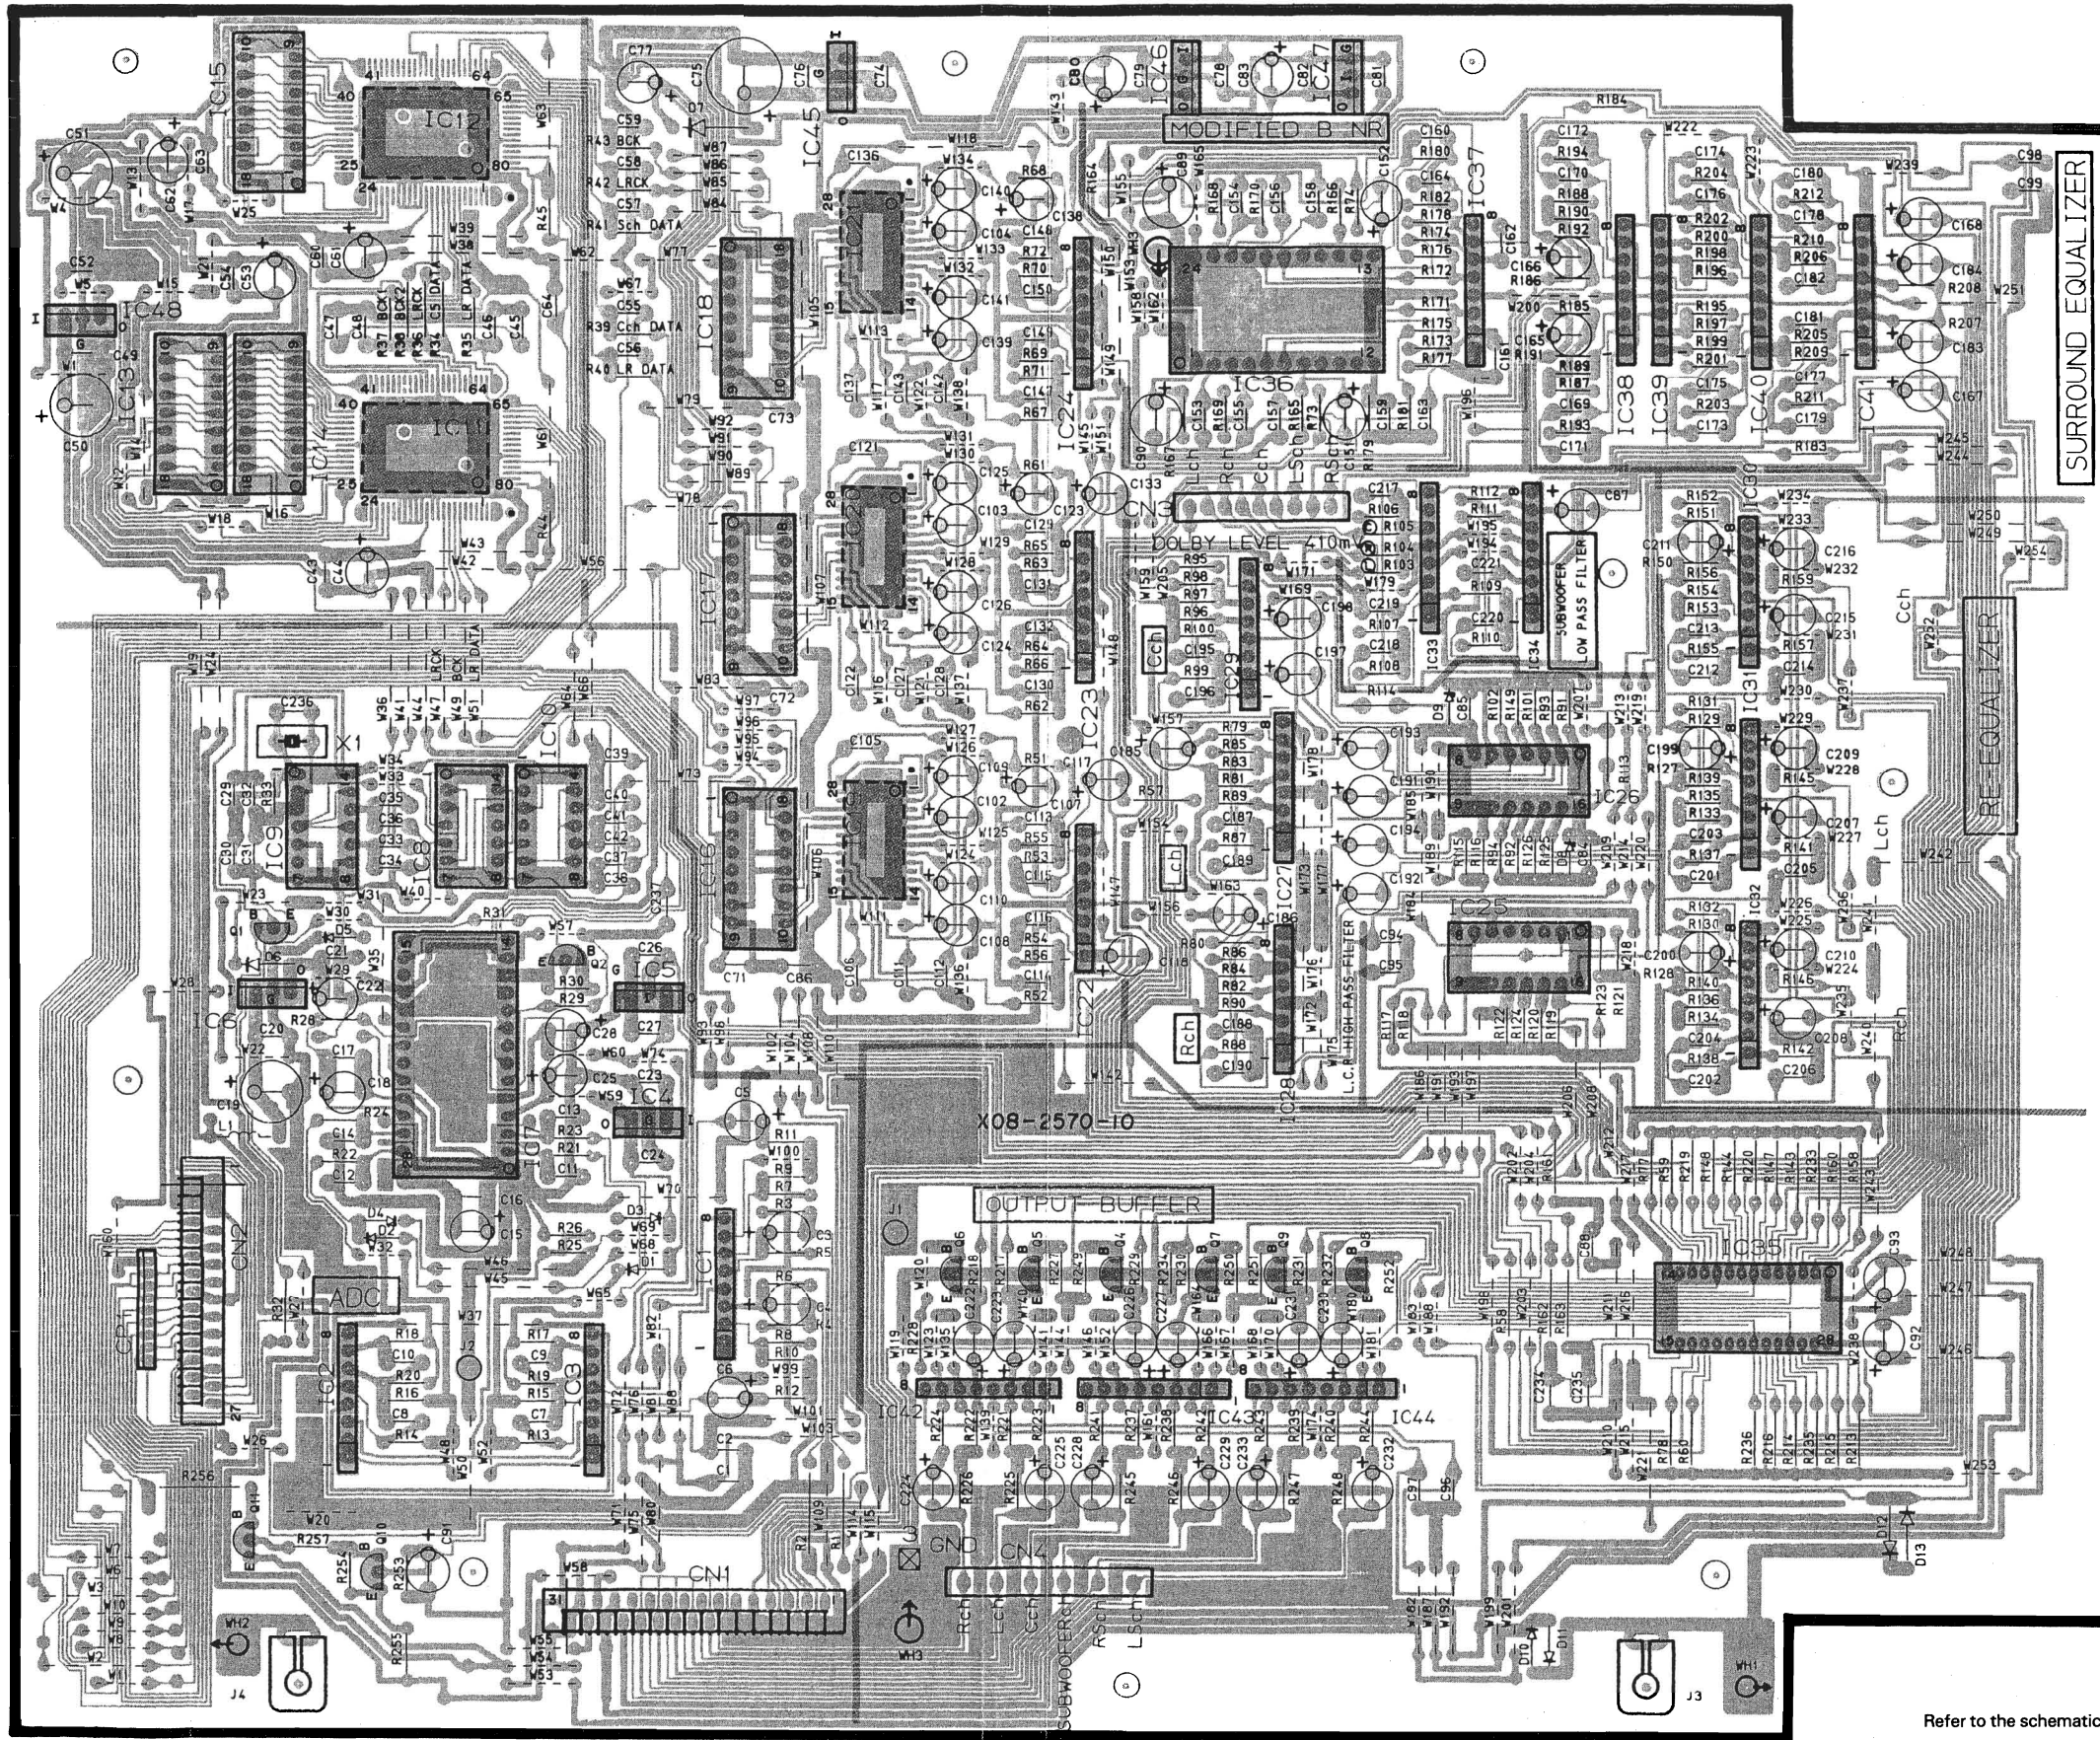

Refer to the schematic diagram for the values of resistors and capacitors.

1

2

3

4



5

6




7

P.C. BOARD (Component side view)

DISPLAY UNIT (X14-3700-10) (C/3)

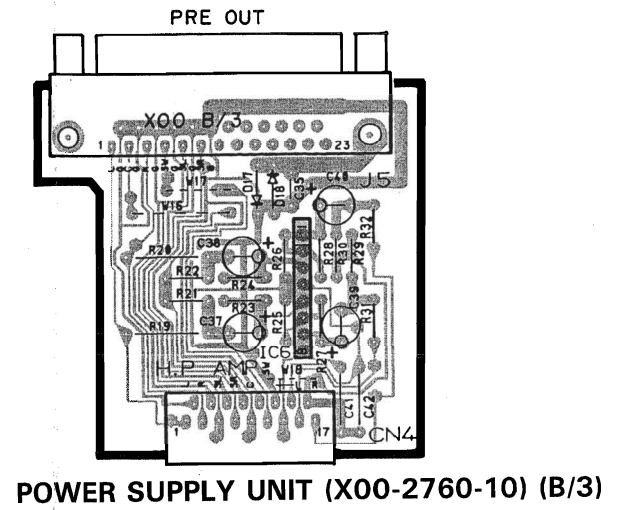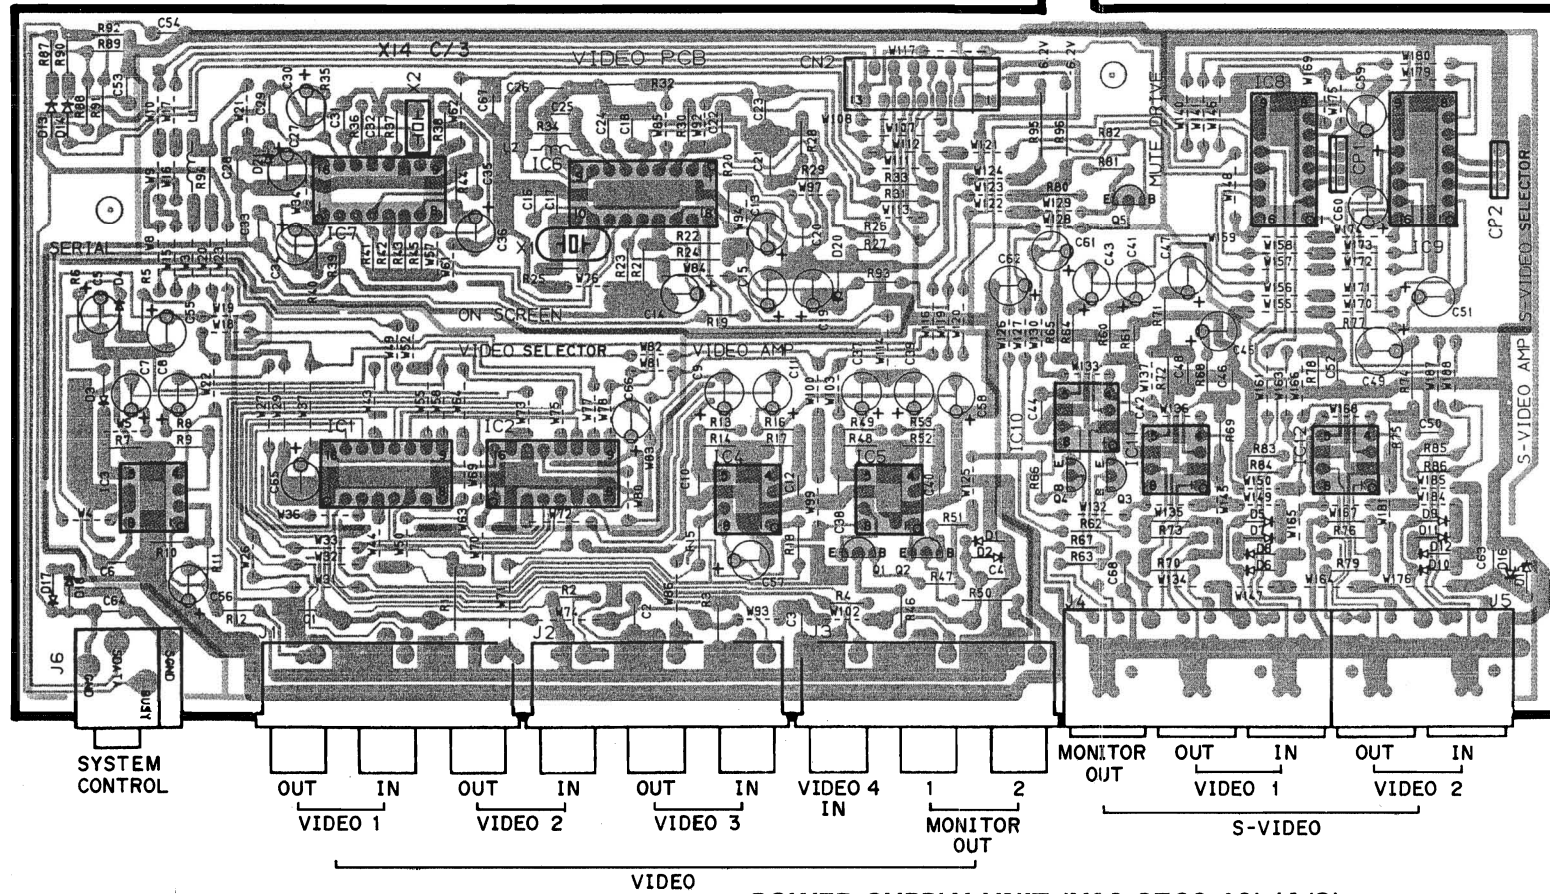



POWER SUPPLY UNIT (X00-2760-10) (A/3)

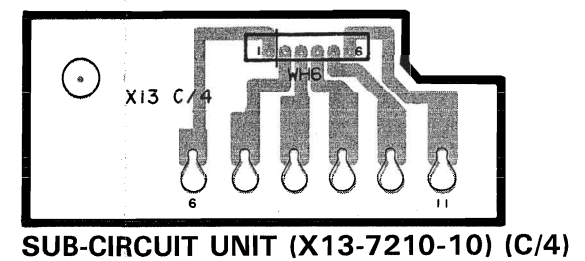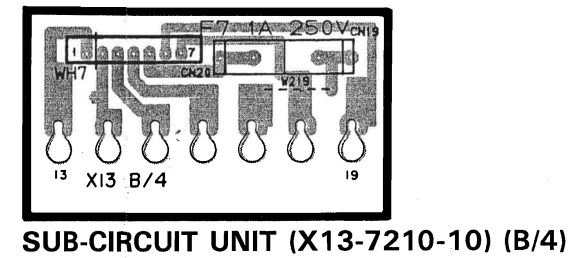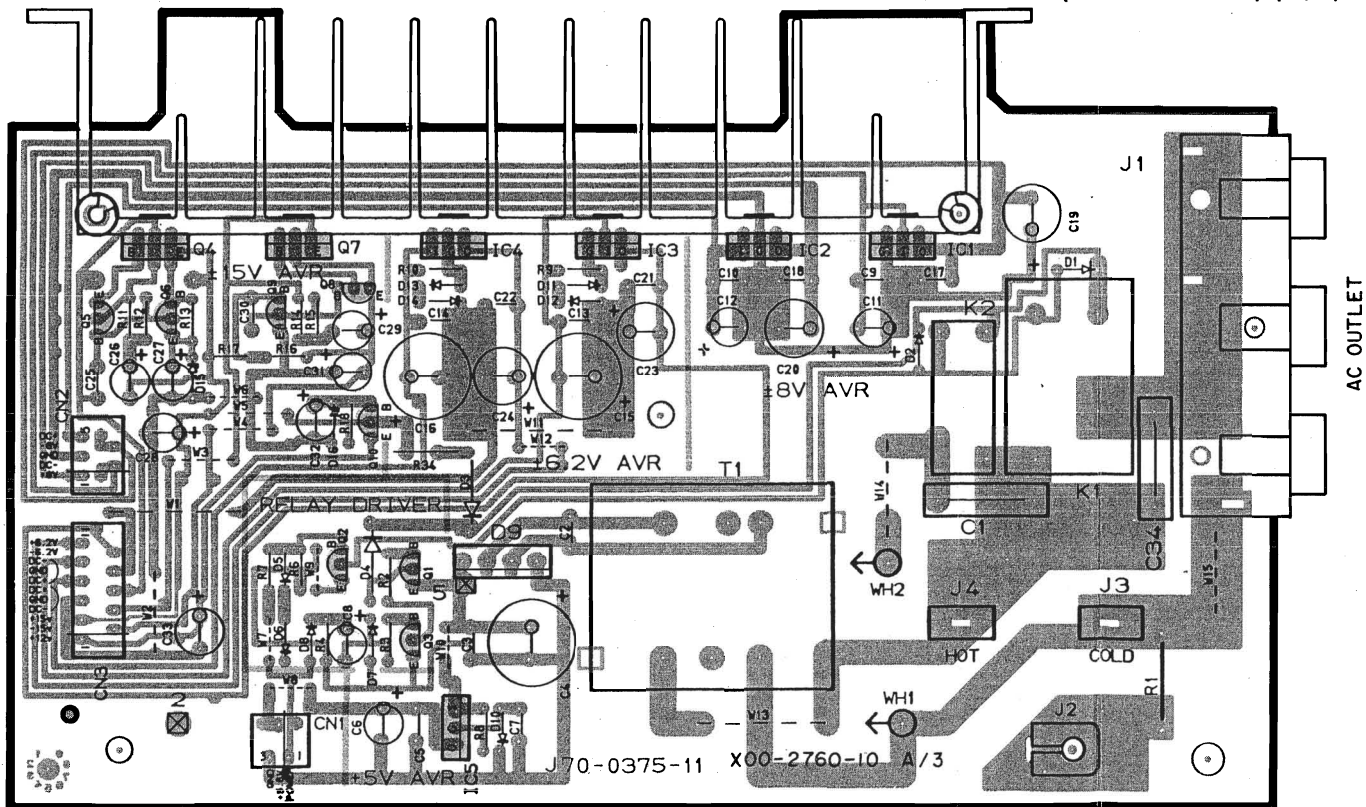

Refer to the schematic diagram for the values of resistors and capacitors.

P.C. BOARD (Component side view)


DISPLAY UNIT (X14-3700-10) (A/3)

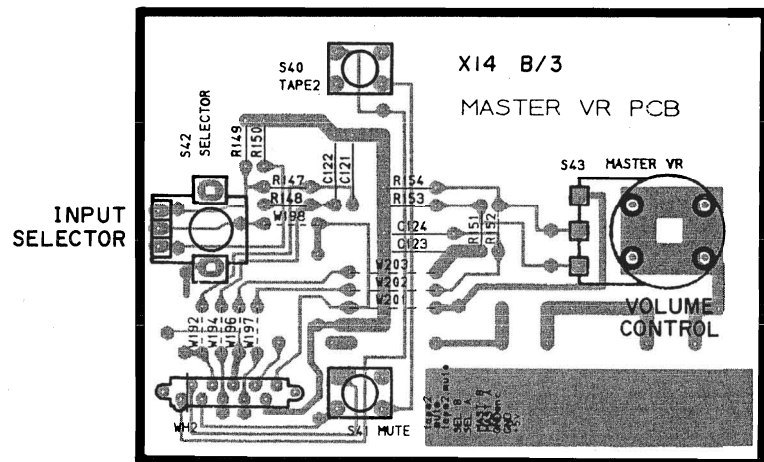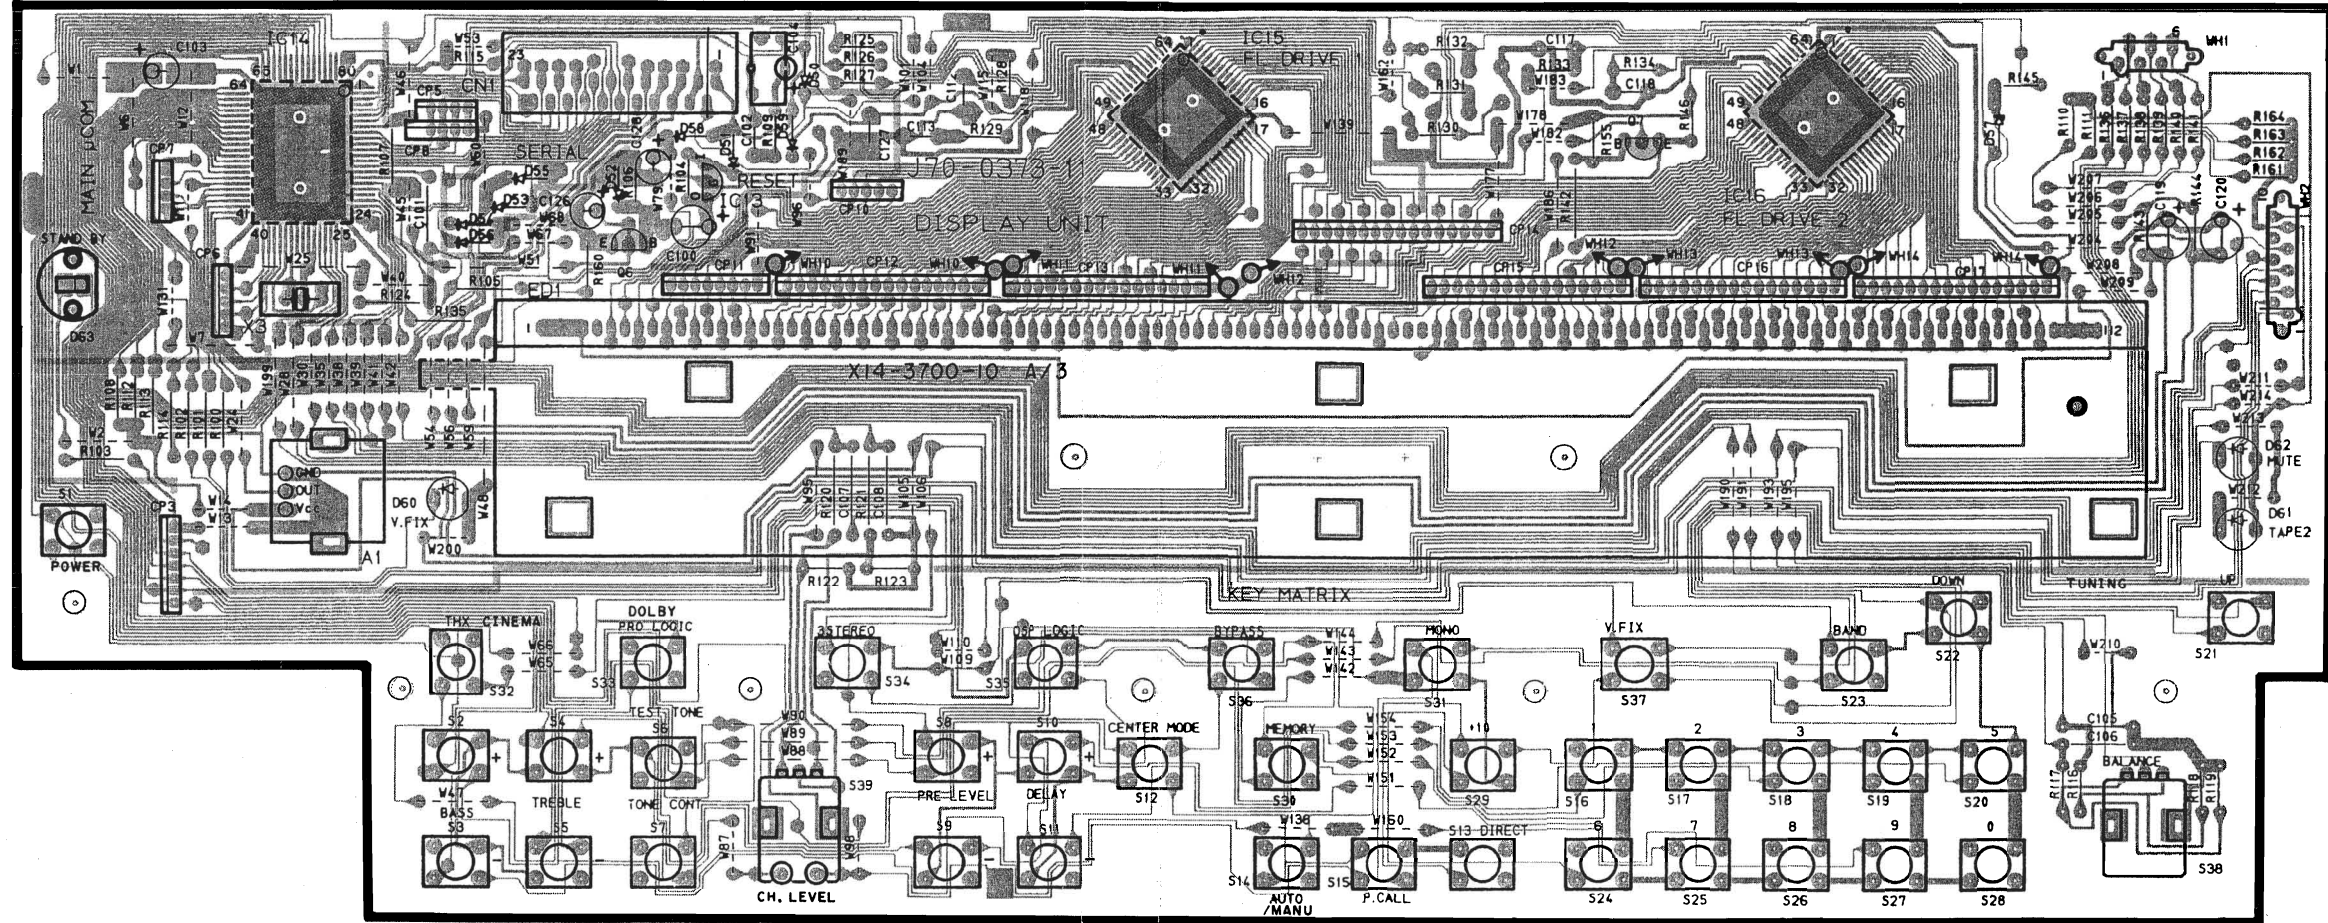

DISPLAY UNIT (X14-3700-10) (B/3)

Refer to the schematic diagram for the values of resistors and capacitors.

TUNER UNIT
(X05-3530-13)

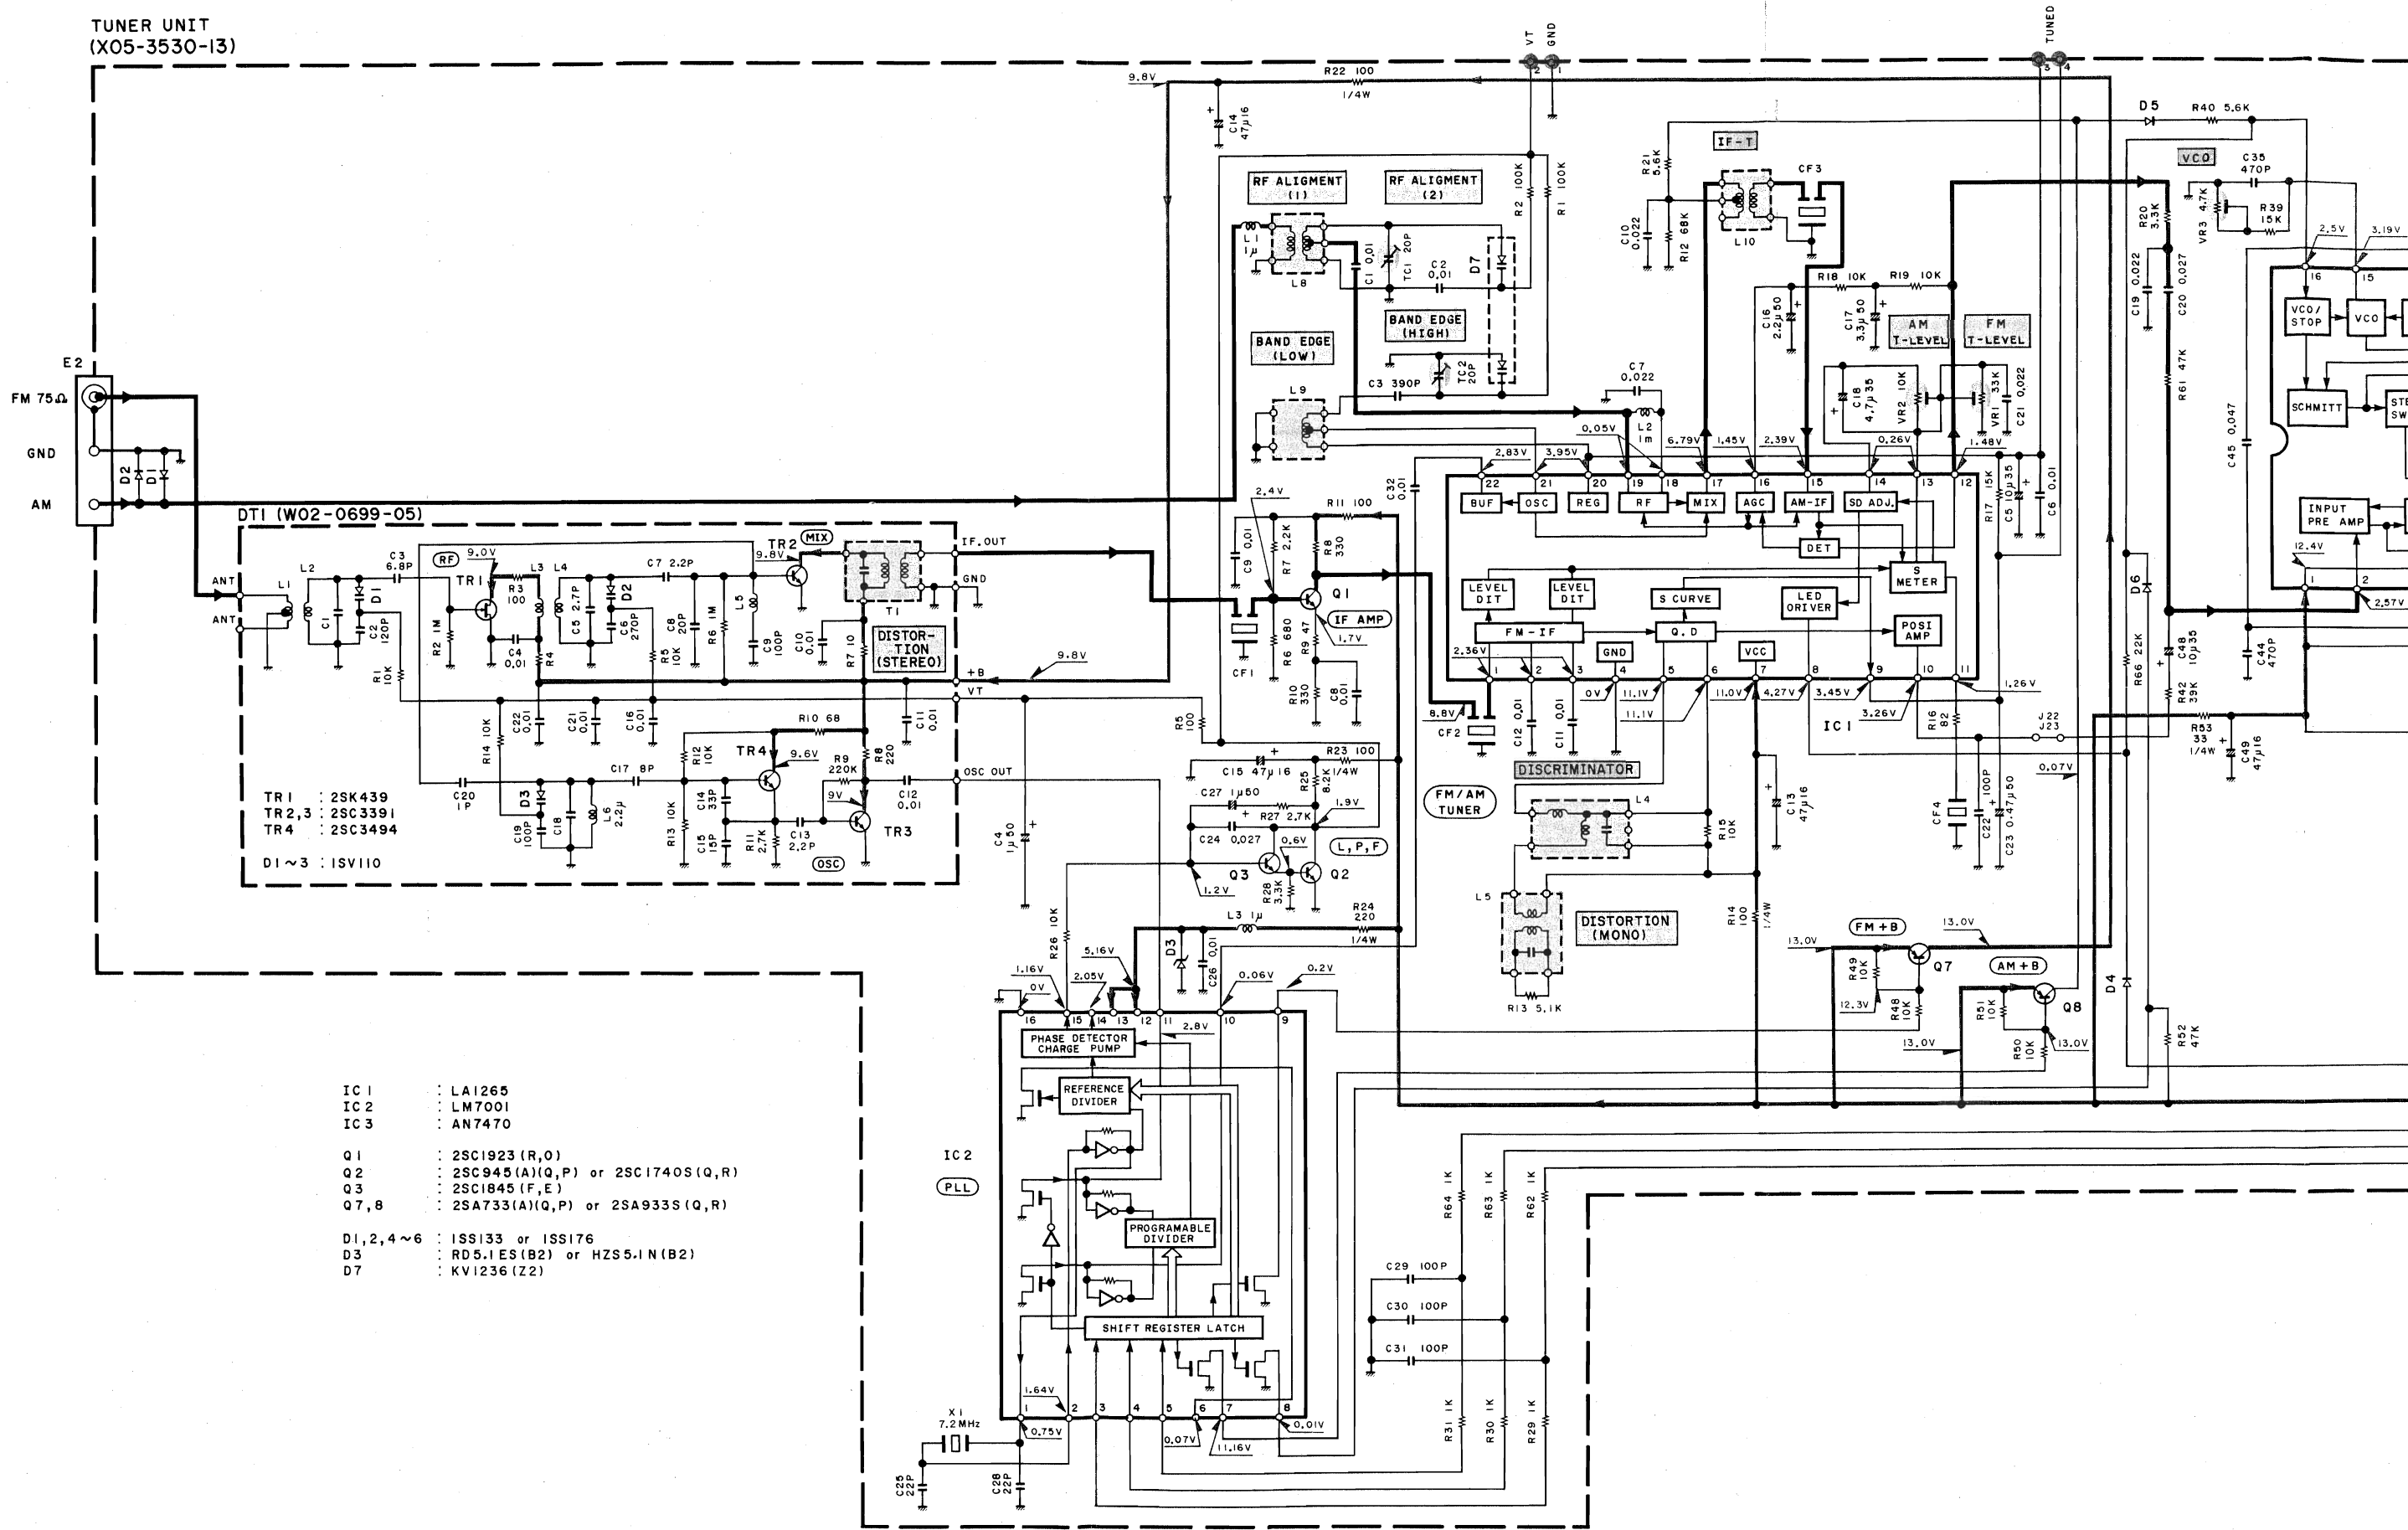

IC 1 : LA1265
 IC 2 : LM7001
 IC 3 : AN7470

Q 1 : 2SC1923 (R,O)
 Q 2 : 2SC945 (A)(Q,P) or 2SC1740S (Q,R)
 Q 3 : 2SC1845 (F,E)
 Q 7,8 : 2SA733(A)(Q,P) or 2SA933S (Q,R)

D1,2,4~6 : ISS133 or ISS176
 D3 : RD5.1ES(B2) or HZS5.1N(B2)
 D7 : KV1236(Z2)

2


3

4

5

6

7

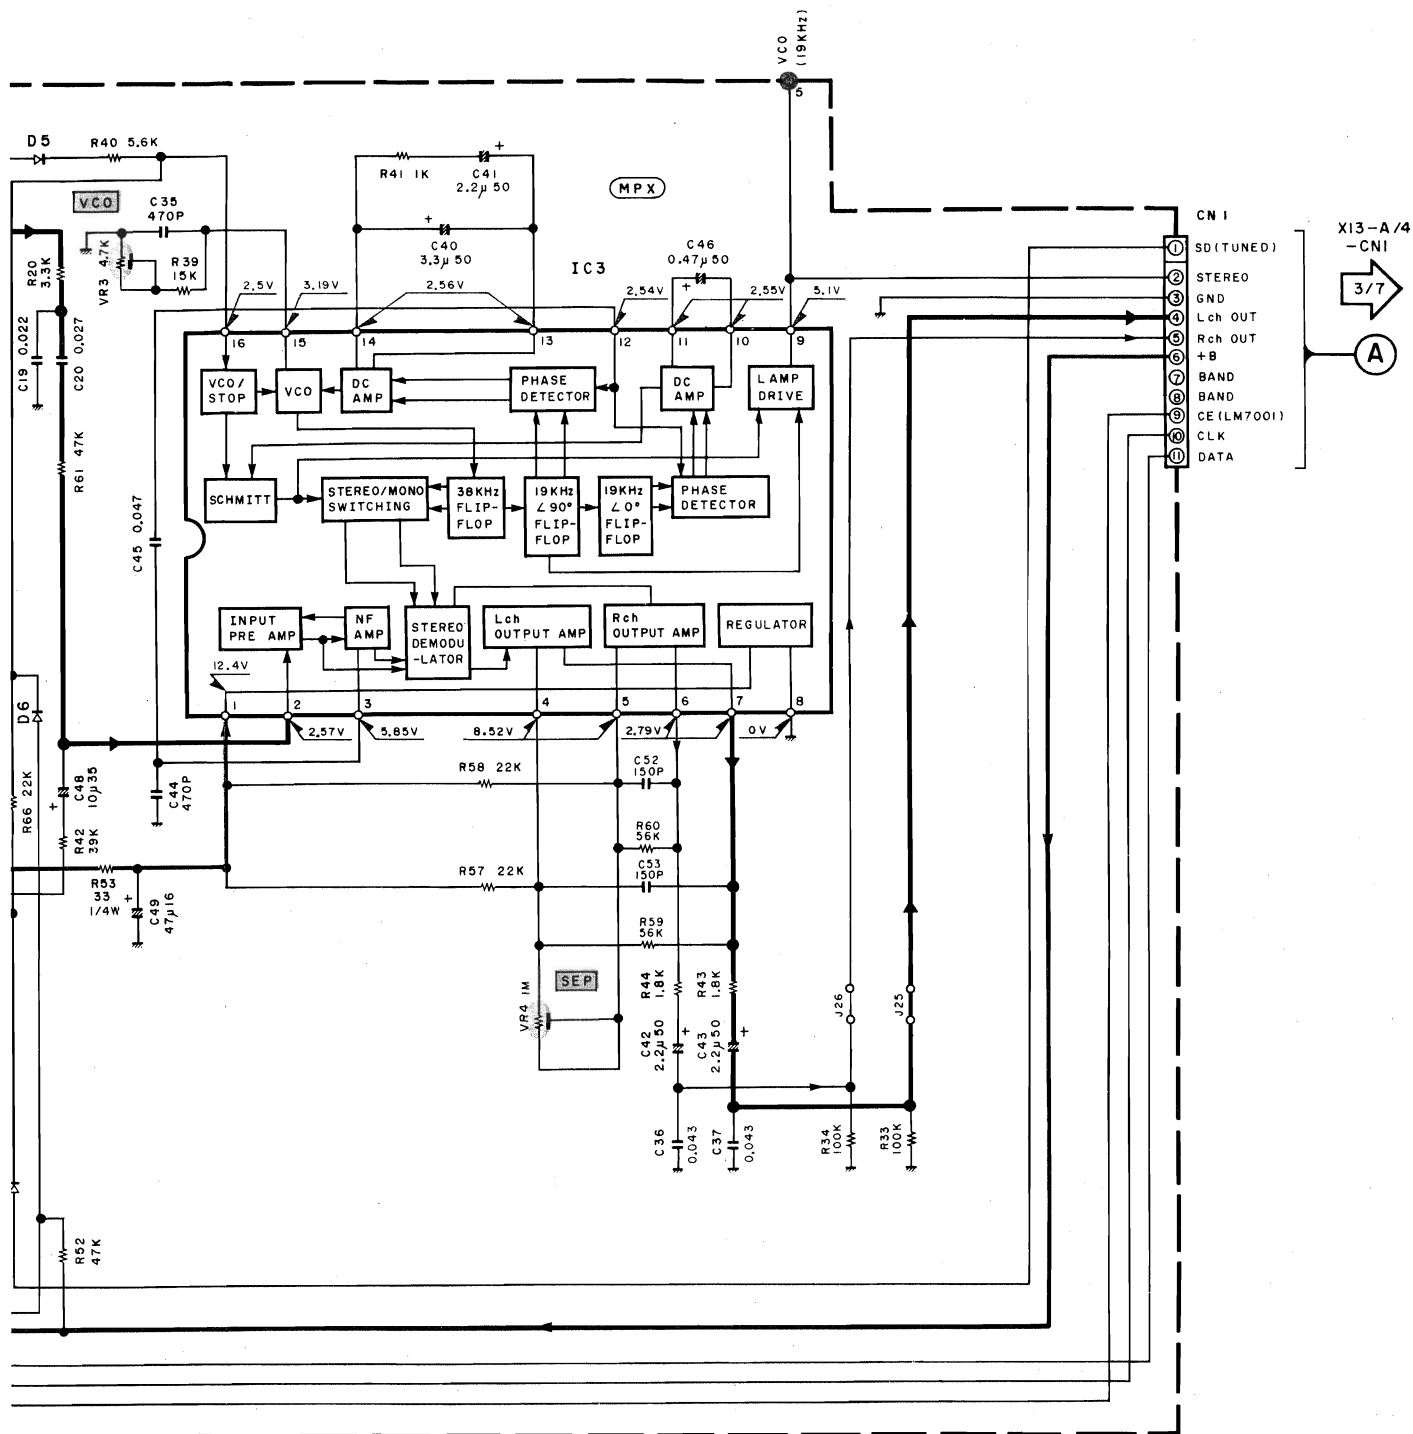

——— SIGNAL LINE
 ——— GND LINE
 ——— +B LINE
 - - - -B LINE

KC-XI (K) (1/7)


X13-A/4
 -CN1
 3/7
 A

- | | | | | | |
|------------|------------|------------|--------------|--------------|------------|
| 2SA733 (A) | 2SC1845 | 2SC1923 | 2SC2003 | 2SC2878 | 2SC945 (A) |
| 2SB772 | 2SA1048 | 2SA933S | 2SC1740S | 2SC2458 | 2SD2061 |
| 2SA1309A | 2SC3311A | MC74HCU04N | MC74HC74AN | TC74HCU04AP | TC74HC74AP |
| MM1067XD | XRU4053B | LM7001 | MC74HC4052N | MC74HC4053N | TC9184P |
| AN7470 | BA12003 | TC4053BP | TC74HC4052AP | TC74HC4053AP | TC9213P |
| M5238L | NJM4580D-D | NJU7311L | NJU7312L | NJU7313L | MC14577BP |
| TA7805S | TA7808S | XRA17805T | XRA17808T | UPC7905HF | UPC7908HF |
| TA79005S | TA79008S | NJM4556L | PST529D | SM5840HP | MC74HC08AF |
| TC9163N | TC9164N | NE657N | LA1265 | LC83016E | PCM1700U |
| LC75711E | | | | | |


DC voltages are as measured with a high-impedance voltmeter during reception of the FM broadcast signal (with a signal strength of 60 dB at the ANT terminal). Values may vary slightly due to variations between individual instruments or/and units. Values in parentheses are as measured during reception of the AM broadcast signal (with a signal strength of 60 dB at the ANT terminal).

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). **⚠** Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

Y05-2740-10

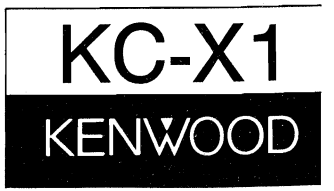


**SUB-CIRCUIT UNIT
(X13-7210-10)(A/4)(1/2)**

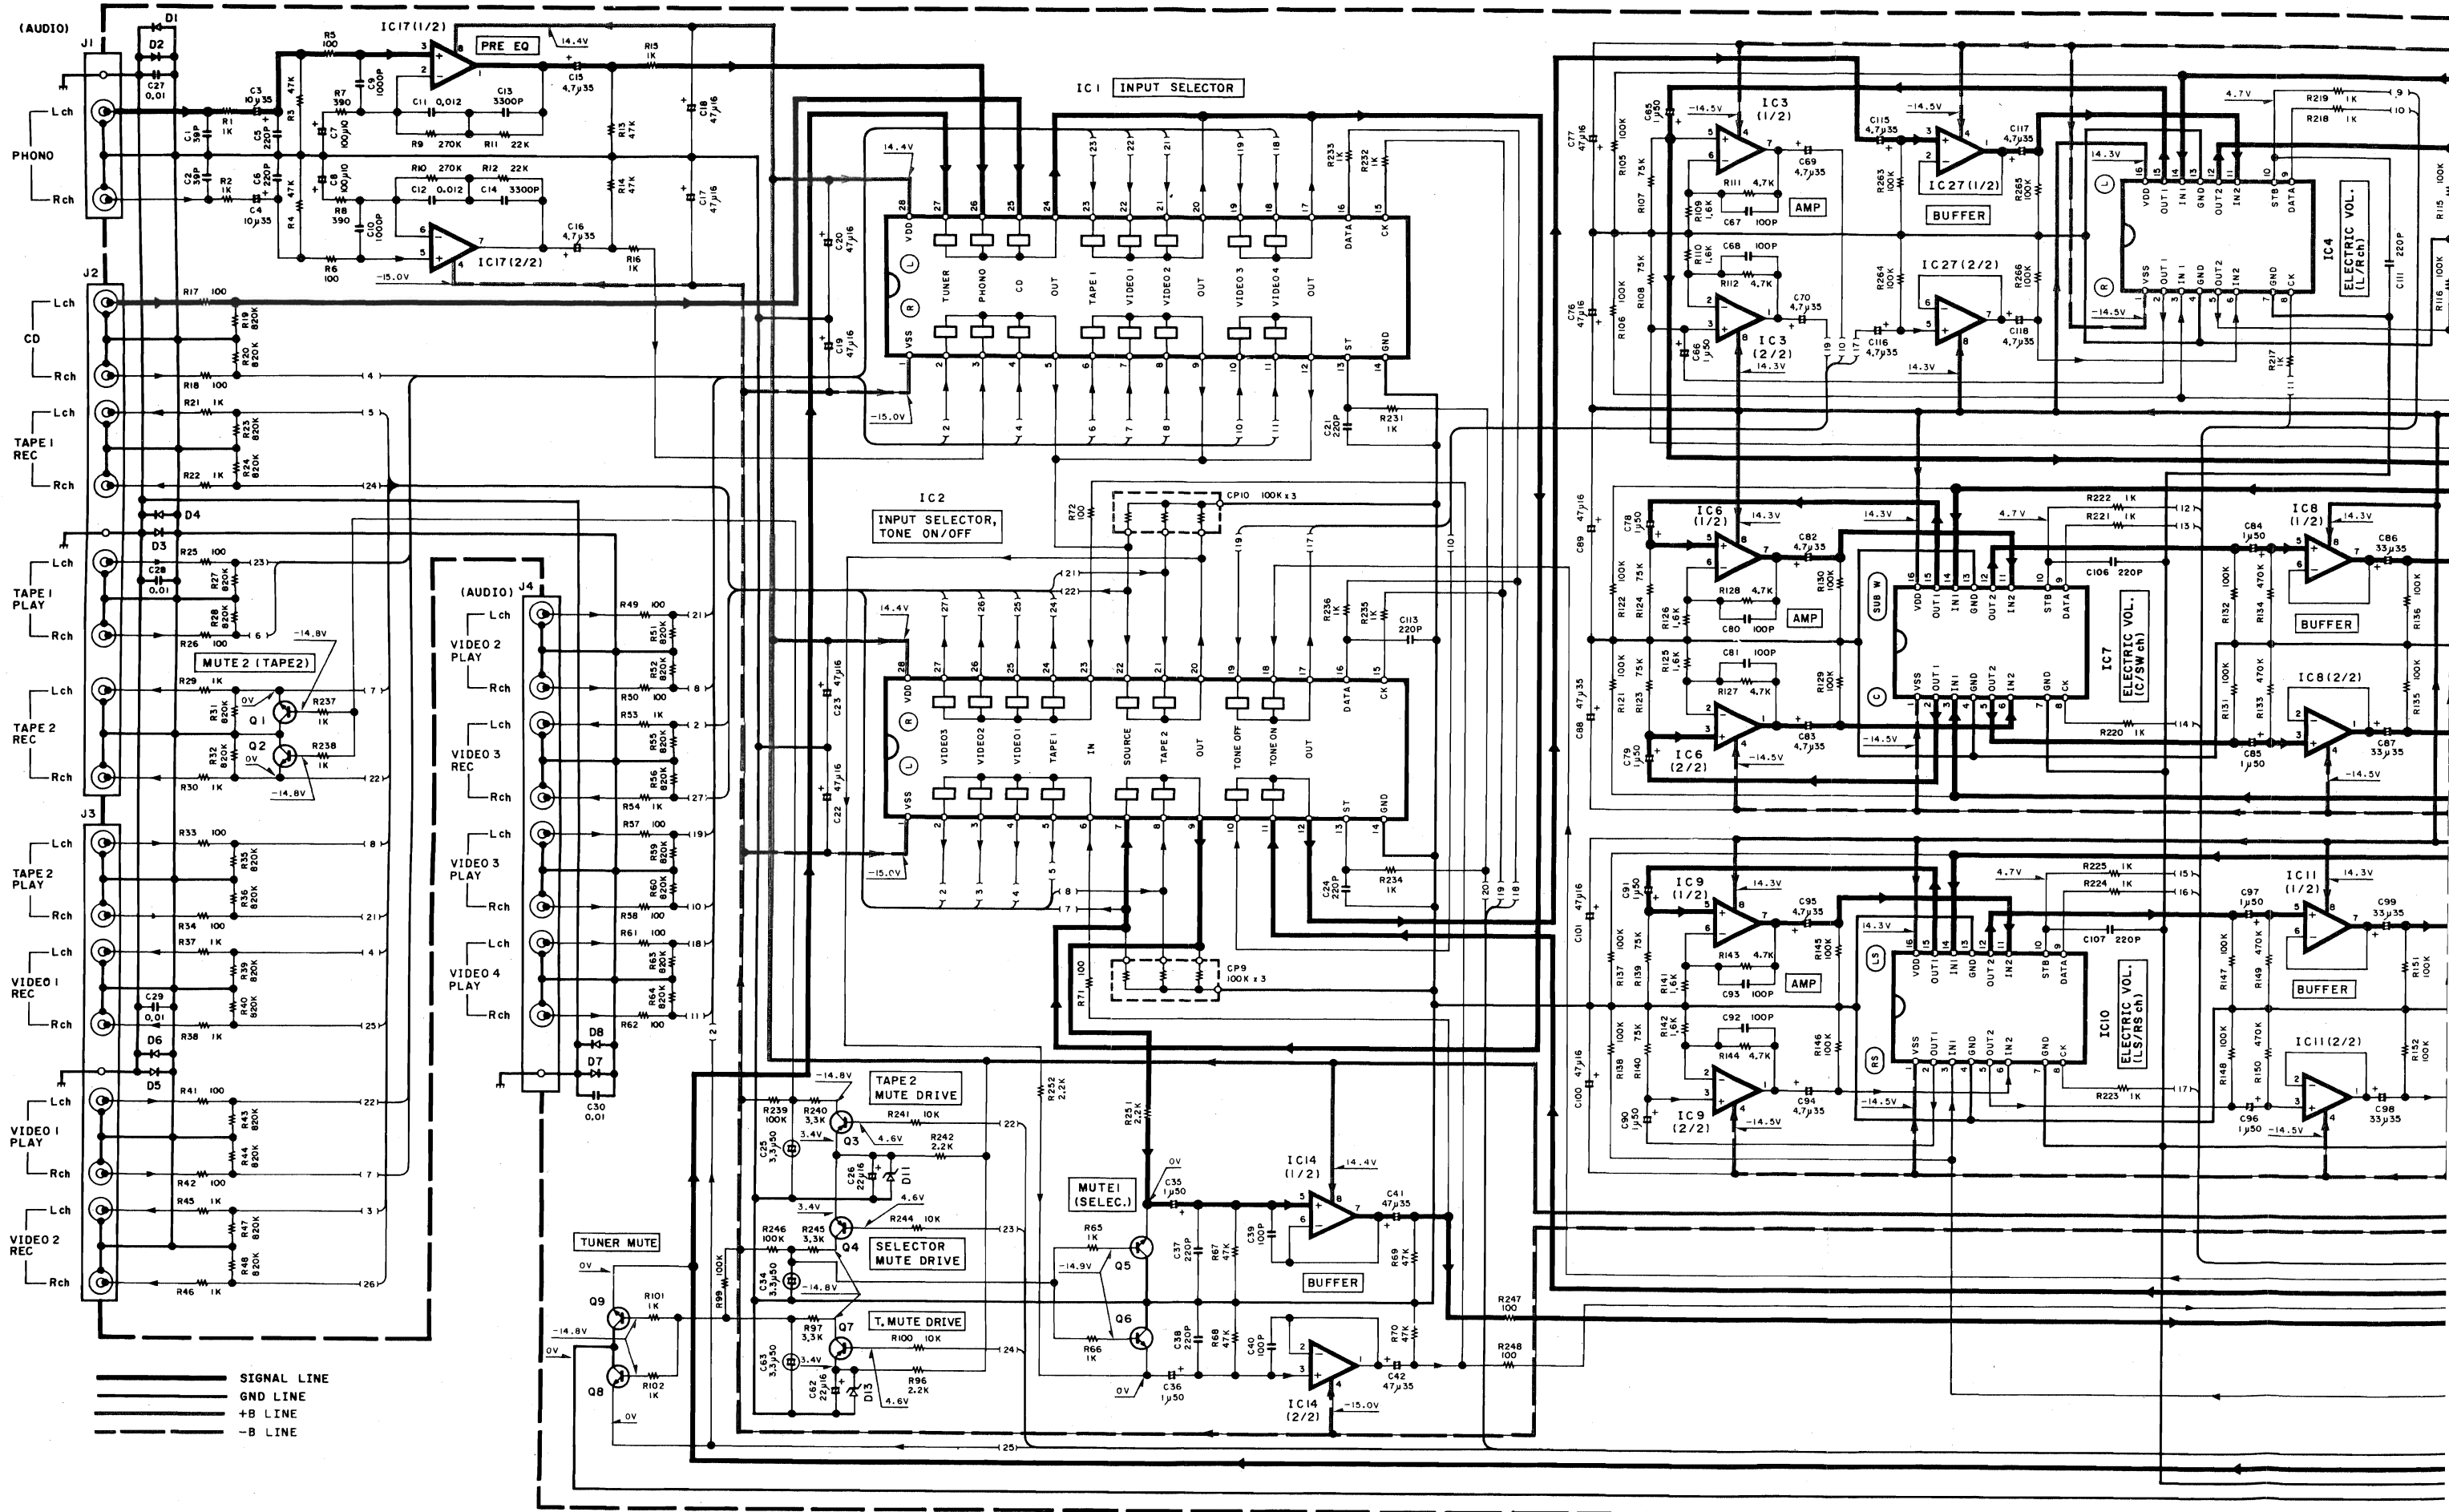

——— SIGNAL LINE
 ——— GND LINE
 ——— +B LINE
 ——— -B LINE

MODE:THX CINEMA

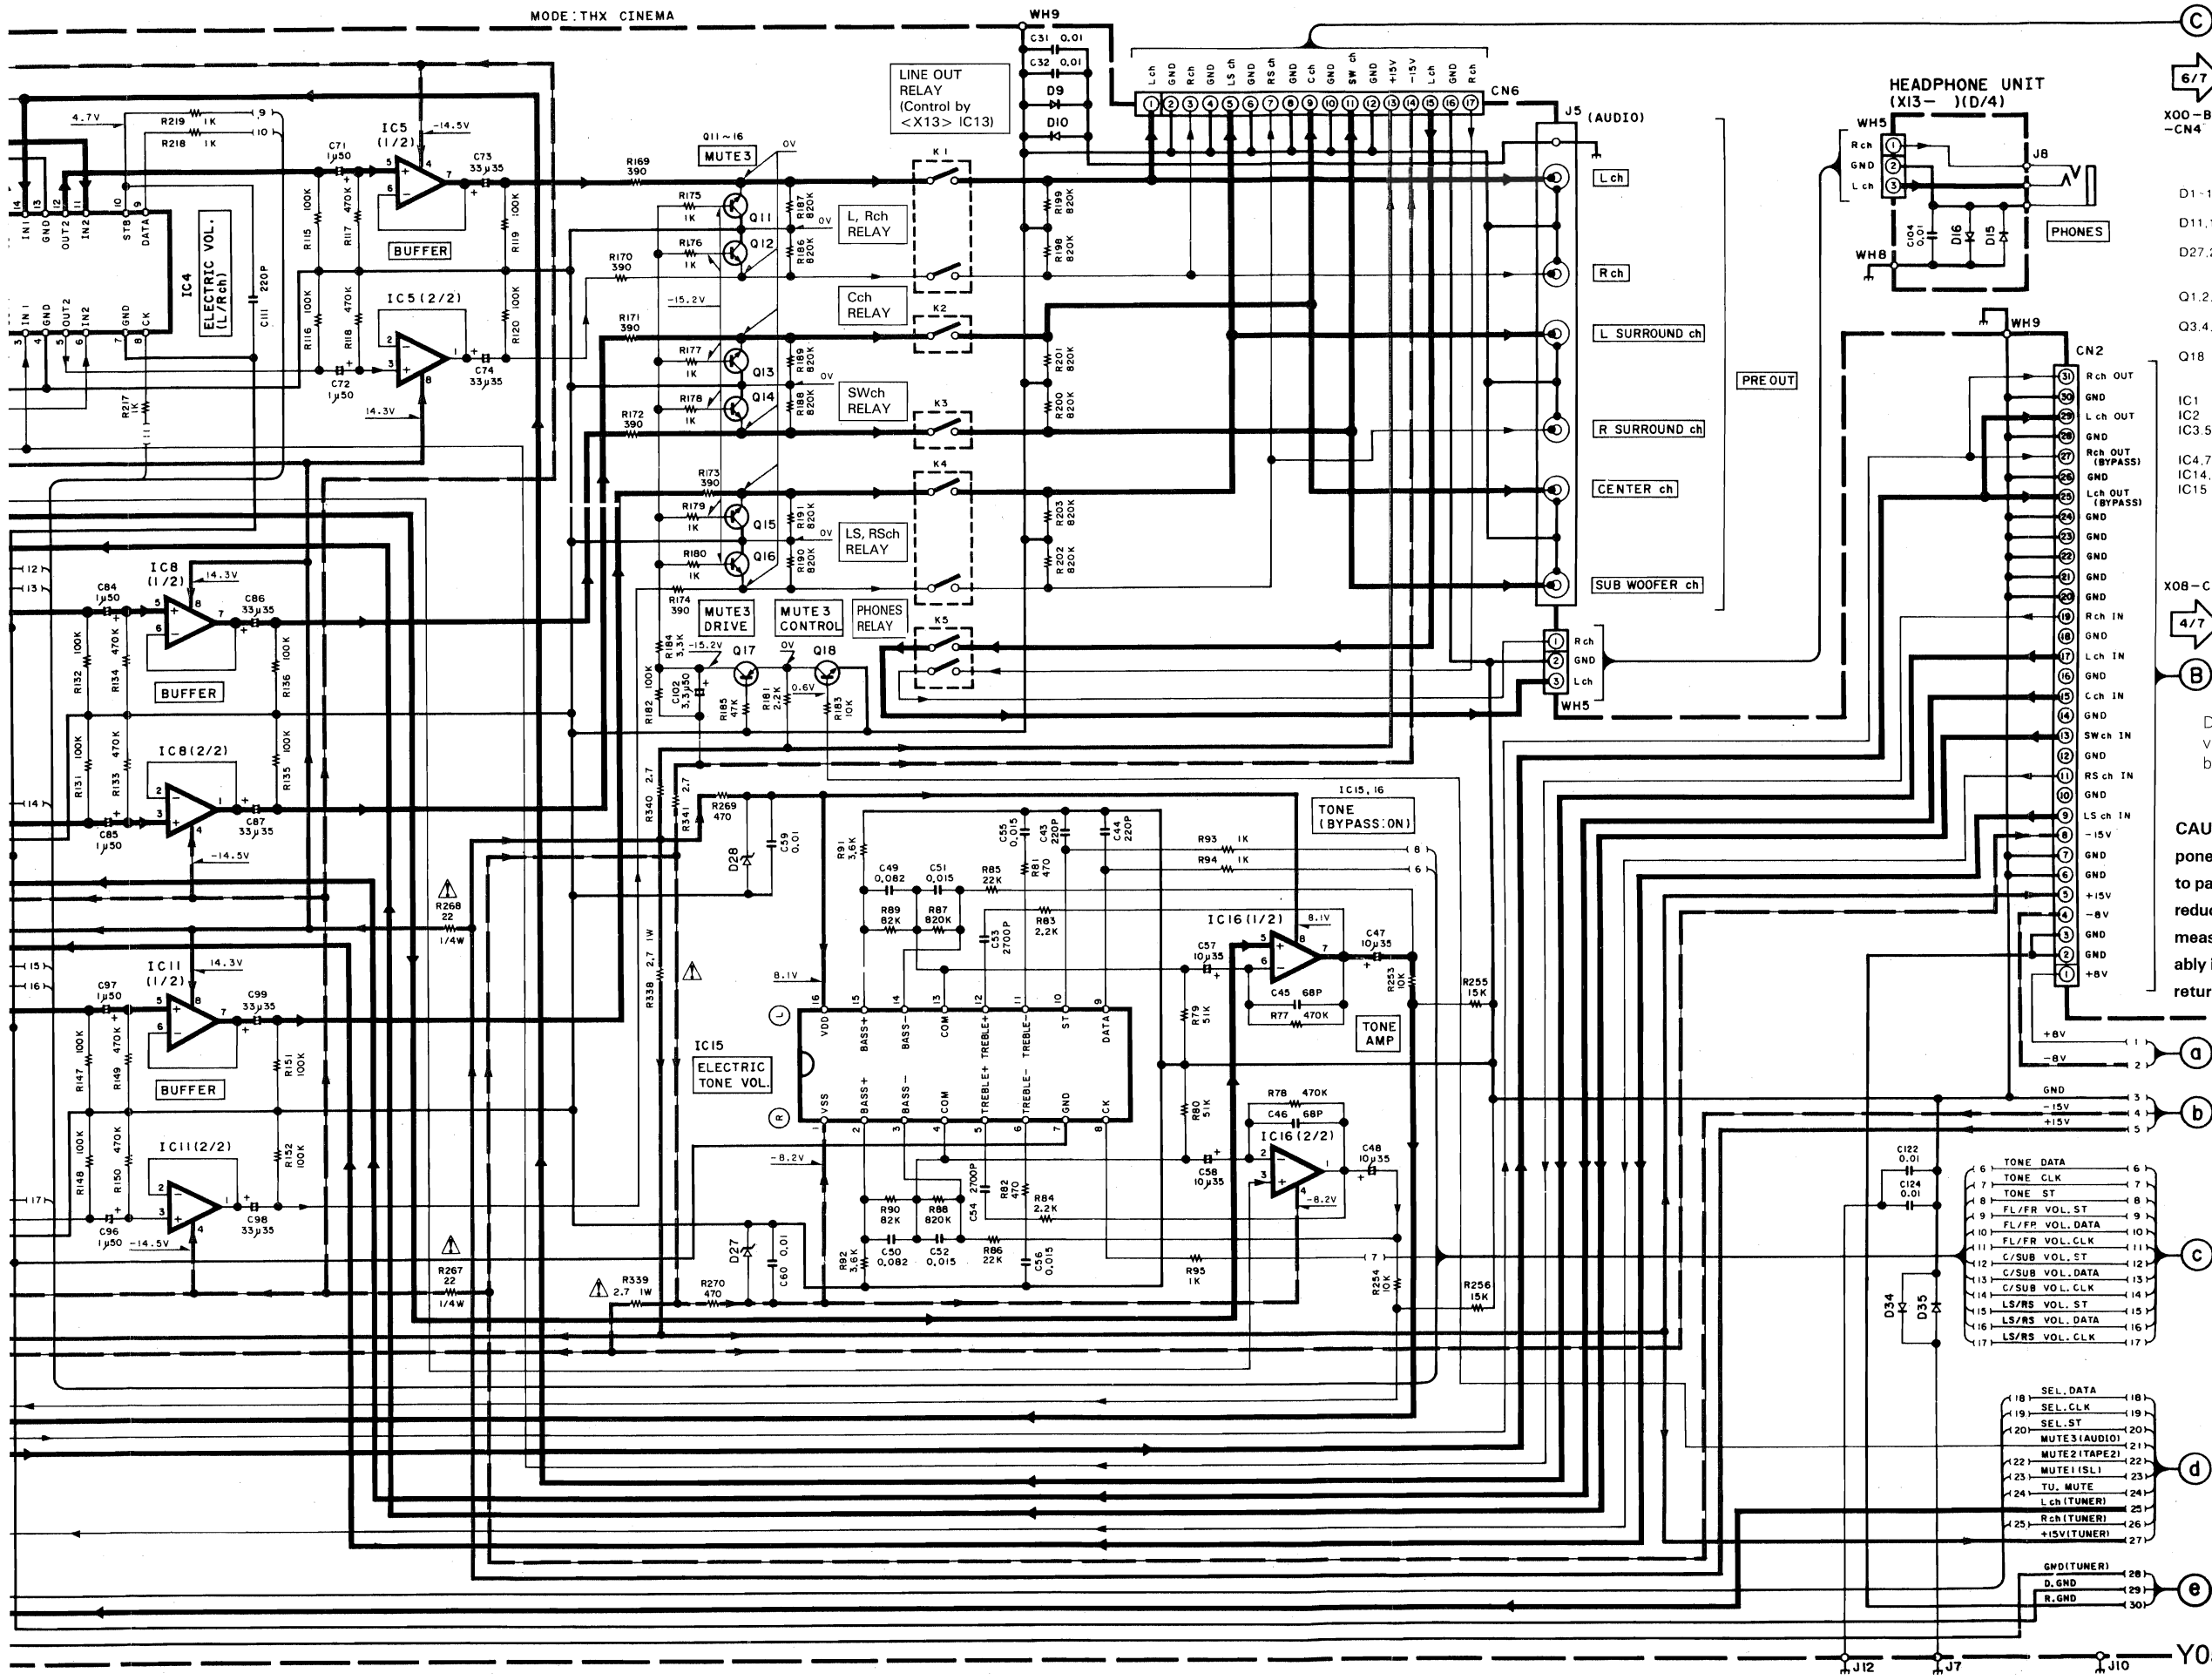

6/7

X00-B/3
-CN4

- D1-10,15,16,33,34 : 1SS133 or HSS104
- D11,13 : RD3.3ES(B2)
- or HZS3 3N(B2)
- D27,28 : RD8.2ES(B2)
- or HZS8 2N(B2)
- Q1,2,5,6,8,9,11-16 : 2SC2878(B)
- Q3,4,7,17 : 2SA1309A(Q,R)
- or 2SA1048(Y,G,R)
- Q18 : 2SC2458(Y,G,R)
- or 2SC3311A(Q,R)
- IC1 : NJU7312L or TC9163N
- IC2 : NJU7313L or TC9164N
- IC3 5,6,8,9,11,16,27 : NJM4580L-D
- IC4,7,10 : TC9213P
- IC14,17 : NJM4580D-D
- IC15 : TC9184P

X08-CN1

4/7


DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). **⚠** Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

X13-A/4-2/2

3/7


KC-X1 (K) (2/7)

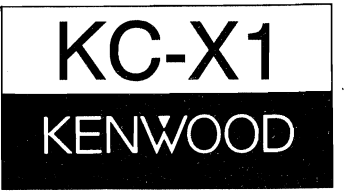

Y05-2740-10


J12 J7 J10

SUB-CIRCUIT UNIT
(X13-7210-10)(A/4)(2/2)

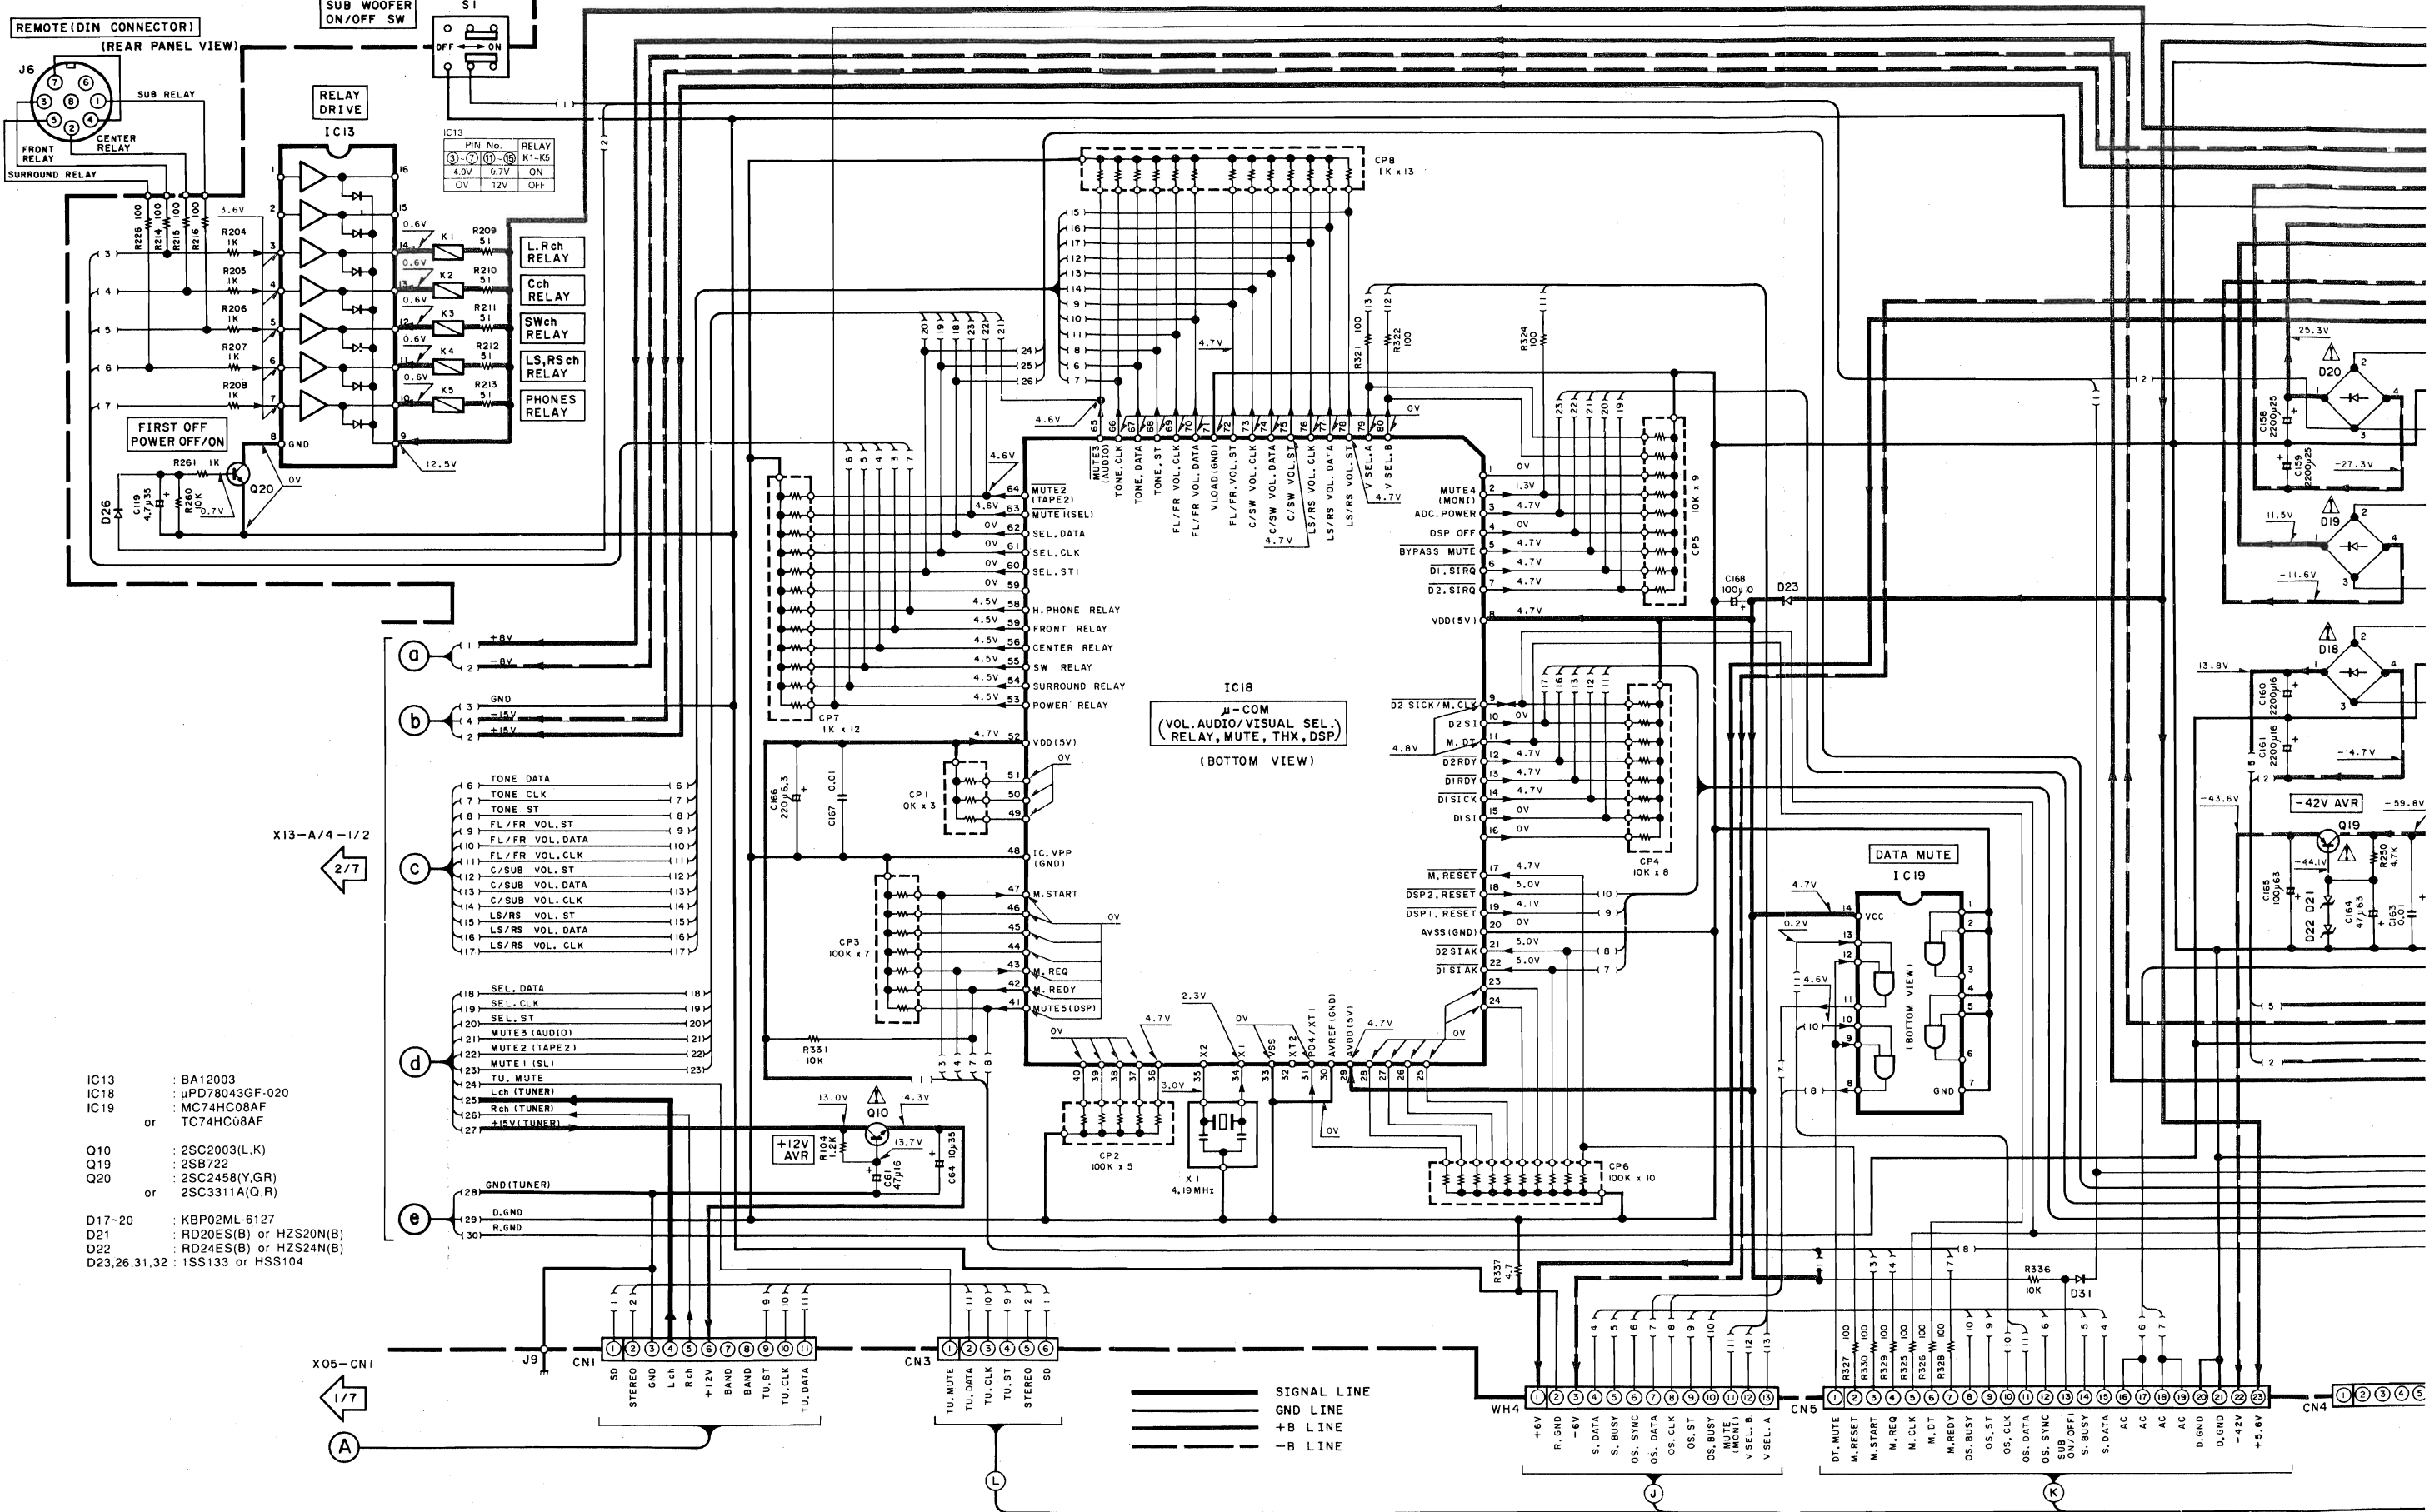

PIN No.	RELAY
①	K1-K5
②	ON
③	OFF

- IC13 : BA12003
- IC18 : μPD78043GF-020
- IC19 : MC74HC08AF or TC74HC08AF
- Q10 : 2SC2003(L,K)
- Q19 : 2SB722
- Q20 : 2SC2458(Y,GR) or 2SC3311A(Q,R)
- D17-20 : KBP02ML-6127
- D21 : RD20ES(B) or HZS20N(B)
- D22 : RD24ES(B) or HZS24N(B)
- D23,26,31,32 : 1SS133 or HSS104



X13-A/4-1/2

X05-CN1

1/7

2

3

4


5

6

7



PREAMPLIFIER UNIT
(X08-2570-10) (1/2)

MODE: THX CINEMA

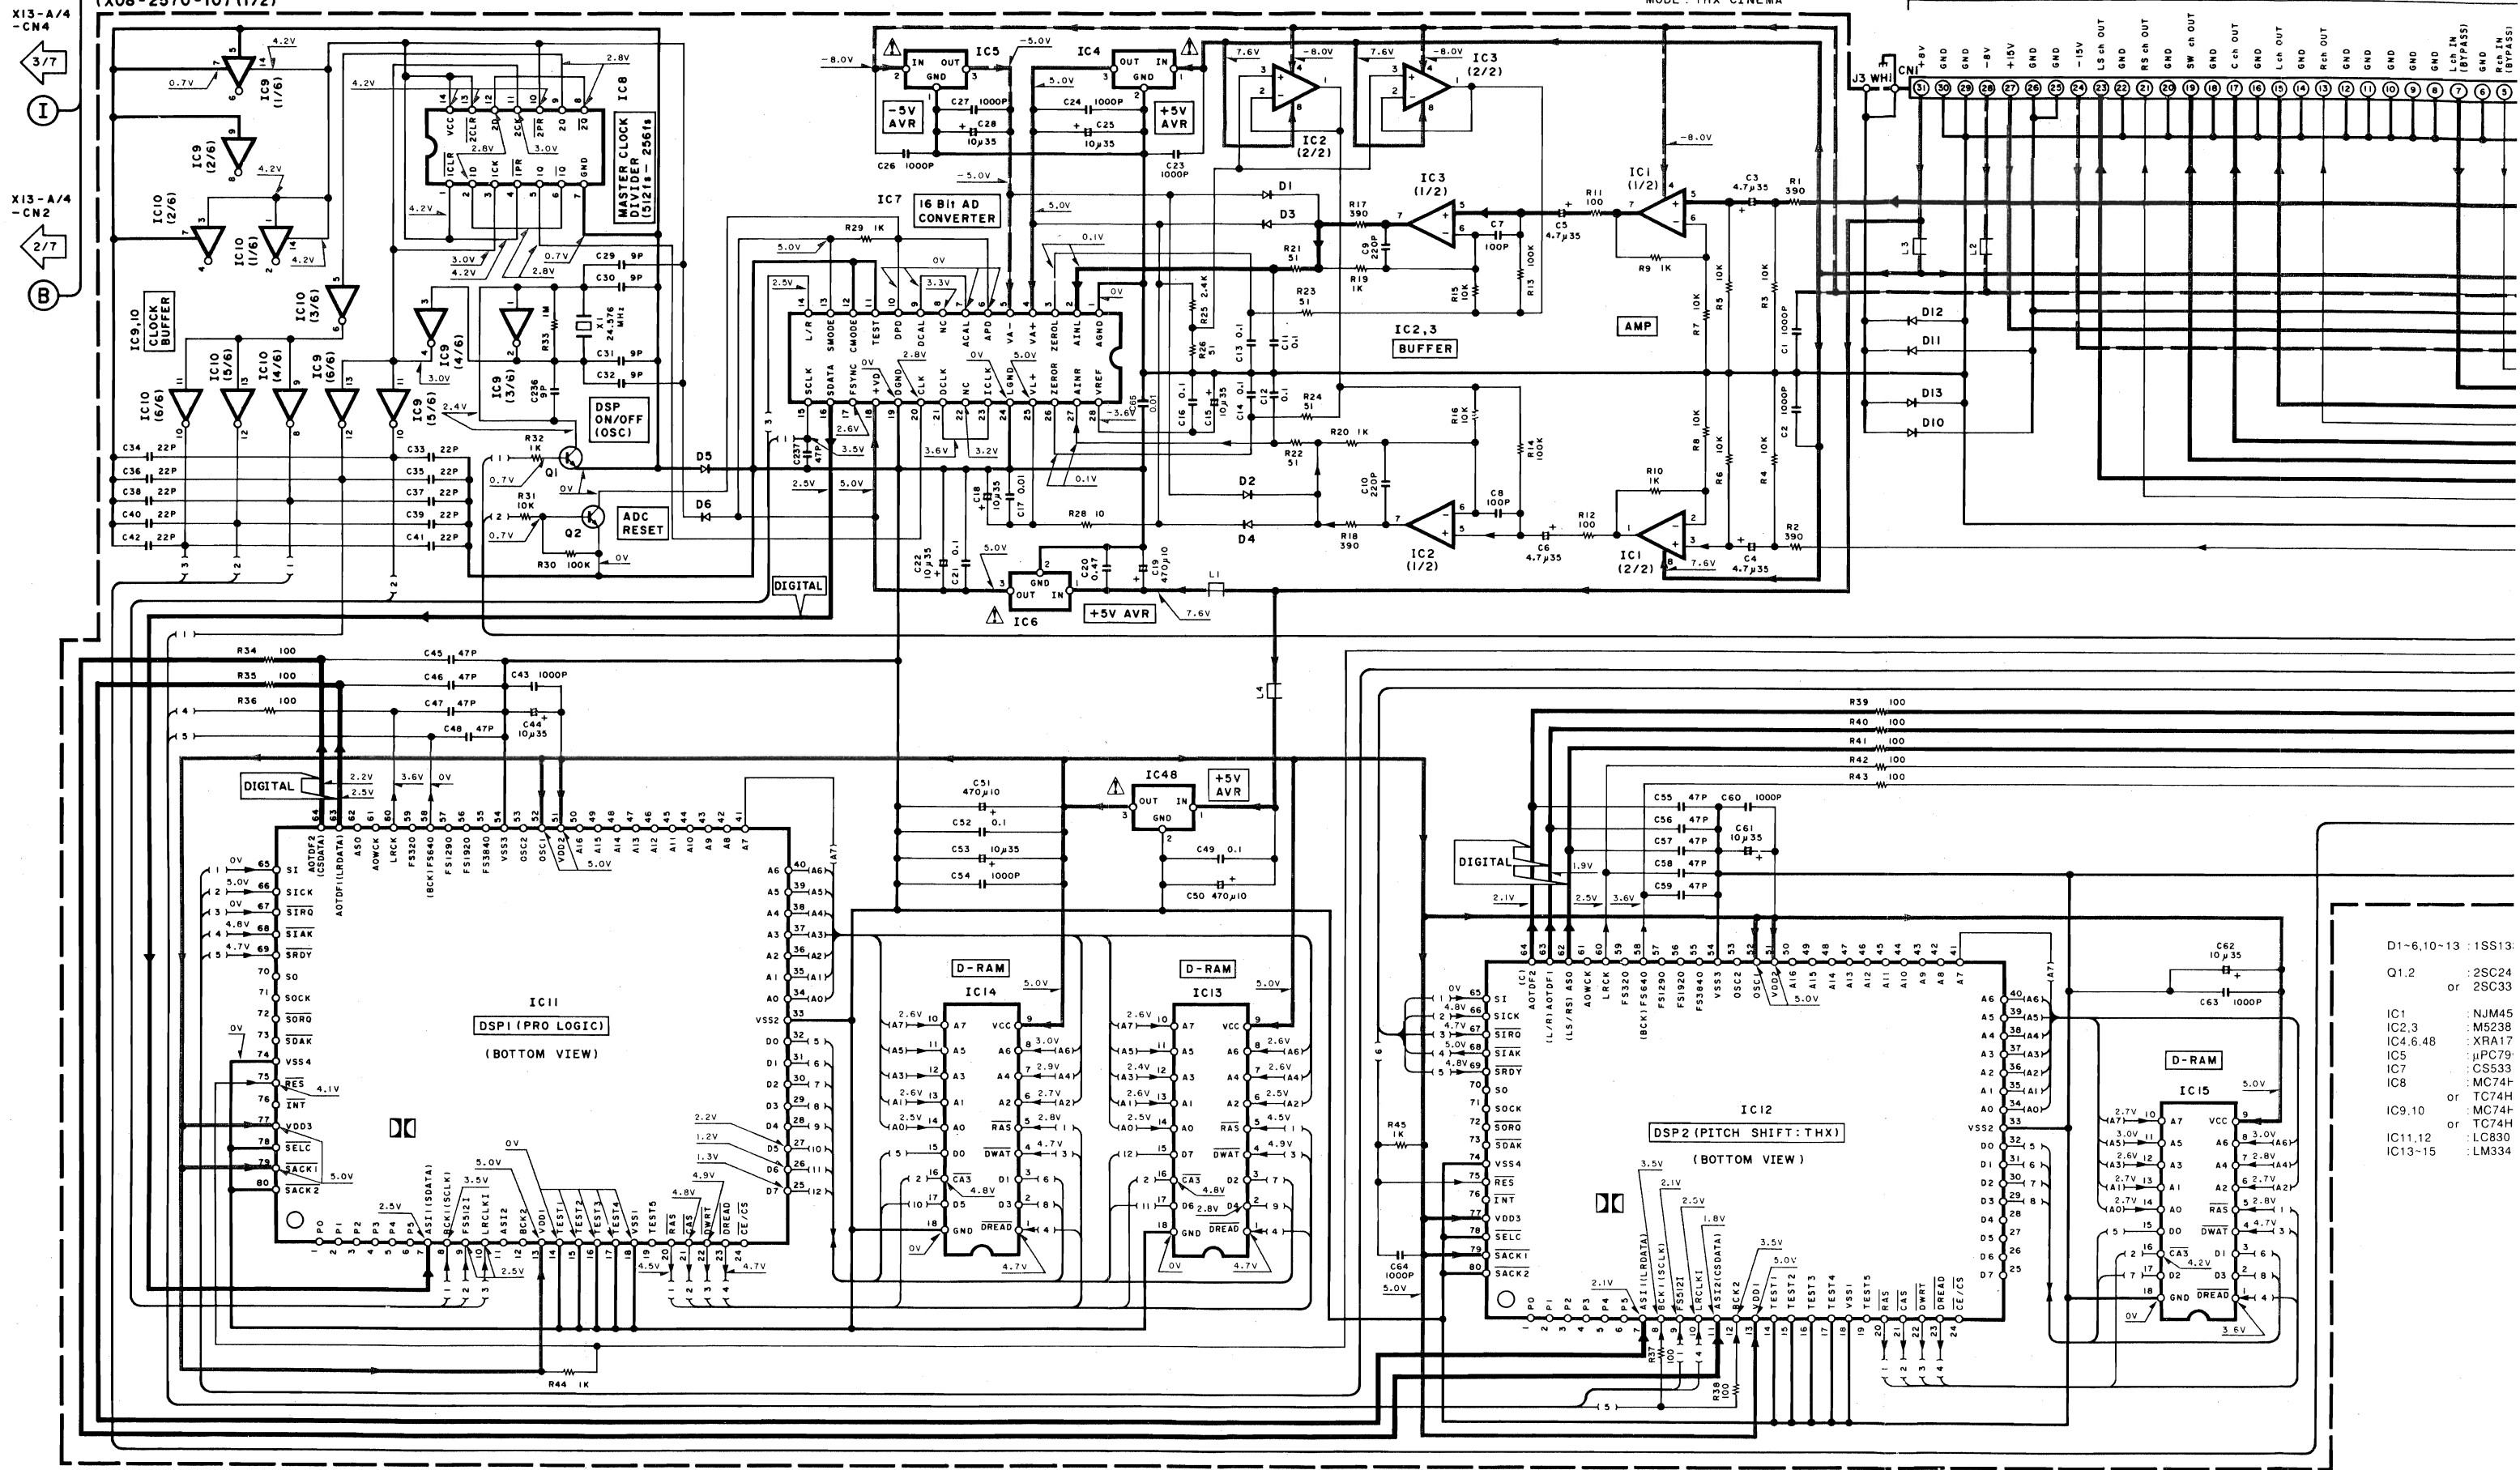

X13-A/4 - CN4
3/7
I
X13-A/4 - CN2
2/7
B


- D1-6,10-13 : 1SS13
- Q1.2 : 2SC24 or 2SC33
- IC1 : NJM45
- IC2,3 : M5238
- IC4,6,8 : XRA17
- IC5 : μPC79
- IC7 : CS533
- IC8 : MC744 or TC74H
- IC9,10 : MC744 or TC74H
- IC11,12 : LC830
- IC13-15 : LM334

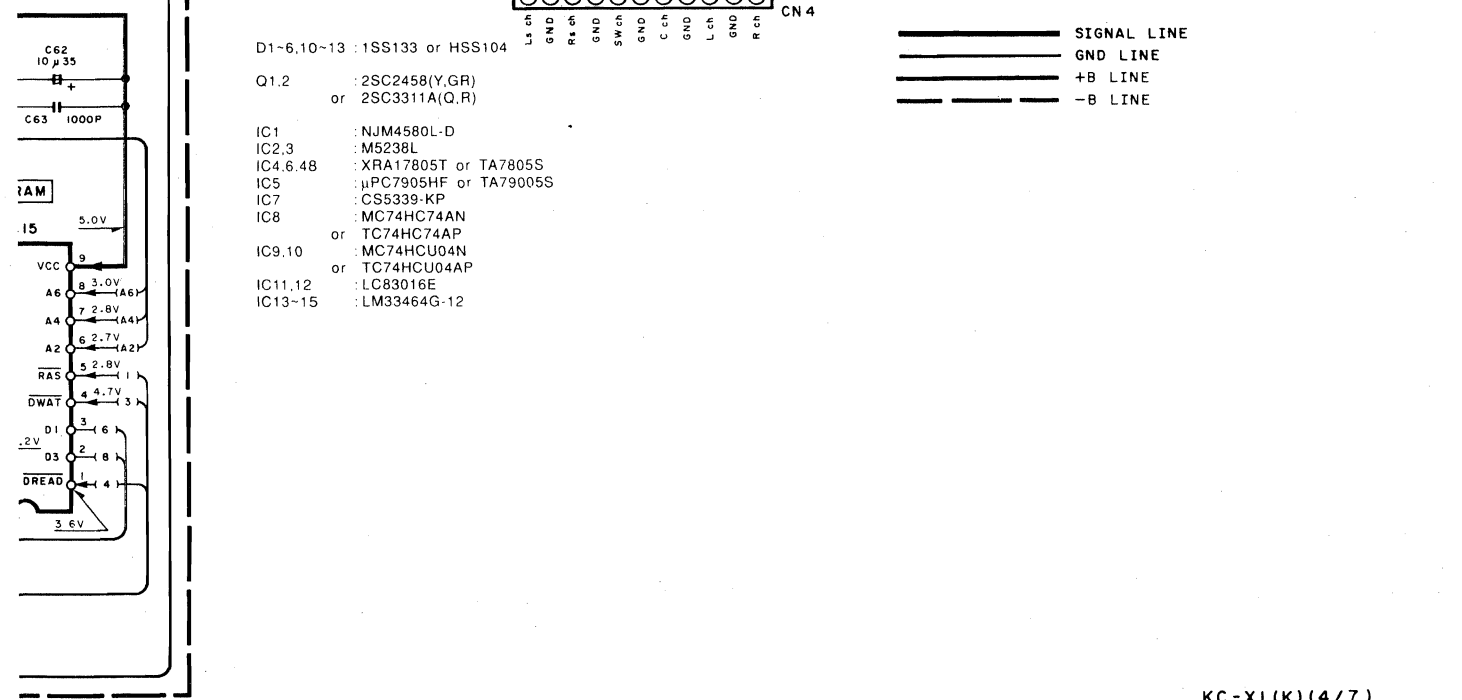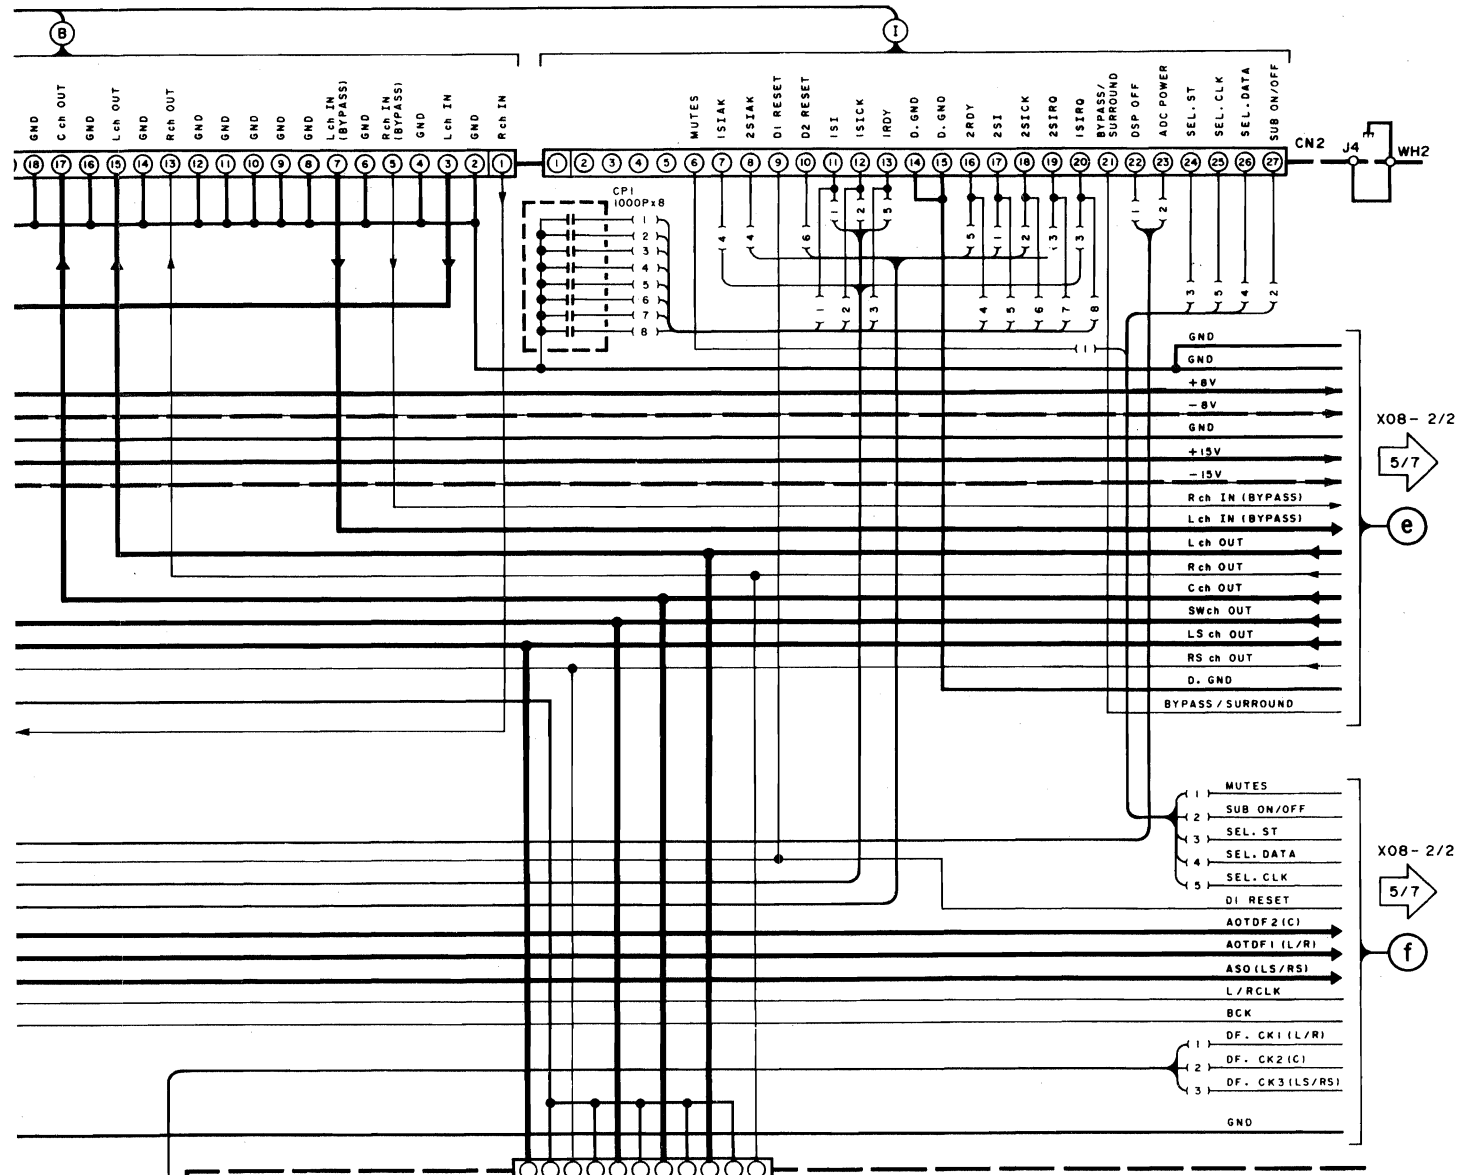


- M5238L NJM4580D-D1
- NJU7311L NJU7312L NJU7313L
- MC14577BP
- PST529D
- SM5840HP
- MC74HC08AF TC74HC08AF
- TC9163N TC9164N
- NE657N
- LA1265
- LC83016E
- PCM1700U
- LC75711E
- 2SA733 (A) 2SC1845 2SC1923 2SC2003 2SC2878 2SC945 (A)
- 2SB772
- 2SA1048 2SA933S 2SC1740S 2SC2458
- 2SD2061
- 2SA1309A 2SC3311A
- MC74HC04N MC74HC74AN TC74HC04AP TC74HC74AP
- MM1067XD XRU4053B
- LM7001 MC74HC4052N MC74HC4053N
- TC9184P
- AN7470 BA12003 TC4053BP TC74HC4052AP TC74HC4053AP TC9213P
- TA7805S TA7808S XRA17805T XRA17808T
- UPC7905HF UPC7908HF
- TA79005S TA79008S
- NJM4556L

DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

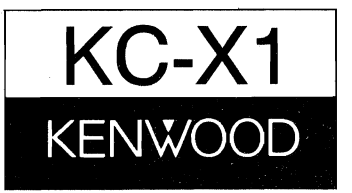

PRE AMPLIFIER UNIT (X08-2570-10) (2/2)

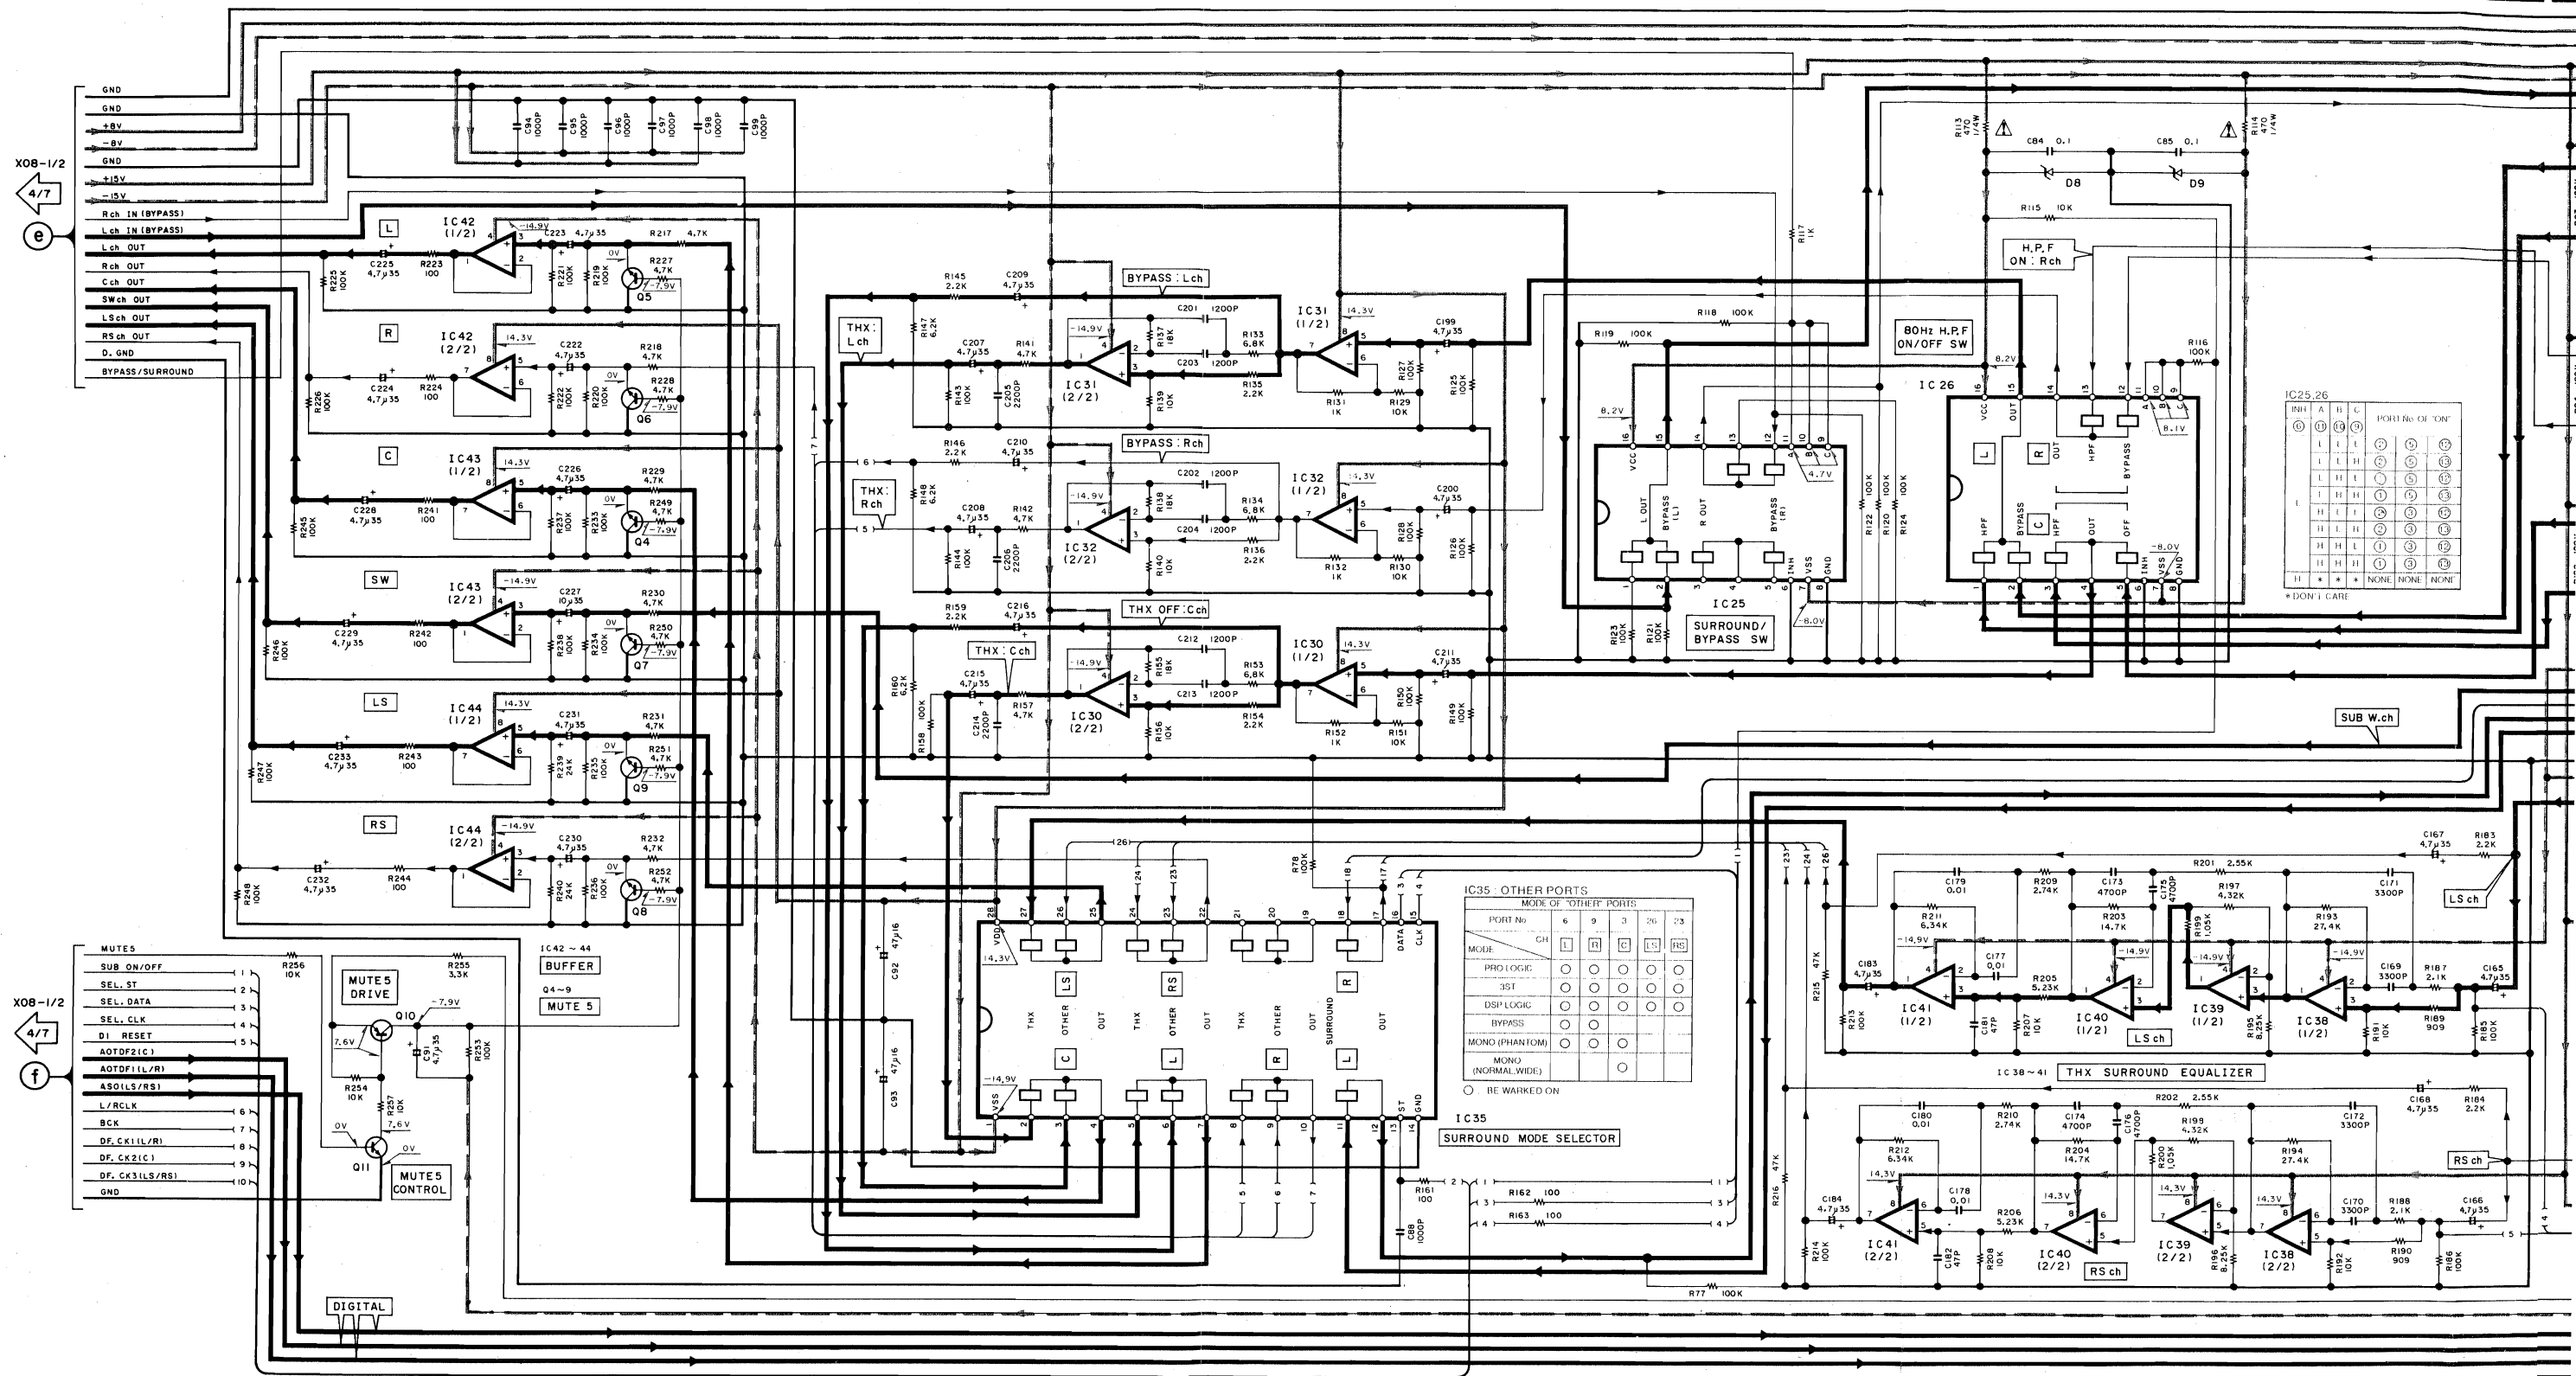

- 2SA733 (A)
- 2SC1845
- 2SC1923
- 2SC2003
- 2SC2878
- 2SC945 (A)

- 2SA1048
- 2SA9335
- 2SC1740S
- 2SC2458

- 2SA1309A
- 2SC3311A

- MM1067XD
- XRU4053B

- TC9184P

- M5238L
- NJM4580D-D

- NJU7311L
- NJU7312L
- NJU7313L

- MC14577BP
- SM5840HP

- MC74HC08AF
- TC74HC08AF

- 2SB772

- 2SD2061

- MC74HC04N
- MC74HC74AN
- TC74HC04AP
- TC74HC74AP


- LM7001
- MC74HC4052N
- MC74HC4053N

- AN7470
- BA12003
- TC4053BP
- TC74HC4052AP
- TC74HC4053AP
- TC9213P

- PST529D



- TC9163N
- TC9164N

7

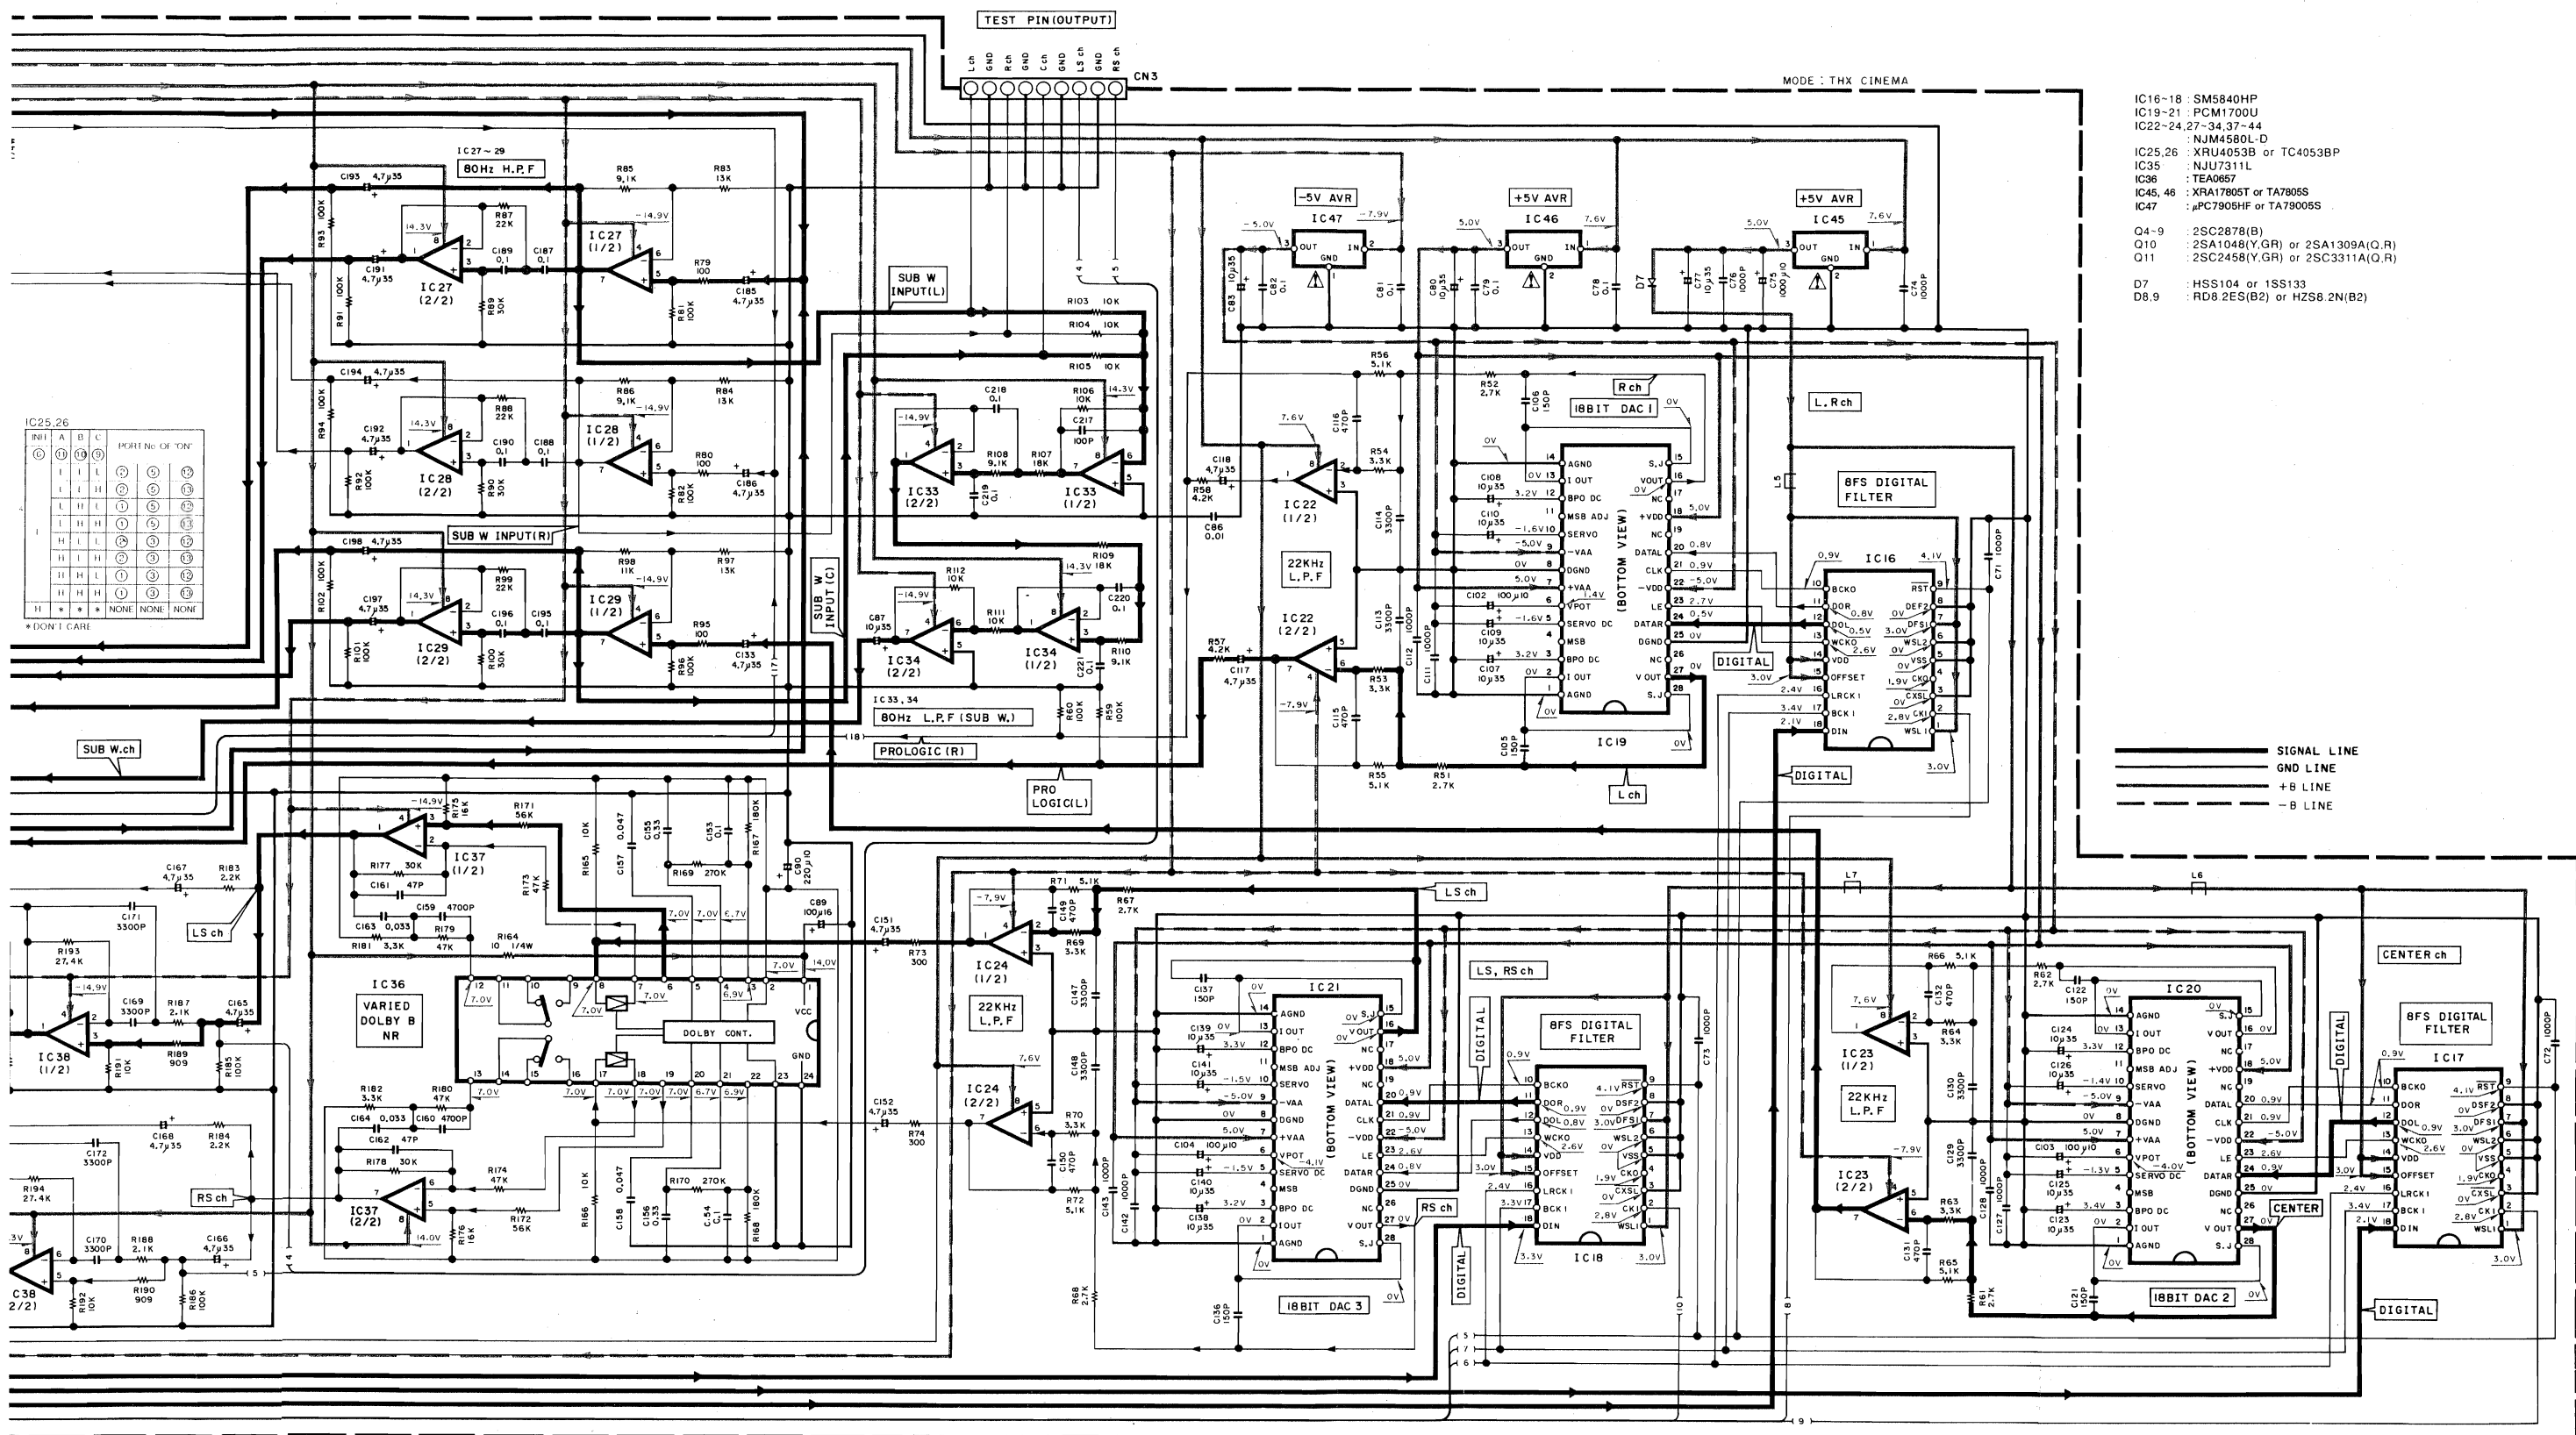

- IC16-18 : SM5840HP
- IC19-21 : PCM1700U
- IC22-24, 27-34, 37-44 : NJM4580L-D
- IC25, 26 : XRU4053B or TC4053BP
- IC35 : NJU7311L
- IC36 : TEA0857
- IC45, 46 : XRA17805T or TA7805S
- IC47 : μ PC7905HF or TA79005S
- Q4-9 : 2SC2878(B)
- Q10 : 2SA1048(Y,GR) or 2SA1309A(Q,R)
- Q11 : 2SC2458(Y,GR) or 2SC3311A(Q,R)
- D7 : HSS104 or 1SS133
- D8,9 : RD8.2ES(B2) or HZS8.2N(B2)

IC25, 26	PORT NO.	PORT NO. OF 'ON'
(1)	(1)	(1)
(2)	(2)	(2)
(3)	(3)	(3)
(4)	(4)	(4)
(5)	(5)	(5)
(6)	(6)	(6)
(7)	(7)	(7)
(8)	(8)	(8)
(9)	(9)	(9)
(10)	(10)	(10)
(11)	(11)	(11)
(12)	(12)	(12)
(13)	(13)	(13)
(14)	(14)	(14)
(15)	(15)	(15)
(16)	(16)	(16)
(17)	(17)	(17)
(18)	(18)	(18)
(19)	(19)	(19)
(20)	(20)	(20)
(21)	(21)	(21)
(22)	(22)	(22)
(23)	(23)	(23)
(24)	(24)	(24)
(25)	(25)	(25)
(26)	(26)	(26)
(27)	(27)	(27)
(28)	(28)	(28)
(29)	(29)	(29)
(30)	(30)	(30)
(31)	(31)	(31)
(32)	(32)	(32)
(33)	(33)	(33)
(34)	(34)	(34)
(35)	(35)	(35)
(36)	(36)	(36)
(37)	(37)	(37)
(38)	(38)	(38)
(39)	(39)	(39)
(40)	(40)	(40)
(41)	(41)	(41)
(42)	(42)	(42)
(43)	(43)	(43)
(44)	(44)	(44)
(45)	(45)	(45)
(46)	(46)	(46)
(47)	(47)	(47)
(48)	(48)	(48)
(49)	(49)	(49)
(50)	(50)	(50)
(51)	(51)	(51)
(52)	(52)	(52)
(53)	(53)	(53)
(54)	(54)	(54)
(55)	(55)	(55)
(56)	(56)	(56)
(57)	(57)	(57)
(58)	(58)	(58)
(59)	(59)	(59)
(60)	(60)	(60)
(61)	(61)	(61)
(62)	(62)	(62)
(63)	(63)	(63)
(64)	(64)	(64)
(65)	(65)	(65)
(66)	(66)	(66)
(67)	(67)	(67)
(68)	(68)	(68)
(69)	(69)	(69)
(70)	(70)	(70)
(71)	(71)	(71)
(72)	(72)	(72)
(73)	(73)	(73)
(74)	(74)	(74)
(75)	(75)	(75)
(76)	(76)	(76)
(77)	(77)	(77)
(78)	(78)	(78)
(79)	(79)	(79)
(80)	(80)	(80)
(81)	(81)	(81)
(82)	(82)	(82)
(83)	(83)	(83)
(84)	(84)	(84)
(85)	(85)	(85)
(86)	(86)	(86)
(87)	(87)	(87)
(88)	(88)	(88)
(89)	(89)	(89)
(90)	(90)	(90)
(91)	(91)	(91)
(92)	(92)	(92)
(93)	(93)	(93)
(94)	(94)	(94)
(95)	(95)	(95)
(96)	(96)	(96)
(97)	(97)	(97)
(98)	(98)	(98)
(99)	(99)	(99)
(100)	(100)	(100)

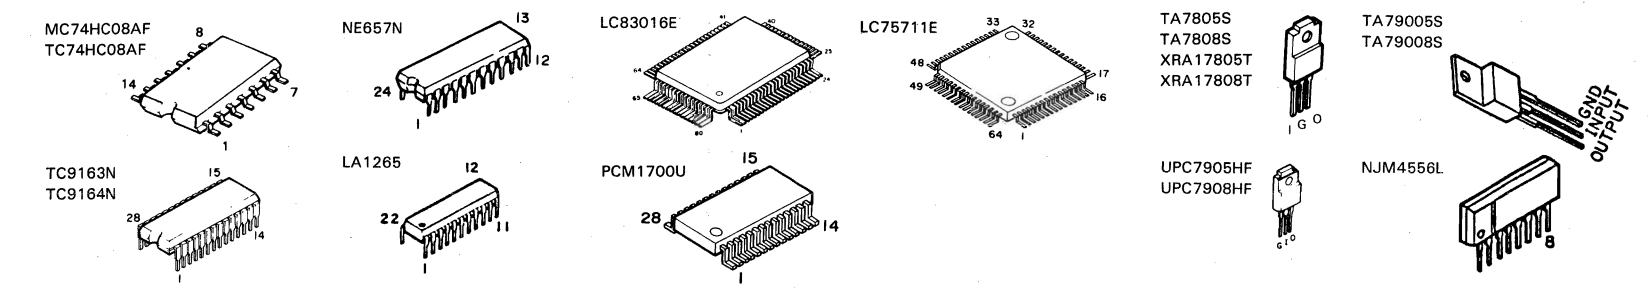


DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.




KC-X1(K) (5/7)

VIDEO CONTROL UNIT (X14-3700-10)(C/3)

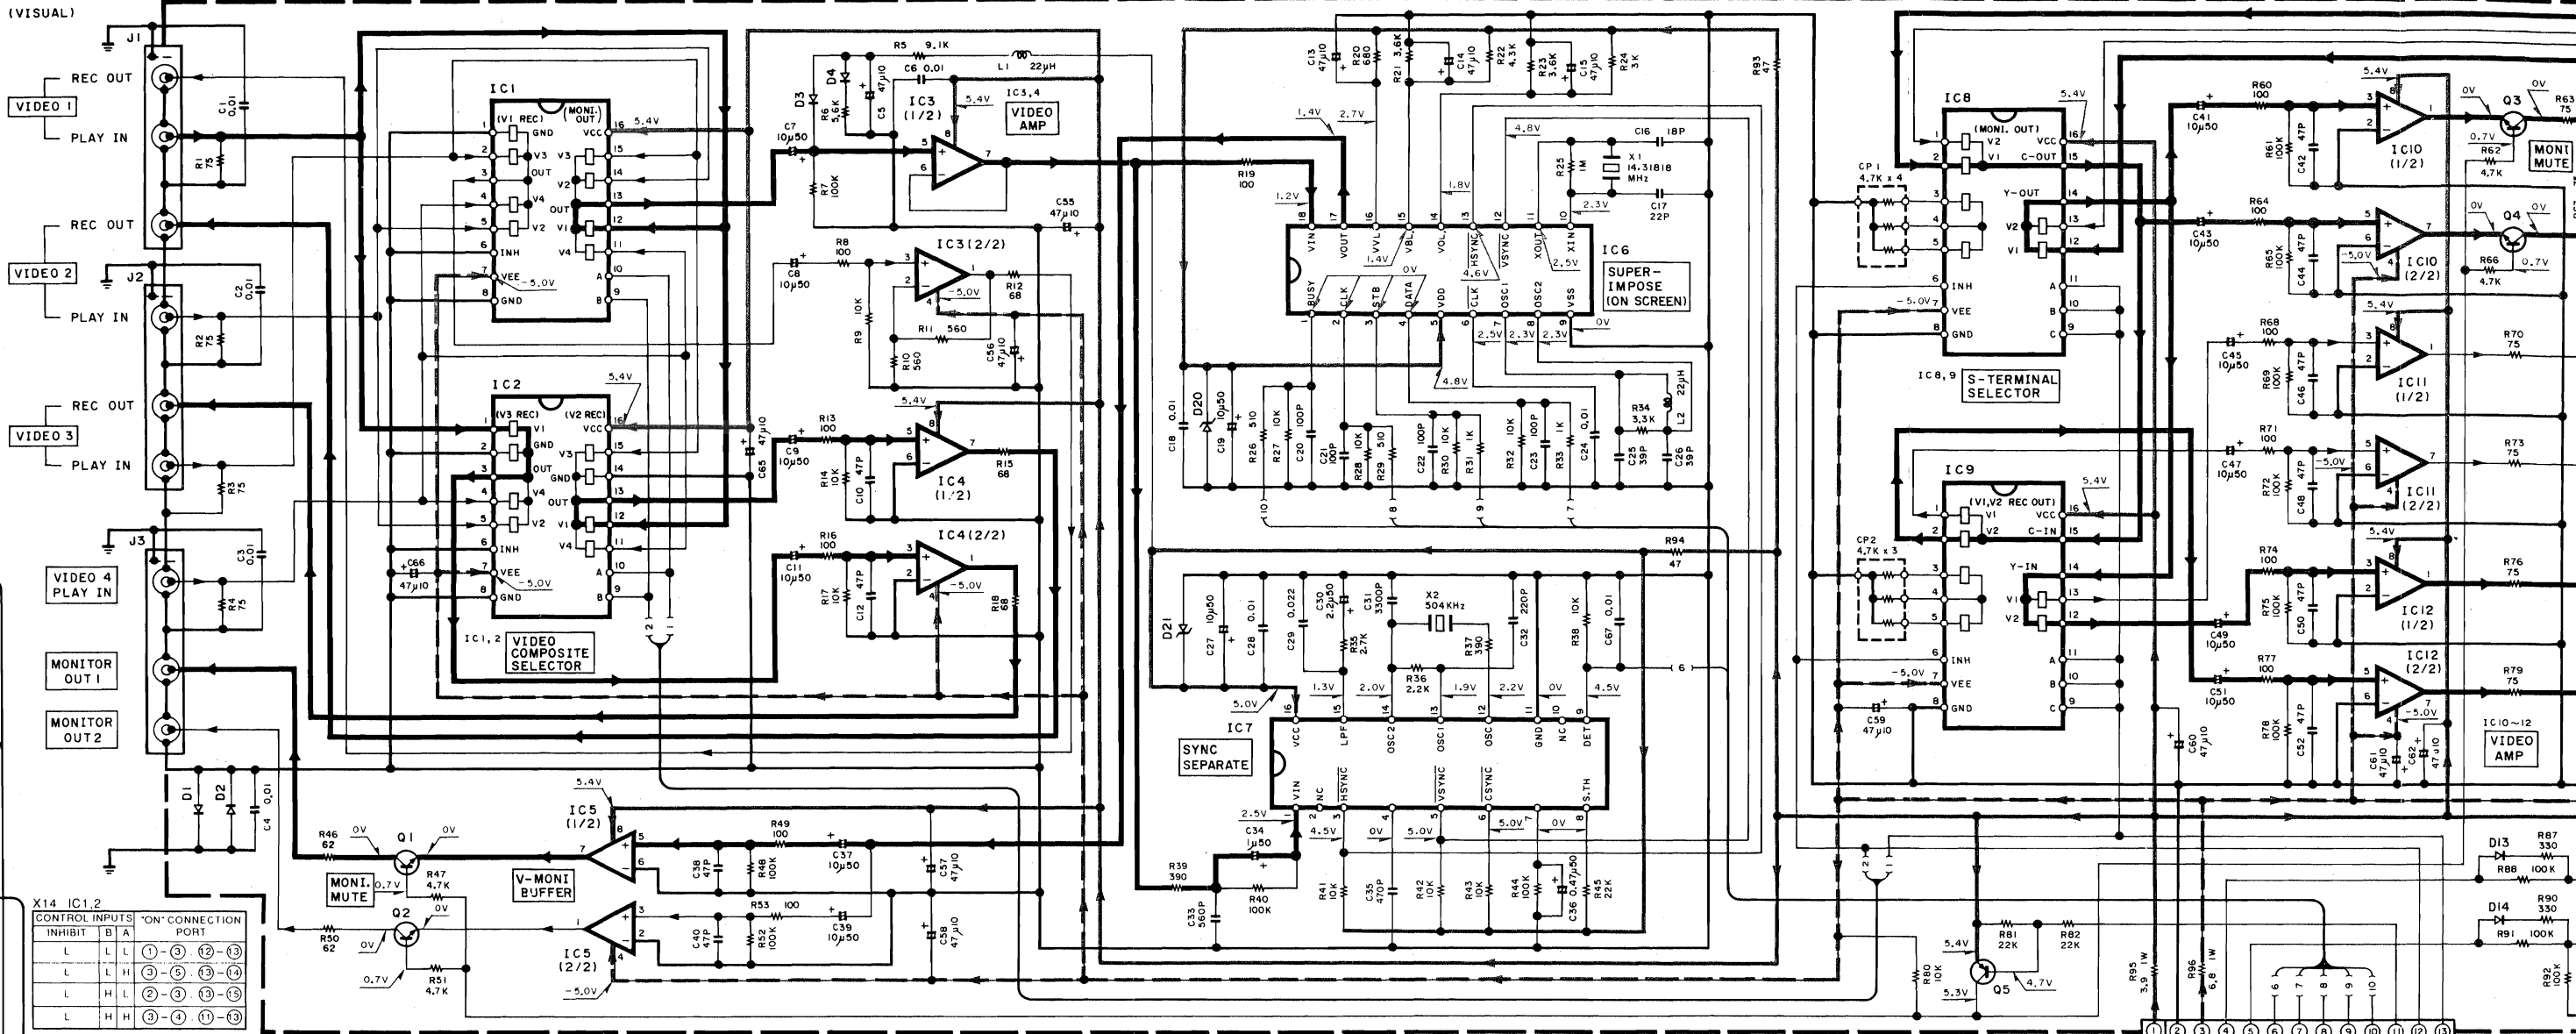

POWER SUPPLY UNIT (X00-2760-10)(A/3)

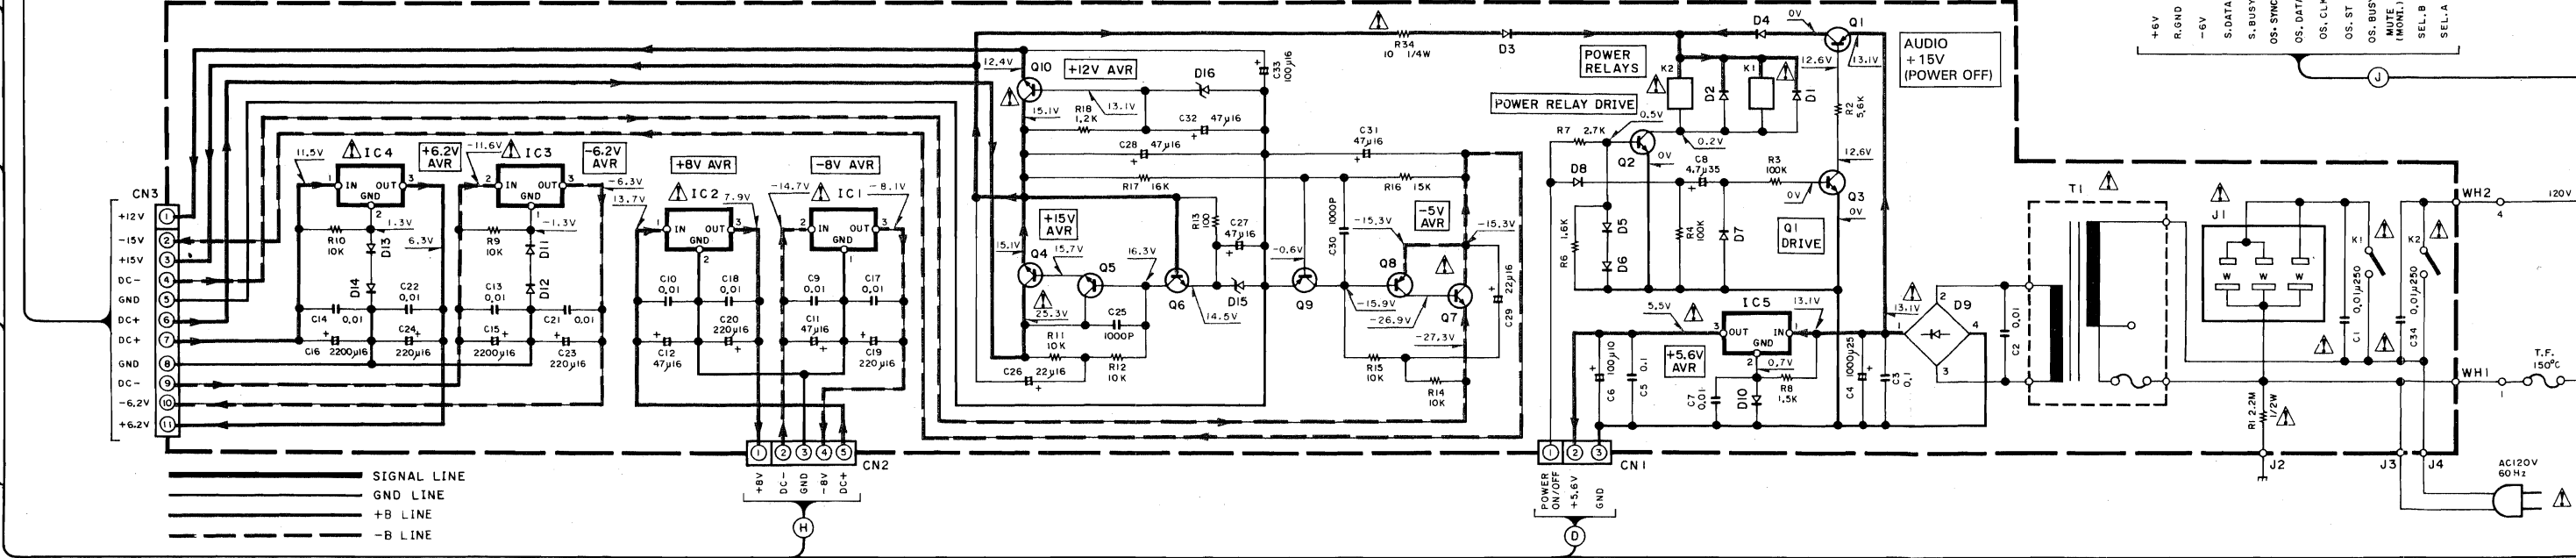


X14 IC1,2 CONTROL INPUTS "ON" CONNECTION PORT

INHIBIT	B	A	ON CONNECTION PORT
L	L	(1)-(2)	(7)-(8)
L	L	(3)-(4)	(9)-(10)
L	H	(1)-(2)	(11)-(12)
L	H	(3)-(4)	(13)-(14)
L	H	(5)-(6)	(15)-(16)

——— SIGNAL LINE
 ——— GND LINE
 ——— +B LINE
 ——— -B LINE

1
2
3
4
5
6
7

X13-A/4 -CN6 2/7
X13-A/4 -WH1 3/7
X13-A/4 -WH3 3/7
X13-A/4 -WH6 3/7
X13-A/4 -WH7 3/7
X13-A/4 -WH2 3/7
X13-A/4 -WH4 3/7

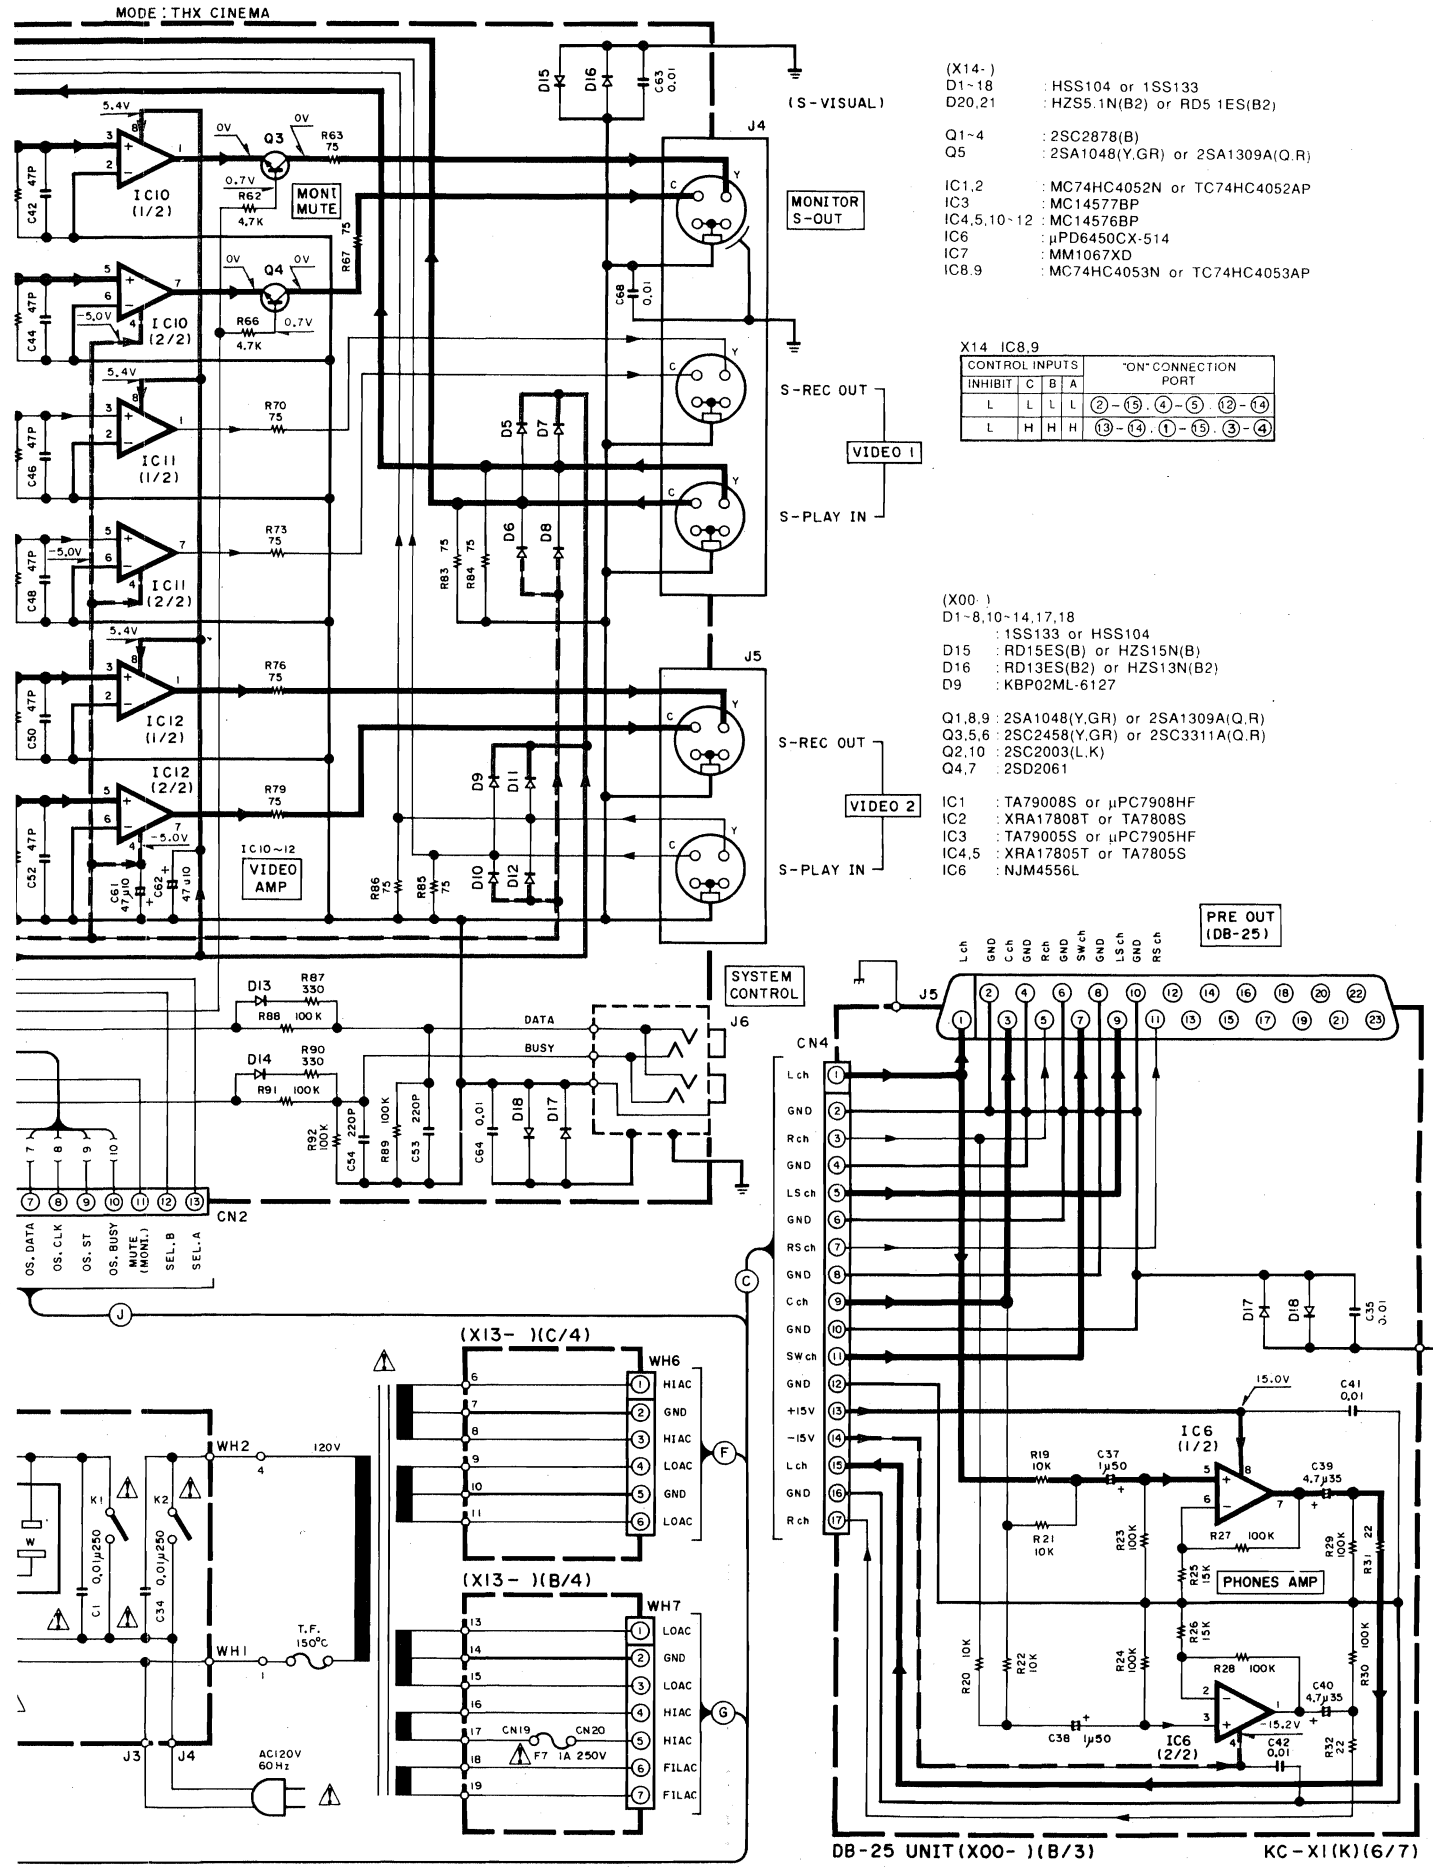


- (X14-)
 D1-18 : HSS104 or 1SS133
 D20,21 : HZS5.1N(B2) or RD5.1ES(B2)
- Q1-4 : 2SC2878(B)
 Q5 : 2SA1048(Y.GR) or 2SA1309A(O.R)
- IC1,2 : MC74HC4052N or TC74HC4052AP
 IC3 : MC14577BP
 IC4,5,10-12 : MC14576BP
 IC6 : μ PD6450CX-514
 IC7 : MM1067XD
 IC8,9 : MC74HC4053N or TC74HC4053AP

X14 IC8,9

CONTROL INPUTS				"ON" CONNECTION PORT			
INHIBIT	C	B	A	②-③	④-⑤	⑥-⑦	⑧-⑨
L	L	L	L	②-③	④-⑤	⑥-⑦	⑧-⑨
L	H	H	H	③-④	①-⑤	③-④	

- (X00-)
 D1-8,10-14,17,18 : 1SS133 or HSS104
 D15 : RD15ES(B) or HZS15N(B)
 D16 : RD13ES(B2) or HZS13N(B2)
 D9 : KBP02ML-6127
- Q1,8,9 : 2SA1048(Y.GR) or 2SA1309A(O.R)
 Q3,5,6 : 2SC2458(Y.GR) or 2SC3311A(O.R)
 Q2,10 : 2SC2003(L.K)
 Q4,7 : 2SD2061
- IC1 : TA79008S or μ PC7908HF
 IC2 : XRA17808T or TA7808S
 IC3 : TA79005S or μ PC7905HF
 IC4,5 : XRA17805T or TA7805S
 IC6 : NJM4556L

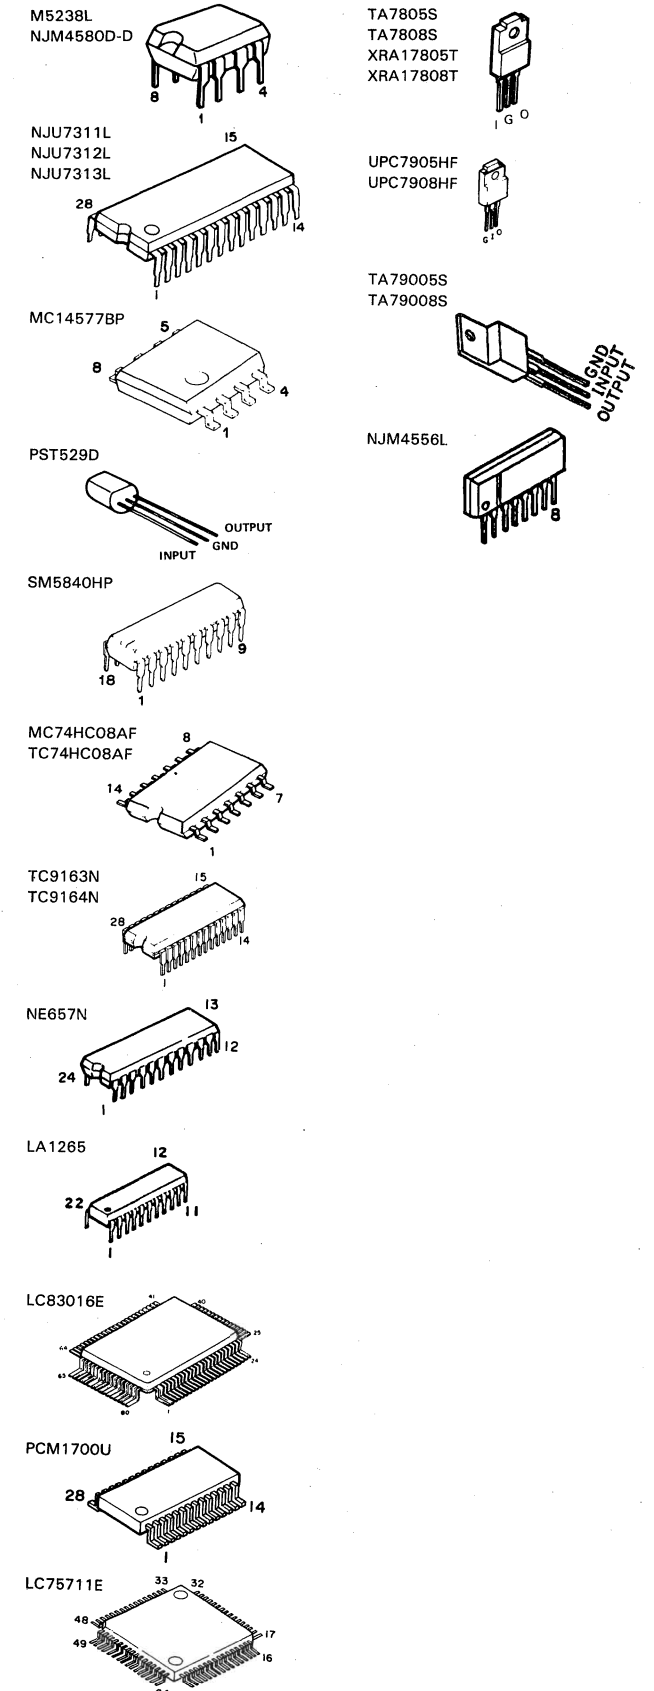

DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). \triangle Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

KC-X1
KENWOOD





Y05-2740-10

DISPLAY UNIT (X14-3700-10) (A/3)

MODE: THX CINEMA

ENCODER (X14-3700-10) (A/3)

X13-A/4 -CN5
3/7
K
X13-A/4 -CN3
3/7
L

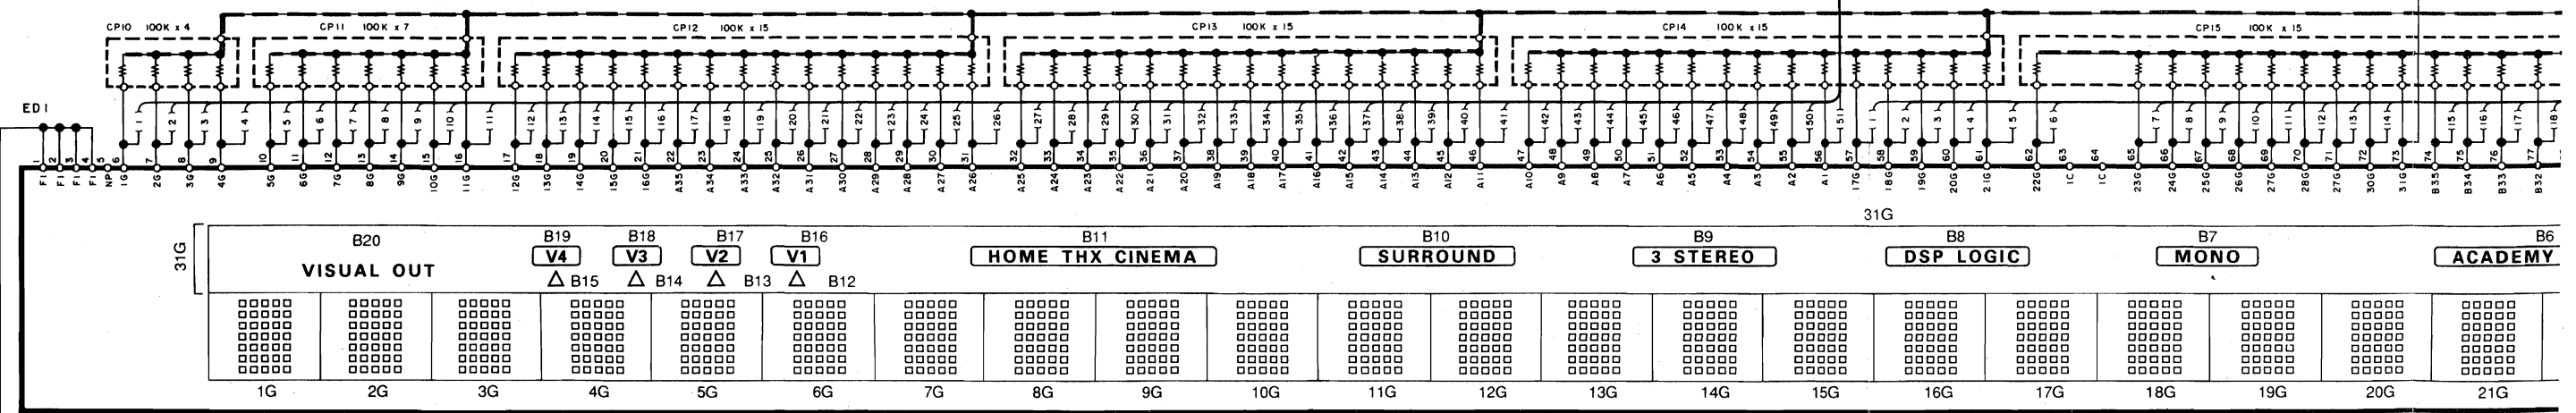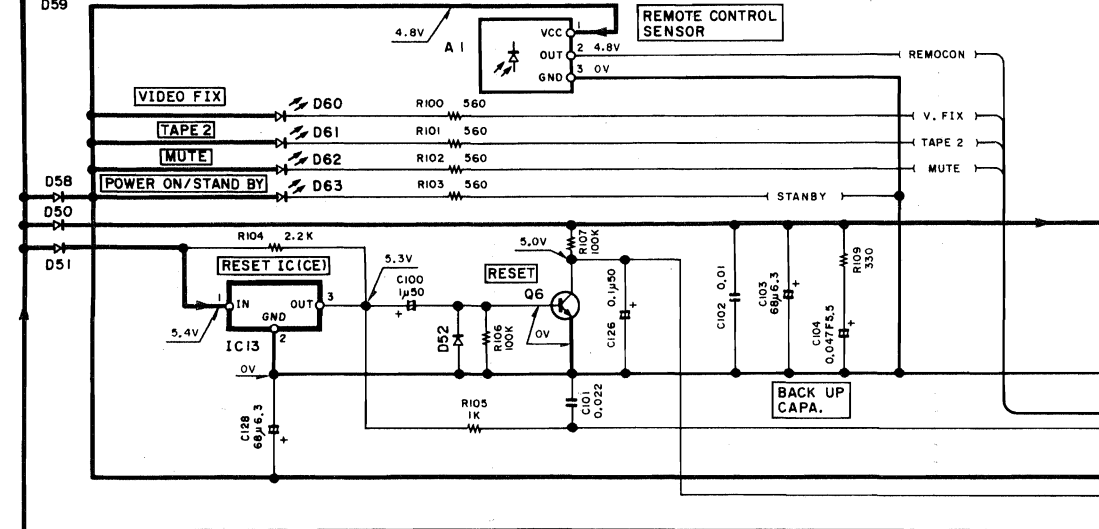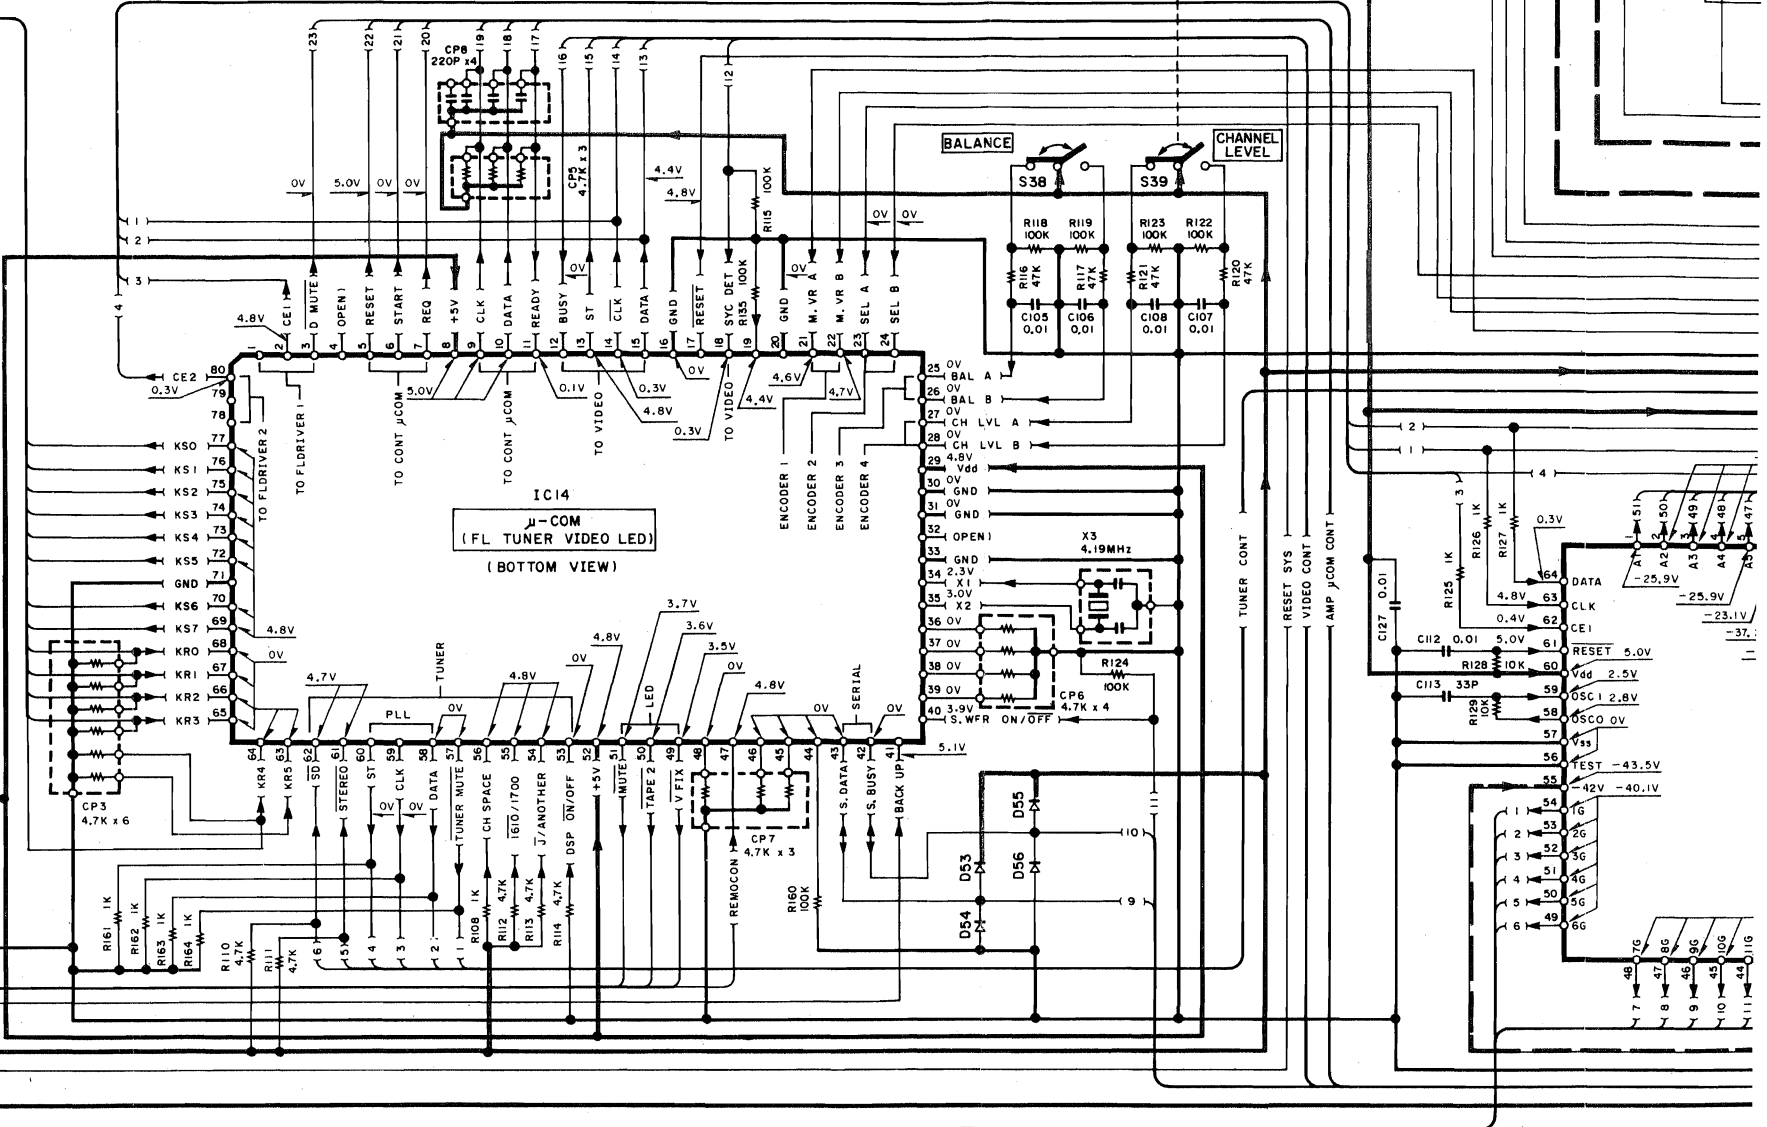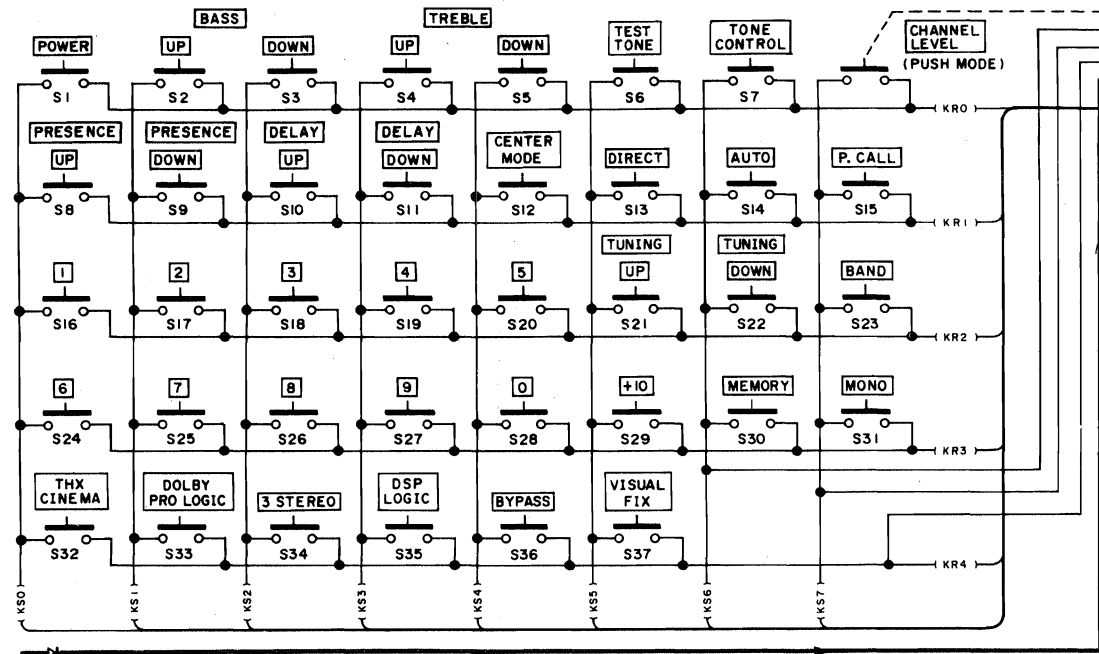


3

4

5

6

7

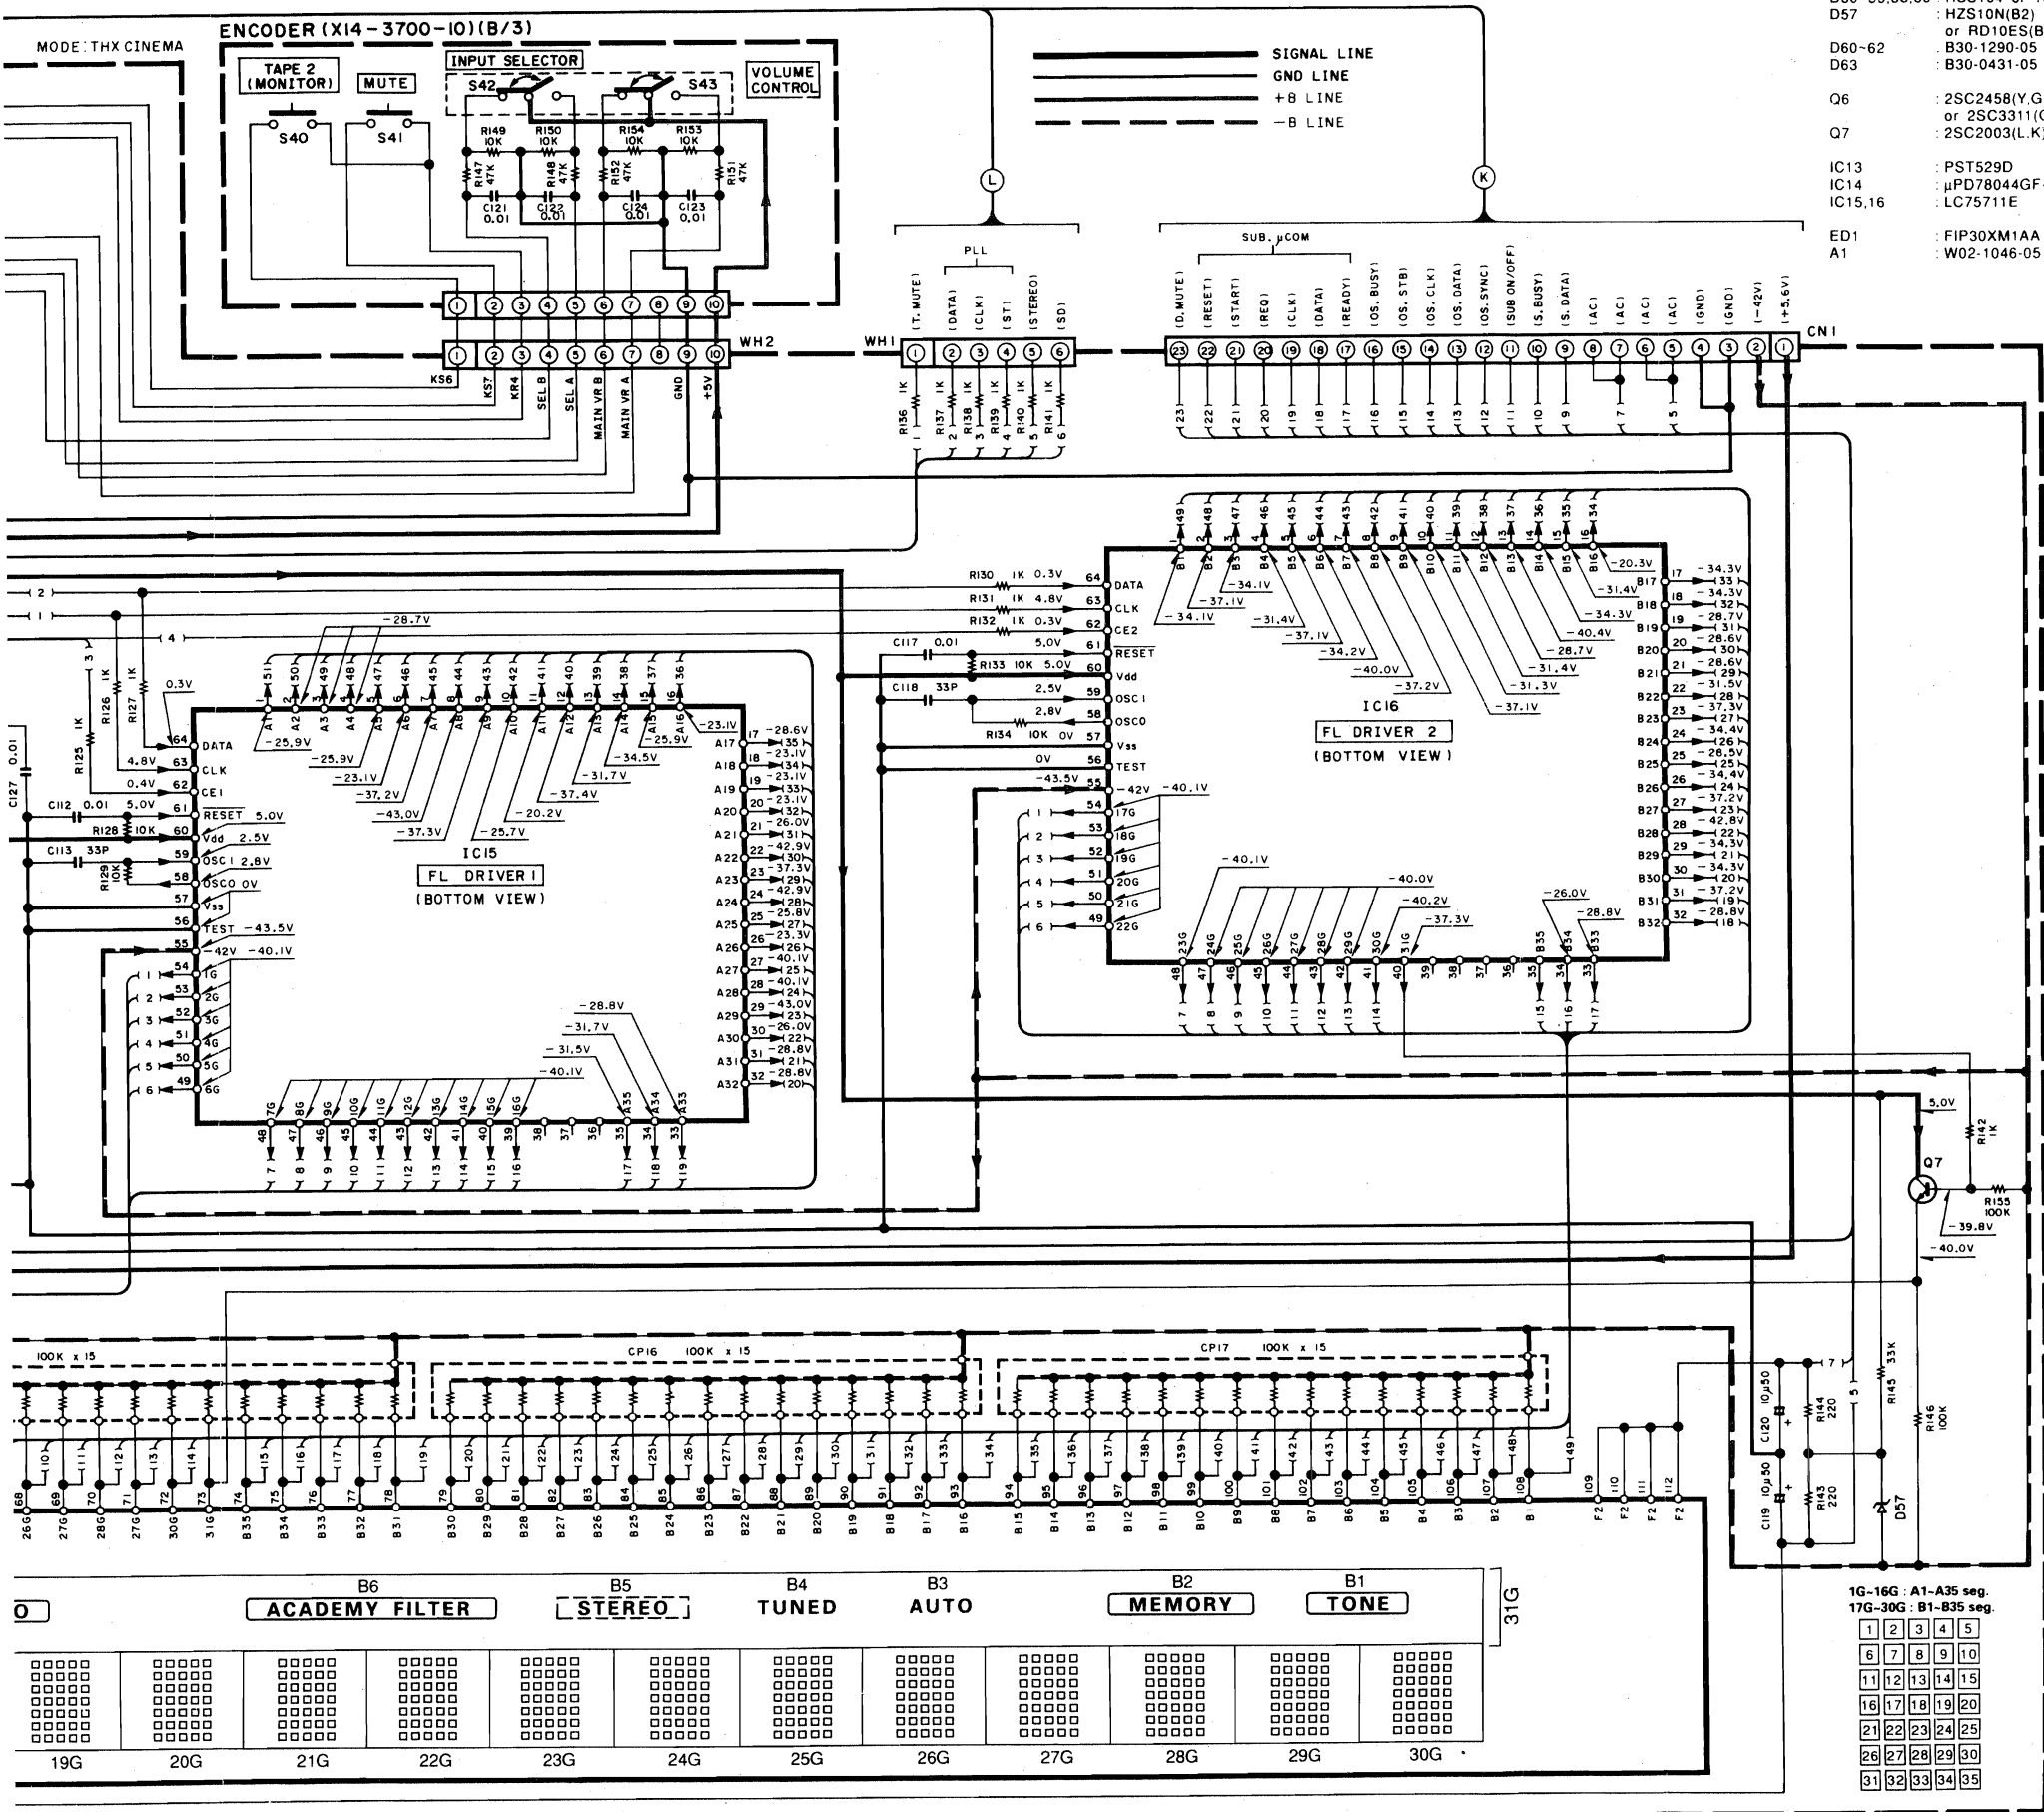


- D50-56,58,59 : HSS104 or 1SS133
 D57 : HZS10N(B2) or RD10ES(B2)
 D60-62 : B30-1290-05
 D63 : B30-0431-05
 Q6 : 2SC2458(Y,GR) or 2SC3311(O,R)
 Q7 : 2SC2003(L,K)
 IC13 : PST529D
 IC14 : μ PD78044GF-024
 IC15, 16 : LC75711E
 ED1 : FIP30XM1AA
 A1 : W02-1046-05

- 2SA733 (A)
 2SC1845
 2SC1923
 2SC2003
 2SC2878
 2SC945 (A)
 2SB772
 2SA1048
 2SA933S
 2SC1740S
 2SC2458
 2SD2061
 2SA1309A
 2SC3311A
 MC74HC04N
 MC74HC74AN
 TC74HC0404P
 TC74HC74AP 14
 MM1067XD
 XRU4053B
 LM7001
 MC74HC4052N
 MC74HC4053N
 TC9184P
 AN7470
 BA12003
 TC4053BP
 TC74HC4052AP
 TC74HC4053AP
 TC9213P
 M5238L
 NJM4580D-D
 NJU7311L
 NJU7312L
 NJU7313L
 MC14577BP
 PST529D
 SM5840HP
 MC74HC08AF
 TC74HC08AF
 NE657N
 LA1265
 LC83016E
 PCM1700U
 LC75711E
 TA7805S
 TA7808S
 XRA17805T
 XRA17808T
 UPC7905HF
 UPC7908HF
 TA79005S
 TA79008S
 NJM4556L



DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

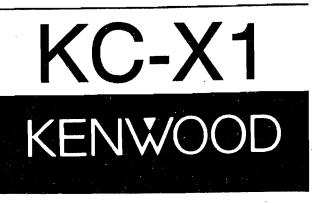


KC-X1 KC-X1

EXPLODED VIEW

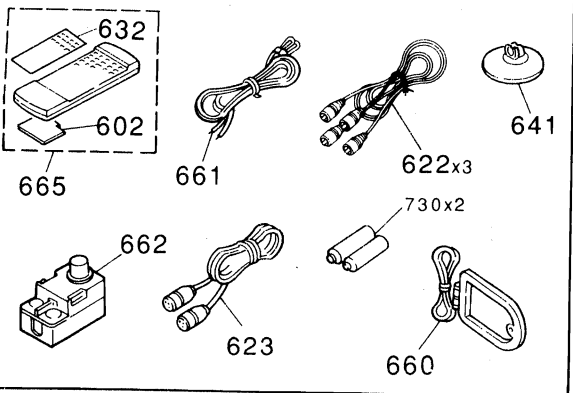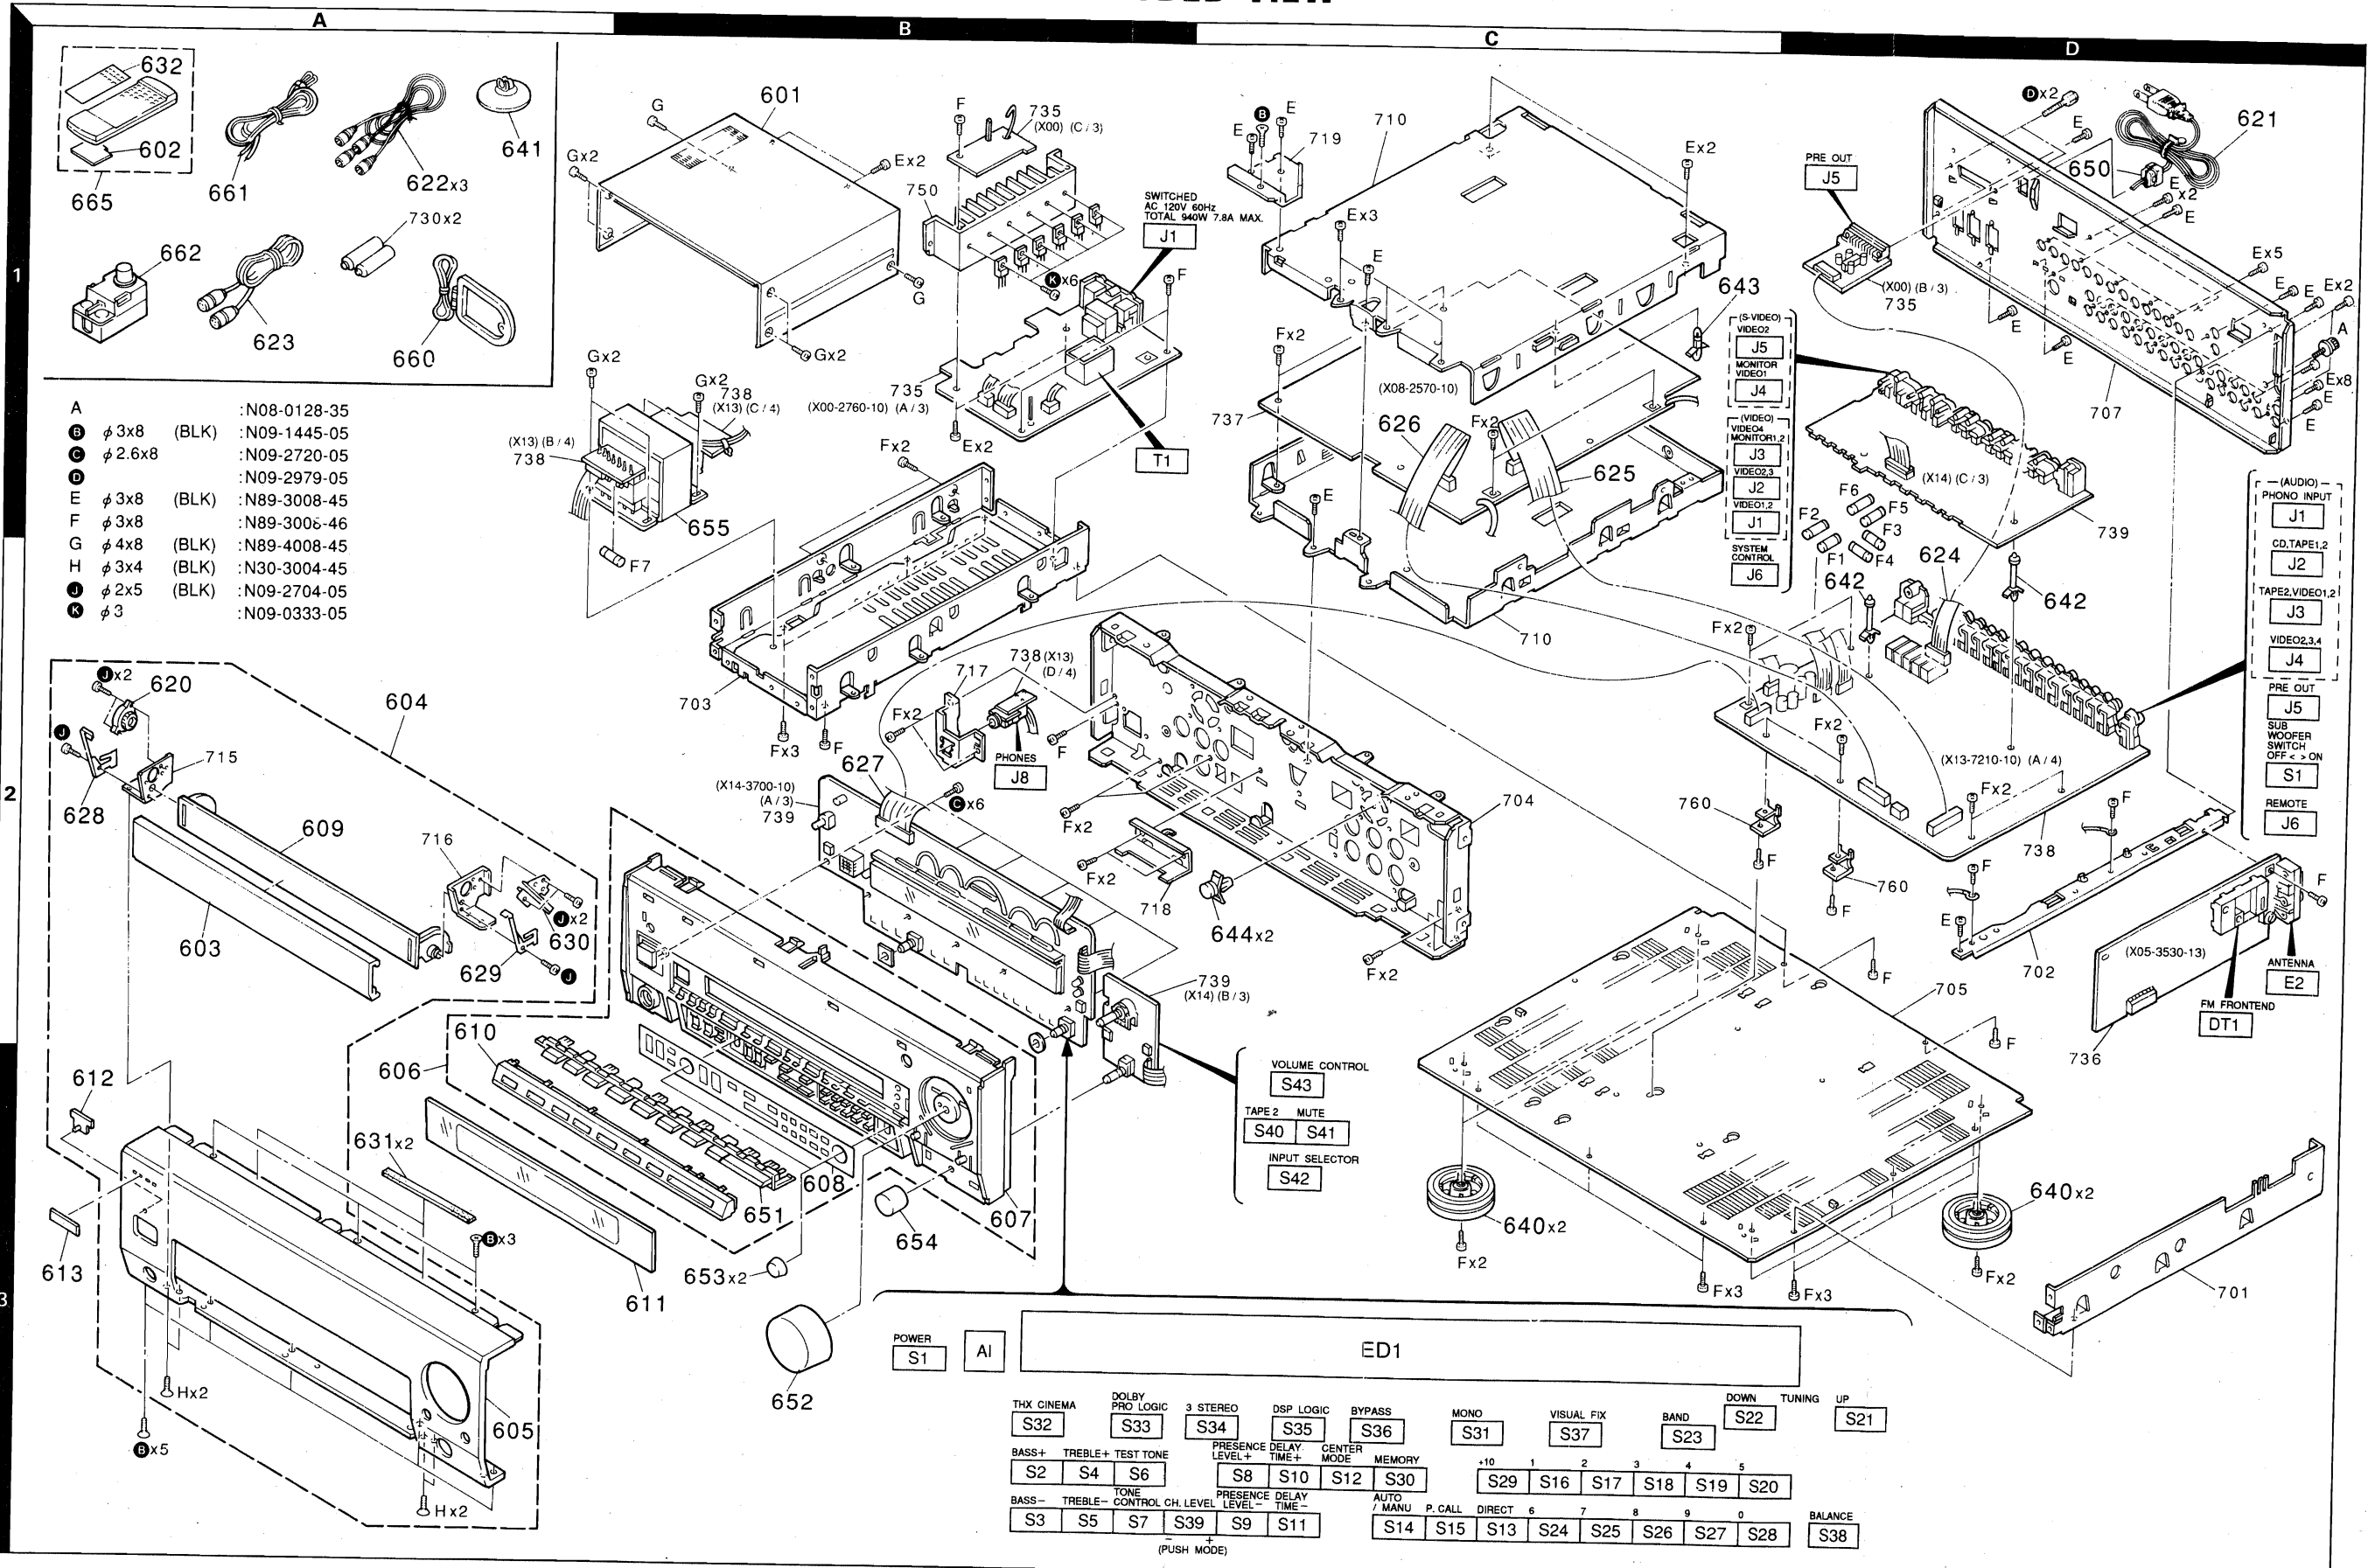

- A :N08-0128-35
- B ϕ 3x8 (BLK) :N09-1445-05
- C ϕ 2.6x8 :N09-2720-05
- D :N09-2979-05
- E ϕ 3x8 (BLK) :N89-3008-45
- F ϕ 3x8 :N89-3006-46
- G ϕ 4x8 (BLK) :N89-4008-45
- H ϕ 3x4 (BLK) :N30-3004-45
- I ϕ 2x5 (BLK) :N09-2704-05
- J ϕ 3 :N09-0333-05

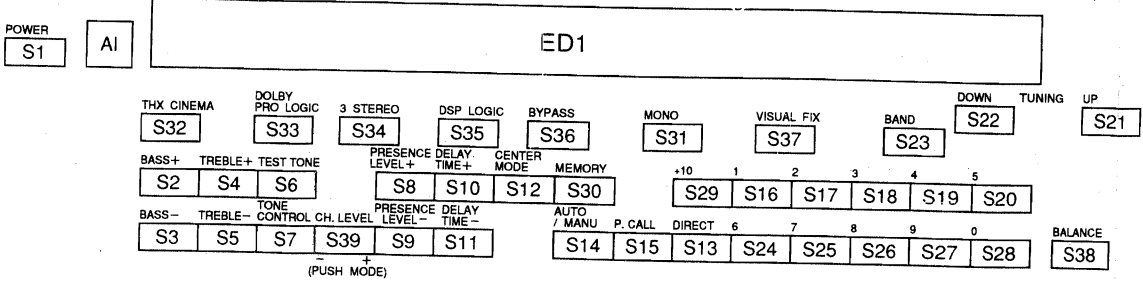

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Table 1: Parts List for KC-X1. Columns include Ref. No., Address, Parts No., Description, and Re- nation marks.

LS:Scandinavia K:USA P:Canada Y:FX(Far East, Hawaii) T:England E:Europe Y:AAFE(S)Europe X:Australia M:Other Areas

△ indicates safety critical components.

PARTS LIST

KC-X1

KC-X1

PARTS LIST

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Table 2: Parts List for KC-X1 (continued). Columns include Ref. No., Address, Parts No., Description, and Re- nation marks.

LS:Scandinavia K:USA P:Canada Y:FX(Far East, Hawaii) T:England E:Europe Y:AAFE(S)Europe X:Australia M:Other Areas

△ indicates safety critical components.

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Table 3: Parts List for KC-X1 (continued). Columns include Ref. No., Address, Parts No., Description, and Re- nation marks.

LS:Scandinavia K:USA P:Canada Y:FX(Far East, Hawaii) T:England E:Europe Y:AAFE(S)Europe X:Australia M:Other Areas

△ indicates safety critical components.

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Table 4: Parts List for KC-X1 (continued). Columns include Ref. No., Address, Parts No., Description, and Re- nation marks.

LS:Scandinavia K:USA P:Canada Y:FX(Far East, Hawaii) T:England E:Europe Y:AAFE(S)Europe X:Australia M:Other Areas

△ indicates safety critical components.

PARTS LIST

* New Parts
 Parts without Parts No. are not supplied.
 Les articles non mentionnés dans le Parts No. ne sont pas fournis.
 Teile ohne Parts No. werden nicht geliefert.

⑨

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 向	Re- marks 備考
D26			HSS104	DIODE		
D26			1SS133	DIODE		
D27, 28			HZS9-2N(B2)	ZENER DIODE		
D27, 28			R03-3ES(B2)	ZENER DIODE		
D31-34			HSS104	DIODE		
D31-34			1SS133	DIODE		
IC1			NJ07312L	IC(ANALOG SWITCH)		
IC1			TC9165N	IC(BILATERAL SWITCH X16)		
IC2			NJ07313L	IC(ANALOG SWITCH)		
IC2			TC9164N	IC(16CH BILATERAL SELECTOR SW)		
IC3			NJM4580L-D	IC(OP AMP X2)		
IC4			TC9213P	IC(2CH ELECTRONIC VOLUME)		
IC5, 6			NJM4580L-D	IC(OP AMP X2)		
IC7			TC9213P	IC(2CH ELECTRONIC VOLUME)		
IC8, 9			NJM4580L-D	IC(OP AMP X2)		
IC10			TC9213P	IC(2CH ELECTRONIC VOLUME)		
IC11			NJM4580L-D	IC(OP AMP X2)		
IC13			BA12003	IC(TRANSISTOR ARRAY)		
IC14			NJM4580D-D	IC(OP AMP X2)		
IC15			TC9184P	IC(ELECTRO TONE CONTROL)		
IC16			NJM4580L-D	IC(OP AMP X2)		
IC17			NJM4580D-D	IC(OP AMP X2)		
IC18		*	UPD78043CF-020	IC(MICROPROCESSOR)		
IC19		*	MC74HC08AF	IC(AND GATE)		
IC19			TC74HC08AF	IC(AND GATE)		
IC27			NJM4580L-D	IC(OP AMP X2)		
Q1, 2			2SC2878(B)	TRANSISTOR		
Q3, 4			2SA1048(Y,GR)	TRANSISTOR		
Q5, 6			2SA1309A(Q,R)	TRANSISTOR		
Q7			2SC2878(B)	TRANSISTOR		
Q7			2SA1048(Y,GR)	TRANSISTOR		
Q8, 9			2SA1309A(Q,R)	TRANSISTOR		
Q10			2SC2878(B)	TRANSISTOR		
Q11-16			2SC2003(L,K)	TRANSISTOR		
Q17			2SC2878(B)	TRANSISTOR		
Q17			2SA1048(Y,GR)	TRANSISTOR		
Q18			2SA1309A(Q,R)	TRANSISTOR		
Q19			2SC2458(Y,GR)	TRANSISTOR		
Q20			2SC3311A(Q,R)	TRANSISTOR		
Q20			2SC2458(Y,GR)	TRANSISTOR		
Q20			2SC3311A(Q,R)	TRANSISTOR		
DISPLAY UNIT (X14-3700-10)						
D60-62			B30-1290-05	LED		
D65			B30-0431-05	LED(LN21CPH)		
C1	-4		CK45FF1H103Z	CERAMIC		Z 10WV
C5			CE04KW1A470M	ELECTRO		Z 0.010UF
C6			CK45FF1H103Z	CERAMIC		Z 50WV
C7-9			CE04KW1H100M	ELECTRO		J
C10			CC45FSL1H470J	CERAMIC		J
C11			CE04KW1H100M	ELECTRO		50WV
C12			CC45FSL1H470J	CERAMIC		J
C13-15			CE04KW1A470M	ELECTRO		47UF 10WV
C16			CC45FSL1H180J	CERAMIC		18PF

L:Scandinavia
 Y:Far East, Hawaii
 Y:AFES(Europe)

KUSA
 T:England
 X:Australia
 M:Other Areas

P:Canada
 E:Europe
 M:Other Areas

indicates safety critical components.

* New Parts
 Parts without Parts No. are not supplied.
 Les articles non mentionnés dans le Parts No. ne sont pas fournis.
 Teile ohne Parts No. werden nicht geliefert.

⑨

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 向	Re- marks 備考
C113			C91-0749-05	CERAMIC		
C115-119			CE04KW1V4R7M	ELECTRO		
C122			C91-0769-05	CERAMIC		
C124			C91-0769-05	CERAMIC		
C150-157			CK45FF1H103Z	CERAMIC		
C158, 159			CE04B41E222M	ELECTRO		
C160, 161			CE04B41C222M	ELECTRO		
C162			CE04K41J102M	ELECTRO		
C163			CK45FF1H103Z	CERAMIC		
C164			CE04KW1J470M	ELECTRO		
C165			CE04DW1J101M	ELECTRO		
C166			CE04KW0J221M	ELECTRO		
C167			CK45FF1H103Z	CERAMIC		
C168			CE04KW1A101M	ELECTRO		
J1	2D	*	E63-0100-05	PHONE JACK(PHONE INPUT)		
J2-4	2D	*	PHONE JACK(CD TAPE, VIDEO)			
J5	2D	*	PHONE JACK(PREOUT)			
J6	2D		E06-0806-05	CYLINDRICAL RECEPTACLE(REMOTE)		
J8	2B		E11-0208-05	PHONE JACK(PHONES)		
F1-4			F04-1026-05	FUSE (UL)		(250V 1A)
F5, 6		*	F06-1222-05	FUSE (UL)		(250V 1.25A)
F7			F04-1026-05	FUSE (UL)		(250V 1A)
CN7-20			J13-0075-05	FUSE CLIP		
X1			L78-0267-05	RESONATOR (4.194MHZ)		
CP1			R90-0878-05	MULTI-COMP		10KX5
CP2			R90-0855-05	MULTI-COMP		J 1/4W
CP3			R90-0803-05	MULTI-COMP		J 1/4W
CP4			R90-0805-05	MULTI-COMP		J 1/4W
CP5		*	R90-0895-05	MULTI-COMP		10KX9
CP6			R90-0802-05	MULTI-COMP		10KX10
CP7		*	R90-0906-05	MULTI-COMP		J 1/4W
CP8		*	R90-0907-05	MULTI-COMP		1.0KX12
CP9, 10		*	R90-0850-05	MULTI-COMP		1.0KX13
R267, 268			RD14NB2E220J	RD		J 1/6W
R336, 339			RS14KB3A2R7J	FL-PROOF RS		J 1/4W
X1-5	2D		S51-2089-05	MAGNETIC RELAY(PREOUT)		
S1			S31-2094-05	SLIDE SWITCH(S.WOOFER ON/OFF)		
D1-10			HSS104	DIODE		
D1-10			1SS133	DIODE		
D11			HZS3-3N(B2)	ZENER DIODE		
D13			R03-3ES(B2)	ZENER DIODE		
D13			HSS104	DIODE		
D15, 16			1SS133	DIODE		
D17-20			KB802ML-6127	DIODE		
D21			HZS20N(B)	ZENER DIODE		
D21			RD20ES(B)	ZENER DIODE		
D22			HZS24N(B)	ZENER DIODE		
D23			RZ45ES(B)	ZENER DIODE		
D23			HSS104	DIODE		
D23			1SS133	DIODE		

L:Scandinavia
 Y:Far East, Hawaii
 Y:AFES(Europe)

KUSA
 T:England
 X:Australia
 M:Other Areas

P:Canada
 E:Europe
 M:Other Areas

indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnés dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

12

Ref. No. 参照番号	Address 位置	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
J5	1C	E06-0408-05	CYLINDRICAL RECEPTACLE(S-OUT)	
J6	1C	E11-0188-05	MINIATURE PHONE JACK(S-CENTRL)	
L1	,2	L40-2201-17	SMALL FIXED INDUCTOR(22UH,K)	
X1		L77-1182-05	CRYSTAL RESONATOR(14.31818M)	
X2		L78-0272-05	RESONATOR (504K)	
X3		L78-0267-05	RESONATOR (4.194MHZ)	
C91	,2	R90-0832-05	MULTI-COMP 4.7KX3 J 1/6W	
C93		R90-0811-05	MULTI-COMP 4.7KX6 J 1/6W	
C95		R90-0832-05	MULTI-COMP 4.7KX3 J 1/6W	
C96		R90-0824-05	MULTI-COMP 4.7KX4 J 1/6W	
C97		R90-0832-05	MULTI-COMP 4.7KX3 J 1/6W	
C98		R90-0877-05	MULTI-CAPA 220PX4	
C99		R90-0482-05	MULTI-COMP 100KY4 J 1/6W	
C10		R90-0803-05	MULTI-COMP 100KY7 J 1/4W	
C11		R90-0875-05	MULTI-COMP 100KX15 J 1W	
C12-17		RS14KB3A3R9J	FL-PROOF RS 3.9	
R96		RS14KB3A6R8J	FL-PROOF RS 6.8 J 1W	
S1	-37	S40-1064-05	TACT SWITCH(POWER,BASS etc.)	
	,41	S40-1064-05	TACT SWITCH(TAPE2,NOTE)	
S38		T99-0532-05	ROTARY ENCODER(BALANCE)	
S39		T99-0533-05	ROTARY ENCODER(CH.LEVEL)	
S42		T99-0526-05	ROTARY ENCODER(INPUT SELECTOR)	
S43		T99-0534-05	ROTARY ENCODER(VOLUME CONTROL)	
D1	-18	HSS104	DIODE	
D1	-18	ISS133	DIODE	
D20	,21	HZ55.1N(82)	ZENER DIODE	
D20	,21	RD5.1ES(82)	ZENER DIODE	
D50	-56	HSS104	DIODE	
D50	-56	ISS133	DIODE	
D57		HZ510N(B)	ZENER DIODE	
D57		RD10ES(B)	ZENER DIODE	
D58	,59	HSS104	DIODE	
D58	,59	ISS133	DIODE	
E01		FIP30XM1AA	INDICATOR TUBE	
I01	,2	MC74HC4052N	IC(4ch MULTIPLEXER X2)	
I01	,2	TC74HC4052AP	IC(ANALOG MULTIPLEXER X3)	
I03		MC145778P	IC(DUAL VIDEO AMP)	
I04	,5	MC145768P	IC(OP AMP X2)	
I06		UPD6450CX-514	IC(SUPER IMPOSE)	
I07		MM1067XD	IC(SYNC SEPARATION)	
I08	,9	MC74HC4053N	IC(2ch MULTIPLEXER X3)	
I08	,9	TC74HC4053AP	IC(ANALOG MULTIPLEXER)	
I09		MC145768P	IC(OP AMP X2)	
I013		PST529D	IC(SYSTEM RESET)	
I014		UPD780446F-024	IC(MICROPROCESSOR)	
I015	,16	LC75711E	IC(OISPLAY DRIVER)	
Q1	-4	2SC2878(B)	TRANSISTOR	
Q5		2SA1048(Y,GR)	TRANSISTOR	
Q5		2SA1309A(G,R)	TRANSISTOR	
Q6		2SC456(Y,GR)	TRANSISTOR	
Q6		2SC331A(G,R)	TRANSISTOR	
Q7		2SC2003(C,K)	TRANSISTOR	
A1	B9	H02-1046-05	ELECTRIC CIRCUIT MODULE	

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnés dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

11

Ref. No. 参照番号	Address 位置	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
C17		CC45FSLH220J	22PF J	
C18		CK45FFIH03Z	0.010UF Z	
C19		CE04KW1H00M	50WV	
C20	-23	CC45FSLH101J	100PF J	
C24		CK45FFIH03Z	0.010UF Z	
C25	,26	CC45FSLH390J	39PF J	
C27		CE04KW1H00M	50WV	
C28		CK45FFIH03Z	0.010UF Z	
C29		CK45FFIH22Z	0.022UF Z	
C30		CE04KW1H2R2M	50WV	
C31		CK45FB1H32K	K	
C32		CC45FSLH221J	220PF J	
C33		CK45FB1H561K	K	
C34		CE04KW1H010M	50WV	
C35		CK45FB1H471K	K	
C36		CE04KW1HR47M	50WV	
C37		CE04KW1H00M	50WV	
C38		CC45FSLH470J	47PF J	
C39		CE04KW1H00M	50WV	
C40		CC45FSLH470J	47PF J	
C41		CE04KW1H00M	50WV	
C42		CC45FSLH470J	47PF J	
C43		CE04KW1H00M	50WV	
C44		CC45FSLH470J	47PF J	
C45		CE04KW1H00M	50WV	
C46		CC45FSLH470J	47PF J	
C47		CE04KW1H00M	50WV	
C48		CC45FSLH470J	47PF J	
C49		CE04KW1H00M	50WV	
C50		CC45FSLH470J	47PF J	
C51		CE04KW1H00M	50WV	
C52		CC45FSLH470J	47PF J	
C53	,54	CC45FSLH221J	220PF J	
C53	-62	CE04KW1H470M	10WV	
C63	,64	CK45FFIH03Z	0.010UF Z	
C65	,66	CE04KW1H470M	10WV	
C67	,68	CK45FFIH03Z	0.010UF Z	
C100		CE04KW1H010M	50WV	
C101		C91-0085-05	0.022UF N	
C102		CK45FFIH03Z	0.010UF Z	
C103		C90-3213-05	68UF 6.3WV	
C104		C90-1826-05	0.047F 5.5WV	
C105	-108	C91-0769-05	0.01UF K	
C112		CK45FFIH03Z	0.010UF Z	
C113		CC45FSLH330J	33PF J	
C117		CK45FFIH03Z	0.010UF Z	
C118		CC45FSLH330J	33PF J	
C119	,120	CE04KW1H00M	100UF 50WV	
C121	-124	C91-0769-05	0.01UF K	
C126		C90-3248-05	0.1UF 50WV	
C127		CK45FFIH03Z	0.010UF Z	
C128		C90-3213-05	68UF 6.3WV	
J1	-3	E13-0313-05	PHONE JACK(VIDEO1-4,MONITOR)	
J4	1C	E06-0409-05	CYLINDRICAL RECEPTACLE(S-OUT)	

△ indicates safety critical components.

L:Scandinavia
Y:PX(Far East, Hawaii)
Y:AFES(Europe)

L:Scandinavia
Y:PX(Far East, Hawaii)
Y:AFES(Europe)

L:Scandinavia
Y:PX(Far East, Hawaii)
Y:AFES(Europe)

L:Scandinavia
Y:PX(Far East, Hawaii)
Y:AFES(Europe)

SPECIFICATIONS

AUDIO section

Total harmonic distortion	
..... 0.002 % (20 Hz- 20 kHz, 1.2 V)	
..... 0.002 % (1 kHz, 1.2 V)	
Frequency response	
LINE (CD, TAPE1, 2, VIDEO1)	
..... 15 Hz- 100 kHz, + 0 dB,- 3 dB	
PHONO "RIAA" response	
..... 20 Hz - 20 kHz, ± 0.5 dB	
Signal to noise ratio	
(IHF'66)	
PHONO (MM)	78 dB
LINE (CD, TAPE 1~2, VIDEO 1~4)	100 dB
Input sensitivity/impedance	
PHONO (MM)	2.5 mV/47 kΩ
LINE (CD, TAPE 1~2, VIDEO 1~4)	200 mV/47 kΩ
Tone control	
BASS	± 8 dB (at 100 Hz)
TREBLE	± 8 dB (at 10 kHz)
Output level/impedance	
Front channel preout	1.2 V/390 Ω
Sub woofer, center	
channel preout	1.2 V/390 Ω
Surround channel preout	1.2 V/390 Ω

VIDEO section

Television format	NTSC
Input level/impedance	
VIDEO (Composite)	1 Vp-p/75 Ω
Input (VIDEO 1, 2, 3, 4)	
S-VIDEO (Luminance signal)	1 Vp-p/75 Ω
(Chrominance signal)	0.286 Vp-p/75 Ω
Input (VIDEO 1, 2)	
Output level/impedance	
VIDEO (Composite)	1 Vp-p/75 Ω
output (VIDEO 1, 2, 3, MONITOR OUT 1, 2)	
S-VIDEO (Luminance signal)	1Vp-p/75 Ω
(Chrominance signal)	0.286Vp-p/75 Ω
output (VIDEO 1, 2, MONITOR OUT)	

FM tuner section

Tuning frequency range	87.5 MHz-108 MHz
Usable sensitivity (MONO at 75 Ω)	0.95 μV/10.8 dBf
Total harmonic distortion (at 1 kHz)	
MONO	0.1 % (65 dBf input)
STEREO	0.2 % (65 dBf input)
Signal to noise ratio (at 1 kHz)	
MONO	80 dB (65 dBf input)
STEREO	74 dB (65 dBf input)
Stereo separation (at 1 kHz)	
1 kHz	50 dB
Capture ratio (WIDE)	1.0 dB
Selectivity (± 400 kHz)	53 dB

AM tuner section

Tuning frequency range	
10 kHz step	530 kHz - 1,700 kHz
Usable sensitivity	10 μV/ (400 μV/m)
Signal to noise ratio (at 30% mod. 1mV input)	50 dB
Total harmonic distortion	0.4 %

GENERAL

Power consumption	
.....	50 W
AC outlets	
SWITCHED	3 (940 W max.)
Dimensions	W : 440 mm (17-5/16")
	H : 161.5 mm (6-3/8")
	D : 380 mm (14-15/16")
Weight (Net)	10.5 kg (23.1lb)

KC-X1

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice. DOLBY and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Noise reduction circuit made under license from Dolby Laboratories Licensing Corporation.

KENWOOD poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison, les spécifications sont sujettes à modifications sans préavis. La marque DOLBY et le double "D" sont des marques déposées des Dolby Laboratories. Le système de réduction du bruit de fond est fabriqué sous licence des Dolby Laboratories.

KENWOOD strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten. DOLBY und Doppel-D-Symbol sind eingetragene Warenzeichen der Dolby Laboratories. Dolby-Rauschunterdrückung mit Lizenz der Dolby Laboratories gefertigt.

Note:

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on, the U.S.A. (K) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

Alive Mitake, 2-5, 1-chome Shibuya, Shibuya-ku, Tokyo 150, Japan

KENWOOD U.S.A. CORPORATION

CONSUMER ELECTRONICS GROUP
P.O. BOX 22745, 2201 East Dominguez St., Long Beach, CA 90810 U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O. BOX 55-2791, Piso 6 Plaza Chase, Cl. 47 y Aquilino de la Guardia, Panama, Republic de Panama

TRIO-KENWOOD U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts, WD1 8EB United Kingdom

KENWOOD ELECTRONICS BENELUX N.V.

Mechelsesteenweg 418 B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 6056 Heusenstamm, Germany

TRIO-KENWOOD FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD LINEAR S.p.A.

20125, Milano-Via Arbe, 50, Italy

KENWOOD ESPAÑA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001 499 074)

P.O. BOX 504, 8 Figtree Drive, Australia Centre, Homebush, N.S.W. 2140, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Unit 3712-3724, Level 37 Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong N.T. Hong Kong

KENWOOD ELECTRONICS SINGAPORE PTE LTD

No. 1 Genting Lane # 07-00, Singapore, 1334