

CD RECEIVER

KDC-X615,6015 KDC-6080R/RY/RV,7016


SERVICE MANUAL

KENWOOD


© 2000-2 PRINTED IN JAPAN
B51-7592-00 (N) 3442

Extension cord	Parts No.
CD mechanism(22P)	W05-0618-00


KDC-X615

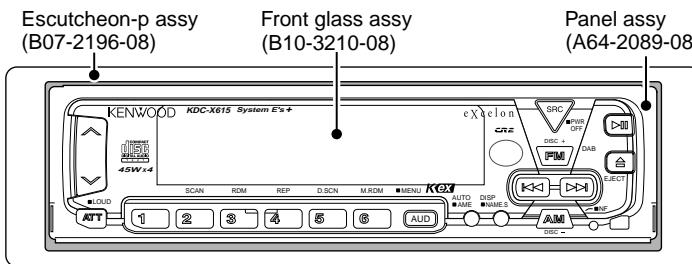


KDC-6015

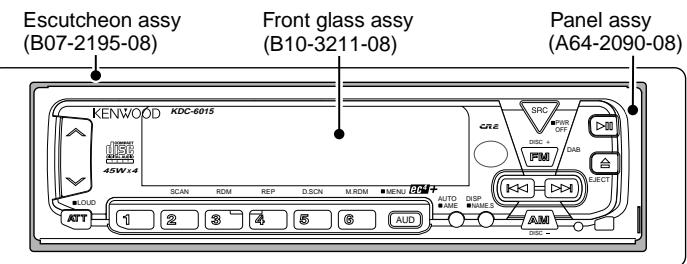


KDC-6080R/RY/RV

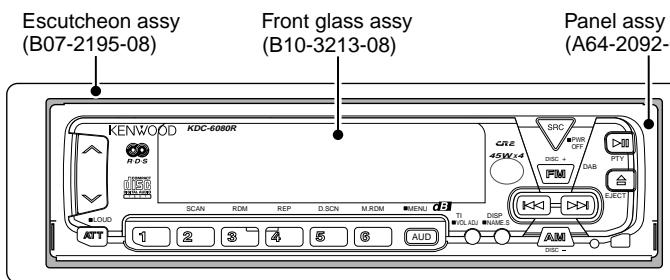


KDC-7016

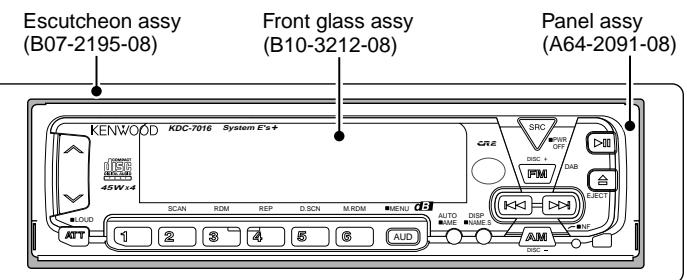

Plastic cabinet assy
(A02-1494-08)

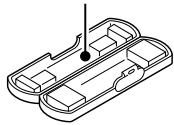

Mounting hardware assy
(J21-9585-08)

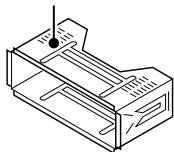


Remote controller assy
(A70-0883-05)
:KDC-6015/7016




Remote controller assy
(A70-0894-05)
:KDC-X615




Escutcheon(J CAR)
(B07-2186-08)
:KDC-X615/6015/7016

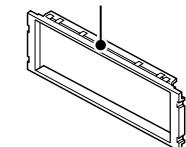

Stay
(J54-0611-08)
:KDC-X615/6015/7016

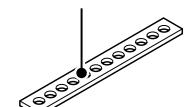


DC cord
(E30-4865-08)
:KDC-X615

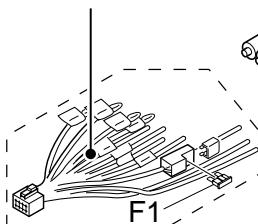


Battery(size:AAA)
Not supplied as
service parts



DC cord
(E30-4866-08)
:KDC-6015/7016

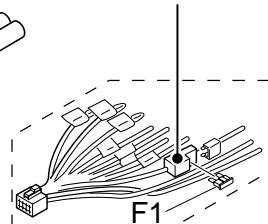

DC cord
(E30-4867-08)
:KDC-6080R/RY/RV

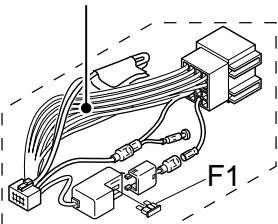


Screw set
(N99-1688-08)




Ant adapter
(T90-0523-05)
:KDC-6080R/RY/RV



Screw set
(N99-1689-08)
:KDC-X615/6015/7016

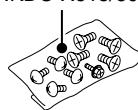

Lever
(D10-4514-08)x2

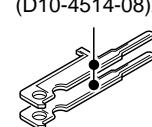

The MECHANISM OPERATION DESCRIPTION is the same as model KDC-S3007 and KDC-5050RG.

Please refer to the service manual for model KDC-S3007(B51-7029-00) or KDC-5050RG(B51-7099-00).




CONTENTS

BLOCK DIAGRAM	3
COMPONENTS DESCRIPTION	4
MICROCOMPUTER'S TERMINAL DESCRIPTION	6
TEST MODE	8
ATTENTION	9
PC BORD	10
SCHEMATIC DIAGRAM	17
EXPLODED VIEW	25
PARTS LIST	27
SPECIFICATIONS	34

BLOCK DIAGRAM

KDC-X615,6015
KDC-6080R/RY/RV,7016

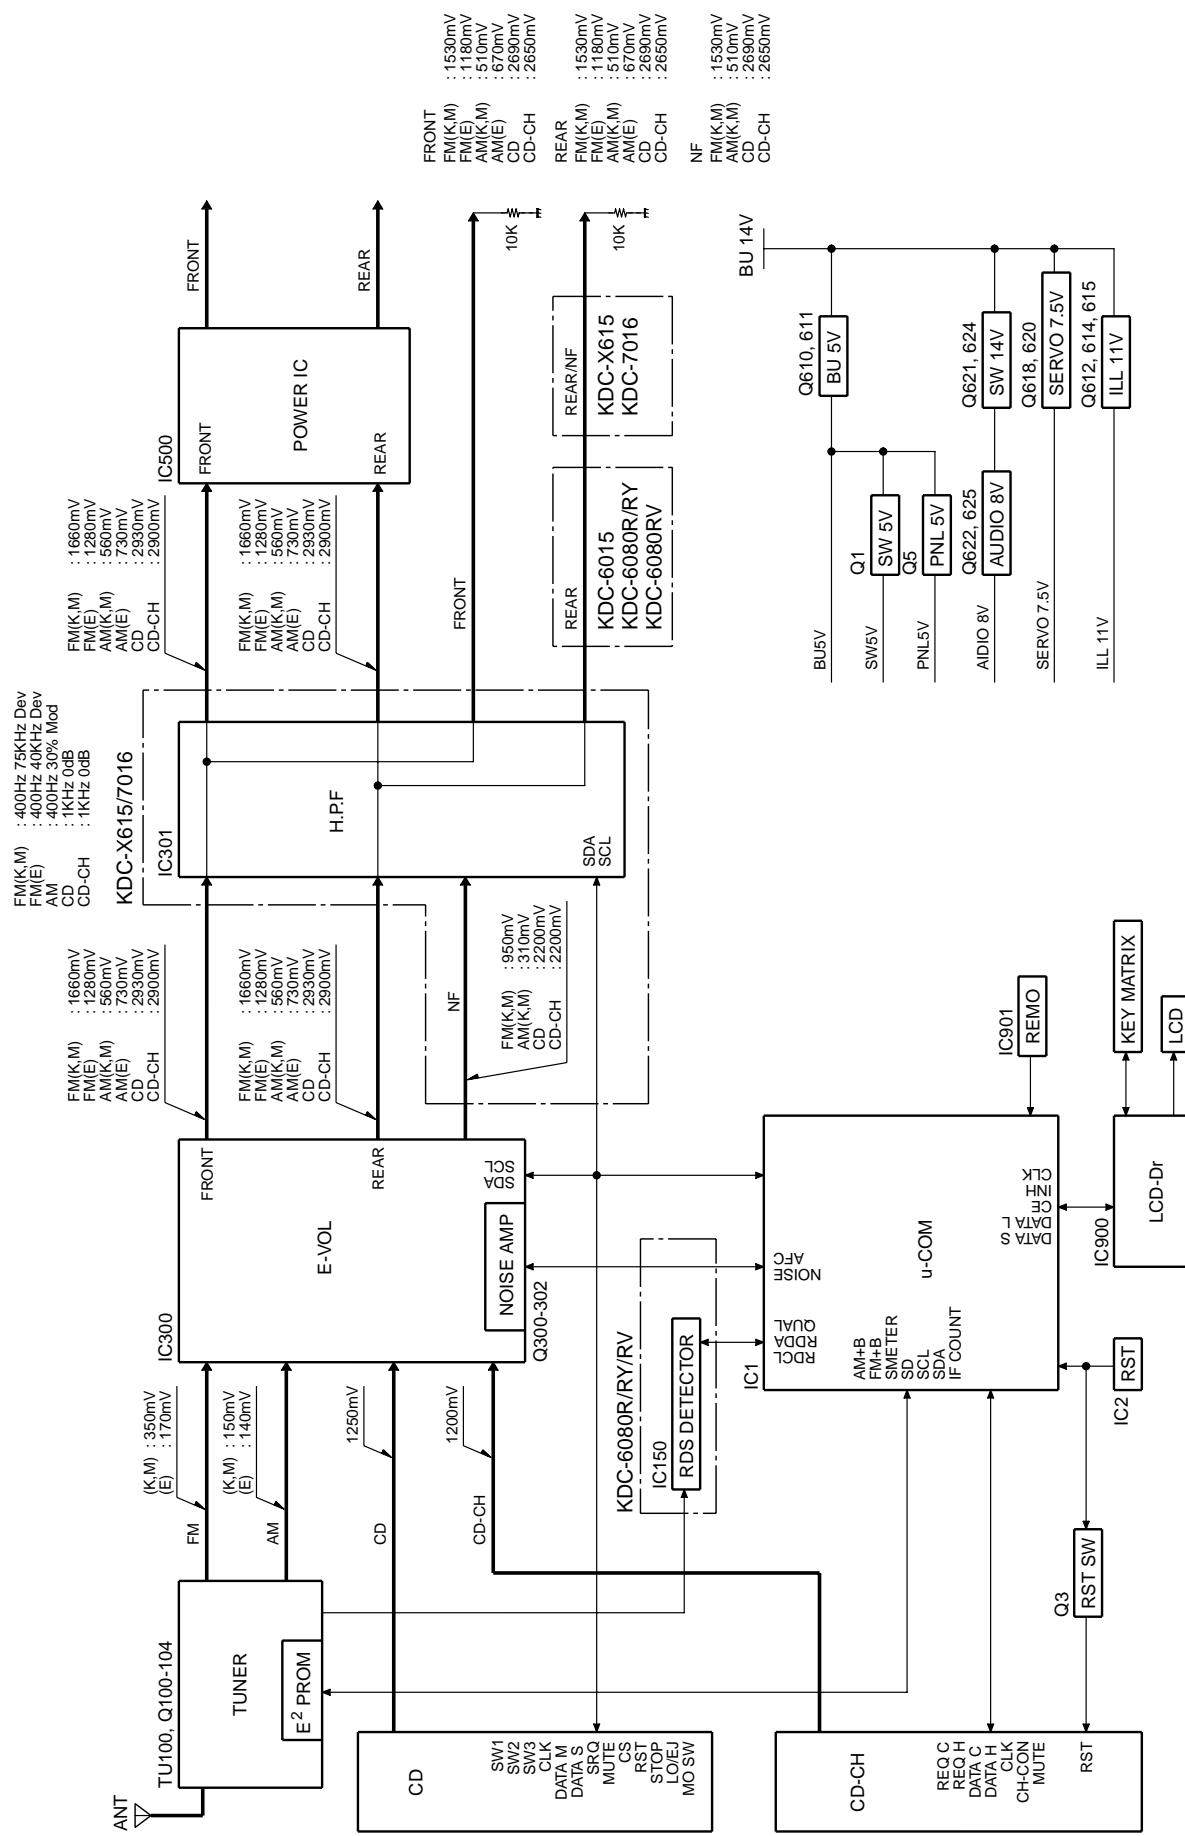

COMPONENTS DESCRIPTION

●MAIN UNIT

Ref.No.	Component Name	Application/Function	Operation/Condition/Compatibility
IC1	784217AGF506	System MI-COM.	
IC2	S-80830ANNP	Reset IC	"Lo": Detection voltage below 3.0V
IC3	HD74HC27FP	Mute logic	3 input NOR gate x3
IC150	TDA7479D	RDS decoder	
IC300	TDA7400D	E-VOL. & N.C. MPX	
IC301	TDA7401	HPF & NON FADER VOL.	
IC500	TDA7386	Power IC	
Q1	2SA1576A	SW 5V	ON when the base goes "Lo".
Q2	DTA124EUA	Mute driver for Audio mute SW	ON when the base goes "Lo".
Q3	DTA144EUA	Changer reset SW	ON when the base goes "Lo".
Q5	2SA1576A	Panel 5V SW	ON when the base goes "Lo" during the panel not detached.
Q100	2SA1703-AN	FM+B SW	Q100 is turned ON when Q101's base goes "Hi".
Q101	DTC144EUA		ON during FM reception
Q102	2SA1703-AN	AM+B SW	Q102 is turned ON when Q103's base goes "Hi".
Q103	DTC144EUA		ON during AM reception
Q104	2SC4081	Composite out buffer	
Q300	DTA124EUA	Noise detection time constant SW	OFF during FM seek, ON during FM reception.
Q301	DTC114TUA		Q301 is turned On when Q300's emitter goes "Hi".
Q302	2SC4081	Noise buffer	
Q303	DTC144EUA	E-VOL. mute SW	E-VOL. is muted when the base goes "Hi".
Q350A,B	DTC343TK	Audio mute SW	Audio pre-outs are muted when the base goes "Hi"
Q351A,B	DTC343TK	Audio mute SW	Audio pre-outs are muted when the base goes "Hi"
Q500	DTC114YUA	SVR SW	POWER IC RESET is activated when the base goes "Hi".
Q600	2SC4081	BU detection(Momentary power down detection)	ON when the base goes "Hi" during BU applied.
Q601	2SC4081	ACC detection	ON when the base goes "Hi" during ACC applied.
Q602	2SA1703-AN	P ANT SW	Q602 is turned ON when Q603's base goes "Hi".
Q603	DTC114YUA		ON during AM/FM reception.
Q604	2SA1703-AN	P CON SW	Q604 is turned ON when Q607's base goes "Hi".
Q607	DTC114EUA		ON during POWER ON mode except ALL OFF mode.
Q605	2SA1576A	P CON protection	Protect Q604 by turning ON when P-CON output is grounded.
Q606	DTA124EUA		Prevents Q605 tuning ON during start-up after power ON.
Q608	DTA144EUA	Dimmer SW	ON when the base goes "Hi" while vehicle small lamps turn on.
Q609	DTA123JUA	Ext. AMP SW	ON when the base goes "Lo".
Q610	2SB1565(E,F)	BU 5V AVR	Inverted darlington connection.
Q611	2SC4081		ON during BU applied.
Q612	2SD1760	Illumination AVR	ON when the base goes "Hi".
Q614	DTA124EUA	Illumination AVR SW	Q614 is turned ON when Q615's base goes "Hi".
Q615	DTC124EUA		
Q618	2SB1565(E,F)	Servo AVR	Inverted darlington connection.
Q620	2SC4081		Q618 is turned ON when Q620's base goes "Hi".
Q621	DTA124EUA	SW 14V	Audio 8V AVR and Servo AVR ON/OFF control
Q624	DTC144EUA		Q621 is turned ON when Q624's base goes "Hi".
Q622	2SB1565(E,F)	Audio 8V AVR	Inverted darlington connection.
Q625	2SC4081		Q622 is turned ON when Q625's base goes "Hi".

COMPONENTS DESCRIPTION

●CONTROL UNIT

Ref.No.	Component Name	Application/Function	Operation/Condition/Compatibility
IC900	LC75808E	LCD driver with key-matrix	
IC901	RS-171	Remote control IC	
Q900	DTA124EUA	Remote SW	ON when the base goes "Lo".
Q901	2SD2114K	Key illumination green SW	ON when the base goes "Hi".
Q902	2SD2114K	Key illumination red SW	ON when the base goes "Hi".
Q903	DTA124EUA	Key-matrix permission SW	ON when the base goes "Lo".
Q904	2SC4081	VLCD AVR	
Q905	2SC4081	Dimmer SW	ON when the base goes "Hi".

●CD PLAYER UNIT(X32-4720-00)

Ref.No.	Component Name	Application/Function	Operation/Condition/Compatibility
IC1	AN8806SB	RF amplifier	Generation of RF signal based on the signals from the APC circuit and pickup, and generation of servo error(focusing error and tracking error)signals. Detection of dropout, anti-shock, track crossing and off-track conditions.
IC2	MN662773KB3	CD signal processor built-in MI-COM	Focusing, tracking, sled and spindle servo processing. Automatic adjustment(focusing, tracking, gain, offset and balance)operations. Digital signal processing (DSP, PLL, sub-codes, CIRC error correction, audio data interpolation)operations.
IC4	BA5917AFP	BTL driver	Focusing coil, tracking coil, spindle motor and sled motor driver
IC5	TA78L05F	5V AVR	
IC6	NJM4565MD	Low pass filter	
Q1	2SB1188	APC	LD power control
Q2	DTC124EUA	P ON SW	ON during the CD source selected.
Q3	2SA1362(Y)	A.8V SW	A8V line ON/OFF control
Q4	2SA1362(Y)	D.5V SW	D5V line ON/OFF control
Q5	DTC124EUA	MOTOR ON SW	ON during CD loading or eject action .
Q8	DTC124EUA	GAIN CONTROL SW	

MICROCOMPUTER'S TERMINAL DESCRIPTION

● Terminal description

PinNo.	Pin name	I/O	Description	Processing Operation
1	ST TYPE1	I	IC2 setting terminal	"Lo": Initial value
2	ST TYPE2	I	IC2 setting terminal	"Lo": Initial value
3	JS TYPE1	I	Genuine/After market distinction terminal	"Hi": Genuine, "Lo": After market
4	TYPE1	I	Destination type input terminal 1	
5	TYPE2	I	Destination type input terminal 2	
6	TYPE3	I	Destination type input terminal 3	
7	NC	O	Not used	
8	NC	O	Not used	
9	VDD	-	Power supply connection terminal	Connected to BU 5V lines.
10	NC	O	Not used	
11	NC	O	Not used	
12	NC	O	Not used	
13	RDS DATA	I	Data input from the RDS decoder IC	
14	RDS QUAL	I	Quality input from the RDS decoder IC	
15	AFC	O	AFC control output	"Hi": During FM reception, "Lo": During FM seek.
16	FM/AM SD	I	SD input from the tuner pack	"Hi": Station detected, "Lo": Not detected
17	IF COUNT	I	Not used	
18	NC	O	Not used	
19	REMO	I	Data input from the remote control light sensor	
20	AM+B	O	AM+B control	"Hi": During AM reception.
21	FM+B	O	FM+B control	"Hi": During FM reception.
22	TEST	-	IC test terminal(Not used)	Connected to GND
23	IC2 SDA	I/O	Data input/output with the E-VOL. IC	
24	IC2 SCK	O	Clock output to the E-VOL. IC	
25	MUTE	O	Mute control output	"Hi": Mute ON, "Lo": Mute OFF
26	SW5V	O	SW 5V control output	"Lo": POWER ON mode or during CD loading or eject action.
27	F/E DATA	I/O	Data input/output with the front end	
28	F/E CLK	O	Clock output to the front end	
29	CH CON	O	Changer control	"Hi": ON, "Lo": Standby
30	CH REQH	O	Request output to changers	"Lo": Request
31	CD MUTE	I	Muting request from the MI-COM. of CD mecha.	"Lo": Mute request
32	CD MRST	O	Reset output to the MI-COM. of CD mecha.	"Lo": Reset
33	CD MSTOP	O	Stop request to the MI-COM. of CD mecha.	"Lo": Stop
34	CD LO/EJ	I/O	CD mecha. loading/Eject switching output	"Lo": Loading, "Hi": Eject, "Hi-Z": Stop
35	CD LMON	O	CD mechanism loading motor control output	"Hi": CD loading or eject action, "Lo": other
36	CD SW3	I	Down & limit switch detection input	"Hi": Chucking, "Lo": Pickup most inner position
37	VDD	-	Power supply connection terminal	Connected to BU 5V lines.
38	X2	-	Main clock resonator connection terminal	
39	X1	-	Main clock resonator connection terminal	
40	VSS	-	Ground connection terminal	Connected to GND.
41	XT2	-	Sub clock resonator connection terminal	
42	XT1	-	Sub clock resonator connection terminal	
43	RESET	I	Reset input terminal	"Lo": System reset
44	NC	O	Not used	
45	RDS CLK	I	Clock input from the RDS decoder IC	
46	CH REQC	I	Request input from changers	"Lo": Request
47	LCD DATAL	I	Data input from the LCD driver IC	
48	CD SW2	I	12cm disc detection terminal	When 12cm disc was detected, the input becomes "Lo" temporarily.
49	CD SW1	I	Loading detection	"Lo": CD chucking.
50	NC	O	Not used	
51	AVDD	-	A/D converter power supply connection terminal	Connected to BU 5V lines.

MICROCOMPUTER'S TERMINAL DESCRIPTION

PinNo.	Pin name	I/O	Description	Processing Operation
52	AVREF0	-	A/D converter reference voltage input terminal	Connected to BU 5V lines.
53	PHONE	I	PHONE detection input	1V or less: TEL MUTE, 2.5V or greater: NAVI MUTE
54	NC	I	Not used	Pull down to GND.
55	NOISE	I	Noise detection input	
56	S-METER	I	S-meter input from the front end	
57	NC	I	Not used	Pull down to GND.
58	NC	I	Not used	Pull down to GND.
59	NC	I	Not used	Pull down to GND.
60	NC	I	Not used	Pull down to GND.
61	AVSS	-	A/D, D/A converter ground connection terminal	Connected to GND.
62	NC	O	Not used	
63	NC	O	Not used	
64	AVREF1	-	D/A converter reference voltage input terminal	
65	CH DATA C	I	Data input from changers	
66	CH-DATA H	O	Data output to changers	
67	CH CLK	I/O	Clock input/output with changers	
68	LCD DATAL	I	Data input from the LCD driver IC	
69	LCD DATAS	O	Data output to the LCD driver IC	
70	LCD CLK	O	Clock output to the LCD driver IC	
71	NC	O	Not used	
72	BEEP	O	BEEP sound output	
73	NC	O	Not used	
74	PNL DET1	I	Panel detaching detection input	"Hi": Panel detached.
75	NC	O	Not used	
76	LCD INH	O	INH output to the LCD driver IC	"Lo": LCD indication OFF.
77	LCD CE	O	CE output to the LCD driver IC	"Hi": Active
78	SRT SW1	I	SRT position detection input	Panel : (SW1, SW2)=(Hi, Hi) Slide : (SW1, SW2)=(Hi, Lo)
79	SRT SW2	I	SRT position detection input	Mask : (SW1, SW2)=(Lo, Lo)
80	NC	O	Not used	
81	NC	O	Not used	
82	NC	O	Not used	
83	NC	O	Not used	
84	NC	O	Not used	
85	NC	O	Not used	
86	NC	O	Not used	
87	AMP SVR	O	Power IC reset output	When the momentary power down, after ACC OFF is detected and after POWER OFF, the output goes "Hi" temporarily.
88	AMP STBY	O	Power IC standby control output	"Hi": POWER ON mode
89	AMP MUTE	O	Power IC mute control output	"Lo": Mute
90	NC	O	Not used	
91	ILL ON	O	Illumination AVR ON/OFF control output	"Hi": AVR ON
92	P ON	O	Microprocessor peripheral power supply control output	"Hi": ACC ON or during CD loading or eject action.
93	SMALL	I	Small lights detection input	"Lo": During vehicle small lamps turn on.
94	P ANT	O	Antenna control output	"Hi": During FM/AM reception.
95	P CONT	O	Power control output	"Hi": POWER ON mode except ALL OFF mode.
96	ACC DET	I	ACC detection input	"Hi": ACC OFF, "Lo": ACC ON
97	BU DET	I	Momentary power down detection input	"Hi": When momentary power down detected or BU OFF, "Lo": BU ON
98	AMP CONT	O	External amp. control output	
99	NC	O	Not used	
100	VSS	-	Ground connection terminal	Connected to GND.

TEST MODE

•TEST MODE SPECIFICATIONS

(1) How to enter the test mode

While holding the FM and Preset 6 keys simultaneously, reset the unit.

All indicators and display segments are ON at the start of test mode.

(2) How to exit from the test mode

Reset the unit.

(Note) The test mode cannot be canceled by turning Acc OFF, power OFF or momentary power down.

(3) Test mode specifications of the CD receiver

Each press of the Track Up key jumps to the following tracks.

No. 9 ⇒ No. 15 ⇒ No. 10 ⇒ No. 11 ⇒ No. 12 ⇒ No. 13

⇒ No. 14 ⇒ No. 9 (return to beginning)

Pressing the Track Down key jumps to the previous track to the track being played.

(4) Audio

- The volume is -10 dB (displayed as 30).
- LOUD is OFF, and CRSC is also OFF whether the function is provided or not.
- With the Bass/Treble and Balance/Fader controls, pressing the Up/Down key switch the setting alternately to:
Full Boost ⇒ Full Cut ⇒ Full Boost, Full Right ⇒ Full Left ⇒ Full Right, or Full Front ⇒ Full Rear ⇒ Full Front.
- With the high-pass filter, pressing the Up key sets it to Through/100 Hz/200 Hz and pressing the Down key sets it to 200 Hz/100 Hz/Through.
- Other adjustments function in the same way as normal mode.

(5) Backup current measurement

When the unit is reset (backup turned on) while Acc is OFF or when Acc is turned OFF in test mode, the MUTE terminal goes on in 2 seconds, instead of 1.5 second.
(The panel, CD, C and MD mechanisms are not activated at this time.)

(6) Security code registration after E2PROM replacement servicing (E/M type only)

1. Enter the test mode. (See (1) How to enter the test mode.)
2. Press the SRC key to set All OFF.

3. Press and hold the AUDIO key for 1 second to enter menu mode.

4. Press the FM/AM key to select "SECURITY".

5. Press and hold the Track Up/Down for 2 seconds.

6. Enter the code by pressing the Preset 1, 2, 3 and 4 keys.

Example: To enter "3510",

- Press the Preset 1 key 4 times.

- Press the Preset 2 key 6 times.

- Press the Preset 3 key 2 times.

- Press the Preset 4 key once.

7. Press and hold the DISPLAY key for 3 seconds to display "APPROVED".

8. Quit the test mode (See (2) How to exit from the test mode.)

(7) How to clear the simple security code (K type only)

1. While the code is requested, press and hold the DISP key and press and hold the VOL Up key for 3 seconds.

("----" disappears.)

2. Enter "KCAR" from the remote control unit. (Same operation as the '98 model)

- Press numeric key 5 twice then press the Track Up key. (This enters "K".)

- Press numeric key 2 three times then press the Track Up key. (This enters "A".)

- Press numeric key 2 once then press the Track Up key. (This enters "A".)

- Press numeric key 7 twice then press the Track Up key. (This enters "R".)

3. The security is canceled and the unit enters the TUNER mode.

(8) Other

- The DNPP/SBF key of the remote control unit (RC-510) functions as the menu mode ON/OFF key.

- The OPEN/CLOSE key of the remote control unit (RC-510) functions as the audio adjustment mode ON/OFF key.

- The menu is displayed by displaying only the required features.

- Message such as "CODE OFF" is not displayed when power is turned ON.

- The contrast can be adjusted only to 0/5/10 using the Up/Down keys.


ATTENTION

Assembly of FPC(Flexible PC board) onto Roller ass'y

Turn Roller ass'y by 4 times.

Hook the end of Roller ass'y to the tongue.


Insert the FPC into the slit of Roller ass'y then release the end of Roller ass'y and the tongue.

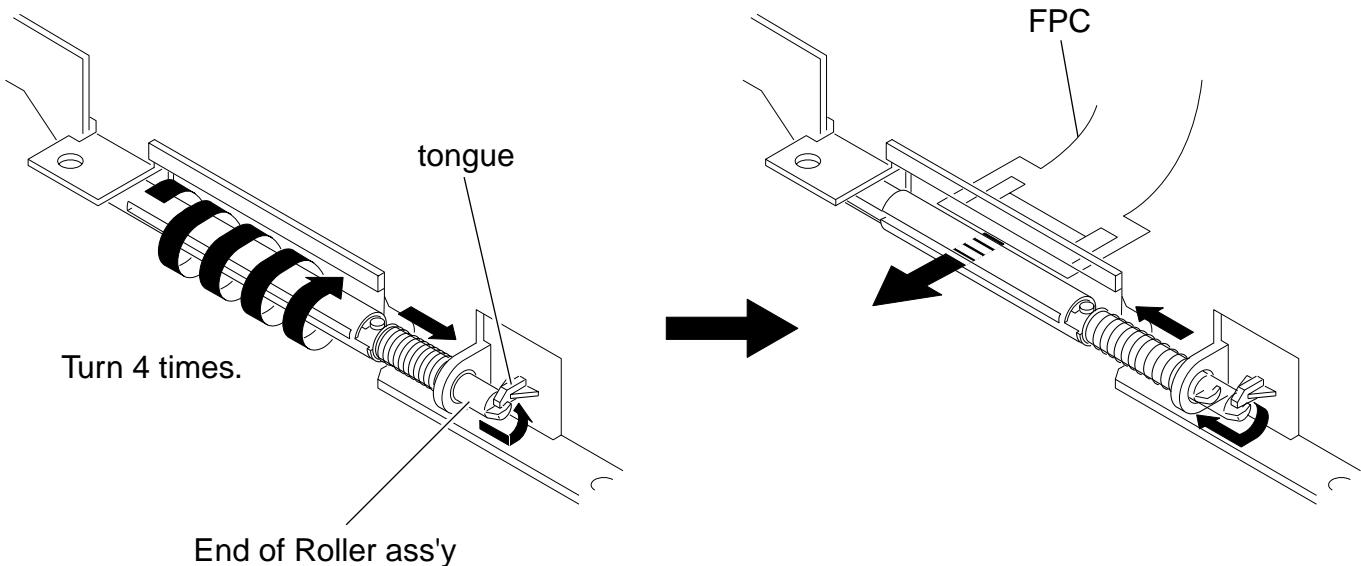

1
2
3
4
5
6
7

PC BOARD (COMPONENT SIDE VIEW)


CONTROL UNIT

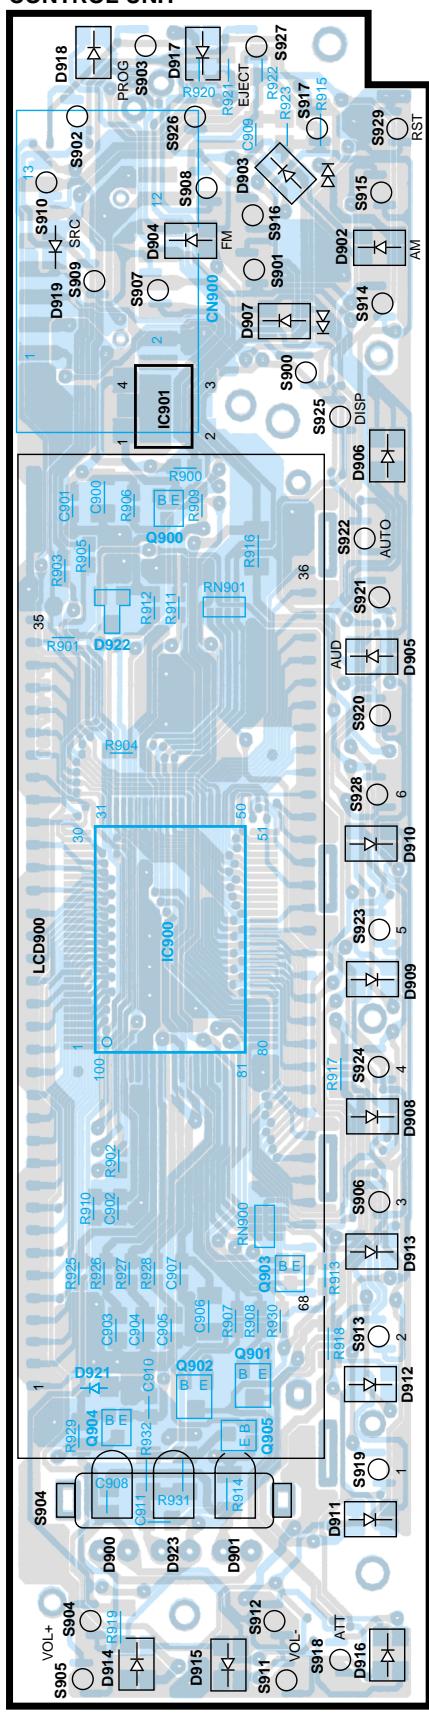


A
B
C
D
E

PC BOARD (FOIL SIDE VIEW)

CONTROL UNIT

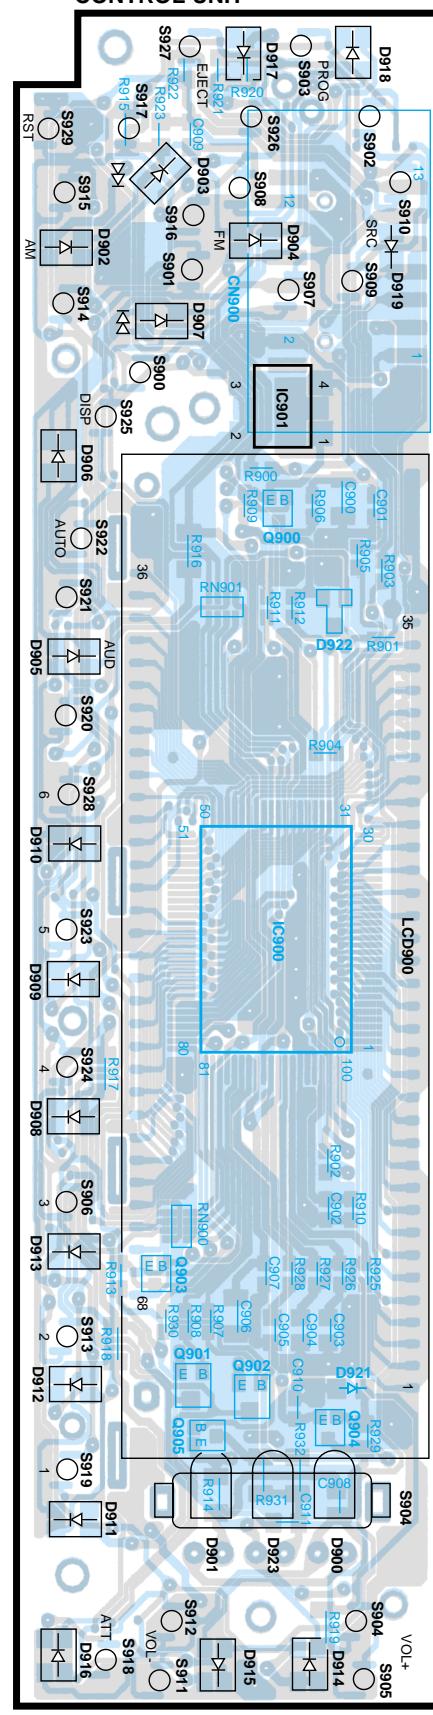



PC BOARD (COMPONENT SIDE VIEW)

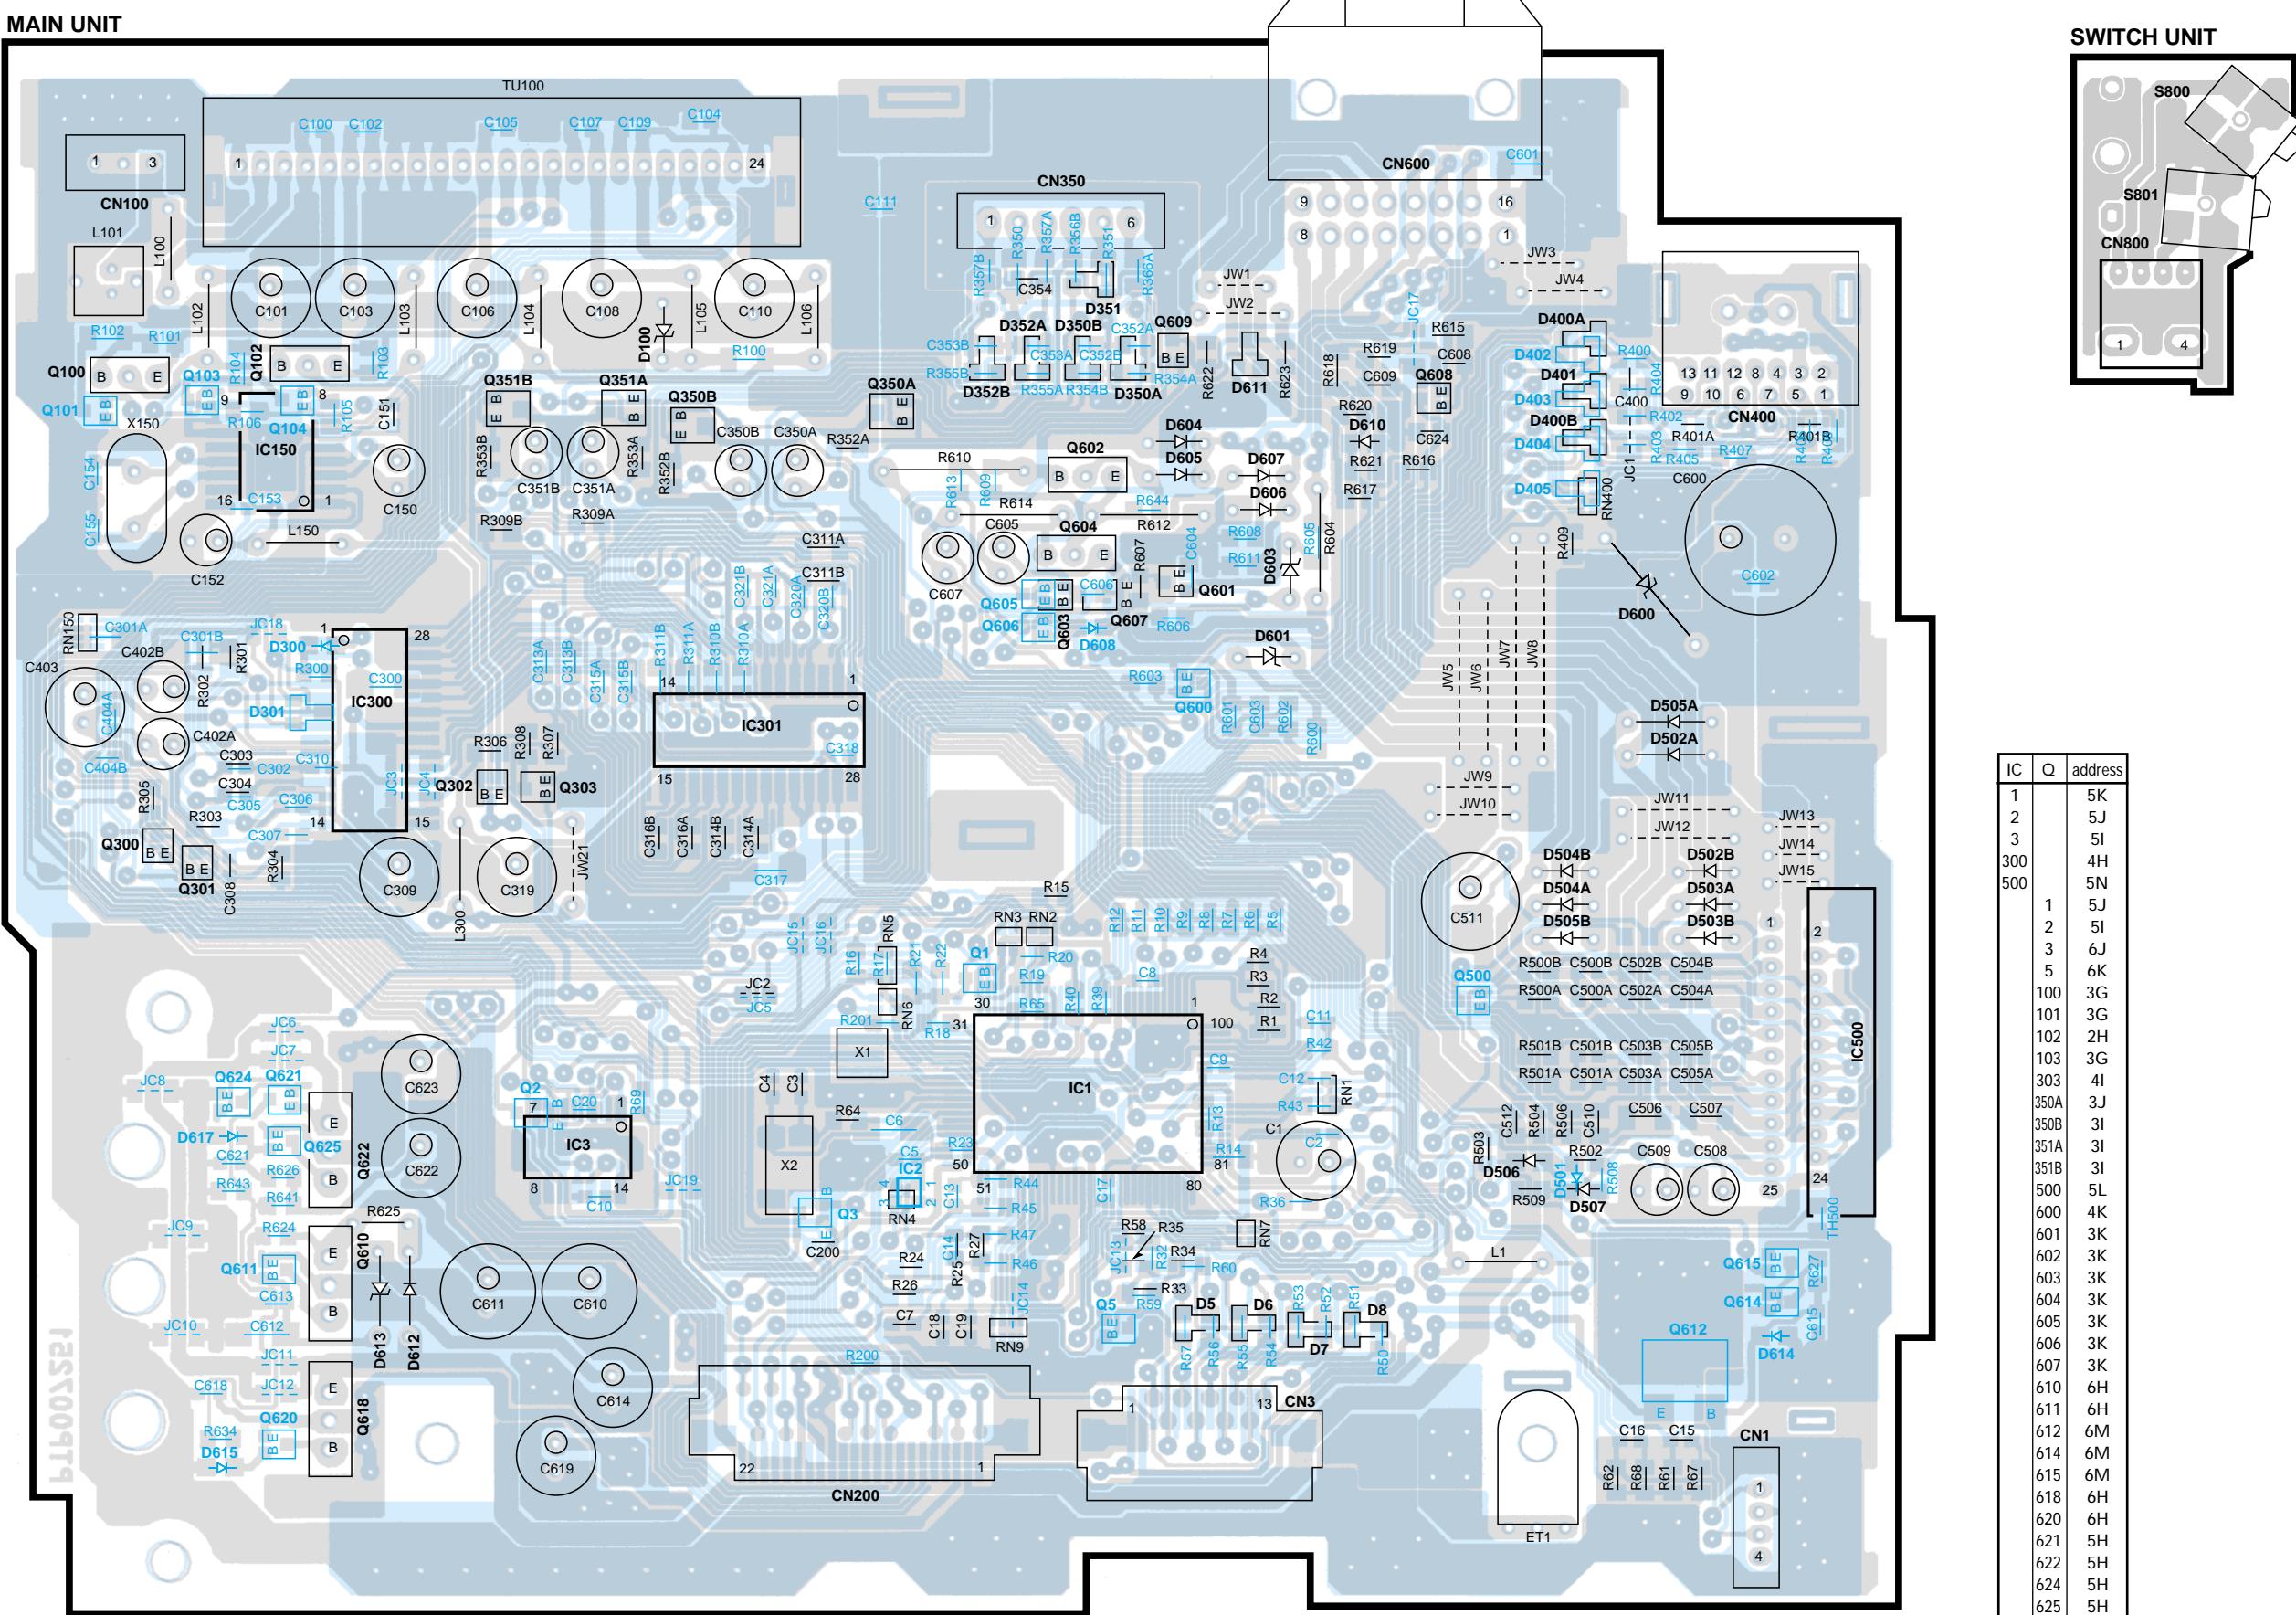

11 12

Refer to the schematic diagram for the values of resistors and capacitors.



PC BOARD (FOIL SIDE VIEW)

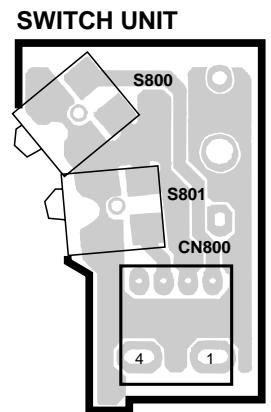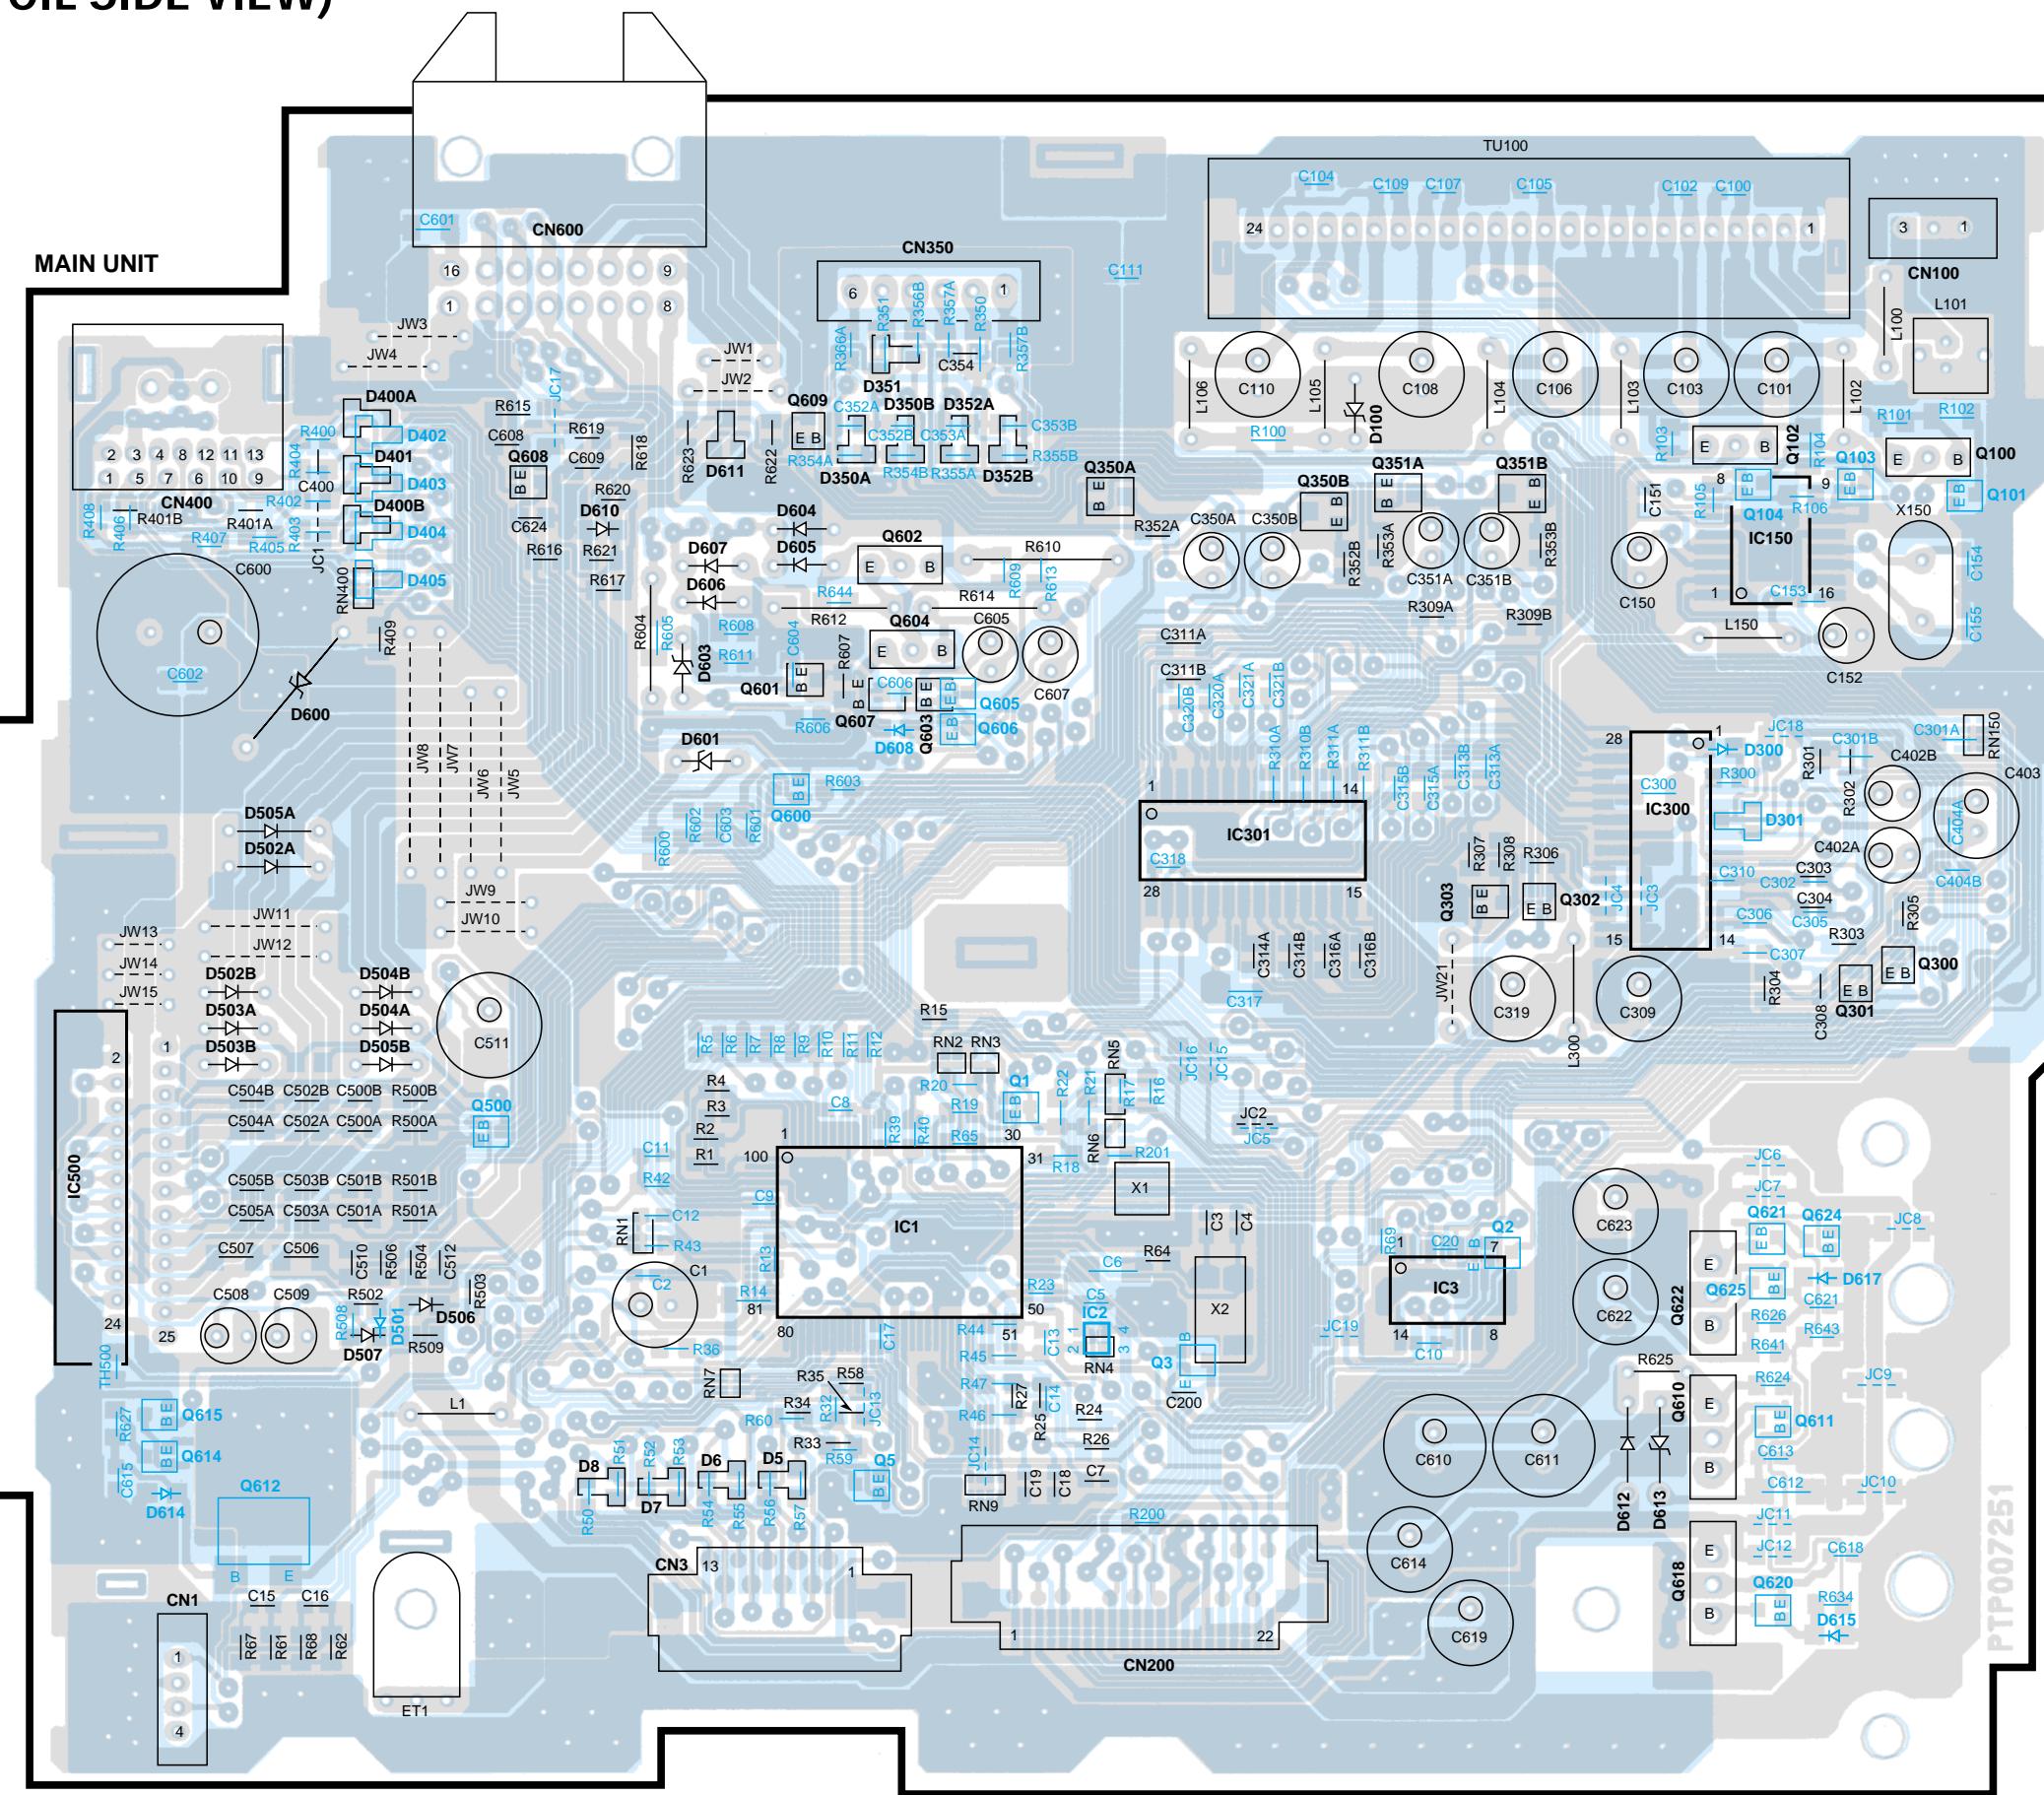

IC	Q	address
1		5T
2		5T
3		5V
300		4V
500		5Q
1	1	5T
2	2	5V
3	3	6U
5	5	6T
100	100	2W
101	101	3W
102	102	2W
103	103	3W
303	303	4V
350A	350A	3U
350B	350B	3U
351A	351A	3V
351B	351B	3V
500	500	5R
600	600	4S
601	601	3S
602	602	3T
603	603	3T
604	604	3T
605	605	3T
606	606	3T
607	607	3T
608	608	3T
609	609	3T
610	610	3T
611	611	3T
612	612	3T
613	613	3T
614	614	3T
615	615	3T
616	616	3T
617	617	3T
618	618	3T
619	619	3T
620	620	3T
621	621	3T
622	622	3T
623	623	3T
624	624	3T
625	625	3T
626	626	3T
627	627	3T
628	628	3T
629	629	3T
630	630	3T
631	631	3T
632	632	3T
633	633	3T
634	634	3T
635	635	3T
636	636	3T
637	637	3T
638	638	3T
639	639	3T
640	640	3T
641	641	3T
642	642	3T
643	643	3T
644	644	3T
645	645	3T
646	646	3T
647	647	3T
648	648	3T
649	649	3T
650	650	3T
651	651	3T
652	652	3T
653	653	3T
654	654	3T
655	655	3T
656	656	3T
657	657	3T
658	658	3T
659	659	3T
660	660	3T
661	661	3T
662	662	3T
663	663	3T
664	664	3T
665	665	3T
666	666	3T
667	667	3T
668	668	3T
669	669	3T
670	670	3T
671	671	3T
672	672	3T
673	673	3T
674	674	3T
675	675	3T
676	676	3T
677	677	3T
678	678	3T
679	679	3T
680	680	3T
681	681	3T
682	682	3T
683	683	3T
684	684	3T
685	685	3T
686	686	3T
687	687	3T
688	688	3T
689	689	3T
690	690	3T
691	691	3T
692	692	3T
693	693	3T
694	694	3T
695	695	3T
696	696	3T
697	697	3T
698	698	3T
699	699	3T
700	700	3T
701	701	3T
702	702	3T
703	703	3T
704	704	3T
705	705	3T
706	706	3T
707	707	3T
708	708	3T
709	709	3T
710	710	3T
711	711	3T
712	712	3T
713	713	3T
714	714	3T
715	715	3T
716	716	3T
717	717	3T
718	718	3T
719	719	3T
720	720	3T
721	721	3T
722	722	3T
723	723	3T
724	724	3T
725	725	3T
726	726	3T
727	727	3T
728	728	3T
729	729	3T
730	730	3T
731	731	3T
732	732	3T
733	733	3T
734	734	3T
735	735	3T
736	736	3T
737	737	3T
738	738	3T
739	739	3T
740	740	3T
741	741	3T
742	742	3T
743	743	3T
744	744	3T
745	745	3T
746	746	3T
747	747	3T
748	748	3T
749	749	3T
750	750	3T
751	751	3T
752	752	3T
753	753	3T
754	754	3T
755	755	3T
756	756	3T
757	757	3T
758	758	3T
759	759	3T
760	760	3T
761	761	3T
762	762	3T
763	763	3T
764	764	3T
765	765	3T
766	766	3T
767	767	3T
768	768	3T
769	769	3T
770	770	3T
771	771	3T
772	772	3T
773	773	3T
774	774	3T
775	775	3T
776	776	3T
777	777	3T
778	778	3T
779	779	3T
780	780	3T
781	781	3T
782	782	3T
783	783	3T
784	784	3T
785	785	3T
786	786	3T
787	787	3T
788	788	3T
789	789	3T
790	790	3T
791	791	3T
792	792	3T
793	793	3T
794	794	3T
795	795	3T
796	796	3T
797	797	3T
798	798	3T
799	799	3T
800	800	3T


PC BOARD (COMPONENT SIDE VIEW)

(FOIL SIDE VIEW)

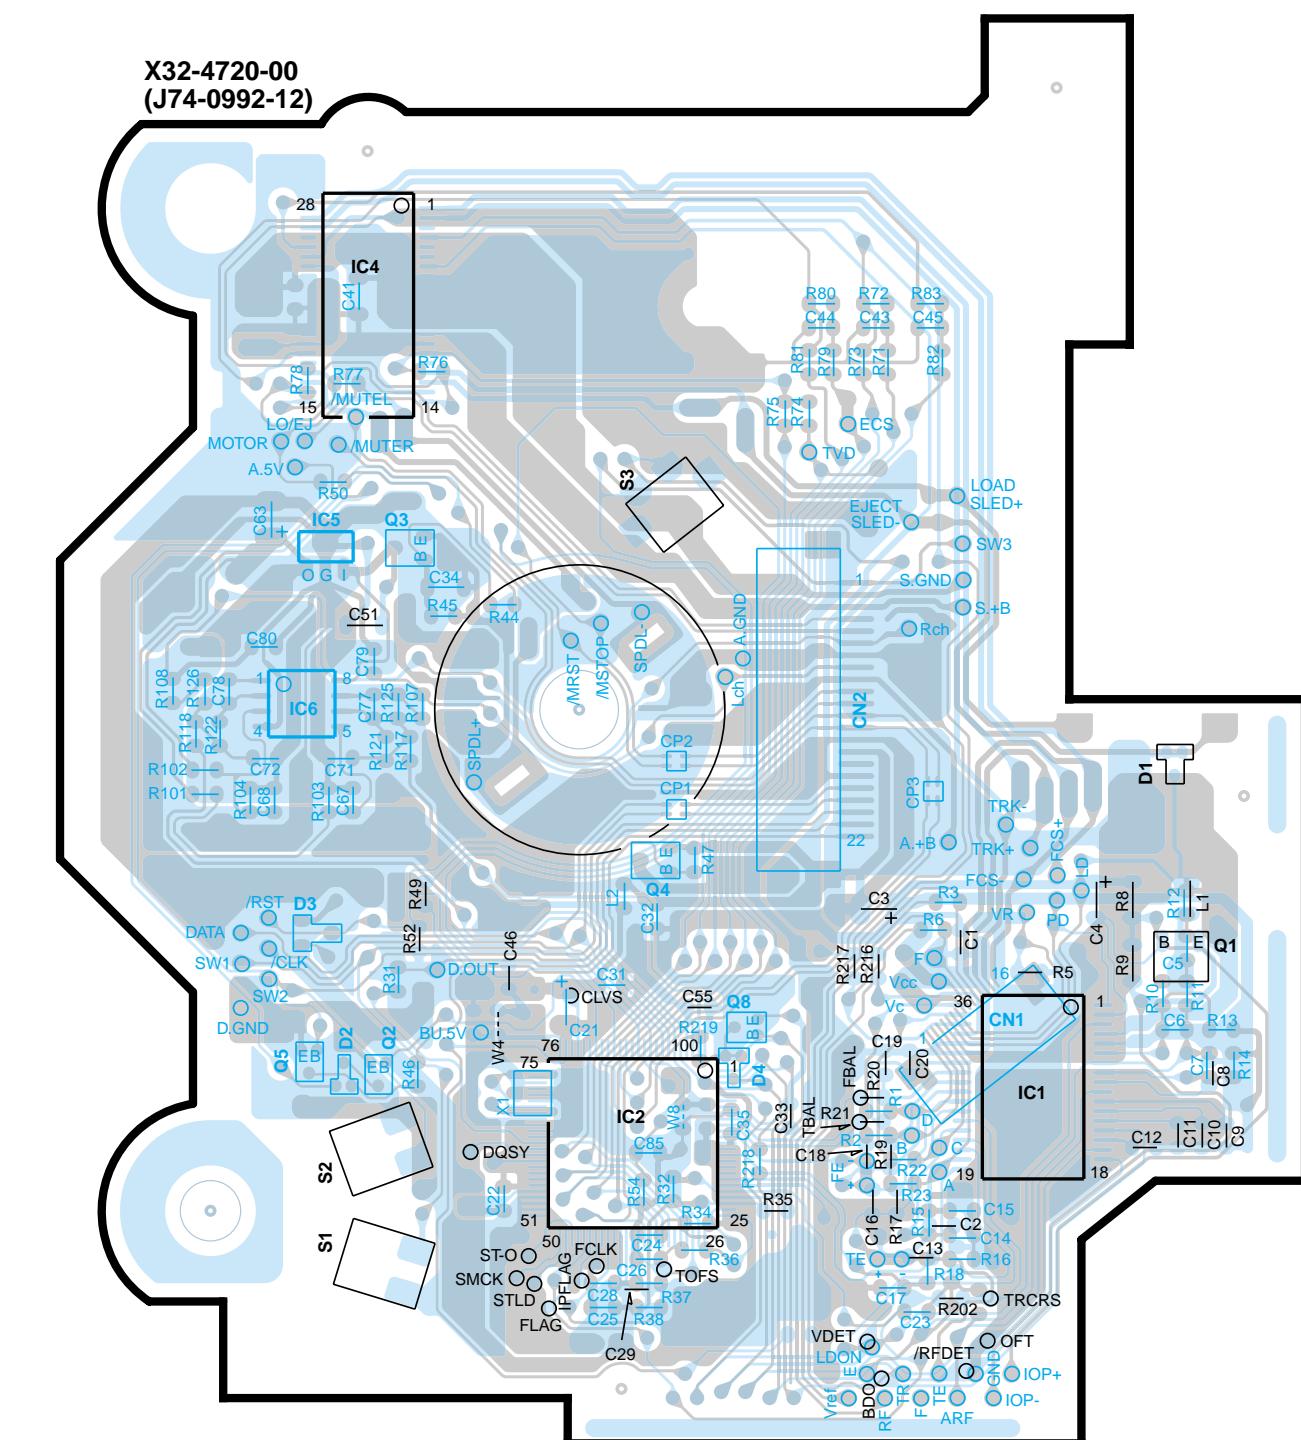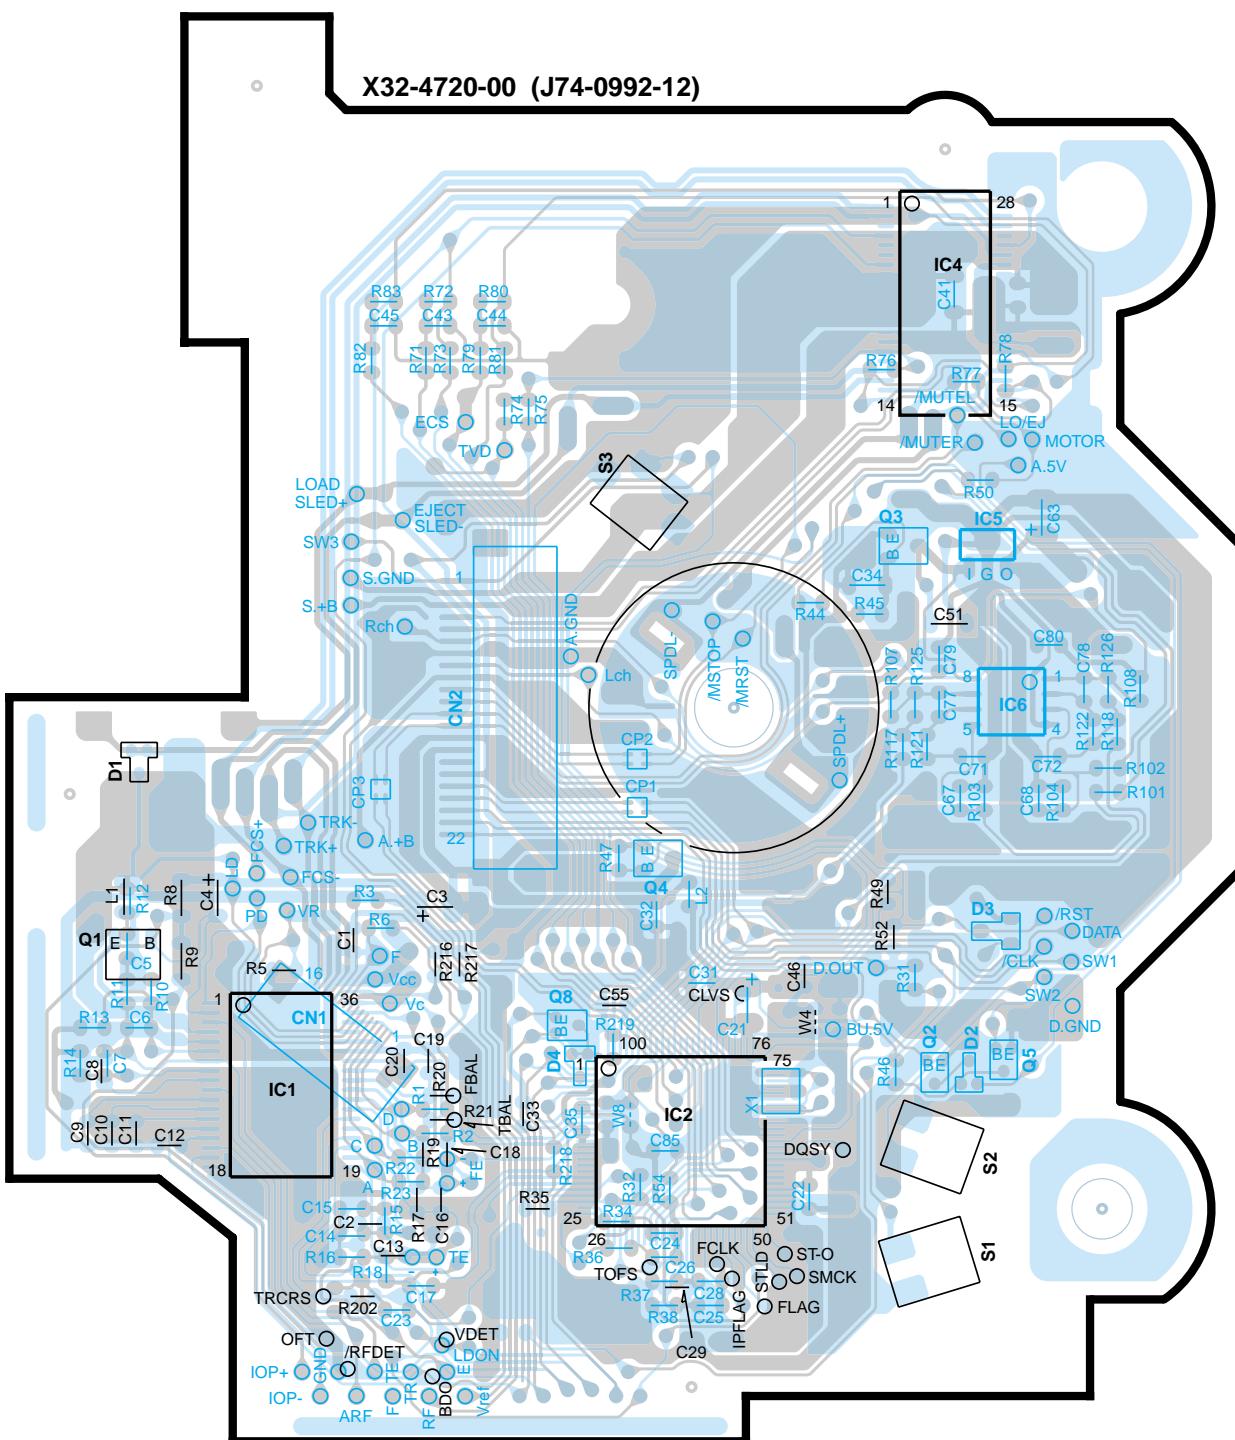


IC	1	2	4	5	6
address	5AA	5AB	2AC	3AC	4AC
Q	1	2	3	4	5
address	5Z	5AC	3AC	4AB	5AC

IC	1	2	4	5	6
address	5AH	5AG	2AF	3AF	4AF
Q	1	2	3	4	5
address	5AI	5AF	3AF	4AG	5AF

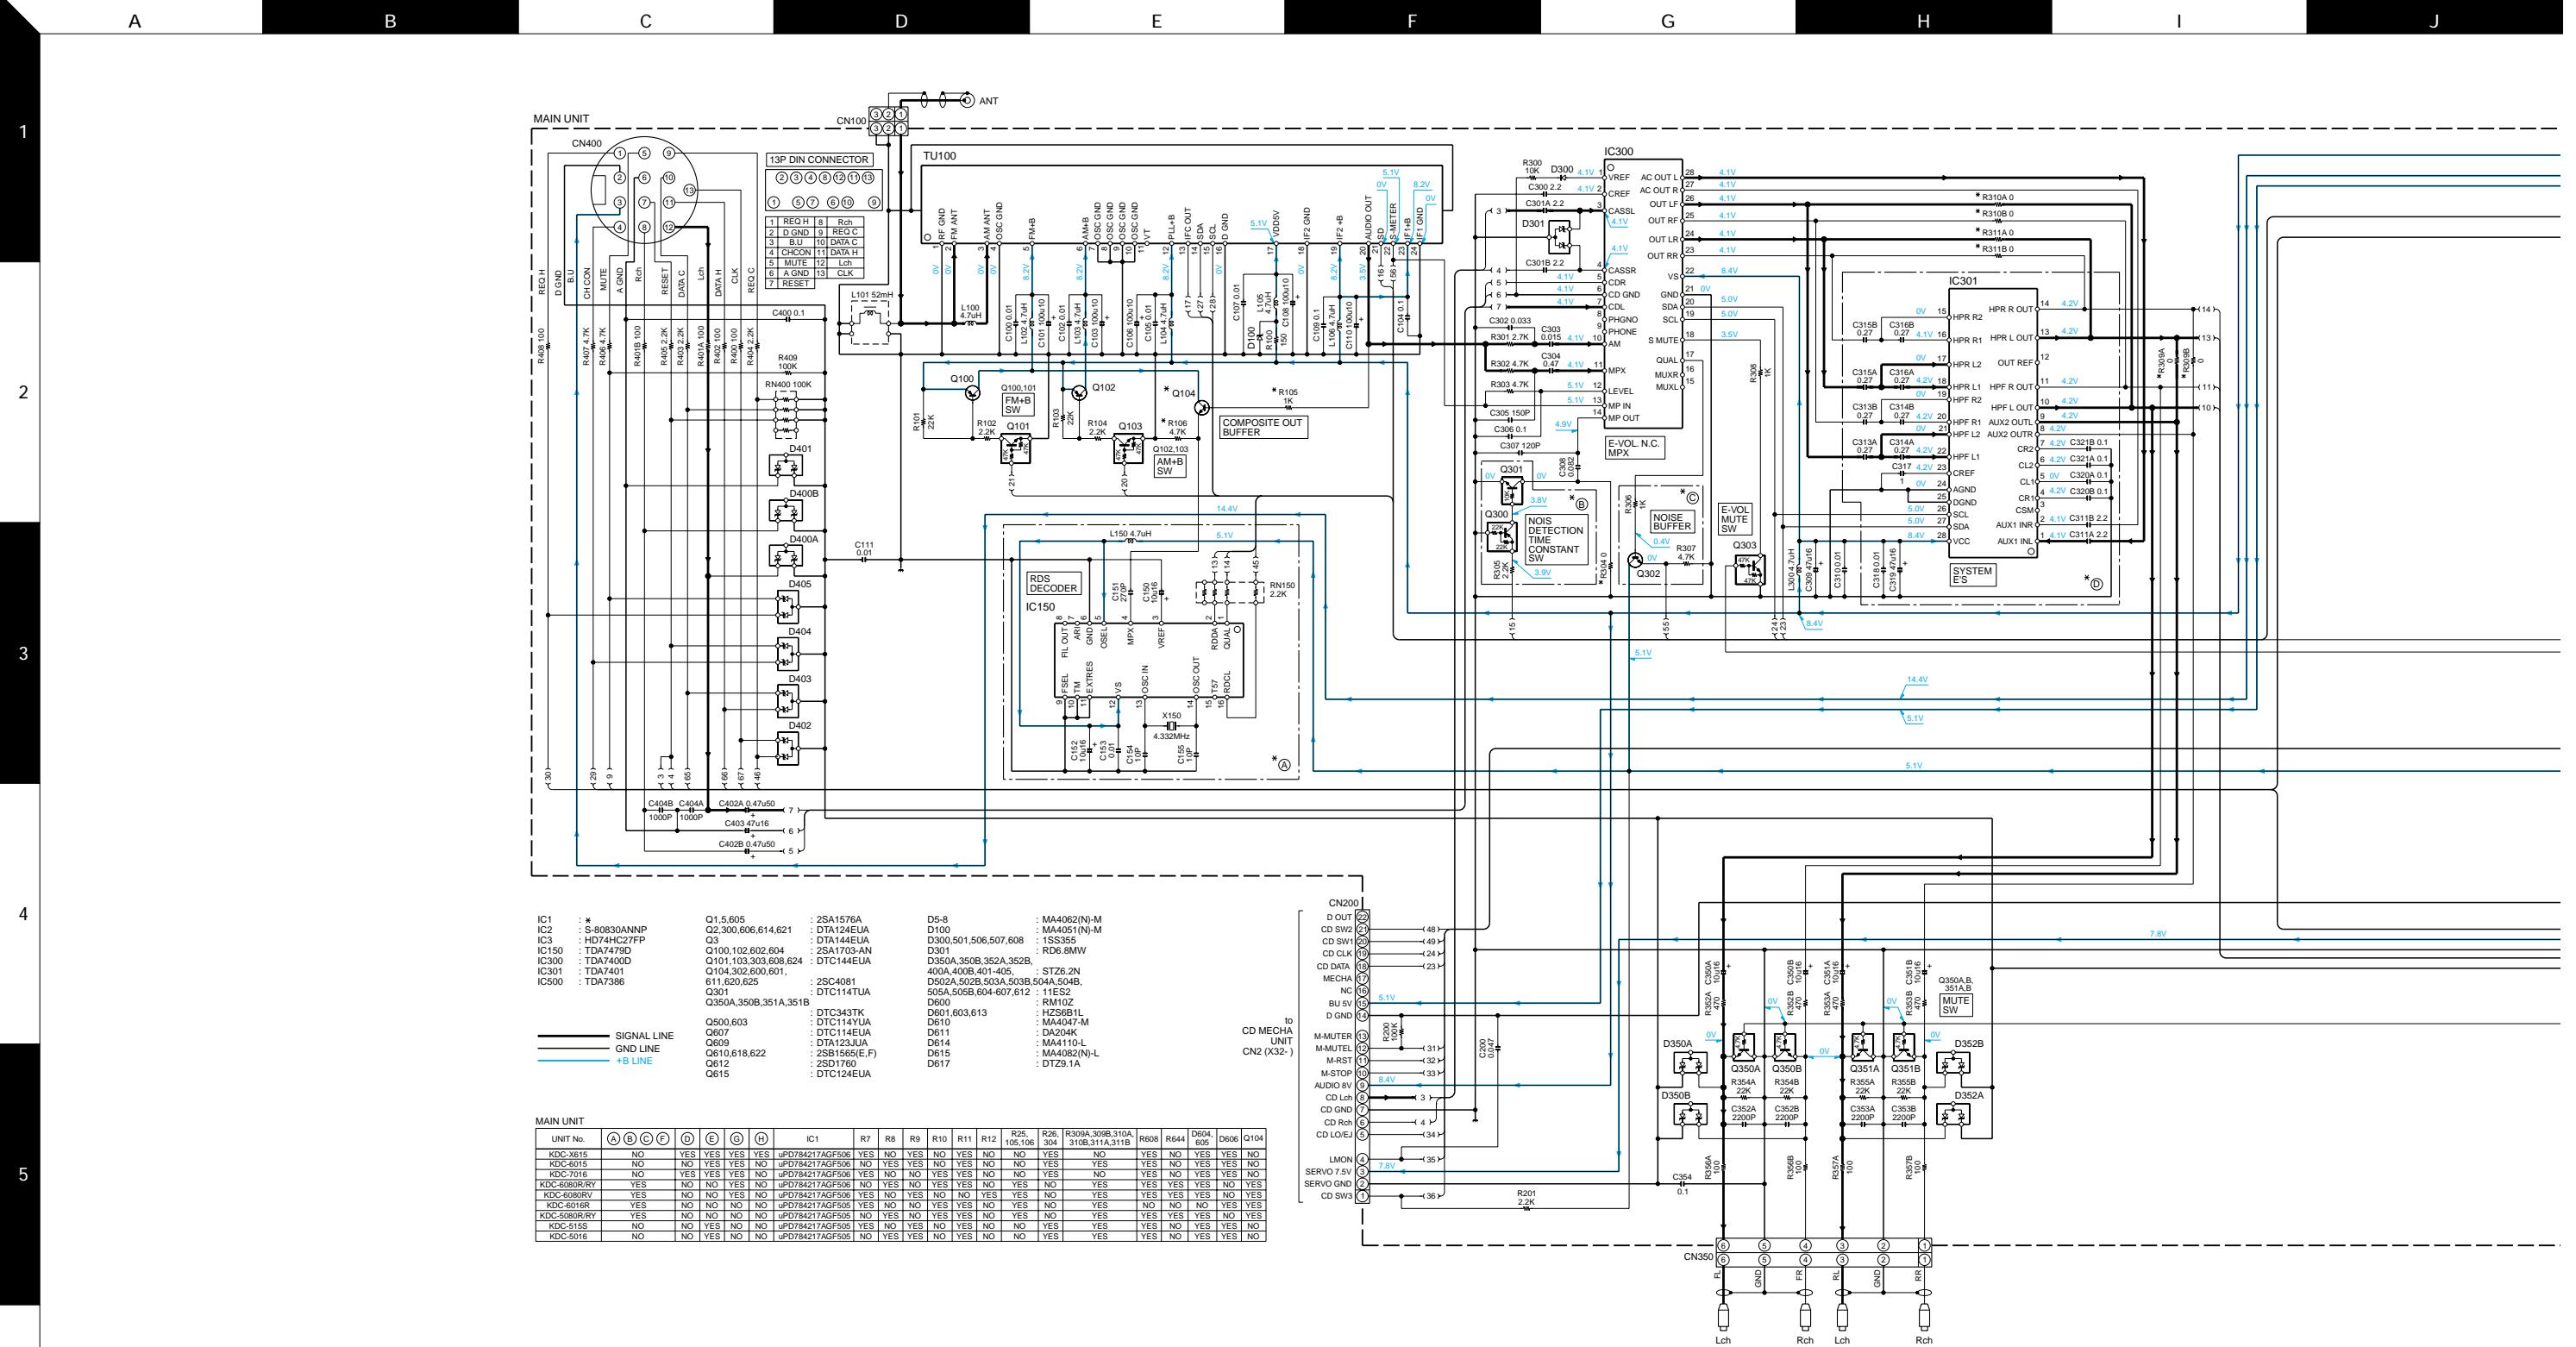

2SB1565

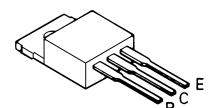

DTA144EUA

DTC114YUA


DTC343TK

2SA1362


2SA1576A

2SD2114K

2SB1188

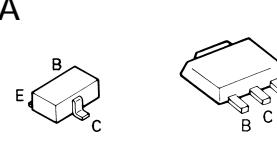

2SD1760

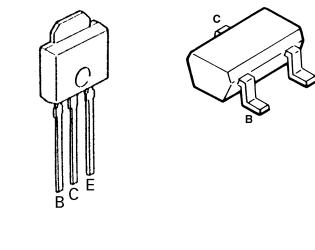

2SC4081


DTA124EUA

DTC114EUA


DTC124EUA

DTC144EUA


NJM4565MD

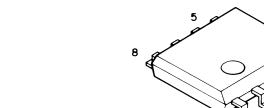


DAN202U

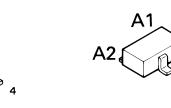


TA78L05F

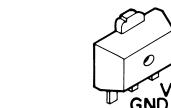


DA204K

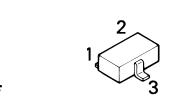

AN8806SB

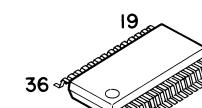

TDA7479D

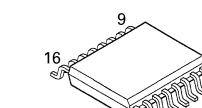

K

L

M

N

O


P

Q

R

S

T

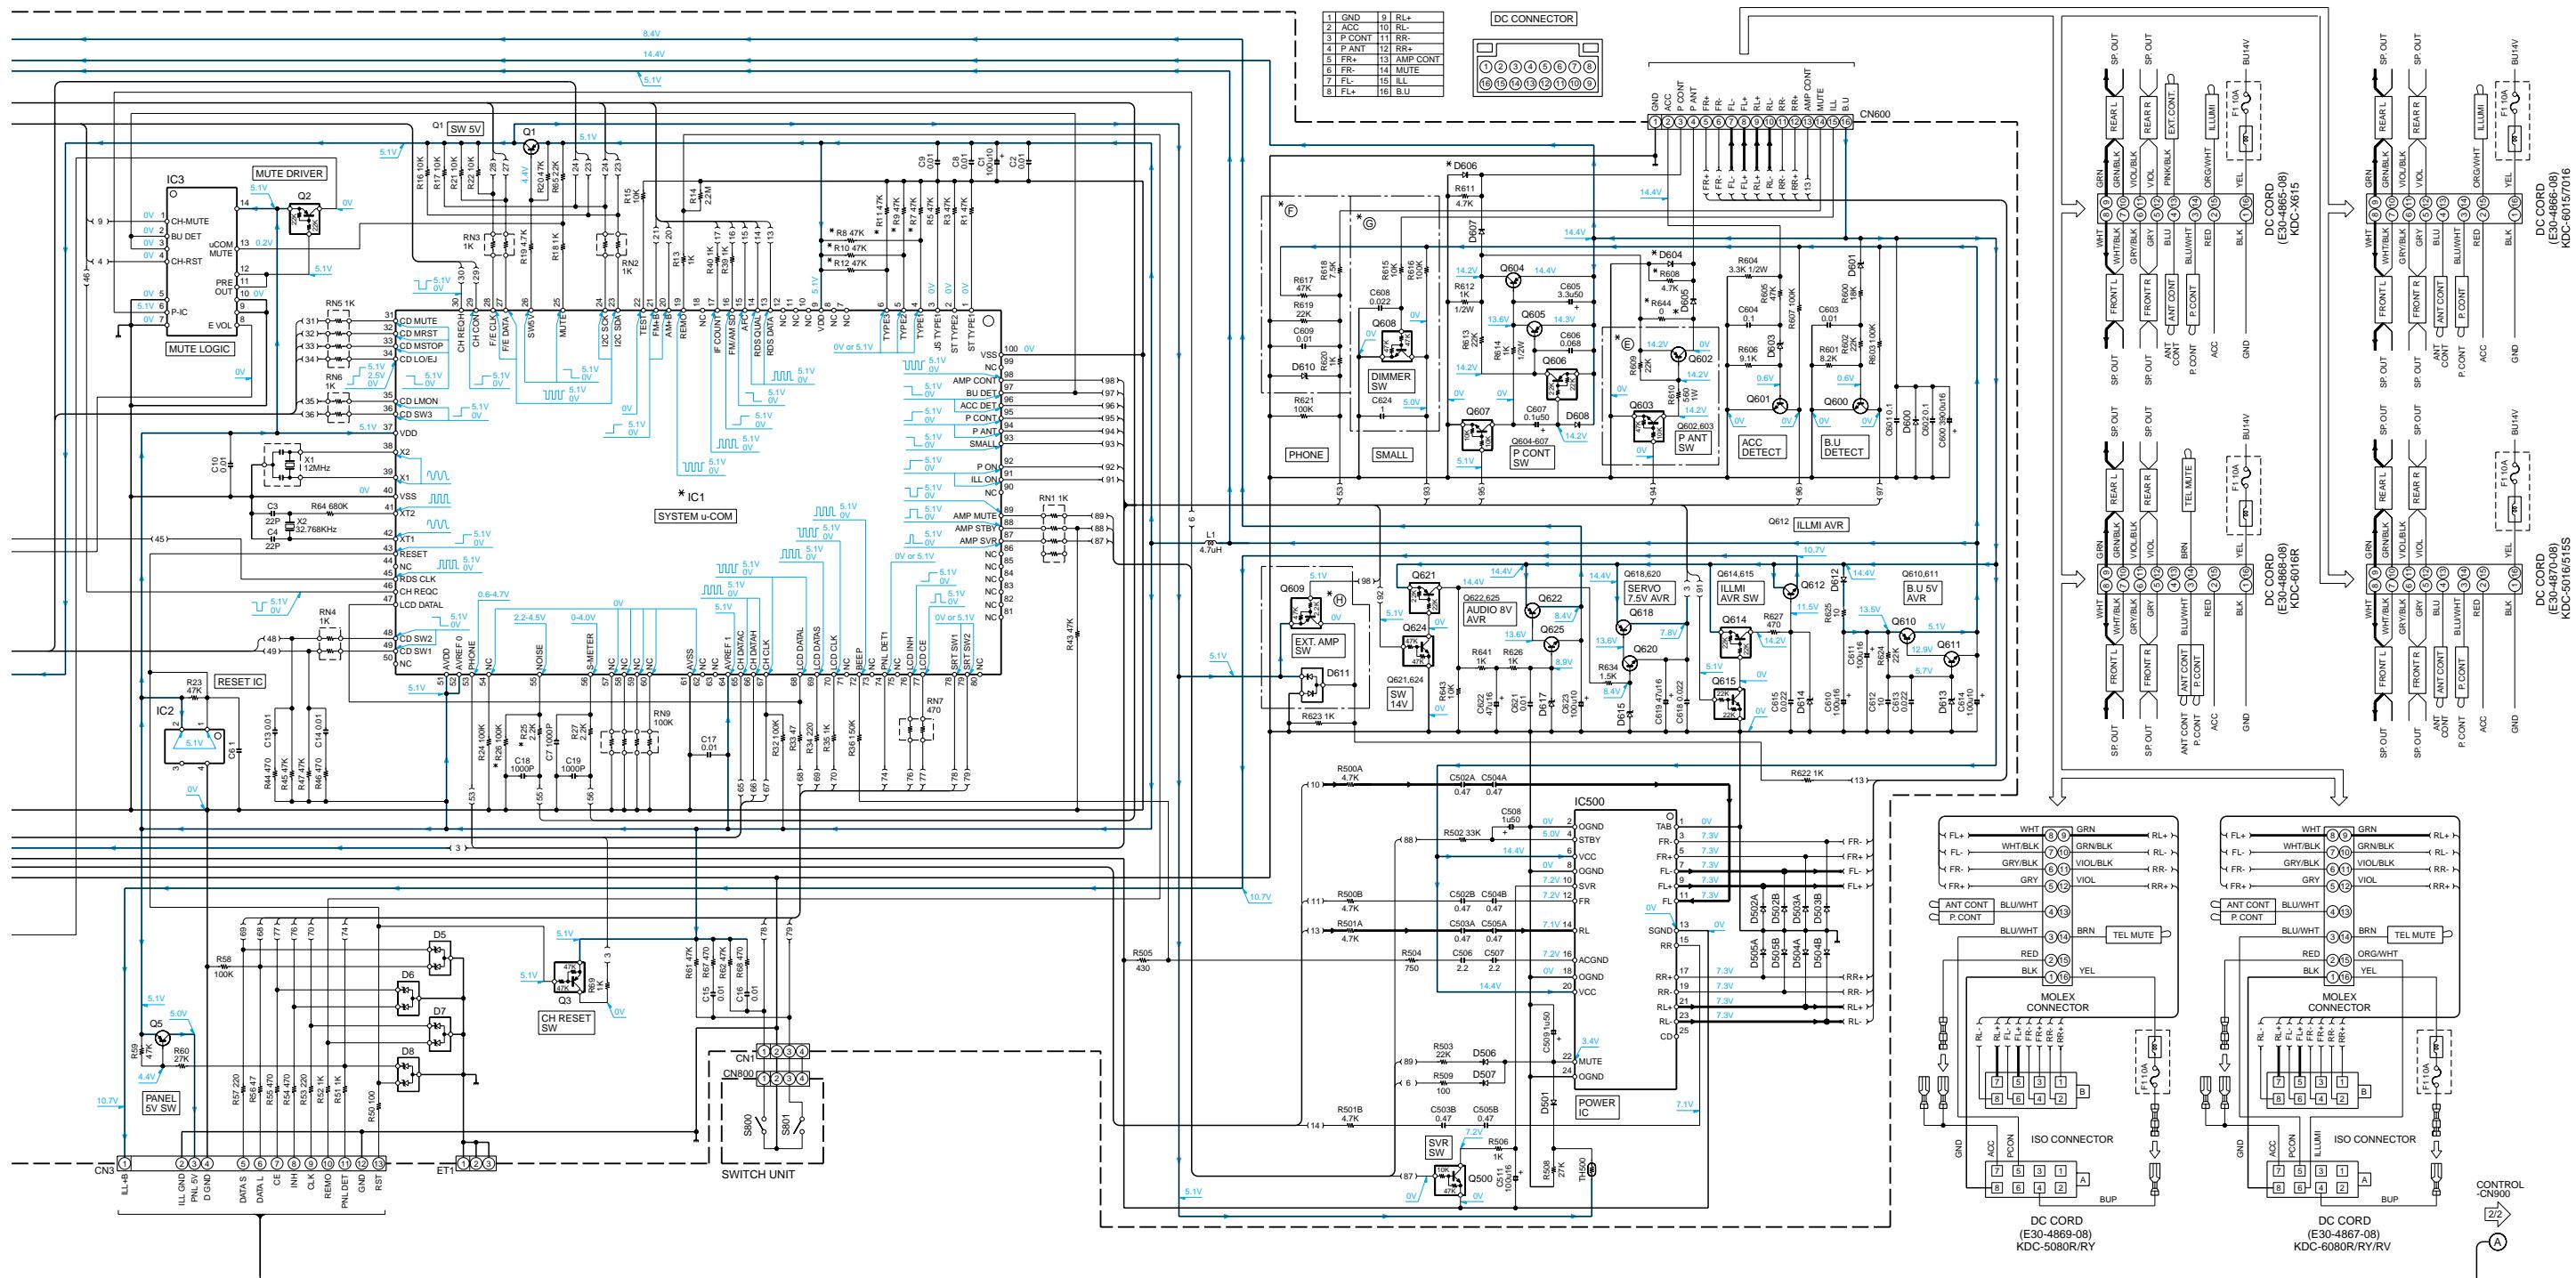

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).
 △ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.
 • DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

KDC-X615,6015
KDC-6080R/RV,7016

KENWOOD

U

V

W

X

Y


Z

AA

AB


AC

AD

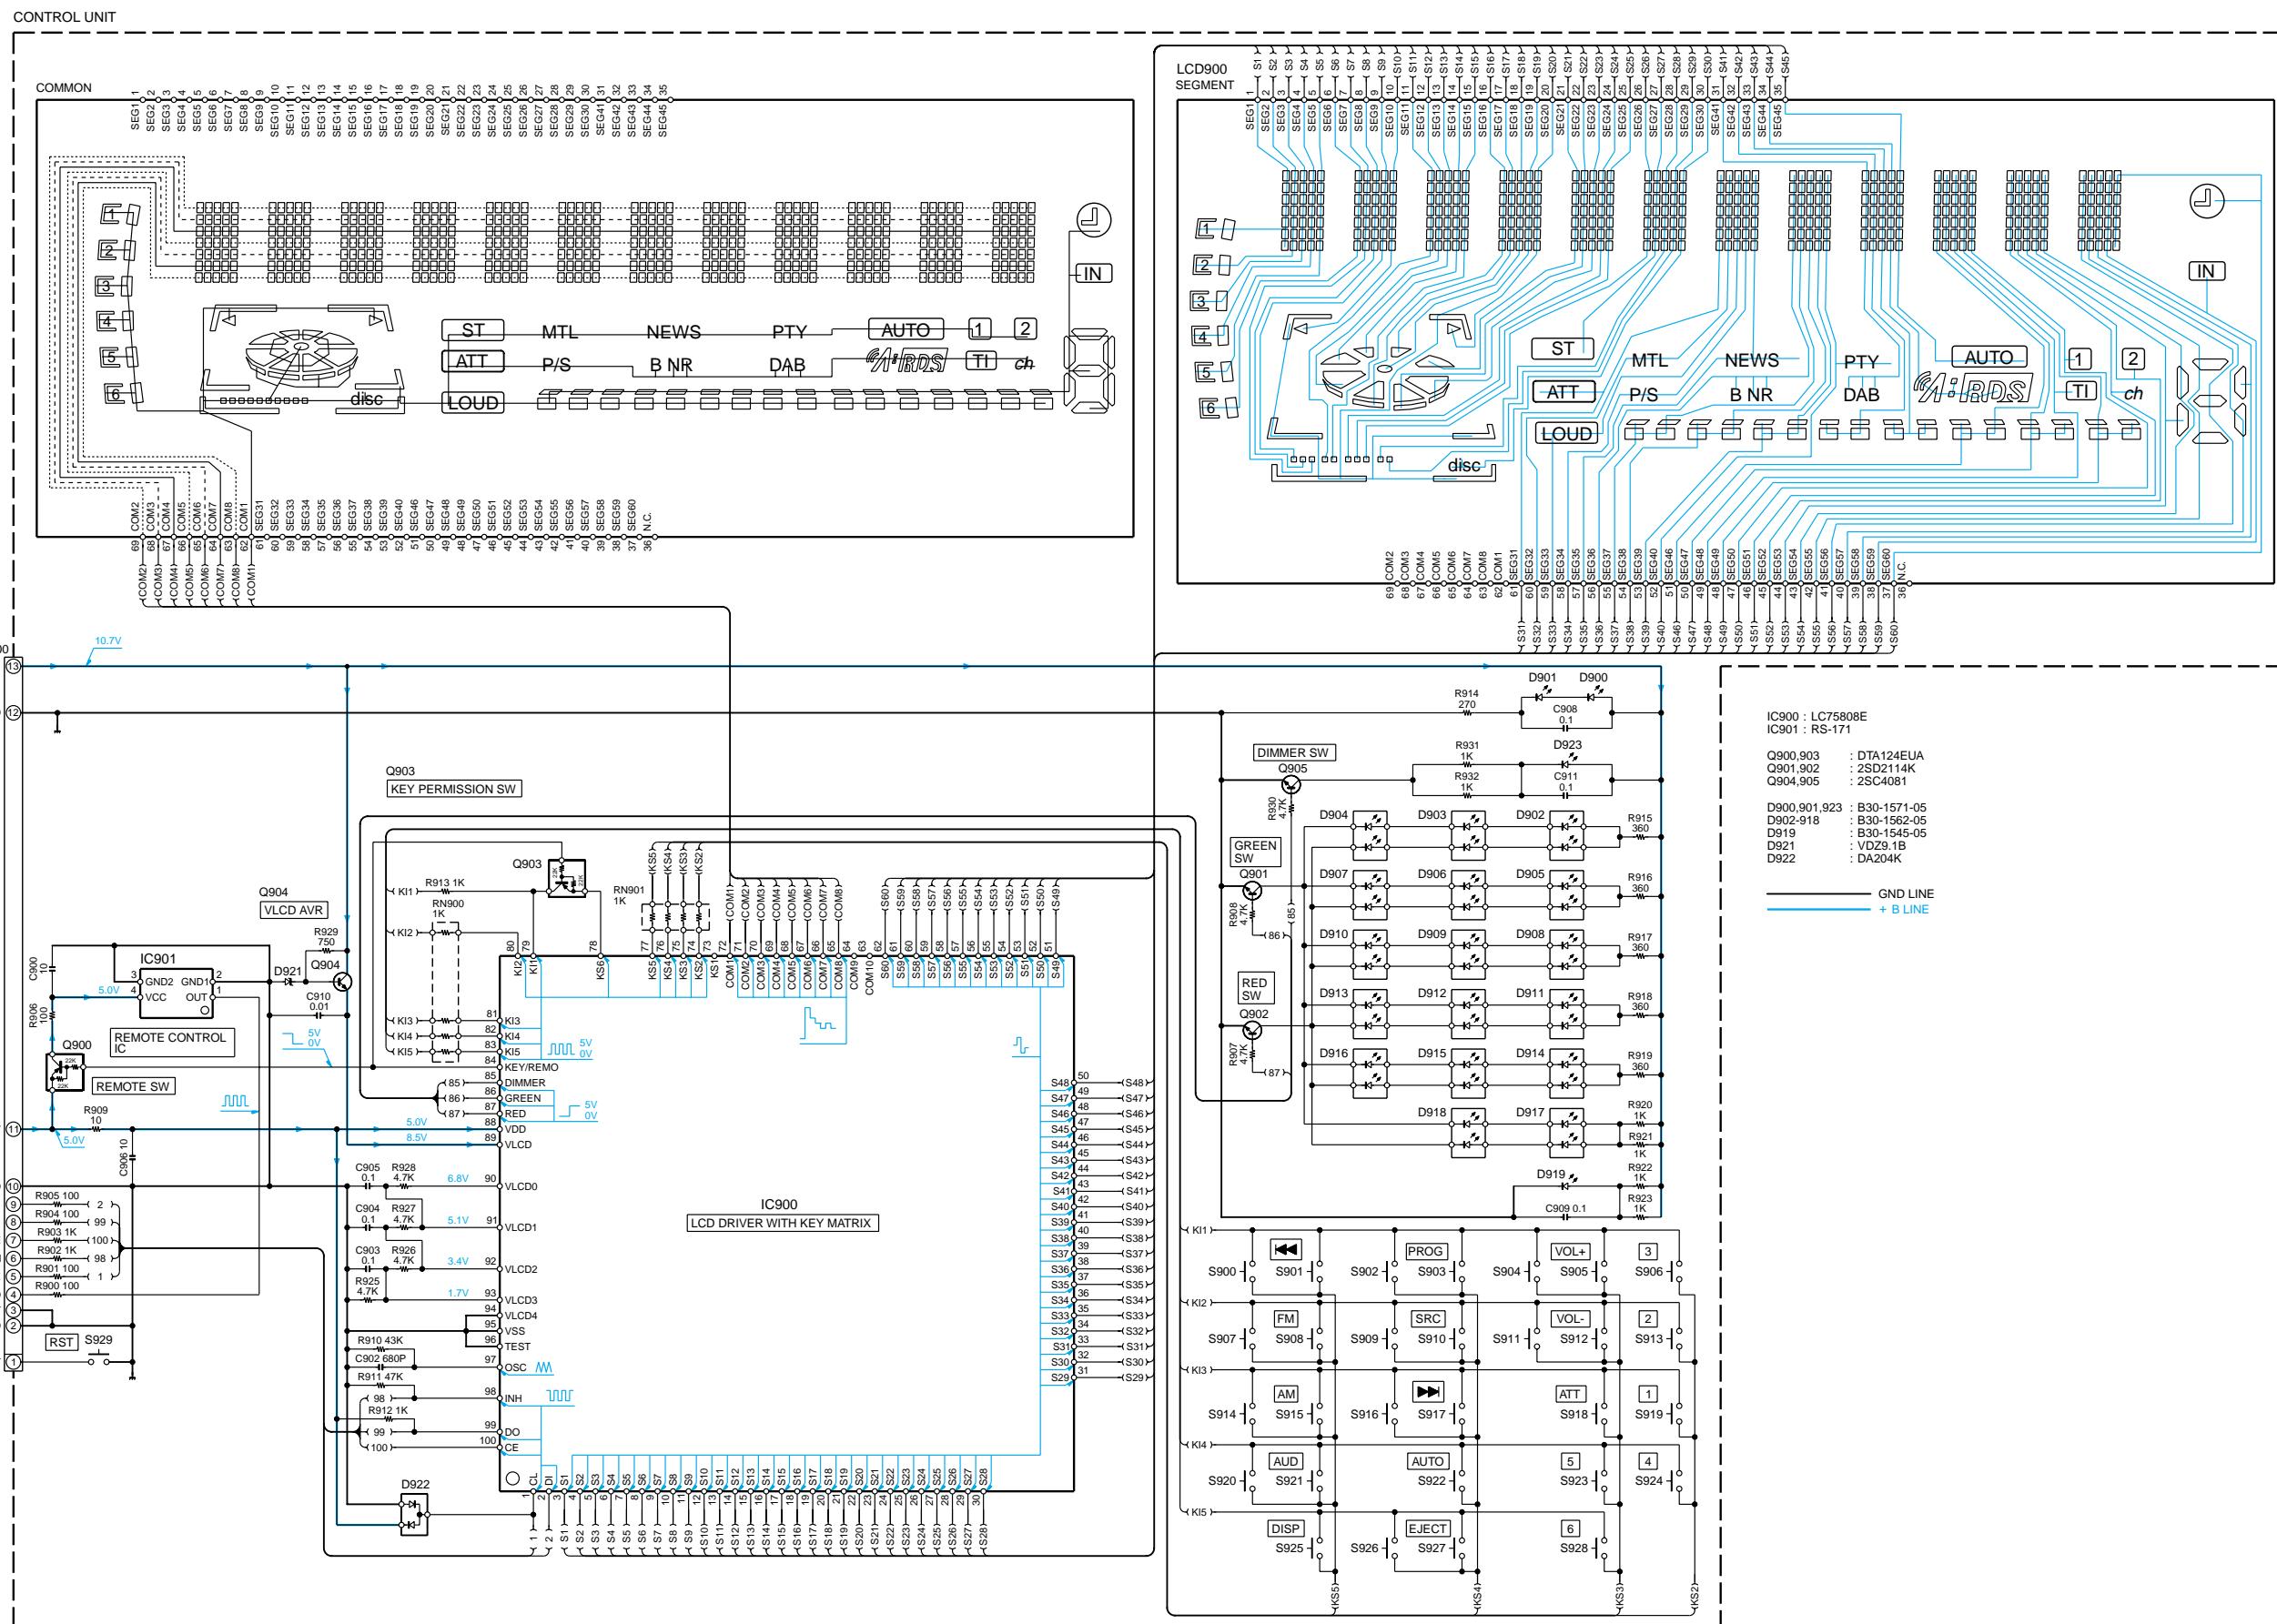

KDC-X615,6015
KDC-6080R/RV,7016

KENWOOD

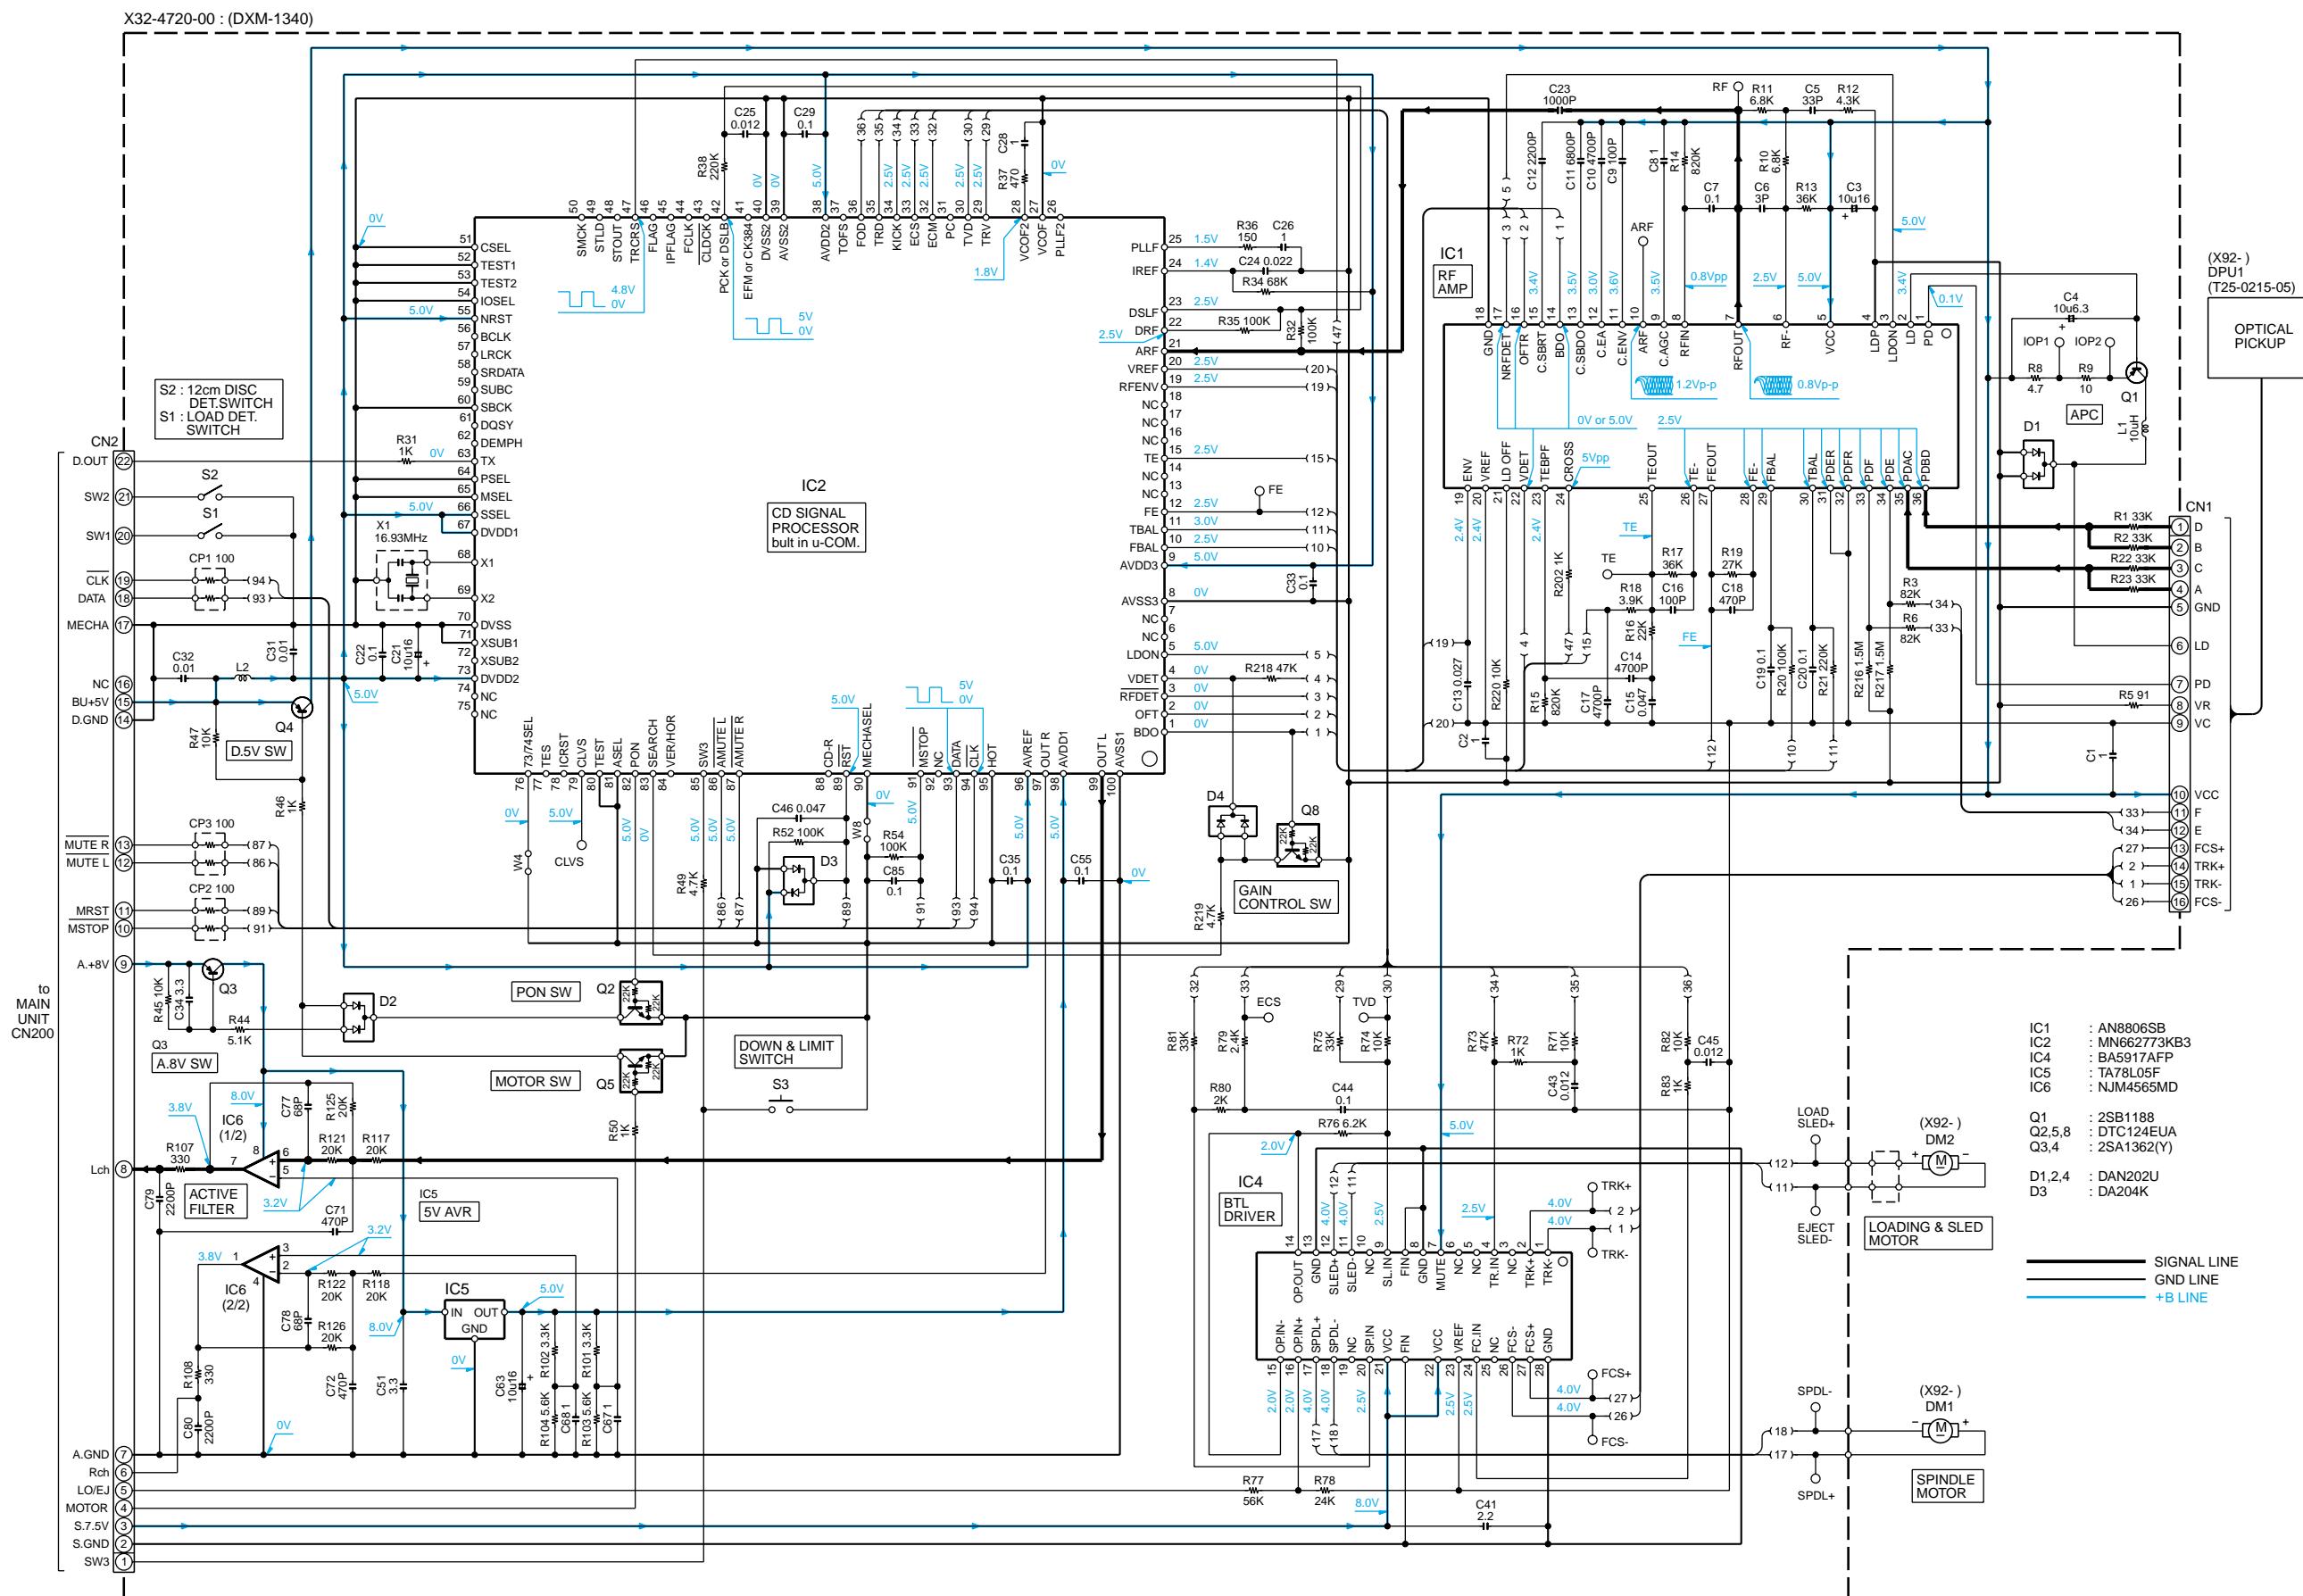

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).


△ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

* DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

KDC-X615,6015
KDC-6080R/RY/RV,7016

KENWOOD


EXPLODED VIEW (MECHANISM)

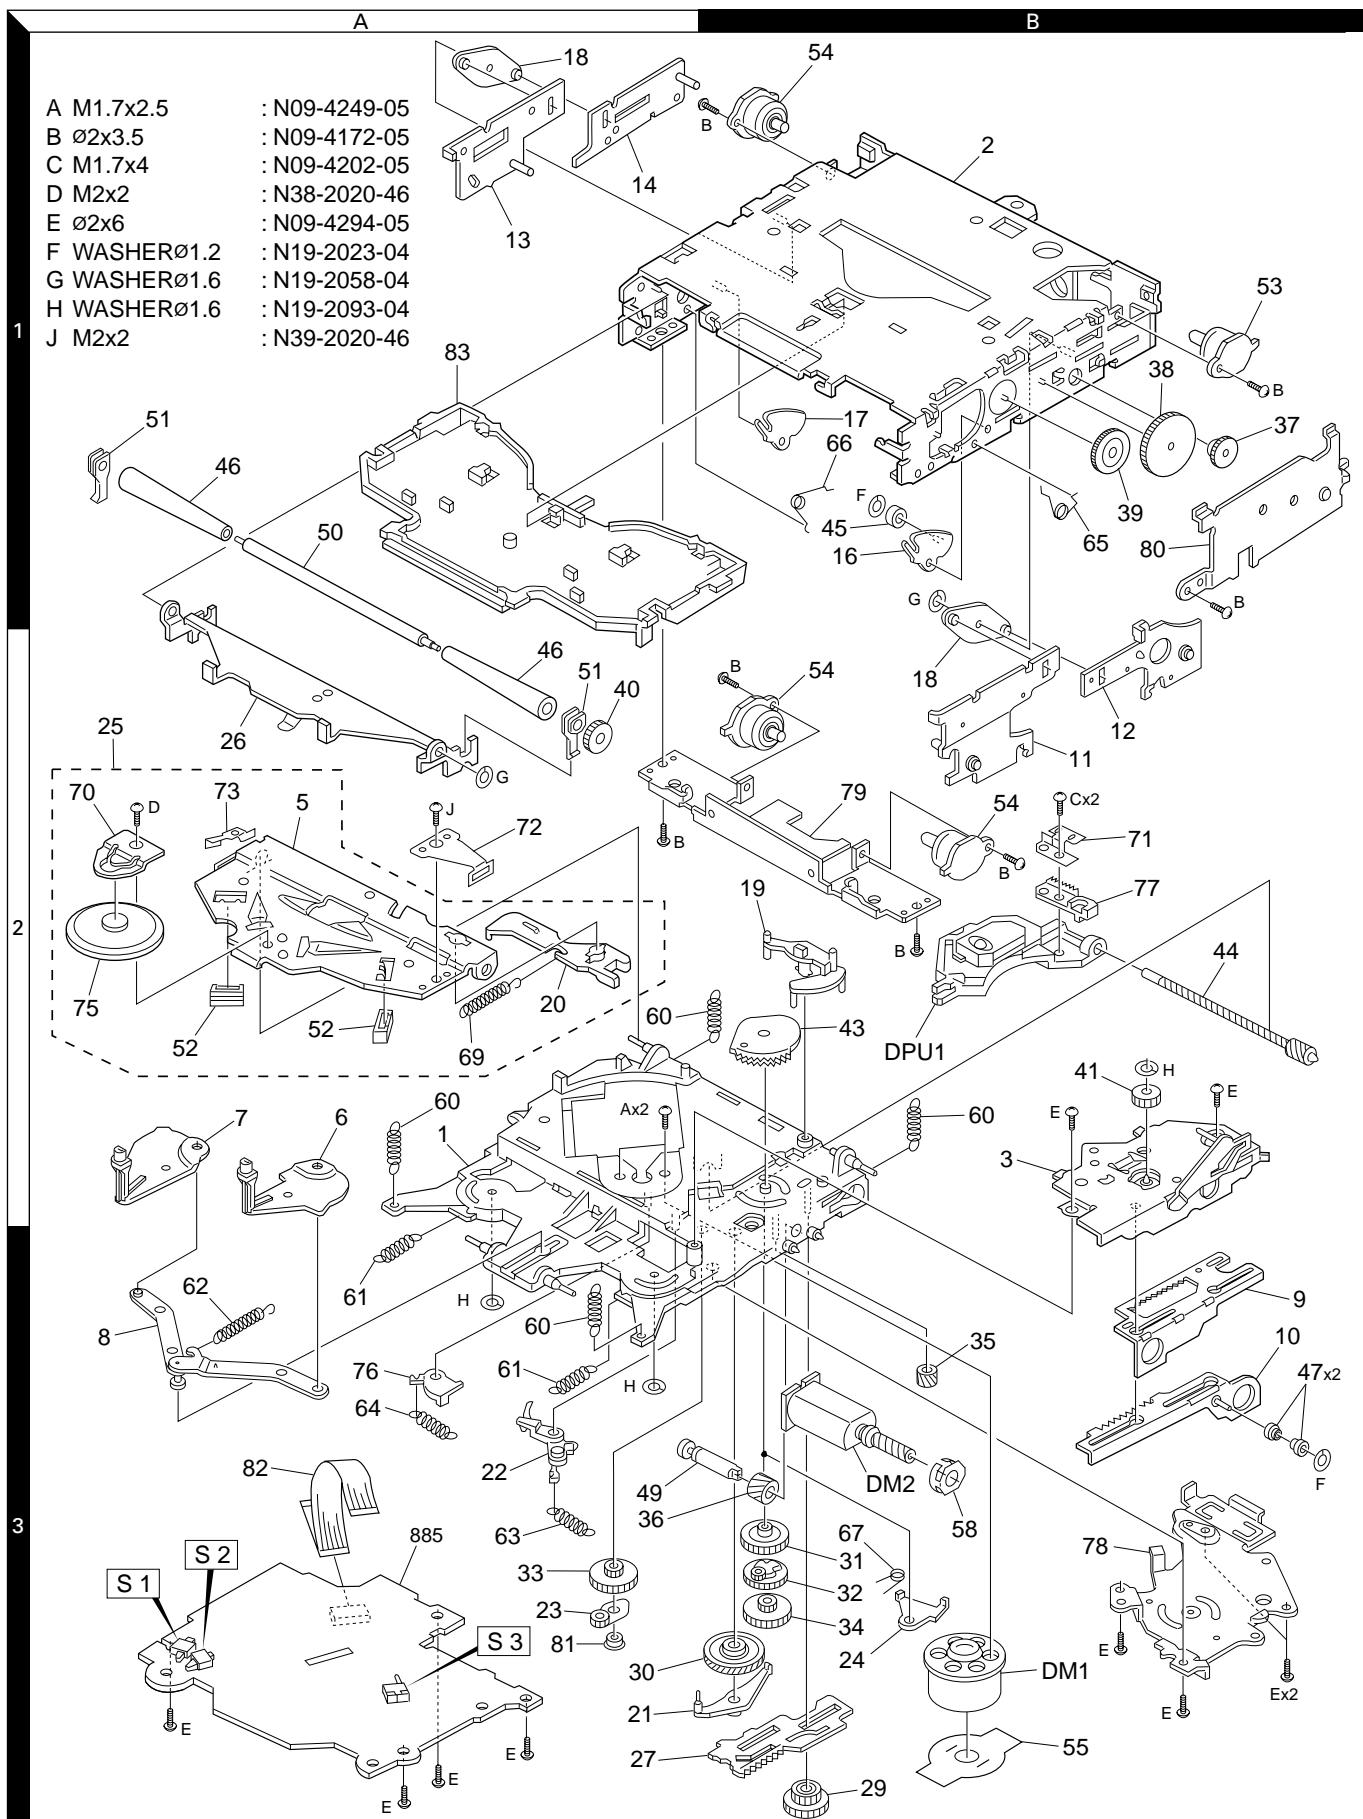

Parts with the exploded numbers larger than 700 are not supplied.

KDC-X615,6015
KDC-6080R/RY/RV,7016

EXPLODED VIEW (UNIT)

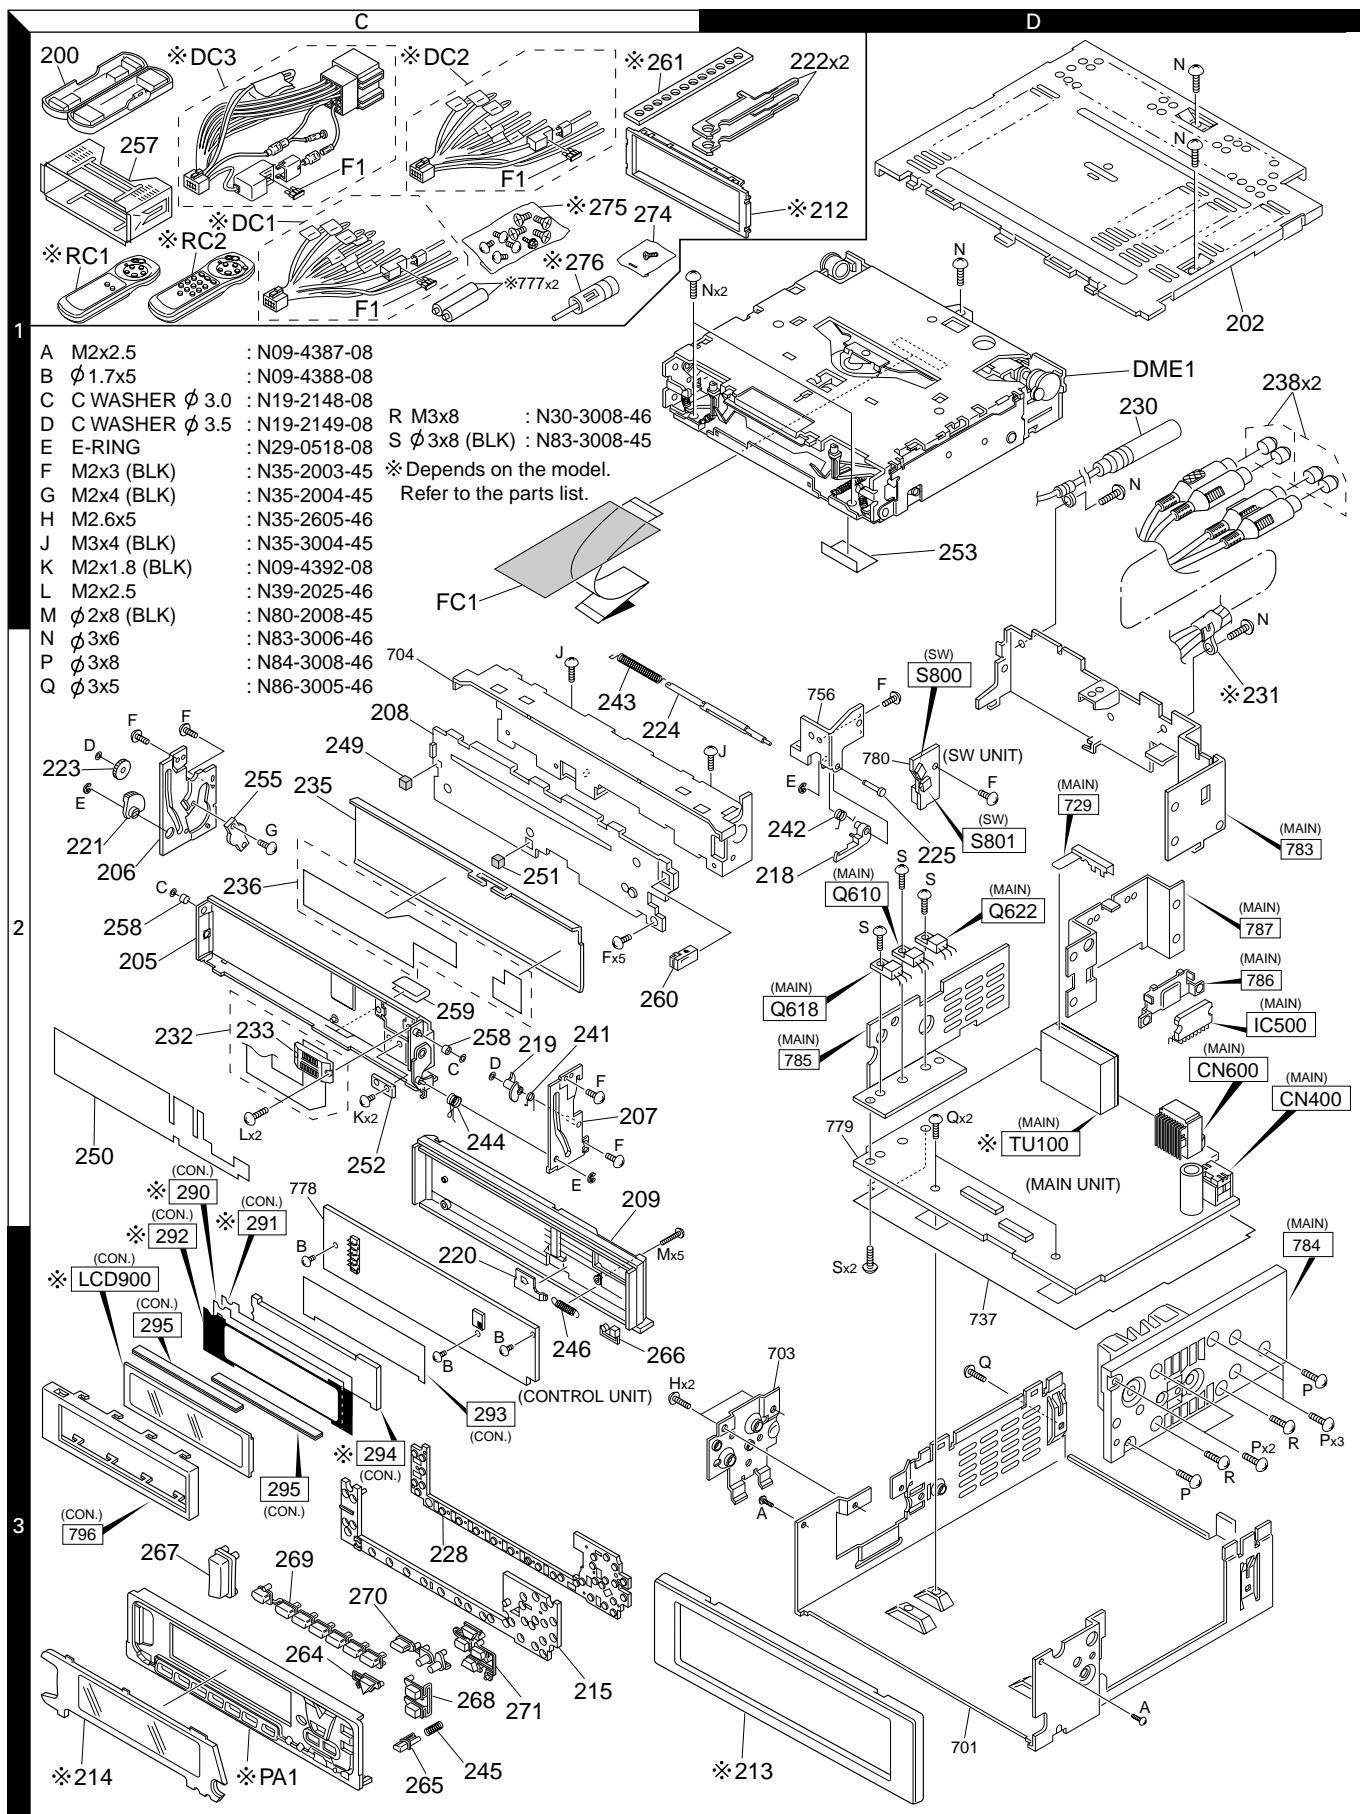

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti nati on	Ref. No.	A d d	N e w	Parts No.	Description	Desti nati on
KDC-X615, 6015, 6080R/RY/RV, 7016											
200	1C	*	A02-1494-08	PLASTIC CABINET ASSY		DC3	1C	*	E30-4867-08	DC CORD	E1E2E3
202	1D	*	A52-0769-08	TOP PLATE		FC1	1C	*	E39-0359-08	FLAT CABLE (22P)	
205	2C	*	A11-0995-08	PANEL BRACKET ASSY		235	2C	*	F07-1089-08	COVER (MASK)	
206	2C	*	A11-0996-08	SIDE PLATE L ASSY		236	2C	*	F09-1637-08	ADHESIVE SHEET (MASK)	
207	2C	*	A11-0997-08	SIDE PLATE R ASSY	▲	238	1D	*	F29-0049-05	INSULATING COVER (RCA PIN)	
					F1	1C	*	F06-1032-05	FUSE(BLADE TYPE)(10A)		
208	2C	*	A22-2846-08	SUB PANEL ASSY		241	2C	*	G01-3030-08	TORSION COIL SPRING (LEVER SW)	
209	2C	*	A46-1674-08	REAR COVER		242	2D	*	G01-3031-08	TORSION COIL SPRING (RELEASE)	
PA1	3C	*	A64-2089-08	PANEL ASSY	K	243	2C	*	G01-3032-08	TORSION COIL SPRING (FPC)	
PA1	3C	*	A64-2090-08	PANEL ASSY	K1	244	2C	*	G01-3033-08	TORSION COIL SPRING (BRACKET)	
PA1	3C	*	A64-2091-08	PANEL ASSY	M1	245	3C	*	G01-3034-08	COMPRESSION SPRING (OPEN)	
PA1	3C	*	A64-2092-08	PANEL ASSY	E1E2E3	246	3C	*	G01-3035-08	EXTENSION SPRING (LOCK LEVER)	
RC1	1C	A70-0883-05	REMOTO CONTROLLER ASSY(RC-500)	K1M1	249	2C	*	G13-1248-08	CUSHION (BRACKET LEFT)		
RC2	1C	A70-0894-05	REMOTO CONTROLLER ASSY(RC-520)	K	250	2C	*	G16-1154-08	PROTECTION SHEET(BRACKET ASSY)		
212	1D	*	B07-2186-08	ESCUTCHEON (J CAR)	KK1M1	251	2C	*	H12-2671-08	CUSHION (BRACKET MIDDLE)	
213	3D	*	B07-2195-08	ESCUTCHEON ASSY	E2E3	252	2C	*	H13-1782-08	FPC PROTECT COVER	
213	3D	*	B07-2195-08	ESCUTCHEON ASSY	KK1M1	253	1D	*	H21-1127-08	PROTECTION SHEET (CD&FPC)	
213	3D	*	B07-2196-08	ESCUTCHEON-P ASSY	K	-	*	H10-4714-08	POLYSTYRENE FORMED FIXTURE		
214	3C	*	B10-3210-08	FRONT GLASS ASSY	K	-	*	H10-4723-08	POLYSTYRENE FORMED FIXTURE (J)	KK1M1	
214	3C	*	B10-3211-08	FRONT GLASS ASSY	K1	-		H25-0329-04	PROTECTION BAG		
214	3C	*	B10-3212-08	FRONT GLASS ASSY	M1	-		H25-0334-04	PROTECTION BAG		
214	3C	*	B10-3213-08	FRONT GLASS ASSY	E1E2E3	-		H25-0336-04	PROTECTION BAG		
215	3C	*	B19-2041-08	HOLDER	-	-	*	H54-1719-08	ITEM CARTON CASE	K	
-			B46-0100-50	WARRANTY CARD	E1E3	-		*	H54-1720-08	ITEM CARTON CASE	K1
-			B46-0100-50	WARRANTY CARD	KK1M1	-		*	H54-1721-08	ITEM CARTON CASE	M1
-			B46-0612-14	ID CARD	-	-		*	H54-1722-08	ITEM CARTON CASE	E1
-			B46-0631-03	QUESTIONNAIRE CARD	K	-		*	H54-1723-08	ITEM CARTON CASE	E3
-			B58-1319-04	CAUTION CARD	E1E2E3	-		*	H54-1731-08	ITEM CARTON CASE	E2
-		*	B59-0742-00	SUB INSTRUCTION MANUAL	E1E2E3	255	2C	*	J19-5023-08	DUMPER	
-		*	B64-1625-00	INST.MANUAL(ENG,FRE,SRA)	KK1	257	1C	*	J21-9585-08	Mounting hardware assy	
-		*	B64-1626-00	INST.MANUAL(ENG,CHI)	M1	258	2C	*	J31-1048-08	COLLER	
-		*	B64-1627-00	INST.MANUAL(ENGLISH)	E1E2E3	259	2C	*	J39-0841-08	PROTECTION SHEET (BRACKET ARM)	
-		*	B64-1628-00	INST.MANUAL(FRE,GER,DUT)	E1E3	260	2C	*	J52-0604-05	PUSH LATCH	
-		*	B64-1629-00	INST.MANUAL(ITA,SPA,POR)	E1E3	261	1C	*	J54-0611-08	STAY	KK1M1
-		*	B64-1630-00	INST.MANUAL(RUS,POL,CZE)	E2	264	3C	*	K24-3591-08	KNOB (SRC)	
-		*	B64-1631-00	INST.MANUAL(HUN,SWE,FIN)	E2	265	3C	*	K24-3592-08	KNOB (OPEN)	
218	2D	*	D10-4500-08	ARM (RELEASE)		266	3C	*	K24-3630-08	KNOB (RELEASE)	
219	2C	*	D10-4501-08	LEVER (SW)		267	3C	*	K25-1152-08	KNOB (VOL)	
220	3C	*	D10-4502-08	LEVER (LOCK)		268	3C	*	K25-1153-08	KNOB (PLAY/PAUSE,EJECT)	
221	2C	*	D10-4503-08	GEAR (ARM)		269	3C	*	K25-1154-08	KNOB (PRESET,ATT)	
222	1D	*	D10-4514-08	LEVER		270	3C	*	K25-1155-08	KNOB (AUD,AUTO,DISP)	
223	2C	*	D13-2088-08	GEAR (IDOL)		271	3C	*	K25-1156-08	KNOB (FM,AM,UP,DOWN)	
224	2C	*	D14-0745-08	ROLLER (FPC)		274	1C	*	N99-1688-08	SCREW SET	
225	2D	*	D21-2351-08	SHAFT (RELEASE H)		275	1C	*	N99-1689-08	SCREW SET	KK1M1
228	3C	*	E29-1807-08	CONDUCTIVE RUBBER		A	3D	*	N09-4387-08	SCREW	
230	1D	*	E30-4857-08	ANT CORD ASSY		B	3C	*	N09-4388-08	SCREW	
231	2D	*	E30-4858-08	RCA CORD ASSY(G)	KM1	C	2C	*	N19-2148-08	C WASHER	
231	2D	*	E30-4859-08	RCA CORD ASSY	E3	D	2C	*	N19-2149-08	C WASHER	
231	2D	*	E30-4859-08	RCA CORD ASSY	K1E1E2	E	2C	*	N29-0518-08	E RING	
232	2C	*	E39-0360-08	FPC ASSY		F	2C	*	N35-2003-45	SCREW	
233	2C	*	E58-0895-05	RECTANGULAR RECEPTACLE (13P)		G	2C	*	N35-2004-45	SCREW	
DC1	1C	*	E30-4865-08	DC CORD	K	H	3C	*	N35-2605-46	SCREW	
DC2	1C	*	E30-4866-08	DC CORD	K1M1						

KDC-X615,6015 KDC-6080R/RY/RV,7016

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-X615, 6015, 6080R/RY/RV, 7016

Ref. No.	A dd	N ew	Parts No.	Description	Desti nation
J	2C		N35-3004-45	SCREW	
K	2C	*	N09-4392-08	SCREW	
L	2C		N39-2025-46	SCREW	
M	3C		N80-2008-45	SCREW	
N	1D		N83-3006-46	SCREW	
P	3D		N84-3008-46	SCREW	
Q	2D		N86-3005-46	SCREW	
276	1C		T90-0523-05	ANT ADAPTER	E1E2E3
DME1	1D	*	X92-3700-01	CD MECHANISM ASSY	

MAIN UNIT

C1		CE04CW1A101M	ELECTRO	100UF	10WV	
C2		CK73GB1H103K	CHIP C	0.010UF	K	
C3 ,4		CC73FCH1H220J	CHIP C	22PF	J	
C6		CK73EB1C105K	CHIP C	1.0UF	K	
C7		CK73GB1H102K	CHIP C	1000PF	K	
C8 -10		CK73GB1H103K	CHIP C	0.010UF	K	
C13 -17		CK73GB1H103K	CHIP C	0.010UF	K	
C18 ,19		CK73GB1H102K	CHIP C	1000PF	K	
C100		CK73GB1H103K	CHIP C	0.010UF	K	
C101		CE04CW1A101M	ELECTRO	100UF	10WV	
C102		CK73GB1H103K	CHIP C	0.010UF	K	
C103		CE04CW1A101M	ELECTRO	100UF	10WV	
C104		CK73GB1C104K	CHIP C	0.10UF	K	
C105		CK73GB1H103K	CHIP C	0.010UF	K	
C106		CE04CW1A101M	ELECTRO	100UF	10WV	
C107		CK73GB1H103K	CHIP C	0.010UF	K	
C108		CE04CW1A101M	ELECTRO	100UF	10WV	
C109		CK73GB1C104K	CHIP C	0.10UF	K	
C110		CE04CW1A101M	ELECTRO	100UF	10WV	
C111		CK73GB1H103K	CHIP C	0.010UF	K	
C150		C90-2597-05	ELECTRO	10UF	16WV	E1E2E3
C151		CC73FCH1H271J	CHIP C	270PF	J	E1E2E3
C152		C90-2597-05	ELECTRO	10UF	16WV	E1E2E3
C153		CK73GB1H103K	CHIP C	0.010UF	K	E1E2E3
C154,155		CC73FCH1H100D	CHIP C	10PF	D	E1E2E3
C200		C90-5325-08	CHIP C	0.047UF	K	
C300		CK73EB1C225K	CHIP C	2.2UF	K	
C301A,B		CK73EB1C225K	CHIP C	2.2UF	K	
C302		C90-5326-08	CHIP C	0.033UF	K	
C303		CK73GB1H153K	CHIP C	0.015UF	K	
C304		CK73FB1C474K	CHIP C	0.47UF	K	
C305		CC73FCH1H151J	CHIP C	150PF	J	
C306		CK73GB1C104K	CHIP C	0.10UF	K	
C307		CC73FCH1H121J	CHIP C	120PF	J	
C308		CK73GB1C823K	CHIP C	0.082UF	K	
C309		CE04CW1C470M	ELECTRO	47UF	16WV	
C310		CK73GB1H103K	CHIP C	0.010UF	K	
C311A,B		CK73EB1C225K	CHIP C	2.2UF	K	KM1
C313A,B		CK73FB1C274K	CHIP C	0.27UF	K	KM1
C314A,B		CK73FB1C274K	CHIP C	0.27UF	K	KM1
C315A,B		CK73FB1C274K	CHIP C	0.27UF	K	KM1
C316A,B		CK73FB1C274K	CHIP C	0.27UF	K	KM1
C317		CK73EB1C105K	CHIP C	1.0UF	K	KM1

Ref. No.	A dd	N ew	Parts No.	Description	Desti nation
C318			CK73GB1H103K	CHIP C 0.010UF K	KM1
C319			CE04CW1C470M	ELECTRO 47UF 16WV	KM1
C320A,B			CK73GB1C104K	CHIP C 0.10UF K	KM1
C321A,B			CK73GB1C104K	CHIP C 0.10UF K	KM1
C350A,B			C90-2597-05	ELECTRO 10UF 16WV	
C351A,B			C90-2597-05	ELECTRO 10UF 16WV	
C352A,B			CK73GB1H222K	CHIP C 2200PF K	
C353A,B			CK73GB1H222K	CHIP C 2200PF K	
C354			CK73FB1E104K	CHIP C 0.10UF K	
C400			CK73FB1E104K	CHIP C 0.10UF K	
C402A,B			C90-2606-05	ELECTRO 0.47UF 50WV	
C403			CE04CW1C470M	ELECTRO 47UF 16WV	
C404A,B			CK73GB1H102K	CHIP C 1000PF K	
C502A,B			CK73FB1C474K	CHIP C 0.47UF K	
C503A,B			CK73FB1C474K	CHIP C 0.47UF K	
C504A,B			CK73FB1C474K	CHIP C 0.47UF K	
C505A,B			CK73FB1C474K	CHIP C 0.47UF K	
C506,507			C90-2877-08	ELECTRO 1.0UF 50WV	
C508,509			CE04CW1C101M	ELECTRO 100UF 16WV	
C511			C600	* C90-5328-08	
			C601	CK73EB1H104K	
			C602	CK73FB1E104K	
			C603	CK73FB1H103K	
			C604	CK73FB1E104K	
			C605	CE04CW1H3R3M	
			C606	CK73FB1E683K	
			C607	CE04CW1H0R1M	
			C608	CK73FB1H223K	
			C609	CK73FB1H103K	
			C610,611	* CE04CW1C101M	
			C612	* C90-5327-08	
			C613	CK73GB1H223K	
			C614	CE04CW1A101M	
			C615	CK73GB1H223K	
			C618	CK73GB1H223K	
			C619	CE04CW1C470M	
			C621	CK73GB1H103K	
			C622	CE04CW1C470M	
			C623	CE04CW1A101M	
			C624	CK73FB1A105K	
			CN1	* E41-0068-08	
			CN3	FLAT CABLE CONNECTOR (13P)	
			CN100	E40-9402-05	
			CN200	E40-3238-05	
			CN350	E40-9339-05	
			CN400	E40-3241-05	
	2D		CN600	2D E56-0834-05	
	2D			E58-0863-15	
			L1	L33-1055-08	
			L100	L33-1055-08	
			L101	L33-1123-05	
			L102-106	L33-1055-08	
			L150	L33-1055-08	
				△ indicates safety critical components.	

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

MAIN UNIT

Ref. No.	Add	New	Parts No.	Description	Destinat ion	Ref. No.	Add	New	Parts No.	Description	Destinat ion
L300			L33-1055-08	SMALL FIXED INDUCTOR(4.7UH,K)		R56			RK73FB2A470J	CHIP R	47 J 1/10W
X1	*		L78-0815-08	SERAMIC RESONATOR (12.0MHZ)		R57			RK73FB2A221J	CHIP R	220 J 1/10W
X2			L78-0533-05	RESONATOR (32.768KHZ)		R58			RK73FB2A104J	CHIP R	100K J 1/10W
X150			L77-2002-05	RESONATOR (4.332MHZ)	E1E2E3	R59			RK73FB2A473J	CHIP R	47K J 1/10W
P	3D		N84-3008-46	SCREW		R60			RK73FB2A273J	CHIP R	27K J 1/10W
R	3D		N30-3008-46	SCREW		R61,62			RK73FB2A473J	CHIP R	47K J 1/10W
S	2D		N83-3008-45	SCREW		R64			RK73FB2A684J	CHIP R	680K J 1/10W
JC1			R92-2053-05	CHIP R 0 J 1/8W		R65			RK73FB2A223J	CHIP R	22K J 1/10W
JC2			R92-2052-05	CHIP R 0 J 1/10W		R67,68			RK73FB2A471J	CHIP R	470 J 1/10W
JC3 ,4			R92-2053-05	CHIP R 0 J 1/8W		R69			RK73FB2A102J	CHIP R	1.0K J 1/10W
JC5 -7			R92-2052-05	CHIP R 0 J 1/10W		R100			RK73EB2B151J	CHIP R	150 J 1/8W
JC8 -10			R92-2053-05	CHIP R 0 J 1/8W		R101			RK73FB2A223J	CHIP R	22K J 1/10W
JC11-13			R92-2052-05	CHIP R 0 J 1/10W		R102			RK73EB2B222J	CHIP R	2.2K J 1/8W
JC14			R92-2053-05	CHIP R 0 J 1/8W		R103			RK73FB2A223J	CHIP R	22K J 1/10W
JC15,16			R92-2052-05	CHIP R 0 J 1/10W		R104			RK73EB2B222J	CHIP R	2.2K J 1/8W
JC17			R92-2053-05	CHIP R 0 J 1/8W		R105			RK73FB2A102J	CHIP R	1.0K J 1/10W
JC18,19			R92-2052-05	CHIP R 0 J 1/10W		R106			RK73FB2A472J	CHIP R	4.7K J 1/10W
R1			RK73GB1J473J	CHIP R 47K J 1/16W		R200			RK73FB2A222J	CHIP R	2.2K J 1/10W
R3			RK73GB1J473J	CHIP R 47K J 1/16W		R201			RK73FB2A103J	CHIP R	10K J 1/10W
R5			RK73GB1J473J	CHIP R 47K J 1/16W		R300			RK73FB2A272J	CHIP R	2.7K J 1/10W
R7			RK73GB1J473J	CHIP R 47K J 1/16W	KM1E3	R301			RK73FB2A472J	CHIP R	4.7K J 1/10W
R8			RK73GB1J473J	CHIP R 47K J 1/16W	K1E2E2	R302,303			R92-2052-05	CHIP R	0 J 1/10W
R9			RK73GB1J473J	CHIP R 47K J 1/16W	KK1E3	R304			RK73FB2A222J	CHIP R	2.2K J 1/10W
R10			RK73GB1J473J	CHIP R 47K J 1/16W	M1E1E2	R305			RK73FB2A102J	CHIP R	1.0K J 1/10W
R11			RK73GB1J473J	CHIP R 47K J 1/16W	E1E2	R306			R92-2052-05	CHIP R	4.7K J 1/10W
R11			RK73GB1J473J	CHIP R 47K J 1/16W	KK1M1	R307			RK73FB2A472J	CHIP R	0 J 1/10W
R12			RK73GB1J473J	CHIP R 47K J 1/16W	E3	R308			RK73FB2A102J	CHIP R	1.0K J 1/10W
R13			RK73FB2A102J	CHIP R 1.0K J 1/10W		R309A,B			R92-2052-05	CHIP R	2.2K J 1/10W
R14			RK73EB2B225J	CHIP R 2.2M J 1/8W		R310A,B			RK73FB2A472J	CHIP R	4.7K J 1/10W
R15 -17			RK73FB2A103J	CHIP R 10K J 1/10W		R311A,B			R92-2052-05	CHIP R	0 J 1/10W
R18			RK73FB2A102J	CHIP R 1.0K J 1/10W		R311A,B			RK73FB2A472J	CHIP R	0 J 1/10W
R19			RK73FB2A472J	CHIP R 4.7K J 1/10W		R311A,B			R92-2052-05	CHIP R	0 J 1/10W
R20			RK73FB2A473J	CHIP R 47K J 1/10W		R312A,B			R92-2052-05	CHIP R	0 J 1/10W
R21,22			RK73FB2A103J	CHIP R 10K J 1/10W		R352A,B			R92-2052-05	CHIP R	0 J 1/10W
R23			RK73FB2A473J	CHIP R 47K J 1/10W		R353A,B			RK73FB2A471J	CHIP R	470 J 1/10W
R24			RK73FB2A104J	CHIP R 100K J 1/10W		R354A,B			RK73FB2A471J	CHIP R	470 J 1/10W
R25			RK73FB2A222J	CHIP R 2.2K J 1/10W	E1E2E3	R355A,B			RK73FB2A223J	CHIP R	22K J 1/10W
R26			RK73FB2A104J	CHIP R 100K J 1/10W	KK1M1	R356A,B			RK73FB2A223J	CHIP R	22K J 1/10W
R27			RK73FB2A222J	CHIP R 2.2K J 1/10W		R357A,B			RK73FB2A101J	CHIP R	100 J 1/10W
R32			RK73FB2A104J	CHIP R 100K J 1/10W		R400			RK73FB2A101J	CHIP R	100 J 1/10W
R33			RK73FB2A470J	CHIP R 47 J 1/10W		R401A,B			RK73FB2A101J	CHIP R	100 J 1/10W
R34			RK73FB2A221J	CHIP R 220 J 1/10W		R402			RK73FB2A101J	CHIP R	100 J 1/10W
R35			RK73FB2A102J	CHIP R 1.0K J 1/10W		R403-405			RK73FB2A222J	CHIP R	2.2K J 1/10W
R36			RK73FB2A154J	CHIP R 150K J 1/10W		R406,407			RK73FB2A472J	CHIP R	4.7K J 1/10W
R39 ,40			RK73FB2A102J	CHIP R 1.0K J 1/10W		R408			RK73FB2A101J	CHIP R	100 J 1/10W
R43			RK73FB2A473J	CHIP R 47K J 1/10W		R409			RK73FB2A104J	CHIP R	100K J 1/10W
R44			RK73FB2A471J	CHIP R 470 J 1/10W		R500A,B			RK73FB2A472J	CHIP R	4.7K J 1/10W
R45			RK73FB2A473J	CHIP R 47K J 1/10W		R501A,B			RK73FB2A101J	CHIP R	100K J 1/10W
R46			RK73FB2A471J	CHIP R 470 J 1/10W		R502			RK73FB2A472J	CHIP R	4.7K J 1/10W
R47			RK73FB2A473J	CHIP R 47K J 1/10W		R503			RK73FB2A472J	CHIP R	4.7K J 1/10W
R50			RK73FB2A101J	CHIP R 100 J 1/10W		R504			RK73FB2A333J	CHIP R	33K J 1/10W
R51,52			RK73FB2A102J	CHIP R 1.0K J 1/10W		R505			RK73FB2A223J	CHIP R	22K J 1/10W
R53			RK73FB2A221J	CHIP R 220 J 1/10W		R506			RK73FB2A102J	CHIP R	1.0K J 1/10W
R54,55			RK73FB2A471J	CHIP R 470 J 1/10W		R508			RK73FB2A273J	CHIP R	27K J 1/10W
						R509			RK73FB2A101J	CHIP R	100 J 1/10W

KDC-X615,6015 KDC-6080R/RY/RV,7016

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

MAIN UNIT

Ref. No.	A dd	N ew	Parts No.	Description	Dest inati on	Ref. No.	A dd	N ew	Parts No.	Description	Dest inati on
R600			RK73FB2A183J	CHIP R 18K J 1/10W		D601			HZS6B1L	ZENER DIODE	
R601			RK73FB2A822J	CHIP R 8.2K J 1/10W		D603			HZS6B1L	ZENER DIODE	
R602			RK73FB2A223J	CHIP R 22K J 1/10W		D604,605			11ES2C	DIODE	
R603			RK73FB2A104J	CHIP R 100K J 1/10W		D606			11ES2C	DIODE	KK1M1
R604			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		D607			11ES2C	DIODE	
R605			RK73EB2B473J	CHIP R 47K J 1/8W		D608			1SS355	DIODE	
R606			RK73FB2A912J	CHIP R 9.1K J 1/10W		D610			MA4047-M	ZENER DIODE	E1E2E3
R607			RK73FB2A104J	CHIP R 100K J 1/10W		D611			DA204K	DIODE	K
R608			RK73FB2A472J	CHIP R 4.7K J 1/10W		D612			11ES2C	DIODE	
R609			RK73FB2A223J	CHIP R 22K J 1/10W	KK1M1	D613			HZS6B1L	ZENER DIODE	
R610			RS14AB3A561J	FL-PROOF RS 560 J 1W	KK1M1	D614			MA4110-L	ZENER DIODE	
R611			RK73FB2A472J	CHIP R 4.7K J 1/10W		D615			MA4082(N)-L	ZENER DIODE	
R612			RD14DB2H102J	SMALL-RD 1.0K J 1/2W		D617			DTZ9.1A	ZENER DIODE	
R613			RK73FB2A223J	CHIP R 22K J 1/10W		IC1	*		784217AGF506	MI-COM IC	
R614			RD14DB2H102J	SMALL-RD 1.0K J 1/2W		IC2			S-80830ANNP	ANALOGUE IC	
R615			RK73EB2B103J	CHIP R 10K J 1/8W		IC3			HD74HC27FP	MOS-IC	
R616			RK73FB2A104J	CHIP R 100K J 1/10W		IC150			TDA7479D	ANALOGUE IC	E1E2E3
R617			RK73FB2A473J	CHIP R 47K J 1/10W	E1E2E3	IC300			TDA7400D	ANALOGUE IC	
R618			RK73EB2B752J	CHIP R 7.5K J 1/8W	E1E2E3	IC301			TDA7401	ANALOGUE IC	KM1
R619			RK73FB2A223J	CHIP R 22K J 1/10W	E1E2E3	IC500	2D		TDA7386	ANALOGUE IC	
R620			RK73FB2A102J	CHIP R 1.0K J 1/10W	E1E2E3	Q1			2SA1576A	TRANSISTOR	
R621			RK73FB2A104J	CHIP R 100K J 1/10W		Q2			DTA124EUA	DIGITAL TRANSISTOR	
R622,623			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q3			DTA144EUA	DIGITAL TRANSISTOR	
R624			RK73FB2A223J	CHIP R 22K J 1/10W		Q5			2SA1576A	TRANSISTOR	
R625			RD14BB2E100J	RD 10 J 1/4W		Q100			2SA1703-AN	TRANSISTOR	
R626			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q101			DTC144EUA	DIGITAL TRANSISTOR	
R627			RK73FB2A471J	CHIP R 470 J 1/10W		Q102			2SA1703-AN	TRANSISTOR	
R634			RK73FB2A152J	CHIP R 1.5K J 1/10W		Q103			DTC144EUA	DIGITAL TRANSISTOR	
R641			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q104			2SC4081	TRANSISTOR	E1E2E3
R643			RK73FB2A103J	CHIP R 10K J 1/10W		Q300			DTA124EUA	DIGITAL TRANSISTOR	E1E2E3
R644			R92-2052-05	CHIP R 0 J 1/10W	E1E2E3	Q301			DTC114TUA	DIGITAL TRANSISTOR	E1E2E3
RN1			R90-0724-05	MULTI-COMP 1K X4		Q302			2SC4081	TRANSISTOR	E1E2E3
RN2 -4			R90-0725-05	MULTI-COMP 1K X2		Q303			DTC144EUA	DIGITAL TRANSISTOR	
RN5			R90-0724-05	MULTI-COMP 1K X4		Q350A,B			DTC343TK	DIGITAL TRANSISTOR	
RN6			R90-0725-05	MULTI-COMP 1K X2		Q351A,B			DTC343TK	DIGITAL TRANSISTOR	
RN7			R90-1022-05	MULTI-COMP 470 X2		Q500			DTC114YUA	DIGITAL TRANSISTOR	
RN9			R90-0720-05	MULTI-COMP 100K X4		Q600,601			2SC4081	TRANSISTOR	
RN150			R90-0722-05	MULTI-COMP 2.2K X4	E1E2E3	Q602			2SA1703-AN	TRANSISTOR	KK1M1
RN400			R90-0720-05	MULTI-COMP 100K X4		Q603			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
D5 -8			MA4062(N)-M	ZENER DIODE		Q604			2SA1703-AN	TRANSISTOR	
D100			MA4051(N)-M	ZENER DIODE		Q605			2SA1576A	TRANSISTOR	
D300			1SS355	DIODE		Q606			DTA124EUA	DIGITAL TRANSISTOR	
D301			RD6.8MW	ZENER DIODE		Q607			DTC114EUA	DIGITAL TRANSISTOR	
D350A,B			STZ6.2Z	ZENER DIODE		Q608			DTC144EUA	DIGITAL TRANSISTOR	
D352A,B			STZ6.2Z	ZENER DIODE		Q609			DTA123JUA	DIGITAL TRANSISTOR	K
D400A,B			STZ6.2Z	ZENER DIODE		Q610	2D		2SB1565(E,F)	TANSISTOR	
D401-405			STZ6.2Z	ZENER DIODE		Q611			2SC4081	TRANSISTOR	
D501			1SS355	DIODE		Q612			2SD1760	TRANSISTOR	
D502A,B			11ES2C	DIODE		Q614			DTA124EUA	DIGITAL TRANSISTOR	
D503A,B			11ES2C	DIODE		Q615			DTC124EUA	DIGITAL TRANSISTOR	
D504A,B			11ES2C	DIODE		Q618	2D		2SB1565(E,F)	TANSISTOR	
D505A,B			11ES2C	DIODE		Q620			2SC4081	TRANSISTOR	
D506,507			1SS355	DIODE		Q621			DTA124EUA	DIGITAL TRANSISTOR	
D600			RM10Z	ZENER DIODE		Q622	2D		2SB1565(E,F)	TANSISTOR	
						Q624			DTC144EUA	DIGITAL TRANSISTOR	

K : KDC-X615 K1: KDC-6015

M1: KDC-7016 E1: KDC-6080R E2: KDC-6080RY E3: KDC-6080RV

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

MAIN UNIT

Ref. No.	A dd	N ew	Parts No.	Description	Dest inat ion	Ref. No.	A dd	N ew	Parts No.	Description	Dest inat ion
Q625			2SC4081	TRANSISTOR		D921			MA4091(N)-L	ZENER DIODE	
TH500	*		TH470	THERMISTOR		D922			DA204K	DIODE	
TU100	2D		X86-3160-11	FRONT-END UNIT	KK1M1	IC900		*	LC75808E	MOS-IC	
TU100	2D		X86-3162-70	FRONT-END UNIT	E1E2E3	IC901			RS-171	ANALOGUE IC	
SW UNIT						Q900			DTA124EUA	DIGITAL TRANSISTOR	
CN800		*	E4-0069-08	PIN ASSY (4P)		Q901,902			2SD2114K	TRANSISTOR	
S800,801	2D	*	S68-0850-08	PUSH SWITCH		Q903			DTA124EUA	DIGITAL TRANSISTOR	
CONTROL UNIT						Q904,905			2SC4081	TRANSISTOR	
290	2C	*	B11-1308-08	COLOR FILTER (BULE)	E3	CD PLAYER UNIT (X32-4720-00)					
291	3C	*	B11-1311-08	COLOR FILTER (PINK)	E3	C1 ,2			CK73FB1A105K	CHIP C	1.0UF K
292	3C	*	B11-1305-08	OPTICAL DIFFUSER	E1E2	C3			C92-1359-05	CHIP-TAN	10UF 16WV
292	3C	*	B11-1305-08	OPTICAL DIFFUSER	KK1M1	C4			C92-0566-05	CHIP-TAN	10UF 6.3WV
292	3C	*	B11-1310-08	OPTICAL DIFFUSER	E3	C5			CC73FCH1H330J	CHIP C	33PF J
293	3C	*	B11-1306-08	REFRECTION SHEET		C6			CC73FCH1H030C	CHIP C	3.0PF C
294	3C	*	B19-2040-08	LIGHTING BOARD	E1E2	C7			CK73FB1C104K	CHIP C	0.10UF K
294	3C	*	B19-2040-08	LIGHTING BOARD	KK1M1	C8			CK73FB1A105K	CHIP C	1.0UF K
294	3C	*	B19-2042-08	LIGHTING BOARD	E3	C9			CC73FCH1H101J	CHIP C	100PF J
D900,901			B30-1571-05	LED (WHT)		C10			CK73FB1H472K	CHIP C	4700PF K
D902-918			B30-1562-05	LED		C11			CK73FB1H682K	CHIP C	6800PF K
D919			B30-1545-05	LED		C12			CK73FB1H222K	CHIP C	2200PF K
D923			B30-1571-05	LED (WHT)		C13			CK73FB1H273K	CHIP C	0.027UF K
LCD900	3C	*	B38-1045-08	LIQUID CRYSTAL	E1E2	C14			CK73FB1H472K	CHIP C	4700PF K
LCD900	3C	*	B38-1045-08	LIQUID CRYSTAL	KK1M1	C15			CK73FB1E473K	CHIP C	0.047UF K
LCD900	3C	*	B38-1046-08	LIQUID CRYSTAL	E3	C16			CC73FCH1H101J	CHIP C	100PF J
C900		*	C90-5327-08	CHIP-TAN	10UF 16WV	C17			CK73FB1H472K	CHIP C	4700PF K
C902			CK73GB1H681K	CHIP C	680PF K	C18			CK73FB1H471K	CHIP C	470PF K
C903-905			CK73FB1E104K	CHIP C	0.10UF K	C19 ,20			CK73FB1C104K	CHIP C	0.10UF K
C906		*	C90-5327-08	CHIP-TAN	10UF 16WV	C21			C92-1359-05	CHIP-TAN	10UF 16WV
C908,909			CK73FB1E104K	CHIP C	0.10UF K	C22			CK73FB1C104K	CHIP C	0.10UF K
C910			CK73GB1H103K	CHIP C	0.010UF K	C23			CK73FB1H102K	CHIP C	1000PF K
C911			CK73FB1E104K	CHIP C	0.10UF K	C24			CK73FB1H223K	CHIP C	0.022UF K
295	3C	*	E29-1818-08	CONDUCTIVE RUBBER		C25			CK73FB1H123K	CHIP C	0.012UF K
CN900			E59-0833-05	RECTANGULAR RECEPTACLE (13P)		C26			CK73FB1A105K	CHIP C	1.0UF K
R900,901			RK73GB1J101J	CHIP R	100 J 1/16W	C28			CK73FB1A105K	CHIP C	1.0UF K
R902,903			RK73GB1J102J	CHIP R	1.0K J 1/16W	C29			CK73FB1C104K	CHIP C	0.10UF K
R904-906			RK73GB1J101J	CHIP R	100 J 1/16W	C31 ,32			CK73FB1H103K	CHIP C	0.010UF K
R907,908			RK73GB1J472J	CHIP R	4.7K J 1/16W	C33			CK73FB1C104K	CHIP C	0.10UF K
R909			RK73GB1J100J	CHIP R	10 J 1/16W	C34			CK73EB1A335K	CHIP C	3.3UF K
R910			RK73GB1J433J	CHIP R	43K J 1/16W	C35			CK73FB1C104K	CHIP C	0.10UF K
R911			RK73GB1J473J	CHIP R	47K J 1/16W	C41			CK73EB1C225K	CHIP C	2.2UF K
R912			RK73GB1J102J	CHIP R	1.0K J 1/16W	C43			CK73FB1H123K	CHIP C	0.012UF K
R913			RK73FB2A102J	CHIP R	1.0K J 1/10W	C44			CK73FB1C104K	CHIP C	0.10UF K
R914			RK73EB2B271J	CHIP R	270 J 1/8W	C45			CK73FB1H123K	CHIP C	0.012UF K
R915-919			RK73EB2B361J	CHIP R	360 J 1/8W	C46			CK73FB1E473K	CHIP C	0.047UF K
R920-923			RK73FB2A102J	CHIP R	1.0K J 1/10W	C51			CK73EB1A335K	CHIP C	3.3UF K
R925-928			RK73GB1J472J	CHIP R	4.7K J 1/16W	C55			CK73FB1C104K	CHIP C	0.10UF K
R929			RK73FB2A751J	CHIP R	750 J 1/10W	C63			C92-1359-05	CHIP-TAN	10UF 16WV
R930			RK73GB1J472J	CHIP R	4.7K J 1/16W	C67 ,68			CK73FB1A105K	CHIP C	1.0UF K
R931,932			RK73EB2B102J	CHIP R	1.0K J 1/8W	C71 ,72			CK73FB1H471K	CHIP C	470PF K
RN900,901			R90-0724-05	MULTI-COMP	1K X4	C77 ,78			CC73FCH1H680J	CHIP C	68PF J
						C79 ,80			C93-1044-05	CERAMIC	2200PF K
						C85			CK73FB1C104K	CHIP C	0.10UF K
						CN1			E40-9536-05	FLAT CABLE CONNECTOR (16P)	
						CN2			E40-9339-05	FLAT CABLE CONNECTOR (22P)	

KDC-X615,6015 KDC-6080R/RY/RV,7016

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD PLAYER UNIT (X32-4720-00)

Ref. No.	Add	New	Parts No.	Description	Destinat ion	Ref. No.	Add	New	Parts No.	Description	Destinat ion
L1			L40-1001-78	SMALL FIXED INDUCTOR(10UH)		R125,126			RK73FB2A203J	CHIP R 20K J 1/10W	
L2			L92-0308-05	FERRITE CORE		R202			RK73FB2A102J	CHIP R 1.0K J 1/10W	
X1			L78-0572-05	RESONATOR (16.93MHZ)		R216,217			RK73FB2A155J	CHIP R 1.5M J 1/10W	
CP1 -3			R90-1019-05	MULTI-COMP 100 X2		R218			RK73FB2A473J	CHIP R 47K J 1/10W	
R1 ,2			RK73FB2A333J	CHIP R 33K J 1/10W		R219			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R3			RK73FB2A823J	CHIP R 82K J 1/10W		R229			RK73FB2A103J	CHIP R 10K J 1/10W	
R5			RK73FB2A910J	CHIP R 91 J 1/10W		W4			R92-2052-05	CHIP R 0 J 1/10W	
R6			RK73FB2A823J	CHIP R 82K J 1/10W		W8			R92-2052-05	CHIP R 0 J 1/10W	
R8			RK73EB2B4R7J	CHIP R 4.7 J 1/8W		S1 ,2			S68-0838-05	PUSH SWITCH	
R9			RK73EB2B100J	CHIP R 10 J 1/8W		S3			S68-0823-05	PUSH SWITCH	
R10 ,11			RK73FB2A682J	CHIP R 6.8K J 1/10W		D1 ,2			DAN202U	DIODE	
R12			RK73FB2A432J	CHIP R 4.3K J 1/10W		D3			DA204K	DIODE	
R13			RK73FB2A363J	CHIP R 36K J 1/10W		D4			DAN202U	DIODE	
R14 ,15			RK73FB2A824J	CHIP R 820K J 1/10W		IC1			AN8806SB	ANALOGUE IC	
R16			RK73FB2A223J	CHIP R 22K J 1/10W		IC2			MN662773KB3	MOS-IC	
R17			RK73FB2A363J	CHIP R 36K J 1/10W		IC4			BA5917AFP	ANALOGUE IC	
R18			RK73FB2A392J	CHIP R 3.9K J 1/10W		IC5			TA78L05F	IC(VOLTAGE REGULATOR/ +5V)	
R19			RK73FB2A273J	CHIP R 27K J 1/10W		IC6			NJM4565MD	IC(OP AMP X2)	
R20			RK73FB2A104J	CHIP R 100K J 1/10W		Q1			2SB1188	TRANSISTOR	
R21			RK73FB2A224J	CHIP R 220K J 1/10W		Q2			DTC124EUA	DIGITAL TRANSISTOR	
R22 ,23			RK73FB2A333J	CHIP R 33K J 1/10W		Q3 ,4			2SA1362(Y)	TRANSISTOR	
R31			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q5			DTC124EUA	DIGITAL TRANSISTOR	
R32			RK73FB2A104J	CHIP R 100K J 1/10W		Q8			DTC124EUA	DIGITAL TRANSISTOR	
R34			RK73FB2A683J	CHIP R 68K J 1/10W		CD MECHANISM ASSY (X92-3700-01)					
R35			RK73FB2A104J	CHIP R 100K J 1/10W		1	2A		A10-4482-01	CHASSIS	
R36			RK73FB2A151J	CHIP R 150 J 1/10W		2	1B		A10-4225-33	CHASSIS CALKING ASSY	
R37			RK73FB2A471J	CHIP R 470 J 1/10W		3	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
R38			RK73FB2A224J	CHIP R 220K J 1/10W		5	2A		D10-3082-13	ARM	
R44			RK73FB2A512J	CHIP R 5.1K J 1/10W		6	2A		D10-4306-04	ARM ASSY	
R45			RK73FB2A103J	CHIP R 10K J 1/10W		7	2A		D10-4305-04	ARM ASSY	
R46			RK73FB2A102J	CHIP R 1.0K J 1/10W		8	3A		D10-3087-44	ARM ASSY	
R47			RK73FB2A103J	CHIP R 10K J 1/10W		9	3B		D10-3092-03	SLIDER	
R49			RK73FB2A472J	CHIP R 4.7K J 1/10W		10	3B		D10-3093-04	SLIDER ASSY	
R50			RK73FB2A102J	CHIP R 1.0K J 1/10W		11	2B		D10-3095-04	SLIDER ASSY	
R52			RK73FB2A104J	CHIP R 100K J 1/10W		12	2B		D10-3096-04	SLIDER ASSY	
R54			RK73FB2A104J	CHIP R 100K J 1/10W		13	1A		D10-3099-24	SLIDER ASSY	
R71			RK73FB2A103J	CHIP R 10K J 1/10W		14	1A		D10-3100-04	SLIDER ASSY	
R72			RK73FB2A102J	CHIP R 1.0K J 1/10W		16	1B		D10-4004-04	LEVER ASSY	
R73			RK73FB2A473J	CHIP R 47K J 1/10W		17	1B		D10-4006-04	LEVER	
R74			RK73FB2A103J	CHIP R 10K J 1/10W		18	1A		D10-4007-04	LEVER	
R75			RK73FB2A333J	CHIP R 33K J 1/10W		19	2B		D10-4008-14	LEVER	
R76			RK73FB2A622J	CHIP R 6.2K J 1/10W		20	2A		D10-4009-23	ARM	
R77			RK73FB2A563J	CHIP R 56K J 1/10W		21	3A		D10-4010-04	LEVER	
R78			RK73FB2A243J	CHIP R 24K J 1/10W		22	3A		D10-4011-34	LEVER ASSY	
R79			RK73FB2A242J	CHIP R 2.4K J 1/10W		23	3A		D10-4013-14	ARM ASSY	
R80			RK73FB2A202J	CHIP R 2.0K J 1/10W		24	3B		D10-4050-04	ARM	
R81			RK73FB2A333J	CHIP R 33K J 1/10W		25	3A		D10-4038-23	ARM ASSY	
R82			RK73FB2A103J	CHIP R 10K J 1/10W		26	2A		D10-4123-24	LEVER ASSY	
R83			RK73FB2A102J	CHIP R 1.0K J 1/10W		27	3A		D13-1340-13	RACK (GEAR)	
R101,102			RK73FB2A332J	CHIP R 3.3K J 1/10W		29	3B		D13-1231-04	GEAR	
R103,104			RK73FB2A562J	CHIP R 5.6K J 1/10W		30	3A		D13-1240-04	GEAR	
R107,108			RK73FB2A331J	CHIP R 330 J 1/10W		31	3B		D13-1233-04	GEAR	
R117,118			RK73FB2A203J	CHIP R 20K J 1/10W		32	3B		D13-1234-14	GEAR ASSY	
R121,122			RK73FB2A203J	CHIP R 20K J 1/10W							

K : KDC-X615 K1: KDC-6015 M1: KDC-7016
E1: KDC-6080R E2: KDC-6080RY E3: KDC-6080RV

PARTS LIST

*New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD MECHANISM ASSY (X92-3700-01)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
33	3A	D13-1238-03	GEAR		
34	3B	D13-1232-04	GEAR		
35	3B	D13-1241-04	GEAR		
36	3A	D13-1242-04	GEAR		
37	1B	D13-1243-04	GEAR		
38	1B	D13-1244-04	GEAR		
39	1B	D13-1245-14	GEAR		
40	2A	D13-1246-04	GEAR		
41	2B	D13-1247-04	GEAR		
43	2B	D13-1249-04	GEAR ASSY		
44	2B	D13-1341-04	GEAR ASSY (LEAD SCREW)		
45	1B	D14-0668-04	ROLLER		
46	2A	D14-0670-04	ROLLER		
47	3B	D14-0674-04	ROLLER		
49	3A	D21-2228-14	SHAFT		
50	1A	D21-2229-04	SHAFT		
51	1A	D23-0925-24	RETAINER		
52	2A	D32-0614-04	STOPPER		
53	1B	D39-0223-05	DAMPER (YELLOW)		
54	2B	D39-0224-05	DAMPER (BLACK)		
55	3B	F09-1246-04	SHEET		
58	3B	F09-1266-14	SHEET		
60	2A	G01-2770-04	EXTENSION SPRING		
61	3A	G01-2771-04	EXTENSION SPRING		
62	3A	G01-2772-24	EXTENSION SPRING		
63	3A	G01-2773-14	EXTENSION SPRING		
64	3A	G01-2774-34	EXTENSION SPRING		
65	1B	G01-2775-04	TORSION COIL SPRING		
66	1B	G01-2776-14	TORSION COIL SPRING		
67	3B	G01-2777-24	TORSION COIL SPRING		
69	2A	G01-2844-04	EXTENSION SPRING		
70	2A	G02-1231-04	FLAT SPRING		
71	2B	G02-1232-14	FLAT SPRING		
72	2A	G02-1241-24	FLAT SPRING		
73	2A	G02-1248-14	FLAT SPRING		
75	2A	J11-0613-13	CLAMPER		
76	3A	J19-4678-13	HOLDER		
77	2B	J19-4679-24	HOLDER		
78	3B	J21-7684-13	MOUNTING HARDWARE		
79	2B	J21-7686-13	MOUNTING HARDWARE		
80	1B	J21-7690-03	MOUNTING HARDWARE		
81	3A	J31-1032-04	COLLAR		
82	3A	J84-0107-05	FLEXIBLE PRINTED WIRING BOARD		
83	1A	J90-0757-22	GUIDE		
A	2A	N09-4249-05	MACHINE SCREW (M1.7X2.5,LOCK)		
B	1B	N09-4172-05	TAPPING SCREW (2X3.5,CTITE)		
C	2B	N09-4202-05	STEPPED SCREW		
D	2A	N38-2020-46	PAN HEAD MACHIN SCREW		
E	3A	N09-4294-05	TAPTITE SCREW (BIND P TAPTIT)		
F	3B	N19-2023-04	FLAT WASHER		
G	2A	N19-2058-04	FLAT WASHER		
H	3A	N19-2093-04	FLAT WASHER		
J	2A	N39-2020-46	PAN HEAD MACHIN SCREW		

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
DM1	3B	T42-0764-04	DC MOTOR ASSY (SPINDLE)		
DM2	3B	T42-0763-04	DC MOTOR ASSY (LOADING)		
DPU1	2B	T25-0215-05	OPTICAL PICKUP HEAD		

KDC-X615,6015 KDC-6080R/RY/RV,7016

SPECIFICATIONS

Model		KDC-X615	KDC-6015	KDC-7016	KDC-6080R/RY/RV
FM	Frequency Range (Frequency step)	87.9MHz~107.9MHz(200kHz)	87.9MHz~107.9MHz(200kHz)	87.5MHz~108.0MHz(50kHz) 87.9MHz~107.9MHz(200kHz)	87.5MHz~108.0MHz(50kHz)
	Channel Space Selection	50kHz/200kHz	50kHz/200kHz	50kHz/200kHz	-
	Usable Sensitivity (S/N 26dB)	-	-	-	0.7μ V/75Ω
	Usable Sensitivity (S/N 30dB)	9.3dBf(0.8μ V/75Ω)	9.3dBf(0.8μ V/75Ω)	9.3dBf(0.8μ V/75Ω)	-
	Quieting Sensitivity (S/N 46dB)	-	-	-	1.6μ V/75Ω
	Quieting Sensitivity (S/N 50dB)	15.2dBf(1.6μ V/75Ω)	15.2dBf(1.6μ V/75Ω)	15.2dBf(1.6μ V/75Ω)	-
	Frequency Response (+3.0dB)	30Hz~15kHz	30Hz~15kHz	30Hz~15kHz	30Hz~15kHz
	S/N	70dB(MONO)	70dB(MONO)	70dB(MONO)	65dB(MONO)
	Selectivity	≥80dB(±400kHz)	≥80dB(±400kHz)	≥80dB(±400kHz)	-
	Selectivity(DIN)	-	-	-	≥80dB(±400kHz)
AM(MW)	Stereo Separation	40dB(1kHz)	40dB(1kHz)	40dB(1kHz)	35dB(1kHz)
	Frequency Range (Frequency step)	530kHz~1700kHz(10kHz)	530kHz~1700kHz(10kHz)	531kHz~1611kHz(9kHz) 530kHz~1700kHz(10kHz)	531kHz~1611kHz(9kHz)
	Channel Space Selection	9kHz/10kHz	9kHz/10kHz	9kHz/10kHz	-
	Usable Sensitivity (S/N 20dB)	28dBμ (25μ V)	28dBμ (25μ V)	28dBμ (25μ V)	25μ V
LW	Frequency Range	-	-	-	153kHz~281kHz
	Usable Sensitivity (S/N 20dB)	-	-	-	45μ V
CD	Laser Diode	GaAlAs(λ=780nm)	GaAlAs(λ=780nm)	GaAlAs(λ=780nm)	GaAlAs(λ=780nm)
	Digital Filter(D/A)	8 Times Over Sampling	8 Times Over Sampling	8 Times Over Sampling	8 Times Over Sampling
	D/A Converter	1 Bit	1 Bit	1 Bit	1 Bit
	Spindle Speed	500~200rpm(CLV)	500~200rpm(CLV)	500~200rpm(CLV)	500~200rpm(CLV)
	Wow & Flutter	Below Measurable Limit	Below Measurable Limit	Below Measurable Limit	Below Measurable Limit
	Frequency Response	10Hz~20kHz(±1dB)	10Hz~20kHz(±1dB)	10Hz~20kHz(±1dB)	10Hz~20kHz(±1dB)
	THD	0.01%(1kHz)	0.01%(1kHz)	0.01%(1kHz)	0.01%(1kHz)
	S/N Ratio	93dB(1kHz)	93dB(1kHz)	93dB(1kHz)	93dB(1kHz)
	Dynamic Range	93dB	93dB	93dB	93dB
	Channel Separation	85dB	85dB	85dB	85dB
Preout Level/Load		1800mV/10kΩ(CD/CD-CH)	1800mV/10kΩ(CD/CD-CH)	1800mV/10kΩ(CD/CD-CH)	1800mV/10kΩ(CD/CD-CH)
Preout Impedance		≤600Ω	≤600Ω	≤600Ω	≤600Ω
AMPLIFIER	Maximum Power	45Wx4	45Wx4	45Wx4	45Wx4
	Full Bandwidth Power (at less than 1% THD)	22Wx4	22Wx4	22Wx4	-
	Power DIN45324,+B=14.4V	-	-	-	28Wx4
TONE	Bass	100Hz±10dB	100Hz±10dB	100Hz±10dB	100Hz±10dB
	Treble	10kHz±10dB	10kHz±10dB	10kHz±10dB	10kHz±10dB
GENERAL	Operating Voltage (11V~16V allowable)	14.4V	14.4V	14.4V	14.4V
	Current Consumption	10A	10A	10A	10A
	Installation Size (W)	182mm	7-3/16inch	182mm	182mm
	(H)	53mm	2-1/16inch	53mm	53mm
	(D)	161mm	6-5/16inch	161mm	161mm
	Weight	1.8kg(4.0lbs)	1.8kg(4.0lbs)	1.8kg	1.8kg

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

KENWOOD CORPORATION

14-6, Dogenzaka 1-chome, Shibuya-ku, Tokyo 150-8501 Japan

KENWOOD SERVICE CORPORATION

P.O. BOX 22745, 2201 East Dominguez Street, Long Beach, CA90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O. BOX 55-2791, Piso 6, Plaza Chase, Cl. 47 y, Aquilino de la Guardia, Panama,
Republic of Panama

KENWOOD ELECTRONICS BRASIL LTDA.

Av. Moema, 170-17^o, Andar-Cobertura "B", Ed. Maximum Service Center, 04077-020
Moema, São Paulo-SP-Brasil

KENWOOD ELECTRONICS UK LIMITED

Kenwood House, Dwight Road, Watford, Herts, WD1 8EB, United Kingdom

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücke-Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.

13, Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS BELGIUM N.V.

Mechelsesteenweg 418, B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori 7/9, 20129 Milano, Italy

KENWOOD IBÉRICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001 499 074)

16 Giffnock Avenue, North Ryde, N.S.W.2113, Australia

KENWOOD ELECTRONICS (HONG KONG) LTD.

Unit 3712-3724, Level 37, Tower 1, Metropiazza, 223 Hing Fong Road, Kwai Fong, N.T.,
Hong Kong

KENWOOD ELECTRONICS GULF FZE

PO. Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS (THAILAND) CO., LTD.

2019 New Pechburi Road, Bangkok, Huaykwang, Bangkok, 10320 Thailand

KENWOOD ELECTRONICS SINGAPORE PTE. LTD.

1 Genting Lane, #07-00, Kenwood Building, Singapore, 349544

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD

#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1, 46300 Petaling Jaya, Selangor Darul Ehsan,
Malaysia