

CD RECEIVER


KDC-X915/X815 PS9016R/PS9080R SERVICE MANUAL

KENWOOD

© 2000-1 PRINTED IN JAPAN
B51-7571-00(S) 3448


Extension cord	Parts No.
CD mechanism(22P)	W05-0618-00

●KDC-X915

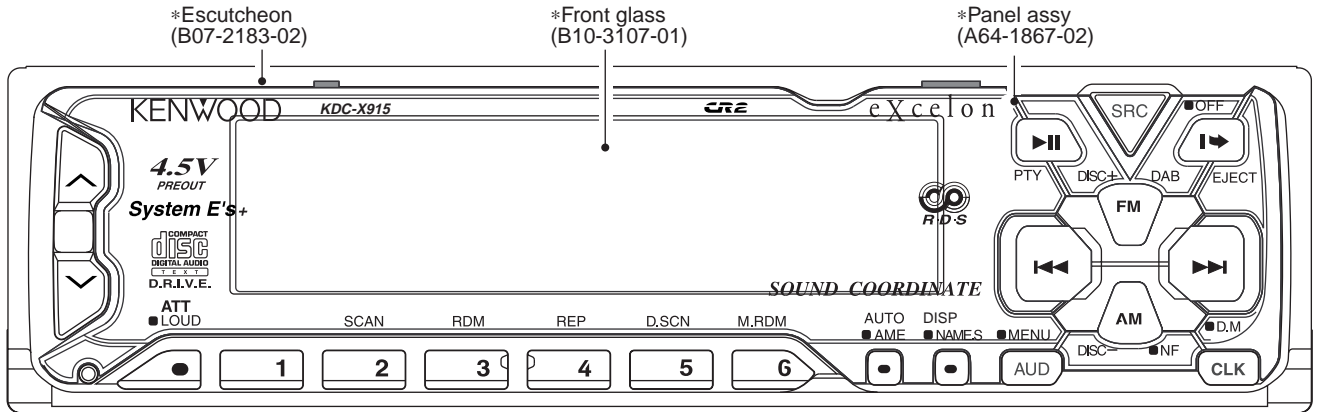


* : Refer to the Parts List


Mounting hardware assy (J21-9491-03)

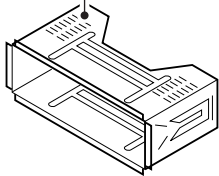


Plastic cabinet assy (A02-1489-03)

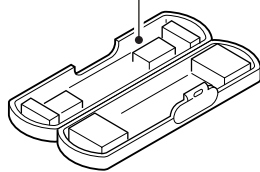


Stay (J54-0606-04)

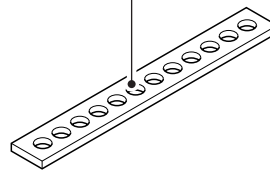


Lever x2 (D10-4301-14) (D10-4302-14)

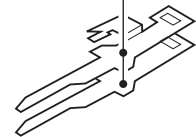


Screw set (N99-1652-05)

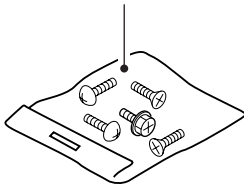


Screw set (N99-1683-05)

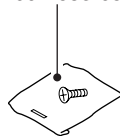


(E30-4779-05):KDC-X815
(E30-4781-05):KDC-PS9016R
(E30-4782-05):KDC-X915

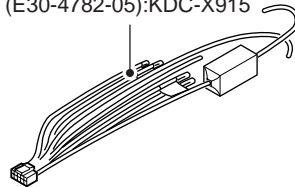

(E30-4788-05):KDC-PS9080R

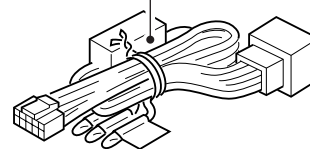


Bracket (J19-4875-04) (J19-4876-04)

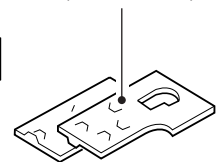

The MECHANISM OPERATION DESCRIPTION is the same as model KDC-S3007 and KDC-5050RG. Please refer to the service manual for model KDC-S3007(B51-7029-00) or KDC-5050RG(B51-7099-00).



BLOCK DIAGRAM

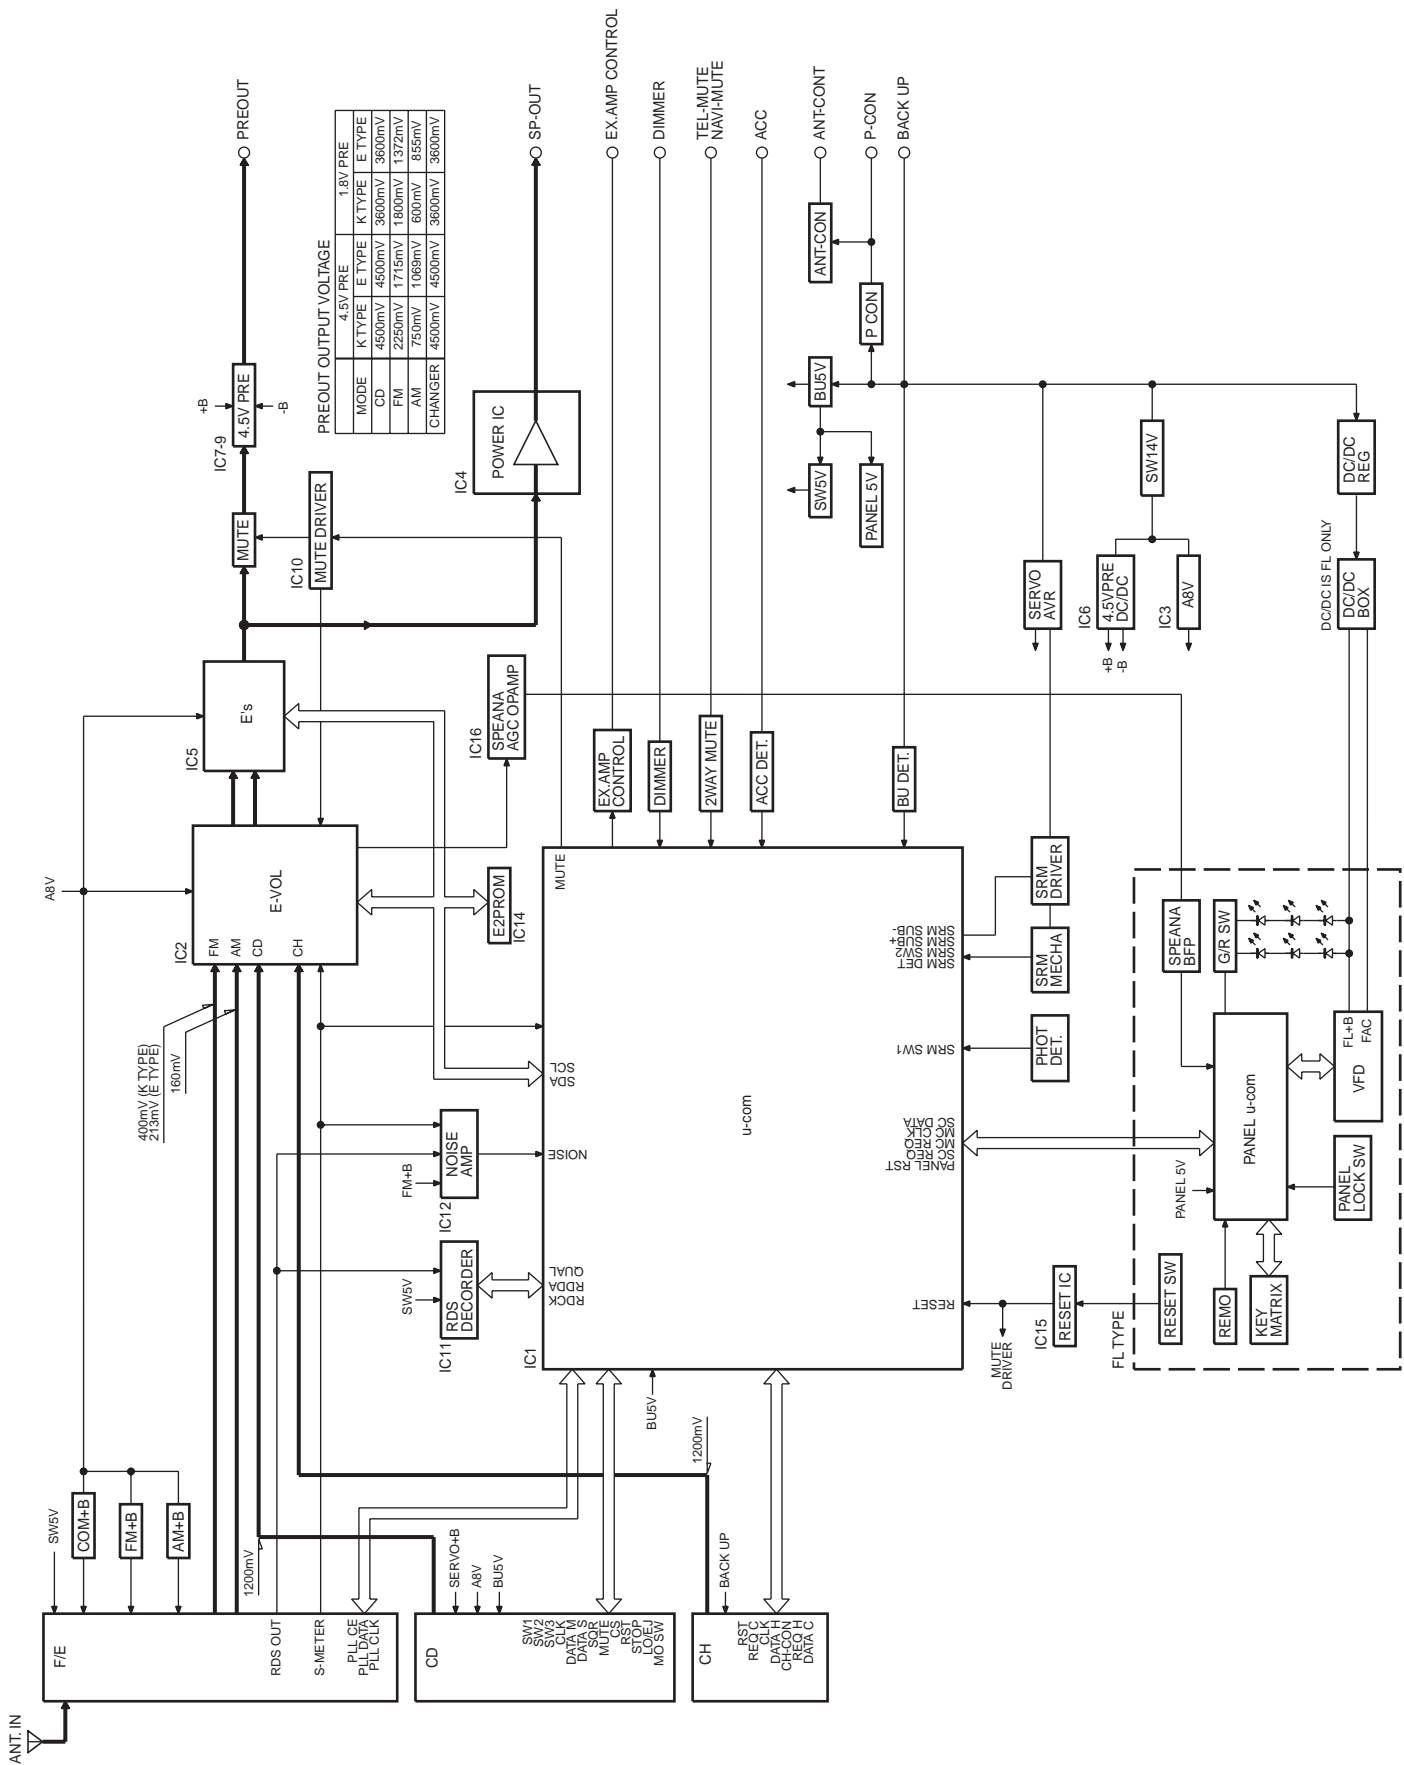

MICROCOMPUTER'S DESCRIPTION

System μ -com: UPD784217GC

●Terminal description

No.	Pin name	Function	I/O	Description	Processing Operation
1	P120/RTP0	CHCON1	O	Changer 1 control	Active: Hi
2	P121/RTP1	CH_MUTE	I	Changer muting input	MUTE Requested : Hi
3	P122/RTP2	REQH	O	Handshake request to changers	Active: Lo
4	P123/RTP3	ILL_ON	O	Illumination output	Active: Hi
5	P124/RTP4	NC	O	Open	
6	P125/RTP5	CD_SW2	I	12cm DISC detection	ON: Lo
7	P126/RTP6	CD_SW1	I	Loading detection	ON: Lo
8	P127/RTP7	NC	O	Open	
9	Vdd	Vdd	-	Positive power supply	
10	X2	X2	-	Main clock connection	
11	X1	X1	-	Main clock connection	
12	Vss	Vss	-	GND	
13	XT2	XT2	-	Sub clock connection	
14	XT1	XT1	-	Sub clock connection	
15	RESET	RESET	I	Reset input	Active: Lo
16	P00/INTP0	CH_RST	O	Changer reset output	Active: Lo
17	P01/INTP1	R_CLK	I	RDS clock input	
18	P02/INTP2/NMI	REQC	I	Handshake request from changer	Active: Lo
19	P03/INTP3	NC	I/O		
20	P04/INTP4	NC	I/O		
21	P05/INTP5	NC	I/O		
22	P06/INTP6	SC_REQ	I	Handshake request from panel μ -com	
23	AVdd	AVdd	-	A/D analog power supply	
24	AVref0	AVref	-	A/D reference voltage input	
25	P10/AN10	PHONE	I	PHONE detection terminal	1V or less: PHONE 2.5V or more: NAVI MUTE
26	P11/ANI1	SRM_SW1	I	SRM position detection	Open: Hi
27	P12/ANI2	NOISE	I	FM noise detection	Analog input
28	P13/ANI3	SMETER	I	FM signal meter detection	Analog input
29	P14/ANI4	IF_MODE	I	K2I IF selector	Wide: Hi/Narrow: Lo
30	P15/ANI5	NC	I	GND	
31	P16/ANI6	M_MUTE_R	I	Mute request from mechanism	Mute requested: Lo
32	P17/ANI7	M_MUTE_L	I	Mute request from mechanism	Mute requested: Lo
33	AVss	AVss	-	A/D GND	
34	P130/ANO0	EXT_AMP	O	EXT_AMP control	
35	P131/ANO1	M_RST	O	Reset output to mechanism	Reset: Lo
36	AVref1		-	D/A reference voltage input	
37	P70/RxD2/SI2	DATA_C	I	Data line from changer	
38	P71/TxD2/SO2	DATA_H	O	Data line to changer	
39	P72/ASCK2/SCK2	CH_CLK	I/O	Clock line from/to changer	
40	P20/RxD1/SI1	L_DATA/SC_DATA	I	Data line from LCD driver	
41	P21/TxD1/SO1	L_DATA/MC_DATA	I/O	Data line to LCD driver	
42	P22/ASCK1/SCK1	L_CLK/MC_CLK	I/O	Clock line to LCD driver	
43	P23/PCL	M_STOP	O	Stop request to mechanism	Stop requested: Lo
44	P24/BUZ	BEEP	O	Beep output	Active: Hi
45	P25/SI0	PLL_CE	O	CE output to PLL	
46	P26/SO0	PLL_DATA	I/O	Data in/out with PLL	
47	P27/SCK0	PLL_CLK	O	Clock output to PLL	
48	P80/A0	CD_SW3	I	Switch detection	ON : Hi
49	P81/A1	LO/EJ	O	Loading/Eject control	Loading: Lo/Eject: Hi
50	P82/A2	MOSW	O	Motor output	Loading: Hi/Eject: Lo
51	P83/A3	MECH_DET	I	Mechanism detection	ON: Hi/OFF: Lo
52	P84/A4	PAN5V	O	Panel detection	OFF: Hi
53	P85/A5	L_CE/P_RST	O	CE to LCD driver/Panel μ -com reset	
54	P86/A6	L_INH/MC_REQ	O	Reset to LCD driver	

MICROCOMPUTER'S DESCRIPTION

No.	Pin name	Function	I/O	Description	Processing Operation
55	P87/A7	DIM_CON	O	DIM control	
56	P40/AD0	QUAL	I	RDS receiving condition	Good: Hi
57	P41/AD1	R_DATA	I	RDS data input	
58	P42/AD2	SRM_SUB-	O	SRM sub motor output	
59	P43/AD3	SRM_SUB+	O	SRM sub motor output	
60	P44/AD4	SRM_DET	I	SRM mechanism detection	ON: Lo/OFF: Hi
61	P45/AD5	SRM_SW2	I	SRM eject detection	: Eject
62	P46/AD6	FM_SD	I	FM SD input	Station detected: Hi Not detected: Lo
63	P47/AD7	NC	O	Open	
64	P50/A8	AFC	O	Noise detection time constant switching	During reception: Hi During search: Lo
65	P51/A9		O		
66	P52/A10	WIDE	O	K2I Wide output	Active: Hi
67	P53/A11	NARROW	I/O	K2I Narrow output	Active: Hi
68	P54/A12	AM+B	O	AM power supply	Active: Hi
69	P55/A13	FM+B	O	FM power supply	Active: Hi
70	P56/A14	NC	O	Open	
71	P57/A15	NC	O	Open	
72	Vss		-	GND	
73	P60/A16	TYPE0	I		Destination type switch
74	P61/A17	TYPE1	I		Destination type switch
75	P62/A18	TYPE2	I		Destination type switch
76	P63/A19	ST_TYPE0	I	IC2 Var. 3 destination type 0	Initial value: Lo
77	P64/RD	ST_TYPE1	I	IC2 Var. 3 destination type 1	Initial value: Lo
78	P65/WR	NC	O	Open	
79	P66/WAIT	PRE MUTE R	O	Open	Active: Lo
80	P67/ASTB	PRE MUTE L	O	Open	Active: Lo
81	Vdd		-	Positive power supply	
82	P100/TI5/TO5	NC	O	Open	
83	P101/TI6/TO6	SVR	O	Power IC reset	Power ON: Lo
84	P102/TI7/TO7	NC	O	Open	
85	P103/TI8/TO8	P_MUTE	O	Power IC muting	Active: Lo
86	P30/TO0	ANT_CON	O	Antenna control	Active: Hi
87	P31/TO1	IC2_SCK	O	IC2, IC5, EEPROM clock line	
88	P32/TO2	DIMMER	I	Dimmer detection	Active: Lo
89	P33/TI1	P_CON	O	Power control	Active: Hi
90	P34/TI2	ACC_DET	I	ACC detection	ACC OFF: Hi
91	P35/TI00	REMO	I	Remote control input	
92	P36/TI01	P_ON	O	μ-com peripheral power supply	Active: Hi
93	P37	BU_DET	I	Momentary power down detection	Momentary power down: Hi
94	TEST		-	Test	GND
95	P90	IC2_SDA	I/O	IC2, IC5, EEPROM data line	
96	P91	MUTE	O	Muting output	Active: Hi
97	P92	SW5	O	5V power supply	Active: Lo
98	P93	MS_CL	O	CD mechanism clock line	
99	P94	MS_DA	I/O	CD mechanism data line	
100	P95		O	NC	

KDC-X915/X815/PS9016R/PS9080R

TEST MODE

1.Entering the test mode

Reset the unit by pressing the FM key and the Preset 6 key at the same time.

When the test mode is entered, all indicators light up.

2.Releasing the test mode

Reset the unit by pressing the Preset 6 key.

Note: The unit cannot be reset by simply turning ACC off, turning power off, or turning power off for a brief moment.

3.Voltage adjustment on the FM S-meter

- (1) Enter the test mode.
- (2) While pressing the Preset 1 key, keep on pressing the Preset 6 key.
- (3) When the adjustment is made, "ADJ OK" is displayed. When adjustment cannot be made, "ADJ NG" is displayed.

4.Writing SD voltage for the AM

- (1) Enter the test mode.
- (2) While pressing the Preset 1 key, keep on pressing the Preset 6 key, which results in writing SD.

5.Forced switching of K2I Auto/Manual

In tuner-mode, keeping on pressing TI key, and the Auto and Manual modes can be swieched. The initial condition is manual modes, which is indicated by flashing DUAL dots.

6.Forced narrow/wide switchng of K2I

In tuner-mode, when Preset 6 is pressed, forced narrow/wide mode switching is made. The initial condition is in wide mode and the NEWS dot flashes.

7.CD receiver test mode specification

By pressing the track-up key, the unit jumps to the following tracks:

No. 9 → No. 15 → No. 10 → No. 11 → No. 12 → No. 13 → No. 14 → No. 9 (Goes back to the first position.)

When the track-down key is pressed, the unit jumps to the previous track.

8.MD test mode specification

After loading MD, the unit plays No. 7. Then, the unit jumps as follows each time it track-ups.

No. 2 → No. 13 → No. 23 → No. 30 → No. 34 → No. 7 (Goes back to the first position.)

When the track-down key is pressed, the unit jumps to the previous track.

9.Tape test mode

In the initial step, the blank skip is turned off.

10.Audio-related items

- The volume is -10dB (on display, it is 30).
- The loudness is off and CRSC is off regardless of functions.
- Buss/treble and balance/fader are to be adjusted by the up/down key to full-boost/fullcut and fullfront/fullrear respectively.
- The high-pass filter is adjusted by the up-key to throughput/100Hz/200Hz and, by the down-key, to 200Hz/100Hz/throughput.
- Other adjustments are the same as before.

11.Backup current measurement

When reset in ACC-off condition (backup is on), the mute terminal goes off after 2 seconds instead of 15 seconds, when the ACC is tuned off in the test mode. (In this case, the panel/CD/C/MD mechanisms are not activated.)

12.Registering security code after changing E2PROM at the services (Only for type M. However, RDS models are excluded)

- (1) Put the unit into the test mode (Refer to 1. Above for how to enter the test mode.)
- (2) Press SRC key to put the unit into the tuner mode.
- (3) Press Audio key for one second and put the unit into the menu mode.
- (4) Press FM/AM key and then select "SECURITY."
- (5) Press track up/down key for full 2 seconds.
- (6) Press Preset 1, Preset 2, Preset 3, and Preset 4 and then input codes.
Example: Inputting "3510."
 - Preset 1 key 4 times.
 - Preset 2 key 6 times.
 - Preset 3 key 2 times.
 - Preset 4 key once.
- (7) Press DISP key for 3 seconds and confirm that "APPROVED" is displayed.
- (8) Release the test mode. (Refer to "2. Releasing the test mode" above.)

TEST MODE

13.Simplified method for clearing the security code (Only for type K)

- (1) When code is requested, continue pressing VOL UP key for three seconds while pressing the DISP key. (... disappear.)
- (2) Input "KCAR," using the remote controller (the same as the 98 Model)
 - Press Tenkey 5 twice and then press track-up key. (Inputting "K")
 - Press Tenkey 2 three times and then press track-up key. (Inputting "C")
 - Press Tenkey 2 once and then press track-up key. (Inputting "A")
 - Press Tenkey 7 twice and then press track-up key. (Inputting "R")
- (3) Then, the security is released and the unit goes into the Tuner Mode.

14.Writing MASK KEY on line (E2PROM in initial condition)

- (1) While pressing the FM key and Preset 6 key, press reset key to enter the test mode.
- (2) Press AUDIO key for full one second to put the unit into the menu mode.
- (3) Select the "MASK KEY," using the FM key or AM key.
- (4) Press on the track up/down key to display "TRANSMIT 1."
- (5) Point the MASK KEY to the light receptor and press it for 0.5 second or longer.
- (6) When "TRANSMIT 2" is displayed, press MASK KEY for 0.5 second or longer. When this is conducted, the counter codes for the first time and the second time will not be compared.
- (7) When "APPROVED" is displayed, writing is completed. Time the demonstration mode is set and the test mode is released.

Note: After an elapse of 30-minute period, during which no code is written, an error is effected and the device will power off.

15.Releasing MASK KEY requests (When reset or backup is off when MASK KEY is approved)

- (1) When power is turned on, "TRANSMIT 1" is displayed and the unit goes into MASK KEY request mode.
- (2) Point the MASK KEY to the light receptor and press it for more than 3 seconds (until the level display indicates full)
- (3) When "TRANSMIT 2" is displayed, press the MASK KEY again for more than three seconds. At this point, when "TRANSMIT 1" is displayed, repeat the process in (2) above for the second time.
- (4) When "APPROVED" is displayed, MASK KEY is approved and the unit turns power on.

16.Initializing MASK KEY (returning to the default condition from MASK KEY approved state)

- (1) While pressing the FM key and Preset 6 key at the same time, press RESET to enter the test mode.
- (2) "TRANSMIT 1" is displayed and the unit goes into MASK KEY request mode. The display at this point will be "***" instead of "[]".
- (3) Use MASK KEY release remote controller for more than three seconds.
- (4) When "TRANSMIT 2" is displayed, press the MASK KEY for more than three seconds for the second time.
- (5) When "APPROVED" is displayed, the MASK KEY is released and the demonstration mode is set. Then, the test mode is released, returning the unit into default condition.

17.Clearing from the MASK KEY

- (1) While pressing FM key and Preset 6 key at the same time, press RESET to enter the test mode.
- (2) Press the AUDIO key for full one second to put the unit into the menu mode.
- (3) Select MASK KEY, using track up/down key.
- (4) Press on the FM key or AM key for full two seconds and the unit will display "TRANSMIT 1."
- (5) Point the MASK KEY release controller to the light receptor and press it for 3 seconds or longer. (Until the level display indicates full.)
- (6) When "TRANSMIT 2" is displayed, press MASK KEY for 3 seconds or longer for the second time. If "TRANSMIT 1" is displayed, start again from (5) above.
- (7) When "APPROVED" is displayed, E2PROM is cleared. The unit goes back to the condition described in Line 14: Writing MASK KEY on line (E2PROM in initial condition)

18.Other


- Automatic panel closing does not occur in case a TAPE, CD, or MD is inserted.
- Panel is opened/closed when ATT key is turned On/Off. (A remote controller is used when turning ATT on.)
- The DNPP/SBF key of the remote controller (RC-510) is used for tuning the menu mode On/Off.
- The OPEN/CLOSE key of the remote controller (RC-510) is used for tuning the audio mode On/Off.
- The feed on the menu will be feeds only for necessary features.
- "CODE OFF" and other displays will not be issued when the power is turned on.
- The dimmer of the FL model and contrast on the LCD model can be adjusted only for 0/5/10 by the UP/DOWN key.

ADJUSTMENT

Set the controls and switches as follows.

BALANCE: center position BASS: center position LOUD: OFF DOLBY NR: OFF
 FADER: center position TREBLE: center position


No	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	TUNER (RECEIVER) SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION							
1	SEPARATION (NARROW)	98.1MHz 1kHz, ± 40 kHz dev Pilot: ± 6.0 kHz dev Selector: L or R 60dB μ (ANT input)	Connect an AC voltmeter to SP OUT	TEST MODE: ON (Forced Narrow) FM98.1MHz	VR1	Adjust it so that the crosstalk from L to R and R to L become minimum.	

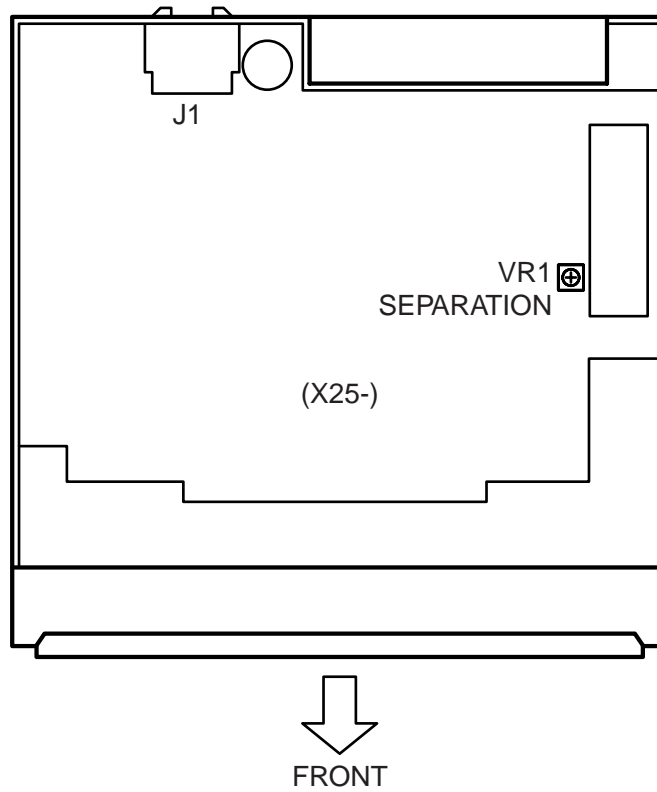

PC BOARD (Component/Foil Side View)

SWITCH UNIT

X13-9710-10 (J74-0983-12)

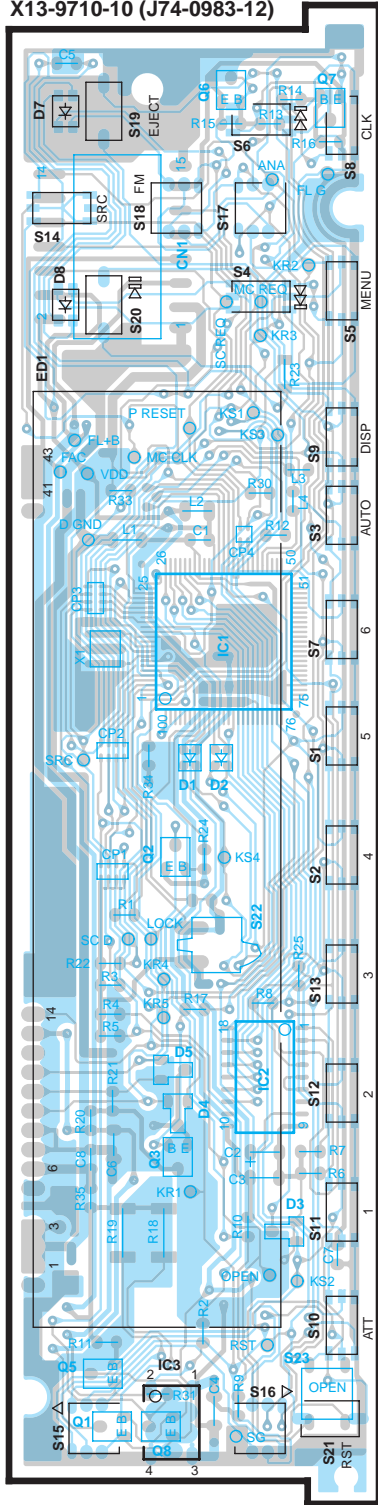

SWITCH UNIT
(X13-971X-XX)


Ref. NO.	IC	Q	Address
1			3A
2			5B
3			6A
	1		6A
	2		4A
	3		5A
	5		6A
	6		2A
	7		2B
	8		6A

SWITCH UNIT
(X13-971X-XX)

Ref. NO.	IC	Q	Address
1			3D
2			5D
3			6E
	1		6E
	2		4E
	3		5E
	5		6E
	6		2D
	7		2D
	8		6E


SWITCH UNIT

X13-9710-10 (J74-0983-12)

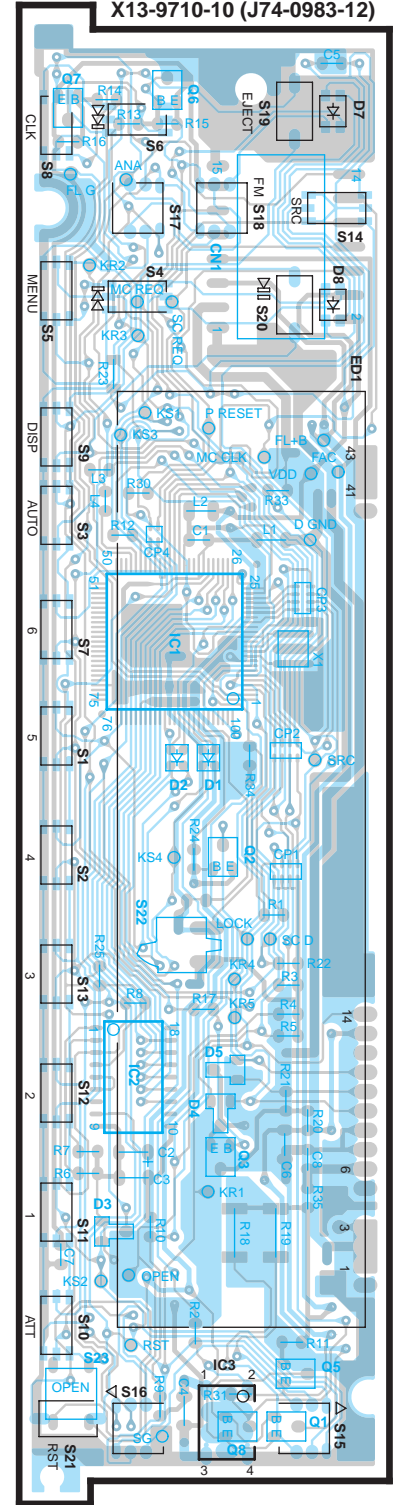

PC BOARD (Component Side View) ELECTRIC UNIT

X25-8462-70/8470-10 (J74-1000-12)

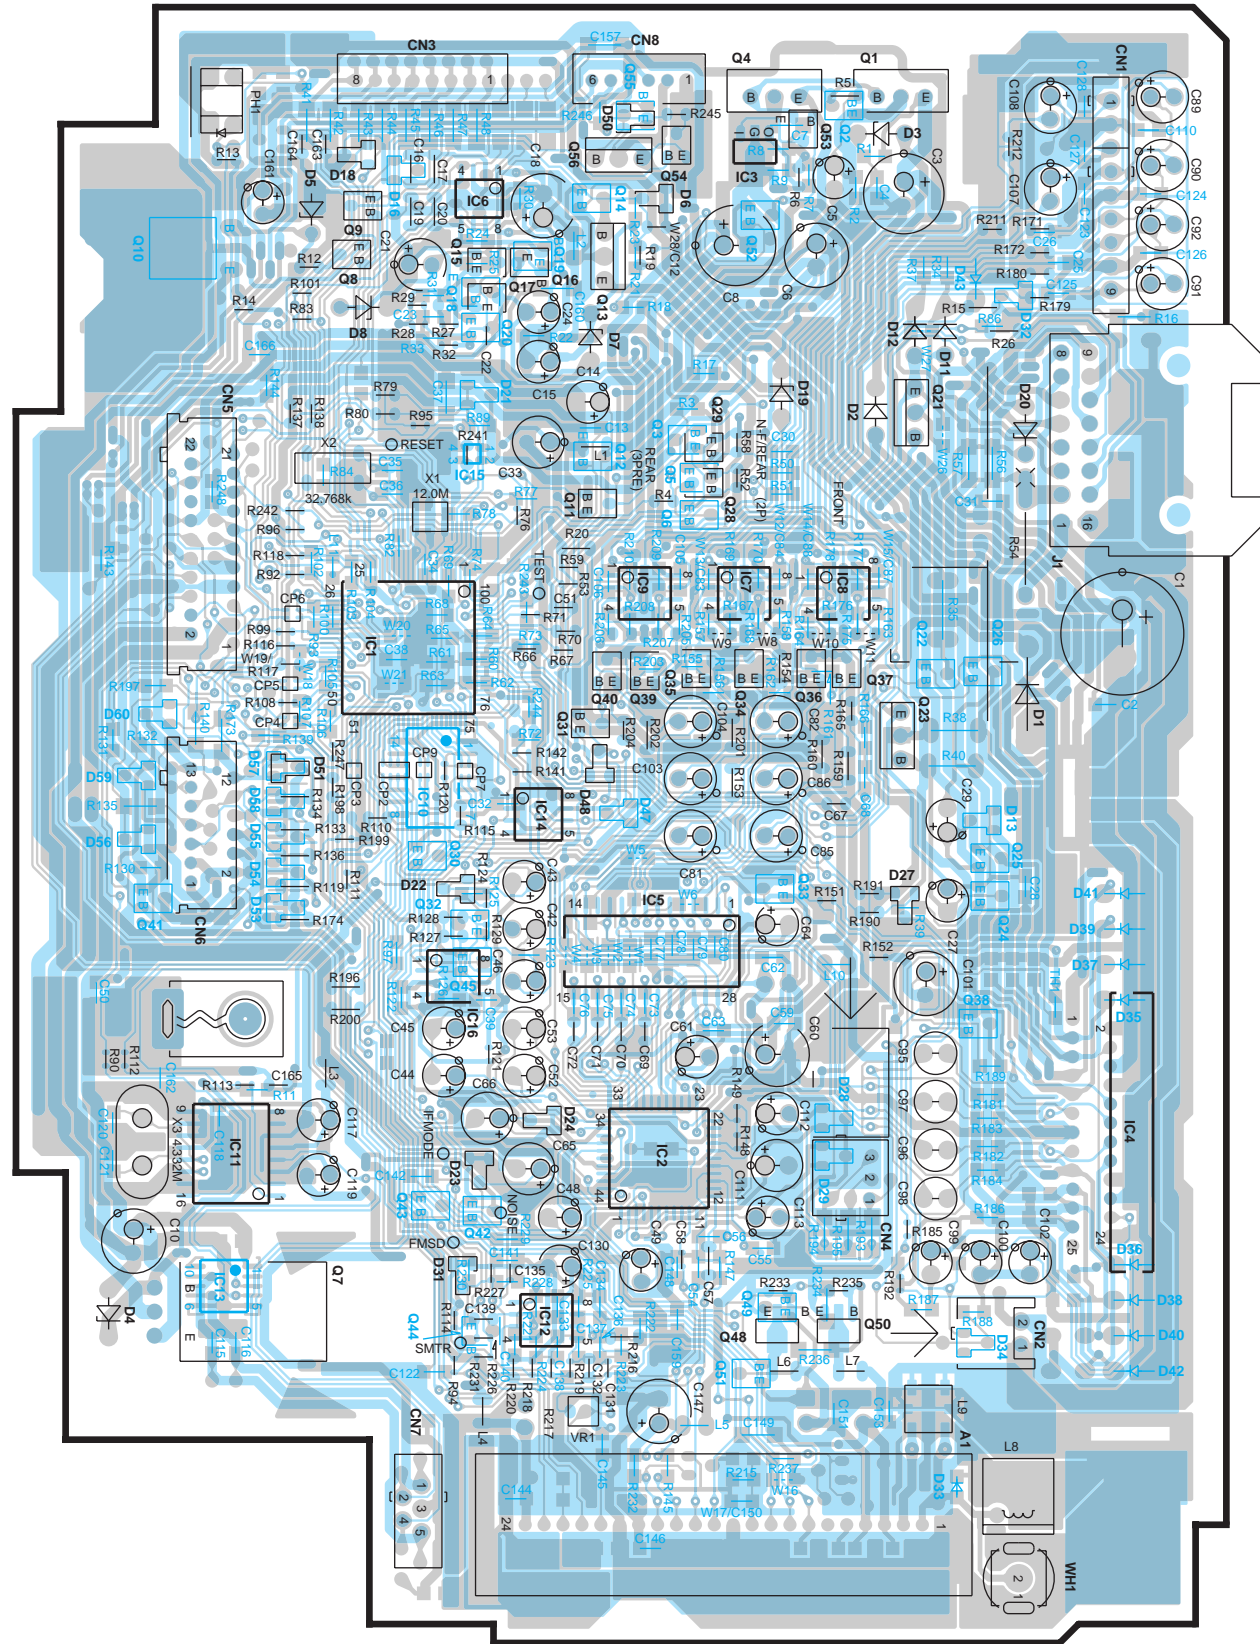


ELECTRIC UNIT
(X25-84XX-XX)

Ref. NO.	IC	Q	Address
1			3F
2			5G
3			1H
4			5I
5			4G
6			2G
7			3H
8			3H
9			3G
10			4G
11			5F
12			5G
13			5F
14			4G
15			3G
16			4G
1			1H
2			1H
3			2G
4			1H
5			3G
6			3G
7			5F
8			2F
9			2M
10			3M
11			3M
12			3M
13			2M
14			2M
15			2M
16			2M
17			2M
18			2M
19			2M
20			2M
21			2H
22			3H
23			3H
24			4H
25			4H
26			3H
27			3G
28			3L
29			2L
30			4M
31			3M
32			4M
33			4L
34			3L
35			3L
36			3L
37			3L
38			4H
39			3L
40			3L
41			4F
42			5M
43			5M
44			5M
45			4M
46			5L
47			5L
48			5L
49			5L
50			5L
51			6L
52			2L
53			1H
54			1L
55			1G
56			1G

PC BOARD (Foil Side View) ELECTRIC UNIT

X25-8462-70/8470-10 (J74-1000-12)

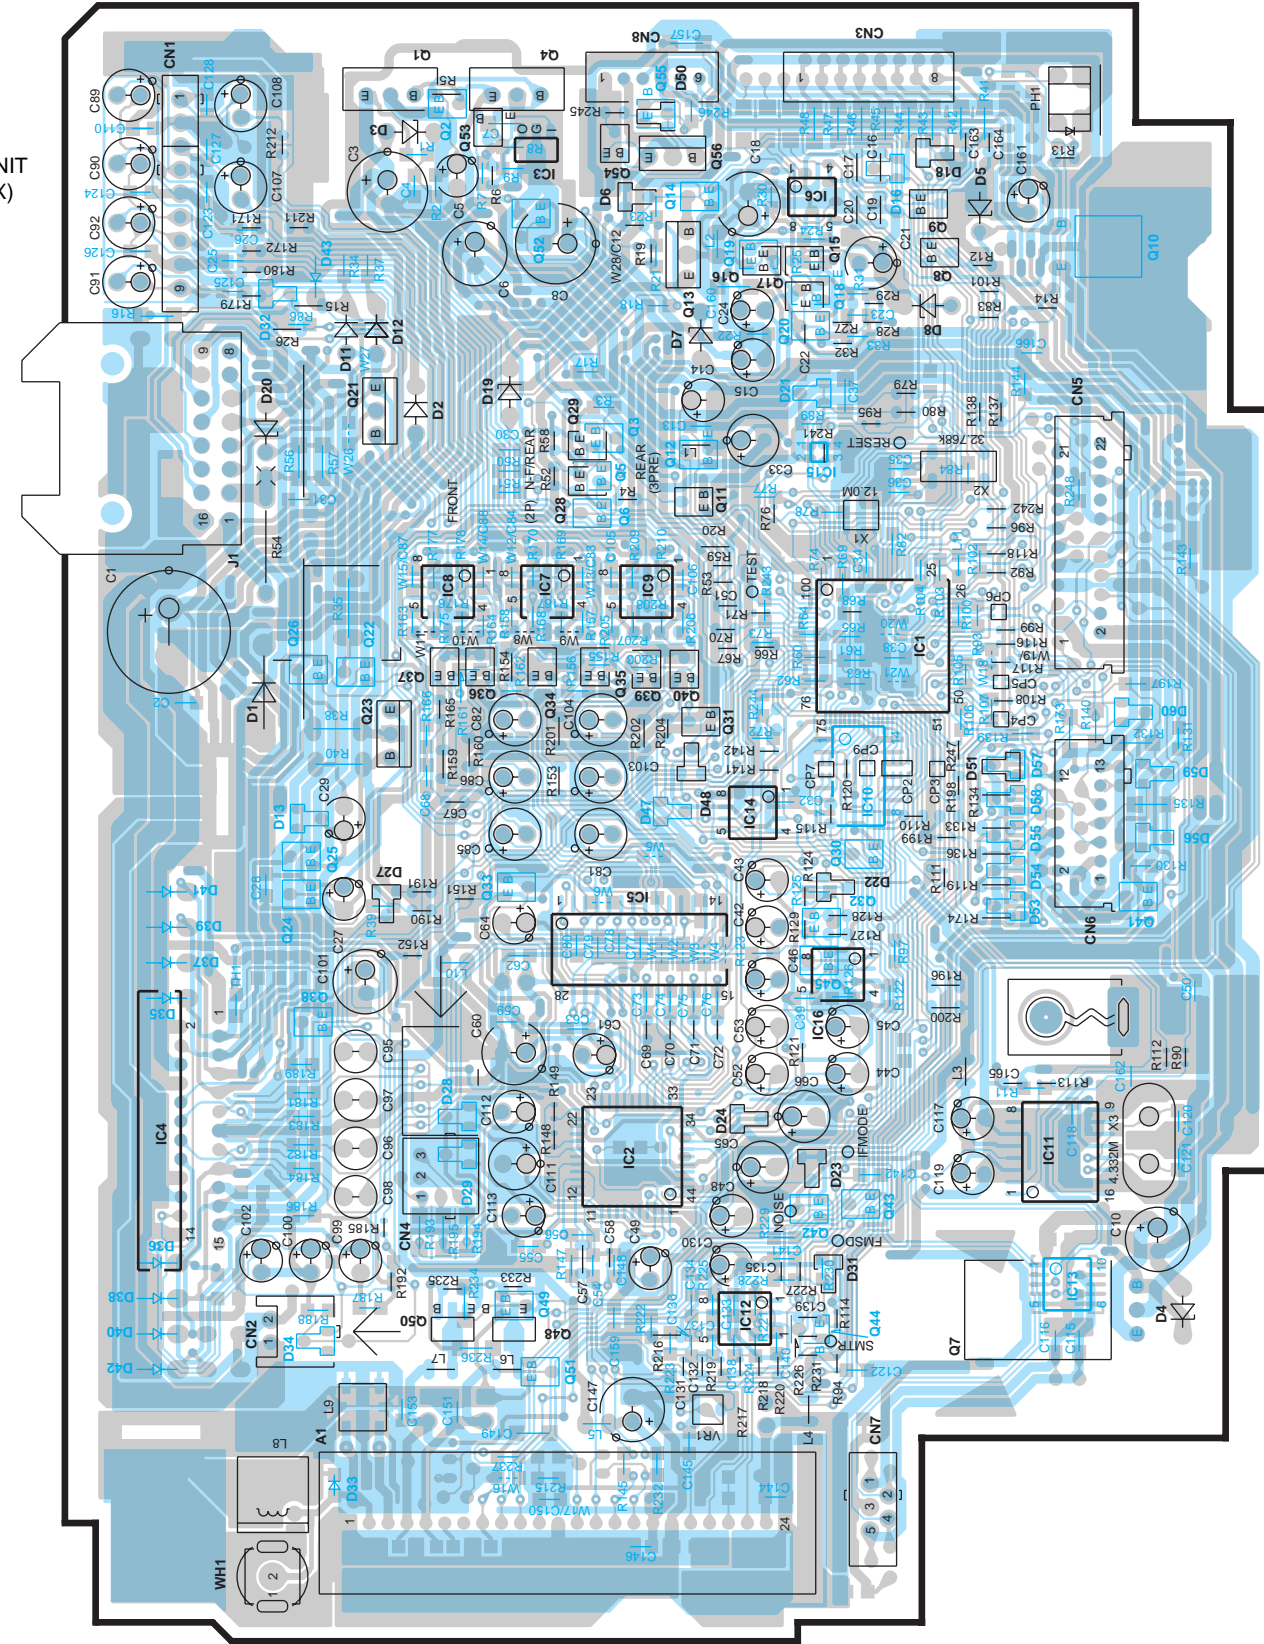

ELECTRIC UNIT
(X25-84XX-XX)

Ref. NO.	IC	Q	Address
1			3M
2			5L
3			1L
4			5K
5			4L
6			2M
7			3L
8			3L
9			3L
10			4M
11			5N
12			5M
13			5N
14			4M
15			3M
16			4M
1			1L
2			1L
3			2L
4			1L
5			3L
6			3L
7			5N
8			2M
9			2M
10			3M
11			3M
12			3M
13			2M
14			2M
15			2M
16			2M
17			2M
18			2M
19			2M
20			2M
21			2K
22			3K
23			3L
24			4K
25			4K
26			3K
27			3L
28			3L
29			2L
30			4M
31			3M
32			4M
33			4L
34			3L
35			3L
36			3L
37			3L
38			4K
39			3L
40			3L
41			4N
42			5M
43			5M
44			5M
45			4M
46			5L
47			5L
48			5L
49			5L
50			5L
51			6L
52			2L
53			1L
54			1L
55			1L
56			1L

Refer to the schematic diagram for the values of resistors and capacitors.


PC BOARD (Component Side View)

PC BOARD (Foil Side View)

CD PLAYER UNIT
(X32-474X-XX)


Ref. NO.	IC	Q	Address
	1		4P
	2		4Q
	4		2R
	5		3R
	6		3R
	7		3R
	8		3R
	9		4R
	1		4P
	2		4R
	3		3R
	4		3Q
	5		4R
	7		4Q
	8		4Q

CD PLAYER UNIT

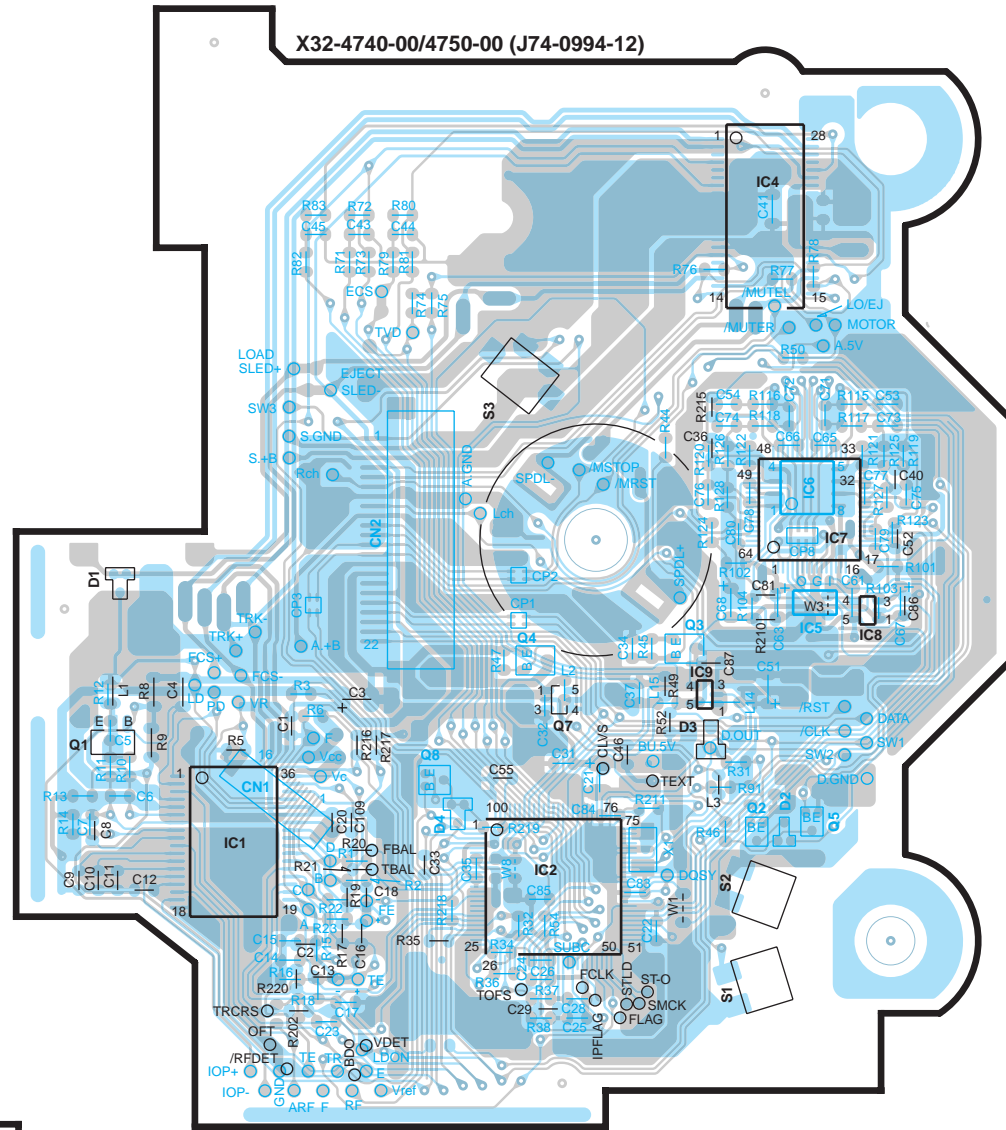

X32-4740-00/4750-00 (J74-0994-12)

CD PLAYER UNIT

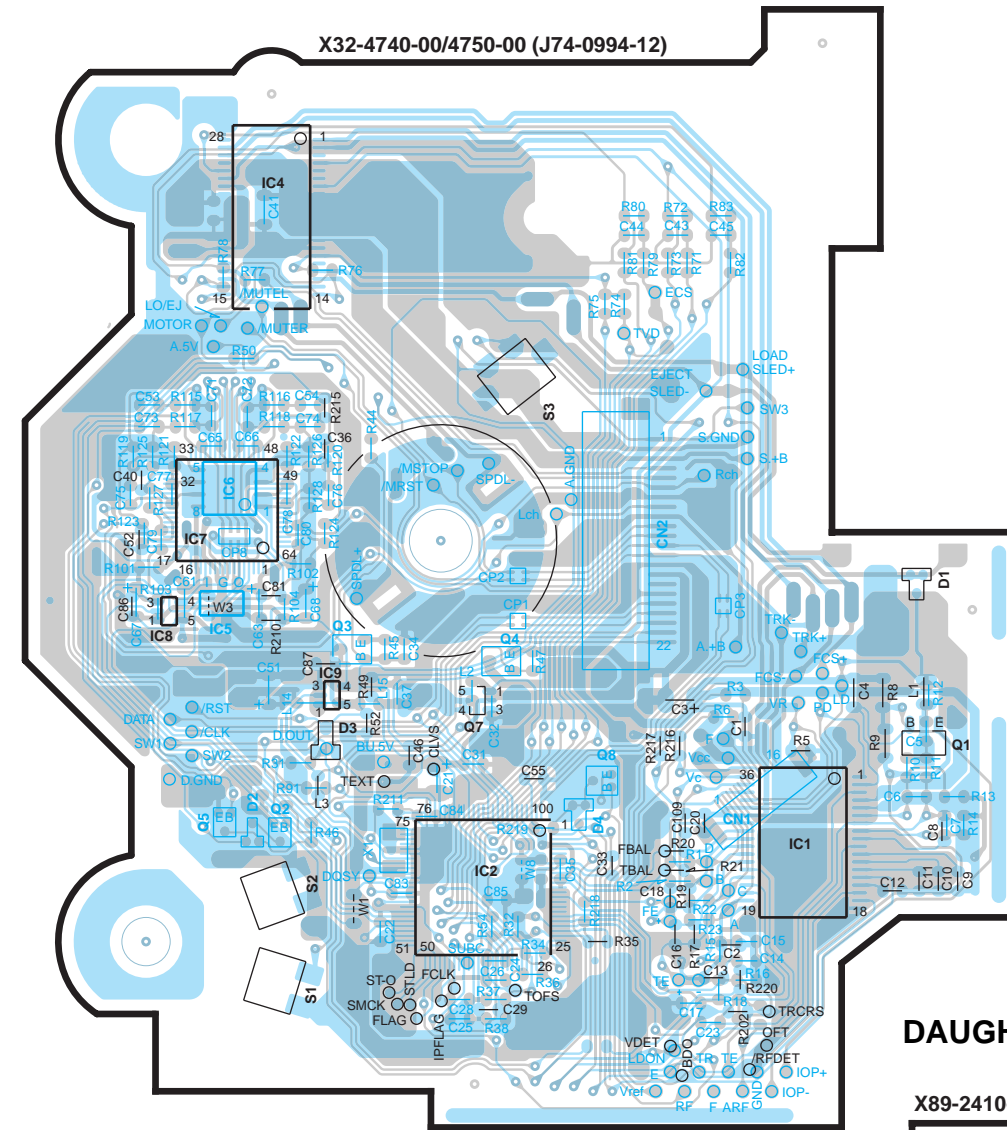


X32-4740-00/4750-00 (J74-0994-12)

CD PLAYER UNIT
(X32-474X-XX)

Ref. NO.	IC	Q	Address
	1		4V
	2		4U
	4		2T
	5		3T
	6		3T
	7		3T
	8		3T
	9		4T
	1		4V
	2		4T
	3		3T
	4		3U
	5		4T
	7		4U
	8		4U

DAUGHTER UNIT

X89-2410-10 (J74-1053-02)

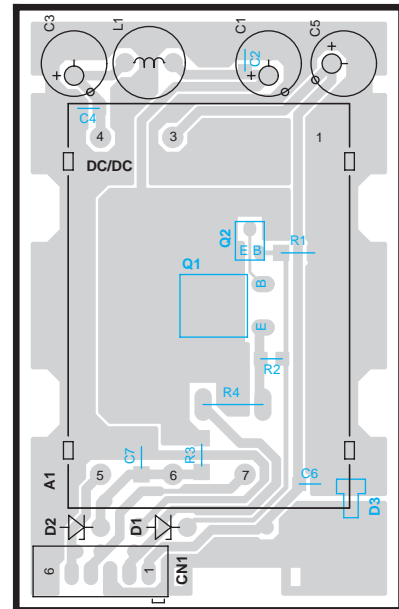


DAUGHTER UNIT
(X89-241X-XX)

Ref. NO.	IC	Q	Address
	1		6O
	2		6O



DAUGHTER UNIT

X89-2410-10 (J74-1053-02)

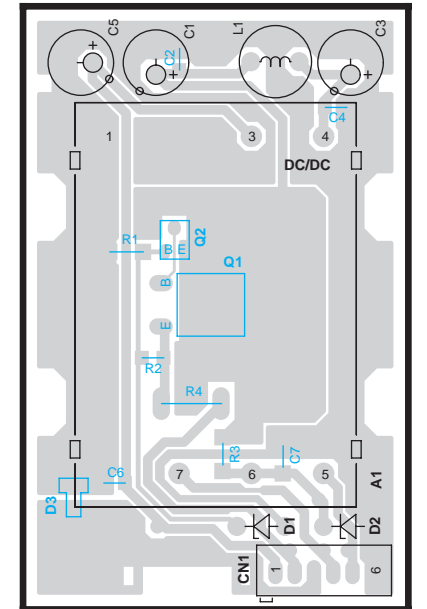


DAUGHTER UNIT
(X89-241X-XX)

Ref. NO.	IC	Q	Address
	1		6W
	2		6W

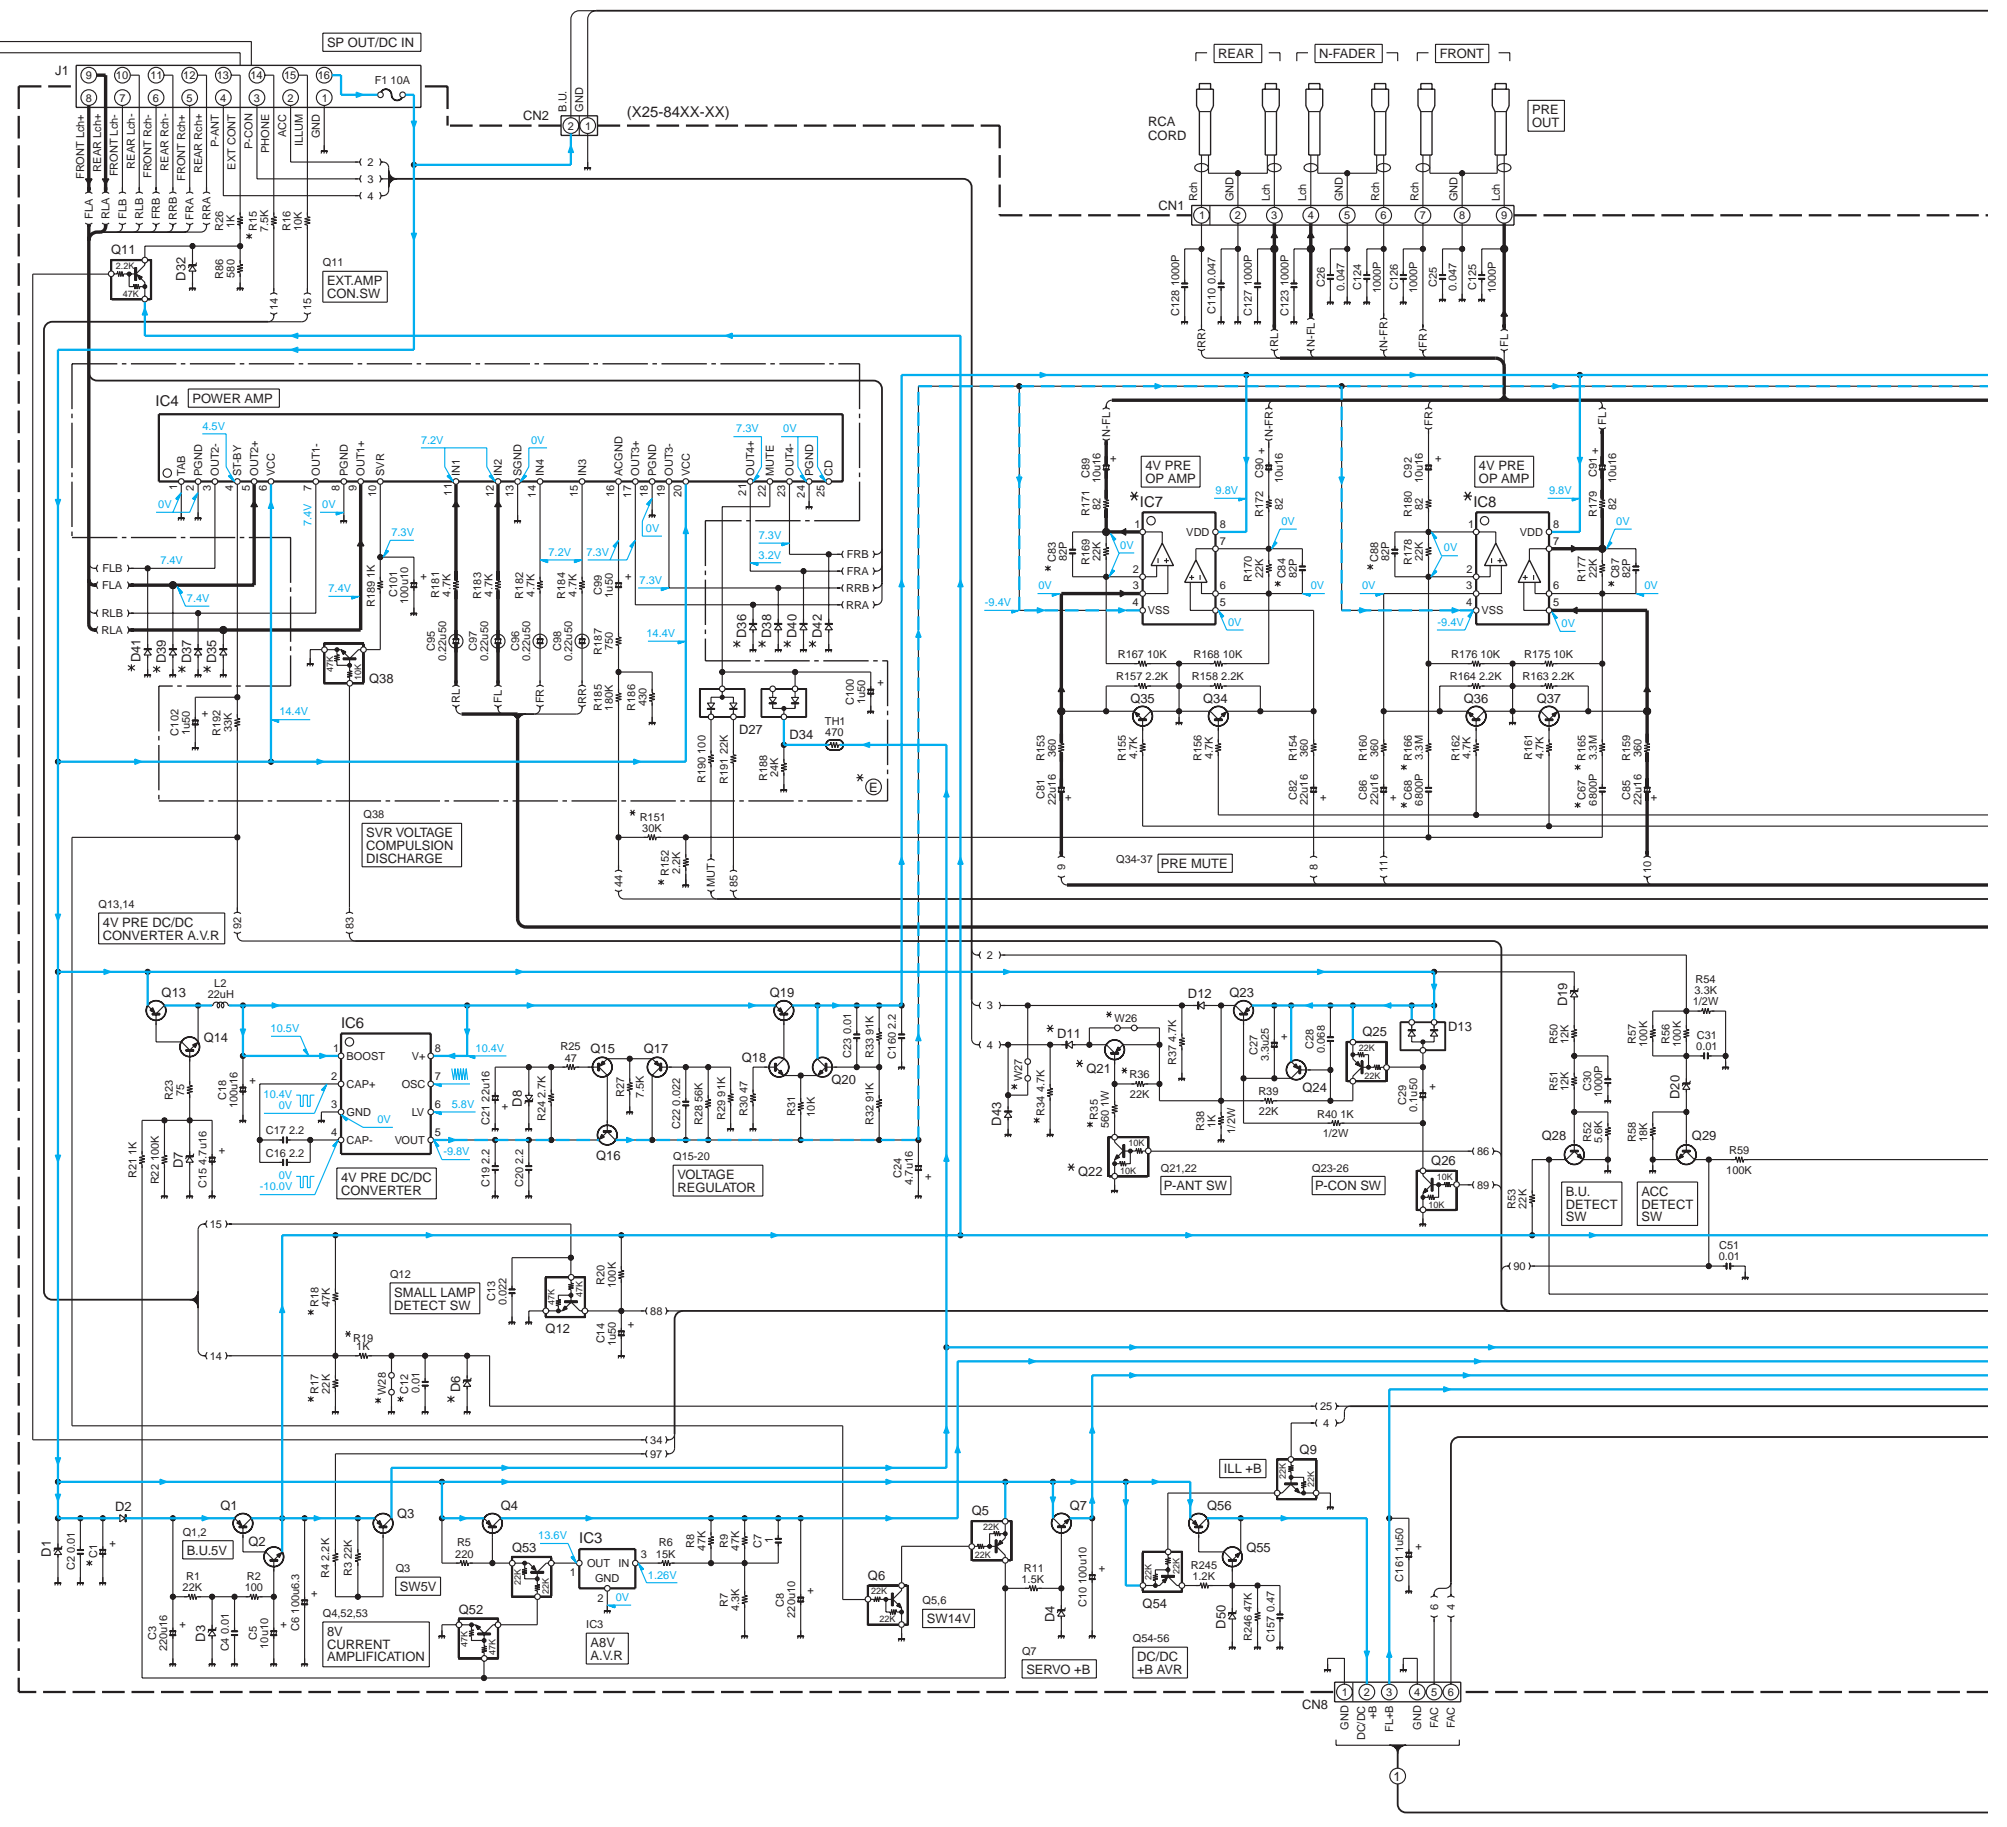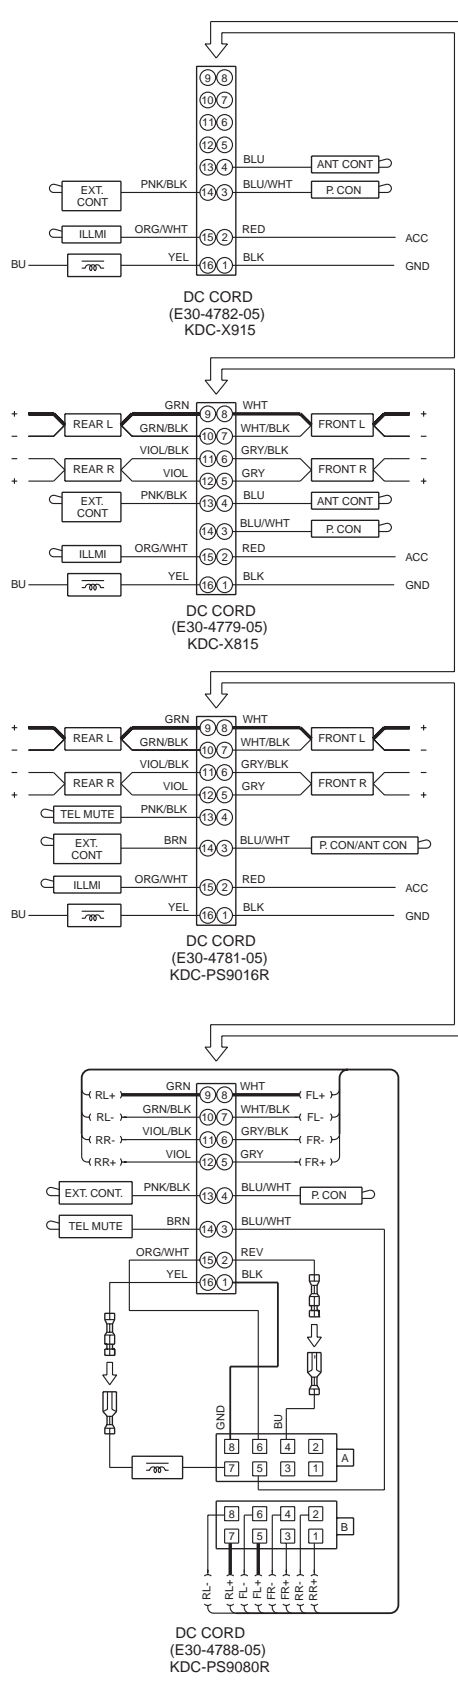


1
2
3
4
5
6
7

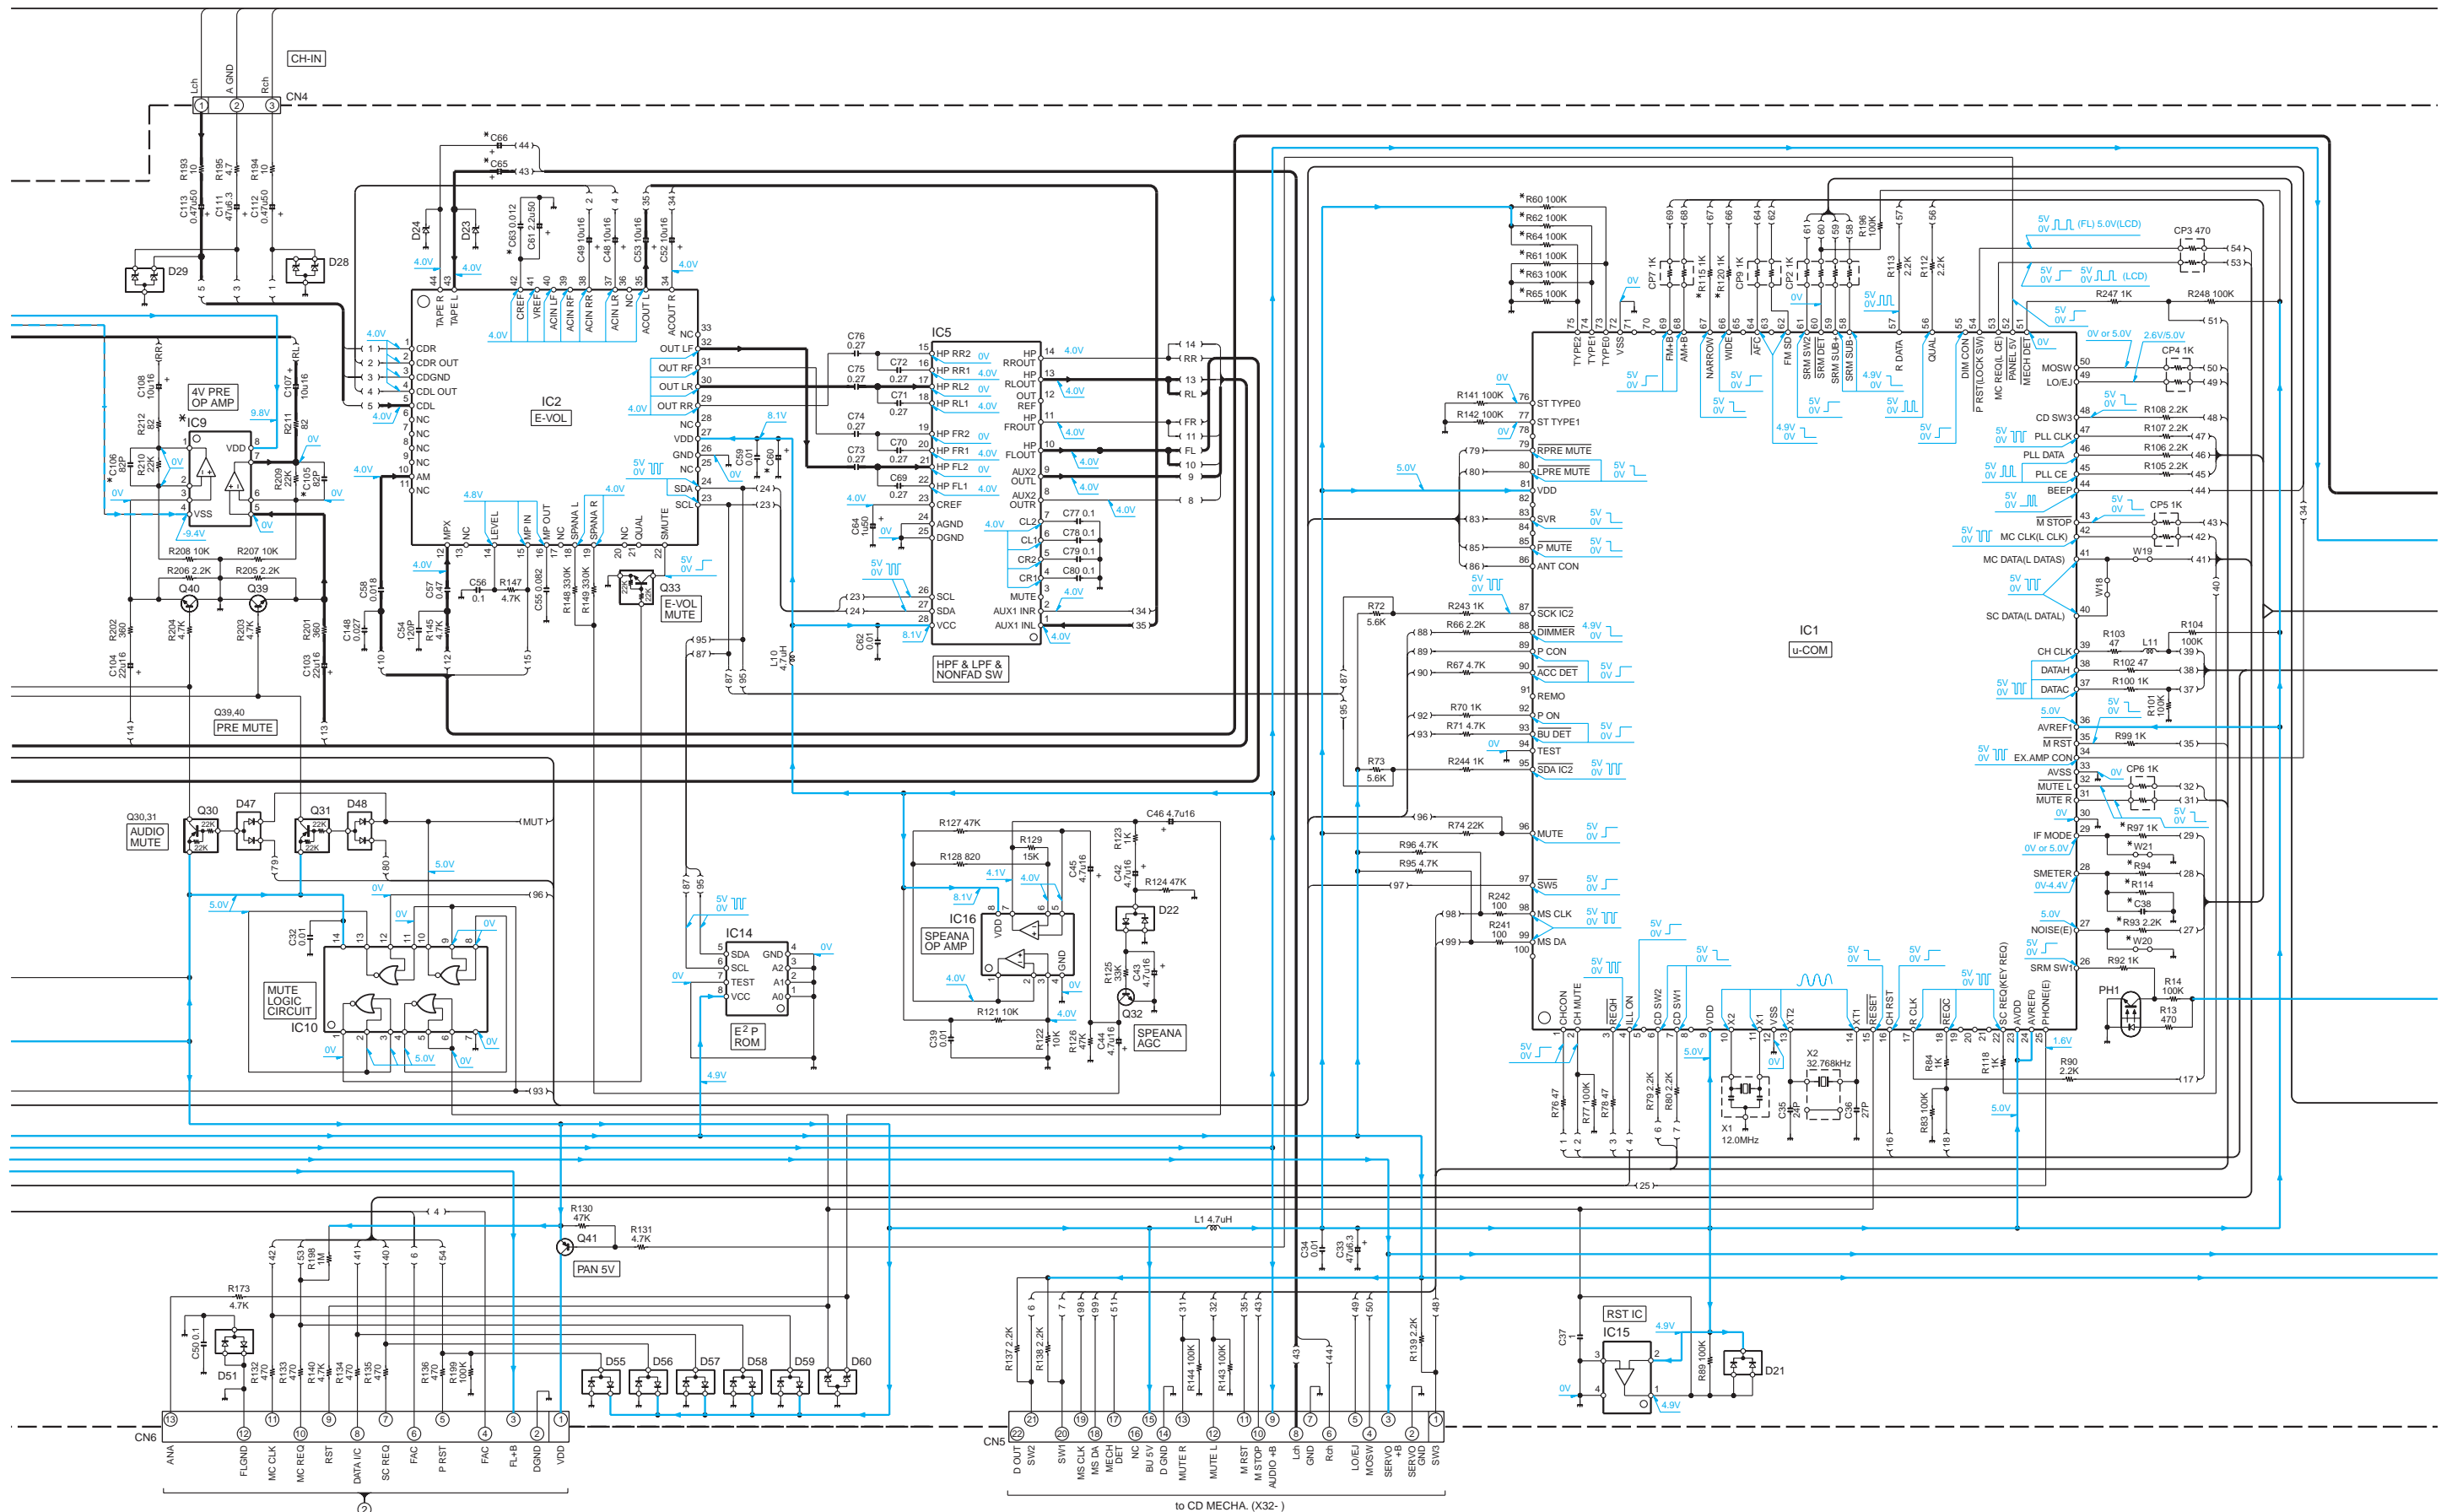

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to, parts list). ⚠ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

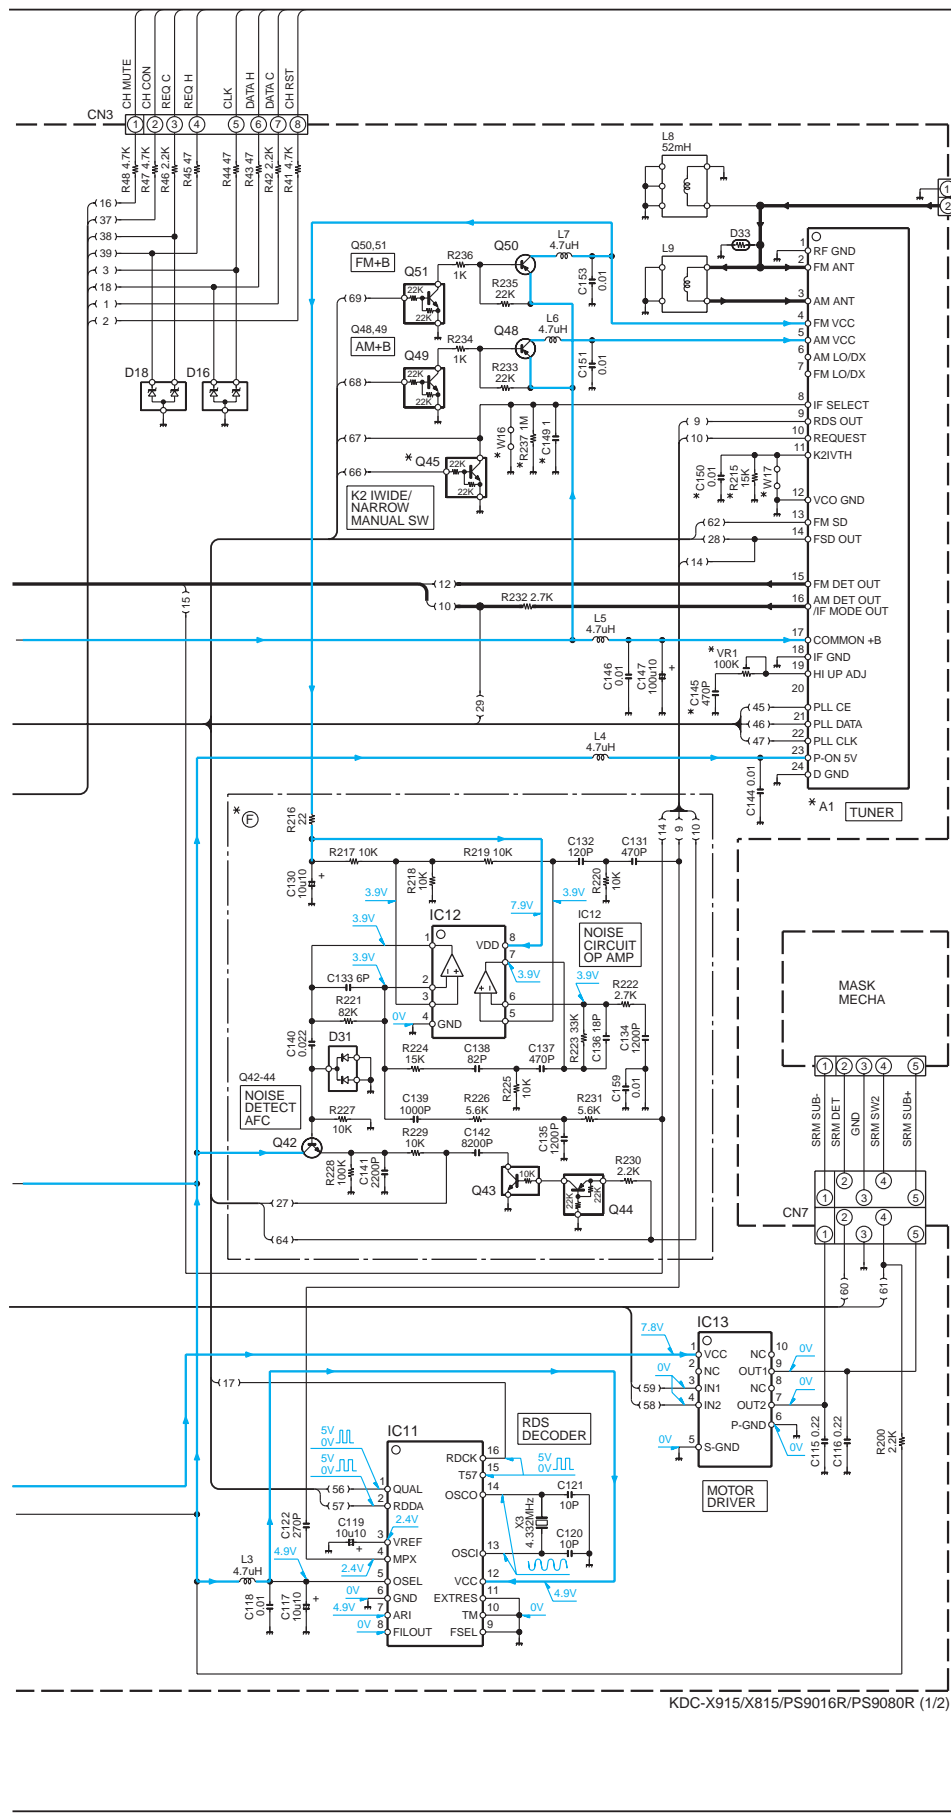

KDC-X915/X815/PS9016R/PS9080R (1/2)

(X25-84XX-XX)

MODEL NAME	UNIT No.	A1	Ⓔ	Ⓕ	IC7-9	Q21, 22	Q45
KDC-X915	70-10	X86-3100-10	NO	NO	NJM2068MD	YES	NO
KDC-X815	70-11	X86-3100-10	YES	NO	NJM4565M-TE2	YES	NO
KDC-PS9016R	70-21	X86-3222-70	YES	YES	NJM4565M-TE2	NO	YES
KDC-PS9080R	62-70	X86-3082-70	YES	YES	NJM4565M-TE2	NO	YES

MODEL NAME	D6	D11	D35-42	R15,17-19,93,97,115,120,215,237	R34, 63	R35, 38	R60	R61	R62
KDC-X915	NO	YES	NO	NO	YES	YES	NO	YES	NO
KDC-X815	NO	YES	YES	NO	YES	YES	YES	YES	NO
KDC-PS9016R	YES	NO	YES	YES	NO	NO	NO	NO	YES
KDC-PS9080R	YES	YES	NO	YES	YES	NO	NO	NO	YES

MODEL NAME	R64	R65	R94	R114	R151,152,165,166	VR1	C1	C12,145
KDC-X915	NO	YES	22K	160K	YES	NO	2200u16	NO
KDC-X815	NO	YES	22K	160K	NO	NO	3900u16	NO
KDC-PS9016R	NO	YES	27K	120K	NO	YES	3900u16	YES
KDC-PS9080R	YES	NO	27K	120K	NO	YES	3900u16	YES

MODEL NAME	C38	C60	C63	C65, 66	C67,68,83,84,87,88,105,106	W16,17,20,21,28	W26	W27
KDC-X915	4700P	47u10	NO	0.47u50	YES	YES	NO	NO
KDC-X815	4700P	100u10	YES	2.2u50	NO	YES	NO	NO
KDC-PS9016R	1000P	100u10	YES	2.2u50	NO	NO	NO	YES
KDC-PS9080R	1000P	100u10	YES	2.2u50	NO	NO	YES	NO

(X25-84XX-XX)


- IC1 : UPD784217GC104
- IC2 : TDA7400
- IC3 : M5237ML
- IC4 : TDA7386
- IC5 : TDA7401
- IC6 : TC7662BEOA
- IC7-9 : *
- IC10 : TC74HC02AF
- IC11 : TDA7479D
- IC12,16 : NJM4565M-TE2
- IC13 : LB1930M
- IC14 : BR24C01AF or M24C01-WMN6T
- IC15 : S-80830ANNP
- D1 : RM10ZLF
- D2,11,12 : AMOIZ
- D3,8,19 : MA4056(N)-M
- D4 : MA4082(N)-L
- D6 : HZM4.7(B2)
- D7 : MA4110(N)-M
- D13,27,47,48 : KDS181 or DAP202K
- D16,18,60 : MA3062WA
- D20 : MA4062(N)-M
- D21,31,34 : KDS184 or DAN202K
- D22,51,55-59 : KDS226 or DA204K
- D23,24 : RD6.8M(B2)
- D28,29 : RD6.8MW
- D32 : MA3056-M
- D33 : SA-C2012-101TB
- D35-43 : 1SR154-400
- D50 : MA3220-H
- Q1,4 : 2CB1565F(E,F)
- Q2,14,16,18,20,28,29 : 2SD601A or 2SC2412K
- Q3 : 32,34-37,39,40,42,55
- Q4,5 : 2SB709A or 2SA1037K
- Q5,25,30,31,44,53,54 : KRA103S or DTA124EK
- Q6,9,33,45,49,51 : UN2212 or DTC124EK
- Q7 : 2SD2396F40
- Q11 : DTA123JK
- Q12,52 : KRC104S or DTC144EK
- Q13,56 : 2SB1443
- Q21,23 : 2SB1277(Q,R)
- Q22,26 : DTC114EK
- Q38 : KRC107S or DTC114YK
- Q43 : UN2215 or DTC114TK
- Q48,50 : 2SB1188(Q,R)

(X89-241X-XX)

UNIT No.	Q1	Q2	D3
0-10	2SD601A	KDS226	
2-71	2SC2412K	DA204K	


- D1 : MA4100-L
- D2 : MA4051(N)-M
- D3 : *

(X89-241X-XX)

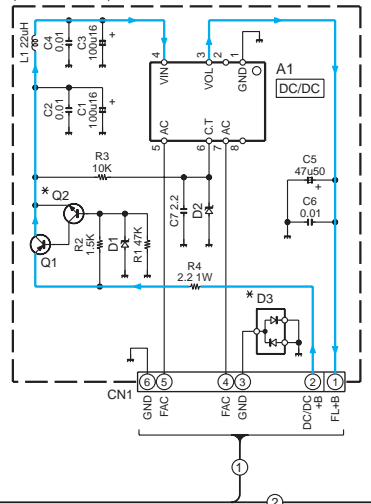


(X13-978X-XX)


MODEL NAME	UNIT No.
KDC-X915	0-10
KDC-X815	0-10
KDC-PS9016R	0-11
KDC-PS9080R	2-71

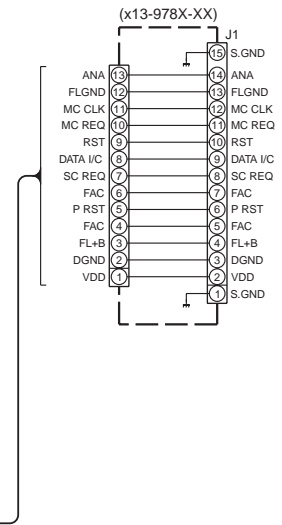


2SB1565

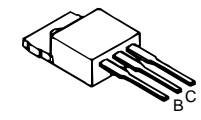


- DTA114YK
- DTA123JK
- DTA124EK
- DTC114EK
- DTC114TK
- DTC114YK
- DTC124EK
- DTC144EK
- KRC103S
- 2SA1362
- 2SB709A
- 2SC2412K




2SB1188




2SB1184

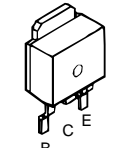


2SB1277

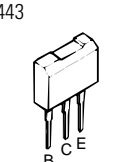


2SB1443

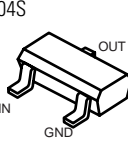


- NJM2068MD
- NJM4565M-TE2
- NJM5532MD

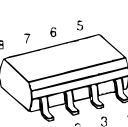


DAN202K




TA78L05F

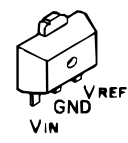


DAP202K




RD6.8M

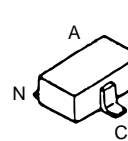


DA227

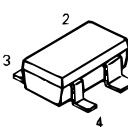


TC74HC02AF

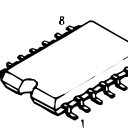


BA3830F

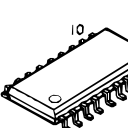


BR24C01AF

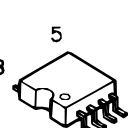


M5237ML

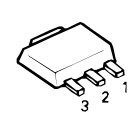


AN8806SB

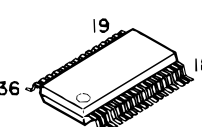


LB1930M

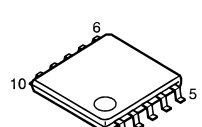

TDA7479D

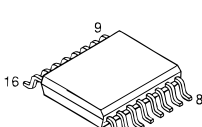

(X13-971X-XX)

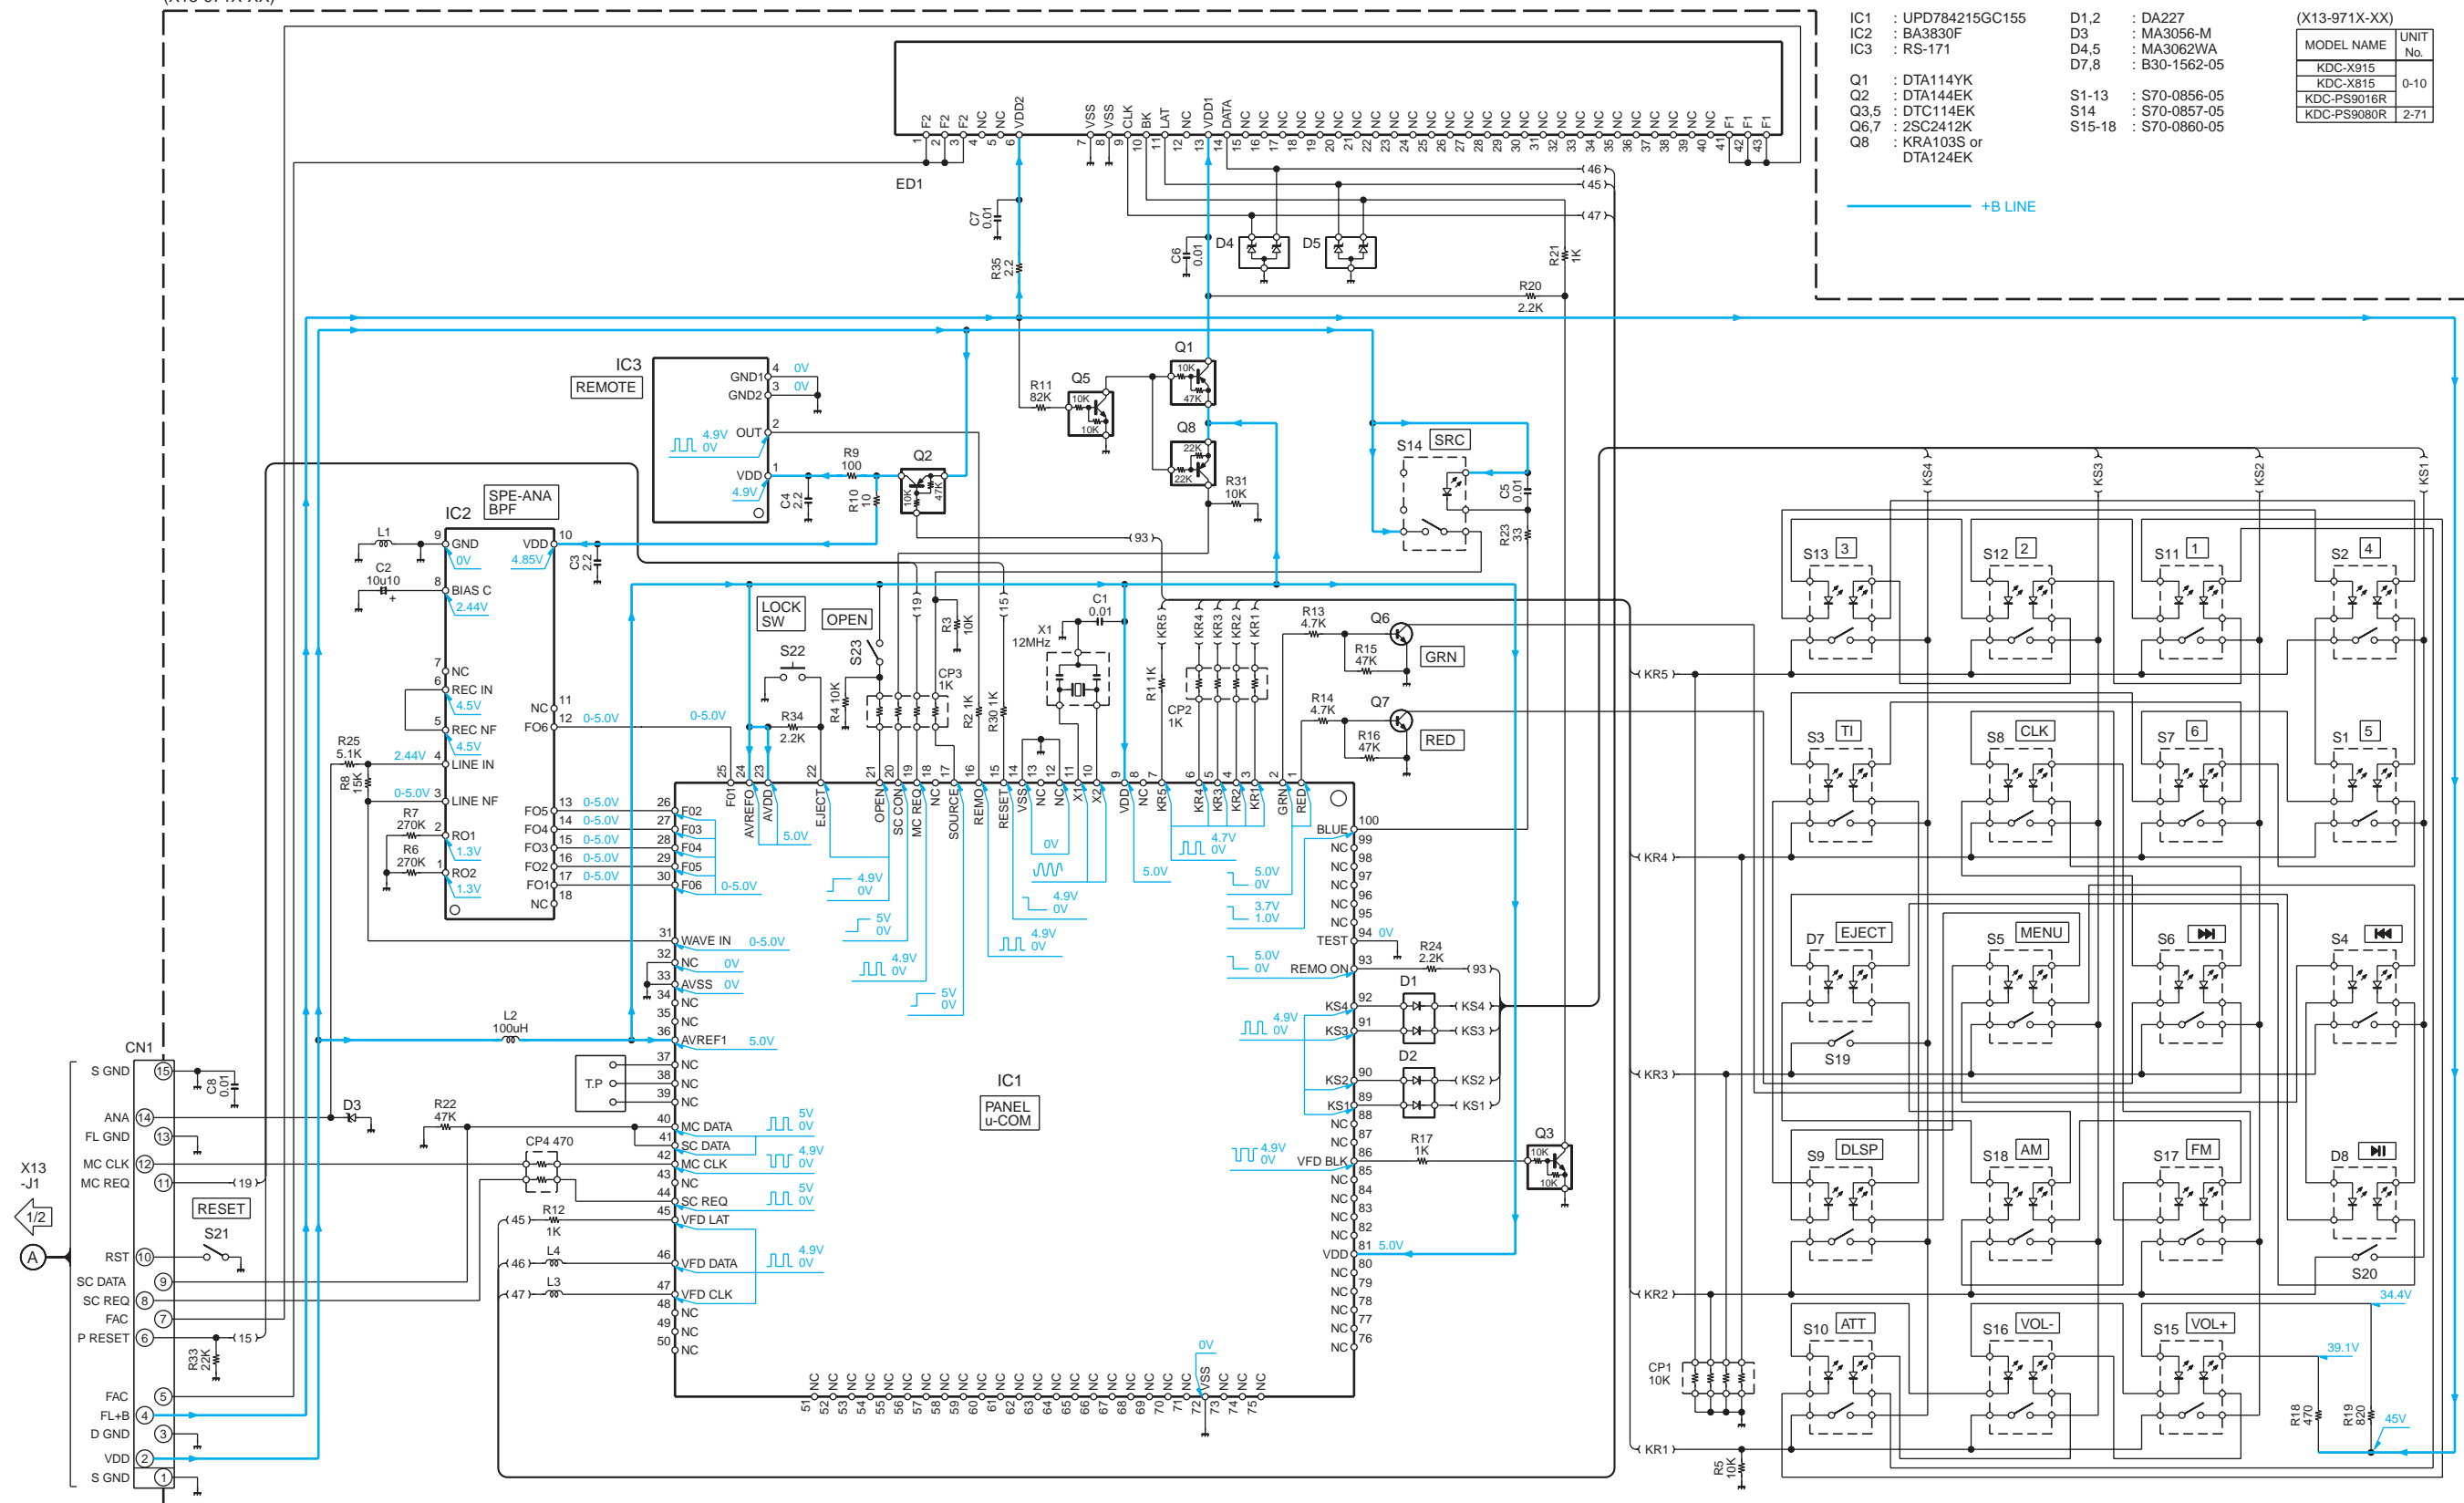


- | | | |
|--------------------------|----------------------|---------------|
| IC1 : UPD784215GC155 | D1,2 : DA227 | (X13-971X-XX) |
| IC2 : BA3830F | D3,5 : MA3056-M | MODEL NAME |
| IC3 : RS-171 | D4,5 : MA3062WA | UNIT No. |
| Q1 : DTA114YK | D7,8 : B30-1562-05 | KDC-X915 |
| Q2 : DTA144EK | S1-13 : S70-0856-05 | KDC-X815 |
| Q3,5 : DTC114EK | S14 : S70-0857-05 | KDC-PS9016R |
| Q6,7 : 2SC2412K | S15-18 : S70-0860-05 | KDC-PS9080R |
| Q8 : KRA103S or DTA124EK | | |

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to, parts list). ⚠ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

X32-4740-00/X32-4750-00

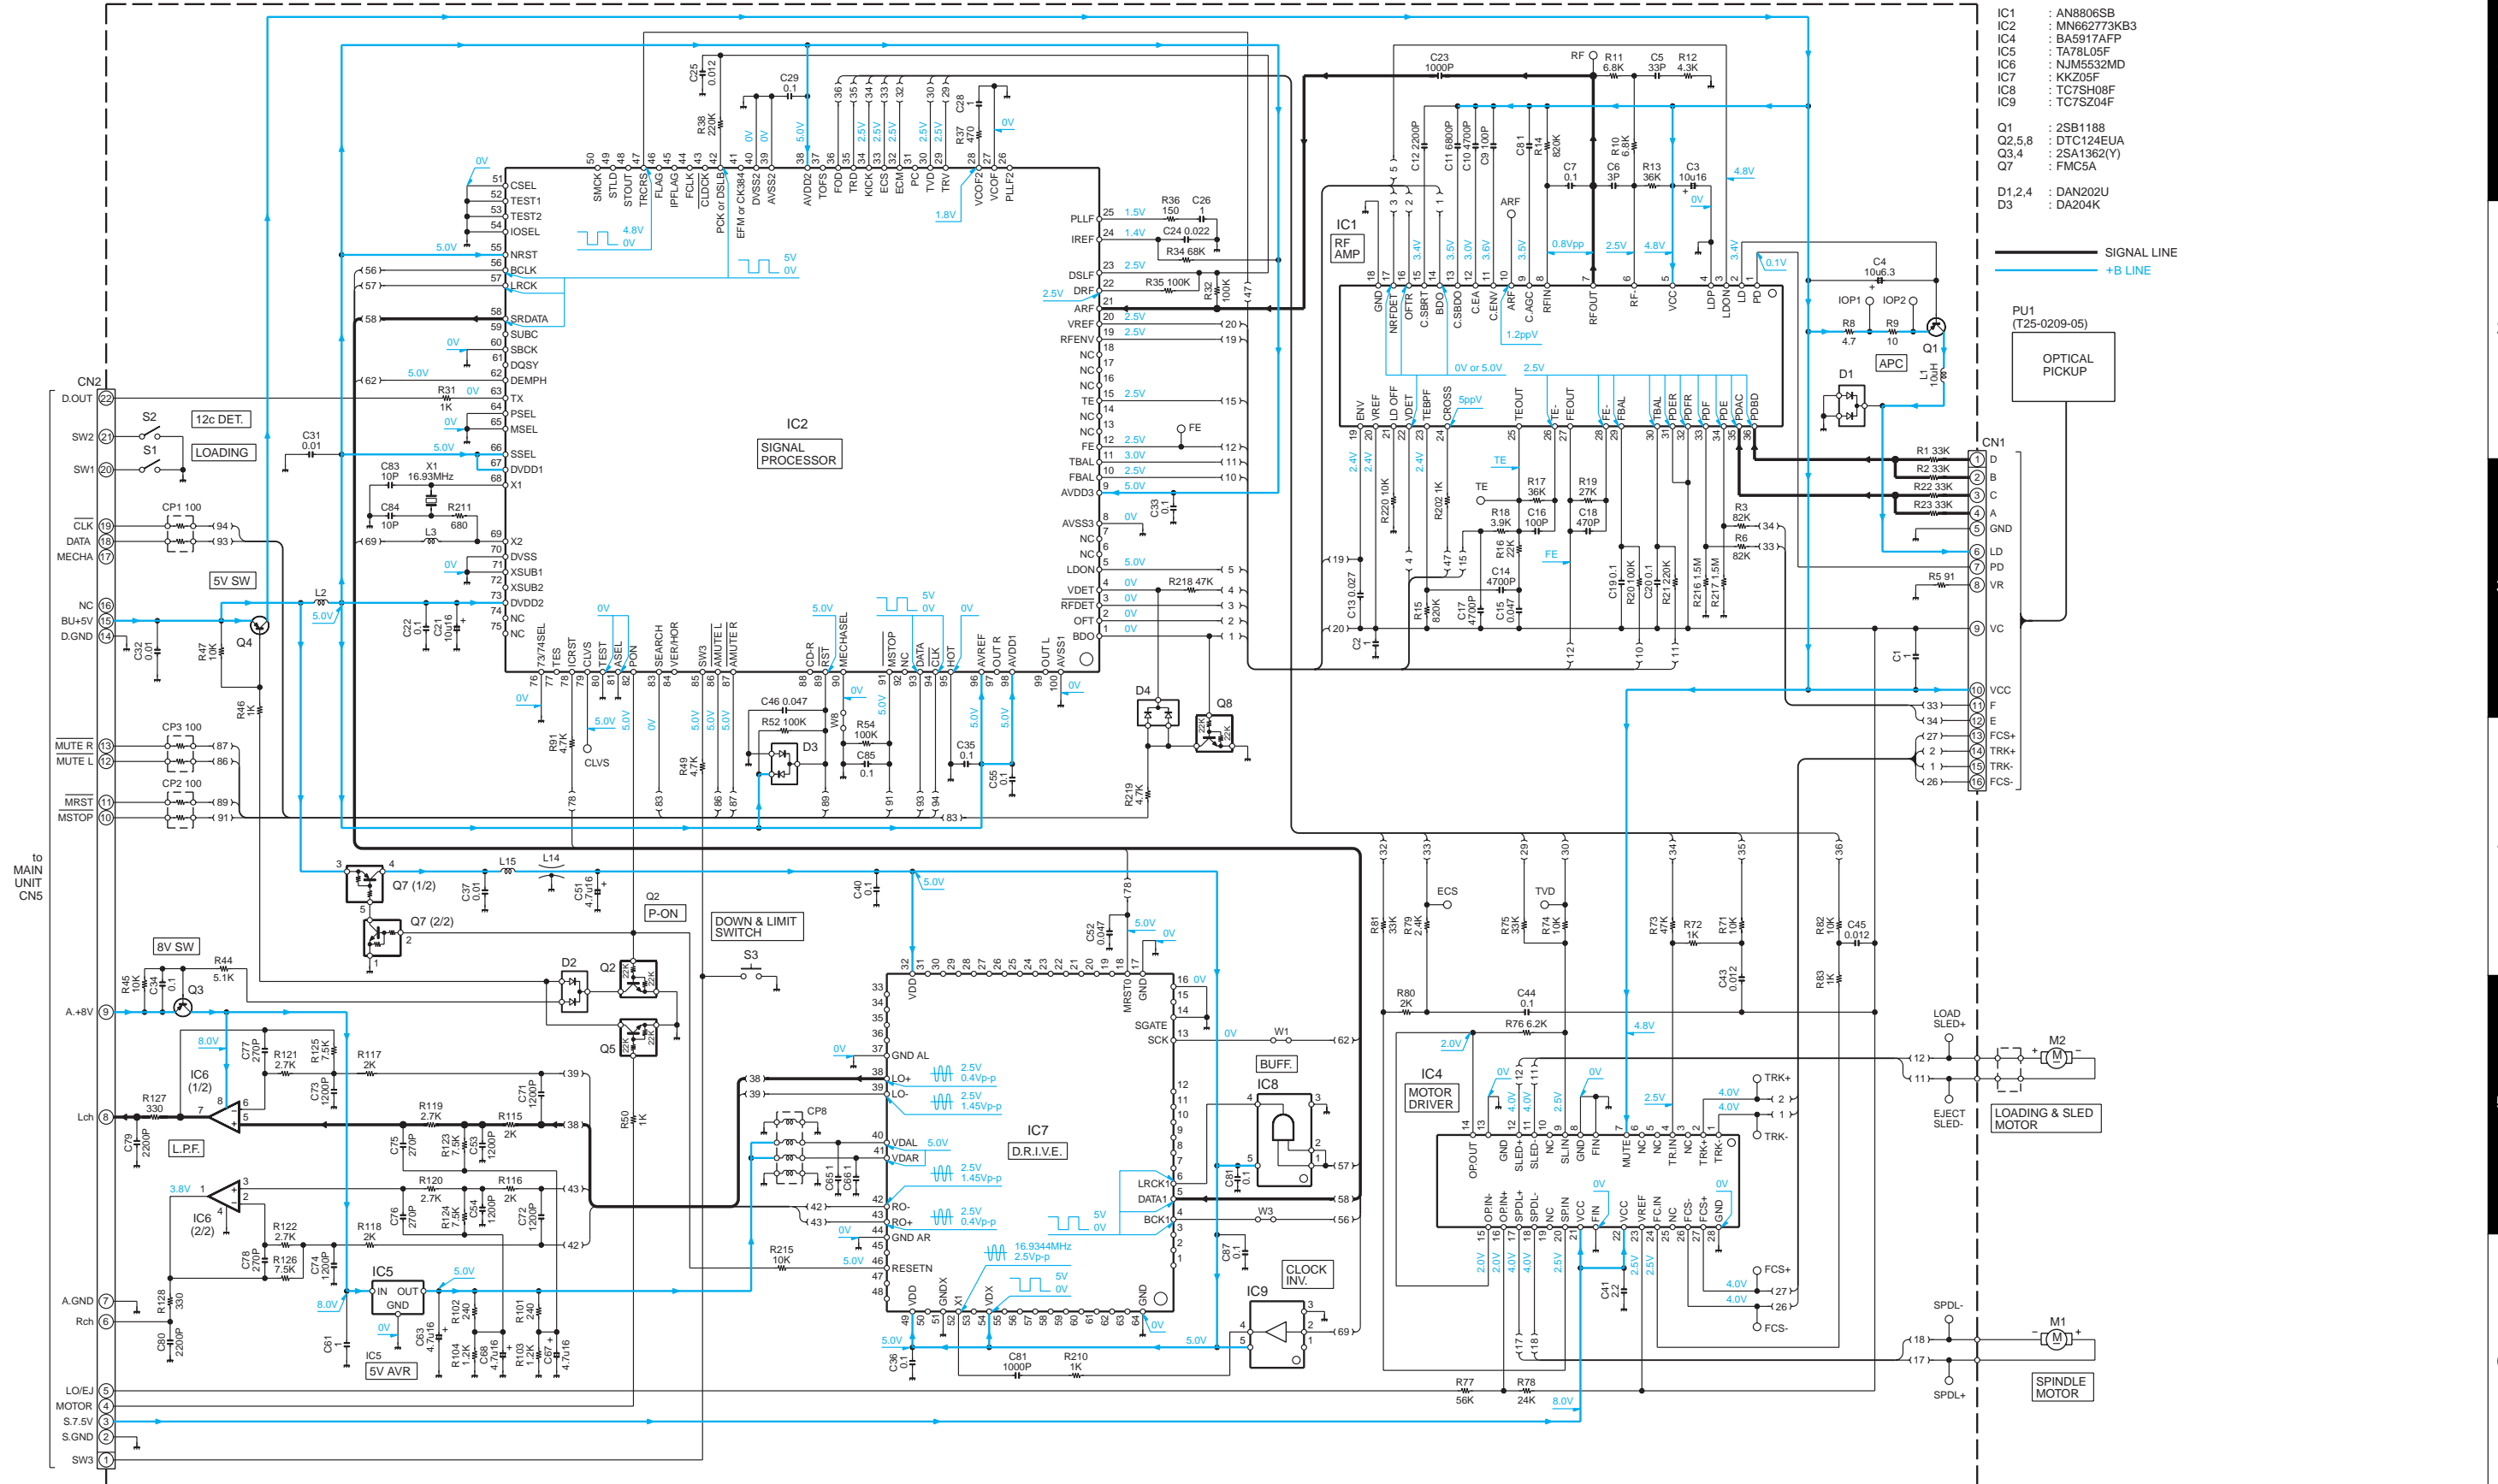

- IC1 : AN8806SB
- IC2 : MN662773KB3
- IC4 : BA5917AFP
- IC5 : TA78L05F
- IC6 : NJM5532MD
- IC7 : KKZ05F
- IC8 : TC7SH08F
- IC9 : TC7SZ04F
- Q1 : 2SB1188
- Q2,5,8 : DTC124EUA
- Q3,4 : 2SA1362(Y)
- Q7 : FMC5A
- D1,2,4 : DAN202U
- D3 : DA204K

— SIGNAL LINE
 — +B LINE


CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to, parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

CD MECHANISM
KDC-X915/X815/PS9016R/PS9080R
KENWOOD


EXPLODED VIEW (CD MECHANISM)

- | | |
|---------------------|---------------|
| A M1.7x2.5 | : N09-4249-05 |
| B ϕ 2x3.5 | : N09-4172-05 |
| C M1.7x4 | : N09-4202-05 |
| D M2x2 | : N38-2020-46 |
| E ϕ 2x6 | : N09-4294-05 |
| F WASHER ϕ 1.2 | : N19-2023-04 |
| G WASHER ϕ 1.6 | : N19-2058-04 |
| H WASHER ϕ 1.6 | : N19-2093-04 |
| J M2x2 | : N39-2020-46 |

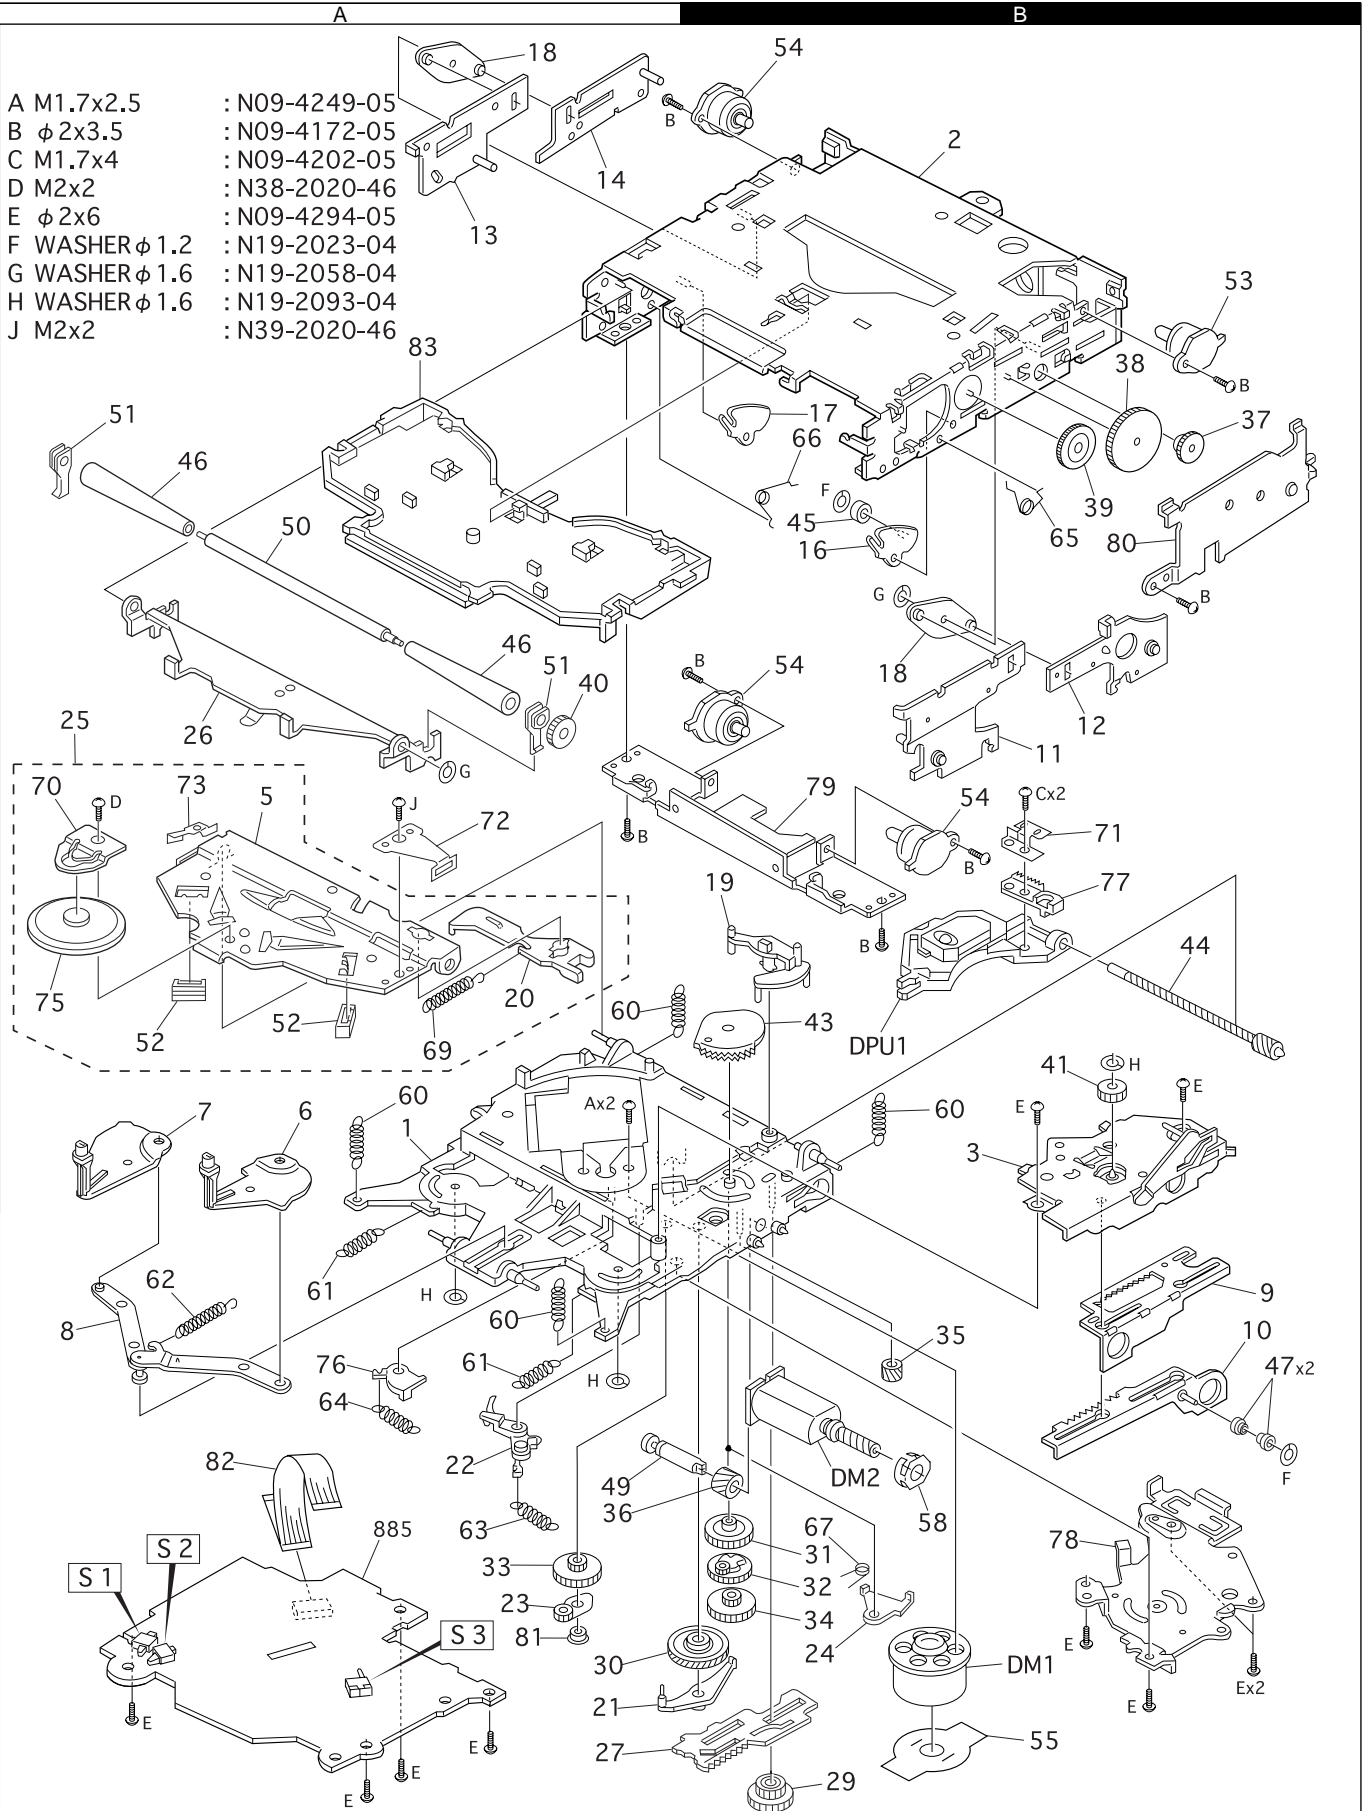

Parts with exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

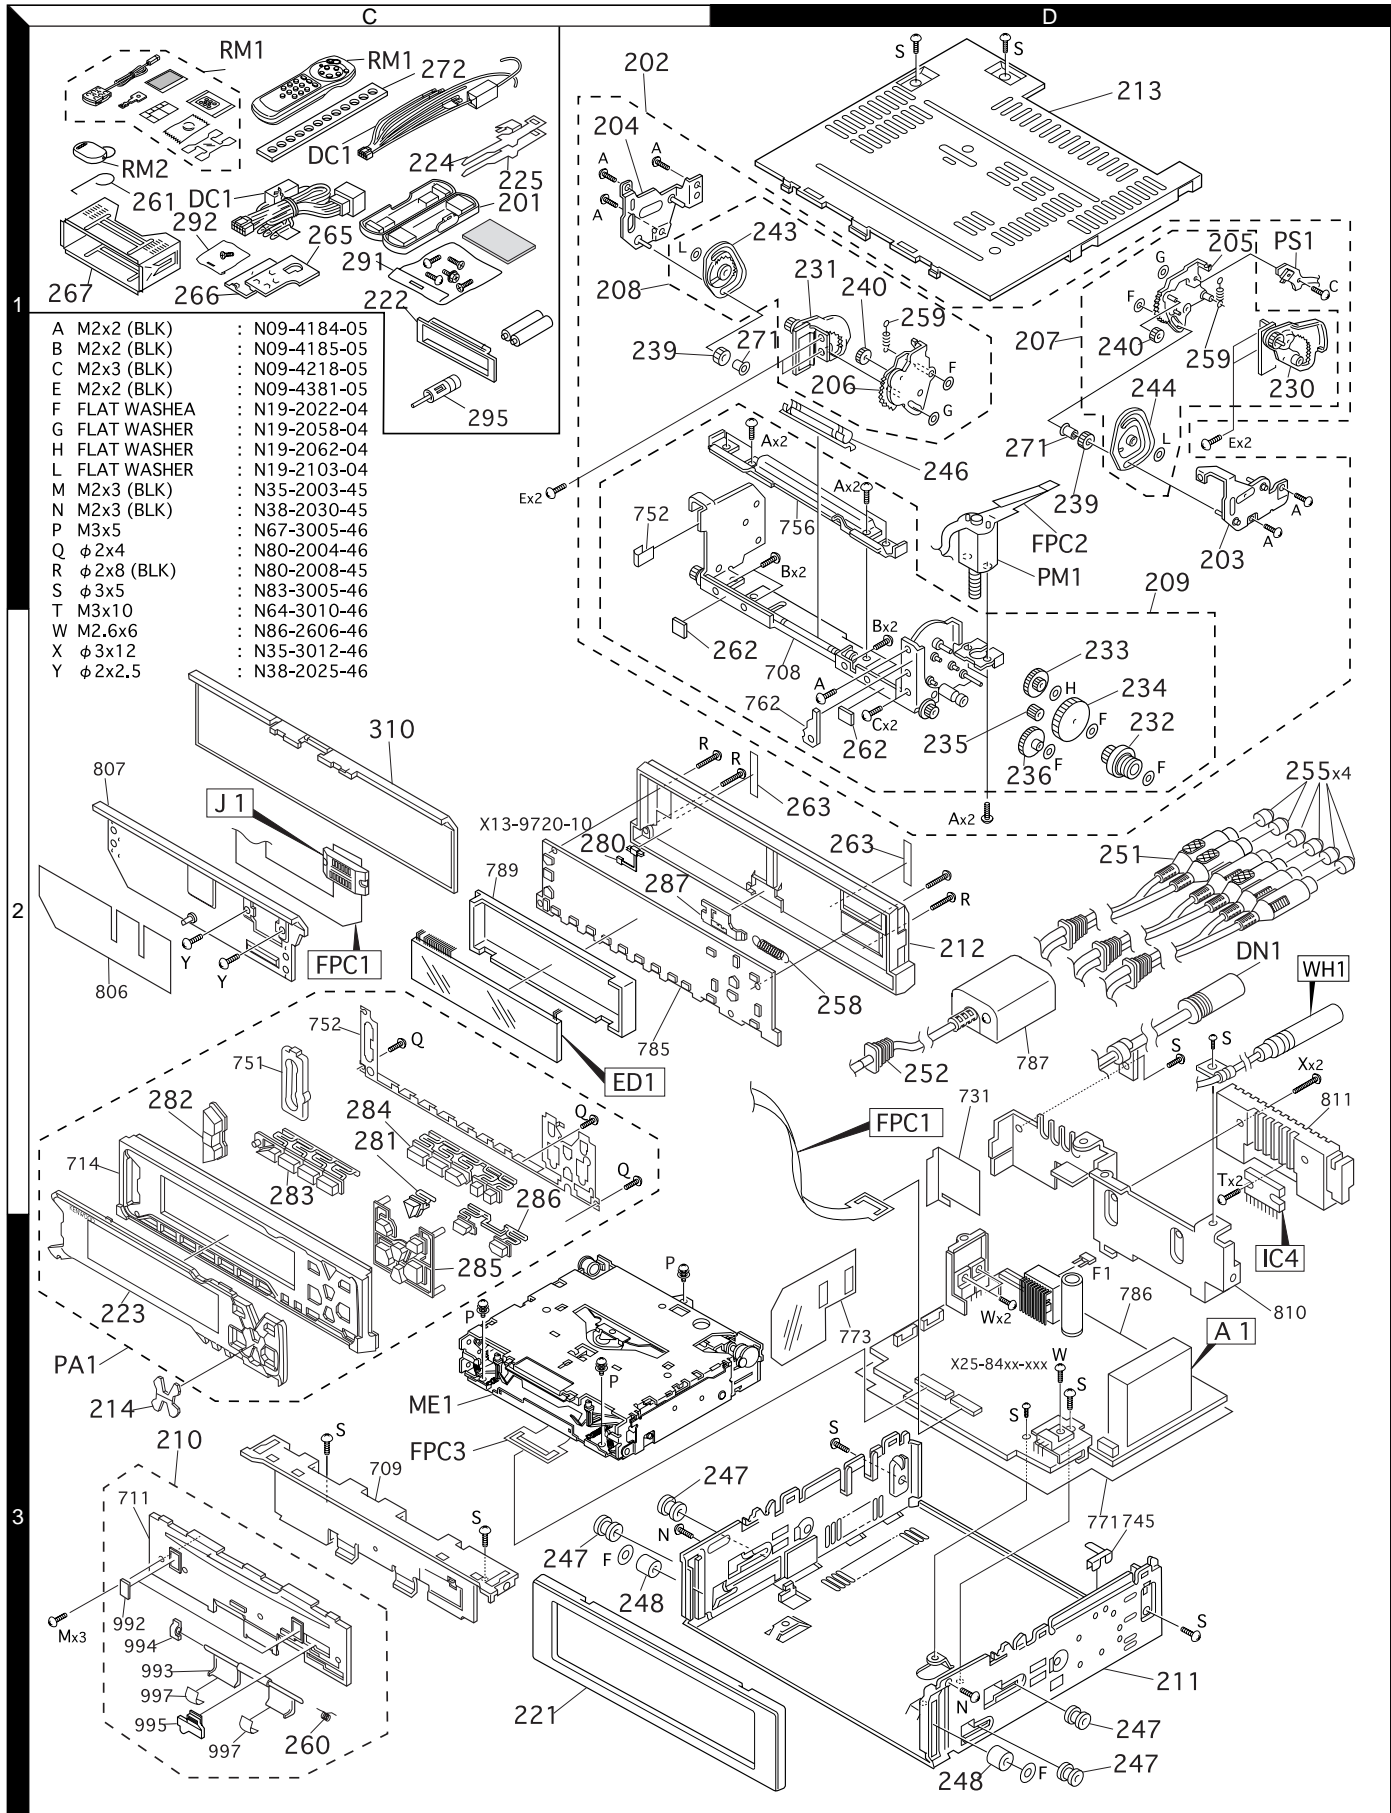

Parts with exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-X915/X815/PS9016R/PS9080R

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-X915/X815/PS9016R/PS9080R											
201	1C		A02-1489-03	PLASTIC CABINET ASSY		240	1D		D13-1313-04	GEAR	
202	1C		A10-4671-02	CHASSIS ASSY		243	1D		D13-1456-13	GEAR ASSY	
203	1D		A10-4315-04	CHASSIS CALKING ASSY		244	1D		D13-1455-13	GEAR ASSY	
204	1C		A10-4317-04	CHASSIS CALKING ASSY		246	1D		D14-0678-04	ROLLER ASSY	
205	1D		A10-4319-04	CHASSIS CALKING ASSY		247	3D		D14-0723-04	ROLLER	
206	1D		A10-4321-04	CHASSIS CALKING ASSY		248	3D		D14-0716-14	ROLLER	
207	1D		A10-4674-02	CHASSIS ASSY		251	2D		E30-4796-05	CORD WITH PINPLUG	
208	1D		A10-4676-02	CHASSIS ASSY		252	2D		E30-4706-05	CORD WITH CONNECTOR	
209	1D		A10-4534-23	CHASSIS ASSY		DC1	1C		E30-4779-05	DC CORD	K1
210	3C		A22-2296-43	SUB PANEL ASSY		DC1	1C		E30-4781-05	DC CORD	M1
						DC1	1C		E30-4782-05	DC CORD	K
211	3D		A10-4666-03	CHASSIS ASSY	WO/E	DC1	1C		E30-4788-05	DC CORD	E
211	3D		A10-4667-03	CHASSIS ASSY	E	DN1	2D		E30-4802-05	CORD WITH DIN CONNECTOR	
212	2D		A46-1652-01	REAR COVER		255	2D		F29-0049-05	INSULATING COVER	
213	1D		A52-0742-12	TOP PLATE		F1	2D		F52-0004-05	FUSE(MINI BLADE TYPE)	K
214	3C		A21-4011-03	DRESSING PANEL		F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)	K1M1
PA1	2C	*	A64-1864-02	PANEL ASSY	E	F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)	E
PA1	2C	*	A64-1867-02	PANEL ASSY	K	258	2D		G01-2984-04	EXTENSION SPRING	
PA1	2C	*	A64-1868-02	PANEL ASSY	K1	259	1D		G01-2818-24	EXTENSION SPRING	
PA1	2C	*	A64-1873-02	PANEL ASSY	M1	260	3C		G01-2920-14	TORSION COIL SPRING	
RM1	1C		A70-0864-05	REMOTE CONTROLLER ASSY	E	261	1C		G01-2924-04	TORSION COIL SPRING	
RM1	1C		A70-0883-05	REMOTE CONTROLLER ASSY	M1	262	1D		G11-1850-04	CUSHION	
RM1	1C		A70-0894-05	REMOTE CONTROLLER ASSY	KK1	263	2D		G16-1147-04	SHEET	
RM2	1C		A70-0886-15	REMOTE CONTROLLER ASSY	M1E	-			H10-4700-02	POLYSTYRENE FOAMED FIXTURE	
221	3C		B07-2139-03	ESCUTCHEON ASSY	M1	-			H21-1123-04	PROTECTION SHEET	
221	3C		B07-2146-03	ESCUTCHEON ASSY	KK1E	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
222	1C		B07-2183-02	ESCUTCHEON		-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
223	2C	*	B10-3107-01	FRONT GLASS	K	-			H25-1108-04	PROTECTION BAG (100X300X0.03)	
223	2C	*	B10-3108-01	FRONT GLASS	K1	-		*	H54-1652-03	ITEM CARTON CASE	K
223	2C	*	B10-3113-01	FRONT GLASS	M1	-		*	H54-1653-03	ITEM CARTON CASE	K1
223	2C	*	B10-3103-01	FRONT GLASS	E	-		*	H54-1658-03	ITEM CARTON CASE	M1
-			B46-0100-50	WARRANTY CARD		-		*	H54-1662-03	ITEM CARTON CASE	E
-			B46-0606-04	ID CARD	KK1	265	1C		J19-4875-04	BRACKET	WO/E
-			B46-0631-03	USER CARD	KK1	266	1C		J19-4876-04	BRACKET	WO/E
-			B46-0632-04	ID CARD	M1E	267	1C		J21-9491-03	MOUNTING HARDWARE ASSY	
-			B58-1278-04	CAUTION CARD		271	1D		J31-1035-24	COLLAR	
-			B58-1309-04	CAUTION CARD	M1	272	1C		J54-0606-04	STAY	
-			B58-1321-14	CAUTION CARD	M1	FPC2	1D		J84-0062-23	FLEXIBLE PRINTED WIRING BOARD	
-			B64-1599-00	INSTRUCTION MANUAL E,T	M1	FPC3	3C		J84-0066-13	FLEXIBLE PRINTED WIRING BOARD	
-			B64-1601-00	INSTRUCTION MANUAL E	KK1	280	2C		K24-3540-03	KNOB OPEN	
-			B64-1602-00	INSTRUCTION MANUAL F,S	KK1	281	2C		K24-3541-04	KNOB SRC	
-			B64-1605-00	INSTRUCTION MANUAL E	E	282	2C		K25-1095-03	KNOB VOL	
-			B64-1606-00	INSTRUCTION MANUAL F,G,D	E	283	2C		K25-1096-03	KNOB 1-3	
-			B64-1607-00	INSTRUCTION MANUAL I,S,P	E	284	2C		K25-1097-03	KNOB 4-6	
224	1C		D10-4301-14	LEVER		285	2C		K25-1098-03	KNOB FM/AM	
225	1C		D10-4302-14	LEVER		286	2C		K25-1099-03	KNOB CLK	
230	1D		D10-4448-03	ARM ASSY		287	2D		K29-7010-04	KNOB ASSY LOCK	
231	1D		D10-4449-04	ARM ASSY		291	1C		N99-1652-05	SCREW SET	WO/E
232	2D		D13-1302-64	GEAR ASSY		292	1C		N99-1683-05	SCREW SET	
233	2D		D13-1306-24	GEAR		A	1D		N09-4184-05	MACHINE SCREW (M2X2)	
234	2D		D13-1403-03	GEAR		B	1D		N09-4185-05	MACHINE SCREW (M2X2)	
235	2D		D13-1404-04	GEAR		C	1D		N09-4218-05	MACHINE SCREW (M2X3)	
236	2D		D13-1453-14	GEAR ASSY							
239	1D		D13-1312-34	GEAR							

K: KDC-X915 **K1:** KDC-X815 **M1:** KDC-PS9016R **E:** KDC-PS9080R

▲ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-X915/X815/PS9016R/PS9080R

SWITCH UNIT (X13-971X-XX)

SUB CIRCUIT (X13-978X-XX)

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D	1D		N09-4340-05	MACHINE SCREW (M2X2.)	
E	1D		N09-4381-05	MACHINE SCREW (M2X2)	
F	2D		N19-2022-04	FLAT WASHER	
G	2D		N19-2058-04	FLAT WASHER	
H	1D		N19-2062-04	FLAT WASHER	
J	1D		N19-2085-04	FLAT WASHER	
K	1D		N19-2095-04	FLAT WASHER	
L	1D		N19-2103-04	FLAT WASHER	
M	3C		N35-2003-45	BINDING HEAD MACHINE SCREW	
N	3C		N38-2030-45	PAN HEAD MACHIN SCREW	
P	3C		N67-3005-46	PAN HEAD SEMS SCREW	
Q	2C		N80-2004-46	PAN HEAD TAPTITE SCREW	
R	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
S	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
PS1	1D		S68-0829-05	PUSH SWITCH	
PM1	1D		T42-0752-34	MOTOR ASSY	
295	1C		T90-0523-05	ANTENNA ADAPTOR	E
ME1	3C		X92-3710-00	MECHANISM ASSY	

SWITCH UNIT (X13-971X-XX)

D7 ,8			B30-1562-05	LED	
C1			CK73FB1H103K	CHIP C 0.010UF K	
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C3 ,4			CK73EB1C225K	CHIP C 2.2UF K	
C5			CK73FB1H103K	CHIP C 0.010UF K	
C6			CK73EB1C225K	CHIP C 2.2UF K	
C8			CK73FB1H103K	CHIP C 0.010UF K	
CN1			E59-0833-05	RECTANGULAR PLUG	
L1			L92-0302-05	CHIP FERRITE	
L2			L40-1015-34	SMALL FIXED INDUCTOR	
L3 ,4			L33-0385-05	SMALL FIXED INDUCTOR	
X1			L78-0683-05	RESONATOR	
CP1			R90-0714-05	MULTI-COMP 10K X4	
CP2 ,3			R90-0724-05	MULTI-COMP 1K X4	
CP4			R90-1022-05	MULTI-COMP 470 X2	
R1 ,2			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R3 -5			RK73FB2A103J	CHIP R 10K J 1/10W	
R6 ,7			RK73FB2A274J	CHIP R 270K J 1/10W	
R8			RK73FB2A153J	CHIP R 15K J 1/10W	
R9			RK73FB2A101J	CHIP R 100 J 1/10W	
R10			RK73FB2A100J	CHIP R 10 J 1/10W	
R11			RK73FB2A823J	CHIP R 82K J 1/10W	
R12			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R13 ,14			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R15 ,16			RK73FB2A473J	CHIP R 47K J 1/10W	
R17			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R18			R92-1215-05	CHIP R 470 J 1/2W	
R19			R92-2023-05	CHIP R 820 J 1/2W	
R20			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R21			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R22			RK73FB2A473J	CHIP R 47K J 1/10W	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R23			RK73EB2B330J	CHIP R 33 J 1/8W	
R24			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R25			RK73FB2A512J	CHIP R 5.1K J 1/10W	
R30			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R31			RK73FB2A103J	CHIP R 10K J 1/10W	
R33			RK73FB2A223J	CHIP R 22K J 1/10W	
R34			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R35			RK73FB2A2R2J	CHIP R 2.2 J 1/10W	
S1 -13			S70-0856-05	TACT SWITCH	
S14			S70-0857-05	TACT SWITCH	
S15 -18			S70-0860-05	TACT SWITCH	
S19 -21			S70-0851-05	TACT SWITCH	
S22			S68-0822-05	PUSH SWITCH	
S23			S70-0864-05	TACT SWITCH	
D1 ,2			DA227	DIODE	
D3			MA3056-M	ZENER DIODE	
D4 ,5			MA3062WA	ZENER DIODE	
ED1	2C		CN1914M	FLUORESCENT INDICATOR TUBE	
IC1			UPD784215GC155	MI-COM IC	
IC2			BA3830F	ANALOGUE IC	
IC3			RS-171	ANALOGUE IC	
Q1			DTA114YK	DIGITAL TRANSISTOR	
Q1			UN2114	DIGITAL TRANSISTOR	
Q2			DTA144EK	DIGITAL TRANSISTOR	
Q2			UN2113	DIGITAL TRANSISTOR	
Q3			DTC114EK	DIGITAL TRANSISTOR	
Q3			UN2211	DIGITAL TRANSISTOR	
Q5			DTC114EK	DIGITAL TRANSISTOR	
Q5			UN2211	DIGITAL TRANSISTOR	
Q6 ,7			2SC2412K	TRANSISTOR	
Q6 ,7			2SD601A	TRANSISTOR	
Q8			DTA124EK	DIGITAL TRANSISTOR	
Q8			KRA103S	TRANSISTOR	
Q8			UN2112	DIGITAL TRANSISTOR	

SUB CIRCUIT (X13-978X-XX)

310	2C	*	B03-3056-12	DRESSING PLATE	KK1E
310	2C		B03-3057-02	DRESSING PLATE	M1
J1			E58-0895-05	RECTANGULAR RECEPTACLE	
FPC1	2C		J84-0106-02	FLEXIBLE PRINTED WIRING BOARD	
Y	2C		N38-2025-46	PAN HEAD MACHIN SCREW	

ELECTRIC UNIT (X25-84XX-XX)

C1			C90-2822-05	ELECTRO 3900UF 16WV	K1M1E
C1			C90-2865-05	ELECTRO 2200UF 16WV	K
C2			CK73FB1H103K	CHIP C 0.010UF K	
C3			C90-2926-05	ELECTRO 220UF 16WV	
C4			CK73FB1H103K	CHIP C 0.010UF K	
C5			C90-2594-05	ELECTRO 10UF 10WV	
C6			CE04CW0J101M	ELECTRO 100UF 6.3WV	
C7			CK73EB1C105K	CHIP C 1.0UF K	
C8			CE04CW1A221M	ELECTRO 220UF 10WV	
C10			CE04CW1A101M	ELECTRO 100UF 10WV	

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C12			CK73FB1H103K	CHIP C 0.010UF K	M1
C13			CK73FB1H223K	CHIP C 0.022UF K	
C14			C90-2608-05	ELECTRO 1.0UF 50WV	
C15			C90-2595-05	ELECTRO 4.7UF 16WV	
C16 ,17			CK73EB1C225K	CHIP C 2.2UF K	
C18			C90-2962-05	ELECTRO 100UF 16WV	
C19 ,20			CK73EB1C225K	CHIP C 2.2UF K	
C21			CE04CW1C220M	ELECTRO 22UF 16WV	
C22			CK73GB1E223K	CHIP C 0.022UF K	
C23			CK73FB1H103K	CHIP C 0.010UF K	
C24			C90-2595-05	ELECTRO 4.7UF 16WV	
C25 ,26			CK73FB1E473K	CHIP C 0.047UF K	
C27			C90-2598-05	ELECTRO 3.3UF 25WV	
C28			CK73FB1E683K	CHIP C 0.068UF K	
C29			C90-2602-05	ELECTRO 0.10UF 50WV	
C30			CK73FB1H102K	CHIP C 1000PF K	
C31 ,32			CK73FB1H103K	CHIP C 0.010UF K	
C33			CE04CW0J470M	ELECTRO 47UF 6.3WV	
C34			CK73FB1H103K	CHIP C 0.010UF K	
C35			CC73FCH1H240J	CHIP C 24PF J	
C36			CC73FCH1H270J	CHIP C 27PF J	
C37			CK73EB1C105K	CHIP C 1.0UF K	
C38			CK73FB1H102K	CHIP C 1000PF K	M1E
C38			CK73FB1H472K	CHIP C 4700PF K	KK1
C39			CK73FB1H103K	CHIP C 0.010UF K	
C42 -46			C90-2595-05	ELECTRO 4.7UF 16WV	
C48 ,49			C90-2597-05	ELECTRO 10UF 16WV	
C50			CK73FB1C104K	CHIP C 0.10UF K	
C51			CK73FB1H103K	CHIP C 0.010UF K	
C52 ,53			C90-2597-05	ELECTRO 10UF 16WV	
C54			CC73FCH1H121J	CHIP C 120PF J	
C55			CK73FB1C823K	CHIP C 0.082UF K	
C56			CK73FB1C104K	CHIP C 0.10UF K	
C57			CK73EB1C474K	CHIP C 0.47UF K	
C58			CK73GB1E183K	CHIP C 0.018UF K	
C59			CK73FB1H103K	CHIP C 0.010UF K	
C60			CE04CW1A101M	ELECTRO 100UF 10WV	K1M1E
C60			CE04CW1A470M	ELECTRO 47UF 10WV	K
C61			C90-2610-05	ELECTRO 2.2UF 50WV	
C62			CK73FB1H103K	CHIP C 0.010UF K	
C63			C93-1054-05	CHIP C 0.012UF K	K1M1E
C64			C90-2608-05	ELECTRO 1.0UF 50WV	
C65 ,66			C90-2610-05	ELECTRO 2.2UF 50WV	K1M1E
C65 ,66			C90-5204-05	ELECTRO 0.47UF 50WV	K
C67 ,68			CK73FB1H682K	CHIP C 6800PF K	K
C69 -76			CK73FB1C274K	CHIP C 0.27UF K	
C77 -80			CK73FB1C104K	CHIP C 0.10UF K	
C81 ,82			CE04CW1C220M	ELECTRO 22UF 16WV	
C83 ,84			CC73FCH1H820J	CHIP C 82PF J	K
C85 ,86			CE04CW1C220M	ELECTRO 22UF 16WV	
C87 ,88			CC73FCH1H820J	CHIP C 82PF J	K
C89 -92			C90-2536-05	ELECTRO 10UF 16WV	K
C89 -92			C90-2597-05	ELECTRO 10UF 16WV	K1M1E
C95 -98			C90-5296-05	ELECTRO 0.22UF 50WV	K1M1E
C99			C90-2935-05	ELECTRO 1.0UF 50WV	K1M1E

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C100			C90-2608-05	ELECTRO 1.0UF 50WV	K1M1E
C101			CE04CW1A101M	ELECTRO 100UF 10WV	K1M1E
C102			C90-2608-05	ELECTRO 1.0UF 50WV	K1M1E
C103,104			CE04CW1C220M	ELECTRO 22UF 16WV	
C105,106			CC73FCH1H820J	CHIP C 82PF J	K
C107,108			C90-2536-05	ELECTRO 10UF 16WV	K
C107,108			C90-2597-05	ELECTRO 10UF 16WV	K1M1E
C110			CK73FB1E473K	CHIP C 0.047UF K	
C111			CE04CW0J470M	ELECTRO 47UF 6.3WV	
C112,113			C90-2606-05	ELECTRO 0.47UF 50WV	
C115,116			CK73FB1C224K	CHIP C 0.22UF K	
C117			C90-2594-05	ELECTRO 10UF 10WV	
C118			CK73FB1H103K	CHIP C 0.010UF K	
C119			C90-2594-05	ELECTRO 10UF 10WV	
C120,121			CC73FCH1H100D	CHIP C 10PF D	
C122			CC73FCH1H271J	CHIP C 270PF J	
C123-128			CC73FSL1H102J	CHIP C 1000PF J	
C130			C90-2594-05	ELECTRO 10UF 10WV	M1E
C131			CK73GB1H471K	CHIP C 470PF K	M1E
C132			CC73FCH1H121J	CHIP C 120PF J	M1E
C133			CC73FCH1H060D	CHIP C 6.0PF D	M1E
C134			CC73FSL1H122J	CHIP C 1200PF J	M1E
C135			CK73GB1H122K	CHIP C 1200PF K	M1E
C136			CC73FCH1H180J	CHIP C 18PF J	M1E
C137			CC73FCH1H471J	CHIP C 470PF J	M1E
C138			CC73FCH1H820J	CHIP C 82PF J	M1E
C139			CC73FSL1H102J	CHIP C 1000PF J	M1E
C140			CK73FB1H223K	CHIP C 0.022UF K	M1E
C141			CC73FSL1H222J	CHIP C 2200PF J	M1E
C142			CK73FB1H822K	CHIP C 8200PF K	M1E
C144			CK73FB1H103K	CHIP C 0.010UF K	
C145			CC73FCH1H471J	CHIP C 470PF J	M1E
C146			CK73FB1H103K	CHIP C 0.010UF K	
C147			CE04CW1A101M	ELECTRO 100UF 10WV	
C148			CK73FB1E273K	CHIP C 0.027UF K	
C149			CK73EB1C105K	CHIP C 1.0UF K	M1E
C150,151			CK73FB1H103K	CHIP C 0.010UF K	M1E
C151			CK73FB1H103K	CHIP C 0.010UF K	KK1
C153			CK73FB1H103K	CHIP C 0.010UF K	
C157			CK73EB1C474K	CHIP C 0.47UF K	
C159			CK73FB1H103K	CHIP C 0.010UF K	
C160			CK73EB1C225K	CHIP C 2.2UF K	
C161			C90-2608-05	ELECTRO 1.0UF 50WV	
CN1			E40-5066-05	PIN ASSY	
CN2			E40-3299-05	PIN ASSY	
CN3			E40-3252-05	PIN ASSY	
CN4			E40-3261-05	PIN ASSY	
CN5			E40-9550-05	FLAT CABLE CONNECTOR	
CN6			E40-9557-05	FLAT CABLE CONNECTOR	
CN7			E40-5029-05	FLAT CABLE CONNECTOR	
CN8			E40-3250-05	PIN ASSY	
J1			E58-0836-05	RECTANGULAR RECEPTACLE	
WH1	2D		E30-4440-05	CORD WITH PLUG	
WH1	2D		E30-4804-05	CORD WITH PLUG	

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
L1			L40-4795-34	SMALL FIXED INDUCTOR	
L2			L40-2205-34	SMALL FIXED INDUCTOR(22UH)	
L3 -7			L40-4795-34	SMALL FIXED INDUCTOR	
L8			L33-1039-05	LINE FILTER COIL	
L9			L39-1004-05	TRAP COIL	
L10			L40-4795-34	SMALL FIXED INDUCTOR	
L11			L92-0075-05	CHIP FERRITE	
X1			L78-0683-05	RESONATOR	
X2			L77-2738-05	CRYSTAL RESONATOR	
X3			L77-2002-05	CRYSTAL RESONATOR	
S	3D		N83-3005-46	PAN HEAD TAPTITE SCREW	
T	3D		N35-3010-46	BINDING HEAD MACHINE SCREW	K1M1
W	3D		N86-2606-46	BINDING HEAD TAPTITE SCREW	
X	3D		N83-3012-46	PAN HEAD TAPTITE SCREW	K1M1
CP2			R90-0724-05	MULTI-COMP 1K X4	
CP3			R90-1022-05	MULTI-COMP 470 X2	
CP4 -7			R90-0725-05	MULTI-COMP 1K X2	
CP9			R90-0725-05	MULTI-COMP 1K X2	
R1			RK73FB2A223J	CHIP R 22K J 1/10W	
R2			RK73FB2A101J	CHIP R 100 J 1/10W	
R3			RK73FB2A223J	CHIP R 22K J 1/10W	
R4			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73EB2B221J	CHIP R 220 J 1/8W	
R6			RK73FB2A153J	CHIP R 15K J 1/10W	
R7			R92-3032-05	CHIP R 4.3K D 1/10W	
R8 ,9			R92-3052-05	METAL GLAZE RESISTOR	
R11			RK73FB2A152J	CHIP R 1.5K J 1/10W	
R13			RK73FB2A471J	CHIP R 470 J 1/10W	
R14			RK73GB1J104J	CHIP R 100K J 1/16W	
R15			RK73EB2B752J	CHIP R 7.5K J 1/8W	M1E
R16			RK73EB2B103J	CHIP R 10K J 1/8W	
R17			RK73FB2A223J	CHIP R 22K J 1/10W	M1E
R18			RK73FB2A473J	CHIP R 47K J 1/10W	M1E
R19			RK73FB2A102J	CHIP R 1.0K J 1/10W	M1E
R20			RK73EB2B104J	CHIP R 100K J 1/8W	
R21			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R22			RK73FB2A104J	CHIP R 100K J 1/10W	
R23			RK73FB2A750J	CHIP R 75 J 1/10W	
R24			RK73FB2A272J	CHIP R 2.7K J 1/10W	
R25			RK73FB2A470J	CHIP R 47 J 1/10W	
R26			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R27			RK73GB1J752J	CHIP R 7.5K J 1/16W	
R28			RK73GB1J563J	CHIP R 56K J 1/16W	
R29			RK73GB1J913J	CHIP R 91K J 1/16W	
R30			RK73FB2A470J	CHIP R 47 J 1/10W	
R31			RK73FB2A103J	CHIP R 10K J 1/10W	
R32			RK73GB1J913J	CHIP R 91K J 1/16W	
R33			RK73FB2A913J	CHIP R 91K J 1/10W	
R34			RK73FB2A472J	CHIP R 4.7K J 1/10W	KK1
R35			R92-0366-05	CHIP R 560 J 1W	KK1
R36			RK73FB2A223J	CHIP R 22K J 1/10W	KK1
R37			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R38			R92-0365-05	CHIP R 1.0K J 1/2W	
R39			RK73FB2A223J	CHIP R 22K J 1/10W	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R40			R92-0365-05	CHIP R 1.0K J 1/2W	
R41			RK73EB2B472J	CHIP R 4.7K J 1/8W	
R42			RK73EB2B222J	CHIP R 2.2K J 1/8W	
R43 -45			RK73EB2B470J	CHIP R 47 J 1/8W	
R46			RK73EB2B222J	CHIP R 2.2K J 1/8W	
R47 ,48			RK73EB2B472J	CHIP R 4.7K J 1/8W	
R50 ,51			RK73FB2A123J	CHIP R 12K J 1/10W	
R52			RK73FB2A562J	CHIP R 5.6K J 1/10W	
R53			RK73GB1J223J	CHIP R 22K J 1/16W	
R54			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R56 ,57			RK73EB2B104J	CHIP R 100K J 1/8W	
R58			RK73FB2A183J	CHIP R 18K J 1/10W	
R59			RK73GB1J104J	CHIP R 100K J 1/16W	
R60			RK73FB2A104J	CHIP R 100K J 1/10W	K1M1
R61			RK73FB2A104J	CHIP R 100K J 1/10W	K
R62			RK73FB2A104J	CHIP R 100K J 1/10W	M1
R63 ,64			RK73FB2A104J	CHIP R 100K J 1/10W	KK1
R65			RK73FB2A104J	CHIP R 100K J 1/10W	
R66			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R67			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R70			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R71			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R72 ,73			RK73FB2A562J	CHIP R 5.6K J 1/10W	
R74			RK73FB2A223J	CHIP R 22K J 1/10W	
R76			RK73GB1J470J	CHIP R 47 J 1/16W	
R77			RK73FB2A104J	CHIP R 100K J 1/10W	
R78			RK73FB2A470J	CHIP R 47 J 1/10W	
R79 ,80			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R83			RK73GB1J104J	CHIP R 100K J 1/16W	
R84			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R86			RK73FB2A561J	CHIP R 560 J 1/10W	
R89			RK73FB2A104J	CHIP R 100K J 1/10W	
R90			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R92			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R93			RK73FB2A222J	CHIP R 2.2K J 1/10W	M1E
R94			RK73GB1J223J	CHIP R 22K J 1/16W	KK1
R94			RK73GB1J273J	CHIP R 27K J 1/16W	M1E
R95 ,96			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R97			RK73FB2A102J	CHIP R 1.0K J 1/10W	M1E
R99			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R100			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R101			RK73GB1J104J	CHIP R 100K J 1/16W	
R102,103			RK73FB2A470J	CHIP R 47 J 1/10W	
R104			RK73FB2A104J	CHIP R 100K J 1/10W	
R105-107			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R108			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R112,113			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R114			RK73GB1J124J	CHIP R 120K J 1/16W	M1E
R114			RK73GB1J164J	CHIP R 160K J 1/16W	KK1
R115			RK73FB2A102J	CHIP R 1.0K J 1/10W	M1E
R118			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R120			RK73GB1J102J	CHIP R 1.0K J 1/16W	M1E
R121			RK73GB1J103J	CHIP R 10K J 1/16W	
R122			RK73FB2A103J	CHIP R 10K J 1/10W	
R123			RK73FB2A102J	CHIP R 1.0K J 1/10W	

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R124			RK73GB1J473J	CHIP R 47K J 1/16W		R220			RK73FB2A103J	CHIP R 10K J 1/10W	M1E
R125			RK73FB2A333J	CHIP R 33K J 1/10W		R221			RK73FB2A823J	CHIP R 82K J 1/10W	M1E
R126,127			RK73FB2A473J	CHIP R 47K J 1/10W		R222			RK73FB2A272J	CHIP R 2.7K J 1/10W	M1E
R128			RK73FB2A821J	CHIP R 820 J 1/10W		R223			RK73FB2A333J	CHIP R 33K J 1/10W	M1E
R129			RK73GB1J153J	CHIP R 15K J 1/16W		R224			RK73FB2A153J	CHIP R 15K J 1/10W	M1E
R130			RK73FB2A473J	CHIP R 47K J 1/10W		R225			RK73FB2A103J	CHIP R 10K J 1/10W	M1E
R131			RK73FB2A472J	CHIP R 4.7K J 1/10W		R226			RK73GB1J562J	CHIP R 5.6K J 1/16W	M1E
R132-136			RK73EB2B471J	CHIP R 470 J 1/8W		R227			RK73GB1J103J	CHIP R 10K J 1/16W	M1E
R137-139			RK73FB2A222J	CHIP R 2.2K J 1/10W		R228			RK73FB2A104J	CHIP R 100K J 1/10W	M1E
R140			RK73EB2B472J	CHIP R 4.7K J 1/8W		R229			RK73FB2A103J	CHIP R 10K J 1/10W	M1E
R141,142			RK73GB1J104J	CHIP R 100K J 1/16W		R230			RK73FB2A222J	CHIP R 2.2K J 1/10W	M1E
R143,144			RK73FB2A104J	CHIP R 100K J 1/10W		R231			RK73GB1J562J	CHIP R 5.6K J 1/16W	M1E
R145			RK73FB2A472J	CHIP R 4.7K J 1/10W		R232			RK73FB2A272J	CHIP R 2.7K J 1/10W	M1E
R147			RK73FB2A472J	CHIP R 4.7K J 1/10W		R233			RK73FB2A223J	CHIP R 22K J 1/10W	M1E
R148,149			RK73GB1J334J	CHIP R 330K J 1/16W		R234			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R151			RK73GB1J303J	CHIP R 30K J 1/16W	K	R235			RK73FB2A223J	CHIP R 22K J 1/10W	
R152			RK73GB1J222J	CHIP R 2.2K J 1/16W	K	R236			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R153,154			RK73EB2B361J	CHIP R 360 J 1/8W		R237			RK73FB2A105J	CHIP R 1.0M J 1/10W	M1E
R155,156			RK73FB2A472J	CHIP R 4.7K J 1/10W		R241			RK73FB2A101J	CHIP R 100 J 1/10W	
R157,158			RK73FB2A222J	CHIP R 2.2K J 1/10W		R242			RK73GB1J101J	CHIP R 100 J 1/16W	
R159,160			RK73EB2B361J	CHIP R 360 J 1/8W		R243,244			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R161,162			RK73FB2A472J	CHIP R 4.7K J 1/10W		R245			RK73FB2A122J	CHIP R 1.2K J 1/10W	
R163,164			RK73FB2A222J	CHIP R 2.2K J 1/10W		R246			RK73FB2A473J	CHIP R 47K J 1/10W	
R165,166			RK73FB2A335J	CHIP R 3.3M J 1/10W	K	R247			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R167,168			RK73FB2A103J	CHIP R 10K J 1/10W		R248			RK73FB2A104J	CHIP R 100K J 1/10W	
R169,170			RK73FB2A223J	CHIP R 22K J 1/10W		VR1			R32-0229-05	SEMI FIXED VARIABLE RESISTOR	M1E
R171,172			RK73FB2A820J	CHIP R 82 J 1/10W		W16 -21			R92-2052-05	CHIP R 0 J 1/10W	KK1
R173			RK73EB2B472J	CHIP R 4.7K J 1/8W		W18 ,19			R92-2052-05	CHIP R 0 J 1/10W	M1E
R175,176			RK73FB2A103J	CHIP R 10K J 1/10W		W27			R92-2052-05	CHIP R 0 J 1/10W	M1
R177,178			RK73FB2A223J	CHIP R 22K J 1/10W		W28			R92-2052-05	CHIP R 0 J 1/10W	KK1
R179,180			RK73FB2A820J	CHIP R 82 J 1/10W		PH1			T95-0231-05	OPTO ISOLATOR	
R181-184			RK73FB2A472J	CHIP R 4.7K J 1/10W	K1M1	D1			RM10ZLF	DIODE	
R185			RK73GB1J184J	CHIP R 180K J 1/16W	K1M1	D2			AM01Z	DIODE	
R186			RK73FB2A431J	CHIP R 430 J 1/10W	K1M1	D2			ERA15-01	DIODE	
R187			RK73FB2A751J	CHIP R 750 J 1/10W	K1M1	D3			MA4056(N)-M	ZENER DIODE	
R188			RK73FB2A243J	CHIP R 24K J 1/10W	K1M1	D4			MA4082(N)-L	ZENER DIODE	
R189			RK73FB2A102J	CHIP R 1.0K J 1/10W	K1M1	D6			HZM4.7N(B2)	ZENER DIODE	M1E
R190			RK73FB2A101J	CHIP R 100 J 1/10W	K1M1	D7			MA4110(N)-M	ZENER DIODE	
R191			RK73FB2A223J	CHIP R 22K J 1/10W	K1M1	D8			MA4056(N)-M	ZENER DIODE	
R192			RK73GB1J333J	CHIP R 33K J 1/16W	K1M1	D11 ,12			AM01Z	DIODE	KK1
R193,194			RK73EB2B100J	CHIP R 10 J 1/8W		D11 ,12			ERA15-01	DIODE	KK1
R195			RK73EB2B4R7J	CHIP R 4.7 J 1/8W		D12			AM01Z	DIODE	M1E
R196			RK73EB2B104J	CHIP R 100K J 1/8W		D12			ERA15-01	DIODE	M1E
R198			RK73FB2A105J	CHIP R 1.0M J 1/10W		D13			DAP202K	DIODE	
R199			RK73GB1J104J	CHIP R 100K J 1/16W		D13			KDS181	DIODE	
R200			RK73EB2B222J	CHIP R 2.2K J 1/8W		D13			MA152WA	DIODE	
R201,202			RK73EB2B361J	CHIP R 360 J 1/8W		D16			MA3062WA	ZENER DIODE	
R203,204			RK73FB2A472J	CHIP R 4.7K J 1/10W		D18			MA3062WA	ZENER DIODE	
R205,206			RK73FB2A222J	CHIP R 2.2K J 1/10W		D19			MA4056(N)-M	ZENER DIODE	
R207,208			RK73FB2A103J	CHIP R 10K J 1/10W		D20			MA4062(N)-M	ZENER DIODE	
R209,210			RK73FB2A223J	CHIP R 22K J 1/10W		D21			DAN202K	DIODE	
R211,212			RK73FB2A820J	CHIP R 82 J 1/10W		D21			KDS184	DIODE	
R215			RK73FB2A153J	CHIP R 15K J 1/10W	M1E	D21			MA152WK	DIODE	
R216			RK73EB2B220J	CHIP R 22 J 1/8W	M1E	D22			DA204K	DIODE	
R217-219			RK73GB1J103J	CHIP R 10K J 1/16W	M1E						

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D22			KDS226	DIODE	
D23 ,24			RD6.8M(B2)	ZENER DIODE	
D27			DAP202K	DIODE	K1M1E
D27			KDS181	DIODE	K1M1E
D27			MA152WA	DIODE	K1M1E
D28 ,29			RD6.8MW	ZENER DIODE	
D31			DAN202K	DIODE	M1E
D31			KDS184	DIODE	M1E
D31			MA152WK	DIODE	M1E
D32			MA3056-M	ZENER DIODE	
D33			SA-C2012-101TB	SURGE ABSORBER	
D34			DAN202K	DIODE	K1M1E
D34			KDS184	DIODE	K1M1E
D34			MA152WK	DIODE	K1M1E
D35 -43			1SR154-400	DIODE	K1M1E
D43			1SR154-400	DIODE	K
D47 ,48			DAP202K	DIODE	
D47 ,48			KDS181	DIODE	
D47 ,48			MA152WA	DIODE	
D50			MA3220-H	ZENER DIODE	
D51			DA204K	DIODE	
D51			KDS226	DIODE	
D55 -59			DA204K	DIODE	
D55 -59			KDS226	DIODE	
D60			MA3062WA	ZENER DIODE	
IC1			UPD784217GC104	MI-COM IC	
IC2			TDA7400	ANALOGUE IC	
IC3			M5237ML	IC(VOLTAGE REGULATOR)	
IC4			TDA7386	ANALOGUE IC	K1M1E
IC5			TDA7401	ANALOGUE IC	
IC6			TC7662BE0A	ANALOGUE IC	
IC7 -9			NJM2068MD	IC(OP AMP)	K
IC7 -9			NJM4565M-TE2	ANALOGUE IC	K1M1E
IC10			TC74HC02AF	IC	
IC11			TDA7479D	ANALOGUE IC	
IC12			NJM4565M-TE2	ANALOGUE IC	M1E
IC13			LB1930M	ANALOGUE IC	
IC14			BR24C01AF	MEMORY IC	
IC14			M24C01-WMN6T	MEMORY IC	
IC15			S-80830ANNP	MOS-IC	
IC16			NJM4565M-TE2	ANALOGUE IC	
Q1			2SB1565(E,F)	TRANSISTOR	
Q2			2SC2412K	TRANSISTOR	
Q2			2SD601A	TRANSISTOR	
Q3			2SB709A	TRANSISTOR	
Q4			2SB1565(E,F)	TRANSISTOR	M1E
Q5			DTA124EK	DIGITAL TRANSISTOR	M1E
Q5			KRA103S	TRANSISTOR	M1E
Q5			UN2112	DIGITAL TRANSISTOR	M1E
Q6			DTC124EK	DIGITAL TRANSISTOR	M1E
Q6			KRC103S	TRANSISTOR	
Q6			UN2212	DIGITAL TRANSISTOR	
Q7			2SD2396F40	TRANSISTOR	
Q9			DTC124EK	DIGITAL TRANSISTOR	
Q9			KRC103S	TRANSISTOR	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
Q9			UN2212	DIGITAL TRANSISTOR	
Q11			DTA123JK	DIGITAL TRANSISTOR	
Q12			DTC144EK	DIGITAL TRANSISTOR	
Q12			KRC104S	TRANSISTOR	
Q12			UN2213	DIGITAL TRANSISTOR	
Q13			2SB1443	TRANSISTOR	
Q14			2SC2412K	TRANSISTOR	
Q14			2SD601A	TRANSISTOR	
Q15			2SB709A	TRANSISTOR	
Q16			2SC2412K	TRANSISTOR	
Q16			2SD601A	TRANSISTOR	
Q17			2SB709A	TRANSISTOR	
Q18			2SC2412K	TRANSISTOR	
Q18			2SD601A	TRANSISTOR	
Q19			2SB709A	TRANSISTOR	
Q20			2SC2412K	TRANSISTOR	
Q20			2SD601A	TRANSISTOR	
Q21			2SB1277(Q,R)	TRANSISTOR	KK1
Q22			DTC114EK	DIGITAL TRANSISTOR	KK1
Q22			UN2211	DIGITAL TRANSISTOR	KK1
Q23			2SB1277(Q,R)	TRANSISTOR	
Q24			2SB709A	TRANSISTOR	
Q25			DTA124EK	DIGITAL TRANSISTOR	
Q25			KRA103S	TRANSISTOR	
Q25			UN2112	DIGITAL TRANSISTOR	
Q26			DTC114EK	DIGITAL TRANSISTOR	
Q26			UN2211	DIGITAL TRANSISTOR	
Q28 ,29			2SC2412K	TRANSISTOR	
Q28 ,29			2SD601A	TRANSISTOR	
Q30 ,31			DTA124EK	DIGITAL TRANSISTOR	
Q30 ,31			KRA103S	TRANSISTOR	
Q30 ,31			UN2112	DIGITAL TRANSISTOR	
Q32			2SC2412K	TRANSISTOR	
Q32			2SD601A	TRANSISTOR	
Q33			DTC124EK	DIGITAL TRANSISTOR	
Q33			KRC103S	TRANSISTOR	
Q33			UN2212	DIGITAL TRANSISTOR	
Q34 -37			2SC2412K	TRANSISTOR	
Q34 -37			2SD601A	TRANSISTOR	
Q38			DTC114YK	DIGITAL TRANSISTOR	K1M1
Q38			KRC107S	TRANSISTOR	K1M1
Q38			UN2214	DIGITAL TRANSISTOR	K1M1
Q39 ,40			2SC2412K	TRANSISTOR	
Q39 ,40			2SD601A	TRANSISTOR	
Q41			2SB709A	TRANSISTOR	
Q42			2SC2412K	TRANSISTOR	M1E
Q42			2SD601A	TRANSISTOR	M1E
Q43			DTC114TK	DIGITAL TRANSISTOR	M1E
Q43			UN2215	DIGITAL TRANSISTOR	M1E
Q44			DTA124EK	DIGITAL TRANSISTOR	M1E
Q44			KRA103S	TRANSISTOR	M1E
Q44			UN2112	DIGITAL TRANSISTOR	M1E
Q45			DTC124EK	DIGITAL TRANSISTOR	M1E
Q45			KRC103S	TRANSISTOR	M1E
Q45			UN2212	DIGITAL TRANSISTOR	M1E

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

CD PLAYER UNIT (X32-474X-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
Q48			2SB1188(Q,R)	TRANSISTOR	
Q49			DTC124EK	DIGITAL TRANSISTOR	
Q49			KRC103S	TRANSISTOR	
Q49			UN2212	DIGITAL TRANSISTOR	
Q50			2SB1188(Q,R)	TRANSISTOR	
Q51			DTC124EK	DIGITAL TRANSISTOR	
Q51			KRC103S	TRANSISTOR	
Q51			UN2212	DIGITAL TRANSISTOR	
Q52			DTC144EK	DIGITAL TRANSISTOR	
Q52			KRC104S	TRANSISTOR	
Q52			UN2213	DIGITAL TRANSISTOR	
Q53 ,54			DTA124EK	DIGITAL TRANSISTOR	
Q53 ,54			KRA103S	TRANSISTOR	
Q55			2SC2412K	TRANSISTOR	
Q55			2SD601A	TRANSISTOR	
Q56			2SB1443	TRANSISTOR	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	K1M1
A1	3D		X86-3082-70	TUNER UNIT	E
A1	3D		X86-3100-10	TUNER UNIT	KK1
A1	3D		X86-3222-70	TUNER UNIT	M1
CD PLAYER UNIT (X32-474X-XX)					
C1 ,2			CK73FB1A105K	CHIP C 1.0UF K	
C3			C92-1359-05	CHIP-TAN 10UF 16WV	
C4			C92-0566-05	CHIP-TAN 10UF 6.3WV	
C5			CC73FCH1H330J	CHIP C 33PF J	
C6			CC73FCH1H030C	CHIP C 3.0PF C	
C7			CK73FB1C104K	CHIP C 0.10UF K	
C8			CK73FB1A105K	CHIP C 1.0UF K	
C9			CC73FCH1H101J	CHIP C 100PF J	
C10			CK73FB1H472K	CHIP C 4700PF K	
C11			CK73FB1H682K	CHIP C 6800PF K	
C12			CK73FB1H222K	CHIP C 2200PF K	
C13			CK73FB1H273K	CHIP C 0.027UF K	
C14			CK73FB1H472K	CHIP C 4700PF K	
C15			CK73FB1E473K	CHIP C 0.047UF K	
C16			CC73FCH1H101J	CHIP C 100PF J	
C17			CK73FB1H472K	CHIP C 4700PF K	
C18			CK73FB1H471K	CHIP C 470PF K	
C19 ,20			CK73FB1C104K	CHIP C 0.10UF K	
C21			C92-1359-05	CHIP-TAN 10UF 16WV	
C22			CK73FB1C104K	CHIP C 0.10UF K	
C23			CK73FB1H102K	CHIP C 1000PF K	
C24			CK73FB1H223K	CHIP C 0.022UF K	
C25			CK73FB1H123K	CHIP C 0.012UF K	
C26			CK73FB1A105K	CHIP C 1.0UF K	
C28			CK73FB1A105K	CHIP C 1.0UF K	
C29			CK73FB1C104K	CHIP C 0.10UF K	
C31 ,32			CK73FB1H103K	CHIP C 0.010UF K	
C33 -36			CK73FB1C104K	CHIP C 0.10UF K	
C37			C93-1031-05	CERAMIC 0.010UF 50WV	
C40			CK73FB1C104K	CHIP C 0.10UF K	
C41			CK73EB1C225K	CHIP C 2.2UF K	
C43			CK73FB1H123K	CHIP C 0.012UF K	
C44			CK73FB1C104K	CHIP C 0.10UF K	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C45			CK73FB1H123K	CHIP C 0.012UF K	
C46			CK73FB1E473K	CHIP C 0.047UF K	
C51			C92-1324-05	CHIP-TAN 4.7UF 16WV	
C52			CK73FB1E473K	CHIP C 0.047UF K	
C53 ,54			C93-1084-05	CERAMIC 1200PF J	
C55			CK73FB1C104K	CHIP C 0.10UF K	
C61			CK73EB1C105K	CHIP C 1.0UF K	
C63			C92-1324-05	CHIP-TAN 4.7UF 16WV	
C65 ,66			CK73FB1A105K	CHIP C 1.0UF K	
C67 ,68			C92-1324-05	CHIP-TAN 4.7UF 16WV	
C71 -74			C93-1084-05	CERAMIC 1200PF J	
C75 -78			CC73FCH1H271J	CHIP C 270PF J	
C79 ,80			C93-1044-05	CERAMIC 2200PF K	
C81			CK73FB1H102K	CHIP C 1000PF K	
C83 ,84			CC73FCH1H100D	CHIP C 10PF D	
C85 -87			CK73FB1C104K	CHIP C 0.10UF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
CP8			L92-0320-05	FERRITE CORE	
L1			L40-1001-78	SMALL FIXED INDUCTOR(10UH)	
L2			L92-0308-05	FERRITE CORE	
L3			L92-0334-05	CHIP FERRITE	
L14			L79-0938-05	LC FILTER	
L15			L92-0308-05	FERRITE CORE	
X1			L77-2081-05	CRYSTAL RESONATOR	
CP1 -3			R90-1019-05	MULTI-COMP 100 X2	
R1 ,2			RK73FB2A333J	CHIP R 33K J 1/10W	
R3			RK73FB2A823J	CHIP R 82K J 1/10W	
R5			RK73FB2A910J	CHIP R 91 J 1/10W	
R6			RK73FB2A823J	CHIP R 82K J 1/10W	
R8			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R9			RK73EB2B100J	CHIP R 10 J 1/8W	
R10 ,11			RK73FB2A682J	CHIP R 6.8K J 1/10W	
R12			RK73FB2A432J	CHIP R 4.3K J 1/10W	
R13			RK73FB2A363J	CHIP R 36K J 1/10W	
R14 ,15			RK73FB2A824J	CHIP R 820K J 1/10W	
R16			RK73FB2A223J	CHIP R 22K J 1/10W	
R17			RK73FB2A363J	CHIP R 36K J 1/10W	
R18			RK73FB2A392J	CHIP R 3.9K J 1/10W	
R19			RK73FB2A273J	CHIP R 27K J 1/10W	
R20			RK73FB2A104J	CHIP R 100K J 1/10W	
R21			RK73FB2A224J	CHIP R 220K J 1/10W	
R22 ,23			RK73FB2A333J	CHIP R 33K J 1/10W	
R31			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R32			RK73FB2A104J	CHIP R 100K J 1/10W	
R34			RK73FB2A683J	CHIP R 68K J 1/10W	
R35			RK73FB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2A151J	CHIP R 150 J 1/10W	
R37			RK73FB2A471J	CHIP R 470 J 1/10W	
R38			RK73FB2A224J	CHIP R 220K J 1/10W	
R44			RK73FB2A512J	CHIP R 5.1K J 1/10W	
R45			RK73FB2A103J	CHIP R 10K J 1/10W	
R46			RK73FB2A102J	CHIP R 1.0K J 1/10W	

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD PLAYER UNIT (X32-474X-XX)

DAUGHTER UNIT (X89-241X-XX)

MECHANISM ASSY (X92-37XX-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R47			RK73FB2A103J	CHIP R 10K J 1/10W	
R49			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R50			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73FB2A104J	CHIP R 100K J 1/10W	
R54			RK73FB2A104J	CHIP R 100K J 1/10W	
R71			RK73FB2A103J	CHIP R 10K J 1/10W	
R72			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R73			RK73FB2A473J	CHIP R 47K J 1/10W	
R74			RK73FB2A103J	CHIP R 10K J 1/10W	
R75			RK73FB2A333J	CHIP R 33K J 1/10W	
R76			RK73FB2A622J	CHIP R 6.2K J 1/10W	
R77			RK73FB2A563J	CHIP R 56K J 1/10W	
R78			RK73FB2A243J	CHIP R 24K J 1/10W	
R79			RK73FB2A242J	CHIP R 2.4K J 1/10W	
R80			RK73FB2A202J	CHIP R 2.0K J 1/10W	
R81			RK73FB2A333J	CHIP R 33K J 1/10W	
R82			RK73FB2A103J	CHIP R 10K J 1/10W	
R83			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R91			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R101,102			RK73FB2A241J	CHIP R 240 J 1/10W	
R103,104			RK73FB2A122J	CHIP R 1.2K J 1/10W	
R115-118			R92-2029-05	CHIP R 2.0K D 1/10W	
R119-122			R92-2044-05	CHIP R 2.7K D 1/10W	
R123-126			R92-2048-05	CHIP R 7.5K D 1/10W	
R127,128			RK73FB2A331J	CHIP R 330 J 1/10W	
R202			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R210			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R211			RK73FB2A681J	CHIP R 680 J 1/10W	
R215			RK73FB2A103J	CHIP R 10K J 1/10W	
R216,217			RK73FB2A155J	CHIP R 1.5M J 1/10W	
R218			RK73FB2A473J	CHIP R 47K J 1/10W	
R219			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R220			RK73FB2A103J	CHIP R 10K J 1/10W	
W1			R92-2053-05	CHIP R 0 J 1/8W	
W3			R92-2052-05	CHIP R 0 J 1/10W	
W8			R92-2052-05	CHIP R 0 J 1/10W	
S1 ,2			S68-0838-05	PUSH SWITCH	
S3			S68-0823-05	PUSH SWITCH	
D1 ,2			DAN202U	DIODE	
D3			DA204K	DIODE	
D4			DAN202U	DIODE	
IC1			AN8806SB	ANALOGUE IC	
IC2			MN662773KB3	MOS-IC	
IC4			BA5917AFP	ANALOGUE IC	
IC5			TA78L05F	IC(VOLTAGE REGULATOR/ +5V)	
IC6			NJM5532MD	IC(OP AMP)	
IC7			KKZ05F	CUSTOM IC	
IC8			TC7SH08F	MOS-IC	
IC9			TC7SZ04F	MOS-IC	
Q1			2SB1188	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3 ,4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
Q7			FMC5A	DIGITAL TRANSISTOR	
Q8			DTC124EUA	DIGITAL TRANSISTOR	
DAUGHTER UNIT (X89-241X-XX)					
C1			C90-2966-05	ELECTRO 100UF 16VV	
C2			CK73FB1H103K	CHIP C 0.010UF K	
C3			C90-2966-05	ELECTRO 100UF 16VV	
C4			CK73FB1H103K	CHIP C 0.010UF K	
C5			C90-2984-05	ELECTRO 47UF 50VV	
C6			CK73FB1H103K	CHIP C 0.010UF K	
C7			CK73EB1C225K	CHIP C 2.2UF K	
CN1			E40-3250-05	PIN ASSY	
L1			L33-1029-05	SMALL FIXED INDUCTOR	
R1			RK73EB2B473J	CHIP R 47K J 1/8W	
R2			RK73FB2A152J	CHIP R 1.5K J 1/10W	
R3			RK73EB2B103J	CHIP R 10K J 1/8W	
R4			R92-2104-05	CHIP R 2.2 J 1W	
D1			MA4100-L	ZENER DIODE	
D2			MA4051(N)-M	ZENER DIODE	
D3			DA204K	DIODE	
D3			KDS226	DIODE	
Q1			2SB1184	TRANSISTOR	
Q2			2SC2412K	TRANSISTOR	
Q2			2SD601A	TRANSISTOR	
A1		*	W02-3232-05	ELECTRIC CIRCUIT MODULE	
MECHANISM ASSY (X92-37XX-XX)					
401	2A		A10-4482-01	CHASSIS	
402	2A		A10-4225-33	CHASSIS CALKING ASSY	
403	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
405A	2A		D10-4038-23	ARM ASSY	
406	2A		D10-4306-04	ARM ASSY	
407	2A		D10-4305-04	ARM ASSY	
408	3A		D10-3087-44	ARM ASSY	
409	3B		D10-3092-03	SLIDER	
410	3B		D10-3093-04	SLIDER ASSY	
411	2B		D10-3095-04	SLIDER ASSY	
412	2B		D10-3096-04	SLIDER ASSY	
413	1A		D10-3099-24	SLIDER ASSY	
414	1A		D10-3100-04	SLIDER ASSY	
415	2A		D10-4123-24	LEVER ASSY	
416	1B		D10-4004-04	LEVER ASSY	
417	1B		D10-4006-04	LEVER	
418	1A		D10-4007-04	LEVER	
419	2B		D10-4008-14	LEVER	
420	2A		D10-4009-23	ARM	
421	3B		D10-4010-04	LEVER	
422	3A		D10-4011-34	LEVER ASSY	
423	3A		D10-4013-14	ARM ASSY	
424	3B		D10-4050-04	ARM	
427	3B		D13-1340-13	RACK (GEAR)	
429	3B		D13-1231-04	GEAR	

K: KDC-X915 K1: KDC-X815 M1: KDC-PS9016R E: KDC-PS9080R

⚠ indicates safety critical components.

PARTS LIST/SPECIFICATIONS

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on
430	3B		D13-1232-04	GEAR	
431	3B		D13-1233-04	GEAR	
432	3B		D13-1234-14	GEAR ASSY	
433	3A		D13-1238-03	GEAR	
434	3B		D13-1240-04	GEAR	
435	3B		D13-1241-04	GEAR	
436	3B		D13-1242-04	GEAR	
437	1B		D13-1243-04	GEAR	
438	1B		D13-1244-04	GEAR	
439	1B		D13-1245-14	GEAR	
440	2A		D13-1246-04	GEAR	
441	2B		D13-1247-04	GEAR	
443	2B		D13-1249-04	GEAR ASSY	
445	1B		D14-0668-04	ROLLER	
446	2A		D14-0670-04	ROLLER	
447	3B		D14-0674-04	ROLLER	
448	2B		D13-1341-04	GEAR ASSY	
449	3A		D21-2228-14	SHAFT	
450	1A		D21-2229-04	SHAFT	
451	1A		D23-0925-24	RETAINER	
452	2A		D32-0614-04	STOPPER	
453	1B		D39-0223-05	DAMPER	
454	2B		D39-0224-05	DAMPER	
455	3B		F09-1246-04	SHEET	
458	3B		F09-1266-14	SHEET	
460	2B		G01-2770-04	EXTENSION SPRING	
461	3A		G01-2771-04	EXTENSION SPRING	
462	3A		G01-2772-24	EXTENSION SPRING	
463	3A		G01-2773-14	EXTENSION SPRING	
464	3A		G01-2774-34	EXTENSION SPRING	
465	1B		G01-2775-04	TORSION COIL SPRING	
466	1B		G01-2776-14	TORSION COIL SPRING	
467	3B		G01-2777-24	TORSION COIL SPRING	
469	2A		G01-2844-04	EXTENSION SPRING	
470	2A		G02-1231-04	FLAT SPRING	
471	2B		G02-1232-24	FLAT SPRING	
472	2A		G02-1241-24	FLAT SPRING	
475	2A		J11-0613-13	CLAMPER	
476	3A		J19-4678-13	HOLDER	
477	2B		J19-4679-24	HOLDER	
478	3B		J21-7684-13	MOUNTING HARDWARE	
479	2B		J21-7686-13	MOUNTING HARDWARE	
480	1B		J21-7690-03	MOUNTING HARDWARE	
481	3A		J31-1032-04	COLLAR	
482	3A		J84-0107-05	FLEXIBLE PRINTED WIRING BOARD	
483	1A		J90-0757-22	GUIDE	
A	2A		N09-4249-05	MACHINE SCREW (M1.7X2.5,LOCK)	
B	1D		N09-4172-05	TAPPING SCREW (2X3.5)	
C	2B		N09-4202-05	STEPPED SCREW	
D	2A		N38-2020-46	PAN HEAD MACHIN SCREW	
F	3B		N19-2023-04	FLAT WASHER	
G	2A		N19-2058-04	FLAT WASHER	
H	3A		N19-2093-04	FLAT WASHER	
DM1	3B		T42-0764-04	DC MOTOR ASSY	
DM2	3B		T42-0763-04	DC MOTOR ASSY	
DPU1	2B		T25-0215-05	OPTICAL PICKUP HEAD	

KDC-X915/X815

FM Section

Frequency Range	87.9MHz~107.9MHz
(Frequency Step)	(200kHz)
Channel Space selection	50k/200kHz
Usable Sensitivity(S/N:30dB)	9.3dBf(0.8μV/75Ω)
Quieting Sensitivity(S/N:50dB)	15.2dBf (1.6μV/75Ω)
Frequency Response(±3.0dB)	30Hz~15kHz
S/N	70dB(MONO)
Selectivity	≥80dB(±400kHz)
Stereo Separation	40dB(1kHz)

AM Section

Frequency Range	530kHz~1700kHz
(Frequency Step)	(10kHz)
Channel Space selection	9k/10kHz
Usable Sensitivity(S/N:20dB)	28dBμ(25μV)

CD Section

Laser Diode	GaAlAs(λ=780nm)
Digital Filter(D/A)	8 Times Over Sampling
D/A Converter	1Bit
Spindle Speed	500~200(CLV)
Wow & Flutter	Below Measurable Limit
Frequency Response	10~20kHz(±1dB)
Total Harmonic Distortion	0.01%(1kHz)
S/N Ratio	105dB(1kHz)
Dynamic Range	100dB
Channel Separation	95dB

Preout Level (mV) /Load-Unbalanced 4500mV/10kΩ(CD/CD-CH)

Preout Impedance 80Ω

AMPLIFIER Section (KDC-X815 only)

Maximum Power	45W×4
Full Bandwidth Power(at less than 1%THD)	22W×4

TONE Section

Bass	100Hz±10dB
Treble	10kHz±10dB

General

Operating Voltage 14.4V
(11~16V allowable)

Current Consumption

KDC-X915 5A

KDC-X815 10A

Installation Size KDC-X915 (W) ... 182(mm) 7-3/16(in)

(H) 53(mm) 2-1/16(in)

(D) 160(mm) 6-5/16(in)

KDC-X815 (W) ... 182(mm) 7-3/16(in)

(H) 53(mm) 2-1/16(in)

(D) 162(mm) 6-3/8(in)

Weight

KDC-X915 4.0lbs(1.8kg)

KDC-X815 4.2lbs(1.9kg)

SPECIFICATIONS

KDC-PS9080R

FM Section

Frequency Range	87.5MHz~108.0MHz
(Frequency Step)	(50kHz)
Usable Sensitivity(S/N:26dB)	0.7 μ V/75 Ω
Quieting Sensitivity(S/N:46dB)	1.6 μ V/75 Ω
Frequency Response(\pm 3.0dB)	30Hz~15kHz
S/N	65dB(MONO)
Selectivity(DIN)	\geq 80dB(\pm 400kHz)
Stereo Separation	35dB(1kHz)

MW (AM) Section

Frequency Range	531kHz~1611kHz
(Frequency Step)	(9kHz)
Usable Sensitivity(S/N:20dB)	25 μ V

LW Section

Frequency Range	153kHz~281kHz
Usable Sensitivity(S/N:20dB)	45 μ V

CD Section

Laser Diode	GaAIAs(λ =780nm)
Digital Filter(D/A)	8 Times Over Sampling
D/A Converter	1Bit
Spindle Speed	500~200(CLV)
Wow & Flutter	Below Measurable Limit
Frequency Response	10~20kHz(\pm 1dB)
Total Harmonic Distortion	0.01%(1kHz)
S/N Ratio	105dB(1kHz)
Dynamic Range	100dB
Channel Separation	95dB

Preout Level (mV) /Load-Unbalanced 4500mV/10k Ω (CD/CD-CH)

Preout Impedance 80 Ω

AMPLIFIER Section

PWR(MAX)	45W \times 4
PWR DIN45324,+B=14.4V	28W \times 4

TONE Section

Bass	100Hz \pm 10dB
Treble	10kHz \pm 10dB

General

Operating Voltage	14.4V
(11~16V allowable)	
Current Consumption	10A
Installation Size (W)	182(mm) 7-3/16(in)
(H)	53(mm) 2-1/16(in)
(D)	162(mm) 6-3/8(in)
Weight	4.2lbs(1.9kg)

KDC-PS9016R

FM Section

Frequency Range	87.5MHz~108.0MHz
(Frequency Step)	(50kHz)
Channel Space selection	50kHz
Usable Sensitivity(S/N:30dB)	9.3dBf(0.8 μ V/75 Ω)
Quieting Sensitivity(S/N:50dB)	15.2dBf (1.6 μ V/75 Ω)
Frequency Response(\pm 3.0dB)	30Hz~15kHz
S/N	70dB(MONO)
Selectivity	\geq 80dB(\pm 400kHz)
Stereo Separation	40dB(1kHz)

MW (AM) Section

Frequency Range	531kHz~1611kHz
(Frequency Step)	(9kHz)
Usable Sensitivity(S/N:20dB)	25 μ V

LW Section

Frequency Range	153kHz~281kHz
Usable Sensitivity(S/N:20dB)	45 μ V

CD Section

Laser Diode	GaAIAs(λ =780nm)
Digital Filter(D/A)	8 Times Over Sampling
D/A Converter	1Bit
Spindle Speed	500~200(CLV)
Wow & Flutter	Below Measurable Limit
Frequency Response	10~20kHz(\pm 1dB)
Total Harmonic Distortion	0.01%(1kHz)
S/N Ratio	105dB(1kHz)
Dynamic Range	100dB
Channel Separation	95dB

Preout Level (mV) /Load-Unbalanced 4500mV/10k Ω (CD/CD-CH)

Preout Impedance 80 Ω

AMPLIFIER Section

Maximum Power	45W \times 4
Full Bandwidth Power(at less than 1%THD)	22W \times 4

TONE Section

Bass	100Hz \pm 10dB
Treble	10kHz \pm 10dB

General

Operating Voltage	14.4V
(11~16V allowable)	
Current Consumption	10A
Installation Size (W)	182(mm) 7-3/16(in)
(H)	53(mm) 2-1/16(in)
(D)	162(mm) 6-3/8(in)
Weight	4.2lbs(1.9kg)

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

KENWOOD CORPORATION

14-6, Dogenzaka 1-chome, Shibuya-ku, Tokyo 150-8501, Japan